

· with a se

N 18

この度はアイコム製品をお買上げいただき
誠にありがとうございます。
AG-35は430MHz帯オールモードトランシーバ

お願い申し上げます。

4+

	1.特		長	
●高周波均	曽幅器にオ	ブリウムて	ン素Nチャ	レネル
デュアル	レゲートFI	ETを採用	したこと	により、
従来より	りも低雑音	で、優れ	1た混変調	周特性を
発揮して	じいまう。			
●切換え回	可路には高	「級同軸」	レーを2	個使用
し、安定	宦したON-	-OFF動作	「を行なう	うととも
に挿入技	損失を少な	くしてい	ます。	
•AG-351	はアンテナ	ー直下型て	ですから、	アンテ
L 17 7	上层日上	《出声十7	、 よな) マ 4社 市	ヨンカフ

- ナに入った信号が減衰する前に増幅される ため、S/Nの改善に効果的です。
- ●電源を同軸ケーブルに重畳して供給する方 式ですから、新たに電源ケーブルを配線す る必要がありません。
- ●防水構造となっていますので、安心してア ンテナの直下に取付けられます。

		2.	定	格
●増	幅	利	得	15dB以上
●直	流	入	力	9.5~15V
●消	費	電	流	200mA以下
●OFF時VSWR			WR	1.5以下
● 使 用 温 度 範 囲			包囲	$-10^{\circ}\mathrm{C} \sim +60^{\circ}\mathrm{C}$
●寸			法	82(W) imes 77(H) imes 62(D) mm
●重			量	0.45kg
●取作	寸用・	マス	ト径	$25.4 \sim 60 \text{mm}$

3. 取 付 方 法

本ユニット(AG-35)を取付ける際は、次の 点にご注意ください。

1.本ユニットとアンテナ部を接続する同軸ケ ーブルが、できるだけ短かくなるよう本ユ ニットをアンテナに近付けて取付けてくだ さい。

2.ANTと刻印されたコネクターをアンテナに 接続し、TRANSCEIVERと刻印されたコ ネクターをIC-371Dにそれぞれ同軸ケーブ ルで接続してください。

3.取付けの際は雨水の浸入を防ぐため、必ず 写真のようにコネクター部が下になるよう に取付けてください。

※コネクター部には付属の防水キャップをか ぶせてください。

この防水キャップは、自己収縮する材質の ものを使用していますので、開封しますと 約30分で収縮して固まってしまいます。

N型同軸コネクターの結線作業の前に同軸 ケーブルを通しておき、同軸コネクターの 作業をてぎわよく進めてください。

4.本ユニットとトランシーバー間の同軸ケー ブルは、マストに添わせて固定し、ケーブ ルの重量が直接本ユニットに加わらないよ うにしてください。

Downloaded by RadioAmateur.EU

5.本ユニットを取付けるUボルトの適合する マスト径は、25.4~60mmですから、取付け マストの径には十分注意してください。 6.本機を取付ける前には、必らずアンテナを 調整し、SWRを下げておいてください。 アンテナのマッチングの悪い状態で、本ユ ニットを接続した場合は、性能を十分に発 揮できないばかりか、極端な場合は故障の 原因になることがあります。

N型コネクターの接続 ロックナット ワッシャ ガスケットゴム ^(単位:mm) 約15 ケーブル ガスケットとクランプの形は各種 のものがあり、ワッシャを使わな いものもある J うすく前ハ ンダをする ハンダ穴 ※防水キャップを取付ける場合は ピッタリと付ける 同軸ケーブルにカップリングを 通す前に、防水キャップを通し ておいてください コネクターボディに入れ、ロックナットをしっかりと締 め付ける 防水キャップ 5. 操 作

AG-35のON-OFFはIC-371Dの前面操作パ ネルにあるPREAMPスイッチで行ないます。 なお、PREAMPスイッチがON時、近接する 強入力信号で混変調特性が悪化することもあ

AG-35配線図(SCHEMATIC DIAGRAM)



さい。

scan by IW2HEU

N型同軸コネクターは、使用する同軸ケー ブルの種類により形状が異なるため、本ユニ ットには付属されていません。したがって、 結線するときは使用する同軸ケーブルに適合 するN型同軸コネクターを用意してください。 なお、下記にN型コネクターの結線方法を記 載しましたので参考にしてください。

外被を除き、ロックナット、ワッシャ、ガスケットゴム を通し、外部編組線をていねいに解く

クランプを通して解いた編組線を一本並べに広げ、余っ た編組線を切落し、内部絶縁物、中心導線を寸法どうり に切断し、中心導線にうすく前ハンダをしてから、中心 コンタクトをハンダ付けする

4. 結 線 方 法

※コネクター部に防水キャップを取付ける場合は、下記 の処理を行なう前に同軸ケーブルを通しておき、防水 キャップが固まらないうちに作業を済ませてください。

りますので、必要に応じてON-OFFしてくだ

また、RF GAINツマミを適当に調整すること により、本ユニットの性能をより効果的に発 揮させることができます。



AG = 35

WEATHERPROOF 430MHz PREAMPLIFIER

INSTRUCTION MANUAL

PROFILE

This preamplifier is designed for use with the iCOM IC-471H, 430 MHz, 75W all mode transceiver, which has a very low noise-figure. Please read these instructions carefully to ensure that the amplifier's functions are understood thoroughly, and can obtain the best performance from it.

LOW NOISE-FIGURE AND HIGH GAIN

This preamplifier employs a Gallium-arsenide dual gate field-effect transistor (GaAs FET) which recently has come into use as a lownoise microwave amplifier.

The FET has a very low noise-figure and high gain characteristics, and provides excellent performance.

NO POWER CABLE WIRING

The DC voltage for the amplifier and T/R switching control is superimposed on the RF coaxial cable. This permits the amplifier to be controlled by connection of the coaxial cable from the transceiver only.

WEATHERPROOF CONSTRUCTION

The preamplifier is protected by weatherproof construction by using durable acrylic plastics engineering for the cover and stainless steel is used for mounting hardware. This allows the amplifier to be put on the antenna mast, so that you can obtain the best performance.

SPECIFICATIONS

Frequency Range Gain Power Supply Requirement

Current Drain Input (Antenna) Impedance Output Impedance Maximum Feedthrough RF Power Attachable Mast Diameter Dimensions

Weight

Accessories

Downloaded by RadioAmateur.EU

420MHz - 450MHz 15dB or more 9V - 15V CC Negative Ground (supplied from IC-471H) Approx. 200mA 50 ohms Unbalanced 50 ohms Unbalanced 100 watts 25.4 mm \sim 63 mm (1" \sim 2-1/2") 76mm (H) x 81mm(W) x 62mm(D) (not including mounting hardware) 450g (not including mounting hardware) Mounting Bracket 1 set Waterproof Jacket

INSTALLATION

 $\| g_{i}(x,y) - g_{i}(x,y) - g_{i}(y,y) - g$

RECOMMENDATIONS FOR INSTALLATION

- 1. Place the AG-35 on the ante mast, so that the coaxial cable between the antenna and the preamplifier is as short as possible, and use low-loss coaxial cable.
- 2. Attach the AG-35 vertically, and so that the bottom (connector side) is toward the ground to prevent water from coming into the case.
- 3. The coaxial cable between this preamplifier and your transceiver should be clamped to the antenna mast to prevent the cable from weighing down the preamplifier.
- 4. You should adjust your antenna before using this preamplifier. If its VSWR is high, you carnot get full performance from the preamplifier.
- 5. Do not insert a circuit which makes a short circuit or isolation for DC, such as a filter or an attenuator, between the preamplifier and transceiver.

INSTALLATION

Test the preamplifier to insure it is operational, before attempting to mount it onto the antenna mast.

Attach the AG-35 onto the antenna mast with the supplied mounting hardware, as shown in the photo on the reverse side.

The mounting hardware adjusts from 25mm \sim 63mm (1 inch \sim 2-1/2 inches) tubing. If your antenna mast differs from this size, please make a mounting attachment suitable for it.

N (UG-21/U) connectors are not supplied with the AG-35, so please prepare suitable connectors for the coaxial cable you desire to use. Refer to the following instructions for attaching the coaxial connector.

Connect the coaxial cable from the antenna to the AG-35's connector indicated as "ANT", and the cable from the IC-471H to the other connector indicated as "TRANSCEIVER".

CONNECTOR ASSEMBLY INSTRUCTIONS

- 1. The supplied waterproof jacket will self-shrink within 30 minutes after the sealed bag has been opened. The AG-35 should be installed within 30 minutes.
- 2. Open the sealed bag, and cut the narrow end of the jacket so that the jacket fits into the coaxial cable you wish to use. Slide the jacket over the coaxial cable.

- 3. Remove 14mm (9/16'') of vinyl jacket.
- 4. Comb out the copper braid. Cut off dielectric 5.5mm (7/32") from the end. Tin center conductor.
- 5. Taper braid, slide nut, washer and gasket over the vinyl jacket. Slide the clamp over the braid with the internal shoulder of the clamp flush against the end of the vinyl jacket. When assembling connectors with gland, be sure knife-edge is toward the end of the cable and the groove in the gasket is toward the gland.
- 6. Smooth braid back over the clamp and trim. Solder the contact to the center conductor. Avoid use of excessive heat and solder, See that the end of dielectric is clean. Contact must be flush against the dielectric. The outside of the contact must be free of solder.
- 7. Slide the body into place carefully so that contact enters the hole in the insulator. Slide completed assembly into body by pushing the nut. When the nut is in place, tighten it with wrenches.
- 8. Attach it to the connector of the AG-35, and slide the waterproof jacket over the connectors.

OPERATION

Turn OFF the POWER SWITCH, and the PREAMP SWITCH on the front panel of your IC-471H.

Connect the coaxial cable from the AG-35 to the ANTENNA connector.

Turn ON the POWER SWITCH (Do not turn ON the PREAMP SWITCH yet.) and the IC-471H can be used normally. At this time, transmitting and receiving signals are fed through the by-pass circuit of the AG-35.

When you wish to use the preamplifier, push the PREAMP SWITCH. At this time, the preamplifier and T/R switching relays are actuated in the receive mode, and incoming signals are amplified by the preamplifier, then fed to the transceiver.

In the transmit mode, the power source for the preamplifier is turned OFF and the T/R switching relays of the AG-35 are turned to the by-pass circuit, and the transmitting signals are then fed to the antenna directly.

INCORPORATED ICOM

1-6-19, Kamikurazukuri, Hirano-ku, Osaka, Japan

All stated specifications are approximate and subject to change-without notice or obligation.