


KENWOOD TS-140S

EXPANDED RF M/C

1. Disconnect the power and antenna.
2. Remove the top and bottom covers from the radio.
3. Locate the Control board on the bottom of the TS-140S
4. Remove diode D31 on the Control board.
5. Reassemble the radio.
6. RESET the CPU.

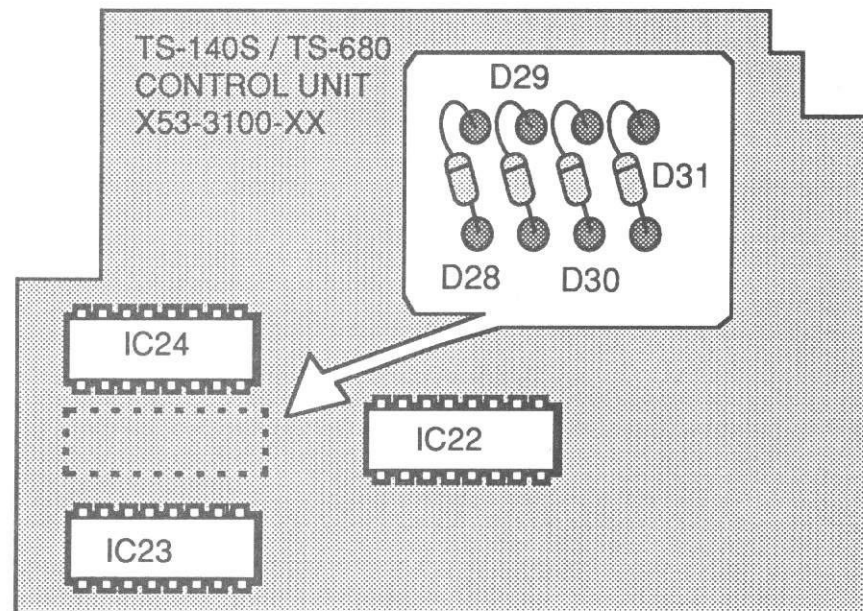

Auxiliary Function:

1. Put radio in VFO mode and turn power off.
2. Press and hold [VFO/M] & [LSB/USB] and turn power on.

The display will say "-HELLO-"
The CW announcement will please you.



Caution

These modifications have not been tested. The Author, Publisher and all other parties takes NO responsibility or liability for any damage or violation resulting from these modifications. Performing any modification may be a Violation of FCC Rules and will void the warranty of the radio. Use of any modified radio may be a violation of FCC rules. If you have any doubts, DO NOT PERFORM THIS MODIFICATION.

© 1991 artsci inc. all rights reserved. (818) 843-4080 Fax: (818) 846-2298