TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

RADIO SET AN/ARC-102 (NSN 5821-00-050-8255)

HEADQUARTERS, DEPARTMENT OF THE ARMY 19 OCTOBER 1981

TECHNICAL MANUAL

No. 11-5821-248-20P

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, DC, 19 October 1981

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR

RADIO SET AN/ARC-102 (NSN 5821-00-050-8255)

Current as of 28 May 1981

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publication and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications-Electronics Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07708.

In either case, a reply will be furnished direct to you.

Table of Contents

		Dama	Illus
SECTION L	Introduction	Page 1	Figure
II.	Renair Parts List	1 5	
GROUP 00.	Repair Parts List	5	1
01	Receiver-Transmitter RT-698/ARC-102 (No parts authorized)		
	0101 Chassis Assembly	7	2
	010101 Delay circuit (No parts autthorized)		
	010102 Cable Assembly, Radiofrequency (No parts authorized)		
	010103 Cable Assembly, Radiofrequency (No parts authorized)		
	010104 Control Subassembly (No parts authorized) 0102 Frequency Divider Module (No parts authorized)		
	0102 Frequency Divider Circuit Card Assembly (No parts authorized)		
	010201 Frequency Divider Circuit Card Assembly (No parts authorized) 0103 Oscillator, Radiofrequency Module (No parts authorized)		
	0104 Intermediate Frequency Translator Module (No parts authorized)		
	010401 Translator Subassembly ((No parts authorized)		
	0105 Kilohertz Frequency Stabilizer Module Module (No parts authorized)		
	0106 Low Voltage Power Supply Module (No parts authorized)		
	0107 Amplifier (No parts authorized)		
	010701 Amplifier Subassembly (No parts authorized		
	0108 High Voltage Power Supply Module (No parts authorized)		
	0109 Audio Frequency Amplifier Module (No parts authorized)		
	010901 Amplifier Subassembly (No parts authorized)		
	0110 Megacycle Frequency Stabilizer Module (No parts authorized) 0111 Amplifier, Radiofrequency (No parts authorized)		
	011101 Amplifier Subassembly (No parts authorized)		
	011102 Amplifier Subassembly (No parts authorized)		
	011103 Amplifier Subassembly (No parts authorized)		
	011104 Amplifier Subasseembly (No parts authorized)		
	011105 Detector Subassembly (No parts authorized)		
	0112 Radiofrequency Translator (No parts authorized)		
	011201 Autopositioners Submodule (No parts authorized)		
	011202 Radio frequency Switch Assembly (No parts authorized)		
02	Radio Set Control C-3940/ARC-94	9	8
	0201 Rotating counter (No parts authorized)		
03	Power Inverter Mounting PP-3702/ARC-102 (No parts authorized)		
04 SECTION III	Static Inverter (No parts authorized) Special Tools List (Not applicable)		
SECTION III	National Stock Number and Part Number Index	10	
1.		10	

^{*}This manual supersedes TM 11-5821-248-20P, 30 September 1976.

SECTION I

INTRODUCTION

Code

Code

Code

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/ARC-102. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number*. Indicates the figure number of the illustration on which the item is shown.

(2) *Item number*. The number used to identify item tailed out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows: Definition

PA- Item procured and stocked for anticipated or known usage.

NOTE

Cannibalization or salvage may be used as a source of 'supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Application/Explanation

O – Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Application/Explanation

H– The lowest maintenance level capable of complete repair of the support item is the general support level.

Z- Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows: Recoverability

codes

Definition

- Z– Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
- D- Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. The following publication pertains to the AN/ARC-102 and its component

TM 11-5821-248-12, Radio Set AN/ARC-102

b. The illustrations in this manual are identical to those published in TM 11-5821-248-34P. Only those parts assigned the third position SMR maintenance code "C" or "O' are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) Second. Find the illustration covering the functional group to which the item belongs.

(3) *Third* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) Second. After finding the figure and item number, locate the figure and item number in repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)



Figure 1. Radio Set, AN/ARC-102.

TM11-5 SECTIO (1) ILLUST (A) FIG		20P (2) SMR	(3) NATIONAL STOCK	(4)	(5) Part	(6) DESCRIPTION		(7)	(8) QTY INC IN
NO	NO	CODE	NUMBER	FSCM	NUMBER		USABLE ON CODE	U/M	UNIT
						GROUP 00 RADIO SET, AN/ARC-102			
1	5	PAOHD	5821-00-604-3307	80058	RT698ARC102	TRANSCEIVER		EA	1
1	6	PAOHD	5821-00-019-8405	80058	C3940ARC94	CONTROL, RADIO SET		EA	1
1	7	PAOHD	5821-00-050-8168	80058	PP3702ARC102	POWER INVERTER		EA	1





Figure 2. Chassis Assembly.

TM11-5 SECTIC (1)	821-248- N II	20P (2)	(3)	(4)	(5)	(6)		(7)	(8)
(A)	RATION (B)		NATIONAL			DESCRIPTION			QTY INC
FIG NO	ITEM NO	SMR CODE	STOCK NUMBER	FSCM	PART NUMBER		USABLE ON CODE	U/M	IN UNIT
						GROUP 0101 CHASSIS ASSEMBLY			
2	17	PAOZZ	5355-00-538-6979	13499	506-6101-002	KNOB		EA	1



Figure 3. Radio Set Control C-3940/ARC-94.

TM11-5 SECTIO (1) ILLUST		20P (2)	(3)	(4)	(5)	(6) DESCRIPTION		(7)	(8) OTY
(A) FIG	(B) ITEM	SMR	NATIONAL STOCK		PART				INC
NO	NO	CODE	NUMBER	FSCM	NUMBER		USABLE ON CODE	U/M	UNIT
3	27	PAOZZ	5355-00-828-5433	13499	548-4140-002	GROUP 02 RADIO SET CONTROL C-3940/ARC-94 KNOB, RADIO		EA	1
3	28	PAOZZ	6240-00-155-7836	96906	MS25237-327	LAMP, INCANDESCENT		EA	2
3	30	PAOZZ	5355-00-865-3144	13499	546-6251-002	KNOB, COUNTER		EA	4
3	33	PAOZZ	5355-00-883-1601	13499	546-6250-002	KNOB, SWITCH		EA	1

NATIONAL STOCK NUMBER AND PART NUMBER INDEX NOTE: LATEST NATIONAL STOCK NUMBER AND PART NUMBER ASSIGNMENTS ARE INCLUDED AT END OF INDEX

	FIGURE	ITEM		FIGURE	ITEM		
STOCK NUMBER	NO	NO	STOCK NUMBER	NO	NO		
5821-00-019-8405	1	6	5355-00-828-5433	3	27		
5821-00-050-8168	1	7	5355-00-865-3144	3	30		
5355-00-538-6979	2	17	5355-00-883-1601	3	33		
5821-00-604-3307	1	5					
		FIGURE	ITEM			FIGURE	ITEM
FSCM	PART NUMBER	NO	NO	FSCM	PART NUMBER	NO	NO
80058	C3940ARC94	1	546-6250-002	13499	546-6250-002	3	
80058	PP3702ARC102	1	7	13499	546-6251-002	3	30
		1	, F		548-4140-002	-	
80058	RT698ARC102	T	5	13499	548-4140-002	3	27
13499	506-6101-002	2	17				

LATEST	NATIONAL	STOCK	NUMBER	ASSIGNMENTS	
			FIGUF	RE	ITEM
STOCK	NUMBER		NO.		NO.
6240-00)-155-7836	5	3		28

LATEST PART NUMBER ASSIGNMENTS

		FIGURE	ITEM
FSCM	PART NUMBER	NO.	NO.
96906	MS25237-327	3	28

	5	\mathbf{N}			Someth	IING	WRONG	WITH THIS	UBLICATION
			DOPE AL FORM, C	BOUT IT AREFUL LD IT A	WN THE ON THIS LY TEAR IT ND DROP IT		Stateside ATTN: AMS Stateside,		
PUBLICA					PUBLICATION DA	TE	PUBLICATION TI		
	11-584		2		23 Jan 74	1		et AN/PRC-	76
BE EXA	CT. PIN-F	OINT WHE	REITIS	104 714					
PAGE	PARA- GRAPH	FIGURE	TABLE NO		S SPACE TELL W HAT SHOULD BI				
2-25	2-28			proc ante REAS the gust rapi stra adju	antenna serv ing in exces dly accelera in to the du sting the la	anged her th ence h vo sys ss of ate ar rive t	throughou nan 1 ⁰ . stem is to 25 knots, nd decentr rain. Au	t to speci that with o sensitive and has a a as at 1 ting is m	fy a 2 ⁰ IF only a 1 ⁰ e to wind tendency hunts, cau inimized b
3-10	3-3		3-1	Item REAS FAUL	ation. 5, Function ON: Thirad T indea to light	justme calls	ent procedu for a 3	ure the the db (500 wa	e TRANS PO tts) adjus
5-6	5-8	F03		REAS REAS	C 3. On J	ove." lace t l-2, c s the	the cover p thange "+2 output li	plate. 4 VDC to " ne of the S	+5 VDC."
	NAME GRAD			HOME NUM 999-1		IGN HER	V.S.M	MALL	Kenty

DOPE ABOUT		NG WRONG WITH THIS PUBLICATI
DOPE ABOUT	DOWN THE \mathbf{N}	(contraction of the source of
FORM. CARE	T IT ON THIS	
	FULLY TEAR IT T AND DROP IT	
IN THE MAIL		ATE SENT
UBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 11-5821-248-20P	19 OCT 1981	Radio Set AN/ARC-102
BE EXACT PIN-POINT WHERE IT IS IN	THIS SPACE TELL WH	AT IS WRONG
	D WHAT SHOULD BE	
RINTED NAME GRADE OR TITLE AND TELEPHONE		VEDE
HINTED MARE GRADE UN TITLE AND TELEPHONE	NUMBER SIGN	HERE

THE IN YOUR	
FILL IN YOUR Unit's Address	
└₹⊊┘	
	FOLD BACK
DEPARTMENT OF THE ARMY	
OFFICIAL BUSINESS	

REVERSE OF DA FORM 2028-2

Commander US Army Communications-Electronics Command ATTN: DRSEL-ME-MQ Fort Monmouth, New Jersey 07703

	Something	B WRONG WITH THIS PUBLICATION
DOPE ABOU FORM. CAR	T DOW'N THE T IT ON THIS FFULLY TEAR IT IT AND DROP IT	
UBLICATION NUMBER TM 11-5821-248-20P	PUBLICATION DATE	PUBLICATION TITLE Radio Set AN/ARC-102
E EXACT PIN-POINT WHERE IT IS	19 OCT 1981 THIS SPACE TELL WHAT ND WHAT SHOULD BE DOM	IS WRONG
INTED NAME GRADE OR TITLE AND TELEPHON	NUMBER SIGN HE	DC .

REVER	RSE OF DA FORM 2028-2
······································	
FILL IN YOUR Unit's Address	
<u>ــــــــــــــــــــــــــــــــــــ</u>	FOLD BACK
X	
EPARTMENT OF THE ARMY	
OFFICIAL BUSINESS	
Commondou	
Commander	instianc Electropics Command
US AYMV LOMMUN	ications-Electronics Command

ATTN: DRSEL-ME-MQ Fort Monmouth, New Jersey 07703

t

| | | | |

7	2.11				Someth	ING	WRONG	WITH THIS PUBLICATION	
$\langle \langle \rangle$	E. (*)) ,	THEN.		INT DOWN THE				
5			DOPE A	BOU'T IT	ON THE ON THIS LY TEAR IT				
					IT AND DROP IT				
						······			
	гюн ниме ГМ 11-5	BER 821-24	8-20P	PUBLICATION DATE 19 OCT 1981 IN THIS SPACE TELL WHAT IS WRONG					
BE EXA		OINT WHE							
PAGE	PARA GRAPH	FIGURE	TABLE		S SPACE TELL W HAT SHOULD BI				
	GRAPH								
		1	l	l					
]]	1					
	ł	ł							
	1		ł						
	1	1	ĺ						
		1	1						
		l.	1	[
	ł	[l	ĺ –					
		1							
	ł								
	ł								
	ĺ								
	:								
]]						
		ļ	I						
		1							
	1	l							
	L							<u></u>	
PRINTED	NAME GRAD	DE OR TITLE	AND TELEP	HONE NUM	BEP S	IGN HE	RE		

AEVER	SE OF DA FORM 2028-2
FILL IN YOUR UNIT'S ADDRESS	
	FOLD BACK
DEPARTMENT OF THE ARMY	
OFFICIAL BUSINESS	

Commander US Army Communications-Electronics Command ATTN: DRSEL-ME-MQ Fort Monmouth, New Jersey 07703

 By Order of the Secretary of the Army:

E. C. MEYER General, United States Army Chief of Staff

Official:

ROBERT M. JOYCE Brigadier General, United States Army The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-36, Organizational maintenance requirements for AN/ARC-102.

DEPARTMENT OF THE ARMY US ARMY AG PUBLICATIONS CENTER 1655 WOODSON ROAD ST. LOUIS, MISSOURI 63114

OFFICIAL BUSINESS