TM11-5820-1046-20P

TECHNICAL MANUAL

UNIT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

RADIO SET AN/PRC-104B (V)4

(NSN 5820-01-262-9550)

Distribution authorized to the Department of Defense and DOD contractors only for official use or for administration or operational purposes. This Determination was made on 1 July 1989. Other requests for this document will be referred to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-P, Fort Monmouth, NJ 07703-5000.

DESTRUCTION NOTICE- Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

HEADQUARTERS, DEPARTMENT OF THE ARMY

1 FEBRUARY 1990

Technical Manual

HEADQUARTERS DEPARTMENT OF THE ARMY Washington, DC, 1 February 1990

No. 11-5820-1046-20P

UNIT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR RADIO SET AN/PRC-104B(V)4 (NSN 5820-01-262-9550)

Current as of 1 November 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-LC-ME-PS, Fort Monmouth, New Jersey07703-5000. In either case, a reply will be furnished direct to you.

Table of Contents

			Page	Illus/ Figure
Section	I. II.	Introduction	1 1-1	
Group	ØØ Ø1 Ø3 Ø4 Ø5 Ø6 Ø7	AN/PRC-104B(V)4 Radio Set	1-1 2-1 3-1	1 2 3
Section	III. IV.	Special Tools List (Not applicable) Cross-Reference Indexes National Stock Number Index Part Number Index Figure and Item Number Index	I-1 I-2 I-3	

SECTION 1

INTRODUCTION

1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit maintenance of the AN/PRC-104B(V)4. It authorizes the requisitioning, issue and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.

b. <u>Section III.</u> <u>Special Tools List.</u> Not applicable.

Section IV. Cross-Reference Indexes. A list, in National <u>c.</u> item identification number (NIIN) sequence, of all National stock appearing in the listing, followed by a list in numbered items sequence of all part numbers appearing in the listings. alphameric National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure number and item number index lists figure and item numbers in numeric sequence and cross-references National stock number, Federal Supply Code for Manufacturer and part numbers.

3. Explanation of Columns (Section II and III)

<u>a.</u> <u>Item No. (Column (1))</u>. Indicates the number used to identify items called out in the illustration.

b. <u>SMR Code (Column (2))</u>. The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:



NOTE

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) <u>Source code</u>. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Explanation

Stocked items: use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the third position of the SMR code.

NOTE

Items coded PC are subject to deterioration.

KD	1
KF	`>
KВ	

Code

PA

PB PC

PD PE

PF PG

> Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the third position of the SMR code. The complete kit must be requestioned and applied.

Code

MO	-	Made at
		org/AVUM
		category
MF	-	Made at
		DS/AVIM
		category
MH	-	Made at GS
		category
ML	-	Made at
		Specialized
		Repair
		Activity
		(SRA)
MD	-	Made at
		Depot
		Depot
AO		Depot Assembled
AO	-	Assembled
AO		l
A0 AF	-	Assembled by org/AVUM
	-	Assembled by org/AVUM category Assembled
	-	Assembled by org/AVUM category Assembled by DS/AVIM
	-	Assembled by org/AVUM category Assembled
AF	-	Assembled by org/AVUM category Assembled by DS/AVIM category Assembled
AF	-	Assembled by org/AVUM category Assembled by DS/AVIM category Assembled by GS
AF	-	Assembled by org/AVUM category Assembled by DS/AVIM category Assembled
AF AH		Assembled by org/AVUM category Assembled by DS/AVIM category Assembled by GS category
AF AH		Assembled by org/AVUM category Assembled by DS/AVIM category Assembled by GS category Assembled
AF AH AL		Assembled by org/AVUM category Assembled by DS/AVIM category Assembled by GS category Assembled by SRA

Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the description and usable on code (UOC) column and listed in the Bulk Material group of the repair parts list. If the item is authorized to you by the third position code of the SMR code, but the source code indicates it is made at a higher category, order. the item from the higher category of maintenance.

Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the category of maintenance indicated by the source code. If the third position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.

Code

Explanation

- XA Do not requisition an "XA" coded item. Order its next higher assembly.
- XB If an "XB" item is not available from salvage, order it using the FCSM and part number given.
- XC Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD Item is not stocked. Order an "XD" coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR **750-1**.

(2)Maintenance code. Maintenance codes tell you the category of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

The maintenance code entered in the (a) third position tells you the lowest maintenance category authorized to remove, and use an item. replace, The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.

Code

Application/Explanation

- C Crew or operator maintenance done within organizational or aviation maintenance.
- 0 organizational or aviation unit category can remove, replace, and use the item.
- F Direct support or aviation intermediate category can remove, replace, and use the item.
- H General support category can remove, replace, and use the item.
- L Specialized repair activity can remove, replace, and use the item.
- D Depot category can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance category with the capability to do complete repair (i.e., perform all authorized repair functions). This position will contain one of the following maintenance codes.

NOTE

Some limited repair may be done on the item at a lower category of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

Code

Application/Explanation

- O Organizational or aviation unit is the lowest category that can do complete repair of the item.
- F Direct support or aviation intermediate is the lowest category that can do complete repair of the item.
- H General support is the lowest category that can do complete repair of the item.
- L Specialized repair activity (designate the specialized repair activity) is the lowest category that can do complete repair of the item.
- D Depot is the lowest category that can do complete repair of the item.

Code

Application/Explanation

- Z Nonreparable. No repair is authorized.
- B NO repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item.) However, the item may be reconditioned by adjusting, lubricating, etc., at the user category.

(3) <u>Recoverability code</u>. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

Recoverability

codes

Application/Explanation

- Z Nonreparable item. When unserviceable, condemn and dispose of the item at the category of maintenance shown in the third position of SMR code.
- O Reparable item. When uneconomically reparable, condemn and dispose of the item at organizational or aviation unit category.
- F Reparable item. When uneconomically reparable, condemn and dispose of the item at direct support or aviation intermediate category.
- H Reparable item. When uneconomically reparable, condemn and dispose of the item at general support category.
- D Reparable item. When beyond lower category repair capability, return to depot. Condemnation and disposal of item not authorized below depot category.
- L Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer appropriate manuals/directives for specific instructions.

<u>c.</u> <u>FSCM (Column (3))</u>. The Federal Supply Code for Manufacturer (FSCM is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

<u>d.</u> Part Number (Column (4)). Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. Description and Usable on Code (UOC) (Column (5)). This column includes the following information.

(1) The Federal item name and, when required, a minimum description to identify the item.

(2) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both section II and section III.

f. Qty (Column (6)). Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

4. Explanation of Columns (Section IV)

a. National Stock Number (NSN) Index.

(1) <u>Stock number column</u>. This column lists the NSN by National item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN. When using this column to locate an item, ignore the first four digits of the NSN. When requisitioning items use the complete NSN (13 digits).

(2) Fig. column. This column lists the number of the figure where the item is identified/located. The illustrations are in numerical sequence in sections II and III.

(3) <u>Item column</u>. The item number identifies ^{the} item associated with the figure listed in the adjacent Fig. column. This item is also identified by the NSN listed on the same line.

<u>b.</u> Part Number Index. Part numbers in this index are listed by part-number in ascending alphameric sequence.

(1) $\underline{\rm FSCM}$ $\underline{\rm column}$. This column lists the Federal supply code for manufacturer.

(2) <u>Part number column</u>. This column indicates the part number assigned to the item.

(3) <u>Stock number column</u>. This column lists the National stock number for the associated part number and manufacturer identified in the part number and FSCM columns to the left.

(4) <u>Fig. column</u>. This column lists the number of the figure where the item is identified/located in sections II and III.

(5) <u>Item column</u>. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

c. Figure and Item Number Index.

(1) <u>Fig. column</u>. This column lists the number of the figure where the item is identified/located in sections II and III.

(2) <u>Item column</u>. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent. figure number column.

(3) <u>Stock number column</u>. This column lists the National stock number for the item.

(4) <u>FSCM column</u>. The Federal supply code for manufacturer (FSCM) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(5) <u>Part number column</u>. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of item.

5. Special Information

a. Associated Publications. The publications listed below pertain to the AN/PRC-104B(V)4 and its components:

TM 11-5820-467-24P , Antenna Group AN/GRA-50
TM 11-5820-477-23P, Radio Set Control Group AN/GRC-39C
TM 11-5820-1045-12, Radio Set AN/GRC-193B(V)1
TM 11-5820-1046-12 , Radio Set AN/PRC-104B(V)4
TM 11-5820-1047-12 , Radio Set AN/GRC-213A(V)1
TM 11-5820-1045-20P, Radio Set AN/GRC-193B(V)1
TM 11-5820-1047-20P, Radio Set AN/GRC-213A(V)1
TM 11-5985-379-14&P, Antenna AS-2259/GR

b. <u>Illustrations - Listing</u>. The illustrations in this RPSTL are identical to those published in **TM 11-5820-1046-40P**. Only those parts coded "C or "O" in the third position of the SMR code are listed in the tabular listing; therefore, there may be a break in the

item number sequence, figure number and page number. Only illustrations containing organizational or aviation unit authorized items appear in this RPSTL.

<u>b.</u> National Stock Numbers. National stock numbers (NSN'S) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN'S are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN : AMSEL-LC-MM, Fort Monmouth, NJ Ø7703-500 for the part required to support your equipment.

6. How to Locate Repair Parts

a. When National stock number or part number is not known.

(1) <u>First</u>. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) <u>Second</u>. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) <u>Third</u>. Identify the item on the figure and note the item number .

(4) <u>Fourth</u>. Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) <u>Fifth</u>. Refer to the Part Number Index to find the NSN, if assigned.

b. When National stock number or part number is known.

(1) First. Using the index of National stock numbers and part numbers, find the pertinent National stock number or part number. The NSN index is in National item identification number (NIIN) sequence (para 4a(1)). The part numbers in the part number index are listed in ascending alphameric sequence (para 4b). Both indexes cross-reference you to the illustration figure and item number of the item you are looking for.

(2) <u>Second</u>. After finding the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

7. Abbreviations

Not applicable.

Section II



Figure 1. AN/PRC-104B(V)4 Radio Set

SECTION II	TM11-582	0-1046-20P	
(1) (2) (3)		(5)	(6)
ITEM SMR No code fscm	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
		GROUP 00 AN/PRC-104B(V)4RADIOSET	
		FIGURE 1	
9 PAOHH 80058 10 PAOBA 80058	2-2-344 AT-271A/PRC AB-129/PR 79A5029A0050 H250A/U 2249-C-22 AM-6874/PRC-104 RT-1209A/URC BB-590/U BA-5590/U 79A5029A0000 1995 UG-349A/U 755002A1260 755002A1260 755002A1000 ANGRA50 1990 431-6379 755002C9020 2-3-290	SHELF, CARGO. FIELD PACK ANTENNA ANTENNA ELEMENT CABLE ASSEMBLY, SPEC. HANDSET CABLE, ASSY RADIO FR. AMPLIFIER, RADIO FRE (SEE FIG 3 FOR BREAKDOWN) RECEIVER-TRANSMITTE BATTERY, STORAGE BATTERY (1) NONRECH. CASE, BATTERY ASSEMB. SUPPORT, ANTENNA ADAPTER, CONNECTOR CABLE, EXTENSION, BAT. KEY TELEGRAPH. ANTENNA GROUP (SEE TM 11-5820-467- 24P FOR BREAKDOWN) ANTENNA. CASE, TRANSIT. CARD, INSTRUCTION FRAME ASSEMBLY, FIEL STRAP WEBBING.	

END OF FIGURE



CE2AD002

SECTION	II	TM11-58	20-1046-20P	
(1)	(3)	(4) DADT	(5)	(6)
ITEM SMR No Code	FSCM	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
			GROUP 01 RECEIVER/TRANSMITTER	
			FIGURE 2	
2 PAOZZ 15 PAOZZ	96906 MS9 87990 755	1528-0E1B 002C3902-1	KNOB. DUST COVER,EMI,CONN	1
			END OF FIGURE	



Figure 3. Amplifier, Radio Frequency

SE (1) ITEM NO	CTION (2) SMR CODE	II (3) FSCM	TM11-5820 (4) PART NUMBER	-1046-20P (5) (6) DESCRIPTION AND USABLE ON CODES(UOC) QTY	
				GROUP 02 AMPLIFIER, RADIOFREQUENCY	
				FIGURE 3	
3	PAOZZ	56878	38031-94C-5B-A28	SCREW; MACHINE1	
5	XBOZZ	87990	6 KC-89-177 755002A0514 MS91528-0K1B	COVER, ELECTRICAL CO	

END OF FIGURE

SECTION IV

TM11-5820-1046-20P

CROSS-REFERENCE INDEXES

STOCK NUMBER FIG. ITEM STOCK NUMBER FIG. ITEM 5965-00-043-3463 1 6		NATI	DNAL STOCK	NUMBER INDEX		
5985-00-243-4127 1 4 5985-00-646-2365 1 3	STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
5985-00-243-4127 1 4 5985-00-646-2365 1 3		,	,			
		Ļ				
		1	4			
		1				
5935-00-739-2242 1 14	5935-00-739-2242	1	14			
5355-00-762-1489 2 2	5355-00-762-1489	2	2			
5985-00-892-0758 1 17		ī				
5355-00-959-3161 3 6		र्दे				
6135-01-036-3495 1 11		ĭ				
		1 1				
		Ţ				
5820-01-065-4442 1 15		1	15			
5820-01-065-5044 1 8	5820-01-065-5044	1				
5805-01-067-5388 1 16	5805-01-067-5388	1	16			
5935-01-069-6051 3 4	5935-01-069-6051	3	4			
	6140-01-080-2886	ī				
		ī				
5820-01-214-8802 1 19		î				
		†				
5985-01-245-6160 1 13		÷				
5820-01-270-5099 1 9	5820-01-270-5099	1	9			

I-1

TM11-5820-1046-20P

SECTION IV

CROSS-REFERENCE INDEXES

FSCM	PART NUMBER	TNUMBER INDEX STOCK NUMBER	FIG.	ITEM
80058 80058 80058 80058 80058 80058 91836 96906 80058 96906 80058 80058 80058 57010 81337 81337 81337 81337 81337	AB-129/PR AM-6874/PRC-104 ANGRA50 AT-271A/PRC BA-5590/U BB-590/U H250A/U KC-89-177 MS91528-0E1B MS91528-0E1B MS91528-0K1B RT-1209A/URC UG-349A/U 1990 1995 2-2-313 2-2-344 2-3-290 2-3-291 2249-C-22	5985-00-243-4127 5820-01-065-5044 5985-00-892-0758 5985-00-646-2365 6135-01-036-3495 6140-01-063-3918 5965-00-043-3463 5935-01-069-6051 5355-00-959-3161 5820-01-270-5099 5935-01-245-6160		4 8 17 3 11 10 6 4 2 6 9 14 18 13 22 21 1 7 3
56878 24995 87990 87990 87990 87990 87990 87990 87990 01365	38031-94C-5B-A28 6 431-6379 755002A0514 755002A1000 755002A1260 755002C3902-1 755002C39020 79A5029A0000 79A5029A0050	5820-01-214-8802 5805-01-067-5388 5820-01-065-4442 6140-01-080-2886 6150-01-092-4807	3 1 1 2 1 1 1	19 5 16 15 20 12 5

SECTION IV

TM11-5820-1046-20P

CROSS-REFERENCE INDEXES

FIG.	ITEM	FIGURE AND ITEM N Stock Number	UMBER INDEX FSCM	PART NUMBER
1 1 1 1	1 2 3 4 5 6 7 8 9		81337	2-3-291
1,	2		81337	2-2-344
Ť	3	5985-00-646-2365	80058	AT-271A/PRC
ļ	4	5985-00-243-4127	80058	AB-129/PR
1	Ş	6150-01-092-4807	01365	794502940050
	6	5965-00-043-3463	80058	H250A/U
Ţ	/		05276	2249-0-22
Ţ	õ	5820-01-065-5044	80058	AM-6874/PRC-104
1 1 1 1 1 1 1 1 1 1 1 1 1 1 2 2 3		5820-01-270-5099	80058	RT-1209A/URC
Ţ	10	6140-01-063-3918	80058	BB-590/U
ļ	11	6135-01-036-3495	80058	BA-5590/U
1 1	12	6140-01-080-2886	87990	79A5029A0000
ţ	13	5985-01-245-6160	57010	1995
1,	14	5935-00-739-2242	80058	UG-349A/U
Ļ	15	5820-01-065-4442	87990	755002A1260
1	16	5805-01-067-5388	87990	755002A1000
ļ	17	5985-00-892-0758	80058	ANGRA50
Ţ	18		57010	1990
1	19	5820-01-214-8802	24995	431-6379
ī	20		87990	75500209020
1	21		81337	2-3-290
I	22		81337	2-2-313
2	2	5355-00-762-1489	96906	MS91528-0E1B
2	15		87990	755002C3902-1
3	3		56878	38031-94C-5B-A28
-				6
3 3 3	4	5935-01-069-6051	91836	KC-89-177
5	5	FTFF AA ANA 9-4-	87990	755002A0514
3	6	5355-00-959-3161	96906	MS91528-0K1B



REVERSE OF DA FORM 2028-2 1 ł TEAR ALONG PERFORATED LINE FILL IN YOUR UNIT'S ADDRESS FOLD BACK DEPARTMENT OF THE ARMY AMPLE OFFICIAL BUSINESS Commander **US Army Communications-Electronics Command** and Fort Monmouth ATTN: AMSEL-LC-ME-PS Fort Monmouth, New Jersey 07703-5000

ł

	11			,	Somet	nne	WRONG	WITH THIS PUBLICATIO
			DOPE A FORM. (BOUT I CAREFU	OWN THE T ON THIS LLY TEAR	FROM	: (PRINT YOUR L	INIT'S COMPLETE ADDRESS
					TAND	DATE	SENT	
	-5820-	BER 1046-20)P		PUBLICATION 1 Februar		PUBLICATION TI Radio Set	TLE AN/PRC-104B(V)4
BE EXA	PARA- GRAPH	FIGURE NO.	RE IT IS		SPACE TELL WH			
		NO .						
PRINTED NA	ME GRADE O	R TITLE AND T	ELEPHONE NL	IMBER		SIGN HE	RE	
							-	



	21				SOMETH	IING	B WRONG WITH THIS PUBLICATION
5		1	DOPE A	BOUT I	OWN THE		A: (PRINT YOUR UNIT'S COMPLETE ADDRESS
\square			τ ουτ	, FOLI	ULLY TEAR D IT AND E MAIL.	DATE	SENT
	-5820-	BER 1046-20)P		PUBLICATION D 1 February		PUBLICATION TITLE Radio Set AN/PRC-104B(V)4
BE EXA	CT PIN-I PARA- GRAPH	FIGURE	TABLE NO.		SPACE TELL WHA		•
PRINTED N	AME GRADE (DR TITLE AND	i Telephone n	UMBER		SIGN H	HERE



/	51	\mathbf{N}		Someti	NNG	WRONG WITH THIS PUBLICATION
		1	DOPE A	JOT DOWN THE BOUT IT ON THIS CAREFULLY TEAR	FROM	: (PRINT YOUR UNIT'S COMPLETE ADDRESS
				, FOLD IT AND	DATE	SENT
	TION NUM -5820-	BER 1046-20)P	PUBLICATION 0 1 Februar		PUBLICATION TITLE Radio Set AN/PRC-104B(V)4
BE EXA	T	POINT WHE		IN THIS SPACE TELL WH		
PAGE NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.	AND WHAT SHOULD BE	DONE /	NBOUT IT:
			{			
		-				
			I	I	· · · · · · · · · · · · · · · · · · ·	
PRINTED N	IAME GRADE	OR TITLE AND	TELEPHONE N	UMBER	SIGN H	ERE



By Order of the Secretary of the Army:

CARL E. VUONO General, United States Army Chief of Staff

Official:

WILLIAM J. MEEHAN II Brigadier General, United States Army The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-51 unit requirements for AN/PRC-104A.

☆ U.S. GOVERNMENT PRINTING OFFICE: 1990-712-094/20170