ERRATUM - K 6313.

please note, in section 4 of the alignment Constructors should read :- "Temporarily connect the procedures (page 7) +13.8 volt supply rail to the cathode of D3 (base of Q3) via a 10K resistor. Check that ... etc."

Please make this correction to your instruction manual before commencing construction. Thank You.

PLEASE READ DISCLAIMER CAREFULLY AS WE CAN ONLY GUARRANTEE PARTS AND NOT THE LABOUR CONTENT YOU PROVIDE

K-6313

Reproduced in part with arrangement with Electronics Australia, from their March 1986 Edition.

Cut through the noise on the 2-metre band! Put a really whopping signal out with this 100W afterburner, the biggest kit amplifier currently available!

Most VHF amateur band transceivers for mobile use feature power outputs of between 2W and 15W. That's fine for most situations, but how many times have you wished for more power to trigger a distant repeater or to put out a more readable signal? If that's the case, then this new 100W 144MHz linear amplifier is the answer. It's available from Dick Smith Electronics as a complete kit of parts, boasts 120W continuous output power (15W input), and is easy to build and align. In use, the amplifier is interposed between the transceiver and the antenna. There are just two front panel controls: a switch to select between FM and SSB/CW operating modes; and an operate/standby switch. An on-air lamp and a relative output meter complete the front panel line-up. The back panel carries the input and output sockets. The operate/standby switch basically functions as an on/off switch. In the operate position, the amplifier is switched into circuit whenever the PTT button on the transceiver is pressed. When the PTT button is released, the amplifier is switched out and the transceiver is connected to the antenna socket (on the back of the amplifier) via internal relay contacts. In the standby position, the amplifier is switched off and the transceiver is connected, via the relays, to the antenna socket for both receive and transmit. This operating mode is handy for making local contacts, or in other situa-



View of the completed prototype. The large finned heatsink allows the amplifier to be operated continuously at full output.

tions where the high output power of the amplifier is not required.

Unlike some commercial units, this unit uses low-loss coaxial relays for RF switching. These keep the insertion loss in standby mode to just 0.6dB over the range 144-148 MHz.

By contrast, many commercial units exhibit an insertion loss of 1.5dB or more due to the widespread use of cheap relays. This plays havoc with noise figures on receive and equates to about 7W out for 10W in when operating in standby mode.

How it works

The circuit is quite straightforward

and consists of two parallel RF power transistors, Q1 and Q2, operating in class B mode.

Starting at the input, the RF signal is fed via the contacts of relay RLA to an input matching network consisting of L1 and trimmer capacitors TC3 and TC4. From there, it is capacitively coupled to the bases of Q1 and Q2 which are Mitsubishi 2SC2694 devices rated at 75W each.

Resistors R5 and R6 and diodes D1 and D2 provide bias for the transistor stages. This bias, which is simply the forward voltage drop of each diode, is applied to the transistor bases via RF Text and Illustrations courtesy of Electronics Australia chokes RFC1 and RFC2. The resulting quiescent current through each device is of the order of 150-200mA.

In practice, diodes D1 and D2 are thermally coupled to the power transistors to prevent thermal runaway. Here's how the scheme works: As the transistors get hotter, the diodes also get hotter. As a result, the forward voltage across the diodes drops and this reduces the bias on the transistors.

Thus, the transistors are automatically throttled back as they become hotter.

The collector outputs of the transistors are coupled to two tuned circuits consisting of L5, TC1 and L6, TC2. The amplified signal is then fed to C38 and C39, and applied to the output socket via coaxial relay RLC and a 50Ω stripline.

Note that the output tuned circuit also shows capacitors C41 and C42. These are fitted initially but may have to be removed later during alignment.

Coils L2, L3 and L4 and their associated capacitors provide decoupling for the 13.8V supply rail to the collectors of Q1 and Q2, Similarly, C9-C24, FB1, FB2, RFC1 and RFC2 decouple the base bias voltages.

Relay switching

Q3, Q4 and Q5 form the relay switching circuit. This switches the amplifier into circuit between the transceiver output and the antenna socket on transmit, and switches the amplifier out of circuit during receive.

The circuit works like this: During receive, Q3 is off and Q4 is on. Thus, relay driver transistor Q5 is also off and the transceiver is connected to the output socket via relay contacts RLA and RLC. When the transmit button is pressed, part of the signal passes via C1, is rectified by D3 and charges C2. This provides base bias to Q3 which turns on, turning Q4 off and Q5 on. Q5, in turn, drives relays RLA and RLC to switch the amplifier into circuit. At the same time, power is supplied to the on-air lamp (L1) via relay contacts RLB. Lamp L2 provides illumination for the power meter and is on while ever S1 is closed. S1 allows the amplifier to be switched to standby mode while D4 protects Q5 from back EMF when the relays turn off. When the transmit button is released, the relays remain on for a short time until C3 charges sufficiently to turn Q4 on. Switch S2 considerably extends the relay dropout time for SSB and CW by switching out R7. This is necessary to prevent relay chatter since there is no carrier in SSB mode and only an intermittent carrier in CW mode.

Part of the energy in the tank circuit is coupled into the anode circuit of D6 via two parallel tracks on the underside of the PC board. This signal is then rectified by germanium diode D6, filtered by C4 and applied to the meter movement via calibration trimpot VR1.

Note that D6 must be germanium type to ensure low forward voltage.

Construction

Construction is straightforward with most of the parts mounted on a doublesided PC board coded ZA-1661 and measuring 128 x 250mm. This is mounted on a large finned heatsink which forms the top of the case and provides heatsinking for the two RF power transistors.



Power meter

The relative power meter circuit monitors the RF energy in the output tank circuit. Here's how it works:

Page 2 Text and Illustrations courtesy of Electronics Australia





View of the front panel. Note mounting details for the meter lamp bezel.

> through-board links to the board as shown in Fig.2. There are 19 throughboard links in all and these should be installed using 1.6mm diameter tinned copper wire.

Text and Illustrations courtesy of Electronics Australia Page 3

Fig. 2: this diagram shows the locations of the through-board links and brass shims (see text).



Fig. 3: the ceramic capacitors are all soldered to the top of the board, except for C1 which is mounted in the conventional manner. Trim the leads as shown in the diagram.

A black anodised base and two end panels complete the case.

To make construction really easy, Dick Smith Electronics will be supplying the metalwork and heatsink predrilled. In addition, the front panel features white screened lettering on a black background to give the unit a really professional appearance.

Begin construction by fitting the

With the links installed, the next step is to fit the brass shims in the positions indicated. These will have to be cut from the 100 x 100mm sheet provided.

Begin by cutting eight $4 \times 12mm$ strips, one 10 x 53mm strip and one 20 x 40mm strip. This done, fold each strip in half and fit them to the PC board as shown in Fig.2. Note that the shims must be soldered to both sides of the PC board.

The real job of installing the parts on the PC board can now be tackled. Note that because the circuit works at VHF, all leads must be kept as short as possible. For this reason, most of the components are soldered to the top of the PC board.

This means that the layout diagrams must be followed carefully when installing the parts. In most cases, there are no holes to guide the constructor.

Some parts are, however, mounted conventionally. Where possible, their leads must be soldered on both sides of the board.

Fig.1 shows the parts layout on the PC board. No particular order need be followed when assembling the board but we suggest that the resistors, capacitors (but not C9-C16), links and diodes (but not D1 and D2) be installed first. Fig.3 shows how the ceramic capacitors are mounted (except for C1 which is mounted in the conventional manner), while Fig.4 shows the details for Link 1 and Link 2.

Note that resistors R5 and R6 become quite warm during operation and should be stood off the board by about 5mm (see Fig.6). Capacitors C9-C13 are installed after the two RF power transistors are installed and should be left out of circuit for the time being.



This close up view shows how link L1 and its adjacent trimmer capacitors are mounted. The power cables are secured using a cord-grip grommet.



The trimmer capacitors can be in-

Fig. 7: coil winding details. The coils are all air-wound using metric drill bits as the coil formers.



Construction follows standard RF practice with most of the parts soldered to the top of the PC board. Page 4 Text and Illustrations courtesy of Electronics Australia

FUSE HOLDER ASSEMBLY



Figuran all republications are builted directly in the howean and their leads solitared to the howean their leads solitared to the

Text and Illustrations courtesy of Electronics Australia Page 5

CIRCUIT DIAGRAM



The circuit uses two parallel RF transistors, Q1 and Q2, operating in class B mode. Q3-Q5 provide relay switching.

stalled next. These must be correctly oriented, otherwise the adjusting screws will have high RF voltages on them. Fig.5 shows the mounting details for the two different types of trimmer capacitors.

Installation of transistors Q3-Q5 is straightforward but Q1 and Q2 should be left off the board for the time being. We'll come to those later. Push the transistors down onto the board as far as they will comfortably go before soldering the leads.

Note that the emitter leads of Q3-Q5 must be soldered on both sides of the board. Install Q5 so that its metal tab faces relay RLA.

Coil winding

The coils for the 144MHz Power Amplifier require only a few minutes work. With the exception of L1, they are all wound using various grades of copper wire. A set of metric drill bits can be used as the coil formers.

Page 6 Text and Illustrations courtesy of Electronics Australia



The two RF transistors are bolted directly to the heatsink and their leads soldered to the brass shims. Note mounting details for D1 and D2.

Fig.7 shows the winding details. Be sure to use the correct grade of wire for each coil and don't forget to install a ferrite bead on one leg of both RFC1 and RFC2. Solder each coil to the PC board as it is wound and secure the windings of RFC1 and RFC2 using epoxy adhesive.

Note: on the prototype, short lengths of spaghetti sleeving were covered with adhesive and pushed into the RFC1 and RFC2 windings.

RF transistors

Installing the RF transistors requires a number of steps involving assembly and disassembly of the PC board onto the heatsink. Here's what to do:

(1) Position the sheet of "elephantide" insulation supplied with the kit on the mounting surface of the heatsink and temporarily secure the board using machine screws and nylon washers. The latter (three per screw) are used as standoffs between the PC board and the heatsink.

(2) Mark out the transistor mounting positions, then remove the board and make two square cutouts in the insulation material so that the RF transistor cases can make direct contact with the heatsink.

(3) Re-install the PC board on the heatsink.

(4) Carefully trim the four outside legs of the RF transistors by about 3mm (see Fig.8). This done, bolt the transistors to the heatsink and solder their legs to the PC tracks and brass shims. Fig.9 shows

The two power supply leads must be run using the heavy-gauge insulated cable supplied. Note that the positive lead should be fitted with the 25A in-. line fuse supplied with the kit. The two leads exit through a cable restraint fitted to the rear panel.

The remainder of the wiring can be run using light-duty hookup wire. This should be bound into a wiring loom using cable ties as shown in the photographs. Note that one of the leads to S1 must be soldered on both sides of the PC board.

With the wiring completed, smear heatsink compound on the underside of the RF transistors and re-install the PC board on the heatsink. The two end panels can now be secured to the heatsink using the large self-tapping screws supplied and the meter lamp mounted in position.

The accompanying photograph shows how the meter lamp is mounted. It is pushed into a rubber grommet and supported by a short length of tinned copper wire which is soldered to the PC board. The lamp is positioned over the meter by bending the copper wire.

Connections between the PC board and the rear panel sockets should be made using the brass shim and short lengths of tinned copper wire.

The input and output connections each use a piece of brass shim measuring 4 x 15mm, with an extension lug to go through the PC board for soldering. The other ends are connected to the socket terminals with a short piece of 1.5mm tinned copper wire, as shown in the photograph. The two earth straps are made from brass shim. The straps should be cut so as to clear the input and output connections. They are secured to the panel by the socket flanges, while the other ends of the straps should be soldered to the PC board. the diodes so that their bodies are in contact with the transistors to ensure good thermal conduction.

Alignment

This is quite a straightforward process but you do need access to some test equipment: (1) a multimeter, (2) a 100W dummy load (eg, DSE Cat. No. D-7030); (3) an SWR meter; (4) a 0.5-1W VHF transceiver: and (5) an RF power meter (optional).

Before commencing the alignment, there are a few precautions that must be observed. First, always use an insulated alignment tool when making adjustments. Second, keep your fingers away from the coils and the PC pattern to prevent RF burns. And third, do not initially apply full drive to the amplifier, or damage may occur.

The step-by-step alignment procedure is as follows:

(1) Connect the output of the amplifier to the dummy load.

(2) Connect the amplifier to a 13.8V 15A power supply (eg, the VK Power-master, EA, March 1984 or a car battery).

(3) Switch the amplifier to operate mode and FM. The relays should turn on and then drop out. Check that the current consumption is about 50mA at this point (due mainly to the meter lamp).

(4) Temporarily connect the +13.8Vsupply rail to the cathode of D3 (base of Q3). Check that the relays all operate and that the current consumption rises to about 1.2A. If the current is greater than 2A, switch off and check for wiring errors. (5) Remove the power supply connection to D3 and set trimmer TC4 to half mesh. (6) Connect the 0.5-1W 2-metre transceiver to the amplifier input with the SWR meter in series. Note: do not use a transceiver with a larger output at this stage. (7) Set the transceiver to 146MHz (ie, to the centre of the band), operate the PTT switch and adjust TC3 for lowest reflected power (SWR). This done, ad-

the details.

Note that an earth lug must be fitted under each of the four mounting screws. Solder these to the ground plane on the PC board.

(5) Install capacitors C9-C16 and remove the PC board from the heatsink.

Final assembly

Now for the final assembly. This mainly involves installing the remaining hardware and wiring up the front and rear panels (see Fig.1). Secure the meter to the front panel using epoxy adhesive.

Construction can now be completed by installing diodes D1 and D2. Apply a generous coating of heatsink compound to the tops of the RF transistors before soldering the diodes into circuit. Arrange



just TC4 for lowest SWR and check the SWR at the band edges.

Repeat the adjustments until the SWR is less than 1.2:1 over the entire band.

(8) Remove the SWR meter and connect the transceiver directly to the amplifier unit. Where available, connect an RF power meter to the output. Note: keep the dummy load if the meter is not a terminating type.

(9) Screw the adjusting screws of TC1 and TC2 down until they are fingertight.

(10) Operate the transceiver PTT switch and alternatively back off TC1 and TC2 a fraction of a turn each for maximum reading on the power meter. The idea here is to get the two output tank circuits to resonate with TC1 and TC2 set to about the same value.

Initially, C41 and C42 should be incircuit. Remove them if TC1 and TC2 cannot be conveniently adjusted to bring the tank circuits to resonance (ie, if the adjusting screws become loose).

(11) If no RF power meter is available, use the output meter built into the amplifier. Use VR1 to adjust the meter sensitivity if the reading is initially too low to register.

(12) Connect a 5W 2-metre transceiver to the input, operate the PTT switch and re-adjust TC3 and TC4 for maximum output. This done, re-adjust TC1 and TC2 but make sure that their values are kept as equal as possible.

Note: a 10-15W transceiver can be used for this step, provided that you proceed with caution. Operate the PTT switch for short periods of time only (a few seconds) when making adjustments to prevent damage to the amplifier. (13) Remove the drive and check that the current consumption drops to around 50mA when the relays drop out.

(14) Switch the amplifier to SSB and apply drive (ie, a carrier) until the relays pull in. Remove the drive and check that the current consumption drops to around 1.2A before the relays drop out, then to about 50mA.

(15) Connect a 10-15W transceiver and repeat step 12 to ensure maximum output. Adjust trimpot VR1 so that the amplifier meter reads full scale at maximum drive. That completes the alignment.

Operation

The amplifier can be driven by any 2-metre transceiver with an output power of up to 15W. Do not apply more than 15W of drive, otherwise the RF power transistors will be over-driven and may burn out.

Similarly, the RF transistors may also burn out if the amplifier is driven into mismatched loads (SWR greater than 2:1). Check the antenna SWR before connecting up the amplifier and always use good-quality 50Ω coaxial cable for the input and output connections.

Finally, it is normal for the output power of the amplifier to drop by about 10% after a few minutes of continuous operation due to the action of the compensation diodes (D1 and D2).



The rear panel accommodates the two SO-239 sockets and the cord-grip grommet. Use good-quality 50 Ω coax for all input and output connections.



The rear panel sockets are "wired" using the brass shim material and short lengths of 1.5mm tinned copper wire. Page 8 Text and Illustrations courtesy of Electronics Australia

		2 CI CI	rugite iswall	Instant grouper	
	5.0	g	(19)及(19)(19)	(1947) attale)	
1				VES	
			PARTS LIST		
		0.53	FAILTO LIOT		
All	resistor	s are 1/4W unless specified			
es	sistors	AS1	V48P		
		Posistor(P1 P2)			
X	2.2R	Resistor(R1,R3)			L
X	10R	Resistor(R2,R4)			L
X	100R	Resistor(R12)		•••••••••••••••••••••••••••••••••••••••	L
X	1K	Resistor(R10,R11)			L
X	10K	Resistor(R7,R9)	S (9108)		L۲
X	100K	Resistor(R8)			L
X X	33R 10K	Resistor(R5,R6) Trimpot (VR1)		•••••••••••••••••••••••••••••••••••••••	ь. Г
^	TOIL	minpor (viri)			
ap	acitors	H4 00 11			
x	1pF	Ceramic Cap 50V(C1)			Γ
	1pF 100pF	Ceramic Cap 50V(C1) Ceramic Cap 50V(C5-C8)			
X	100pF	Ceramic Cap 50V(C5-C8)			E
x	100pF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2	0,C22,C24,C30,C31, C35	,C36)	C
X X X	100pF .001uF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2 Electro Cap 25V RB(C2) Electro Cap 25V RB(C3)	0,C22,C24,C30,C31, C35	,C36)	E
x x x x	100pF .001uF 10uF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2 Electro Cap 25V RB(C2) Electro Cap 25V RB(C3)	0,C22,C24,C30,C31, C35	,C36)	C C C
× × × ×	100pF .001uF 10uF 100uF 100uF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2 Electro Cap 25V RB(C2) Electro Cap 25V RB(C3) Electro Cap 25V RT(C17,C18,	0,C22,C24,C30,C31, C35 C32,C33)	,C36)	C
× × × × ×	100pF .001uF 10uF 100uF 100uF 12pF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2 Electro Cap 25V RB(C2) Electro Cap 25V RB(C3) Electro Cap 25V RT(C17,C18, Silver Mica 500V(C40-C42)	0,C22,C24,C30,C31, C35 C32,C33)	,C36)	C C C C
x x x x x x 6x	100pF .001uF 10uF 100uF 100uF 12pF 47pF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2 Electro Cap 25V RB(C2) Electro Cap 25V RB(C3) Electro Cap 25V RT(C17,C18, Silver Mica 500V(C40-C42) Ceramic 500V(C9-C16,C	0,C22,C24,C30,C31, C35 C32,C33) 21,C23,C26-C29, C34,C3	,C36)	C
× × × × × × × × × ×	100pF .001uF 10uF 100uF 100uF 12pF 47pF 100pF	Ceramic Cap 50V(C5-C8) Ceramic Cap 50V(C4,C19,C2 Electro Cap 25V RB(C2) Electro Cap 25V RB(C3) Electro Cap 25V RT(C17,C18, Silver Mica 500V(C40-C42)	0,C22,C24,C30,C31, C35 C32,C33) 21,C23,C26-C29, C34,C3 9)	,C36)	C

1x	22uH	RF Choke(RFC3)	
1x	TIP31B	Transistor(Q5)	
2x	BC547	Transistor(Q3,Q4)	
1x	OA91	Diode(D6)	
2x	IN914	Diode(D3,D4)	
2x	IN4002	Diode(D1,D2)	
1x	IN5404	Diode(D5)	
2x	FX115	Ferrite Bead(FB1,FB2)	
2x	2SC2694	Transistor(Q1.Q2)	

Hardware

1x	Ed	ge Meter (M)	□
1x	18V	Meter Lamp .(L2)	□
1x	12V	Lamp Bezel (L1)	□
1x	12V	DPDT Relay(RLB)	□
2x	Coa	axial Relay(RLA,RLC)	□
2x	SPI	DT Toggle Switch(S1,S2)	🗆

Miscellaneous

Heatsink, elephant hide insulation, brass shim, auto cable(red), auto cable(blk), case, enamel copper wire, tin copper wire, rainbow cable, grommet, cable tie, screws, nuts & washers, spaghetti tubing, solder, nylon washers, cable clamp/grommet, sockets, PCB, solder lugs, fuse & holder,



TRUE OF	section of the lo	and the set	Table 1	A CONTRACTOR	R CARE ALL
	Current sumption (A)		ower output watts CW)		put power watts CW)
	9A	Const Physica	43W	en ner l	2W
HI South	10A		55W	NUE IN COMPA	3W
et artificiana hart	11A		66W	a na 34a	1W
and the th	12A		85W	DARE IL LEDRING	6W
AB. registore	12.5	belliosq2	90W	de instruit de	7W
	13A		98W	intend latters	8W
and the second second second	13.2A		W00	10	9W
PE-5 25	14A	Starting Thread again	10W	1	10W
一 持续 一 建	15A	e - anima Anima	20W	1:	15W
HOOT at	Interferences	is with Man Birth Party and a			and the second sec
is 100H	Resistor(R10,811			Marghon	
は 196日 20 1K 30 10K	Resistor(R10,R1) Resistor(R10,R1) Resistor(R7,R8)	h en hit and	Toblo 2	The smith	Mar PTT
	Resistor(R10,R1) Resistor(R10,R1) Resistor(R7,R5) Resistor(R8)		Table 2	Astronom for	
	Resistor(R10,81 Resistor(R10,81 Resistor(R2,88) Resistor(R2,88)	Current	Table 2 Power	Frequency	
	Hesistor(R10,81 Resistor(R7,88) Resistor(R8) Resistor(R8) Resistor(R5,86) Resistor(R5,86)	and the second s		Frequency (MHz)	
	Resistor(R7, R8) (88) holdizari (88, R8) (88, R8) (189) heqmin (189) (181)	Current	Power output		
	Resistor(R7,R8) Hesistor(R8) Resistor(R5,B6) (R0) (VR1)	Current consumption 14.0A 14.0A	Power output (watts CW)	(MHz)	
	Resistor(R7, R8) (88) holdizari (88, R8) (88, R8) (189) heqmin (189) (181)	Current consumption 14.0A 14.0A	Power output (watts CW) 110	(MHz) 144	
	Resistor(R7,R8) Hesistor(R8) Resistor(R5,B6) (R0) (VR1)	Current consumption 14.0A 14.0A 14.0A	Power output (watts CW) 110 110	(MHz) 144 145	
 A 1K A 10K A 10K A 200K A 33R A 33R A 10K A 33R A 10K <	Resistor(R7, R8) Resistor(R8) Resistor(R5, B4) (R4) (R9) (R4) (R1)	Current consumption 14.0A 14.0A 14.0A 13.5A	Power output (watts CW) 110 110 110	(MHz) 144 145 146	

N (#

1.0

in Signarate in L

nden Olymuwa, Ber

1075)

the BE VER minister find ver	the TIPSIB Trais and the second s
	2x BC547 Fransister 00,041
·····································	11 12 OAS1 Didde 10,
	2x iN814 20 517 D3, D4}
A STATE OF DESCRIPTION OF THE OWNER OWNER OF THE OWNER	201 Manager Part 1701 Manager Part 200
The second of the opposite of the second sec	te vert und in die
	2x POIS Famile Bandirent, Pach
	Sector Contrainting Trainting Top 122
Sector field of the USA sector structure and a	
	Mardware Stawbusk
Gun and an and a state of the second s	tx Edge Mular (36) En
	AND THE PARTY OF A PAR
	the tawn Developing and the second
	the first open of the second state of the seco
Elveren oman het sel	
The second of the second second second	
	Minoedimector
	and the second second is a second

STORE LOCATIONS HEAD OFFICE & D5 XPRESS ORDER SERVICE FO Box 321, North Ryde, N.S.W. 2113 Tel. (02) 888 3200 AUSTRALIA

Australia				VIC	-	145.94	******
NSW				Creswick Rd & Webster St	Bailarat	(053)	
Sent & Young Sta	Albury	(080)		145 McGrae St	Bendigo	(054)	43 0388
155 Terrace Level	Bankstown Sq	(02)	707 4888	Shop 46.Box Hill Central Main St	Box Hill	(03)	
5/fog 1 65-75 Main St	Blacktown	(02)	671 7722	Hawmorn Rd & Nepmin Hwy	East Brighton	(03)	592 2366
tit's Photoss Hwy	Blakehurst	(02)	545 7744	260 Sydney Rd	Cohurg	(03)	383 4455
Ovford & Adelaidn Sts	Bondi Junction	(02)	387 1444	1150 Mt Alexander Fld	Essendon	(03)	379 7444
551 Pittwaler Rd	Brookvale	(02)	93 0441	Nepean Hwy & Ross Smith Ave	Frankston	(03)	783 9144
Campbelltown Mail Queen St	Campbelliown	(046)	27 2199	Shop 9 110, High St	Geelong	(052)	
Shep 235 Archer St Entrance	Chatswood Chase	(02)	411 1955	291-293 Elizabeth St	Melbourne	(03)	67 9634
147 Hume Hwy	Chullora	(02)	642 8922	Bridge Rd & The Boulevarde	Richmond	(03)	478 1914
164 Pacific Herry	Gore Hill	(07)	439 5311	Springvale & Dandenong Rds.	Springvale	(03)	\$47 0522
315 Mann St	Gastord	(043)	25 0235	OLD	Constant and	1111	
4 Exitence St	Hornsby	(02)	477 6533	157-159 Extabeth 5t	Brisbane	(07)	228 9377
Expanieth Dr & Bathurst St	Liverpool	(22)	500 9588	156 Logan Rd	Buranda	(07)	391 6233
450 High St	Maitland	(0431	33 7865	Gympie & Hamilton Rds	Cherande	(07)	359 6255
173 Mailland Rd. Tighes this	Newcastle	(045)	61 1896	Queers Elizabeth Dr & Bernard St.	Rockhampton	(073)	27 9644
Lana Cove & Waterloo Rds	North Ryde	1025	88 3455	Gold Coast Hwy & Writch St	Southport	(075)	
Goorge & Smith Sts	Parramatta	(02)	689 2188	Bowen & Ruthven Str.	Toowpomba	(078)	
The Gatewick High & Henry Sts	Feoritz	(047)	32 3400	Ingham Rot & Cowley St West End	Townsville	(077)	
ets George St	Railway Square	(02)	211 3777	Chi Pashc Hwy & Kingston Fid	Underwood	(07)	341 0844
125 YOM SI	Sydney	(02)	267 9111	SA			
Troloat s Oldg, Brisbane St	Tameorin	(0671	88 1951	Wright & Market Sts	Adelaide	(08)	212 1962
263 Kerra St	Wollangang	(042)		Main South & Flagstaff Rds	Darlington	(03)	298 8977
ACT				Main North Rd & Derlington St	Enfield	(08)	260 6088
95 Gladstone 51	Fyshwick	(052)	00 4944	24 Park Terrace	Salisbury	(0.0)	281 1593

					the second se	the second se	
s Stationa Sheve Newmonect Phil S47 744	Dunedin	(024) 74 1096		with the second	come here	Dee
Ph: 1041162 072	Automation	Sec. 10	-	MasterCard		bankicond .	applicants through
s St	Hamilton Weilington	(071) (04)	29 4450 73 9858		2.01bbbb	-1-	Terms evallable to approved personal
	Auckland City						
n Rd	Avondale	(05)	34 6896	CLC			
	Carllen Gore						
14.16	Avealand	10					
	Khyber Fass	:0711	25 54 95				
	Christchurch	(03)	50 405				
4	Street stars	Spares			- A BER		
	and the second second		******		1 berle		
	Hobert	(002)	31 0800				and party property lines (1975)
Hay St	Perth City	(09)	321 4357				
bimson Ave	North Perth	(09)	328 6944	and convention way	Cal.	366 8044	
ny they					Note state of page		
	-						
	S Statland Shever Newmarket	Fremantie North Perth North Perth Perth City Hobart Shuart Para d Christchurch S Rt Airyber Pass S Rt Airyber Pass S Rt Airyber Pass S Rt Christchurch S Rt Airyber Pass S Rt Christchurch S St Christ S St. St. St. St. St. St. St. St. St. St	Fremantie (05) North Perth (05) North Perth (05) Hobart (09) Hobart (002) Shuart Park (028) d Christehurch (03) S Rt Christehurch (03) S Rt Caritan Gore T Rd Papatoetoe (09) Rd Papatoetoe (09) Rd Papatoetoe (09) Rd Papatoetoe (09) S St Weilington (04) 440 Cabu Shiret Destrock (022) S Stuthed Shiret Dunedin (0224	Fremantile (05) 335 9733 binson Axel North Perth (05) 328 6944 binson Axel Perth City (09) 321 6944 binson Axel Perth City (09) 321 4357 Hobart (D02) 31 0800 Shuert Park (D28) ************************************	Freemantile (05) 335 9733 300 Convention Way Dimson Aver is May St North Perth Perth City (05) 3228 6544 Mobart (002) 31 6800 300 Convention Way Mobart (002) 31 6800 50 50 Motoo Ave Kland (57) 53 6896 50 50 Model Convention (071) 32 974 50 50 MostorCord MostorCord (04) 73 9858 50 51 51 50 51	brison Ase brison	Fremantie North Perth Hay St (05) 335 9733 228 6944 300 Convention Way Redwood Cal. Gity, 385 8844 Hay St Perth City (05) 321 4357 300 Convention Way Redwood Cal. City, 385 8844 Moth Perth Perth City (05) 321 4357 300 Convention Way Redwood Cal. City, 385 8844 Moth Perth Perth City (05) 321 4357 Goto Goto Gal. Gal. Moth Perth Perth City (022) 31 0600 Goto Gal. Gal. Gal. G Shuart Para (259) 50 405 Gal. Gal. Gal. Gal. G Christchurch (1071) (03) 50 405 Gal. Gal. Gal. Gal. Gal. Fid Auckland (05) 272 2355 Gal. Gal. Gal. FTP LTD Fid Hamilton (071) 38 9974 394400 Gal. PTY LTD Stathad Sheet Gal. (071) 38 9974 Gal. PTY LTD Stathad Sheet Dunedin (074) 73 9858 <

Text and Illustrations courtesy of Electronics Australia

い: