UZ-8DX

Mizuho

Features

- * Large Size Loop Antenna (70cm/side) provided with High Quality Pre-Amplifier
- * Natural Wooden Supporter is good appearance to be used as a interior decoration.
- * User can select the function of Loop Antenna only or the function of Loop Antenna with RX Amplifier.
- * Recommendable to use for receiving of long distance middle-wave or for receiving in the building.

How to make assembling of the UZ-8DX :

Please refer to the illustration Nos. 7, 8 and 10, with preparing the tools (1) Nipper and (2) Driver (No soldering is required.) The Pre-Amplifier part is factory-adjusted.

How to use the UZ-8DX:

Set the UZ-8DX with radio as shown in the illustration No. 3. The controls are as follows.

- (1) Turn the switch of radio "ON" and tune the dial to the preferrable station.
- (2) Turn the switch of UZ-8DX "ON" and the red indicator lights up.
- (3) Turn the Tuning Dial to clockwise slowly, then, the sensitivity of the radio will increase with having the background noise. After getting the station, try to find out the optimum angle of Loop Antenna by rotating the antenna.
- (4) Check the best condition by changing the location of radio and coupler coil.





*When you adjust the antenna in the concrete building, please be sure to use the loop antenna near to the window. *Ths UZ-8DX is not waterproof version.

When using with "STEREO" tuner or Communication type Receiver:

- (1) When using with "STEREO" tuner, please couple the "coupler" of UZ-8DX with the mini-loop antenna connected to the stereo tuner. Please refer to the illusration No.4.
- (2) When using with communication type receiver, connect directty to the terminal of antenna or earth without using the coupler of UZ-8DX.
- Note: In case you have the following condition, UZ-8DX(also other accessories) can not solve the problems.
 - When you want to receive the station with long distance and there are (1)strong signals near to the selected frequency. (When you have a stong radio interference.)
- (2) When wave signal is too weak to arrive to you. When you use the radio with high selectability, ** you can enjoy listening with the Loop Antenna.
- ** When you have strong radio interference before using the Loop Antenna, it may be recommendable to cover the radio antenna part by aluminum foil.







^{*}Direct Connection

2-A 2-B The coil groove is on the rear side. Adhere with adhesive 'bond'. Cut off the side when it is tight to put into. (5) 2 .mmm. The wooden parts #2-C and Hole #2-D are provided with 2~D holes to pass through the wire both at first and end. Fix it from the bottom with self-tapping screw. Illustration of the frame assembling before winding the coil Cap for support 3 Round Base C 7 8 10





AC Power Adaptor

Move the location of the Coupler to get the optimum receiving condition.

Lights up at Switch "ON" Indicator Lamp





Power Switch

Upper side: "ON" Lower side: "OFF" At "OFF" position, the receiving amplifier will not work. The loop antenna connects directly to the coupler.

Tune at the preferrable broadcasting station and adjust to have maximum sensitivity. You can tune very sharply since the Loop Antenna is double windings

Illusration No. 10 How to Connect The Loop Antenna and Pre-Amplifier



to Pre-Amplifier Terminals

How to Wind the Loop Antenna



