クロスニードルSWRパワー計 SX40C

取扱説明書

ご使用の前にこの取扱説明書をよくお読みのうえ、正しくお使いく ださい。また必要なときに読めるよう大切に保管してください。

●交差形電力計

SX40C交差電力計は2組のメーターを配置して進行電力、反射電力 および両者の交点によりSWRを直接読み取ることができます。

●仕 様

使用周波数帯: 144~470MHz 入力インピーダンス: 50 Q 電力測定レンジ: 30W/300W (測定レンジ切り替えボタン押し込み) 電力測定確度: 10% AT FS・SWR最小測定電力: 3W 入出力コネクター: M形・寸法: 85W×87H×95Dmm 重量: 270g

●測定準備

メーターの背面のTX側コネクターに送信機の出力を接続し、ANT側 コネクターにアンテナを接続します。 50Ωのケーブルを使用してください。

●使用上の注意

①高感度のメーターを使用していますので、機械的振動を与えないようご注意ください。

②極端にアンテナのマッチングがずれている場合またはアンテ ナ端子を開放のまま送信しますと高い電圧が発生してメー ターを焼損することがありますのでご注意ください。

●測 定

Downloaded by RadioAmateur.EU

送信機を動作状態にしてメーターの測定電力レンジを確認し、LOレンジ(レンジスイッチ押し込まず)の場合は30W、HIGHレンジ(レンジスイッチ押し込む)で300Wの範囲に送信機の出力を制限してください。

DIAMONE

・進行電力の読み取り

電力レンジLO/HIに合わせ、FORWARD電力目盛より読み取り ます。

・反射電力の読み取り

電力レンジLO/HIに合わせ、REFLECTED電力目盛より読み取り ます。

・SWR(定在波比)の読み取り

進行電力の指針と反射電力の指針の交差した点の曲線をたどり、 線上に書かれた値を読み取ります。測定例としてSWR1.5を示し



Cross-Needle Type SWR Power Meter SX40C

Operating instruction

Please read through this operating instruction carefully and follow the instruction to prevent from abuse or misuse. This instruction must be kept in good condition to refer anytime in need.

General

SX40C Cross-Needle power meter combines a couple of meters indicating forward and reflected power respectively. It provides the direct read out of the SWR value from the crossing of two pointers.

Specifications

Frequency range : 144 - 470MHz

Input impedance : 50 ohms

Power range :30W or 300W switchable * Note : 70% of the full scale for 220MHz band.

Power readings : Direct read out

 Note : For 220MHz band, it should be calibrated by 70% of the direct read out.
Power accuracy : 10% At full scale
Min. power requirement : 3W
Input/output connector : UHF
Dimensions : 85Wx87Hx95D m/m
Weight : 270 gs.

Setting up

Connect the TX output of the transceiver to the "TX " connector and the antenna to the "ANT" connector both located on the rear panel of the unit. Use 50 ohms coaxial cable for the connections.

Precautions

 No mechanical shock to be given to the unit as it employs precision meters.
Do not transmit with an antenna out of tuned or open condition as it may burn out the meter by high voltage.

Operation

Be sure the power output range of the transceiver and set the LO / HIGH range accordingly. Depressing LO / HI switch is for low (3W to 30W) range and coming it out is for high (30W to 300W) range.

Keying the transceiver, measure the required parameters as follows.

- Forward power
- Follow the forward scale and read it out. • Reflected power
- Follow the reflected scale and read it out.
- · Standing wave ratio (SWR)

Follow the SWR corresponding scale from the point of pointers crossing and read it out.

Refer to above fig.1 showing SWR 1.5 as an example.

Note : In case of 220MHz band measurement, both forward and reflected power to be converted with the following formula.Direct read out in the scale x 0.7 = Actual power.

Ex.When direct read out shows 10W, it should be 10W x 0.7 =7W

第一電波工業株式会社 国内事業部 〒350-0022 埼玉県川越市小中居中通445-1 TEL.049-230-1220(代) FAX.049-230-1223 DIAMOND ANTENNA CORPORATION Miyata Building, No.15-1,1-chome Sugamo, Toshimaku Tokyo, Japan 170-0002 TEL.03-3947-1411 FAX.03-3944-2981 ホームページ http://www.diamond-ant.co.jp