NFG-97形アンテナチューナ

取扱説明書

INSTRUCTION MANUAL FOR MODEL NFG-97 ANTENNA TUNER



お買い上げいただきましてありがとうございます。

この製品の性能を十分に発揮させていただくとともに誤操 作等による破損・故障を起こさないよりに、お使いになる前 にはこの説明書をよくお読みいただくようお願いいたします。

この製品は厳重な品質管理のもとに生産されております。 万一輪送中の事故等による破損、又は正常に動作しないこと がございましたら、早目にお買い上げいただきました販売店 または当社まで御連絡をお願いいたします。

1. ご使用の前に

付属品

NFG-97 には下記のものが付属しておりますので予 めお確かめください。

取扱説明書……1部

保証書……1部

2. 各部分の説明

2.1 前面パネル

目 次

1.	ご使用	の前	15	1	2	•••	•••	•••	•••	•••		•••	•••		•	••	•••	•	•••	•••	•••	•	•	•••	•••	•	•	•	•••	•	••	•••	1
2.	各部分	の説	明	ł	5	~	••	•••				•••				÷	••		•	•				•••	•••						••	••	1
3.	使用	法	•••	••	•••	•••	• •				•••	•••		•••			••	•			••	•	•		•••	÷	•		•••	•	•••	•••	5
4.	保守点	検等					•••	•••								•••							•		•••		i.						ł
5.	定	格	•••		•••		•••	•••	•••	•••	•	• •	•			•••	•••	•		•••	•••	•	•		•••	•		•	•••		•••		4

CONTENTS

1.	BEFORE USE						5
2.	OPERATING CONTROLS						5
3.	OPERATION						6
4.	MAINTENANCE AND CHECK						8
5.	SPECIFICATIONS						8



図2.1 前面パネル

レンジ切換えスイッチ

メータの電力制定レンジを切り換えるスイッチです。こ のスイッチによりメータのフルスケールレンジを200W, 20W、または2.5Wに切り換えることができますから、 大電力から小電力まで容易に誘み取れます。

(2)メ - タ

進行被電力, 返射被電力及び SWR を表示します。レンジ スイッチ,ファンクションスイッチの切り換えによりメ ータの目盛を読み分けます。

③パワースイッチ

このスイッチでメータを進行波電力指示 (FWR),反射 電力指示 (REF) のいずれかに切り換えます。

④キャリブレーションつまみ

SWR 測定を行う場合メータをフルスケールに較正する つまみです。

(5)ファンクションスイッチ

メータの指示を電力測定(進行,反射), SWR 測定の キャリプレーションおよび SWR の各測定機能に切り換 えるスイッチです。

6 ANT マッチ

アンテナ系とトランジーパ間のマッチング(整合)を行 うつまみです(とのつまみで主としてリアクタンス分の マッチング(整合)をとります)。

DTXマッチ

ANTマッチと同様にアンテナ系とトランシーバ間のマ ッチング(整合)を行うつまみです(このつまみで主と して抵抗分のマッチング(整合)をとります)。

⑧BANDスイッチ

使用周波数に合わせて1.8~28 MHa 帯を切り換えます。 THRUボジションはこのマッチングネットワークを通さ ずに直接アンテナ系とトランシーバ間を接続するポジシ ョンです。



3. 使用法

3.1 接続方法

図3.1のようにNFG-97を接続してください。

図3.1 送信機との接続

3.2 使用法

3.2.1 アンテナ系のSWR測定

NFG -97 のマッチング調整を行う前に使用するア ンテナのSWRを制定します。図3.2 に示すように BAND スイッチをTHRUド、FUNCTION スイッ チをCALにセットしトランジーズを送信提題にしま す。CALIBRATIONつまを回し、メータをフルス ケールにセットします。そしてFUNCTION スイッ チを SWRに切り換えるとメータの指針がSWR値を 示します。

O E

アース接続用端子です。トランシーバのアース端子との 間かよび大地接地の接続用です。

(2) ANT

アンテナを接続するコネクタです。

(3) T X

アンテナチューナの入力コネクタです。トランシーバ等 を接続します。



図3.2 SWR測定のセッティング

3.2.2 マッチングネットワーク部の調整

3.2.1 で初ったSWR値が1.5 以下程度であれば使用上支障はありませんがそれ以上の場合には効率に くパワーをアンテナへ送り込むためマッチング(差 合)をとる必要があります。図3.3 に示すように BANDスイッチを運用するベンドに合わせて、 FUNCTIONスイッチをPOWFRにし、そして POWERスイッチをREFにするとメータは反射能力 を示します(なお、電力に応じてRANCEスイッチ を切り換えてメータを読み易い振れにしてください)。 次にこの反射能力が扱いになるようでTX MATCH とANT MATCH を交応に調整します。



図3.3 マッチングネットワーク部の調整

このとき、最初はトランシーバの出力を下げてあさつ ッチング(整合)がとれ、反射電力が下ってきたら 務べに出力を上げてゆくと、すばやく調整ができま す。(小電力でマッチングをとったあとで電力をか やしてるマッチング点(整合)】は変化しません。) なお、か手持ちのアンテナを使用したときのマッチ ング(整合) 目線をメモしておきますととても便利 です。 3.2.3 マッチングネットワーク使用時のSWR測定法 マッチングネットワーク部調整後に前走した3.2.1 てSWR 客側定するとうシンシーパとアンチナ間の SWR値を知ることができます。(ただしBANDス イッチは運用バンドのままの位置にしてください。 THRUにしますとマッチングネ、トワークを通さな い場合のSWR値を示します。)

<ご注意>

- (1) 使用するトランシーベ,送信機等が真空管式の場合は 予めダミーロードを用いて送信機を調整してからNFG-97 に接続し反射電力が最小にたるようにマッチング (巻合)をとってください。
- (2) BANDスイッチは予め運用しているバンドもしくは THRUの位置にあることを確認してください。
- (3) SWR値が3をこえますとマッチング(整合) がとれ ない場合があります(この時 BAND スイッチを上下に

すらせるとマッチング(整合)がとれることがありま すがフルバワーにしますと内部破損の恐れがあります ので注意してください)。

- (4) 送信中には絶対に BAND スイッチを切り換えないでく ださい。
- (5) SWR の極端に悪いアンテナを接続したり送信中にア ンテナ回路がオーブン、ショートになると、内部破損の恐れがありますので注意してください。



図3.4 送信電力の測定法

<ご注意>

SWR が高い場合には測定電力に誤差を生じますので 注意 してください。

3.2.4 送信電力測定

図3.4 に示すようにFUNCTIONスイッチを POWERにしてPOWERメイッチをFWR(進行波 値力)もしくはREP(反射波電力)にすることによ って、それぞれの電力をメータで読むことができま す。なか、RAGE スイッチは送信出力に応じて切 り換えてください。

4. 保守点検等

本機は特に調整を行う必要はありませんが万一調整が必 要な場合かよび故障等の場合は保証書、お買い上伝票を 添えてお買い上げいただきました販売店までお申しつけ ください。(なお、内部の半週定紙抗器は絶対に回さな いてください。)

5. 定格

一般仕様

使用温度範囲	0 °C ~ 40 °C
入出力コネクタ	M形同軸コネクタ
外形寸法	幅180(180)×高さ130(145)
	×奥行 273(315)mm
	 ()内は突起物を含む
重 量	約 3.3 kg

ッチングネットワーク部	
周波数範囲	1.8~28MHz帯の各アマチ
	ュアバンド
	(WARC対応:9バンド)
通過電力	200W CW
	ただし1.8 MHz バンドは
	200W PEP(100W CW)
整合範囲	VSWR 1:3まで(不平衡)
整合 SWR	VSWR 1:1.2以下
入力インビーダンス	50Ω (不平衡)
そう人損失	0.5 dB以下(整合時)
力測定部	
電力測定範囲	200W/20W/2.5W
	フルスケール切換え式
	進行波/反射波切換え式
SWR測定範囲	$1 \sim 10$
SWR測定電力	$5\sim 200 { m W}$
定格は技術開発,性能向	上のため予告なく変更すると

とがあります。)

35

Thank you for the purchase of your new model NFG-97 ANTENNA TUNER.

1. BEFORE USE

Before operating it please read this manual thoroughly in order to assure satisfactory performance of the equipment and prevent damage or failure. This product has been produced under strict quality control. However should any trouble be found due to workmanship kindly contact the JRC office or a JRC dealer.

2. OPERATING CONTROLS 2.1 Front Panel



Figure 2.1 Front Panel View

(1) Range select switch

Selects the meter range for measuring the output power. Three ranges provided on the meter: 200W, 20W and 2.5W full scale. This is helpful to precisely measure not only high power but also low power.

2 Meter

Indicates the forward and reflected power and SWR. The meter scale is selected by both the range select switch and function select switch.

3 Power switch

Selects the meter display mode: forward power (FWR) or reflected power (REF) mode.

(4) Calibration control

Allows the meter to be calibrated in full scale for measurement of SWR.

(5) Function switch

Selects the meter function among the power measurement (forward and reflected), calibration for measuring SWR, and measurement of SWR.

- 6 ANT MATCH control Allows the impedance between the antenna system and transceiver to be matched (mainly about its reactive component).
- (7) TX MATCH control

Allows the impedance between the antenna system and transceiver to be matched (mainly about its resistive component).

(8) BAND switch

Selects the band among 1.8 through 28MHz bands in accordance with the operating frequency. THRU position for connecting the transceiver directly to the antenna system, without insertion of the matching network.

2.2 Rear Panel



Figure 2.2 Rear Panel View

3. OPERATION

3.1 Connection

Connect the NFG-97 as shown in Figure 3.1.



Figure 3.1 Connection with a Transceiver

3.2 Operating Procedure

3.2.1 SWR Measurement of Antenna System

Before the matching adjustment of the NFC-97, measure SWR of the antenna. Follow the procedure below, Refer to Figure 3.2. Set the BAND switch to THRU position. Set the FUNCTION switch to CAL position. Make the transceiver ready for transmission. Set the CALIBRATION control for full scale on the meter. Depress FUNCTION, SWR button. Then, the meter will provide the value of SWR. E terminal

Earth terminal for connection to both the earth terminal of a transceiver and earth ground.

 ANT connector of M-type Connector for connection of the antenna.
 TX connector of M-type

Antenna tuner input connector for connection of the transceiver or the like.



Figure 3.2 Setting for SWR Measurement

3.2.2 Matching Network Adjustment

So long as the measured value of SWR in Paragraph 3.2.1 is less than about 1.5 to 1, there is no effect upon the performance of a transceiver.

If exceeding 1.5 to 1, matching is necessary to efficiently feed the antenna. Follow the matching procedure below. Refer to Figure 3.3.

Set the BAND switch to desired band for operation.

Set the FUNCTION switch to POWER position. Set the POWER switch to REF position. Then, the meter will provide the value of reflected power.

Set the RANGE switch to suited position for easy reading on the meter.

Next, alternately adjust the TX MATCH and ANT MATCH controls for a minimum reading of reflected power on the meter.



Figure 3.3 Matching Network Adjustment

There is a knack about this matching, as follows: First reduce the transceiver output power. Then, adjust for matching. As the reflected power decreases owning to the matching, gradually increase the output power.

Thus, the adjustment can be made quickly. It is noted that if increasing the output power after matching with reduced output power, the matched point will not move.

southout introduces investigation without notices.

3.2.3 SWR Measurement while Using Matching Network

After adjusting the matching network, SWR is measured according to the method described in Paraargnh 3.2.1. Thus, the value of SWR between the transceiver and antenna is known, provided that the BAND swith is fird at the operating band. If setting the BAND switch to THRU position, the value of SWR without the matching network will be indicated on the meter.

PRECAUTIONS

- When connecting to an electron tube type transceiver, transmitter, previously adjust the transmitter with use of a dummy load. Then, connect the NFG-97 and adjust for matching until the reflected power is minimum.
- Previously make sure the BAND switch has been set to an operating band or THRU position.
- If the value of SWR exceeds 3 to 1, the matching may not be possible. In such case, make an

attempt to turn the band switch in either direction. The matching may be made this time. However, if set for full power under this condition, internal damage may be caused.

- 4. Never turn the BAND switch during transmit.
- If the antenna causes an extremely high SWR or the antenna circuit opened or shorted during transmit, then internal damage may be caused.



Fig. 3.4 Power Measurement

NOTE: High SWR causes error in measured transmit power.

3.2.4 Power Measurement

As shown in Figure 3.4, set the FUNCTION switch to POWER. Set the POWER switch to FWR (forward power) or REF (reflected power). Then, the meter will indicate the value of either power level. If necessary, set the RANGE switch according to the transmit power.

4. MAINTENANCE AND CHECK

There is no need to readjust this antenna tuner. However, if any adjustment should be needed or failure should happen, contact the sales office where you bought.

NOTE: Never touch any internal variable resistor.

5. SPECIFICATIONS

General specifications Operating Tempera-

ture Range	0° to 40°C	
Input/Output		
Connector	M-type coaxial connector	
Dimensions	W180(180) x H130(145)	
	x D273(315)mm	
	 including projections 	
Weight	3.3kg, approx.	

Matching network se	ction
Frequency Range	9 amature bands of 1.8 through
	29.7MHz
	WARC Bands included
Maximum Trans-	
mit Power	200 watts, CW, except 1.8MHz band
	(200 watts, PEP or 100 watts, CW for 1.8MHz band)
Matching Range	VSWR 3 to 1 at maximum, un- balanced
Matched SWR	VSWR 1.2 to 1 or less
Input Impedance	50 ohms, unbalanced
Insertion Loss	0.5dB or less at matched state
SWR measuring	
range	1.0 to 10
SWR measuring	
power	5 to 200 watts
Power measuring sec	tion
Power measuring	

Specifications subject to change without notice.

range

200/20/2 5 watts



回路は支育のため予告なく変更することがあります。 (BAND SWITCH IS FULL COW POSITION, CIRCUIT AND COMPONENTS SUBJECT TO CHANGE FOR AN IMPROVEMENT WITHOUT NOTICE.)

NFG-97 アンテナチューナ 接続図 NFG-97 ANTENNA TUNER CIRCUIT DIAGRAM



至102 東京務務区赤坂2 1日12番22号 A. 21 STR. (F. AREAL CONTRA 3/6 .

 FI 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL) UTL03 ESS (HAL)

 1 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL) UTL03 ESS (HAL)

 1 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL) UTL03 ESS (HAL)

 1 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL) UTL03 ESS (HAL)

 1 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 1 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL 2 BAARI/A. UTL03 ESS (HAL)

 2 1008 AMPOPRO 2. (RA) TTL04 ESS (HAL

For further information contact:

Japan Radio Co., Ltd. JRC

Main Office:	Akasaka Twin Tower (Main),	
	17-22, Akasaka 2-chome,	
	Minato-ku, Tokyo 107, JAPAN	
	Telephone: Tokyo (03) 3584-8712	
	Facsimile: Tokyo (03) 3584-8715	
	Telex: 2425420 JRCTOK J	
	Cable: JAPANBADIO TOKYO	
Overseas Branches:	New York, London	
Liaison Offices:	Rio de Janeiro, Jakarta, Rotterdam,	

Copenhagen, Las Palmas, Manila, Bangkok, New Delhi, Seattle