JRC CFL-231・232・233・218Aフィルタ 取扱説明書

お買い上げいただきまして有難うございます。

オプションフィルタは次の4種類がありま す。

お買い上げいただいたフィルタの形名は梱 包箱に表示されています。

CFL-231(YF455FM)

6dB帯域幅240Hz以上 CFL-232(YF455DQ) ______ 6dB帯域幅0.5~0.8kHz CFL-233(YF455DE) _____

1. 付属品

下記の付属品がありますのでお確かめ下さ い。

	7	IJ	ス	9	ル	7	1	ル	3			•••	•••	•••		 •••	1
	7	1)	2	ŀ	板	引	拔	金	具						•••	 •••	2
	ビ	ス	,	+		ŀ	,	7	·''	2	+					 各	2

2. 取付方法

NRD-525受信機取扱説明書の9.2項をご参 参照の上取付けて下さい。

NRD-525はオプションフィルタをバンド 幅のNARRとAUXにそれぞれ1つ,合計で 2つまで組込む事ができます。

AUXにオプションフィルタが組込まれて いない場合、AUXのバンド幅は12kHzとな っています。したがってオプションフィルタ が1つだけの場合はNARRに組込む事をお すすめします。 Thank you very much for purchasing JRC filters.

The optional filters are available in the following four types.

CFL-231 (YF455FM): 6dB in bandwidth of 240Hz or more CFL-232(YF455DQ) : 6dB in bandwidth of 0.5-0.8kHz CFL-233(YF455DE) : 6dB in bandwidth of 1-1.5kHz

CFL-218A : 6dB in bandwidth

 ${
m of}$ 1.7-1.9kHz The type of the filter you have purchased is indicated on the package.

1. Accessories

Check the components in the package by following list:

□ Crystal filter ·····1

PCB removal lever2
Screw, nut, and washer2 each

2. Installation

Before installation, refer to Chapter 9.2 of NRD-525 instruction manual. On the IF filter unit CFH-36 in NRD-525, one optional filter (two in total) can be mounted on each of NARR and AUX position.

If no optional filter is mounted AUX, on position the bandwidth for AUX is 12kHz and it provides very good sound quality when you receive AM signal. Therefore, it is recommended to mount an optional filter on NARR position if only one optional filter is to be mounted.

CFL-231・232・233・218A・251A フィルタ 取扱説明書

CFL-231 • 232 • 233 • 218A • 251A FILTER INSTRUCTION MANUAL

お買い上げいただきまして有難うございま す。

オプションフィルタは次の5種類がありま す。

お買い上げいただいたフィルタの形名は梱 包箱に表示されています。

CFL-231(YF455FM) -----

6dB 带域幅240Hz 以上 CFL-232(YF455DQ) ———

6dB 帯域幅0.5~0.8kHz CFL-233(YF455DE) —— 6dB 帯域幅1~1.5kHz CFL-218A ———

6dB 带域幅1.7~1.9kHz CFL-251A _____

6dB 帯域幅2.4~3.0kHz

1. 付属品

下記の付属品がありますのでお確かめ下さ い。

クリスタルフィルタ	1
プリント板引抜金具	2
ビス, ナット, ワッ	シャ各2

Thank you very much for purchasing JRC filter.

The optional filters are available in the following five types.

CFL-231(YF445FM) : 6dB in bandwidth of 240Hz or more CFL-232(YF455DQ) : 6dB in bandwidth of 0.5-0.8kHz CFL-233(YF455DE) : 6dB in bandwidth of 1-1.5kHz CFL-218A : 6dB in bandwidth

of 1.7-1.9kHz CFL-251A: 6dB in bandwidth

of 2.4-3.0kHz The type of your filter is indicated on the package.

1. Accessories

Check the components in the package by following list :

- □ PCB removal lever ·····2
- $\hfill\square$ Screw, nut, and washer $\cdots\cdots\cdots 2$ each

2. 取付

□ NRD-525受信機の場合

NRD-525はオプションフィルタを2個 まで組み込むことができます。

AUX にオプションフィルタが組み込ま れていない場合,AUX のバンド幅は12 kHz になっています。したがってオプショ ンフィルタが1個の場合には NARR に組 み込むことをおすすめします。

取付は, NRD-525取扱説明書9.2項をご らんください。

ロ JST-135トランシーバの場合 JST-135はオプションフィルタを2個ま で組み込むことができます。

組み込むフィルタの用途 (SSB/CW) に より設定が異なりますので取付を含め詳細 は, JST-135取扱説明書10.2.2項をごらん ください。

2. Mounting

□ To the NRD-525 Receiver.

The NRD-525 has a provision to incorporate two optional filters, i.e. at NARRow and AUX positions.

When no optional filter is mounted, the bandwidth of AUX is 12 kHz. Therefore, when you wish to add one optional filter, a filter suitable for NARR position is recommended to mount it.

For the detailed mounting, refer to the instruction manual for the NRD-525, clause 9.2.

To the JST-135 Transceiver
 The JST-135 has a provision to incorporate two optional filters, i.e. FL5

and FL6. When mounting the filter(s), the initial definition, for what mode (SSB or CW/AFSK) and position (NARR, INTER or WIDE) to be used, is requir-

ed for the transeiver. For the detailed mounting, refer to the instruction manual for the JST-135, clause 10.2.2.

JST-145/245 フィルター 取付要領書

JST-145/245 FILTER MOUNTING MANUAL

お買い上げいただきまして有難うございます。 JST-145/245のオプションフィルターは、次の6 種類あります。

	中心周波数	通過周波数幅
CFL-231	455kHz	0.3kHz
CFL-232	455kHz	0.5kHz
CFL-218A	455kHz	1.8kHz
CFL-316	9.455MHz	0.5kHz
CFL-317	9.455MHz	1.8kHz
CFL-318	9.455MHz	2.7kHz
お買い上げい	ただいたフィル	ターの形名は梱
包箱に表示され	ています。	

1. 付属品

□フィルター

□引き抜き金具(JST-145/245では使用しません) □取付要領書

2. 取付要領

2.1 注意事項

作業を始める前にPOWERスイッチをOFFに し、必ず電源ケーブルを抜いてください。 また、必要のない限りJST-145/245内の部品に

は手を触れないようにしてください。

作業を実施するにあたり下記の事項を注意し てください。

 ネジをセットの中に落とさないよう紙 テープなどを利用して外してください。 万一落とした場合は、必ず取り除いてく ださい。そのまま放置しますと、あとで重 大な故障の原因になります。

2) コネクターの取り外しは、電線を何度も

Thank you for purchasing the JST-145/245 CFLxxx filter. There are six available filters, as follows:

	center frequency	bandwidth
CFL-231	455kHz	0.3kHz
CFL-232	455kHz	0.5kHz
CFL-218A	455kHz	1.8kHz
CFL-316	9.455MHz	0.5kHz
CFL-317	9.455MHz	1.8kHz
CFL-318	9.455MHz	2.7kHz

The type of filter purchased is indicated on the packing.

1. Contents

Filter

□PCB puller (not used with JST-145/245) □Filter Mounting Manual

2. Installation

2.1 Precautions

Before installing the filter, turn the JST-145/245 POWER switch OFF and disconnect the power cable.

Unless otherwise required, do not touch any internal components of the JST-145/245.

Please also note the following:

 Use sticky tape to prevent any screws dropping inside the set. If you inadvertently drop anything inside the casing, be sure to remove it as it may otherwise cause a major failure.

2) When connecting or disconnecting connec-

-1-

揺り動かすと、芯線が切れて故障の原因に なりますので、コネクターのモールド部分 を手で押さえて取り外してください。

 ドライバーにあまり過大な力を加える と、ドライバーがすべって、プリント基板 を傷つけたり、付近の部品を壊す恐れがあ るので注意してください。

2.2 取付要領

- (1) JST-145/245の上カバーを取り外すため、 まずキャリングハンドルを止めている2本の 4mmの皿ネジを外し、キャリングハンドル を取り外します。(図1参照)
- (2)図1を参考にして、上カバーを止めている
 6本(リアパネルの2本、両サイド各2本)の
 3mmのネジを取り外します。
- (3) 上カバーをセット後部に少し(約1cm)引 くようにして上に持ち上げて取り外しま す。
- (4) 中央部の放熱板とファンモーターの間に 赤と黒の線で接続されたプラスチックのPA 電源用コネクターがあり、このコネクター の片側の両端を親指と人差し指で強く摘ん で引いてください。
- (5) 図2をみて4本の4mmネジと1本の3mmネジを取り外してください。そしてこのユニット全体を上に、2~3cm持ち上げてCAF-412 TX/RXユニットから下記2本のプラグを抜き、図3のように本体の横に置きます。P11のケーブルをJ11-1から、P12のケーブルをJ12から抜きます。

P8のケーブルはJ8-1から取り外すと元に 戻す時、指が入りにくいため接続したまま にします。

- (6)図4の矢印の背面のネジを外し、背面板を ずらします。
- (7) TX/RXユニット(CAF-412)を固定している3mmの+ネジ8本を外します。(図5の矢印の位置)ただし、ハーネス(束線)をはずさないこと。ユニットの後ろのほうから持ち上げ、垂直になるようにユニットを立ててください。

(8) フィルターの取り付け 表1にしたがって、TX/RXユニット(CAF- tors, hold the plastic molding, not the wiring itself, as repeated flexing will break the cores.

 Do not apply excessive force to the screwdriver as it may slip and damage the printed circuit board or other components.

2.2 Installation

- To remove the top cover of the JST-145/245, first remove the two countersunk 4mm screws retaining the carrying handle, then remove the carrying handle (Figure 1).
- (2) Remove the six screws retaining the top cover (two on each side and two on the back).(Figure 1)
- (3) Gently pull the cover about 1cm to the rear and lift it to remove it.
- (4) Locate the PA power supply connector, which is connected to the red and black wires between the heat sink and fan motor in the center of the unit. Squeeze both sides of one side of the connector to disconnect it from the PA unit.
- (5) Remove the four 4mm screws and one 3mm screw, as shown in Figure 2. Lift the entire unit up by about 2 or 3cm to disconnect the following two plugs from the CAF-412 TX/RX unit, then place the PA unit beside the JRC-145/245, as shown in Figure 3. Disconnect the cable of P11 from J11-1 and P12 from J12. If cable P8 is disconnected from J8-1, it can be difficult to access the connector to reconnect it. It is therefore best to leave it connected.
- (6) Remove the screws from the rear panel indicated by the arrows in Figure 4 to shift the rear panel to allow access.
- (7) Remove the eight 3mm "+" screws holding the CAF-412 TX/RX Unit (arrows in Figure 5). Do not remove the wiring harness. Lift the side of the TX/RX Unit closest to the JST-145/245 to position it vertically.

(8) Mount the filter.

-2-

Mount the filter in the location on the CAF-

412)の指定の場所にフィルター ます。 中心周波数455kHzのフィルタ

で固定した後端子を半田付けし い。

中心周波数9.455MHzのフィル 定用の端子も半田付けしてくだ: フィルター取り付け後、取り1 ルターのスイッチを「ON」にして

	ご注意
1.	半田付けは確実にしてください
2.	フィルターのスイッチをONにし
	ばCPUが認識できないためフィ が切り替わりません。

表1 フィルターの種類と取付

	ディップスイッチ S2 ONにする位置	フィルター の形名	中心周波
FL12	右より1番目	CFL-231	455kHz
FL11	2番目	CFL-232	455kHz
FL10	3番目	CFL-218A	455kHz
FL5	4番目	CFL-316	9.455MF
FL4	5番目	CFL-317	9.455MF
FL3	6番目	CFL-318	9.455MF

(9) TX/RXユニット(CAF-412)を に戻し、ネジを取り付けます。
(10)(6)で外した背面板を取り付け のため、電源部のファンを細いれ ください。軽く回るようでしたい 回りにくい様でしたら、電源内 ルがファンに当たっています。 認しながら、組立なおしてくださ
(11)(5)で外したPAユニット、スピ・いている上シャーシーを売に戻 のシャーシーを持ち上げると、 カーのコーン(振動板)を破らない 意してください。 取り付ける前にP11のケーブル

取り付ける前にP11のケーブル 差し、P12のケーブルをJ12に差し また、ハーネス(ケーブルの引 図7のような配置になっているか

hold the plastic molding, not the wiring , as repeated flexing will break the cores.

not apply excessive force to the screwr as it may slip and damage the printed it board or other components.

allation

emove the top cover of the JST-145/245, move the two countersunk 4mm screws ig the carrying handle, then remove the g handle (Figure 1).

love the six screws retaining the top two on each side and two on the back). :1)

ly pull the cover about 1cm to the rear it to remove it.

ate the PA power supply connector, is connected to the red and black wires n the heat sink and fan motor in the cenne unit. Squeeze both sides of one side of nector to disconnect it from the PA unit. ove the four 4mm screws and one 3mm as shown in Figure 2. Lift the entire unit bout 2 or 3cm to disconnect the followplugs from the CAF-412 TX/RX unit, ace the PA unit beside the JRC-145/245. vn in Figure 3. Disconnect the cable of m J11-1 and P12 from J12. If cable P8 is nected from J8-1, it can be difficult to the connector to reconnect it. It is therest to leave it connected.

ove the screws from the rear panel indiv the arrows in Figure 4 to shift the rear allow access.

ove the eight 3mm "+" screws holding F-412 TX/RX Unit (arrows in Figure 5). remove the wiring harness. Lift the side X/RX Unit closest to the JST-145/245 ion it vertically. at the filter.

nt the filter in the location on the CAF-

412)の指定の場所にフィルターを取り付け ます。

中心周波数455kHzのフィルターは、ネジ で固定した後端子を半田付けしてくださ 10

中心周波数9.455MHzのフィルターは、固 定用の端子も半田付けしてください。 フィルター取り付け後、取り付けたフィ ルターのスイッチを「ON」にしてください。

ご注意

1. 半田付けは確実にしてください。

2. フィルターのスイッチをONにしなけれ ばCPUが認識できないためフィルター が切り替わりません。

表1 フィルターの種類と取付位置

	ディップスイッチ S2 ONにする位置	フィルター の形名	中心周波数	通過帯域
FL12	右より1番目	CFL-231	455kHz	0.3kHz
FLII	2番目	CFL-232	455kHz	0.5kHz
FL10	3番目	CFL-218A	455kHz	1.8kHz
FL5	4番目	CFL-316	9.455MHz	0.5kHz
FL4	5番目	CFL-317	9.455MHz	1.8kHz
FL3	6番目	CFL-318	9.455MHz	2.7kHz

(9) TX/RXユニット(CAF-412)を注意深く元 に戻し、ネジを取り付けます。

(10)(6)で外した背面板を取り付けます。確認 のため、電源部のファンを細い棒で回して ください。軽く回るようでしたらOKです。 回りにくい様でしたら、電源内部のケーブ ルがファンに当たっています。もう一度確 認しながら、組立なおしてください。

(11) (5)で外したPAユニット、スピーカーの付 いている上シャーシーを元に戻します。こ のシャーシーを持ち上げるとき、スピー カーのコーン(振動板)を破らないように注 意してください。

取り付ける前にP11のケーブルをJ11-1に 差し、P12のケーブルをJ12に差します。

また、ハーネス(ケーブルの引き回し)を 図7のような配置になっているか確かめてく 412 TX/RX Unit indicated in Table 1.

Filters with 455kHz center frequencies should be screwed into position and their terminals then soldered. The terminals for holding the 9.455MHz filters should also be soldered.

After mounting the filter, turn ON the appropriate switch.

PRECAUTIONS

- 1. Solder the filters carefully.
- 2. If you do not turn ON the filter switch, the CPU cannot detect that the filter has been installed and will not recognize it.

Table 1 Types and Installation Locations of Filters

Install-Dip switch S2 setting (ON) Filter name Center frequency Band width ation location FL12 1st switch from right 2nd switch 455kHz 0.3 kHzCFL-231 CFL-232 FL11 455kHz 0.5kHz 2nd switch from right 3rd switch from right 4th switch from right 5th switch from right CFL-218A 455kHz 1.8kHz FL10 FL5 CFL-316 9.455MHz 0.5kHz FL4 CFL-317 9.455MHz 1.8kHz 6th switch from right FL3 CFL-318 9.455MHz 2.7kHz

- (9) Carefully replace the CAF-412 TX/RX Unit and replace the mounting screws.
- (10) Replace the rear panel, removed in step (6). Check that the power supply fan rotates smoothly by lightly turning it using a thin rod. If it does not turn smoothly, the fan blades are likely rubbing against cables in the power supply. Check again as you reassemble the JST-145/ 245.
- (11) Replace the PA unit, and the chassis on top of the speaker removed in step (5). When lifting the chassis, be careful not to damage the speaker cone

Before mounting the chassis, reconnect cable to P11 in J11-1 and P12 in J12.

Make sure that the wiring harness is positioned as shown in Figure 7. If it is located in the



-4-

position, the set may not function prop-





図 6 ハーネス配置図 Figure 6 Harness Layout

-6--

モニターユニットCMF-144

取付要領書

CMF-144 Monitor Unit Installation Guide

モニターユニットCMF-144をお買い上げいた だきまして有難うございました。 以下の手順に従って正しく取り付けてください。

1. キットの内容

モニターユニット CMF-144 1 取付要領書 1

2. 取付要領

2.1 注意事項

作業を始める前にPOWERスイッチをOFFに して必ず電源ケーブルを抜いてください。

また、必要のない限りJST-145/245内の他の部 品には手を触れないようにしてください。作業 を実施するにあたり、下記事項を注意してくだ さい。

 ネジをセットの中に落とさないよう、紙 テープなどを利用して外してください。 万一落とした場合は、必ず取り除いてくだ さい。

そのまま放置しますと、後で重大な故障 の原因になります。

- コネクターの取り外しは、電線を何度も 揺り動かすと、しん線が切れて故障の原因 となりますので、コネクターもモールド部 分を手で押さえて取り外してください。
- ドライバーにあまり過大な力を加える と、ドライバーがすべってプリント基板を 傷つけたり、付近の部品を壊す恐れがある ので注意してください。

Thank you for purchasing the CMF-144 Monitor Unit.

Install the CMF-144 Monitor Unit as follows:

2. Installation

2.1 Precautions

Before installing the CMF-144 Monitor Unit, turn the JST-145/245 POWER switch OFF and disconnect the power cable. Unless otherwise required, do not touch any internal components of the JST-145/ 245. Please also note the following:

 Use sticky tape to prevent any screws dropping inside the set.

If you inadvertently drop anything inside the casing, be sure to remove it as it may otherwise cause a major failure.

- When connecting or disconnecting connectors, hold the plastic molding, not the wiring itself, as repeated flexing will break the cores.
- Do not apply excessive force to the screwdriver as it may slip and damage the printed circuit board or other components.

-1-



2.2 取付要領

- (1) JST-145/245の上カバーを取り外すため、 先ずキャリングハンドルを止めている2本の 4mmの皿ネジを外し、キャリングハンドル を取り外します。(図1参照)
- (2) 図1を参考にして、上カバーをとめている 6本(両サイド2本、背面2本)の3mmのネジを 取り外します。
- (3) 上カバーをセット後部に少し(約1cm)引 くようにして上に持ち上げて取り外しま す。
- (4) 中央部の放熱板と2個のファンモーターの 間に赤と黒の線で接続されたプラスチック のPA電源用コネクターがあり、このコネク ターの片側の両端を親指と人差し指で強く 摘んで引いて切り離してください。
- (5) 図2を見て4本の4mmネジを取り外してく ださい。そしてこのユニット全体を上に2~ 3cm持ち上げてCAF-412 TX/RXユニットか ら下記の2本のプラグを抜き、図3のように 本体の横に置きます。P8のケーブルは、J8-1 から取り外すと、元に戻すとき指が入り難 いため接続したままにします。
 - ①P11のケーブルを、J11-1から取り外す。
 ②P12のケーブルを、J12から取り外す。

(6) お買い上げいただいているモニターユ ニットのJ57、J59、J60、J99-1に接続されてい

2.2 Installation

- To remove the top cover of the JST-145/245, first remove the two countersunk screws retaining the carrying handle, then remove the carrying handle. (Figure 1)
- (2) Remove the six 3mm screws retaining the top cover (two on each side and two on the back).(Figure 1)
- (3) Gently lift and pull the cover about 1cm to the rear to remove it.
- (4) Locate the PA power supply connector, which is connected to the red and black wires between the heat sink and two fan motors in the center of the unit.Disconnect it from the upper chassis unit by squeezing both sides of one side of the connector.
- (5) Remove the four 4mm screws and one 3mm screw, as shown in Figure 2. Lift the entire unit up by about 2 or 3cm to disconnect the following two plugs from the CAF-412 TX/RX unit, then place the upper chassis unit beside the JST-145/245, as shown in Figure 3. If cable P8 is disconnected from J8-1, it can be difficult to access the connector to reconnect it. It is therefore best to leave it connected.

Disconnect cable P11 from J11-1.

②Disconnect cable P12 from J12.

(6) Connect J57, J59, J60, and J99-1 (on cables) on the new CMF-144 Monitor Unit to the fol-

-2-



- (7) TX/RXユニットから出ているP98-1のプラ グをモニターユニットのJ98-1に接続してく ださい。
- (8) モニターユニットは半田面を上にしてTX/ RXユニットの2本の支柱(図3参照)に取り付けられている3mmのネジを使用して支柱に 固定してください。
- (9) (5)項で外した上シャーシー部を元に戻 します。同時に、このとき取り外したケーブ ルP11、P12の2本を接続します。
- そして、図2の4本の4mmネジで取り付け ます。

_______ご注意 上シャーシー部を元に戻すとき、ケーブル をシャーシーの間に挟み込まないようにし てください。

- (10) (4) 項で外したPA電源用コネクターを接続します。
- (11) JST-145/245の上カバーを元に戻します。
 (12) キャリングハンドルを取り付けます。
 以上で作業終了です。

- (7) Connect the plug P98-1 from the TX/RX Unit to J98-1 on the Monitor Unit.
- (8) Turn the monitor unit so that the solder side is up, then use the two 3mm screws on the TX/RX unit supports to mount the monitor unit on those supports.(Figure 3)
- (9) Replace the upper chassis unit inside the JST-145/245 and reconnect cables P11 and P12 (see step (5)). Fix it with the five 4mm screws, as shown in Figure 2.

PRECAUTIONS

Prevent cables becoming sandwiched between the PA unit and chassis when replacing the upper chassis unit inside the JST-145/245.

- (10) Reconnect the PA power supply connector (see step (4)).
- (11) Replace the top cover of the JST-145/245.
- (12) Replace the carrying handle. This completes the installation procedure.

-4--



When installing the upper chassis, lie the cable to J8 to the edge of the chassis (to prevent it lying against the RF unit).

図4 ハーネス配置図 Figure 4 Harness Layout

-5-

高安定水晶キットCGD-135 取付要領書 CGD-135 High-Stability Crystal Kit Installation Guide

高安定水晶キットCGD-135をお買い上げいた だきまして有難うございました。このキットは、 JST-145/245のシンセサイザ基準発振用水晶振動 子を一定温度に保ち、周波数安定度を-20~+50 ℃において、±0.5 PPM以内に飛躍的に向上させ るためのものです。

以下の手順に従って正しく取り付けてくださ い。

1. キットの内容

2. 取付要領

作業を始める前に必ずPOWERスイッチをOFF にしてから更に電源ケーブルを抜いてください。 また、必要のない限りJST-145/245内の部品に は手を触れないようにしてください。

- JST-145/245の下カバーを取り外すため、
 作業台の上にセットをひっくりかえして底
 を上にして置きます。
- (2) 下カバーを止めている6本(両側面2本、 背面2本)の+ネジをドライバーを使って取 り外します。
- (3) 下カバーをセット後部に少し(約1cm)引く ようにして上に持ち上げて取り外します。CGH-192 SYNTHESIZERのユニットが現れます。

Thank you for purchasing the CGD-135 High-Stability Crystal Kit. Installing this kit in the JST-145/ 245 greatly improves the frequency stability by keeping the temperature of the synthesizer reference crystal constant. Frequency stability will be within ± 0.5 ppm across the temperature range of from -20°C to +50°C.

Install the CGD-135 High-Stability Crystal Kit as follows:

1. Contents of Kit

Crystal Oven (H-6ZKJD00020)	1
CrystalH-6XHJD00195 (20MHz)	1
PCB Puller (not used for JST-145/245)	1
Capacitors (not used for JST-145/245)	2
Installation Guide	1

2. Installation

Before installing the CGD-135 High-Stability Crystal Kit, turn the JST-145/245 POWER switch OFF and disconnect the power cable. Unless otherwise required, do not touch any internal components of the JST-145/245.

 Turn the JST-145/245 upside down on the workbench to remove the bottom cover.

(2) Remove the six "+" screws retaining the bottom cover (two on each side and two on the back).

(3) Gently pull the cover about 1cm to the rear and lift it to remove it. The CGH-192 Synthesizer Unit can now be accessed.

-1-



- Figure 1 Removing the Shielding Case and Cover
- (4) コネクターJ32-1、J33-1、J34-1、J35-1の4 個のコネクターを基板から取り外します。 この際に電線を何度も揺り動かすとしん 線が切れて故障の原因となることがありま すので、コネクターのモールド部分を手で 引いて取り外してください。
- (5) 図1のシールドケースの取外図を参考に しながらシールドケースのカバーを外す と、X2と印刷された16mmの白丸が見つかり ます。

後で、ここに水晶振動子と恒温槽を取り 付けます。

(6) CGH-192 SYNTHESIZERのユニットを固定している3mmの+ネジ、11本を取り外します。

取り外しには次の点に十分注意してくだ さい。

ご注意

1 11本のネジの内、図2に示す5本のネジは、 タッピンネジ(ネジ止めをするところに ネジ山を切りながら止めるネジ)を使用 していますので、プリント基板取り付け の際、他の6本のネジと混用しないでく ださい。間違えて混用しますと取り付け 部分のネジ山が壊されてネジが締まらな くなることがあります。取外た際に、印を 付けておくと取り付けの時に便利です。

- (4) Disconnect the following four connectors from the board: J32-1, J33-1, J34-1, and J35-1. When connecting or disconnecting connectors, hold the plastic molding, not the wiring itself, as repeated flexing will break the cores.
- (5) Remove the shielding case cover as shown in Figure 1 to expose the 16mm white dot marked "X2".

This is where to mount the crystal and crystal oven.

(6) Remove the eleven 3mm "+" screws holding the CGH-192 Synthesizer Unit in position, noting the following:

PRECAUTIONS

1 Five of the eleven screws, indicated in Figure 2, are self-tapping screws (which cut their own thread as they are inserted) and must not be mixed with the other six normal screws when mounting the PCB. Using self-tapping screws in threaded slots will damage the thread and it may become impossible to tighten the screws. We suggest marking the positions of the selftapping screws when removing them.

-2-

る前にPOWERスイッチをON 間、恒温槽が暖まるのを待って してください。

(19) 以上で作業はすべて完了で

Fig

ご注意

- 2 ネジをセットの中に落とさないよう、接着用、紙デープなどをネジに貼り付けるなどの工夫をして外してください。万一、落とした場合には、必ず取り除いてください。そのまま放置しますと後で重大な故障の原因となります。
- 3 ドライバーにあまり過大な力を加える と、ドライバーがすべってプリント基板 を傷つけたり、付近の部品を壊す恐れが あるので注意してください。

PRECAUTIONS

- 2 Use sticky tape to prevent any screws dropping inside the set. If you inadvertently drop anything inside the casing, be sure to remove it as it may otherwise cause a major failure.
- 3 Do not apply excessive force to the screwdriver as it may slip and damage the printed circuit board or other components.



Figure 2 Positions of PCB Mounting Screws

- (7) 11本のネジと、4個のコネクターが外れたら、他のコネクターはそのままでプリント 基板の裏側(半田面)を見るため、垂直になるようにプリント基板を立ててください。
- (8) 前に外したシールドケースのカバーの反対側のシールドケース(半田面)を2.6mmの 皿ビス(タッピングネジ)4本を取り外します。(図1参照)
- (9) 水晶振動子をプリント基板の部品面に印 刷された16mmの白丸の中の5×12mmの楕 円の位置に2本の足を差し込み取り付けま す。

プリント基板の裏側(半田面)に出た2本 の足を半田付けします。長すぎた足は、後で 被せるシールドケースにあたらないように 短く切ります。(図3参照)

(10) 恒温槽を水晶振動子の上から被せ、2本の

- (7) After removing the eleven screws and disconnecting the four connectors, position the PCB vertically so that you can see its back (solder side) with the other connectors in place.
- (8) Remove the four self-tapping 2.6mm countersunk screws retaining the shielding case opposite (solder side) the cover removed in step (5). (Figure 1)
- (9) Insert the two legs of the crystal into the holes in the 5x12mm ellipses in the 16mm white dot printed on the parts side of the PCB. Solder the two legs onto the soldered side of the PCB.

If the legs are too long, cut them so that they do not come into contact with the shielding case when it is replaced. (Figure 3)

(10) Mount the crystal oven over the crystal, then

足を前項同様に半田付けした後短 す。(図3参照)

(11) いづれの場合の半田付けもでき、い時間に素早く仕上げるのがこつり熟練していないとプリント基板:こともありますのでご注意ください
 (12) プリント基板の部品面にあるSJされたスイッチを切替えますが、図たように、スイッチ上部の溝に爪:引き抜くと新たに2本のピンが現れになります。(図4参照)

最初の位置から別の2本のピント 手で軽く押込みます。

これで水晶振動子がX1からX20 水晶振動子に切替えが完了したこ。 ます。

> 水晶振動 Crystal

図3 水 Figure 3 M

- (13) (8)項で取り外したシールドケー
 面)を4本の皿ビスにより取り付けします。
- (14) CGH-192 SYNTHESIZERのユニ意深く元に戻してビス止めします。
- (15) シールドケース(部品面)のカバ・ 押し込み被せます。
- (16)(4)項で取り外した4個のコネク に戻します。
- (17) JST-145/245下カバーを元に戻し

(18)次に、取扱説明書の7章「基準発イの調整」に従って調整しますが、調整

-3-

る前にPOWERスイッチをONにして約5分 間、恒温槽が暖まるのを待って調整を開始 してください。

(19) 以上で作業はすべて完了です。

adjust the crystal oscillator. Turn ON the power switch and wait about 5 minutes for the crystal oven to warm up before making any adjust-

(19) This completes installation.



図4 水晶振動子切替要領図 Figure 4 Switching Crystal Oscillators

-5-