

Einstellprogramm für LCD-Uhr

Setting programme for the LCD clock

Programme de réglage pour l'horloge LCD

Programma di regolazione dell'orologio LCD

Instelprogramma voor de LCD-klok

After fitting or changing the batteries, arbitrary numbers appear.



- By actuating the "SELECT." button after the minutes have been set it is possible to start the clock exactly to the second (e. g. by means of radio or TV time check).
- If the indication "time" is desired at once, then the "FUNCT." button must be pressed 4 times. The appearing symbols have no function in this unit.

Attention: After adjustment has been completed, the "SELECT." button must be pressed repeatedly until no sign is blinking.

Setting the clock time

FUNCT. S 1	SELECT. S 2	Indication	Explanation
		10:2508	Initial state: arbitrary time indication
	X	10:25:0	Ready for setting the hours
		22:2535	Setting hours, clock function not interrupted
	X	22:2540	Ready for setting the minutes, clock function not interrupted
		22:06:00	Setting minutes, clock function interrupted, seconds at zero
		0030:55	Setting process concluded, clock function started, indication, "time" 1)

GB

Setting the date (week-day, calendar day, month) (German week-day letters)

		0830:55	Initial state: "time"	
X		5 8 0 M	Indication: date	
	X	5 8 DM	Ready for setting the week-day	
		s 8 0C	Setting week-day	
		5 <u>8</u> 01	Ready for setting the calendar day	
\bigcirc	_	s 5) 00	Setting calendar day	
	X	5 10 IC 2	Ready for setting the month	
		10 I2 ()	Setting month	
	X	11 SI OC	Setting concluded, indication "date". Changes after approx. 30 secs. back to indication "time". 2)	