

SCU-17 USB INTERFACE UNIT

Instruction Manual



日本語の説明は18ページから記載されています。

Introduction

The SCU-17 interface unit may be used for CAT control of the transceiver with a computer via a USB connection; and for communications using SSTV, RTTY and PSK digital modes.

- **Note:** YAESU does not produce CAT, SSTV, RTTY and PSK System operating software, due to the wide variety of personal computers, operating systems, and applications in use today.
- The SCU-17 provides CAT communication through the USB terminal when a PC does not have an RS-232C connection.
- The SCU-17 is equipped with a USB audio system device, so the TX and RX audio system signals are accessible to the SCU-17 through the USB cable. Therefore, the supplied USB cable is the only connection needed between the SCU-17 and PC.
- □ The SCU-17 is equipped with a two-channel USB serial device and enables the various transmission modes and the CAT communication simultaneously.
- □ The SCU-17 operates from the USB bus power; you do not need to prepare an external power supply.
- For RF isolation, the SCU-17 is designed with photo relays for the PTT/FSK terminals. AF transformers are used in the AUDIO IN/OUT lines to provide excellent ground isolation.
- □ The SCU-17 is equipped with the TX and RX audio controls on the front panel, for convenient level adjustment.
- □ LED indicators on the SCU-17 front panel monitor the PTT and FSK control. The operating conditions may be quickly confirmed.

Virtual COM port driver Installation

Install the virtual COM port driver on the personal computer before using the SCU-17 USB interface unit.

Please see the USB Driver (Virtual COM Port Driver) on the Yaesu Website for details refer to (http://www.yaesu.com/) in the FTDX1200 product files section.

- **Note:** Do not connect the USB cable and SCU-17 to your personal computer until after the "virtual COM port driver" installation is completed, because an incorrect driver may be installed.
- For assistance with the software port configuration, refer to "How to Confirm the Installation, and the COM Port Number" in the "Virtual COM port Driver Installation Manual".
- □ For information on port configuration for commercial and free computer software, refer to the manual for the software being used.
- When using the USB cable to supply TX and RX audio signals, set the Sound Card (input and output) settings to "USB Audio CODEC".
- □ When using the USB cable for computer TX control, the transceiver may switch to transmit mode when the computer is started, etc.
- □ YAESU does not provide technical support for the use or operation of commercial or free computer software.

Accessories

USB cable (Type "A" male to Type "B" male)1 pc
RS-232C cable (female to female, Straight Type)1 pc
1 2 3 4 5 1 N/A 6 N/A 0 1 2 SERIAL IN 7 RTS 3 SERIAL OUT 8 CTS 4 N/A 9 NC 6 7 8 9 5 GND
Connection cable (MDIN6P - MDIN6P)1 pc
6 6 6 6 6 6 6 7 6 6 7 7 8 9 9 1 1 1 1 1 1 1 1 1 1 1 1 1
3.5 mm Stereo plug
GND PTT GND IN FSK OUT
PTT/FSK AUDIO

Instruction manual

Controls & Connections

Front Panel



Rear Panel



- ① RX audio level control knob This knob adjusts the RX audio level.
- (2) TX audio level control knob This knob adjusts the TX audio level.
- (3) FSK Indicator This indicator illuminates when the Mark frequency is shifted.
- (4) TX Indicator This indicator illuminates during transmission.
- **5** POWER Indicator
- 6 USB Connector

Connect to a computer from this jack using the supplied USB cable.

⑦ CAT/RS-232C Jack

This 9-pin serial DB-9 jack allows CAT communication of the transceiver. Connect a supplied RS-232C cable here and to the transceiver.

8 3.5 mm stereo Jack (PTT/FSK)

This 3-conductor, 3.5 mm stereo jack is used for PTT/FSK. For RF isolation, these terminals are designed with photo relays.

- (9) DATA Jack This 6-pin (MDIN6P) jack allows DATA communication of the transceiver.
- 1 3.5 mm stereo Jack (Audio IN/OUT)

This 3-conductor, 3.5 mm stereo jack is used for Audio IN/OUT. For RF isolation, AF transformers are used in the AUDIO IN/OUT lines.

This Jack is equipped with an attenuator that is applied to the audio output. See page 15 for details about attenuation.

System Setup

FT_Dx1200



Supplied RS-232C Cable

FT-950



SCU-17 USB INTERFACE UNIT

System Setup

FT-2000 Series / SCU-21



FT-2000 Series / CT-39A



SCU-17 USB INTERFACE UNIT

System Setup

FTDx9000 Series (SSTV/PSK/RTTY)



FTDX9000 Series (PSK)



System Setup

FTDx5000 Series / SCU-21



FTDx5000 Series / CT-39A



SCU-17 USB INTERFACE UNIT

System Setup

FT-450D



Supplied RS-232C Cable

FT-817ND



SCU-17 USB INTERFACE UNIT

FT-857D



System Setup

FT-897D



CAT Interface Cable "CT-62" (option)

Interfacing to other transceivers



PTT/FSK control and Attenuator Setting

The PTT/FSK setting may be changed and the audio output attenuator may be enabled by changing the configuration of an internal switch and a jumper.

- 1. Disconnect all the cables from the SCU-17.
- 2. Referring to Figure 1, remove the 4 screws attaching the top case, then remove the top case.
- 3. Refer to Figure 2 for the location of switch (S1001) and jumper (J1006).
- Set the switch (S1001) and jumper (J1006).
 S1001: PTT/FSK control setting J1006: Attenuator setting to the audio output of the Audio IN/OUT jack.
- 5. Replace the top case, using the 4 screws removed in step (2) above.
- 6. Reconnect the cables to the SCU-17.



SCU-17 USB INTERFACE UNIT

Specifications

Supply Voltage:	DC 5.0 V \pm 5%, Negative Ground
Current Consumption :	130 mA
Data Jack:	PTT: Maximum output +25 V, 50 mA (open collector)
	FSK: Maximum output +25 V, 50 mA (open collector)
	DATA-IN: 100 mVrms @ 10 k Ohms
	DATA-OUT: 100 mVrms @ 600 Ohms
FSK/PTT Jack:	PTT: Maximum output +30 V, 250 mA (open drain)
	FSK: Maximum output +30 V, 250 mA (open drain)
AUDIO Jack:	AUDIO-IN: 100 mVrms @ 600 Ohms
	AUDIO-OUT: 100 mVrms @ 600 Ohms
CAT/RS-232C Jack:	RS-232C voltage level
USB Connector:	USB 1.1 or USB 2.0, USB bus power
Case Size:	4.37" (W) x 1.0" (H) x 2.91" (D) (111 x 25.4 x 74.0 mm)
Weight (approx.):	8.1 oz (230 g)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- □ Increase the separation between the equipment and receiver.
- □ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

特徴

SCU-17は、無線機のCAT通信、SSTV、RTTY、PSKなどの各種送信制御をUSBケーブルで接続したパソコンで行うことができるインターフェースユニットです。

- □ RS-232C の端子がないパソコンでも USB 端子を用いて CAT 通信を行うことができます。
- USB オーディオデバイスを搭載し、送信および受信オーディオ信号は USB ケーブルにて通信されますので、SCU-17 とパソコンの接続は、付属の USB ケーブルだけで接続可能です。
- 2 チャンネルの USB シリアルデバイスを搭載している為、CAT 通信と同時 に各種の送信制御を行うことが可能です。
- □ USB バスパワーにて動作しますので、外部電源は不要です。
- RF インターフェア対策の為、フォトリレーを使用した PTT/FSK 端子および、 オーディオラインにトランスを使用し、GND アイソレーションされている AUDIO IN/OUT 端子を備えています。
- □ 送信および受信オーディオレベルの調整用ボリュームをフロントパネルに配置しましたので、各レベル調整を容易に行うことができます。
- PTT および、FSK コントロールのモニター用 LED インジケータをフロント パネルに配置しましたので、一目で動作状態を確認することができます。

準備

SCU-17 を使用するには、使用するパソコンに、あらかじめ仮想 COM ポート ドライバーをインストールする必要があります。

SCU-17 に仮想 COM ポートドライバーは付属していませんので、当社ホームページ (http://www.yaesu.com/jp/amateur_index/driver/GetStart.html) の「SCU-17 USB インターフェースユニット 仮想 COM ポートドライバー」掲載ページより ダウンロードしてください。

【ご注意】

- ・仮想 COM ポートドライバーのインストールが完了するまでは、SCU-17 とパ ソコンとを USB ケーブルで接続しないで下さい。仮想 COM ポートドライバー をインストールしないで SCU-17 とパソコンとを接続した場合、誤ったドラ イバーがインストールされて正しく動作しなくなる恐れがあります。
- ・SCU-17 を使用して無線機の通信制御を行うためのソフトのサポートは行って いません。
- ・ご使用の無線機に付属装置(本機)を接続して、SSTV、RTTY、PSKなどのモードを運用する時は、変更申請(届出)が必要になる場合があります。 また、技術基準適合証明設備でない設備の変更申請には、ティエスエス(TSS) 株式会社による保証認定が必要になります。



・取扱説明書

<u>フロントパネル</u>



<u>リアパネル</u>



- 受信レベル調整ツマミ
 受信オーディオレベルの調整を行うツマミです。
- ② 送信レベル調整ツマミ 送信オーディオレベルの調整を行うツマミです。
- ③ FSK インジケータ マーク周波数が、あらかじめ設定してある周波数分シフトした際に点灯するインジケータです。
- ④ TX インジケータ
 送信時に赤く点灯するインジケータです。
- ⑤ POWER インジケータ
- ⑥ USB 端子 付属の USB ケーブルを使用して、パソコンの USB 端子と接続します。
- ⑦ CAT/RS-232C 端子 付属の RS-232C ケーブルを使用して、無線機の CAT/RS-232C 端子と接続します。
- ⑧ 3.5-mm ステレオジャック (PTT/FSK) RF インターフェアを防ぐために、フォトリレーを使用した PTT/FSK 端子です。
- ③ DATA ジャック 付属のコネクションケーブルを使用して、無線機の DATA 端子や PACKET 端子と接続します。
- 3.5-mm ステレオジャック(AUDIO IN/OUT) RF インターフェアを防ぐために、オーディオラインにトランスを使用し、GND アイソレーション可能な AUDIO IN/OUT 端子です。 なお、OUT 端子(送信オーディオ出力)は、SCU-17内部のジャンパー設定を変更することにより、

なめ、001 姉子(医信オー)イオ 西川 は、SCG 17 内部のジャンパー設定を変更することにより、 アッテネーターを動作させることができます(31ページ参照)。

FT_Dx1200 との接続例



FT-950 との接続例



SCU-17 USB INTERFACE UNIT

FT-2000 シリーズとの接続例(オプションの SCU-21 を使用する場合)



FT-2000 シリーズとの接続例(オプションの CT-39A を使用する場合)



SCU-17 USB INTERFACE UNIT

無線機との接続

FTDx9000 シリーズとの接続例 (SSTV/PSK/RTTY)

RTTY および、SSTV (SSB モード)、PSK (SSB モード) で運用する場合は、下の イラストを参考に接続してください。

なお、SSBモードで運用する場合は、メニューモード「No.077 SSB MIC SELECT」を「DATA」に設定してください。



FTDx9000 シリーズとの接続例 (PSK)

PSK を PKT モードで運用する場合は、下のイラストを参考に接続してください。



FTDx5000 シリーズとの接続例 (オプションの SCU-21 を使用する場合)



無線機との接続

FTDx5000 シリーズとの接続例(オプションの CT-39A を使用する場合)



SCU-17 USB INTERFACE UNIT

FT-450D との接続例



FT-817ND との接続例



SCU-17 USB INTERFACE UNIT

FT-857D との接続例



FT-897D との接続例



その他の無線機との接続例



SCU-17 USB INTERFACE UNIT

SCU-17 は、内部のジャンパー設定を変更することにより、AUDIO IN/OUT 端 子の送信オーディオ出力側にアッテネーターを動作させることができます。 また、内部のスイッチを切り換えることにより、PTT/FSK の制御(PTT 制御: RTS、FSK 制御:DTR)を変更(PTT 制御:DTR、FSK 制御:RTS)すること ができます。

- 1. SCU-17 に接続されている全てのケーブル類を外します。
- 2. 図1を参考に、4本のネジを外して上ケースを外します。 ケースが外れにくい場合は、下側のネジを緩めてください。
- 図2を参考に、ジャンパー(J1006)の設定または、スイッチ(S1001)の切り換えを行います。
- 4. 上記2で外したネジ4本で、上ケースを取り付けます。
- 5. 上記1で外したケーブル類を接続します。





図 2

SCU-17 USB INTERFACE UNIT

定格

DC 5.0V ± 5%、(マイナス接地) 電源電圧: 消費電流: 約 130mA 入出力レベル: DATA ジャック PTT 出力端子: 最大 +25V, 50mA (オープンコレクタ制御) FSK 出力端子: 最大 +25V, 50mA(オープンコレクタ制御) DATA-IN: 100mVrms @ 10kQ DATA-OUT: 100mVrms @600Ω FSK/PTT ジャック PTT 出力端子: 最大 +30V. 250mA(オープンドレイン制御) FSK 出力端子: 最大 +30V. 250mA(オープンドレイン制御) AUDIO ジャック DATA-IN 端子: 100mVrms @600Ω DATA-OUT 端子: 100mVrms @600Ω CAT/RS-232C ジャック RS-232C レベル USB ジャック USB 1.1 または USB 2.0(バスパワー電源供給) 寸法: 111(幅) x 25.4(高さ) x 74(奥行き) mm 重量: 約 230 g

本製品または他の当社製品についてのお問い合わせは、お買い上げいただ きました販売店または、当社アマチュアカスタマーサポートにお願いいた します。

アマチュアカスタマーサポート

〒140-0002 東京都品川区東品川 2-5-8 天王洲パークサイドビル

電話:03-6711-4045



CE

Declaration of Conformity

We, YAESU UK LTD. declare under our sole responsibility that the following equipment complies with the essential requirements of the Directive 1999/5/EC and Directive 2011/65/ EU.

Type of Equipment:	USB Interface Unit
Brand Name:	YAESU
Model Number:	SCU-17
Manufacturer:	YAESU MUSEN CO., LTD.
Address of Manufacturer:	Tennozu Parkside Building, 2-5-8 Higashi-Shinagawa,
	Shinagawa-ku,Tokyo 140-0002 Japan

Applicable Standards:

This equipment is tested and conforms to the essential requirements of directive, as included in following standards.

EMC Standard:	EN 61000-6-1: 2007
	EN 61000-6-3: 2007 + A1: 2011
RoHS2 Standard:	EN 50581:2012

The technical documentation as required by the Conformity Assessment procedures is kept at the following address:

Company: Yaesu UK Ltd. Address: Unit 12, Sun Valley Business Park, Winnall Close, Winchester Hampshire, SO23 0LB, U.K.

Disposal of your Electronic and Electric Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Electronic and Electric Equipment should be recycled at a facility capable of handling these items and their waste by products.



In EU countries, please contact your local equipment supplier representative or service center for information about the waste collection system in your country.



The radio

YAESU MUSEN CO., LTD.

Tennozu Parkside Building 2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA 6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close Winchester, Hampshire, SO23 0LB, U.K.

YAESU HK Unit 2002, 20/F, 9 Chong Yip Street, Kwun Tong, Kowloon, Hong Kong ②2013 八重洲無線株式会社 無断転載・複写を禁ず



1308E-0Y