

# SERVICE NOTES Issued by RJA

### **HOW TO DISTINGUISH BETWEEN TU-12A/HA and TU-12(P)/H(P)**

The difference between TU-12A/12HA and TU-12(P)/12H(P) is as follows.

• The description of the country origin on the rear side of CASE is different.

MODEL NAME	COUNTRY ORIGIN
TU-12A	MADE IN JAPAN
TU-12HA	MADE IN JAPAN
TU-12(P)	MADE IN PHILIPPINE
TI I_19H(D)	MADE IN PHILIPPINE





### **Copyright © 2005 ROLAND CORPORATION**

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

### TU-12(P)

### **SPECIFICATION**

TUNING RANGE: C1(32.70 Hz) to B5(987.77 Hz)

ACCURACY: +/-1 CENT

MASTER OSCILLATOR: Quartz(3.579545 MHz) STANDDARD PITCH: 400 to 445 Hz 1 Hz step JACKS: Input Output AC Adaptor DIMENSIONS: 145 (W) X 35 (H) X 53 (D)mm

5-7/16 (W)X1-3/8 (H) X 2-1/16 (D) inches

• WEIGHT: 170 g/6 oz · ACCESSARY:

Soft Case (#2201074000) Dry Battery / 9V type (#\*\*\*\*\*\*\*)

Owner's Manual ENGLISH (#2602080200)

• OPTION:

AC Adaptor (PSA-Series)

Owner's Manual

JAPANESE (#2602080100)

Specifications are subject to change without notice.

### **PARTS LIST**

SAFETY PRECAUTIONS:

The parts marked ⚠ have safety-related characteristics. Use only listed parts for replacement.

Due to one or more of the following reasons, parts with parts code \*\*\*\*\*\*\*\* cannot be supplied as service parts.

- · Part supplied only as a component in a complete assembly
- Copyright does not permit the part to be supplied
- · Part is sold commercially

NOTE: The parts marked # are new. (initial parts)

The description "Q'TY" means a necessary number of the parts per one product.



We can not supply except the following parts. If you need them ,please order the fnished goods.

CASING					
	2202064400	BATTERY COVER	202-644		1
JACK,EXT T	EDMINAL				
JACK,EXT I	13449711	AC ADAPTOR JACK	HEC0470-01-630	1	
	13449145	6.5MM JACK	YKB21-5010	(OUTPUT)	1
		***************************************			1
	13449146	6.5MM JACK	YKB21-5012 (W/SW)	(INPUT)	1
DISPLAY UN	IIT				
	2243040300	METER	GM261-R3090A		1
FINISHED G	OODS				
	SK000182	FINISHED GOODS (#4001619)	FOR SERVICE ONLY		1
WIRING					
	F3419102	BATTERY CONNECTOR	(006P)		
ACCESSOR	IES (Standard)				
	2201074000	SOFT CASE(BLK)	201-740		1
	2602080200	OWNER'S MANUAL	ENGLISH		1

### TU-12H(P)

### **SPECIFICATION**

TUNING RANGE: C1(32.70 Hz) to B6 (1975.53 Hz)

ACCURACY: +/-1 CENT

MASTER OSCILLATOR: Quartz(3.579545 MHz) STANDDARD PITCH: 400 to 445 Hz 1Hz step JACKS: Input Output AC Adaptor DIMENSIONS: 145 (W) X 35 (H) X 53 (D) mm

5-7/16 (W)X1-3/8X2-1/16 inches

• WEIGHT: 170 g / 6 oz · ACCESSARY:

Soft Case(#2201073800) Dry Battery 9V type(#\*\*\*\*\*\*\*)

Owner's Manual ENGLISH(#2602081200)

• OPTION:

AC Adaptor (PSA-Series)

Owner's Manual

JAPANESE(#2602081100) For SHAKUHACHI(#26020814) For KOTO/SYAMISEN(#26020813)

### **PARTS LIST**

SAFETY PRECAUTIONS:

The parts marked ⚠ have safety-related characteristics. Use only listed parts for replacement.

Due to one or more of the following reasons, parts with parts code \*\*\*\*\*\*\*\* cannot be supplied as service parts.

- · Part supplied only as a component in a complete assembly
- Copyright does not permit the part to be supplied
- Part is sold commercially

NOTE: The parts marked # are new. (initial parts)

The description "Q'TY" means a necessary number of the parts per one product.



We can not supply except the following parts. If you need them ,please order the fnished goods.

CASING					
	2202068000	BATTERY COVER	202-680		1
JACK,EXT TE	RMINAL				
	13449711	AC ADAPTOR JACK	HEC0470-01-630		1
	13449145	6.5MM JACK	YKB21-5010	(OUTPUT)	1
	13449146	6.5MM JACK	YKB21-5012 (W/SW)	(INPUT)	1
DISPLAY UN	т				
DIOI LAT OIL	2243040300	METER	GM261-R3090A		1
	2243040300	WEILK	GWEUT ROUSDIA		1
FINISHED GO	OODS				
	SK000184	FINISHED GOODS (#4001719)	FOR SERVICE ONLY		1
WIRING			(		
	F3419102	BATTERY CONNECTOR	(006P)		1
ACCESSORII	ES (Standard)	COPT CLCP(DD)	201 500		
	2201073800	SOFT CASE(BR)	201-738		1
	2602081200	OWNER'S MANUAL	TU-12H ENGLISH		1
	*****	DRY BATTRY	006P		1

## L3055TU-12/ SERVICE NOTES CHROMATIC TUNER TU-12-

Third Edition

NOTE

Note that both TU-12A and TU-12 are marked "TU-12" on their panels.

NOTE

Note that both TU-12HA and TU-12H are marked "TU-12H" on

ますので、注意してください。


TU-12HA,TU-12H どちらもパネル面の表示は "TU-12H" と なっていますので、注意してください。


### **TABLE OF CONTENTS**

How to distinguish between TU-12A/12HA(new) and TU-12/12H(old) **SPECIFICATIONS(new type) METER ADJUSTMENNT** PARTS LIST(new type) CIRCUIT BOARD(new type) CIRCUIT DIAGRAM(new type) SPECIFICATIONS(old type) PARTS LIST(old type) **CIRCUIT BOARD(old type)** CIRCUIT DIAGRAM(old type)

### 目次 Page TU-12A/12HA (新バージョン) と

TU-12/12H(旧バージョン)の見分け方 ・・・1
仕様 (new type) ······1
メーター調整 ・・・・・・・・・・・・・1
パーツリスト (new type) · · · · · · · · 2
基板図 (new type) · · · · · · · · · 2
回路図 (new type) ······2
仕様 (old type) ·····3
パーツリスト (old type) · · · · · · · · 3
基板図 (old type) · · · · · · · 4
回路図 (old type) ······4

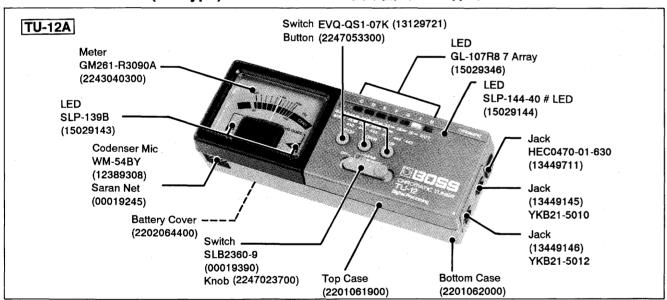


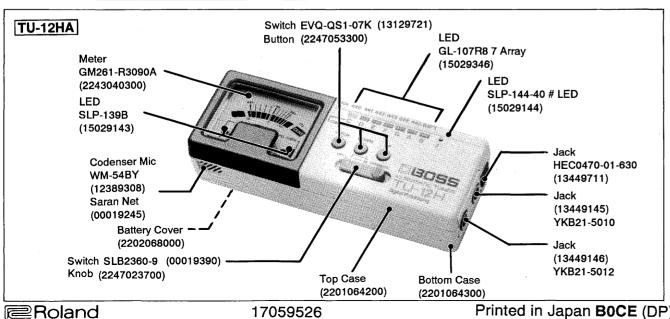

Printed in Japan B0CE (DP) 1

### How to distinguish between TU-12A/12HA(new) and TU-12/12H(old)

TU-12A/12HA

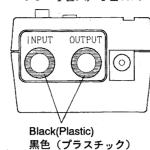

(Fig.A)


To distinguish between TU-12A/HA(new) and TU-12/12H(old), see the INPUT or OUTPUT jack(Fig.A) and check the serial

If the jack is silver(Metal), it must be TU-12/12H(old type). If the jack is black(plastic), it must be TU-12A/12HA(new type).

number(Table.1).

### TU-12A/12HA(新バージョン)と TU-12/12H(旧バージョン)の見分け方

TU-12/12H

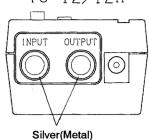

銀色 (金属)

TU-12A/12HA(新バージョン)とTU-12/12H(旧バージョン)を見分け る為に、「INPUT」(又は「OUTPUT」)ジャックを見て下さい。

もし、ジャックが銀色(金属)なら、TU-12/12H(旧バージョン)です。 もし、ジャックが黒色(プラスチック)なら、TU-12A/12HA(新バー

又、シリアル・ナンバーからも新旧バージョンを確認することができ ます。(Table.1参照)

### **Differnce Between** TU-12A/12HA(new) and TU-12/12H(old)

### TU-12A/12HA(新バージョン) と TU-12/12H (旧バージョン)の違い

(Table.1)		TU-12A/12HA (NEW)	TU-12/12H (OLD)
	Serial No.	QE97100-up (TU-12A)	Prior to QE97100 (TU-12)
	Seriai No.	DF05250-up (TU-12HA)	Prior to DF05250 (TU-12H)
	DOD Asser No.	7843751000 (TU-12A)	79306530 (TÜ-12)
	PCB Assy No.	7843851000 (TU-12HA)	79307510 (TU-12H)

### SPECIFICATIONS/仕様 (new type)

● Controls ● Indicators	: Power/Mode Selection Switch, PITCH Button, DOWN Button, UP Button : NOTE Name/PITCH Indicator, Meter Tuning Guide Indicators
● Jacks · · · · · · · · · · · · · · · · · · ·	: Input Jack, Output Jack, AC Adaptor Jack
● Input Impedance ······	: 1M Ω
Standard Pitch · · · · · · · · · · · · · · · · · · ·	: 440Hz to 445Hz 1Hz step
● Tuning Range · · · · · · · · · · · · · · · · · · ·	: TU - 12 :C1 (32.70Hz) to B5 (987.77Hz)
	TU-12H :C1 (32.70Hz) to B6 (1975.53Hz)
● Tuning Accuracy · · · · · · · · · · · · · · · · · · ·	: ± 1 cent
Power Supply ·····	: DC9V : Dry Battery(9V type)
	AC Adaptor(PSA - Series : option)
● Current Draw · · · · · · · · · · · · · · · · · · ·	: 20mA (DC9V)MAX
Dimensions · · · · · · · · · · · · · · · · · · ·	
	$5 - 3/8(W) \times 2 - 1/16(D) \times 1 - 3/8(H)$ inches
● Weight ·····	: 170 g / 6 oz
• Accessories ······	: TU-12A Soft Case (22010740)
	TU-12HA Soft Case (22010738)
	Dry Battery(9V type) (12569103RT)
	TU-12A Owner's Manual(English) (2602080200)
	TU-12A Owner's Manual(Japanese) (2602080100)
	TU-12HA Owner's Manual(English) (2602081200)
	TU-12HA Owner's Manual(Japanese) (2602081100)
	TU-12HA Syakuhachi Manual(Japanese Only) (26020814)
	TU-12HA Koto and Syamisen Manual(Japanese Only) (26020813)
Options ·····	AC Adoptom DCA = 100 DCA = 120 DCA = 220 DCA = 240
● Options	Dry Battery;S - 006P/9V(6F22/9V),6AM6/9V(alkaline)

### METER ADJUSTMENNT

- 1. While holding down PITCH, switch the unit ON. The unit enters test mode.
- 2. Adjust CR1 so that the pointer stays in the 0 cent ( center of the meter face ).
- 3. Switch the unit OFF to exit the test mode.

### メーター調整

- 1. PITCHを押しながら電源を入れる。 (テスト・モードに入る。)
- 2. CR1 を調整して指針をゼロセント(目盛中央)に合わせる。
- 3. 終了すれば電源を切りテスト・モードから出る。

Copyright © 1993 by ROLAND CORPORATION

### PARTS LIST/パーツリスト (TU-12A/TU-12HA)

安全上の注意: △が付いている部品は、安全 上特別な規格でつくられたも 工作がはない。 のです。 交換の際は、指定された部品 番号以外の部品は使わないようにして下さい。

パーツ発注に関するお願い オーダーシートには、必ず下記の4項目は正確に記入して下さい。(例外は除く)

<u>必要数 パーツナンバー</u>
例) 10 22575241 Sharp key C-20/50
b LI記入遅れ、鉄記をが有る場合、必要形品が発送できなかったり、大幅な遅れの原因になります。

2201061900	TU-12A	Top Case	Gray		
2201062000	TU-12A	Bottom Case	Gray		
2202064400	TU-12A	Battery Cover	Gray		
2201064200	TU-12HA	Top Case	White	-	
2201064300	TU-12HA	Bottom Case	White		
2202068000	TU-12HA	Battery Cover	White		

7843751000

TU-12A MAIN Board
TU-12A MAIN Board
NOTE: MAIN Board does not include Meter.
注意 : 補修用 MAIN 基板はメーターを含みません。
NOTE: Replacement MAIN Board includes SW Board
注意 : 補修用 MAIN 基板は SW 基板を含みます。

7843851000 TU-12HA MAIN Board

NOTE: MAIN Board does not include Meter. 注意: 補修用MAIN基板はメーターを含みません。 NOTE: Replacement MAIN Board includes SW Board

	注意 :補修用 MAIN 基板に	tSW基板を含みます。		
KNOB, BUTTON	ツマミ、ボタン			
2247023700 2247053300	Slide Switch Knob Tact Switch Knob		POWER/MODE SW PITCH SW, DOWN SW, UP SW	
SWITCH/スイッ	£			
00019390 13129721	SLB2360-9 EVQ-QS1-07K		POWER/MODE SW PITCH SW, DOWN SW, UP SW	
JACK,SOCKET/	ジャック、ソケット			
13449711 13449146 13449145	HEC0470-01-630 YKB21-5012 YKB21-5010		Adaptor Jack INPUT OUTPUT	
POTENTIOMETI	ER/ボリューム	<u> </u>		
00019312	EVM-38GA00B23		Trimmer 2kB	
DISPLAY UNIT/	ディスプレイユニット	i		
2243040300	Meter	i	-	
IC	-			
00019367 15189251 00019412	SC412237FU M5218AP S-81250HC-Z		Mask CPU OP AMP	IC1 IC4

IC						
00019367	SC412237FU			Mask CPU	IC1	
15189251	M5218AP			OP AMP	IC4	
00019412	S-81250HG-Z			REGULATOR	IC2	
00019467	S-80728AN-Z	*		Battery Level Detector	IC3	
DIODE,LED/ダイ	オード、LED					
15029346	GL-107R8			7 Array LED, LED1-7		
15029144	SLP-144-40			# LED. LED8		
15029143	SLP-139B			TUNING GUIDE LED, LED9, LED10		
15019125	1SS-133			D2. D3		
00019356	1SR139-100-T-32					
CRYSTAL/クリス	スタル					
15299216	DSMAT310 4MHz			Xtal	-	
RESISTER/抵抗						
00120012	CRB20T36EFX9763	(metal film)	976k	R17		

RESISTER/抵抗					•	
00120012	CRB20T36EFX9763	(metal film)	976k	R17		
00120023	CRB20T36EFX4753	(metal film)	475k	R18		
00120034	CRB20T36EFX2403	(metal film)	240k	R19		
00120045	CRB20T36EFX1203	(metal film)	120k	R20		
00120056	CRB20T36EFX6042	(metal film)	60.4k	R21		
00120067	CRB20T36EFX3002	(metal film)	30k	R22		
00120078	CRB20T36EFX1502	(metal film)	15k	R23		
00120101	CRB20T24EFX5102	(metal film)	51k	R26		
00120089	CRB20T36EFX4702	(metal film)	47k	R27		
WIRING/ワイヤリ	ング					
00019256	MAJ-5X26-94-3			CONNECT MAIN	Board with SW B	oard

For MIC.

For POWER/MODE SW Knob, Orange

WINING/ 54	ドランジ
00019256	MAJ-5X26-94-3

MISCELLANEOUS/その他

12389308	Codenser Mic WM-54BY	
00019223	LED Holder A	For NOTE/PITCH LED
00019201	LED Holder B	For # LED
00019212	LED Holder C	For TUNING GUIDE LED
00019234	LED Spacer	For # LED
2341741401	Battery Connector	W <del></del>

22230568 Battery Cushion 00019245 Saran Net 00120001 Plate

ACCESSORIES/付属品 22010740 TU-12A Soft Case Black TU-12HA Soft Case
TU-12HA Soft Case
Dry Battery (9V type)
TU-12A Owner's Manual (English)
TU-12A Owner's Manual (Japanese)
TU-12HA Owner's Manual (English) 22010738 Beige 12569103RT 2602080200 2602080100

TU-12HA Owner's Manual (Japanese) TU-12HA Syakuhachi Manual (Japanese Only) 2602081100 26020813 TU-12HA Koto and Syamisen Manual (Japanese Only)

[TU-12A] MAIN BOARD


ASSY 7843751000

**[TU-12HA]** MAIN BOARD ASSY 7843851000

NOTE -MAIN Board does not include Meter. 補修用MAIN基板はメーターを含みません。

NOTE

Replacement MAIN Board includes SW Board 補修用MAIN基板はSW基板を含みます。

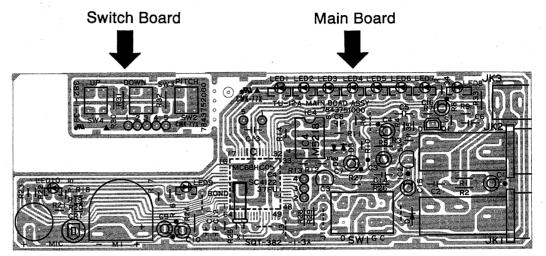


View from component side.

Difference Between TU-12HA PCB and **TU-12HA PCB** 

TU-12A PCB と TU-12HA PCB の違い

	TU-12A	TU-12HA  Nothing  Nothing				
Jumper 1	0					
umper 2	Nothing					
umper 3	0					
lesistor 35 (100 Ω )	Nothing	0				

### CIRCUIT DIAGRAM/回路図

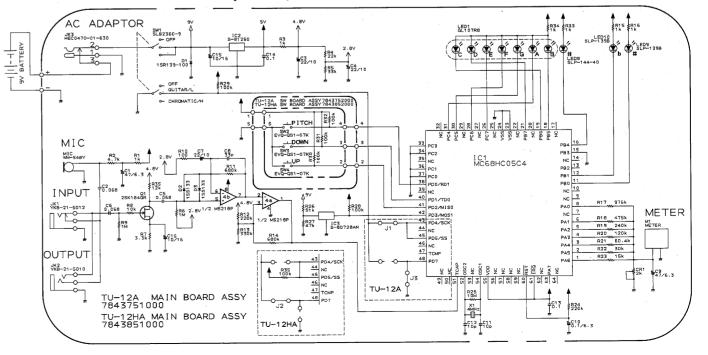

## □ L3055 TU-12 | SERVICE NOTES

First Edition

### **SPECIFICATIONS**

Power Consumption: 9V DC @ 20mA

**Tuning Range** : C<sub>1</sub> (32.70Hz) to B<sub>6</sub> (1975.53Hz)

Accuracy : ±1 cent

: Quartz (3.579545MHz) Master Oscillator

**Standard Pitch Dimensions** 


: 440 to 445Hz 1Hz steps : 145(W) x 35(H) x 53(D)mm

5-7/16 x 1-3/8 x 2-1/16 in

Printed in Japan BE-2

Weight : 170g

6 oz

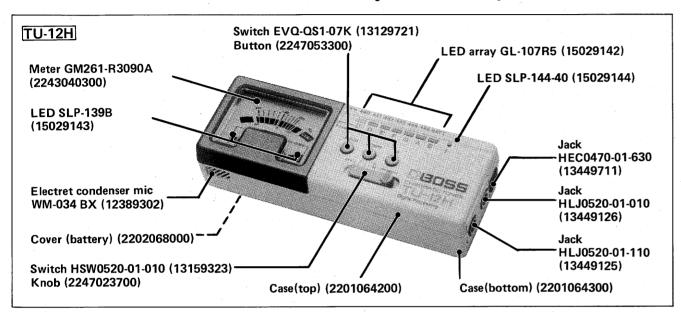

### **PARTS LIST**

2201064200 2201064300	Case (top) Case (bottom)	TU-12H TU-12H	ELECTRET C 12389302	ONDENSER MIC WM-034BX		
2202068000	Cover (battery)	TU-12H	00000			
2201061900	Case (top)	TU-12	CRYSTAL	0.570545841		
2201062000	Case (bottom)	TU-12	12389712	3.579545MHz		
2202064400	Cover (battery)	TU-12	METER			
2247023700	Knob (power)	; - ·-	2243040300	GM261-R3090A		
2247053300	Button (PITCH, DOWN, UP)		2226033300	Cushion	(TU-12 met	er)
2341041400	Battery snap 1007#24		IC			
14.07			15179140	MBR1012-523	CPU	
JACK	111 10500 04 440 (INDLIT)		15219126	LC7900	Generator/D	Nividor
13449125	HLJ0520-01-110 (INPUT)		15189151	LA6458S or 455		rividei
13449126	HLJ0520-01-010 (OUTPUT)		10100101	OP Amp, SIP 9P		
13449711	HEC0470-01-630 (AC adaptor	•	15229809	BA634		TU-12H
SWITCH				D/ 1001		10-1211
13159323	HSW0520-01-010 slide (power	)	DIODE			
13129721	EVQ-QS1-07K light touch		15019209T0	S5500G		
	(PITCH, DOWN, UP)		15019303	RD5.6JB2	(zener)	TU-12
РСВ				SN up to 294000		
79306530	MAIN BOARD		15019304	RD6.2JB2	(zener)	TU-12
70000000	(pcb 2291057704	) TLL12		SN304100 and u	•	
79306540	SWITCH BOARD	10-12	15019305	RD6.8JB2	(zener)	
700000-10	(pcb 2291057704	\ TIL12		SN 304100 and t	-	
79307510	MAIN BOARD	7 10-12	15019128	MA27WB	(varistor)	
, 555, 5.5	(pcb 2291088802)	TI I-12H	45040000	SN 304100 and t	•	
79307520	SWITCH BOARD	10-1211	15019306	RD7.5JB2	(zener)	TU-12H
, 550, 520	(pcb 2291088802)	TU-12H	15019302	RD5.1JB2	(zener)	TU-12H
	(pos 2231000002)	10-1211	LED			
TRIMMER			15029142	GL-107R5	(red, 7-array	(LED)
13299151	H0651A009 2.2kB		15029144	SLP-144-40	(red)	
			15029143	SLP-139B	(red, TUNIN	IG GUIDE)

### TU-12 Second Edition

### **SPECIFICATIONS**

Power Consumption: 9V DC @ 20mA

Tuning Range : C<sub>1</sub> (32,70Hz) to B<sub>5</sub> (987,77Hz)


Accuracy : ±1 cent

Master Oscillator : Quartz (3.579545MHz) Standard Pitch **Dimensions** 

: 440 to 445Hz 1Hz steps

:  $145(W) \times 35(H) \times 53(D)$ mm 5-7/16 x 1-3/8 x 2-1/16 in

Weight : 170a 6 oz

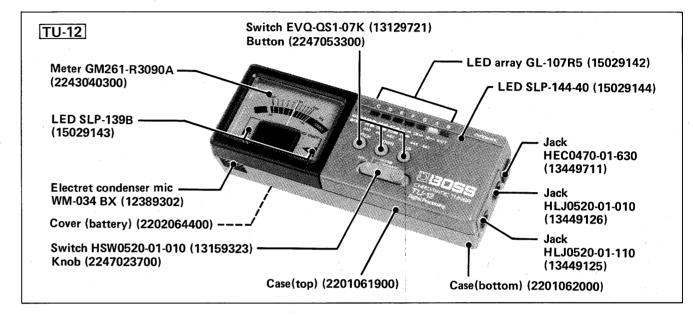

#### RESISTOR

13789114D0 CRB25DY 7.68k 0.5% (metal film) 13769262D0 CRB25FX 125k 1% (metal film) 2% (vertical mount) 13729490D0 ELR-25G 250k 13719491D0 500k ELR-25J 5% (vertical mount)

#### **TRANSISTOR**

2SC945-P (or 15129114 2SC1815-GR) 15129108 15139116 2SK118-0 (FET)


### **OTHERS**

2225020200 Shield Plate

#### CHANGES ON TU-12 MAIN BOARD

D8, C13 and Q4 are added in later versions for improvement. Upward compatible change, later versions can be a substitutive for predecessor(s).


### SN up to 294000 **MAIN BOARD 79306510** (pcb 2291057701)

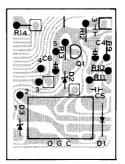

### SN 304100-390895 (pcb 2291057702)

### SN 390896-up (pcb 2291057704)

**MAIN BOARD 79306530** 

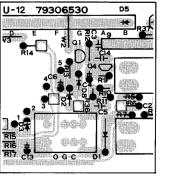

### TU-12|-1

#### **METER CALIBRATION**

CAUTION: KEEP PITCH SWITCH ON DURING ADJUSTMENT, OR TU-12H ENTERS NORMAL MODE. While pushing PITCH, turn power ON (L or H).

Adjust RT1 for 440Hz.

### **SWITCH BOARD**


79307520


(pcb 2291088802)

### **MAIN BOARD**

79307510

(pcb 2291088802)

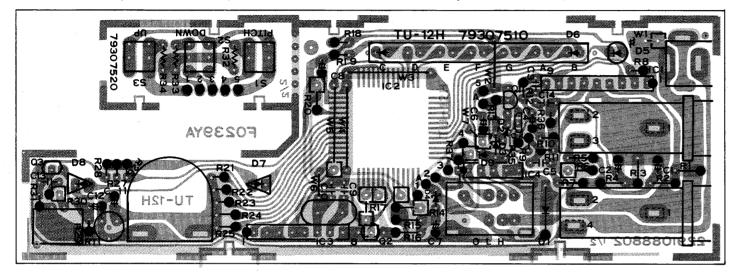

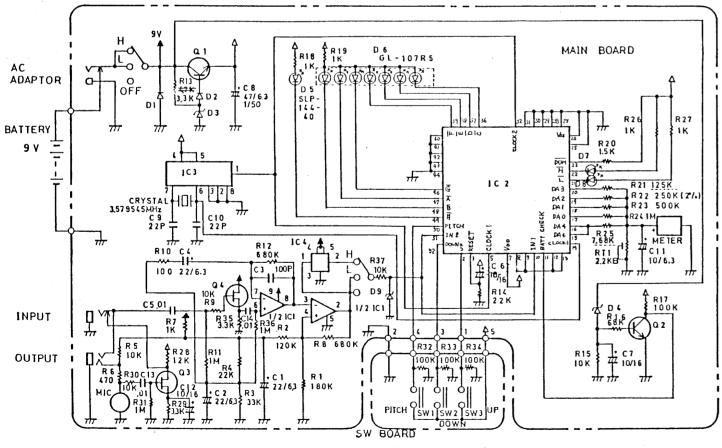

D1 : S5500G D2 : MA27WB D3 : RD7.5JB2 D4 : RD6.8JB2 D7,8 : SLP-139B D9 : RD5.1JB2

OB Q1,2 : 2SC945-P B2 Q3,4 : 2SK118-O IC1 : LA6458S IC2 : MBR1012-523 IC3 : LC7900 IC4 : BA634

### **TU-12**

#### METER CALIBRATION

CAUTION: KEEP PITCH SWITCH ON DURING ADJUSTMENT, OR TU-12 ENTERS NORMAL MODE. While pushing PITCH, turn power ON (GUITAR or CHROMATIC).

Adjust CR1 for 440Hz.

### **SWITCH BOARD**

79306540

(pcb 2291057704)

SN 390896-up

compatible with predecessors.

79306530

MAIN BOARD

(pcb 2291057704)

