



SERVICE MANUAL

MODEL TYPE: YS1084

Acoustic Master Custom

WEB ACCESS: <http://www.yorkville.com>

WORLD HEADQUARTERS CANADA

Yorkville Sound
550 Granite Court
Pickering, Ontario
L1W-3Y8 CANADA


Voice: (905) 837-8481
Fax: (905) 837-8746



U.S.A.

Yorkville Sound Inc.
4625 Witmer Industrial Estate
Niagara Falls, New York
14305 USA

Voice: (716) 297-2920
Fax: (716) 297-3689

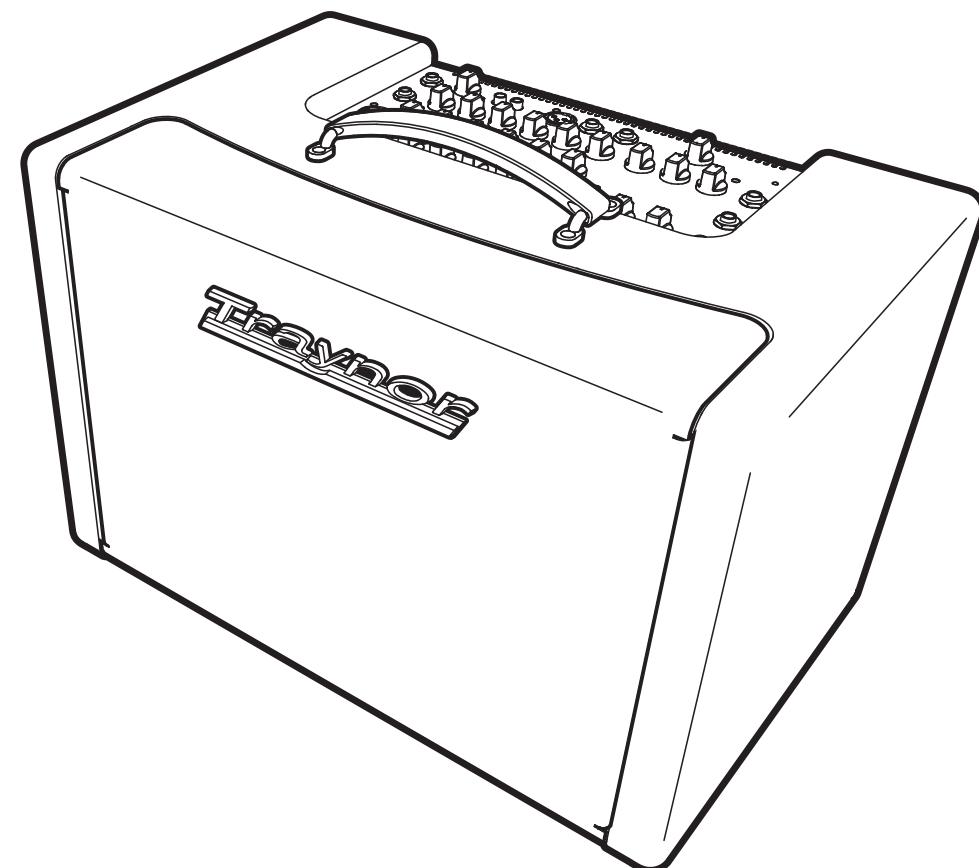

Quality and Innovation Since 1963
Printed in Canada

IMPORTANT SAFETY INSTRUCTIONS



This lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Ce symbole d'éclair avec tête de flèche dans un triangle équilatéral est prévu pour alerter l'utilisateur de la présence d'un « voltage dangereux » non-isolé à proximité de l'enceinte du produit qui pourrait être d'amplitude suffisante pour présenter un risque de choc électrique.



CAUTION AVIS

RISK OF ELECTRIC SHOCK
DO NOT OPEN

RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIR



S2125A

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Le point d'exclamation à l'intérieur d'un triangle équilatéral est prévu pour alerter l'utilisateur de la présence d'instructions importantes dans la littérature accompagnant l'appareil en ce qui concerne l'opération et la maintenance de cet appareil.

FOLLOW ALL INSTRUCTIONS

Instructions pertaining to a risk of fire, electric shock, or injury to a person

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).

NO USER SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THIS DEVICE IS FOR INDOOR USE ONLY!

Read Instructions: The Owner's Manual should be read and understood before operation of your unit. Please, save these instructions for future reference and heed all warnings.

Clean only with dry cloth.

Packaging: Keep the box and packaging materials, in case the unit needs to be returned for service.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. *Do not use this apparatus near water!*

Warning: When using electric products, basic precautions should always be followed, including the following:

Power Sources

Your unit should be connected to a power source only of the voltage specified in the owners manual or as marked on the unit. This unit has a polarized plug. Do not use with an extension cord or receptacle unless the plug can be fully inserted. Precautions should be taken so that the grounding scheme on the unit is not defeated. An apparatus with CLASS I construction shall be connected to a Mains socket outlet with a protective earthing ground. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Hazards

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious personal injury and serious damage to the product. Use only with cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. Only use attachments/accessories specified by the manufacturer

Note: Prolonged use of headphones at a high volume may cause health damage on your ears.

The apparatus should not be exposed to dripping or splashing water; no objects filled with liquids should be placed on the apparatus.

Terminals marked with the "lightning bolt" are hazardous live; the external wiring connected to these terminals require installation by an instructed person or the use of ready made leads or cords.

Ensure that proper ventilation is provided around the appliance. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

Power Cord

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. The AC supply cord should be routed so that it is unlikely that it will be damaged. Protect the power cord from being walked on or pinched particularly at plugs. If the AC supply cord is damaged DO NOT OPERATE THE UNIT. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle. The mains plug of the power supply cord shall remain readily operable.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Service

The unit should be serviced only by qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CAUTION AVIS

RISK OF ELECTRIC SHOCK
DO NOT OPEN

RISQUE DE CHOC ELECTRIQUE
NE PAS OUVRIR



S2125A

SUIVEZ TOUTES LES INSTRUCTIONS

Instructions relatives au risque de feu, choc électrique, ou blessures aux personnes

AVIS: AFIN DE REDUIRE LES RISQUE DE CHOC ELECTRIQUE, N'ENLEVEZ PAS LE COUVERT (OU LE PANNEAU ARRIERE)

NE CONTIENT AUCUNE PIECE REPARABLE PAR L'UTILISATEUR.

CONSULTEZ UN TECHNICIEN QUALIFIE POUR L'ENTRETIEN

CE PRODUIT EST POUR L'USAGE À L'INTÉRIEUR SEULEMENT

Veuillez Lire le Manuel: Il contient des informations qui devraient être comprises avant l'opération de votre appareil. Conservez. Gardez S.V.P. ces instructions pour consultations ultérieures et observez tous les avertissements.

Nettoyez seulement avec le tissu sec.

Emballage: Conservez la boîte au cas où l'appareil devait être retourné pour réparation.

Avertissement: Pour réduire le risque de feu ou la décharge électrique, n'exposez pas cet appareil à la pluie ou à l'humidité. *N'utilisez pas cet appareil près de l'eau!*

Attention: Lors de l'utilisation de produits électriques, assurez-vous d'adhérer à des précautions de bases incluant celle qui suivent:

Alimentation

L'appareil ne doit être branché qu'à une source d'alimentation correspondant au voltage spécifié dans le manuel ou tel qu'indiqué sur l'appareil. Cet appareil est équipé d'une prise d'alimentation polarisée. Ne pas utiliser cet appareil avec un cordon de raccordement à moins qu'il soit possible d'insérer complètement les trois lames. Des précautions doivent être prises afin d'éviter que le système de mise à la terre de l'appareil ne soit désengagé. Un appareil construit selon les normes de CLASS I devrait être raccordé à une prise murale d'alimentation avec connexion intacte de mise à la masse. Lorsqu'une prise de branchement ou un coupleur d'appareils est utilisée comme dispositif de débranchement, ce dispositif de débranchement devra demeurer pleinement fonctionnel avec raccordement à la masse.

Risque

Ne pas placer cet appareil sur un chariot, un support, un trépied ou une table instables. L'appareil pourrait tomber et blesser quelqu'un ou subir des dommages importants. Utiliser seulement un chariot, un support, un trépied ou une table recommandés par le fabricant ou vendus avec le produit. Suivre les instructions du fabricant pour installer l'appareil et utiliser les accessoires recommandés par le fabricant. Utilisez seulement les attaches/accessoires indiqués par le fabricant

Note: L'utilisation prolongée des écouteurs à un volume élevé peut avoir des conséquences néfastes sur la santé sur vos oreilles. .

Il convient de ne pas placer sur l'appareil de sources de flammes nues, telles que des bougies allumées.

L'appareil ne doit pas être exposé à des égouttements d'eau ou des éclaboussures et qu'aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.

Assurez que l'appareil est fourni de la propre ventilation. Ne procédez pas à l'installation près de source de chaleur tels que radiateurs, registre de chaleur, fours ou autres appareils (incluant les amplificateurs) qui produisent de la chaleur.

Les dispositifs marqués d'une symbole "d'éclair" sont des parties dangereuses au toucher et que les câblages extérieurs connectés à ces dispositifs de connection extérieure doivent être effectivés par un opérateur formé ou en utilisant des cordons déjà préparés.

Cordon d'Alimentation

Ne pas enlever le dispositif de sécurité sur la prise polarisée ou la prise avec tige de mise à la masse du cordon d'alimentation. Une prise polarisée dispose de deux lames dont une plus large que l'autre. Une prise avec tige de mise à la masse dispose de deux lames en plus d'une troisième tige qui connecte à la masse. La lame plus large ou la tige de mise à la masse est prévu pour votre sécurité. La prise murale est désuete si elle n'est pas conçue pour accepter ce type de prise avec dispositif de sécurité. Dans ce cas, contactez un électricien pour faire remplacer la prise murale. Évitez d'endommager le cordon d'alimentation. Protégez le cordon d'alimentation. Assurez-vous qu'on ne marche pas dessus et qu'on ne le pince pas en particulier aux prises. **N'UTILISEZ PAS L'APPAREIL** si le cordon d'alimentation est endommagé. Pour débrancher complètement cet appareil de l'alimentation CA principale, déconnectez le cordon d'alimentation de la prise d'alimentation murale. Le cordon d'alimentation du bloc d'alimentation de l'appareil doit demeurer pleinement fonctionnel.

Débranchez cet appareil durant les orages ou si inutilisé pendant de longues périodes.

Service


Consultez un technicien qualifié pour l'entretien de votre appareil. L'entretien est nécessaire quand l'appareil a été endommagé de quelque façon que se soit. Par exemple si le cordon d'alimentation ou la prise du cordon sont endommagés, si il y a eu du liquide qui a été renversé à l'intérieur ou des objets sont tombés dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, si il ne fonctionne pas normalement, ou a été échappé.

Specifications


Model:	Acoustic Master Custom
Type:	Acoustic Combo Amplifier
Cabinet Program Power (Watts):	225
Cabinet Impedance (ohms):	4
Power @ min. impedance (Watts):	225
Minimum Impedance (ohms):	4
Burst Power - 2 cycle:	250
Speaker Configuration - LF (Size / Power):	150 watt, 2-inch voice coil, 8-inch woofer
Speaker Configuration - HF (Size / Power):	2 X 1-inch Neo Dome Tweeter
Frequency Response (Hz +/-3dB):	50- 20 kHz
Hum and Noise (dB):	-98
Input Channels:	4 + Aux
Channel 1 - inputs:	1
Channel 1 - controls:	gain, 4 band tone control, Notch, D-EFX (ch1/2)
Channel 2 - inputs:	1
Channel 2 - controls:	gain, 4 band tone control, Notch
Channel 2 - switches:	EFX enable/disable
Channel 3 - inputs:	1
Channel 3 - controls:	gain, 4 band tone control, Notch, D-EFX
Channel 4 - inputs:	1
Channel 4 - controls:	gain, monitor channel post Master Volume
Channel 5 - inputs:	RCA pre master volume
Master Volume Control:	yes
Main Tone Controls:	no, independent
Graphic EQ:	no
Input Sensitivity (mV):	ch1/100, ch2/100, ch3/100, ch4/100
Master Outputs:	no
Line Out (type / configuration):	1/4-inch jack post EFX / XLR Pre EFX
Line Out Sensitivity (Vrms):	1
Effects Volume:	wet and dry control
Effects Loop / Location:	inserts on ch1-3
Effects Footswitch / Function:	ch1/2 and ch3
Effects Return Sensitivity (Vrms):	0.5
Internal Reverb / Effects:	DSP
LED Indicators:	Power, clip
Protection:	EFX input limiter, Clip limiter
External speaker output / location:	no
Headphone Jack:	no
Dimensions (DWH, inches):	12.5 x 20 x 13
Dimensions (DWH, cm):	50.8 x 32 x 33
Weight (lbs / kg):	35 / 15.9

Block Diagram for Acoustic Master Custom

DESIGNED AND MANUFACTURED BY YORKVILLE SOUND

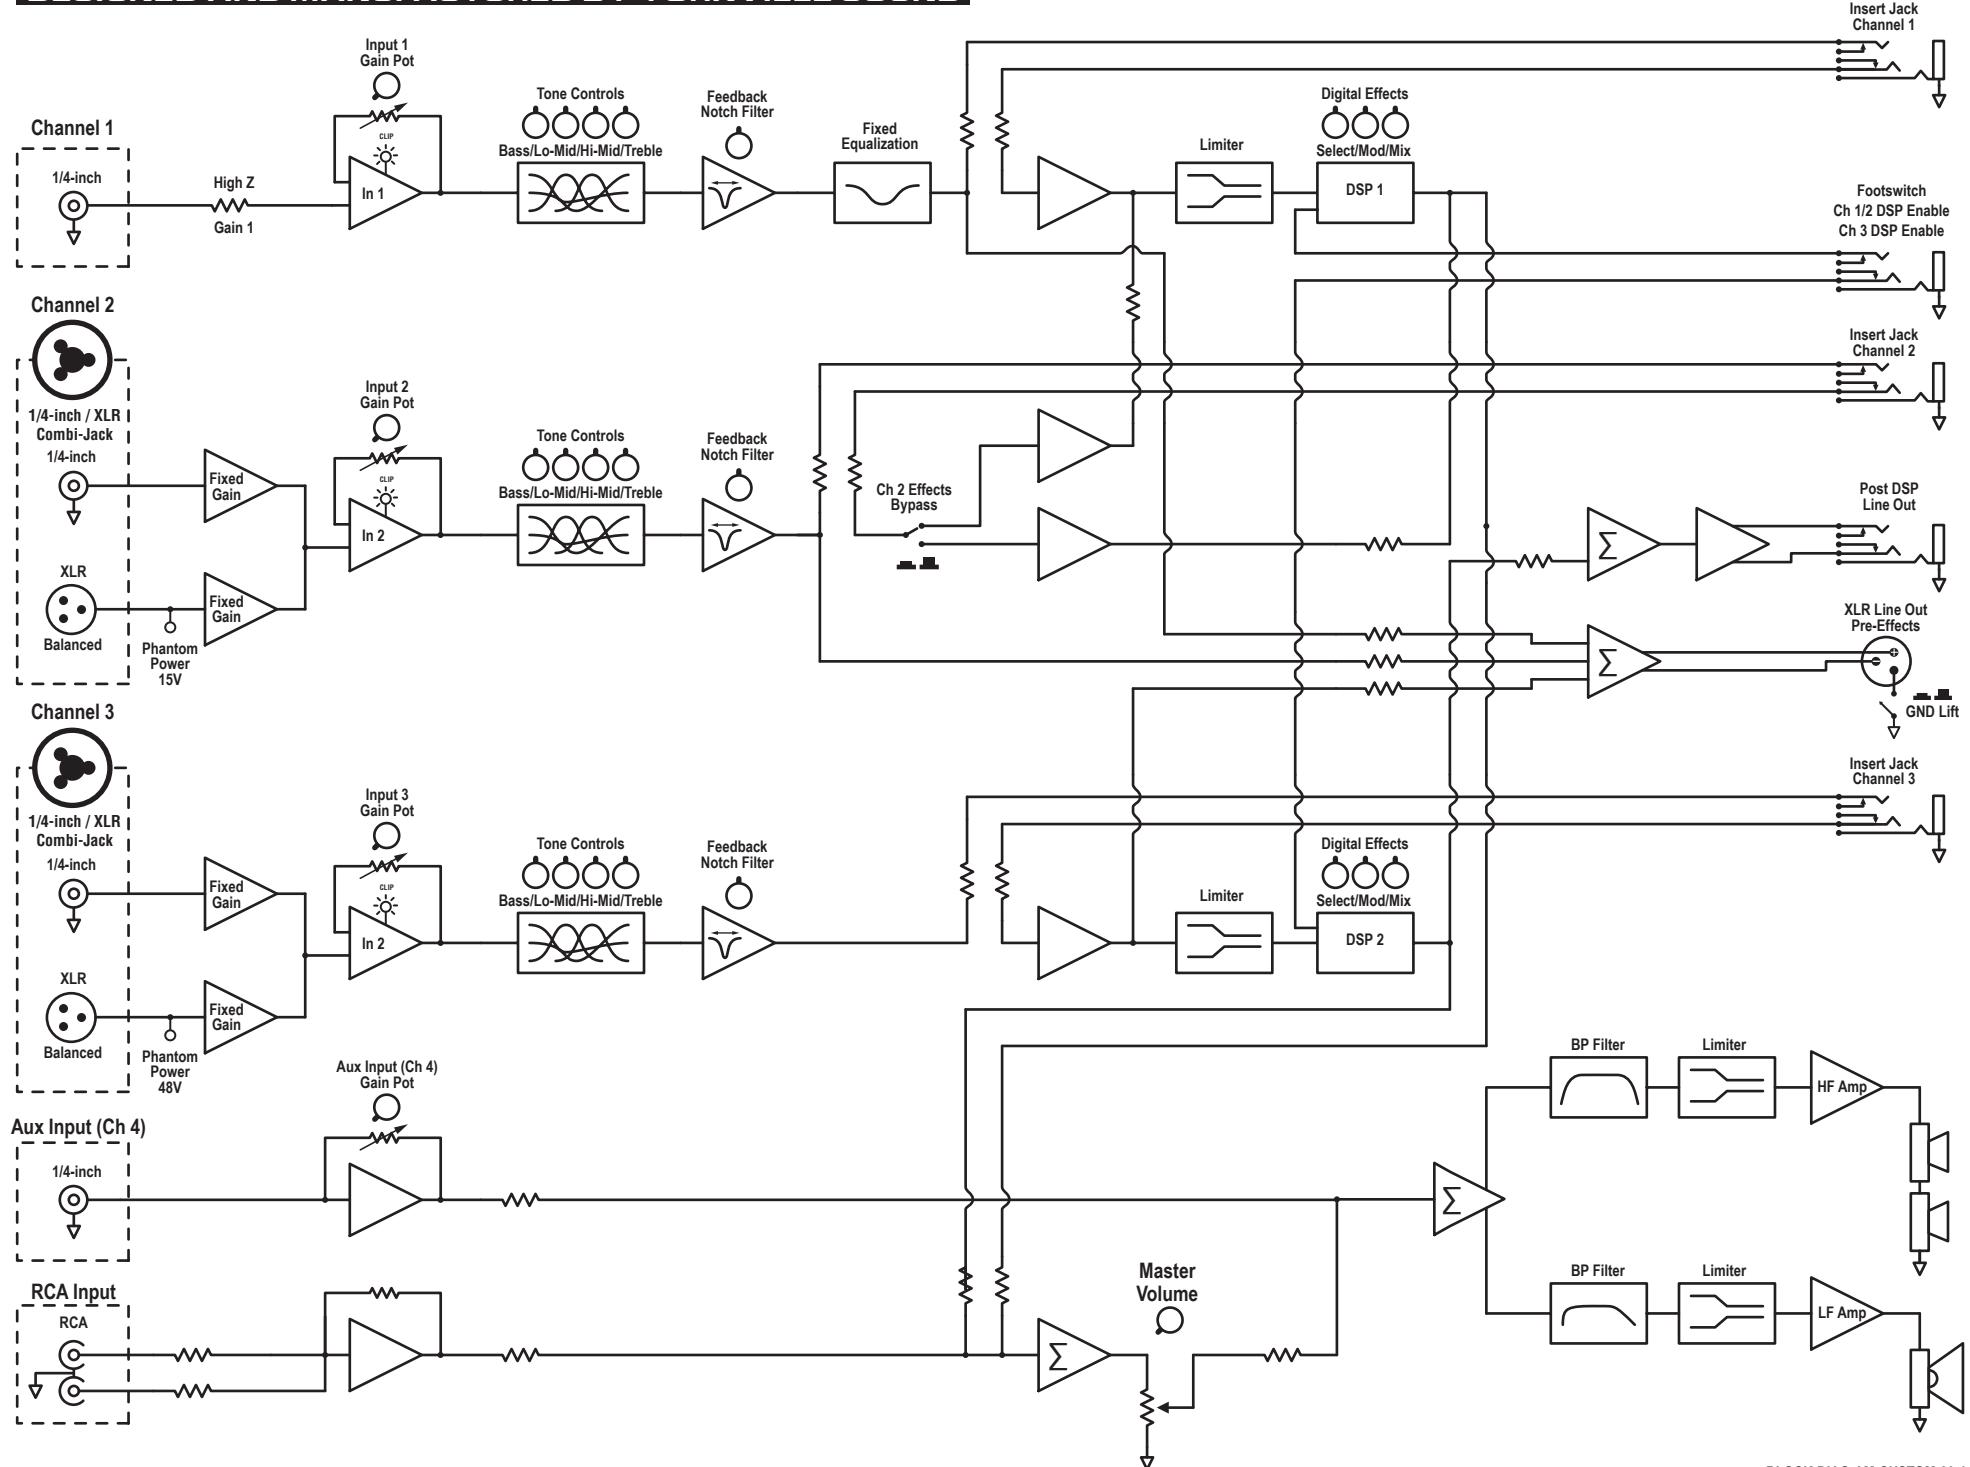

RIBBON CABLE CONNECTOR
TO M1409 PRE-AMP BOARD.

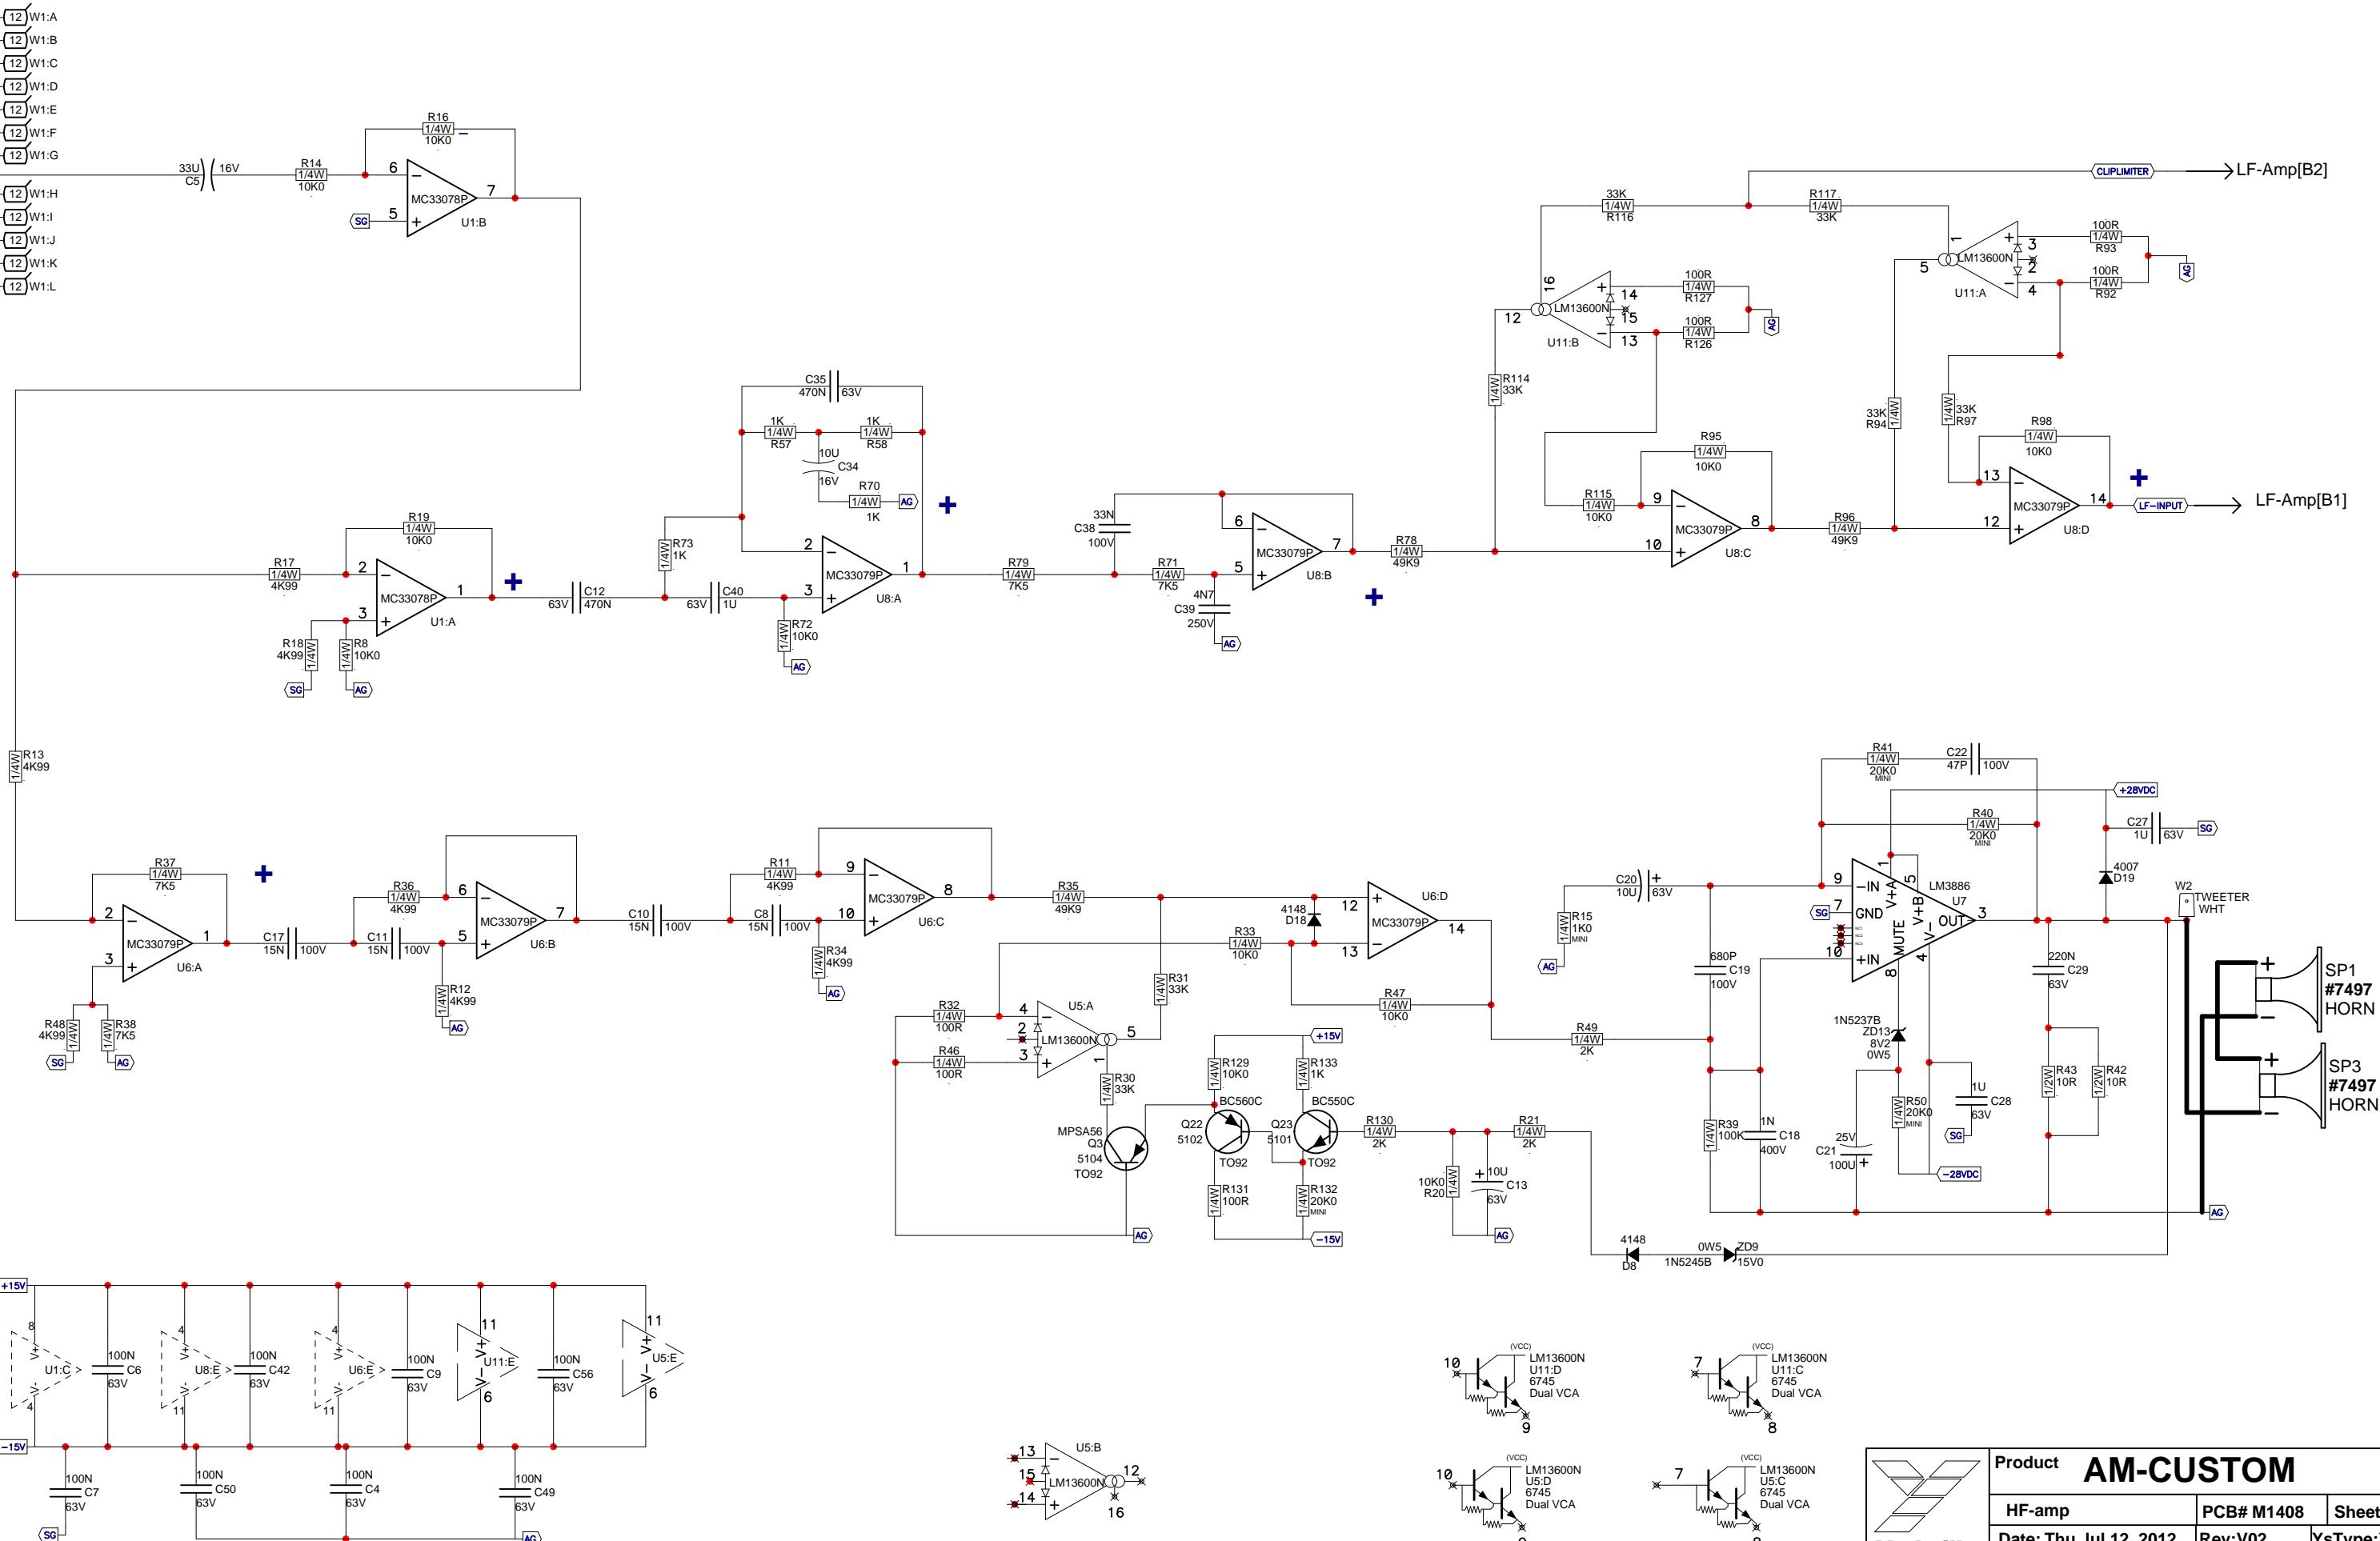



Product **AM-CUSTOM**

HF-amp PCB# M1408 Sheet 1 of 3


Date: Thu Jul 12, 2012 Rev:V02 YsType:YsType

Filename: M1408V02sch.sch2006

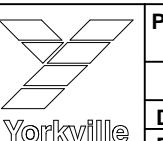


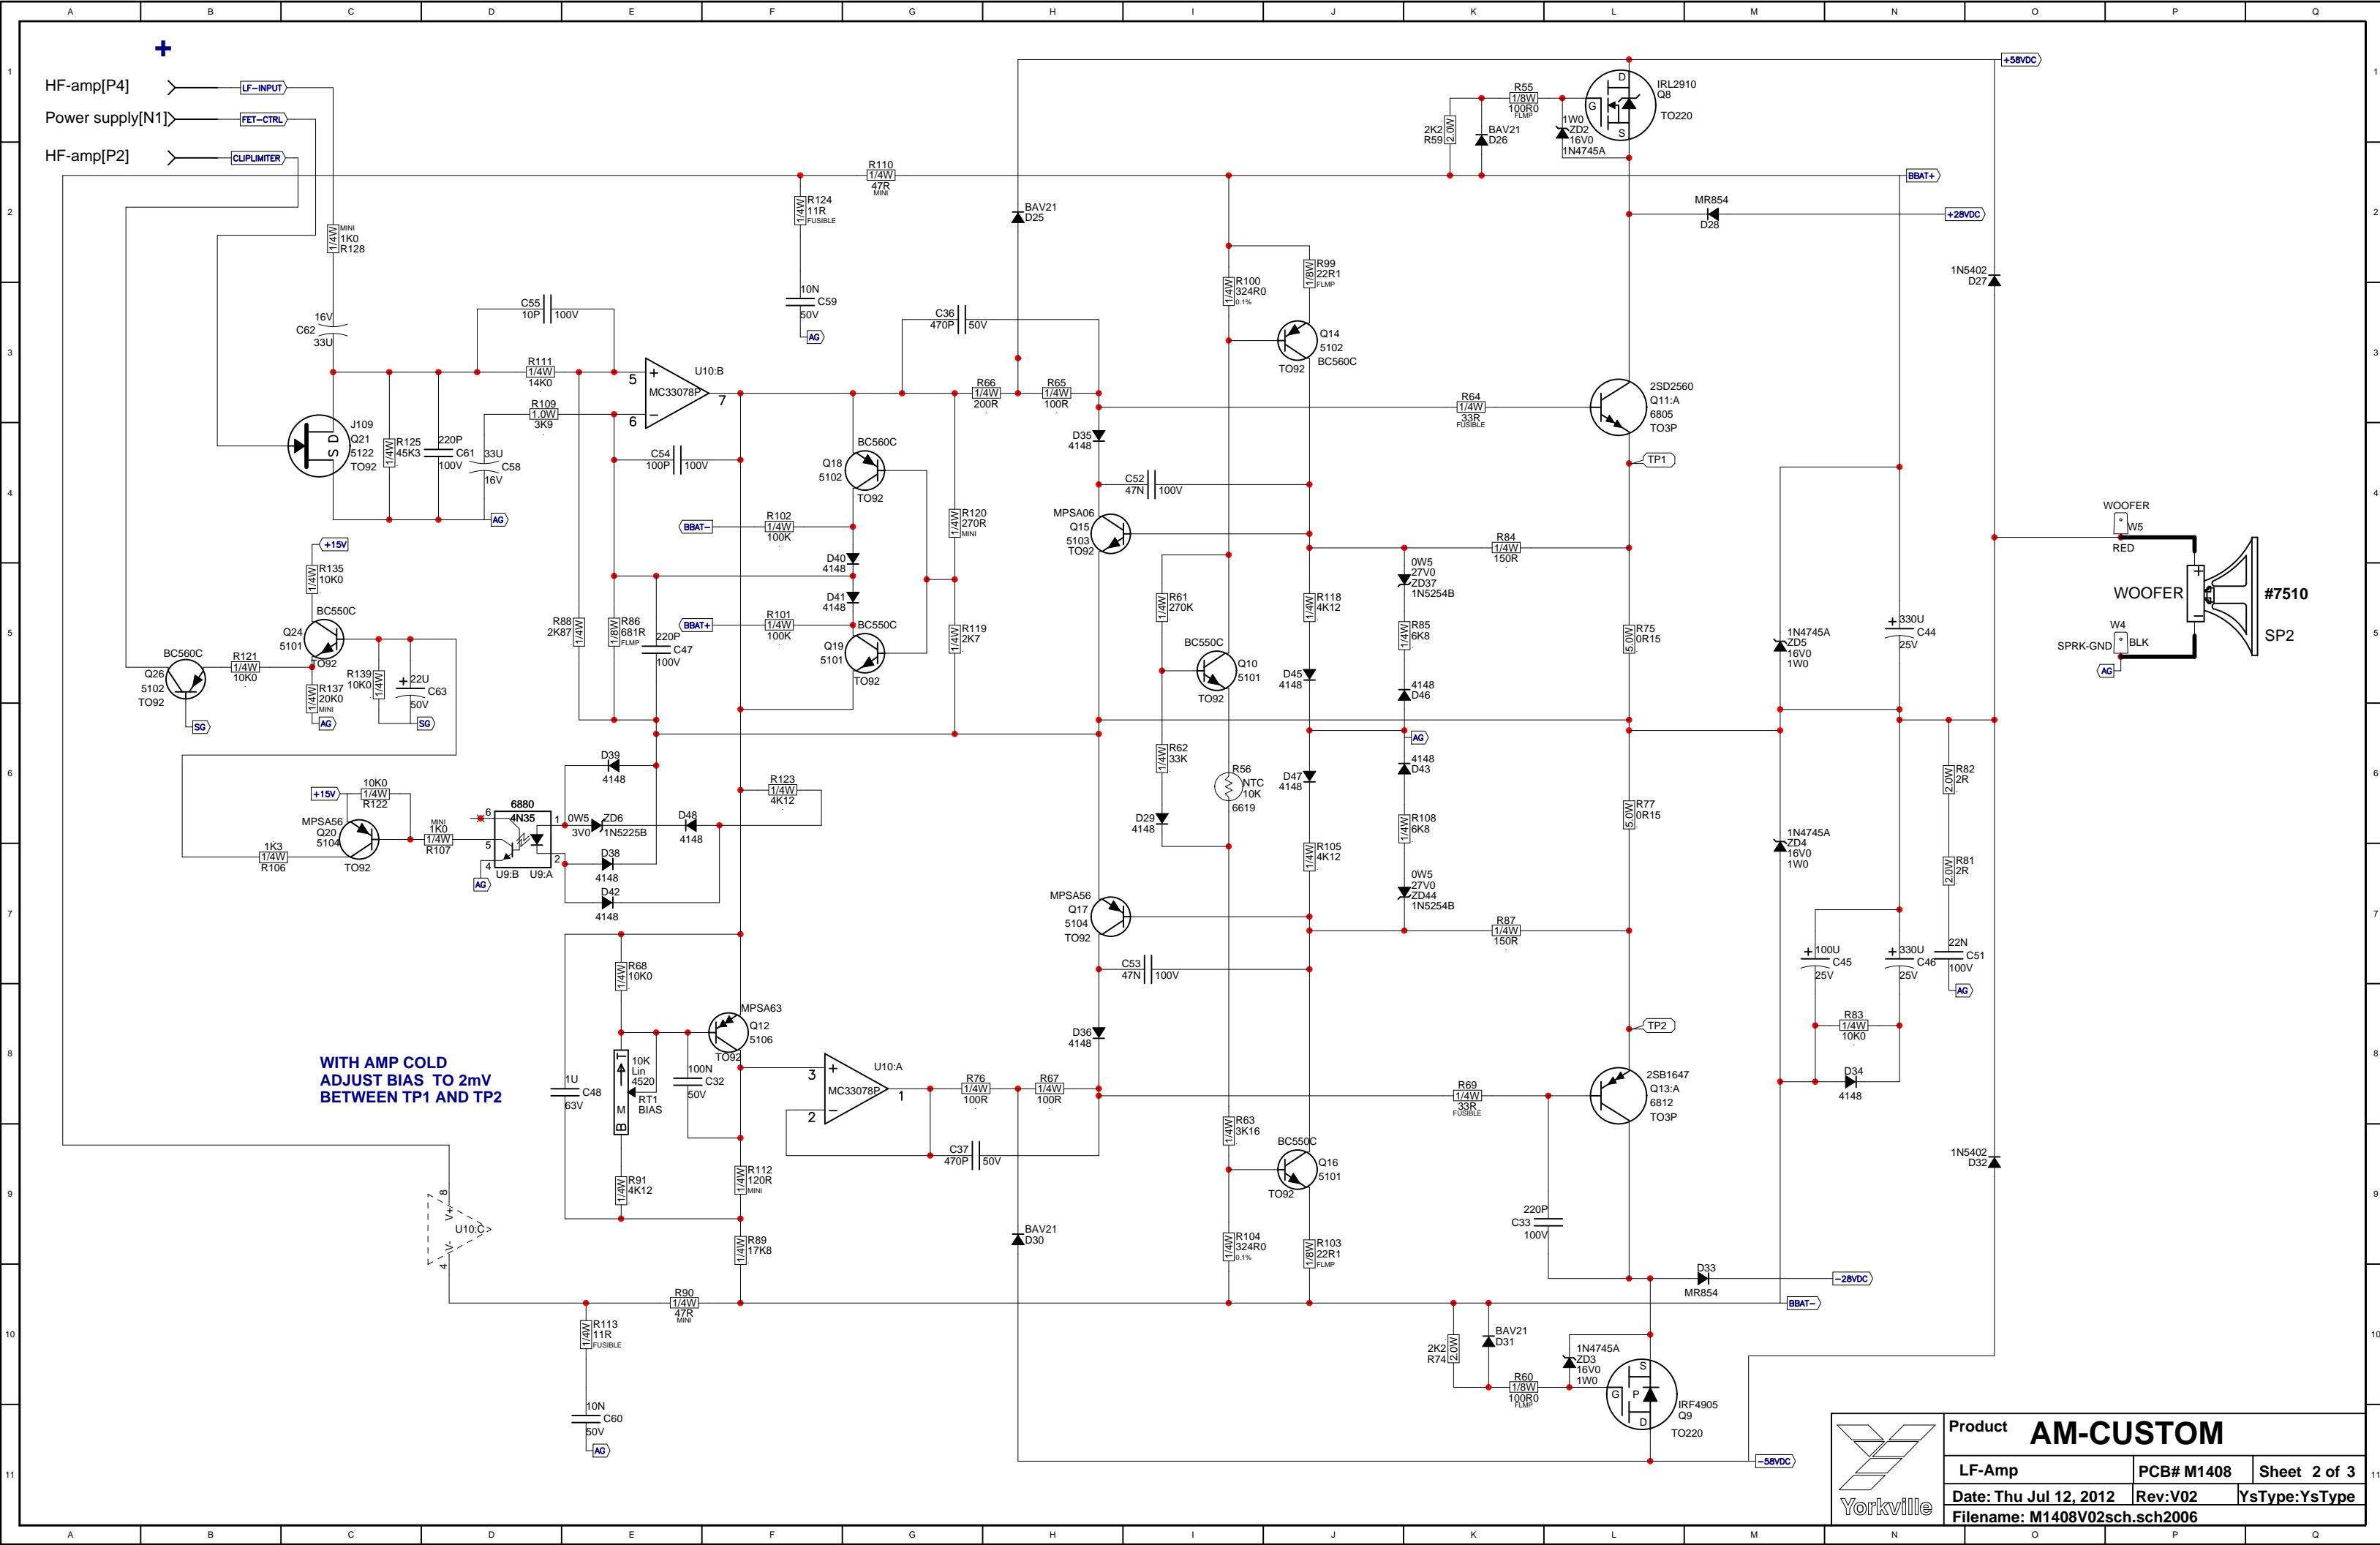




**TRANSFORMER SECONDARY
FEMALE CONNECTOR .**

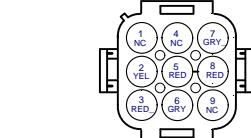

**PCB SECONDARY
MALE CONNECTOR**

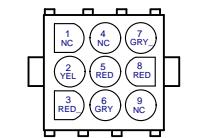



**TRANSFORMER PRIMARY
FEMALE CONNECTOR**

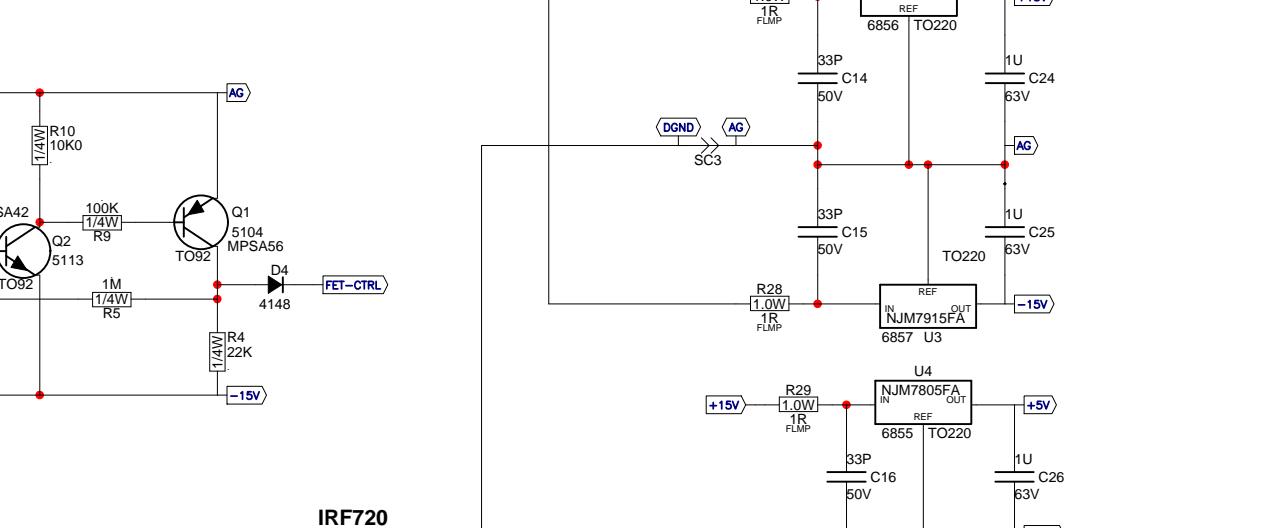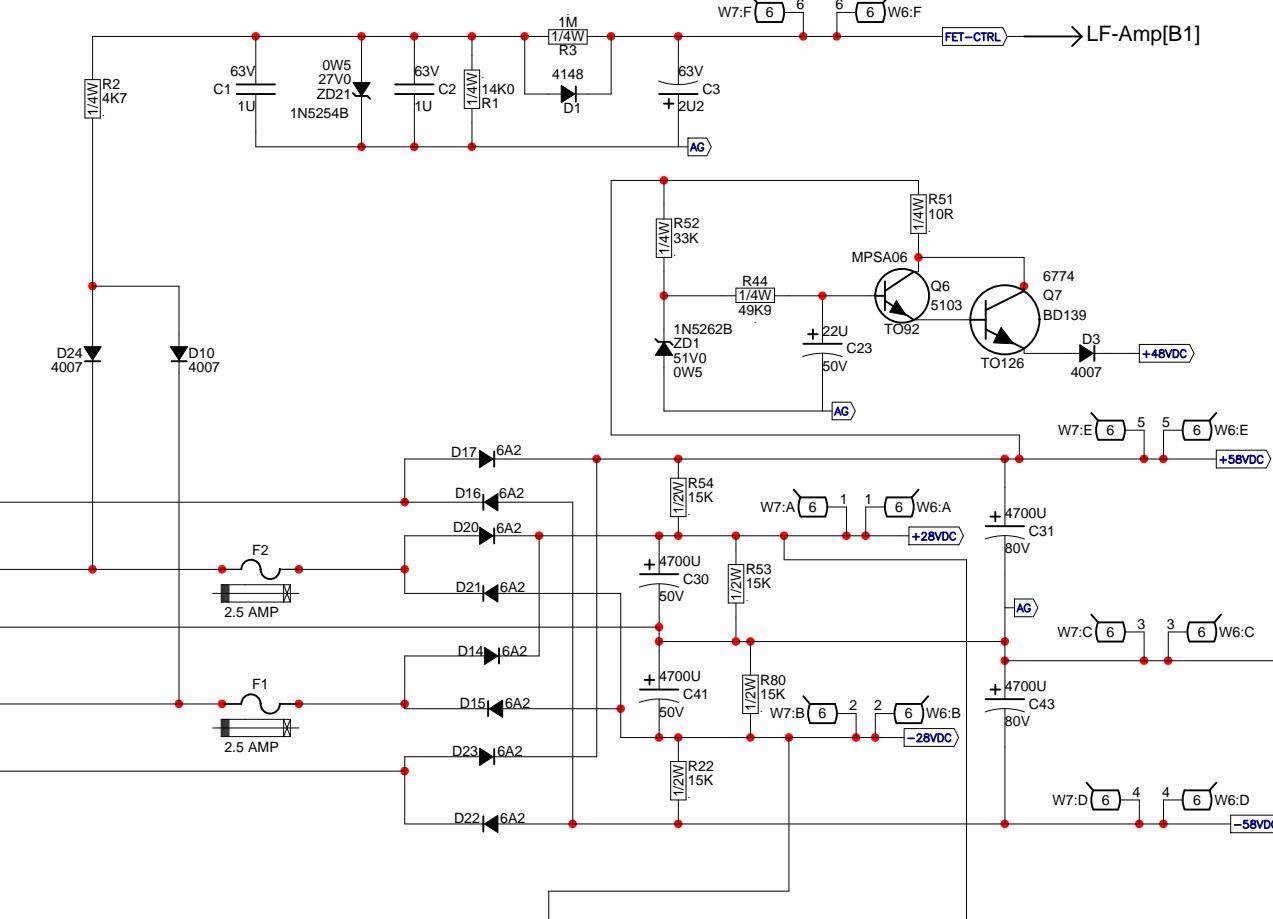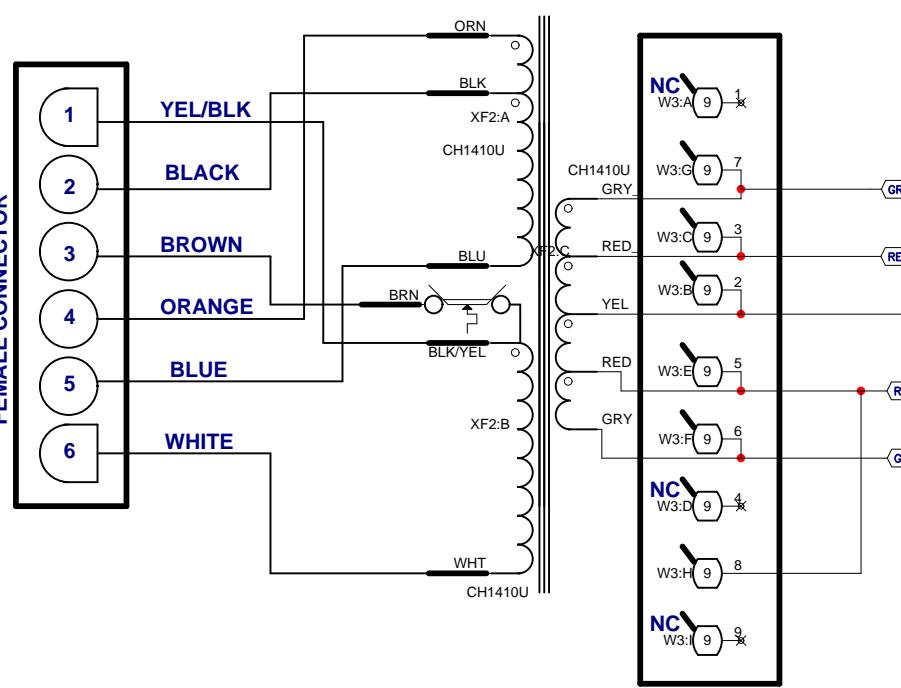


AG = AMP GROUND
IG = INPUT GROUND
SG = SIGNAL GROUND

M1408

MODEL(S):- AM-CUSTOM			
#	DATE	VER#	DESCRIPTION OF CHANGE
1	FEB-2010	V1.00	RELEASED FOR PRODUCTION
2	12-JUL-2012	V02	PC8448: #3392 improved pad
3	D	V	Change #6467 with #6619 10K NTC GG
4	D	V	
5	D	N	
6	D	V	
7	D	N	
8	D	V	
9	D	N	
10	D	N	
11	D	V	
12	D	V	
13	D	N	

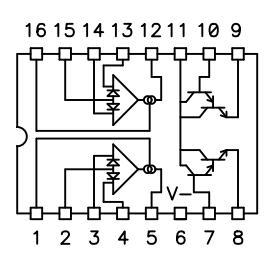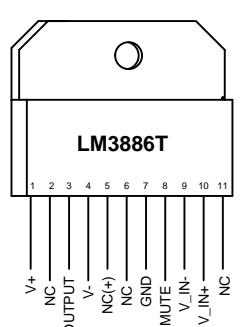

6745_PC

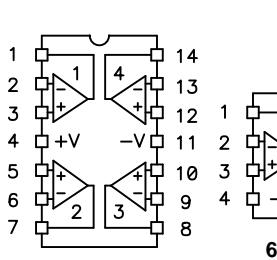

6804_PC

IRF720

IRF822

IRF830

IRF4905

IRF5210

IRL2910

MTP2P50E

MTP8P20

MTP10N15

MTP12P10

MTP23P06

BD139 BD237 BD238 MJE340 MPSA06

BD238 MJE350 MPSA13

MPSA43

MJE271 MPSA43

MPSA270 MPSA56

BD140 MPSA63

BC550C

J109

BC560C

2N5638

2N5401

2N5551

MPSA06

MPSA13

MPSA43

MJE271

MPSA43

MPSA270

MPSA56

BD140 MPSA63

E B C

G D S

E C B

TO-92

TO-92

TO-92

TO-92


D S G

C B E

SC1

SC2

SG

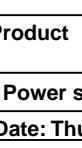

Product **AM-CUSTOM**

Power supply PCB# M1408 Sheet 3 of 3


Date: Thu Jul 12, 2012 Rev:V02 YsType:YsType

Filename: M1408V02sch.sch2006

BlankSize - 13000x8000

Top Assy M1408V02

BlankSize - 13000x8000

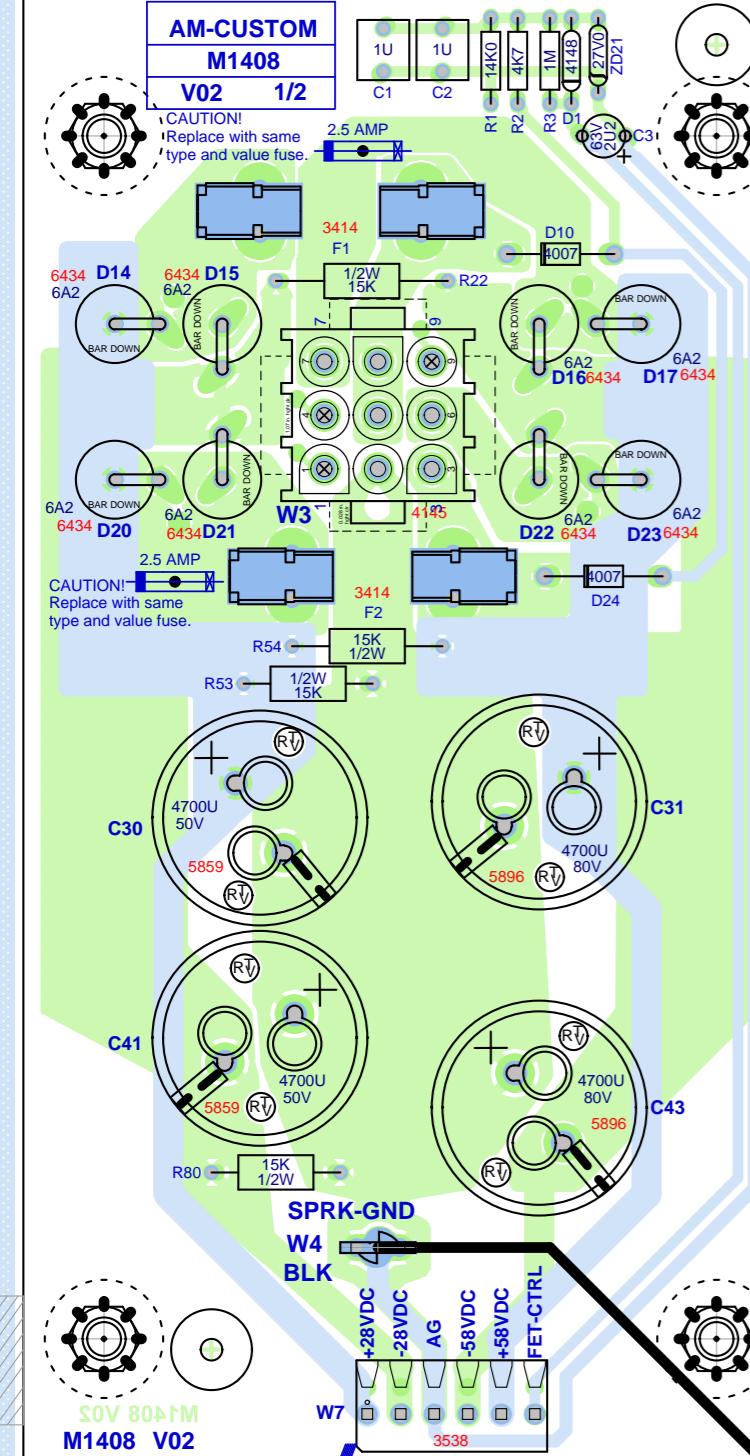


M1408 V02

CLINCH
ORIGIN




Into Wave

Pcb Mech M1408V02

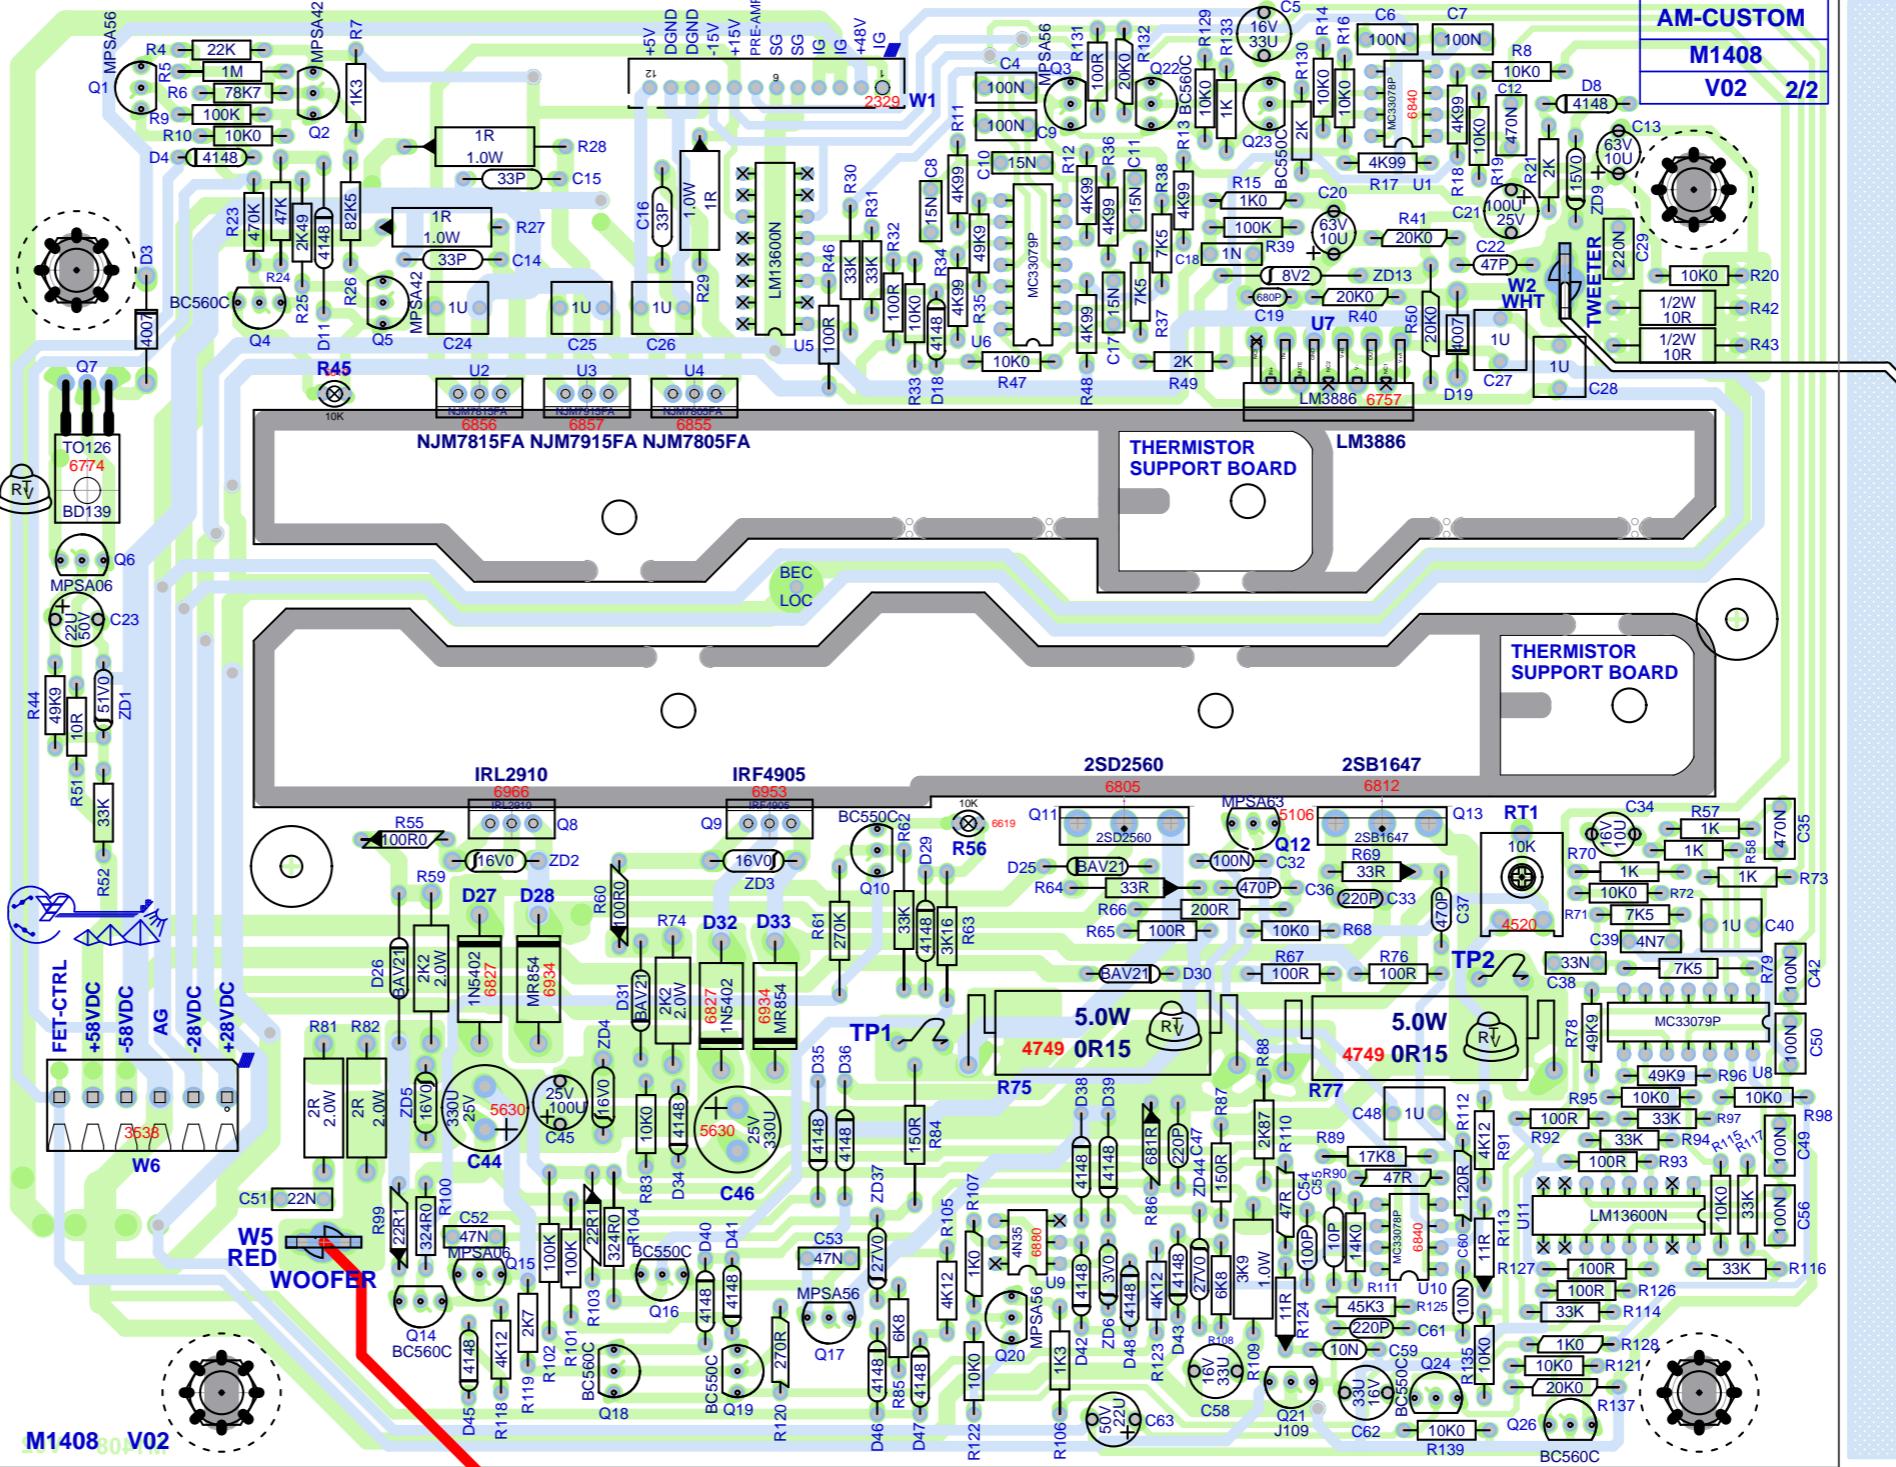

SEE LAYOUT DOCUMENTATION

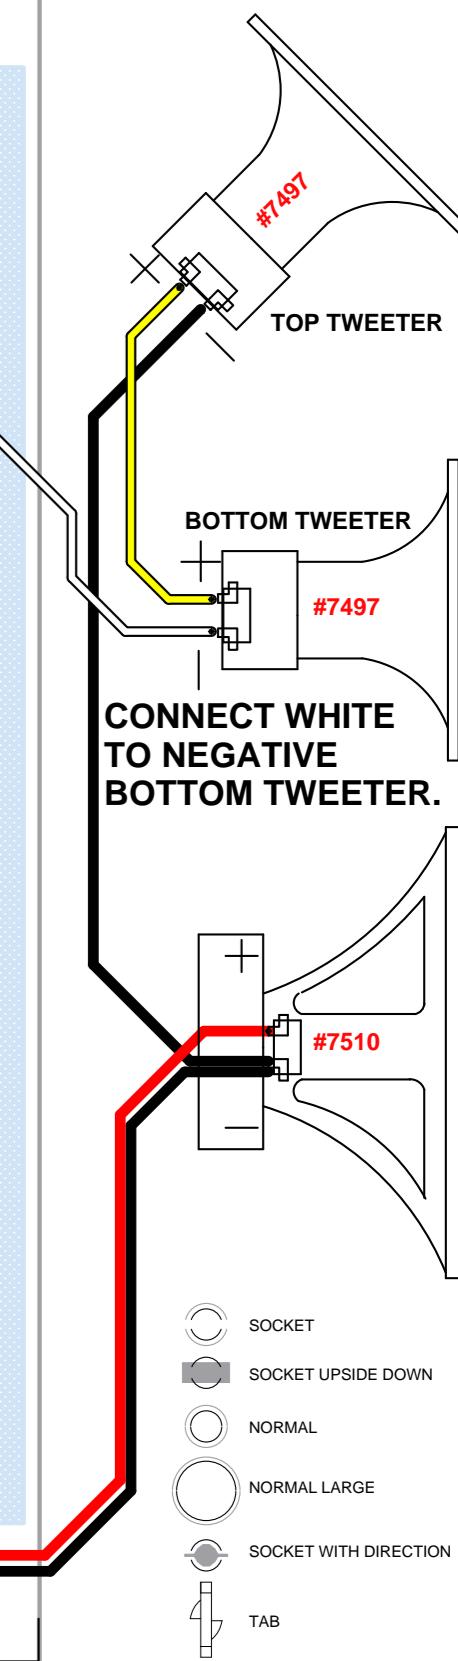

#7497

TOP TWEETER

BOTTOM TWEETER

#7497





CONNECT WHITE
TO NEGATIVE
BOTTOM TWEETER.

- SOCKET
- SOCKET UPSIDE DOWN
- NORMAL
- NORMAL LARGE
- SOCKET WITH DIRECTION
- TAB

M1408

MODEL(S):- AM-CUSTOM

#	DATE	VER#	DESCRIPTION OF CHANGE
1	FEB-2010	V1.00	RELEASED FOR PRODUCTION
2	12-JUL-2012	V02	PC8448: #3392 improved pad
3	D	V	Change #6467 with #6619 10K NTC
4	D	V	GG
5	D	N	GG
6	D	V	
7	D	V	
8	D	V	
9	D	V	
10	D	V	
11	D	N	
12	D	V	
13	D	V	

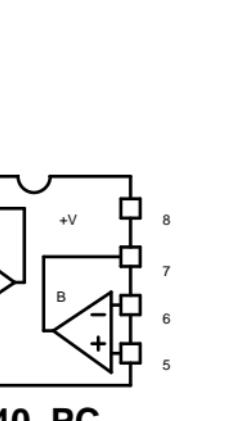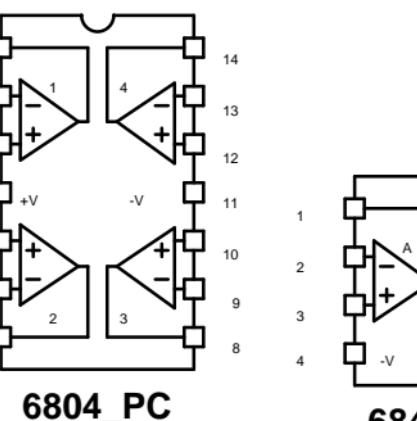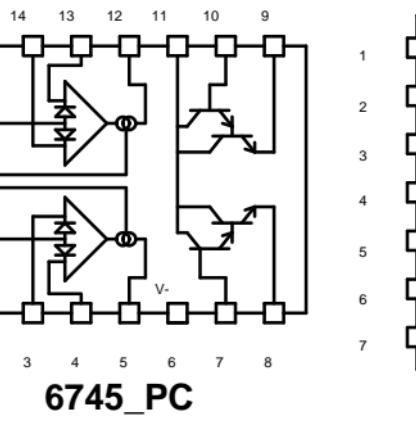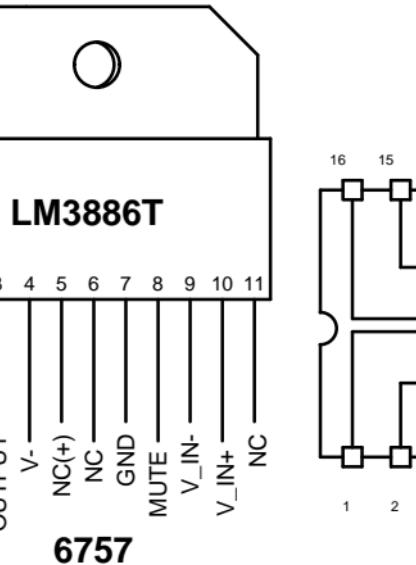

IRF720
IRF822
IRF830
IRF4905
IRF5210
IRL2910
MTP2P50E
MTP8P20
MTP10N15L
MTP12P10
MTP23P06

BD139
BD237
BD238
2N5401
2N5551
MJE340
MJE350
MPSA06
MPSA13
MJE271
MJE270
BC550C
BC560C

J109
2N5638
E B C
TO-92

C B E
TO-92
D S G
TO-92





SEE LAYOUT DIAGRAM





M1408 PRODUCTION NOTES



- Q12 , R45 , R56 ARE HAND INSERTED.
- USE #8607 SPACER TO MOUNT Q12 ,R45 , R56 .
- USE #3833 SPACER TO MOUNT Q11 AND Q13.
- BEND FLAT Q7 AND RTV.

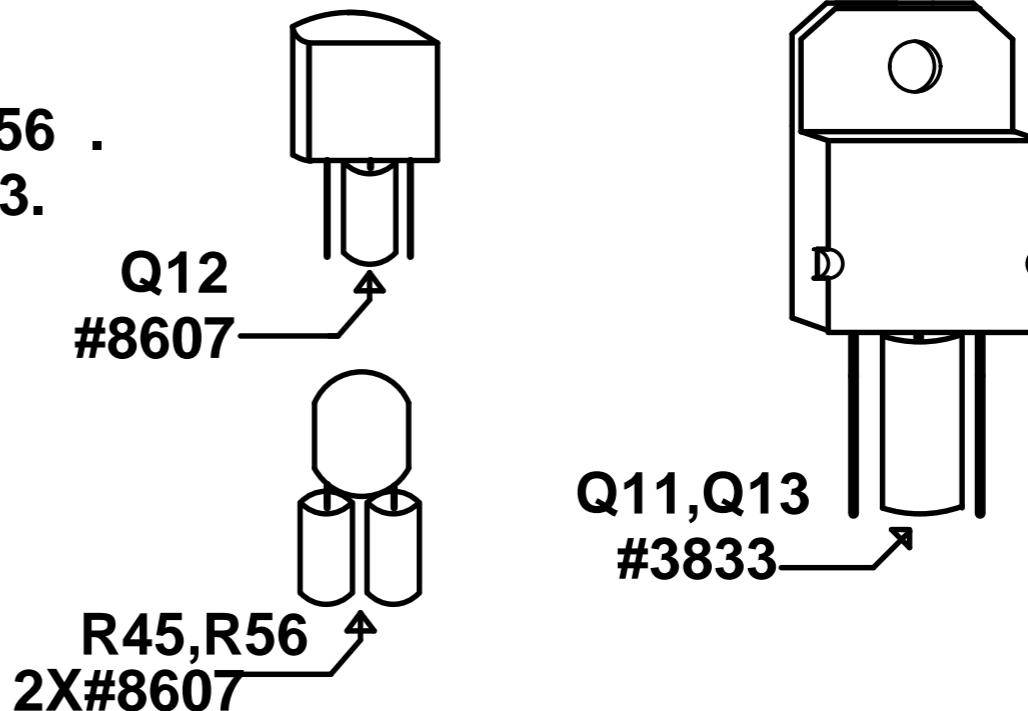

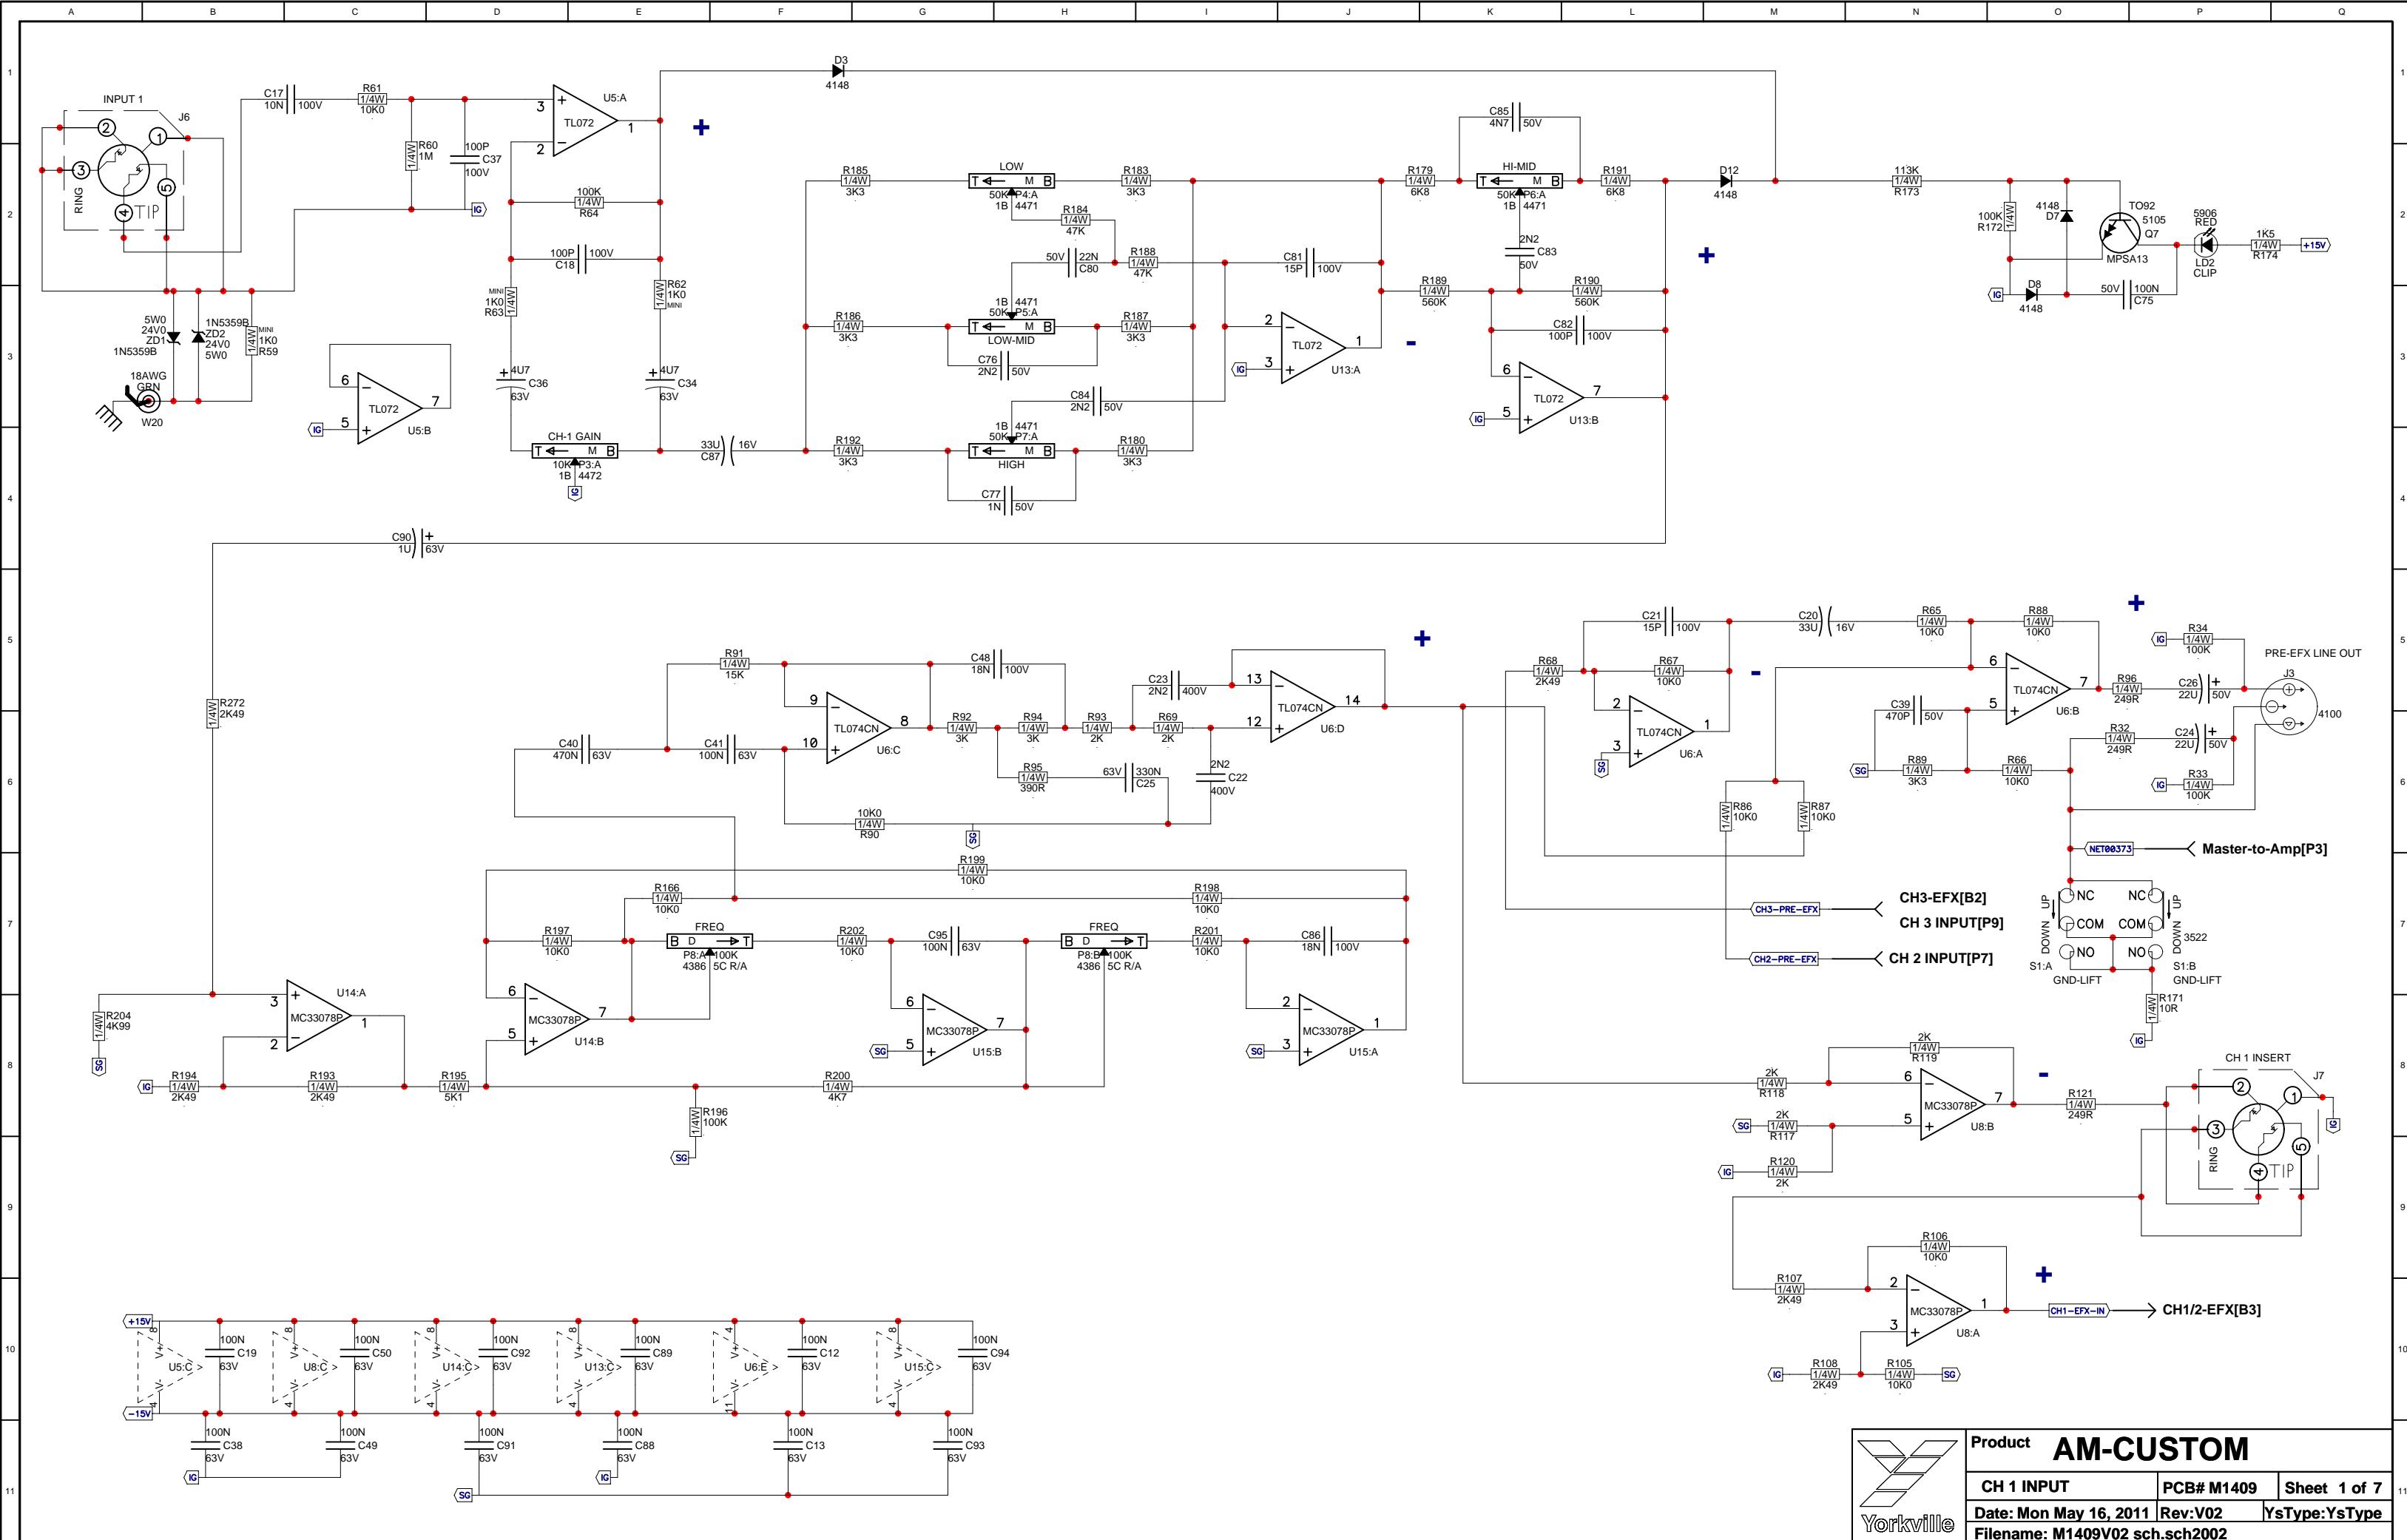

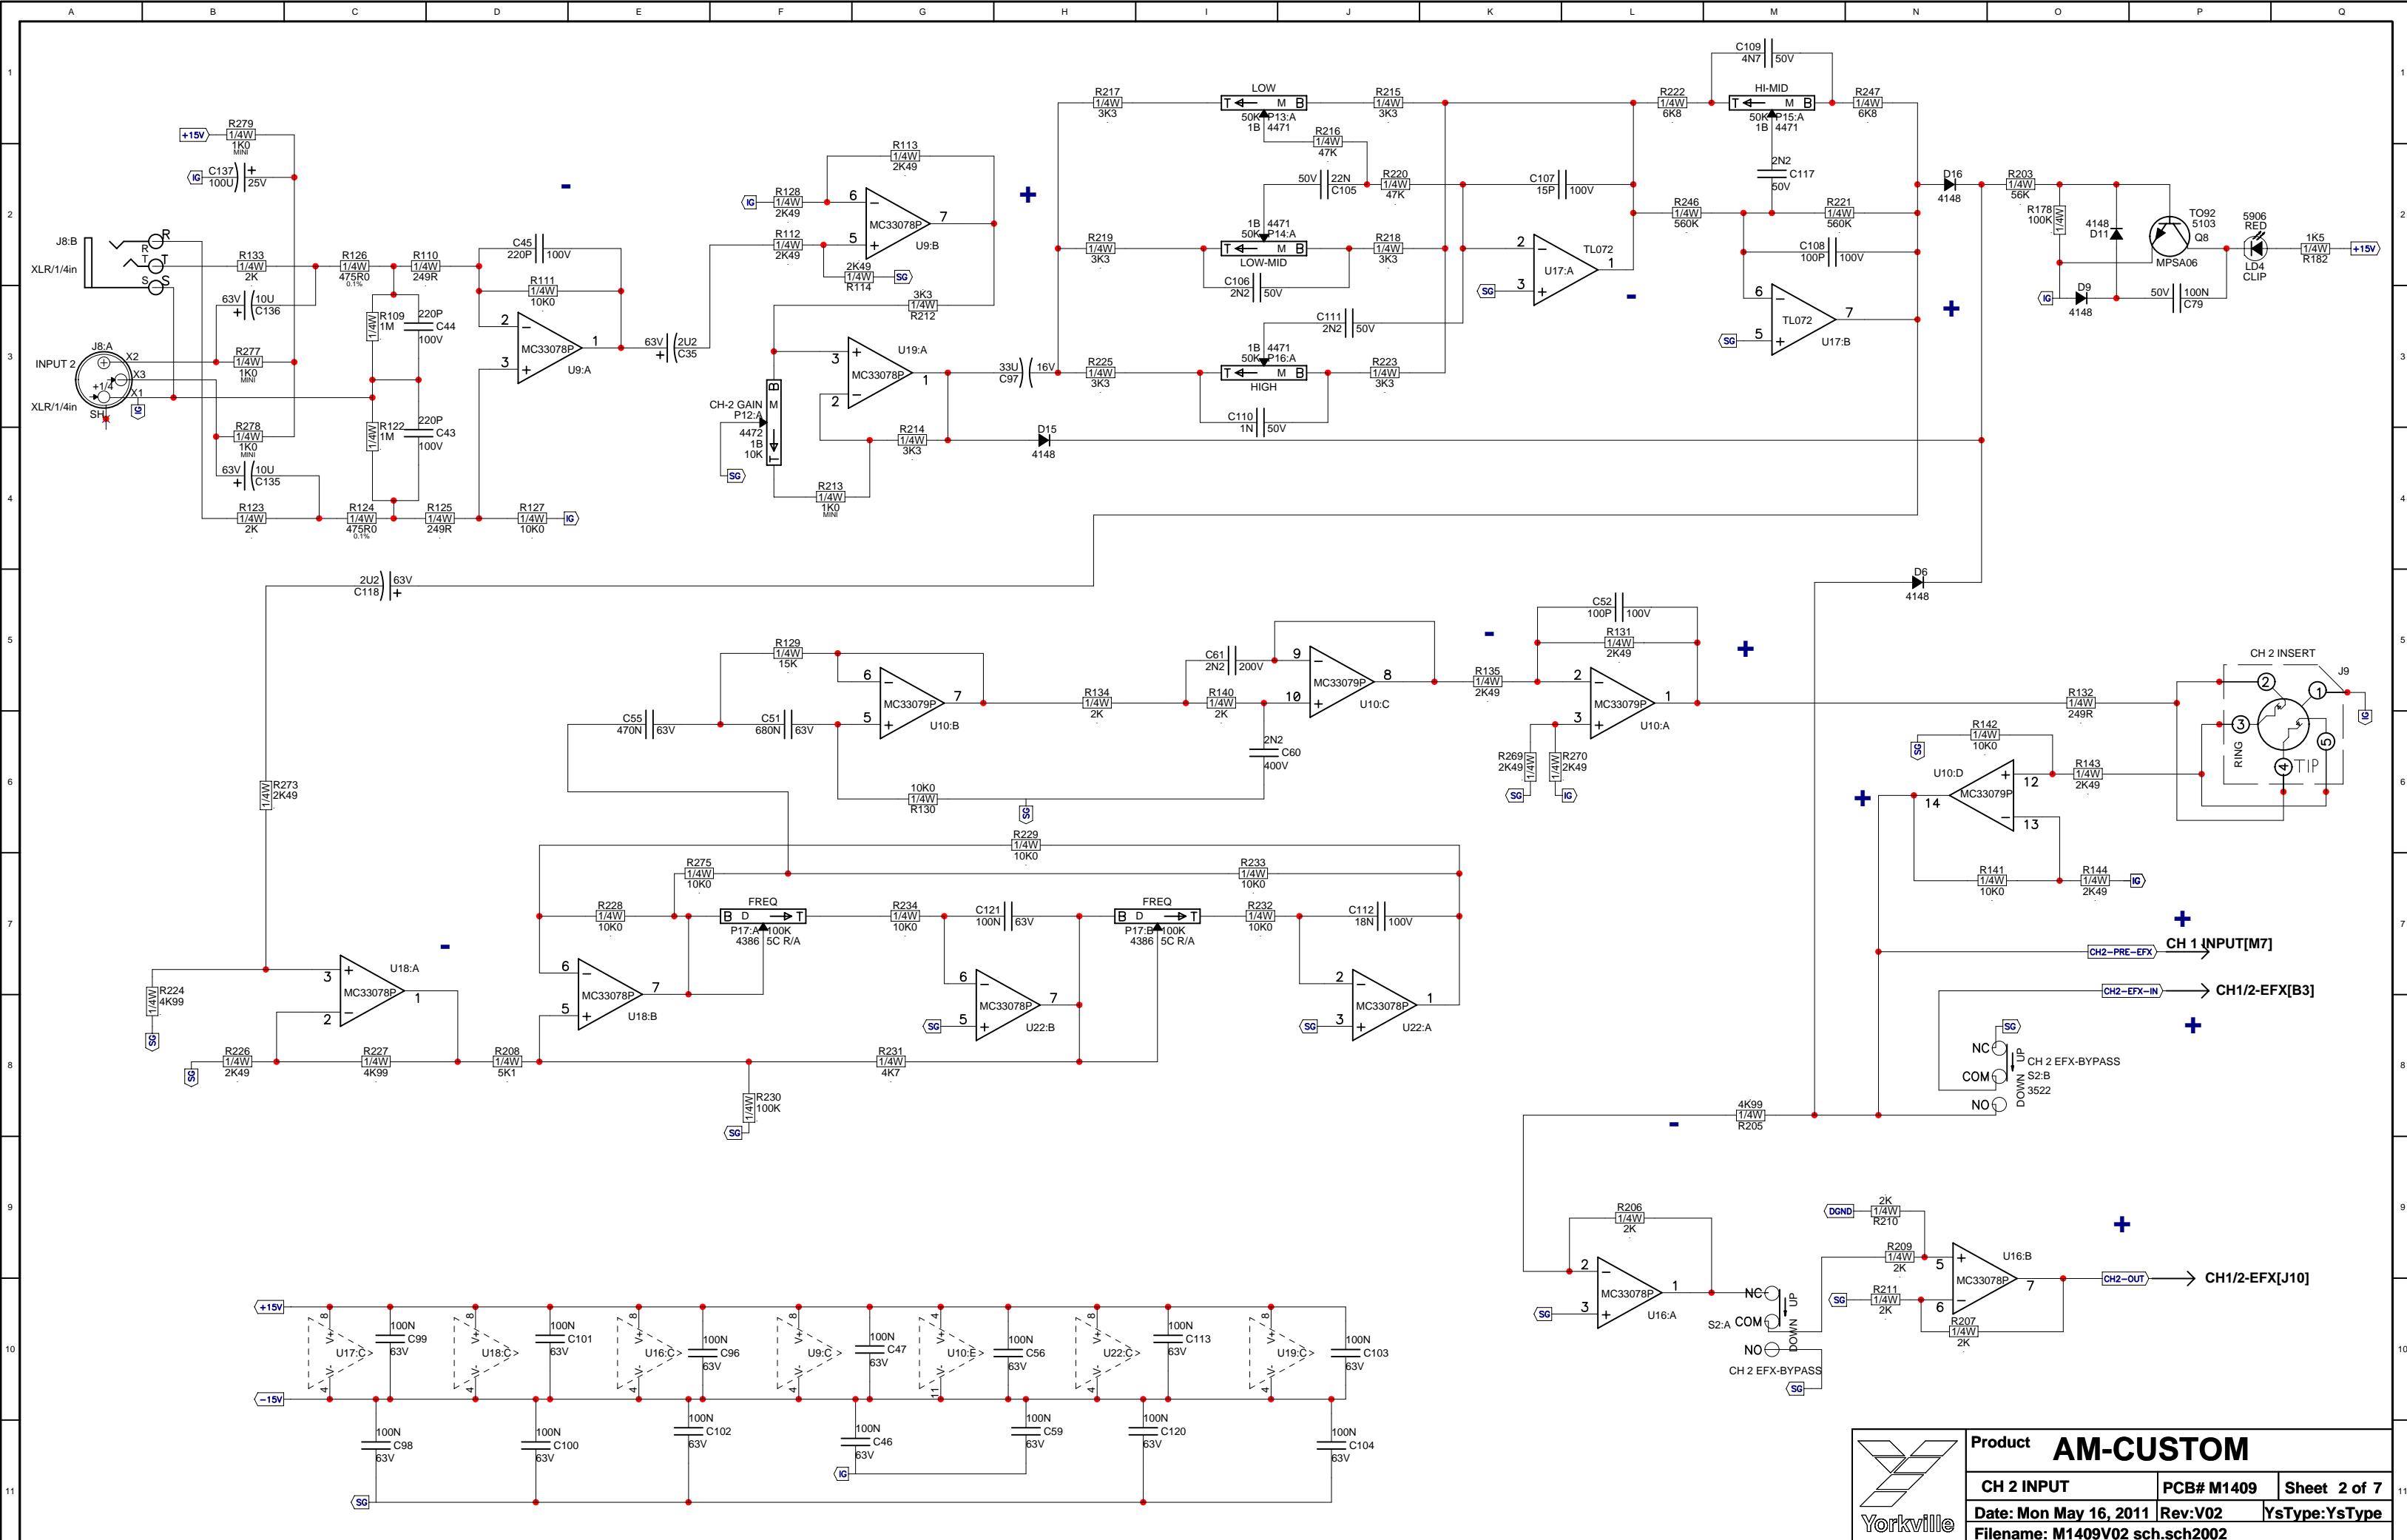

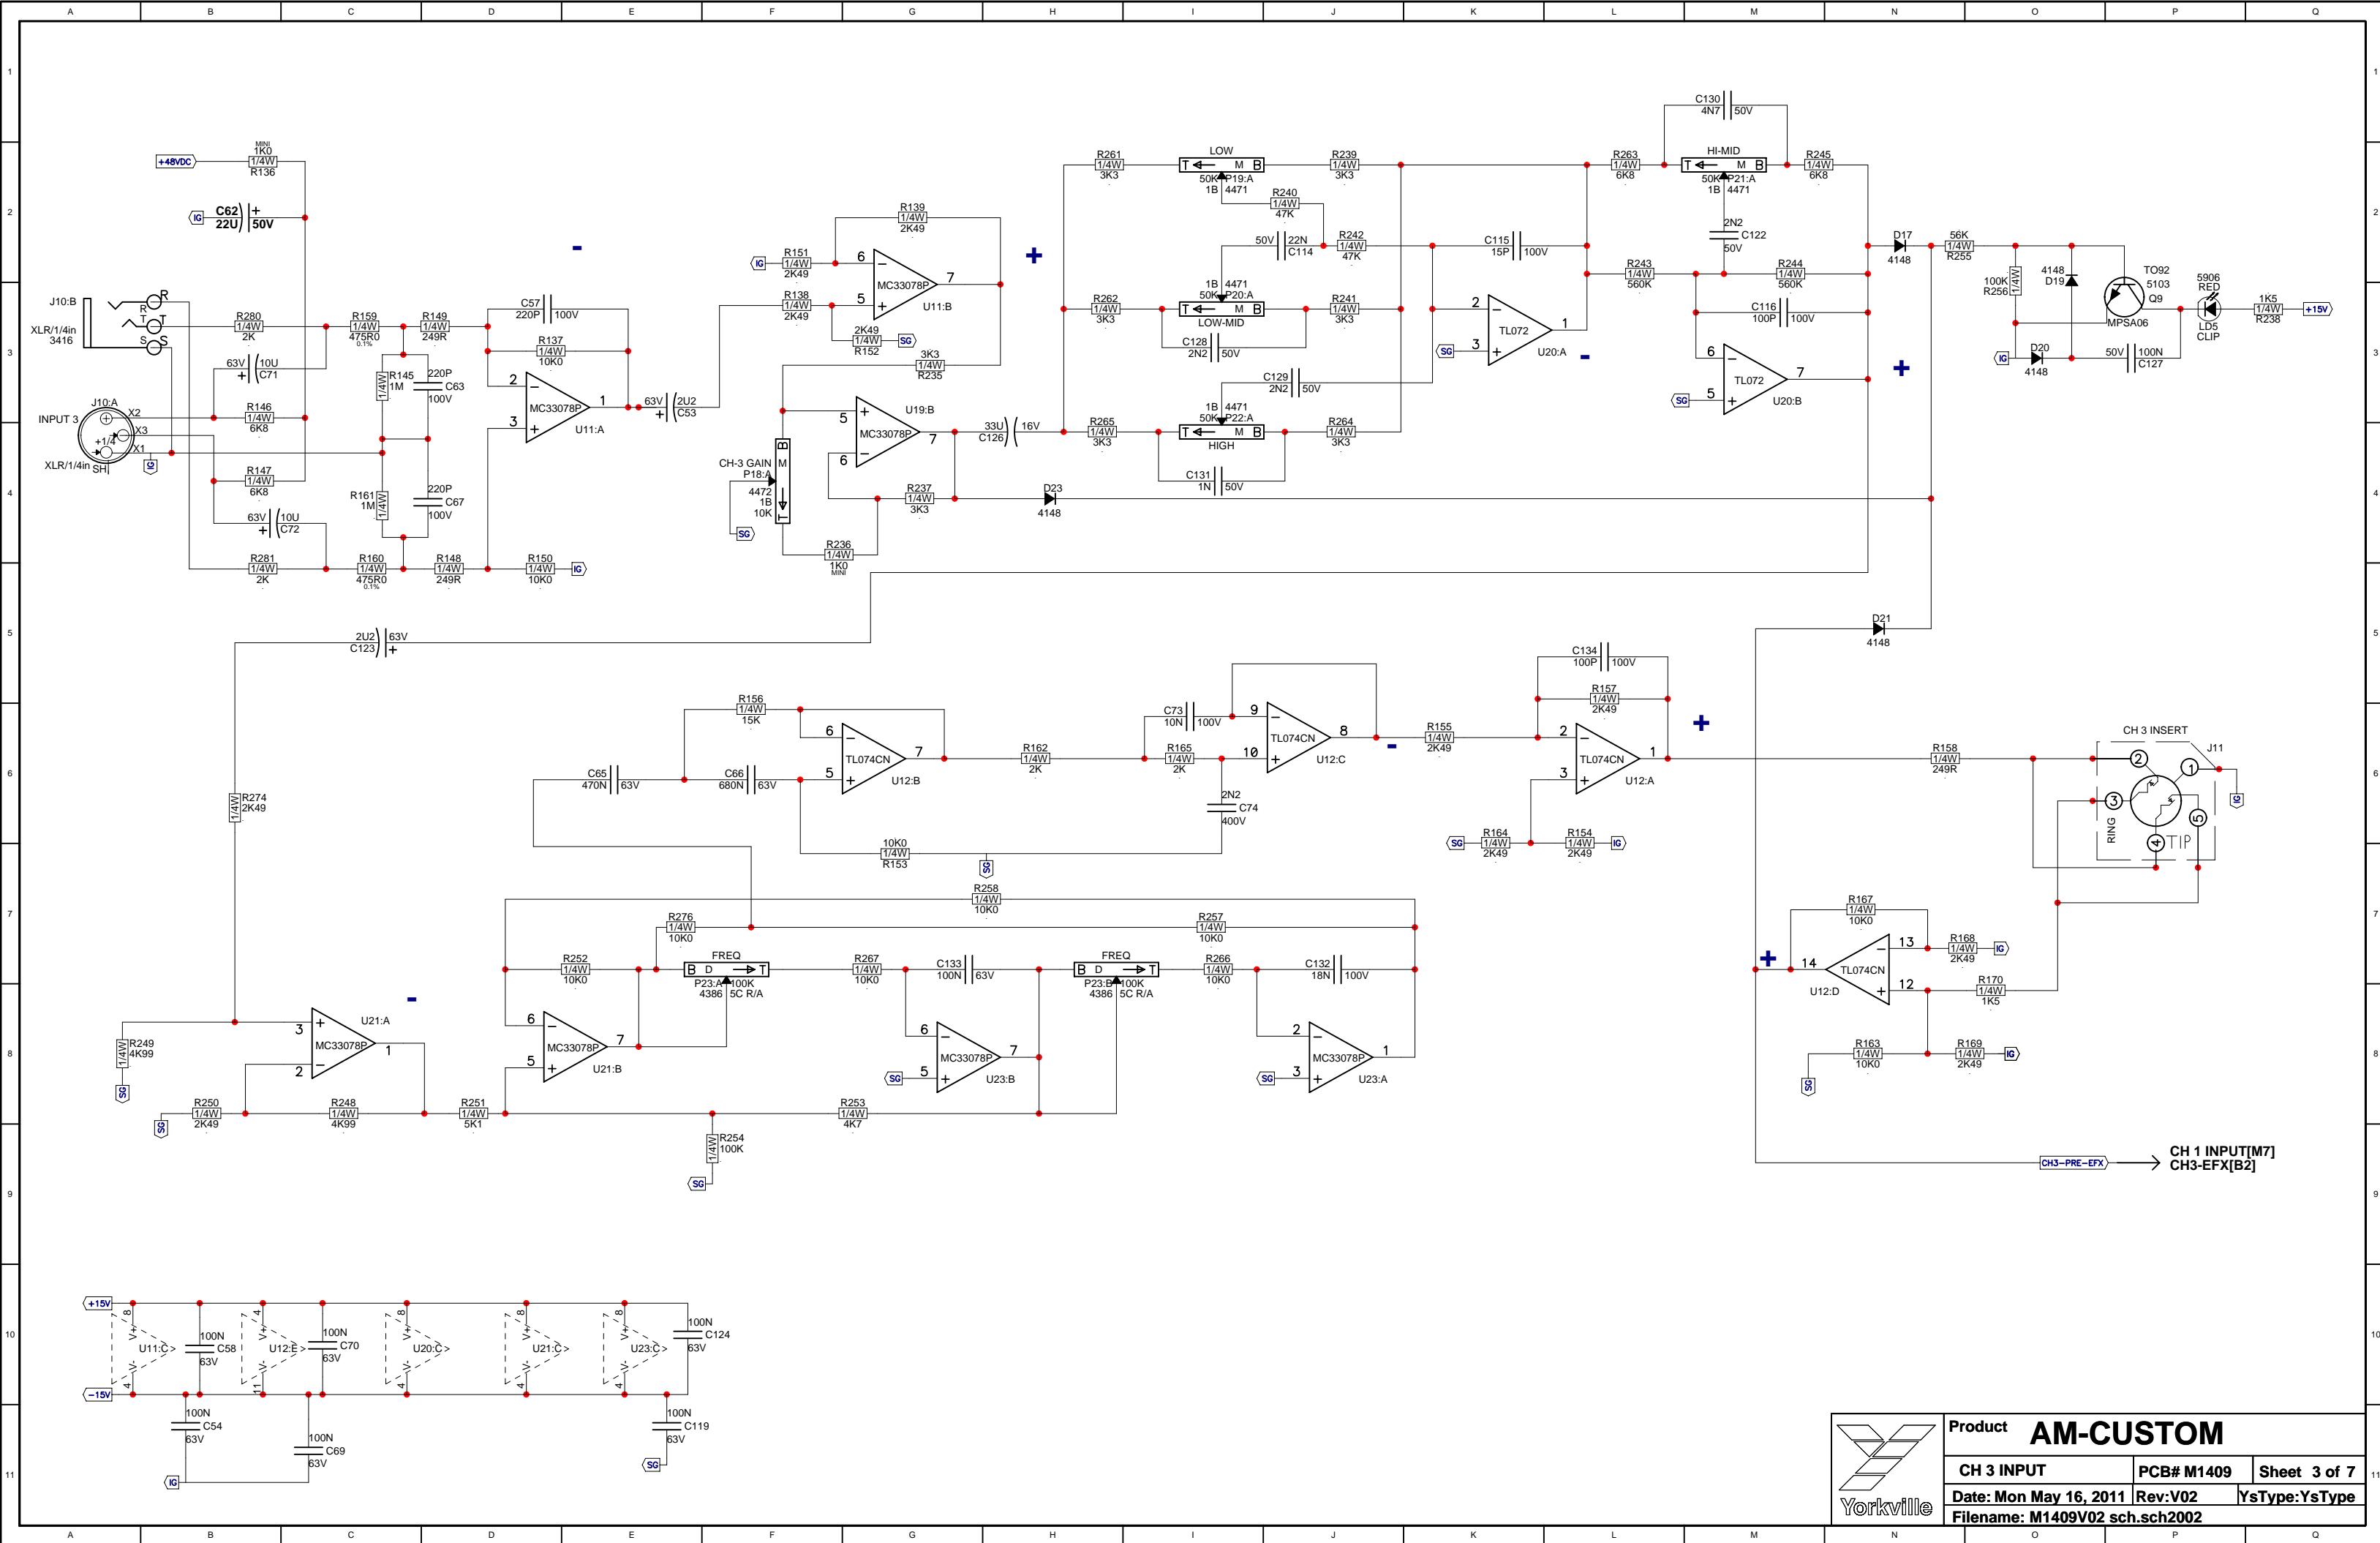

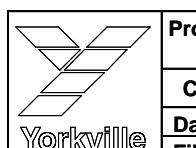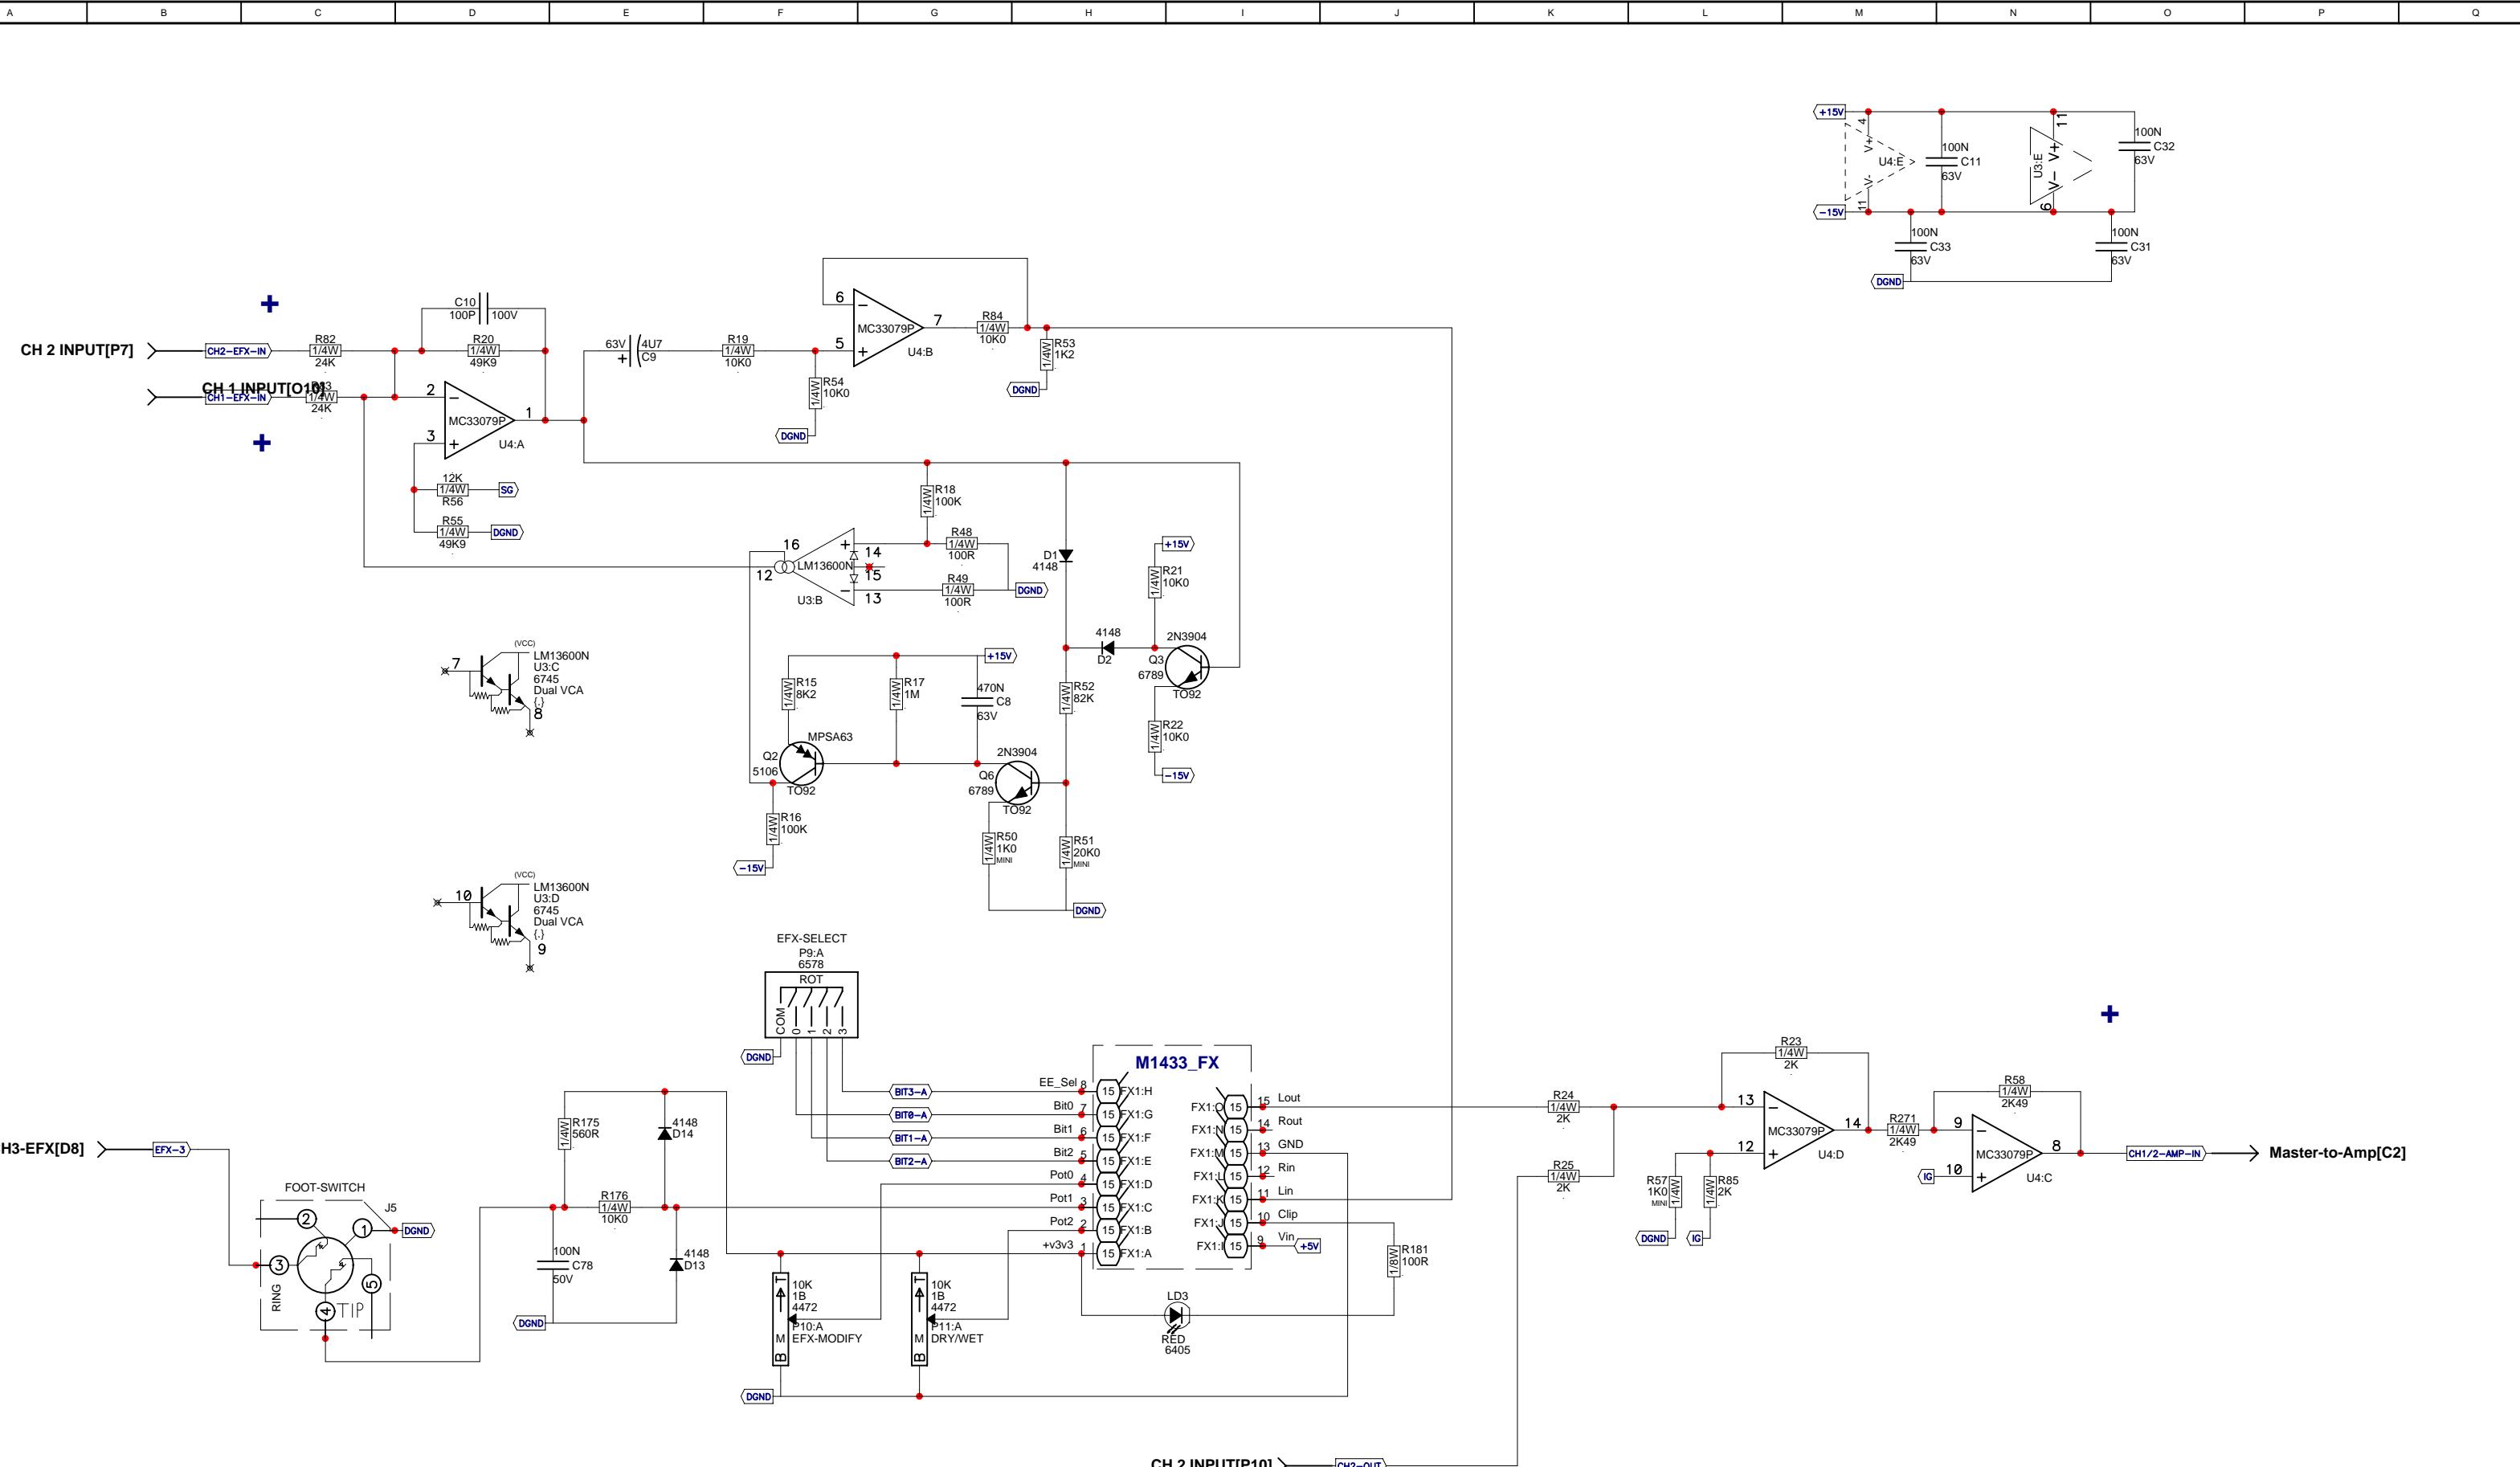



Product **AM-CUSTOM**


CH1/2-EFX	PCB# M1409	Sheet 4 of 7
-----------	------------	--------------

Date: Mon May 16, 2011	Rev: V02	YsType: YsType
------------------------	----------	----------------

Filename: M1409V02.sch	sch	sch2002
------------------------	-----	---------

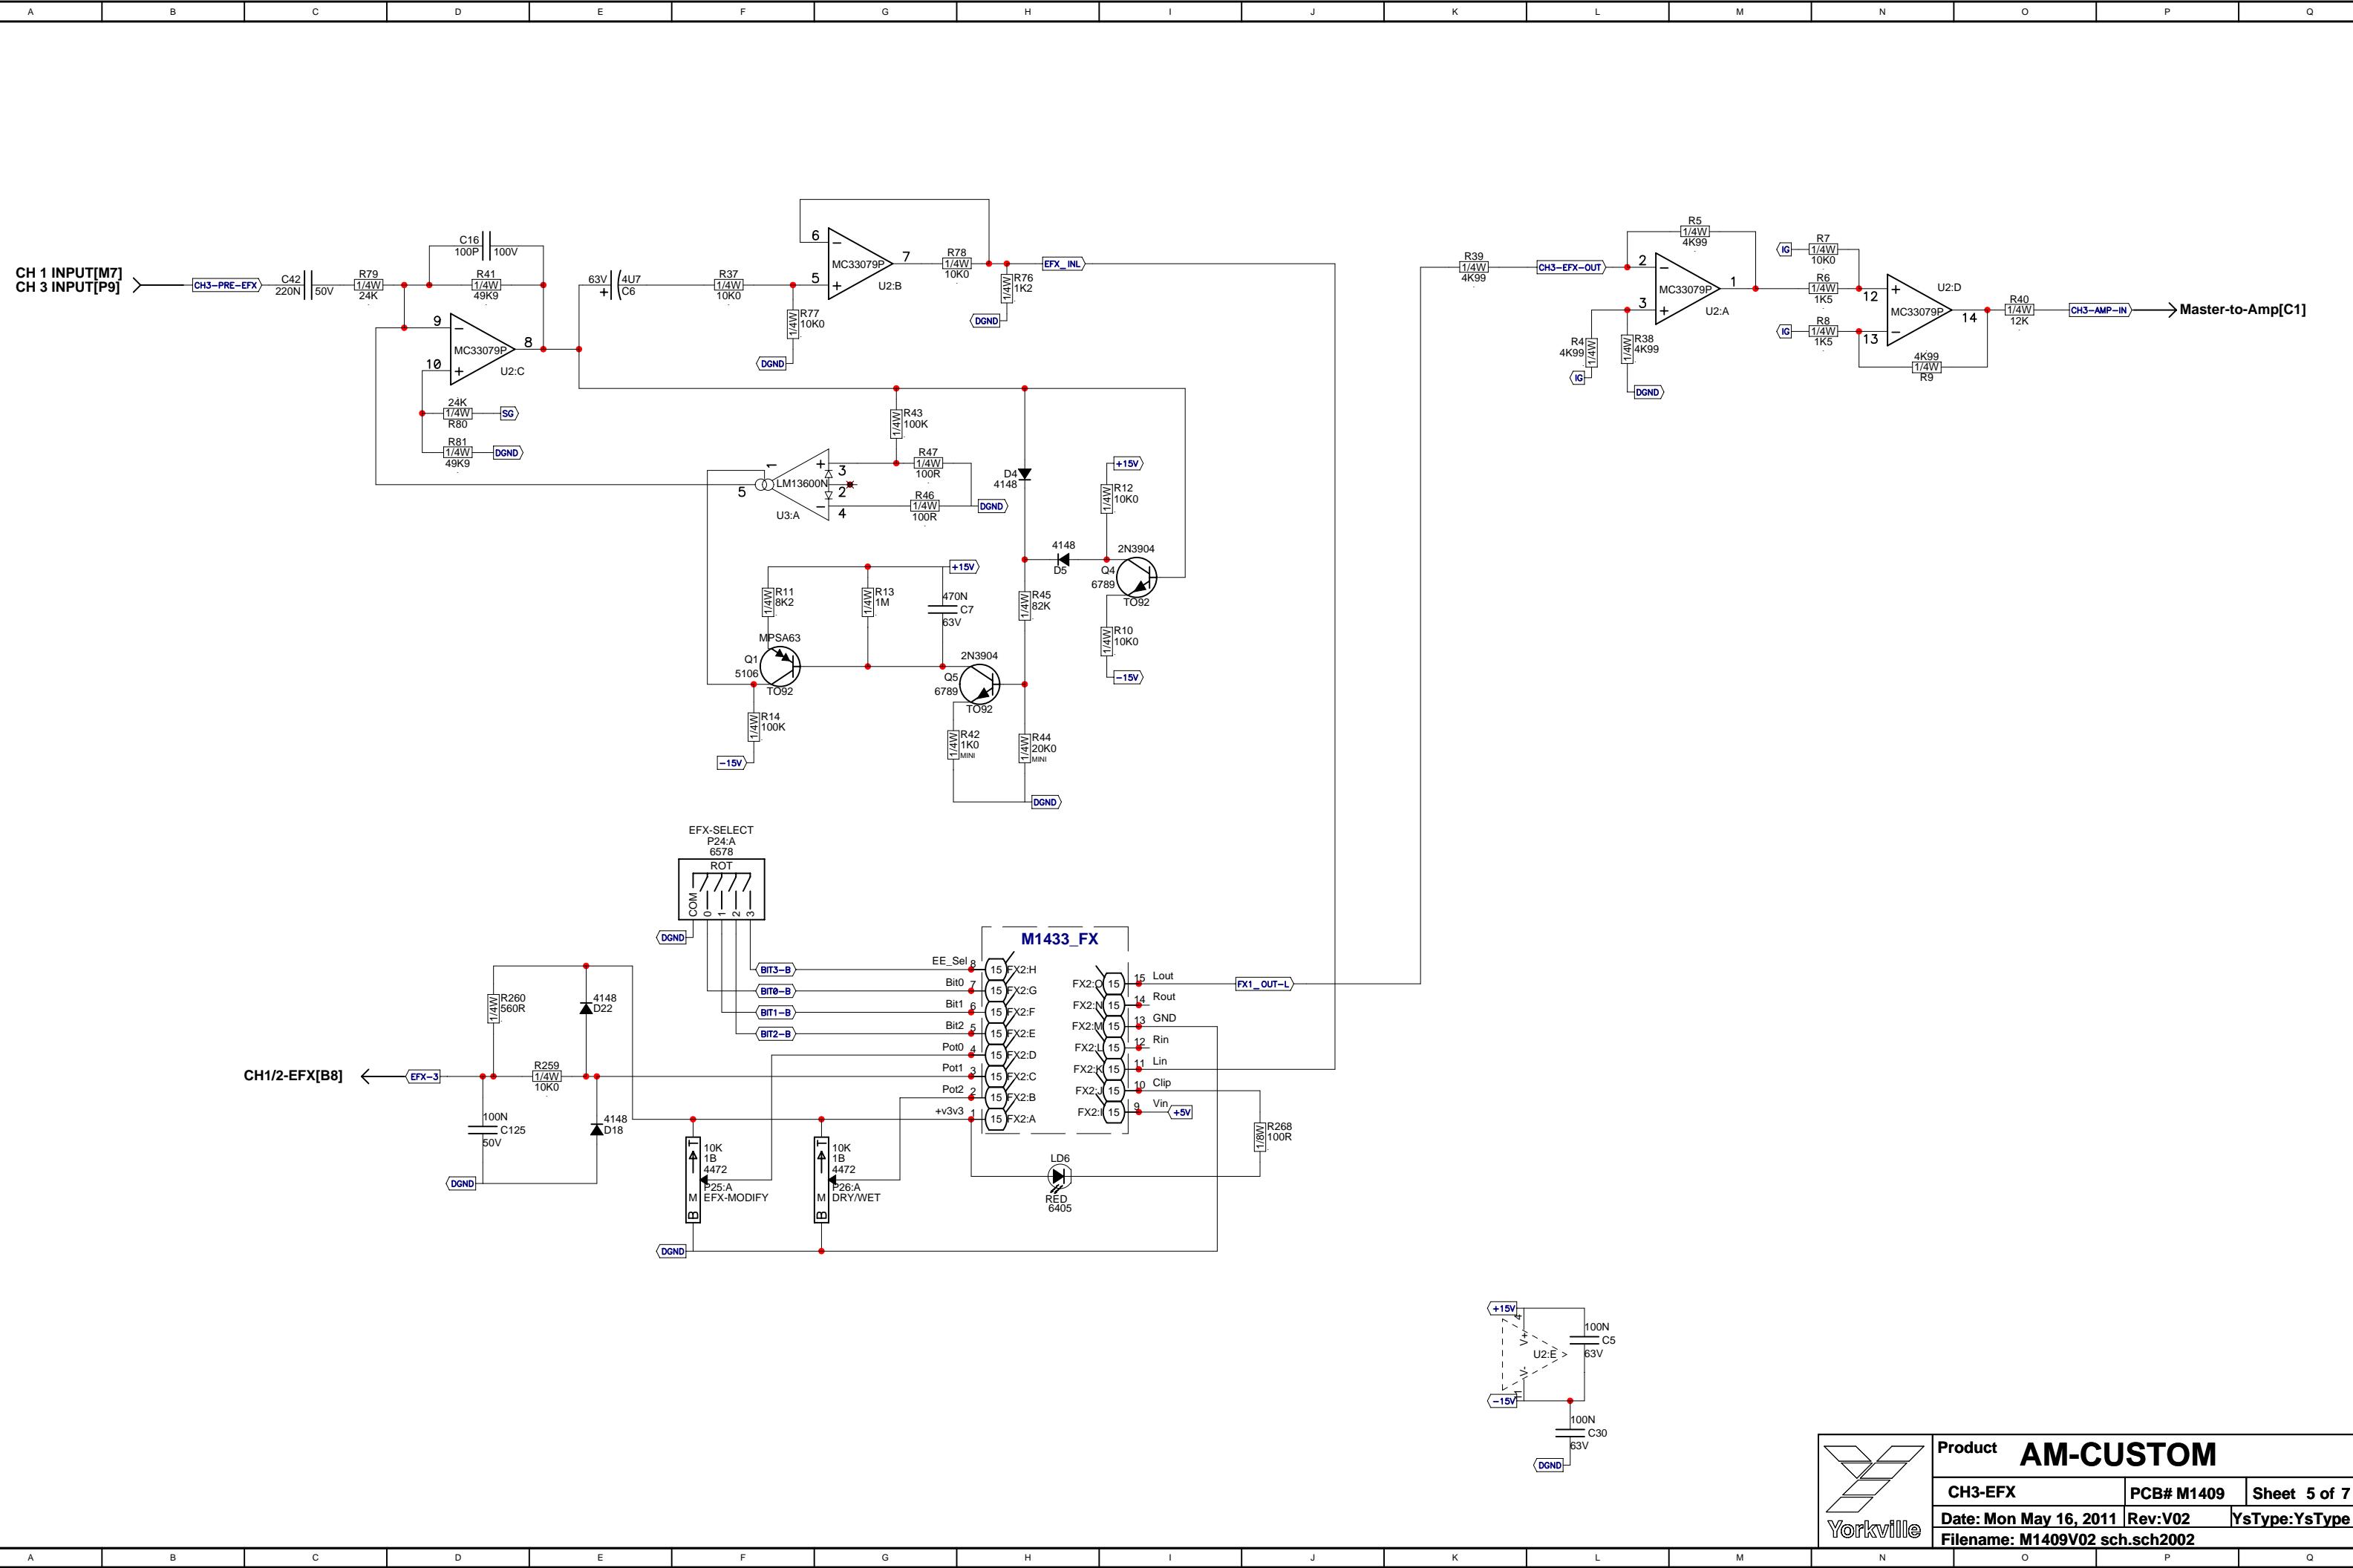


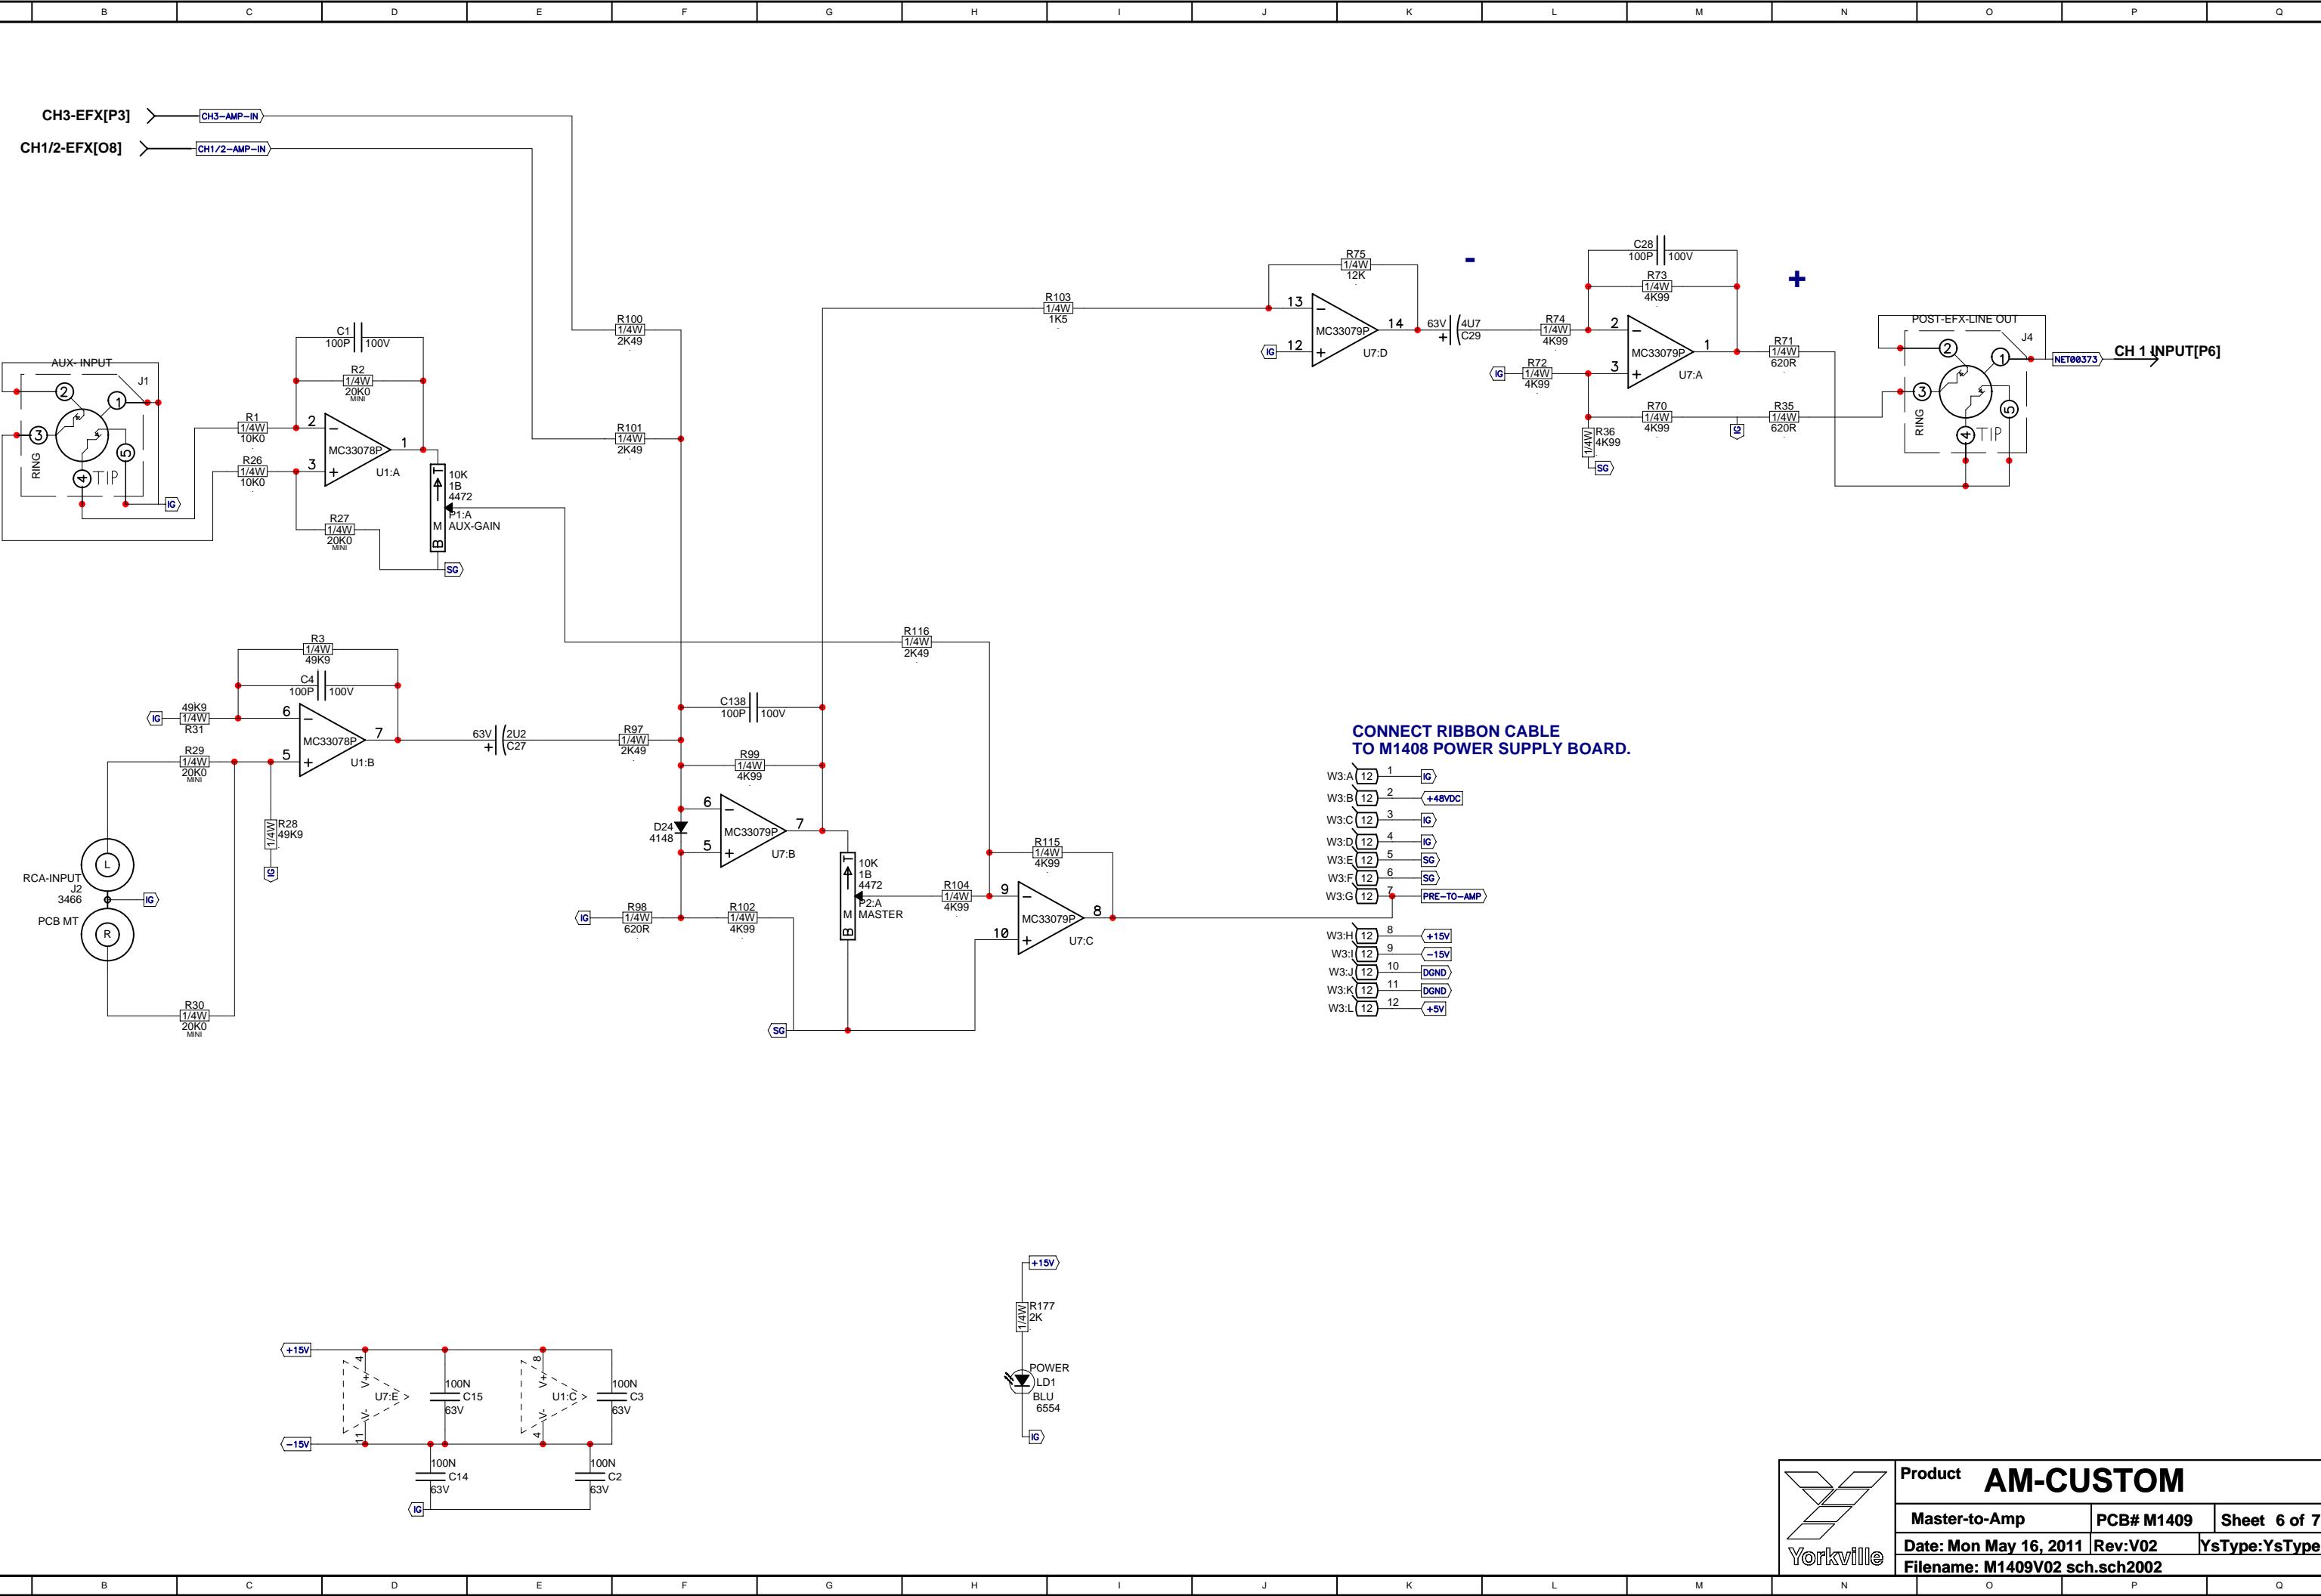

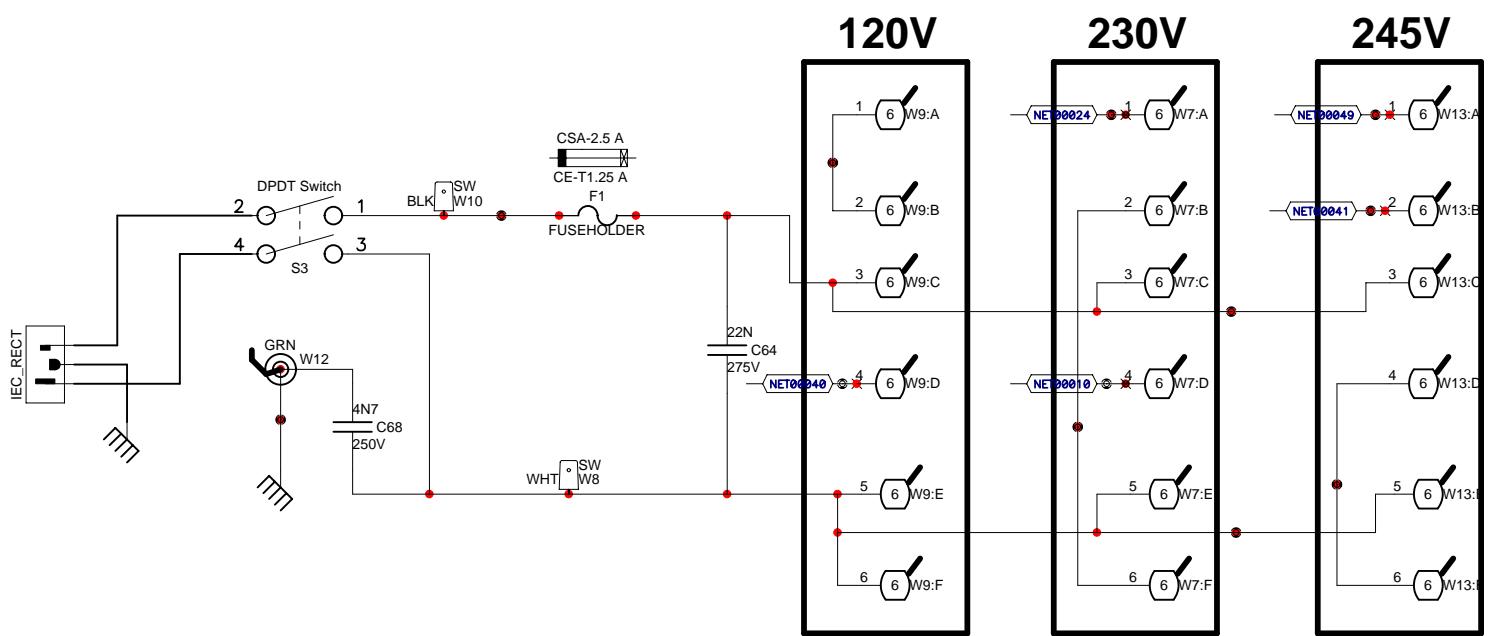


M1409				
MODEL(S):- AM CUSTOM				
REF	FUNCTION	PART#	KNOB	{NEW}
P1	MONITOR GAIN	4472	8289	N
P2	MASTER	4472	8289	N
P3	CH-1 GAIN	4472	8289	N
P4	LOW	4471	8289	N
P5	LOW-MID	4471	8289	N
P6	HI-MID	4471	8289	N
P7	HIGH	4471	8289	N
P8	FREQ	4386	8289	N
P9	EFX-SELECT	6578	8286	N
P10	EFX-MODIFY	4472	8286	N
P11	DRY/WET	4472	8286	N
P12	CH-2 GAIN	4472	8289	N
P13	LOW	4471	8289	N
P14	LOW-MID	4471	8289	N
P15	HI-MID	4471	8289	N
P16	HIGH	4471	8289	N
P17	FREQ	4386	8289	N
P18	CH-3 GAIN	4472	8289	N
P19	LOW	4471	8289	N
P20	LOW-MID	4471	8289	N
P21	HI-MID	4471	8289	N
P22	HIGH	4471	8289	N
P23	FREQ	4386	8289	N
P24	EFX-SELECT	6578	8286	N
P25	EFX-MODIFY	4472	8286	N
P26	DRY/WET	4472	8286	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N

M1409				
MODEL(S):- AM-CUSTOM				
#	DATE	VER#	DESCRIPTION OF CHANGE	
1	FEB-2010	V1.00	RELEASED FOR PRODUCTION	
2	03-FEB-2011	V02	PC8185: CHANGE #3453 TO #4100	GG
3	16-May-2011		PC8238: replace #5991 with #6405. Force update.	GG
4	D	V		
5	D	V		
6	D	V		
7	D	V		
8	D	V		
9	D	V		
10	D	V		
11	D	V		
12	D	V		
13	D	V		

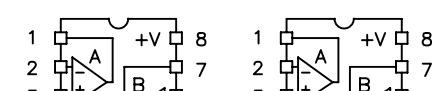


6840_PC 6882_PC

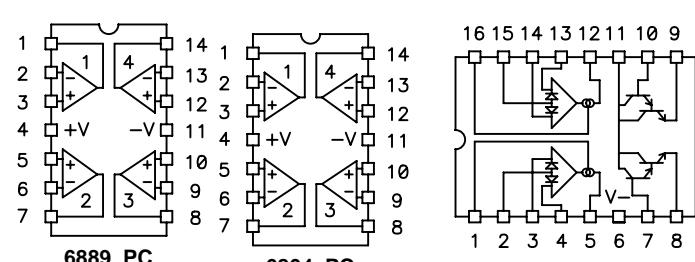

6889_PC 6804_PC 6745_PC

Product **AM-CUSTOM**
AC PCB# M1409 Sheet 7 of 7
Date: Mon May 16, 2011 Rev: V02 YsType: YsType
Filename: M1409V02 sch.sch2002

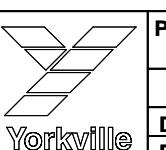


BlankSize - 13000x12000

Pcb Mech M1409V02
Top Assy M1409V02

BlankSize - 13000x12000

Into Wave

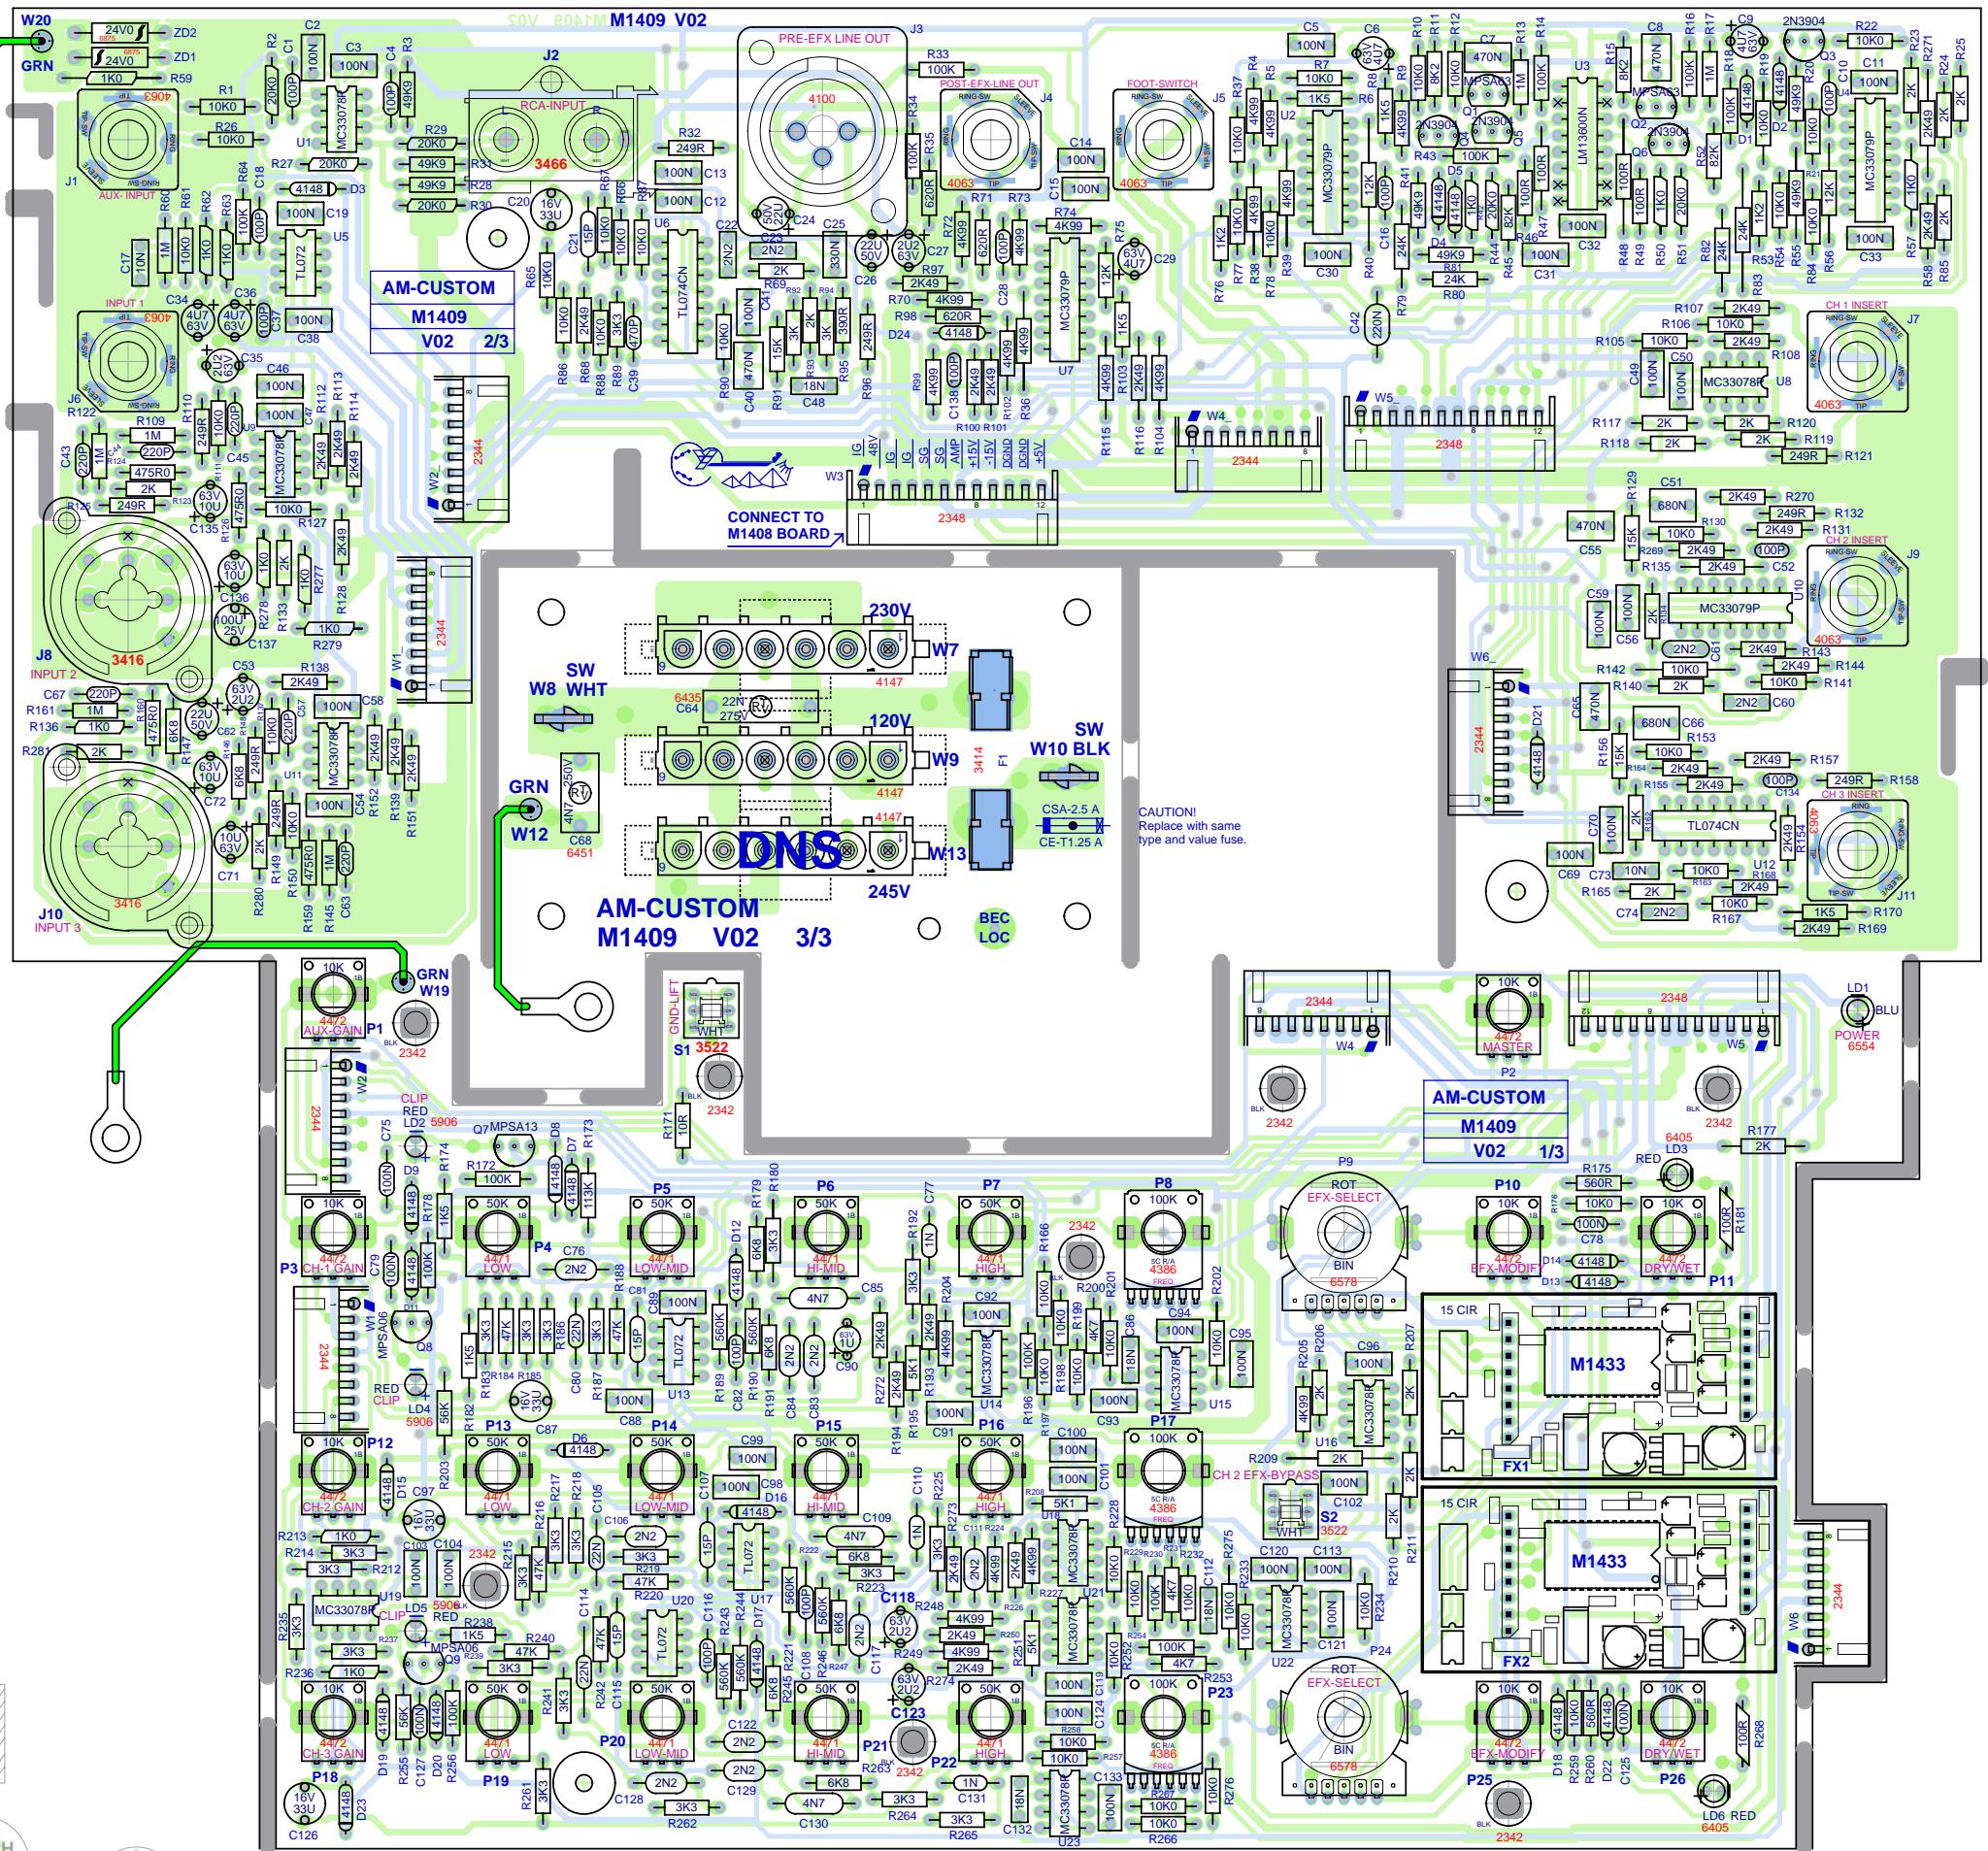

M1409 V02


SEE LAYOUT DOCUMENTATION




SEE LAYOUT DIAGRAM




M1409				
MODEL(S):- AM CUSTOM				
REF	FUNCTION	PART#	KNOB	{NEW}
P1	MONITOR GAIN	4472	8289	N
P2	MASTER	4472	8289	N
P3	CH-1 GAIN	4472	8289	N
P4	LOW	4471	8289	N
P5	LOW-MID	4471	8289	N
P6	HI-MID	4471	8289	N
P7	HIGH	4471	8289	N
P8	FREQ	4386	8289	N
P9	EFX-SELECT	6578	8286	N
P10	EFX-MODIFY	4472	8286	N
P11	DRY/WET	4472	8286	N
P12	CH-2 GAIN	4472	8289	N
P13	LOW	4471	8289	N
P14	LOW-MID	4471	8289	N
P15	HI-MID	4471	8289	N
P16	HIGH	4471	8289	N
P17	FREQ	4386	8289	N
P18	CH-3 GAIN	4472	8289	N
P19	LOW	4471	8289	N
P20	LOW-MID	4471	8289	N
P21	HI-MID	4471	8289	N
P22	HIGH	4471	8289	N
P23	FREQ	4386	8289	N
P24	EFX-SELECT	6578	8286	N
P25	EFX-MODIFY	4472	8286	N
P26	DRY/WET	4472	8286	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N
R	F	P	K	N

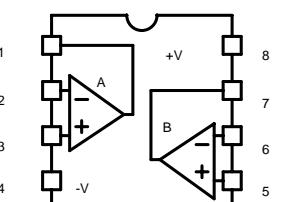


6840_PC

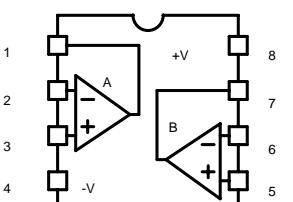


6882_PC

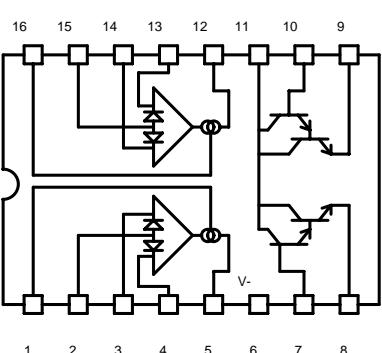

6745_PC

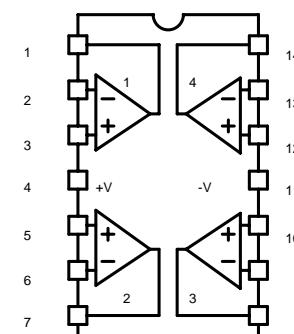

6804_PC

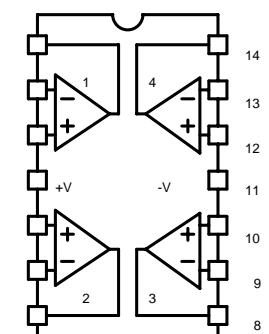

6889_PC

M1409			
MODEL(S):- AM-CUSTOM			
#	DATE	VER#	DESCRIPTION OF CHANGE
1	FEB-2010	V1.00	RELEASED FOR PRODUCTION
2	03-FEB-2011	.	PC8185: CHANGE #3453 TO #4100
3	16-May-2011	V02	GG PC8238: replace #5991 with #6405. Force update. GG
4	D	V	N
5	D	V	N
6	D	V	N
7	D	V	N
8	D	V	N
9	D	V	N
10	D	V	N
11	D	V	N
12	D	V	N
13	D	V	N



SEE LAYOUT DIAGRAM



M1409 V02 PRODUCTION NOTES

- WHEN APPLYING RTV TO ELECTROLITIC CAPACITORS
BEND ONLY C118 AND C123 KEEP THE REST STRAIGHT UP.

