# **DIGITAL SOUND PROCESSOR**



# SERVICE MANUAL



# **■CONTENTS**(目次)

SPECIFICATIONS (総合仕様) ····································	2
PANEL LAYOUT (パネルレイアウト)	3
CIRCUIT BOARD LAYOUT (ユニットレイアウト) ・	
BLOCK DIAGRAM (ブロックダイアグラム) ····································	
DIMENSIONS (寸法図) ····································	
LSI DATA TABLE (LSI端子機能表) ····································	
IC BLOCK DIAGRAM (IC ブロック図) ····································	
CIRCUIT BOARDS (シート基板図) ····································	2
DISASSEMBLY PROCEDURE (分解手順) ·························10	6
TEST PROGRAM (テストプログラム) 15	9
CHECKS (検査)	
ADJUSTMENTS(調整) ····································	
ERROR MESSAGES (エラーメッセージ) 24	4
MIDI DATA FORMAT (MIDI データフォーマット) 2	
MIDI IMPLEMENTATION CHART2	7
PARTS LIST	

YAMAHA CORP.

HAMAMATSU, JAPAN

# IMPORTANT NOTICE

This manual has been provided for the use of authorized Yamaha Retailers and their service personnel. It has been assumed that basic service procedures inherent to the industry, and more specifically Yamaha Products, are already known and understood by the users, and have therefore not been restated.

WARNING:

Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components and failure of the product to perform as specified. For these reasons, we advise all Yamaha product owners that all service required should be performed by an authorized Yamaha Retailer or the appointed service representative.

**IMPORTANT:** The presentation or sale of this manual to any individual or firm does not constitute authorization, certification, recognition of any applicable technical capabilities, or establish a principle-agent relationship of any form.

The data provided is believed to be accurate and applicable to the unit(s) indicated on the cover. The research, engineering, and service departments of Yamaha are continually striving to improve Yamaha products. Modifications are, therefore, inevitable and changes in specification are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

**WARNING:** 

Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground buss in the unit (heavy gauge black wires connect to this buss).

**IMPORTANT:** Turn the unit OFF during disassembly and parts replacement. Recheck <u>all</u> work before you apply power to the unit.

This product uses a lithium battery for memory back-up.

**WARNING:** Lithium batteries are dangerous because they can be exploded by improper handling. Observe the following precautions when handling or replacing lithium batteries.

- Leave lithium battery replacement to qualified service personnel.
- Always replace with batteries of the same type.
- When installing on the PC board, solder using the connection terminals provided on the battery cells. Never solder directly to the cells. Perform the soldering as quickly as possible.
- Never reverse the battery polarities when installing.
- Do not short the batteries.
- Do not attempt to recharge these batteries.
- Do not disassemble the batteries.
- Never heat batteries or throw them into fire.

#### **ADVARSEL!**

Lithiumbatteri. Eksplosionsfare.

Udskiftning må kun foretages af en sagkyndig, og som beskrevet i servicemanualen.

# **SPECIFICATIONS**

ELECTRICAL CHARACT	ERISTICS
Frequency Responce	20 Hz12 kHz Delay: More than 80 dB
Dynamic Range	Others: More than 74 dB
THD	Less than 0.1% @DELAY,1kHz, max.
INPUT	
Number of Channels Nominal level	Unbalanced x 1 (phone jack) - 20 dBm
Impedance	More than 500 k-ohms
A/D, D/A CONVERSION Number of Channels	1
Sampling Frequency Quantization	31.25kHz 16 bits
OUTPUT	
Number of Channels	Unbalanced x 2 (phone jack)
Norminal level Impedance	- 20dBm 1 k-ohm
MEMORY	
Presets (ROM)	1 - 50
User Memory (RAM)	51 - 100
MIDI CONTROL	Program Number Note ON/OFF
	Note ON/OFF

FRONT PANNEL	
Keys	(†), (↓), MEMORY, PARAMETER, STORE, RECALL, COMPARE, INSERT, UTILITY, REV/DLY Group, MOD.OTHERS, DIST.Group, TRIGGER, BYPASS
Display	16 char, x 2 lines, LCD 2-digit 7-segment LED
Input Level Monitor	7-segment LED
Knob	Input Level Volume
Jack	TUNER OUT, INPUT
REAR PANEL	
Jack(Mono)	INPUT, INSERT IN/OUT, OUTPUT L/R,FOOT SW(MEMORY/TRIGGER , BYPASS)
MIDI Terminals	IN, THRU
GENERAL	
Dimensions(WxHxD) Weight Power Consumption	480 x 45.2 x 285 mm 3.6 kg 20 W


# ■総合仕様

アナログ部					
周波数特性	20Hz∼12kHz				
ダイナミックレンジ					
ディレイモード時	80dB				
その他	74dB				
高調波歪率(ディレイ時)	0.1%以下(@   kHz)				
INPUT					
チャンネル数	1				
方式	アンバランス入力				
規定入力レベル	20dB				
入力インピーダンス	500kΩ以上				
コネクタ	ホーンジャック				
OUTPUT					
チャンネル数	2				
方式	アンパランス出力				
規定出力レベル	- 20dB				
出力インピーダンス	lkΩ				
コネクタ	ホーンジャック				
デジタル部					
AD/DAコンバータ	16ピット				
サンプリング周波数	31.25kHz				
メモリー					
- プリセットプログラム	50種(No. I ~50)				
ユーザーズプログラム	50種(No.51~100)				
フロントパネル					
スイッチ	POWER ON/OFF				
ツマミ	INPUTレベルコントロール				
ディスプレイ					
入力レベル	7 素子LED(-30~0)				
メモリーNo.	7セグメント2桁LED				
プログラム名、パラメーター、					
メッセージ	16文字 2 段LCD				
× 9 E - 2	IOX子 2 校LCD				

I(▽) ‡ — ORY METER E LL ARE
METER E LL ARE
E LL ARE
LL ARE
ARE
ıτ
· T
ГҮ
DLY Group
OTHERS
Group
ER
SS
R OUT
UT_L/R
N/THRU
SW
ORY/TRIGGER, BYPASS)
T IN/OUT
·
V 50/60Hz
m×45.2mm×285mm

# ■ PANEL LAYOUT(パネルレイアウト)


● Front Panel (フロントパネル)

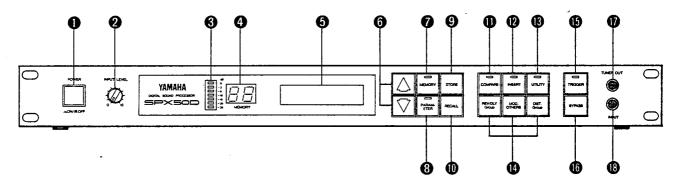

- POWER Switch
- INPUT LEVEL Control
- **1 INPUT LEVEL Meter**
- 4 LED MEMORY Number Display
- 6 LCD (Liquid Crystal Display)
- 6 Increment/Decrement Buttons
- MEMORY Button
- PARAMETER Button
- **9** STORE Button
- RECALL Button
- COMPARE Button
- **1** INSERT Button
- (B) UTILITY Button
- Direct Recall Buttons (REV/DLY Group, MOD&OTHERS, DIST Group)
- TRIGGER Button
- **®** BYPASS Button
- **1** TUNER OUT Jack
- (B) INPUT Jack

- **POWER**スイッチ
- 2 INPUTレベルコントロール
- INPUTレベルメーター
- ♠ メモリーNo.ディスプレイ
- 6 LCD
- 6 アップ/ダウンキー
- **⋒** MEMORY + −
- PARAMETER選択キー
- O STORE +-
- 10 RECALL
- **⊕** COMPARE + −
- 1 INSERT+-
- ® UTILITY +-
- **愛** ダイレクトリコールキー (REV/DLY Groupキー, MOD.OTHERSキー, DIST.Groupキー)
- TRIGGER 
   +−
- **⊕** BYPASS + -
- **1** TUNER OUT端子
- ⑥ INPUT端子

#### ● Rear Panel (リアパネル)

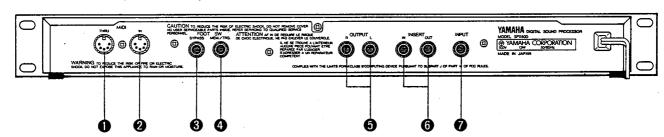


- MIDI THRU Connector
- MIDI IN Connector
- **8** BYPASS FOOT SW Jack
- MEM./TRG. FOOT SW Jack
- R&LOUTPUT Jacks
- 6 INSERT IN and OUT Jacks
- INPUT Jack


- MIDITHRU端子
- MIDIIN端子
- **❸ BYPASS**用フットスイッチジャック
- **4** MEMORY及びTRIGGER用フットスイッチジャック
- **❺** OUTPUT端子
- **⑥** INSERT端子
- **②** INPUT端子

# **■CIRCUIT BOARD LAYOUT** (ユニットレイアウト)


# Japanese Model

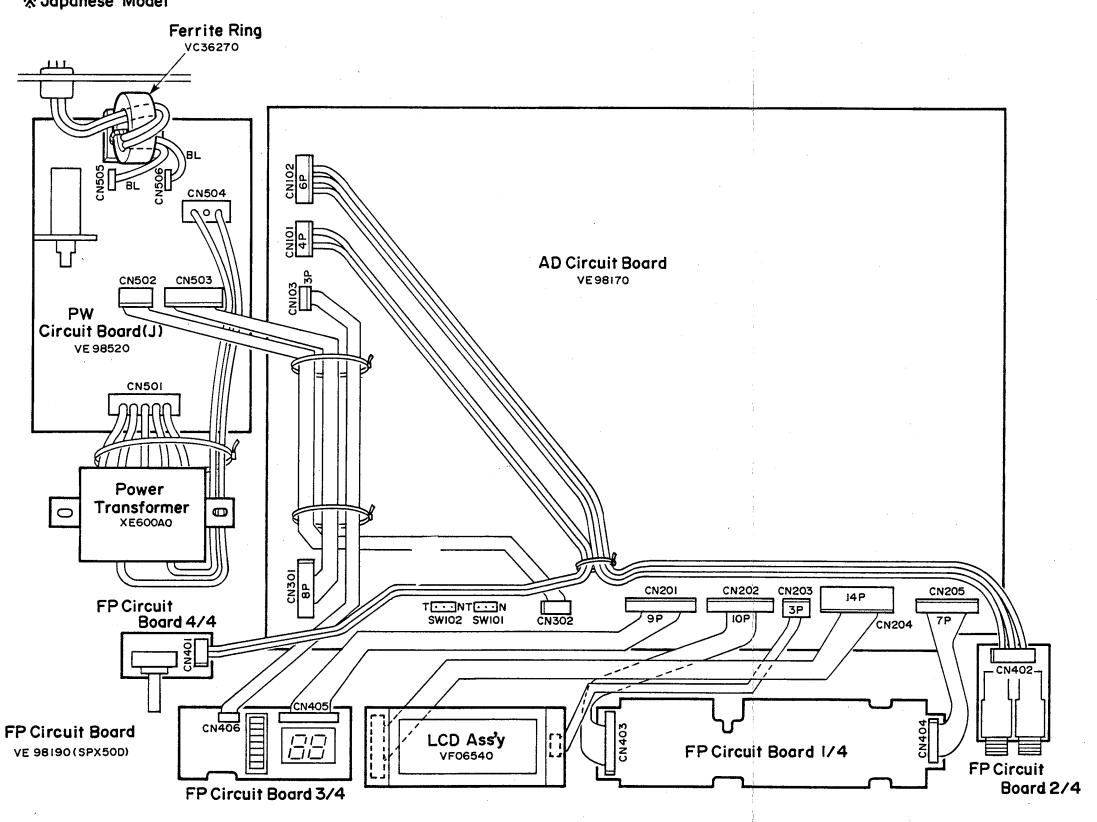


# U.S.& Canadian Models.

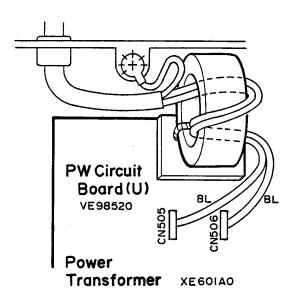


North European & German Models.

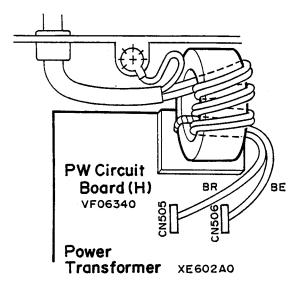

# ■ BLOCK DIAGRAM (ブロックダイアグラム)

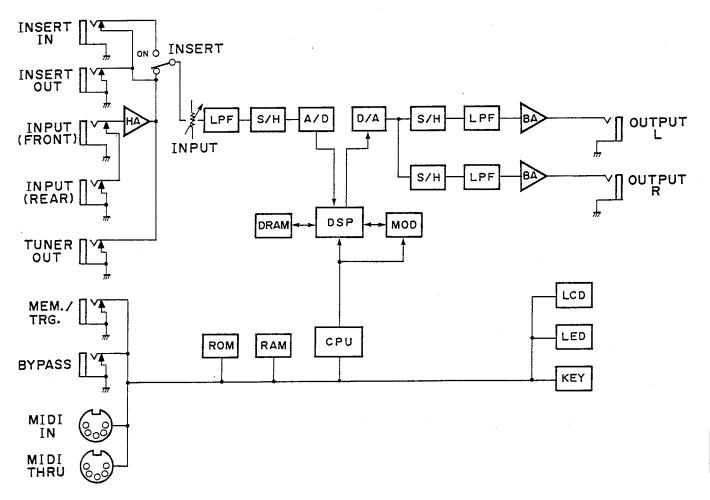

# ■DIMENSIONS(寸法図)

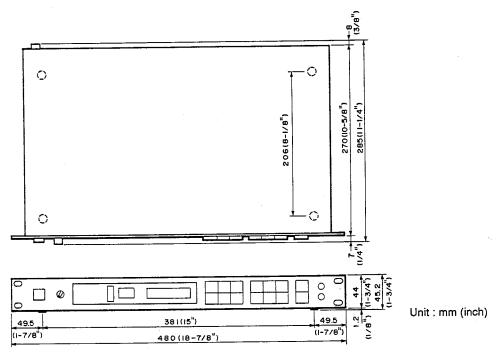

# ■LSI DATA TABLE (LSI端子機能表)

# • YM3901 (XC282001) ADA

	IVISSU	1 (.	XC282001) ADA				
PIN NO.	NAME	1/0	FUNCTION	PIN NO.	NAME	1/0	FUNCTION
1 2 3 4	MCLK SYIN SYO REST	0-	System clock Input of system synch, signal Output of system synch, signal System reset signal, except Ran, gen.	33 34 35 36 37	DA1 DA2 DA3 DA4	00000	Outputs Parallel data 1 to DAC Outputs Parallel data 2 to DAC Outputs Parallel data 3 to DAC Outputs Parallel data 4 to DAC
5	DRST	ı	Reset signal for Randam generator	38 39	DA5 DA6 DA7	000	Outputs Parallel data 5 to DAC Outputs Parallel data 6 to DAC
6 7 8 9 10 11 12 13	MD0 MD1 MD3 DIC0 GND DIC1 DN		Selecting system mode  Mode selection for Diser Ground (Earth) Terminal Mode selection for Diser Selection of ser. data format (DSP/Normal) For test, external synch. control Selection of ser. Input data mode	40 41 42 43 44 45 46 47 48	DA8 GND DA9 DA10 DA11 DA12 DA13 DA14 DA15	0-0000000	Outputs Parallel data 7 to DAC Outputs Parallel data 8 to DAC Ground (Earth) Terminal Outputs Parallel data 9 to DAC Outputs Parallel data 10 to DAC Outputs Parallel data 11 to DAC Outputs Parallel data 12 to DAC Outputs Parallel data 13 to DAC Outputs Parallel data 13 to DAC Outputs Parallel data 14 to DAC Outputs Parallel data 15 (MSB) to DAC
15 16 17	DLYO DLY1 DIN1 DIN2		at MODE 0 or 3 (Time sharing/NOT) Selection of Phase lag value for DIN 1, 2 Inputs serial data for DAC	49 50 51	CPIN ADCK SH1	0	Inputs the output signal of comparator, at successive approximation Inner successive comparating register CLOCK Sample/hold signal 1, Outputs
19 20 21	DOUT DDO1 DDO2	0 00	Outputs serial data after AD converting Outputs serial data of phase delay for DIN 1.2	52	SH2	o	SW sel. signal at MODE 1. Sample/hold signal 2 (Mode 2 : Switch sel. signal) (Mode 4 : De-glitch signal 3)
22	DAOVC /PRIN	I	Over flow control terminal for DA. GND : OFF, 5V : ON	53 54	ASW1 ASW2	0	Outputs switch select signal
			or PRCN : 5V; Initialization of randam number	55	REG2	О	For test, enable signal of resister 2
23	PRCN	!	For test, at 5V initialization of randam number	56 57	MPX1 REG1	0	For test, select data out For test, enable signal of
24 25	TM1 D32	0	Outputs timming signal More delayed 32 bit in DIN 2 are output	58 59	VDD MPX3	0	register out + 5V DC voltage For test, select signal out
26 27	VDD OVFL	0	+ 5V DC voltage Outputs over flow signal after AD converting (Active L)	60 61 62	DEGL11 DEGL12 REG3	0000	De-glitch signal 11  De-glitch signal 12  For test, enable signal for
28	PRDL	0	Outputs the timming of input for output serial ran, data from PRDO	63	ADCX	0	register 3 For test, outputs control signal
29	PRDO	0	Outputs ser. randam data (Two comp. data) for YM3015, 3020	0.5	ADUX		of clock for successive approximation
30 31 32	DEG1 DEG2 DAO	000	Outputs De-glitch signal Outputs Parallel data 0 (LSB) to DAC	64	ADST	0	For test, outputs start signal for successive approximation

# • YM3807 (IT380700) Modulation Data Generator

Pin No.	Name	1/0	Function	Pin No.	Name	1/0	Function
1	NC		·	24	VSS		Power supply ground
2	MDSIO	1	Inputs data to add to the wave-	23	CDO	0	CD interface serial data output
3	MDSI1	1	form data inside MOD	22	CDI		CD interface serial data intput
4	MDSO0	0	Outputs MOD internal wave-	21	NC		·
5	MDSO1	0	form data with the same data format as MDSIO.	20	XCLK		CD interface transmission clock input
6	MODO	0		19	XMD	1	Selects 1/16 mode (asynchronous) or 1/1 mode (synchronous) for the CD interface
7	MOD1	0		18	CRS	1	CD counter reset
8	MOD2	0		17	CLK	1	3.2MHz
9	MOD3	0	Outputs waveform data for all channels inside MOD.	16	īc	1	Initial clear
10	MOD4		and state of the s	15	SYNCW	1	Sync signal input. One 64th of the master clock.
11	MOD5	0		14	MOD7	0	Outputs waveform data for all
12	VDD		Power supply +5V	13	MOD6	0	channels inside MOD.

# • HD6303Y (XE386A00) CPU

PIN NO.	NAME	1/0	FUNCTION	PIN NO.	NAME	1/0	FUNCTION
1	Vss	_	Ground	33	Vcc		DC Supply
2	XTAL	1	Clock	34	V15	0	)
3	EXTAL	]	JCIOCK	35	A14	0	
4	MPO	1	Made program	36	A13	0	
5	MP1	]	}Mode program	37	A12	0	Address bus
6	RES		Reset	38	A11	0	Address bus
7	STBY	1	Stand-by mode signal	39	A10	0	
8	NMi		Non-maskable interrupt	40	A9	0	
9	P20	1/0		41	A8	0	J
10	P21	1/0		42	Vss		Ground
11	P22	1/0		43	A7	0	)
12	P23	1/0	Port 2	44	A6	0	
13	P24	1/0		45	A5	0	
14	P25	1/0		46	A4	0	> Address bus
15	P26	1/0		47	A3	0	Address bus
16	P27	1/0		48	A2	0	
17	P50	1/0	)	49	A1	0	·
18	P51	1/0		50	A0	0	J
19	P52	1/0		51	D7	1/0	
20	P53	1/0	Port 5	52	D6	1/0	
21	P54	1/0	Port 5	53	D5	1/0	
22	P55	1/0		54	D4	1/0	Date to the
23	P56	1/0		55	D5	1/0	≻Data bus
24	P57	1/0	ل	56	D2	1/0	
25	P60	1/0	)	57	D1	1/0	
26	P61	1/0		58	DO	1/0	IJ
27	P62	1/0		59	BA	0	Bus available
28	P63	1/0	B C	60	LIR	0	Load instruction resistor
29	P64	1/0	Port 6	61	R/W	0	Read/Write control
30	P65	1/0		62	WR	0	Write
31	P66	1/0		63	RD	ō	Read
32	P67	1/0	J	64	E	ō	Enable

# HD63B50P (IG147300) Asynchronous Communications Interface Adapter

PIN NO.	NAME	1/0	FUNCTION	PIN NO.	NAME	1/0	FUNCTION
1	Vss		DC supply 0V	13	R/W	1	Read/Write
2	Rx Data	1	Receive data	14	Ε .		Enable
3	Rx CLK		Receive clock	15	D7	1/0	)
4	Tx CLS	0	Transmit clock	16	D6	1/0	. [
5	RTS	1/0	Request to send	17	D5	1/0	
6	Tx Data	0	Transmit data	18	D4	1/0	
7	IRO	1	Interrupt request	19	D3	. 1/0	Data bus
8	CSO	1	}	20	D2	1/0	· · · · · · · · · · · · · · · · · · ·
9	CS2	1	Chip select	21	D1	1/0	
10	CS1	1	J	22	D0	1/0	J
11	RS	1	Resist select	23	DCD	1	Data carrier detect
12	Vcc		DC supply (+5.0V)	24	CTS	1	Clear to send

# • PCM54HP (XA566001) Digital to Analog Converter

Pin No.	Name	1/0	Function	Pin No.	Name	1/0	Function
1 2 3 4 5 6 7 8 9 10 11 12 13	Vpot DA16 DA15 NC DA14 DA13 DA11 DA10 DA9 DA8 DA7 DA6 DA5		Not used Bit 1 (MSB) Bit 2 Not used Bit 3 Bit 4 Bit 5 Bit 6 Bit 7 Bit 8 Bit 9 Bit 10 Bit 11 Bit 11	15 16 17 18 19 20 21 22 23 24 25 26 27 28	DA4 DA3 DA2 DA1 VOUT FBR S/V COM I OUT NC OFF.S +Vcc ADJ -Vcc		Bit 13 Bit 14 Bit 15 Bit 16 (LSB) Voltage Output Not used Summing Junction Common Current Output Not Used Not Used +15V Not used -15V


# • YM3804 (IT380400) Digital Signal Processor

Pin No.	Name	1/0	Function	Pin No.	Name	1/0	Function
1	MDAT15	1.0	ì	64	VSS		Ground
2	MDAT14	1.0		63	MDAT16	1.0	1
3	MDAT13	1.0		62	MDAT17	1.0	
4	MDAT12	1.0		61	MDAT18	1.0	
5	MDAT11	1.0		60	MDAT19	1.0	l barren
6	MDAT10	1.0		59	MDAT20	1.0	Data bus
7	MDAT9	1.0		58	MDAT21	1.0	
8	MDAT8	1.0		57	MDAT22	1.0	
9	MDAT7	1.0	Data bus	56	MDAT23	1.0	
10	MDAT6	1.0		55	MOD0	1	ĺ
11	MDAT5	1.0		54	MOD1	ı	
12	MDAT4	1.0		53	MOD2	ı	
13	MDAT3	1.0		52	WOD3	1	MOD data input terminal
14	MDAT2	1.0		51	MOD4	1	MOD data input terminar
15	MDAT1	1.0		50	MOD5	1	
16	MDATO	1.0	]	49	MOD6	ı	
17	SI1	1	Social data input torminal	48	MOD7	ı	J
18	SI1	1	Serial data input terminal	47	īĊ	ı	Initial clear
19	SO1	0	Serial data output terminal	46	CE	ı	Chip enable
20	SO0	0	Serial data output terminal	45	CLK	ı	Master clock input terminal
21	XMD	1	Select internal ACIA synchronization mode	44	SYNCW	1	Input for generating SYNC signals internally
22	XCLK	ı	Time-out output terminal	43	TSTI	1	Terminal for internal test. To
23	TO	0	Time-out output terminal	42	TSTR	1	enter test mode, connect to GND. When in use, VDD.
24	CRS	ŀ	CD counter reset	41	MADRO	0	)
25	CDO	0	CD data output terminal	40	MADR1	0	
26	CDI	1	CD data input terminal	39	MADR2	0	
27	TM1	0	Unconditionally outputs the 15th bit of the Address Shift Register	38	MADR3	0	Address bus
28	REF	0	Three-state. Memory which needs refreshing.	37	MADR4	0	
29	ŌE	0	Three-state. Connect to memory OE.	36	MADR5	0	
30	WE	0	Three-state. Memory read/write signal.	35	MADR6	0	
31	CAS	o	Three-state. DRAM control	34	MADR7	0	]]
32	RAS	0	Three-state. signal	33	VDD <sup>*</sup>		Power supply 5V

# ■ IC BLOCK DIAGRAM (ICブロック図)


• SN74HC02N (IR000250)

Quad 2 Input NOR

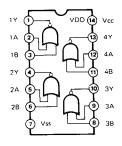


• **SN74HCU04N** (IG142250)

Hex Inverter

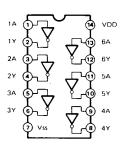


• SN74HC14N (IR001450)

Hex Inverter

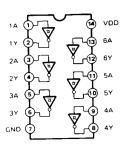


• SN74HC32N (IR003250) Quad 2 Input OR

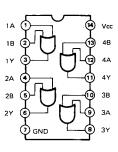

• SN74HC74N (IR007450)


Dual D-Type Flip-Flop

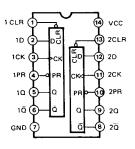


	INP	OUTP	UTS		
PR	CLR	CLK	D	α	Q
L	н	×	x	н	L
н	L	x	x	L	н
ι	L.	x	x	н	н
н	н	Ť	н	н	L
н	н	+	L	L	н
н	н	L	x	a.	ā

• SN74HC139N (IR013950)

Dual 2 to 4 Demultiplexer

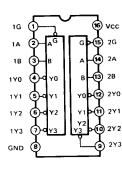


• SN74HC174N (IR017450) Hex D-Type Flip-Flop

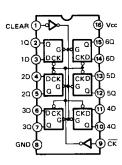


● **SN74HC245N** (IR024550)

Octal 3-State Bus Transceiver

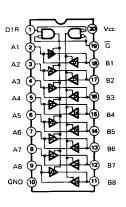


• SN74LS266P (XA379001) Quad 2 Input O.C. Ex-NOR

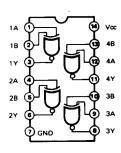


## • TC4053BP (IG055100)

Triple 2-Ch.
Multiplexer/Demultiplexer

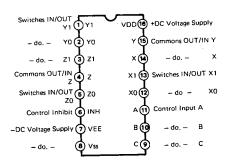


- M5238P (XA013001)
- NJM4558DV (IG001390)

**Dual Operational Amplifier** 

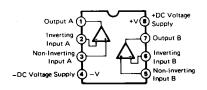

## • IR9311 (IG134900)

Comparator

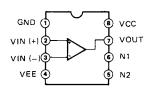


# ■ DISASSEMBLY PROCEDURE (分解手順)

#### 1. Removal of Top cover

- Remove the 7 screws (A) (3 × 8 bind head screw).
   (Refer to Fig. 1)
- Lift the Top cover while opening the bottom edges of the both sides of it slightly.

## 1. トップカバーの取外し方

- ◆ネジA (3×8バインド小ネジ) 7本を外 します。 (Fig. 1参照)
- ●トップカバーの両サイドの下端を少し開く ようにしてトップカバーを持ち上げ取外し ます。

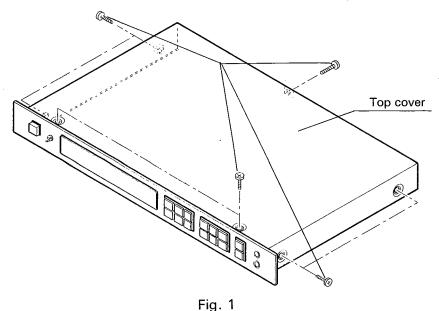

#### 2. Removal of AD Circuit board

- Remove the Top cover. (Refer to 1.)

(Refer to Fig. 2)

 After the 3 screws© (3×8 bind head screw) have been removed, the AD circuit board can be raised. (Refer to Fig. 3)

#### 2. ADシートの取外し方

- ●トップカバーを取外します。(1項参照)
- ◆ネジ® (3×8バインド小ネジ) 4本を外 します。 (Fig. 2 参照)
- ◆ネジ◎ (3×8バインド小ネジ) 3本を外 します。 (Fig. 3参照)
- ◆AD シート上の全コネクターを外しAD シートを取出します。

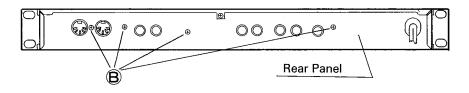


Fig. 2

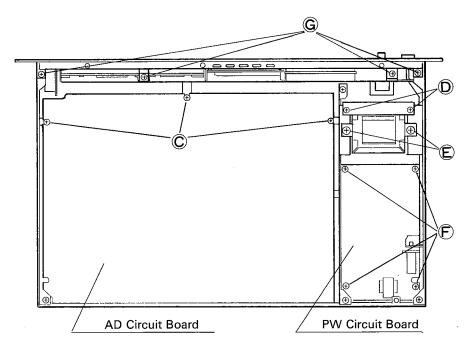


Fig. 3

# 3. Removal of PW circuit board (Refer to Fig. 3)

- Remove the Top cover. (Refer to 1.)
- Remove the 2 screws 
   (3 × 8 bind head screw).
   and remove the shield plate.
  - Remove the 2 screws (£) (4×6 bind head screw).
- Disconnect all connectors on the PW circuit board, and take the Power transformer out of the unit.
- Remove the 4 screws F, (3×8 bind head screw) and take the PW circuit board out of the unit.

#### 4. Removal of FP circuit boards

- Remove the Top cover. (Refer to 1)
- Remove the 4 screws @ (3×8 bind head screw).
- Remove the 5 screws ⊕ (3×8 bind head screw), which located on the bottom side of the unit, and take the Front panel out of the unit.

(Refer to Fig. 4)

#### 4-1 Removal of FP1/4 circuit board

 Disconnect 2 connectors on the AD circuit board, and take the FP1/4 circuit board out of the unit.

#### 4-2 Removal of FP2/4 circuit board

• Remove the 2 hexagonal nuts  $\bigcirc$  ( $\phi$ 9) which located on the right side of the sub chasis.

(Refer to Fig. 5)

 Disconnect a connector on the AD circuit board, and take the FP2/4 circuit board out of the unit.

#### 3. PW シートの取外し方(Fig. 3 参照)

- ●トップカバーを取外します。(1項参照)
- ◆ネジ① (3×8バインド小ネジ) 2本を外 しシールド板を取除きます。
- ◆ネジ® (4×6バインド小ネジ) 2本を外 します。
- PWシート上のコネクターを外し、電源トランスを取外します。
- ◆ ネジ① (3×8バインド小ネジ) 4本を外しPWシートを取出します。

#### 4. **FP**シートの取外し方

- ▶トップカバーを取外します。(1項参照)
- ◆ ネジ⑥ (3×8バインド小ネジ) 4本を外 します。 (Fig. 3参照)
- ◆本体底部の前縁にあるネジ①(3×8バインド小ネジ)5本を外しプロントパネルを取外します。 (Fig. 4参照)

#### 4-1 FP1/4シートの取外し方

◆ADシート上のコネクター2個を外しFP 1/4シートを取出します。

#### 4-2 FP2/4シートの取外し方

- サブシャーシ右端にある6角ナット①(φ2個を外します。 (Fig.5参照)
- ◆ADシート上のコネクターを外しFP2/4 シートを取出します。

#### 4-3 Removal of FP3/4 circuit board.

- Remove the 2 screws (€) (3 × 8 bind head screw).
   (Refer to Fig. 5)
- Disconnect 2 connectors on the AD circuit board, and take the FP3/4 circuit board out of the unit.

## 4-4 Removal of the FP4/4 circuit board.

- Pull the knob out from a shaft of the variable resistor.
- Disconnect a connector on the AD circuit board, and take the FP4/4 circuit board out of the unit.

#### 4-3 FP3/4シートの取外し方


- ◆ネジ® (3×8バインド小ネジ) 2本を外 します。
- ◆ ADシート上のコネクターを外し FP3/4 シートを取出します。 (Fig. 5 参照)


#### 4-4 FP4/4シートの取外し方

- INPUT LEVEL のツマミを外します。
- 6角ナット①(φ 7)を外します。

(Fig. 5 参照)

◆ AD シート上のコネクターを外し FP4/4 シートを取出します。

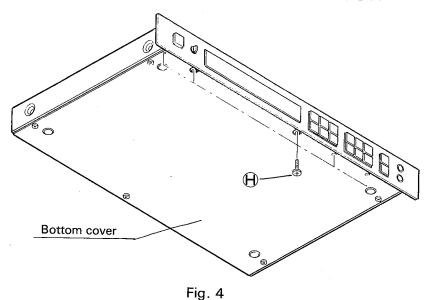

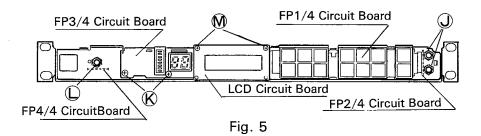

#### 5. Removal of the LCD circuit board.

Remove the Top cover and Front panel.

(Refer to 1., 4.)

- Remove the 2 screws 
   M (2.6 × 5 pan head screw).
   (Refer to Fig. 5)
- Disconnect the connectors on the AD circuit board, and take the LCD circuit board out of the unit.

#### 5. LCDシートの取外し方

- ●トップカバー及び、フロントパネルを取外 します。 (1、4項参照)
- ↑ ネジM (2.6×5ナベ小ネジ) 2本を外します。 (Fig. 5 参照)
- ◆ADシート上のコネクターを外し LCDシートを取出します。

#### TEST PROGRAM

#### Test Program Entry

(1) While pressing the "BYPASS" and "ME-MORY" switches, turn the POWER switch on.

The Test Program will be activated. The message will appear in the LCD as shown below,

#### **TEST ACIA**

and the 7-segments LED will indicate "0". The ROM, RAM, DEQ and DSP checks are performed automatically.

- (2) On normal operation, when the power switch is turned on, the ROM and RAM checks will be performed automatically. And the DEQ, DSP check will be performed too.
- (3) The test-number will be indicated in the 7-segments LED.

Select a test-number with following operation.

First, press the "MEMORY" switch.

Pressing the " \( \) " switch will increase the test-number and pressing the " \( \) " switch will decrease it.

Press the "RECALL" switch to initiate the test.

(4) When the test 6 is activated after completion of the tests 1 through 5, normal operation will be restored. When the test 100 is activated, normal operation will be restored regardless of the completion of the tests.

#### 1. TEST1: LCD Check

- (1) Select the test-number "1", and press the "RECALL" switch to initiate the test.
- (2) The entire LCD is turned "ON and OFF" five times.
- (3) Verify proper lighting of all dots in the LCD.

#### 2. TEST2 : LED Check

- (1) Select the test-number "2", and press the "RECALL" switch to initiate the test.
- (2) The 7-segments LED will indicate figures of "0" to "99" in sequence.

# ■テストプログラム

#### ● A. テストプログラムの起動方法

(1) BYPASS キーと MEMORY キーを押しながら、パワースイッチを ON する。

※テスト・プログラムが起動した場合、下記の様 に表示される。

# DIAGNOSTICS V\*.\* TEST ACIA ■■

 $7セグメント LED には <math>\boxed{0}$  が表示される。

- (2) ROM, S-RAM のチェック・サム、リード・ライト・テスト及び DEQ, DSP の制御回路のチェックは、テストプログラム起動時、またはメイン・プログラム上(通常動作時)にてパワー・スイッチ ON 時に自動的に行なわれる。
- B. テスト・プログラムNo.の選択方法

MEMORY キーを押し、△及び、▽キーに て、所定のテストNo.を選択した後、RECALL キー を押す。

※テストNoは、7セグメント LED に表示される。

#### C. テスト・プログラムから通常動作への復帰

- (1) テスト6を選択し、RECALL キーを押す。但し、 この場合、テスト・プログラム1~5を、すべて 行った場合のみ、通常動作へ復帰できる。
- (2) テスト100を選択して、(RECALL) キーを押した場合には、テスト1~5を、実行したか、否かに係わらず通常動作に復帰できる。

# 1. TEST1 LCD 表示器の動作チェック

- (1) テスト1を選択し、**RECALL** キーを押す。
- (2) LCD の全表示ドットの点滅を、5回繰り返す。
- (3) LCD 表示器の動作を目視により確認する。

#### 2. TEST2 LED 点灯チェック

- (1) テスト 2 を選択し、 **RECALL** キーを押す。
- (2) 7セグメント LED を ① , [1] , [22] , ~[99] の順番で表示後、キー・スイッチ内 LED を

MEMORY , PARAMETER , COMPARE , INSERT , UTILITY , TRIGGER の順で表示する。その後、7セグメント LED の全セグメント、及び、キースイッチ内のすべての LED を約3秒間点灯する。

- (3) The switch LED indicators will light one after another in order of "MEMORY", "COMPARE", "INSERT", "UTILITY", "TRIGGER".
- (4) All of the LED indicators and segments will simultaneously light ON about three seconds.
- (5) Verify proper lighting of all LED indicators and segments.

#### 3. TEST3: Switch Check

- Connect foot switches to the BYPASS and MEM./TRG. jacks.
- (2) Select the test-number "3", and press the "RECALL" switch to initiate the test.
- (3) The switch number "00" will appear in the LCD as shown below.

#### TEST SWITCH 00

Press the switch of which the number is indicated on the LCD.

Pressing the correct switch can advance the program.

The order is as shown below;

(00) MEMORY (07) MOD.
(01) PARAMETER (09) UTILITY
(02) STORE (10) DIST.
(03) RECALL (11) TRIGGER
(04) COMPARE (12) BYPASS
(05) REV./DLY (F1) FOOT SW BYPASS
(06) INSERT (F2) FOOT SW MEM./TRG.

- (4) When these tests have been completed successfully, an "OK" message will appear on the LCD.
- (5) If an incorrect switch is pressed, an error message "NG" will appear on the LCD. Press the "RECALL" switch to return the routine to the procedure (2). And press the switches again in correct order.

# 4. TEST4 : AD OFFSET Adjustment

- Connect a power amplifier and a monitor speaker to the L or R OUTPUT connector in order to obtain sound check.
- (2) Select the test-number "4", and press the "RECALL" switch to initiate the test.

TEST OFFSET

(3) **LED** が、すべて点灯するか、否かを目視により 確認する。

# 3. TEST3 スイッチの動作チェック

- (1) **BYPASS MEM./TRG.** ジャックにフットスイッチを接続しておく。
- (2) テスト3を選択し、RECALL キーを押す。
- (3) LCD に次の表示が出て、最初は ■ 部に 00 が点滅している。

# DIAGNOSTICS V\*.\* TEST SWITCH ■■

- (4) この状態で、△キーを押すと、■■ 部には01 が点滅する。
- (5) 次に、△ キーを押すと、■ 部には、02 が 点滅する。
- (6) 以下、MEMORY , PARAMETER , STORE , RECALL , COMPARE , REV/DLY , INSERT , MOD , UTILITY , DIST. , TRIGGER , BYPASS キーの順番に押す。 次に、BYPASS , MEM . / TRG. の順番にフットスイッチを押す。
- (7) すべてのキーを、順番通り押した場合、■ 部に OK の表示が出る。正しい順番でキーが押されなかった場合、その時点で、■ 部に NG が表示される。この場合、RECALL キーを押して、(2)より順に再チェックすること。

#### 4. **TEST4 A/D** オフセット

A/D 変換部でのオフセットを最小に調整する。

- (1) **OUTPUTL** 又は R 端子より、パワー・アンプ に入力し、スピーカーにて音が聴ける様にセット する。
- (2) テスト4を選択し、RECALL キーを押す。 OUTPUT 端子の出力信号を、約0.5秒おきに、 位相反転させることにより、オフセット電圧があった場合、スピーカーよりクリック雑音として確認できる。

DIAGNOSTICS V\*.\* TEST OFFSET ■■

- If an OFFset voltage is present, the click noise can be heard from the monitor speaker.
- (3) Adjust VR102 on the AD circuit board to minimize the click noise level.

#### 5. TEST5: User's memory setting

(1) Select the test-number "5", and press the "RECALL" switch to initiate the test. The message will appear on the LCD as shown below;

PRESET USER PRG.

- (2) Press the STORE switch. The data in Memory locations 1 through 50 will be duplicated to Memory locations 51 through 100.
- (3) If you won't to perform this function, press the "MEMORY" switch, and press the "↑" or "↓" switch to select other routine.

## 6. TEST 10-17: DRAM CHECK

(1) Select the test-number "10" through "17", and press the "RECALL" switch to initiate the test.

The LCD will indicate a message as shown below.

- (3) スピーカーからのクリック雑音を聴きながら、 ADシート内の調整用半固定ボリュームVR102 を回してクリック雑音が最小になる様に調整する。
- 5. **TEST5** ユーザーズ・メモリーのセッティング
  - (1) テスト5を選択し、RECALL キーを押す。

DIAGNOSTICS V \* . \* PRESTET USER PRG. 3

- (2) STOREスイッチを押すと、メモリーNo.51~100 までのメモリーに、No.1~50までのメモリー内容 がコピーされる。
- (3) コピーする必要のない時は、他のテストを選択する。
- 6. TEST 10~17 DRAM チェック
  - (1) テスト10~17を選択し、RECALL キーを押す。
  - (2) チェックされる DRAM を下表に示す。

DIAGNOSTICS V \* . \*
TEST DRAM ■ ■ ■

#### TEST DRAM ■■■

test-no. (テストNo.)	MSB	DRAM	IC-no.	LSB	message at the "冒口" section (日日日表示部)
10	IC202	IC201	IC206	IC205	THR
11	IC201	IC206	IC205	IC204	04B
12	IC206	IC205	IC204	IC203	08B
13	IC205	IC204	IC203	0000	12B
14	IC204	IC203	0000	0000	16B
15	IC203	0000	0000	0000	20B
16	1000	0000	0000	0000	- MX
17	0111	1111	1111	1111	+ MX

#### **CHECKS**

#### 1. PREPARATIONS

#### 1-1 Preparatory Settings

- Each load of the OUTPUT L and R connector is to be serially connected to a load resistor (10kohms)
- After inspection, set switches SW101 and 102 to "N".

#### 1-2 Measuring Instruments

- For the distortion measurement, a lowpass filter with cut-off frequency of 80 kHz and —6dB/OCT must be used.
- For the noise level measurement, a lowpass filter with the cut-off frequency of 12.7kHz and —6dB/OCT must be used.
- The output impedance of the AF signal generator must be less than 600 ohms.
- The input impedance of the measuring instruments must be over 1 Mohms.

#### 2. INSPECTIONS

#### 2-1 Gain

When a input signal of -16.0 dBm at 1 kHz is applied to the INPUT connector, output signals of  $-6.0 \pm 1 dBm$  will be obtained at the OUTPUT L and R connectors.

#### 2-2 Frequency Characteristics

When an input signal of -30dBm is applied from the INPUT connector, the frequency characteristics of the OUTPUT L and R connectors are within the range listed in the table below. The reference frequency used is 1kHz.

20Hz ~ 11kHz	$0\pm\frac{1}{2} dB$
12kHz	$0\pm\frac{2}{3}$ dB

# ■検査

#### 1-1 準 備

○ボリューム及びスイッチは特に指定のない限り下記の状態とする。

INPUT VOL. SW 101, 102

MAX

"T" (TEST)

#### ○ OUTPUT 端子の負荷

OUTPUT L, R とも PHONE JACK 端子 10k Ω ○尚、テスト終了後、SW101, 102 は "N" 側にするこ と。

#### 1-2 測定器

- (1) 歪率測定時は **80KHz -6dB/OCT** のフィルター を使用のこと。
- (2) ノイズレベル測定時は **12.7KHz —6dB/OCT** の フィルターを使用のこと。
- (3) 発振器の出力インピーダンスは **600**  $\Omega$  以下のこと。
- (4) 測定器の入力インピーダンス  $1M\Omega$  以上のこと。

#### 2-1 利 得

INPUT 端子より -16.0dBm/1kHz の入力信号を印加した時、OUTPUT L 及び R 端子に次のような-6.0  $\pm 1.0$ dBm の出力信号が得られること。

#### 2-2 周波数特性

INPUT 端子より - 30dBm の入力信号を印加した時、 L, R の各 OUTPUT 端子での周波数特性は、1kHz を 基準として下表の範囲内のこと。

20Hz ~ 11kHz	$0\pm\frac{1}{2}$ dB
12kHz	0±2/3dB

#### 2-3 歪 率

2-2 の状態での歪率は 0.08 %以下のこと。

#### 2-4 最大出力

1-1の状態で INPUT 端子に 1 kHz の入力信号を印加した時、L, R の各 OUTPUT 端子に - 6.0dBm の出力信号が歪率 0.1%以下で得られること。

## 2-3 Distortion Factor

When an input signal of -30dBm is applied from the INPUT connector, the distortion factor should be less than 0.08 %.

#### 2-4 Maximum Output

When a 1kHz input signal is applied to the INPUT connector according to the conditions of section 1-1, the maximum level of the output signal at the L and R OUTPUT connectors should be -6.0 dBm with a distortion factor of less than 0.1%.

#### 2-5 Meter Seusitivity

When 1kHz input signals are applied to the INPUT connector according to the conditions of section 1-1, and adjust the input level to obtain a signal of  $-13\pm3$  dBm at the OUTPUT connector L, the "O" level of the level meter is illuminated. At this point, all level except "O" are illu-

When the input is opened, all level LED are turned out.

#### 2-6 Muting Circuit

minated.

After the POWER switch is turned ON, muting is effective for three or four seconds, and no output signals are generaed. After this time delay output signals can be obtained at each OUTPUT connector.

#### 2-7 Noise Level

With the same conditions as stated in 1-1, the noise levels of the L and R OUTPUT connectors are less than — 86dBm.

#### 2-5 メーター感度

1-1 の状態で、INPUT 端子に 1kHz の入力信号を 印加してLのOUTPUT端子に-13±3dBm の出 力信号が得られるように入力信号のレベルを調整し た時、レベルメーターの "O" が点灯すること。 この時、"O" 以下の LED は全て点灯していること。 又、無信号時には、全ての LED が消灯すること。

#### 2-6 ミューティング回路

パワースイッチを ON した後、 $2 \sim 4$  秒間はミューティングがかかり、出力信号が出ず、その後出力信号が各出力端子に得られること。

#### 2-7 ノイズレベル

1-1 の状態で、OUTPUT L, R のノイズレベルは-86dBm 以下のこと。

# **ADJUSTMENTS**

#### 1. PREPARATIONS

- Turn the INPUT LEVEL to maximum.
- Leave the slide switches SW101 and SW102 on the AD circuit board set to the TEST position.
- The load of the L and R OUTPUT connectors are to each be srially connected to a load resistor (10k ohms).
- After the adjustments have been performed, turn the switches to the NOR-MAL position.

#### 2. ADJUSTMENTS

#### 2-1

Apply an input signal of  $-15.5 \, \text{dBm}$  at 1kHz to the INPUT connector and adjust VR101 so that the output signal is clipping slightly at the L and R OUTPUT connectors.

Adjust VR102 so that the clipping signal is vertically symmetrical.

Afterwards, adjust VR 101 until the distortion waveforms of the L and R OUTPUT connectors for mininum distortion. And adjust VR103 so that the output signals of the L and R OUTPUT connectors become  $-5.5\pm0.5$ dBm.

#### 2-2

When the INPUT is opened, the noise levels of the L and R OUTPUT connectors should be less than  $-86 \, \mathrm{dBm}$ .

If noise levels are not within rated levels, adjust VR102 so that the noise levels are within rated values.

# **ERROR MESSAGES**

EO	ROM sum check error.
E1 RAM(CPU's) read/write error.	
E2	RAM (IC211) read/write error.

# ■調整

#### 1. 準備

- INPUT LEVEL ボリュームを、最大にセットする。
- ●SW101, SW102 を、"T"側にセットする。
- L, R の OUTPUT 端子に、10kオームの負荷を セットする。
- ●調整終了後は、SW101, SW102 を、"N" 側 に戻しておくこと。

#### 2. 調整

#### 2-1-1

INPUT 端子より - 15.5dBm/1kHz の入力を 印加し、OUTPUT L, R 端子の出力が少し歪み 始めるように VR101 を調整した後、信号が上下 対称に歪み始めるように VR102 を調整する。

#### 2-1-2

この後、OUTPUTL, R 端子において、歪み波形が出る直前の位置に VR101 を調整する。そして、次に、OUTPUTL, R 端子の出力が、 $-5.5\pm0.5$ dBm となるように VR103を調整する。

#### 2-2


1項の状態で、INPUTに信号を印加しない時、OUTPUT端子でのノイズレベルは、-86dBm以下であること。この規格に入らない場合は、VR-102を最小限動かして、ノイズレベルが規定値内に入るように調整する。

# ■エラーメッセージ

EO	ROM チェックサムエラー
E1	RAM (CPU内部) リードライトエラー
E2	RAM (IC211) リードライトエラー

#### ■MIDI DATA FORMAT

#### 1. Reception Conditions

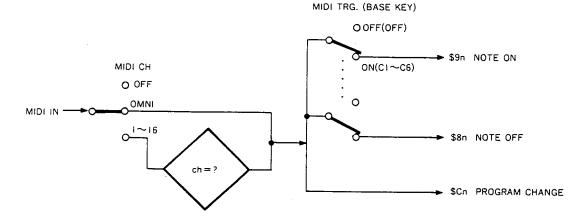

#### 2. Reception Data

#### 2-1. Channel Information

#### 1) Channel Voice Message

#### **O** NOTE ON

Can be received on the MIDI Channel set in the currently active bank.

In the case of effect 28 (ADR-Noise Gate) and effect 30 (Reverb & Gate), if the MIDI TRG parameter is ON a NOTE ON message received will trigger the effect.

If effect 31 (PitchA) is selected, the received NOTE ON data is used to set the pitch shift of the effect. NOTE ON data will be ignored, however, if the BASE KEY parameter is set to OFF.

STATUS 1001nnnn (9nH) n=0 (channel no.1)-

15 (channel no. 16)

NQTE NO. Okkkkkk

k=0(C-2)-127 (G8)

VELOCITY Ovvvvvv

v = 0 - 127

#### **2** NOTE OFF

Although this message causes no direct action in the SPX50D, it is essential to signal the end of a NOTE ON message. The conditions for NOTE OFF message reception are the same as for NOTE ON reception, as described above.

STATUS 1000nnnn (8nH) n=0 (channel no.1)-15(channel no.16)

NOTE NO. Okkkkkk

k=0(C-2)-127(G8)

VELOCITY 0vvvvvv

v = 0 - 127

#### **9** PROGRAM CHANGE

Can be received on the MIDI channel set in the currently active bank.

The effect assigned to the received program number in the program assignment table will be selected.


STATUS 1100nnnn (CnH) n=0 (channel no. 1)-15 (channel no. 16)

PROGRAM Oppppppp p=0-127

NO.

# ■ MIDI データフォーマット

#### 1. 受信条件

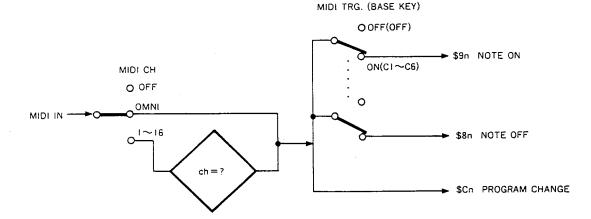

#### 2. 受信データ

#### 2-1. チャンネルインフォメーション

## 1) チャンネルボイスメッセージ

#### ①ノートオン

現在選択されているバンクの MIDI チャンネルで受信可能です。

現在選択されているバンクの MIDI チャンネルで 受信可能です。

"28. ADR-Noise Gate" または "30. Reverb & Gate" のプログラムになっている場合は、MIDI TRG. のパラメータが ON になっていればトリガーとして受信します。また、"31. Pitch A" のプログラムになっている場合は、音程差をコントロールするためのメッセージとして受信します。ただし、BASE KEY のパラメータが OFF になっていると受信しません。

ステータス 1001nnnn (9nH) 
$$n=0$$
 (チャンネ ルナンバー  $I$ )  $\sim I5(チャン ネルナンバー  $I6)$$ 

ベロシティ Ovvvvvv 
$$v=0\sim 127$$

#### ②ノートオフ

このメッセージは、本機にとっては意味を持ちませんが、ノートオン・メッセージの終了を判断する上で必要なメッセージです。なお、受信条件は、 ①のノートオン・メッセージの場合と同じです。

ステータス 1000nnnn(8nH) 
$$n=0$$
 (チャンネル ナンバー  $I$ )  $\sim$   $I$ 5(チャンネル ナンバー $I$ 6)

$$\mathcal{I}-\mathsf{F}\,\mathsf{No}.$$
 Okkkkkkk 
$$\mathsf{k}=\mathsf{O}(\mathsf{C-2})\sim\mathsf{I27}$$
 (G8)

ベロシティ **OVVVVVV** v= 0 ~127

#### ③プログラムチェンジ

現在選択されているバンクの MIDI チャンネルで 受信可能です。

受信すると、そのバンクのプログラムチェンジ表にもとずき、任意のプログラムが呼び出されます。


プログラムNo. Oppppppp  $p=0\sim127$ 

 Fur	ction:	RCCOgnizacu	Remarks
Basic	Default : Changed :		memorized
	Default : Messages : Altered :	x	memorized
Note Number :	True voice:	o 0 - 127 *1	:
Velocity		X X	
After Touch	· .	X X	:
Pitch Ber	nder :	x	; ;
Control Change	: : : :	X	: : : :
	: :		
Prog Change :		*2	+ : :
System E	xclusive :	x	•
	Song Sel :	x x x	;
	:Clock : e :Commands:		*
:A1	cal ON/OFF : 1 Notes OFF: tive Sense : set	: <b>x</b>	*
Notes		*1 Note ON/OFF is recognized on change and trigger on.  *2 For program 1 - 128, memory selected.	_

 ■SPX50D OVERALL CIRCUIT DIAGRAM SPX50D FP 1/4 FP 3/4 △ MEMORY STORE COMPARE INSERT UTILITY TRIGGER MEMORY INPUT LEVEL LED Driver LED 408 Notes) FP Circuit Board Notes) AD Circuit Board /<u>\_</u>/ IC401 : IR2E19(IG136600) IC101,102,113 : NJM4558DV(IG001390) FP 2/4 103,112 : M5238P(XA013001) 104,111 : TC4053BP(IG055100) PARAM 1SS133(IF003450) 105 : IR9311(IG134900) 106 : PCM54HP(XA566001) 107 : YM3901(XC282001) LED401~407 : LN242RP RED(VA262300) 201~206 : M5M4416P-12(IG122320) RAM 64K 408 : LN524RKS(VA026000) 207 : YM3804(IT380400) 409~415 : SX-25K(VA902500) 208 : YM3807(IT380700) 210 : HD63B50P(IG147300) TUNER OUT 211 : TC5565L-12,15(IG148500) RAM Alok EWH-14A-(VA757600) INPUT LEVEL 212 : MBM27C512(XF035A00) 213 : SN74HC02N(IR000250) 5. Push Switch 214,220 : SN74HC74N(IR007450) KHH10908(KA907030) 215 : HD74LS266P(XA379001) EX-NOR 216 : PST518A(IG124300) 217 : SN74HC14N(IR001450) 218 : SN74HC139N(IR013950) 219 : SN74HC32N(IR003250) 221 : SN74HCU04N(IG142250) 222 : HD6303Y(XE386A00) 224 : SN74HC245N(IR024550) TRANSCEIVER 225 : SN74HC174N(IR017450) D FF 2.Photo Coupler IC209 : TLP552(IK000470) DT201,202 : DTC143%F(VA024600) Digital Q101 : 2SC3064 F,G(VC845000) Dual 102.301.302 : 2SA1015 Y(TA101521) 103,104 : 2SC2878 A.B(IX604200) 201~206,303,304 : 2SC1815 Y(IC181520) 4.Transistor Array IC223 : TD62506P(IG138700) D101~111,201,202 : 1SS133(IF003450) 6.Zener Diode ZD301 : RD5.6EB2 5.6V(IF002140) OUTPUT INPUT RM203,207 : RMLS4(HZ002870) 201~210 : RMLS8-103J(HZ004730) 211 : RMLS4-472J(VA069700) 8.Semiconductive Cera. Cap. Marked (t) =: 0.1 μ F 16V M(FZ004170) 9.Ceramic Resonator X201 : 4M CSA4.00MG(QU004800) L201~206 : FL5R200QNT(VB835000) 20 \( \mu \) H 11.Relay RY301 : DC RZ-12 12V(KC001300) IC217 INSERT IN IC107 YM3901 A D A 12.Lithium Battery CR2032-P5-2(VB436900) Transceiver DIN 201 1/2 RESET THI DRST THI DN THI DN THI DOUT THI DOUT DOUT DINZ SYD DEGI CPIN A SW2 A SW2 A SW1 A SW1 D FF R241~R246 MIDI IC 219 2 3 RS THRU Transistor Array PW Notes) PW Circuit Board 1c220 Y I3 IO 1C501 : NJM7805FA(XC719001) 502 : NJM7812FA(XC720001) ACI20V 503 : NJM7912FA(XC721001) U.S.& Canadian 🗟 ACIA MOD S2VB20 2A 200V(IH001120) Stack RAMA C 220∼240V & West German & Models ESB-8213A(KA803610) M HDAT1
HDAT3
HDAT3
HDAT4
HDAT5
HDAT6
HDAT6
HDAT7
NDAT7
NDAT7
NDAT7
NDAT7
NDAT7
NDAT10
HDAT11
HDAT12
HDAT12
HDAT12
HDAT12
HDAT13
HDAT14 MADR BUS AC IOOV IC219 FOOT SW BYPASS KEC - 91414 🗥 KEC-91412 🟂 KEC-91413 🟂 SPX50D SPX50D

# ■CIRCUIT BOARDS(シート基板図)

#### • AD Circuit Board

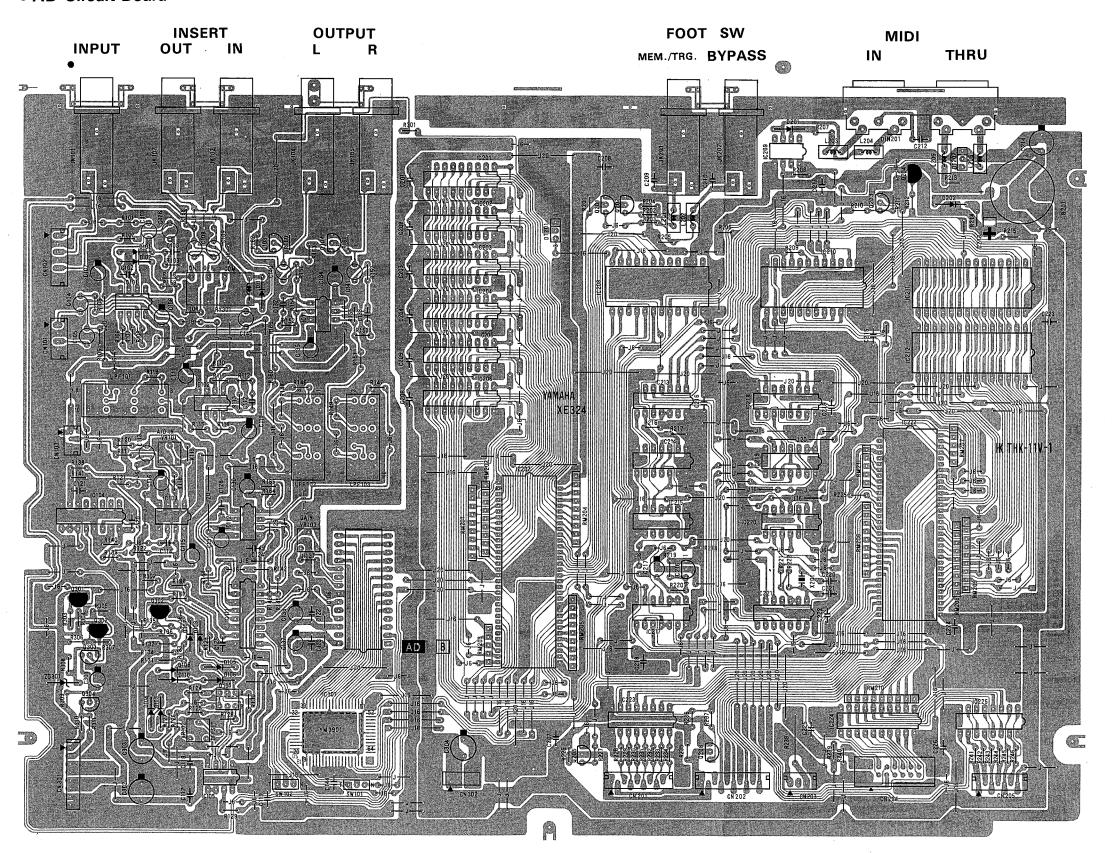

Components side (部品側)

#### Notes)

※ Circuit Board

	* Circuit board	
		AD (VE981700) XE324B0
	1. IC	
İ	IC101, 102, 113:	NJM4558DV (IG001390) OP AMP.
	IC103, 112:	M5238P (XA013001) OP. AMP.
i	IC104, 111:	TC4053BP (IG055100) MULTIPLEXER
	IC105:	IR9311 (IG134900) COMPARATER
	IC106:	PCM54HP (XA566001) DAC
i	IC107:	YM3901 (XC282001) ADA
	IC201~206:	M5M4416P-12 (IG122320) RAM 64K
	IC207:	YM3804 (IT380400) DSP
	IC208:	YM3807 (IT380700) MOD
	IC210:	HD63B50P (IG147300) ACIA
	IC211:	TC5565L-12,15 (IG148500) RAM
	IC212:	MBM27C512 (XF035A00) OTPR
	IC213:	SN74HC02N (IR000250) NOR
	IC214, 220:	SN74HC74N (IR007450) D FF
ı	IC215:	HD74LS266P (XA379001) EX-NOR
	IC216:	PST518A (IG124300) RESET
	IC217:	SN74HC14N (IROO1450) INVERTER
	IC218:	SN74HC139N (IRO13950) DECODER
	IC219:	SN74HC32N (IR003250) OR
ļ	IC221 :	SN74HCU04N (IG142250) INVERTER
	IC222 :	HD6303Y (XE386A00) CPU
	IC224:	SN74HC245N (IRO24550) TRANSCEIVE
	IC225 :	SN74HC174N (IRO17450) D FF

2. Photo Coupler IC209 :

TLP552 (IK000470)

3. Transistor DT201, 202 : Q101 : Q102, 301, 302 : Q103, 194 :

0201~206, 303, 304 :

DTC143XF (VA024600) Digital 2SC3064 F, G (VC845000) Dual 2SA1015 Y (IA101521) 2SC2878 A, B (IX604200) 2SC1815 Y (IC181520)

4. Transistor Array IC223 :

TD62506P (IG138700)

5. Diode

D101~111, 201, 202 : 1SS133 (IF003450)

6. Zener Diode ZD301 :

RM211:

RD5.6EB2 5.6V (IF002140)

7. Resistor Array RM203, 207 : RM201~210 :

RMLS4 (HZ002870) RMLS8-103J (HZ004730) RMLS4-472J (VA069700)

8. Semiconductive Cera. Cap

0.1μF 16V M (FZ004170)

9. Ceramic Resonator X201 :

4M CSA4.00MG (OU004800)

10. Coil L201~206:

FL5R200QNT (VB835000) 20µH

11. Relay RY301 :


DC RZ-12 12V (KC001300)

12. Lithium Battery

CR2032-P5-2 (VB436900)

## • FP Circuit Board

# FP1/4

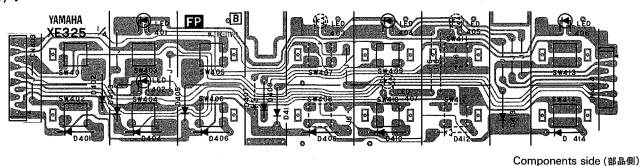



△ SW401	MEMORY SW403	STORE SW405
▽ SW402	PARAM- ETER SW404	RECALL SW406

COMPARE	INSERT	UTILITY
SW407	sw409	SW411
REV/DLY	MOD.	DIST.
Group	OTHERS	Group
SW408	SW410	SW412

TRIGGER SW413 BYPASS SW414


FP2/4

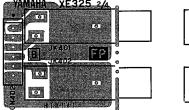

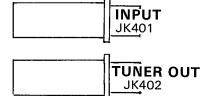


Components Side (部品側)


## FP3/4

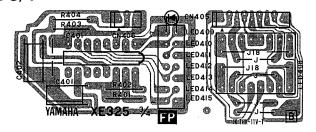

Components side (部品側)



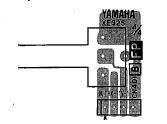

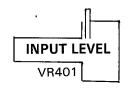

Components side (部品側)

LED409	····
LED410	i
LED411	1FD408
LED412	LLD400
LED413	
LED414	
LED415	MEMORY
	LED411 LED412 LED413 LED414

#### Notes)

**※ Circuit Board** 

FP (VE981900) XE325B0

1. IC IC401:

IR2E19 (IG136600) LED DRIVER

2. Diode

1SS133 (IF003450)

LED401~407 : LN242RP RED (VA262300) SW indicators LD408 : LN524RKS (VA026000) MEMORY display LED409~415: SX-25K (VA902500) Meter


4. Variable Resistor

A10K EWH-14A- (VA757600) INPUT LEVEL

5. Push Switch

KHH10908 (KA907030)

# • PW Circuit Board

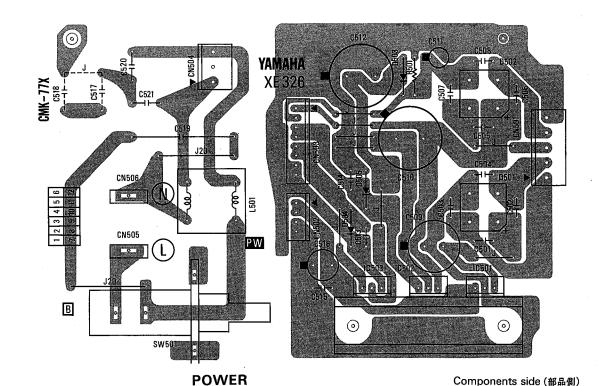

Notes)

PW (VE985200) XE326B0 J, U, C PW (VF063400) XE326B0 H, D

1. IC IC501: IC502:

IC503:

NJM7805FA (XC719001) 5V NJM7812FA (XC720001) 12V NJM7912FA (XC721001) -12V

2. Diode

D503~505:

S2VB20 2A 200V (IH001120) Stack 10E-1 (IH000590)

3. Semiconductive Cera. Cap.

0.1 µF 16V M (FZ004170)

4. Coil

PLA3021A (GD900760)

5. Push Switch

ESB-8213A (KA803610) POWER

3NA-VE89190 ⚠ : FP 

# **DIGITAL SOUND PROCESSOR**



#### Notes DESTINATION ABBREVIATIONS

J : Japanese model

U: U.S.A. model

C: Canadian model

X : General model

M: South African model

H: North European model

A : Australian model

E: European model

D: West German model

B: British model

I : Indonesian model


ſ	Ref. No.	Part No.	Description	1	部品名	Remarks	ランク
*		VE981700	Circuit Board	AD	ADシート		52
±	Ċ	VE981900	Circuit Board	FP	F P シート		16
=				PW PW	PWシート PWシート	J,U,C H,D	12
*		VF053400	Circuit Board	· •			
±		VE981700		A D	A D シート		52
- 1		IG001390		NJH4558DV H5238P	I C	OP AMP. OP AMP.	03
		XA013001 IG134900	• •	IR9311 .	I C	COMPARATER	04
		IG055100		TC4053BP	I C	MULTIPLEXER	05
Ī		IG124300	IC	PST518A	I C	RESET INVERTER	03
		IG142250 IR000250		SN74HCUO4N SN74HCO2N	IC	NOR	03
		IR001450		SH74HC14N	IC	INVERTER	05
- [		IR003250		SN74HC32N SN74HC74N	I C	OR D FF	03
- 1		IR007450 IR013950		SN74HC139N .	IC	DECODER	0.5
		IR017450		SN74HC174H	I C	D FF	05
		IR024550	IC	SN74HC245N	I C	TRANSCEIVER EX-NOR	06
- {		XA379001 IG147300	10	HD74LS266P HD63B50P	IC	ACIA	09
*		XE386A00	IC	HD6303Y	I T C	CPU	09
		IG122300	IC	MB81416-12 TC5565L-12,15	I C	DRAM 64K	11 21
		IG148500 XF035A00	110	MBM27C512-25	I C	OTPR	10
7		IT380400	IC	YH3804	I C	DSP	17
		IT380700	1C	Y H 3 8 0 7 P C H 5 4 H P	I C	HOD	15
		XA566001 XC282001		YH3901	I C	ADA	15
		1K000470	Photo Coupler	TI.P552	フォトカ <u>ブラ</u>		06
		VA024800	Digital Transistor	DTC143XF 2SA1015 Y	デジタルトランジスタ トランジスタ		03
	-		Transistor Transistor	2SC1815 Y	トランジスタ		03
		IX604200	Transistor	2SC2878 A.B	トランジスタ		03
		VC845000	Transistor	2SC3064 F,G TD62506P	トランジスタ トランジスタアレイ	Dual	03
		IF003450	Transistor Array	155133	ダイオード		01
		1 IF002140	Zener Diode	RD5.6EB2 5.6V	ツェナーダイオード		01
		VB135500	Trimmer Potentiometer	B3OK 3P EVN	半固定VR 半固定VR		01
<b></b>		VE086200	Trimmer Potentiometer Trimmer Potentiometer	BSOX 3P EVN	半固定 V R		01
7		HL313680	Netal Oxide Film Resistor	6.8Ω 1V J	酌 化 金 属 被 膜 抵 抗		01
		HZ002870	Resistor Array	RMLS4	抵抗アレイ抵抗アレイ		02
		HZ004730	Resistor Array Resistor Array	RHLS8-103J RHLS4-472J	抵抗アレイ		01
	<del> </del>	VD303500	LC Filter	TFB-3D	LCフィルター	100 "	05 01
	}	1 48835000	nirati	FL5R2000NT	コイル 半導体セラコン	20 μ Η	01
	ļ	FZ004170	Semiconductive Cera. Cap. Ceramic Resonator	4H CSA4.00HG	セラミック振動子		03
		1 KC001300	) Relay	DC RZ-12 12V	リレー	THOUS OUTDUS	07
		LB20260	Phone Jack	HLJ0520	ホーンジャック DINジャック	INPUT, OUTPUT	03
;		VF34220	DIN Jack	5P SK0268 2	1-	and a party of the control of the co	1 1
4		VE98190	Circuit Board	FP	FPシート	I CD DOINCO	16 05
	<u> </u>	IG13660	0 IC	IR2E19 ISS133	IC ダイオード	LED DRIVER	01
		IF00345	Diode	LN242RP RED	LED	SV indicator	01
		VA02600	O LED Display	LN524RKS	LEDディスプレイ	HEHORY display	05 06
	1	VA90250	O LED Display	SX-25K A10K EWH-14A-	LEDディスプレイ ロータリーVR	INPUT LEVEL	03_
		VA75760	O Variable Resistor O Push Switch	KHH10908	ブッシュSW		01
		LB30180	O Phone Jack	HLJ0544	ホーンジャック	Honaural	03
		11500530	O Circuit Board	PV	PWシート	J.U.C	12
;	•	VE96340	O Circuit Board	PV	P W シート	H, D	12
·		XC71900	1 10	NJH7805FA	I C	5 V 12 V	03
		XC72000 XC72100	1110	NJH7812FA NJH7912FA	IC	-12V	03
		IH00059	0 Diode	10E-1	ダイオード		01
	L	111100112	OlDiode Stack	S2VB20 2A 200V 2200 μ F 16V	ダイオードスタック ケミコン		03
		UV63922	O Electrolytic Cap. O Electrolytic Cap.	2200 μ F 16 V 2200 μ F 25 V	ケミコン		03
		F138322	O Ceramic Cap.	2200PF 400V	規格認定コン	u n	01
		F138347	Olfaramic Cap.	4700PF 400V 0.1 μ F 16V H	規格認定コン 半導体セラコン	H,D	01
	<u> </u>	FZ00417	O Semiconductive Cera. Cap.	PLA3021A	コイル		06
		KA80361	O Push Switch	ESB-8213A	ブッシュ S W	POWER	03
		ì		16X2	LCD ASS'Y		17
	<b>‡</b>	[VF05540	OO LCD Assembly	11000		ランク: Japan	only

⇒ New Part (NR)

ランク:Japan only

Ref. No.	Part No.	Descript	ion	部品名	Remarks	ランク
	VB352500	LCD Display	LCM-522-02NE-6	液晶ディスプレイ	,	17
	VD279200 VD654200 VD279800	AC Cord	7A 2.5H 10A 2.44H 6A 2.5H	電源コード 電源コード 電源コード	J U.C H.D	04 05 08
- 1	XE601A00	Power Transformer Power Transformer Power Transformer	:	電源トランス 電源トランス	J U.C H.D	09 09 09
	VC362700	Ferrite Core	FR25/15/12-1400	フェライトコア		04
	VB436900	Lithium Battery	CR2032-P5-2	リチュウム無池		05
		•				
	· · · · · · · · · · · · · · · · · · ·					_
			£.			
		7,				
	,					
		•				
					·	
			·			

# ■OVERALL ASSEMBLY(総組立)

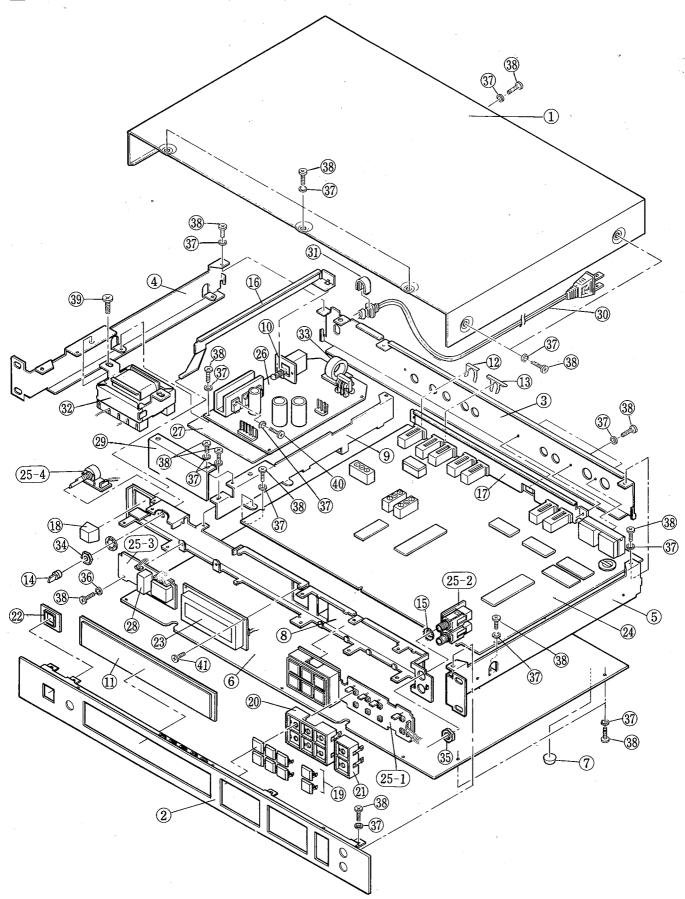

Ref. No.	Part No.	Description	on	部品名	Remarks	ラン
- 1		Top Cover		トップカバー		08
		Front Panel Rear Panel		フロントパネルリアパネル	J	06
3 0	VF055100	Rear Panel		リアバネル	U.C	06
3 0	VF055800	Rear Panel		リアパネル	H,D	06
		Side Frame	Left	サイドフレーム		04
		Side Frame Bottom Cover	Right	サイドフレーム ボトムカバー	,	06
	CB037120			スペリ座		01
		Sub Chasis		サプシャーシ		05
9	VF247100	Stay		ステー		03
		Switch Panel		スイッチパネル		02
		Heter Cover Angle Bracket,U	HLJ0999-01-480	メーターカパー リ字金具		01
		Angle Bracket.T	HLJ0999-01-490	丁字金具		01
	VA029300			ノブ		01
	AA805820			スペーサー		01
	VE624200			ロッドロット	<i>'</i>	03
		Angle Bracket		サ プ 金 具 ブ ッ シ ュ ボ タ ン		03
	VD164800	Push Button		<u>  フッシュホメン</u>   ファトップキャップ	1	01
	VD164800			ノブトップキャップ	1	01
	VD379800			ノブトップキャップ	HEHORY	01
19	VD377400	Key Top		ノプトップキャップ	PARAMETER	01
	VD379900			<u>  ノプトップキャップ</u>   ノプトップキャップ	RECALL	01
	VD758600 VF064200			ノブトップキャップ  ノブトップキャップ	COMPARE	۱۷۱
	VF064200			ノブトップキャップ	REV/DLY Group	
	VF084400			ノブトップキャップ	INSERT	
19 €	VF064500	Key Top		ノフトップキャップ	HOD. OTHERS	-
	VD380400		1	ノフトップキャップ	UTILITY DIST. Group	01
	VF064700		1	  ノプトップキャップ  ノプトップキャップ	TRIGGER	
19 0	VF064800 VF064900	Ney Top		ノフトップキャップ	BYPASS	
		Escutcheon	(6)	SWェスカッション		_ _
21 0	VF065000	Escutcheon	(W)	SWエスカッション	· ·	1.
22 0	VF452600	Escutcheon	(L)	SWエスカッション	POWER SW	02
23	VF065400	LCD Assembly	16X2	LCD ASS'Y	1	17 52
24	VE981700	Circuit Board	AD FP	A D シート F P シート		16
25 25-1	A 6 8 9 1 3 0 0	Circuit Board Circuit Board	FP 1/4	FP 1/49-1		-  <u>-</u>
25-2		Circuit Board	FP 2/4	FP 2/4シート		
25-3	}	Circuit Board	FP 3/4	FP 3/4シート		
25-4	Ì	Circuit Board	FP 4/4	FP 4/45-1	1. ". "	12
26	VE985200	Circuit Board	PW	P W シート	J,U,C H,D	12
28		Circuit Board	PW	P W シート 絶謀シート	עייון יי	02
27 28		Isolation Sheet LED Cover		LEDカパー		02
29		Shield Plate		シールド板		0 1
30 0	VD279200		7A 2.5H	シールド 板 電源コード	J	04
30	VD854200	AC Cord	10A 2.44H	電源コード	U, C	0.5
30	VD279800		6A 2.5H	電源コードコードストッパー	H.D U.C	02
31	IVD705000	Cord Strain Relief		コードストッパー	H, D	0 1
31	YESO0400	Cord Strain Relief Power Transformer		電源トランス	J	09
32 0	XEGOIAOO	Power Transformer		電源トランス	U.C	09
32	XE602A00	Power Transformer		電源トランス	H, D	09
33		Ferrite Core	FR25/15/12-1400			0
34		Hexagonal Nut	7.0 ZHC2BL 9.0 FNH33G	特 種 六 角 ナ ッ ト       特 殊 六 角 ナ ッ ト		ő
35	LX200080	Hexagonal Nut Toothed Lock Vasher	A3 FCH3BL	<b>南付座金内齿型</b>		0
36 37	EV413030	Spring Washer	3 ZHC2Y	コスプリングワッシャー	-	0
38	ED330086	Bind Head Screw	3.0X8 FCH3BL	パインド小ネジ		0
39	ED340086	Bind Head Screw	4.0X6 FCH3BL	パインド小ネジ		0
40	ED030086	Bind Head Screw	3.0X8 ZNC2Y 2.6X5 FCH3BL	<u>  パインド小ネジ</u>   ナベ小ネジ		0
41	EA326058	Pan Head Screw	Z.OAS FUNSEL	7 3 3 7 7		
		İ		1		1
	1					
	1					
4	· .					
		1		:		
	1 :				1	1
	:			<u>;</u>		
	:			:		$\dashv$
,						

⇒ New Part (NR)

ランク: Japan only