

DAIHATSU
TERIOS
 J100

**Service
 manual**



SECTION INDEX

SECTION NAME	SECTION
GENERAL INFORMATION	GI
MAINTENANCE	MA
ENGINE MECHANICAL	EM
EMISSION CONTROL	EC
EFI SYSTEM	EF
LUBRICATION SYSTEM	LU
COOLING SYSTEM	CO
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
CLUTCH	CL
MANUAL TRANSMISSION	MT
AUTOMATIC TRANSMISSION	AT
TRANSMISSION & TRANSFER	TR
PROPELLER SHAFT	PR
FRONT & REAR DIFFERENTIAL	DF
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
BRAKE (Including A.B.S)	BR
STEERING	SR
BODY	BO
BODY ELECTRICAL (Including Airbag system and immobilizer system)	BE
HARNESS & WIRING DIAGRAM	HW