STEERING		
	Nm	lbf ft
Clamp bolt nuts	14	10
Ball joint nuts	40	30
Universal joint pinch bolt	35	26
Drop arm nut		130
Steering wheel nut		28
Sector shaft cover to steering box		16 to 20
Tie bar to steering box		60
Steering box to chassis		60
Power steering pump mounting		26
Flow control valve cap, power steering pump		30 to 35
Power steering pump cover to body screws.		15 to 17
Pulley bolt, power steering pump		10 to 12
Union bolt, inlet adaptor, power steering pump		28 to 30
Steering column bracket nuts		20
FRONT SUSPENSION		
Drag link to axle	40	30
Securing ring for mounting turret		10
Radius arm to axle/chassis		130
Mounting arm to chassis		65
Panhard rod to axle	89	65
Panhard rod to mounting bracket		65
Tie bar to Panhard rod		60
REAR SUSPENSION		
Levelling unit to rear axle	176	130
Top link to levelling unit		85
Top link to mounting bracket	176	130
Upper joint to levelling unit	34	25
Lower joint to levelling unit		25
Bottom link to axle	176	130
Bottom link to chassis		90
Top link bracket to rear cross member		35
Levelling unit to cross member		35
Shock absorber to axle		40
BRAKES		
Brake pipe connections to:		
Brake calipers		9
—Jump hoses to brackets		8–10
—Jump hose to three-way connection		9
—Front caliper jump hoses		8–10
—Rear caliper jump hoses		8–10
—Jump hoses to calipers (all)		9
PDWA switch		1-1.3
Master cylinder to servo		10-12.5
Brake caliper to swivel pin housing		55–65
Handbrake linkage to transfer box		19-24
Brake disc to hubs	65–80	48–59
Bleed screws		lbf in 80–100
Support plate and tube to valve body (servo)		16–20
Separator shell to valve body (servo)		120-150
Clamp ring to servo		10-15

06 TORQUE WRENCH SETTINGS

ROAD WHEELS Wheel nuts	Nm	lbf ft
Alloy wheels	122–129	90-95
Steel wheels	102–115	75–85
BODY		
Rear seat belt inertia reel to body	68–81	5060
Rear seat belt guide bracket to body		15-20