16500B-02

| S | Е | R | V | | С | Е | Ν | 0 | Т | Е |
|--|--|---------------------------|---------------------|---------|--------|---|--|-----|-----------|---|
| 165 | SUPERSEDES: None 16500B Logic Analysis System Mainframe | | | | | | | | | |
| Seri | al Numb | ers: 0000 AA0 | 0A00000 00000000 | | | | | | | |
| Mai | nframe | RAM is | s Upgra | adabl | е | | | | | |
| | s Requi 3-5623 (Q | r ed: Qty 2) 8M | 1B SIMN | I, No P | arity | | | | | |
| Syst defa | ult 8MB. | The incr | ease in R | AM is | accomp | | o 16MB from blacing both fa 3-5623). | | | |
| To d lowi | | the amou No chan | | • | | | B mainframe ation is neede | • | | |
| Apply power to the mainframe. When power is complete, touch Configuration, then select Test. Note System Memory at the bottom of the Test menu. This mainframe has 8.0 MB of RAM installed. | | | | | | | | | | |
| | | | | | | | | (| Continued | đ |
| | | | | | | D | ATE: June 1 | 995 | | |

ADMINISTRATIVE INFORMATION

| SERVICE NOTE CLASSIFICATION: | | | | |
|------------------------------|----------------------|---|--|--|
| MODIFICATION AVAILABLE | | | | |
| ACTION CATEGORY: | AGREEABLE TIME | PERFORMANCE ENHANCEMENT SERVICE/RELIABILITY ENHANCEMENT | | |
| LOCATION CATEGORY: | CUSTOMER INSTALLABLE | AVAILABLE UNTIL: June 1997 | | |
| AUTHOR: RB | ENTITY: 0800 | ADDITIONAL INFORMATION: 16500B Service Guide 16500-97011 | | |

© 1995 AGILENT TECHNOLOGIES PRINTED IN U.S.A.



| System | Test | 0 | ancel |
|--------------------------------------|--------------------|------------------|---------------------------|
| | Touch Box to Los | d Test System |) |
| SLOT | Module Name – Code | Version Card | i ID Code |
| SVSTEM OPT 1 OPT 2 | Vi | 03.04 | |
| SLOT A SLOT B SLOT C SLOT D | 100/500MHz LA C V(| | 014 none 032 035 |
| SLOT E | 1M Sample LA E V | 03.04 | 034 |
| DOM | Version: 01.00 Su | stem Memory: 8.0 | MD |

To upgrade system RAM, perform the following procedures.

- 1. To upgrade system RAM, first remove power from the mainframe. Follow the procedures in the 16500B service manual chapter 6, "To remove and replace a SIMM memory".
- 2. After completing the service manual procedure, reapply power to the mainframe. Check to see that the power up RAM Test passes.
- 3. When power up is complete, touch Configuration, then select Test. Verify that 16 MB of System Memory is recognized by the mainframe.

| System | Test Cancel Touch Box to Load Test System | | | |
|--------------------------|---|----------------------------------|--|--|
| SLOT | Module Name Code Version | Card ID Code | | |
| SYSTEM OPT 1 OPT 2 | V03.04 | | | |
| SLOT D | 265 32K Scope A V03.03 100/500MHz LA C V03.04 1M Sample LA E V03.04 | 014 none 032 035 034 | | |
| ROM | Version: 01.00 System Memory: | 16.0 MB | | |