# 200CD WIDE RANGE OSCILLATOR

OPERATING AND SERVICE MANUAL

HEWLETT IN PACKARD



## CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

## WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.

For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



## OPERATING AND SERVICE MANUAL

(HP PART NO. 200CD-903)

## MODEL 200CD/CDR WIDE RANGE OSCILLATOR

SERIALS PREFIXED: 605-

Appendix C, Manual Backdating Changes, adapts this manual to serials refixed: 333-, 229-, 212-, 129-, and 103-, 005- and serials 22549 thru 1.

Copyright Hewlett-Packard Company 1955 P.O. Box 301 Loveland, Colorado U.S.A.

Printed: NOV 1965



## TABLE OF CONTENTS

1-6.   Differences Between Instruments   1-1   5-11.   Repair and Replacement   5-1-18.   Backdating Sheet   1-1   5-12.   Cabinet Removal   5-1-18.   Servicing Etched Circuit Boards   5-18.   Separation   Separation	1-1. Description   1-1   5-9. Amplifier Power Supply   1-1   1-8. Backdating Sheet   1-1   5-12. Cabinet Removal   5-12. Cabinet Removal   5-14. Servicing Etched Circuit   5-12. Cabinet Removal   6-14. Cabinet Repair   6-15. Cabinet Repair   6-16. Cabin	Section	Page	Section Page
1-6.   Differences Between Instruments   1-1   5-11. Repair and Replacement   5-1	1-6.    Differences Between Instruments			
1-18   Backdating Sheet	1-8   Backdating Sheet			5-11. Repair and Replacement 5-2
Page	Page			5-12. Cabinet Removal 5-2
PREPARATION FOR USE   2-1   5-18. Replacement of Lamps. RT1   2-1. Introduction   2-1   and RT2   5-2.   and RT2   5-2.   and RT2   5-2.   and RT2   5-2.   Eventually and Inspection   2-1   5-20. Tuning Capacitor Repair   5-2.   2-8. Power Requirements   2-1   5-20. Tuning Capacitor Repair   5-2.   2-8. Power Requirements   2-1   5-22. Range Switch Repair   5-2.   2-18. Power Cable   2-1   5-24. Adjustments   5-2.   2-18. Repacking for Shipment   2-1   5-26. Preliminary Checks   5-2-13. Calibration   5-2.   5-31. Calibration   5-2.   5-31. Calibration   5-3.   5-33. Operation   3-1   5-33. Operation   3-1   5-33. Operation   3-1   5-41. Output Imagedance   5-3.   5-43. Dial Accuracy   5-3.   5-43. Dial Accuracy   5-3.   5-43. Dial Accuracy   5-3.   5-43. Dial Accuracy   5-3.   5-44. Output Imagedance   5-3.   5-44. Output Imagedance   5-3.   5-44. Output Imagedance   5-3.   4-4. Output Imagedance   5-4.   5-43. Dial Accuracy   5-4.   5-44. Distortion   5-44. Output Imagedance   5-44.   5-44. Distortion   5-44.   5-44. Output Imagedance   5-44.	Description   PREPARATION FOR USE   2-1   2-1   Introduction   2-1   and RTZ   2-2-6.   Power Requirements   2-1   5-20.   Tuning Capacitor Repair   2-8.   Power Requirements   2-1   5-20.   Tuning Capacitor Repair   2-8.   Power Requirements   2-1   5-20.   Tuning Capacitor Repair   2-8.   Power Cable   2-1   5-24.   Adjustments   2-1   5-24.   Adjustments   2-1   5-24.   Adjustments   2-1   5-25.   Preliminary Checks   2-13.   Section   Page   5-33.   Output Voltage   0.1   Output Impedance   0.3-1   Distortion   0.3-1   5-39.   Performance Check   0.3-1   Distortion   0.3-1   5-41.   Output Impedance   0.4-1	Q4!	Domo	8
2-1. Introduction	2-1. Introduction   2-1			
2-3. Unpacking and Inspection	2-3. Unpacking and Inspection   2-1   5-20. Tuning Capacitor Repair   2-8. Power Requirements   2-1   5-24. Adjustments   2-1   2-11. 230-Volt Operation   2-1   5-26. Preliminary Checks   2-13. S-31. Calibration   5-37. Distortion   5-37. Distortion   5-37. Distortion   5-37. Distortion   2-11. Section   5-38. Output Voltage   3-11. Introduction   3-1   5-41. Output Impedance   5-42. Frequency Response   5-42. Frequency Response   5-42. Frequency Response   5-43. Dial Accuracy   5-43. Dial Accuracy   5-44. Distortion   5-42. Frequency Response   5-44. Distortion   5-44. Dist			
2-8   Power Cable   2-1   5-24   Adjustments   5-4	2-8.   Power Cable   2-1   5-24.   Adjustments   2-11   5-21.   20-101 (Operation   2-1   5-26.   Preliminary Checks   2-13.   Repacking for Shipment   2-1   5-31.   Calibration   2-37.   Distortion   2-37.   Distorti	2-3. Unpacking and Inspection	2-1	5-20. Tuning Capacitor Repair 5-4
2-11. 230-Volt Operation . 2-1	2-11. 230-Volt Operation			
2-13. Repacking for Shipment	2-13. Repacking for Shipment   2-1   5-31. Calibration   5-37. Distortion   5-37. Distortion   5-38. Output Voltage   1-15.			
Section	Section			, , , , , , , , , , , , , , , , , , ,
OPERATING INSTRUCTIONS	OPERATING INSTRUCTIONS   3-1   5-39. Performance Check   3-1. Introduction   3-1   5-41. Output Impedance   3-1. Introduction   3-1   5-42. Frequency Response   5-42. Dial Accuracy   5-43. Dial Accuracy   5-44. Distortion   10   10   10   10   10   10   10   1			5-37. Distortion 5-7
3-1	3-1			
3-3. Operation   3-1	Section			
Page	Page			
THEORY OF OPERATION	THEORY OF OPERATION	-		
4-1   General	## 4-1. General			5-44. Distortion 5-8
4-4. Frequency-Controlling Bridge	4-4. Frequency-Controlling Bridge   4-1   VI REPLACEABLE PARTS			Section Page
4-9. Amplifier	4-9. Amplifier			
Page	Section V MAINTENANCE	4-9. Amplifier	4-1	
Page	Section V MAINTENANCE	4-11. Output Circuit	4-1	
V   MAINTENANCE	V MAINTENANCE 5-1. Introduction			0-1. Non-Elisted Faits ,
V   MAINTENANCE	V MAINTENANCE 5-1. Introduction			APPENDIX
5-3. Periodic Maintenance	5-3. Periodic Maintenance			
5-5. Test Equipment	5-5. Test Equipment	5-3. Periodic Maintenance	5-1	
Page   Figure   Page   Pag	Figure  Page Figure  1-1. Model 200CD Wide Range Oscillator 1-1 5-3. Range Switch Detail	5-5. Test Equipment	5-2	
Figure Page Figure Page  1-1. Model 200CD Wide Range Oscillator 1-1 5-3. Range Switch Detail 5-3 3-1. Controls and Terminals	Figure  1-1. Model 200CD Wide Range Oscillator	5-7. Troubleshooting	5-2	C MANUAL BACKDATING CHANGES
Figure Page Figure Page  1-1. Model 200CD Wide Range Oscillator . 1-1 5-3. Range Switch Detail 5-3 3-1. Controls and Terminals	Figure  1-1. Model 200CD Wide Range Oscillator			
Figure Page Figure Page  1-1. Model 200CD Wide Range Oscillator . 1-1 5-3. Range Switch Detail 5-3 3-1. Controls and Terminals	Figure  1-1. Model 200CD Wide Range Oscillator			
Figure Page Figure Page  1-1. Model 200CD Wide Range Oscillator . 1-1 5-3. Range Switch Detail 5-3 3-1. Controls and Terminals	Figure  1-1. Model 200CD Wide Range Oscillator			
1-1. Model 200CD Wide Range Oscillator	1-1. Model 200CD Wide Range Oscillator		LIST OF ILLU	STRATIONS
3-1. Controls and Terminals	3-1. Controls and Terminals	Figure	Page	Figure Page
3-1. Controls and Terminals	3-1. Controls and Terminals	1-1. Model 200CD Wide Range Oscill	lator 1-1	5-3. Range Switch Detail 5-5
3-3. Balance Chart Operating Into 600-Ohm Load	3-3. Balance Chart Operating Into 600-Ohm Load	3-1. Controls and Terminals	3-0	5-4. Calibration Test Setup 5-6
600-Ohm Load	600-Ohm Load	3-2. Typical Output Connections	3-1	
4-1. Model 200CD Block Diagram 4-0 5-8. Model 200CD Voltage and Resistance 5-1. Left Side View Model 200CD 5-1 5-9. Model 200CD Schematic Diagram 5-16 5-9. Model 200CD Schematic Diagram 5-16	4-1. Model 200CD Block Diagram 4-0 5-8. Model 200CD Voltage and Rest 5-1. Left Side View Model 200CD 5-1 Diagram		3_1	5-7. Bottom View Model 200CD 5-8
5-1. Left Side View Model 200CD 5-1 Diagram 5-5-5-2. Right Side View Model 200CD 5-3 5-9. Model 200CD Schematic Diagram 5-10	5-1. Left Side View Model 200CD 5-1 Diagram			
	Table Page Table  1-1. Specifications	5-1. Left Side View Model 200CD .	5-1	Diagram 5-9
LIST OF TABLES	Table Page Table  1-1. Specifications	5-2. Right Side View Model 200CD.	5-3	5-9. Model 200CD Schematic Diagram 5-10
LIST OF TABLES	Table Page Table  1-1. Specifications			
LIST OF TABLES	Table Page Table  1-1. Specifications			
LIST OF TABLES	Table Page Table  1-1. Specifications			
	1-1. Specifications		LIST OF	TABLES
Table Page Table Pag		Table	Page	Table
	5.1 Togt Instruments Required 5.0 5.5 Distortion Test Frequencies.	1-1. Specifications	1-0	
5-1. Test Instruments Required 5-0 5-5. Distortion Test Frequencies 5-		5-1. Test Instruments Required	5-0	5-5. Distortion Test Frequencies 5-8
5-3. Tube Replacement List 6-	5-5. Tube Replacement List	o-o. Tube Replacement List		0-2. Replaceable Parts 0-0

Table 1-1. Specifications

FREQUENCY RANGE:	5 cps to 600 kc covered in five ranges
RANGES:	X1       5 cps       to       60 cps         X10       50 cps       to       600 cps         X100       500 cps       to       6 kc         X1000       5 kc       to       60 kc         X10000       50 kc       to       600 kc
ACCURACY:	$\pm 2\%$ including calibration error, warmup, changes due to aging of components, tubes, etc
DIAL:	6-inch diameter calibrated over $300^{\circ}$ of arc. 85 divisions. Total scale length, 78 inches
FREQUENCY RESPONSE:	±1 db entire frequency range (reference 1 kc)
OUTPUT:	160 milliwatts (10 volts) into 600-ohm rated load, 20 volts open circuit
OUTPUT BALANCE:	Better than 0.1% at lower frequencies and approximately 1% at higher frequencies
INTERNAL IMPEDANCE:	600 ohms. Output is balanced to ground for zero attenuation. (May be operated with one side grounded if desired.)
DISTORTION:	0.2% from 20 cps to 200 kc; $0.5%$ from 5 cps to 20 cps and from 200 kc to 600 kc
HUM VOLTAGE:	Less than 0.1% of rated output; decreases as output is attenuated
POWER:	$115/230 \text{ volts } \pm 10\%$ , 50-1000 cps, 90 watts
ACCESSORIES AVAILABLE:	### 11004A Line Matching Transformer (provides balanced output at any attenuator setting at 135 and 600 ohms)
	11000A Cable Assembly, 44 in. long, terminated each end with dual banana plugs
	$\ensuremath{\overline{\oplus}}$ 11001A Cable Assembly, 45 in. long, with one dual banana plug and one BNC male connector
DIMENSIONS:	Cabinet Mount: 7-3/8 in. wide, 11-1/2 in. high, 14-3/8 in. deep. (187, 3 x 292, 1 x 365, 1 mm)
	Rack Mount:
	12.5 12.5 10.0
	1 32 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
	15 7 15 7 15 7 15 7 15 7 15 7 15 7 15 7
	SIDE $6\frac{5}{8}$ REAR

Cabinet Mount: Net, 22 lbs. (9.9 kg). Shipping, 27 lbs. (12, 2 kg). Rack Mount: Net, 27 lbs. (12, 2 kg). Shipping, 37 lbs. (16.7 kg).

WEIGHT:

## SECTION I GENERAL INFORMATION

#### 1-1. DESCRIPTION.

1-2. The Model 200CD Wide Range Oscillator generates frequencies of excellent waveform in the subsonic, audio, and ultrasonic ranges (5 cycles to 600 kc, in five overlapping decade bands). The Model 200CD includes new design features which result in still finer performance than previous Hewlett-Pickard instruments. Special circuitry ensures and tput voltage of low distortion and high stability with any output load impedance from zero ohms to open circuit. Usefulness of the oscillator has been extended by designing the 200CD output circuit so that the instrument may be operated balanced as well as unbalanced and by providing a 600-ohm impedance match.

1-3. The Model 200CD is easy to operate: frequency and amplitude of the output voltage are set merely by operating dials on the control panel. The easily-read, 6-inch diameter frequency dial is calibrated over 300° of arc, and has an effective scale length of approximately 80 inches.

1-4. The Model 200CD furnishes up to 10 volts into a 600-ohm load (20 volts open circuit) at any frequency

from 5 cps to 600 kc. A bridged tee variable attenuator in the output circuit controls the output power.

1-5. The Model 200CD provides an ideal signal source for testing servo and vibrating systems, medical and geophysical equipment, audio amplifier circuits and transducers, sonar and supersonic apparatus, carrier telephone systems, video frequency circuits, and low radio-frequency equipment.

#### 1-6. DIFFERENCES BETWEEN INSTRUMENTS.

1-7. Hewlett-Packard uses a two-section eight-digit serial number (000-00000). If the first three digits of the serial number on your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual will define differences between your instrument and the Model 200CD described in this manual.

#### 1-8. BACKDATING SHEET.

1-9. A backdating sheet that makes this manual applicable for instruments with serial prefixes to 103, is provided in The Appendix of this manual.



Figure 1-1. Model 200CD Wide Range Oscillator

## **NOTES**

# SECTION II PREPARATION FOR USE

#### 2-1. INTRODUCTION.

2-2. This section contains information on unpacking, inspection, repacking, and installation or Model 200CD.

## 2-3. UNPACKING AND INSPECTION.

- 2-4. Unpack the instrument upon receipt and inspect it for signs of physical damage such as a cratched panel surfaces, broken knobs, etc. If there is any apparent damage, file a claim with the carrier and refer to the warranty page in this manual.
- 2-5. An electrical inspection should be performed as soon as possible after receipt. To aid in electrical inspection a list of performance checks are given in section V, paragraph 5-39. These procedures make a good test as part of incoming quality-control inspection.

#### 2-6. POWER REQUIREMENTS.

2-7. The Model 200CD requires a power source of 115/230 volts +10%, 50/1000 cps, 75 watts.

#### 2-8. POWER CABLE.

- 2-9. This Hewlett-Packard instrument is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument. The offset pin on the power cable three-prong connector is the ground pin.
- 2-10. To preserve the protection feature when operating instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the pigtail on the adapter to ground.

## 2-11. 230-VOLT OPERATION.

2-12. The Model 200CD is normally wired for operation from a nominal 115-volt supply. Operation from


a 230-volt source is easily accomplished by reconnecting the dual 115-volt primary windings of the power transformer from a parallel configuration to a series configuration. (See figure 5-9). At the time of the change, replace the 1.25 amp, slow-blow line fuse with a 0.6 amp, slow-blow line fuse.

## 2-13. REPACKING FOR SHIPMENT.

- 2-14. The following list is a general guide for repackaging an instrument for shipment. If you have any questions, contact your authorized Hewlett-Packard sales and service office. See map in Appendix.
- a. If possible, use the original container designed for the instrument.
- b. Wrap the instrument in heavy paper or plastic before placing it in the shipping container.
- c. Use plenty of packing material around all sides of the instrument and protect the panel with cardboard strips.
- d. Use heavy cardboard carton or wooden box to house the instrument and use heavy tape or metal bands to seal the container.
- e. Mark the packing box with "Fragile", "Delicate Instrument," etc.

## Note

If the instrument is to be shipped to Hewlett-Packard Company for service or repair, attach to the instrument a tag identifying the owner and indicating the service or repair to be accomplished. In any correspondence be sure to identify the instrument by model number, serial prefix, and serial number.

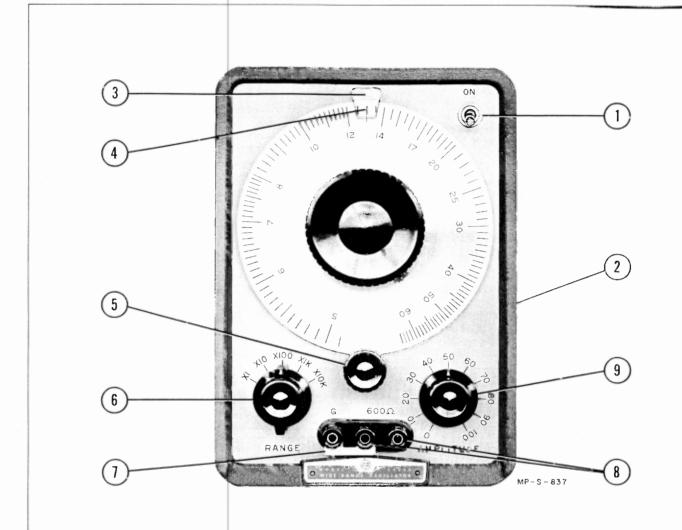

- 1. Turn on power to instrument.
- 2. Fuse on rear of instrument.
- 3. Glows when instrument is energized.
- 4. Read frequency of operation multiplied by RANGE switch position.
- 5. Vernier, adjust frequency.

- 6. Select frequency range of operation.
- 7. Jumper for 600 ohm unbalanced output.
- 8. Balanced output terminals internal impedance equals 600 ohms.
- 9. Adjust output voltage level. Output balanced to ground only with amplitude control in full clockwise position.

Figure 3-1. Controls and Terminals

# SECTION III OPERATING INSTRUCTIONS

#### 3-1. INTRODUCTION.

3-2. This section contains operating instructions for the Model 200CD Wide Range Oscillator. Figure 3-1 gives basic operating instructions. The remainder of this section supplements these instructions.

#### 3-3. OPERATION.

- 3-4. ON. The oscillator is ready for use as received from the factory and will give specified performance after a short warmup period. Turn oscillator on and allow approximately five minutes to worm up. Where maximum accuracy is desired, this warm-up period should be extended to at least thirty minutes.
- 3-5. RANGE. The RANGE is selected with the five position RANGE switch. The position of this switch indicates the multiplying factor for the frequency dial calibration.
- 3-6. FREQUENCY dial. The frequency dial varies the frequency between the RANGE switch steps. The dial is calibrated from 5 to 60 and its in lication multiplied by the factor indicated by the RANGE switch will give the actual output frequency of the scillator. The small knob below the frequency dial is a vernier control for the dial.
- 3-7. OUTPUT CIRCUIT OPTIONS. The output circuit of the Model 200CD may be arranged for balanced or unbalanced operation. Typical connections for each are indicated in figure 3-2.
- a. Unbalanced Operation. To operate with side grounded, a strap is placed between the G terminal, as indicated in figure 3-2A.

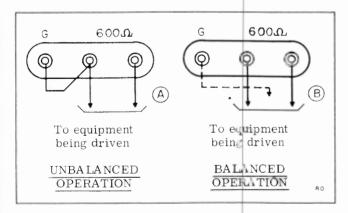


Figure 3-2. Typical Output Connections

- b. <u>Balanced Operation</u>. Connections for balanced operation are indicated in figure 3-2B. (The broken line from the ground terminal indicates the output circuit is balanced to ground, within the tolerances given below.)
- 3-8. The AMPLITUDE control in the output circuit is a bridged-T attenuator and at any setting except minimum attenuation unbalances the circuit. Therefore, for balanced operation the AMPLITUDE control must be set for maximum output (full clockwise). Output balance also is a function of frequency because of capacitive feed-through at higher frequencies. Up to 10 kc, however, unbalance is less than 0.1%, and at 600 kc is approximately 1%. If small outputs are desired, or if balance at higher frequencies is critical, turn the AMPLITUDE control maximum clockwise, and connect an external attenuator, designed for the frequencies involved, between the Model 200 CD and the load.
- 3-9. A balanced output may also be obtained over the full range of the AMPLITUDE control by using an PAC-60A/B Line Matching Transformer at the output terminals of the oscillator.
- 3-10. The following chart indicates the area where within 1% of balance may be obtained. This chart indicates balance obtainable at various settings of the AMPLITUDE control when operating into a 600-ohm load. Where other values of load are used, the chart does not apply directly but does apply for settings of the AMPLITUDE control that would produce the indicated voltage across at 600-ohm load.

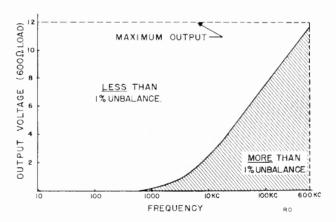


Figure 3-3. Balance Chart Operating into 600-ohm Load

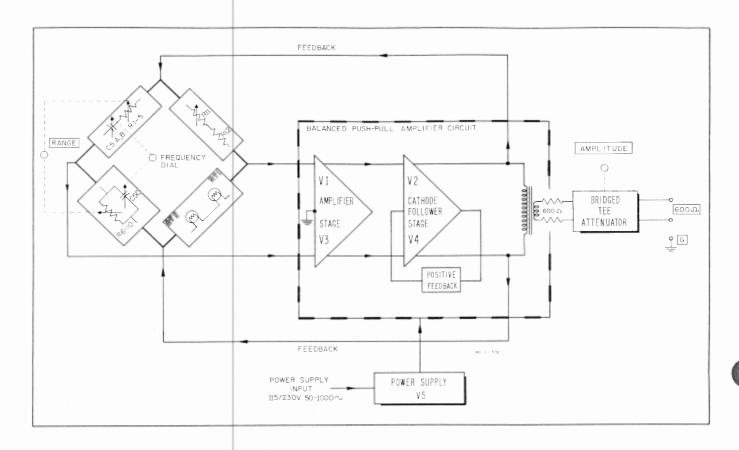


Figure 4-1. Model 200CD Block Diagram

# SECTION IV THEORY OF OPERATION

#### 4-1. GENERAL.

4-2. The Model 200CD Wide Range Os illator uses a balanced (push-pull) oscillator circuit from which the output is taken directly, avoiding the complication and possible distortion of an isolating amplifier. Reaction of the load on the oscillator is avoided by the use of a zero source impedance output stage. This arrangement results in a simple, trouble-free circuit having low distortion and high stability over the entire frequency range.

4-3. Functionally, the circuits of the Model 200CD include a frequency-controlling bridge and balanced push-pull amplifier which constitute the oscillator circuit, an output circuit which may be arranged either for balanced or unbalanced operation, and a power-supply circuit. These are shown in block diagram form in figure 4-1 and in detail in the schematic diagram.

## 4-4. FREQUENCY-CONTROLLING BRIDGE.

4-5. The frequency-controlling circuit is arranged as a floating bridge, symmetrical with respect to ground. With no connection to ground on any terminal of the bridge, stability of calibration is assured since any stray capacity or leakage to ground present at the bridge output terminals does not shunt either the frequency-controlling or amplitude-st bilizing arms of the bridge. The frequency-controlling components (RC networks which are varied by operation of the RANGE switch and frequency dial) comprise two arms of the bridge, while the amplitude-st bilizing components (a voltage divider which includes a thermallysensitive resistance) comprise the other two arms. The amplitude is stabilized at such a level that the amplifier tubes are operated in the substantially linear portion of their characteristics, which, together with the large negative feedback at harmonic frequencies, results in a very pure sine wave oscill tion.

4-6. The bridge is fed by the balanced voltage developed at the cathodes of V2 and V4 in the output of the balanced amplifier. The output of the frequency-controlling branch of the bridge is applied to the grd of V3 and the output of the amplitude-stabilizing branch is applied to the grid of V1. The manner in which the voltage-versus-frequency and phase-versus-frequency characteristics of an RC network can be utilized with an amplifier of proper design to achieve an oscillator which delivers a voltage of excellent stability and waveform is well covered in texts such as Terman & Pettit's Electronic Measurements.

4-7. Variable resistor R11 is provided for adjustment of the amplitude-stabilizing branch of the bridge should it be found after replacement of lamp RT1 or RT2 that less or more than rated voltage is being delivered to the output terminals.

4-8. Variable capacitors C3, C6, and C7 are adjusted at the factory for optimum calibration and amplitude constancy with frequency. They should not require adjustment unless the RANGE switch is replaced.

#### 4-9. AMPLIFIER.

4-10. The oscillator amplifier is a balanced push-pull circuit including a voltage-amplifier stage (V1, V3) and a special cathode-follower stage (V2, V4). Crisscross positive feedback is used in the cathode-follower stage to provide an essentially zero output impedance as seen by the cathode-to-cathode load. The feedback paths are from the plate of V2 to the control grid and screen of V4, and from the plate of V4 to the control grid and screen of V2. The degree of the positive feedback is a function of the load and increases as the load impedance decreases, thus tending to maintain the output constant regardless of load. Self-oscillation in the amplifier circuit is prevented by proper choice of resistance in the feedback circuits and by controlling plate and cathode impedances over the entire frequency range of the oscillator. The output stage is protected against a cathode-to-cathode short circuit by the resistors in series with the transformer secondaries. These resistors also make the oscillator present a 600-ohm impedance to the attenuator.

## 4-11. OUTPUT CIRCUIT.

4-12. Transformer coupling provides isolation between the oscillator circuit and the output circuit, and allows the output to be obtained either balanced or unbalanced. Since a single transformer will operate suitably over only a part of the frequency range covered 200CD, two transformers are provided. Connections between cathode-followers V2 and V4 and the proper transformer for the band in use are set up by the RANGE switch. The secondary windings of the coupling transformers supply a conventional bridged tee attenuator, the setting of which is adjusted by operation of the AMPLITUDE control on the front panel. As the control is turned counterclockwise, the loss inserted by the attenuator is increased. The source impedance at the output terminals is 600 ohms.

4-13. With attenuator set for minimum loss, the output circuit is arranged for balanced operation, and is so designed that for frequencies up to 10 kc, stray capacity and leakage resistance will cause less than 0.1% unbalance. Unbalance at 600 kc is approximately 1%.

4-14. When it is desired to operate unbalanced, ground should be connected to the center output terminal, the termination for the connection brought out from terminal 6 of output transformers T1 and T2. Proper operation cannot be obtained if the ground is connected to the side of the circuit which includes the attenuator.

Table 5-1. Test Instruments Required

Instrument Type	Minimum Required Specifications	Recommended • Instruments
DC Electronic Voltmeter	Sensitivity: 1 volt full scale minimum  Input resistance: 10 megohms or higher	Model 410B or 412A Vacuum Tube Voltmeter
AC Transistor Voltmeter	Input impedance: 2 megohms shunted by 40 pf (below the 0.3 volt range) Accuracy: ±3% from 5 cps to 500 kc	Model 403A Transistor Voltmeter
AC Electronic Voltmeter	Input impedance: 10 megohms shunted by 25 pf (below the 0.3 volt range)  Accuracy: ±2% from 20 cps to 1 mc	Model 400D/H/L Vacuum Tube Voltmeter
Distortion Analyzer	Distortion measurement range: 5 cps to 600 kc Sensitivity: 54 db down from rated output	Model 331A or Model 330B (20 kc max range) Distortion Analyzer
600-ohm Resistor	600 ohms ±1% to 100 kc	Model 470E Shunt Resistor
Electronic Counter	Frequency and period readings available. Frequency measuring capabilities to at least 600 kc	Models 523C/CR, D/DR or 524C/D Electronic Counters
Frequency Standard	Frequencies available:  a) 10 cps b) 100 cps c) 1 kc d) 100 kc  Output voltage: 5 volts rms minimum  Frequency accuracy: ±0.05%	100ER Precisions Frequency Standard
(Optional - recommended) Oscilloscope	Frequency range: flat from 5 cps to at least 600 kc	Models 150A, 160B, 170A Oscilloscopes

# SECTION V MAINTENANCE

#### 5-1. INTRODUCTION.

5-2. This section contains test and maintenance information for Model 200CD Wide Range Oscillator. A performance check is included (paragraph 5-39) that may be used to verify operation within published specifications. This check should be made with the instrument in its cabinet. This section also includes recommended test equipment, troublishooting repair and adjustment procedures.

#### 5-3. PERIODIC MAINTENANCE.

5-4. The Model 200CD should require a minimum of maintenance, since there are few moving parts. The

following procedure performed once or twice a year should insure smooth operation.

- a. Put one drop of oil in each of the three oil holes on the tuning drive mechanism.
- b. Place a small amount of high quality contact cleaner on the RANGE switch contacts. Rotate the switch back and forth several times.
- c. Using compressed air, gently blow any accumulated dust out of the tuning capacitor plates (C5). See figure 5-1.

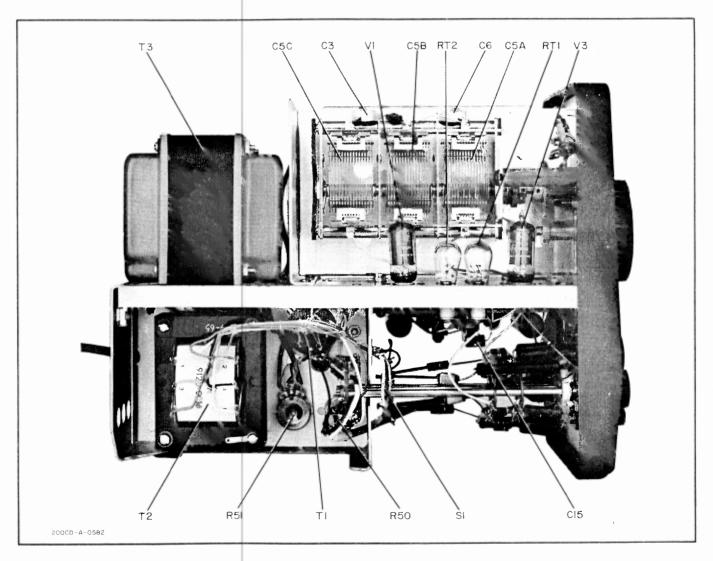


Figure 5-1. Left Side of Model 200CD (as viewed from the front)

#### 5-5. TEST EQUIPMENT.

5-6. Table 5-1 lists the test equipment required to accurately check the Model 200CD. Equipment having similar characteristics can be substituted for the equipment listed.

## 5-7. TROUBLESHOOTING.

5-8. The following section gives information to aid in the localizing of troubles in the Model 200CD. In many cases a visual inspection of the instrument will reveal the area of the faulty component if not the component itself. To further assist in troubleshooting, table 5-2 and a voltage-resistance liagram, figure 5-8, have been included in this section. The troubleshooting table (5-2) gives a list of symptoms and their possible causes.

#### 5-9. AMPLIFIER POWER SUPPLY.

5-10. Amplifier and power supply operation is best checked by voltage-resistance readings and tube

substitution. If tube substitution does not correct the difficulty, return the original tube to the instrument. Voltages and resistances are indicated in figure 5-8; these are typical readings and may vary somewhat from instrument to instrument.

#### 5-11. REPAIR AND REPLACEMENT.

## 5-12. CABINET REMOVAL.

- 5-13. To remove the Model 200 CD proceed as follows:
- a. Disconnect the Model 200CD from the power source.
- b. Remove the two screws at the rear of the cabinet. The Model 200 CDR rack mount unit has two additional screws on the front panel which must be removed.
- c. Carefully slide the instrument forward, out of the cabinet.

Table 5-2. Troubleshooting

Symptom	Probable Cause	Symptom	Probable Cause
Resistance to ground less than 100K ohms  C1: A, B, C leaky C1: le		200CD obviously micro- phonic	V1-V4 defective RT1, RT2 defective Tuning capacitor dirty or defective
		Dial springs back when	Tuning capacitor
One or more tubes not glowing, pilot light on	One or more tubes burned out	turned clockwise against the stop	closed too far when fully meshed
Power supply voltage variation exceeds test limit	C1: A, B, C or C14 breaking down under high voltage V5 defective V1-V4 shorted	Impossible to set low end on frequency Dial springs back when turned counterclockwise against the stop	Tuning capacitor open too far when fully meshed
Impossible to set 200CD output to 20 volts (unloaded)	V1-V4 defective RT1,RT2 defective	Calibration bad on one range only	Dirty RANGE switch contacts C1, C2, C7, or C16 need adjusting One RANGE switch
With RANGE set to X1- X100 ranges and output	T2 defective		resistor has changed resistance
set to 20 volts rms, addition of 600-ohm termination does not lower output to 10 volts ±0.5 v		Excessive distortion on X1K-X10K ranges	R50 or R51 mis- adjusted T1 defective
·		Excessive distortion on X1, X10 and X100 ranges	R50 or R51 mis- adjusted
Same as above with RANGE set at X1K or X10K		Excessive distortion on	T2 defective V1-V4 defective
Turning AMPLITUDE control causes jumpy	R3 (AMPLITUDE control) defective	all ranges	RT1-RT2 defective Dust between tuning capacitor plates
output  Recovery time exceeds test limit	V1, V3 defective RT1, RT2 defective	Impossible to set 11.5 v out with 200CD terminated with 600 ohms (adjustment procedure)	RT1, RT2 defective V1-V4 weak

## 5-14. SERVICING ETCHED CIRCUIT BOARDS.

#### Note

Excessive heat or pressure can lift copper conductors from etched circuit boards.

5-15. To remove components from board, clip leads on component side of board. New components can then be soldered to the leads extending from the board or the leads can be removed. If leads are removed, clean holes with a toothpick or wooden splinter (metal awls or soldering aids may destroy the components can then be soldering aids may destroy the conductor) before inserting leads.

## 5-16. TUBE REPLACEMENT.

5-17. Tubes used in the Model 20 CD are listed in Tube Replacement List (table 5-3). If V2 or V4 are changed, replace the special tube shields in their original positions, (shown in figure 5-2).

Table 5-3. Tube Replacement List

Tube	Туре	Function	Required Checks or Adjustments
V1	6AU6	Voltage <b>A</b> mplifier	Recheck calibration and distortion.
V2	6CW5/ EL86		Reset output voltage (paragraphs 5-24 through 5-38).
V3	6AU6	Cathode Followers	Recheck distortion (paragraph 5-37).
V4	6AU6		Reset output voltage (paragraph 5-38).

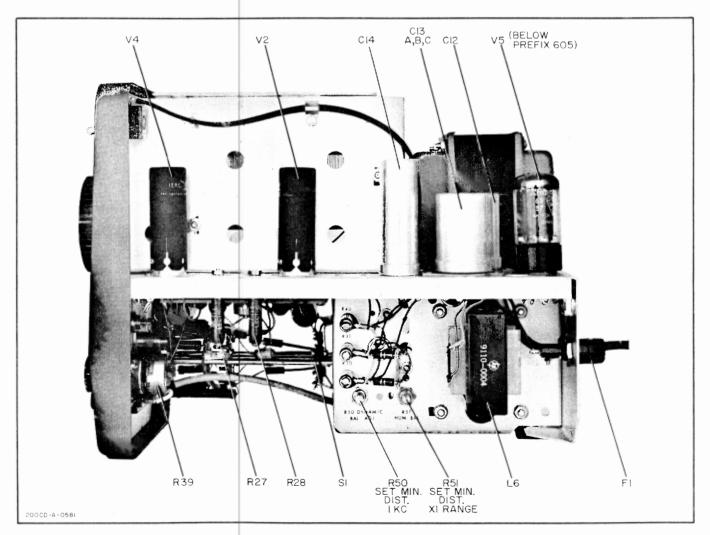


Figure 5-2. Right Side of Model 200CD (as viewed from the front)

Section V Paragraphs 5-18 to 5-33

#### 5-18. REPLACEMENT OF LAMPS, RT1 and RT2

5-19. The amplitude stablization lamps operate well below their rating and should have a long life, unless they are damaged by severe mechanical vibration. When RT1 or RT2 (see figure 5-1) are replaced, reset output voltage (paragraph 5-38).

#### 5-20. TUNING CAPACITOR REPAIR.

5-21. The tuning capacitor, C: A, B, C (shown in figure 5-1), should not be loosered unless absolutely necessary, since doing so may cause misalignment of the tuning capacitor shaft with the shaft extension to the gears. If C5 A, B, C h is been removed or loosened for any reason, it should be readjusted mechanically before any electrical adjustment is attempted. In some cases, due to slippage, the tuning capacitor will not mesh far enough to allow perfect calibration at the extreme low end of the dial. When correctly set, the edge of the insulation protruding from the rotor plate spacer on C5 should line up with the topmost stator spacer when the dial is set fully clockwise.

## 5-22. RANGE SWITCH REPAIR.

5-23. Resistor values on S1 have been carefully bridged and adjusted at the factory to the exact value required for proper tracking on all ranges. If one range is found to be badly out of calibration and all other possibilities have been exhausted (especially dirty RANGE switch contacts) try adjusting the value of C1, C2, C7 or C16 (depending on the range affected) slightly. If any part of the RANGE switch is found to be defective, it is recommended that the switch be replaced as an assembly. Figure 5-3 shows all wiring detail for replacement.

#### 5-24. ADJUSTMENTS.

5-25. The following section is a complete adjustment procedure and should be made only if it has been definitely determined that the Model 200CD is out of adjustment.

#### Note

In order to minimize the effects of hand capacity, a "tuning wand" or tuning screwdriver with a plastic shank should be used for all adjustments.

#### 5-26. PRELIMINARY CHECKS.

5-27. The following basic tests are given to avoid possible unnecessary adjustment of the Model 200CD. If the instrument fails any of the e tests, some component is probably at fault and should be replaced before attempting any adjustment. Proceed as follows:

## 5-28. POWER SUPPLY:

- a. With the instrument turned off, check the resistance from C13 to ground and the resistance across C13. This resistance is typically many megohms. A very low reading (below 100K) indicates a shorted or leaky capacitor between the B+ line and ground.
- b. Turn the instrument on, and allow it to warm up for at least 15 minutes.

- c. Check to see that all tubes are glowing.
- d. Using an dc electronic voltmeter, measure the positive and negative power supply voltages using ground as a reference. The positive voltage (approximately 225 volts) may be measured between the chassis and C14. The negative voltage (approximately 155 volts) is measured from the chassis to the junction of R30, R31 and R40 (figure 5-2). The difference between the negative and positive voltage should be 380 volts ±75 volts.

#### 5-29. AMPLITUDE CONTROL OPERATION:

- a. With a 600-ohm load connected to the OUTPUT terminals, and the Model 200CD output connected to the ac voltmeter, set the Model 200CD RANGE to X100.
- b. Turn the Model 200CD AMPLITUDE fully clockwise. If necessary adjust R11 to obtain 12 vac.
- c. Now, while observing the voltmeter indication and switching to lower voltmeter ranges as necessary, slowly turn the Model 200CD AMPLITUDE fully counter clockwise. Note the voltmeter reading again. The attenuation should be smooth and the final reading should be at least 46 db below the reference in step b.

#### 5-30. RECOVERY TIME:

- a. Switch RANGE to X10 and frequency to 50 kc.
- b. Connect the output of the Model 200CD to an oscilloscope.
- c. Switch from range to range, observing the oscilloscope pattern after range switching.
- d. The oscilloscope presentation should become stable within 5 seconds after switching ranges.

## 5-31. CALIBRATION.

5-32. The calibration procedure for the Model 200CD is divided into two sections. The first section,paragraph 5-33, is intended to produce a flat frequency response for the Model 200CD, and is accomplished with the instrument set on the X10 range. The second section, paragraph 5-34, is intended to produce correct frequency dial tracking and is accomplished with the instrument set on the X100 range.

## 5-33. FREQUENCY RESPONSE ADJUSTMENTS:

- a. Turn Model 200CD RANGE to X10, frequency dial to 5.
- b. Connect the Model 200CD to an ac voltmeter and a frequency measuring device (counter or frequency standard) as shown in figure 5-4.
- c. Using Model 200CD AMPLITUDE, set a reference of 9 volts as read on the ac voltmeter.
- d. Turn the frequency dial to 60. The ac voltmeter should read within  $\pm 1/4$  db of the reference in step c and the frequency should be correct within 2%.

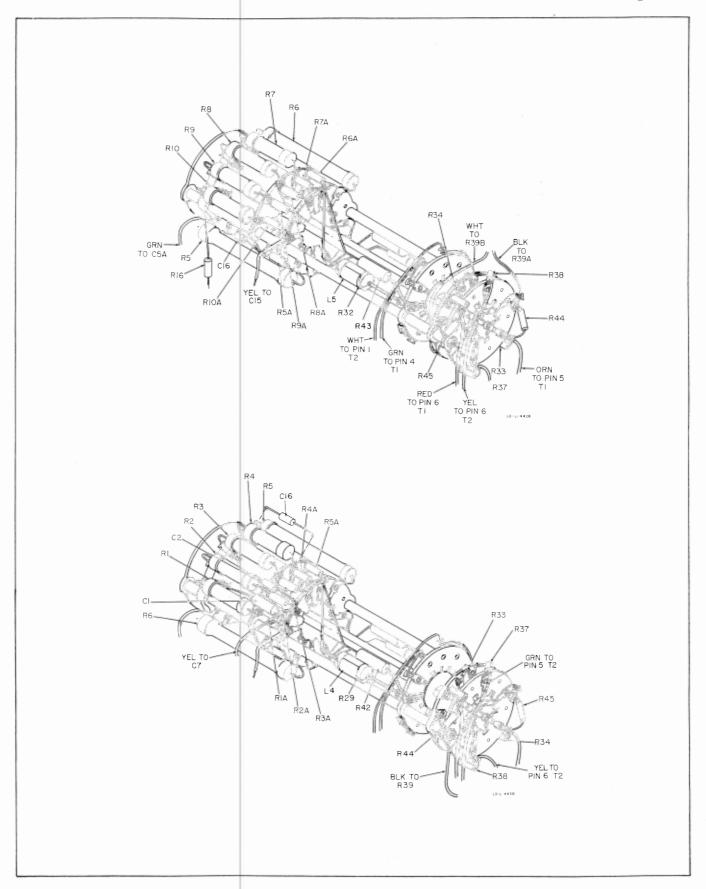


Figure 5-3. Range Switch Detail

Section V Paragraphs 5-33 to 5-36

e. If 600 cps is off more than 2%, set the frequency on with C6.

#### Note

Since replacing the cabinet raises the frequency slightly, it is advisable to set the frequency slightly low (e.g., 599 cps) when making this adjustment.

- f. Observe the output voltage and determine how much it differs from the reference.
- g. Adjust C3 to correct for half this difference. Then adjust C6 so that the output frequency is again  $600\ \mathrm{cps}$ .
- h. Observe the output voltag. If it is more than  $\pm 1/4$  db from the reference in step c repeat steps c through h until a flat response is obtained with 600 cps set on frequency (see note a ove).

## 5-34. FREQUENCY DIAL TRACKING:

- a. Switch Model 200CD RANGE to X100. Connect the equipment as shown in figures 5-4 or 5-5.
- b. Check the frequency at 5. The frequency reading should be  $500 \text{ cps } \pm 2\%$ . If the frequency is off more than  $\pm 2\%$ , slip the dial to put it in frequency:
  - 1) Remove center knob on frequency dial.
  - 2) Loosen the four screws which secure the dial plate to the drive shaft.

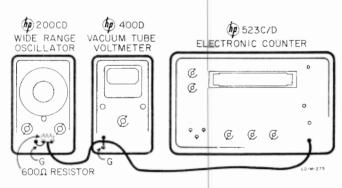


Figure 5-4. Calibration Test Setup

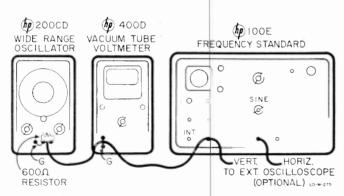


Figure 5-5. Alternate Calibration Setup

- 3) Reset dial to position indicated in the text.
- 4) Tighten the four securing screws. (Center knob may be replaced at the end of this procedure.)
- c. If it was necessary to slip the dial, repeat steps a through h in paragraph 5-33.
- d. If step c was necessary, repeat step b. It is possible that the entire dial will now track without further adjustment.
- e. Check all numbered points on the dial, beginning at the high end. If some points exceed test limits ( $\pm 2\%$ ) try to equalize the error by slipping the dial to get all points within these limits.
- f. Switch RANGE to  $X10\,\mathrm{K}$ , and set the Model 200CD frequency dial to 60.
  - g. Adjust C7 to put 600 kc on frequency.
- h. Check calibration on the remaining ranges. Calibration should be correct to  $\pm 2\%$ .

#### Note

It will be advantageous to set the counter FUNCTION SELECTOR to 10 PERIOD AVERAGE when measuring frequency on the X1 range (refer to table 5-4).

Table 5-4. Frequency/Period Conversion

	2	
Frequency (cps)	Frequency Limits	Period Limits
5	5.1 4.9	196.0 ms 204.0 ms
10	10.2 9.8	098.0 ms 102.0 ms
20	20.4 19.6	049.0 ms 051.0 ms
40	40.8 39.2	024.5 ms 025.5 ms
60	61.2 58.8	016.3 ms 017.0 ms

- 5-35. If the above procedures do not result in correct calibration, start over by adjusting C3 and/or C6 as in step a through h, paragraph 5-33. Then work toward the low end by setting the dial to the next numbered point and bending one of the outer rotor plates in each section of C5 at the point of mesh. Continue this procedure to the low end of the dial to obtain approximately correct frequencies. Repeat the bending procedure from the high end, this time making fine adjustments of frequency with the other outer rotor plates. In this way, bending of any one plate is minimized.
- 5-36. When bending rotor plates, observe the following precautions: 1) keep all bends as near the shaft as possible; 2) keep all segments in line. The rotor plates should taper gradually inward or outward, depending on whether you must compress or expand the

frequency range. This gradual taper is essential for linearity. 3) Bending of plates near the high frequency end should be unnecessary.

### 5-37. DISTORTION.

- a. Connect the Model 200CD to the distortion analyzer as shown in figure 5-6.
- b. Set the Model 200CD RANGE to x1 and the frequency dial to 20.
- c. The distortion analyzer switche should be in the following positions:

U 1								-				
AF - RF								Ļ				AF
FREQUENCY								ļ				20
Selector switch												
RMS VOLTS-DB	SV	vit	cl	1				l		.±	: 20	db

- d. Adjust distortion analyzer INPU control for a zero db reference on the distortion analyzer meter.
  - e. Switch selector to DISTORTION.
- f. Adjust BALANCE and FREQUENCY controls for a dip on the meter.
- g. Turn RMS VOLTS-DB switch counterclockwise while continually adjusting distortion analyzer BAL-ANCE and FREQUENCY until the low st possible dip is obtained.
- h. Adjust R50 (dynamic balance) for a dip (minimum distortion; see figure 5-2) on the distortion analyzer meter until the lowest possible dip is obtained.

## Note

For optimum results use lowest frequency setting of the 200CD Wide Range Uscillator.

- i. Repeat steps a through h, adjusting all distortion analyzer controls for 50 cps (60 cps if 50 cps line frequency is being used) instead of  $10\sqrt{0}$  cps.
- j. Adjust R51 (hum balance; see figure 5-2) instead of dynamic balance in step h.

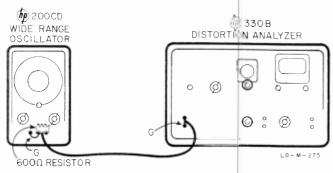


Figure 5-6. Distortion Test Setup

## 5-38. OUTPUT VOLTAGE

- a. Connect the Model 200CD to an ac voltmeter.
- b. Load the Model 200CD with a 600-ohm load resistor.

00084-1

c. Turn Model 200CD AMPLITUDE fully clockwise, and adjust R11 for 11.5 volts on the ac voltmeter (see figure 5-7).

## 5-39. PERFORMANCE CHECK.

5-40. Proper operation of the Model 200CD is verified in the following procedure. A complete adjustment procedure is given in paragraph 5-24.

#### 5-41. OUTPUT IMPEDANCE.

- a. Set Model 200CD RANGE to X100, frequency dial to 10.
- b. Connect Model 200CD output to an ac transistor voltmeter. Set the voltmeter RANGE to 30 volts.
- c. Turn Model 200CD AMPLITUDE fully clockwise. The voltmeter should read at least 20 volts.
- d. Set Model 200CD AMPLITUDE for exactly 20 volts as read on the voltmeter.
- e. Connect a 600-ohm resistor such as the \$\opin\$Model 470E Shunt Resistor across output of Model 200CD.
- f. The voltage as read on the voltmeter should drop to 10 volts +0.5 volts.

#### 5-42. FREQUENCY RESPONSE.

- a. Connect the Model 200CD to an ac voltmeter and an electronic counter as shown in figure 5-4. Substitute an actransistor voltmeter for the ac electronic voltmeter in figure 5-4.
- b. Set Model 200 CD RANGE to X100, frequency dial to 10. Terminate output with 600 ohms.
- c. Adjust Model 200CD AMPLITUDE for a convenient reference around 0.9 on the voltmeter scale.
- d. Starting with the X1 range, rotate the frequency dial across the band while observing the meter.
- e. Repeat this process for each range. The voltmeter indication should not vary more than  $\pm 1$  db throughout the ranges checked.

## 5-43. DIAL ACCURACY.

- a. Set Model 200CD RANGE to X10K, frequency dial to 60. Observe the frequency reading on the electronic counter.
  - b. Check frequency at 40, 20, 10 and 5 on the dial.
- c. Repeat this procedure for the remaining ranges. The frequency should be correct within  $\pm 2\%$ .

#### Note

For the lower end of the X10 range and the entire X1 range, it will be advantageous to measure the frequency indirectly by switching the electronic counter FUNCTION SELECTOR to 10 PERIOD AVERAGE. Table 5-4 lists the specifications in terms of period readings for each point on the X1 range. To check X10 range, divide the period limit in table 5-4 by 10.

Section V Paragraph 5-44

## 5-44. DISTORTION.

- a. Connect the Model 200 CD to a distortion analyzer as shown in figure 5-6.
- b. Set Model 200CD RANGE switch and frequency dial to one of the frequencies indicated in table 5-5.
- c. The distortion analyzer switches should be set to the following positions:
- AF-RF.....AF
  FREQUENCY. incoming frequency selected in step b
  Selector switch .....SET LEVEL
  RMS VOLTS-DB switch .... ±20 db
- d. Adjust distortion analyzer INPUT control for a zero db reference on the distortion analyzer meter.
  - e. Switch selector to DISTORTION.

- f. Adjust BALANCE and FREQUENCY controls for a dip on the meter.
- g. Turn RMS VOLTS-DB switch counterclockwise while continually adjusting distortion analyzer BAL-ANCE and FREQUENCY until the lowest possible dip is obtained. Specifications are listed in table 5-5.#

Table 5-5. Distortion Test Frequencies

Range	Frequency	Specifications
X10	100 cps	54 db
X100	1000 cps	54 db
X100	6 kc	54 db
X1K	5 kc	54 db

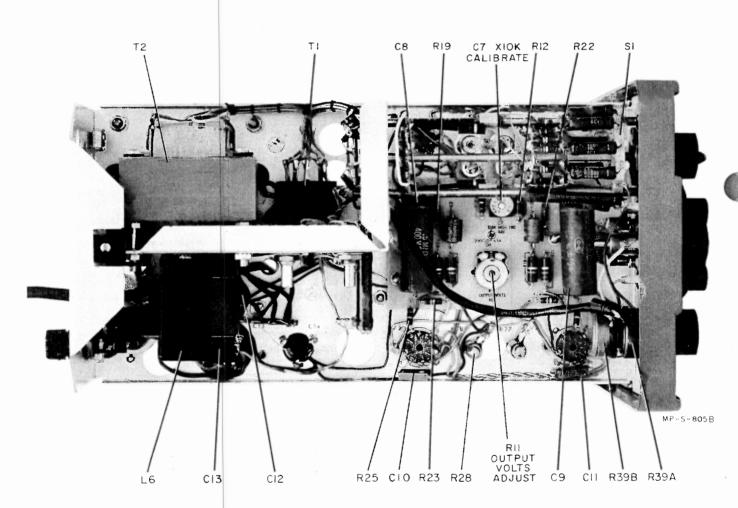


Figure 5-7. Bottom View Model 200CD

<sup>#</sup> If the measurement of distortion above the frequency of 20 kc is desired, a distortion analyzer which will measure distortion to 600 kc must be used (such as @ Model 331A). At 500 kc and above, the distortion must be down 46 db from reference 0.5%.

NOTES:

+185 V DC

+190 V DC

3.2 V \*AC

+ 185 V DC

+190 V D C

3.2 V \*AC

N C

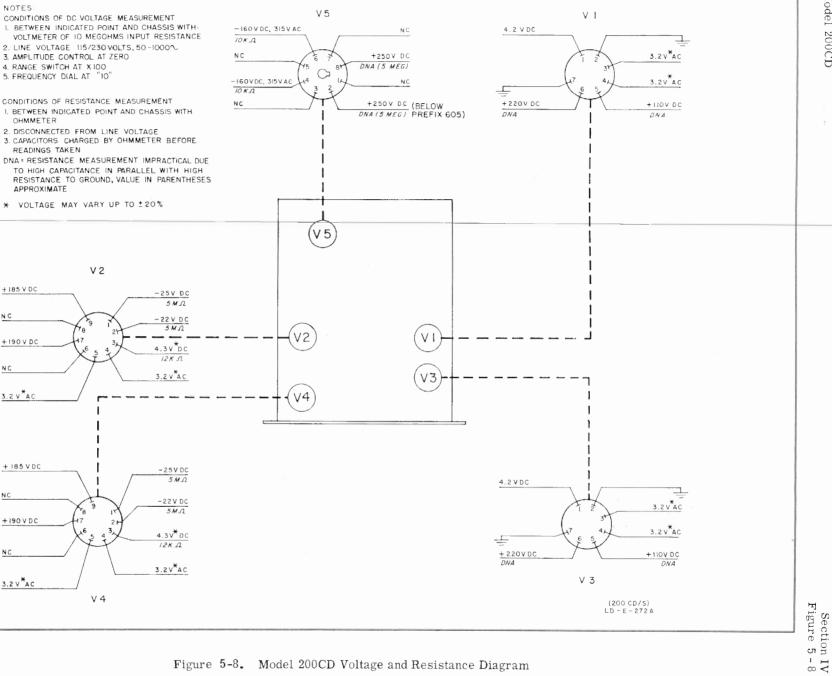


Figure 5-8. Model 200CD Voltage and Resistance Diagram

00084-3

Model 200CD

## SECTION VI REPLACEABLE PARTS

#### 6-1. INTRODUCTION.

- 6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp- part number of each part, together with any applicable notes, and provides the follows:
  - Total quantity used in the instrument (TQ column).
  - b. Description of the part. (See list of abbreviations below.)
  - Typical manufacturer of the part in a fivedigit code. (See Appendix A for list of manufacturers.)
  - d. Manufacturer's part number.

6-3. Miscellaneous parts are listed at the end of Table 6-1.

#### 6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers.

## 6-6. NON-LISTED PARTS.

- 6-7. To obtain a part that is not listed, include:
  - a. Instrument model number.
  - b. Instrument serial number.
  - c. Description of the part.
  - d. Function and location of the part.

#### DESIGNATORS

A	= assembly	F	= fuse	P	= plug	V	= vacuum tube, neon
B	= motor	FL	= filter	Q	= transistor		bulb, photocell etc.
BT	= battery	HR	= heater	QCR	= transistor-diode	W	= cable
C	= capacitor	J	= jack	R	= resistor	X	= socket
CR	= diode	K	= relay	RT	= thermistor	XDS	= lampholder
DL	= delay line	L	= inductor	S	= switch	XF	= fuseholder
DS	= lamp	M	= meter	T	= transformer	Ar	= tusenoider
E	= misc electronic part	MP	= mechanical part	TC	= thermocouple	Z	= network
			ABBREVI	ATIONS			
Ag	= silver	ID	= inside diameter	ns	= nanosecond (s) = $10^{-9}$	SPDT	= single-pole double-
Al	= aluminum	impg	= impregnated	nsr	= not separately replace-		throw
amp	= ampere (s)	incd	= incandescent		able	SPST	= single-pole single-
Au	= gold	ins	= insulation (ed)				throw
	_		` '	.1.1		m	4 4 3
C	= capacitor	K	$= kilohm (s) = 10^{+3}$	obd	= order by description	Ta	= tantalum
cer	= ceramic	Kc	= $kiloycycle(s) = 10^{+3}$	OD	= outside diameter	$^{\mathrm{TiO}}_{2}$	= titanium dioxide
coef	= coefficient	VC	= kiloycycle (s) = 10	p	= peak	tog	= toggle
com	= common = composition	L	= inductor	рс	= printed circuit	tol	= tolerance
comp	= composition = connection	lin	= linear taper		= picofarad (s) = $10^{-12}$	trim	= trimmer
conn	= cycles per second	log	= logarithmic taper	pf	= picoiarad (s) = 10	TSTR	= transistor
cps	= Cycles per second	108	- logarithmic taper	piv p/o	= peak inverse voltage = part of		= volt (s)
dep	= deposited	m	= milli = 10 <sup>-3</sup>		= part of = position (s)	v	= alternating current
DPDT	= double-pole double-	111		pos	= position (s) = polystyrene	vacw	working volt (s)
	throw	ma	= milliampere (s) = $10^{-3}$	poly	= polystyrene = potentiometer		= variable
DPST	= double-pole single-	Mc	= $megacycle(s) = 10^{+6}$	pot	= potentiometer = peak-to-peak	var vdcw	= variable = direct current working
	throw	IVIC		p-p		vaew	volt (s)
elect	= electrolytic	meg	$=$ megohm (s) = $10^{+6}$	prec	= precision (temperature coefficient, long term		voit (s)
	= erectrolytic = encapsulated		= metal film		stability, and/or tol-		= watt (s)
encap	= encapsulated	mfr	= manufacturer		erance)	w w/	= watt (s) = with
f	= famad (s)	mtg	= mounting		erance)	wiv	= reverse working voltage
FET	= field effect transistor	ш	$= micro = 10^{-6}$			w/o	= without
fxd	= fixed	μ.	- 1111010 - 10	R	= resistor	,	= wirewound
GaAs	= gallium arsenide	my	= Mylar ®	Rh	= rhodium	ww	= wirewound
GaAs		na	= nanoampere (s) = $10^{-9}$	rms	= root-mean-square	*	= optimum value selected
Gc	= gigacycle (s) = 10 <sup>+9</sup>	NC	= normally closed	rot	= rotary	7	at factory, average
gd	= guard (ed)	Ne	= neon				value shown (part may
Ge	= germanium	NO	= normally open	Se	= selenium		be omitted)
grd	= ground (ed)	NPO	= negative positive zero		= section (s)	**	= no standard type num-
h	= henry (ies)	11110	(zero temperature co-	sect Si	= section (s) = silicon		ber assigned (selected
Hg	= merry (les) = mercury		efficient)	sl	= slicon = slide		or special type)
ng	- mercury		,	21	- since		or special type)
		(R) D	ipont de Nemours				

Table 6-1. Reference Designation Index

Circuit Reference	⊕ Stock No.	Description	Note
A1	200CD-19WB	Assy, range switch includes: C1, C2, C16, L4, L5, R1 thru R10, R33, R34, R37, R38, R42 thru R45, S1	
C1 C2 C3 C4 C5	0130-0001 0140-0116 0121-0018	Nsr; part of A1 Nsr; part of A1 C: var, cer, 7-45 pf, 500 vdcw C: fxd, mica, 39 pf ±2%, 500 vdcw C: var, 3 sect, 14-617 pf/sect	
C6 C7 C8, C9 C10, C11 C12	0130-0001 0130-0011 0160-0024 0140-0054 0180-0013	C: var, cer, 7-45 pf, 500 vdcw C: var, cer, 1.5-7 pf, 500 vdcw C: fxd, my, 0.5 $\mu$ f $\pm$ 10%, 400 vdcw C: fxd, mica, 100 pf $\pm$ 10%, 500 vdcw C: fxd, elect, 100 $\mu$ f, 100 vdcw	
C13A, B, C C14 C15 C16 C17, C18 CR1, CR2 DS1	0180-0017 0180-0024 0140-0004 0140-0005 1901-0037 2140-000	C: fxd, elect, 3 sect, 10 $\mu$ f/sect, 450 vdcw C: fxd, aluminum elect, 40 $\mu$ f, 450 vdcw C: fxd, mica, 15* pf $\pm 10\%$ , 500 vdcw Nsr; part of A1 C: fxd, mica, 27* pf $\pm 10\%$ , 500 vdcw Rectifier, silicon Lamp, incd: 0.15 amp, 6-8 V	
F1	2110-0021 2110-0016	Fuse, 1.25 amp, s-b (for 115 V operation) Fuse, 0.6 amp, s-b (for 230 V operation)	
J1	5060-0625 5060-063 0340-0087 0340-0091	Connector assy, consists of: Binding post w/ground link Binding post: red Insulator: bl, 3 hole (rear) Insulator: black, 3 hole (front), with locating key	
L1 L2, L3 L4, L5 L6	200CD-6 C	Not assigned Coil, R.F., 2 mh Nsr; part of A1 Rector, filter choke, 6 h	
P1	8120-0050	Assy, power cable: smooth, black, shiny, 7.5 ft, NEMA plug	
R1 thru R10 R11 R12 R13, R14 R15, R16	2100-0152 0689-3023 0687-5601	Nsr; part of A1 R: var, comp, lin, 1 K ohms $\pm 30\%$ , $3/10$ W R: fxd, comp, 3 K ohms $\pm 5\%$ , 1 W Not assigned R: fxd, comp, 56 ohms $\pm 10\%$ , $1/2$ W	
R17, R18 R19 R20, R21 R22 R23, R24	0761-0030 0686-1055 0761-0083 0686-1055 0687-1551	R: fxd, met flm, 22 K ohms $\pm 5\%$ , 1 W R: fxd, comp, 1 M $\pm 5\%$ , 1/2 W R: fxd, met flm, 68 K ohms $\pm 5\%$ , 1 W R: fxd, comp, 1 M $\pm 5\%$ , 1/2 W R: fxd, comp, 1.5 M $\pm 10\%$ , 1/2 W	
R25, R26 R27, R28 R29 R30, R31 R32	0687-5601 0816-0003 0816-0002	R: fxd, comp, 56 ohms ±10%, 1/2 W R: fxd, ww, 500 ohms ±10%, 10 W R: 470 ohms, nsr; part of L4 R: fxd, ww, 3 K ohms ±10%, 10 W R: 470 ohms, nsr; part of L5	

<sup>#</sup> See introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Circuit Reference	\$\overline{m}\$ Stock No.	Description	Note
R33, R34		Nsr; part of A1	
R35, R36 R37, R38	0690-1531	R: fxd, comp, 15 K ohms ±10%, 1 W Nsr; part of A1	
R39A, B	2100-0113	R: var, comp, dual tandem, 100 K/sect, 25 K/sect, 2 W	
R40 R41	0816-0008	R: fxd, ww, 10 K ohms ±10%, 10 W	
R42 thru R45 R46, R47	0690-1801	R: fxd, comp, 18 ohms $\pm 10\%$ , 1 W Nsr; part of A1 R: fxd, comp, 620 ohms $\pm 5\%$ , 1/2 W	
R40, R47 R48, R49 R50	0686-6215 2100-0013	Not assigned R: var, comp, lin, 50 K ohms ±20%, 1/2 W	
R51	2100-0013	R: var, comp, lin, 1 K ohms, 0.5 W	
RT1, RT2	2140-0007	Lamp, incd: 250 V, 10 W	
S1 S2	3101-0001	Nsr; part of A1 Switch, tog: SPST, 3 amp	
T1 T2 T3	200CD-9 9120-0016 9100-1329	Transformer, output: high frequency Transformer, output: low frequency Transformer: power	
V1 V2 V3 V4	1923 - 0021 1923 - 0044 1923 - 0021 1923 - 0044	Tube, elect: 6AU6, 7 pin minat Tube, elect: EL 86, 9 pin minat Tube, elect: 6AU6, 7 pin minat Tube, elect: EL 86, 9 pin minat	
XF1	1400-0084	Fuseholder: extrator post type	
XV1 XV2 XV3 XV4	1200-0009 1200-0072 1200-0009 1200-0072	Socket, tube: 7 pin, minat Socket, tube: 9 pin Socket, tube: 7 pin, minat Socket, tube: 9 pin	

Circuit Reference	D Stock No.	Description	Note
Reference	0370-0028 0370-0032 0370-0035 0370-0045 1220-0006 1220-0029 1450-0009 1450-0013 1460-0114 1500-0002 5000-0637 5020-0600 5020-0617 5020-0618 5040-0212 5040-0600 5040-0607 5060-0021 5060-0021 5080-0205 200CD-40A 200CD-903	MISCELLANEOUS  Knob: frequency dial vernier Knob: AMPLITUDE Knob: RANGE Knob: frequency dial, 2-1/4"  Shield, base: 9 pin Shield, tube (for V2, V4)  Lampholder, bayonet Lampholder, candelabra Spring, gear ass'y Flexible coupler  Spring, thrust (vernier drive) Hub, dial fits on shaft of 5020-0617 Gear spur with shaft Bearing, capacitor drive Insulator, flex coupling Window, dial for curved frequency dial Assy, disc VERNIER DRIVE  Assy, gear with coupling hub Assy, gear Coupler, flexible  Dial, frequency calibrated Manual, operating and service	

<sup>#</sup> See introduction to this section

Table 6-2. Replaceable Parts

Stock No.	Description	Mfr.	Mfr. Part No.	TQ
200CD-9 200CD- 19WB	Transformer, high frequency Assy, range switches includes: C1, C2, C16 R33, R34, R37, R38 L4, L5 R42 thru R45 R1 thru R10 S1	28480 28480	200CD-9 200CD-19WB	1
200CD-40A 200CD-60C	Dial, frequency, calibrated Coil, RF	28480 28480	200CD-40A 200CD-60C	1 2
0121-0018	C: var, 3 sect, 14-617pf/sect	28480	0121-0018	1
0130-0001	C: var, cer, 7-45 pf, 500 vdcw	72982	503-000D2PO-33R	2
0130-0011	C: var, cer, 1.5-7 pf, 500 vdcw	72982	557-023-COPO-10R	1
0140-0004	C: fxd, mica, 15 pf $\pm 10\%$ , 500 vdcw	72136	CM15B150K	1
0140-0005	C: fxd, mica, 27 pf $\pm 10\%$ , 500 vdcw	14655	CM15B270K	2
0140-0054	C: fxd, mica, 100 pf $\pm 10\%$ , 500 vdcw	14655	CM20B101K	2
0140-0116	C: fxd, mica, 39 pf $\pm 2\%$ , 500 vdcw	14655	CM15E390G	1
0160-0024	C: fxd, my, 0.5 $\mu$ f ±10%, 400 vdcw	14655	PKM4P5	2
0180-0013	C: fxd, elect, 100 $\mu$ f, 100 vdcw	56289	D33067	1
0180-0017	C: fxd, elect, 3 sect/10 $\mu$ f, 450 vdcw	56289	D32631	1
0180-0024	C: fxd, aluminum elect, 40 $\mu$ f, 450 vdcw	56289	D32441	1
0340-0087 0340-0091	Insulator: binding post, black, 3 hole Insulator: binding post, black, 3 hole, with locating key	28480 28480	0340-0087 0340-0091	1 1
0370-0028	Knob: frequency dial vernier Knob: AMPLITUDE Knob: RANGE Knob: frequency dial	28480	0370-0028	1
0370-0032		28480	0370-0032	1
0370-0035		28480	0370-0035	1
0370-0045		28480	0370-0045	1
0686-1055	R: fxd, comp, 1 M ±5%, 1/2 W R: fxd, comp, 620 ohms ±5%, 1/2 W R: fxd, comp, 1.5 M ±10%, 1/2 W R: fxd, comp, 56 ohms ±10%, 1/2 W R: fxd, comp, 3 K ohms ±5%, 1 W	01121	EB 1055	2
0686-6215		01121	EB 6215	2
0687-1551		01121	EB 1551	1
0687-5601		01121	EB 5601	4
0689-3025		01121	GB 3025	1
0690-1531	R: fxd, comp, 15 K ohms ±10%, 1 W R: fxd, comp, 18 ohms ±10%, 1 W R: fxd, met flm 22 K ohms ±5%, 1 W R: fxd, met flm 68 K ohms ±5%, 1 W	01121	GB 1531	2
0690-1801		01121	GB 1801	1
0761-0030		07115	C32 obd	2
0761-0083		07115	C32 obd	4
0816-0002	R: fxd, ww, 3 K ohms ±10%, 10 W	35434	Type GC10-3KA	2 2 1
0816-0003	R: fxd, ww, 5000 ohms ±10%, 10 W	35434	G-10, obd#	
0816-0008	R: fxd, ww, 10 K ohms ±10%, 10 W	35434	Type C-10, obd#	
1200-0009	Socket, tube: 7 pin, minat	91662	316PH-3702	2
1200-0072	Socket, tube: 9 pin	91662	988PHTDX103	2
1220-0006 1220-0029 1400-0084 1450-0009 1450-0013 1460-0114 1500-0002 1901-0037	Shield, base: 9 pin Shield, tube (for V , V ) Fuseholder: extractor post type Lampholder, bayonet Lampholder, candelabra Spring, gear assy Flexible coupler Rectifier, silicon	71785 98978 75915 72765 72765 91260 76487 83701	441-43-11-215/202 TRTg-6027B 342014 223G-CE 169B obd# obd# IN2359	2 2 1 1 1 1 1 1 2
1923-0021	Tube, elect: 6AU6, 7 pin minat	33173	6AU6	2 2
1923-0044	Tube, elect: EL86, 9 pin minat	73445	EL 86/6CW5	

Table 6-2. Replaceable Parts (Cont'd)

		(	•		
⊕ Stock No.	Description	Mfr.	Mfr. Part No.	TQ	
2100-0013 2100-0036 2100-0113 2100-0154	R: var, comp, R: var, comp, R: var, comp, R: var, comp, R: var, comp, R: var, comp,	71590 01121 01121 11237	Model 2 JA1L0405502UC JJ59160 UPE-70	1 1 1 1	
2110-0016 2110-0021 2140-0007 2140-0009 3101-0001 5000-0637 5020-0600 5020-0618 5040-0212 5040-0600 5040-0607 5060-0020 5060-0021 5060-0625 5060-0633 5080-0205	Fuse, 0.6 amp, s-b (for 230 v operation) Fuse, 1.25 amp, s-b (for 115 v operation) Lamp, incd: 250 v, 10 W Lamp, incd: 0.15 amp, 6-8 v Switch, tog: STST, 3 amp Spring, thrust (vernier drive) Hub, dial: fits on shaft of 5020-0617 Bearing, capacitor drive Insulator, flex window, dial for curved frequency dial Assy, disc vernier drive Assy, Gear with coupling hub Assy, Gear Assy, binding post, ground w/link Binding post, red Coupler, flexit le	75915 71400 24455 24455 04009 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480	313. 600 MDL 1. 25 8A/S6-12V 47 80994-11 5000-0637 5020-0600 5020-0618 5040-0212 5040-0600 5040-0607 5060-0625 5060-0633 5080-0205	1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
8120-0050	Assy, power c ble: Smooth, black, shiny, 7.5 ft. NEMA plug	70903	KH-4096/PH-151/ 7.5 ft.	1	
9100-1329 9110-0004 9120-0016	Transformer, power Rector, filter choke Transformer, low freq. output	28480 72964 98734	9100-1329 8168-D 2005	1 1 1	

<sup>#</sup> See introduction to this section

## APPENDIX CODE LIST OF MANUFACTURERS (Sheet 1 of 2)

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

-	ode o.	Manufacturer Address	Code No.	Manufacture	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer Address
01		U.S.A. Common Any supplier of U.S.	07115	Corning Glas	Works	24655	General Radio Co.	West Concord, Mass.	73293	Hughes Products Division of
		McCoy Electronics Mount Holly Springs, Pa.			Components Dept. Bradford, Pa.	26365	Gries Reproducer Corp.	New Rochelle, N.Y.	1244	Hughes Aircraft Co. Newport Beach, Calif.
		Sage Electronics Corp. Rochester, N. Y.		Digitran Co.	Pasadena, Calif. ectronics Corp. Minneapolis, Minn.	26462 26992	Grobet File Co. of America, I		/3440	Amperex Electronic Co., Div. of North American Phillips Co., Inc. Hicksville, N.Y.
		Humidail Co. Colton, Calif. Westrex Corp. New York, N.Y.			ectronics Corp. Minneapolis, Minn. Electric Corp.	28480	Hamilton Watch Co. Hewlett-Packard Co.	Lancaster, Pa. Palo Alto, Calif.	73490	Beckman Helipot Corp. So. Pasadena, Calif.
		Garlock Packing Co.,	07130	Electronic			G. E. Receiving Tube Dept.	Owensboro, Ky.		Bradley Semiconductor Corp. Hamden, Conn.
		Electronic Products Div. Camden, N.J.	07149	Filmohm Corp	New York, N. Y.	35434	Lectrohm Inc.	Chicago, III.		Carling Electric, Inc. Hartford, Conn.
		Aerovox Corp. New Bedford, Mass.		Cinch-Graphi		36196		oury, Ontario, Canada		George K. Garrett Co., Inc. Philadelphia, Pa.
		Amp, Inc. Harrisburg, Pa.		Avnet Corp.	Los Angeles, Calif.	37942	P.R. Mallory & Co., Inc.	Indianapolis, Ind.		Federal Screw Prod. Co. Chicago, III.
		Aircraft Radio Corp. Boonton, N.J. Northern Engineering Laboratories, Inc.	07263	Fairching Sem	conductor Corp.  Mountain View, Calif.	39543 40920	Mechanical Industries Prod. ( Miniature Precision Bearings,		73793	Fischer Special Mfg. Co. Cincinnati, Ohio The General Industries Co. Elyria, Ohio
- 0	3013	Burlington, Wis,	07322	Minnesota Ru			Muter Co.	Chicago, III.		Goshen Stamping & Tool Co. Goshen, Ind.
0.0	0853	Sangamo Electric Company,	07387	The Birtcher			C.A. Norgren Co.	Englewood, Colo.		JFD Electronics Corp. Brooklyn, N. Y.
		Ordill Division (Capacitors) Marion, III.		Technical Wi			Ohmite Mfg. Co.	Skokie, III.		Jennings Radio Mfg. Co. San Jose, Calif.
		Goe Engineering Co. Los Angeles, Calif.	07910	Continental C			Polaroid Corp.	Cambridge, Mass.		Signalite Inc. Neptune, N.J.
		Carl E. Holmes Corp. Los Angeles, Calif. Allen Bradley Co. Milwaukee, Wis.	07933	Shockley Semic	nductor Corp. Mountain View, Calif.	48620	Precision Thermometer and Inst. Co.	Philadelphia, Pa.		J.H. Winns, and Sons Winchester, Mass. Industrial Condenser Corp. Chicago, III.
		Litton Industries, Inc. Beverly Hills, Calif.	07300	Laborator		49956	Raytheon Company	Lexington, Mass.		R.F. Products Division of Amphenol-
		TRW Semiconductors inc. Lawndate, Calif.	07980	Boonton Radi		52090	Rowan Controller Co.	Baltimore, Md.		Borg Electronics Corp. Danbury, Conn.
0	1295	Texas Instruments, Inc.		U.S. Engine		53743	Ward Leonard Electric	Mt. Vernon, N.Y.		E.F. Johnson Co. Waseca, Minn.
		Transistor Products Div. Dallas, Texas		Blinn, Delbe			Shallcross Mfg. Co.	Selma, N.C.		International Resistance Co. Philadelphia, Pa.
		The Alliance Mfg. Co. Alliance, Ohio Chassi-Trak Corp. Indianapolis, Ind.	08358	Burgess Batt	Niagara Fails, Ontario, Canada.	55026	Simpson Electric Co.	Chicago, III.	751/3	Jones, Howard B., Division of Cinch Mfg. Corp. Chicago, III.
		Pacific Relays, Inc. Van Nuys, Calif.	08717	Sloan Compan		55933 55938	Sonotone Corp. Sorenson & Co., Inc.	Elmsford, N.Y. So. Norwalk, Conn.	75378	James Knights Co. Sandwich, III.
		Amerock Corp Rockford, Iil.	08718	Cannon Elect	c Co., Phoenix Div. Phoenix, Ariz.	56137	Spaulding Fibre Co., Inc.	Tonawanda, N.Y.		Kulka Electric Corporation Mt. Vernon, N.Y.
		Pulse Engineering Co. Santa Clara, Calif.	08792	CBS Electron	cs Semiconductor		Sprague Electric Co.	North Adams, Mass.	75818	Lenz Electric Mfg. Co. Chicago, III.
		Ferroxcube Corp. of America Saugerties, N.Y.			Div.of C. B. S., Inc. Lowell, Mass.	59446	Telex, Inc.	St. Paul, Minn.		Littlefuse Inc. Des Plaines, III.
		Cole Mig. Co. Palo Alto, Calif.		Mel-Rain Babcock Rela	Indianapolis, Ind. ys, Inc. Costa Mesa, Calif.		Thomas & Betts Co.	Elizabeth 1, N. J.		Lord Mfg. Co. Erie, Pa.
		Amphenol-Borg Electronics Corp. Chicago, 111. Radio Corp. of America, Semiconductor	09134	Texas Capac			Tripplett Electrical Inc.	Bluffton, Ohio		C.W. Marwedel San Francisco, Calif. Micameld Electronic Mfg. Corp. Brooklyn, N.Y.
		and Materials Div. Somerville, N.J.		Atohm Electr		01//3	Union Switch and Signal, Div. Westinghouse Air Brake Co			James Millen Mfg. Co., Inc. Malden, Mass.
0.	2771	Vocaline Co. of America, Inc.		Electro Asse		62119	Universal Electric Co.	Owossa, Mich.		J. W. Mitler Co. Los Angeles, Calif.
		Old Saybrook, Conn.	09569	Mallory Batte			₩ard-Leonard Electric Co.	Mt. Vernon, N.Y.		Monadnock Mills San Leandro, Calif.
		Hopkins Engineering Co. San Fernando, Calif.	10001	Canada, I The Bristol (		64959	Western Electric Co., Inc.	New York, N.Y.		Mueller Electric Co. Cleveland, Ohio.
		G. E. Semiconductor Products Dept. Syracuse, N.Y.  Apex Machine & Tool Co.  Dayton, Ohio			e. Waterbury, Comm.	65092	Weston Inst. Div. of Daystron			Oak Manufacturing Co. Crystal Lake, III. Bendix Pacific Division of
		Eldema Corp. Et Monte, Calif.	1021	0010101 1101	Los Angeles, Calif.	66295 66346	Wittek Manufacturing Co. Wollensak Optical Co.	Chicago 23, III. Rochester, N.Y.	77000	Bendix Corp. No. Hollywood, Calif.
		Transitron Electronic Corp. Wakefield, Mass.	10411	Ti-Tal, Inc.	Berkeley, Calif.		Allen Mfg. Co.	Hartford, Conn.	77075	Pacific Metals Co. San Francisco, Calif.
0.	3888	Pyrofilm Resistor Co. Marristown, N.J.		Carborundum			Allied Control Co., Inc.	New York, N.Y.	77221	Phaostran instrument and
		Air Marine Motors, Inc. Los Angeles, Calif.		CTS of Berne		70319	Alimetal Screw Prod. Co., In	IC.	77010	Electronic Co. South Pasadena, Calif.
0	4009	Arrow, Hart and Hegeman Elect. Co. Hartford, Conn.	11237	Unicago Tele	phone of California, Inc. So. Pasadena, Calif.			Garden City, N.Y.		Phoeli Mfg. Co. Chicago, III. Philadelphia Steel and Wire Corp.
0	4013	Taurus Corp. Lambertville, N. J.	11312	Microwave E	ectronics Corp. Palo Alto, Calif.		Atlantic India Rubber Works,		11232	Philadelphia, Pa.
		Elmenco Products Co. New York, N.Y.		Duncan Elect			Amperite Co., Inc. Beiden Mfg. Co.	New York, N.Y. Chicago, 111.	77342	Potter and Brumfield, Div. of American
0	4222	Hi-Q Division of Aerovox Myrtle Beach, S.C.	11711		ment Corporation		Bird Electronic Corp.	Cleveland, Ohio		Machine and Foundry Princeton, Ind.
0	4298	Elgin National Watch Co.,	(1.71.7		dtor Division Newark, N.J.		Birnbach Radio Co.	New York, N.Y.		Radio Condenser Co. Camden, N.J.
0	4254	Electronics Division Burbank, Calif. Precision Paper Tube Co. Chicago, III.		Imperial Elec Melabs, Inc.	tionic, Inc. Buena Park, Calif. Palo Alto, Calif.	71041	Boston Gear Works Div. of			Radio Receptor Co., Inc. Brooklyn, N.Y.
		Dymec Division of Hewlett-Packard Co.		Philadelphia			Murray Co. of Texas	Quincy, Mass.		Resistance Products Co. Harrisburg, Pa. Rubbercraft Corp. of Calif. Torrance, Calif.
0	*****	Palo Alto, Calif.		Clarostat Mfg			Bud Radio Inc.	Cleveland, Ohio		Shakeproof Division of Illinois
0	4651	Sylvania Electric Prods., Inc.	12859	Nippon Elect			Camloc Fastener Corp.  Allen D. Cardwell Electronic	Paramus, N.J.	70103	Tool Works Elgin, III.
		Electronic Tube Div. Mountain View, Calif.	12930	Delta Semico		71515	Prod. Corp.	Plainville, Conn.		Signal Indicator Corp. New York, N.Y.
0	4713	Motorola, Inc., Semiconductor Prod. Div.	13103 13396	Thermolloy Telefunken (	Dallas, Texas	71400	Bussmann Fuse Div. of McGr			Struthers-Dunn Inc. Pitman, N.J.
	4777	Phoenix, Arlzona Filtron Co., Inc., Western Div. Culver City, Calif.	13835	Midland Mfg.			Edison Co.	St. Louis, Mo.		Thompson-Bremer & Co. Chicago, III.
		Automatic Electric Co. Northlake, III.	14099	Sem-Tech	Newbury Park, Calif.		Chicago Condenser Corp.	Chicago, III.		Titley Mfg. Co. San Francisco, Calif. Stackpole Carbon Co. St. Marys, Pa.
		Automatic Electric Sales Corp. Northlake, III.	14193	Calif. Resis		71450	CTS Corp. Cannon Electric Co.	Elkhart, Ind. Los Angeles, Calif.		Standard Thomson Corp. Waltham, Mass.
0	4796	Sequoia Wire & Cable Co. Redwood City, Calif.	14298		nponents, Inc. Conshohocken, Pa.	71400	Cinema Engineering Co.	Burbank, Calif.	78553	Tinnerman Products, Inc. Cleveland, Ohio
		Precision Coil Spring Co. El Monte, Calif.	14655 14960		ier Elec. Corp. So. Plainfield, N.J.		C.P. Clare & Co.	Chicago, III.	78790	Transformer Engineers Pasadena, Calif.
		P. M. Motor Company Chicago 44, III. Twentieth Century Plastics, Inc.	15203	Б.	Co. San Jose, Calif. Ironics Co. Inc. Brooklyn, N.Y.		Centralab Div. of Globe Unio	n Inc.		Ucinite Co. Newtonville, Mass.
U	2000	Los Angeles, Calif.	15291					Milwaukee, Wis.		Veeder Root, Inc. Hartford, Conn.
0	5277	Westinghouse Electric Corp.,	15772	Twentieth Co	ntury		Commercial Plastics Co. The Cornish Wire Co.	Chicago, III. New York, N.Y.		Wenco Mfg. Co. Chicago, III. Continental-Wirt Electronics Corp.
		Semi-Conductor Dept. Youngwood, Pa.		Coil Sprin			Chicago Miniature Lamp Work		15/6/	Philadelphia, Pa.
	5347	Ultronix, Inc. San Mateo, Calif.	15909 16037	The Daven C			A.O. Smith Corp., Crowley 1			Zierick Mfg. Corp. New Rochelle, N.Y.
		Illumitronic Engineering Co. Sunnyvale, Calif.		Spruce Pine Computer Dir				West Orange, N.J.	80031	Mepco Division of Sessions
0	5616	Cosmo Plastic (cro Electrical Spec. Co.) Cleveland, Ohio		De Jur-Amsc			Cinch Mfg. Corp.	Chicago, III.	90120	Clock Co. Morristown, N.J. Schnitzer Alloy Products Elizabeth, N.J.
0	5624	Barber Colman Co. Rockford, Ill.	10000		Long Island City 1, N.Y.		Dow Corning Corp.	Midland, Mich.		Schnitzer Alloy Products Elizabeth, N. J. Times Facsimile Corp. New York, N. Y.
		Tiffen Optical Co.	16758	Delco Radio	Div. of G.M. Corp. Kokomo, Ind.		Eitel-McCullough, Inc.	San Bruno, Calif.	0-100	Electronic Industries Association. Any brand
		Roslyn Heights, Long Island, N.Y.	17109	Thermonetic:		/2135	Electro Mative Mfg. Co., Inc	 Willimantic, Conn.	00101	tube meeting EIA standards. Washington, D. C.
0	5729	Metropolitan Telecommunications Corp.,	17474			71.707	Coto Coil Co., Inc.	Providence, R.I.	80207	Unimax Switch, Div. of
		Metro Cap. Division Brooklyn, N. Y.		Radio Indust Curtis Instru			John €. Fast & Co.	Chicago, III.		W.L. Maxson Corp. Wallingford, Conn.
		Stewart Engineering Co. Santa Cruz, Calif. Wakefield Engineering Inc. Wakefield, Mass.		E.I. DuPont		72619	Dialight Corp.	Brooklyn, N.Y.	80223	United Transformer Corp. New York, N.Y.
		The Bassick Co. Bridgeport, Conn.		Eclipse Pior			General Ceramics Corp.	Keasbey, N.J.		Oxford Electric Corp. Chicago, III. Bourns Laboratories, Inc. Riverside, Calif.
0	6175	Bausch and Lomb Optical Co. Rochester, N.Y.		Bendix A	viation Corp. Teterboro, N.J.	72699	General Instrument Corp.,	Nawari N I		Acro Div. of Robertshaw
0	6402	E.T.A. Products Co. of America Chicago, III.	19500		dison Industries,	72750	Semiconductor Div. Girard-Hopkins	Newark, N.J. Oakland, Calif.	50.44	Fulton Controls Co. Columbus 16, Ohio
(	6475	Western Devices, Inc. Inglewood, Calif.	10701	Div. of M	cGraw-Edison Co. West Orange, N.J.		Drake Mig. Co.	Chicago, III.		All Star Products Inc. Defiance, Ohio
(	16540	Amatom Electronic Hardware Co. Inc. New Rochelle, N. Y.		Electra Manu Electronic T			Hugh H. Eby Inc.	Philadelphia, Pa.		Avery Adhesive Label Corp. Monrovia, Calif.
	6555	Beede Electrical Instrument Co., Inc.		Executive, I		72928	Gudeman Co.	Chicago, III.		Hammerland Co., Inc. New York, N.Y.
	0000	Penacook, N.H.	21520	Fansteel Me	allurgical Corp. No. Chicago, III.		Robert M. Hadley Co.	Los Angeles, Calif.	81030	Stevens, Arnold, Co., Inc. Boston, Mass. International Instruments, Inc.
(	6751	U. S. Semcor Division of Nuclear Corp.	21335	The Fathir B	earing Co. New Britain, Conn.		Erie Resistor Corp.	Erie, Pa. Princeton, Ind.	0.000	New Haven, Conn.
		of America Phoenix, Arizona			one and Radio Corp. Clifton, N.J.		Hansen Mfg. Co., Inc. H. M. Harper Co.	Chicago, III.	81073	Grayhill Co. LaGrange, III.
		Torrington Mfg. Co., West Div. Van Nuys, Calif.		General Elec	tric Co. Schenectady, N.Y. Division Neta Park, Cleveland, Ohio		Helipot Div. of Beckman			Triad Transformer Corp. Venice, Calif.
(	1/088	Kelvin Electric Co. Van Nuys, Calif.	54433	a. L., Lalip	Unio		Instruments, Inc.	Fullerton, Calif.	81312	Winchester Electronics Co., Inc. Norwalk, Conn.

00015-39 Revised: February 1965 From: FSC. Handbook Supplements

H4-2 Dated MARCH 1962

## **APPENDIX** CODE LIST OF MANUFACTURERS (Sheet 2 of 2)

Code No.	Manufacturer	Address
81349	Military Specification	******
81415	Wilker Products, Inc.	Cleveland, Dhio
81453	Raytheon Mig. Co., Industria	Components
	Div., Industr. Tube Operat	ions Newton, Mass.
81483	International Rectifier Corp.	El Segundo, Calif.
81541	The Airpax Products Co.	Cambridge, Mass.
81860	Barry Controls, Inc.	Watertown, Mass.
82042	Carter Parts Co.	Skokie, III.
82142	Jeffers Electronics Division o	of
	Speer Carbon Co.	Du Bois, Pa.
82170	Allen B. DuMont Labs, Inc.	Clifton, N.J.
82209	Maguire Industries, Inc.	Greenwich, Conn.
82219	Sylvania Electric Prod. Inc.	
	Electronic Tube Div.	Emporium, Pa.
82376	Astron Co.	East Newark, N.J.
82389	Switchcraft, Inc.	Chicago, Ni.
82647	Metals and Controls, Inc., D	iv, of
	Texas instruments, Inc.,	
	Spencer Prods.	Attleboro, Mass.
82866	Research Products Corp.	Madison, Wis.
82877	Rotron Manufacturing Co., In-	
82893 83053	Vector Electronic Co. Western Washer Mir. Co.	Glendale, Calif. Los Angeles, Calif.
83058	Carr Fastener Co.	Cambridge, Mass.
83086	New Hampshire Ball Bearing,	
03000	new mampainte dans bearing,	Peterborough, N.H.
83125	Pyramid Electric Co.	Darlington, S.C.
83148	Ejectro Cords Co.	Los Angeles, Calif.
83186	Victory Engineering Corp.	Springfield, N.J.
83298	Bendix Corp., Red Bank Div.	
83315	Hubbell Corp.	Mundelein, III.
83330	Smith, Herman H., Inc.	Brooklyn, N.Y.
83385	Central Screw Co.	Chicago, III.
83501	Gavitt Wire and Cable Co.,	
	Div. of Amerace Corp.	Brookfield, Mass.
83594	Burroughs Corp.,	
	Electronic Tube Div.	Plainfield, N.J.
83740	Eveready Battery	New York, N.Y.
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.
83821	Loyd Scruggs Co.	Festus, Mo.
84171	Arco Electronis, Inc.	New York, N.Y.
84396		San Francisco, Calif.
84411	Good All Electric Mfg. Co.	Ogallala, Neb.
84970	Sarkes Tarzian, Inc.	Bloomington, Ind.
85454	Boonton Molding Company	Boonton, N.J.
85471	A.B. Boyd Co.	San Francisco, Calif.

Code No.	Manufacturer Address
85474	R.M. Bracamonte & Co. San Francisco, Calif.
85660	Koiled Kords, Inc. New Haven, Conn.
85911	Seamless Rubber Co. Chicago, IN.
86197	Clifton Precision Products Clifton Heights, Pa.
86579	Precision Rubber Products Corp. Dayton, Ohio
B6684	Radio Corp. of America, RCA Electron Tube Div. Harrison, N.J.
87216	Philco Corporation (Lansdale Division) Lansdale, Pa.
87473	Western Fibrous Glass Products Co.
	San Francisco, Calif.
B7664	Van Waters & Rogers Inc. Seattle, Wash.
87930	Tower Mfg. Corp Providence, R. I.
88140	Cutler-Hammer, Inc. Lincoln, 111.
88220	Gould-National Batteries, Inc. St. Paul, Minn.
88698	
89231	Graybar Electric Co. Oakland, Calif.
89462	Waldes Kohinoor, Inc. Cambridge, Mass.
89473	General Electric Distributing Corp. Schenectady, N.Y.
89636	Carter Parts Div. of Economy Baler Co. Chicago, Ill.
89665	United Transformer Co. Chicago, III.
90179	U.S. Rubber Co., Mechanical
30113	Goods Div. Passaic, N.J.
90970	Bearing Engineering Co. San Francisco, Calif.
91260	Connor Spring Mfg. Co. San Francisco, Calif.
91345	Miller Dial & Nameplate Co. El Monte, Calif.
91418	Radio Materials Co. Chicago, III.
91506	Augal Brothers', Inc. Attleboro, Mass.
91637	Dale Electronics, Inc. Columbus, Nebr.
91662	Elco Corp. Philadelphia, Pa.
91737	Gremar Mfg. Co., inc. Wakefield, Mass.
91827	K F Development Co. Redwood City, Calif.
91929	Minneapolis-Honeywell Regulator Co.,
91961	Microswitch Div. Freeport, III. Nahm-Bros. Spring Co. Oakland, Calif.
92180	Tru-Connector Corp. Peabody, Mass.
92196	Universal Metal Prod., Inc. Bassett Puente, Calif.
92367	Elgeet Optical Co., Inc. Rochester, N.Y.
92607	Tinsolite Insulated Wire Co. Tarrytown, N.Y.
93332	Sylvania Electric Prod. Inc.,
33332	Semiconductor Div. Woburn, Mass.
93369	Robbins and Myers, Inc. New York, N.Y.
93410	Stevens Mig. Co., Inc. Mansfield, Ohio
93788	Howard J. Smith Inc. Port Monmouth, N. J.

Code No.	Manufacturer	Address
93929	G. V. Controls	Livingston, N. J.
93983	Insuline-Van Norman Ind., Inc.	
	Electronic Division	Manchester, N.H.
94137	General Cable Corp.	Bayonne, N.J.
94144	Raytheon Mfg. Co., Industrial	
31111	Div., Receiving Tube Oper.	
94145	Raytheon Mfg. Co., Semicond	
31210	California Street Plant	Newton, Mass.
94148	Scientific Radio Products, Inc.	
34240		Loveland, Colo.
94154	Tung-Sol Electric, Inc.	Newark, N.J.
94197	Curtiss-Wright Corp.	NUMBIR, H.J.
34131		East Paterson, N.J.
94222	Southco Div. of S. Chester Co	
94310	Tru Ohm Prod. Div. of Model	2.00.00
34310	Engineering and Mig. Co.	Chicago, III.
94330	Wire Cloth Products Inc.	Chicago, III.
94682	Worcester Pressed Aluminum C	
34002	Worder Fredado Midamida C	Worcester, Mass.
95023	Philbrick Researchers, Inc.	Boston, Mass.
95236	Allies Products Corp.	Miami, Fla.
95238	Continental Connector Corp.	Woodside, N.Y.
95263	Leecraft Mfg. Co., Inc.	New York, N.Y.
95264	Lerco Electronics, Inc.	Burbank, Calif.
95265	National Coil Co.	Sheridan, Wyo.
95275	Vitramon, Inc.	Bridgeport, Conn.
95348	Gordas Corp.	Bloomfield, N.J.
95354	Methode Mfg. Co.	Chicago, III.
95712	Dage Electric Co., Inc.	Franklin, Ind.
95987	Weckesser Co.	Chicago, III.
96067	Huggins Laboratories	Sunnyvale, Calif.
96095	Hi-O Division of Aerovox	Olean, N.Y.
96256	Thordarson-Meissner Div. of	
	Maguire Industries, Inc.	Mt. Carmel, III.
96296	Solar Manufacturing Co.	Los Angeles, Calif.
96330	Carlton Screw Co.	Chicago, III.
96341	Microwave Associates, Inc.	Burlington, Mass,
96501	Excel Transformer Co.	Oakland, Calif,
97464	Industrial Retaining Ring Co.	Irvington, N.J.
97539	Automatic and Precision Mfg.	
	mig.	Yonkers, N.Y.
97966	CBS Electronics.	ronkora, III. I.
0.000	Div. of C. B. S Inc.	Danvers, Mass.
97979	Reon Resistor Corp.	Yonkers, N.Y.
98141	Axel Brothers Inc.	Jamaica, N.Y.
98159	Rubber Teck, Inc.	Gardena, Calif.

No.	Manufacturer	Address
98220	Francis L. Mosley	Pasadena, Calif.
98278	Microdot, Inc.	So. Pasadena, Calif.
98291		Mamaroneck, N.Y.
98405	Carad Corp.	Redwood City, Calif.
98731	General Mills	Minneapolis, Minn.
98821	North Hills Electric Co.	Minepla, N.Y.
98925		
	Div. of Clevite Corp.	Waltham, Mass.
98978	international Electronic	
	Research Corp.	Burbank, Calif.
99109	Columbia Technical Corp.	New York, N.Y.
99313	Varian Associates	Palo Alto, Calif.
99515	Marshall Industries, Electro	n
	Products Division	Pasadena, Calif.
99707	Control Switch Division, Co.	ntrols Co.
	of America	El Segundo, Calif.
99800	Delevan Electronics Corp.	East Aurora, N.Y.
99848	Wilco Corporation	Indianapolis, Ind.
	Renbrandt, Inc.	Boston, Mass.
99942	Hoffman Semiconductor Div.	
	Hoffman Electronics Corp	. Evanston, III,
99957	Technology Instrument Corp of Calif.	
THE I	Technology Instrument Corp	Newbury Park, Calif, RS HAVE NO NUM- T SUPPLEMENT TO
THE I	Technology Instrument Corp of Cailf.  FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK.	Newbury Park, Calif. RS HAVE NO NUM- T SUPPLEMENT TO E FOR MANUFAC
THE I BER A THE TURE	Technology Instrument Corp of Cailf.  FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK.	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TO E FOR MANUFAC.
THE I BER / THE TURE JORGO	Technology Instrument Corp of Calif. FOLLOWING H-P VENDO SSSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK. Winchester Electronics, Inc. Malco Tool and Die	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TO E FOR MANUFAC. Santa Monica, Calif. Los Angeles, Calif.
THE I BER A THE TURE	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO  ASSIGNED IN THE LATES  FEDERAL SUPPLY COD  RS HANDBOOK.  Winchester Electronics, Inc.  Malco Tool and Die  Western Corl Div. of Automa	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC FOR MANUFAC:  Santa Monica, Calif. Los Angeles, Calif. tic
THE I BER / THE TURE JORGO	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO SSSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK.  Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa	Newbury Park, Calif, RS HAVE NO NUM. T SUPPLEMENT TO E FOR MANUFAC.  Santa Monica, Calif, Los Angeles, Calif, tic. Redword City, Calif.
THE I BER / THE TURE JOSOO 0000F 0000M	Technology instrument Corp of Cailf, FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK.  Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa Ind., Inc. Ty-Cai Mig. Co., Inc.	Newbury Park, Calif, RS HAVE NO NUM. T SUPPLEMENT TO E FOR MANUFAC.  Santa Monica, Calif, Los Angeles, Calif, tic Redwood City, Calif, Holliston, Mass.
THE I BER / THE TURE JOSOO COOOM COOOP COOOP	Technology instrument Corp of Cailf. FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK. Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa Ind., Inc. Ty-Car Mfg. Co., Inc.	Newbury Park, Calif, RS HAVE NO NUM. T SUPPLEMENT TO E FOR MANUFAC.  Santa Monica, Calif, Los Angeles, Calif, tic Redwood City, Calif, Holliston, Mass, D. Newski, N.J.
THE IBER / THE TURE JOSOO COOOM COOOP COOOM COOOR COOOA	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO  SSIGNED IN THE LATES  FEDERAL SUPPLY COD  RS HANDBOOK.  Winchester Electronics, Inc.  Maico Tool and Die  Western Coil Div. of Automa  ind., Inc.  Ty-Car Mig. Co., Inc.  Willow Leather Products Cor  British Radio Electronics Life.	Newbury Park, Calif, RS HAVE NO NUM. T SUPPLEMENT TO E FOR MANUFAC.  Santa Monica, Calif, Los Angeles, Calif, tic Redwood City, Calif, Holliston, Mass, D. Newski, N.J.
THE I BER / THE TURE JOSOO 0000F 0000M 0000P 0000Z 000AA 000AB	Technology instrument Corp of Calif. FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK. Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa Ind., Inc. Ty-Car Mg. Co., Inc. Willow Leather Products Cor British Radio Electronics Li ETA	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. Itic Redwood City, Calif. Helliston, Mass. P. Newark, N. J. d. Washington, D. C. Englam
THE IBER ATHE TURE JOSOO COOOF COOOM COOOP COOOA	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO SSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK.  Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa Ind., Inc. Ty-Car Mig. Co., Inc. Willow Leather Products Cer British Radio Electronics LI ETA Indiana General Corp., Elect.	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. Itc Redwood City, Calif. Holliston, Mass. p. Newark, N. J. d. Washington, D. C. Englam t. Div. indian.
THE IBER ATHE TURE JOSOO COOOF COOOM COOOP COOOA	Technology instrument Corp of Calif. FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK. Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa Ind., Inc. Ty-Car Mg. Co., Inc. Willow Leather Products Cor British Radio Electronics Li ETA	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. Itc Redwood City, Calif. Holliston, Mass. p. Newark, N. J. d. Washington, D. C. Englam t. Div. indian.
THE IBER ATHE TURE JOSOO COOOF COOOM COOOP COOOA	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO SSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK.  Winchester Electronics, Inc. Malco Tool and Die Western Coil Div. of Automa Ind., Inc. Ty-Car Mig. Co., Inc. Willow Leather Products Cer British Radio Electronics LI ETA Indiana General Corp., Elect.	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. Itc Redwood City, Calif. Holliston, Mass. p. Newark, N. J. d. Washington, D. C. Englam t. Div. indian.
THE IBER ATTHE TURE JORON COOOF OCCOM COOO	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO  ASSIGNED IN THE LATES  FEDERAL SUPPLY COD  RS HANDBOOK.  Winchester Electronics, Inc.  Malco Tool and Die  Western Corl Div. of Automa  Ind., Inc.  Ty-Gar Mig. Co., Inc.  Willow Leather Products Cor  British Radio Electronics Lit  ETA  Indiana General Corp., Elec  Precision instrument Compo  Rubber Eng. & Development	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. (Redwood City, Calif. Holliston, Mass. p. Newark, N.J. d. Washington, D.C. Englam indian. ents Co. Van Nuys, Calif. Hayward, Calif.
THE IBER ATHE TURE JOSOO COOOM COO	Technology instrument Corp of Calif. FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK. Winchester Electronics, Inc. Willow Leather Products Corbinsh Radio Tool and Die Western Coil Div. of Automa ind., Inc. Ty-Car Mfg. Co., Inc. Willow Leather Products Corbinsh Radio Electronics LI ETA Indiana General Corp., Elec Precision Instrument Compor A "N" D Manulacturing Co.	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. Itic Redwood City, Calif. Holliston, Mass. p. Newark, N. J. d. Washington, D. C. Washington, D. C. Van Nuys, Calif. Hayward, Calif. San Jose 27, Calif. San Jose 27, Calif.
THE I BER A THE TURE JORON COOPER COO	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO  SSIGNED IN THE LATES  FEDERAL SUPPLY COD  RS HANDBOOK.  Winchester Electronics, Inc.  Malco Tool and Die  Western Coil Div. of Automa  Ind., Inc.  Ty-Gar Mig. Co., Inc.  Willow Leather Products Cor  British Radio Electronics LI  ETA  Indiana General Corp., Elec  Precision Instrument Compor  Rubber Eng. & Development  A "M" D Manulacturing Co.  Cooltton	Newbury Park, Calif. RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif. Los Angeles, Calif. Itc Redwood City, Calif. Holliston, Mass. P. Newark, N.J. d. Washington, D.C. L. Div. Inglam. Intents Co. Van Nuys, Calif. Hayward, Calif. San Jose 27, Calif. Oakland, Calif. Oakland, Calif.
THE I TURE  BER A TURE  J0000  C000F  C000A  C000A  C000A  C000B  C000M  C000M  C000A  C00A  C000A	Technology instrument Corp of Calif. FOLLOWING H-P VENDO ASSIGNED IN THE LATES FEDERAL SUPPLY COD RS HANDBOOK. Winchester Electronics, Inc. Willow Leather Products Corbitals Radio Electronics LIETA Indiana General Corp., Elec Products of British Radio Electronics LIETA Indiana General Corp., Elec Precision Instrument Compor Rubber Eng. & Development A "M" D Manufacturing Co. Cooliton Control of Elgin Watch Co.	Newbury Park, Calif, RS HAVE NO NUM. T SUPPLEMENT TC E FOR MANUFAC.  Santa Monica, Calif, Los Angeles, Calif, Itic Redwood City, Calif, Holliston, Mass, p. Newark, N. J. d. Washington, D. C. Englant t. Div, Indian. ents Co. Van Nuys, Calif, Hayward, Calif, San Jose 27, Calif, Oakland, Calif, Burbank, Calif, Burbank, Calif,
THE I BER A TURE JORGO COODE C	Technology instrument Corp of Calif.  FOLLOWING H-P VENDO  SSIGNED IN THE LATES  FEDERAL SUPPLY COD  RS HANDBOOK.  Winchester Electronics, Inc.  Maico Tool and Die  Western Coil Div. of Automa  ind., Inc.  Ty-Car Mig. Co., Inc.  Willow Leather Products Cor  British Radio Electronics LI  ETA  Indiana General Corp., Elec  Precision instrument Compor  Rubber Eng. & Development  A "M" D Manulacturing Co.  Cooliton  Control of Eigin Watch Co.  Cailfornia Eastern Lab.	Newbury Park, Calif RS HAVE NO NUM T SUPPLEMENT TC E FOR MANUFAC  Santa Monica, Calif Los Angeles, Calif Itc Redwood City, Calif Holliston, Mass p. Newark, N.J. G. Washington, D.C Englan Lett Co. Van Nuys, Calif Hayward, Calif San Jose 27, Calif Oakland, Calif Oakland, Calif

Code

# HEWLETT - PACKARD INTERNATIONAL OFFICES Electronic Instrument Sales and Service

#### ARGENTINA

Mauricio A. Saurez Telecomunicaciones Carlos Calvo 224, Buenos Aires Tel: 30-6312

#### AUSTRALIA

Sample Electronics (Vic.) Pty. Ltd. 9-11 Cremorne Street Richmond E. 1, Victoria Tel: 42-4757 (3 lines) Sample Electronics (N.S.W.) Pty. Ltd. 4 Grose Street, Glebe, N.S.W. Tel: 69-6338 (6 lines)

#### AUSTRIA

UNILABOR H.m.b.H. Wissenschaftliche Instrumente Rummelhardtgasse 6/3 P.O. Box 33, Vienna IX/71 Tel: 42 61 81

#### BELGIUM

Hewlett-Packard Benelux 20-24 Rue de l'Hopital, Brussels 1 Tel: 11.22.20

#### BRAZIL

Ciental Importacao e Comercio Ltda. R. Des Eliseu Guilherme, 62 Sao Paulo 6 Tel: 32-4332

#### CHILE

Hector Calcagni Casilla 13942, Santiago Tel: 6 42 26

#### COLOMBIA

Instrumentacion Henrik A. Langebeck & Cia, Ltda. Apartado Aereo 6287 Bogota 1, D E Tel: 45-78-06 Cable: AARIS - Bogota

#### DENMARK

Tage Olsen A/S Ronnegade 1, Copenhagen 0 Tel: 29.48.00

#### FINLAND

INTO 0/Y P.O. Box 153 11 Meritullinkatu, Helsinki Tel: 6.11.33 FRANCE

Hewlett-Packard France 150 Blvd. Massena, Paris 13e Tel: 707.97.19

#### GERMANY

Hewlett-Packard VgmbH Steindamm 35, Hamburg 1 Tel: 24.05.51

Hewlett-Packard VgmbH Kurhessenstrasse 95 Frankfurt a. Main Tel: 52.00.36 Hewlett-Packard VgmbH Reginfriedstrasse 13 Munich 9 Tel: 49.51.21/2 Hewlett-Packard VgmbH Technisches Buro Herrenbergerstrasse 110 703 Boblingen, Wurttemberg Tel: 6971 Hewlett-Packard VgmbH Lietzenburger Strasse 30 1000 Berlin 30 Tel: 24 92 71

#### IN EUROPE

Hewlett-Packard, S. A. 54 Route des Acacias Geneva. Switzerland Telephone: (022) 42.81.50 Telex: 2.24 86 Cable: HEWPACKSA

#### GREECE

K. Karayannis Klaftmonos Square, Athens 124 Tel: 230.301

#### INDIA

The Scientific Instrument Company, Ld. 6, Tej Bahadur Sapru Road, Allahabad 1 Tel: 2451
The Scientific Instrument Company, Ld. 240, Dr. Dadabhai Naoroji Rd., Bombay 1 Tel: 26-2642
The Scientific Instrument Company, Ld. 11, Esplanade East, Calculta 1 Tel: 23-4129
The Scientific Instrument Company, Ld. 30, Mount Road, Madras 2 Tel: 86339
The Scientific Instrument Company, Ld. 8-7, Ajmeri Gate Extn., New Delhi 1 Tel: 271053

#### IRAN

Telecom Ltd. P.O. Box 1812, Tehran Tel: 43850

#### ISRAFI

Electronics & Engineering Ltd. 16 Kremenetski St., Tel Aviv Tel: 35021-2-3

#### ITALY

Hewlett-Packard Italiana S.p.A. Viale Lunigiana 46, Milan Tel: 69.15.84/5/6 Hewlett-Packard Italiana S.p.A. Palazzo Italia Piazza Marconi, 25, Roma-Eur Tel: 59.12.544/5

#### JAPAN

APAN
Yokogawa-Hewlett-Packard Ltd.
2270 Ishikawa-cho
Hachioji, Tokyo
Tel: Hachioji 0426-3-1231 (19 lines)
Yokogawa-Hewlett-Packard Ltd.
No. 3, 6-chome, Aoyama-Kitamachi
Akasaka, Minato-ku, Tokyo
Tel: 403-6511
Yokogawa-Hewlett-Packard Ltd.
No. 8, Umeda, Kita-ku, Osaka
Tel: 313-0091
Yokogawa-Hewlett-Packard Ltd.
No. 4, 3-chome, Himeikedori,
Chigusa-ku, Nagoya
Tel: 751-8545

#### KOREA

American Trading Company, Korea, Ltd. 112-35 Sokong-Dong, Jung-ku Seoul P.O. Box 1103, Seoul Tel: 3-7049, 3-7613

#### NETHERLANDS

Hewlett-Packard Benelux N.V. 23 Burg Roellstraat, Amsterdam W. Tel: (020) 13.28.98 and 13.54.99

#### NEW ZEALAND

Sample Electronics (N. Z.) Ltd. 8 Matipo Street Onehünga S. E. 5, Auckland Tel: 565:361

#### NORWAY

Morgenstierne & Co. A/S Ingeniorfirma 6 Wessels Gate, Oslo Tel. 20, 16, 35

## For Sales and Service Assistance in Areas Not Listed Contact:

#### IN LATIN AMERICA

Hewlett-Packard Inter-Americas 1501 Page Mill Road Palo Alto, California 94304, U.S.A. Telephone: (415) 326-7000 TWX: 910-373-1267 Telex: 033811 Cable: HEWPACK

#### PANAMA

Electronico Balboa, S.A. P.O. Box 4929 Panama City 5, Panama Tel: 3-0833

#### PER

Fernando Ezeta B. Casilla 3061 Lima Tel: 78745

#### PORTUGAL

TELECTRA Rua Rodrigo da Fonseca 103 P.O. Box 2531, Lisbon 1 Tel: 68 60 72 and 68 60 73 and 68 60 74

#### PUERTO RICO & VIRGIN ISLANDS

San Juan Electronics, Inc. 150 Ponce de Leon, Stop 3 P.O. Box 5167 Pta. de Tierra Sta., San Juan 00906 Tel: 725-3342, 724-4406

#### SPAIN

ATAIO, Ingenieros Enrique Larreta 12, Madrid 6 Tel: 235.43.44 and 235.43.45

#### SOUTH AFRICA

F. H. Flanter & Co. (Pty.), Ltd. Rosella House Buitencingle Street, Cape Town Tel: 3-3817

#### SWEDEN

H-P Instrument AB Centralvagen 28, Solna, Centrum Tel: 83.08.30 H-P Instrument AB Idunagatan 28A Goteborg Tel: 27.68.00 and 27.68.01

### SWITZERLAND

Max Paul Frey Wankdorffeldstrasse 66, Berne Tel: (031) 42.00.78

### TAIWAN (FORMOSA)

Hwa Sheng Electronic Co., Ltd. 21 Nanking West Road, Taipei Tel: 4 6076, 4 5936

#### TURKEY

TELEKOM Engineering Bureau P.O. Box 376—Galata, Istanbul Tel: 49.40.40

#### UNITED KINGDOM

Hewlett-Packard Ltd. Dallas Rd., Bedford, England Tel: Bedford 68052

## VENEZUELA

Citec, C. A.
Edif. Arisan-Of =4
Avda. Francisco de Miranda-Chacaito
Apartado del Este 10.837, Caracas
Tel: 71.88.05

#### YUGOSLAVIA

Belram S.A. 83 Avenue des Mimosas Brussels 15, Belgium Tel: 35.29.58

## ELSEWHERE

Hewlett-Packard
Overseas Sales Department
1501 Page Mill Road
Palo Alto, California 94304, U.S.A.
Telephone. (415) 326-7000
TWX. 910-373-1267
Telex: 033811 Cable: HEWPACK



## MANUAL BACKDATING CHANGES

Model 200CD

WIDE RANGE OSCILLATOR

Manual Serial Prefixed: 605-

-hp- Part No. 200CD-903

This manual backdating sheet makes this manual applicable to earlier instruments. Instrument-component values that differ from those in the manual, yet are not listed in the backdating sheet, should be replaced using the part number given in the manual.

Instrument Serial Prefix

Make Manual Changes

Instrument Serial Prefix


Make Manual Changes

Serials 1 thru 903	1, 2, 3, 4, 5, 6, 7, 8
Serials 904 thru 22549	2, 3, 4, 5, 6, 7, 8
005-	3, 4, 5, 6, 7, 8
103-	4, 5, 6, 7, 8

129-	5, 6, 7, 8
212-	6, 7, 8
229-	7, 8
333-	8

CHANGE #1

Change V1 and V3 to 6AC7 tubes, -hp- Part No. 1923-0014. The following partial schematic shows these tubes and their connections.

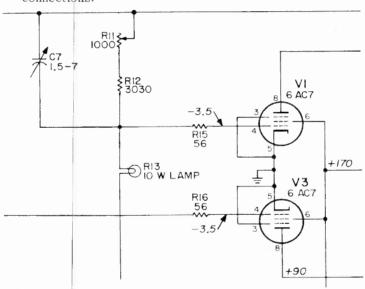


CHANGE #2

Delete C17 and C18 below serial 3637.

Change R11 to 1000 ohm rheostat, -hp- Part No. 2100-0036 and R12 to 3000 ohms, -hp- Part No. 0689-3025.

The following partial schematic shows the electrical connections.

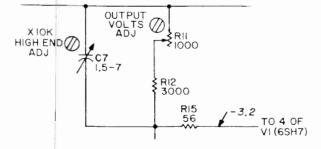

#### Manual Changes Model 200CD Page 2

Instrument	Sarial	Drofiv
Instrument	эегтаг	Prentx

Make Manual Changes

Instrument Serial Prefix

Make Manual Changes

Serials 1 thru 903	1,	2,	3,	4,	5,	6,	7,	8
Serials 904 thru 22529	2,	3,	4,	5,	6,	7,	8	
005-	3,	4,	5,	6,	7,	8		
103-	4,	5,	6,	7,	8			


129-	5, 6, 7, 8
212-	6, 7, 8
229-	7, 8
333-	8

#### CHANGE #3

Change V1 and V3 to 6SH7 tubes, -hp- Part No. 1923-0036.

Change V2 and V4 to 6AU5 tubes, -hp- Part No. 1923-0020.

The following schematic shows electrical connections.

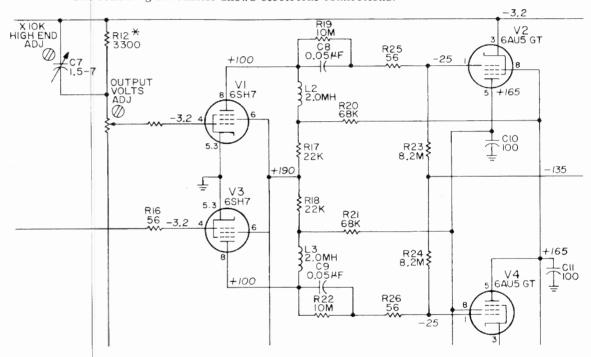

5AR4 tube is interchangeable with 5Y3 in the power supply.

Delete R51, hum adjust and R50, Dynamic Bal. Adj.


## CHANGE #4

Change R50 to 250 K ohms, -hp- Part No. 2100-0175, connected between R23 and R24.

Change R30, 31 to resistors, matched pair, 2500 ohms each matched to within 1%, -hp- Part No. 200J-26.

Delete R35 and 36.

Partial schematic shows change in this circuit.

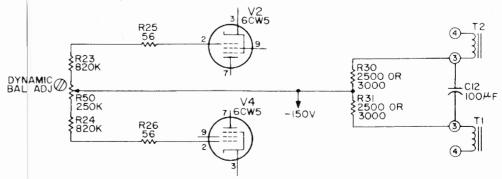

Make Manual Changes

Instrument Serial Prefix

## Manual Changes Model 200CD Page 3

		F	,
Serials 1 thru 903	1, 2, 3, 4, 5, 6, 7, 8	129-	5, 6, 7, 8
Serials 904 thru 22549	2, 3, 4, 5, 6, 7, 8	212-	6, 7, 8
005-	3, 4, 5, 6, 7, 8	229-	7, 8
103-	4, 5, 6, 7, 8	333-	8

Make Manual Changes Instrument Serial Prefix

CHANGE #5

Change R23, 24 to resistor: fixed, composition, 820,000 ohms  $\pm 10\%$ , 1/2 w, -hp- Part No. 0687-8241. (If amplitude oscillations occur expecially at high frequencies, use current value of resistors.)

CHANGE #6

Section VI Table 6-1, under Miscellaneous, and Table 6-2 Delete the following:

Disc Ass'y Vernier Drive, -hp- Part No. 5040-0607; Mfr. 28480; TQ, 1 Bearing Capacitor Drive, -hp- Part No. 5020-0618; Mfr. 28480; TQ, 1

Spring Thrust, -hp- Part No. 5000-0637; Mfr. 28480; TQ, 1

Add the following:

Disc, vernier drive 5020-0236 Disc, vernier drive 5040-0211 Spring, compression 1460-0019

Spring only for replacement. For replacement of vernier drive, use current

part numbers.

CHANGE #7

Section VI Table 6-1, under Miscellaneous, and Table 6-2

Delete the following:

Assembly, Gear, -hp- Part No. 5060-0020 Assembly, Gear, -hp- Part No. 5060-0021 Spring, -hp- Part No. 1460-0114

Add the following:

Gear Spur, -hp- Part No. 5020-0011 Assembly, Gear, -hp- Part No. 5020-0602 Spring, -hp- Part No. 624A-36B-5

Spring only for replacement. For replacement of gears, use current gear assembly.

ALL

Proper Range Switches for All Serials

Instrument Serial No.	Range Switch (-hp- Part No.		
1 thru 833	200CD-19W		
834 thru 853	200 CD-19WA		
854 thru 903	200CD-19W		
904 thru 3637	200CD-19WA		
3638 and above	200CD-19WB		

#### Proper Output Transformers for All Serials

Instrument Serial No.	Output Transformer (-hp- Part No.)
1 thru 833	$T_1$ is 9120-0011, $T_2$ is 9120-0010#
8 <b>34</b> thru 853	$T_1^1$ is 9120-0015, $T_2^2$ is 9120-0016#
8 <b>54</b> thru 903	$T_1$ is 9120-0011, $T_2$ is 9120-0010# $T_1$ is 9120-0015, $T_2$ is 9120-0016#
904 thru 3637	$T_1^{1}$ is 9120-0015, $T_2^{-}$ is 9120-0016#
3638 and above	$T_1^1$ is 200CD-9, $T_2^2$ is 9120-0016

<sup>#</sup> There are some exceptions. If R37 and R38, on the range switch, are 100 ohms, use 9120-0010; if R37 and R38 are 200 ohms, use 9120-0016.

## Manual Changes Model 200CD Page 4

Instrum Serial Prefix	Make Manual Changes	Instrument Serial Prefix	Make Manual Changes
Serials 1 thru 903	<b>1, 2,</b> 3, 4, 5, 6, 7, 8	129-	5, 6, 7, 8
Serials 904 thru 22549	2, 3, 4, 5, 6, 7, 8	212-212-	6, 7, 8
005-	3, 4, 5, 6, 7, 8	229-	7, 8
103-	4, 5, 6, 7, 8	333-	8

CHANGE #8

Section VI and Figure 5-9 Delete CR1 and CR2.


Change T3 power transformer to -hp- Part No. 9100-0036.

Add the following:

V5, Tube, elect, 5AR4, -hp- Part No. 1930-0003. XV5, Socket, tube, octal, -hp- Part No. 1200-0020.

Change Table 1-1, Specifications, to the following:
DISTORTION: Less than 0.5% below 500 kc; less than 1%, 500 kc and above. Independent of load impedance.

The following partial schematic shows Power Supply changes

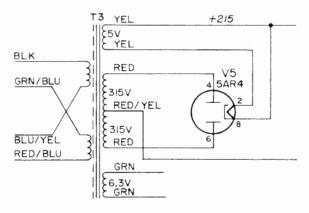

6. 1

