Errata

Title & Document Type: 3575A Operating & Service

Manual

Manual Part Number: 03575-90002

Revision Date: June 1976

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.tm.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



GAIN-PHASE METER

3575A









OPERATING AND SERVICE MANUAL

MODEL 3575A GAIN-PHASE METER

Serial Number: 1450A01646

IMPORTANT NOTICE

This loose-leaf manual does not require a change sheet. All change information has been integrated into the manual by means of revised pages. Each revised page is identified by a revision letter located at the bottom of the page. A reference, located directly below the revision letter, indicates which of the backdating changes in Appendix C apply to that page. If the serial number of your instrument is lower than the one on this title page, the manual contains revisions that may not apply to your instrument. Refer to Appendix C for complete backdating information.

WARNING

To help minimize the possibility of electrical fire or shock hazards, do not expose this instrument to rain or excessive moisture.

Manual Part No. 03575-90002

Microfiche No. 03575-90053

©Copyright Hewlett-Packard Company 1972 P.O. Box 301, Loveland, Colorado 80537 U.S.A.

Printed: June 1976



CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment [,except that in the case of certain components listed in Section I of this manual, the warranty shall be for the specified period]. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by -hp-. Buyer shall prepay shipping charges to -hp- and -hp- shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to -hp- from another country.

Hewlett-Packard warrants that its software and firmware designated by -hp- for use with an instrument will execute its programming instructions when properly installed on that instrument. Hewlett-Packard does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements. This is a Safety Class 1 instrument.

GROUND THE INSTRUMENT

)

)

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

SAFETY SYMBOLS

General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.




Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked).



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual and before operating the equipment.

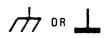

Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line).

Direct current (power line).

 $\overline{\sim}$

Alternating or direct current (power line).

WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.



The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

NOTE:

The NOTE sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

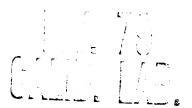


TABLE OF CONTENTS

Secti	on	Page	Secti	on		Pag
I	GEN	ERAL INFORMATION 1-1	IV	THF	ORY OF OPERATION	4-
	1-1.			4-1.	Introduction	
	1-10.	Specifications		4-5.	Simplified Block Diagram Description	
		Options		4-8.	Functional Description	
		Accessories Supplied		4-9.	Input Channels	
		Accessories Available		4-21.		
		Instrument and Manual Identification 1-4		4-30.		
	1-20.	mistrament and manual identification		1 20.	(Schematic No.'s 2, 3 and 4)	1-4
Secti	on	Page		4-37.		
II		ALLATION AND INTERFACING 2-1		157.	(All Schematic No. 3)	1-6
11	2-1.	Introduction		4-48.	Effects of Harmonic Distortion on	+ (
	2-1.	Initial Inspection		7-70.	Phase	4 9
.e.	2-5. 2-5.	Power Requirements		4-53.		
- 1	2-3. 2-7.	Power Cords		4-53. 4-57.		4-0
	2-7. 2-9.	Grounding Requirements		4-37.		4.16
		Environmental Requirements 2-1		1.00	(A8 Schematic No. 5)	. 4-10
	2-11.	Installation		4-66.	1 ,	4 1 1
	2-13. 2-14.			4 . 0	No. 6)	
				4-69.	C.	. 4-1
	2-16.			4-96.	Interface Assembly	
		Repackaging for Shipment			(A16B Schematic No. 9)	. 4-16
		Interfacing (Option 002, 003) 2-2	C			ъ
	2-25.	· · · · ·	Section		IMENIAN OF	Page
	2-27.	Printer Interfacing2-2	V		NTENANCE	
		n .		5-1.	Introduction	
Section		Page		5-3.	Recommended Test Equipment	
Ш		RATING INSTRUCTIONS		5-5.	Performance Checks	
	3-1.	Introduction		5-7.	Test Card	
	3-3.			5-9.	Panel Meter Accuracy Check	
	3-5.	General Operating Information 3-1		5-11.	1	
	3-6.	Input Connections		5-13.	•	
	3-8.	Grounding and Termination3-1		5-15.	Shunt Capacitance Check	5-6
	3-19.	Input Constraints		5-17.	Supplemental Phase Accuracy Check .	5-7
	3-24.	Voltage Ranges		5-19.	Adjustment Procedures	5-9
	3-27.	Frequency Ranges		5-21.	Test Equipment	5-9
	3-30.	Meter Indication		5-23.	Test Point and Adjustment Location.	5-9
	3-37.	Analog Outputs		5-25.	+ 12 V Reference Adjustment	5-9
	3-41.	Basic Operating Procedure 3-6		5-27.	Power Supply Voltage Checks	5-9
	3-42.	Instrument Turn On		5-29.	Output Filter Zero Adjustments	
	3-43.	Amplitude Measurements3-7		5-31.	Panel Meter Zero Adjustment	
	3-48.	Phase Measurements			(Standard & Options)	.5-10
	3-59.	Using 10:1 Divider Probes3-10		5-33.	Phase Detector Zero Adjustment	.5-10
	3-64.	Options		5-35.	Current Source and Current	
	3-65.	•		•	Sink Adjustments	.5-10
	3-71.	Option 002, 003		5-37.	Panel Meter/Analog Output	_ •
		Using a Printer			Adjustments	.5-11
	3-89.	Triggering		5-39.	Amplitude Offset Adjustment	
	3-91	Printout		541	Log Amplifier Adjustments	5-11

TABLE OF CONTENTS (Cont'd)

Section	Page	Section		Pag
V 5.43. 5.45. 5.47. 5.49.	Input Attenuator Adjustments	6- 6-	EPLACEABLE PARTS	
5-51.	General Servicing Information	Section		Page
5-53. 5-55. 5-65. 5-67. 5-70. 5-72. 5-74. 5-76. 5-78. 5-82. 5-84. 5-86.	Cautions.5-15Assembly Removal.5-15Component Replacement.5-16Servicing Etched Circuit Boards.5-16Cleaning the Display Window.5-16Troubleshooting.5-18Guidelines.5-18Symptoms.5-18Troubleshooting Trees.5-18Measurement Conditions.5-18Control Settings.5-18Power Supply Troubleshooting.5-18	VII C. 7-7-7-7-7-APPENIA. CODB. SALL	IRCUIT DIAGRAMS -1. Introduction	

LIST OF ILLUSTRATIONS

Figur	e Page	Figur	e	Page
1-1.	Model 3575A Gain-Phase Meter 1-0		Timing Circuits and Functional	
2-1.	Power Cords		Block Diagram	4-16
3-1.	Front Panel Description	5-1.	Power Splitter	
3-2.	Rear Panel Description	5-2.	Amplitude and Phase Accuracy Checks.	
3-3.	Power-Line Ground Loop	5-3.	Shunt Capacitance Check	
3-4.	Source-Induced Ground Loop3-4	5 - 4.	R/C Phase Shift Network	
3-5.	Power Input Module A, B and C 3-7		Removing the Front Panel, Panel Meters	
3-6.	dBV to Volts Conversion		and A12	5-17
3-7.	Worst Case Error Produced by	5-6.	Location of Main Assemblies and	
	Odd Harmonics		Adjustments	5-21/5-22
3-8.	Simple RC Network	5-7.°	Location of Panel Meter	
3-9.	Remote Pin Connections		Adjustments	5-21/5-22
3-10.	Flag Timing Delayed Mode	5-8.	<u> </u>	5-23/5-24
	Flag Timing Non-Delayed Mode	5-9.	Digital Panel Meter Troubleshooting Tree	e .5-25/5-26
		5-10.	Phase Troubleshooting Tree	
4-1.	Simplified Block Diagram4-1		Phase Logic Troubleshooting Tree	
4-2.	Phase Difference + 60 Degrees	6-1.	Mechanical Parts (Main Frame)	6-17
4-3.	Phase Detector Output4-4	6-2.	Mechanical Parts (Panel Meter)	6-19
4-4.	Phase Control Filter Output4-5	7-1.	Functional Block Diagram	7-5/7-6
4-5.	Basic Filter Configuration	7-2.	Preamplifier (A1/A2) and Log Converter	
4-6.	Phase Control Logic Functional Block		(A3/A4) Schematics and Component L	ocation
	Diagram		Diagrams	7-7/7-8
4-7.	Logic Gates	7-3.	Phase Detector (A5) Schematic	
4-8.	A and B In Phase - No Distortion 4-8		and Component Location Diagram	7-9/7-10
4-9.	Even Harmonics Cancelled 4-9	7-4.	Current Source (A6) and Phase Control	
	A and B Clean - No Error		Logic (A11) Schematics	
4-11.	Large Error Produced by Noise4-9		and Component Location Diagrams	7-11/7-12
	Panel Meter Block Diagram4-11	7-5.	Phase Control Filter (A7) Schematic	
4-13.	Analog and Digital Timing4-13		and Component Location Diagram	7-13/7-14


LIST OF ILLUSTRATIONS (Cont'd)

Figui	Page Page	Figure	Page
7-6.	Function Switching (A8) and Front Panel Switching (A13) Schematics and Component Location Diagrams 7-15/7-16	7-9. Power Supply (A14) and Power Supply Mother Board (A15) Schematics	Ü
7-7.	Output Filter (A9/A10) Schematic and Component Location Diagram7-17/7-18	and Component Location Diagrams 7-21/ 7-10. Interface Board (A16B) Schematic and Component Location Diagram 7-23/	
7-8.	Panel Meter (A20, A21, A22) Schematics and Component Location Diagrams 7-19/7-20	7-11. Panel Meter Connector (A12A, A12B) Schematics and Component Location Diagrams 7-25/	s

LIST OF TABLES

Table	Page	Table	<u>}</u>	Page
1-1.	Specifications1-0	4-5.	Panel Meter Switching Logic	
1-2.	General Information1-2	4-6.	Variable Time Delays	4-1
1-3.	Accessories Supplied1-4	5-1.	Recommended Test Equipment	5-
1-4.	Accessories Available	5-2.	Amplitude and Phase Accuracy Checks	5-4
3-1.	Typical Settling Time	5-3.	High Level Accuracy Checks	5-6
3-2.	Effects of Noise Minimized	5-4.	Power Supply Checks	5-0
3-3.	Reactance of 10 pF Probe	5-5.	Factory Selected Components	5-14
3-4.	Printer Column 4 Coding	5 - 6.	Power Supply Ratings	5-19
3-5.	Printer Column 10 Coding	6-1.	Replaceable Parts	6-2
4-1.	Filter Control Logic		•	
4-2.	Threshold Detector Output4-7	7-1.	Assembly Cross Reference	7-1
4-3.	Error Correction Equations 4-9	7-2.	Mother Board Pin Connections	7-3/7-4
4-4.	Amplitude Function Switching	7-3.	Truth Table for Remote	7-23/7-24



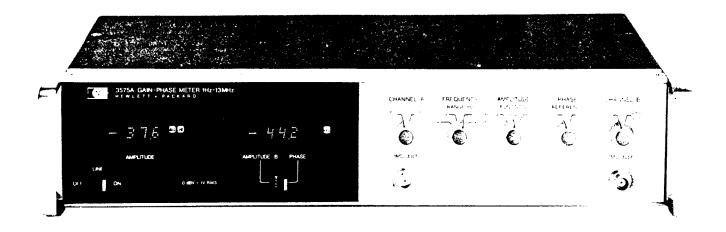

3575-A-2843

Figure 1-1. Model 3575A Gain-Phase Meter.

Amplitude Accuracy (At Analog Output) ** PERFORMANCE RATING NPUT RANGE 2m - 2 . v - 2mv-2v Phase Accuracy (At Analog Output)* *RATIO BIA TOLERANCEL -6--1 8 HO A -4 -- 24 NOTE SHADED AREAS NOT SPECIFIED -14 - - 3 -24--4 #14BV ±3d8V :248V(:2.548)* 100-: IKH: FREQUENCY --**Conditions: 1) Temperature Range 15° to 35° C. 2) The accuracy of ratio (B/A) measurements is determined by the lowest input level and highest input IOOHZ ... FREQUENCY frequency. If the two input signals are not of the same frequency, add \pm 0.5 dB to existing ratio tolerances. 3) Analog Output Voltage = 10 mV per dB/dBV with > 2 Megohm load resistance. *Conditions: 4) Amplitude Stability and Accuracy is specified for a 1) Temperature Range 15° to 35° C. period of 90 days after calibration. 2) Lowest applicable Voltage Range settings must be Panel Meter Accuracy: ± 3 counts (0.3 degrees, 0.3 dB/dBV)† used. 3) Lowest applicable Frequency Range setting must be †Must be added to Amplitude Accuracy and Phase Accuracy specifications to obtain total error tolerances for panel 4) Analog Output Voltage = 10 mV per degree with meter readings. > 2 Megohm load resistance. Input Shunt Capacitance: < 30 pF (Also see Input Impedance 5) Phase Stability and Accuracy is specified for a period listing in Table 1-2.)

Table 1-1. Specifications.

of 90 days after calibration.



GENERAL INFORMATION

1-1. DESCRIPTION.

- 1-2. The Hewlett-Packard Model 3575A Gain-Phase Meter is a versatile, wide-range ac voltage analyzer which affords direct, convenient measurement of amplitude and phase parameters. The major features of the instrument include broadband frequency response, wide dynamic range, digital readout plus a unique detection scheme which ensures accurate phase measurements in the presence of noise and distortion. These standard features, along with a variety of options including dual panel meters, BCD output and remote control, make the 3575A a truly flexible instrument that is well suited for bench or systems applications.
- 1-3. The broadband frequency response of the Model 3575A extends from 1 Hz to 13 MHz in four overlapping frequency ranges. For maximum operating convenience, each range is designed to cover a wide band of frequencies while range selectability allows the user to optimize measurement accuracy and settling time over the entire frequency spectrum.
- 1-4. The 3575A is equipped with two independent input channels. Each channel provides an 80 dB dynamic range which allows "hands off" operation with a wide range of input levels. In addition, each channel is equipped with a 20 dB input attenuator which provides an extended operating capability of 100 dB in two voltage ranges. Input sensitivity is from 0.2 mV rms to 2 V rms on the lower range and 2 mV rms to 20 V rms on the higher range. The 1 Megohm < 30 pF input impedance of each channel permits the use of 10:1 divider probes which further extend the maximum input level to 200 V rms and the overall operating range to 120 dB.
- 1-5. The 3575A contains a built-in dc digital voltmeter which provides a direct indication of amplitude or phase on a 3 1/2 digit (LED) display. Lighted annunciators on the panel meter indicate dB V, dB or degrees depending on the parameter being measured. The panel meter display is determined by the front panel Display switch which permits selection of Amplitude or Phase presentation. For recording purposes, an Analog Output (BNC) connector is provided on the rear panel of the instrument. The Analog Output supplies a dc voltage proportional to the panel meter reading.
- 1-6. When Amplitude Display is selected, the panel meter presentation is controlled by the front panel Amplitude Function switch which permits selection of three different functions. These functions are Log A, Log B and Log B/A. When Log A or Log B is selected, the panel meter indicates the logarithmic amplitude of the respective input signal in

- dBV (1 V rms = 0 dBV). Input levels from 0.2 mV rms (-74 dBV) to 20 V rms (+26 dBV) can be measured with 0.1 dBV resolution in two voltage ranges. When Log B/A is selected, the panel meter indicates the relative amplitude of the two input signals in dB. The display range for relative measurements is from -100 dB to +100 dB with 0.1 dB resolution. Since the two input channels each contain ac/dc converters and are totally independent, relative measurements can be made between two signals that differ in frequency.
- 1-7. The 3575A amplitude functions are particularly useful for measuring gain, attenuation and other characteristics where amplitude comparison is required. The Log B/A function eliminates the need for separate input and output measurements and time consuming difference calculations.
- 1-8. When Phase Display is selected, the 3575A measures the phase difference between two input signals. The phase measurement range is from 180 degrees to +180 degrees with 12 degrees overrange and 0.1 degree display resolution. Due to the wide dynamic range of the instrument, phase difference can be measured between two signals that differ in amplitude by as much as 100 dB.
- 1-9. An accurate phase meter is of little value unless the accuracy can be maintained in the presence of noise and distortion. Unlike conventional phase meters, the 3575A uses two phase detectors rather than a single phase detector. This, in conjunction with a highly effective error correction scheme, greatly reduces the effects of noise and distortion on phase readings.

1-10. SPECIFICATIONS.

- 1-11. Table 1-1 is a complete list of the Model 3575A critical specifications that are controlled by tolerances. Table 1-2 contains general information that describes the operating characteristics of the Model 3575A.
- 1-12. Any changes in specifications due to manufacturing, design, or traceability to the U.S. National Bureau of Standards are included in Table 1-1 in this manual. Specifications listed in this manual supersede all previous specifications for the Model 3575 A.

1-13. OPTIONS.

1-14. There are presently three instrument and two accessory options available for the Model 3575A. These options are as follows:

Option	Factory Installed*
Dual Panel Meters	Option 001
Dual Panel Meters,	Option 002
BCD Outputs and	Option 002,
Remote Control	003**
Kit, Rack Mount	Option 908
Additional Manual	Option 910

- * Field installable option kits are available.
- ** Options 002 and 003 are identical except for assertion states of BCD outputs (see Table 1-2).

Table 1-2. General Information.

INPUTS

Front Panel Inputs: Female BNC connectors

Input Impedance: 1 Megohm (nominal) shunted by < 30 pF

Rear Panel Inputs: Holes are provided on the rear panel for installing BNC input connectors in place of the front panel input connectors. When rear-panel inputs are used, the shunt capacitance increases to approximately 40 pF (not compatible with 10:1 divider probes).

ANALOG OUTPUTS

Connectors: Female BNC connectors, labeled ANALOG OUT-PUT 1 and ANALOG OUTPUT 2 are located on the rear panel of the instrument. Analog Output 2 is used only in instruments equipped with dual panel meters (Options 001 and 002).

Resistance: 1 Kilohm (nominal)

Output Voltage:

Amplitude Measurements: 10 mVdc per dB/dBV with > 2 Megohm load resistance.

Phase Measurements: 10 mVdc per degree with > 2 Megohm load resistance.

RESPONSE TIME

Typical Settling Time: (following a change in input parameters):

Frequency Range	100 % * Settled	95 % * Settled	90 % * Settled
1 Hz - 1 kHz	30 sec.	20 sec.	17 sec.
10 Hz - 100 kHz	3 sec.	2 sec.	1.7 sec.
100 Hz - 1 MHz	0.3 sec.	0.2 sec.	0.17 sec.
1 kHz - 13 MHz	30 ms.	20 ms.	17 ms.

^{*} Percent of final reading

RANGES

Frequency Range: 1 Hz to 13 MHz in four ranges:

1 Hz to 1 kHz 10 Hz to 100 kHz 100 Hz to 1 MHz 1 kHz to 13 MHz

Dynamic Range: 80 dB

Operating Range (Each Channel): 100 dB in two ranges:

0.2 mV rms to 2 V rms (-74 dBV to +6 dBV) 2 mV rms to 20 V rms (-54 dBV to +26 dBV)

DISPLAY MODES

Amplitude or Phase (front panel DISPLAY switch)

AMPLITUDE MEASUREMENTS

Amplitude Functions: A dBV, B dBV, or B/A (front panel AMPLITUDE FUNCTION switch)

Display Range (A dBV, B dBV): -74.0 dBV to +26.0 dBV (in two Voltage Ranges)

Display Range (B/A): - 100.0 dB to + 100.0 dB*

 Both input signals must be within the range of 0.2 mV rms to 20 V rms.

Display Resolution: 0.1 dBV, 0.1 dB

Amplitude Reference (A dBV, B dBV): 1 V rms = 0 dBV

Reference Channel (B/A): Channel A*

* A negative reading means that the signal applied to Channel B is lower in amplitude than the signal applied to channel A; a positive reading means that the signal applied to Channel B is greater in amplitude than the signal applied to Channel A.

PHASE MEASUREMENTS

Phase Measurement Range: - 180 degrees to + 180 degrees with 12 degrees overrange

Display Resolution: 0.1 degree

Phase Reference: A or -A (front PHASE REFERENCE switch)*

- *1) Channel A is the reference channel. A negative reading means that B lags A; a positive reading means that B leads A.
- *2) With the Phase Reference set to A, Channel A is inverted and the phase reading is offset by 180 degrees.

Error Introduced by Noise: < 2 degrees (nominal) for a 1 V rms 10 kHz sine wave and 1 MHz gaussian noise on one channel with 30 dB signal to noise ratio using the 100 Hz to 1 MHz Frequency Range.

Error Introduced by Distortion:

Even Harmonics: Cancelled - No Error Odd, In-Phase Harmonics: No Error

Odd, Out-of-Phase Harmonics: < 0.6 degrees (nominal) when total odd harmonic distortion is more than 40 dB below the fundamental.

Table 1-2. General Information (Cont'd).

DIGITAL READOUT

Display: 3 1/2 digits with fixed decimal indicator, polarity sign and annunciators.

Reading Rate (Internal Sampling): 4 readings per second

GENERAL

Operating Temperature Range: 0°C to +55°C, unless otherwise specified


Storage Temperature: $-40^{\rm O}$ C to + $75^{\rm O}$ C

Power Requirements: 115 V or 230 V \pm 10 %, 48 Hz to 440 Hz, 50 VA, maximum.

Weight:

Net Weight: 18 1/4 lbs. Shipping Weight: 25 lbs.

Dimensions:

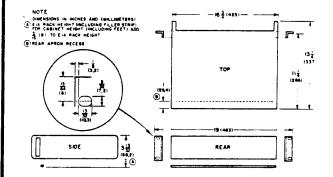

OPTIONS

Dual Panel Meters (Option 001): The 3575A Option 001 is equipped with dual panel meters and dual analog outputs for simultaneous amplitude and phase presentations.

Left-Hand Panel Meter: Indicates A dBV, B dBV or B/A as determined by the Amplitude Function switch setting.

Right-Hand Panel Meter: Indicates B dBV or phase as determined by the Amplitude B/Phase switch setting.

Dual Analog Outputs: Rear panel BNC connectors provide dc output voltages that correspond with the respective panel meter readings (also see Analog Output heading).

Dual Panel Meters, BCD Output and Remote Control (Options 002, 003): The 3575A Options 002, and 003 are equipped with dual panel meters and dual analog outputs (same as Option 001) plus dual BCD outputs and a complete remote control capability.

Remote Logic: The 3575A Option 002 uses Low True TTL logic for BCD outputs and remote control lines. The 3575A Option 003 uses High True TTL logic for BCD Outputs and Low True TTL logic for remote control lines.

State	BCD Outputs *	Remote Control Lines
0	+ 2.4 V to + 5 V	Open or + 2.4 V to + 5 V
"1"	0 V to + 0.4 V	Gnd. or - 0.5 V to + 0.4 V

* In 3575A Option 003, BCD Outputs are High True.

BCD Outputs: Provide parallel binary-coded data that corresponds with the respective panel meter reading. Fourteen lines for each panel meter include three 8-4-2-1 BCD-coded digits, a single line overrange ("1") digit and a single line polarity indicator.

Overload Outputs: Three output lines, A_{OL}, B_{OL} and "overload", indicate overload on A, overload on B and overload on A OR B.

Remote Control Lines: Eight input lines accept parallel binary instructions for remote control of all front panel functions, ranges and settings (except LINE ON/OFF). Internal storage is not provided.

Control Modes: Local or Remote (1 control line)

Remote Measure: 1 control line*

• In the Remote Control mode, the panel meters must be externally triggered by applying a ground-true momentary pulse (> 1 ms) to the Remote Measure line each time a reading is required. The Remote Measure command should not be applied for at least 0.5 ms following any change that affects the programmed state of the instrument.

Isolation: Remote input and output lines are not isolated.

Trigger Mode: Delayed or Non-Delayed (1 control line)*

* The trigger mode determines the time required to obtain panel meter readings or BCD outputs initiated by the Remote Measure command. In the Delayed mode the time is variable and is controlled by the Frequency Range setting:

Frequency Range	Delay Time (nominal)
1 Hz to 1 kHz	33 seconds
10 Hz to 100 kHz	4 seconds
100 Hz to 1 MHz	1.1 seconds
1 kHz to 13 MHz	0.66 seconds

In the Non-Delayed mode, the measurement time is fixed at 600 ms regardless of the Frequency Range setting.

Data Flags: + Data Flag and - Data Flag (2 output lines)*

* Provide a "Data Ready" indication to the external controller. Flags are "set" by the Remote Measure pulse and "reset" at the end of the delay (Trigger Mode) cycle.

Condition	Indication	+ Data Flag	- Data Flag
"Set"	Data Not Ready	1	0
"Reset"	Data Ready	О	1
		•	

1-15. For further information concerning these options, refer to Table 1-2 (General Information) or Section III in this manual or contact the nearest -hp- Sales and Service Office.

1-16. ACCESSORIES SUPPLIED.

1-17. Table 1-3 is a list of accessories supplied with the Model 3575A.

1-18. ACCESSORIES AVAILABLE.

1-19. Table 1-4 is a list of Hewlett-Packard accessories that are available for use with the Model 3575A.

1-20. INSTRUMENT AND MANUAL IDENTIFICATION.

1-21. Hewlett-Packard uses a two-section serial number. The first section (prefix) identifies a series of instruments. The last section (suffix) identifies a particular instrument within the series. If a letter is included with the serial number, it identifies the country in which the instrument was manufactured. If the serial number of your instrument is lower than the one on the title page of this manual, refer to Appendix C for backdating information that will adapt this manual to your instrument. All correspondence with Hewlett-Packard should include the complete serial number.

Table 1-3. Accessories Supplied.

Description	Quantity	-hp- Part No.
Interface Connector	1 ea.	1251-0086
(Opt. 002, 003) Accessory Kit Includes the following:	1 ea.	03575-84411
PC Board Extender (22 pin)	1 ea.	5060-5989
PC Board Extender (12 pin)	1 ea.	5060-5988
PC Board Extender (10 pin)	1 ea.	5060-5987

Table 1-4. Accessories Available.

-hp- Model	Description
10004A	Voltage Divider Probe (miniature)
456A	AC Current Probe
562A-16C	Printer Cable
50277.700	(for 5050A and 5055B Printers)
11048C	50 Ohm Feed-Thru Termination
11094B	75 Ohm Feed-Thru Termination
11095A	600 Ohm Feed-Thru Termination
5060-8739	Rack Mounting Kit



SECTION II

INSTALLATION AND INTERFACING

2-1. INTRODUCTION.

2-2. This section contains information and instructions necessary for installing, shipping and interfacing the Model 3575A Gain-Phase Meter. Included are initial inspection procedures, power and grounding requirements, environmental information, mounting instructions, instructions for repackaging for shipment and interfacing information for Option 002 and 003 instruments.

2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be physically free of mars or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage incurred in transit. If the instrument was damaged in transit, file a claim with the carrier. Check for supplied accessories (Table 1-3) and test the electrical performance of the instrument using the performance check procedures outlined in Section V. If there is damage or deficiency, see the warranty on the inside title page of this manual.

2-5. POWER REQUIREMENTS.

2-6. The Model 3575A can be operated from any source of 115 or 230 volts (\pm 10 %), 48 Hz to 440 Hz. Power dissipation is 50 VA; maximum.

2-7. Power Cords.

2-8. Figure 2-1 illustrates the standard power plug configurations that are used throughout the United States and in other countries. The -hp- part number shown directly below each plug drawing is the part number for a 3575A power cord equipped with the proper plug. If the appropriate power cord is not included with the instrument, notify the nearest Hewlett-Packard office and a replacement cord will be provided.

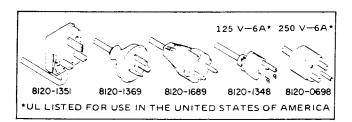


Figure 2-1. Power Cords.

2-9. GROUNDING REQUIREMENTS.

2-10. To protect operating personnel, the National Electrical Manufacturer's Association (NEMA) recommends that the instrument panel and cabinet be grounded. The Model 3575A is equipped with a three-conductor power cable which, when plugged into an appropriate receptacle, grounds the instrument. The offset pin on the power plug is the ground connection.

2-11. ENVIRONMENTAL REQUIREMENTS.

2-12. The Model 3575A is a low power, fully transistorized instrument; therefore, no special cooling arrangements are required. The 3575A should not be operated where the ambient temperature is below 0°C (32°F) or above 55°C (131°F) or where the relative humidity exceeds 95%. The instrument should not be stored where the ambient temperature is below -40°C (-40°F) or above 75°C (167°F).

2-13. INSTALLATION.

2-14. Bench Mounting.

2-15. The Model 3575A is shipped with plastic feet and tilt stand in place, ready for use as a bench instrument. The plastic feet are shaped so that the 3575A can be mounted on top of another Hewlett-Packard instrument.

2-16. Rack Mounting.

2-17. The Model 3575A can be rack mounted using the Rack Mounting Kit (-hp- 5060-8739) separately available as an accessory. Installation instructions are included with the kit. The rack mount for the Model 3575A is an EIA standard width of 19 inches.

2-18. REPACKAGING FOR SHIPMENT.

2-19. The following paragraphs contain a general guide for repackaging the instrument for shipment. Refer to Paragraph 2-20 if the original container is to be used; 2-21 if it is not. If you have any questions, contact the nearest -hp-Sales and Service Office (See Appendix B for office locations).

NOTE

If the instrument is to be shipped to Hewlett-Packard for service or repair, attach a tag to the instrument identifying the owner and indicating the service or repair to be accomplished. Include the model number and full serial number of the instrument. In any correspondence, identify the instrument by model number and full serial number.

- 2-20. Place instrument in original container with appropriate packing material and seal well with strong tape or metal bands. If original container is not available, one can be purchased from your nearest -hp- Sales and Service Office.
- 2-21. If original container is not to be used, proceed as follows:
- a. Wrap instrument in heavy paper, or plastic before placing in an inner container.
- b. Place packing material around all sides of instrument and protect panel face with cardboard strips.
- c. Place instrument and inner container in a heavy carton or wooden box and seal with strong tape or metal bands.
- d. Mark shipping container "DELICATE INSTRUMENT", FRAGILE", etc.

2-22. INTERFACING (Options 002, 003 only).

NOTE

The 3575A Options 002 and 003 are identical except that Option 003 instruments use high-true logic for the BCD outputs. In all other respects, the following information for Option 002 instruments also applies to Option 003 instruments.

- 2-23. The 3575A Option 002 supplies BCD outputs that correspond with the panel meter readings and is equipped for remote control of all front panel functions, ranges and settings (except LINE ON/OFF). The remote input and output lines are available at the rear panel Interface connector, A19J1.
- 2-24. Figure 3-9 (Section III) illustrates the 3575A Option 002 Interface connector as viewed from the rear of the instrument. The connector drawing and the table within the figure provides complete input/output and control information. A 50-pin mating connector (-hp- 1251-0086*) and a 46-conductor cable are required to connect all input and output lines, circuit ground and + 5 Vdc to an external controller or I/O card.

2-25. Computer Interfacing.

2-26. For interfacing the Model 3575A Option 002 to an -hp- computer, it will be necessary to utilize the information in this manual to develop I/O circuitry and software that meets individual system requirements. For more

detailed information concerning the 3575A Option 002, refer to Paragraph 3-71.

2-27. Printer Interfacing.**

- 2-28. The 3575A Option 002 can be connected directly to an -hp- printer (Model 5050B or 5055A) using the -hp-562A-16C printer cable. The 3575A BCD output and data flag connections are compatible with the 562A-16C cable and modifications to the printer or printer cable are not required. The printer, however, must be set or wired to accept ground-true BCD inputs and an external ground lead must be connected between the printer chassis and the 3575A chassis. In addition, there are two minor modifications that should be performed on the 3575A:
- a. The Local/Remote control line (J1 pin 50) is automatically grounded when the 562A-16C printer cable is connected. Grounding the Local/Remote line enables the timing circuits in the 3575A but also disables the front panel controls and enables the remote control lines. Besides being inaccessible with the printer cable connected, the remote control lines (J1 pins 9 through 12, 34 through 37) are connected to the BCD input lines that control unused printer columns, 5 and 6. If remote control operation is desired, it will be necessary to fabricate an adapter that will isolate the unused printer-input lines and permit external connections to the 3575A control lines. If front panel operation is desired, connect the jumper wire on the 3575A Interface Assembly (A16B) between points 1 and 3 (see Paragraph 3-86).
- b. When using a printer it is necessary to supply a Remote Measure command to the 3575A to initiate the measurement cycle. When the printer cable is connected to the 3575A, the Remote Measure line (J1 pin 21) is not accessible. For this reason, a test point labeled "TRIGGER" is provided on the Interface Assembly, A16B. The "trigger" test point is connected directly to the Remote Measure line. For convenience, install a female BNC connector (-hp-1250-0083) in one of the holes provided on the rear panel (Item 13, Figure 3-2) and connect a short piece of wire between the BNC connector and the "trigger" test point on A16B. Apply the Remote Measure command to the BNC connector (Also see Paragraph 3-80)

NOTE

The 562A-16C printer cable does not provide a solid ground connection between the printer and the 3575A. For this reason, it is necessary to connect an external ground lead (short piece of copper braid) between the printer chassis and the 3575A chassis.

2-29. For further information concerning the use of a printer with the 3575A Option 002, refer to Paragraph 3-87.

^{*} Cinch No. 57-30500-375

^{**} For Option 003 instruments, the printer must be set or wired to accept high-true BCD inputs.



SECTION III OPERATING INSTRUCTIONS

3-1. INTRODUCTION.

3-2. This section contains complete operating instructions for the Model 3575 A Gain-Phase Meter. Included is a description of controls, general operating information, a basic operating procedure and information concerning Option 001 through 003 instruments.

3-3. CONTROLS AND INDICATORS.

3-4. Figures 3-1 and 3-2 illustrate and describe the function of all front and rear panel controls, connectors and indicators. The description of each item is keyed to the drawing within the figure.

3-5. GENERAL OPERATING INFORMATION.

3-6. Input Connections.

)

3-7. The input signals can be applied to the 3575A through twisted pairs, shielded cables equipped with BNC connectors (-hp-10503A Cable Assembly), or 10:1 divider probes (-hp-10004A Voltage Divider Probe). Test leads should be kept as short as possible to minimize extraneous pickup and/or loss due to cable capacitance. When using 10:1 divider probes, it is first necessary to compensate the probes as outlined in Paragraph 3-62.

3-8. Grounding and Termination.

- 3-9. In the design of the 3575A, extra care has been taken to control internal ground currents that could degrade the accuracy of amplitude and phase readings. Due to it's wide dynamic range and high sensitivity, however, the 3575A can be affected by external ground currents or "ground loops" that are caused by poor grounding or incorrect termination. This means that when using the 3575A, particularly at low levels and low frequencies, the operator must be extremely "ground conscious" if accurate, repeatable readings are to be obtained.
- 3-10. There are basically two types of ground loops that can cause measurement errors in the 3575 A. The first type, commonly known as a power-line ground loop, is encountered at frequencies below the power-line frequency or at

integral multiples of the power-line frequency where either or both input signals are below 50 mV. The power-line ground loop is caused by extraneous currents that circulate between the signal source and the 3575A by way of power-line ground. The other type of ground loop is introduced by the signal source and is generally encountered at frequencies below 1 MHz where the signal applied to one channel is greater than 1 V rms and the signal applied to the other channel is less than 10 mV rms. These two types of ground loops are illustrated in Figures 3-3 and 3-4 and are discussed in the following paragraphs.

- 3-11. Power-Line Ground Loop. Figure 3-3A shows the input arrangement for a simple grounded measurement. Ein represents the source being measured along with any noise associated with it and is generally called the "normal-mode source". Rs represents the source resistance and the resistance of the high lead; Rg represents the resistance of the ground lead. Current from Ein (normal-mode current) flows through Rs, Z₁ and Rg and the instrument responds to the drop across Z_1 . As long as the grounds on both sides of Rg are identical, extraneous currents cannot circulate between the source ground and the instrument ground. If. however, the grounds are different due to voltage drops in the ground lead or currents induced into it, a new source is developed and the measurement appears as shown in Figure 3-3B. The new source, Ecm (the difference between grounds) is called the "common-mode source" because it is common to both the high and ground lines. Common-mode current can flow through Rg or through Rs and Z₁. Since Z₁ is usually much larger than Rs and since they are both in parallel with Rg, most of the voltage across Rg will appear across Z₁ causing an error in the amplitude or phase
- 3-12. To minimize power-line ground loops, the following guidelines should be observed:
 - a. Keep input leads as short as possible.
- b. Provide good ground connections to minimize the resistance of Rg.
- c. Connect the signal source and the 3575 A to the same power bus.
- d. If a removable ground strap is provided on the signal source, float the source to break the common-mode current path.

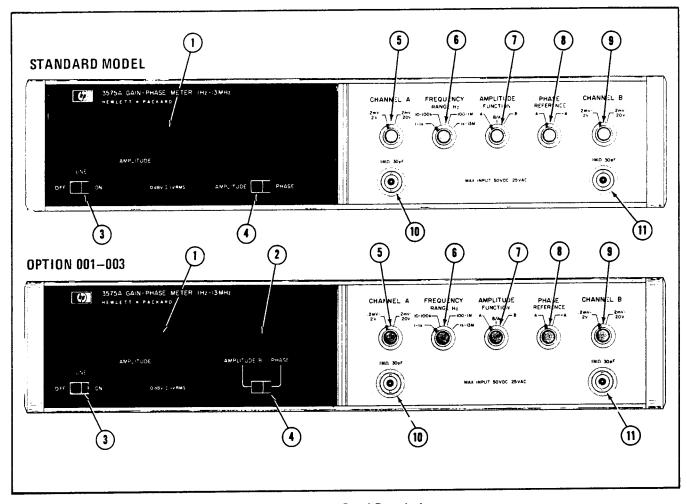


Figure 3-1. Front Panel Description.

- Panel Meter (Standard Model 3575A): Indicates amplitude or phase depending on position of DISPLAY switch (See Paragraphs 3-30 through 3-33).
- Left-Hand Panel Meter (Options 001-003): Indicates amplitude only and is controlled by the AMPLITUDE FUNCTION switch (See Paragraphs 3-32, 3-65 through 3-68).
- Right-Hand Panel Meter (Options 001–003 only): Indicates B dBV or phase depending on position of AMPLITUDE B/PHASE switch (See Paragraphs 3-33, 3-68 and 3-69).
- 3 LINE Switch: Applies line voltage to the instrument when set to the ON position.
- DISPLAY Switch (Standard Model 3575A): Selects AMPLITUDE or PHASE presentation.
- AMPLITUDE B/PHASE Switch (Options 001-003: Selects AMPLITUDE B (B dBV) or PHASE presentation for the Right-Hand Panel Meter.
- Channel A Voltage Range Switch: Selects the input range for channel A (See Paragraphs 3-24 through 3-26).
- FREQUENCY RANGE Switch: Selects any of four overlapping frequency ranges. The upper limit within each range applies to phase only. The lower limit applies to both amplitude and phase (See Para 3-27 through 3-29).

- AMPLITUDE FUNCTION Switch (Standard Model 3575A): Controls the meter presentation when the DIS-PLAY switch is in the AMPLITUDE position. The AMPLITUDE FUNCTION switch selects any of three functions: Log A (A dBV), Log B (B dBV) or Log B/A (dB).
- AMPLITUDE FUNCTION Switch (Options 001-003): Controls the Left-Hand Panel Meter presentation. As in the Standard Model 3575A, selects Log A (A dBV), Log B (B dBV) or Log B/A (dB).
- PHASE REFERENCE Switch: Controls the phase of the reference channel, Channel A. With the PHASE REFERENCE switch set to the A position, the phase reading is direct. With the switch set to the A position, the channel A signal is inverted and the phase reading is offset by 180 degrees (See Paragraphs 3-34 through 3-36).
- Channel B Voltage Range Switch: Selects the input range for channel B (See Paragraphs 3-24 through 3-26).
- Channel A Input Connector: Female BNC connector accepts 0.2 mV rms to 20 V rms, 1 Hz to 13 MHz input signal for channel A. Input impedance is 1 Megohm (nominal) 30 pF (See Paragraphs 3-6 and 3-7).
- Channel B Input Connector: Female BNC connector accepts 0.2 mV rms to 20 V rms, 1 Hz to 13 MHz input signal for channel B. Input impedance is 1 Megohm (nominal) 30 pF (See Paragraphs 3-6 and 3-7).

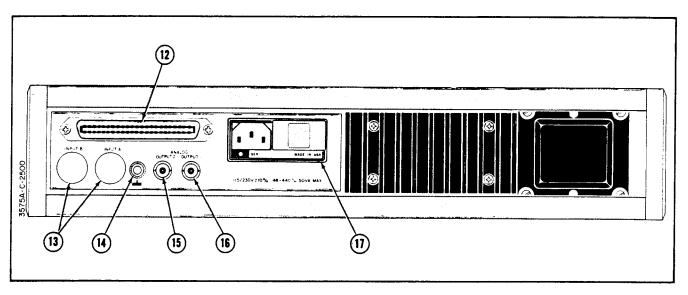


Figure 3-2. Rear Panel Description.

- Interface Connector, A19J1 (Options 002, 003 only): Accepts low-true binary inputs for remote control of all front panel functions, ranges and settings. Supplies 8-4-2-1 BCD-coded outputs for the two panel meters (See Paragraphs 3-71 through 3-74).
- Holes: Provided for installing rear panel input connectors in place of the front panel connectors.
- Ground Terminal: Connected to circuit ground and outer chassis ground. Terminal permits connection to chassis of signal source or to other external ground to help minimize ground loops (See Paragraph 3-17).
- ANALOG OUTPUT 2 (Options 001-003 only): Supplies dc voltage (10 mV/dBV or 10 mV/deg.) that corresponds

- with the Right-Hand Panel Meter reading (See Paragraphs 3-37 through 3-40).
- ANALOG OUTPUT 1 (Standard Model 3575A): Supplies dc voltage (10 mV/dB or 10 mV/degree) that corresponds with the panel meter reading. (See Paragraphs 3-37 and 3-38).
- ANALOG OUTPUT 1 (Options 001-003): Supplies dc voltage (10 mV/dB) that corresponds with Left-Hand Panel Meter reading (See Paragraphs 3-37 through 3-40).
- Power Input Module (A18): Accepts power cord supplied with the instrument. Contains line fuse and 115 V/230 V selector switch (See Figure 3-5).

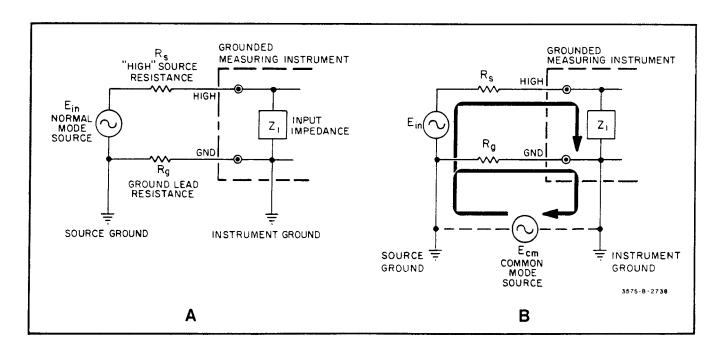


Figure 3-3. Power-Line Ground Loop.

- 3-13. Source-induced Ground Loop. Figure 3-4 illustrates a ground loop that is introduced by the signal source. In Figure 3-4, the signal applied to channel A is 2 V mms and the signal applied to channel B is 0.2 mV rms. As illustrated in the figure, part of the current from the 2 V source returns through the ground lead of the 0.2 mV source producing a voltage drop across the ground lead resistance, Rg. As in the power-line ground loop, the source resistance, Rs and the ground lead resistance Rg are in parallel with Zb. Due to the 50 ohm termination place directly across Zb, however, less than half of the voltage dropped across Rg is present across Zb. Although this voltage is very small, it is large enough to affect the amplitude and/or phase of the 0.2 mV signal.
- 3-14. Note that most of the current from the 2 V source is flowing through the 50 ohm termination of the channel A input and depending on the resistance between the A and B input commons, a good portion of the current is returning through the channel B ground lead. If the 50 ohm termination was placed directly across the output of the 2 V source, however, very little current would flow in the ground leads. Lowering the current in the ground leads reduces the drop across $R_{\rm g}$ and thereby minimizes the common-mode voltage and the resulting error.
- 3-15. Fortunately, this type of ground loop is predominate at low frequencies (below 1 MHz) where it is possible to terminate at the signal source rather than at the input of the measuring instrument. At high frequencies where it is necessary to terminate at the end of the transmission line, the error is normally insignificant as long as shielded cables or twisted pairs are used for the input connections.
- 3-16. To minimize ground currents introduced by the signal source, observe the following quidelines:
- a. At frequencies below 1 MHz, place the termination for the high-level signal directly across the output of the high-level signal source.
- 1) At frequencies above 1 MHz, terminate at the $3575\,\mathrm{A}$ input.
- b. If termination for the low-level signal is required, place the termination at the input of the 3575 A.
- c. Provide good ground connections by using shielded cables equipped with BNC connectors. If shielded cables are not available, use twisted leads.
 - d. Keep input cables and leads as short as possible.
- **3-17. Checking For Ground Loops.** To check for power-line ground loops, proceed as follows:
- a. Apply a 0.2 mV to 50 mV rms. 1 Hz to 60 Hz (or other power-line frequency) signal to either or both of the 3575 A inputs.

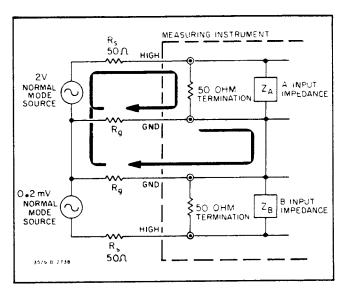


Figure 3-4. Source-Induced Ground Loop.

- b. Set the 3575A to measure the amplitude of the applied signal and note the panel meter reading.
- c. Connect a short piece of copper braid between the common terminal of the signal source and the 3575A input common (on one of the BNC input connectors).
- d. Allow time for the instrument to stabilize and again note the panel meter reading.
- e. If connecting the copper braid has produced a significant change (± 0.5 dB) in the reading, a ground loop is present and corrective action (Paragraph 3-12) should be taken.

NOTE

A ground terminal (Item 14, Figure 3-2) is provided on the 3575A rear panel to permit external grounding. In cases where ground loops are critical and difficult to control, it is sometimes beneficial to connect a short piece of copper braid between this ground terminal and the chassis of the signal source. Factory tests have indicated, however, that the length and positioning of the copper braid can be critical. Before using this technique in a measurement application, experiment with various ground points, lead lengths and lead positions to establish a grounding method that ensures accurate, repeatable readings in your particular situation.

- 3-18. To check for source induced ground loops, proceed as follows:
- a. Apply a 1 V to 20 V ms, 10 Hz to 10 kHz signal to one channel and a 0.2 mV to 10 mV ms signal to the other channel.
- b. Set the 3575A to measure the amplitude of the low level signal and note the panel meter reading.
 - c. Disconnect the high level signal from the 3575A.

- d. Allow time for the instrument to stabilize and again note the low level amplitude reading.
- e. If disconnecting the high level signal has produced a significant change (± 0.5 dB) in the low level reading, a ground loop is present and corrective action (Paragraph 3-16) should be taken.

3-19. Input Constraints.

3-20. The 80 dB dynamic range of the 3575A provides wide freedom from input constraints. In many cases, it will be possible to make all the necessary measurements without changing voltage ranges. It is important, however, to observe the maximum input levels (2 V rms or 20 V rms) indicated by the Voltage Range setting. Exceeding these input levels will cause the display to blank, the overload indicator (AOL or BOL) to illuminate and can damage the instrument if the applied voltage is greater than 25 V rms or 50 V dc.

3-21. DC Isolation.

)

- 3-22. The 3575A inputs are equipped with coupling capacitors to provide dc isolation. The maximum dc voltage that can be safely applied to the inputs is \pm 50 Vdc. Exceeding this limit can cause breakdown of the input capacitors resulting in damage to the input amplifier circuitry.
- 3-23. The 3575A cannot be operated in a floating condition. All Input and Output commons are connected directly to outer chassis (frame) ground which connects to earth ground through the offset pin on the power cord connector.

3-24. Voltage Ranges.

3-25. Each input channel is equipped with a range switch which permits selection of two overlapping voltage ranges. Input voltage limits within each range are as follows:

3-26. As long as the applied signal is within the limits of both ranges (2 mV to 2 V), either range setting can be used. Changing the voltage range setting does not affect the display resolution. For optimum accuracy, however, it is recommended that the 0.2 mV to 2 V range by used at all times unless the applied signal is greater than 2 V rms. The reason for this is that on the 2 mV to 20 V range the input signal is divided by the 20 dB input attenuator. Any noise that is generated within the 3575A, however, is not attenuated and the signal to noise ratio is decreased. Decreasing the signal to noise ratio makes the instrument more suseptable to noise which can affect the accuracy of amplitude and phase readings. It should be noted that the Phase Accuracy specifications (Table 1-1) are met only when the lowest applicable voltage range settings are used.

3-27. Frequency Ranges.

3-28. The broadband frequency response of the 3575A extends from 1 Hz to 13 MHz in four overlapping ranges. Frequency limits within each range are as follows:

1 Hz to 1 kHz 10 Hz to 100 kHz 100 Hz to 1 MHz 1 kHz to 13 MHz

3-29. The FREQUENCY RANGE setting determines the amount of filtering that is used throughout the instrument. The filtering, in turn, controls the frequency response and overall settling time (See Table 3-1). The frequency ranges are designed such that the lower limit of each range applies to both amplitude and phase and the upper limit applies only to phase. For example, it is possible to use the 1 Hz to 1 kHz range for all amplitude measurements within the frequency range of 1 Hz to 13 MHz. For most amplitude measurements, however, it is best to use one of the upper ranges to minimize settling time. The main thing to remember when making amplitude measurements is that the frequency of the input signal(s) must be above the lower limit of the selected frequency range. When measuring phase, it is necessary to observe both the upper and lower limits of each frequency range. The upper limits, which apply to phase only, are determined by noise filters which control the high frequency cutoff characteristics of the phase detector circuits. For optimum phase accuracy, it is necessary to use the frequency range that provides the greatest noise immunity and the required bandpass. This means that the lowest range that covers the frequency of the input signals must be used. It should be noted that the Phase Accuracy specifications (Table 1-1) are met only on the lowest applicable frequency range.

Table 3-1. Typical Settling Time. (following a change in input parameters)

Frequency Range	100 % * Settled	95 % * Settled	90 % * Settled
1 Hz - 1 kHz	30 sec.	20 sec.	17 sec.
10 Hz - 100 kHz	3 sec.	2 sec.	1.7 sec.
100 Hz - 1 MHz	0.3 sec.	0.2 sec.	0.17 sec.
1 kHz - 13 MHz	30 ms.	20 ms.	17 ms.

3-30. Meter Indication.

3-31. The 3575A panel meter indicates directly in dB or dBV for amplitude measurements and in degrees for phase measurements. The front panel DISPLAY switch permits selection of either AMPLITUDE or PHASE presentation.

3-32. Amplitude Presentation. With the DISPLAY switch in the AMPLITUDE position, the meter presentation is determined by the AMPLITUDE FUNCTION control setting. The three amplitude functions are: Log A, Log B

Section III Model 3575A

and Log B/A. When A or B is selected, the panel meter indicates the amplitude of the corresponding input signal in dBV (1 V rms = 0 dBV). The overall measurement range for the Log A and Log B amplitude functions is from - 74 dBV (0.2 mV rms) to + 26 dBV (20 V rms) providing a total of 100 dB in two voltage ranges. The 3575A amplitude readings are displayed with 0.1 dBV resolution over the entire measurement range. When B/A is selected, the 3575 A measures the relative amplitude of (difference between) the two input signals in dB. The display range for relative measurements is from -100 dB to +100 dB with 0.1 dB resolution. Relative amplitude readings are displayed with respect to channel A which is the reference channel. A negative reading indicates that the signal applied to channel B is lower in amplitude than the signal applied to channel A. A positive reading indicates that the signal applied to channel B is greater in amplitude than the signal applied to channel A.

3-33. Phase Presentation. With the DISPLAY switch in the PHASE position, the panel meter indicates the phase difference between the two input signals in degrees. The display range for phase measurements is from - 192 degrees to \pm 192 degrees with 0.1 degree resolution. The \pm 192 degree limits provide a \pm 12 degree overrange capability which eliminates ambiguous readings in the \pm 180 degree region.

3-34. Phase Reference. The 3575A phase readings are displayed with respect to channel A which is the reference channel. A negative phase reading indicates that B lags A: a positive phase reading means that B leads A.

3-35. With the PHASE REFERENCE switch in the + A position, the panel meter indicates the actual phase difference between the two input signals. With the PHASE REFERENCE switch in the - A position, channel A is inverted and the phase reading is offset by 180 degrees. For example, with a phase difference of + 60 degrees (B leads A) applied to the inputs and the PHASE REFERENCE switch set to the + A position, the panel meter will indicate + 60 degrees. If the PHASE REFERENCE switch is changed to the - A position, channel A will be inverted and the panel meter will indicate - 120 degrees.

3-36. Because of the \pm 12 degree overrange capability, the 3575A never gives ambiguous phase readings. This means that it is not necessary to change the phase reference for measurements in the ± 180 degree region. The ability to change the phase reference is strictly a convenience feature which is useful for some measurement applications. One example of this is where it is necessary to make a continuous phase vs. frequency plot over 360 degrees of range. Consider the case where two signals are initially in phase and as frequency is varied the phase difference increases in a positive direction. With the phase reference set to + A, the plot starts out at 0 degrees and increases with frequency until the phase difference reaches approximately +192 degrees. At this time, the 3575A reading automatically jumps to - 168 degrees and again goes more positive with frequency. The result is a discontinuous plot.

By initially setting the phase reference to - A, however, a continuous plot could be obtained. The plot would start out at -180 degrees and continue in a positive direction through +192 degrees extending the continuous range by 180 degrees.

3-37. Analog Outputs.

3-38. Two BNC connectors, labeled ANALOG OUTPUT 1 and ANALOG OUTPUT 2, are located on the rear panel of the instrument. On the standard Model 3575A, ANALOG OUTPUT 2 is not used. The remaining connector, ANA-LOG OUTPUT 1, is connected through a 1 kilohm resistor to the analog (dc) voltage applied to the panel meter. Since this voltage is not affected by errors within the panel meter, it is more accurate than the panel meter reading. For this reason, the amplitude and phase accuracy specifications listed in Table 1-1 apply to the analog output and do not reflect the ±3 count panel meter tolerance. The analog output voltage is defined in the accuracy specifications as 10 mV per degree for phase measurements and 10 mV per dB/dBV for amplitude measurements (with >2 Megohm load resistance). In the Amplitude Display mode, the analog output voltage ranges from - 1 Vdc (-100 dB) to + 1 Vdc (+100 dB). In the Phase Display mode the voltage ranges from -1.92 Vdc (-192 degrees) to +1.92 Vdc (+192 degrees). The analog output resistance is 1 Kilohm and short-circuit protection is provided. To obtain an output of 10 mV per degree or 10 mV per dB/dBV, the load resistance connected to the analog output must be 2 Megohm or greater. Additional loading will not damage the instrument or degrade the linearity but it will reduce the output voltage by an amount proportional to the load resistance.


3-39. Dual Analog Outputs (Options 001 through 003).

3-40. For instruments equipped with dual panel meters, ANALOG OUTPUT 1 is connected to the left-hand (facing the front panel) panel meter (amplitude) and ANALOG OUTPUT 2 is connected to the right-hand panel meter (phase). The analog output voltages correspond with the respective panel meter readings and can be used for simultaneous amplitude and phase plotting. For further information concerning Options 001–003, refer to Paragraph 3-64.


3-41. BASIC OPERATING PROCEDURE.

3-42. Instrument Turn On.


- a. Refer to Figure 3-5 and perform the following:
- 1) Remove the fuse and set the line selector switch to correspond with the line voltage to be used (115 V or 230 V).
- 2) Replace the fuse using a 0.6A, 250 V slo-blo for 115 V operation or a 0.3A, 250 V slo-blo for 230 V operation.

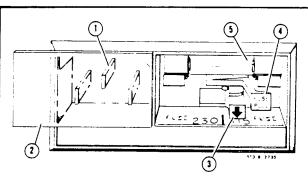

- 1. POWER CORD RECEPTACLE (A18P1)
- 2. FUSE COMPARTMENT COVER
- 3. 115 V/230 V SELECTOR SWITCH (A18S1)
- 4. FUSE PULLER
- 5. LINE FUSE (A18F1): 0.6 A, 250 V SLO-BLO (115 V OPERATION)
 0.3 A, 250 V SLO-BLO (230 V OPERATION)

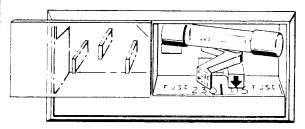

- a. DISCONNECT POWER CORD AND SLIDE THE COVER TO THE LEFT TO GAIN ACCESS TO THE FUSE COM-PARTMENT.
- b. REMOVE THE LINE FUSE BY PULLING OUTWARD ON THE FUSE PULLER.

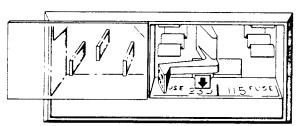

- c. WITH THE FUSE PULLER POSITIONED AS SHOWN, SET THE 115 V/230 V SELECTOR SWITCH TO THE POSITION THAT CORRESPONDS WITH THE LINE VOLTAGE TO BE USED.
- d. REPLACE THE LINE FUSE USING A $0.6\,\mathrm{A}$, $250\,\mathrm{V}$ SLO-BLO FOR 115 V OPERATION OR A $0.3\,\mathrm{A}$, $250\,\mathrm{V}$ SLO-BLO FOR 230 V OPERATION.

Figure 3-5. Power Input Module A, B and C.

- b. Connect the detachable ac power cord to the rear panel power receptacle and to the power source (115 V or 230 V, 48 Hz to 440 Hz).
- c. Set the LINE switch to the ON position. The panel meter display will illuminate. With no inputs applied to the

3575A, the instrument will respond to extraneous pickup and residual noise. For this reason, the display may not stabilize until inputs are applied.

3-43. Amplitude Measurements.

- **3-44.** Log A and Log B Measurements. The single channel amplitude functions. A or B, permit direct measurement of either input level in dBV. These readings can be converted to ac volts using the graph shown in Figure 3-6. To measure the level applied to either input channel, proceed as follows:
- a. Set the DISPLAY switch to the AMPLITUDE position.
- b. Set the AMPLITUDE FUNCTION switch to A or B depending on which input is to be measured.
- c. Set the Voltage Range and FREQUENCY RANGE switches to appropriate settings as outlined in Paragraphs 3-24 and 3-27.
 - d. Apply signal to the appropriate input channel.
 - e. Allow time for the reading to stabilize.
 - f. Observe the amplitude reading in dBV.
- g. If desired, convert the dBV reading to rms volts using the graph shown in Figure 3-6.
- 3-45. Relative Measurements (Log B/A). In the B/A amplitude function, the 3575A measures the relative amplitude of the two input signals in dB. This function is particularly useful for measuring gain, attenuation and frequency response. The use of simultaneous comparison eliminates the need for separate input and output measurements and provides relative readings that are independent of source variations.
- 3-46. Because the two input channels are totally independent, relative measurements can be made between two signals that differ in frequency. It should be noted, however, that both input frequencies must be *above* the lower limit of the selected frequency range (see Paragraph 3-27).
- 3-47. For relative measurements using the B/A function, proceed as follows:
- a. Set the DISPLAY switch to the AMPLITUDE position.
 - b. Set the AMPLITUDE FUNCTION switch to B/A.
- c. Set the Voltage Range and FREQUENCY RANGE switches as outlined in Paragraphs 3-24, 3-27 and 3-46.

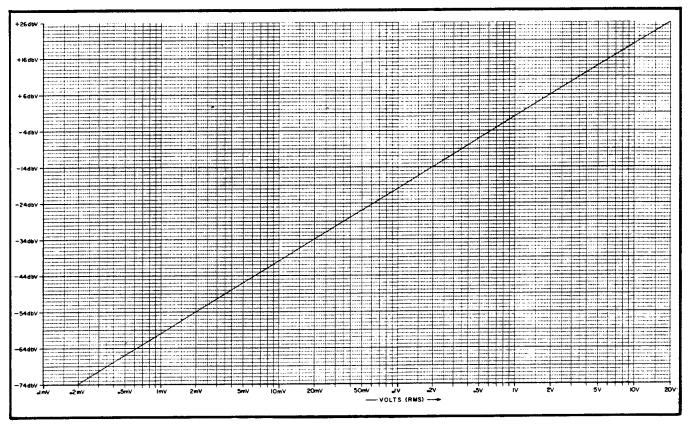


Figure 3-6. dBV to Volts Conversion.

- d. Remembering that channel A is the reference channel, connect the signals to be measured to the 3575A Input connectors.
 - e. Allow time for the reading to stabilize.
- f. Observe the relative amplitude reading in dB. A negative reading indicates that B is lower than A; a positive reading means that B is greater than A.
- g. When making relative measurements ensure that the input levels are within the limits of the voltage range settings being used.

3-48. Phase Measurements.

- 3-49. With the DISPLAY switch in the PHASE position, the 3575A measures the phase difference between the two input signals in degrees. To measure phase, proceed as follows:
 - a. Set the DISPLAY switch to the PHASE position.
- b. Set the PHASE REFERENCE switch to + A or as outlined in Paragraph 3-34.
- c. Set the Voltage Range and FREQUENCY RANGE switches as outlined in Paragraphs 3-24 and 3-27.
- d. Connect the signals to be measured to the 3575A Input connectors.

- e. Allow time for the reading to stabilize.
- f. Observe the phase reading. Since A is the reference channel, a negative reading indicates that B lags A; a positive reading indicates that B leads A.
- 3-50. Effects of Harmonic Distortion on Phase Readings. In the 3575A, phase difference is measured between the zero crossing points of the applied signals. If an applied signal contains harmonics of the fundamental frequency, the zero crossings may be shifted with respect to a pure sine wave. If the instrument responds to the false crossings introduced by the distortion, an erroneous offset will appear in the phase reading.
- 3-51. The amount of error introduced by harmonic distortion depends on the magnitude, phase and order of the harmonics. Harmonics that are in phase with the fundamental (such as in a square wave) do not change the zero crossing points and do not affect the phase reading. In the 3575A, the effects of even harmonics are cancelled by two phase detectors that operate 180 degrees out of phase. For this reason, even harmonics, regardless of their phase, do not affect the phase reading. This leaves only odd harmonics that are out of phase with the fundamental.
- 3-52. The amount of error introduced by odd harmonic distortion again depends on the magnitude and phase of the harmonics. The largest error occurs when the odd harmonics are 90 degrees out of phase with the fundamental. In

this case, the distortion is at it's peak amplitude when the fundamental is at the zero crossing point.

3-53. The graph shown in Figure 3-7 can be used to determine the approximate worst-case error introduced by odd, out-of-phase harmonics. As indicated in the graph, the worst-case error for odd harmonics 40 dB below the fundamental is approximately 0.57 degrees.

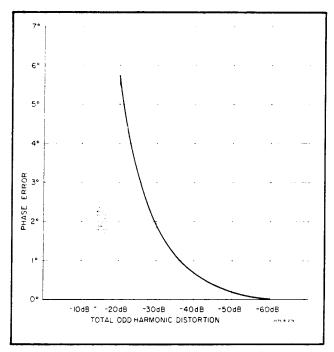


Figure 3-7. Worst Case Error Produced by Odd Harmonics.

3-54. Effects of Noise on Phase Readings. The 3575A uses a unique phase measuring scheme which minimizes the effects of noise by a process of detection, cancellation and correction. This, in conjunction with the broadband filtering that is used throughout the instrument, virtually eliminates ambiguous readings and 180 degree errors. This does not mean, however, that the effects of noise are completely eliminated. With applied signal to noise ratios of <30 dB, noise can produce erroneous offsets. The amount of offset depends of the signal to noise ratio while the offset polarity depends on which channel the noise appears. The effects of noise are minimized under the following conditions:

- a. When the noise level on both channels is more than 30 dB below the signal level (signal to noise ratio > 30 dB).
- b. When readings are more than 10 degrees away from 0 degrees, \pm 90 degrees and \pm 180 degrees and the noise is on the channel indicated (by shaded areas) in Table 3-2.
- 3-55. Effects of Source Impedance on Phase Readings. Due to the internal shunt capacitance and any external cable capacitance connected to the 3575A inputs, the phase of an applied signal can be affected by the impedance of the signal source or network under test. This

Table 3-2. Effects of Noise Minimized.

	- 170 ⁰ to - 100 ⁰	- 80 ⁰ to - 10 ⁰	10 ⁰ to 80 ⁰	100° to 170°
Chan A				
Chan B				

can be illustrated by a simple R/C network such as the one shown in Figure 3-8. In Figure 3-8, the source impedance is represented by a resistor (R_s) and the internal shunt capacitance is represented by a capacitor (C_s) . The overall shunt capacitance is increased by C_x which represents the external cable capacitance between the source and the 3575A input. The amount of phase shift developed across the shunt capacitance depends on three variables: the effective shunt capacitance $(C_s + C_x)$, the source impedance (R_s) and the frequency of the applied signal (F_o) . Increasing any of these variables increases the phase shift of the network. If the source impedance is resistive, the phase shift can be calculated using the following formula:

Tan.
$$\emptyset = \frac{R_s}{X_{cs}}$$

Where: \emptyset = phase shift in degrees R_s = source resistance

= reactance of the effective shunt capacitance $(C_S + C_X)$ where $C_S = 30$ pF and $C_X =$ external cable capacitance (approximately 20 pF per foot for RG - 58/U)

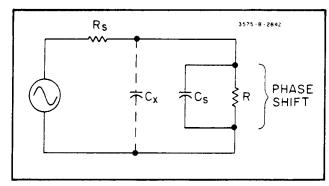


Figure 3-8. Simple RC Network.

3-56. Since the internal shunt capacitance of channel A is closely matched to that of channel B, the phase measurement accuracy will not be affected if the source impedance and the external cable capacitance is the same on both channels. In this case, both channels exhibit the same amount of phase shift and the relative phase of the applied signals remains unchanged.

3-57. In most phase measurement applications it is impractical to maintain the same source impedance and cable

capacitance on both channels. The effects of source impedance can be minimized, however, by the use of 10 Megohm 10:1 divider probes (-hp-10004A) which reduce the effective shunt capacitance to approximately 10 pF.

3-58. Table 3-3 can be used to determine the reactance of the 10 pF probe capacitance over the entire frequency spectrum. A general "rule of thumb" is that the capacitive reactance of the 10 pF probe should be at least 100 times the difference between the two source impedances at the highest operating frequency. If this rule is applied, the maximum or "worst-case" error will be less that 0.6 degrees. If 10 pF divider probes are used and the two source impedances are primarily resistive, the phase error can be approximated using the following formula:

$$Tan. \emptyset = \frac{|R_{sa} - R_{sb}|}{X_c}$$

Where: \emptyset = phase error in degrees

 R_{SA} = source resistance of channel A

R_{sb} = source resistance of channel B X_c = reactance of 10 pF divider probe at the op-

erating frequency

3-59. Using 10:1 Divider Probes.

3-60. The 3575A input channels are designed to permit the use of 10 Megohm, 10 pF Voltage Divider Probes (-hp-10004A). These probes can be used to extend the maximum input levels to 200 V rms and the overall operating range to 120 dB. Voltage divider probes also reduce the effective shunt capacitance to approximately 10 pF and thereby minimize errors due to source impedance (Paragraph 3-55).

3-61. When using 10:1 divider probes, the following guidelines should be observed:

- a. Use 10 Megohm, 10 pF Divider Probes (-hp- 10004A or equivalent) only. Other probes can create errors particularly when measuring phase at high frequencies.
- b. Before using 10:1 divider probes, compensate the probes as outlined in Paragraph 3-62.
- c. Do not use a 10:1 divider probe on one channel and a direct input to the other channel.
- d. Use the lowest voltage range that provides the required measurement capability.
- e. Note that when 10:1 divider probes are used, the single channel amplitude readings (Log A and Log B) will be offset by -20 dBV e.g., 1 V rms applied to probe will measure -20 dBV rather than 0 dBV. Relative readings (B/A) will not be offset if identical probes are used.
- 3-62. Probe Compensation. Before using 10:1 divider probes it is necessary to adjust the probes for optimum flatness and identical phase characteristics. Once the probes are properly adjusted they should not require further attention unless they are interchanged or inadvertently misadjusted. It is good practice, however, to perform periodic verification checks to ensure that optimum adjustment is maintained.
- 3-63. The following probe adjustments should be performed with a 1 V rms sine wave applied to both probes:

REQUIRED EQUIPMENT: Test Oscillator (-hp- 651B)
50 Ohm Feedthru Termination
(-hp- 11048B)

a. Connect 50 ohm output of test oscillator, terminated in 50 ohm load, to both 3575A input probes.

Table 3-3. Reactance of 10 pF Probe.

Frequency	Reactance	Frequency	Reactance	Frequency	Reactance	Frequency	Reactance
10 Hz	1591 M	700 Hz	22.74 M	30 kHz	530 K	800 kHz	19.9 K
20 Hz	795.7 M	800 Hz	19.89 M	40 kHz	398 K	900 kHz	17.7 K
30 Hz	530.5 M	900 Hz	17.68 M	50 kHz	318 K		
40 Hz	397.9 M			60 kHz	265 K	1 MHz	15.9 K
50 Hz	318.3 M	1 kHz	15.91 M	70 kHz	227 K	2 MHz	7.96 K
60 Hz	265.3 M	2 kHz	7.96 M	80 kHz	199 K	3 MHz	5.30 K
70 Hz	227.4 M	3 kHz	5.30 M	90 kHz	177 K	4 MHz	3.98 K
80 Hz	198.9 M	4 kHz	3.98 M			5 MHz	3.18 K
90 Hz	176.8 M	5 kHz	3.18 M	100 kHz	159 K	6 MHz	2.65 K
	ĺ	6 kHz	2.65 M	200 kHz	79.6 K	7 MHz	2.27 K
100 Hz	159.1 M	7 kHz	2.27 M	300 kHz	53.0 K	8 MHz	1.99 K
200 Hz	79.57 M	8 kHz	1.99 M	400 kHz	39.8 K	9 MHz	1.77 K
300 Hz	53.05 M	9 kHz	1.77 M	500 kHz	31.8 K		
400 Hz	39.79 M			600 kHz	26.5 K	10 MHz	1.59 K
500 Hz	31.83 M	10 kHz	1.59 M	700 kHz	22.7 K	13 MHz	1.22 K
600 Hz	26.53 M	20 kHz	796 K			1	

b. Set the 3575A controls as follows:

DISPLAY AMPLITUDI	Ε
Voltage Range 0.2 mV to 2 V	V
(both channels	
AMPLITUDE FUNCTION	4
FREQUENCY RANGE 100 - 1 M	1
PHASE REFERENCE	4

- c. Set the test oscillator for an output of 1 V rms, 100 Hz.
 - d. Record the channel A amplitude reading:___dBV.
- e. Establish a reference level on the meter of the test oscillator and use the oscillator amplitude control to maintain this reference level whenever the frequency is varied.
 - f. Set the test oscillator frequency to 1 MHz.
- g. Adjust the channel A probe for the same reading recorded in Step d.
- h. Repeat Steps c through g until optimum adjustment is obtained.
 - i. Set the test oscillator frequency to 1.5 kHz.
 - i. Set the 3575 A DISPLAY switch to PHASE.
- k. Adjust the channel B probe for a phase reading of 0 degrees ± 0.2 degrees.
- 1. Set the 3575A DISPLAY switch to AMPLITUDE; set the AMPLITUDE FUNCTION switch to B/A.
 - m. Set the test oscillator frequency to 1 MHz.
- n. The B/A reading should be $0 dB \pm 0.2 dB$. If it is not, perform the following:
 - 1) Repeat the probe adjustment procedure.
- 2) Replace the probes one at a time to determine if the problem is caused by faulty probes.
- 3) Perform the adjustment procedures outlined in Section V_{\cdot}

3-64. OPTIONS.

3-65. Option 001.

3-66. The 3575A Option 001 is equipped with dual panel meters to provide simultaneous amplitude and phase presentations. This option is also equipped with two analog outputs to permit amplitude vs. phase plotting.

3-67. In the 3575A Option 001, the left-hand (facing the front panel) panel meter always indicates amplitude. This panel meter is controlled by the AMPLITUDE FUNCTION switch which, as in the standard Model 3575A, permits selection of Log A, Log B or Log B/A.

3-68. The right-hand panel meter can indicate amplitude or phase depending on the position of the AMPLITUDE B/PHASE switch. With the switch in the AMPLITUDE B position, the right-hand panel meter indicates the amplitude of the signal applied to channel B (B dBV). Since the left-hand panel meter can indicate A dBV, B dBV or B/A, the following amplitude functions can be displayed simultaneously on the two panel meters:

Amplitude	Left-hand	Right-hand
Function	Panel Meter	Panel Meter
A	A dBV	B dBV
B	B dBV	B dBV
B/A	B/A (dB)	B dBV

3-69. With the AMPLITUDE B/PHASE switch in the PHASE position, the right-hand panel meter indicates phase. The phase readings are controlled by the PHASE REFERENCE switch and are displayed as outlined in Paragraphs 3-33 through 3-36.

3-70. Analog Outputs. The 3575A Option 001 is equipped with two rear panel output (BNC) connectors labeled ANALOG OUTPUT 1 and ANALOG OUTPUT 2. Analog Output 1 is connected with the left-hand (amplitude) panel meter and Analog Output 2 is connected with the right-hand panel meter. The dc voltages at the analog outputs correspond with the respective panel meter readings as outlined in Paragraph 3-37.

3-71. Options 002 and 003.

NOTE

The 3575A Options 002 and 003 are identical except that Option 003 instruments use high-true logic for the BCD outputs. In all other respects, the following information for Option 002 instruments also applies to Option 003

3-72. The 3575A Option 002 is a fully programmable instrument with dual BCD outputs and a complete remote control capability. Like the Option 001, the 3575A Option 002 is equipped with dual panel meters for simultaneous amplitude and phase presentations. Dual analog outputs are provided along with the BCD outputs to make the instrument compatible with various types of control systems and recording devices.

3-73. Remote Logic. The 3575A Option 002 uses ground true logic for the BCD outputs and remote control lines. Logic levels for the BCD outputs are as follows: *

True (1) =
$$0 \text{ V to} + 0.4 \text{ V}$$
, 12 mA maximum
False (0) = $+2.4 \text{ V to} + 5 \text{ V}$, 0.4 mA maximum

Logic levels for the remote control lines are as follows:

True (1) = ground or -0.5 V to +0.4 V, 1.6 mA maximum

False (0) = open or +2.4 V to +5 V (5.6 K pullup resistance)

3-74. Remote Pin Connections. Figure 3-9 illustrates the 3575A Option 002 Interface connector as viewed from the rear of the instrument. The connector diagram and the table within the figure provides complete programming information. A 50-pin mating connector (-hp- 1251-0086)* and a 46-conductor cable are required for a complete remote programming capability (including remote control lines, BCD outputs, overload outputs, data flags, + 5 V and circuit ground).

CAUTION

THE REMOTE INPUT AND OUTPUT LINES IN THE 3575A OPTION 002 ARE NOT ISOLATED. ALL INPUT AND OUTPUT LINES ARE REFERENCED TO CIRCUIT GROUND WHICH IS PERMANENTLY CONNECTED TO THE CHASSIS. THE CHASSIS CONNECTS TO EARTH GROUND THROUGH THE OFFSET PIN ON THE POWER-CORD CONNECTOR.

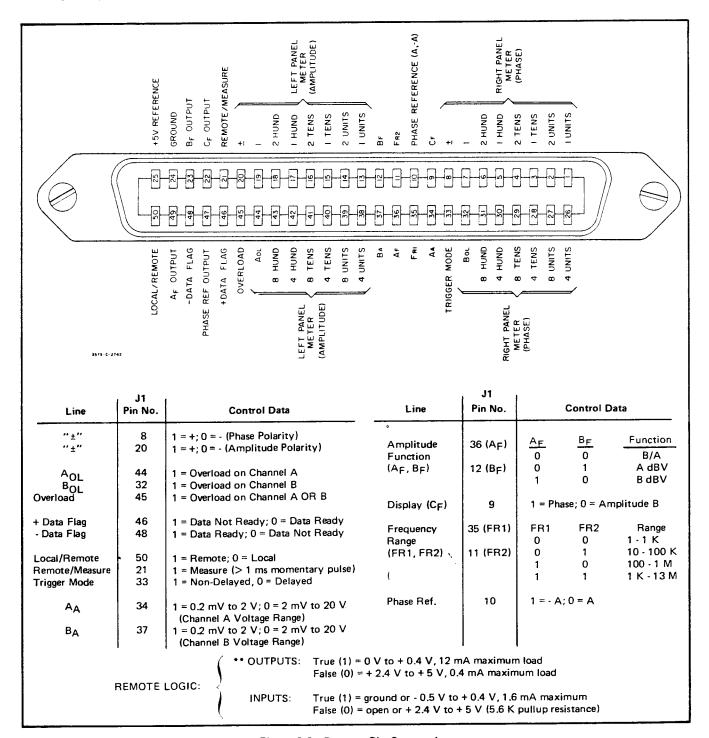


Figure 3-9. Remote Pin Connections.

^{*} Cinch No. 57-30500-375

^{**} Option 003 instruments use high-true logic for BCD outputs.

- **3-75.** Local/Remote Control. Remote control operation is selected by applying a continuous ground (or -0.5 V to +0.4 V) to the Local/Remote control line (J1 pin 50). When ground is applied to the Local/Remote line, the following things take place within the 3575A:
- a. The front panel controls (except LINE switch) are disabled.
 - b. The remote control lines are enabled.
- c. The internal sampling in both panel meters is disabled (external triggering must be used).
- d. The external trigger and flag timing circuits are enabled.
- e. The "Remote" (REM) annunciators on the panel meters illuminate.
- 3-76. Remote Control Lines. In the remote control mode, the 3575A Option 002 will accept parallel binary instructions applied to the remote control lines. Since internal storage is not provided, the control lines must be held at ground (or -0.5 V to +0.4 V) by the external controller whenever a "true" condition is required. When remote operation is selected without inputs to the remote control lines, the lines are held in a "false" condition by the internal logic circuitry. With all control lines false, the control settings are programmed as follows:

ì

- **3-77.** BCD Outputs. The 3575A Option 002 is equipped with separate BCD outputs for the two panel meters. These outputs provide parallel BCD information that corresponds with the respective panel meter readings. The BCD outputs each consist of three 8-4-2-1 BCD-coded digits, a single-line overrange ("1") digit and a single-line polarity indicator. Unlike the remote control lines, the BCD outputs are always enabled and can be used in the local or remote control mode.
- 3-78. Overload Outputs. There are three overload indicator lines available at pins 32, 44 and 45 of the Interface connector. The $A_{\rm Ol}$ line (J1 pin 44) goes low when channel A is overloaded and the $B_{\rm Ol}$ (J1 pin 32) goes low when channel B is overloaded. The third line, labeled "overload" (J1 pin 45), goes low when either or both channels are overloaded. Since the overload outputs are not stored functions, they will automatically return to the "false" condition (+ 5 V) when the overload is removed.

3-79. External Triggering and Flag Timing Sequence. As previously indicated the internal sampling in both panel meters is disabled when ground is applied to the Local/Remote control line. This means that external triggering must be used to obtain successive meter readings or BCD outputs in the remote control mode.

3-80. In the 3575A Option 002, the external triggering circuit operates in conjunction with the flag timing circuit to allow adequate settling time, trigger the panel meters and provide a "data ready" flag to the external controller. The timing sequence is initiated by an external trigger pulse which is applied to the Remote Measure line (J1 pin 21). The duration of the timing sequence depends on the condition of the Trigger Mode line (J1 pin 33) which permits selection of two modes of operation: the Delayed Mode and Non-Delayed Mode.

NOTE

The Remote Measure command must be delayed for at least 0.5 ms following any change that affects the programmed state of the instrument.

3-81. Delayed Mode. When the Trigger Mode line is held in a "false" condition (open or + 2.4 V to + 5 V), the timing sequence is as shown in Figure 3-10. In Figure 3-10, the Remote Measure line is pulled low at T0 by the external controller. This initiates a variable delay period (determined by the Frequency Range setting) and sets the + and - Data Flags. At the end of the variable delay (T1), a 600 ms delay is initiated and, at the same time, a 600 ms trigger pulse is applied to the panel meters. At the end of the 600 ms delay (T2) both Data Flags are reset to indicate that data is ready.

3-82. The total time required to obtain a reading (T0 to T2) is equal to 600 ms plus the variable delay period determined by the Frequency Range setting. The approximate *total* delay times on each frequency range are as follows:

Frequency	Total
Range	Delay
1 - 1 K	33 sec.
10 - 100 K	4 sec.
100 - 1 M	1.1 sec.
1 K - 13 M	0.66 sec.

3-83. The purpose of the variable delay in the timing sequence is to allow time for the instrument to stabilize before a reading is taken. Since the times allotted by the variable delay are maximum, the instrument will often stabilize before the end of the delay period. This depends on the change in input parameters or control settings prior to the Remote/Measure pulse. In some applications such as swept measurements where readings are taken after slight changes in input parameters, it may be desirable to speed up the measurement process by omitting the variable time delay. This can be accomplished by holding the Trigger

Section III Model 3575A

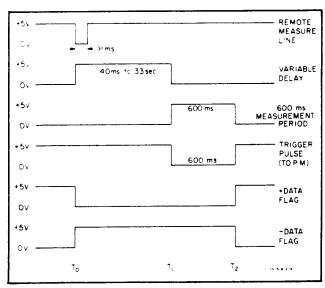


Figure 3-10. Flag Timing Delayed Mode.

Mode line in a "true" condition (gnd. or -0.5 V to +0.4 V). When the Trigger Mode line is grounded, the timing sequence is in the Non-Delayed Mode which operates as shown in Figure 3-11.

3-84. Non-Delayed Mode. In Figure 3-11, the Remote Measure line is pulled low at T0 by the external controller. This immediately initiates the 600 ms delay, triggers the panel meters and sets the + and - Data Flags. At the end of the 600 ms delay (T1), the Data Flags are reset to indicate that a reading has been taken.

3-85. Remote Measure Rate. As indicated in preceeding paragraphs, the time required to obtain a reading depends on the selected mode of operation. In the Delayed Mode, the time varies from 0.1 second to 33 seconds as a function of the Frequency Range setting. In the Non-Delayed Mode, the time is fixed at approximately 600 ms. In order to obtain successive readings at a fixed rate, the time between Remote Measure pulses must be greater than the total delay period. For example, in the Non-Delayed Mode the 600 ms delay period allows a maximum of 1.6 readings per second.

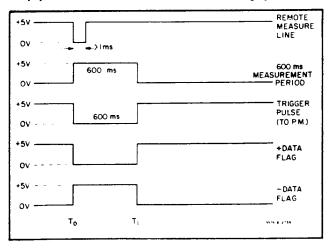


Figure 3-11. Flag Timing Non-Delayed Mode.

In the Delayed Mode, 0.66 sec. allows 1.5 readings per second, 1.1 sec. allows 54 readings per minute, 4 sec. allows 15 readings per minute and 33 seconds allows 1.8 readings per minute. In all cases, the Remote Measure pulse width must be greater than 1 ms and less than the total delay period.

3-86. Optional Control Scheme. For some applications, it is convenient to control the instrument from the front panel and, at the same time, use external triggering and the flag timing functions. To allow this, a jumper is provided on the Interface Assembly (A16B, Schematic No. 9). With the jumper connected between points 1 and 2 (normal), grounding the Local/Remote control line disables the front panel controls, enables the remote control lines and enables the external trigger and flag timing circuits. With the jumper connected between points 1 and 3, the front panel controls are enabled and the remote control lines are disabled regardless of the condition of the Local/Remote control line. The external triggering and flag timing functions can then be used along with the front panel controls by grounding the Local/Remote control line.

3-87. USING A PRINTER.

3-88. The 3575A Option 002 output lines are compatible with -hp- Digital Recorder Models 5050B and 5055A. These printers can be connected directly to the 3575A Interface connector using the -hp- 562A-16C printer cable. Complete interfacing data is presented in Section II, Paragraph 2-29.

3-89. Triggering.

3-90. When using a printer, it is necessary to supply a ground-true (>1 ms) Remote Measure command to the 3575A each time a printout is required (see Paragraphs 2-30 and 3-80). The Remote Measure command sets the Data Flags and initiates the timing cycle within the 3575A. The printer receives a "print" command when the Data Flags are reset at the end of the timing cycle. Unless special arrangements have been made to ground the Trigger Mode line, the 3575A will remain in the Delayed mode and the "print" command will be transmitted at the end of the delay period. The delay period varies from approximately 33 seconds to 0.66 second as a function of the Frequency Range setting. If the Trigger Mode line is grounded, the "print" command will be transmitted approximately 600 ms after the leading edge of the Remote Measure pulse.

3-91. Printout.

3-92. The -hp- Models 5050B and 5055A Digital Recorders provide a ten-column printout. The printer columns are numbered from right to left and the 3575A output data is printed as follows:

Model 3575 A Section III

3-93. Right-Hand Panel Meter. The "units", "tens" and "hundreds" digits for the right-hand (phase) panel meter are printed in columns 1, 2 and 3, respectively. The overrange ("1") digit, polarity sign ("±") and B overload (BOL) outputs are printed in decimal-coded form in column 4. The coding for column 4 is listed in Table 3-4.

Table 3-4. Printer Column 4 Coding.

Column 4 Printout	"1" Overrange	"±" Polarity	B Overload
0	0	-	No
1	1	-	No
2	0	+	No
3	1	+	No
4	0	-	Yes
5	1	•	Yes
6	0	+	Yes
7	1	+	Yes

3-94. Unused Columns. When a printer is connected directly to the 3575A using the -hp- 562A-16C printer cable, the eight lines that control printer columns 5 and 6 are held at +5 Vdc (false) by pullups within the 3575A. For this reason, columns 5 and 6 should always be zero.

3-95. Left-Hand Panel Meter. The "units", "tens" and "hundreds" digits for the left-hand panel meter are printed in columns 7, 8 and 9 respectively. The overrange ("1") digit, polarity sign ("±"), A overload (A_{OL}) and "overload" (A OR B) outputs are printed in decimal-coded form in column 10. The coding for column 10 is listed in Table 3-5.

Table 3-5. Printer Column 10 Coding.

Column 10 Printout**	"1" Overrange	"±" Polarity	A Overload	A OR B Overload
0	0	-	No	No
1	1	-	No	No
2	0	+	No	No
3	1	+	No	No
8	0	-	No	Yes
9	1	-	No	Yes
+	0	+	No	Yes
	1	+	No	Yes
l v	0	-	Yes	Yes
A	1	-	Yes	Yes
Ω	0	+	Yes	Yes
	1	+	Yes	Yes

** Digits 4, 5, 6 and 7 represent illegal states.



THEORY OF OPERATION

4-1. INTRODUCTION.

4-2. The Hewlett-Packard Model 3575A Gain-Phase Meter is a compact, wide-range instrument which measures the amplitude and phase relationships between two input signals. The major features of the instrument include 1 Hz to 13 MHz frequency response (four ranges), 80 dB dynamic range, digital readout plus a highly effective detection scheme which ensures accurate phase measurements in the presence of noise and distortion.

4-3. The 3575A is equipped with a front panel Display switch which permits selection of amplitude or phase presentation. In the Amplitude Display mode, any one of three amplitude functions can be selected. These amplitude functions are Log A, Log B and Log B/A. When Log A or Log B is selected, the instrument measures the logarithmic amplitude of the corresponding input signal in dBV (1 V rms = 0 dBV). Input levels from -74.0 dBV (0.2 mV rms) to +26.0 dBV (20 V rms) can be measured with 0.1 dBV resolution in two voltage ranges. When Log B/A is selected, the 3575A measures the relative amplitude of the two input signals in dB. The relative measurement

range is from -100.0 dB to +100.0 dB with 0.1 dB resolution.

4-4. In the Phase Display mode, the 3575A measures the phase difference between two input signals. Phase differences from -180 degrees to +180 degrees (± 12 degrees overrange) can be measured with high accuracy and 0.1 degree resolution over the entire frequency spectrum. Due to the wide operating range of the instrument, phase measurements can be made between two signals that differ in amplitude by as much as 100 dB. The 3575A employs a sophisticated phase measuring technique which minimizes the effects of noise and distortion and completely eliminates ambiguous readings and 180 degree errors.

4-5. SIMPLIFIED BLOCK DIAGRAM DESCRIPTION.

4-6. Refer to the Simplified Block Diagram (Figure 4-1) for the following discussion.

4-7. The 3575A consists basically of two Input Channels, a Phase Detector, Function Switching, Phase Control Logic, an Output Filter and a Digital Panel Meter. The Input

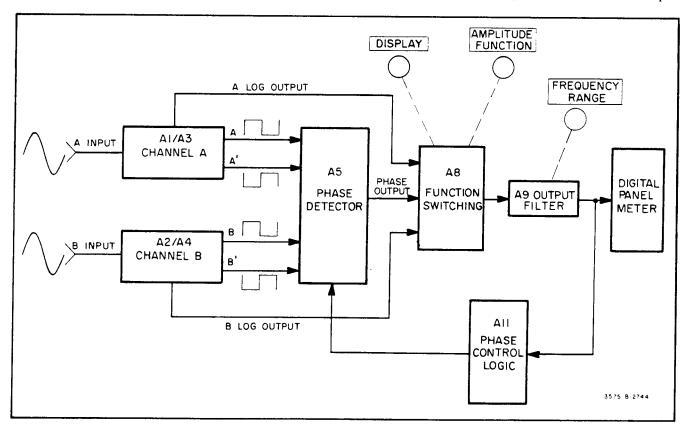


Figure 4-1. Simplified Block Diagram.

Model 3575A

Channels condition the input signals, furnish square-wave outputs that are used for phase measurements and produce logarithmic outputs that are used for amplitude measurements. The logarithmic outputs are applied directly to the Function Switching circuits where they are individually selected (Log A or Log B) or summed (Log B/A) and applied to the Output Filter and Panel Meter in the Amplitude Display mode. The square-wave outputs are used to control J-K flip-flops in the Phase Detector which provides a dc output voltage proportional to the phase difference between the two input signals. This dc output is coupled through the Function Switching circuits and Output Filter to the Panel Meter and Phase Control Logic in the Phase Display mode. The Phase Control Logic senses the magnitude and polarity of the phase output voltage and, in turn, applies dc offsets to the Phase Detector to maintain a correct phase reading. The Digital Panel Meter is a dc digital voltmeter which converts the analog amplitude or phase information to a 3 1/2 digit 7 segment bar matrix.

4-8. FUNCTIONAL DESCRIPTION.

4-9. Input Channels.

Section VI

4-10. Refer to the Functional Block Diagram (Figure 7-1). Since the two input channels are identical, the following discussion applies to both channels.

4-11. Each Input Channel is comprised of an Input Attenuator, a Preamplifier, a Log Amplifier, a Synchronous Rectifier and a Level Translator. The Input Attenuator is controlled by the front panel voltage range switch and provides either 0 dB (0.2 mV to 2 V range) or 20 dB (2 mV to 20 V range) of attenuation. The Preamplifier provides Unity gain and impedance conversion between the Input Attenuator and the input of the Log Amplifier. The Log Amplifier converts the input level to a logarithmic value, supplies a limited signal to the Level Translator and furnishes a logarithmic output which is applied to the Synchronous Rectifier. The Level Translator conditions the applied signal and produces two square-wave outputs that are equal in amplitude and 180 degrees out of phase. These square-wave outputs (designated A, A', B and B') are applied directly to the Phase Detector circuitry. The logarithmic output from the Log Amplifier is full-wave rectified in the Synchronous Rectifier and is applied to the Function Switching Assembly (A8) for use in the Amplitude Display mode.

4-12. Input Attenuator (A1/A2 R5, R6 Schematic No. 1). Refer to Figure 7-1 and Schematic No. 1 for the following discussion.

4-13. The Input Attenuator serves as an input voltage divider and coupling network between the input connector and the input of the Preamplifier. With the front panel range switch set to the 0.2 mV to 2 V position, relay K1 is energized, K2 is deenergized and the input signal is coupled directly through C1 to the Preamplifier. When the 2 mV to 20 V range is selected, K1 is deenergized, K2 is energized and the input signal is attenuated by 20 dB by the 10:1

divider network consisting of R5, R6 and associated circuitry. The attenuator flatness and input shunt capacitance (<30 pF) is maintained by compensating capacitors C2 and C3. The circuit configuration and capacitor values are such that the input capacitance remains constant regardless of the voltage range setting. Potentiometers A1R4 and A2R4 are adjusted for minimum phase shift between channels at 13 MHz and have little effect at lower frequencies.

4-14. Preamplifier (A1/A2 Q3 through Q7 Schematic No. 1). The Preamplifier is a low noise, high input impedance amplifier circuit which provides impedance conversion between the Input Attenuator and the input of the Log Amplifier. The Preamplifier is comprised of an input amplifier stage (Q3), a differential driver stage (Q4, Q5), a complementary-symmetry output stage (Q6, Q7) and an integrator (IC1). The input amplifier is a low noise field-effect transistor which, having a high input impedance, insures a minimum loading effect on the input signal. The input circuit is protected against overloads by limiting resistor R38. The complementary-symmetry output stage provides a low output impedance and supplies the power required to drive the following Log Amplifier stages. Overall gain, stability and linearity is maintained by negative feedback from the junction of R19 and R20 through the parallel network comprised of L1 and R22 to the source of FET Q3. Due to the parallel L/R network (L1, R22) in the feedback path, the gain of the preamplifier increases with frequency. At low frequencies, the reactance of L1 is very low, the feedback is nearly 100 % and the Preamplifier gain is approximately 1. At high frequencies the reactance of L1 increases, the feedback decreases and the gain approaches 1.1. The reason for this is to compensate for high frequency roll-off in the Log Amplifier and associated circuitry. Added stability in the Preamplifier is provided by dc feedback from the junction of R19 and R20 through integrator IC1 and the Input Attenuator network to the gate of Q3. The purpose of this feedback is to maintain 0 Vdc at the output of the Preamplifier.

4-15. Overload Detector (A1/A2 Q8 through Q10 Schematic No. 1). The Preamplifier output signal at the junction of R22 and R39 is rectified by CR5, filtered by C14 and applied to the base of Q8. When the dc level at the base of Q8 becomes more positive than 2.6 Vdc (2.2 V rms input), Q8 conducts, Q9 cuts off and Q10 is forward biased through R26 and R27. Transistor Q10 drives the corresponding overload indicator (A_{OL}/B_{OL}) on the Panel Meter.

4-16. Log Amplifier (A3/A4 IC1 Schematic No. 1). The Log Amplifier (IC1) is a hybrid circuit designed specifically for use in the Model 3575A. This circuit converts the input amplitude to a logarithmic value, furnishes a log output (IC1 pins 1, 5, and 9) for amplitude measurements and produces a limited output (IC1 pin 12) that is used for phase measurements. The major advantage of the Log Amplifier is that it produces usable outputs over a dynamic input range of 80 dB.

4-17. The output signal from the Preamplifier is applied to pins 20 and 22 of the Log Amplifier package. The input circuit in the Log Amplifier is protected by the diodebridge limiting network comprised of A3CR1 through A3CR4. The dc operating point of the Log Amplifier is controlled by an external feedback loop between pins 14 and 21 of the package. The dc signal at pin 14 is filtered by a single-pole active network (A3IC2 and associated circuitry) and is fed back to pin 21. In order to obtain adequate filtering over the entire frequency spectrum, the filter response must be changed in accordance with the input frequency. This is accomplished by means of transistors A3Q1 through A3Q3 which are used to switch resistors A3R9, R11 and R13 in or out of the R/C filter network. The switching transistors are controlled by two lines, FR1 and FR2, from the front panel FREQUENCY RANGE switch. Note that the frequency range lines (FR1, FR2) are also applied to the bases of A3Q4, Q5 and Q6. These transistors are used to switch-in various values of capacitance (A3C7 through A3C9) at the limited output (pin 12) of the Log Amplifier. The purpose of this filtering is to minimize the high frequency noise coupled to the Level Translator and following Phase Detector circuitry.

4-18. Level Translator (A3/A4 Q8, Q9 Schematic No. 1). The limited output from pin 12 of the Log Amplifier is filtered and applied to the Level Translator circuit consisting of A3Q8 and A3Q9. The Level Translator is a differential amplifier which converts the level of the incoming signal to a level that is compatible with the emitter-coupled logic (ECL) used in the Phase Detector and associated circuitry. The resulting outputs are two square waves that are equal in amplitude and 180 degrees out of phase. The square-wave outputs from the Level Translator in each Input Channel are applied directly to the Phase Detector circuits which are discussed in Paragraph 4-21.

4-19. Synchronous Rectifier and Summing Amplifier (A3/A4 IC4 through IC6 Schematic No. 1). The log outputs from pins 1, 5 and 9 of the Log Amplifier are summed at the emitter of Q7. The logarithmic signal at the collector of Q7 is direct-coupled to two differential amplifiers. The differential amplifier in the upper portion of the schematic (IC4A) clips the applied signal and produces two square-wave outputs that are equal in amplitude and 180 degrees out of phase. The square waves remain at an essentially fixed amplitude over the entire dynamic range. The differential amplifier in the lower portion of the schematic (IC4B) produces two logarithmic outputs that are equal in amplitude and 180 degrees out of phase. All four of these preconditioned signals are applied to the Synchronous Rectifier, IC5. In the Synchronous Rectifier, the square-wave outputs from the limiting amplifier (IC4A) alternately gate-out positive going and negative going portions of the logarithmic signal from differential amplifier IC4B. This produces positive and negative fullwave rectified outputs which are filtered by C17 and C18 and combined in the Summing Amplifier (IC6) to produce a single dc output voltage that is logarithmically proportional to the amplitude of the input signal. This output is applied to the Panel Meter through the Function

Switching Assembly (A8) and Output Filter (A9) in the Amplitude Display mode.

4-20. There are four adjustments in the Synchronous Rectifier portion of the Log Converter Assembly. The bias adjustment, A3R18 (emitter of Q7), is adjusted for 0 Vdc at the collector of Q7. Potentiometer A3R29 is used to balance the limiting amplifier (IC4A) to obtain optimum symmetry. Potentiometer R32 adjusts the gain of the Synchronous Rectifier (IC5) such that an amplitude change of 70 dB at the input produces a 70 dB change in the Log A (A3) or Log B (A4) amplitude reading. The log offset adjustment (R50) in the Summing Amplifier circuit is adjusted for a panel meter reading of +6 dBV with a 2 V rms signal applied to the input.

4-21. Phase Detector (A5 Schematic No. 2).

4-22. Refer to the Functional Block Diagram (Figure 7-1) and Schematic No. 2 for the following discussion.

4-23. The square-wave outputs from the Level Translator in each input channel are applied to the Limiter circuit in the Phase Detector. The Limiter circuit is comprised of two differential amplifiers, IC1A and IC1C, which are connected in Schmitt Trigger configurations. These differential amplifiers detect the axis crossing points of the applied signals and produce square-wave outputs that are limited to approximately 1 V p-p. The outputs of the Limiter are A which is in phase with the signal applied to channel A, B which is in phase with the signal applied to channel B and B' which is 180 degrees out of phase with the signal applied to channel B. Note that the B signal from IC1C is applied to a third differential amplifier, IC1B. The purpose of IC1B is to provide a gate delay equal to that of the A channel Exclusive OR gate (IC2C) so that both signals applied to the "Q" Phase Detector (IC2B) encounter one gate delay.

4-24. The A and B' outputs from the Limiter are applied to the A channel and B channel Exclusive OR gates (A5IC2C, IC2D). The purpose of the Exclusive OR gates is to provide inverted or non-inverted outputs in response to dc logic levels. Note that the signal from channel A is applied to one input of the A channel Exclusive OR gate while a logic level from the front panel PHASE REFERENCE switch is applied to the other input. Whenever both inputs are high (1) or low (0), the output is low. If only one input is high, the output is high. For example, with the PHASE REFER-ENCE switch in the "A" position, the logic input to the A channel Exclusive OR gate is high. The output of the gate is, therefore, low when the signal input is high making it 180 degrees out of phase with the signal input. With the PHASE REFERENCE switch in the "- A" position, the logic input is low and the output is in phase with the signal input. The B channel Exclusive OR gate operates in the same manner but is controlled by the logic output from the "Q" Phase Detector (Paragraph 4-30).

4-25. The outputs of the A channel and B channel Exclusive OR gates are applied directly to two OR/NOR

gates (A5IC3A, IC3B). Each OR/NOR gate splits the phase of the incoming signal and provides two outputs that are equal in amplitude and 180 degrees out of phase. These outputs are used to trigger the two J-K flip flops (IC7A, IC7B) that serve as phase detectors and are also applied to the Error Correction Circuits (IC4 through IC6) which are discussed in Paragraph 4-55. The upper J-K flip flop, IC7A, is "set" by a positive transition on A at the "J" input and "reset" by a positive transition on B' (same as a negative transition on B) at the "K" input. The lower J-K flip flop, IC7B, is "set" by a positive transition A' (same as a negative transition on A) at the "J" input and "reset" by a positive transition on B at the "K" input. The outputs of the two flip flops, designated P1, P1', P2 and P2', respectively, are applied to differential amplifiers IC8B and IC8A. The differential amplifiers gate on and gate off two constant current sources (also designated P1 and P2) which supply current to the following Buffer/Integrator stage (IC9). The Buffer/Integrator serves as an impedance converter, an inverter and a high frequency integrator (note that A5C1 is only 0.1 µF). The average value of the pulse train at the output of the Buffer/Integrator is proportional to the phase difference between the two input signals, A and B.

4-26. When gated on, the Current Sources, P1 and P2, each supply 1 mA to the Buffer/Integrator. Due to the 1804 ohm feedback resistance (A5R33) of the Buffer/Integrator, a 1 mA input current produces an output of

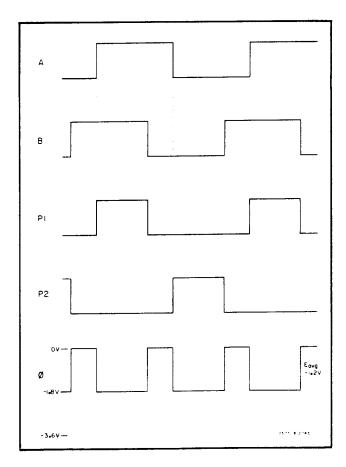


Figure 4-2. Phase Difference + 60 Degrees.

- 1.8 volts. With both current sources on, the sum of the input currents in 2 mA and the resulting output is - 3.6 volts.

4-27. Figure 4-2 shows the two limited input signals (A and B), the outputs of the two J-K flip flops (P1 and P2) and the resulting pulse train (\emptyset) at the output of the Buffer/Integrator. In Figure 4-2, the phase difference between A and B is +60 degrees (B leads A) and the average value of the pulse train at the output of the Buffer/Integrator is -1.2 volts.

4-28. Figure 4-3 shows the Phase Detector output voltage (integrated) vs. phase from -90 degrees to +90 degrees. Note that the Phase Detector output alone does not provide a valid phase reading. For example, with an applied phase difference of +60 degrees, the Phase Detector output is

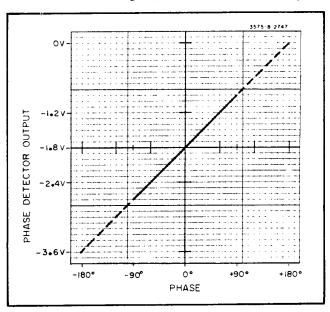


Figure 4-3. Phase Detector Output.

- 1.2 V which, if applied to the Panel Meter, would produce a phase reading of - 120 degrees. A correct phase reading can be obtained, however, by offsetting the Buffer/Integrator output by + 1.8 Vdc. When required, dc offsets are provided by the X and Y Current Sinks at the input of the Buffer/Integrator. These Current Sinks are controlled by the Phase Control Logic (A11) which senses the Phase Detector output and, in turn, gates the Current Sinks on or off to maintain a correct phase reading. When only one of the Current Sinks is gated on, the resulting offset at the output of the Buffer/Integrator is + 1.8 Vdc. When both Current Sinks are on, the offset is + 3.6 Vdc. The Phase Detector output, when combined with the offsets introduced by the X and Y Current Sinks will yield a correct phase reading.

4-29. Before continuing with the overall phase measuring scheme, one important factor must be considered. As the input frequency increases or as the phase magnitude approaches 180 degrees, the time between the transitions

Model 3575A Section IV

that trigger the J-K flip flops decreases until a point is reached where the transition regions overlap. In the case where A and B are 180 degrees out of phase. A goes high at the same time B goes low; thus, A and B' occur simultaneously. Since the P1 flip flop (IC7A) is "set" by A and "reset" by B', it could not respond properly. The same is true for the P2 flip flop since it is controlled by the other two transitions, A' and B. Due to the fixed response time of the J-K flip flops, they will respond to a maximum phase difference of 150 degrees at 10 MHz and approximately 175 degrees at 1 MHz. In order to accurately measure phase in this region, it is necessary to invert the signal on one channel so that the phase difference is within the operating range of the J-K flip flops. This is accomplished by means of the "Q" Phase Detector which senses the phase magnitude and inverts the output of the B channel Exclusive OR gate when the phase magnitude is greater than 90 degrees.

4-30. "Q" Phase Detector (Schematic No's. 2, 3 and 4).

4-31. Refer to the Functional Block Diagram (Figure 7-1) for the following discussion.

4-32. The "Q" Phase Detector is comprised of one Exclusive OR gate, a Differential Amplifier, a Constant Current Source and a Buffer/Integrator. The output of the Buffer/ Integrator is filtered by the Phase Control Filter (A7) and applied to a Threshold Detector. The Threshold Detector provides a high (1) or low (0) output depending on the magnitude of the phase difference between the two input signals. When the phase magnitude is less than 90 degrees, the Threshold Detector output (designated "Q") is high; when the phase magnitude is greater than 90 degrees, the output is low. The "Q" output is applied to the B channel Exclusive OR gate where it is used to invert the Exclusive OR output when the phase magnitude is greater than 90 degrees. The "Q" output is also applied to the Phase Control Logic to enable logic circuits that control the X and Y current sinks.

4-33. The two signals applied to the Exclusive OR gate in the "Q" Phase Detector are A' and Bd'. The output of the Exclusive OR gate (designated P3) is high (1) when A'and B_d are in opposite states (one high, one low) and low (0) when they are in identical states (both high, both low). The width of the output pulses, therefore, represents the magnitude of the phase difference between the two signals. The Exclusive OR output is applied to a Differential Amplifier which provides the voltage swing required to gate on and gate off the Constant Current Source. The pulsating dc from the Constant Current Source is applied to the Buffer/Integrator which, like the Buffer/Integrator in the Phase Detector, serves as an impedance converter, an inverter and high frequency integrator. The output of the Buffer/Integrator is applied to the Phase Control Filter which detects the average value of the pulse train and provides a de output voltage proportional to phase magnitude. Figure 4-4 is a graph showing the voltage level vs. phase at the output of the Phase Control Filter. This voltage is applied to a Threshold Detector (A11IC9) which

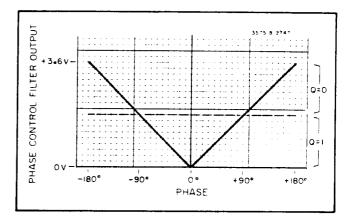


Figure 4-4. Phase Control Filter Output.

provides a logical "1" output when the phase magnitude is less than 90 degrees and a "0" output when the phase magnitude is greater than 90 degrees.

4-34. Phase Control Filter (A7 Schematic No. 4). The Phase Control Filter is a 4-pole low-pass filter network that is controlled by the front panel FREQUENCY RANGE switch. The purpose of the filter is to integrate the pulsating dc output from the "Q" Phase Detector and control the transient response time of the phase control circuits.

4-35. The basic filter configuration is shown in Figure 4-5. The filter is comprised of two active sections (IC1, IC2) and an impedance converter (IC3). Each of the two sections contains an operational amplifier which serves as a voltage-controlled voltage source. Filter response is determined by the R/C elements in the input and feedback networks of the operational amplifiers. The resistive elements remain constant while the appropriate values of capacitance are selected by means of FET switches, A7Q1 through A7Q12. The FET switches are controlled by three lines (F, M and S) which, in conjunction with switching transistors A7Q13 through A7Q15, are controlled by two lines (FR1 and FR2) from the front panel FREQUENCY RANGE switch. Table 4-1 is a truth table which indicates the conditions of the FR1 and FR2 control lines, the F, M and S control lines

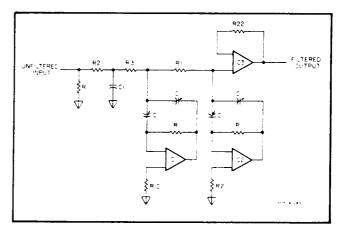


Figure 4-5. Basic Filter Configuration.

Section IV Model 3575A

Range	FR1	FR2	F	М	s	Q1	Q2	Q3	Q4	Q 5	Q6	Q7	Q8	Q9	Q10	Q11	Q12
1 - 1 K 10 - 100 K 100 - 1 M 1 K - 13 M	0 0 1 1	0 1 0 1	0 0 1 0	0 1 0 0	1 0 0 0	0 0 1 0	0 1 0 0	0 0 1 0	1 0 0 0	0 1 0 0	1 0 0 0	1 0 0 0	0 1 0 0	1 0 0 0	0 0 1 0	0 1 0 0	0 0 1 0
	0 = -4 1 = +!		1) = -12 = +5 \						Conduc Cut Off	_						

Table 4-1. Filter Control Logic.

and the various FET switches on each of the four frequency range settings. Note that the F, M and S control lines are also applied to the Output Filter(s) (A9/A10) through A7 pins W, X and V.

4-36. Operational Review. As indicated in Paragraph 4-29, the flip flops in the Phase Detector cannot respond properly when the phase magnitude approaches 180 degrees. The inoperative region is avoided, however, by inverting the signal from channel B when the phase magnitude is greater than 90 degrees. This is accomplished by means of the "Q" Phase Detector which controls the phase of the signal at the output of the B channel Exclusive OR gate. When the phase magnitude is less than 90 degrees, Q is in a high (1) state. When Q is high, the output of the B obarriel Exclusive OR gate is 180 degrees out of phase with the input (B') and is in phase with the signal applied to channel B. When the phase magnitude is greater than 90 degrees, Q goes low (0) and the output of the B channel Exclusive OR gate is inverted. The phase difference applied to the J-K flip flops is, therefore, always within the range of - 90 degrees to + 90 degrees. The Phase Detector output, along with Q from the "Q" Phase Detector, is applied to

the Phase Control Logic which, in response to these inputs, gates the X and Y Current Sinks on or off to produce a correct phase reading.

4-37. Phase Control Logic (A11 Schematic No. 3).

4-38. Refer to the Phase Control Logic Functional Block Diagram (Figure 4-6) for the following discussion.

4-39. With the front panel DISPLAY switch in the PHASE position, the integrated output from the Phase Detectors is filtered (Output Filter Assy., A9) and applied to the Panel Meter and the Phase Control Logic (PCL). This voltage ranges from approximately -1.92 Vdc to +1.92 Vdc depending on the phase magnitude, phase polarity and the condition of the X and Y current sinks. The only other input to the Phase Control Logic is Q (from the "Q" Phase Detector) which indicates that the phase magnitude is less than or greater than 90 degrees. The "Q" input is initially inverted by IC4A to obtain Q' which is high (1) when the phase magnitude is greater than 90 degrees and low (0) when the phase magnitude is less than 90 degrees.

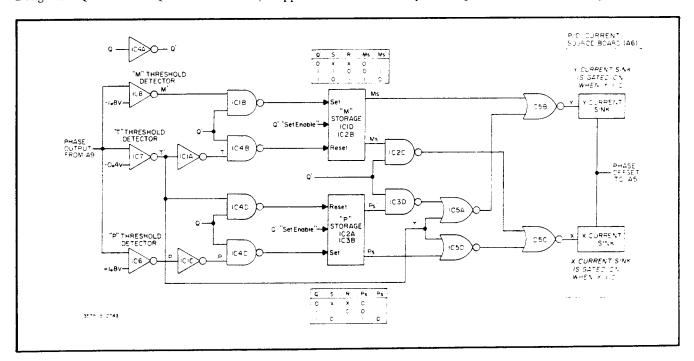


Figure 4-6. Phase Control Logic Functional Block Diagram.

Model 3575A Section IV

4-40. The filtered dc output voltage from the Phase Detectors is applied directly to three threshold detectors. IC6 through IC8. The outputs of these three threshold detectors, designated M', T' and P' are listed and defined in Table 4-2. These threshold detector outputs are used to control two Set/Reset flip flops which serve as storage elements. The outputs of the two storage elements (designated M_S, M_S', P_S and P_S') along with T' and Q' are further used to control the X and Y current sinks.

Table 4-2. Threshold Detector Outputs.

Threshold Outputs	Definition
M'	Goes high (1) when phase output voltage becomes more negative than -1.92 Vdc; goes low (0) as phase output voltage becomes more positive than -1.7 Vdc*.
т'	Goes high when phase output voltage becomes more negative than - 0.4 Vdc; goes low as phase output voltage becomes more positive than - 0.2 Vdc*.
Ρ' .	Goes low when phase output voltage becomes more positive than + 1.92 Vdc; goes high when phase output voltage becomes more negative than + 1.7 Vdc*.

^{*} In each case, the positive and negative thresholds differ by approximately 0.2 Vdc due to hysteresis.

4-41. Before proceeding with the functional description, it would be well to review the operation of NAND gates and NOR gates which are used extensively in the Phase Control Logic circuitry. These gates are shown in Figure 4-7 along with their respective truth tables.

4-42. In most cases, it is easier to understand logic if it is expressed in terms of AND/OR functions rather than NAND/NOR functions. For example, the X current sink

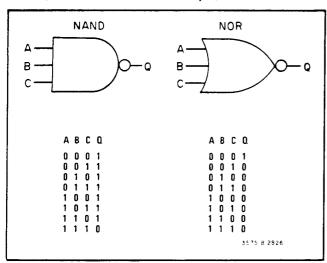


Figure 4-7. Logic Gates.

(Figure 4-6) is gated on when the output of IC5C (X') is low. This is controlled by the logic equation $X' = \overline{Q} + M_S + T'P_S$. Since the X current sink is gated on when X' = 0, it can be inversely stated that the X current sink is gated on when X = 1; where: $X = Q + M_S + T'P_S'$. The X current sink is then gated on when Q = 1 OR when $M_S = 1$ OR when T AND $P_S' = 1$. Likewise, the Y current sink is gated on when the output of IC5B (Y') is low; where: $Y' = M_S + Q' \cdot T' \cdot P_S'$. Inversely, $Y = M_S + Q' \cdot T \cdot P_S'$ and the Y current sink is gated on when $M_S = 1$ OR when Q' AND T AND $P_S' = 1$.

4-43. When the phase magnitude is less than 90 degrees, the "M" and "P" storage elements are held in the reset condition by Q' which is in a low state. With both flip flops in the reset condition, $M_S = 0$, $M_S' = 1$, $P_S = 0$ and $P_S' = 1$. Since the Q' input to NAND gate IC2C is low, the output of this gate is high. This causes the output of NOR gate IC5C (X') to go low and the X current sink to conduct. Whenever Q' is low, the output of NAND gate IC3D is high and the output of NOR gate IC5A is low. Since M_S and the output of IC5A are both low, the output of IC5B (Y') is high causing the Y current sink to cut off. Thus, when the phase magnitude is less than 90 degrees (Q = 1), the X current sink is on and the Y current sink is off.

4-44. With the phase difference of + 120 degrees applied to the inputs, Q goes low, B channel is inverted, and the phase difference applied to the Phase Detectors is - 60 degrees. In this case, both current sinks are initially turned off and the output of the Phase Detectors drops toward - 2.4 Vdc. This condition is sensed by the "M" threshold detector causing M' to go high. Since M' and Q' are both high, a set command is applied to the "M" storage element causing Ms to go high. When $M_s = 1$, both current sinks are gated on and the phase detector output is offset by +3.6 Vdc (-2.4 V + 3.6 V = +1.2 Vdc). During the transition, the phase output voltage becomes more positive than - 1.6 Vdc, M' goes low and M_s is retained by the "M" storage element. As the voltage rises above - 0.2 Vdc, however, T' goes low, T goes high and the "M" storage element is reset. The X current sink remains on because T' and Ps are both low causing the output of IC5D to go high and the output of IC5C (X') to go low. The Y current sink remains on because Q' and P_s ' are both high causing the output of IC3D to go low which, along with T', causes the output of IC5A to go high and the output of IC5B (Y') to go low. A correct phase reading of +120 degrees (+1.2 Vdc) is, therefore, maintained by the X and Y current sinks. The Phase Control Logic operates in the same manner for all positive phase differences greater than +90 degrees and less than + 192 degrees.

4-45. If the phase reading exceeds +192 degrees (+1.92 Vdc), the output of the "P" threshold detector goes low (P=1, Q'=1) and a set command is applied to the "P" storage element. This causes both current sinks to cut-off and the phase reading becomes -168 degrees (-1.68 Vdc). As the phase output voltage crosses through -0.4 Vdc in a negative direction, the "P" storage element is reset by T'

which goes to a high (1) state. The X current sink remains off because Q', T' and M_S ' are all high. The Y current sink remains off because $M_S = 0$ and T' = 1.

4-46. With a phase difference of -120 degrees applied to the inputs, Q goes low, B channel is inverted and the phase difference applied to the phase detectors is +60 degrees. The resulting phase detector output is -1.2 Vdc. In this case, the X current sink is cut off because Q'=1 (Q=0), $M_{\rm S}=0$ and T'=1 (T=0). The Y current sink is cut off because $M_{\rm S}=0$ and T'=1 (T=0). The result is a correct phase reading with no offsets required. The Phase Control Logic operates in the same manner for all negative phase differences greater than -90 degrees and less than -192 degrees.

4-47. If the phase reading exceeds - 192 degrees (-1.92 Vdc). M' goes high and a set command is applied to the "M" storage element. Both current sinks are then gated on (as outlined in Paragraph 4-44) and the phase reading changes from - 192 degrees to + 168 degrees. This is similar to the + 192 degree condition where both current sinks are gated off and the reading is converted to - 168 degrees. Having the switching points at \pm 192 degrees rather than \pm 180 degrees provides a \pm 12 degree overrange capability which prevents the Phase Feeding from oscillating between \pm 180 degrees due to the overshoot in the Output Filter (A9 or A10).

4-48. Effects of Harmonic Distortion on Phase.

4-49. In the 3575A, phase difference is measured between the axis crossing points of the two input signals. If an applied signal contains harmonics of the fundamental frequency, the axis crossing points will change depending on the magnitude, phase and order of the harmonics. Harmonics that are in phase with the fundamental frequency do not change the axis crossing points and, therefore, do not affect the accuracy of phase readings. Harmonics that are out of phase with the fundamental, however, do change the axis crossing points and, in some cases, produce errors in the phase reading.

4-50. Odd harmonics that are out of phase with the fundamental tend to produce a symmetrical waveform that is completely shifted in phase. This type of error is difficult to eliminate without the benefit of selective filtering. Since the 3575 A is a broadband instrument, high levels of odd, out-of-phase harmonics can produce phase offsets. Figure 3-7 (Section III) is a graph which shows the worst-case error produced by odd, out-of-phase harmonics. The worst-case condition occurs when the harmonics are shifted 90 degrees with respect to the fundamental. As indicated in the graph, the error is relatively insignificant (0.57 degrees) when the total odd harmonic distortion is more than 40 dB below the fundamental.

4-51. Even harmonics that are out of phase with the fundamental change the axis crossing points but, unlike odd harmonics, produce an unsymmetrical waveform. This makes it possible to cancel the effects of even harmonic

distortion in the 3575A by the use of two phase detectors which operate 180 degrees out of phase. This technique is illustrated in Figures 4-8 and 4-9. In Figure 4-8, the phase detector outputs, P1 and P2, are controlled by transitions that occur at the axis crossing points of the applied signals. A and B. The P1 phase detector is gated on by a positive transition on A and off by a negative transition on B; P2 is gated on by a negative transition on A and off by a positive transition on B. The phase detector outputs are summed (and inverted) to produce a single pulse train (\emptyset) with an average value that is proportional to the phase difference between A and B. The two input signals in Figure 4-8 are in phase and the average value of the output pulse train is equal to the peak voltage introduced by P1 or P2 which, in this case, is -1.8 V.

4-52. Figure 4-9 is identical to Figure 4-8 except the signal applied to channel B contains a 10 % second harmonic that is out of phase with the fundamental. The combined average output of the two phase detectors is still equal to -1.8 V because the distorted signal on B produces equal and opposite errors on P1 and P2 thereby cancelling the effects of the distortion.

4-53. Error Correction Scheme.

4-54. The 3575 A uses logic circuitry (A51C4 through IC6, Schematic No. 2) in a unique error correction scheme to

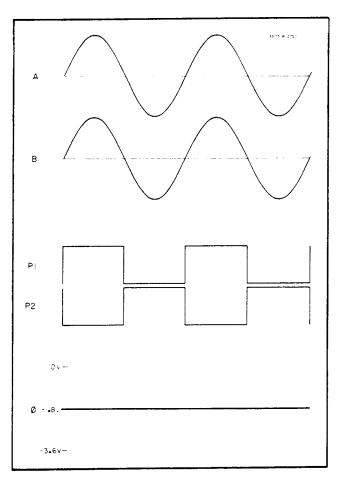


Figure 4-8. A and B In Phase - No Distortion.

minimize the effects of noise on phase readings. The following paragraphs briefly describe how noise can introduce errors and how these errors are corrected.

4-55. Because the 3575A is a broadband, wide range instrument, it is capable of responding to high frequency noise that can "false trigger" the J-K flip flops in the Phase Detector. False triggering is where the J-K flip flops are improperly "set" or "reset" by noise transitions that occur near the axis crossing points of the applied signals. This is illustrated in Figures 4-10 and 4-11. Figure 4-10 shows the outputs of the two phase detectors P1 and P2 produced by noise-free signals, A and B. Figure 4-11 shows the same phase relationship as Figure 4-10 however the signal on channel A contains a number of positive and negative transitions produced by noise. The J-K flip flops respond to these transitions causing a very significant error (designated by shaded areas) in the phase reading. Note that P2 is initially set high by a negative noise transition on A (same as A') and is not reset until B goes high 250 degrees later. Also note that all four signals, A, B, P1 and P2 are high immediately following the noise pulses on the leading edge of A. During normal phase measurements these four signals should never be high at the same time. This condition is, therefore, an error state which can be defined by the logic equation A·B·P1·P2 = 1 and further detected and corrected

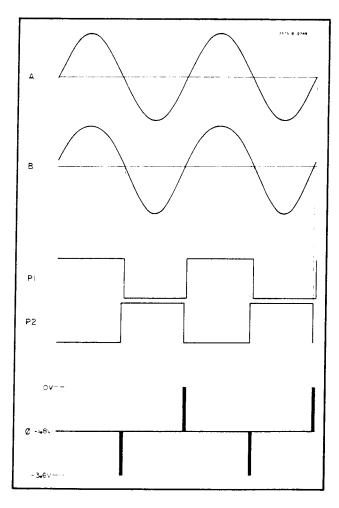


Figure 4-9. Even Harmonics Cancelled.

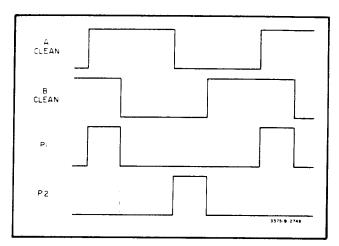


Figure 4-10. A and B Clean - No Error.

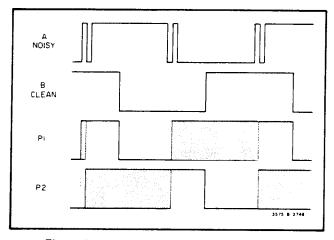


Figure 4-11. Large Error Produced by Noise.

using logic circuitry. This method of error correction is used in the 3575A and is accomplished by means of logic circuitry (A5IC4 through IC6) on the Phase Detector Assembly. The four primary signals (A, B, P1 and P2) and their opposites (A', B', P1' and P2') are applied to the error correction circuits. The error correction circuits sense any of the eight error states listed in Table 4-3 and "set" or "reset" the appropriate flip flop to correct the error.

Table 4-3. Error Correction Equations.

No.	Equation	Function
1	A-B-P 1-P 2	Reset P 2 low
2	A'-B'-P 1-P 2	Reset P 1 low
3	A-B-P 1'-P 2'	Set P 1 high
4	A'·B'·P 1'·P 2	Set P 2 high
5	A'-B-P1'-P2	Reset P 2 low
6	A·B'·P 1·P 2'	Reset P 1 low
7	A-B'-P 1'-P 2	Set P 1 high
8	A'·B·P 1·P 2'	Set P 2 high

4-56. Since error states must be present for a short time before they can be detected and corrected, they can still affect the accuracy of phase readings. Due to the error correction scheme, however, worst-case errors are limited to

a few degrees. This is a vast improvement over conventional phase meters that give totally erroneous readings in the presence of noise. For further information concerning the effects of noise on 3575A phase readings, refer to Paragraph 3-54.

4-57. Function Switching Circuits (A8 Schematic No. 5).

4-58. The Function Switching Assembly (A8) is comprised of four individual sections. Each section performs a particular switching or logic function in response to the front panel control settings.

4-59. Compensating Circuits (A8IC1, IC2, Q1 through Q6). The logarithmic outputs from the Synchronous Rectifiers in channels A and B are applied to operational amplifiers A8IC2 and A8IC1, respectively. Note that the gain of these operational amplifiers is controlled by thermistors R56 and R57 in the feedback networks. The purpose of the thermistors is to change the gain of the operational amplifiers to compensate for slight gain variations that occur in the Log Amplifiers due to temperature. Under normal conditions, the gain of IC1 and IC2 is between 1 and 1.1.

4-60. Transistors Q1 through Q3 and Q4 through Q6 at the outputs of IC1 and IC2 are controlled by the corresponding voltage range switch on the front panel. When the channel B range switch is set to the 2 mV to 20 V position, Q1 and Q3 are conducting and Q2 is cut off. When conducting, Q1 supplies a 1 mA current which produces a 200 mVdc drop across R12. This offsets the Log B amplitude reading by + 20 dB to compensate for the 20 dB signal attenuation introduced by the Input Attenuator. When the 0.2 mV to 2 V range is selected, Q1 and Q3 are cut off and Q2 is switched on. Since the Input Attenuator does not attenuate the signal on the lower range, an offset is not required. The purpose of Q2 is to attenuate the signal slightly to maintain equal loading on both ranges. Transistors Q4 through Q6 at the output of IC2 operate in the same manner to correct the Log A amplitude reading.

4-61. Amplitude Summing and Function Switching Circuits (A8Q7 through Q14, IC3). The outputs of A8IC1 and A8IC2 are applied directly to the function switching

circuits consisting of A8Q7 through A8Q14. This circuitry is controlled by two lines, A_F (A8 pins 8 and J) and B_F (A8 pin 9 and K) which are connected to the front panel AMPLITUDE FUNCTION switch through the Interface Substitution Board (A16A) or the Interface Board (A16B - Option 002, 003).

462. Table 4-4 is a truth table which indicates the condition of the AF and BF control lines and the resulting states of the various switching transistors for each of the three amplitude functions. When Log A or Log B is selected, the summing amplifier (IC3) is operated with one input referenced to circuit ground through A8R47 and junction FET Q14. Since R47 and feedback resistor R46 are of equal value, the closed-loop gain of the summing amplifier is two (from the + input, pin 3). When Log A is selected, the signal from IC2 is coupled through FET Q10 and R31 to pin 3 of IC3. When Log B is selected, the signal from IC1 is coupled through Q8 and R29 to pin 3 of IC3. Note that the signal at the junction of R29 and R31 is divided by two due to the series resistance to ground provided by R32. Since the gain of the summing amplifier is two, the amplitude of the output signal (IC3 pin 6) is equal to that of the Log A or Log B input from IC1 or IC2.

4-63. When Log B/A is selected, Q10 and Q14 are cut off and Q8 and Q11 are switched on. The Log A signal from IC2 is then applied to pin 2 of IC3 through Q11 and R47 and the Log B signal is applied to pin 3 of IC3 through Q8 and R29. This makes the output of IC3 equal to the difference between the Log A and Log B inputs e.g., Log B minus Log A = Log B/A.

464. Display Switching (A8Q15 through Q18). The display switching circuit consisting of A8Q15 through Q18 is controlled by a single line, C_F (A8 pins 10 and L) which is connected to the front panel DISPLAY switch through the Interface Substitution Board, A16A. When AMPLITUDE display is selected, circuit ground is applied to the C_F control line causing Q15 and Q16 to conduct and Q17 and Q18 to cut off. The signal at the output of summing amplifier IC3 is then coupled through Q16 and out A8 pin U to the Output Filter Assembly. When PHASE display is selected, +5 Vdc is applied to C_F, Q15 and Q16 are cut off and Q17 and Q18 are switched on. The dc output from the Phase Detector, is then coupled from A8 pin V through Q18 and out A8 pin U to the Output Filter.

Table 4-4. Amplitude Function Switching.

Amplitude Function	AF	BF	Q 7	Q8	Q 9	Q10	Q11	Q12	Q13	Q14	Q19
Los A		1	0	0	1	1	0	1	1	1	1
Log A	1 1	'n	1	1	0	0	0	0	1	1	0
Log B Log B/A	Ö	ő	1	1	Ō	0	1	1	0	0	0

Control Lines:

1 = + 5 Vdc 0 = GND Transistors:

1 = conducting

0 = cut off

4-65. Annunciator Logic (A81C4 through IC6). The fourth section of the Function Switching Assembly is the annunciator logic circuitry, A8IC4 through IC6. This circuit receives inputs from the A_F , B_F and C_F control lines and two additional inputs from the overload detectors on the Preamplifier Assemblies, A1 and A2. The purpose of the annunciator logic is to control the overload indicators and the various function indicators that appear on the Panel Meter display.

4-66. Output Filter (A9/A10 Schematic No. 6).

4-67. The Output Filter is a 4-pole low pass filter network controlled by the front panel FREQUENCY RANGE switch. The purpose of the filter is to integrate the amplitude or phase information before it is applied to the Panel Meter and ANALOG OUTPUT. The filter response is controlled by three lines, F, M and S which come from the Phase Control Filter, A7. The Output Filter network is identical to the Phase Control Filter network which is discussed in Paragraph 4-34.

4-68. It should be noted that the standard Model 3575A which has a single panel meter requires only one Output Filter. This filter is designated A9. Instruments that are equipped with dual panel meters (Options 001--003) require a separate Output Filter for each panel meter and, therefore, contain both A9 and A10 which are identical. Since the dual panel meter options are field installable, the standard Model 3575A has a vacant board slot and connector to permit the addition of A10.

4-69. Digital Panel Meter.

4-70. Refer to the Panel Meter Block Diagram (Figures 4-12) and Schematic No. 7 for the following discussion.

- 4-71. The Digital Panel Meter is an analog-to-digital converter. It is a self-contained dc digital voltmeter which measures voltages between ± 1.999 V dc. The Panel Meter reading in dB, dBV or degrees corresponds with the applied dc voltage, (e.g. an input of -1.800 V dc will produce a reading of -180.0 degrees; an input of +200 mV dc will produce a reading of +20.0 degrees or +20.0 dBV). Analog input voltages greater than 1.999 V cause the display to blink, indicating overrange.
- 4-72. The five major sections of the Panel Meter are the Analog section, the Control Logic, the Counter, the Data Multiplexer and the Display. The analog input from the instrument is switched through a buffer amplifier to the Analog section where a balance disruption and restoration takes place in response to sequential instructions from the Control Logic, The Counter section maintains a count corresponding to the analog input voltage. The Data Multiplexer converts the count to 8-4-2-1 BCD information which is synchronized with the digit and polarity strobe and applied to the Display.
- 4-73. A measurement cycle consists of two intervals: one interval for the auto-zero and one for the digital conversion of the analog signal. The clock frequency is divided into two sampling intervals, totaling 6144 pulses and made up of 4096 pulses for the measure interval, and 2048 pulses for the auto-zero interval.
- 4-74. The auto-zero interval begins every measurement cycle by allowing the effects of temperature and drift to be impressed on the storage capacitor (C2). This stored voltage is introduced during the measure interval and counteracts the thermal offset, thus the drift of the Analog section is constantly monitored.

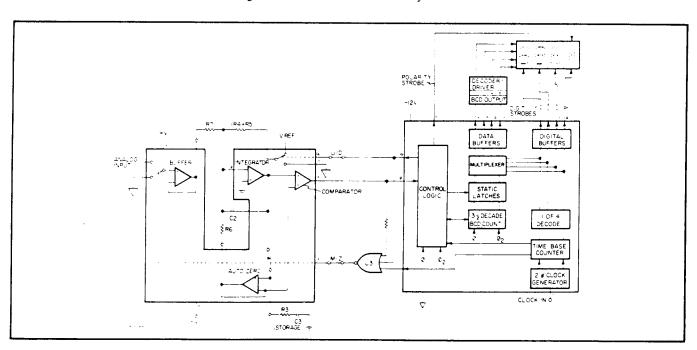


Figure 4-12. Panel Meter Block Diagram.

Section IV Model 3575 A

4-75. At the start of the measure interval, the input of the Analog section is switched to the analog voltage supplied by the instrument. The additional current disrupts the balance achieved in the auto-zero interval, driving the integrator output away from the auto-zero equalibrium voltage. The Comparator senses this deviation and transmits the information to the Control Logic, which then responds with the proper logic to reestablish the zero level. The time required for the Analog output to return to zero is accumulated in the Counter and corresponds to the analog input.

4-76. At the end of the measure interval, the count is transmitted to the Data Multiplexer where it is converted to 8-4-2-1 BCD information, synchronized with the digit and polarity strobe and applied to the Display. Polarity information is also transmitted via the BCD output. When the measure interval is complete and the digits displayed, a new measurement cycle begins.

4-77. The Digital Panel Meter is built around a 3½ digit analog to digital converter set, A22U1 and A22U2. A22U1 is an analog processor which contains a bipolar comparator, a bipolar integrating amplifier, two MOS-FET input unity gain amplifiers, several P-channel enhancement mode analog switches and the necessary level shifting drivers to allow the analog and digital processors to be directly interfaced. A22U2 is a synchronous digital processor that combines the counting, storage and data multiplexing functions with the random logic necessary to control the functions of the analog processor. The digital processor contains seventeen statis latches for storing the 3½ digits of BCD data, overrange, underrange and polarity information. Nine push-pull output buffers provide the sign, digit strobe and multiplexed BCD data outputs. The Digital Panel Meter provides a full scale display for an analog input voltage of 1.999 V. This full scale of the Panel Meter is not to be confused with instrument full scale indications.

4.78. Measurement Cycle. The 3½ digit analog-to-digital converter set, A22U1 and A22U2, converts the analog input voltage to a corresponding 8-4-2-1 BCD output once each measurement cycle. Polarity, overrange and underrange information is also determined once each measurement cycle. The measurement cycle is controlled by the time base counter located in A22U2. The time base counter divides the clock frequency generated by A22U1 into sampling intervals of 6144 pulses which constitute one measurement cycle. Each measurement cycle consists of two-intervals—an auto-zero interval and a measure interval. Of the 6144 pulse measurement cycle, 2048 pulses comprise the auto-zero interval and 4096 pulses comprise the measure interval.

4-79. Auto-Zero Interval. The purpose of the auto-zero interval is to establish an equilibrium voltage which represents the offset introduced by the drift of the analog section. Refer to Figure 4-12 and 4-13 for this discussion.

4-80. The auto-zero and measure intervals are controlled by the Measure/Zero logic (M/Z) originating from the time

base counter in A22U2. A low logic level on the M/Z line switches the input of the buffer amplifier to ground. When the M/Z logic, the Up/Down logic (U/D) and the comparator output are all low, the Override section provides a high output. This turns off A22Q2 and applies - 12 V to the gate of A22Q1. A closed-loop system of integrator and autozero amplifier is formed by the operation of A22Q1. The delay interval, or override period, in initiating the closed-loop system, allows the integrator output to return to the equilibrium voltage of the previous measurement cycle.

4-81. The input of the auto-zero closed loop system is the summing node at the negative port of the integrator in A14U1. Three currents are summed at this node. The buffer amplifier in conjunction with A22R7 forms a voltage-to-current converter which supplies current to the integrator input summing node. Voltage-to-current conversion is also performed by the auto-zero amplifier in conjunction with A22R6 and the reference voltage in conjunction with A22R4 and A22R5. These are the other two currents summed at the summing node. Since the buffer amplifier input is grounded, the current supplied to the integrator summing node is minor. The auto-zero amplifier current and the reference current are the major currents flowing into the integrator summing node. The reference current is pulsed at a 50% duty cycle (4 clock cycles on and 4 clock cycles off) by the U/D logic generated in the control logic portion of A22U2. The output of the integrator in the closed-loop system seeks to attain an equilibrium voltage. Equilibrium occurs when the sum of the average currents at the integrator summing node equals zero. At equilibrium, the current through A22R6 will be constant and equal to half the reference current. These two currents oppose each other at the integrator summing node for a net result of zero.

4-82. The equilibrium voltage is stored on capacitor A22C3. This voltage is the dc offset introduced by the analog section. During the following measure interval, the equilibrium voltage stored on A22C3 is applied to the integrator summing node where it nullifies the offset.

4-83. Measure Interval. Refer to Figure 4-12 and 4-14 for this discussion. Following the 2048 pulse auto-zero interval, the M/Z logic goes high to begin the measure interval. The M/Z logic switches the buffer amplifier input from ground to the analog voltage supplied to the panel meter. It also opens the closed-loop system of integrator and auto-zero amplifier. The voltage-to-current converter comprised of the buffer amplifier and A22R7 supplies a current to the integrator summing node generated by the analog input voltage. This additional current flowing into the integrator summing node disrupts the balance achieved during the preceding auto-zero interval. The result is the integrator output is driven away from the equilibrium voltage maintained as a reference on A22C3. The greater the analog input voltage, the greater the integrator output deviates from the equilibrium voltage. A22CR1 in parallel with the integrator capacitor A22C2 protects the integrator against large positive analog input voltages.

Model 3575A

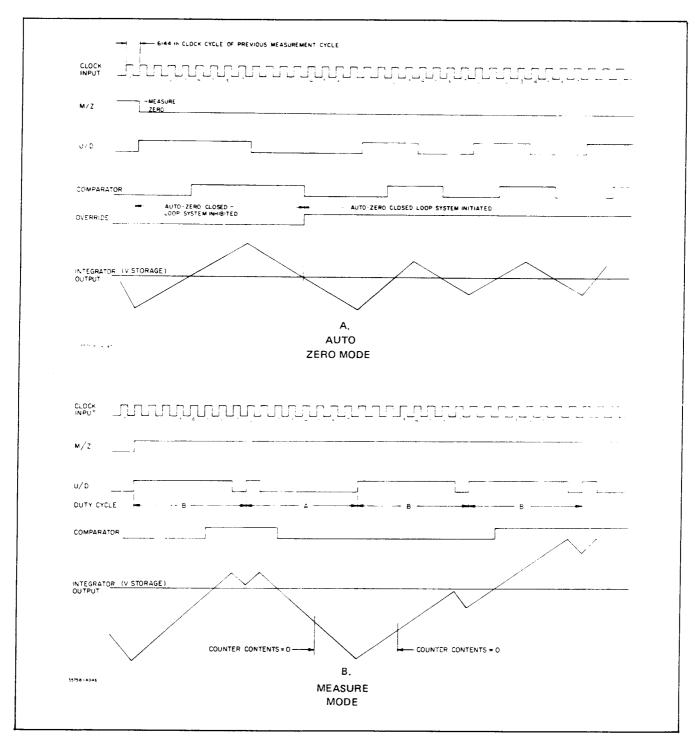


Figure 4-13. Analog and Digital Timing.

4-84. The comparator of A22U1 is a differential amplifier which compares the integrator output to the equilibrium voltage stored on A22C3. The comparator transmits by logic levels to the control logic of A22U2, the state of the integrator output with respect to the equilibrium voltage. A high logic level indicates an integrator output greater than equilibrium; a low logic level indicates an integrator output

)

less than equilibrium. The control logic attempts to reestablish the system equilibrium by using one of two U/D logic duty cycles during the measure interval. The duty cycle used depends on the comparator output in the clock cycle preceding each duty cycle. Figure 4-13 shows the timing of these duty cycles and their effect on the integrator output.

Section IV

Section IV Model 3575A

4-85. Each duty evele is comprised of eight clock cycles. Duty cycle A shown in Figure 4-13, consists of the U/D logic high one clock cycle and low seven clock cycles. As indicated in Figure 4-13, the U/D logic high drives the integrator output up and when low, it drives the integrator output down. Duty cycle A is used to drive the integrator output in a negative direction. Duty cycle B consists of seven clock cycles high and one clock cycle low. This duty cycle is used to drive the integrator output in a positive direction. The Control Logic of A22U2 samples the comparator output in the clock cycle preceding each duty cycle. A high comparator output indicates the integrator output is more positive than the equilibrium voltage. This indication dictates the use of duty cycle A which will drive the integrator output more negative in an attempt to reestablish the system equilibrium. A low comparator output dictates the use of duty cycle B to drive the integrator output more positive towards equilibrium.

4-86. Throughout the measure interval the Control logic utilizes U/D logic duty cycle A or B to reestablish the integrator output at equilibrium. The synchronous Up/ Down 3½ Decade BCD Counter in A22U2 increments each clock cycle for a high state of the U/D logic or decrements each clock cycle when the U/D logic is low. The net result on the count stored in the BCD Counter is a decrease of six counts for a duty cycle A or an increase of six counts for a duty cycle B. Because of the number of clock cycles in the measure interval, the counter can accumulate a maximum of 3072 counts. A count of 2000 corresponds to a full scale analog input voltage. Therefore, the Digital Panel Meter can display accurately an analog input voltage 150% of fullscale. This full-scale is not to be confused with the instrument front panel full-scale. The number of counts accumulated by the counter is proportional to the input voltage. The larger the input voltage, the greater the count accumulated in the counter during the measure interval. For input voltages that are not overrange, the system equilibrium is reestablished before the end of the measure interval. The remainder of the measure interval is characterized by the counter increasing by six counts one duty cycle and decreasing by six counts the following duty cycle. This net count of zero occurs as the integrator output is maintained at equilibrium, that is, the average output equals the equilibrium voltage. At the end of the measure interval, the counter continues to count for a number of clock cycles in the auto-zero interval. This period is governed by the state of the M/Z, U/D and comparator output logic. When all three states are low, the counting stops. At this point the integrator output equals the equilibrium voltage. Therefore, this override period compensates for the voltage difference between the integrator output and the equilibrium voltage and its corresponding count at the end of the measure interval.

4-87. When the override is complete, the BCD counter of A22U2 is put on "hold." The contents of the counter are loaded into the static latches of A22U2 along with underrange information decoded from the counter contents. Underrange is 5% of full scale and corresponds to a count of 100 counts. Once the counter contents have been loaded into the static latches, the counter is cleared. The contents of the static latches are transmitted to the multiplexer where they are multiplexed to the push-pull Data Buffers in BCD format. This operation is synchronized by the 1 of 4 Decode with the Digit Buffers which provide a digit strobe. The Digit Buffers strobe the digits in a 1, 3, 2 and 4 sequence where digit 4 is the most significant digit. The digit strobe is performed by the Digit Buffers applying a high output to the terminal of A21U1 associated with the digit of interest. A21U1 provides inverters at each of the inputs and transmits a low through a base resistor, A21R8 thru R11. This low appears on the base of the transistor switch associated with the strobed digit. A low on the base of A2101 thru Q4 forward biases the transistor and applies the +5 V on the emitter to the associated digit in the display. This application of + 5 V activates this digit of the display. Simultaneous with the activation of the digit, the BCD output from the Data Buffers is transmitted to the Decoder/Driver, A21U1, which converts the BCD information to a seven-segment code. This seven-segment code being synchronized with the strobed digit, is displayed.

4-88. The polarity of the analog input voltage is determined by the state of the U/D logic when the BCD Counter is reset to zero. This information is loaded into the static latch once each measurement cycle. The control logic strobes the polarity sign by applying a high to the sign strobe terminal on A21U6. The sign strobe is performed once each measure interval. The polarity information located in the static latches is transmitted to the sign display.

4-89. Polarity Sign Blanking. If an analog input voltage is greater than a full-scale input of 1.999 V, the $3\frac{1}{2}$ digit display will blink during the zero cycle of the counter. This blinking rate is equal to the sample rate. Although the display blinks for an analog input greater than full-scale of 1.999 V, an analog input voltage that is 150% of full-scale, or 2.999 V, is accurately displayed in the overrange blinking mode. Transistors A21Q5 and Q6 in conjunction with A21R12 and R13 provide a polarity sign blanking capability. When the instrument is operated in the DCA or DCV mode, a ground is supplied to the base of A21Q5. This ground forward biases A21Q5 and Q6 which supplies + 5 V to the anodes of the polarity sign segments (A21U5 pin 1). If the instrument is in the OHMS or ACV mode, +5 V is applied to A21Q5. A21Q5 turns off and in turn reverse biases A21Q6. When A21Q6 is not conducting, +5 V is removed from the anodes of the polarity sign segments (A21U5 pin 1) blanking the polarity sign.

Model 3575A Section IV

4-90. Reference Supply. The reference voltage is obtained by reducing the instrument's + 12 V supply to a reference voltage of +6.2 V. Dropping resistor A22R7 reduces the supply voltage which is filtered by A22C3. A zener diode, A22CR2, is in parallel with C3 and clamps the reference voltage to +6.2 V. The reference voltage is supplied to A22U1 and is the source of the reference current supplied to the integrator summing mode.

4-91. Trigger and Hold (Options 002, 003). When a ground is applied to the LOCAL/REMOTE control line (P1, pin 50) the internal sampling in the Panel Meter is disabled. In this disabled or Hold condition, U1 pin 1 is held low and the M/Z high to low transitions on U1 pin 2 have no effect.

4-92. External triggering must be used to obtain successive meter readings or BCD outputs in the Hold condition. An external trigger pulse of greater than 1 ms applied to U1 pin 12 causes U2 pins 7 and 10 to be high. With pins 7 and 10 both high, pin 8 will go low. The corresponding low on pin 2 (CLR) causes pin 13 to go high which places a high on U1 pin 1 and the next low to high transition of the M/Z line allows the Panel Meter to take a reading. The high to low transition of the M/Z line, forces U2 pin 6 (CLR) low which again creates the Hold condition.

4-93. Interface Assembly (A16B Schematic No. 9).

4-94. The Interface Assembly (A16B) is installed in place of the Interface Substitution Assembly (A16A) in instruments equipped with the remote programming and dual panel meter options (Options 002, 003). The purpose of the Interface Assembly is to provide the decoding, timing and switching logic required for the BCD outputs and remote controlled functions.

4-95. BCD Output Circuits. The BCD output circuitry shown on the left-hand side of Schematic No. 9 (IC1 through IC12) receives measurement data from the two panel meters and converts this data into parallel BCD outputs that are available at the rear panel Interface connector. The circuit in the upper portion of the schematic (IC2-IC4) converts the data from the right-hand (phase) panel meter, while the circuit in the lower portion of the schematic (IC5-IC7) converts the data from the left-hand (amplitude) panel meter. Since the two BCD output circuits are identical, the following description of the "phase" circuit applies to both circuits.

4-96. The BCD output circuit is comprised of three decade counters (IC2-IC4), an overrange flip-flop (IC1A) and associated logic circuitry. To begin a measurement, the Reset line (XA16 pin 2) from the panel meter goes low and remains low for 33 ms. This resets the decade counters to 000 and clears the overrange flip-flop. When the Reset line goes high, a series of pulses from the Gated Clock output of the panel meter are fed into the decade counters. Since the number of pulses is equal to the panel meter reading, the accumulated count at the end of the measurement cycle provides the required output data. If the count is greater than 999, counter IC2 passes a "carry" pulse to the

overrange flip-flop which provides a single-line overrange indication. In 3575A Option 002, the high-true BCD outputs from the decade counters are applied to inverter gates (IC8, IC9) which provide low-true BCD outputs at the Interface connector. In Option 003 instruments, the inverter gates are replaced by non-inverting drivers which provide high-true BCD outputs at the Interface connector. Jumpers on the A16B board permit selection of high-true (P) or low-true (N) logic for the overrange and polarity output lines.

4-97. Controller Section. The controller section of the Interface Assembly is located in the upper right portion of Schematic No. 9. This section is comprised of two 4-bit multiplexers (IC13 and IC14) and a Local/Remote control circuit (IC17B, IC18B). Each multiplexer has eight inputs and four outputs. Four of the inputs to each multiplexer come from the front panel controls and four come from the rear panel Interface connector, J1. The output lines go to the Function Switching Assembly (A8), the Phase Control Filter (A7), the Log Converter (A3/A4) and the Input Attenuators (A1/A2) to control the instrument functions. The multiplexers operate like 4-pole, double-throw switches where the four output lines are connected to either the front panel controls (Local) or the remote control lines (Remote). Switching is accomplished by applying a logical "1" (+5 V) or "0" (0 V) to IC13, IC14 pin 9 which connects to the Local/Remote line through NAND gate IC17B. With no input to the Local/Remote line or when local control is programmed by an external controller, the line is held positive causing the output of IC17B to go low. This disables the remote inputs to IC13 and IC14 and enables the inputs from the front panel controls. When ground is applied to the Local/Remote line, the output of IC17B goes high and control is transferred to the remote control lines. The eight remote control lines use ground true logic and are normally held in a "0" (False) condition by the pull-up resistors within R5.

4-98. Note that the local/remote line from the output of IC17B is also connected to a buffer/inverter stage, IC18B. When ground is applied to the Local/Remote line (Remote Control), the output of IC18B goes low supplying a "hold" to the panel meters. In the panel meters, the "hold" command disables the internal sampling and thereby inhibits measurements. In order to obtain meter readings or BCD outputs, it is then necessary to use external triggering. External triggering is accomplished by grounding the Remote/Measure line (J1 pin 21) which controls the timing circuits discussed in the following paragraphs. In some cases, it is desirable to use external triggering and, at the same time, control the instrument from the front panel. To accomplish this, a jumper is provided at the output of IC17B. When the jumper is connected between terminals 1 and 3 (gnd), the front panel controls remain operative and the remote lines that control front panel functions are disabled.

Section IV Model 3575A

4-99. Timing Circuits. In the Remote Control mode, it is necessary to trigger the panel meters by applying a momentary ground to the Remote Measure line each time a meter reading or BCD output is required. Grounding the Remote Measure line sets the data flag and initiates a variable time delay which, in turn, triggers the panel meters and initiates the measurement cycle.

4-100. The external trigger and flag timing circuit is shown in the lower right-hand portion of Schematic No. 9 and in the Timing Circuits Functional Block Diagram, Figure 4-14 Refer to Figure 4-14 for the following discussion.

4-101. The timing circuits are comprised of a Trigger Flip Flop, A Flag Flip Flop, a Variable Delay, a 40 ms Delay and associated logic circuitry. Before the timing circuits can operate, remote operation must be selected by grounding the Local/Remote line. This disables the internal sampling in the panel meters and enables the timing circuits. With the Local/Remote line grounded, it is further necessary to momentarily ground the Remote Measure line to initiate the timing sequence and trigger the panel meters. Grounding the Remote Measure line causes the output of IC16A to go high. This, in turn, initiates the Variable Time Delay and sets the Flag Flip Flop. Note that the two flip flops are set and reset by a low (0) rather than a high (1). This is the reason for the inverter between the output of IC16A and the "set" side of the Flag Flip Flop. When a "set" command is applied to the Flag Flip Flop, the + Data Flag line goes low and the - Data Flag line goes high. Since the + Flag line (\overline{Q}) is fed back to the input of IC16A, the output of IC16A remains high until the Flag Flip Flop is reset. The Variable Delay is initiated by a Logical 1 at the output of IC16A and controlled by the two frequency range lines, FR1 and FR2. Delay time is determined by the frequency range setting as indicated in Table 4-6. At the end of the delay period, the output of the Variable Delay circuit goes low applying a "set" command to the Trigger Flip-Flop. When "set", the Q side of the Trigger Flip-Flop

Table 4-6. Variable Time Delays.

Frequency	Variable
Range	Delay
1 Hz - 1 kHz	33 sec.
10 Hz - 100 kHz	3.3 sec.
100 Hz - 1 MHz	0.42 sec.
1 kHz - 13 MHz	0.02 sec.

goes low to trigger the panel meters. When the panel meters are triggered, the (L) Flag input from Panel Meter 1 goes high and remains high during the 100 ms measurement period. When the measurement is complete, the Flag line goes low, initiating the 40 ms time delay. When the 40 ms delay has elapsed, the output of the delay circuit goes low, applying a "reset" command to both flip-flops. This causes the panel meter Trigger line and the + Data Flag line to go high and the - Data Flag line to go low. Resetting the data flags indicates to an external controller that data is ready at the BCD outputs.

4-102. The purpose of the Variable Delay in the timing circuit is to ensure that the instrument has been given sufficient settling time before the data flags are returned. Since the actual settling time of the instrument is often less than the time provided by the Variable Delay circuit, the user may find it convenient to bypass the Variable Delay. This can be accomplished by applying a continuous ground to the Trigger Mode line. Grounding the Trigger Mode line disables the Variable Delay circuit and enables IC17A. When a momentary ground is applied to the Remote Measure line, the output of IC16A goes high, the output of IC17A goes low and the two flip-flops are set simultaneously. At the end of the 140 ms measurement cycle, both flip-flops are reset, the Trigger line goes high and the data flags are returned to their original states.

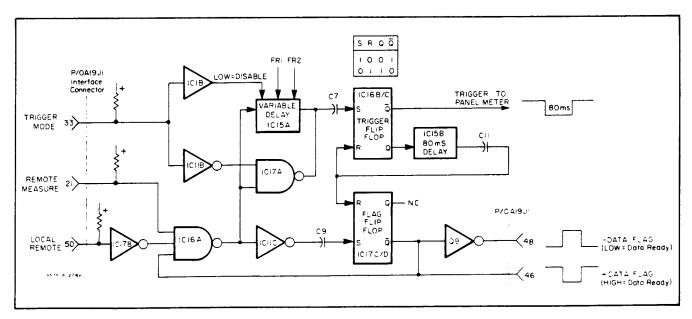


Figure 4-14. Timing Circuits Functional Block Diagram.

and four outputs. Four of the inputs to each multiplexer come from the front panel controls and four come from the rear panel Interface connector, J1. The output lines go to the Function Switching Assembly (A8), the Phase Control Filter (A7), the Log Converter (A3/A4) and the Input Attenuators (A1/A2) to control the instrument functions. The multiplexers operate like 4-pole, double-throw switches where the four output lines are connected to either the front panel controls (Local) or the remote control lines (Remote). Switching is accomplished by applying a logical "1" (+5 V) or "0" (0 V) to IC13, IC14 pin 9 which connects to the Local/Remote line through NAND gate IC17B. With no input to the Local/Remote line or when local control is programmed by an external controller, the line is held positive causing the output of IC17B to go low. This disables the remote inputs to IC13 and IC14 and enables the inputs from the front panel controls. When ground is applied to the Local/Remote line, the output of IC17B goes high and control is transferred to the remote control lines. The eight remote control lines use ground true logic and are normally held in a "0" (False) condition by the pull-up resistors within R5.

4.101. Note that the local/remote line from the output of IC17B is also connected to a buffer/inverter stage, IC18B. When ground is applied to the Local/Remote line (Remote Control), the output of IC18B goes low supplying a "hold" to the panel meters. In the panel meters, the "hold" command disables the internal sampling and thereby inhibits measurements. In order to obtain meter readings or BCD outputs, it is then necessary to use external triggering. I sternal triggering is accomplished by grounding the Remote/Measure line (J1 pin 21) which controls the timing circuits discussed in the following paragraphs. In some cases, it is desirable to use external triggering and, at the same time, control the instrument from the front panel. To accomplish this, a jumper is provided at the output of IC17B. When the jumper is connected between terminals I

and 3 (gnd), the front panel controls remain operative and the remote lines that control front panel functions are disabled.

4-102. Timing Circuits. In the Remote Control mode, it is necessary to trigger the panel meters by applying a momentary ground to the Remote Measure line each time a meter reading or BCD output is required. Grounding the Remote Measure line sets the data flag and initiates a variable time delay which, in turn, triggers the panel meters and initiates the measurement cycle.

4-103. The external trigger and flag timing circuit is shown in the lower right-hand portion of Schematic No. 9 and in the Timing Circuits Functional Block Diagram, Figure 4-15. Refer to Figure 4-15 for the following discussion.

4-104. The timing circuits are comprised of a Trigger Flip Flop, A Flag Flip Flop, a Variable Delay, a 40 ms Delay and associated logic circuitry. Before the timing circuits can operate, remote operation must be selected by grounding the Local/Remote line. This disables the internal sampling in the panel meters and enables the timing circuits. With the Local/Remote line grounded, it is further necessary to momentarily ground the Remote Measure line to initiate the timing sequence and trigger the panel meters. Grounding the Remote Measure line causes the output of IC16A to go high. This, in turn, initiates the Variable Time Delay and sets the Flag Flip Flop. Note that the two flip flops are set and reset by a low (0) rather than a high (1). This is the reason for the inverter between the output of IC16A and the "set" side of the Flag Flip Flop. When a "set" command is applied to the Flag Flip Flop, the + Data Flag line goes low and the - Data Flag line goes high. Since the + Flag line (\overline{Q}) is fed back to the input of IC16A, the output of IC16A remains high until the Flag Flip Flop is reset. The Variable Delay is initiated by a Logical 1 at the output of IC16A and controlled by the two frequency

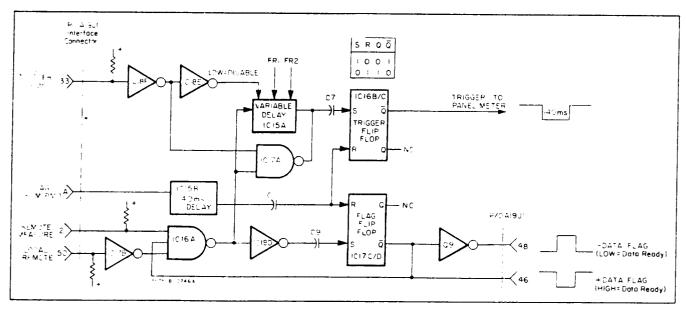


Figure 4-15. Timing Circuits Functional Block Diagram.


range lines, FR1 and FR2. Delay time is determined by the frequency range setting as indicated in Table 4-6. At the end of the delay period, the output of the Variable Delay circuit goes low applying a "set" command to the Trigger Flip-Flop. When "set", the Q side of the Trigger Flip-Flop goes low to trigger the panel meters. When the panel meters are triggered, the (L) Flag input from Panel Meter I goes high and remains high during the 100 ms measurement period. When the measurement is complete, the Flag line goes low, initiating the 40 ms time delay. When the 40 ms delay has elapsed, the output of the delay circuit goes low, applying a "reset" command to both flip-flops. This causes the panel meter Trigger line and the + Data Flag line to go high and the - Data Flag line to go low. Resetting the data flags indicates to an external controller that data is ready at the BCD outputs.

4-105. The purpose of the Variable Delay in the timing circuit is to ensure that the instrument has been given sufficient settling time before the data flags are returned. Since the actual settling time of the instrument is often less

Table 4-6. Variable Time Delays.

Frequency	Variable
Range	Delay
1 Hz - 1 kHz	33 sec
10 Hz - 100 kHz	3.3 sec
100 Hz - 1 MHz	0.42 sec
1 kHz - 13 MHz	0.02 sec

than the time provided by the Variable Delay circuit, the user may find it convenient to bypass the Variable Delay. This can be accomplished by applying a continuous ground to the Trigger Mode line. Grounding the Trigger Mode line disables the Variable Delay circuit and enables IC17A. When a momentary ground is applied to the Remote Measure line, the output of IC16A goes high, the output of IC17A goes low and the two flip-flops are set simultaneously. At the end of the 140 ms measurement cycle, both flip-flops are reset, the Trigger line goes high and the data flags are returned to their original states.

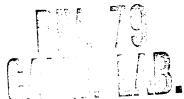

WARNING

Maintenance described herein is performed with power supplied to the instrument, and protective covers removed. Such maintenance should be performed only by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power applied, the power should be removed.

1,			



5-1. INTRODUCTION.

5-2. This section contains complete maintenance information for the Model 3575A Gain-Phase Meter. Included are performance checks, adjustment procedures, trouble-shooting techniques and instructions for the removal and replacement of various assemblies and components.

5-3. RECOMMENDED TEST EQUIPMENT.

5-4. The test equipment that is recommended for maintaining the Model 3575A is listed in Table 5-1. If the recommended model is not available, any instrument that has specifications equal to or better than the required specifications can be used.

Table 5-1. Recommended Test Equipment.

	T		Ī		
Instrument Type	Required Characteristics	Performance Checks	Adjustments	Trouble- Shooting	Recommended Model
DC Digital Voltmeter	Full Scale Ranges: 100 mV through 100 V Input Resistance: 10 Megohms Accuracy: 0.1% of reading	Х	х	х	-hp- 3450B
Frequency Synthesizer (See Note 1)	Frequency Range: 1 Hz to 13 MHz Output Levels: + 19 dBm to + 26 dBm (50 ohms) Amplitude Accuracy: 1 Hz to 10 Hz: ± 0.6 dB 10 Hz to 13 MHz: ± 0.1 dB	х	х	х	-hp- 3320B
Variable Attenuator	Attenuation: 80 dB in 10 dB steps Frequency Range: 1 Hz to 13 MHz Accuracy: ± 0.3 dB (or of known accuracy) Impedance: 50 ohms	х	х		-hp- 355D
Power Amplifier	Voltage Gain: X10 (20 dB) Maximum Output: 20 V p-p Frequency Range: 1 Hz to 1 MHz Accuracy: 1 Hz to 100 kHz: ±1% 100 kHz to 1 MHz: ±5% (or of known accuracy)	X			-hp- 467A
Oscilloscope	Sensitivity: 0.005 V/cm to 10 V/cm Sweep: 0.05 µsec/cm to 0.1 sec/cm			х	-hp- 180C
Voltage Divider Probe (for oscilloscope)	Division: 10:1 Impedance: 10 Megohms, 10 pF			х	-hp- 10004A
DC Power Supply	Variable Range: -12 V dc to + 12 V dc			X	-hp- 467A
Variable Phase Generator (See Note 2)	Output Frequency: 1 kHz Output Level: 2 V rms Variable Phase Range: 0° to 360°			х	-hp- 203A
Power Splitter (See Figure 5-1)	Impedance: 50 ohms	х	х		See Figure 5-1
R/C Phase Shift Network (See Figure 5-4)	Phase Shift: 90 degrees Frequency Range: 100 Hz to 13 MHz	x		·	See Figure 5-4
Terminations	50-Ohm Feed-Thru (2 required)	x	x	x	-hp- 11048C
Cables	(1) 48" 50-Ohm Cable (BNC connectors) (2) 24" 50-Ohm Cables (BNC connectors) (1) 9" 50-Ohm Cable (BNC connectors)	X X X		<u>.</u>	-hp- 11170C -hp- 11170B -hp- 10502A
Connector	Male-to-Male	x			-hp-1250-0216
Adapters	(2) BNC to Binding Post Adapters (1) BNC "T" Connector	X X			-hp- 10110A
Resistor	R: fxd flm 1 Megohm ± 1% 1/2 W	х			-hp- Part No. 0757-0059

NOTES

- 1. If a Frequency Synthesizer is not available, a Test Oscillator such as the -hp- Model 651B can be used on a limited basis.
- 2. A dc power supply with a variable range of -2 V dc to + 2 V dc (-hp- Model 467A) can be used in place of the Variable Phase Generator for troubleshooting.

5-5. PERFORMANCE CHECKS.

5-6. The following performance checks are in-cabinet procedures that can be used to verify that the Model 3575 A meets the specifications listed in Table 1-1. These procedures can be used for incoming quality control inspection, to check specifications after a repair or for routine maintenance.

5-7. Test Card.

5-8. A Performance Check Test Card is provided at the end of this section for your convenience in recording the performance of the Model 3575A during performance checks. This card can be removed from the manual and used as a permanent record of the incoming inspection or of a routine performance check. The test card may be reproduced without written permission from Hewlett-Packard.

5-9. Panel Meter Accuracy Check.

5-10. The purpose of this check is to verify that the panel meter accuracy is within the ± 3 count (± 0.3 dB, ± 0.3 deg.) tolerance listed in Table 1-1. If the panel meter fails to meet the required specifications, perform the Panel Meter Accuracy Adjustments (Paragraph 5-29) before proceeding with the other performance checks in this section.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A)
Frequency Synthesizer (-hp- Model 3320B)
Variable Attenuator (-hp- Model 355D)
(2) 50-Ohm Feed-Thru Terminations (-hp- Model 11048C)
50-Ohm Power Splitter (See Figure 5-1)

a. Connect test equipment as shown in Figure 5-2. Connect DC Digital Voltmeter to ANALOG OUTPUT 1.

b. Set the 3575A controls as follows:

- c. Set the Frequency Synthesizer amplitude to +25.05 dBm (2 V rms at outputs of Power Splitter) and frequency to 1 kHz.
 - d. Set the Variable Attenuator to 0 dB.
 - e. Allow 30 seconds for the readings to stabilize.
- f. Observe the DC Digital Voltmeter reading and the B/A panel meter reading. The panel meter reading should be within \pm 3 counts of the DVM reading e.g., the analog output voltage is 10 mV per dB. An output of +1 mV dc should, therefore, produce a panel meter reading of +00.1 dB \pm 0.3 dB (3 counts).
- g., Set the Variable Attenuator to 80 dB and allow 30 seconds for the readings to stabilize.
- h. Observe the DVM reading and the B/A panel meter reading. The panel meter reading should be within ± 3 counts of the DVM reading e.g., if the DVM reading is -0.797 Vdc, the panel meter reading should be -79.7 dB ± 0.3 dB.

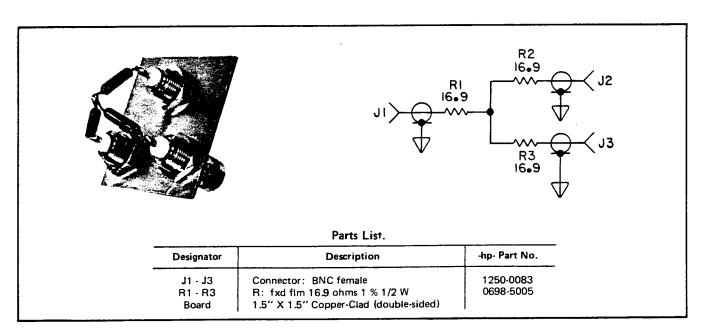


Figure 5-1. Power Splitter.

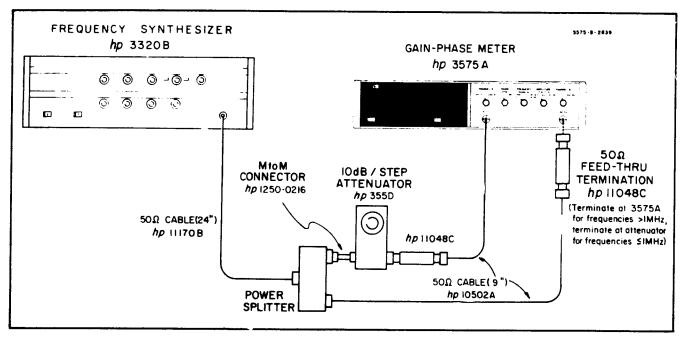


Figure 5-2. Amplitude and Phase Accuracy Checks.

- i. Without disturbing the 3575A or test equipment control settings, reverse the input connections to the 3575A so the Variable Attenuator is connected to Channel A and the Power Splitter is connected to Channel B. Allow 30 seconds for the readings to stabilize.
- j. Observe the DVM reading and the B/A panel meter reading. The panel meter reading should be within ± 3 counts of the DVM reading e.g., if the DVM reading is +0.802 Vdc, the panel meter reading should be +80.2 dB ± 0.3 dB.
- k. Options 001-003: Perform the following additional steps to verify the accuracy of the right-hand (phase) panel meter.
- 1. Connect the DC Digital Voltmeter to ANALOG OUTPUT 2.
- m. Set the Variable Attenuator to 0 dB and allow 30 seconds for the readings to stabilize.
- n. Observe the DVM reading and the right-hand panel meter reading. The panel meter reading should be within \pm 3 counts of the DVM reading.
- o. Set the PHASE REFERENCE switch to the A position and allow 30 seconds for the readings to stabilize.
- p. Observe the DVM reading and the right-hand panel meter reading. The panel meter reading should be within ± 3 counts of the DVM reading.

5-11. Amplitude and Phase Accuracy Checks.

5-12. The purpose of these checks is to very that the 3575A meets the amplitude and phase accuracy specifi-

cations listed in Table 1-1. Read Section III, Paragraphs 3-13 to 3-16 before performing the following tests. If the 3575A fails to meet any of the required specifications, perform the adjustments outlined in Paragraphs 5-25 through 5-46.

NOTE

The checks outlined in the following procedure will verify the 3575A phase accuracy at 0 degrees and 180 degrees at critical levels and frequencies throughout the operating range of the instrument. Satisfactory performance during these checks is reasonable verification that the phase detector circuits are operating properly. Marginal performance, however, may reflect a misadjustment or malfunction that could degrade the overall performance and produce readings that are out of tolerance at points other than 0 degrees and 180 degrees. If performance appears marginal or if further verification of phase accuracy is desired, "spot check" the 45 degree points and/or the 90 degree points using a precision phase generator or refer to the Supplemental Phase Accuracy Check outlined in Paragraph 5-17.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B) Variable Attenuator (-hp- Model 355D)

- (2) 50-Ohm Feed-Thr. Terminations (-hp- Model 11048C)
- 50-Ohm Power Splitter (See Figure 5-1)
- (1) 48" 50-Ohm Cable with BNC connectors (-hp-11170C)
- (2) 24" 50-Ohm Cables with BNC connectors (-hp-11170B)
- (1) 9" 50-Ohm Cable with BNC connectors (-hp-10502A)

- a. Connect test equipment as shown in Figure 5-2. Note that the cable lengths are critical and must be as specified in Figure 5-2.
- b. Turn on all equipment and allow a warmup period of at least 1 hour before proceeding.
 - c. Set the 3575 A controls as follows:

DISPLAY*	. AMPLITUDE
AMPLITUDE FUNCTION	B
Voltage Range	. 0.2 mV - 2 V
(1	ooth channels)
FREQUENCY RANGE	.1 Hz - 1 kHz
PHASE REFERENCE	A

- *Options 001-003: Set the AMPLITUDE B/PHASE switch to PHASE so that amplitude and phase can be observed simultaneously. Disregard any further references to the DISPLAY switch in the following steps.
- d. Set the Frequency Synthesizer amplitude to + 25.05 dBm (2 V rms at outputs of Power Splitter) and frequency to 1 Hz with Leveling switch to OFF.
 - e. Set the Variable Attenuator to 0 dB.
 - f. Allow time for the 3575 A reading to stabilize.
- g. The channel B amplitude reading (B dBV) should be within the tolerances listed in Table 5-2 for the corresponding input frequency and attenuator setting.
- h. Set the AMPLITUDE FUNCTION switch to B/A and allow time for the reading to stabilize.
- i. The B/A reading should be within the tolerances listed in Table 5-2 for the corresponding input frequency and attenuator setting.
- j. Reset the AMPLITUDE FUNCTION switch to B. Set the DISPLAY switch to PHASE and allow time for the phase reading to stabilize.
- k. The 3575A phase reading should be 0 degrees ± tolerances listed in Table 5-2 for the corresponding input frequency and attenuator setting.
 - 1. Reset the DISPLAY switch to AMPLITUDE.
- m. Repeat Steps f through l for each input frequency and attenuator setting listed in Table 5-2. For frequencies greater than 10 Hz, the 3320B Leveling switch must be set to ON. Note that the 3575A Voltage Range and Frequency Range switches must be set as indicated in the table. For most of the checks listed in Table 5-2, the Voltage Range switches should be set to the 0.2 mV 2 V position. At various points in the table, however, the 2 mV to 20 V range is specified. The reason for this is to spot check the amplitude readings on the high range. These particular

checks do not apply to phase since phase must be measured on the lowest applicable range.

NOTE

When the point is reached where the input frequency is 1 MHz and above, reverse the Channel A input connection so that both signals are terminated at the 3575A input connectors.

- n. Again reverse the Channel A input connection so the termination is at the output of the Power Splitter as shown in Figure 5-2. Connect the terminated output from the Power Splitter to Channel B and the terminated output from the Variable Attenuator to Channel A.
 - o. Set the 3575A controls as follows:

DISPLAY	AMPLITUDE
AMPLITUDE FUNCTIO	N A
Voltage Range	0.2 mV - 2 V
	(both channels)
FREQUENCY RANGE	1 Hz - 1 kHz
PHASE REFERENCE.	A

- p. Set the Frequency Synthesizer amplitude to + 25.05 dBm, frequency to 1 Hz and Leveling to OFF.
 - q. Set the Variable Attenuator to 0 dB.
 - r. Allow time for the 3575A reading to stabilize.
- s. The channel A amplitude reading (A dBV) should be within the tolerances listed in Table 5-2 for the corresponding input frequency and attenuator setting.
- t. Set the AMPLITUDE FUNCTION switch to B/A and allow time for the reading to stabilize.
- u. The B/A reading should be within the tolerances listed in Table 5-2 for the corresponding input frequency and attenuator setting.
- v. Reset the AMPLITUDE FUNCTION switch to A and PHASE REFERENCE to A. Set the DISPLAY switch to PHASE and allow time for the phase reading to stabilize.
- w. The 3575A phase reading should be 180 degrees or + 180 degrees ± tolerances listed in Table 5-2 for the corresponding input frequency and attenuator setting.
 - x. Reset the DISPLAY switch to AMPLITUDE.
- y. Repeat Steps r through x for each input frequency and attenuator setting listed in Table 5-2. For frequencies greater than 10 Hz, the 3320B Leveling switch must be set to ON. Use the Voltage Range and Frequency Range settings indicated in the table.

NOTE

When the point is reached where the input frequency is 1 MHz and above, reverse the Channel B input connection so that both signals are terminated at the 3575A input connectors.

Table 5-2. Amplitude and Phase Accuracy Checks.

			·	,		
Input	Variable	Voltage	Frequency	A OR B	B/A	Phase
Frequency	Attenuator	Range	Range	(dBV)	(+ or - dB)	(0 ⁰ or 180 ⁰)
1 Hz	0 dB	0.2 mV - 2 V	1 Hz - 1 kHz	+ 6.0 ± 1.3	00.0 ± 1.3	± 0.8
1 Hz	30 dB	0.2 mV - 2 V	1 Hz · 1 kHz	- 24.0 ± 1.3	30.0 ± 1.3	± 0.8
1 Hz	40 dB	0.2 mV - 2 V	1 Hz - 1 kHz	34.0 ± 1.3	40.0 ± 1.3	± 1.3
•		0.2 mV - 2 V	1 Hz - 1 kHz	- 44.0 ± 1.3	50.0 ± 1.8	± 2.3
1 Hz	50 dB			- 44.0 ± 1.3	50.0 ± 1.8	· 2.5
1 Hz	50 dB	2 mV - 20 V	1 Hz - 1 kHz	-44.0 ± 1.3	50.0 ± 1.8	
1 Hz	60 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 54.0 ± 1.3	60.0 ± 1.8	± 5.3
1 Hz	70 dB	0.2 mV - 2 V	1 Hz - 1 kHz	-64.0 ± 1.3	70.0 ± 1.8	*****
1 Hz	80 dB	0.2 mV - 2 V	1 Hz - 1 kHz	· 74.0 ± 2.3	80.0 ± 2.8	
10 Hz	0 dB	0.2 mV - 2 V	1 Hz - 1 kHz	+6.0 ± 1.3	00.0 ± 1.3	± 0.8
10 Hz	40 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 34.0 ± 1.3	40.0 ± 1.3	± 0.8
10 Hz	50 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 44.0 ± 1.3	50.0 ± 1.8	± 1.3
10 Hz	50 dB	2 mV - 20 V	1 Hz - 1 kHz	- 44.0 ± 1.3	50.0 ± 1.8	
10 Hz	60 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 54.0 ± 1.3	60.0 ± 1.8	± 2.3
10 Hz	70 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 64.0 ± 1.3	70.0 ± 1.8	± 5.3
10 Hz		0.2 mV - 2 V	1 Hz - 1 kHz	- 74.0 ± 2.3	80.0 ± 2.8	± 10.3
10 112	80 dB	0.2 mv - 2 v	1 112 - 1 K112	74.0 1 2.3	00.0 = 2.0	_ 10.5
200 Hz	0 dB	0.2 mV - 2 V	1 Hz - 1 kHz	+ 6.0 ± 1.3	00.0 ± 1.3	± 0.8
200 Hz	40 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 34.0 ± 1.3	40.0 ± 1.3	± 0.8
200 Hz	50 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 44.0 ± 1.3	50.0 ± 1.8	± 1.3
200 Hz	50 dB	2 mV - 20 V	1 Hz - 1 kHz	- 44.0 ± 1.3	50.0 ± 1.8	
200 Hz	60 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 54.0 ± 1.3	60.0 ± 1.8	± 2.3
200 Hz	70 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 64.0 ± 1.3	70.0 ± 1.8	± 5.3
200 Hz	80 dB	0.2 mV - 2 V	1 Hz - 1 kHz	-74.0 ± 2.3	80.0 ± 2.8	± 10.3
500 Hz	0 dB	0.2 mV - 2 V	1 Hz - 1 kHz	+6.0 ± 1.3	00.0 ± 1.3	± 0.8
500 Hz	30 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 24.0 ± 1.3	30.0 ± 1.3	± 0.8
500 Hz	40 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 34.0 ± 1.3	40.0 ± 1.3	± 1.3
500 Hz	50 dB	0.2 mV - 2 V	1 Hz - 1 kHz	- 44.0 ± 1.3	50.0 ± 1.8	± 1.3
500 Hz	50 dB	2 mV - 20 V	1 Hz - 1 kHz	-44.0 ± 1.3	50.0 ± 1.8	
2 kHz	60 dB	0.2 mV - 2 V	10 Hz - 100 kHz	- 54.0 ± 1.3	60.0 ± 1.8	± 2.3
5 kHz	70 dB	0.2 mV - 2 V	10 Hz - 100 kHz	- 64.0 ± 1.3	70.0 ± 1.8	± 5.3
20 kHz	0 dB	0.2 mV - 2 V	10 Hz - 100 kHz	+ 6.0 ± 1.3	00.0 ± 1.3	± 0.8
50 kHz	0 dB	0.2 mV - 2 V	10 Hz - 100 kHz	+ 6.0 ± 1.3	00.0 ± 1.3	± 1.3
50 kHz	30 dB	0.2 mV - 2 V	10 Hz - 100 kHz	- 24.0 ± 1.3	30.0 ± 1.3	± 5.3
50 kHz	40 dB	0.2 mV - 2 V	10 Hz - 100 kHz	- 34.0 ± 1.3	40.0 ± 1.3	± 5.3
50 kHz	60 dB	0.2 mV - 2 V	10 Hz - 100 kHz	- 54.0 ± 1.3	60.0 ± 1.8	± 10.3
50 kHz	60 dB	2 mV - 20 V	10 Hz - 100 kHz	- 54.0 ± 2.3	60.0 ± 2.8	
			1011 100111	740.00	00.0 . 0.0	. 10.0
50 kHz	80 dB	0.2 mV - 2 V	10 Hz - 100 kHz	-74.0 ± 2.3	80.0 ± 2.8	± 10.3
100 kHz	0 dB	0.2 mV - 2 V	10 Hz - 100 kHz	+ 6.0 ± 1.3	00.0 ± 1.3 50.0 ± 1.8	± 1.3
100 kHz	50 dB	0.2 mV - 2 V	10 Hz - 100 kHz	-44.0 ± 1.3		± 5.3
100 kHz 200 kHz	70 dB 0 dB	0.2 mV - 2 V 0.2 mV - 2 V	10 Hz - 100 kHz 100 Hz - 1 MHz	- 64.0 ± 1.3 + 6.0 ± 1.3	70.0 ± 1.8 00.0 ± 1.3	± 10.3 ± 2.3
200 KHZ	סטט	0,2 mv - 2 V	100 112 - 1 19812	. 0.0 1 1.0	22.5 - 1.0	
200 kHz	80 dB	0.2 mV - 2 V	100 Hz - 1 MHz	- 74.0 ± 2.3	80.0 ± 2.8	± 10.3
1 MHz	0 dB	0.2 mV - 2 V	100 Hz - 1 MHz	+ 6.0 ± 1.3	00.0 ± 1.3	± 5.3
1 MHz	30 dB	2 mV - 20 V	100 Hz - 1 MHz	- 24.0 ± 2.3	30.0 ± 2.8	
1 MHz	40 dB	0.2 mV - 2 V	100 Hz - 1 MHz	- 34.0 ± 1.3	40.0 ± 1.8	± 10.3
1°MHz	50 dB	0.2 mV - 2 V	100 Hz - 1 MHz	- 44.0 ± 2.3	50.0 ± 2.8	± 10.3
1 840-	פט אם	0.2 mV 2.V	100 Hz - 1 MHz	- 54.0 ± 2.3	60.0 ± 2 .8	± 10.3
1 MHz	60 dB	0.2 mV - 2 V	100 Hz - 1 MHz	- 74.0 ± 2.3	80.0 ± 2.8	± 20.3
1 MHz	80 dB	0.2 mV - 2 V	1 kHz - 13 MHz	+ 6.0 ± 2.3	00.0 ± 2.8	± 5.3
2 MHz	0 dB	0.2 mV - 2 V	1 kHz - 13 MHz	· 44.0 ± 2.3	50.0 ± 3.3	± 10.3
2 MHz 2 MHz	50 dB 80 dB	0.2 mV - 2 V 0.2 mV - 2 V	1 kHz - 13 MHz	- 74.0 ± 2.3	80.0 ± 4.3	± 20.3
5 MHz	0 dB	0.2 mV - 2 V	1 kHz - 13 MHz	+ 6.0 ± 2.3	00.0 ± 2.3	± 10.3
5 MHz	40 dB	0.2 mV - 2 V	1 kHz - 13 MHz	- 34.0 ± 2.3	40.0 ± 3.3	± 20.3
5 MHz	60 dB	0.2 mV - 2 V	1 kHz - 13 MHz	- 54.0 ± 2.3	60.0 ± 3.3	
13 MHz	0 d B	0.2 mV - 2 V	1 kHz - 13 MHz	+ 6.0 ± 2.3	00.0 ± 2.3	± 20.3
13 MHz	20 dB	0.2 mV - 2 V	1 kHz - 13 MHz	- 14.0 ± 2.3	20.0 ± 3.3	± 20.3
13 MHz	40 dB	2 mV - 20 V	1 kHz - 13 MHz	- 34.0 ± 2.3	40.0 ± 3.3	
13 MHz	60 dB	0.2 mV - 2 V	1 kHz - 13 MHz	- 54.0 ± 2.3	60.0 ± 3.3	
13 MHz	80 dB	0.2 mV - 2 V	1 kHz - 13 MHz	- 74.0 ± 3.3	80.0 ± 4.3	

5-13. High Level Accuracy Checks.

5-14. The purpose of these checks is to verify that the 3575A meets the amplitude and phase accuracy specifications with the Voltage Range switches set to the 2 mV - 20 V position. These checks are performed with 20 V rms applied to both inputs.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)*
Power Amplifier (-hp- Model 467A)
50-Ohm Feed-Thru Termination (-hp- Model 11048C)

- * A Test Oscillator such as the -hp- Model 651B can be used in place of the Frequency Synthesizer.
- a. Connect the 50-Ohm output of the Frequency Synthesizer, terminated in 50-ohm load, to the input of the Power Amplifier. Using a BNC Tee connector and two equal length cables with BNC connectors, connect the Power Amplifier output to the 3575A inputs.
 - b. Set the 3575A controls as follows:

DISPLAY*	AMPLITUDE
AMPLITUDE FUNCTI	ON A
Voltage Range	2 mV - 20 V
	(both channels)
FREQUENCY RANGE	E 1 Hz - 1 kHz
PHASE REFERENCE	A

- *Options 001-003: Set the AMPLITUDE B/PHASE switch to PHASE so that amplitude and phase can be observed simultaneously. Disregard any further references to the DISPLAY switch in the following steps.
- c. Set the Power Amplifier gain to X10.
- d. Set the Frequency Synthesizer amplitude to + 19.03 dBm (2 V rms/50 ohms) and frequency to 1 Hz.
 - e. Allow time for the reading to stabilize.
- f. The channel A amplitude reading (A dBV) should be \pm 26.0 dBV \pm 1.3 dBV.
- g. Set the DISPLAY switch to PHASE and allow time for the phase reading to stabilize.
- h. The 3575A phase reading should be 0 degrees ± tolerances listed in Table 5-3 for the corresponding input frequency.
 - i. Reset the DISPLAY switch to AMPLITUDE.
- j. Repeat Steps e through i with the Frequency Synthesizer set to each frequency listed in Table 5-3. Note

Table 5-3. High Level Accuracy Checks.

Input Frequency	Frequency Range	Phase (0 ⁰ or 180 ⁰)
1 Hz	1 - 1 K	± 0.8 deg.
10 Hz	1 - 1 K	± 0.8 deg.
100 Hz	1 - 1 K	± 0.8 deg.
1 kHz	1 - 1 K	± 0.8 deg.
10 kHz	10 - 100 K	± 0.8 deg.
20 kHz	10 - 100 K	± 0.8 deg.
50 kHz	10 - 100 K	± 1.3 deg.
200 kHz	100 - 1 M	± 2.3 deg.
1 MHz	100 - 1 M	± 5.3 deg.

that the 3575A Frequency Range switch must be set as indicated in the table.

- k. Set the Frequency Synthesizer frequency to 1 Hz.
- 1. Set the 3575A controls as follows:

DIODI 411

DISPLAY	. AMPLITUDE
AMPLITUDE FUNCTION	
Voltage Range	
	(both channels)
FREQUENCY RANGE	1 Hz -1 kHz
PHASE REFERENCE	- Δ

- m. Allow time for the reading to stabilize.
- n. The channel B amplitude reading (B dBV) should be \pm 26.0 dBV \pm 1.3 dBV.
- o. Set the PHASE REFERENCE to A and the DISPLAY switch to PHASE and allow time for the phase reading to stabilize.
- p. The 3575A phase reading should be 180 degrees or + 180 degrees ± tolerances listed in Table 5-3 for the corresponding input frequency.
 - q. Reset the DISPLAY switch to AMPLITUDE.
- r. Repeat Steps m through q with the Frequency Synthesizer set to each frequency listed in Table 5-3.

5-15. Shunt Capacitance Check.

5-16. The purpose of this check is to verify that both channels meet the < 30 pF shunt capacitance specification listed in Table 1-1.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)*
(2) 50-Ohm Feed-Thru Terminations (-hp- Model 11048C)
50-Ohm Power Splitter (See Figure 5-1)
Resistor: 1 Megohm, ± 1 % 1/2 W (-hp- Part No. 0757-0059)

* A Test Oscillator such as the -hp- Model 651B can be used in place of the Frequency Synthesizer.

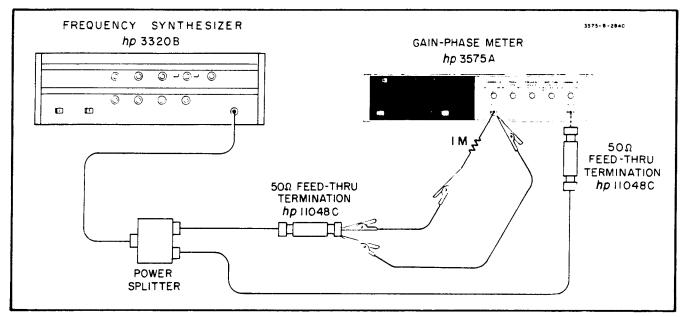


Figure 5-3. Shunt Capacitance Check.

- a. Connect test equipment as shown in Figure 5-3. Insert one end of the 1 Megohm resistor into the Channel A input connector and connect the other end directly to the Feed-Thru Termination using a short clip lead. Use another short clip lead to connect the outer shield of the Feed-Thru Termination to the outer shield of the Channel A input connector.
 - b. Set the 3575A controls as follows:

DISPLAY*PHAS	Ł
Voltage Range 0.2 mV - 2	V
(both channels	s)
FREQUENCY RANGE . 100 Hz - 1 MH	z
PHASE REFERENCE	A

- * Options 001-003: Set the AMPLITUDE B/PHASE switch to PHASE.
- c. Set the frequency Synthesizer amplitude to +19.03~dBm (1 V rms at outputs of Power Splitter) and frequency to 10.6~kHz.
 - d. Allow time for the phase reading to stabilize.
- e. The absolute value of the phase reading should be 45 degrees or less, verifying the < 30 pF shunt capacitance specification for the low range on channel A.
- f. Set the Channel A Voltage Range switch to the 2 mV 20 V position and allow time for the phase reading to stabilize.
- g. The absolute value of the phase reading should be 45 degrees or less, verifying the <30 pF shunt capacitance specification for the high range on channel A. Reset the Channel A range switch to the 0.2 mV 2 V position.

- h. Reverse the Channel A and Channel B input connections so the 1 Megohm resistor is in series with the Channel B input.
 - i. Allow time for the phase reading to stabilize.
- j. The absolute value of the phase reading should be 45 degrees or less, verifying the <30 pF shunt capacitance specification for the low range on channel B.
- k. Set the Channel B Voltage Range switch to the 2 mV 20 V position and allow time for the phase reading to stabilize.
- 1. The absolute value of the phase reading should be 45 degrees or less, verifying the <30 pF shunt capacitance specification for the high range on channel B.

5-17. Supplemental Phase Accuracy Check.

5-18. The purpose of this check is to supplement the phase accuracy checks outlined in Paragraph 5-12. This check is included for the benefit of those who do not have a precision phase generator and desire to further verify the 3575A phase accuracy at 90 degrees. The test equipment required for this procedure includes a simple R/C phase shift network such as the one shown in Figure 5-4. The circuit shown in Figure 5-4 will produce an accurate 90 degree phase shift over the frequency range of 100 Hz to 13 MHz.

RECOMMENDED TEST EOUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)*
50-Ohm Feed-Thru Termination (-hp- Model 11048C)
(2) BNC to Binding Post Adapters (-hp- 10110A)
R/C Phase Shift Network (See Figure 5-4)

* A Test Oscillator such as the -hp- Model 651B can be used in place of the Frequency Synthesizer.

- a. Consruct an R/C network as shown in Figure 5-4.
- b. Connect the two BNC to Binding Post Adaptors to the 3575A input connectors.
- c. Connect the output leads of the R/C network to the 3575A inputs as shown in Figure 5-4. The leads from the R/C network to the 3575A should be of equal length and as short as possible.
- d. Connect the 50-ohm output of the Frequency Synthesizer, terminated in 50-ohm load, to the input (J1) of the R/C network. Use a 50-ohm shielded cable to connect the Frequency Synthesizer output to the Feed-Thru Termination.
 - e. Set the 3575 A controls as follows:

DISPLAY	PH ASE
Voltage Range	
	(both channels)
FREQUENCY RANGE	Set to lowest
a	pplicable range.
PHASE REFERENCE	A

f. Set the Frequency Synthesizer amplitude to + 19.03 dBm (2 V rms/50 ohms). Set the frequency controls to provide the desired frequency.

NOTE

Refer to the Phase Accuracy specification listing in Table 1-1 (Section I) to determine the Phase error tolerance for the corresponding input levels and frequency. Add \pm 0.3 degrees to phase error tolerances to allow for panel meter error.

g. The phase reading should be +90 degrees or -90 degrees \pm tolerances listed in Table 1-1. Add \pm 0.3 degrees to phase error tolerances to allow for panel meter error. Due to the response of the R/C network, the input levels will vary with frequency. Use the 3575A amplitude functions to measure the input levels and use the lower level to determine the phase accuracy specification.

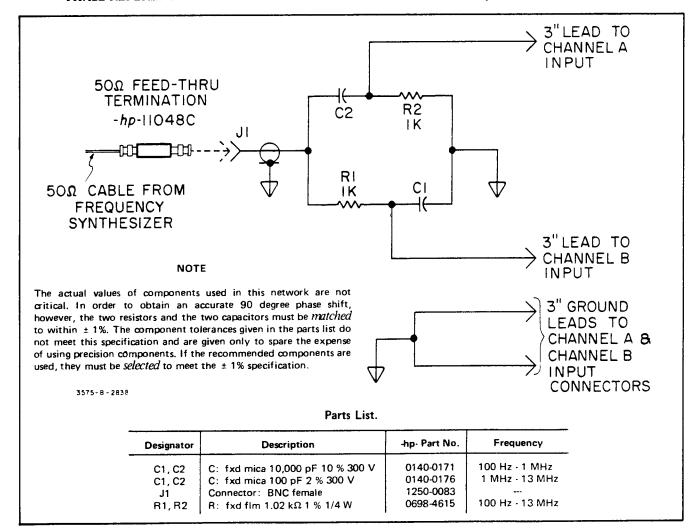


Figure 5-4. R/C Phase Shift Network.

PERFORMANCE CHECK TEST CARD

Hewlett-Packard Model 3575A Gain-Phase Meter	Tests Performed By
Serial No	Date

PANEL METER ACCURACY CHECK

Attenuator Setting	DVM Reading	Panel Meter Reading
0 dB 80 dB 80 dB 0dB 0 dB	mV mV mV V	dB dB deg. deg.

Test Limit: ± 0.3 dB, ± 0.3 deg.

AMPLITUDE AND PHASE ACCURACY CHECKS

1 Hz 4 1 Hz 5 1 Hz 6 1 Hz 6 1 Hz 7	0 dB 30 dB 40 dB 50 dB 50 dB 60 dB 70 dB		24.0 ± 1.3 34.0 ± 1.3 44.0 ± 1.3 44.0 ± 1.3					 ± 0.8 ± 1.3	
1 Hz	30 dB 40 dB 50 dB 50 dB		24.0 ± 1.3 34.0 ± 1.3 44.0 ± 1.3 44.0 ± 1.3			30.0 ± 1.3 40.0 ± 1.3 50.0 ± 1.8		 ± 0.8 ± 1.3	
1 Hz 4 1 Hz 5 1 Hz 6 1 Hz 6 1 Hz 7	40 dB 50 dB 50 dB		24.0 ± 1.3 34.0 ± 1.3 44.0 ± 1.3 44.0 ± 1.3			30.0 ± 1.3 40.0 ± 1.3 50.0 ± 1.8		 ± 0.8 ± 1.3	
1 Hz	50 dB 50 dB		34.0 ± 1.3 44.0 ± 1.3 44.0 ± 1.3			40.0 ± 1.3 50.0 ± 1.8		 ± 1.3	
1 Hz 6	50 dB 60 dB		44.0 ± 1.3		1	50.0 ± 1.8			
1 Hz 6	60 dB						i		
1 Hz 7			540.45					 ********	
1 Hz 7			540						
,	70 dB		54.0 ± 1.3			60.0 ± 1.8		 ± 5.3	
	1		64.0 ± 1.3			70.0 ± 1.8			····
1 Hz 8	80 dB		74.0 ± 2.3			80.0 ± 2.8		 	
10 Hz	0 dB		$+6.0 \pm 1.3$			00.0 ± 1.3		 ± 0.8	
10 Hz 4	40 dB		34.0 ± 1.3			40.0 ± 1.3		 ± 0.8 _	
10.11-	50.10								
						50.0 ± 1.8	j.	 ± 1.3	
-				_		50.0 ± 1.8		 	
						60.0 ± 1.8		 ± 2.3 -	
•	. 1					70.0 ± 1.8		 ± 5.3 -	
10 Hz 8	80 dB		74.0 ± 2.3 .			80.0 ± 2.8		 ± 10.3	
200 Hz	0 dB		+6.0 ± 1.3	į		00.0 ± 1.3		 ± 0.8 _	
				I		40.0 ± 1.3		_ 0.0 _	
200 Hz 5				1		40.0 ± 1.3 50.0 ± 1.8		_ 0.0 _	
200 Hz 5	I .	4				50.0 ± 1.8	Į.	÷ 1.5 -	
								± 2.3 _	

PERFORMANCE CHECK TEST CARD (Cont'd)

AMPLITUDE AND PHASE ACCURACY CHECKS (Cont'd)

			AMPLITUDE					TD!	Di.	Phase
Input Frequency	Variable Attenuator	B (dBV)	A OR B (dBV)	A (dBV)	B/A (+ or - dB)	B/A (+ or - dB)	B/A (+ or - dB)	Phase (0°)	Phase (0° or 180°)	
200Hz	70 dB		- 64.0 ± 1.3			70.0 ± 1.8			± 5.3	
200 Hz	80 dB		-74.0 ± 2.3			80.0 ± 2.8			± 10.3	
500 Hz	0 dB		+6.0 ± 1.3		B	00.0 ± 1.3			± 0.8	
500 Hz	30 dB		- 24.0 ± 1.3			30.0 ± 1.3			± 0.8	
500 Hz	40 dB		- 34.0 ± 1.3			40.0 ± 1.3			± 1.3	
30012										
500 Hz	50 dB		- 44.0 ± 1.3			50.0 ± 1.8		 	± 1.3	
500 Hz	50 dB		- 44.0 ± 1.3			50.0 ± 1.8		l		
2 kHz	60 dB		- 54.0 ± 1.3			60.0 ± 1.8			± 2.3	
5 kHz	70 dB		- 64.0 ± 1.3			70.0 ± 1.8			± 5.3	
20 kHz	0 dB		+6.0 ± 1.3		ł	00.0 ± 1.3			± 0.8	
20 1112	0.22									
50 kHz	0 dB		+6.0 ± 1.3			00.0 ± 1.3			± 1.3	
50 kHz	30 dB		- 24.0 ± 1.3			30.0 ± 1.3			± 5.3	
50 kHz	40 dB		- 34.0 ± 1.3			40.0 ± 1.3			_ ± 5.3	
50 kHz	60 dB		- 54.0 ± 1.3			60.0 ± 1.8			± 10.3	
50 kHz	60 dB		- 54.0 ± 2.3			60.0 ± 2.8				
30	34							1		
50 kHz	80 dB		-74.0 ± 2.3			80.0 ± 2.8			± 10.3	
100 kHz	0 dB					00.0 ± 1.3			- ± 1.3	
100 kHz	50 dB		- 44.0 ± 1.3			50.0 ± 1.8				
100 kHz	70 dB		-64.0 ± 1.3			70.0 ± 1.8		i		
200 kHz	0 dB		$+6.0 \pm 1.3$		1	00.0 ± 1.3		1		
200 KHZ	0 42					00.0 = 1.5				
200 kHz	80 dB		-74.0 ± 2.3		<u> </u>	80.0 ± 2.8			± 10.3	
1 MHz	0 dB		+6.0 ± 1.3			00.0 ± 1.3			± 5.3	
1 MHz	30 dB		- 24.0 ± 2.3		1	30.0 ± 2.8		ļ		
1 MHz	40 dB	ĺ	- 34.0 ± 1.3			40.0 ± 1.8			± 10.3	
1 MHz	50 dB		- 44.0 ± 2.3			50.0 ± 2.8			± 10.3	
1 1/1112	30 02		•							
1 MHz	60 dB		- 54.0 ± 2.3			60.0 ± 2.8			± 10.3	
1 MHz	80 dB		-74.0 ± 2.3			80.0 ± 2.8			± 20.3	
2 MHz	0 dB		$+6.0 \pm 2.3$			00.0 ± 2.3			_ ± 5.3	
2 MHz	50 dB		-44.0 ± 2.3			50.0 ± 3.3			± 10.3	
2 MHz	80 dB		-74.0 ± 3.3			80.0 ± 4.3			± 20.3	
ZMIZ	00 U D		. , ,,,,, – ,,,,			0010 - 112				
5 MHz	0 dB		+6.0 ± 2.3			00.0 ± 2.3			± 10.3	
5 MHz	40 dB		-34.0 ± 2.3			40.0 ± 3.3			± 20.3	
5 MHz	60 dB		-54.0 ± 2.3			60.0 ± 3.3				
13 MHz	0 dB		$+6.0 \pm 2.3$			00.0 ± 2.3			± 20.3	
13 MHz	20 dB		-14.0 ± 2.3	-		20.0 ± 3.3			± 20.3	
12 MILLY	۷۵ س		2			20.0 - 3.3				
13 MHz	40 dB		-34.0 ± 2.3			40.0 ± 3.3				
13 MHz	60 dB		-54.0 ± 2.3			40.0 ± 3.3 60.0 ± 3.3				
B			-74.0 ± 3.3			80.0 ± 3.3 80.0 ± 4.3				
13 MHz	80 dB	l	- 14,0 ± 3,3			8U.U ± 4.3			_	

PERFORMANCE CHECK TEST CARD (Cont'd)

HIGH LEVEL ACCURACY CHECKS

Frequency	A dBV*	Phase (0°)	B dBV*	Phase (180°)	Phase (0° OR 180°)
1 Hz 10 Hz 100 Hz 1 kHz 10 kHz 20 kHz 50 kHz 200 kHz 1 MHz	dBV	deg. deg. deg. deg. deg. deg. deg. deg.	dBV dBV dBV dBV dBV dBV dBV dBV	deg. deg. deg. deg. deg. deg. deg. deg.	± 0.8 deg. ± 0.8 deg. ± 0.8 deg. ± 0.8 deg. ± 0.8 deg. ± 1.3 deg. ± 2.3 deg. ± 5.3 deg.

*Test Limit A dBV/B dBV: $+26.0 \text{ dBV} \pm 1.3 \text{ dBV}$

SHUNT CAPACITANCE CHECK

Voltage	A	B
Range	Input	Input
0.2 mV - 2 V 2 mV - 20 V	deg.	deg. deg.

Test Limit: 450 or less

		-

5-19. ADJUSTMENT PROCEDURES.

5-20. This portion of Section V contains complete adjustment procedures for the Model 3575A Gain-Phase Meter. Included are power supply adjustments (Paragraph 5-25), Panel Meter Adjustments (Paragraph 5-29), Output Filter Zero Adjustments (Paragraph 5-33), Phase Detector Zero Adjustment (Paragraph 5-35), Current Source and Current Sink Adjustments (Paragraph 5-37), Amplitude Offset Adjustment (Paragraph 5-39), Log Amplifier (amplitude accuracy) Adjustments (Paragraph 5-41), Input Attenuator Adjustments (Paragraph 5-43) and High Frequency Phase Adjustments (Paragraph 5-45).

5-21. Test Equipment.

5-22. The test equipment required for the adjustments is listed in Table 5-1 and at the beginning of each adjustment procedure. If the recommended model is not available, any instrument that has specifications equal to or better than the required specifications can be used.

5-23. Test Point and Adjustment Location.

5-24. Test point and adjustment locations are shown in Figures 5-6 (top view) and 5-7 (panel meter). Figures 5-6 and 5-7 are located on a single fold-out at the end of Section V. All measurement points are either at the Analog Ouptuts or at designated pins of A7P1. Test connector A7P1 is a male PC connector located at the top of the Phase Control Filter Assembly, A7. For convenience when making test connections to A7P1, connect a 2X22-Pin female PC connector (-hp- Part No. 1251-1887) to A7P1 and use the pins of the female connector as test points. If the appropriate PC connector is not available, use the 2X22-Pin PC extender (-hp- 5060-5989) supplied with the instrument. All test measurements should be made with respect to circuit ground which is available at A7P1 pin X or at any point on the instrument chassis. All adjustments are easily accessible with the top cover of the instrument removed. It is not necessary to use PC extenders or remove any of the PC assemblies except when performing the Panel Meter Adjustments, Paragraphs 5-35 through 5-38.

5-25. + 12 V Reference Adjustment.

5-26. This adjustment sets the level of the + 12 Vdc power supply which serves as a reference for the other regulated supplies in the instrument.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450B)

- a. Connect DC Digital Voltmeter to A7P1 pin 6.
- b. Adjust A14R6 for $+12 \text{ V} \pm 3 \text{ mVdc}$.

5-27. Power Supply Voltage Checks.

5-28. The purpose of these checks is to verify that the non-adjustable power supply voltages are within design

tolerances. If any of the voltages are out of tolerance, refer to the Power Supply Troubleshooting procedure (Paragraph 5-84).

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450B)

a. Measure the dc voltage at each test point listed in Table 5-4. At each test point, the dc voltage should be within the tolerance listed in the table.

Table 5-4. Power Supply Checks.

Test Point	Supply	Tolerance
A7P1 Pin A A7P1 Pin B A7P1 Pin 3 A7P1 Pin D A7P1 Pin 4 A7P1 Pin F A7P1 Pin Y A7P1 Pin 21	+ 2 V (on A3) + 2 V (on A4) + 3.8 V - 6 V (A) - 6 V (B) - 12 V - 5.3 V + 5 V	+ 1.985 V to + 2.015 V + 1.985 V to + 2.015 V + 3.700 V to + 3.900 V - 5.980 V to - 6.020 V - 5.980 V to - 6.020 V - 11.96 V to - 12.04 V - 5.200 V to - 5.400 V + 4.980 V to + 5.020 V

5-29. Output Filter Zero Adjustments.

5-30. These adjustments null out any dc offsets introduced by the Output Filters. A9 and A10 (A10 is in Options 001 - 003 only).

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450B)

- a. Connect DC Voltmeter to ANALOG OUTPUT 1.
- b. Set the 3575A controls as follows:

DISPLAY*	
AMPLITUDE FUNCTION	B/A
Voltage Range	0.2 mV -2 V
	(both channels)
FREQUENCY RANGE	10 Hz - 100 kHz
PHASE REFERENCE	A

- *Options 001 003: Set the AMPLITUDE B/PHASE switch to PHASE.
- c. Connect a short clip lead between A9TP1 and A9TP2. This grounds the input to the filter.
- d. Adjust A9R27 for 0 V \pm 0.05 mV dc at Analog Output 1.
 - e. Remove the clip lead.
- f. Options 001 003: Perform the following additional steps.
 - g. Connect DC Voltmeter to ANALOG OUTPUT 2.

- h. Connect a short clip lead between A10TP1 and A10TP2.
- i. Adjust A10R27 for 0 V \pm 0.05 mV dc at Analog Output 2.
 - i. Remove the clip lead.

5-31. Panel Meter Zero Adjustment (Standard & Options).

5-32. This adjustment zeroes the panel meter in the Standard instrument and both panel meters in the Option instruments. Before proceeding with these adjustments, perform the Panel Meter Accuracy Check (Paragraph 5-9) to determine if adjustments are necessary.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450B)

- a. Perform Steps a through h of the Panel Meter Removal procedure (Figure 5-5) to gain access to the panel meter adjustments.
 - b. Set the 3575A controls as follows:

DISPLAY	
AMPLITUDE FUNCTION	B/A
Voltage Range	0.2 mV -2 V
	(both channels)
FREQUENCY RANGE	. 10 Hz -100 kHz
PHASE REFERENCE	A

- c. Connect DC Digital Voltmeter to ANALOG OUT-PUT 1.
- d. Connect a short clip lead between A9TP1 and A9TP2. If the instrument contains two panel meters, also connect a short clip lead between A10TP1 and A10TP2.
- e. Adjust A22C4 (inside adjustment) for a Panel Meter display of .000 ± .003. If there are two panel meters, adjust A22C4 in both. Remove short(s) in Step d.

5-33. Phase Detector Zero Adjustment.

5-34. This adjustment nulls out any dc offset introduced by the Buffer/Integrator in the Phase Detector.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450B)

- a. Connect DC Voltmeter to ANALOG OUTPUT 1.*
- b. Set the 3575A controls as follows:

DISPLAY	PHASE
Voltage Range	0.2 mV -2 V
	(both channels)
FREQUENCY RANGE	10 Hz -100 kHz
PHASE REFERENCE	A

- c. Set A5S1 and A6S1 to CAL 1.
- d. Adjust A5R31 (ZERO ADJ) for 0 V \pm 0.1 mV dc at the Analog Output.
- e. Leave A5S1 and A6S1 set to CAL 1 for the following procedure.

5-35. Current Source and Current Sink Adjustments.

5-36. These adjustments set the P1 and P2 Current Sources and the X and Y Current Sinks to produce the proper dc levels at the output of the Phase Detector. These are the primary phase accuracy adjustments in the instrument.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450B)

- a. Connect DC Digital Voltmeter to ANALOG OUT-PUT 1.*
 - b. Set the 3575A controls as follows:

DISPLAY	
Voltage Range	
	(both channels)
FREQUENCY RANGE	. 10 Hz -100 kHz
PHASE REFERENCE	

- c. Set A5S1 to CAL 2. Set A6S1 to CAL 1.
- d. Adjust A5R40 (P1 ADJ) for -1.8 V \pm 0.1 mV dc at the Analog Output.
 - e. Leave A5S1 set to CAL 2. Set A6S1 to CAL 2.
- f. Adjust A6R19 (Y ADJ) for 1 V \pm 0.1 mV dc at the Analog Output.
 - g. Leave A5S1 set to CAL 2. Set A6S1 to CAL 3.
- h. Adjust A6R21 (X ADJ) for 1 V \pm 0.1 mV dc at the Analog Output.
 - i. Leave A6S1 set to CAL 3. Set A5S1 to CAL 3.
- j. Adjust A5R39 (P2 ADJ) for 0 V \pm 0.1 mV dc at the Analog Output.
 - k. Reset A5S1 and A6S1 to NORMAL (4).

^{*}Options 001 - 003: Connect DC Digital Voltmeter to ANALOG OUTPUT 2. Set the AMPLITUDE B/PHASE switch to PHASE.

5-37. Panel Meter/Analog Output Adjustments.

- 5-38. These adjustments set the panel meter displays to coincide with the analog outputs.
 - a. Set A5S1 to CAL 2. Set A6S1 to CAL 1.
- b. Record reading of phase panel meter (right meter). Reading should be approximately 180°.
 - c. Set A5S1 to CAL 1. Set A6S1 to CAL 2.
- d. Record reading of phase panel meter (right meter) next to recorded reading of Step b.
- e. Adjust A22R5 of panel meter for a reading centered between the readings recorded in Steps b and d.
- f. For a standard instrument (one panel meter) set A5S1 and A6S1 to NORMAL (4). For Options 001 003, perform Steps g through i.
- g. A5S1 and A6S1 remain set from Step c. Short A9TP1 and A10TP1 together.
- h. Adjust A22R5 of the left panel meter until reading is same as that of the right panel meter.
 - i. Set A5S1 and A6S1 to NORMAL (4).

5-39. Amplitude Offset Adjustment.

5-40. This adjustment sets the dc operating point of the Summing Amplifier in the Function Switching Assembly, A8.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)*
DC Digital Voltmeter (-hp- Model 3450B)
50-Ohm Feed-Thru Termination (-hp- Model 11048C)

- a. Connect 50-ohm output of Frequency Synthesizer, terminated in 50-ohm load, to the channel B input of the 3575A. Connect the DC Digital Voltmeter to A7P1 pin 2 (Options 001 003: Connect DVM to ANALOG OUTPUT 2).
 - b. Set the 3575A controls as follows:

DISPLAY**	AMPLITUDE
AMPLITUDE FUNCTION .	
Voltage Range	
	(both channels)
EDECHENCY PANCE	10 Hz -100 kHz

c. Set the Frequency Synthesizer amplitude to + 19.03 dBm (2 V rms/50 ohms) and frequency to 1 kHz.

- d. Record the DVM reading: mV dc.
- e. Connect the DC Digital Voltmeter to ANALOG OUTPUT 1.
- f. Adjust A8R43 until the DVM indicates the value recorded in Step $d \pm 0.2$ mV dc.

5-41. Log Amplifier Adjustments.

5-42. These adjustments set the dc bias, gain and symmetry of the Log Amplifier and Synchronous Rectifier in each input channel. These are the primary amplitude accuracy adjustments in the instrument.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)
DC Digital Voltmeter (-hp- Model 3450A)
Variable Attenuator (-hp- Model 355D)
50-Ohm Feed-Thru Termination (-hp- Model 11048C)

NOTE

The following procedure is performed first for channel B and then again for channel A. The channel B adjustments are located on the channel B Log Converter board, A4. The channel A adjustments are located on the channel A Log Converter board, A3.

- a. Connect the 50-ohm output of the Frequency Synthesizer to the input of the Variable Attenuator (no termination required). Connect the output of the Variable Attenuator, terminated in 50-ohm load, to the Channel B input of the 3575A.
 - b. Set the 3575A controls as follows:

DISPLAY**	AMPLITUDE
AMPLITUDE FUNCTION	
Voltage Range	0.2 mV -2 V
C C	(both channels)
FREQUENCY RANGE	
PHASE REFERENCE	

- c. Set the Frequency Synthesizer amplitude to + 19.03 dBm (2 V rms/50 ohms) and frequency to 10 kHz.
 - d. Set the Variable Attenuator to 80 dB.
 - e. Connect DC Digital Voltmeter to A3/A4TP1.
- f. Adjust A1/A2 R40 (LOG TP1 ADJ) for a DVM reading of 0 V \pm 0.1 V dc.
- g. Connect DC Digital Voltmeter to A7P1 pin 22 (Channel B) or A7P1 pin z (Channel A).

^{*}A Test Oscillator such as the -hp- Model 651B can be used in place of the Frequency Synthesizer.

^{**}Options 001 - 003: Set the AMPLITUDE B/PHASE switch to AMPLITUDE B.

- h. Adjust R18 (LOG BIAS ADJ) for a DVM reading of 0 V \pm 0.2 mV dc.
- i. Connect DC digital Voltmeter to ANALOG OUTPUT1.
- j. Adjust R29 (AMPL SYM ADJ) until the absolute value of the voltage at Analog Output 1 is minimum e.g., -735 mV dc is less than -740 mV dc.
 - k. Set the Variable Attenuator to 70 dB.
 - 1. Center R32 (LOG GAIN ADJ).
- m. Adjust R50 (LOG OFFSET ADJ) for -640 mV ± 0.5 mV dc at Analog Output 1.
 - n. Set the Variable Attenuator to 0 dB.
- o. Adjust R32 (LOG GAIN ADJ) for + 60 mV ± 0.5 mV dc at Analog Output 1.
 - p. Set the Variable Attenuator to 70 dB.
- q. Repeat Steps m through p until optimum adjustment is obtained.
- r. Connect the output of the Variable Attenuator, terminated in 50-ohm load, to the channel A input of the 3575A.
- s. Set the 3575A AMPLITUDE FUNCTION switch to A.
- t. Repeat Steps c through q for channel A. The channel A adjustments are located on A3.

5-43. Input Attenuator Adjustments.

5-44. These adjustments compensate the input attenuators so that minimum phase shift is introduced by the attenuators on the 2 mV - 20 V range.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B) Variable Attenuator (-hp- Model 355D)

(2) 50-Ohm Feed-Thru Terminations (-hp- Model 11048C)

Power Splitter (See Figure 5-1)

- a. Connect test equipment as shown in Figure 5-2.
- b. Set the 3575A controls as follows:

FREQUENCY RANGE .10 Hz - 100 kHz

PHASE REFERENCE A

* Options 001-003: Set the AMPLITUDE B/PHASE switch to PHASE.

- c. Set the Frequency Synthesizer amplitude to +25.05 dBm (2 V rms at outputs of Power Splitter) and frequency to 15 kHz.
 - d. Set the Variable Attenuator to 20 dB.
 - e. Record the 3575 A phase reading: ____degrees.
 - f. Set the Variable Attenuator to 0 dB.
- g. Set the Channel B Voltage Range switch to the $2\,\text{mV} \cdot 20\,\text{V}$ position.
- h. Adjust A2C2 (ATT ADJ) until the 3575A phase reading is the same as recorded in Step e.
- i. Reset the Channel B Voltage Range switch to the $0.2\ mV$ $2\ V$ position.
- j. Reverse the input connections to the 3575A so that the Variable Attenuator output is connected to Channel A and the Power Splitter output is connected to Channel B.
 - k. Set the Variable Attenuator to 20 dB.
 - 1. Record the 3575A phase reading: ___degrees.
 - m. Set the Variable Attenuator to 0 dB.
- n. Set the Channel A Voltage Range switch to the $2\,\text{mV} \cdot 20\,\text{V}$ position.
- o. Adjust A1C2 (ATT ADJ) until the 3575A phase reading is the same as recorded in Step 1.
- p. Reset the Channel A Voltage Range switch to the $0.2\ mV$ $2\ V$ position.

5-45. High Frequency Phase Adjustments.

5-46. The purpose of these adjustments is to minimize the phase shift between the two channels at 13 MHz.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)
(2) 50-Ohm Feed-Thru Terminations (-hp- Model 11048C)
Power Splitter (See Figure 5-1)

a. Connect the 50-ohm output of the Frequency Synthesizer to the Power Splitter. Connect the outputs of the Power Splitter, terminated in 50-ohm loads, to the 3575A inputs.

NOTE

Connect the 50-Ohm Feed-Thru Terminations directly to the 3575A inputs. The cables from the Power Splitter to the terminations must be of equal length and should be as short as possible.

b. Set the 3575A controls as follows:

DISPLAY*	PHASE
Voltage Range	0.2 mV - 2 V
-	(both channels)
FREQUENCY RANGE	. 1 kHz - 13 MHz
PHASE REFERENCE.	A

- * Options 001-003: Set the AMPLITUDE B/PHASE switch to PHASE.
- c. Set the Frequency Synthesizer amplitude to +25.05 dBm and frequency to 12.99 MHz.
 - d. Set A1R4 (PHASE ADJ) fully clockwise.
 - e. Set A2R4 (PHASE ADJ) fully counter-clockwise.
 - f. Observe the 3575A phase reading.
- g. Adjust A2R4 (PHASE ADJ) until the phase reading is approximately 1/2 the value observed on Step f.
- h. Adjust A1R4 (PHASE ADJ) for a phase reading of 00.0 degrees.
- i. Reverse the A and B input connections and allow 10 seconds for the phase reading to stabilize.
- j. Note the phase reading: ___degrees. If the phase reading is greater than ± 1 degree, perform Steps k through o, if not; proceed to Step p.
- k. Adjust A2R4 (PHASE ADJ) until the phase reading is 3/4 the value noted in Step j.
- 1. Adjust A1R4 (PHASE ADJ) until the phase reading is 1/2 the value noted in Step j.
- m. Note the phase reading: degrees. Again reverse the A and B input connections and allow 10 seconds for the phase reading to stabilize.
- n. The absolute value of the phase reading should be within \pm 0.5 degrees of the value noted in Step m. If it is not, split the difference by adjusting A1R4.
- o. Repeat Steps m and n until the absolute values of the two readings are equal within $\pm\,0.5$ degrees.
- p. Note the phase reading: degrees. Set the PHASE REFERENCE switch to the A positon and allow 10 seconds for the phase reading to stabilize.
 - q. Again note the phase reading: ___degrees.

r. The difference between the readings noted in Steps p and q should be 180 degrees \pm 0.5 degrees. If it is not, split the error between the A and - A reference settings by adjusting A1R4. For example, if the A reading is + 1.0 degree and the - A reading is - 179.6 degrees, the error is 0.6 degrees and A1R4 should be adjusted so the - A reading is - 179.3 and the A reading is + 1.3.

5-47. High Frequency Log Amplifier Adjustment.

5-48. This adjustment controls the high frequency response of the log amp. See note following Step m.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)
(2) 50-ohm Feed-Thru Terminations
(-hp- Model 11048C)
Power Splitter (See Figure 5-1)
22 pin PC Board Extender (-hp- Part No. 5060-5989)

- a. Remove the screws from the A3 and A4 assemblies and put the A3 assembly on the extender.
- b. Connect the 50-ohm output of the Frequency Synthesizer to the Power Splitter. Connect the outputs of the Power Splitter, terminated in 50-ohm loads, to the 3575A inputs.

NOTE

Connect the 50-ohm Feed-Thru Terminations directly to the 3575A inputs. The cables from the Power Splitter to the terminations must be of equal length and should be as short as possible.

c. Set the 3575A controls as follows:

DISPLAY*	PHASE
Voltage Range	
	(both channels)
FREQUENCY RANGE	1 kHz -13 MHz
PHASE REFERENCE	A

- d. Set: the Frequency Synthesizer amplitude to + 25.05 dBm and frequency to 12.99 MHz.
 - e. Set the AMPLITUDE FUNCTION to A.
- f. Adjust A3L1 for a left panel meter reading of 5.5 to 5.7.
- g. Remove the A3 assembly from the extender and install in instrument.
 - h. Put the A4 assembly on the extender.

- i. For a standard instrument (one panel meter) go to Step j. For Options 001 003 (two panel meters) go to Step k.
- j. Set AMPLITUDE FUNCTION to B and adjust A4L1 for a left panel meter reading of 5.5 to 5.7.
- k. With the AMPLITUDE FUNCTION set to A, adjust A4L1 for a right panel meter reading of 5.5 to 5.7.
- l. Remove the A4 assembly from the extender and install in the instrument.
 - m. Replace the A3 and A4 screws.

NOTE

In earlier instruments A3/A4L1* were factory selected components. They were selected to produce $Log\ A$ or $Log\ B$ readings of $+6.0\ dB\ V$ $\pm0.3\ dB\ V$ with $2\ V$ rms, $13\ MHz$ applied to the input. The typical value range of A3/A4L1*


is $0.47~\mu H$ to $0.56~\mu H$. If reading is high, change L.1* to $0.47~\mu H$; if low, change L.1* to $0.56~\mu H$. In some earlier instruments, A3/A4L.1* is comprised of a $0.22~\mu H$ fixed inductor (-hp-9100-1611) in series with a $0.22~\mu H$ to $0.33~\mu H$ variable inductor (-hp-9100-1379) or a single $0.35~\mu H$ to $0.55~\mu H$ variable inductor (-hp-9100-3294). At the factory, A3/A4L1 is adjusted to produce a Log A or Log B reading of + 6.3~d B~V with 2 V rms, 13 MHz applied to the A or B INPUT.

5-49. Factory Selected Components.

5-50. Certain components within the 3575A are individually selected at the factory to compensate for slightly varying circuit parameters. These components are identified by an asterisk (*) in the parts list and schematic diagrams and a typical value is shown. Table 5-5 is a list of the factory selected components, their functions and typical value ranges.

Table 5-5. Factory Selected Components.

Designator	Function	Typical Value Range
A3/A4R31*	Sets range of Log Amplifier Gain Adjust, A3/A4R32. Increasing R31* increases gain. Normal values range from 3.01 K to 4.99; however, values up to 19.1 K can be used. Change R31* only if proper gain adjustment (Paragraph 5-41) cannot be obtained.	3.01 K to 19.1 K
A6 C8* - C13* A7 C8*, C15* A9 C8*, C15* A10 C8*, C15* A11 C6* - C9*	Provision is made for adding these capacitors to permit the use of IC operational amplifiers that require high frequency compensation.	30 pF to 100 pF (If required)

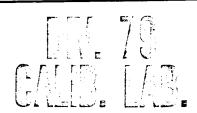

5-51. GENERAL SERVICING INFORMATION.

5-52. This portion of Section V contains instructions for removing and replacing assemblies and components, servicing etched circuit boards and cleaning the display window.

5-53. Cautions.

- 5-54. The following precautions should be taken when removing, replacing or handling 3575A assemblies and components. Failure to observe these precautions can result in damage or degraded performance.
- a. Turn off the 3575A before removing or replacing a printed-circuit assembly.
- b. When replacing Assemblies A1 through A6, be careful not to pinch cables between the assembly cover and the card-nest frame.
- c. The following assemblies must be CLEAN HANDLED:
 - 1) Preamplifier Assemblies A1/A2
 - 2) Log Converter Assemblies, A3/A4
 - 3) Phase Control Filter Assembly, A7
 - 4) Output Filter Assemblies, A9/A10

5-55. Assembly Removal.

5-56. The following procedures outline the steps required to remove each of the major assemblies within the instrument. Assemblies can be replaced by reversing the procedures.

5-57. Preamplifier Assembly (A1/A2) Removal.

- a. Remove the screws that fasten the A1/A2 top cover to the card-nest frame.
- b. Unplug cable W3/W4 by pulling upward at A1/A2 J2 (OUTPUT TO LOG CONV).
- c. Carefully remove A1/A2 by pulling upward on the tabs at the ends of the A1/A2 top cover.
- d. The input cable must be taken out of its slot at the top of the board and output cable disconnected to allow A1/A2 to be mounted on the 22-pin PC extender (-hp-5060-5989) supplied with the instrument. If A1/A2 is to be placed on the extender, first install the extender in the A1/A2 socket. Then place A1/A2 on the extender and reconnect output cable W3/W4.
- e. If it is necessary to remove A1/A2 completely, disconnect the input cable from A1/A2. To disconnect the cable, remove the screw that fastens the cable shield to the ground lug and unsolder the center conductor from the stand-off pin.

5-58. Log Converter Assembly (A3/A4) Removal.

- a. Remove the six screws that fasten the A3/A4 top cover to the card-nest frame.
- b. Unplug cable W3/W4 from the Preamplifier board by pulling upward at A1/A2 J2 (OUTPUT TO LOG CONV).
- c. Carefully remove A3/A4 by pulling upward on the tabs at the ends of the A3/A4 top cover.
- d. The input and output cables are long enough to allow A3/A4 to be mounted on the 22-pin PC Extender (-hp-5060-5989) supplied with the instrument. If A3/A4 is to be placed on the extender, first install the extender in the A3/A4 socket. Then place A3/A4 on the extender and reconnect input cable W3/W4.
- e. If it is necessary to remove A3/A4 completely, remove the screw that fastens the shield of output cable W5/W6 to the A3/A4 top cover and disconnect the cable leads from A3/A4 J2.

5-59. Phase Detector Assembly (A5) Removal.

- a. Remove the six screws that fasten the A5 top cover to the card-nest frame.
- b. Remove the A6 assembly and carefully unplug cable W7 from the Current Source board at A6J1 (INPUT FROM PHASE DETECTOR).
- c. Being careful to avoid straining the other two cables connected to A5, remove A5 by pulling upward on the tabs at the ends of the A5 top cover.
- d. The cables going to A5 are long enough to allow A5 to be mounted on the 22-pin Extender (-hp- 5060-5989) supplied with the instrument. If A5 is to be placed on the extender, first install the extender in the A5 socket. Then place A5 on the extender and reconnect cable W7 to the Current Source Board.
- e. If it is necessary to remove A5 completely, remove the screws that fasten input cables W5 and W6 to the A5 top cover. Disconnect W5 and W6 from A5 J2 and J3. When reinstalling A5 be sure that the input cable from channel A (A3) is connected to the pins marked A and \overline{A} and the input cable from channel B is connected to the pins marked B and \overline{B} .

5-60. Current Source Assembly (A6) Removal.

- a. Remove the six screws that fasten the A6 top cover to the card-nest frame.
- b. Unplug cable W7 by pulling upward at A6J1 (INPUT FROM PHASE DET).

- c. Being careful to avoid straining cable W5 which runs from A3 to A5 across the top of A6, remove A6 by pulling upward on the tabs at the ends of the A6 top cover.
- d. Input cable W7 is long enough to allow A6 to be mounted on the 22-pin PC extender (-hp- 5060-5989) supplied with the instrument. If A6 is to be placed on the extender, first install the extender in the A6 socket (route W5 around the extender). Then place A6 on the extender and reconnect input cable, W7.

5-61. Removal of Assemblies A8 through A11 and A14.

- a. Remove the Retainer Strap (MP 35, Figure 6-1).
- b. Remove the board by lifting the extractors at the ends of the board. Note that the extractors are color coded to identify the assembly number. The extractor colors match the corresponding guides on the main frame.
- 5-62. Interface Substitution Board, A16A. The Interface Substitution Board, A16A, is a PC card that is used to make connections between the front panel controls and the Function Switching Assembly (A8) in the absence of the Interface Assembly, A16B (A16B is in Options 002 and 003). When installing A16A, be sure that the side marked "FACE THIS SIDE TOWARD FRONT" is facing the front panel. Reversing A16A will not damage the instrument but will cause the front panel controls to be inoperative.

5-63. Interface Assembly (A16B - Options 002, 003) Removal.

- a. Remove the two screws that fasten the Interface connector to the rear panel (large Phillips head screws).
- b. While supporting A16B with one hand, unplug A19 from A16B by pulling outward on the Interface connector.
- c. Remove the A16B board by lifting the extractors at the ends of the board.
- d. For troubleshooting, place A16B on the 22-pin PC Extender supplied with the instrument Plug A19 into A16B if remote connections are required.
- 5-64. Removing the Front Panel, Panel Meters and A12. Refer to the procedure outlined in Figure 5-5.

NOTE

For panel meter/interconnect board combinations in earlier instruments, obtain Service Note 3575A-4, "Original Configuration of panel meter and Interconnect Boards", from your -hp-Sales and Service Office.

5-65. Component Replacement.

- 5-66. When replacing components in the 3575A, observe the general guidelines listed in Paragraph 5-69. In addition, note the following:
- a. The reed relays on the Preamplifier Assemblies, Al and A2, are of the plug-in type. To remove a reed relay, use a pair of long-nosed pliers and gently lift each end of the relay until it is unplugged.


- b. To remove the Hybrid Log Amplifiers, A3/A4 IC1, proceed as follows:
- 1) Remove the screw that fastens the IC1 heat sink to the A3/A4 top cover.
- 2) Remove the two nuts located directly below IC1 on the circuit side of the board.
 - 3) Carefully unplug IC1 from its socket.
- c. When replacing transistors and IC's, note the lead configuration and position of the defective component and orient the replacement component in the same manner as the original. Dots are provided on the PC boards to show the orientation of IC's. For IC's in the 8-pin circular package, the dot indicates the tab (pin 8) position. For IC's in the dual-in-line package, the dot indicates pin 1.
- d. Dots are provided on the PC boards to show the orientation of electrolytic capacitors and diodes. For electrolytic capacitors, the dot indicates the positive lead. For diodes, the dot indicates the cathode lead.

5-67. Servicing Etched Circuit Boards.

- 5-68. The Standard Model 3575A contains 19 printed-circuit (PC) assemblies. The -hp- part number is printed on each assembly for identification. Identical assemblies such as A1/A2, A3/A4 and A9/A10 are interchangeable and have identical part numbers. Refer to Section VI for parts replacement and -hp- part number information.
- 5-69. The printed-circuit boards in the 3575A are of the plated through type. The electrical connection between two sides of a board is made by a layer of metal plated through the component hole. When servicing printed-circuit boards, observe the following guidelines:
- a. Use a low-heat (25 to 30 watts) small-tip soldering iron, and small diameter rosin-core solder.
- b. Remove components and clean component holes using a desoldering tool.
 - c. Do not overheat the PC connections (pads).
- d. To replace components, shape new leads and insert them in lead holes. Reheat connections and apply a small amount of solder as required to insure a good electrical connection.
- e. Clean excessive flux from the connection and adjoining area.

5-70. Cleaning the Display Window.

5-71. When cleaning the Display Window, do not use harsh chemicals or abrasives. Use a soft cloth along with clear water or a diluted window cleaner.

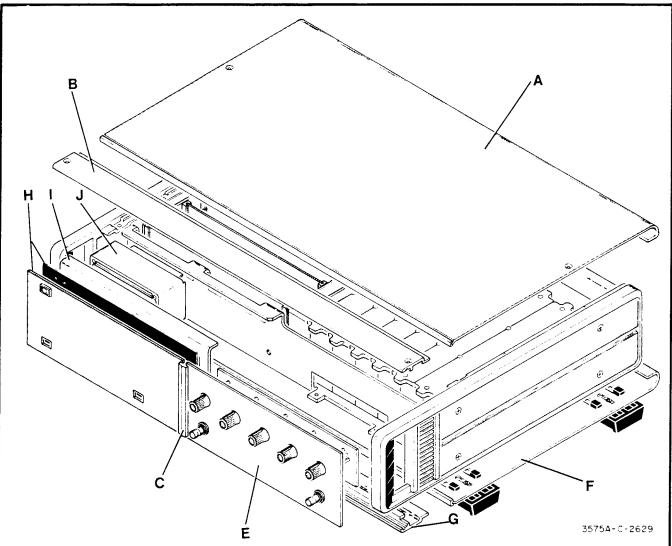

- a. Remove the Top Cover.
- b. Remove the Top Panel-Trim.
- c. Remove the Center Trim (slide upward).
- d. If the Front Panel is to be removed, perform Step e; if not, proceed to Step ${\bf f}$.
- e. Pull upward on the Front Panel to unplug the Front Panel Switching Assembly. Allow the Front Panel to tilt toward you and rest on the bench with the rear of the panel facing upward. If the Front Panel Switching Assembly is to be removed, proceed as follows:
 - 1) Remove the knobs from the front panel controls.
- 2) Remove the five nuts that fasten the control switches to the Front Panel .
 - f. Remove the Bottom Cover.
 - g. Remove the Bottom Panel-Trim.

- h. Remove the red Display Window and the black Display Mask.
- i. Remove the aluminum Display Panel (4 straight-slot screws).
- j. The Panel Meter(s) can now be unplugged and removed from the instrument. When removing or replacing a Panel Meter, support A12 to prevent it from being damaged due to strain.
- k. Once the Panel Meters are removed, the A12 board can be removed by removing the Retainer Strap (MP35, Figure 6-1) and lifting the extractors at the ends of the board.
- 1. To gain access to boards within the Panel Meter, proceed as follows:
 - 1) Unplug the Panel Meter as outlined in Step j.
 - 2) Slide the Panel Meter out of its dust cover.
 - 3) For Panel Meter troubleshooting, place A12 on a 22-pin PC Extender and plug the Panel Meter into A12.

Figure 5-5. Removing the Front Panel, Panel Meters and A12.

5-72. TROUBLESHOOTING.

5-73. This portion of Section V contains information and procedures designed to assist in the isolation of malfunctions. The information presented is based on a systematic analysis of the instrument circuits and, if followed, will minimize troubleshooting time.

5-74. Guidelines.

- 5-75. Before troubleshooting the 3575A, observe the following guidelines:
- a. Perform the adjustments outlined in Paragraphs 5-25 through 5-48. Some apparent malfunctions can be corrected by these adjustments or the inability to obtain correct adjustment will often reveal the source of trouble.
- b. Check the power supplies (Paragraph 5-27) before troubleshooting other sections.
- c. Check for burned or loose components, loose connections or any other obvious condition that might be a source of trouble.

5-76. Symptoms.

- 5-77. Obtain as many front panel symptoms as possible. Check the performance of the 3575A and obtain the following failure information:
- a. Does the trouble affect amplitude readings? If yes, disregard phase and refer to the Amplitude Troubleshooting Tree (Figure 5-8). The Amplitude Troubleshooting Tree will help isolate the trouble to a stage or component or will lead to the Digital Panel Meter Troubleshooting Tree (Figure 5-9).
- b. Does the trouble affect *phase* readings *only*? If yes, refer to the Phase Troubleshooting Tree (Figure 5-10). The Phase Troubleshooting Tree will help isolate the trouble to a stage or component or will lead to the Phase Logic Troubleshooting Tree (Figure 5-11).

5-78. Troubleshooting Trees.

5-79. The four troubleshooting trees, Figure 5-8 through 5-11, are located on fold-outs at the end of this section. When entering a troubleshooting tree, always start at the point labeled "START". Do not attempt to start in the middle of a tree. Checks outlined in each troubleshooting tree will lead to another troubleshooting tree or to one of the following:

- "Probable Cause"
- "Recheck Symptoms"

5-80. "Probable Cause." The "Probable Cause" information only indicates the most likely failure areas and designated components are not necessarily the exact cause of trouble. The "Probable Cause" information should be

used in conjunction with the voltages and waveforms on the schematic diagrams to further pinpoint the source of trouble.

5-81. "Recheck Symptoms." The "Recheck Symptoms" blocks indicate that preceeding checks do not reveal any specific malfunction. When confronted with a "Recheck Symptom" block, recheck the performance of the instrument to verify that the original symptom is still present. If the original symptom persists, repeat the checks outlined in the troubleshooting trees while watching for marginal indications. If the trouble still cannot be localized, troubleshoot using the voltages and waveforms on the schematic diagrams. Contact the nearest -hp- Service Office or Customer Service facility if assistance is required.

5-82. Measurement Conditions.

5-83. The voltages and waveforms shown on the schematics and troubleshooting trees were obtained with a 1 V rms (+6 dBV), 1 kHz sine wave applied to both inputs. If symptoms do not appear with 2 V rms, 1 kHz inputs, troubleshoot using inputs that produce symptoms. Keep the input level as high as possible and the input frequency as close to 1 kHz as possible. Note that some of the waveshapes and voltages may differ when inputs other than 2 V rms, 1 kHz are used.

5-84. Control Settings.

5-85. When using the troubleshooting trees with 2 V rms, 1 kHz inputs, the 3575A controls should be set as follows:

5-86. Power Supply Troubleshooting.

5-87. The 3575A contains six major power supplies that furnish regulated voltage to the various assemblies throughout the instrument. The raw supplies are located on the Power Supply Mother Board, A15, and the regulator circuits for these supplies are located on the Power Supply Assembly, A14. In addition, the Log Converter Assemblies, A3 and A4, contain separate regulator circuits which supply + 2 Vdc to the Hybrid Log Amplifiers. The + 2 V regulators receive preregulated voltage from the + 3.8 Vdc supply on A14.

5-88. Before troubleshooting the 3575A, perform the + 12 V Reference Adjustment (Paragraph 5-25) and check the power supply voltages as outlined in Paragraph 5-28.

Additional checks can be performed using the power supply data listed in Table 5-6. If any of the supply voltages are out of tolerance, troubleshoot the corresponding power supply or regulator circuit by checking for the dc voltages shown on the schematics.

NOTE

All of the regulators on A14 are directly or indirectly referenced to +12 Vdc. The +12 Vdc reference must, therefore, be properly adjusted to establish the accuracy of the other supply voltages. In addition, all of the IC regulators on A14 use +12 Vdc and -12 Vdc and a failure in either of these supplies can affect the other supply voltages.

5-89. No Load Checks. The Power Supply Assembly, A14, is equipped with separate input and output connectors to permit the supplies to be checked under no load conditions. The 2X10-pin connector on the left-hand side of A14 receives unregulated inputs from the raw supplies on A15. The 12-pin connector on the right-hand side of A14 outputs the regulated voltages from A14 to the main Mother Board Assembly, A17.

5-90. To check the supplies under no load conditions, proceed as follows:

- a. Place A14 on a 2X10-pin PC Extender (-hp-5060-5987). Leave the 12-pin output connector disconnected.
- b. Connect a short clip lead between chassis ground and pins 11 and 12 of the 12-pin connector on A14.
- c. Using a DC voltmeter, measure the regulated output voltages at pins 4 through 10 of the 12-pin connector on A14. The dc voltages should be as follows:

Pin	Voltage
4	+ 5 V ± 0.02 Vdc
5	-5.3 V ± 0.1 Vdc
6	-6 V ± 0.02 Vdc
7	- 6 V ± 0.02 Vdc
8	+ 3.8 V ± 0.1 Vdc
9	- 12 V ± 0.04 Vdc
10	+ 12 V ± 3 mVdc *

* Adjustable

5-91. Troubleshooting the + 12 V and -12 V Supplies. Due to the interaction between the + 12 V and -12 V supplies, it is sometimes difficult to isolate failures in these

supplies. If difficulty is encountered, check suspected components with an ohmeter or transistor checker, replace A14IC1 and IC2 or isolate the trouble using an external dc source as outlined in the following procedure:

RECOMMENDED EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A) ± 12 Vdc Variable Power Supply (-hp- Model 467A)

- a. Check to be sure that the raw supply voltages are present at XA14A pins 9 (+ 19 Vdc) and B (- 19 Vdc).
 - b. Disconnect one end of A14R1.
- c. Place A14 on a 2X10 PC Extender (-hp- 5060-5987). Leave the 12-pin output connector disconnected.
- d. Connect a short clip lead between chassis ground and pins 11 and 12 of the 12-pin connector on A14.
- e. Connect the DC Digital Voltmeter to pin 9 of the 12-pin connector on A14.
- f. Apply + 12 Vdc from an external power supply to pin 10 of the 12-pin connector on A14.
- g. The DVM reading should not be -12 V dc. If -12 V dc is present, leave the external power supply connected and troubleshoot the +12 V regulator circuit by checking for the dc voltages shown on Schematic No. 8. If -12 V dc is not present, perform the following steps.
- h. Disconnect the external power supply and reconnect A14R1. Disconnect one end of A14R8.
- i. Connect the DVM to pin 10 of the 12-pin connector on A14.
- j. Apply 12 Vdc from an external power supply to pin 9 of the 12-pin connector on A14.
- k. The DVM reading should now be +12 Vdc. If +12 Vdc is present, leave the external power supply connected and troubleshoot the -12 V regulator circuit by checking for the dc voltages shown on the schematics. If +12 Vdc is not present, there are failures in both regulator circuits.

Table 5-6. Power Supply Ratings.

Power Supply			Ripple (p-p)	Line Regulation (115 V/230 V ± 10 %)	Nominal Load Current
+ 12 V * - 12 V - 6 V (A) - 6 V (B) + 5 V - 5.3 V + 3.8 V	A7P1 Pin 6 A7P1 Pin F A7P1 Pin D A7P1 Pin 4 A7P1 Pin 21 A7P1 Pin Y A7P1 Pin 3	+ 11.997 V to + 12.003 V - 11.960 V to - 12.040 V - 5.980 V to - 6.020 V - 5.980 V to - 6.020 V + 4.980 V to + 5.020 V - 5.200 V to - 5.400 V + 3.700 V to + 3.900 V	1 mV 1 mV 1 mV 1 mV 1 mV 1 mV	± 1 mV ± 1 mV ± 0.1 mV ± 0.1 mV ± 0.1 mV ± 0.2 mV	180 mA 180 mA 200 mA 200 mA 1 A ** 350 mA 300 mA

^{*} Adjustable (A14R6)

^{**} Load increases to 1.5 A in Option 001 instruments and to 2 A in Option 002, 003 instruments.

Additional checks can be performed using the power supply data listed in Table 5-6. If any of the supply voltages are out of tolerance, troubleshoot the corresponding power supply or regulator circuit by checking for the dc voltages shown on the schematics.

NOTE

All of the regulators on A14 are directly or indirectly referenced to +12 Vdc. The +12 Vdc reference must, therefore, be properly adjusted to establish the accuracy of the other supply voltages. In addition, all of the IC regulators on A14 use +12 Vdc and -12 Vdc and a failure in either of these supplies can affect the other supply voltages.

5-89. No Load Checks. The Power Supply Assembly, A14, is equipped with separate input and output connectors to permit the supplies to be checked under no load conditions. The 2X10-pin connector on the left-hand side of A14 receives unregulated inputs from the raw supplies on A15. The 12-pin connector on the right-hand side of A14 outputs the regulated voltages from A14 to the main Mother Board Assembly, A17.

5-90. To check the supplies under no load conditions, proceed as follows:

- a. Place A14 on a 2X10-pin PC Extender (-hp-5060-5987). Leave the 12-pin output connector disconnected.
- b. Connect a short clip lead between chassis ground and pins 11 and 12 of the 12-pin connector on A14.
- c. Using a DC voltmeter, measure the regulated output voltages at pins 4 through 10 of the 12-pin connector on A14. The dc voltages should be as follows:

Pin	Voltage
4	+ 5 V ± 0.02 Vdc
5	-5.3 V ± 0.1 Vdc
6	- 6 V ± 0.02 Vdc
7	- 6 V ± 0.02 Vdc
8	+ 3.8 V ± 0.1 Vdc
9	- 12 V ± 0.04 Vdc
10	+ 12 V ± 3 mVdc *

* Adjustable

5-91. Troubleshooting the + 12 V and - 12 V Supplies. Due to the interaction between the + 12 V and - 12 V supplies, it is sometimes difficult to isolate failures in these

supplies. If difficulty is encountered, check suspected components with an ohmeter or transistor checker, replace A14IC1 and IC2 or isolate the trouble using an external dc source as outlined in the following procedure:

RECOMMENDED EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A) ± 12 Vdc Variable Power Supply (-hp- Model 467A)


- a. Check to be sure that the raw supply voltages are present at XA14A pins 9 (+ 19 Vdc) and B (-19 Vdc).
 - b. Disconnect one end of A14R1.
- c. Place A14 on a 2X10 PC Extender (-hp- 5060-5987). Leave the 12-pin output connector disconnected.
- d. Connect a short clip lead between chassis ground and pins 11 and 12 of the 12-pin connector on A14.
- e. Connect the DC Digital Voltmeter to pin 9 of the 12-pin connector on A14.
- f. Apply + 12 Vdc from an external power supply to pin 10 of the 12-pin connector on A14.
- g. The DVM reading should not be -12 V dc. If -12 V dc is present, leave the external power supply connected and troubleshoot the +12 V regulator circuit by checking for the dc voltages shown on Schematic No. 8. If -12 V dc is not present, perform the following steps.
- h. Disconnect the external power supply and reconnect A14R1. Disconnect one end of A14R8.
- i. Connect the DVM to pin 10 of the 12-pin connector on A14.
- j. Apply 12 Vdc from an external power supply to pin 9 of the 12-pin connector on A14.
- k. The DVM reading should now be +12 Vdc. If +12 Vdc is present, leave the external power supply connected and troubleshoot the -12 V regulator circuit by checking for the dc voltages shown on the schematics. If +12 Vdc is not present, there are failures in both regulator circuits.

Table 5-6. Power Supply Ratings.

Power Supply	Test Point	Voltage Limit	Ripple (p-p)	Line Regulation (115 V/230 V ± 10 %)	Nominal Load Current
+ 12 V *	A7P1 Pin 6	+ 11.997 V to + 12.003 V	1 mV	± 1 mV	180 mA
-12 V	A7P1 Pin F	- 11.960 V to - 12.040 V	1 mV	± 1 mV	180 mA
-6 V (A)	A7P1 Pin D	- 5.980 V to - 6.020 V	1 mV	± 0.1 mV	200 mA
-6 V (B)	A7P1 Pin 4	-5.980 V to -6.020 V	1 mV	± 0.1 mV	200 mA
+5 V	A7P1 Pin 21	+ 4.980 V to + 5.020 V	1 mV	± 0.1 mV	1 A **
5.3 V	A7P1 Pin Y	-5.200 V to -5.400 V	1 mV	± 0.1 mV	350 mA
+ 3.8 V	A7P1 Pin 3	+ 3.700 V to + 3.900 V	3 mV	± 0.2 mV	300 mA

^{*} Adjustable (A14R6)

^{**} Load increases to 1.5 A in Option 001 instruments and to 2 A in Option 002, 003 instruments.

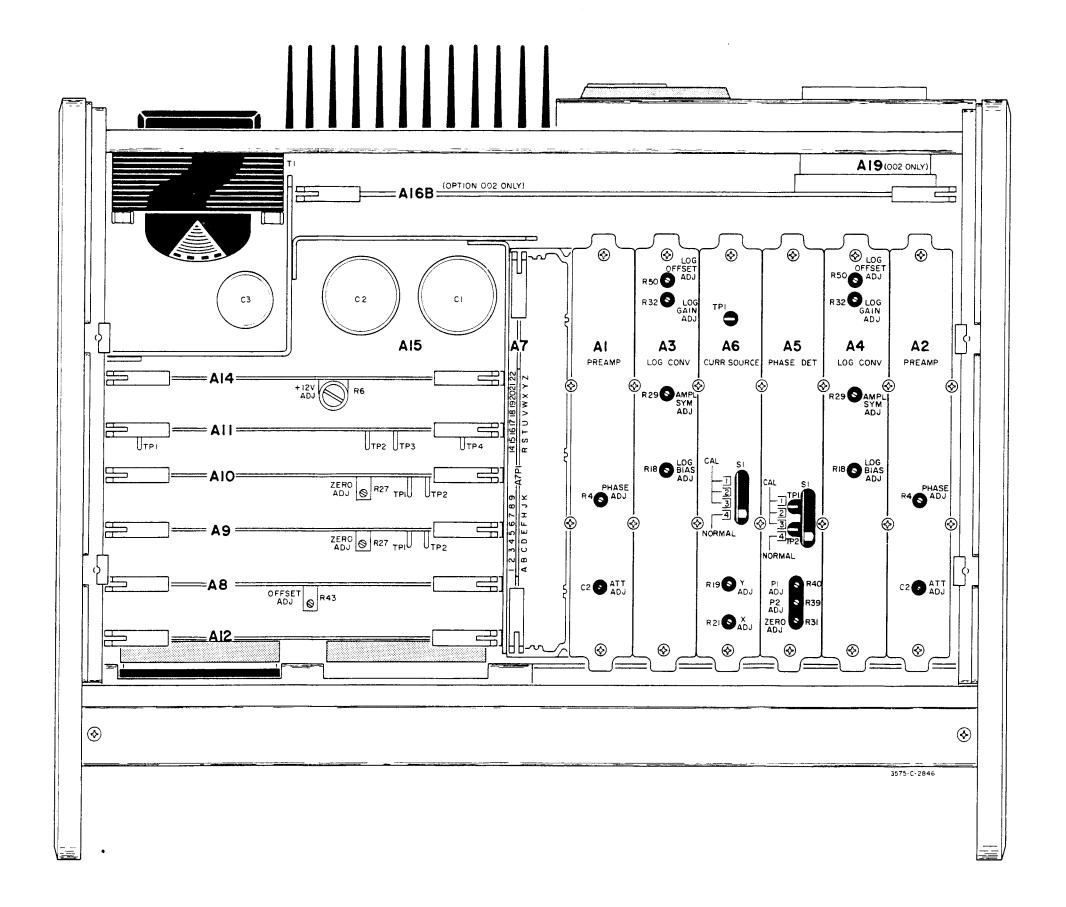

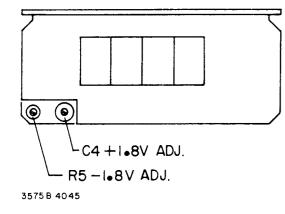
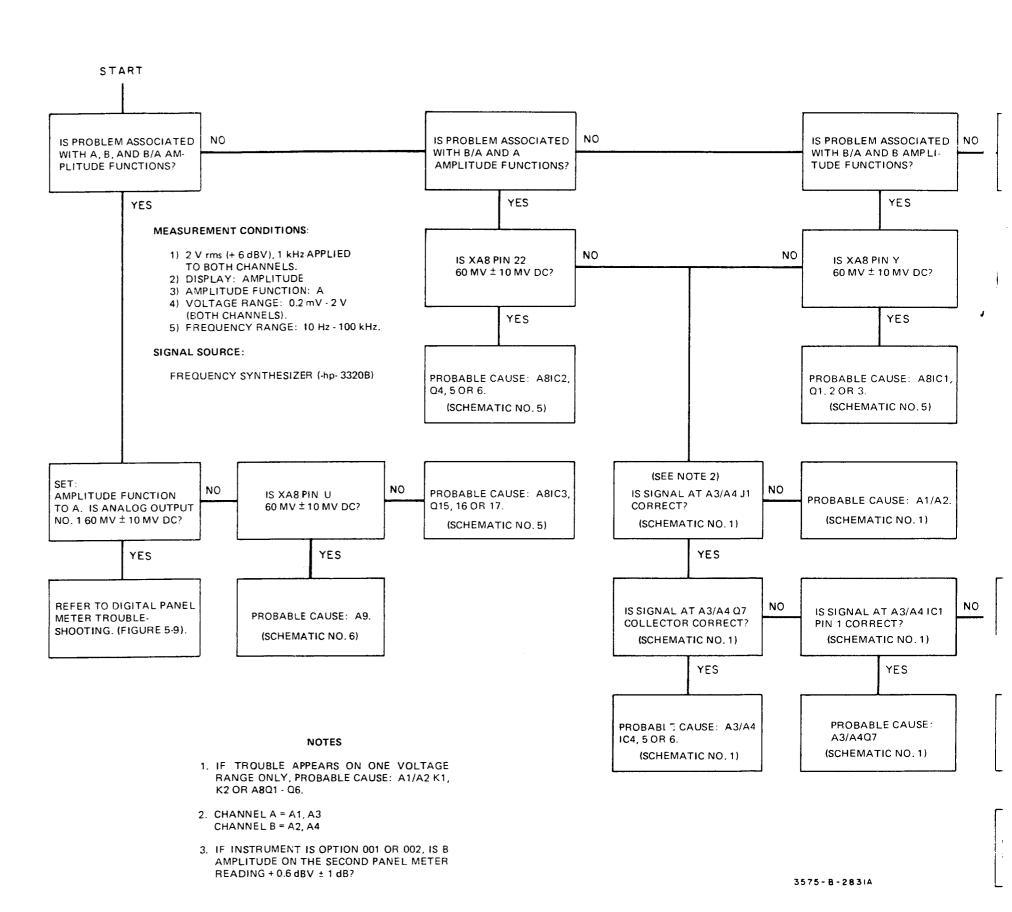
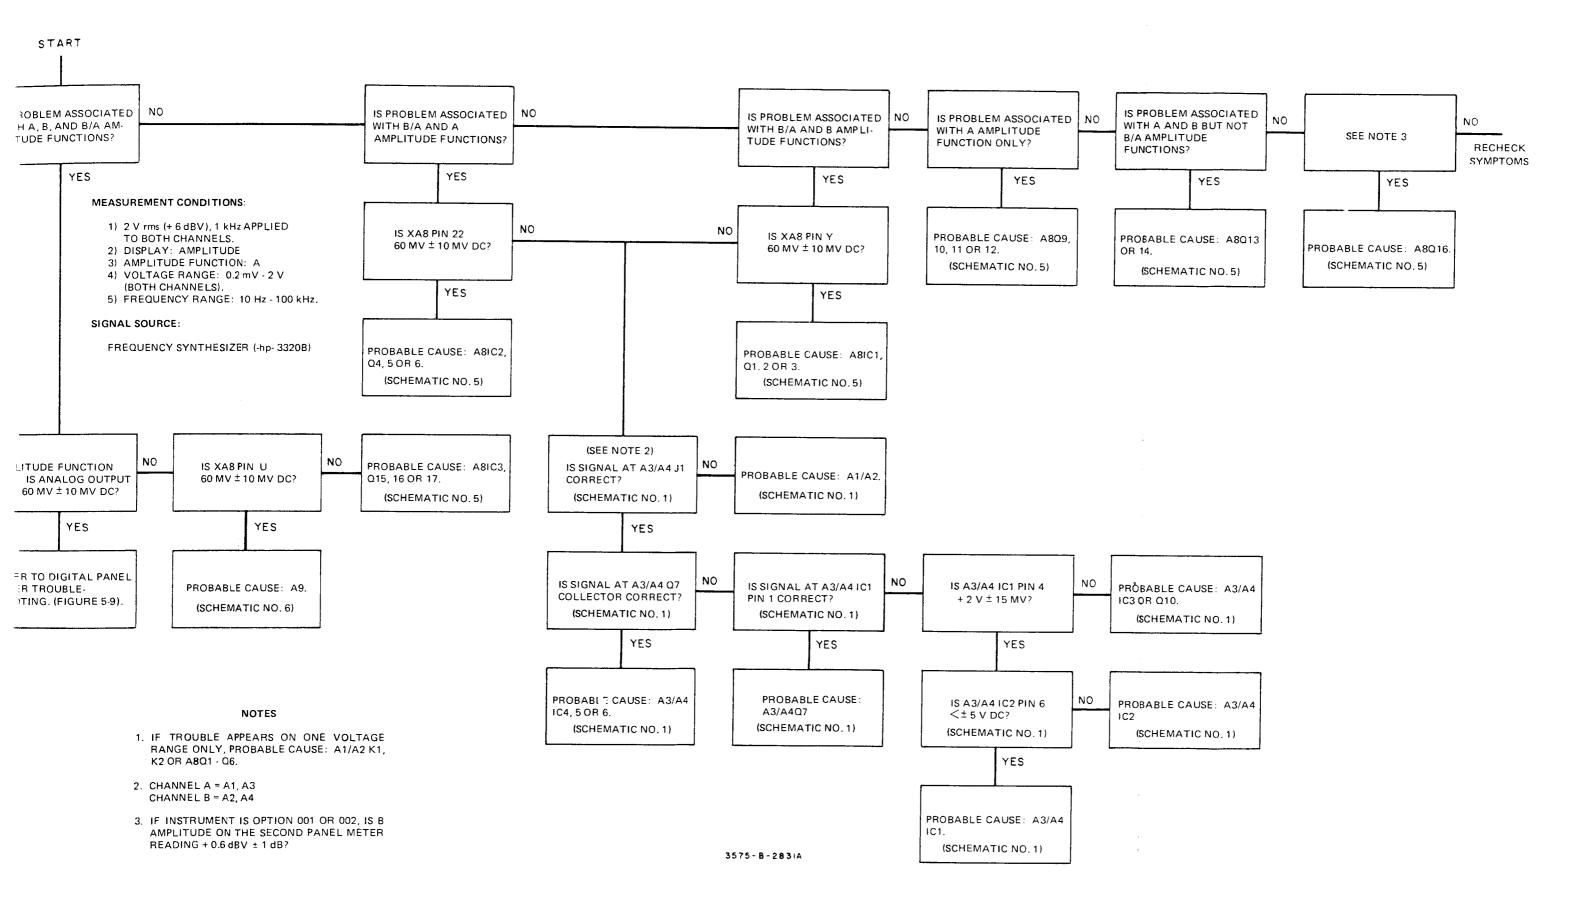


Figure 5-6. Location of Main Assemblies and Adjustments. Figure 5-7. Location of Panel Meter Adjustments.

5-21/5-22






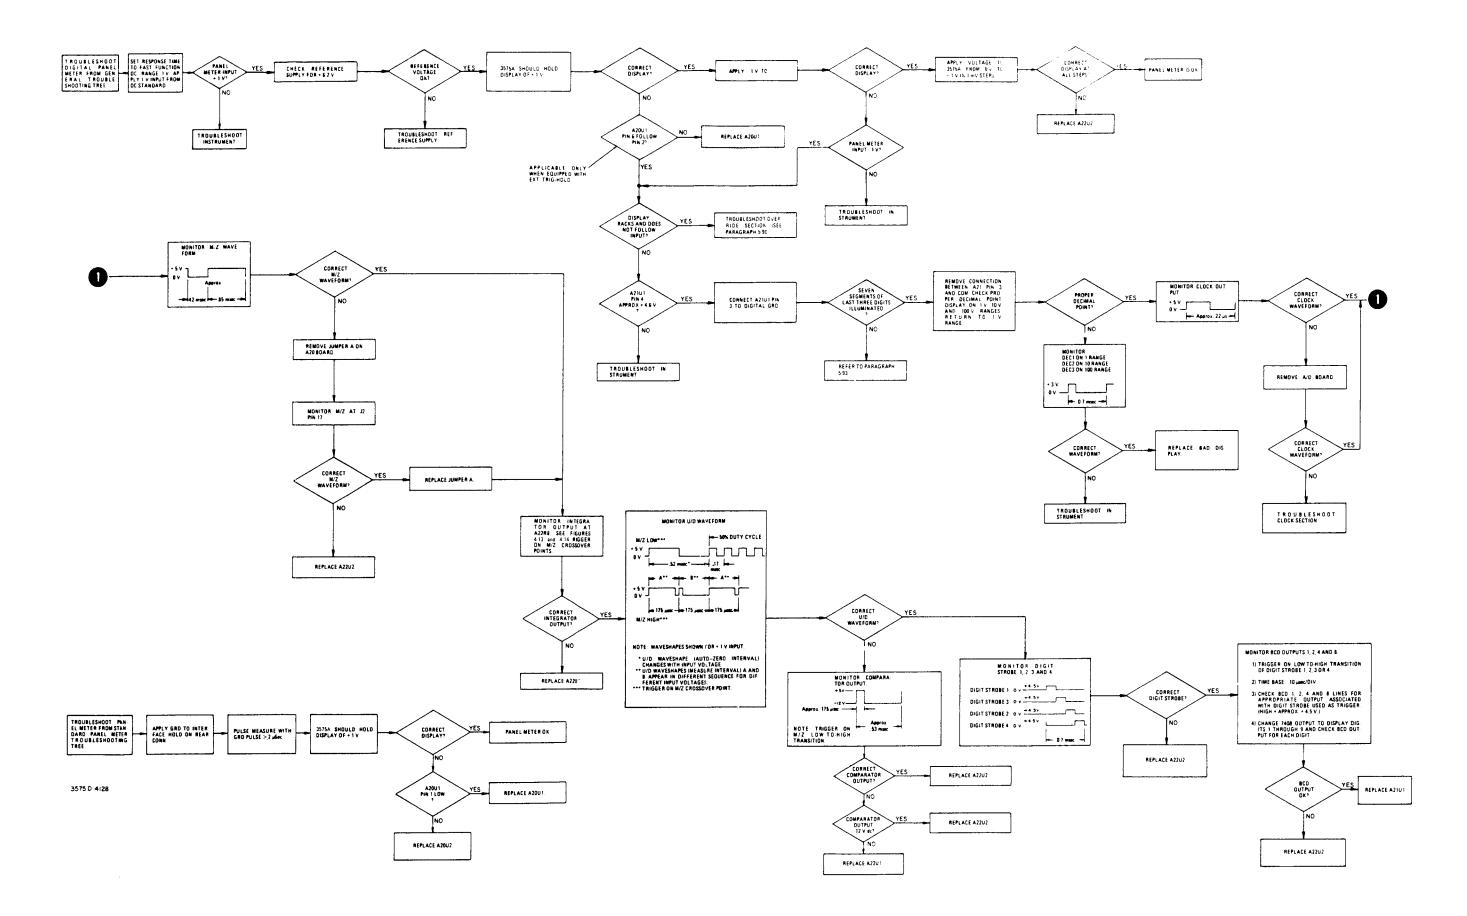



Figure 5-9. Digital Panel Meter Troubleshooting Tree. 5-25/5-26

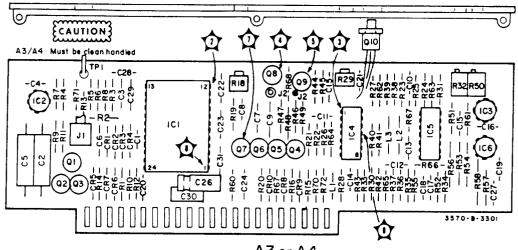


A3 or A4

hp Part No. 03575-66503

Rev. C

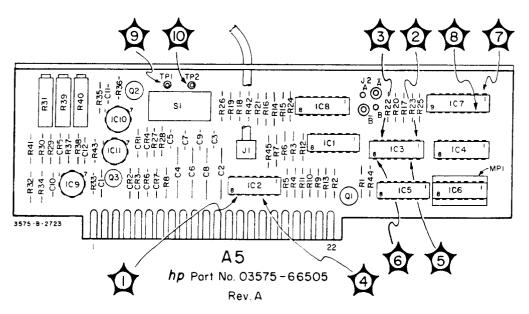

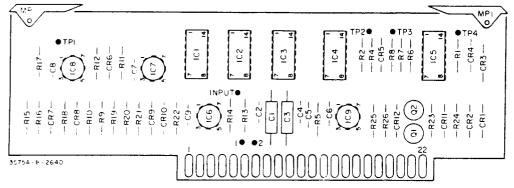

A | 1 hp Part No. 03575-66511 Rev A

MEASUREMENT CONDITIONS:

- 1) 2 V rms, 1 kHz APPLIED TO BOTH INPUTS
- 1) 2 v rms, 1 kHz APPLIED TO BOTH INPUTS
 2) INPUT SIGNALS IN PHASE.
 3) DISPLAY SWITCH OR AMPLITUDE B/PHASE SWITCH SET TO PHASE
 4) VOLTAGE RANGE 0.2 m · 2 v (BOTH CHANNELS).
 5) FREQUENCY RANGE 10 Hz · 100 kHz.
 6) PHASE REFERENCE + A

SIGNAL SOURCES

FREQUENCY SYNTHESIZER (-np- 3320B)
TEST OSCILLATOR (-np- 651B)
VARIABLE PHASE GENERATOR (-np- 203A)




FIGURE 1

SCOPE SETTINGS FOR FIGURES 1 AND 2.

Vertical - .5 V/CM Horizontal - .2 ms/CM Trigger - Ext.

Slope

Trigger on Input from Signal Source

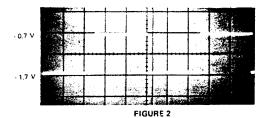



5 ms/cm .5 V/cm (10 x .05 V range)

FIGURE 3

NOTES


NOTE 1: TWO METHODS CAN BE USED TO PERFORM THE FOLLOWING TEST METHOD 1. SET THE -hp- 203A VARIABLE PHASE FUNCTION GENERATOR TO 00 PHASE SHIFT. ADJUST PHASE SHIFT IN A POSITIVE DIRECTION. SOMEWHERE NEAR + 192.00, THE PHASE READING WILL SHIFT TO

METHOD 2. DISCONNECT THE INPUT JUMPER ON A11, CONNECT A11TP2 TO A11TP4 AND SET A5S1 TO CAL 2. THE PHASE READING WILL BE + 180.0° ± 1°. CONNECT DC SUPPLY TO A 11TP1 AND ADJUST DC LEVEL POSITIVE FROM 0 V TO + 2.00 V DC SOMEWHERE NEAR + 2.0 V THE PHASE READING WILL CHANGE TO - 180.0° ± 1°.

DOES THE PHASE READING SHIFT AS DESCRIBED IN METHOD 1 OR METHOD 27

NOTE 2: TWO METHODS CAN BE USED TO PERFORM THE FOLLOWING TEST. METHOD 1 SET THE -hp 203A TO 0° PHASE SHIFT AND ADJUST PHASE SHIFT IN A NEGATIVE DIRECTION. SOMEWHERE NEAR-192.0°. THE PHASE READING WILL SHIFT TO + 168.00 : 10.

METHOD 2. SET THE DC SUPPLY TO + 2.00 V. ADJUST THE DC SUPPLY IN A NEGATIVE DIRECTION, SOMEWHERE NEAR 2 00 V THE PHASE READING SHOULD CHANGE FROM - 180 0° TO + 180 0° ± 1°. DOES THE PHASE READING SHIFT AS DESCRIBED IN METHOD 1 OR METHOD 27

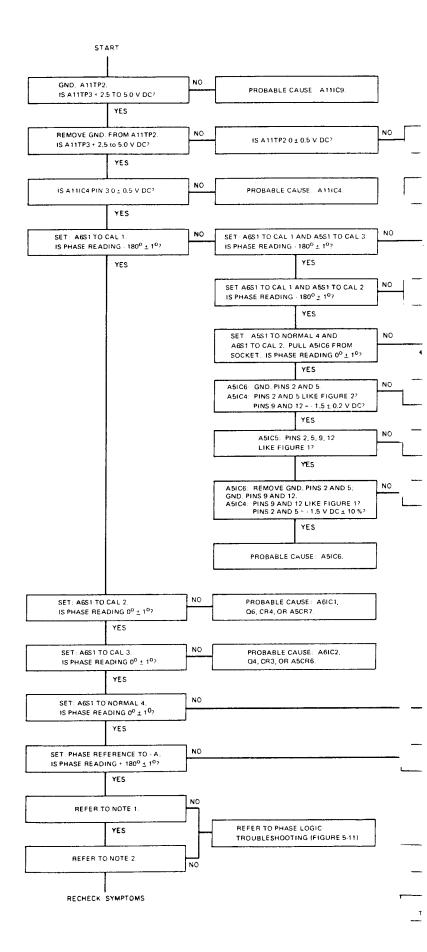


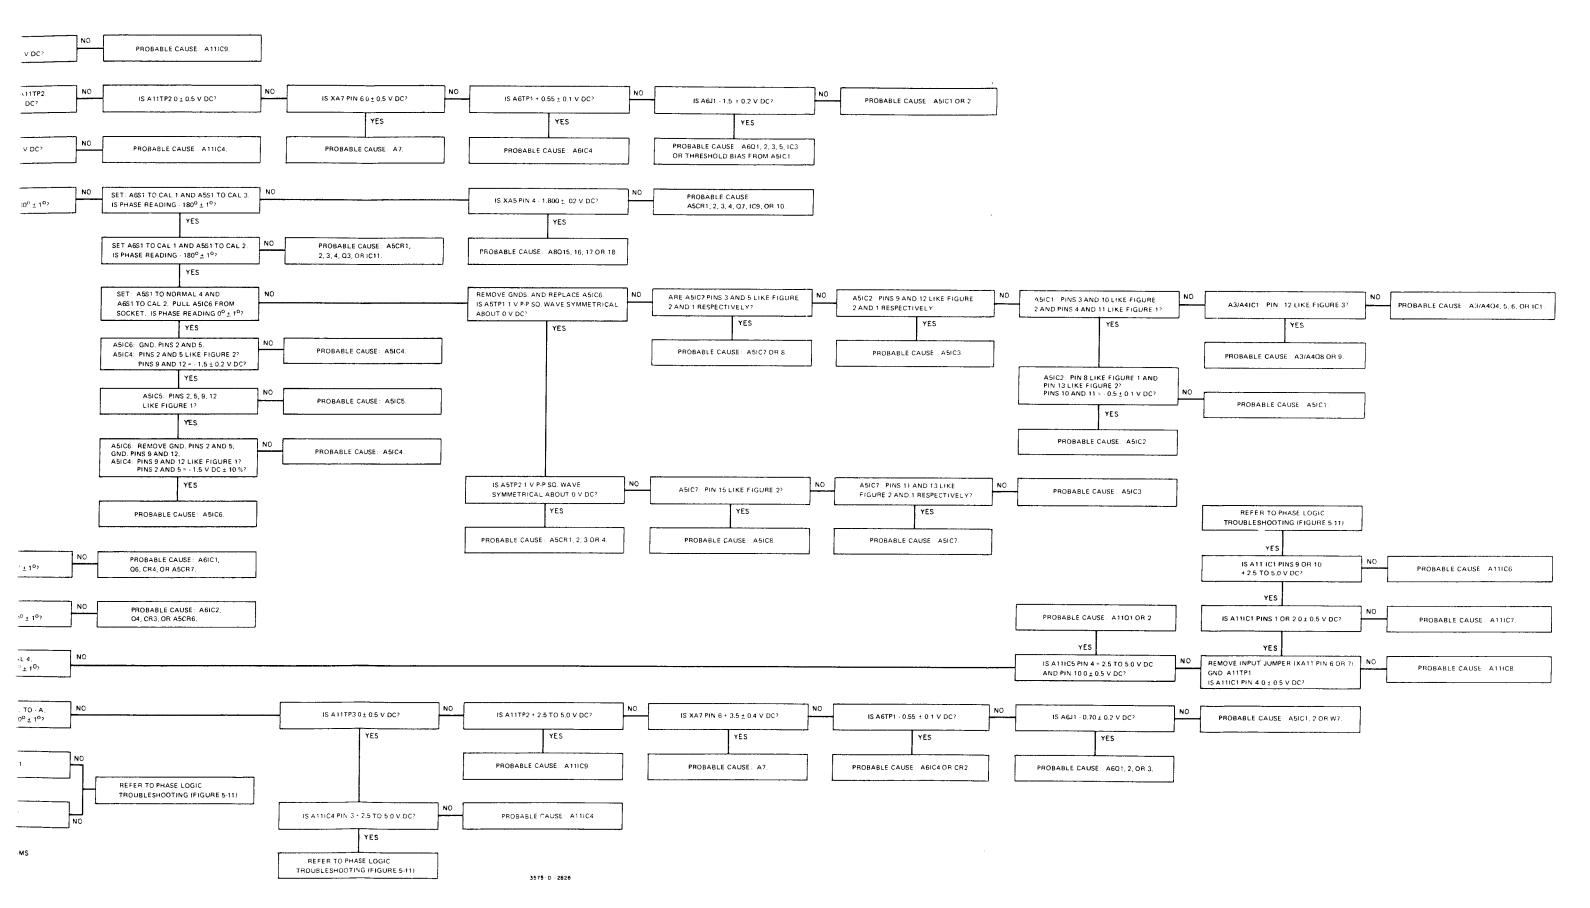


Figure 5-10. Phase Troubleshooting Tree.

LOGIC LEVELS FOR A11IC1, IC2, IC3 AND IC5.

		INPUT	LEVELS (A11TP1)
IC NO.	PIN NO.	+ 2.00 V	- 2.00 V
1	6	1	0
1	11	0	1
2	6	1	0
2	8	0	1
2	12	0	1
3	6	1	0
3	11	1	0
5	1	0	0
5	4	1	0
5	10	1	0
5	13	0	0

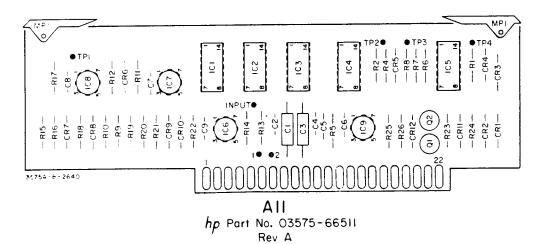

MEASUREMENT CONDITIONS:

- 1) NO SIGNAL INPUTS APPLIED.
- 2) PHASE REFERENCE: + A


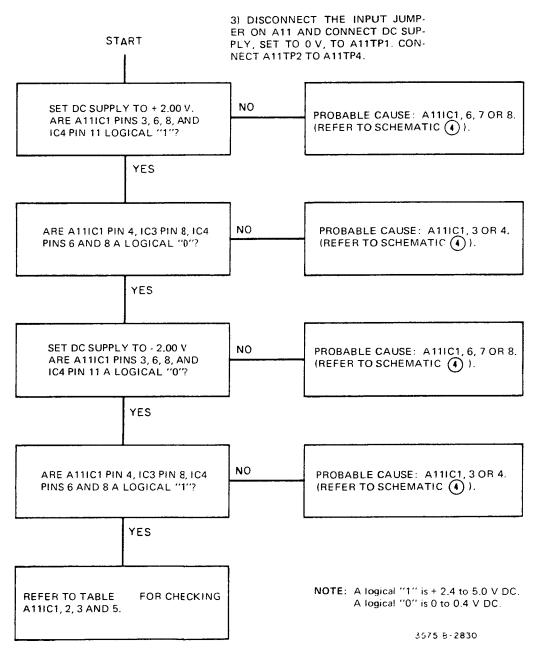


Figure 5-11. Phase Logic Troubleshooting Tree. 5-29/5-30

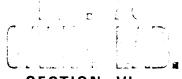

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION.

- 6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphameric order of their reference designators and indicates the description, -hp-part number of each part, together with any applicable notes, and provides the following:
- a. Total quantity used in the instrument (Qty column). The total quantity of a part is given the first time the part number appears.
- b. Description of the part. (See list of abbreviations below.)
- c. Typical manufacturer of the part in a five-digit code. (See Appendix A for list of manufacturers.)
 - d. Manufacturers part number.
- 6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office. (See Appendix B for list of office locations.) Identify parts by their Hewlett-Packard part numbers. Include instrument model and serial numbers.

6-6. NON-LISTED PARTS.

- 6-7. To obtain a part that is not listed, include:
 - a. Instrument model number.
 - b. Instrument serial number.
 - c. Description of the part.
 - d. Function and location of the part.

6-8. PROPRIETARY PARTS.

6-9. Items marked by a dagger (†) in the reference designator column are available only for repair and service of Hewlett-Packard instruments.

				ADDDEV	IATIONS			
Αa	silver	Hz .	berta /	cycle(s) per second)		0003	tive positive zero	sl slide
- Al	aluminum	mz .	nertz v	cycle(2) bei second)	INTO		sture coefficient)	SPDT single-pole double throw
Ā	ampere(s)	1D		inside diameter	ns		s) 10 ⁻⁹ seconds	SPST single pole single throw
Au	gold	impg			nsr		ately replaceable	31 31 single pole single throw
~"	gold	incd		incandescent	rtal	not sepai	alely replaceable	Ta tantalum
C	capacitor	ins		insulation(ed)	Ω			TC
Cer	capacitor	1115		insulation(eu)			ohm(s)	
coef	coefficient	kΩ	6.36	hm(s) = 10+3 ahms			er by description	•
i com	common			ohertz - 10+3 hertz	00		outside diameter	tog toggie
come		K/12		Offertz + 10 + Hertz	_			
conn	composition	L		inductor	p			TSTR transistor
COM	Connection	lin			pc		.picoampere(s) . printed circuit	TSTR transistor
				logarithmic taper			d(s) 10 ⁻¹² farads	V volt(s)
nep DPDT	deposited double throw	10g		. rogarithmic taper	•		k inverse voltage	
DPST		mA	-:11:	e(s) = 10 3 amperes		pea		vacw alternating current working voltage
UPSI	double pale single throw			ahertz 10 amperes	p/o		part of	var
nlant	al	MΩ.		ohm(s) 10+6 ohms				vdcw direct current working voltage
elect	electrolytic	met film	meg	metal film.	poly		polystyrene	VA:
encap	encapsulated	met iim . mfr		metai tiim	рот		potentiometer peak to peak	W wart(s)
F	4 443	ms					parts per million	
· FET	farad(s)	mtg .		millisecond	ppm prec p		rature coeffient.	wiv working inverse voltage
_	field effect transistor	mV	modifi	ivoltisi 10 ⁻³ volts			nd or tolerance)	
fxd	fixed	шF			iong	term statistity a	nd or tolerance)	ww wirewound
C .				microsecond(s)	R			
GaAs	gallium arsenide gigahertz 10*9 hertz	μs μV		ovolt(s) = 10.6 volts			resistor rhodium	
GH.				Mylar(R)			oot-mean-square	optimum value selected at factory.
gri	guard(ed)	my		NIVIAI (P)	rot		rotary	average value shown (part may be omitted)
Ge	germanium	nA .		re(s) 10.9 amperes	701		· TOTALY	no standard type number assigned
and	ground(ed)	NC .	narroampe	normally closed	Se		ælenium	selected or special type
н	henry(ies)	Ne		neon	sect		section(s)	
Hq	mercury	NO		normally open	Si		silicon	(R) Dupont de Nemours
rig	mercory			DECIMAL M				0
	F			A4 to1	Prefix	C b . 1:		
		Prefix	Symbols	Multiplier		Symbols	Multiplier	
		tera	T	1012	centi	c	10 2	
	ļ.	giga	G	10 ⁹	milli	m	10:3	
		mega	M or Meg	106	micro	и	10.6	
		kilo	Kork	103	nano	, ,	10.9	
	!							
		hecto	h	102	pico	Þ	10-12	
		deka	tha .	10	femto	f	10-15	
	1	deci	ď	10 1	atto	đ	10 ⁻¹⁸	ero o 2724
	<u> </u>			DESIGN	ATORS			STO-B-2734
A	assembly	FL		filter	0		transistor	TS terminal strip
6	motor	HB		heater	QCR		transistor-diode	U microcircuit
e T	battery	IC.		integrated circuit	R		resistor	V vacuum tube, neon bulb photocell, etc
	Capacitor	J		jack	RT		thermistor	W cable
	capacitor diode	k.		relay	S		switch	X socket
Ç		**						
CR		1		inductor	7		transformer	XDS tampholder
CR DL	delay line	L No		inductor meter			transformer terminal board	XDS . lampholder XE fuseholder
CR		M MP		inductor meter mechanical part	TB TC		transformer terminal board thermocouple	XDS : lampholder XF fuseholder Y crystar

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1 A1C1 A1C2 A1C3 A1C4	03575-66501 0160-3402 C121-0059 0160-2203 0160-3402	2 4 3 2	BOARD ASSY:PRE-AMPLIFIER C:FXD POLY 1.0 UF 5% 50VCCW C:VAR CER 2-8 PF C:FXD MICA 91 PF 5% C:FXD POLY 1.0 UF 5% 50VDCW	28480 84411 28480 72136 84411	03575-66501 HEW 138 0121-0059 RDM15F910J3C HEW 138
A1C5 A1C6 A1C7 A1C8 + A1C9	0160-3622 0160-2204 0170-0055 0160-2055 0140-0232	45 9 2 11	C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD MICA 100PF 5% C:FXD MY 0.1UF 20% 200VDCW C:FXD CER 0.01 UF +80-20% 100VDCW C:FXD MICA 460 pF 1%	28480 72136 56289 56289 72136	0160-3622 RDM15F101J3C 192P10402 CO23F101F103ZS22-CDH 0BD
A1C10 A1C11 A1C12 A1C13 A1C14	0160-0362 0160-2055 0160-2055	2	C:FXD MICA 510PF 5% C:FXD CER 0.01 UF +80-20% 100VDCW C:FXD CER 0.01 UF +80-20% 100VDCW NDT ASSIGNED C:FXD ELECT 4.7 UF 20% 10VDCW	284 80 562 89 562 89 562 89	0160-0362 C023F101F103ZS22-CDH C023F101F103ZS22-COH 150D475X0010A2-DYS
A1C15 A1C16 A1C17 A1C18 A1C19	C160-3622 C180-1835 O18C-0106 O160-3622 C160-0128	8 9	C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD TA 68 UF 20% 15VDCW C:FXD ELECT 60 UF 20% 6VDCM C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD CER 2.2 UF 20% 25VDCW	28480 56289 28480 28480 5628 9	0160-3622 150D686X0015R2-DYS 0180-0106 0160-3622 5C152C2S-CML
A1C20 A1C21 A1C22 A1C23 A1C24	0180-0106 0160-3622 0160-3622 0180-1835 0160-3622		C:FXD ELECT 60 UF 20% 6VDCW C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD TA 68 UF 20% 15VDCW C:FXD CER 0.1 UF +80-20% 100VDCW	28480 28480 28480 56289 28480	0180-0106 0160-3622 0160-3622 1500686X0015R2-DYS 0160-3622
A1C25 A1C26 A1C27 A1C28 A1CR1, A1CR2	0160-0128 0160-2130 0160-0763 1901-0040	2 82	NOT ASSIGNED C:FXD CER 2.2 UF 20% 25VDCW C: FXD MICA 865pF 1 % 100 VDCW C: FXD MICA 5PF 10% 500 VDCW DIODE:SILICON 50MA 30MV	56289 00853 28480 07263	5C152C2S-CML OBD 0160-0763 FDG1088
AICR3 AICR4 AICR5 AICR6 AIICI	1901-0040 1901-0040 1901-0040 1901-0040 1820-0478	4	DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV IC:LINEAR OPERATIONAL AMPLIFIER	07263 07263 07263 07263 12040	FDG1088 FDG1088 FDG1088 FDG1088 LM 308H
A1J1 A1J2 A1K1 A1K1 A1K2	0362 · 0350 1251-1195 0490-0366 0490-1046 0490-0366	2 3 4 4	TERMINATION: CRIMP LUG CONNECTOR: RF SWITCH:REED RELAY SPNO CONTACT RELAY:REED COIL ASSY SWITCH:REED RELAY SPNO CONTACT	59730 28480 28480 28480 28480 28480	GSF : 156 1251-1195 0490-0366 0490-1046 0490-0366
A1K2 # A1L1 A1L2 thru A1L5 A1MP1 A1O1	0490-1046 9100-1644 9170-0894 1400-0760 1854-0071	2 8 28	RELAY:REED COIL ASSY COIL: MOLDED CHOKE 330 UH 5 % BEAD: SHIELDING CORE, MAGNETIC CLIP: MOUNTING ASSY (SET 0F 3) TSTR:SI NPN(SELECTED FROM 2N3704)	28480 82142 28480 28480 28480	0490-1046 19:1331:23J 9170-0894 1400-0760 1854-0071
A1Q2 A1Q3 A1Q4 A1Q5 A1Q6	1854-0C71 1855-0081 1853-0203 1853-0203 1854-0354	5 8 2	TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI FET TSTR:SI PNP TSTR:SI PNP TSTR:SI NPN	28480 80131 28480 28480 28480	1854-0071 2N5245 1853-0203 1853-0203 1854-0354
A1Q7 A1Q8 A1Q9 A1Q10 A1R1	1853-0203 1854-0071 1854-0071 1854-0071 0684-1031	23	TSTR:SI PMP TSTR:SI NPM(SELECTED FROM 2N3704) TSTR:SI NPM(SELECTED FROM 2N3704) TSTR:SI NPM(SELECTED FROM 2N3704) R:FXD COMP 10K OHM 10% 1/4W	28480 28480 28480 28480 01121	1853-0203 1854-0071 1854-0071 1854-0071 CB 1031
A1R2 A1R3 A1R4 A1R5 A1R6	0684-1031 0684-1031 2100-2633 0757-0187 0698-4158	2 2 2 2	R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 10K OHM 10% 1/4W R:VAR CERMET 1K OHM 10% LIN 1/2W R:FXD MET FLM 900K OHM 0.1% 1/2W R:FXD FLM 100K OHM 0.1% 1/2W	01121 01121 28480 28480 28480	CB 1031 CB 1031 2100-2633 0757-0187 0698-4158
A1R7 A1R8 A1R9 A1R10 # A1R11	0684-1011 0684-1061 0684-1041 0684-1061 0757-0282	21 15 51	R:FXD COMP 100 OHM 10% 1/4W R:FXD COMP 10 MEGOHH 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 10 MEGOHM 10% 1/4W R:FXD MET FLM 221 OHM 1% 1/8W	01121 01121 01121 01121 28480	CB 1011 CB 1061 CB 1041 CB 1061 0757-0282
#1R12 #1R13 #1R14 #1R15 #1R16	0684-1001 0684-1001 0757-0280 0757-0401 0757-0280	10 8	R:FXD COMP 10 OHM 10% 1/4W R:FXD COMP 10 OHM 10% 1/4W R:FXD MET FLM 1K OHM 1% 1/8W R:FXD COMP 100 OHM 10% 1/8W R:FXD MET FLM 1K OHM 1% 1/8W	01121 01121 28480 14674 28480	CB 1001 CB 1001 0757-0280 C4 - I-0 0757-0280
A1R17 £1R18 A1R19 A1R20 £ A1R21	0698-4424 0684-1011 0684-1001 0684-1001 0698-4469	2	R:FXD FLM 1400 OHM 1% 1/8W R:FXD COMP 100 OHM 10% 1/4W R:FXD COMP 10 OHM 10% 1/4W R:FXD COMP 10 OHM 10% 1/4W R:FXD FLM 1.15 K OHM 1 % 1/8 W	28480 01121 01121 01121 28480	0698-4424 CB 1011 CB 1001 CB 1001 0698-4469

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mir Part Number
# A1K22 # A1R23 #1R24 A1R25 #1R26	0698-4391 0698-3557 0757-0273 C698-3515 0698-4480	2 8 2 4	R: FXD FLM 69.8 OHM 1%. 1/8 W R: FXD FLM 886 OHM 1% 1/8 W R: FXD MET FLM 3.01K OHM 1% 1/8 H R: FXD FLM 5900 OHM 1% 1/8 W R: FXD MET FLM 15.8K OHM 1% 1/8 W	91637 91637 28480 28480 28480	CMF-1/10-32 T-1 MF-1/10-32 T-1 0757-0273 0698-3515 0698-4480
A1R27 A1R28 £1R29 £1R30 A1R31	C698-4486 0698-4499 0757-0283 0684-1031 0698-5101	2 2 4 8	R:FXD MET FLM 24.9K OHM 1% 1/8W R:FXD FLM 54.9K OHM 1% 1/8W R:FXD OHT FLM 2.0OK OHM 1% 1/8W R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 33 OHM 10% 1/4W	28480 28480 28480 01121 01121	0698-4486 0698-4499 0757-0283 CB 1031 CB 3301
#1R32 #1R33 #1R34 #1R35 #1R36	0698-5101 0698-5101 0698-5101 0698-4480 0698-3519	2	R:FXD COMP 33 OHM 10% 1/4W R:FXD COMP 33 OHM 10% 1/4W R:FXD COMP 33 OHM 10% 1/4W R:FXD MET FLM 15.8K OHM 1% 1/8W R:FXD MET FLM 12.4K OHM 1% 1/8W	01121 01121 01121 28480 28480	CB 3301 CB 3301 CB 3301 0698-4480 0698-3519
#1R37 #1R36 ##1R39 #1R40 #1R41 #1R42 #1R43	0698-3548 0757-0465 0898-3122 2100-2516 0698-4499 0698-4396 0698-4374	5 14	R:FXD 1.6T FLM 732 OHN 1% 1/8H R:FXD MET FLM 100K OHM 1% 1/8W R: FXD FLM 412 OHM 1% 1/8W R: VAR CER 100K OHM 10% LIN 1/2W R: FXD FLM 54.9K 1% 1/8W R: FXD FLM 50.6 OHM 1% 1/8W R: FXD FLM 29.4 OHM 1% 1/8W	28480 28480 91637 28480 28480 28480 28480	0698-3548 0757-0465 CMF-1/10-32 T-1 2100-2516 0698-4499 0698-4396 0698-4374
A2 (SAME AS A1) A3	03575-66501 03575-66503 0160-3622 0160-3787 0160-2218 0160-2204	4 2	BOARD ASSY: PRE - AMPLIFIER BOARD ASSY, LOG CONVERTER C: FXD CER 0,1 UF +80 % -20 % 100 VDCW C:FXD POLY 1.0 UF 10% 50VDCH C:FXD MICA 1000 PF 5% C:FXD MICA 100PF 5% C:FXD POLY 1.0 UF 10% 50VDCW	28480 28480 72982 28480 28480 72136 28480	03575-66501 03575-66501 8131-100-651-1042 0160-3787 0160-2218 RDM15F101J3C 0160-37787
A3C5 A3C6 A3C7 A3C8 A3C9 1 A3C10	0160-3787 0160-0127 0140-0180 0160-2530 0160-3435 0160-3622	2 2 2 2	C:FXD CER 1.0 OF 104 30VDCW C:FXD MICA 2000 PF 2% C:FXD MICA 180 PF 2% 300VDCW C:FXD MY 0.047 UF 10% 50VDCW C: FXD CER 0.1 UF +80% 20 % 100 VDCW	56289 28480 00853 28480 72982	5C13CS-CML 0140-0180 RDM15F181G3S 0160-3435 8131-100-651-104Z
A3C11 A3C12 A3C13 A3C14 A3C15	C160-2322 C140-0202 O140-0202 O160-3622 O180-1701	2 4	C:FXD MICA 18 PF 5% 100VDCM C:FXD MICA 15 PF 5% 500VDCM C:FXD MICA 15 PF 5% 500VDCM C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD ELECT 6.8 UF 20% 6VDCW	00853 28480 28480 28480 28480	RDM15C180J1S 0140-0202 0140-0202 0160-3622 0180-1701
#3C16 #3C17 #3C18 #3C19 #3C20	0160-2204 0160-3622 0160-3622 0160-3622 0160-3622		C:FXD MICA 100PF 5% C:FXD CER 0.1 UF +80-20% 100VDCW	72136 28480 28480 28480 28480	RDM15F101J3C 0160-3622 0160-3622 0160-3622 0160-3622
#3C21 #3C22 #3C23 #3C24 #3C25	0160-3622 0160-0128 0160-0128 0180-1701 0140-0200	8	C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD CER 2.2 UF 20% 25VDCM C:FXD CER 2.2 UF 20% 25VDCW C:FXD ELECT 6.8 UF 20% 6VDCW C:FXD MICA 390 PF 5%	28480 56289 56289 28480 72136	0160-3622 5C152C2S-CML 5C152C2S-CML 0180-1701 RDM15F391-J3C
A 3C 26 A 3C 27 A 3C 28 A 3C 29 A 3C 3O	0180-2419 0160-3622 0160-3622 0160-0128 0180-0229	6	C:FXD TANT. 470 UF 20% 10VDCM C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD CER 2.2 UF 20% 25VDCM C:FXD ELECT 33 UF 10% 10VDCW	56289 28480 28480 56289 28480	109D477X0010F2 0160-3622 0160-3622 5C152C2S-CML 0180-0229
A 3C 31 A 3CR 1 A 3CR 2 A 3CR 3 A 3CR 4	0160-0128 1901-0040 1901-0040 1901-0040 1901-0040		C:FXD CER 2.2 UF 20% 25VDCW DIODE: SILICON 50MA 30WV DIODE: SILICON 50MA 30WV DIODE: SILICON 50MA 30WV DIODE: SILICON 50MA 30WV	56289 07263 07263 07263 07263	5C152C2S-CML FDG1088 FDG1088 FDG1088 FDG1088
#3CR5 #3CR6 #3CR7 #3CR8 #3CR9	1901-0040 1901-0040 1901-0040 1901-0040 1901-0040		DIODE: SILICON 50MA 30WV	07263 07263 07263 07263 07263	FDG1088 FDG1088 FDG1088 FDG1088 FDG1088
A3CR10 A31C1† A31C2 A31C3 A31C4	1901-0040 1813-0002 1820-0478 1826-0059 03575-80001	2 8 2	DIODE:SILICON 30WV IC:HYBRID IC:LINEAR OPERATIONAL AMPLIFIER IC:LINEAR OPER. AMPL. TRANSISTOR ARRAY:SI NPN	07263 28480 12040 12040 28480	FDG1088 1813-0002 LM 308H LM201AD 03575-80001
#31C5 #3J2 #3J2 #3L1 * #3L2 #3L3 #3L4	1858-0019 1826-0059 1251-1636 0360-1715 9100-3284 9140-0018 9140-0018	3 4 4 2 4	TSTR ARRAY: DUAL INDEP. DIFFERENTIAL IC:LINEAR OPER. AMPL. CONNECTOR: SINGLE MALE CONTACT TERMINAL: SOLDER STUD 0.040" SHANK DIA INDUCTOR: FXD 0.35-0.55 UH COIL: FXD 1 UH COIL: FXD 1 UH BEAD: SHIELDING CORE, MAGNETIC	02735 12040 28480 00000 28480 99848 98848 28480	CA 3054 LM 201 AD 1251-1636 OBD 9100-3294 205-11-10 205-11-10 9170-0894
A3L4 A3MP1 A3Q1 A3Q2	9170-0894 1205-0220 1854-0C71 1854-0071	2	HEAT SINK: FOR TO-5 TRANSISTOR TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704)	05820 28480 28480	260-10SH5E 1854-0071 1854-0071

Table 6-1. Replaceable Parts(Cont'd)

Designation	HP Part Number	Qty	Description	Code	Mfr Part Numbe
			-		
A3Q3	1854-0071		TSTR:SI NPN(SELECTED FROM 2N3704)	28480	1854-0071
A304	1853-0020	23	TSTR:SI PNP(SELECTED FROM 2N3702)	28480 28480	1853-0020 1853-0020
A 305 A 306	1853-0020 1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702)	28480	1853-0020
A307	1853-0203		TSTR: SI PNP	28480	1853-0203
8964	1853-0C89	4	TSTR:SI PNP	80131	2N4917
A309	1853-0089	_	TSTR:SI PNP	80131 28480	2N4917 5080-9064
A3010 A3RI	5080-9064 0698-3558	2	TSTR:SI NPN ASSY R:FXD MET FLM 4.02K DHM 1% 1/8W	28480	0698-3558
43R2	0698-3447	2	R:FXD MET FLM 422 OHM 1% 1/8W	284 80	0698-3447
A3R3	0698-4445	2	R:FXD FLM 5.76K CHM 1% 1/8W	28480	0698-4445
£3R4	0684-1061	2	R:FXD COMP 10 MEGOHM 10% 1/4W R:FXD MET FLM 10.0K DHM 1% 1/8W	01121 28480	C8 1061 0757+0442
A 3R 5 A 3R 6	0757 -044 2 0757 -028 3	2	R:FXD MET FLM 2.00K OHM 1% 1/8W	284 80	0757-0283
43R7	0684-1061		R:FXD COMP 10 MEGOHM 10% 1/4W	01121	CB 1061
A3R8	0757-0346	4	R:FXD MET FLM 10 DHM 1% 1/8W	28480	0757-0346
A 3R9	0757-0410		R:FXD MET FLM 301 OHM 1% 1/8W	28480 01121	0757-0410 CB 1031
#3R10	0684-1031 0757-0273		R:FXD COMP 10K OHM 10% 1/4W R:FXD MET FLM 3.01K OHM 1% 1/8W	28480	0757-0273
#3R11 #3R12	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
43R13	0698-3262		R: FXD FLM 40.2 OHM 1% 1/8 W	91637	CMF-1/10-32 T-1
#3R14	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121 01121	CB 1031 CB 2721
A3R15 A3R16	0684-2721 0684-2721	19	R:FXD COMP 2700 OHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W	01121	CB 2721
#3R16 #3R17	0684-1031		R:FXD COMP 10K OHM 10% 1/4W	01121	CB 1031
#3R18	2100-2583	2	R:VAR CERMET 10 OHM 2% LIN 1/2W	28480	2100-2583
∆ 3R19	0757-0402	2	R:FXD MET FLM 110 DHM 1% 1/8W	28480 01121	0757-0402 CB 1021
#3R20	0684-1021	8 2	R:FXD COMP 1000 OHM 10% 1/4W R:FXD FLM 604 OHM 1% 1/8W	28480	0757-0161
A3R21 A3R22	0757-0161 0757-0284	4	R:FXD MET FLM 150 OHM 1% 1/8W	284 80	0757-0284
A 3R 2 3	0698-3437	İ	R: FXD FLM 133 OHM 1 % 1/8 W	91637	CM F-1/10-32 T-1
A3R24	C698-4391	4	R:FXD FLM 69.8 OHM 1% 1/8W	28480	0698-4391 0698-4391
A3R25	0698-4391 0698-3700	4	R:FXD FLM 69.8 OHM 1% 1/8W R:FXD FLM 715 OHM 1% 1/8W	28480 28480	0698-3700
A3R26 A3R27	0698-4125	2	R:FXD FLM 953 OHM 1% 1/8W	28480	0698-4125
A3R28	0757~0407	10	R:FXD MET FLM 200 OHM 1% 1/8W	28480	0757-0407
#3R29	2100-2632	2	R:VAR FLM 100 OHM 10% LIN 1/2W	28480 28480	2100-2632 0698-4459
A3R30 A3R31*	0698-4459 0757-0273	2	R:FXD FLM 634 OHM 1% 1/8W R:FXD MET FLM 3.01K OHM 1% 1/8W	284 80	0757-0273
A3R32	2100-3338	2	R:VAR FLM 5000 OHM 10% LIN 1/2W	28480	2100-3338
A3R33	0698-3700		R:FXD FLM 715 OHM 1% 1/8W	28480	0698-3700
A3R34	0698-6326	4	R:FXD FLM 500 OHM 1% 1/8W R:FXD FLM 500 OHM 1% 1/8W	28480 28480	0698-6326 0698-6326
A3R35 A3R36	0698-6326 0698-3440	2	R:FXD FLM 300 UHM 1% 1/8W R:FXD FLM 196 OHM 1% 1/8W	28480	0698-3440
#3R36 #3R37	0757-0413	2	R:FXD MET FLM 392 OHM 1% 1/8W	28480	0757-0413
A 3R 38	0698-5546	4	R:FXD FLM 174 OHM 18 1/8W	28480	0698-5546
A3R39	0698-5546	4	R:FXD FLM 174 OHM 1% 1/8W R:FXD FLM 78.7 OHM 1% 1/8W	28480 28480	0698-5546 0698-5545
A3R40 A3R41	0698-5545 0698-5545	*	R:FXD FLM 78.7 OHM 1% 1/8W	28480	0698-5545
A3R42	0757-0405	2	R: FXD FLM 162 OHM 1 % 1/8 W	28480	0757-0405
A3R43	0684-1041		R:FXD COMP 100K OHM 10\$ 1/4W	01121	CB 1041
A3R44	0684-1001	3	R:FXD COMP 10 OHM 10% 1/4W R:FXD MET FLM 215 OHM 1% 1/8W	01121 284 80	CB 1001 0698-3441
A3R45 A3R46	0698-3441 0757-0407	,	R:FXD MET FLM 200 DHM 1% 1/8W	28480	0757-0407
A3R47	0757-0407		R:FXD MET FLM 200 DHM 1% 1/8W	284 80	0757-0407
A3R48	0757-0407		R:FXD MET FLM 200 OHM 1% 1/8W	284 80	0757-0407 0757-0407
A3R49	0757-0407 2100-3339	2	R:FXD MET FLM 200 OHM 1% 1/AW R:VAR CERMET 100K OHM 10% 1/2W, Type X	28480 28480	2100-3339
A3R50 A3R51	0698-3551	4	R:FXD FLM 280K OHM 1% 1/8W	28480	0698-3551
A3R52	0698-6797	4	R:FXD FLM 660 DHM 1% 1/8W	28480	0698-6797
A3R53	0698-8161	8	RIFXD MET FLM 20K DHM 1.0% 0.1W	284 80 284 80	0698-8161 0698-8161
A3R54 A3R55	0698-8161 0698-6797		R:FXD MET FLM 20K OHM 1.0% 0.1W R:FXD FLM 660 OHM 1% 1/8W	28480	06 98 ~679 7
A3R56	0698-8161		R:FXD MET FLM ZOK OHM 1.0% 0.1W	28480	0698-8161 0698-3551
A3R57	0698-3551		R:FXD FLM 280K DHM 1% 1/8W	28480	
A3R58	06 98-8 16 1		R:FXD MET FLM 20K DHM 1.0% G.1W	28480	0698-8161
#3R59 #3R60	0684-0271	2	NOT ASSIGNED R:FXD COMP 2.7 OHM 10% 1/4W	01121	CB 27G1
43R61	0757-0446	2 2	R:FXD MET FLM 15.OK OHM 1% 1/8W R:FXD MET FLM 20K OHM 0.1% 1/8W	284 80 284 80	0757-0446 0698-6630
#3R62	0698-6630	1			0698-6629
43R63	0698-6629 0684-2201	2 2	R:FXD FLM 60K 0HM 0.1% 1/8W R:FXD COMP 22 OHM 10% 1/4W	28480 01121	CB 2201
A3R64 A3R65	0684-1511	2	R:FXD COMP 150 OHM 10% 1/4W	01121	CB 1511
#3R66	0684-1011 0684-1011		R:FXD COMP 100 OHM 10% 1/4W R:FXD COMP 100 OHM 10% 1/4W	01121 01121	CB 1011 CB 1011
43R67					

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Numbe
#3R68	06 84-1011	6	R:FXD COMP 100 OHM 10% 1/4W	01121	C8 1011
#3R69, R70	06 84-3921		R:FXD COMP 3900 OHM 10% 1/4W	01121	C8 3921
A3R71	0698-4445		R: FXD FLM 5/6K OHM 1% 1/8W	16299	C4-1/8-TO-5761-F
#4 (SAME AS A3)	03575-66503		BOARD ASSY: DOG CONVERTER	28480	03575-66603
#5	03575-66505		BOARD ASSY: PHASE DETECTOR	28480	03575-66505
A5C1 A5C2 A5C3 A5C4 A5C5	0150-0084 0180-1746 0160-3622 0180-0229 0160-3622	2	C:FXD CER 0.1 UF +80% -20% 100 VDCW C:FXD ELECT 15 UF 10% 20VDCM C:FXD CER 0.1 UF +80-20% 100 VDCW C:FXD ELECT 33 UF 10% 10VDCW C:FXD CER 0.1 UF +80-20% 100 VDCW	72482 28480 28480 28480 28480 28480	8131-100-651-104Z 0180-1746 0160-3622 0180-0229 0160-3622
A5C6 A5C7 A5C8 A5C9 A5C10 *	0180-0229 0160-3622 0180-1746 0160-3622		C:FXD ELECT 33 UF 10% 10VDCW C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD ELECT 15 UF 10% 20VDCW C:FXD CER 0.1 UF +80-20% 100VDCW NOT ASSIGNED	28480 28480 28480 28480	0180-0229 0160-3622 0180-1746 0160-3622
A5C11 * A5C12 * A5CR1 A5CR2 A5CR3	1901-0518 1901-0518 1901-0518	6	NOT ASSIGNED NOT ASSIGNED DIODE:HOT CARRIER DIODE:HOT CARRIER DIODE:HOT CARRIER	28480 28480 28480	1901-0518 1901-0518 1901-0518
A5CR4 A5CR5 A5CR6 A5CR7 A5IC1	1901-0518 1902-0692 1901-0376 1901-0376 1820-0253	2 4 1	DIODE:HOT CARRIER DIODE:TC REFERENCE 6.3V 1% DIODE:SILICON 35V DIODE:SILICON 35V INTEGRATED CIRCUIT:DIGITAL ECL DUAL	28480 28480 28480 28480 04713	1901-0518 1902-0692 1901-0376 1901-0376 MC1035P
A51C2 A51C3 A51C4 A51C5 A51C6	1820-0200 1820-0157 1820-0897 1820-0200 1820-0897	2 1 2	IC:ECL QUAD EXCL. OR GATE IC:ECL DUAL 4-INPT OR/NOR CLOCK DRIVER IC:ECL QUAD 2-INPT AND GATE IC:ECL QUAD EXCL. OR GATE IC:ECL QUAD 2-INPT AND GATE	04713 04713 04713 04713 04713	MC 1030P MC 1023P MC 1047B MC 1030P MC 1047B
A51C7 A51C8 A51C9 A51C10 A51C11	1820-0581 1858-0019 1826-0043 1826-0043 1826-0043	1 15	IC:DIGITAL ECL DUAL AC-COUPLED J-K/F-F TSTR ARRAY:DUAL INDEP. DIFFERENTIAL IC:LINEAR OPERATIONAL AMPLIFIER IC:LINEAR OPERATIONAL AMPLIFIER IC:LINEAR OPERATIONAL AMPLIFIER	28480 02735 28480 28480 28480	1820-0581 CA 3054 1826-0043 1826-0043 1826-0043
A5J2	1251-1636	1	CONNECTOR:SINGLE MALE CONTACT	28480	1251-1636
A5J2	0360-1715		TERMINAL:SOLDER STUD 0.040" SHANK DIA	00000	OBD
A5J3	1251-1636		CONNECTOR:SINGLE MALE CONTACT	28480	1251-1636
A5J3	0360-1715		TERMINAL:SOLDER STUD 0.040" SHANK DIA	00000	OBD
A5MP1	1200-0424		SOCKET:IC BLK 14 CONTACT	23880	CSA2900-14B
A501 A5Q2 A5Q3 A5R1 A5R2	1853~0086 1855~0082 1855~0082 0757~0280 0698~4469	1 2 1	TSTR:SI PNP TSTR:SI FET P-CHANNEL TSTR:SI FET P-CHANNEL R:FXD MET FLM 1K OHM 1% 1/8W R:FXD FLM 1.5K OHM 1% 1/8W	80131 28480 28480 28480 28480 28480	2N5087 1855-0082 1855-0082 0757-0280 0698-4469
A5R3	0757-0420	4 14	R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A5R4	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A5R5	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A5R6	0757-0420		R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A5R7	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
#588	0684-1231	2	R:FXD COMP 12K OHM 10% 1/4W	01121	CB 1231
#589	0757-0420		R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
#5810	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
#5811	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
#5812	0757-0420		R:FXD MET FLM 750 OHM 1% 1/8W	28480	0757-0420
A5R13	0757-0427	2 4	R:FXD MET FLM 1.5K OHM 1% 1/8W	284 80	0757-0427
A5R14	0698-4426		R:FXD FLM 1580 OHM 1% 1/8W	284 80	0698-4426
A5R15	0684-1811		R:FXD COMP 180 OHM 10% 1/4W	01121	CB 1811
A5R16	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	284 80	0757-0427
A5R16	0698-3557		R:FXD FLM 806 OHM 1% 1/8W	284 80	0698-3557
#5R18	0698-4458	1 4	R:FXD FLM 590 OHM 1% 1/8W	284 80	0698-4458
#5R19	0698-4460		R:FXD FLM 649 OHM 1% 1/8W	284 80	0698-4460
#5R20	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	284 80	0787-0427
#5R21	C698-4426		R:FXD FLM 1580 OHM 1% 1/8W	284 80	0698-4426
#5R22	0684-1811		R:FXD COMP 180 OHM 1% 1/4W	011 21	CB 1811
A5R23	0757-0427	2	R:FXD MET FLM 1.5K OHM 1% 1.6W	28480	0757-0427
A5R24	0698-3557		R:FXD FLM 806 OHM 1% 1/8W	28480	0698-3557
A5R25	0757-0427		R:FXD MET FLM 1.5K OHM 1% 1/8W	28480	0757-0427
A5R26	0698-4460		R:FXD FLM 649 OHM 1% 1/8W	28480	0698-4460
A5R27	0698-4419		R:FXD FLM 210 OHM 1% 1/8W	28480	0698-4419
A5R28	0698-4419	2 2 5	R:FXD FLM 210 OHM 1% 1/8W	28480	0698-4419
A5R29	0757-0450		R:FXD MET FLM 22.1K OHM 1% 1/8W	28480	0757-0450
A5R30	0757-0429		R:FXD MET FLM 1.82K OHM 1% 1/8W	28480	0757-0429
A5R31	2100-3123		R:YAR CERMET 500 OHM 10% TYPE P 3/4W	28480	2100-3123
A5R32	0757-0450		R:FXD MET FLM 22.1K OHM 1% 1/8W	28480	0757-0450

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Oty	Description	Mfr Code	Mfr Part Number
#5R 4 5 #5k 44 #5k 50 #5k 50 #5k 57	065H-7552 7757-0429 0757-0290 0658-7951 0658-8668	1 4 4 2	R:FXD FLM 1804 CHM R:FXD MET FLM 1.42K CHM 13 1/8W R:FXD MET FLM 6.19K UMM 13 1/8W R:FXU MET FLM 6.190 OHM R:FXC FLM 4.99N OHM 0.25T 1/8W	28480 28480 28480 28480 28480	0698-7952 0757-0429 0757-0290 0658-7551 0698-8068
156.38 156.39 158.40 156.41 156.42	C757~0290 2160-3123 2100-3123 (693-4460 C757-0427		R:FXD MET FLM 6.19K CHM 14 1/8W R:VAR CERMET 500 UHM 10% TYPE P 3/4W R:VAR CERMET 500 OHM 10% TYPE P 3/4W R:FXD FLM 649 UHM 1% 1/9W P:FXD MET FLM 1.5K CHM 1% 1/8W	284 80 284 80 284 80 284 90 284 80	0757-0290 2100-3123 2100-3123 0698-4460 0757-0427
65843 65844 65845 6551 66	C654+7551 C664-1231 C757-0427 3131-1637 C3575-66506	2 1	R:FXD MET FLM 6190 CHM R:FXD COMP 12K OHM 10% 1/4W R:FXD MET FLM 1.5K OHM 1% 1/8W SWITCH:SLIDE DP4T BOARD ASSY:CURRENT	284 €0 01121 284 €0 284 80 284 80	0698-7951 CB 1231 0757-0427 3101-1637 03575-66506
46C1 46C2 46C3 46C4 46C5	C160 3622 0180-1746 C160-3622 C180-0229 C160-3622		C:FAD CER 0.1 UF +80: -20:100 VDCW C:FAD ELECT 15 UF 10% 20VDCW C:FAD CER 0.1 UF +80-20 100VDCW C:FAD ELECT 33 UF 10% 10VDCW C:FAD CER 0.1 UF +80-20 100VDCW	72982 28480 28480 28480 28480	8131-100-651 104Z 0180-1746 0160-3622 0180-0229 0160-3622
#606 #607 #608 #609 #6010* - 13 *	C180-0279 C160-3622 C180-1746 C160-3622		C:FXD ELECT 33 UF 10% 10VCCh C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD ELECT 15 UF 10% 20VDCh C:FXD CER 0.1 UF +80-20% 100VDCW NOT ASSIGNED	28480 28480 28480 28480	0180-0229 0160-3622 0180-1746 0160-3622
#6014, 15 #6016 #60R1 #60R2	0160 3622 1901-0518 1901-0518		C FXB CER 0.1 UF + 80 · 20 % 100 VDCW NOT ASSIGNED JIODE:HOT CARRIER DIODE:HOT CARRIER	72982 28480 28480	8131-100-651-104Z 1901-0518 1901-0518
66CR3 66CR4 66CR5 66IC1 66IC2	1901-0376 1901-0376 1902-0692 1826-0043 1826-0043		DIODE:SILICON 35V DIODE:SILICCN 35V DICDE:TC REFERENCE 6.3V 1% IC:LINEAR OPERATIONAL AMPLIFIER IC:LINEAR OPERATICNAL AMPLIFIER	28480 28480 28480 28480 28480	1901-0376 1901-0376 1902-0692 1826-0043 1826-0043
#6103 #6104 #631 #6MP1 #601	1826-0043 1326-0043 1251-3134 1600-0248 1854-0345	2	IC:LINEAR CPERATIONAL AMPLIFIER IC:LINEAR OPERATIONAL AMPLIFIER CONNECTOR:PHONG, SINGLE JACK SUPPORT:RI. ANGLE CONNECTOR ISTR:SI NPN	28480 28480 28480 28480 80131	1826-0043 1826-0043 1251-3134 1600-0248 2N5179
A602 1603 A604 1605 A606	1854-0345 1854-0C71 1855-0081 1855-0C81 1855-0C81		TSTR:SI NPN TSTR:SI NPM(SELECTED FROM 2N3704) TSTR:SI FET TSTR:SI FET TSTR:SI FET	80131 28480 80131 80131 80131	2N5179 1854-0071 2N5245 2N5245 2N5245
66R 1 46R 2 46R 3 46R 4 46R 5	0684-100 I 0757-0277 0757-0277 0684-1811 0698-3512	2	R: FXD COMP 10 OHM 107 14W R:FXD MET FLM 49-9 OHM 1% 1/8W R:FXD MET FLM 49-9 CHM 1% 1/8W R:FXD COMP 180 OHM 10% 1/4W R:FXD FLM 1180 OHM 1% 1/8W	28480 28480 28480 01121 28480	0684 1001 0757-0277 0757-0277 CB 1811 0698-3512
F6K6 F0R7 F6R8 F6K5 F0K10	C698-4014 C698-3441 C757-0434 O757-0434 C684-3921	1 2	R:FXD MET FLM 787 OHM 1% 1/8W R:FXD MET FLM 215 OHM 1% 1/8W R:FXD MET FLM 3.65K OHM 1% 1/8W R:FXD MET FLM 3.65K OHM 1% 1/8W R:FXD CGMP 3900 OHM 10% 1/4W	28480 28480 28480 28480 01121	0698-4014 0698-3441 0757-0434 0757-0434 CB 3921
#6R11 for12 #6R13 for14 #6R15	0684-1521 C664-3921 C658-7951 C757-C290 C698-3516	4	R:FXD COMP 1500 OHM 10% 1/4H R:FXD CCMP 3900 OHM 10% 1/4H R:FXD MET FLM 6190 CHM R:FXD MET FLM 6-19K CHM 1% 1/8W R:FXD FLM 6340 OHM 1% 1/8W	01121 01121 28480 28480 28480 28480	CB 1521 CB 3921 0698-7951 0757-0290 0698-3516
fok16 f6R17 f6K18 f6K19 f6R2U	C698-3516 C698-7951 C757-029C 2100-3123 C658-8068		R:FXD FLM 6340 OHM 1% 1/8W R:FXD MET FLM 6190 CHM R:FXD MET FLM 6.19K OHM 1% 1/8W R:YAR CERMET 500 CHM 10% TYPE P 3/4W R:FXD FLM 4.99K CHM 0.25% 1/8W	28480 28480 28480 28480 28480	0698-3516 0698-7951 0757-0290 2100-3123 0698-8068
16K21 16K72 16K23 16K24 16S1	2100-3123 C658-4460 C684-1521 C664-1811 3101-1637		R:VAR CERMET 500 OHM 10% TYPE P 3/4W R:FXD FLM 649 OHM 1% 1/8W R:FXD COMP 1500 OHM 10% 1/4W R:FXD COMP 180 OHM 10% 1/4W SWITCH:SLIDE DP4T	28480 28480 01121 01121 28480	2100-3123 0698-4460 CB 1521 CB 1811 3101-1637
47 4701 4702 4703 4704	C3575-66507 C160-3622 C140-0200 C160-0156 C160-0164	1 4 2	BOARD ASSY:CONTROL FILTER C:FXD CER 0.1 UF +80-20: 100VDCW C:FXD MICA 390 PF 5% C:FXD MY 0.0039 UF 10% 200VDCW C:FXD MY 0.0039 UF 10% 200VDCW	28480 28480 72136 56289 56289	03575-66507 0160-3622 RDM15F301-J3C 192P39292-PTS 192P3939392-PTS

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A7C5 A7C6 A7C7 A7C8* A7C9	0160-3826 0160-3501 0160-0156	4	C:FXD POLY 0.39 UF 105 SOVDCW C:FXD POLY 4 UF 10% SOVDCW C:FXD MY 0.0039 UF 10% 200VDCW NOT ASSIGNED C:FXD MY 0.0039 UF 10% 200VDCW	28480 84411 56289	0160-3826 HEW 138 192P39292-PTS 192P39292-PTS
A7C10 A7C11 A7C12 A7C13 A7C14	0160-3501 0160-3826 0160-0164 0160-0156 0140-0200		C:FXD PDLY 4 UF 10% 50VDCW C:FXD PDLY 0.39 UF 10% 50VDCW C:FXD MY 0.039 UF 10% 200VDCW C:FXD MY 0.0039 UF 10% 200VDCW C:FXD MY 0.0039 UF 10% 200VDCW	84411 28480 56289 56289 72136	HEW 138 0160-3826 192P39392-PTS 192P39292-PTS ROM15F391-J3C
#7C15° #7C16 #7C17 #7C18 #7C19	0140-0200 0160-3622 0180-0229 0160-3622	·	NDT ASSIGNED C:FXD MICA 390 PF 5% C:FXD CER 0.1 UF +80-209 100VDCW C:FXD ELECT 33 UF 10% 10VDCW C:FXD CER 0.1 UF +80-209 100VDCW	72136 28480 28480 28480	ROM15F391-J3C 0160-3622 0180-0229 0160-3622
A7C20 A7C21 A7CR1 A7CR2 A7CR3	0180-0229 0160-3622 1901-0040 1901-0040 1901-0040		C:FXD ELECT 33 UF 1C% 10VDCW C:FXD CER 0.1 UF +80-20% 100VDCW DIODE:SILICON 50MA 30WV DIDDE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV	28480 28480 07263 07263 07263	0180-0229 0160-3622 F0G1088 FDG1088 FDG1088
A7CR4 A7CR5 A7CR6 A7CR7 A7CR8	1901-0040 1901-0040 1901-0040 1901-0040 1901-0040		DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV	07263 07263 07263 07263 07263	FDG1088 FDG1088 FDG1088 FDG1088 FDG1088
A7CR9 A7CR10 A7CR11 A7CR12 A7CR13	1901-0040 1901-0040 1901-0040 1901-0040 1901-0040		DIDDE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV	07263 07263 07263 07263 07263	FDG1088 FDG1088 FDG1088 FDG1088 FDG1088
A7CR14 A7CR15 A7CR16 A7CR17 A7CR18	1902-3190 1901-0040 1902-3190 1901-0040 1902-3190	8	DIODE BREAKDOWN:13.0V 5% 400 MW DIODE:SILICON 50MA 30WV DIODE BREAKDOWN:13.0V 5% 400 MW DIODE:SILICON 50MA 30WV DIODE BREAKDOWN:13.0V 5% 400 MW	28480 07263 28480 07263 28480	1902-3190 FDG1088 1902-3190 FDG1088 1902-3190
A7IC1 A7IC2 A7IC3 A7MP1 A7MP2	1826-0043 1826-0043 1820-0223 4040-0748 4040-0755	8 3 1	IC:LINEAR OPERATIONAL AMPLIFIER IC:LINEAR OPERATIONAL AMPLIFIER INTEGRATED CIRCUIT:OPERATIONAL AMPL. EXTRACTOR:PC BOARD, BLACK EXTRACTOR:PC BOARD, VIOLET	28480 28480 28480 28480 28480 28480	1826-0043 1826-0043 1820-0223 4040-0748 4040-0755
A701 A702 A703 A704 A705	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368	24	TSTR:FET SI NPN N-CHANNEL	28480 28480 28480 28480 28480 28480	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368
A706 A707 A708 A709 A7010	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368		TSTR:FET SI NPN N-CHANNEL	28480 28480 28480 28480 28480	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368
A7011 A7012 A7013 A7014 A7015	1855-0368 1855-0368 1854-0071 1854-0071 1854-0071		TSTR:FET SI NPN N-CHANNEL TSTR:FET SI NPN N-CHANNEL TSTR:SI NPN(SELECTED FROM 2M3704) TSTR:SI NPN(SELECTED FROM 2M3704) TSTR:SI NPN(SELECTED FROM 2M3704)	28480 28480 28480 28480 28480 28480	1855-0368 1855-0368 1854-0071 1854-0071 1854-0071
47Rl 47R2 47R3 47R4 47R5	0684-4751 0757-0427 0698-4525 0684-1041 0684-1041	2	R:FXD COMP 4.7 MEGOHN 10% 1/4W R:FXD HET FLM 1.5K CHM 1% 1/8W R:FXD FLM 187K CHM 1% 1/8W R:FXD COMP 100K CHM 10% 1/4W R:FXD COMP 100K CHM 10% 1/4W	01121 28480 28480 01121 01121	CB 4751 0757-0427 0698-4525 CB 1041 CB 1041
A7R6 A7R7 A7R8 A7R9 A7R10	0684-1041 0757-0465 0757-0465 0698-4432 0757-0465	2	R:FXD COMP 100K OHM 10% 1/4W R:FXD MET FLM 100K OHM 1% 1/8W R:FXD MET FLM 100K OHM 1% 1/8W R:FXD FLM 2-1K OHM 1% 1/8W R:FXD MET FLM 100K OHM 1% 1/8W	01121 28480 28480 28480 28480	CB 1041 0757-0465 0757-0465 0698-4432 0757-0465
A7R11 47R12 A7R13 47R14 A7R15	0757-0472 0684-1041 0684-1041 0684-1041 0684-1041	2	R:FXD MET FLM 200K OHM 1% 148W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W	28480 01121 01121 01121 01121	0757-0472 CB 1041 CB 1041 CB 1041 CB 1041
#7R16 #7R17 #7R18 #7R19 #7R20	0684-1041 0684-1041 0757-0465 0757-0465 0698-4481	2	R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD MET FLM 100K OHM 1% 1/8W R:FXD MET FLM 100K OHM 1% 1/8W R:FXD FLM 16.5K OHM 1% 1/8W	01121 01121 28480 28480 28480	CB 1041 CB 1041 0757-0465 0757-0465 0698-4481
#IR2U	VU70-4401	•			

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
ATR21 ATR22 ATR23 ATR24 ATR25	0757-0465 0698-3459 0684-2221	2 2	R:FXD MET FLM 100K OHM 1% 1/8W R:FXD MET FLM 383K OHM 1% 1/8W R:FXD COMP 2200 OHM 10% 1/4W NOT ASSIGNED NOT ASSIGNED	28480 28480 01121	0757-0465 0698-3459 CB 2221
A7R26 A7R27 A7R28 A7R29 A7R30	C684-1C41 0684-1041 0684-4721 0684-1041 0684-1041	25	R:FXD COMP 100K DHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W	01121 01121 01121 01121 01121	CB 1041 CB 1041 CB 4721 CB 1041 CB 1041
A7R31 E7R32 E7R33 A7R34 A8	0684-2231 0684-1041 0684-1041 0684-2231 03575-66508	7	R:FXD COMP 22K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 22K OHM 10% 1/4W BOARD ASSY:FUNCTION SWITCH	01121 01121 01121 01121 28480	C8 2231 CB 1041 CB 1041 CB 2231 03575-66508
A8C1 #8C2 A8C3 #8C4 A8C5	0160-2204 0160-2204 0160-2204 0160-2055 0160-2055		C:FXD MICA 100PF 5% C:FXD MICA 100PF 5% C:FXD MICA 100PF 5% C:FXD CER 0.01 UF +80-20% 100VDCW C:FXD CER 0.01 UF +80-20% 100VDCW	72136 72136 72136 56289 56289	RDM15F101J3C RDM15F101J3C RDM15F101J3C C023F101F103Z522-CDH C023F101F103Z522-CDH
A8C6 A8C7 A8CR1 A8CR2 A8CR3	0160-2055 0160-2055 1902-3136 1902-3136 1901-0040	2	C:FXD CER 0.01 UF +80-20% 100VDCW C:FXD CER 0.01 UF +80-20% 100VDCW DIODE BREAKDOWN:8.06V 5% 400 MW DIODE BREAKDOWN:8.06V 5% 400 MW DIODE:SILICON 50MA 30WV	56289 56289 28480 28480 07263	C023F101F103ZS22-CDH C023F101F103ZS22-CDH 1902-3136 1902-3136 F0G1088
ABCR4 ABCR5 ABCR6 ABCR7 ABCR8	1901-0040 1901-0040 1901-0040 1901-0040 1901-0040		DIGDE:SILICON 50MA 30WV DIGDE:SILICON 50MA 30WV DIGDE:SILICON 50MA 30WV DIGDE:SILICON 50MA 30WV DIGDE:SILICON 50MA 30WV	07263 07263 07263 07263 07263	FDG1088 FDG1088 FDG1088 FDG1088 FDG1088
A8CR9 A8CR10 A8IC1 A8IC2 A8IC3	1901-0040 1901-0040 1826-0059 1826-0059		DIODE:SILICON 50MA 30WV DIODE:SILICON 50MA 30WV IC:LINEAR OPER. AMPL. IC:LINEAR OPER. AMPL. IC:LINEAR OPER. AMPL.	07263 07263 12040 12040 12040	FDG1088 FDG1088 LM 201AD LM 201AD LM 201AD
ABIC4 ABIC5 ABIC6 ABMP1 ABMP2	1820-0054 1820-0511 1820-0068 4040-0748 4040-0747	2 3 2 2	IC:TTL QUAD 2-INPT MAND GATE IC:TTL QUAD 2-INPT AND GATE IC:TTL TRIPLE 3-INPUT POS MAND GATE EXTRACTOR:PC BOARD, BLACK EXTRACTOR:PC BOARD, GRAY	01295 01295 12040 28480 28480	SN7400N SN7408N SN7410N 4040—0748 4040—0747
A8Q1 A8Q2 A8Q3 A8Q4 A8Q5	1853-0020 1853-0020 1853-0020 1853-0020 1853-0020		TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNPISELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702)	28480 28480 28480 28480 28480	1853-0020 1853-0020 1853-0020 1853-0020 1853-0020
A806 A807 A808 A809 A8010	1853-0020 1853-0020 1855-0378 1853-0020 1855-0378	6	TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:FET SI N-CHANNEL TSTR:SI PNP(SELECTED FROM 2N3702) TJTR:FET SI N-CHANNEL	28480 28480 28480 28480 28480	1853-0020 1853-0020 1855-0378 1853-0020 1855-0378
A8Q11 A8Q12 A8Q13 A8Q14 A8Q15	1855-0378 1853-0020 1853-0020 1855-0378 1853-0020		TSTR:FET SI N-CHANNEL TSTR:SI PNP(SELECTED FROM 2M3702) TSTR:SI PNP(SELECTED FROM 2M3702) TSTR:FET SI N-CHANNEL TSTR:SI PNP(SELECTED FROM 2M3702)	28480 28480 28480 28480 28480	1855-0378 1853-0020 1853-0020 1855-0378 1853-0020
A8Q16 A8Q17 A8Q18 A8Q19 A8R1	1855-0378 1853-002C 1855-0378 1853-0020 0684-2231		TSTR:FET SI N-CHANNEL TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:FET SI N-CHANNEL TSTR:SI PNP(SELECTED FROM 2N3702) R:FXD COMP 22K OHM 10% 1/4W	28480 28480 28480 28480 01121	1855-0378 1853-0020 1855-0378 1853-0020 C8 2231
ABR 2 ABR 3 ABR 4 ABR 5 ABR 6	0684-1041 0684-1031 0684-3331 0684-1041 0698-8162	2	R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 33K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 11.8K OHM 0.25% 1/8W	01121 01121 01121 01121 28480	CB 1041 CB 1031 CB 3331 CB 1041 0698-8162
#8R7 #8R8 #8R9 #8R10 #8R11	0698-3264 0684-1041 0684-1031 0757-0453 0757-0273	3 2	R:FXD FLM 11.8K OHM 1% 1/8W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 10K OHM 10% 1/4W R:FXD MET FLM 30.1K OHM 1% 1/8W R:FXD MET FLM 3.01K OHM 1% 1/8W	284 80 01121 01121 284 80 284 80	0698-3264 CB 1041 CB 1031 0757-0453 0757-0273
ABR 12 ABR 13 ABR 14 ABR 15 ABR 16	0698-7518 0684-2231 0684-1041 0684-1031 0684-3331	2	R:FXD FLM 200 DHM 0.25% 1/8W R:FXD COMP 22K DHM 10% 1/4W R:FXD COMP 100K DHM 10% 1/4W R:FXD COMP 10K DHM 10% 1/4W R:FXD COMP 33K DHM 10% 1/4W	284 80 01121 01121 01121 01121	0698-7518 CB 2231 CB 1041 CB 1031 CB 3331

Table 6-1. Replaceable Parts(Cont'd)

Table 6-1. Replaceable Parts(Cont'd)							
Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number		
#8R17 #8R18 #8R19 #8R20 #8R21	0684-1041 0698-8167 0698-3264 0684-1041 0684-1031		R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 11.8K OHM 0.25% 1/8W R:FXD FLM 11.8K OHM 1% 1/8W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 10K OHM 10% 1/4W	01121 28480 28480 01121 01121	CB 1041 0698-8162 0698-3264 CB 1041 CB 1031		
A8R22 A8R23 A8R24 A8R25 A8R26	0757-0453 0757-0273 0698-7518 0684-2231 0684-4731	3	R:FXD MET FLM 30.1K OHM 1% 1/8W R:FXD MET FLM 3.01K OHM 1% 1/8W R:FXD FLM 200 OHM 0.25% 1/8W R:FXD COMP 22K OHM 10% 1/4W R:FXD COMP 47K OHM 10% 1/4W	28480 28480 28480 01121 01121	0757-0453 0757-0273 0698-7518 CB 2231 CB 4731		
#8R 2 T #8R 2 B #8R 2 9 #8R 3 O #8R 3 I	0684-1061 0684-4721 0698-6363 0684-1041 0698-6363	5	R:FXD CCMP 10 MEGOHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD FLM 40K OHM 0.1% 1/8W R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 40K OHM 0.1% 1/8W	01121 01121 28480 01121 28480	CB 1061 CB 4721 0698-6363 CB 1041 0698-6363		
#8R32 #8R33 #8R34 #8R35 #8R36	0698-6363 0684-1041 0684-1061 0684-1061 0684-2231		R:FXD FLM 40K OHM 0.1% 1/8W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 10 MEGOHM 10% 1/4W R:FXD COMP 10 MEGOHM 10% 1/4W R:FXD COMP 22K OHM 10% 1/4W	28480 01121 01121 01121 01121	0698-6363 CB 1041 CB 1061 CB 1061 CB 2231		
#8R37 #8R38 #8R39 #8R40 #8R41	0684-251 0684-4731 0684-1041 0684-1041 0684-4721 0684-1041		R:FXD COMP 42K OHN 10% 1/4W R:FXD COMP 100K OHN 10% 1/4W R:FXD COMP 100K OHN 10% 1/4W R:FXD COMP 4700 OHN 10% 1/4W R:FXD COMP 4700 OHN 10% 1/4W	01121 01121 01121 01121 01121	CB 4731 CB 1041 CB 1041 CB 4721 CB 1041		
ABR42 ABR43 ABR44 ABR45 ABR46	0684-1061 2100-2514 0684-4751 0684-1061 0698-6363	1	R:FXD COMP 100 MEGOHM 10% 1/4W R:VAR CERMET 20K OHM 10% LIN 1/2W R:FXD COMP 4.7 MEGOHM 10% 1/4W R:FXD COMP 10 MEGOHM 10% 1/4W R:FXD FLM 40K DHM 0.1% 1/4W	01121 28480 01121 01121 28480	CB 1041 CB 1061 2100-2514 CB 4751 CB 1061 0698-6363		
######################################	0698-6363 0684-2231 0684-4731 0684-1061 0684-1041		R:FXD FLM 40K 0HM 0.1% 1/8W R:FXD COMP 22K 0HM 10% 1/4W R:FXD COMP 47K 0HM 10% 1/4W R:FXD COMP 10 MEGOHN 10% 1/4W R:FXD COMP 100K 0HM 10% 1/4W	28480 01121 01121 01121 01121	0698-6363 CB 2231 CB 4731 CB 1061 CB 1041		
A8R52 A8R53 A8R54 A8R55 A8R56	0684-4721 0684-1041 0684-1061 0684-2721 0839-0026	2	R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 10 MEGOHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W THEMMISTOR:10K OHM 10% 1/4W	01121 01121 01121 01121 01121 15801	CB 4721 CB 1041 CB 1061 CB 2721 JA4112		
A8R57 A8R58 A8R59 A9	0839-0026 0698-4508 0684-1041 03575-66509 0160-3622	1	THERMISTOR: 10K DHM 10% R:FXD FLM 78.7K DHM 1% 1/8W R:FXD COMP 100K OHM 10% 1/4W BOARD ASSY:OUTPUT FILTEP C:FXD CER 0.1 UF +80-20% 100VDCW	15801 28480 01121 28480 28480	JA4112 0698-4508 CB 1041 03575-66509 0160-3622		
A9C2 A9C3 A9C4 A9C5 A9C6	0140-0200 0160-3824 0160-3825 0160-3826 0160-3501	4 2	C:FXD MICA 390 PF 5% C:FXD POLY 0.0039 UF 10% 50VDCW C:FXD POLY 0.039 UF 10% 50VDCW C:FXD POLY 0.39 UF 10% 50VDCW C:FXD POLY 4 UF 10% 50VDCW	72136 28480 28480 28480 84411	RDM15391-J3C 0160-3824 0160-3825 0160-3826 HEW 138		
A9C7 A9C8* A9C9 A9C10 A9C11	0160-3824 0160-3824 0160-3501 0160-3826		C:FXD POLY 0.0039 UF 10% 50VDCW NOT ASSIGNED C:FXD POLY 0.0039 UF 10% 50VDCW C:FXD POLY 4 UF 10% 50VDCW	28480 28480 84411	0160-3824 0160-3824 HEN 138		
A9C12 A9C13 A9C14 A9C15"	0160-3825 0160-3824 0140-0200		C:FXD POLY 0.39 UF 10% 50VDCW C:FXD POLY 0.039 UF 10% 50VDCW C:FXD POLY 0.0039 UF 10% 50VDCW C:FXD MICA 390 PF 5% NOT ASSIGNED	28480 28480 28480 72136	0160-3826 0160-3825 0160-3824 RDM15F391-J3C		
A9C16 A9C17 A9C18 A9C19 A9C20 A9CR1	0140-0200 0160-3622 0180-0229 0160-3622 0180-0229 1901-0040		C:FXD MICA 390 PF 5% C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD ELECT 33 UF 10% 10VDCW C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD ELECT 33 UF 10% 10VDCM DIODE:SILICON 50MA 30MV	72136 28480 28480 28480 28480 07263	RDM15F391-J3C 0160-3622 0180-0229 0160-3622 0180-0229 FDG1088		
A9CR2 A9CR3 A9CR4 A9CR5	1901-0040 1901-0040 1901-0040 1901-0040 1901-0040		DIODE:SILICON SOMA 30MV DIODE:SILICON SOMA 30MV DIODE:SILICON SOMA 30MV DIODE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV	07263 07263 07263 07263 07263	FDG1088 FDG1088 FDG1088 FDG1088 FDG1088		
A9CR7 A9CR8 A9CR9 A9IC1	1901-0040 1901-0040 1901-0040 1826-0043		DIODE:SILICON 50MA 30NV DIODE:SILICON 50MA 30NV DIODE:SILICON 50MA 30NV IC:LINEAR OPERATIONAL AMPLIFIER	07263 07263 07263 28480	FDG1088 FDG1088 FDG1088 1826-0043		
A9IC2	1826-0043		IC:LINEAR OPERATIONAL AMPLIFIER	28480	1826-0043		

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A91C3 A9MP1 A9MP2 A9Q1 A9Q2	1826-0059 4040-0748 4040-0756 1855-0368 1855-0368	1	IC:LINEAR OPER. AMPL. EXTRACTOR:PC BOARD, BLACK EXTRACTOR:PC BOARD, WHITE TSTR:FET SI MPN N-CHANNEL TSTR:FET SI NPN N-CHANNEL	12040 28480 28480 28480 28480	LM201 AD 4040-0748 4040-0756 1855-0368 1855-0368
4903 4904 4905 4906 4907	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368		TSTR:FET SI NPN N-CHANNEL	28480 28480 28480 28480 28480	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368
A9Q8 A9Q9 A9Q10 A9Q11 A9Q12	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368		TSTR:FET SI NPN N-CHANNEL	28480 28480 28480 28480 28480	1855-0368 1855-0368 1855-0368 1855-0368 1855-0368
49R1 49R2	0684-4751 0757-0427		R:FXD COMP 4.7 MEGOHM 10% 1/4W R:FXD MET FLM 1.5K OHM 1% 1/8W	01121 28480	CB 4751 0757-0427
49R3	C698-4525 C684-1041		R:FXD FLM 187K OHM 1% 1/8W R:FXD COMP 100K OHM 10% 1/4W	28480 01121	0698-4525 CB 1041
A9R5 A9R6 A9R7 A9R8 A9R9	0684-1041 0684-1041 0757-0465 0757-0465 0698-4432		R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD MET FLM 100K OHM 1% 1/6W R:FXD MET FLM 100K OHM 1% 1/8W R:FXD FLM 2.1K OHM 1% 1/8W	01121 01121 28480 28480 28480	CB 1041 CB 1041 0757-0465 0757-0465 0698-4432
A9R10 A9R11 A9R12 A9R13 A9R14	0757-0465 0757-0472 0684-1041 0684-1041 0684-1041		R:FXD MET FLM 100K OHM 1% 1/8W R:FXD MET FLM 200K OHM 1% 1/6W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W	28480 28480 01121 01121 01121	0757-0465 0757-0472 CB 1041 CB 1041 CB 1041
A9R15 A9R16 A9R17 A9R18 A9R19	0684-1041 0684-1041 0684-1041 0757-0465 0757-0465		R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD HET FLM 100K OHM 1% 1/6W R:FXD MET FLM 100K OHM 1% 1/8W	01121 01121 01121 28480 28480	CB 1041 CB 1041 CB 1041 0757-0465 0757-0465
A9R20 A9R21 A9R22 A9R23 A9R24	0698-4481 0757-0465 0698-3459 0757-0280 0698-8095	2	R:FXD FLM 16.5K OHM 1% 1/8W R:FXD MET FLM 100K OHM 1% 1/8W R:FXD MET FLM 383K OHM 1% 1/8W R:FXD MET FLM 1K OHM 1% 1/8W R:FXD MET FLM 2.94 MEGOHM 1.0% 1/2W	28480 28480 28480 28480 28480 28480	0698-4481 0757-0465 0698-3459 0757-0280 0698-8095
A9R25 A9R26 A9R27 A10 (OPTION 001, 002 ONLY, SAME A	0698-8095 C698-8094 2100-3103 03575-66509	1	R:FXD MET FLM 2.94 MEGOMM 1.0% 1/2W R:FXD MET FLM 1.82 MEGOMM 1.0% 1/2W R:VAR CERMET 10K OHM 10% TYPE P 3/4W BOARD ASSY: OUTPUT FILTER	28480 28480 28480 28480	0698-8095 0698-8094 2100-3103 03575-66509
A11 A11C1 A11C2 A11C3 A11C4 A11C5	03575-86511 0180-0229 0160-3622 0180-0229 0160-3622 0160-2055	1	80ARD ASSY: PHASE LOGIC C:FXD ELECT 33 UF 10% 10VDCW C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD ELECT 33 UF 10% 10VDCM C:FXD CER 0.1 UF +80-20% 100VDCW C:FXD CER 0.01 UF +80-20% 100VDCW	28480 28480 28480 28480 28480 56289	03575-86511 0180-0229 0160-3622 0180-0229 0160-3622 C023F101F103ZS22-CDH
A11C6* A11C6* A11C8* A11C9* A11CR1	1901-0040		NOT ASSIGNED NOT ASSIGNED NOT ASSIGNED NOT ASSIGNED DIODE:SILICON 50MA 30WV	07263	FDG1088
Alicr2 Alicr3 Alicr4 Alicr5 Alicr6	1901-0040 1901-0040 1901-0040 1910-0016 1910-0016	5	DIODE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV DIODE:SILICON 50MA 30MV DIODE:SERMANIUM 100MA/0.85V 60PIV DIODE:GERMANIUM 100MA/0.85V 60PIV	07263 07263 07263 93332 93332	FDG1088 FDG1088 FDG1088 D2361 D2361
AllCR7 AllCR8 AllCR9 AllCR10 AllCR11	1901-0040 1910-0016 1901-0040 1910-0016 1901-0040		DIODE:SILICON 50MA 30MV DIODE:GERMANIUM 100MA/0.85V 60PIV DIODE:SILICON 50MA 30MV DIODE:GERMANIUM 100MA/0.85V 60PIV DIODE:SILICON 50MA 30MV	07263 93332 07263 93332 07263	FDG1088 D2361 FDG1088 D2361 FDG1088
Alicri2 Alicri Alicri Alic2 Alic3 Alic4	1901-0040 1820-0583 1820-0587 1820-0583 1820-0583	3	DIODE:SILICON 50MA 30NV IC:TTL LP QUAD 2-INPT NAND GATE IC:TTL LP TRIPLE 3-INPT NAND GATE IC:TTL LP QUAD 2-INPT NAND GATE IC:TTL LP QUAD 2-INPT NAND GATE IC:TTL LP QUAD 2-INPT NAND GATE	07263 12040 12040 12040 12040	FDG1088 DM74L00N DM74L10N DM74L00N DM74L00N
A11IC5 A11IC6 A11IC7 A11IC8 A11IC9	1820-0584 1826-0043 1826-0043 1826-0043 1826-0043	1	IC:TTL LP QUAD 2-INPT NOR GATE IC:LINEAR OPERATIONAL AMPLIFIER	12040 28480 28480 28480 28480 28480	DM74L O2N 1826—0043 1826—0043 1826—0043 1826—0043

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A11MP1 A1101 A1102 A11R1 A11R2	4040-0749 1854-0C71 1854-0C71 0684-2221 0684-2251	5	EXTRACTOR: PC BOARD, BROWN TSTR:SI MPM(SELECTED FROM 2N3704) TSTR:SI MPM(SELECTED FROM 2N3704) R:FXD COMP 2200 OHM 10% 1/4W R:FXD COMP 2-2 MEGOHM 10% 1/4W	28480 28480 28480 01121 01121	4040-0749 1854-0071 1854-0071 CB 2221 CB 2251
AllR3 AllR4 AllR5 AllR6 AllR7	0698-3516 0698-3496 0757-0470 0684-5621	1 1 17	NOT ASSIGNED R:FXD FLM 6340 OHM 1% 1/8W R:FXD FLM 3.57K OHM 1% 1/8W R:FXD MET FLM 162K OHM 1% 1/8W R:FXD CCMP 5.6K OHM 10% 1/4W	28480 28480 28480 01121	0698-3516 0698-3496 0757-0470 CB 5621
A11R8 £11R9 A11R10 A11R11 A11R12	0684-4721 0698-3264 0757-0410 0757-0289 0684-5621	1	R:FXD COMP 4700 DHM 10% 1/4W R:FXD FLM 11.8K DHM 1% 1/8W R:FXD MET FLM 301 DHM 1% 1/8W R:FXD MET FLM 13.3K DHM 1% 1/8W R:FXD COMP 5.6K DHM 10% 1/4W	01121 28480 28480 28480 01121	CB 4721 0698-3264 0757-0410 0757-0289 CB 5621
A11R13 A11R14 A11R15 A11R16 A11R17	0684-5631 0684-1021 0698-3193 0698-8025 0698-4494	1 1 2 1	R:FXD COMP 56K OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W R:FXD FLM 10K OHM 0.25% 1/8W R:FXD FLM 1.91K OHM 0.25% 1/8W R:FXD FLM 3.51K OHM 1.2 1/8W	01121 01121 28480 28480 28480	CB 5631 CB 1021 0698-3193 0698-8025 0698-4494
A11R18 A11R19 A11R20 A11R21 A11R22	0684-5621 0698-8024 0698-8025 0698-4488 0684-5621	1	R:FXD COMP 5.6K OHM 10% 1/4W R:FXD FLM 3.09K OHM 0.25% 1/8W R:FXD FLM 1.91K OHM 0.25% 1/8W R:FXD FLM 26.7K OHM 1% 1/8W R:FXD COMP 5.6K OHM 10% 1/4W	01121 28480 28480 28480 01121	CB 5621 0698-8024 0698-8025 0698-4488 CB 5621
#11R23 #11R24 #11R25 #11R26	0684-4721 0684-1521 0684-4721 0684-1521		R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 1500 OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 1500 OHM 10% 1/4W	01121 01121 01121 01121	CB 4721 CB 1521 CB 4721 CB 1521
A12A (STD MODEL 3575A)	03575- 6655 0		BOARD ASSY: PANEL METER	28480	03575-66550
A12C1 A12C2, C3	0180-2419 0180-1835		C: FXD TA 470 UF 20% 10 VDCW C: FXD TA 68 UF 20% 15 VDCW	56289 56289	109D477X0010F2 150D686X0015R2-DYS
A12J1 A12L1 A12MP1 A12MP2	1251-2955 9100-3337 4040-0749 4040-0750		CONN: PC (2 X 25) 50 CONTACT COIL: FXD 100 UH 20% 10 KHZ EXTRACTOR: PC BOARD BROWN EXTRACTOR: PC BOARD RED	05574 99800 28480 28480	3KH25/21JV12/079 BP2650 4040-0749 4040-0750
A12R1 A12R2 A12R3—R8	0684-6805 0684-6805		R: FXD COMP 68 OHM 10% 1/4W NOT ASSIGNED R: FXD COMP 68 OHM 10% 1/4W	01121 01121	CB6805 CB6805
A12R9 A12R10	0684-6805		NOT ASSIGNED R: FXD COMP 68 OHM 10% 1/4W	01121	CB6805
A12R11 A12R12 A12R13-R15	0684-6805		NOT ASSIGNED R: FXD COMP 68 OHM 10% 1/4W NOT ASSIGNED	01121	CB6805
A12R16, R17 A1 2 U1, U2	0698-8062 1820-0668		R: FXD COMP 4.7 OHM 10% IC: TTL HEX DRIVER	01121 01295	CB OBD SN7407N
A12B (OPTIONS 001-003)	03575-66551		BOARD ASSY: PANEL METER	28480	03575-66551 190D477X0010F2
A12C1 A12C2, C3	0180-2419 0180-1835		C: FXD TA 470 UF 20% 10 VDCW C: FXD TA 68 UF 20% 15 VDCW	56289 56289	150D686X0015R2-DYS
A12C4-C11 A12C12 A12J1, J2 A12L1, L2	0150-0069 0180-2419 1251-2955 9100-3337		C: FXD .001 UF +80 -20% 500 VDCW C: FXD TA 470 UF 20% 10 VDCW CONN PC (2 X 25) 50 CONTACT COIL: FXD 100 UH 20% 10 KHZ	28480 56289 05574 99800	0150-0069 190D477X0010F2 3KH25/21JV12/079 BP2650
A12MP1 A12MP2 A12R1—R15	4040-0749 4040-0750 0684-6805		EXTRACTOR: PC BOARD BROWN EXTRACTOR: PC BOARD RED R: FXD COMP 68 OHM 10% 1/4W	28480 28480 01121	4040-0749 4040-0750 CB6805
A12R16, R17 A12U1-U4 A12U5, U6	0698-8062 1820-0668 1820-1195		R: FXD COMP 4.7 OHM 10% IC: TTL HEX DRIVER IC: TTL QUAD FLIP-FLOP	01121 01295 01295	CB OBD SN7407N SN74LS175
A13	03575-66513	1	BOARD ASSY: PANEL SWITCH	28480	03575-66513
A13CR1 A13S1 A13S2 A13S3 A13S4	1901-0025 3100-2726 3100-2728 3100-2727 3100-2726	14 3 1 1	DIODE:SILICON 100MA/1V SWITCH:ROTARY 2-POSITION SWITCH:ROTARY 4-POSITION SWITCH:ROTARY 3-POSITION SWITCH:ROTARY 2-POSITION	07263 28480 28480 28480 28480	FD 2387 3100-2726 3100-2728 3100-2727 3100-2726

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A13S5 A14 A14C1 A14C2 A14C3	3100-2726 03575-66514 0150-0071 0160-2207 0180-1835	1 5 7	SWITCH:ROTARY 2-POSITION BOARD ASSY:POWER SUPPLY C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD TA 68 UF 20% 15VDCW	28480 28480 56289 28480 56289	3100-2726 03575-66514 C0168102E401JS27-CDH 0160-2207 1500686X0015R2-DYS
A14C4 A14C5 A14C6 A14C7 A14C8	0160-2207 0180-1835 0150-0071 0160-2207 0180-0106		C:FXD MICA 300 PF 5% C:FXD TA 68 UF 20% 15VDCW C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW	28480 56289 56289 28480 28480	0160-2207 150D686X0015R2-DYS C016B102E401JS27-CDH 0160-2207 0180-0106
A14C9 A14C10 A14C11 A14C12 A14C13	0150-0C71 0160-2207 0180-0106 0160-2207 0180-0106		C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW	56289 28480 28480 28480 28480	C016B102E401JS27-CDH 0160-2207 0180-0106 0160-2207 0180-0106
A14C14 A14C15 A14C16 A14C17 A14C18	0150-0071 0160-2207 0180-0106 0150-0071 0160-2207		C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5%	56289 28480 28480 56289 28480	C016B102E401JS27-CDH 0160-2207 0180-0106 C016B102E401JS27-CDH 0160-2207
£14C19 &14CR1 &14CR2	0180-0106 1901-0025		C:FXD ELECT 60 UF 20% 6VDCW NOT ASSIGNED Diode:Silicon 100Ma/1V	28480 07263 07263	0180-0106 FD 2387 FD 2387
A14CR3 A14CR4 A14CR5 A14CR6	1901-0025 1901-0025 1902-0025 1902-0777	2 1	DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:BREAKDOWN:10.0V 5% 400 MW DIODE:BREAKDOWN 6.2V 5% DIODE:SILICON 100MA/1V	07263 07263 28480 04713 07263	FD 2387 1902-0025 1N825 FD 2387
#14CR7 #14CR8 #14CR10	1901-0025 1901-0025 1902-0025		DIODE:SILICON 100MA/1V DIODE:BREAKDOWN:10-0V 5% 400 MW DIODE:SILICON 100MA/1V	07263 28480 07263	FD 2387 1902-0025 FD 2387
A14CR12 A14CR13 A14CR14 A14CR15	1901-0025 1901-0025 1901-0025 1901-0025		DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V	07263 07263 07263 07263	FD 2387 FD 2387 FD 2387 FD 2387
A14CR16 A14CR17 A14GR18 A14CR19 THRU	1901-0025 1901-0025 1901-0025		DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V	07263 07263 07263 04713	FD 2387 FD 2387 FD 2387 SP1358-9
CR22 #141C1 THRU C3 #141C5 #141C6 #141C6	1901-0028 1820-0223 1820-0223 1820-0223 1820-0223		DIODE: PWR RECT. 75A DO-29 INTEGRATED CIRCUIT: OPERATIONAL AMPL.	28480 28480 28480 28480 28480	1820-0223 1820-0223 1820-0223 1820-0223 1820-0223
#14MP1 #14MP2 #14MP3 #14Q1 #14Q2	40 40-0749 40 40-0752 1205-0033 1854-0404 1853-0010	1 4 3 4	EXTRACTOR:PC BOARD, BROWN EXTRACTOR:PC BOARD, YELLOW HEAT SINK:SEMICONDUCTOR TSTR:SI NPN TSTR:SI PNP(SELECTED FROM 2N3251)	28480 28480 05820 28480 28480	4040-0749 4040-0752 207-CB 1854-0404 1853-0010
#1403 #1404 #1405 #1406	1854-0226 1854-0404 1854-0226 1854-0404 1853-0010	2	TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI PNP(SELECTED FROM 2N3251)	80131 28480 80131 28480 28480	2N4384 1854-0404 2N4384 1854-0404 1853-0010
#1408 #1409 #14010 #14011 #14012	1853-0051 1853-0051 1853-0010 1853-0051 1853-0051	4	TSTR:SI PNP TSTR:SI PNP TSTR:SI PNP TSTR:SI PNP(SELECTED FROM 2N3251) TSTR:SI PNP TSTR:SI PNP	80131 80131 28480 80131 80131	2N4037 2N4037 1853-0010 2N4037 2N4037
A14013 A14R1 A14R2 A14R3 A14R4	1853-0010 0811-3079 0684-4721 0684-1041 0698-3512	3	TSTR:SI PNP(SELECTED FROM 2N3251) R:FXD WW 0.51 OHM 5% 1/2W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 1180 OHM 1% 1/8W	28480 28480 01121 01121 28480	1853-0010 0811-3079 CB 4721 CB 1041 0698-3512
#14R5 #14R6 #14R7 #14R8 #14R9	0698-8061 2100-1758 0698-8039 0811-3079 0684-4721	4 1 1	R:FXD FLM 8.25K OHM 0.1% 1/8W R:VAR WW 1K OHM 5% TYPE V 1W R:FXD MET FLM 8.87K OHM 0.1% 1/8W R:FXD WH 0.51 OHM 5% 1/2W R:FXD COMP 4700 OHM 10% 1/4W	28480 28480 28480 28480 01121	0698-8061 2100-1758 0698-8039 0811-3079 CB 4721
A14R10 A14R11 A14R12 A14R13 A14R14	0684-1041 0698-8061 0698-8061 0811-3056 0757-0284	2	R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 8.25K OHM 0.1% 1/8W R:FXD FLM 8.25K OHM 0.1% 1/8W R:FXD WW 0.24 OHM 5% 1/2W R:FXD WH 0.24 OHM 5% 1/2W	01121 28480 28480 28480 28480	CB 1041 0698-8061 0698-8061 0811-3056 0757-0284

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A14R15 A14R16 A14R17 A14R18 A14R19	06 98-3279 06 84-4721 06 84-1041 06 98-3153 C757-0444	2 1 2	R:FXD MET FLM 4990 OHM 1% 1/8W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD MET FLM 3.83K OHM 1% 1/8W R:FXD MET FLM 12.1K OHM 1% 1/8W	28480 01121 01121 28460 28480	0698-3279 CB 4721 CB 1041 0698-3153 0757-0444
#14R20 #14R21 #14R22 #14R23	0811-2771 0757-0284 0698-3279 0684-4721 0684-1041	-	R:FXD WW 0.1x OHM 3% 3W R:FXD MET FLM 150 OHM 1% 1/8W R:FXD MET FLM 4990 OHM 1% 1/8W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W	01738 28480 28480 01121 01121	RS2B-95 0757-0284 0698-3279 CB 4721 CB 1041
A14R25 £14R26 A14R27 A14R28 A14R29	0684-3321 0698-8061 0698-8038 0811-3079 0684-4721	1	R:FXD COMP 3300 OHM 10% 1/4W R:FXD FLM 8-25K OHM 0-1% 1/8W R:FXD FLM 5-90K OHM 0-25% 1/8W R:FXD WW 0-51 OHM 5% 1/2W R:FXD COMP 4700 OHM 10% 1/4W	01121 28480 28480 28480 01121	CB 3321 0698-8061 0698-8058 0811-3079 CB 4721
£14R30 A14R31 A14R32 A14R33 A14R34	0684-1041 0698-3258 0757-0444 0811-3071	1	R:FXD COMP 100K OHM 10% 1/4W R:FXD MET FLM 5.36K OHM 1% 1/8W R:FXD MET FLM 12.1K OHM 1% 1/8W R:FXD WW 1.2 OHM 5% 1W	01121 28480 28480 28480 28480	CB 1041 0698-3258 0757-0444 0811-3071 0811-3071
A14R35 A14R36 A14R37 A14R38 A14R39	C684-4721 C684-1041 C698-8059 C698-8060 C811-3071	2 2	R:FXD CDMP 4700 DHM 10% 1/4W R:FXD CDMP 100K DHM 10% 1/4W R:FXD FLM 4.32K DHM 0.1% 1/8W R:FXD FLM 8.64K DHM 0.1% 1/8W R:FXD WN 1.2 DHM 5% 1W	01121 01121 28480 28480 28480	CB 4721 CB 1041 0698-8059 0698-8060 0811-3071
A14R4O A14R41 A14R42 A14R43 £14R44	0811-3071 0684-4721 0684-1041 0698-8059 0698-6060		R:FXD WW 1.2 OHM 5% 1W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 4.32K OHM 0.1% 1/8W R:FXD FLM 8.64K OHM 0.1% 1/8W	28480 01121 01121 28480 28480	0811-3071 C8 4721 C8 1041 0698-8059 0698-8060
A14R45 A14R46 A14R47 A14R48 A15	0684-4721 0684-4721 03575-66515	1	NOT ASSIGNED NOT ASSIGNED R:FXD COMP 4700 CHM 10% 1/4W R:FXD COMP 4700 CHM 10% 1/4W BOARD ASSY:POWER SUPPLYINGTHER BD)	01121 01121 28480	C8 4721 C8 4721 O3575-66515
A15C1 A15C2 A15C3 A15CR1 A15CR2	0180-2384 0180-2388 0180-2394 1901-0028	1 1 1 12	C:FXD AL ELECT DUAL 3500/1200 UF 15/25V C:FXD AL ELECT DUAL 3500/1200 UF 15/25V C:FXD AL ELECT 3000 UF +100-10% 10VDCW DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV	56289 28480 56289 04713 04713	968D2O105 0180-2388 68010359 SR1358-9 SR1358-9
#15CR3 #15CR4 #15CR5 #15CR6 #15CR7	1901-0028 1901-0028 1901-0028 1901-0028 1901-0028		DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV	04713 04713 04713 04713 04713	SR 1358-9 SR 1358-9 SR 1358-9 SR 1358-9 SR 1358-9
A15CR8 A15CR9 A15CR10 A15CR11 A15CR12	1901-0028 1901-0200 1901-0028 1901-0200 1901-0028	:	DIODE:SILICON 0.75A 400PIV DIODE:SILICON 3A 100PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 3A 100PIV DIODE:SILICON 0.75A 400PIV	04713 02735 04713 02735 04713	SR1358-9 1N4998 SR1358-9 1N4998 SR1358-9
#1501 #1502 #1503 #1504 #1505 #154314A #164(STO & OPT 001 #168(OPT 002 ONLY) #16C1 #16C2 THRU Co		3 2 1 ,1	TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN CONNECTOR: PC EDGE (2 X 10) 20 CONTACT BOARD ASSY: INTERFACE SUBSTITUTION BOARD ASSY: INTERFACE NEGATIVE C:FXD .01 UF 25 V NOT ASSIGNED	80131 80131 80131 80131 80131 71785 28480 28480 28480	2N3054 2N3055 2N3055 2N3055 2N3054 252-10-30-300 03575-26516 03575-66542 0160-2964
#16C7 #16C8	0150-0050 0150-0050	4	C:FXD CER 1000 PF +80-20% 1000VDCW C:FXD CER 1000 PF +80-20% 1000VDCW	56289 56289	C067B102E102Z\$26-CDF C067B102E102Z\$26-CDF
A16C9 A16C10 A16C11 #16C12 A16C13	0150-0050 0180-0309 0150-0050 0180-0309 0160-3658	3	C:FXD CER 1000 PF +80-20% 1000 VTO C:FXD ELECT 4.7 UF 10V C:FXD CER 1000 PF +80-20% 1000 VDC1 C:FXD ELECT 4.7 UF 20% 10VDCW C:FXD POLY 10 UF 10% 50VDCW	56289 28480 56289 56289 28480	C0678102E102ZS26-CDH 0180-0309 C067B102E1Q2ZS26-CD+ 150D475X0010A2-DYS 0160-3658
A16C14 A16C15 A16CR1 A16CR2 A16CR3	0180-0291 0180-0291 1901-0040 1901-0040		C:FXD ELECT 1.0 UF 10% 35VDCW C:FXD ELECT 1.0 UF 10% 35VDCW DIODE: SILICON 50MA 30WV DIODE: SILICON 50MA 30WV	56289 56289 07263 07263 07263	150D105X9035A2-DYS 150D105X9035A2-DYS F0G1088 FDG1088 FDG1088

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Numbe
A16CR4-CR6 A16IC1 A16IC2 THRU ICT A16IC8 THRU ICTI A16IC12	1901-0040 1820-1112 1820-1195 1820-0471 1820-0174	1 6 4 2	DIODE: SILICON 50MA 30WV IC: DIGITAL IC: DIGITAL IC: TITL HEX INVERTER DRIVER IC: TITL HEX INVERTER	07263 01295 01295 01295 01295	FDG1088 SN74LS74N SN74LS175N SN7406N SN7404N
A16IC13 A16IC14	1820-0506 1820-0506	2	IC:DIGITAL 2-INPT•4-BIT MULTIPLEXER IC:DIGITAL 2-INPT•4-BIT MULTIPLEXER	18324 18324	N8266B N8266B
A161C15 A161C16 A161C17 A161C18 A16MP1 A16MP2 A1601 A1602 A1603 A1603 A1604 A1605	1820-0515 1820-0068 1820-0054 1820-0174 4040-0754 4040-0749 1854-0071 1854-0071 1854-0276 1854-0200	1	IC:TTL DUAL RE-TRIG/RE-SET MONO-MULTI IC:TTL TRIPLE 3-IMPUT PDS NAND GATE IC:TTL QUAD 2-IMPT NAND GATE IC:TTL HEX INVERTER EXTRACTOR:PC BOARD, BLUE EXTRACTOR:PC BOARD, BROWN TSTR:SI MPNISELECTED FROM 2N3704) TSTR:SI NPNISELECTED FROM 2N3704) TSTR:SI NPNISELECTED FROM 2N37041 TSTR:SI NPNISELECTED FROM 2N37041 TSTR:SI NPNISELECTED FROM 2N37041 TSTR:SI NPN TSTR:SI PNP	07263 12040 01295 01295 28480 28480 28480 28480 28480 28480 28480	U78960259X SN7410N SN7400N SN7400N SN74004V 4040-0754 4040-0749 1854-0071 1854-0071 2N4384 1853-0020
#1606 #1607 #1608 #1609 #16010	1853-0020 1853-0020 1853-0020 1854-0071 1854-0071		TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704)	28480 28480 28480 28480 28480 28480	1853-0020 1853-0020 1853-0020 1854-0071 1854-0071
A16R1 A16R2 #16R3 #16R4	0683-4725 0683-5625		R: FXD 4.75K 5% R: FXD 5.6K 5% .25W NOT ASSIGNED NOT ASSIGNED	28480 01121	0683-4725 CB 5625
A16R5	1810-0041	4	RENETWORK, 8 RES. 2.7K OHM 5%	28480	1810-0041
\$16R6 \$16R7 \$16R8 \$16R9 \$16R10	0684-5621 0684-4721 0684-5621 0684-4721 0684-1021		R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W	01121 01121 01121 01121 01121	CB 5621 CB 4721 CB 5621 CB 4721 CB 1021
#16R11 #16R12 #16R13 #16R14 #16R15	0757-0467 0683-1255 0683-1265 0698-3228 0684-4721	1 1 1 2	R:FXD COMP 12 K OHM % 1/8W R:FXD COMP 1-2 MEGOHM 5% 1/4W R:FXD COMP 12 MEGOHM 5% 1/4W R:FXD MET FLM 49.9K OHM 1% 1/8W R:FXD COMP 4700 OHM 10% 1/4W	28480 01121 01121 28480 01121	0757-0467 CB 1255 CB 1265 0698-3228 CB 4721
#16R16 #16R17 #16R18 #16R19 #16R20	0684-5621 0684-4721 0684-5621 0684-4721 0684-5621		R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXO COMP 5.6K OHM 10% 1/4W	01121 01121 01121 01121 01121	CB 5621 CB 4721 CB 5621 CB 4721 CB 5621
416R21 416R22 416R23 416R24 A16R25	0684-4721 0684-5621 0684-4721 0684-5621 0698-3260	1	RIFXD COMP 4700 OHR 10% 1/4W RIFXD COMP 5.6K OHM 10% 1/4W RIFXD COMP 4700 OHM 10% 1/4W RIFXD COMP 5.6K OHM 10% 1/4W RIFXD FLM 464K OHM 1% 1/8W	01121 01121 01121 01121 28480	CB 4721 CB 5621 CB 4721 CB 5621 0698-3260
#16R26 #16R27 #16R28 #16R29 #16R30	0698-3228 0684-4721 0684-5621 0757-0444 0684-4721	1	RIFXD MET FLM 49.9K OHM 1% 1/8W RIFXD COMP 4700 OHM 10% 1/4W RIFXD COMP 5.6K OHM 10% 1/4W RIFXD FLM 12.1K OHM 1% 1/8W RIFXD COMP 4700 OHM 10% 1/4W	28480 01121 01121 28480 01121	0698-3228 CB 4721 CB 5621 0757-0444 CB 4721
116R31 116R32 116R33 116R34 116R35	0684-1041 0684-1041 0684-1021 0684-1021 0684-1031		R:FXD COMP 100K 0HM 10% 1/4W R:FXD COMP 100K 0HM 10% 1/4W R:FXD COMP 1000 0HM 10% 1/4W R:FXD COMP 1000 0HM 10% 1/4W R:FXD COMP 10K 0HM 10% 1/4W	01121 01121 01121 01121 01121	CB 1041 CB 1041 CB 1021 CB 1021 CB 1021
#16R36 #16R37 #16R38 #16R39 #16R40 A16R41 THRU R43 #16X419	0684-1031 0684-1031 0684-1021 0684-1021 0684-5621 1810-0041 1251-2955		R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R: NETWORK, 8 RES. 2.7K OHM 5% CONNECTOR:PC 12 X 25150 CONTACT	01121 01121 01121 01121 01121 28480 05574	CB 1031 CB 1031 CB 1021 CB 1021 CB 5621 1810-0041 3KH25/21JV12/079
A16C	03575–66553		BOARD ASSY: INTERFACE POSITIVE (THIS ASSEMBLY IS USED WITH THE OPTION 003 ONLY. THE PARTS LIST IS IDENTICAL TO A 16B EXCEPT FOR THE PART NO. CHANGE OF A 16ICB—IC11 BELOW.)	28480	03575-66543
A16IC8 THRUICH	18200668		IC: TTL HEX DRIVER	01295	SN7407N
#17 #17XA1 #17XA2 #17XA3	03575-66517 1251-1604 1251-1604 1251-1604	1 9	BOARD ASSY: MOTHER CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT	28480 71785 71785 71785	03575-66517 252-22-30-310 252-22-30-310 252-22-30-310

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A17XA4 A17XA5 A17XA6 A17XA7 A17XA8	12 51-1604 12 51-1604 12 51-1604 12 51-1365 12 51-1365	4	CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONN:PC 44 (2X22) CONTACTS CONN:PC 44 (2X22) CONTACTS	71785 71785 71785 71785 71785 71785	252-22-30-310 252-22-30-310 252-22-30-310 252-22-30-300 252-22-30-300
£17XA9 A17XA10 A17XA11 A17XA12 £17XA13	1251-1604 1251-1604 1251-1604 1251-1365 1251-1633	1	CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONN:PC 44 (2X22) CONTACTS CONNECTOR:PC(1 X 15) 15 CONTACT	71785 71785 71785 71785 71785 71785	252-22-30-310 252-22-30-310 252-22-30-310 252-22-30-300 252-15-30-310
A17XA14 A17XA16 A18 A19(0PT 002,003 A19J1	1251-1632 1251-1365 0960-0444 C3575-66519 1251-0087	1 1 1	CONNECTOR: PC 1 X 12 CONTACT CONN PC 44 12 X 22) CONTACTS PWR MODULE, UNFILTERED BOARD ASSY: INTERFACE CONNECTOR CONNECTOR: FEMALE 50—PIN MINAT	71785 71785 28480 28480 28480 28480	252-12-30-310 252-22-30-300 0960-0444 03575-66519 1251-0087
A19MP1 A19MP2	03575-01208 1530-1698	1 1	BRACKET:INTERFACE CONNECTOR SUPPORT:PC BOARD	28480 28480	03575-01208 1530-1698
A20, 21, 22	50609188 OR 50609127	1	PANEL METER ASSEMBLY (3575A STD, OPTION 001) PANEL METER ASSEMBLY (3575A OPTIONS 002 OR 003)	28480 28480	5060-9188 OR 5060-9127
A20	5061-0747 OR 5061-0741	1	PANEL METER MOTHER BD ASSY (PART OF 5060–9188) PANEL METER MOTHER BD W/EXT. TRIGGER	28480 28480	5061-0747 5061-0741
A20C1, C2 = A20C3 A20C3, C5 A20C4, C5 A20C6 A20C7= A20CR1= A20CR2	0160-2094 0180-0116 0140-0234 0160-4040 1901-0518 1902-0686	2 1 2 1 1 1	ASSY (PART OF 5060-9127) C:FXD 200 PF C:FXD 68 UF 10% 35VDC C:FXD 500 PF 1% 300WVDC C:FXD 1000 PF C: FXD 6.8 UF, 6V DIODE: SCHOTTKEY DIODE: BKDN 6.2V	28480 56289 72136 28480 56289 28480 04713	0160-2094 150D685X903582 DM15F501F0300WV1C 0160-4040 150D685X0006A2 1901-0518 1N825
A20Q1 =	1854 -0071	1	TSTR:NPN SI	28480	1854-0071
A20R1, R2= A20R3= A20R4= A20R5 A20R6	0683-5125 0683-1025 0683-1035 0698-3515 0698-4488	2 1 1 1 1	R:FXD 5.1K R:FXD 1K R:FXD 10K R:FXD 5.9K 1% 1/8W R:FXD 26.7K 1% 1/8W	01121 01121 01121 16299 24546	CB5125 CB1025 CB1035 C4-1/8-TO-5901-F C4-1/8-TO-2672-F
A20R7 A20R8 – 10	0698-4462 0683-7505	1 3	R:FXD 768 OHM 1% 1/8W R:FXD 75 OHM 5% 1/4W	24546 01121	C4-1/8-TO-768A-F CB7505
A20U1 = A20U2 = A20U3	1820-0583 1820-0595 1826-0119 1200-0462	1 1 1 20	IC:DIGITAL IC:DIGITAL IC:ANALOG SOCKET:IC	27014 27014 18324 24995	DM74L00N DM74L73N NE555T 3-116141-2

Contained on the 5061-0736 assembly only.
 Contained on the 5061-0739 assembly only.
 ✓ Components designated by ■are only contained on 5061-0741 Mother Board Assy.

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A21	50610740	1	PANEL METER DISPLAY BD ASSY	28480	5061-0740
A21DS2-DS10	1990-0419	9	DIO:LIGHT EMITTING	28480	1990-0419
A21Q1-Q6	1853-0016	6	TSTR:SI PNP	28480	1853-0016
A21R1-R7 A21R8-R11 A21R12 A21R13 A21R14	0683-7505 0683-5115 0683-1025 0683-5115 0683-1015	7 5 1	R:FXD 75 OHM 5% 1/4W R:FXD 510 OHM 5% 1/4W R:FXD 1K 5% 1/4W R:FXD 510 OHM 5% 1/4W R:FXD 100 OHM 5% 1/4W	01121 01121 01121 01121 01121	CB7505 CB5115 CB1025 CB5115 CB1015
A21R15 A21R16	0683-3015 0683-3005	1	R:FXD 300 OHM 5% 1/4W R:FXD 30 OHM 5% 1/4W	01121 01121	CB3015 CB3005
A21U1 A21U2-U4 A21U5 A21U6	1820-0995 1990-0490 1990-0491 1820-0471	1 3 1	IC:DIGITAL DECODER DISPLAY:NUMERIC DISPLAY:POLARITY/OVERRANGE IC:HEX INVERTERS BUFFERS/DRIVERS	01295 28480 28480 01295	SN7447AN 1990-0490 1990-0491 SN7406N
A22	5061-0736 OR 5061-0739	1	PANEL METER A/D BD ASSY (PART OF 5060-9188) PANEL METER A/D BD ASSY (PART OF 5060-9127)	28480 28480	5061-0736 OR 5061-0739
A22C1 • A22C2 • A22C3 A22C4 A22C5 A22C6 • A22CR1 A22CR2 A22C1 A22C02	0160-0170 0160-4243 0160-4244 0121-0178 0140-0205 0160-0127 1902-3149 1901-0040 1855-0309 1853-0036	1 1 1 1 1 1 1 1 1 1 1 1 1	C:FXD .22 UF 25WVDC C:FXD .022 UF 10% 50V C:FXD .1 UF 10% 50WVDC C: V TRMR 200 V C: FXD 62 PF 5% 300WVDC C: FXD 1 UF 25WVDC DIODE: ZENER 9.09 V DIODE: SI 50MA 30 V TSTR:MOSFET P-CHAN E-MODE SI TSTR:PNP SI	28480 84411 84411 00865 72136 28480 04713 28480 04713 28480	0160-0170 HEW249 HEW249 304322 15/60PF N1500 DM15E62050300WV1CR 0150-0121 SZ10939-170 1901-0040 2N4352 1853-0036
A22R1 A22R2 A22R3 A22R4 A22R5	0698-8312 0698-6914 0698-4486 0698-6388 2100-1738	1 2 1 1	P:FXD 499K 0.5% 1/8W R:FXD 55.6K 0.5% 1/8W R:FXD 24.9K 1% 1/8W R:FXD 70K 1% 1/8W R:VAR 10K 5%	30983 19701 24546 19701 19701	MF4C1/8-T2-4993-D MF4C1/8-T2-5562-D C4-1/8-T0-2492-F MD4C1/8-T9-7002-F ET50W103
A22R6 A22R7 A22R8 A22R9, R10 A22R11 A22R12 ◆	0698-7082 0698-6360 0698-6914 0683-5125 0683-1235 0683-2435	1 1 2 1 1	R:FXD 100K 1% 1/8W R:FXD 10K 0.1% 1/8W R:FXD 55.6K 0.5% 1/8W R:FXD 5.1K 5% 1/4W R:FXD 12K 5% 1/4W R:FXD 24K 5% 1/4W	19701 19701 19701 01121 01121 01121	MF4C1/8-T9-1003-F MF4C1/8-T9-1002-B MF4C1/8-T2-5562-D CB5125 CB1235 CB2435
A22U1 A22U2	1826-0195 1820-1252 OR 1820-1474	1 1	IC: ANALOG PROCESSOR IC: DIGITAL PROCESSOR (16 PIN) (PART OF 5061-0736) IC: DIGITAL PROCESSOR (28 PIN) (PART OF 5061-0739)	28480 28480 28480	18260195 18201252 OR
A22U3	1820-0944 03431-01201	1 2	IC:DIGITAL, TRIPLE 3-INPUT NOR GATE BRKT:MTG	28480	1820-0944

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
C1 C2 F1 F1	0160-3441 0160-3441 2110-0339 2110-0044	2	CHASSIS MOUNTED COMPONENTS C: FXO CER 0.002 UF 20 % 3 K VDCW C: FXO CER 0.002 UF 20 % 3 K VDCW FUSE SLOW BLOW 0.6 A, 250 V (115 V OPERATION) FUSES SLOW BLOW 0.3 A, 250 V (230 V OPERATION) CONNECTOR: INPUT (P/O W1)	71590 71590	DD 30-202 DD 30-202
J2 J3 J4 J5 S1	1250-0083 1250-0083 1510-0076 3101-0896 3101-1119 9100-3-402	2 1 1 1 1	CONNECTOR: INPUT (P/O W2) CONNECTOR: RF CONNECTOR: RF POST: BINDING JADE GRAY SWITCH: TOGGLE XFMR. POWER	77068 77068 28480 28480 28480 28480	30624-1 30624-1 1510-0076 3101-0896 3101-1179 9100-3237

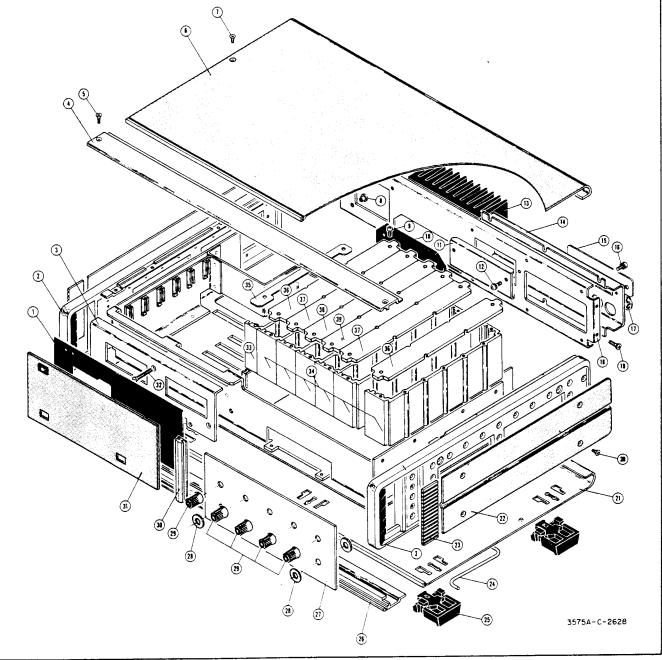


Figure 6-1. Mechanical Parts (Mainframe).

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
			CABLES		
W1 W2 W3 W4 W5	03575-61601 03575-61601 03675-61613 03575-61613 03575-61603	2 2 1	CABLE ASSY: INPUT (INCLUDES J1) CABLE ASSY: INPUT (INCLUDES J2) CABLE ASSY: PREAMP (INCLUDES P1/J1 AND P2) CABLE ASSY: PREAMP (INCLUDES P1/J1 AND P2) CABLE ASSY: CHANNEL A (INCLUDES P1 AND P2)	28480 28480 28480 28480 28480	03575-61601 03575-61601 03575-61613 03575-61613 03575-61603
W6 W7 W8 W9 W10	03575-61604 03575-61605 03575-61606 03575-61606 03575-61607	1 2 1	CABLE ASSY: CHANNEL B (INCLUDES P1 AND P2) CABLE ASSY: CURRENT (INCLUDES P1/J1 AND P2) CABLE ASSY: (BETWEEN J1 AND CHASSIS) CABLE ASSY: (BETWEEN J2 AND CHASSIS) CABLE ASSY: POWER SWITCH	28480 28480 28480 28480 28480	03575-61604 03575-61605 03575-61606 03575-61606 03575-61607
W11 W12	03575-61608 8120-1378	1	CABLE ASSY: (BETWEEN J5 AND CHASSIS) CABLE: POWER	28480 28480	03575-61608 8120-1378
MP1 (STD 3575A) MP1 (DPT 001-003) MP2 MP3 MP4	7101-0266 7101-0265 03575-21201 03575-01212 03575-26802	1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	MECHANICAL PARTS (REFER TO FIGURES 6-1 AND 6-2) MASK: DISPLAY MASK: DISPLAY ASSY: FRAME PANEL DISPLAY TRIM: TOP PANEL	28480 28480 28480 28480 28480 28480	7101-0286 7101-0285 03575-21201 03575-01204 03575-26802
MP6 MP7 MP8 MP9	03575-04101 2360-0196 0390-0006 2200-0766	1 4 59	COVER ASSY: TOP SCREW BUSHING (FOR T1) SCREW: MACH	28480	03575-04101
MP10 MP11 MP12 MP13 MP14	03575-01207 03575-04104 2200-0766 03575-21101 03575-00203	1 1 1	BRACKET: TSTR MTNG COVER: AC TERMINAL SCREW: MACH HEAT SINK: POWER SUPPLY PANEL: CONNECTOR MTNG	28480 28480 28480 28480	03575-01207 03575-04101 03575-21101 03575-00203
MP15 MP16 MP17 MP18	03575-04103 2360-0195 2190-0198 6960-0010 03575-00202	2	COVER: INTERFACE CONN SCREW WASHER: LOCK PLUG: HOLE PANEL: REAR	28480 28480	03575-04103 03575-00202
MP19 RIGHT SIDE LEFT SIDE MP20 MP21 MP22 MP23 MP23 MP24	2510-0050 03575-24103 2510-0052 2510-0190 03675-24108 2190-0343 3050-0026 2190-0087 2580-0015 2360-0192 03575-04102 5000-8589 5000-0050	1 1 2 2 1	SCREW PLATE: SPACER SCREW SCREW: INSULATOR SPACER: INSULATOR WASHER: INSULATOR WASHER: FLAT WASHER: LOCK NUT SCREW COVER ASSY: BOTTOM COVER: SIDE PLATE: FLUTED STAND: TILT	28480 28480 28480 28480 28480 28480 28480	03575-24108 03575-24108 03575-04102 5000-8589 5000-0050 1490-0030
MP25 MP26 MP27 MP28 MP29	5060-0767 03575-26803 03575-00211 00310-48801 0370-1099	5 1 1 4 5	ASSY: FOOT TRIM: BOTTOM PANEL PANEL: FRONT WASHER: SHLDR KNOB: POINTER	28480 28480 28480 28480 28480	5060-0767 03575-26803 03575-00211 00310-48801 0370-1099
MP30 MP31 (STD 3575A) MP31 (OPT 001-003) MP32 MP33	03575-26801 03575-40201 03575-40202 2200-0084 03575-25502	1 1 1 4	TRIM: CENTER WINDOW: DISPLAY WINDOW: DISPLAY SCREW SMIELD: CARD NEST	28480 28480 28480 28480	03575-26801 03575-40201 03575-40202
MP34 MP35 MP36 MP37 MP38	03575-25501 03575-01209 03575-24104 03575-24105 03575-24107	6 1 2 2	SHIELD: CARD NEST STRAP: RETAINER COVER: A1/A2 COVER: A3/A4 COVER: A6	28480 28480 28480 28480 28480 28480	03575-25501 03575-01209 03575-24104 03575-24105 03575-24107
MP39	03575-24106	1	COVER: A5	28480	03575-24106

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
			MISCELLANEOUS PARTS		
	03575-01211 1410-1017 5000-5085 0510-0075 5040-5932 0403-0151 0403-0152 0403-0153 0403-0154 0403-0156 0403-0160 0340-0704 03575-24101 0340-0583 0340-0888 03575-84411 5060-5987 5060-5989	1 10 1 4 1 2 3 4 1 1 2 2 1 1 1 2	BRACKET INTERFACE BOARD (REINFORCES A16B) BUSHING INSULATOR (FOR A15 Q1 · Q5 MTNG) CLIP POWER MODULE (A1B) CLIP TINNERMAN (TOP AND BOTTOM COVERS) COVER POWER SWITCH GUIDE PC BOARD GREY GUIDE PC BOARD BLACK GUIDE PC BOARD BLACK GUIDE PC BOARD RED GUIDE PC BOARD WHITE INSULATOR (FOR J5) INSULATOR TSTR BRKT (BETWEEN CHASSIS AND A17) INSULATOR TSTR BRKT (FOR A15 Q3, Q4) MICA INSULATOR: PLATE (FOR A15 Q3, Q4) MICA INSULATOR: TSTR (FOR A15 Q1, Q2, Q5) KIT- ACCESSORY, INCLUDES THE FOLLOWING: EXTENDER: PC 2 X 10 · PIN EXTENDER: PC 2 X 12 · PIN EXTENDER: PC 2 X 22 · PIN	28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480 28480	03575-01211 1410-1017 5000-5085 0510-0075 5040-5932 0403-0151 0403-0152 0403-0153 0403-0154 0403-0156 0403-0160 03575-24101 0340-0770 7403-10-03 0340-0838 03575-84411 5060-5987 5060-5989

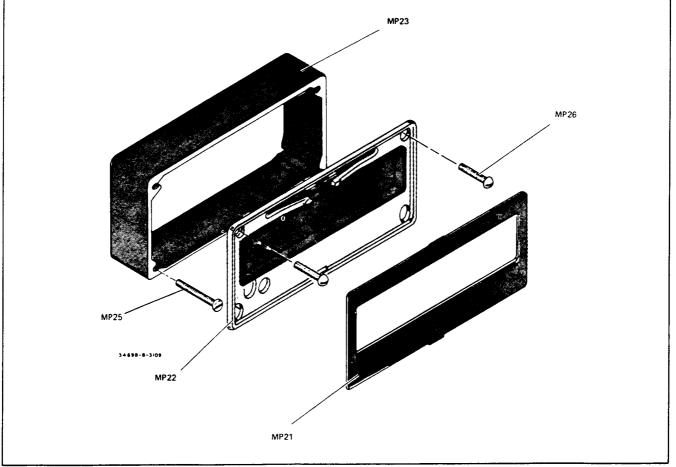


Figure 6-2. Mechanical Parts (Panel Frame).

			-

SECTION VII CIRCUIT DIAGRAMS

7-1. INTRODUCTION.

7-2. This section contains a functional block diagram schematic diagrams and component location diagrams for the 3575A Gain-Phase Meter.

7-3. FUNCTIONAL BLOCK DIAGRAM.

7-4. The Functional Block Diagram, Figure 7-1, is a detailed block diagram that shows the overall relationship between the major circuit elements in the 3575A. The diagram shows the main signal paths and provides voltages and waveforms that should be beneficial when trouble-shooting the instrument.

7-5. SCHEMATIC DIAGRAMS.

7-6. The schematic diagrams, Figures 7-2 through 7-11, show the detailed circuits of the standard Model 3575 A and Options 001 thru 003. Each schematic is assigned a numerical call out (1 through 10) which is used for interconnection referencing on the schematics and for schematic referencing on the functional block diagram and troubleshooting trees. The schematics are arranged to

provide as much signal continuity as possible and assemblies do not necessarily appear in the order of their reference designations. Refer to Table 7-1 for a complete cross reference listing.

7-7. Measurement Conditions.

7-8. Voltages and waveforms are provided on the schematics to aid in troubleshooting the instrument. Unless otherwise specified, all voltages and waveforms were obtained with a 2 V rms (+6 dBV), 1 kHz sine wave applied to both inputs (inputs in phase) and the 3575 A controls set as follows:

Voltage Range 0.2 mV - 2 V
(both channels)
FREQUENCY RANGE .10 Hz - 100 kHz
PHASE REFERENCE + A

7-9. Notes.

7-10. Refer to the General Schematic Notes (Page 7-2) for further information concerning the schematic diagrams.

Table 7-1. Assembly Cross Reference.

Assembly Number	Assembly Title	Assembly Part Number	Schematic Number	Figure Number
A1	Preamplifier Assembly	03575-66501	1	7-2
A2	Preamplifier Assembly	03575-66501	1	7-2
A3	Log Converter Assembly	03575-66503	1	7-2
A4	Log Converter Assembly	03575-66503	1	7-2
A5	Phase Detector Assembly	03575-66505	2	7-3
A6	Current Source Assembly	03575-66506	3	7-4
A7	Phase Control Filter Assembly	03575-66507	4	7-5
A8	Function Switching Assembly	03575-66508	5	7-6
A9	Output Filter Assembly	03575-66509	6	7-7
A10*	Output Filter Assembly	03575-66509	6	7-7
A11	Phase Control Logic Assembly	03575-66511	3	7-4
A12A	Panel Meter Connector Assembly	03575-66550	10	7-11
A12B*	Panel Meter Connector Assembly	03575-66551	10	7-11
A13	Front Panel Switching Assembly	03575-66513	5	7-6
A14	Power Supply Assembly	03575-66514	8	7-9
A15	Power Supply Mother Board Assembly	03575-66515	8	7-9
A16A	Interface Substitution Assembly	03575-26516	5	7-6
A16B**	Interface Assembly Negative	03575-66552	9	7-10
A16Ct	Interface Assembly Positive	03575-66553	9	7-10
A17	Mother Board Assembly	03575-66517		
A18	Power Input Module	5060-1200	8	7-9
A19**†	Interface Connector Assembly	03575-66519	9	7-10
A20,21,22	Digital Panel Meter (std & opt 001)	5060-9188	7	7-8
A20,21,22	Digital Panel Meter (opt 002 & 003)	5060-9127	7	7-8

GENERAL SCHEMATIC NOTES

- 1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY OR SUBASSEMBLY DESIG-NATION(S) OR BOTH FOR COMPLETE DESIGNATION.
- 2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UN-LESS OTHERWISE NOTED.

RESISTANCE IN OHMS CAPACITANCE IN MICROFARADS INDUCTANCE IN MILLIHENRYS

DENOTES EARTH GROUND. USED FOR TERMINALS WITH NO LESS THAN A

NO. 18 GAUGE WIRE CONNECTED BETWEEN TERMINAL AND EARTH GROUND TERMINAL OR AC POWER RECEPTACLE.

DENOTES FRAME GROUND. USED FOR TERMINALS WHICH ARE PERMA-NENTLY CONNECTED WITHIN APPROXIMATELY 0.1 OHM OF EARTH GROUND.

DENOTES GROUND ON PRINTED CIRCUIT ASSEMBLY. (PERMANENTLY CONNECTED TO FRAME GROUND).

- - DENOTES ASSEMBLY.

DENOTES MAIN SIGNAL PATH.

DENOTES FEEDBACK PATH

DENOTES FRONT PANEL MARKING.

DENOTES REAR PANEL MARKING. 11.

DENOTES SCREWDRIVER ADJUST. 12.

13. * AVERAGE VALUE SHOWN, OPTIMUM VALUE SE-LECTED AT FACTORY. THE VALUE OF THESE COMPONENTS MAY VARY FROM ONE INSTRU-MENT TO ANOTHER. THE METHOD OF SELECTING THESE COMPONENTS IS DESCRIBED IN SECTION V OF THIS MANUAL.


14. DENOTES SECOND APPEARANCE OF A CONNECTOR PIN NECTOR PIN.

15. \ 924 / DENOTES WIRE COLOR: COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDEN-TIFIES BASE COLOR, SECOND NUMBER IDEN-TIFIES WIDER STRIP, THIRD NUMBER IDENTIFIES NARROWER STRIP. (e.g. \924) = WHITE, RED, YELLOW.)


17. ALL RELAYS ARE SHOWN DEENERGIZED.

18. WAVEFORMS AND AC VOLTAGE MEASUREMENTS WERE MADE WITH RESPECT TO CHASSIS GROUND USING AN OSCILLOSCOPE WITH A 10:1 DIVIDER PROBE (10 MEG-OHM, 10 pF). THE VOLTAGE LEVELS SHOWN ON THE WAVEFORMS ARE ACTUAL VOLTAGE LEVELS AND ARE NOT TO BE CONFUSED WITH OSCILLOSCOPE SETTING. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER. A VARIATION OF ± 10 % IN MEASUREMENTS SHOULD BE ALLOWED


19. DC VOLTAGE LEVELS WERE MEASURED WITH RESPECT TO CIRCUIT GROUND USING A VTVM WITH 10 MEGOHM INPUT IMPEDANCE. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER DUE TO CHANGE IN TRANSISTOR CHARAC-TERISTICS. A VARIATION OF ± 10 % SHOULD BE ALLOWED.

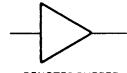

DENOTES BUFFER

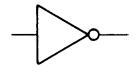


DENOTES INVERTER

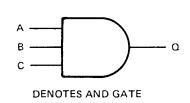

0	0	0	0	
0	0	1	0	
0	1	0	0	
0	1	1	0	
1	0	0	0	
1	0	1	0	
1	1	0	0	
1	1	1	1	


A B C Q

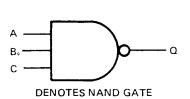

0	0	0	1	
0	0	1	1	
0	1	0	1	
0	1	1	1	
1	0	0	1	
1	0	1	1	
1	1	0	1	

1 1 1 0

A B C Q

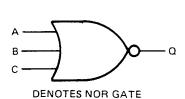

0	0	0	1	
0	0	1	0	
0	1	0	0	
0	1	1	0	
1	0	0	0	
1	0	1	0	
1	1	0	0	


1 1 1 0

- 0

A	В_	<u>a</u>
0	0	0
0	1	1
1	0	1
1	1	0


DENOTES EXCLUSIVE OR GATE

REFERENCE DESIGNATIONS

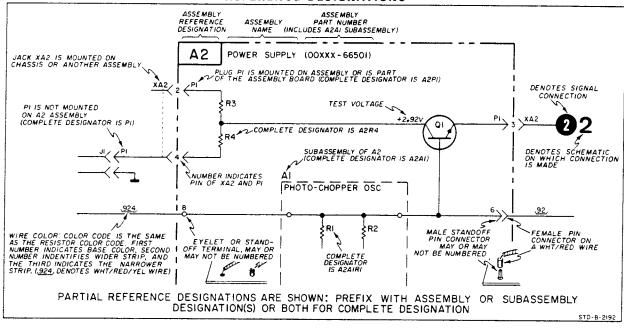


Pin No.	Connection	Pin No.	Connection	Pin No.	Connection
XA1 - 1	GND	13	XA4-13, XA14-9	XA4 - 1	GND
2	GND	14	XA4-14, XA5-20, XA14-10		GND
3	GND	15	GND	1	XA2-7, XA16-V, XA8-18
4	GND	16	GND		XA2-20, XA8-19-A, XA12-F, XA16-
5	XA3-4, XA7-2, XA5-5, XA4-9	17	GND		NC
6	XA7-6, XA6-7	18	XA4-18, XA5-18, XA6-18, XA3-18	1 6	XA8-20
7	XA8-W, XA16-18	i	XA1-18, XA7-20, XA16-S	7	XA8-Y
8	NC	19	XA4-19, XA5-19, XA6-19, XA3-19	1	XA16-13, XA5-3, XA6-3, XA8-X-1
9	XA7-3		XA1-19, XA7-21, XA16-14	3	XA5-5, XA3-4, XA1-5, XA7-2
10	XA3-10, XA14-4	20	XA4-4, XA8-19-2, XA12-F, XA16-F		XA12-D
11	XA3-11, XA14-7, XA7-4	21	NC	10	XA2-10, XA14-4
12	XA3-12, XA7-12-NC, XA14-8	22	XA2-8, XA12-Y, XA16-17	11	XA2-11, XA7-D, XA14-6
13	XA3-13, XA14-9			1	XA14-8
14	XA3-14, XA14-10	i		13	XA2-13, XA14-9
15	GND	XA3 - 1	GND		XA2-14, XA5-20, XA14-10
16	GND	2	GND	1	GND
17	GND	3	XA7-A, XA5-2, XA6-2, XA2-9	1	GND
	XA3-18, XA6-18, XA5-18, XA4-18,		XA1-5, XA7-2, XA5-5, XA4-9	17	GND
	XA2-18, XA7-20, XA16-S	5	NC	18	XA2-18, XA5-18, XA6-18, XA3-18,
19	XA3-19, XA6-19, XA5-19, XA4-19,	6	XA8-21	!	XA1-18, XA7-20, XA16-S
	XA2-19, XA7-21, XA16-14	7	XA8-22	19	XA2-19, XA5-19, XA6-19, XA3-19
20	XA16-13, XA4-8, XA5-3, XA6-3	8	XA7-8-J, XA11-21, XA6-9	i	XA1-19, XA7-21, XA16-14
	XA8-X, XA12-D	9	XA7-1	20	NC
21	NC	10	XA1-10, XA14-4	21	XA8-9-K, XA5-21, XA16-T
22	NC	11	XA1-11, XA14-7, XA7-4		XA7-Z
		12	XA1-12, XA7-12-NC, XA14-8		
(A2 - 1	GND	13	XA1-13, XA14-9	XA5 - 1	GND
2	GND	14	XA1-14, XA14-10	2	XA6-2, XA2-9, XA3-3, XA7-A
	GND	15	GND	1	XA6-3, XA4-8, XA16-13, XA8-X-1,
4	GND	16	GND		XA12-D
5	NC	17	GND	Ī	XA6-4, XA8-V
6	NC	18	XA1-18, XA6-18, XA5-18, XA4-18,		XA4-9, XA3-4, XA1-5, XA7-2
7	XA16-V, XA4-3, XA8-18		XA2-18, XA7-20, XA16-S		XA6-5
	XA12-Y, XA2-22, XA16-17	19	XA1-19, XA6-19, XA5-19, XA4-19,		XA6-6
9	XA5-2, XA6-2, XA3-3, XA7-A		XA2-19, XA7-21, XA16-14		NC
10	XA4-10, XA14-4	20			XA11-22
	XA4-11, XA14-6, XA7-D	21	NC		XA6-10, XA11-14, XA14-4.
12	NC	22	XA7-22		XA7-10-L

		1	1	1		1				•	
Pin No.	Connection	Pin No.	I	Pin No.	Connection	Pin No.	Connection	Pin No.	Connection	Pin No.	Connection
	XA6-11, XA13-4, XA14-5, XA11-10,			l .	XA8-10, XA16-16	14	XA10-13	D	XA8-1-X, XA16-13		3 XA12-14
	XA10-10, XA9-10	1	XA8-Z	1	XA8-11, XA12-R, XA9-8,	15	XA9-1, Analog Output No. 1		XA8-2		XA12-13
li .	XA612	1	XA7-N-12, XA1-12, XA3-12, XA14-8		XA10-8, XA14-8	16	XA16-N, XA12-C		XA8-A	10	XA16-L, XA14-4
	XA6·13, XA7·13·P, XA14·9 XA6·14, XA7·14·R, XA14·10	1	XA14-6, XA2-11, XA4-11	l N	XA8-N, XA9-9, XA10-9, XA11-9, XA14-4	17	NC	1	XA8-3	1	GND
	GND	i	XA11-17 XA11-18	Р	XA8-13, XA12-9, XA9-10,	18	XA8-17	1			2 XA12-A
16 0		1	XA11-19	•	XA10-10, XA11-10, XA14-5	19	NC	1	XA8-D XA8-5		3 XA12-D, XA8-1-X
17 (1	XA7-8, XA3-8, XA11-21, XA6-9	R	XA8-14, XA12-U, XA9-11,	20	XA9-20, XA7-X	1	XA9-5		XA7-21, XA1-XA6-19 XA8-8-J
18 >	XA1-18, XA3-18, XA6-18, XA4-18,	I .	NC		XA10-11, XA11-11, XA14-9	21	XA9-21, XA7-W		XA12-W-12-19, XA8-7-H, XA9-6	1	3 XA8-10-L
>	XA2-18, XA7-20, XA16-S	L	XA7-10, XA5-10, XA11-14, XA14-4	S	XA8-15, XA12-V, XA9-12,	22	XA9-22, XA7-V		XA10-7, XA11-7		XA12-Y, XA2-8-22
	XA1-19, XA3-19, XA6-19, XA4-19,	M	XA7-11, XA14-5		XA10-12, XA11-12, XA14-10			1	XA8-11-M, XA9-8, XA10-8, XA14-8		XA1-7, XA8-W
	XA2·19, XA7-21, XA16-14	1	XA7-12, XA1-12, XA3-12, XA14-8	Т	XA8-16, XA9-13, XA10-13	XA11- 1	NC	S	XA14-4, XA16-10-L	19	XA13-6
	XA4-14, XA2-14, XA14-10 XA4-21, XA8-9-K, XA16-T	1	XA7-13, XA5-13, XA6-13, XA14-9	11	XA11-13, XA14-1-2 XA9-18	2	NC	T	XA8-13-P, XA9-10, XA10-10,	E .	XA13-8
	XA16-U		XA7-14, XA5-14, XA6-14, XA14-10 GND	t .	XA6-4, XA5-4	3	NC		XA11-10, XA14-5	1	XA13-11
İ			GND		NC NC	4	NC	"	XA8-14-R, XA9-11, XA10-11,	22	XA13-14
XA6 - 1 G	эны XA5-2, XA2-9, XA3-3, XA7-A	l .	GND		NC	5	NC	\ \ \	XA11-11, XA14-9 XA8-15-S, XA9-12, XA10-12,	ΧΔ16-Δ	XA12-8
)	XA5-3, XA4-8, XA16-13, XA8-X-1	ı	XA10-22, XA9-22	Y	XA4-7	6	XA10-6, XA9-5-7, XA12-M	\ \ \ \	XA11-12, XA14-10		XA12-7
	KA12-D	i .	XA10-21, XA9-21	Z	XA7-B	7	XA10-7, XA12-P	l w	XA12-N-12-19, XA8-7-H, XA9-6	1	XA12-6
l .	KA5-4, XA8-V		XA10-20, XA9-20			8	XA10-5, XA9-6, XA8-H-7,		A10-14-13	1	XA12-5
l .	KA5-6	Y			XA10-15 Analog Output 1	1	XA12-12-N-19-W		XA2-8-22, XA16-17		XA12-4
	KA5-7	Z	XA4-22		NC NC		XA10-9, XA9-9, XA8-12-N, XA14-4	Z	NC .		XA12-3
1	KA1-6, XA7-6	VA0 4	VA12 D VA0 V VA16 12 VAE 2		NC NC	10	XA10-10, XA8-13-P, XA12-T,	XA12 1	XA12-S, XA14-4, XA16-10-L	1	XA12-2
	(A11-20		XA12-D, XA8-X, XA16-13, XA5-3, XA4-8, XA6-3		XA9-7, XA12-M, XA10-6, XA11-6		XA9-10, XA14-5	1	GND		XA12-1
	(A3-8, XA7-8-J, XA11-21	l	XA12-E		XA8-H-7, XA12-12-N-19-W, XA10-5	11	XA10-11, XA8-14-R, XA12-U,		NC		XA12-B XA16-10, XA14-4
	(A5-10, XA11-14, XA14-4 (A5-11, XA13-4, XA14-5, XA11-10	l	XA12-H		XA9-5, XA12-M, XA10-6, XA11-6		XA9-11, XA14-9		XA5-11, XA6-11, XA14-5, XA11-10	1	GND
	(A10-10, XA9-10		NC	8	XA8-11-M, XA12-R, XA10-8,	12	XA10-12, XA8-15-S, XA12-V,		XA10-10, XA9-10		XA12-C, XA10-16
	(A5-12	5	XA12-L		XA14-8		XA9-12, XA14-10		NC	ł	XA8-B, XA12-10
13 X	(A5-13, XA7-13-P, XA14-9		NC		XA8-12-N, XA10-9, XA11-9,	13	XA10-13, XA8-16-T, XA9-13,		XA16-19	R	XA2-20, XA4-4, XA8-19-2, XA12-
	(A5-14, XA7-14-R, XA14-10		XA8-H, XA12-12-N-19-W, XA9-6,		XA14-4 VA8-12-B VA12-T VA10-10	1	XA14-1-2	t e	XA16-W	1	XA7-20, XA1-XA6-18
15 G			XA10-5, XA11-8, XA14-1-2 XA8-J, XA16-15		XA8-13-P, XA12-T, XA10-10, XA11-10, XA14-5	14	XA14-4, XA5-10, XA6-10, XA7-10-L		XA16-20 NC		XA8-9-K, XA4-21, XA5-21
16 G 17 G			XA8-K, XA4-21, XA5-21, XA16-T		XA8-14-R, XA12-U, XA10-11,		NC		XA16-X		XA5-22
l .	(A1-18, XA3-18, XA5-18, XA4-18,		XA8-L, XA16-16		XA11-11, XA14-9	l	NC	1	XA16-21		XA8-18, XA4-3, XA2-7 XA13-7
1	(A2-18, XA7-20, XA16-S		XA8-M, XA12-R, XA9-8, XA10-8	12	XA8-15-S, XA12-V, XA10-12,	1	XA7-E	12	NC	1	XA13-10
1	(A1-19, XA3-19, XA5-19, XA4-19,		XA14-8		XA11-12, XA14-10	7	XA7-F		NC		XA13-15
X	(A2-19, XA7-21, XA16-14		XA8-N, XA9-9, XA10-9, XA11-9,	13	XA8-16-T, XA10-13, XA11-13,		XA7-H		XA16-22	Z	NC
20 N			XA14-4	1.4	XA14-1-2 XA9-13	1	XA6-8	15	XA16-Y		
21 N			XA8-P, XA12-T, XA9-10, XA10-10,	15		i e	XA7-8-J, XA3-8, XA6-9	XA14- 1	GND		
22 N	ic		XA11-10, XA14-5 XA8-R, XA12-U, XA9-11, XA10-11,	17		22	XA5-9		GND		
			XA11-11, XA14-9	17	NC	XA12- 1	XA16-J	3	NC		
			XA8-S, XA12-V, XA9-12, XA10-12,		XA8-U	ł	XA16-H		XA1-XA7-10, XA8-12, XA9-XA11-9		
XA7 - 1 X		;	XA11-12, XA14-10	19			XA16-F		XA12-S, XA13-1, XA16-L-10		
	A1-5, XA3-4, XA5-5, XA4-9 A1-9		XA8-T, XA9-13, XA10-13, XA11-13,		XA10-20, XA7-X		XA16-E		XA7-11-M, XA11-10, XA10-10,	•	
	A1-9 A1-11, XA3-11, XA14-7		XA14-1-2		XA10-21, XA7-W XA10-22, XA7-V		XA16-D XA16-C		XA9-10 XA8-12-N, XA12-R, XA5-11,		
5 N			XA10-18 XA4-3, XA2-7, XA16-V		·		XA16-C XA16-B		XA6-12-N, XA12-R, XA5-11, XA6-11 XA13-4		
	A1-6, XA6-7		XA4-3, XA2-7, XA16-V XA4-4, XA2-20, XA8-A, XA12-F,		Analog Output No. 2		XA16-A		XA2-11, XA4-11, XA7-D		
7 N			XA16-9		NC I		XA9-14		XA1-11, XA3-11, XA7-4		
	A3-8, XA11-21, XA6-9, XA7-J	20)	XA4-6		NC NC		XA8-B, XA16-P		XA1-12, XA3-12, XA4-12,		
9 N	- 1		XA3-6		XA9-6, XA8-H-7, XA12-12-N-19-W		XA8-E		XA7-12-N		
	A7-L, XA5-10, XA11-14, XA14-4	22)	KA3-7		XA9-5-7, XA12-M, XA11-6		XA8-7-H, XA12-N-19-W, XA9-6		XA1-XA7-13, XA8-14,		
	A7-M, XA14-5 A7-N, XA1-12, XA3-12, XA14-8				XA12-P, XA11-7		XA16-9		XA9-XA11-11, XA12-U		
		ΧΔ8 -Δ ¥	(A8-19, XA4-4, XA2-20, XA12-F,		XA9-8, XA8-11-M, XA12-R,		XA16-8 XA16-7		XA1-XA7-14, XA8-15,		
	A7-R, XA5-14, XA6-14, XA14-10		(A16-P		XA14-8		XA16-6		XA9-XA11-12 GND		
15 GI			(A12-10, XA16-P		XA9-9, XA8-12-N, XA11-9,		XA16-5		SND		
16 GI			(A12-J		XA14-4 YA813B XA13T XA010	18 2	XA16-4	12 \			
17 GI			(A12-K		XA8-13-P, XA12-T, XA9-10, XA11-10, XA14-5		XA12-W-N-12, XA8-7-H, XA9-6				
18 NO			(A12-11		XA8-14-B, XA12-U, XA9-11		XA16-3	XA16- 1			
19 No	C A1-18, XA3-18, XA6-18, XA5-18,	FN			XA11-11, XA14-9		KA16-2		XA12-21		
	A4-18, XA1-18, XA16-S		(A8-7, XA12-12-N-19-W, XA9-6, (A6-5, XA11-8, XA14-12		XA8-15-S, XA12-V, XA9-12,	24)	KA16-1		XA12-20 XA12-18		
	A1-19, XA3-19, XA6-19, XA5-19,		(A8-8, XA16-15		XA11-12, XA14-10	XA12-A >	(A16-12		XA12-16 XA12-17		
	A4-19, XA2-19, XA16-14		(A8-9, XA4-21, XA5-21,	13	XA8-16-T, XA9-13, XA11-13,		(A16-K		XA12-16		
	A3-22		(A16-T		XA14-1-2		(A10-16, XA16-N		XA12-15		
					T T T T T T T T T T T T T T T T T T T				1		

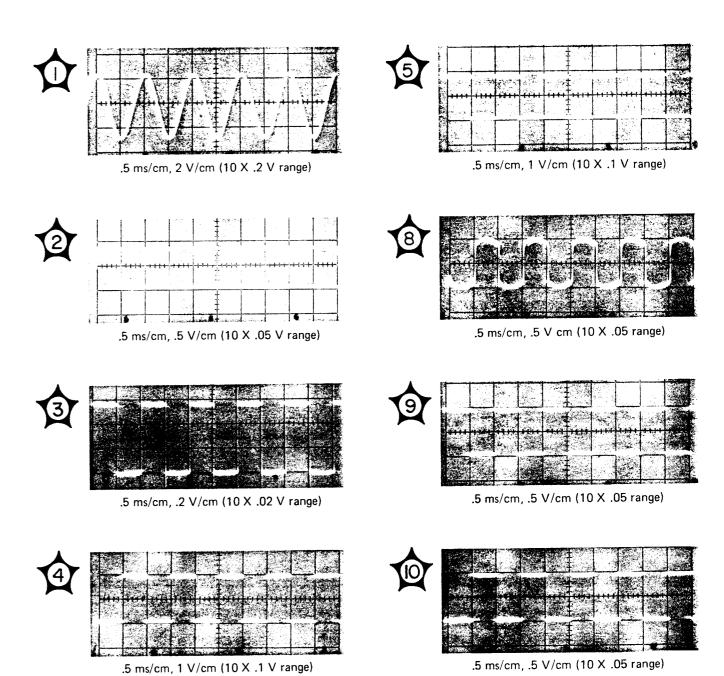

1			

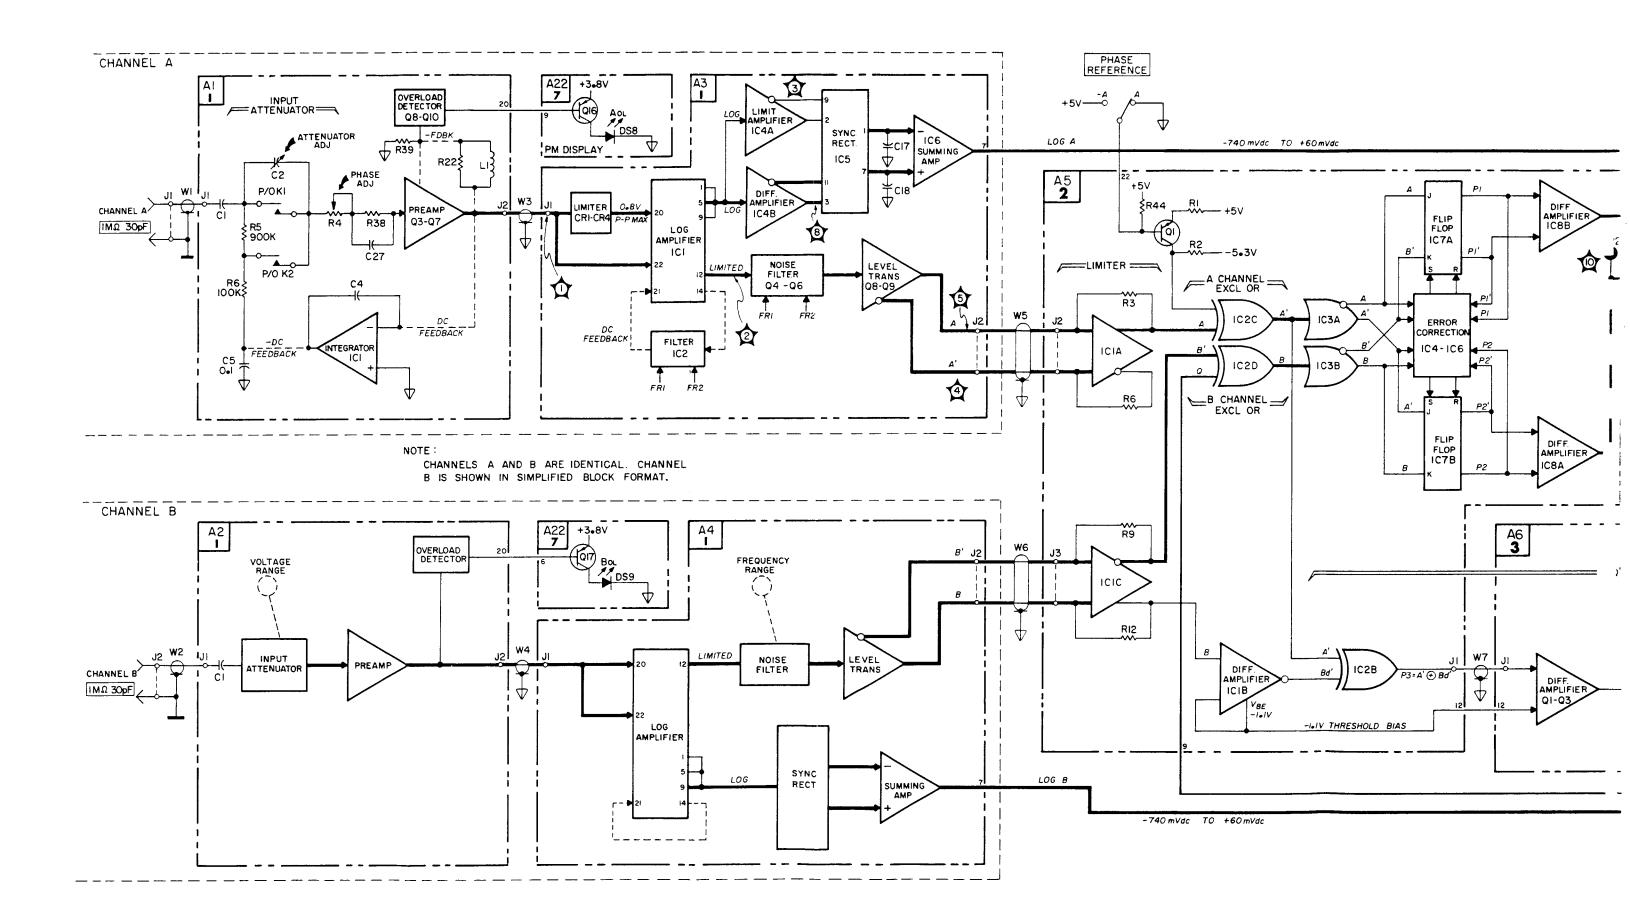



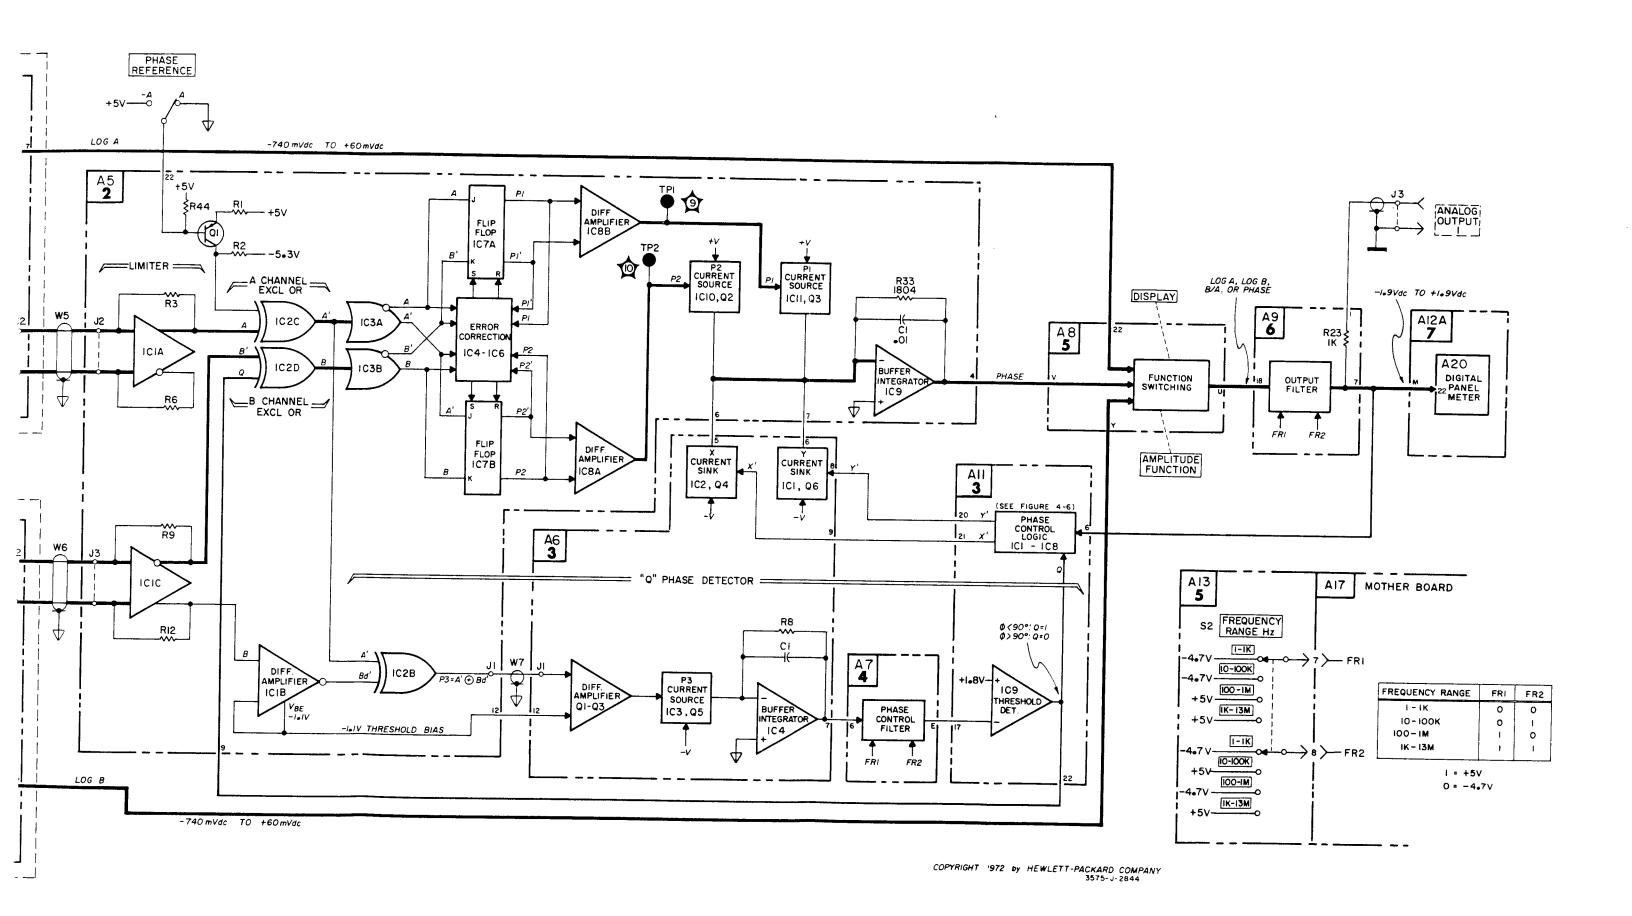


Figure 7-1. Functional Block Diagram. 7-5/7-6

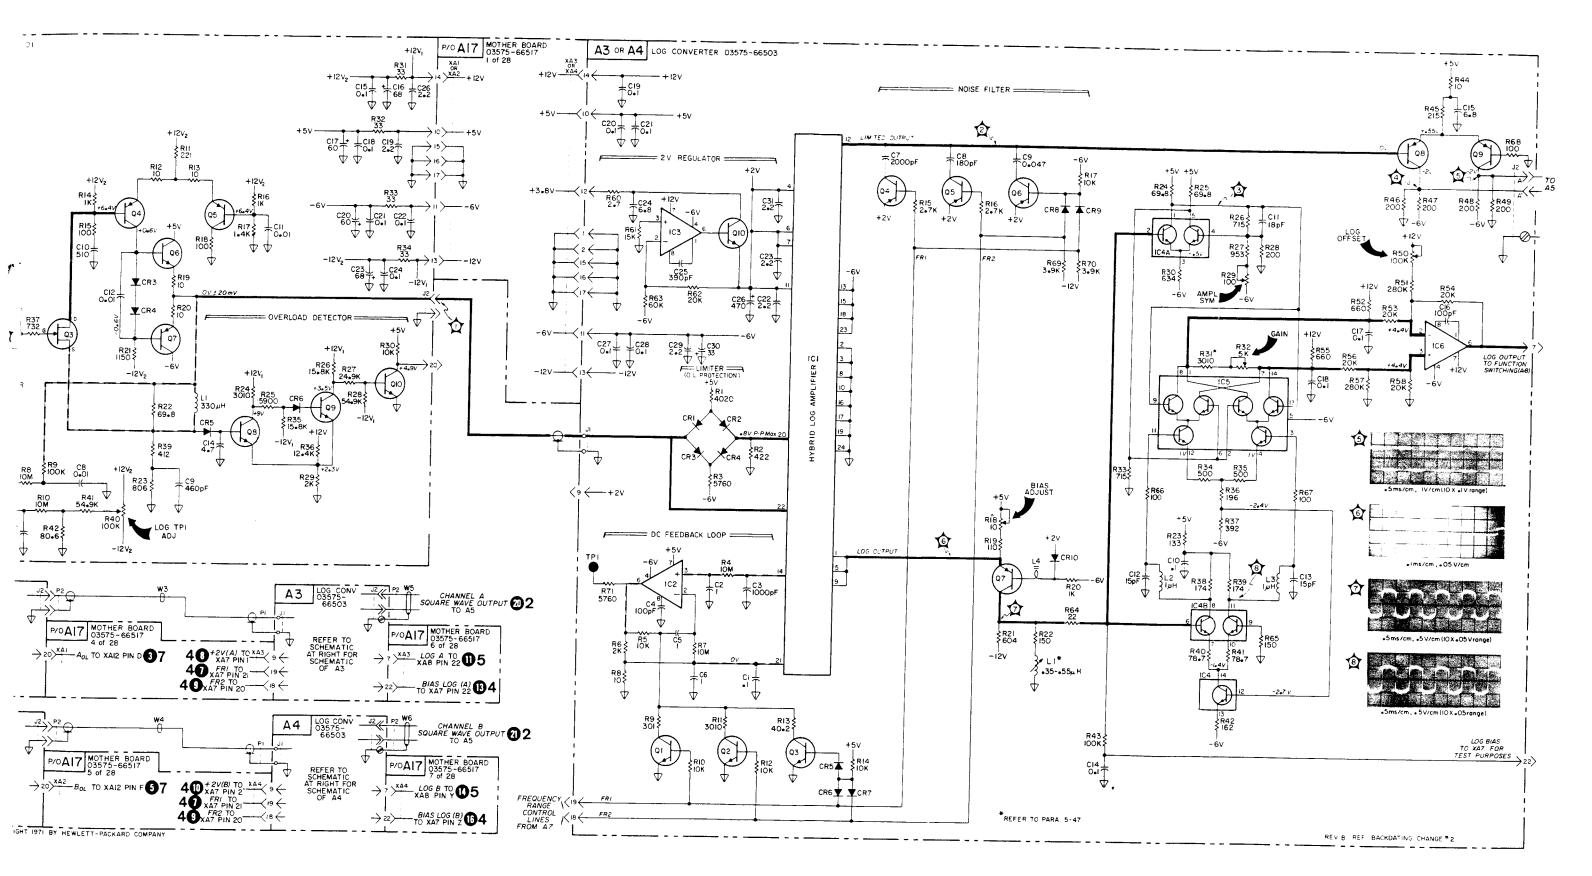


1

Figure 7-2. Preamplifier (A1/A2) and Log Converter (A3/A4) Schematics and Component Location Diagrams.

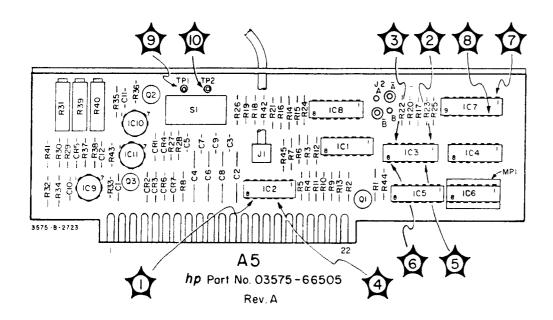




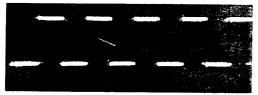



.5 ms/cm, .5 V/cm (10x .05 range)




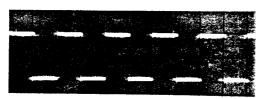


.5 ms/cm, .5 V/cm (10x .05 range)

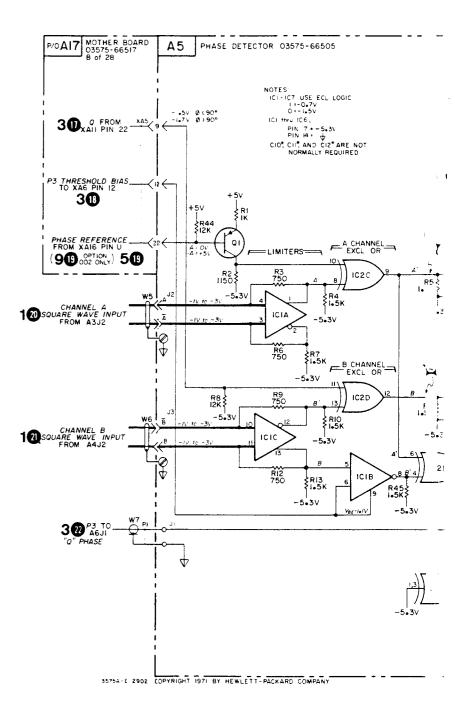

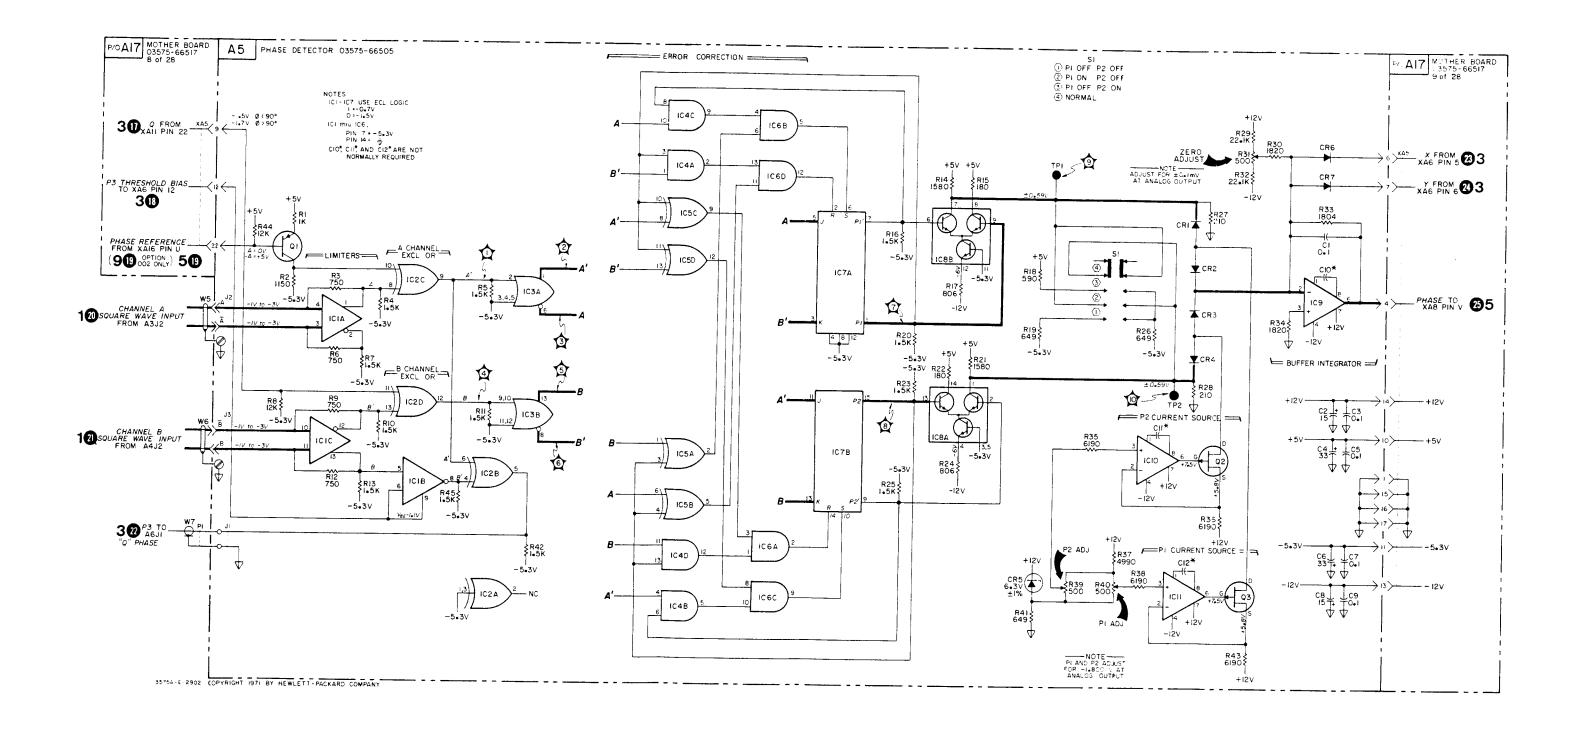


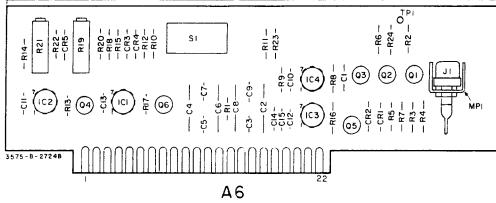



A6 hp Part No.03575-66506 Rev. B

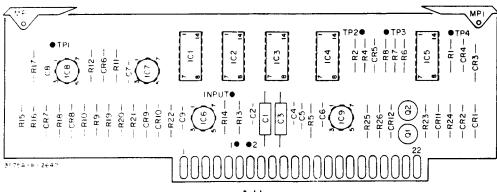


All
hp Part No. 03575-66511
Rev A

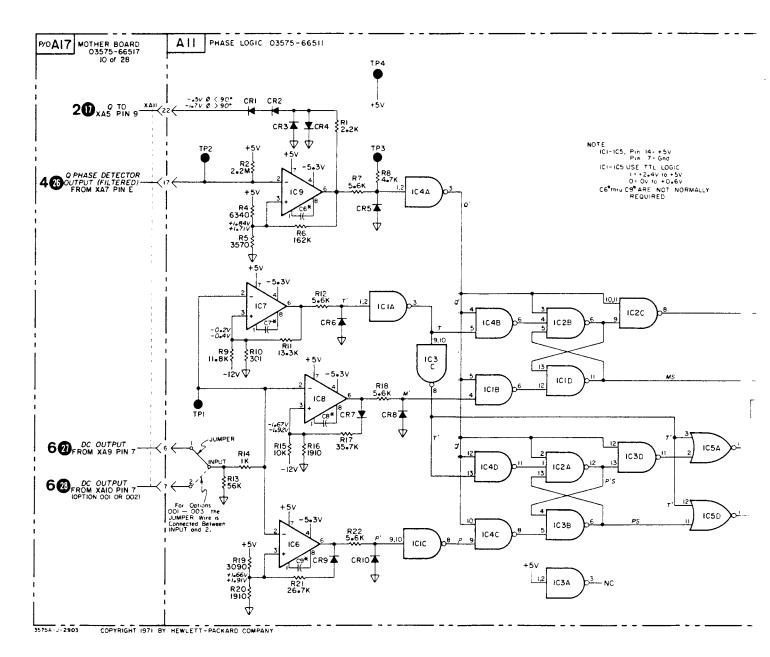

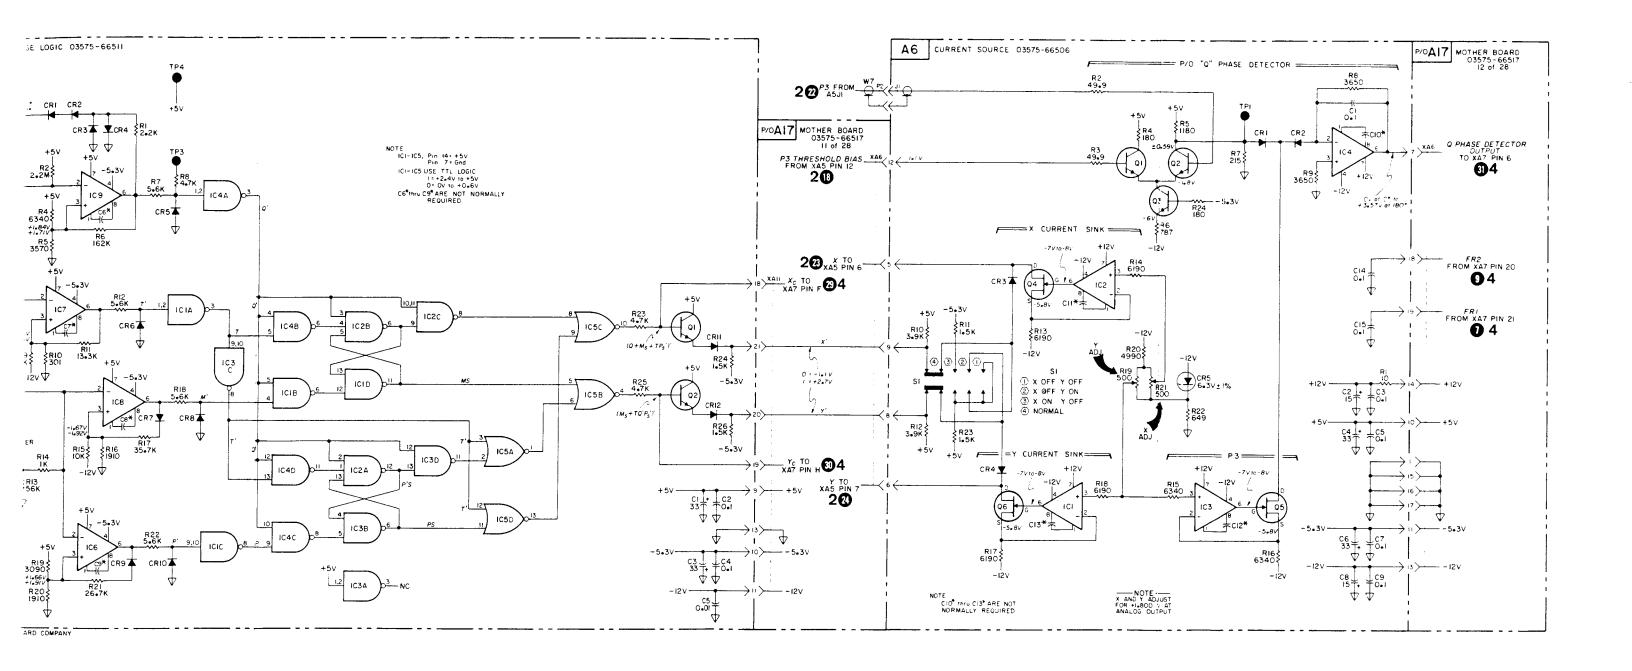

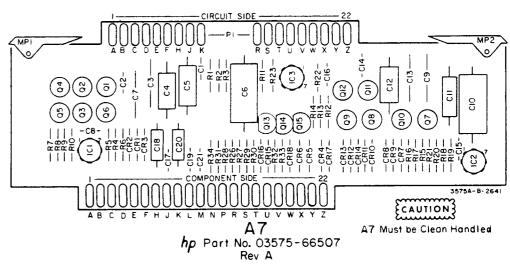

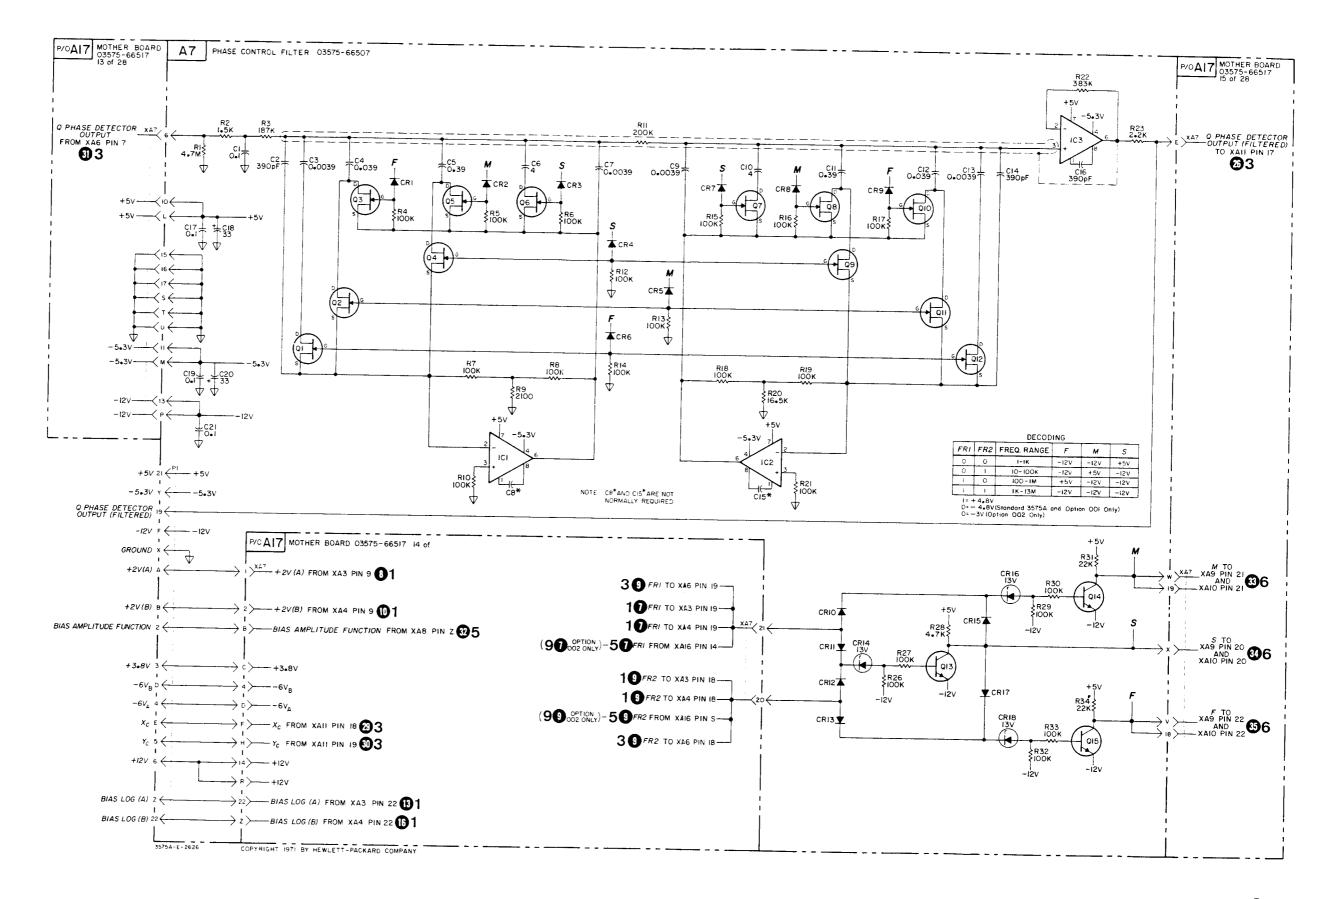

4

Figure 7-5. Phase Control Filter (A7) Schematic and Component Location Diagram.

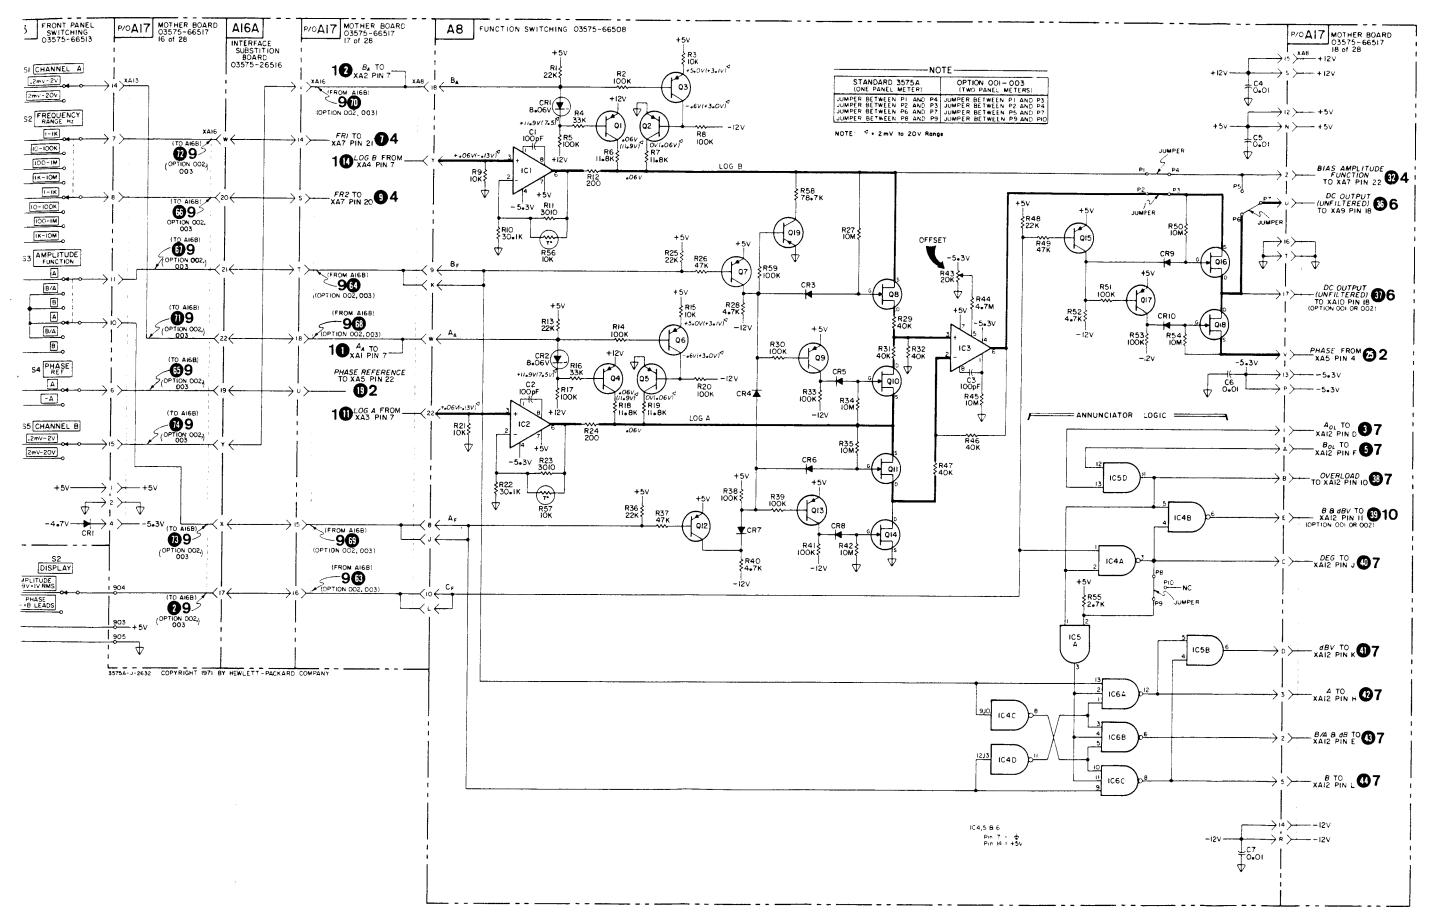


Figure 7-6. Function Switching (A8) and Front Panel Switching (A13) Schematics and Component Location Diagrams.

5

MPP	


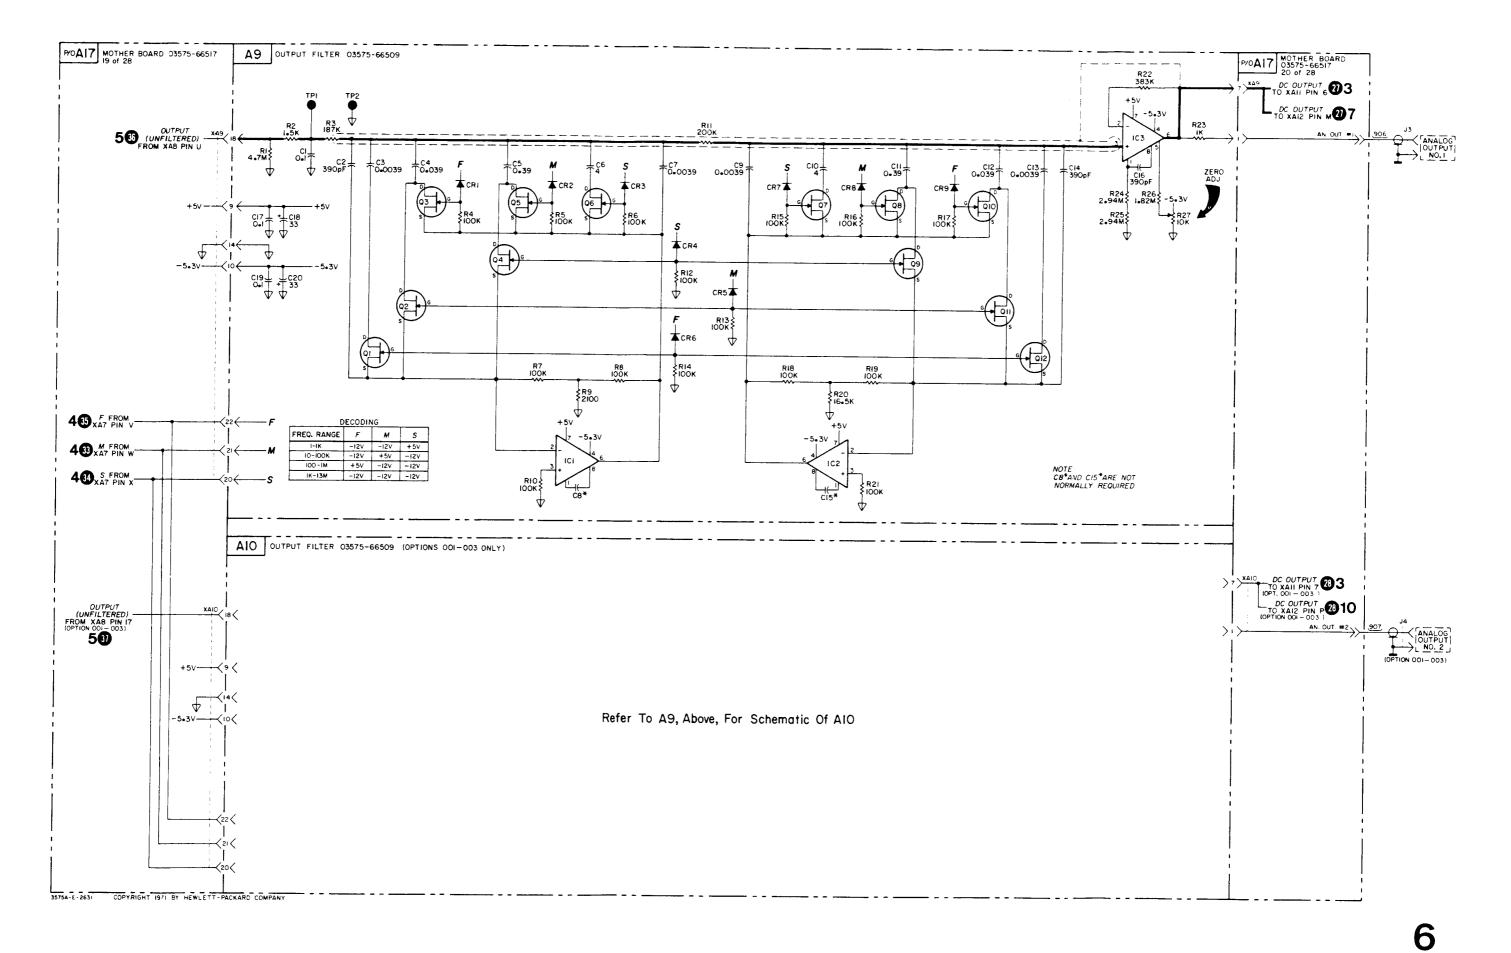


Figure 7-7. Output Filter (A9/A10) Schematic and Component Location Diagram.

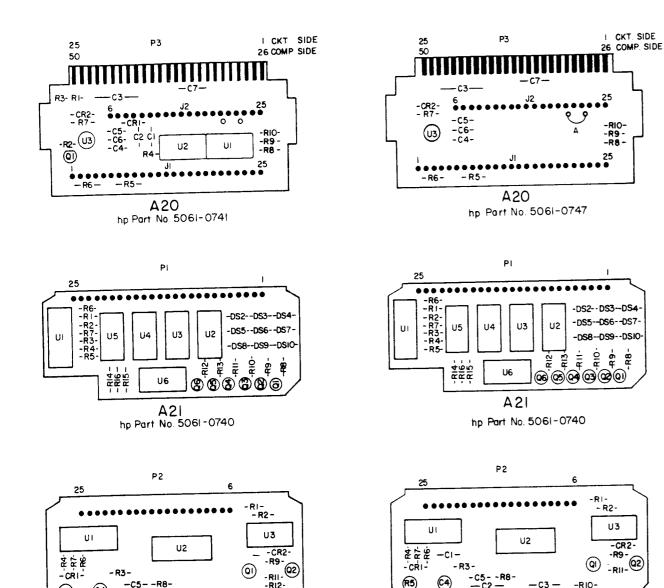

-CRI-

3403B 404

R5

©4)

-C3- -RIO-

A 22

hp Part No. 5061-0739

-C5--R8---C2-

A22


hp Part No. 5061-0736

-C3 - -RIO-

R5

3403 B 4042

©4

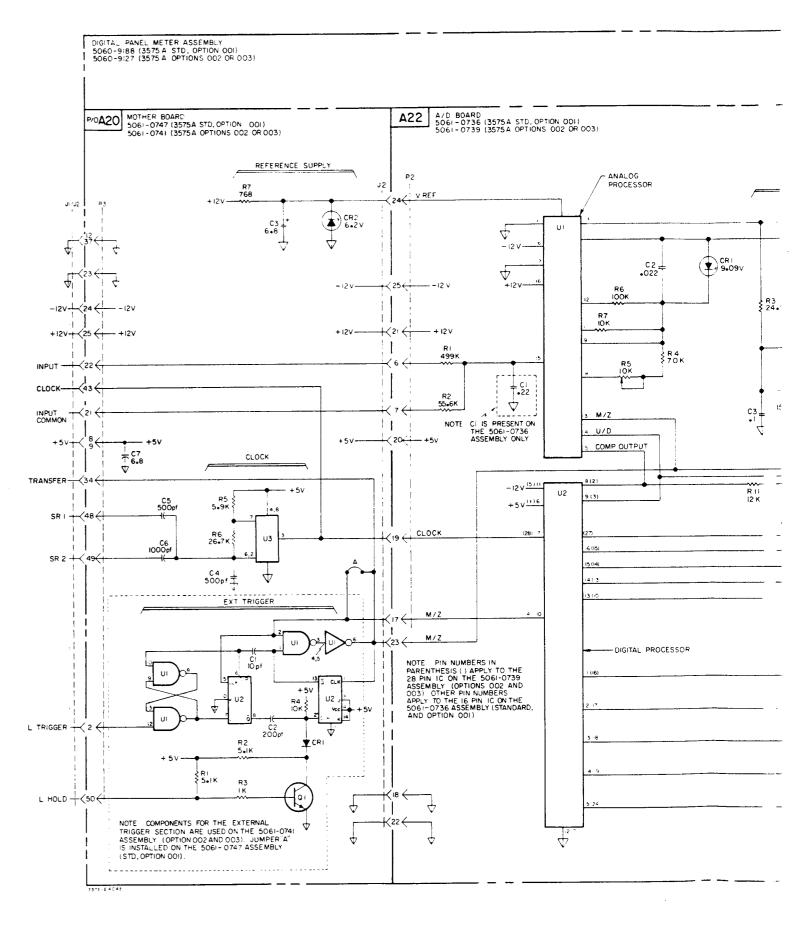




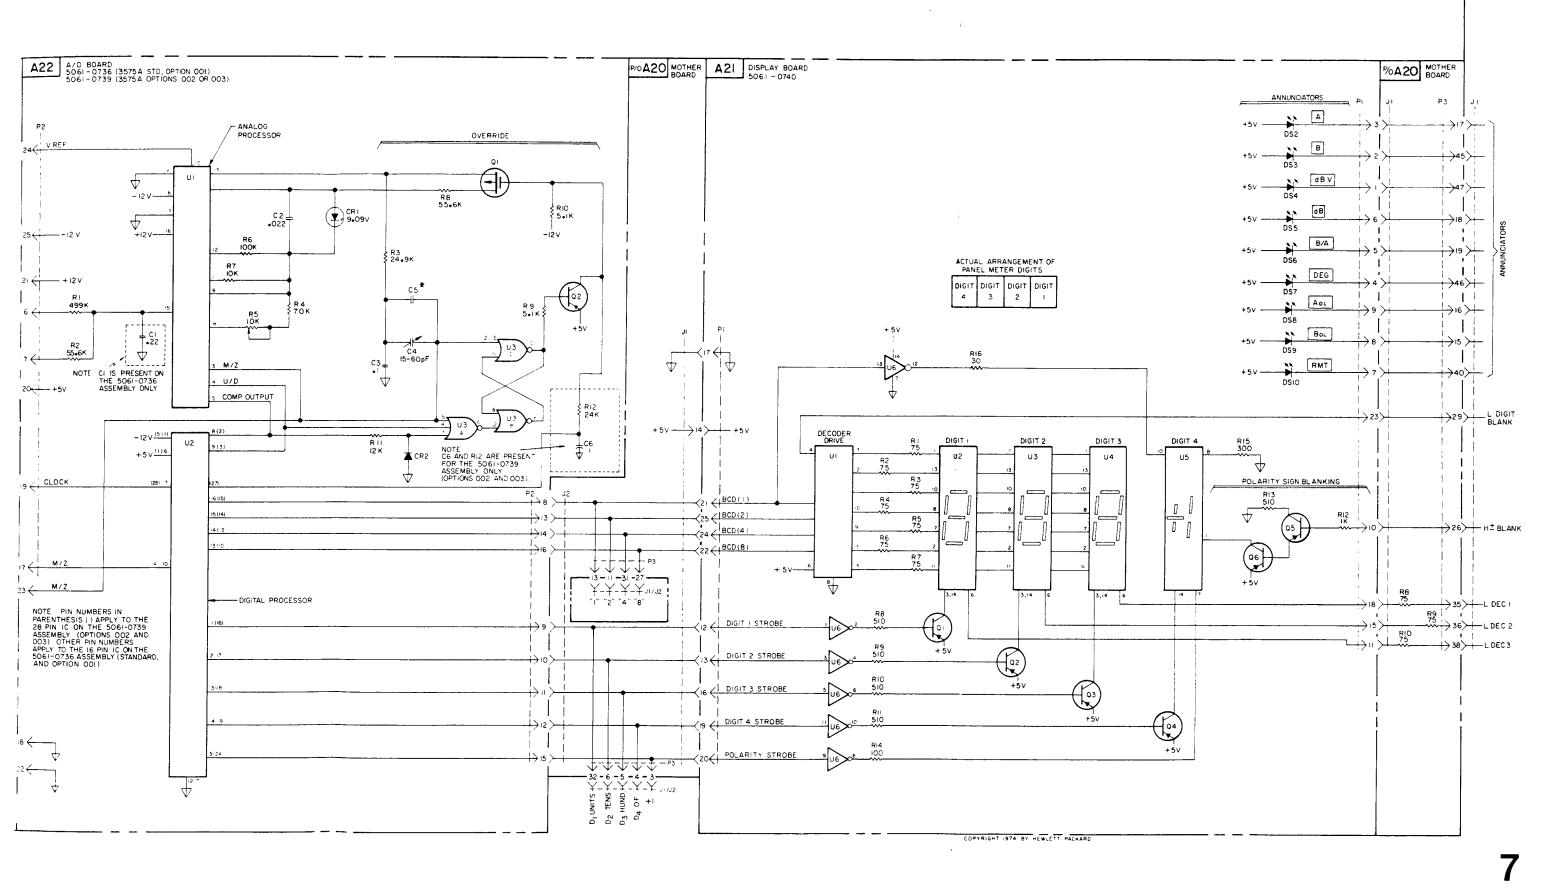



Figure 7-8. Panel Meter (A20, A21, A22) Schematics and Component Location Diagrams.

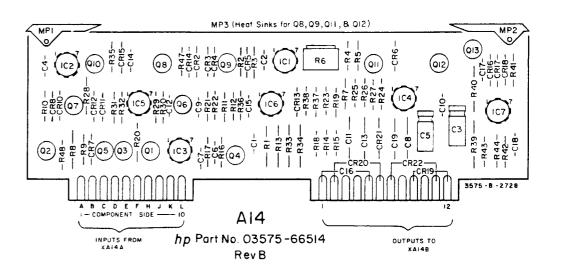

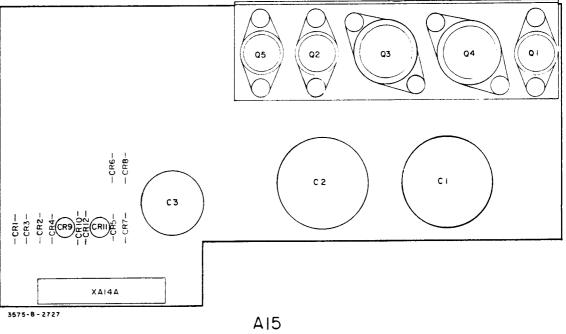


hp Part No. 03575-66515 Rev. A

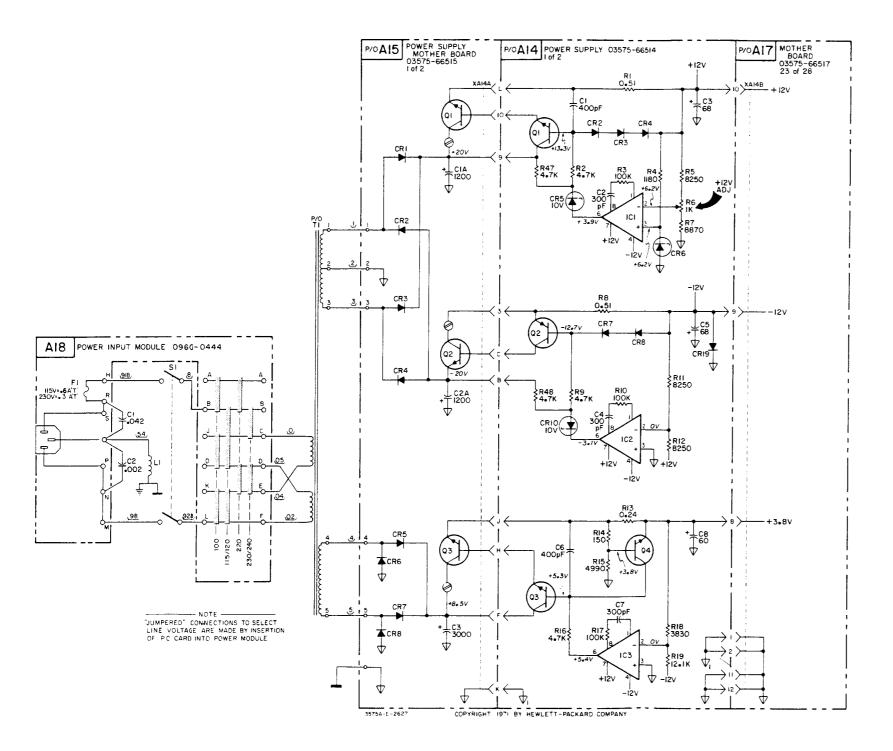

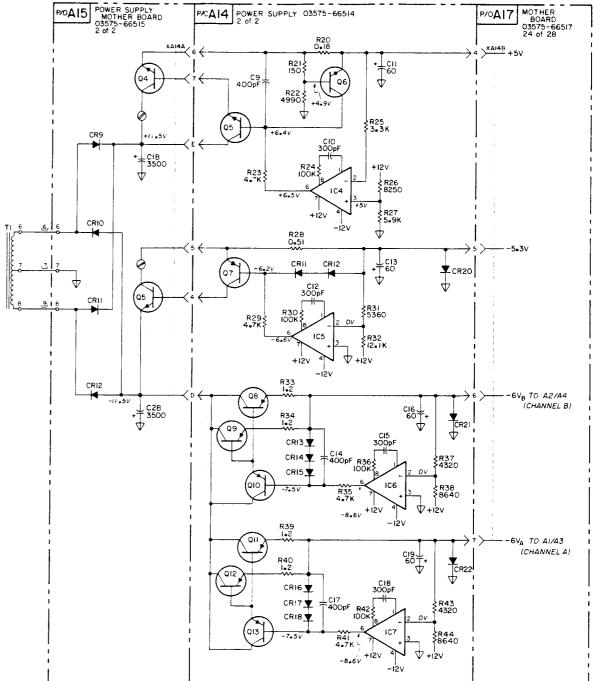

8

Figure 7-9. Power Supply (A14) and Power Supply Mother Board (A15) Schematics and Component Location Diagrams.

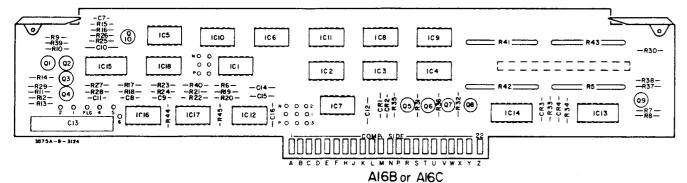


hp Part No- 03575-66552 (B) 0PT 002 66553 (C) 0PT 003

Front Panel Switch	Signal Name	Position for an UP Level	XA16 Input Local	J1 Input Remote	XA16 Output
PHASE/AMP	CF	PHASE	17	9	16
CHANNEL A	AA	.2 mV - 2 V	22	34	18
FREQ. RANGE	FR1	100 - 1 MHz	W	35	14
`	1	1 kHz - 13 MHz	ŀ		
	FR2	10 Hz - 100 kHz	20	11	S
		1 kHz - 13 MHz			
AMP FUNCTION	AF	В	X	36	15
	BF	A	21	12	T
PHASE REF	QREF	- A	19	10	U
CHANNEL B	BA	.2 mV - 2 V	Y	37	V

Up Levels must be + 4.8 V.

Table 7-3. Truth Table for Remote.

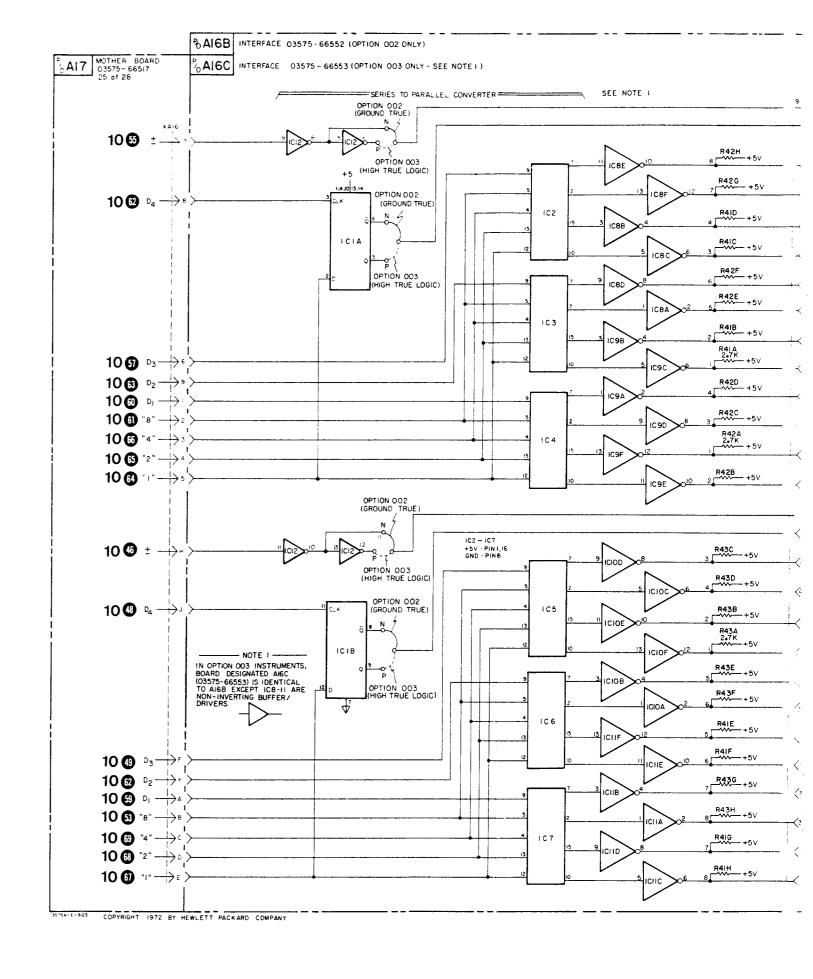



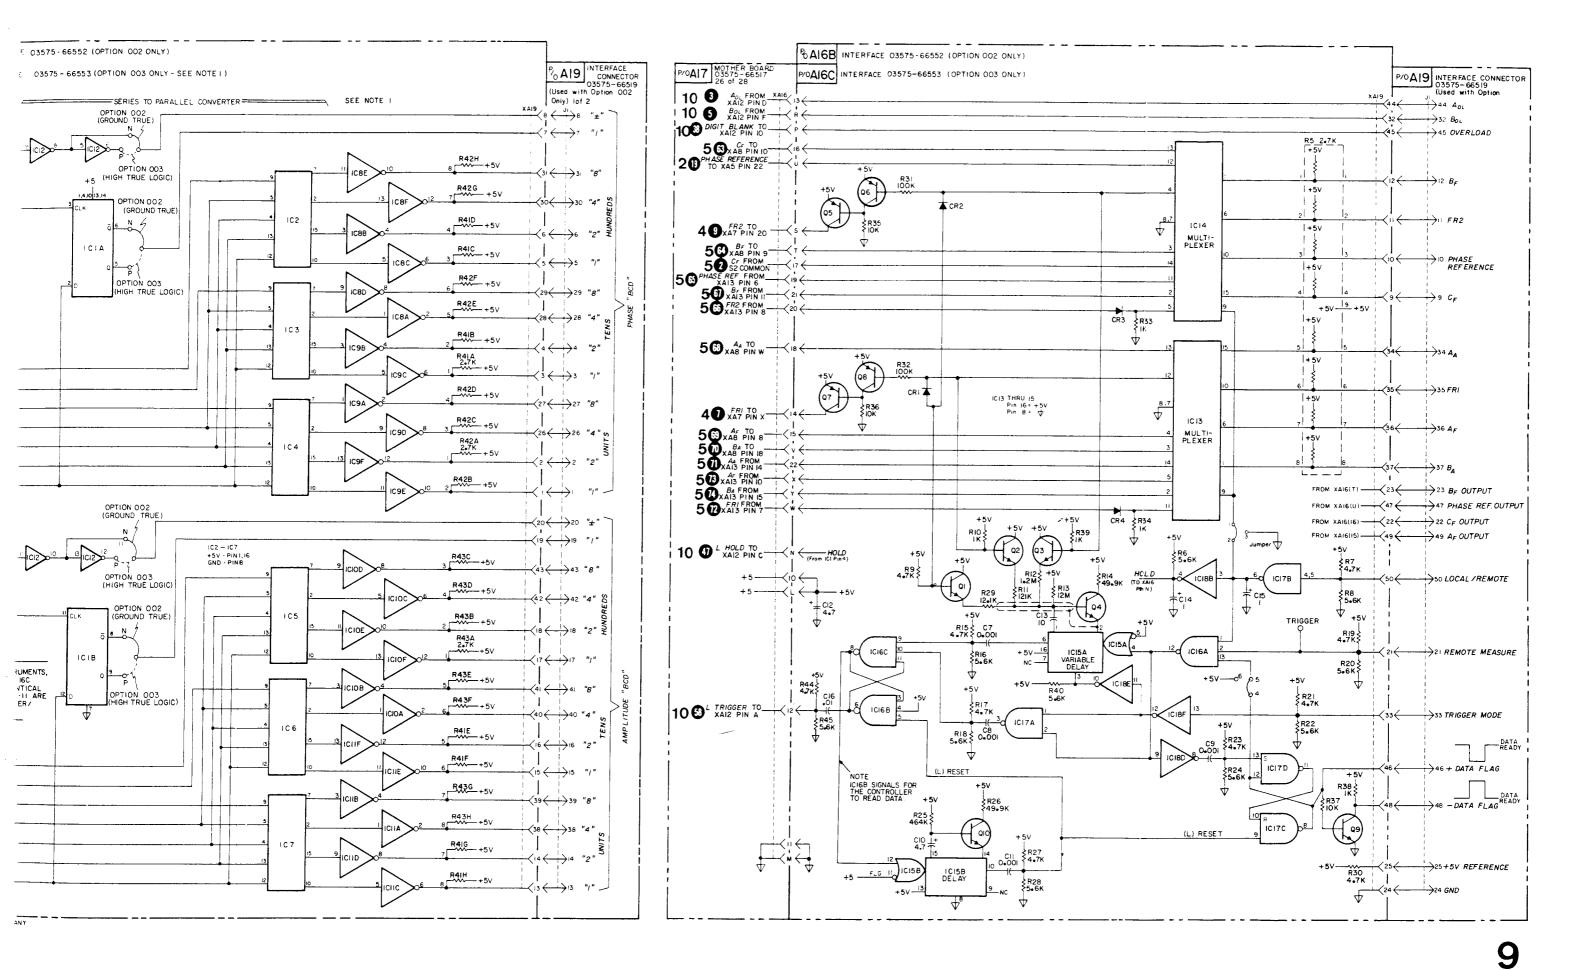


Figure 7-10. Interface Board A16B (Option 002) or A16C (Option 003) Schematic and Component Location Diagram.

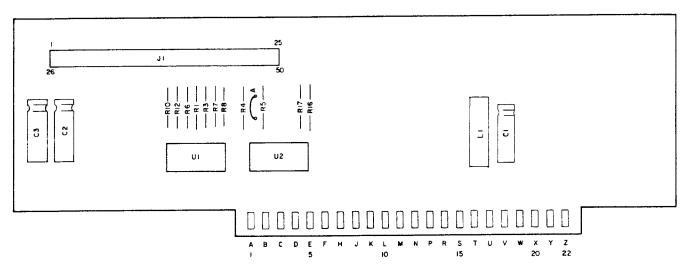

A12A hp Part No. 03575 - 66550

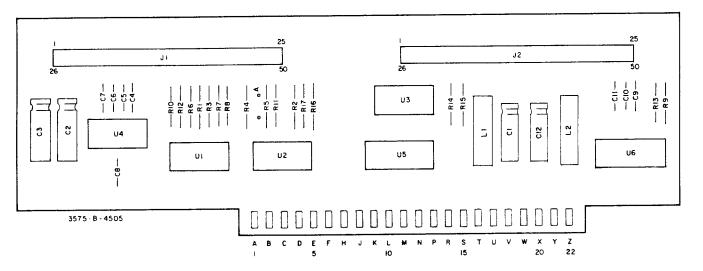

A12B *hp* Part No. 03575-66551

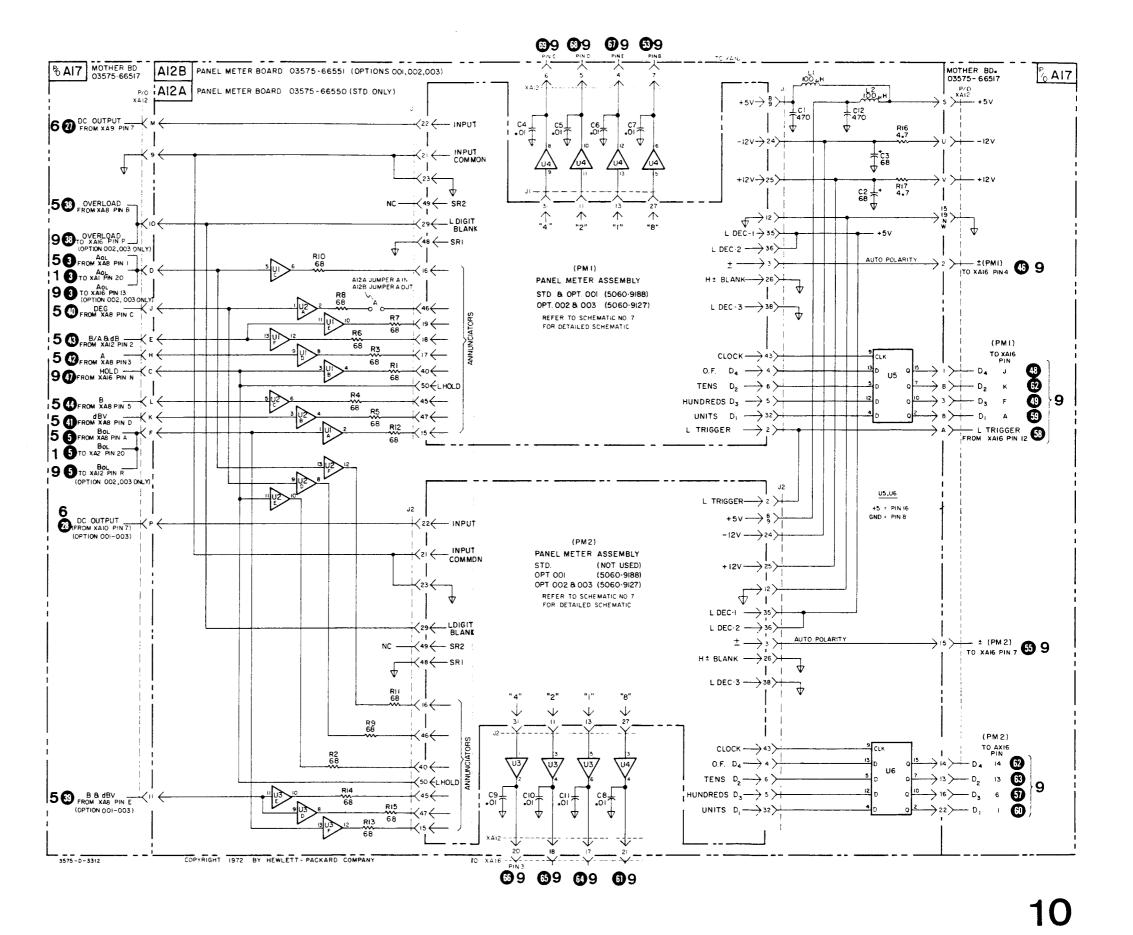


Figure 7-11. Panel Meter Connector (A12A and A12B) Schematics and Component Location Diagrams.

7-25/7-26



CODE LIST OF MANUFACTURERS

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer Addres	s Code No.	Manufacturer	Address	Code No	Manufacturer Address
00000	U. S. A Common Any supplier of U. S	05347		San Mateo, Cal.	11236	CTS of Berne, Inc Berne, Ind. Chicago Telephone of
00136 00213	McCoy Electronics - Mount Holly Springs, Pa Sage Electronics Corp Rochester, N.Y		Union Carbine Corp., Elect.	New York, N.Y.	112.	California, Inc So. Pasadena, Cal.
00287	Cemco, Inc Danielson, Conn	05574	Viking Ind. Inc	Canoga Park, Cal.		Bay State Electronics Corp Waltham, Mass.
00334 00348	Humidial Colton, Calif Mictron, Co., Inc. Valley Stream, N. Y			Sunnyvale, Cal.	11312	Teledyne Inc., Microwave Div
00373	Garlock Inc		Spec. Co.)	Cleveland, Ohio	11314	National Seal Downey, Cal.
00656	Aerovox Corp New Bedford, Mass	. 05624			11453	
00779 00781	Amp. Inc		Tiffen Optical Co Roslyn Heights, 1	Long Island N Y	11534	Duncan Electronics Inc Costa Mesa, Cal. General Instrument Corp.,
00809	Croven, Ltd Whitby, Ontario, Canad	a 05 72 9	Metro-Tel Corp.	. Westbury N. Y.		Semiconductor Division Products
00815	Northern Engineering	05783	Stewart Engineering Co		11717	Group Newark, N.J. Imperial Electronic, Inc. Buena Park, Cal.
00853	Laboratories, Inc Burlington, Wis Sangamo Electric Co.,	05820 06004	Wakefield Engineering Inc Bassick Co., Div. of Stewart	.wakeneid, mass.	11870	
	Pickens Div Pickens, S. C		Warner Corp			Philadelphia Handle Co Camden, N.J.
00866 00891	Goe Engineering Co City of Industry, Cal Carl E. Holmes Corp Los Angeles, Cal		Raychem Corp	edwood City, Cal.	12361 12574	Grove Mfg. Co., Inc Shady Grove, Pa. Gulton Ind. Inc., Data System
00929	Microlab Inc Livingston, N. J		Co	Rochester, N.Y.	.20	Div Albuquerque, N. M.
01002	General Electric Co.,	06402	E. T. A. Products Co. of	O 1.	12697	
01009	Capacitor Dept		America	Chicago, III.	12728 12859	Elmar Filter Corp W. Haven, Conn. Nippon Electric Co., Ltd Tokyo, Japan
01121	Allen Bradley Co Milwaukee, Wis			w Rochelle, N. Y.	12881	Metex Electronics Corp Clark, N.J.
01255	Litton Industries, Inc Beverly Hills, Cal		Beede Electrical Instrument	Danagask N U	12930 12954	Delta Semiconductor Inc Newport Beach, Cal. Dickson Electronics Corp Scottsdale, Arizona
01281 01295	TRW Semiconductors, Inc Lawndale, Cal Texas Instruments, Inc.,	06666	Co., Inc		13019	Airco Supply Co., Inc Witchita, Kansas
	Transistor Products Div Dallas, Texa	s 06751	Components Inc. Ariz. Div	Phoenix, Arizona	13061	Wilco Products Detroit, Mich.
01349	The Alliance Mfg. Co Alliance, Ohi		Torrington Mfg. Co., West Div. Varian Assoc, Etmac Div.		13103 13327	Thermolloy Dallas, Texas Solitron Devices Inc Tappan, N. Y.
01538 01589	Small Parts Inc Los Angeles, Cal Pacific Relays, Inc Van Nuys, Cal		Kelvin Electric Co		13396	Telefunken (GmbH)
01670	Gudebrod Bros. Silk Co New York, N.Y	07126	Digitran Co.	. Pasadena, Cal.	13835	Midland-Wright Div. of
01930 01960	Amerock Corp Rockford, Ill Pulse Engineering Co Santa Clara, Cal		Transistor Electronics Corp	inneapolis Minn	14099	Pacific Industries, Inc Kansas City, Kansas Sem-Tech Newbury Park, Cal.
02114	Ferroxcube Corp. of	07138	Westinghouse Electric		14193	Calif. Resistor Corp Santa Monica, Cal.
	America		Corp., Electronic Tube Div.		14298	American Components, Inc., Conshohocken, Pa. ITT Semiconductor, a Div. of
02116 02286	Wheelock Signals, Inc Long Branch, N. J. Cole Rubber and Plastics Inc Sunnyvale, Cal.	07149 07233	Filmohm Corp City		14400	Int. Telephone and Telegraph
02660	Amphenol-Borg Electronics	07256	Silicon Transistor Corp C	arle Place, N.Y.		Corporation West Palm Beach, Fla.
00725	Corp	07261 07263	Avnet Corp		14493 14655	Hewlett-Packard Company Loveland, Colo. Cornell Dublier Electric Corp Newark, N.J.
02735	Radio Corp. of America, Semi- conductor and Materials	01203	Semiconductor Div Mo		14674	Corning Glass Works Corning, N. Y.
	Division Somerville, N. J.	07322	Minnesota Rubber Co M	inneapolis, Minn.		Electro Cube Inc San Gabriel Cal.
02771	Vocaline Co. of America, Inc Old Saybrook, Conn.	07387 07397	Birtcher Corp. The Mor Sylvania Elect. Prod. Inc.,	nterey Park, Cal.		Williams Mfg. Co San Jose, Cal. The Sphere Co., Inc Little Falls, N.J.
02777	Hopkins EngineeringCo. San Fernando, Cal.		Mt. View Operations Mo	untain View, Cal.	15203	Webster Electronics Co New York, N. Y.
02875	Hudson Tool & Die Newark, N. J.	07700	Technical Wire Products	Cranford N. I.	15287 15291	Scionics Corp Northridge Cal. Adjustable Bushing Co N. Hollywood, Cal.
03296 03508	Nylon Molding Corp Springfield, N. J. G. E. Semiconductor Prod.	07829	Inc			Micron Electronics, Garden City, Long Island, N. Y.
	Dept	07910	Continental Device Corp			Amprobe Inst. Corp. Lynbrook, N. Y.
03705 03797	Apex Machine & Tool Co Dayton, Ohio Eldema Corp Compton, Calif.	07933	Raytheon Mfg. Co., Semi- conductor Div Mo	untain View Cal		Cabletronics
03191	Parker Seal Co Los Angeles, Cal.	07980	Hewlett-Packard Co.,			Spring Co Santa Clara, Cal.
03877	Transitron Electric Corp Wakefield, Mass.	00145	New Jersey Division		15801	Fenwal Elect. Inc Framingham, Mass. Amelco Inc Mountain View. Cal.
03888	Pyrofilm Resistor Co., Inc Cedar Knolls, N.J.	08145 08289	U.S. Engineering Co L Blinn, Delbert Co		16037	Spruce Pine Mica Co Spruce Pine, N. C.
03954	Singer Co., Diehl Div.,	08358	Burgess Battery Co		16179	Omni-Spectra Inc Detroit, Ill.
04000	Finderne Plant Sumerville, N.J.	08524	Deutsch Fastener Corp 1			Computer Diode Corp Lodi, N.J. Electroid Co Union, N.J.
04009	Arrow, Hart and Hegeman Elect. Co	08664	Bristol Co., The		16585	Boots Aircraft Nut Corp Pasadena, Cal.
04013	Taruus Corp Lambertville, N.J.	08717	Sloan Company	Sun Valley, Cal.	16688	Ideal Prec. Meter Co., Inc., De Jur Meter Div Brooklyn, N. Y.
04062 04217	Arco Electronic Inc Great Neck, N.Y. Essex Wire Los Angeles, Cal.	08718	ITT Cannon Electric Inc., Phoenix Div	Phoenix, Arizona	16758	Delco Radio Div. of G. M. Corp Kokomo, Ind.
04222	Hi-Q Division of Aerovox. Myrtle Beach, S.C.	08727	National Radio Lab. Inc	Paramus, N.J.	17109	Thermonetics Inc. Canoga Park, Cal. Tranex Company Mountain View, Cal.
04354	Precision Paper Tube Co Wheeling, Ill.	08792	CBS Electronics Semiconductor Operations, Div. of CBS Inc			Hamlin Metal Products Corp Akron, Ohio
04404	Palo Alto Division of Hewlett- Packard Co Palo Alto, Cal.	08806	General Electric Co.		17745	Angstrohm Prec. Inc No. Hollywood, Cal
04651	Sylvania Electric Products,		Miniature Lamp Dept			Siliconix Inc
04673	Microwave Device Div Mountain View, Cal. Dakota Engr. Inc Culver City, Cal.	08984 09026	Mel-Rain		18042	Power Design Pacific Inc Palo Alto, Cal.
04713	Motorola Inc. Semiconductor	09097	Electronic Enclosures Inc Los	Angeles, Calif.		Clevite Corp. Semiconductor Div. Palo Alto Cal.
	Prod. Div Phoenix, Arizona	09134	Texas Capacitor Co	. Houston, Texas		Signetics Corp Sunnyvale, Cal. Ty-Car Mig. Co Inc
04732	Filtron Co., Inc. Western Div Culver City, Cal.	09145	Elect	. Burbank, Cal.	18486	TRW Elect Comp. Div Des Plaines . Ill.
04773	Automatic Electric Co Northlake, Ill.	09250	Electro Assemblies, Inc			Curtis Instrument Inc
04796 04811	Sequoia Wire Co Redwood City, Cal. Precision Coil Spring Co El Monte, Cal.	09353 09569	C & K Components Inc Mallory Battery Co. of		18612	Vishay Instruments Inc Malvern, Pa.
04870	P. M. Motor Company Westchester, Ill		Canada, Ltd Toronto,	Onder to, Canada		E. I. DuPont and Co., Inc Wilmington, Del.
04919	Component Mfg. Service	09795	Pennsylvania Florocarbon Clifto			Durant Mig. Co Milwaukee Wis
05006	Co W. Bridgewater, Mass. Twentieth Century Plastics,	09922 10214	Burndy Corp	. HOI WAIN, COME.		Central Div Teterboro, N.J.
	Inc Los Angeles, Cal.		Corp L	os Angeles, Cal.	19500	Thomas A. Edison Industries, Div. of McGraw-Edison West Orange, N.J.
05277	Westinghouse Electric Corp. Semiconductor Dept Youngwood, Pa.	10411 10646	Ti-Tal, Inc		19589	Concoa Baldwin Park, Cal.
	constandator pept Toongwood, Fa.					

CODE LIST OF MANUFACTURERS (Continued)

Code	Address	Code	Addres	s Code	Address
No.	Manufacturer	No.	Manutacturer	No.	Manufacturer
19644	LRC Electronics		C. P. Clare & Co	78452 78471	Thompson-Bremer & Co Chicago, III Tilley Mig. Co San Francisco, Cal
19701 20183	Electra Míg. Co Independence, Kansas General Atronics Corp Philadelphia, Pa.		Globe Union Inc Milwaukee, Wis	78488	Stackpole Carbon Co St. Marys, Pa
21226	Executone, Inc Long Island City, N.Y.		Commercial Plastics Co Chicago, Ill Cornish Wire Co., The New York, N.Y	78493 78553	
21355 21520	Fafnir Bearing Co., The New Britian, Conn. Fansteel Metallurgical Corp N. Chicago, Ill.		Coto Coil Co., Inc Providence, R. I	78790	
23020	General Reed Co Metuchen, N. J.	71744	Chicago Miniature Lamp Works Chicago , Ill	78947	Ucinite Co Newtonville, Mass.
23042	Texscan Corp Indianapolis, Ind.	71785	Cinch Mfg. Co., Howard B. Jones Div		Waldes Kohinoor Inc Long Island City, N. Y. Veeder Root, Inc
23783 24455	British Radio Electronics LtdWashington, D.C. G.E. Lamp Division, Nela Park, Cleveland, Ohio	71984	Dow Corning Corp Midland, Mich		Wenco Mfg. Co
24655	General Radio Co West Concord, Mass.	72136	Electro Motive Mfg. Co., Inc.	79727	Continental-Wirt Electronics Corp. Philadelphia, Pa.
24681 26365	Memcor Inc., Comp. Div	72619	Dialight Corp. Willimantic, Conn. Brooklyn, N.Y.	79963	Zierick Mig. Corp. New Rochelle, N. Y.
26462	Grobert File Co. of America, Inc. Carlstadt, N.J.		Indiana General Corp	80031	Mepco Division of Sessions Clock Co.
26851	Compac Hollister Co Hollister, Cal.	72699	Electronics Div Keasby, N. J. General Instrument Corp		Prestole Corp. Morristown, N.J. Prestole Corp. Toledo, Ohio
26992 28480	Hamilton Watch Co Lancaster, Pa. Hewlett-Packard Co Palo Alto, Cal.		Cap Division Newark, N.J.	80120	Schnitzer Alloy Products Co Elizabeth, N.J.
28520	Heyman Mig. Co Kenilworth, N. J.		Drake Mfg. Co Harwood Heights, Ill Hugh H. Eby Inc Philadelphia, Pa		Electronic Industries Association. Standard tube or semi-conductor device,
30817	Instrument Specialties Co., Inc Little Falls, N.J.	72928	Gudeman Co		any manufacturer.
33173	G. E. Receiving Tube Dept Owensboro, Ky.	72962	Elastic Stop Nut Corp Union, N.J.		Unimax Switch, Div. Maxon Electronics
35434 36196	Lectrohm Inc Chicago, Ill. Stanwyck Coil Products.	72964 72982	Robert M. Hadley Co Los Angeles, Cal Erie Technological Products, Inc Erie, Pa	80223	Corp
30130	Ltd Hawkesbury, Ontario, Canada	73061	Hansen Mfg. Co., Inc Princeton, Ind		Oxford Electric Corp Chicago, Ill.
36287	Cunningham, W.H. & Hill, Ltd Toronto, Ontario, Canada		H. M. Harper Co		Bourns Inc Riverside, Cal. Arco Div. of Robertshaw Controls Co.
37942	P. R. Mallory & Co., Inc. Indianapolis, Ind.		Fullerton, Cal		Columbus, Ohio
39543	Mechanical Industries Prod. Co. Akron, Ohio	73293	Hughes Products Division of Hughes Aircraft Co Newport Beach, Cal		All Star Products Inc Defiance, Ohio Avery Label Co Monrovia, Cal.
40920 40931	Miniature Precision Bearings, Inc. Keene, N.H. Honeywell Inc Minneapolis, Minn.		Amperex Elect. Co Hicksville, L.I., N.Y		Hammarlund Co., Inc Mars Hill, N.C.
42190	Muter Co Chicago, Ill.	73506	Bradley Semiconductor Corp.	80640 80813	
43990 44655	C. A. Norgren Co Englewood, Colo. Ohmite Mfg. Co Skokie, Ill.	73559	Carling Electric, Inc	81030	International Inst. Inc Orange, Conn.
46384	Penn Eng. & Mig. Corp Doylestown, Pa.	73586	Circle F Mig. Co	81073	
47904	Polaroid Corp Cambridge Mass. Precision Thermometer &	73682	George K. Garrett Co Div. MSL Industries, Inc Philadelphia . Pa		Triad Transformer Corp Venice, Cal. Winchester Elec. Div. Litton Ind., Inc.
48620	Inst. Co Southampton, Pa.		Federal Screw Products, Inc Chicago, Ill		Oakville, Conn.
49956	Microwave & Power Tube Div Waltham, Mass.		Fischer Special Mfg. Co Cincinnati. Ohi General Industries Co The Elyria, Ohi		Military Specification
52090 52983	Rowan Controller Co	73846	Goshen Stamping & Tool Co Goshen, Ind	81541	Airpax Electronics, Inc Cambridge, Maryland
54294	Shallcross Mfg. Co Selma, N. C.		JFD Electronics Corp Brooklyn, N. Y Jennings Radio Mfg. Corp San Jose, Cal		Barry Controls, Div. Barry Wright Corp. Watertown, Mass.
55026 55933	Simpson Electric Co Chicago, Ill. Sonotone Corp Elmsford, N. Y.	73957	Groove-Pin Corp Ridgefield, N. J	82042	Carter Precision Electric Co Skokie, Ill.
55938	Raytheon Co. Commercial Apparatus	74276	Signalite Inc Neptune, N.J. J. H. Winns, and Sons Winchester, Mass		Sperti Faraday Inc., Copper Hewitt Electric Div Hoboken, N.J.
56137	& System Div So. Norwalk, Conn. Spaulding Fibre Co., Inc Tonawanda, N. Y.	74861	Industrial Condenser Corp Chicago, Ill	82116	Electric Regulator Corp Norwalk, Conn.
56289	Sprague Electric Co North Adams, Mass.	74868	R. F. Products Division of Amphenol-Borg Electronic Corp.	82142	Jeffers Electronics Division of Speer Carbon Co Du Bois, Pa.
58474 59446	Superior Elect. Co. Bristol, Conn. Telex Corp. Tulsa, Okla.		Danbury, Conn		Fairchild Camera & Inst. Corp.,
59730	Thomas & Betts Co Elizabeth, N. J.		E. F. Johnson Co		Space & Defense Systems Div., Paramus, N.J. Magurie Industries, Inc., Greenwich, Conn.
60741 61775	Triplett Electrical Inst. Co Bluffton, Ohio Union Switch and Signal Div. of	75263	Keystone Carbon Co., Inc., St. Marys, Pa	82219	Sylvania Electric Prod., Inc.
	Westinghouse Air Brake Co Pittsburgh, Pa.		CTS Knights, Inc Sandwich, Ill Kulka Electric Corp Mt. Vernon, N.Y		Electronic Tube Division Emporium, Pa. Astron Corp East Newark, Harrison, N. J.
62119 63743	Universal Electric Co Owosso, Mich. Ward-Leonard Electric Co Mt. Vernon, N. Y.	75818	Lenz Electric Míg. Co	82389	Switchcraft, Inc Chicago, Ill.
64959	Western Electric Co., Inc New York, N. Y.		Littlefuse, Inc Des Plaines, Ill		Metals & Controls Inc., Spencer Products Attleboro, Mass.
65092 66295	Weston Inst. Inc. Weston-Newark. Newark, N.J. Wittek Mfg. Co		Lord Mfg. Co Erie, Pa C.W. Marwedel San Francisco, Cal		
66346	Minnesota Mining & Mfg. Co.		General Instrument Corp.,	82866	
20026	Revere Mincom Div St. Paul, Minn.	76487	Micamold Division Newark, N.J. James Millen Mfg. Co., Inc Malden, Mass		Rolton'Mig. Co., Inc Woodstock, N. Y. Vector Electronic Co Glendale, Cal.
70276 70309	Allien Mfg. Co	76493	J. W. Miller Co Los Angeles, Cal	83058	Carr Fastener Co Cambridge, Mass.
70318	Allmetal Screw Product Co., Inc	76530	Cinch-Monadnock, Div. of United Carr Fastener Corp San Leandro, Cal		New Hampshire Ball Bearing, Inc
70417	Amplex, Div. of Chrysler Corp. Detroit, Mich.		Mueller Electric Co Cleveland, Ohi	83125	General Instrument Corp
70485	Atlantic India Rubber Works, Inc Chicago, Ill.	76703 76854	National Union Newark, N.J Oak Manufacturing Co Crystal Lake, Ill	83148	Capacitor Div Darlington, S. C. ITT Wire and Cable Div Los Angeles, Cal.
70563 70674	Amperite Co., Inc		The Bendix Corp	83186	Victory Eng. Corp Springfield, N.J.
70903	Belden Mig. Co Chicago, Ill.	77075	Electrodynamics Div. N. Hollywood, Cal Pacific Metals Co. San Francisco, Cal	83298 83315	
70998 71002	Bird Electric Corp. Cleveland, Ohio Birnbach Radio Co. New York, N. Y.		Phaostran Instrument and	83324	Rosan Inc Newport Beach, Cal.
71034	Bliley Electric Co., Inc Erie, Pa.	****	Electronic Co So. Pasadena, Cal		
71041	Boston Gear Works Div. of Murray Co. of Texas Quincey, Mass.	77252	Philadelphia Steel and Wire Corp	83332 83385	Central Screw Co Chicago, III.
71218	Bud Radio, Inc Willoughby, Ohio	77342	American Machine & Foundry Co.	83501	Gavitt Wire and Cable Co., Div. of Amerace Corp Brookfield, Mass.
71279	Cambridge Thermionics Corp. Cambridge, Mass. Camloc Fastener Corp. Paramus, N.J.	77630	Potter & Brumfield Div Princeton, Ind TRW Electronic Components Div. Camden, N.J.	83594	Burroughs Corp., Electronic
71286 71313	Cardwell Condenser Corp.		General Instrument Corp.,		Tube Div Plainfield, N.J.
	Lindenhurst, L.I., N.Y.	77764	Rectifier Division Brooklyn, N. Y Resistance Products Co Harrisburg, Pa		Union Carbide Corp., Consumer Prod. Div New York, N.Y.
71400	Bussmann Mfg. Div. of McGraw-Edison Co St. Louis, Mo.	77969	Rubbercraft Corp. of Calif Torrance, Cal	83777	Model Eng. and Mfg., Inc Huntington, Ind.
71436	Chicago Condenser Corp Chicago, Ill.	78189	Shakeproof Division of Illinois Tool Works	83821 83942	Aeronautical Inst. & Radio Co Lodi, N. J.
71447 71450	Calif. Spring Co., Inc Pico-Rivera, Cal. CTS Corp Elkhart, Ind.		Sigma So. Braintree, Mass	84171	Arco Electronics Inc Great Neck, N. Y.
71468	ITT Cannon Electric Inc Los Angeles, Cal.		Signal Indicator Corp New York, N.Y Struthers-Dunn Inc Pitman, N.J		A.J. Glesener Co., Inc., San Francisco, Cal. TRW Capacitor Div., Ogallala, Neb.
71471	Cinema, Div. Aerovox Corp Burbank, Cal.	10230	The second secon		•

CODE LIST OF MANUFACTURERS (Continued)

Code No.	Manufacturer	Address	Code No	Manufacturer	Address	Code No	Manufacturer Addres
94870	Sarkes Tarzian, Inc Blooming	ton, Ind.	1929	Honeywell Inc., Micro Switch Division		96095	Hi-Q Div. of Aerovox Corp Olean, N. Y
85454	Boonton Molding Company Boonto			Free	port, Ill.	96256	Thordurson-Meissner Inc Mt. Carmel, Ill
85471	A. B. Boyd Co San Francis	co, Cal.	1961	Nahm-Bros. Spring Co Oakla		96296	Solar Mig. Co Los Angeles . Cal
85474	R. M. Bracamonte & Co San Francis	co, Cal.	2180		y, Mass.	96396	Microswitch, Div. of
85660	Koiled Kords, Inc Hamder	n, Conn. 9	2367	Elgeet Optical Co., Inc Rocheste	er, N.Y.		MinnHoneywell Freeport, Ill
85911	Seamless Rubber Co	ago, Ill. 9	2607				Carlton Screw Co Chicago, Ill
86174	Fainir Bearing Co Los Angeles			Tarrytov	vn, N.Y.	96341	Microwave Associates, Inc., Burlington, Mass
86197	Clifton Precision Products Co., Inc.				I., N.Y.	96501	Excel Transformer Co Oakland, Cal Xcelite, Inc Orchard Park, N. Y
			2966	Hudson Lamp Co Kearn	ey, N.J.	96733	San Fernando Elec. Míg. Co. San Fernando, Cal.
86579			3332	Sylvania Electric Prod. Inc., Semiconductor Div	- Mass	96881	Thomson Ind. Inc Long Island, N. Y.
86684	Radio Corp. of America, Electronic Com	p.	12260	Robbins & Myers Inc Pailisades Pa	n, MASS.		Industrial Retaining Ring Co Irvington, N. J.
86928	& Devices Division Harrise Seastrom Mfg. Co Glenda			Stemco Controls, Div. of Essex	IR, N.J.		Automatic & Precision Mig Englewood, N.J.
87034	Marco Industries Anahei	m Cal	73410	Wire Corp Mansfie	eld Ohio		Reon Resistor Corp Yonkers. N. Y.
87216	Philco Corporation (Lansdale Division)	im, car.	3632	Waters Mig. Co Culver C			Litton System Inc., Adler-Westrex
01210	Lansd			G.V. Controls Livingst			Commun. Div New Rochelle, N. Y.
87473	Western Fibrous Glass Products Co.				ne, N.J.	98141	R-Tronics, Inc Jamaica, N. Y.
0.1.0	San Francis			Raytheon Co., Comp. Div.,	·	98159	Rubber Teck, Inc
87664	Van Waters & Rogers Inc San Francis			Ind. Comp. Operations Quinc	y, Mass.	98220	Hewlett-Packard Co.,
87930	Tower Mig. Corp Providen	ce, R.I.	4148	Scientific Electronics			Medical Elec. Div Pasadena, Cal
88140	Cutler-Hammer, Inc Linc			Products, Inc Lovelar	nd, Colo.		Microdot, Inc So. Pasadena, Cal.
88220	Gould-National Batteries, Inc St. Pau	l, Minn. 9	4154	Wagner Elect. Corp.,			Sealectro Corp Mamaronech, N. Y.
88698	General Mills, Inc Buffal			Tung-Sol Div Newa	rk, N.J.	98376	Zero Mfg. Co Burbank. Cal.
89231	Graybar Electric Co Oakla	nd, Cal. 9	4197	Curtiss-Wright Corp. ,			Etc Inc Cleveland, Ohio
89473	G. E. Distributing Corp Schenectad	ly, N. Y.		Electronics Div East Patters		98731	General Mills Inc., Electronics Div.
89479	Security Co Detroi			South Chester Corp Ches		09734	Paeco Division of Hewlett-Packard Co.
89665	United Transformer Co Chic			Wire Cloth Products, Inc Bellw		30134	Pale Bivision of Hewitti-Tackard Co.
90030	United Shoe Machinery Corp Beverly			Automatic Metal Products Co Brookly Worcester Pressed Aluminum Corp.	yıı, N. 1.	98821	North Hills Electronics, Inc . Glen Cove. N.Y.
90179	U.S. Rubber Co., Consumer Ind. & Plastics Prod. Div Passa.		4002	Worcester Pressed Aluminum Corp.	r Mass		International Electronic Research Corp.
90365	Belleville Speciality Tool Mfg., Inc.	ic, N.J.	4696	Magnecraft Electric Co Chic			Burbank, Cal.
90303	Belleville Speciality 1001 Mag., Inc.			George A. Philbrick Researchers, Inc.	- Bo	99109	Columbia Technical Corp New York, N. Y.
90763	United Carr Fastener Corp Chic		0020	Boston	n. Mass.		Varian Associates Palo Alto, Cal.
90970	Bearing Engineering Co San Francis	co. Cal. 9	5146	Alco Elect. Mfg. Co Lawrence			Atlee Corp Winchester, Mass.
91146	ITT Cannon Elect. Inc., Salem Div.	9	5236	Allies Products Corp Diai	nia, Fla.		Marshall Ind., Capacitor Div., Monrovia, Cal.
	Salem	, Mass. 9	5238	Continental Connector Corp Woodsid	de, N.Y.	99707	Control Switch Division, Controls Co.
91260	Connor Spring Mig. Co San Francis	co, Cal. 9	5263	Leecraft Mig. Co., Inc Long Islan	nd, N.Y.		of America El Segundo, Cal.
91345	Miller Dial & Nameplate Co El Mon			National Coil Co Sherida		99800	Delevan Electronics Corp East Aurora, N. Y.
91418	Radio Materials Co Chica			Vitramon. Inc Bridgepor		99848	Wilco Corporation Indianapolis, Ind.
91506	Augat Inc Attleboro	, Mass. 9	5348	Gordos Corp Bloomfie	ild, N.J.		Branson Corp. Whippany, N. J.
91637	Dale Electronics, Inc Columbus	Nebr. 9	5354	Methode Mig. Co Rolling Mead	ows, III.		Rembrandt, Inc Boston, Mass. Hoffman Electronics Corp
91662	Elco Corp Willow Gro		5566	Arnold Engineering Co Mare	engo, III.	93942	Semiconductor Division El Monte, Cal.
91673	Epiphone Inc New Yor	K, N. Y. 9	5712	Dage Electric Co., Inc. Frank	um, Ind.	99957	Technology-Instrument Corp.
91737	Gremar Mig. Co., Inc Wakefield	, Mass. 9		Siemon Mfg. Co		53351	of California Newbury Park, Cal.
91827	K F Development Co Redwood Ci Malco Mfg., Inc Chica	iy, Cali. 9		Microwave Assoc. West Inc. Sunnyva			51 Same
91886	mateo mig., inc Cnica	150, III. 9	0007	MILLIOWAYE ASSOC., WERE, DR SUMBYVA	, Сал.		

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000Z 000AB	Willow Leather Products Corp. Newark, N.J. ETA England	000MM	Springs Div Colorado Springs, Colorado	000QQ Cooltron Oakland Cal 000WW California Eastern Lab Burlington Cal 000YY S.K. Smith Co Los Angeles Cal
----------------	---	-------	--	--



Model 3575A

GAIN-PHASE METER

This manual backdating sheet makes this manual applicable to earlier instruments. Instrument-component values that differ from those in the manual, yet are not listed in the backdating sheet, should be replaced using the part number given in the manual.

Instrument Serial No.	Make Manual Changes
1131 A-00165 and below	1-7
1131A-00230 and below	2-7
1234 A-00280 and below	3-7
1450A-01060 and below	4-7
1450A-01125 and below	5-7

Instrument Serial No.	Make Manual Changes
1450A-01061 to 1450A-01505	6.7
1450A-01061 to 1450A01645	7

CHANGE NO. 1

Page 6-2:

Delete A1C9** (Not assigned).

Change A1L1 to 9140-0129 L: fxd 220 μ H.

Change A1R11** to 0757-0414 R: fxd flm 432 ohm 1 % 1/8 W.

Change A1R21** to 0698-4433 R: fxd flm 2260 ohm 1 % 1/8 W.

Page 6-3:

Change A1R22 to 0757-0401 R: fxd flm 100 ohm 1% 1/8 W.

Delete A1 R23** (Not assigned).

Change A1R39** to 0757-0280 R: fxd flm 1 kilohm 1 % 1/8 W.

Delete A3C1 (Not assigned).

Delete A3C10 (Not assigned).

Page 6-4:

Change A3R13 to 0757-0346 R: fxd flm 10 ohm 1 % 1/8 W.

Delete A3R23 (Not assigned).

Change A3R42 to 0698-4452 R: fxd flm 374 ohm 1% 1/8 W.

Schematic No. 1:

Change A1R11** to 432 ohms.

Change A1R21** to 2260 ohms.

Change A1R22 to 100 ohms.

Change A1R39** to 1 K.

Delete A1C9 and A1R23**.

R39 connects to circuit ground.

Delete A3C1.

Delete A3C10 and A3R23.

R38 and R39 connect to + 2 Vdc.

Change A3R13 to 10 ohms.

Change A3R42 to 200 ohms.

** NOTE

In some instruments, the following changes were made to improve performance. Check the A1 board in your instrument to determine if these changes apply.

A1R11 = 221 ohms (0757-0282)

AIR21 = 1150 ohms (0698-4469)

AIR39 = 249 ohms (0698-4421)

A1C9 (previously not assigned) connected in parallel with A1R23 (previously not assigned) as shown on Schematic No. 1.

A1C9 = 62 pF (0140-0205)A1R23 = 750 ohms (0757-0420)

CHANGE NO. 2

Page 5-12:

Delete Steps e and f of Paragraph 5-42.

Page 6-2:

Change A1C2 to 0121-0036, C: var cer 5.5-18 pF. Change A1C27 to 0160-2387, C: fxd mica 1000 pF 1% 500 Vdcw.

Delete A1C28.

Change A1J2 Part No. to 1251-3134.

Delete A1L2 thru A1L5.

Add A1MP2, 1600-0248, Support: right angle connector.

Page 6-4:

Change A1R37 to 0757-0410, R: fxd flm 301 ohm 1% 1/8W.

Delete A1R40 thru A1R43.

Change A3L1* to 9100-2232, Inductor: fxd 0.56 μ H 10%.

Change A3R32 to 2100-2521, R: var flm 2000 ohm 10% lin 1/2W.

Change A3R36 to 0698-4408, R: fxd flm 124 ohm 1% 1/8W.

Change A3R37 to 0698-0082, R: fxd flm 464 ohm 1% 1/8W.

Change A3R42 to 0757-0407, R: fxd flm 200 ohm 1% 1/8W.

Change A3R50 to 2100-2516, R: var cermet

100 kilohm 10% lin 1/2W.

Page 6-18:

Change Cables W3 and W4 Part No. to 03575-61602.

Schematic No. 1:

Add A1/A2 and A3/A4 Component Locators.

Delete A1/A2 L2 thru L5.

Delete A1/A2 C28.

Change A1/A2 C2 to 5.5-18 pF.

Change A1/A2 C27 to 1000 pF.

Change A1/A2 R37 to 301 ohms.

Delete A1/A2 R43 (ground C3).

Delete A1/A2 R40, R41 and R42 (ground R10).

Change voltage at junction of A1/A2 R19 and R20 to $0 \text{ V} \pm 10 \text{ mV}$.

Delete A3/A4 R71 and TP1.

Change A3/A4 R32 to 2 K.

Change A3/A4 R36 to 124 ohms.

Change A3/A4 R37 to 464 ohms.

Change A3/A4 to 200 ohms.


Change voltage at A3/A4 IC6 pins 2 and 3 to + 4.7 V.

Change voltage at A3/A4 IC5 pins 12 and 4 to + 0.55 V.


Change voltage at jumction of A3/A4 R36 and R37 to - 2.4 V.

Change voltage at junction of A3/A4 R40 and R41 to -1 V.

Change voltage at A3/A4 IC4 pin 12 to - 2.4 V.

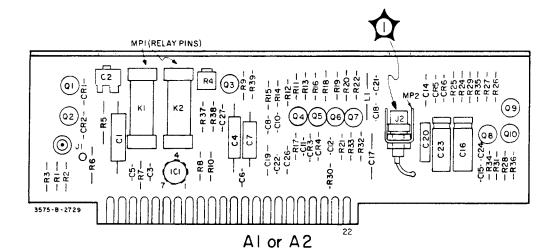

hp Part No.03575-66501 Rev C

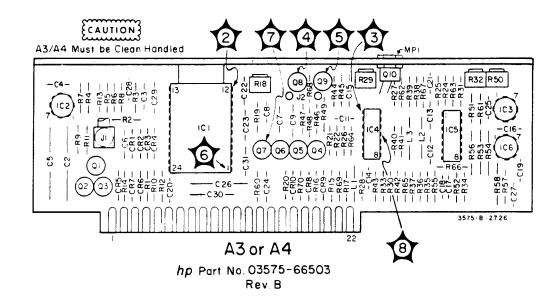

CHANGE NO. 3

NOTE

The 3575A Option 003 applies only to instruments with serial number 1241A-00281 and greater. If the serial number of your instrument is 1234A-00280 or below, disregard all references to Option 003 instruments.

Section IV Changes:

Pages 4-11 through 4-18:

Delete Paragraphs 4-65 through 4-105 and all tables and figures contained therein.

Substitute Appendix C Paragraphs 4-65 through 4-91 and all tables and figures contained therein.

Section V Changes:

Pages 5-9, 5-10:

Delete Paragraphs 5-29 through 5-32.

Substitute Appendix C Paragraphs 5-29 through 5-32. Page 5-17:

Change Step 1 of Figure 5-5 to read as follows:

- 1. To remove a Panel Meter from its dust cover, proceed as follows:
 - 1) Unplug the Panel Meter as outlined in Step j.
 - 2) Remove the set screws (MP42, Figure 6-2) that hold the Panel Meter in its dust cover.
 - 3) Slide the Panel Meter out of the dust cover.
 - 4) To troubleshoot the Panel Meter, place A12 on a 22-pin PC Extender and plug the Panel Meter into A12.

Page 5-19:

Delete Table 5-6.

Substitute Appendix C Table 5-6.

Page 5-21/5-22

Delete Figure 5-7.

Substitute Appendix C Figure 5-7.

Page 5-25/5-26

Delete the Digital Panel Meter Troubleshooting Tree,

Figure 5-9.

Substitute the Appendix C Digital Panel Meter Troubleshooting Tree, Figure 5-9.

Section VI Changes:

Delete Pages 6-11 through 6-19.

Substitute Appendix C Pages 6-11 through 6-18.

Section VII Changes:

Page 7-1:

Delete Table 7-1.

Substitute Appendix C Table 7-1.

Delete Schematic No. 7, 9 and 10.

Substitute Appendix C Schematic No. 7, 9 and 10.

Miscellaneous Changes:

Page 6-5, Schematic No. 2:

Change A5C1 to 0150-0012, C: FXD CER 0.01 μ F 20%.

Page 6-6, Schematic No. 3:

Change A6C1 to 0150-0012, C: FXD CER 0.01 μ F 20%.

Delete A6R1.

Schematic No. 8:

Delete A14CR19 through CR22.

Change A14R20 to 0.24 ohm.

- **3-75.** Local/Remote Control. Remote control operation is selected by applying a continuous ground (or -0.5 V to +0.4 V) to the Local/Remote control line (J1 pin 50). When ground is applied to the Local/Remote line, the following things take place within the 3575A:
- a. The front panel controls (except LINE switch) are disabled.
 - b. The remote control lines are enabled.
- c. The internal sampling in both panel meters is disabled (external triggering must be used).
- d. The external trigger and flag timing circuits are enabled.
- e. The "Remote" (RFM) annunciators on the panel meters illuminate.
- 3.76. Remote Control Lines. In the remote control mode, the 3575A Option 002 will accept parallel binary instructions applied to the remote control lines. Since internal storage is not provided, the control lines must be held at ground (or -0.5 V to +0.4 V) by the external controller whenever a "true" condition is required. When remote operation is selected without inputs to the remote control lines, the lines are held in a "false" condition by the internal logic circuitry. With all control lines false, the control settings are programmed as follows:

- **3.77.** BCD Outputs. The 3575A Option 002 is equipped with separate BCD outputs for the two panel meters. These outputs provide parallel BCD information that corresponds with the respective panel meter readings. The BCD outputs each consist of three 8-4-2-1 BCD-coded digits, a single-line overrange ("1") digit and a single-line polarity indicator. Unlike the remote control lines, the BCD outputs are always enabled and can be used in the local or remote control mode.
- 3-78. Overload Outputs. There are three overload indicator lines available at pins 32, 44 and 45 of the Interface connector. The A_{Ol} line (J1 pin 44) goes low when channel A is overloaded and the B_{Ol} (J1 pin 32) goes low when channel B is overloaded. The third line, labeled "overload" (J1 pin 45), goes low when either or both channels are overloaded. Since the overload outputs are not stored functions, they will automatically return to the "false" condition (+ 5 V) when the overload is removed.

3-79. External Triggering and Flag Timing Sequence. As previously indicated the internal sampling in both panel meters is disabled when ground is applied to the Local/Remote control line. This means that external triggering must be used to obtain successive meter readings or BCD outputs in the remote control mode.

3-80. In the 3575A Option 002, the external triggering circuit operates in conjunction with the flag timing circuit to allow adequate settling time, trigger the panel meters and provide a "data ready" flag to the external controller. The timing sequence is initiated by an external trigger pulse which is applied to the Remote Measure line (J1 pin 21). The duration of the timing sequence depends on the condition of the Trigger Mode line (J1 pin 33) which permits selection of two modes of operation: the Delayed Mode and Non-Delayed Mode.

NOTE

The Remote Measure command must be delayed for at least 0.5 ms following any change that affects the programmed state of the instrument.

- 3-81. Delayed Mode. When the Trigger Mode line is held in a "false" condition (open or + 2.4 V to + 5 V), the timing sequence is as shown in Figure 3-10. In Figure 3-10, the Remote Measure line is pulled low at T0 by the external controller. This initiates a variable delay period (determined by the Frequency Range setting) and sets the + and Data Flags. At the end of the variable delay (T1), an 80 ms delay is initiated and, at the same time, an 80 ms trigger pulse is applied to the panel meters. At the end of the 80 ms delay (T2) both Data Flags are reset to indicate that data is ready.
- 3-82. The total time required to obtain a reading (T0 to T2) is equal to 80 ms plus the variable delay period determined by the Frequency Range setting. The approximate *total* delay times on each frequency range are as follows:

Frequency	Total		
Range	Delay		
1 - 1 K	33 sec.		
10 - 100 K	3.3 sec.		
100 - 1 M	0.5 sec.		
1 K - 13 M	0.1 sec.		

3-83. The purpose of the variable delay in the timing sequence is to allow time for the instrument to stabilize before a reading is taken. Since the times allotted by the variable delay are maximum, the instrument will often stabilize before the end of the delay period. This depends on the change in input parameters or control settings prior to the Remote/Measure pulse. In some applications such as swept measurements where readings are taken after slight changes in input parameters, it may be desirable to speed up the measurement process by omitting the variable time delay. This can be accomplished by holding the Trigger

Section III Model 3575A

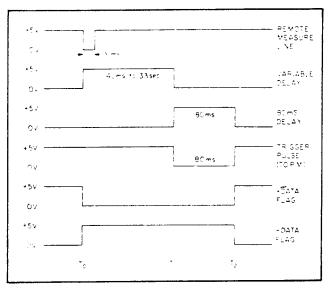


Figure 3-10. Flag Timing Delayed Mode.

Mode line in a "true" condition (gnd. or -0.5 V to +0.4 V). When the Trigger Mode line is grounded, the timing sequence is in the Non-Delayed Mode which operates as shown in Figure 3-11.

3-84. Non-Delayed Mode. In Figure 3-11, the Remote Measure line is pulled low at T0 by the external controller. This immediately initiates the 80 ms delay, triggers the panel meters and sets the + and - Data Flags. At the end of the 80 ms delay (T1), the Data Flags are reset to indicate that a reading has been taken.

3.85. Remote Measure Rate. As indicated in preceeding paragraphs, the time required to obtain a reading depends on the selected mode of operation. In the Delayed Mode, the time varies from 0.1 second to 33 seconds as a function of the Frequency Range setting. In the Non-Delayed Mode, the time is fixed at approximately 80 ms. In order to obtain successive readings at a fixed rate, the time between Remote Measure pulses must be greater than the total delay period. For example, in the Non-Delayed Mode the 80 ms delay period allows a maximum of 12 readings per second. In the

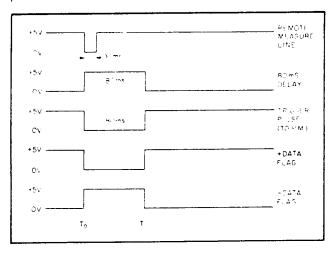


Figure 3-11. Flag Timing Non-Delayed Mode.

Delayed Mode, 0.1 sec. allows 10 readings per second, 0.5 sec allows 2 readings per second, 3.3 sec. allows 18 readings per minute and 33 seconds allows 1.8 reading per minute. In all cases, the Remote Measure pulse width must be greater than 1 ms and less than the total delay period.

3-86. Optional Control Scheme. For some applications, it is convenient to control the instrument from the front panel and, at the same time, use external triggering and the flag timing functions. To allow this, a jumper is provided on the Interface Assembly (A16B, Schematic No. 9). With the jumper connected between points 1 and 2 (normal), grounding the Local/Remote control line disables the front panel controls, enables the remote control lines and enables the external trigger and flag timing circuits. With the jumper connected between points 1 and 3, the front panel controls are enabled and the remote control lines are disabled regardless of the condition of the Local/Remote control line. The external triggering and flag timing functions can then be used along with the front panel controls by grounding the Local/Remote control line.

3-87. USING A PRINTER.

3-88. The 3575A Option 002 output lines are compatible with -hp- Digital Recorder Models 5050B and 5055A. These printers can be connected directly to the 3575A Interface connector using the -hp-562A-16C printer cable. Complete interfacing data is presented in Section II, Paragraph 2-29.

3-89. Triggering.

3-90. When using a printer, it is necessary to supply a ground-true (>1 ms) Remote Measure command to the 3575A each time a printout is required (see Paragraphs 2-30 and 3-80). The Remote Measure command sets the Data Flags and initiates the timing cycle within the 3575A. The printer receives a "print" command when the Data Flags are reset at the end of the timing cycle. Unless special arrangements have been made to ground the Trigger Mode line, the 3575A will remain in the Delayed mode and the "print" command will be transmitted at the end of the delay period. The delay period varies from approximately 33 seconds to 0.1 second as a function of the Frequency Range setting. If the Trigger Mode line is grounded, the "print" command will be transmitted approximately 80 ms after the leading edge of the Remote Measure pulse.

3-91. Printout.

3-92. The -hp- Models 5050B and 5055A Digital Recorders provide a ten-column printout. The printer columns are numbered from right to left and the 3575A output data is printed as follows:

4-65. Annunciator Logic (A8IC4 through IC6). The fourth section of the Function Switching Assembly is the annunciator logic circuitry. A8IC4 through IC6. This circuit receives inputs from the A_F, B_F and C_F control lines and two additional inputs from the overload detectors on the Preamplifier Assemblies, A1 and A2. The purpose of the annunciator logic is to control the overload indicators and the various function indicators that appear on the Panel Meter display.

4-66. Output Filter (A9/A10 Schematic No. 6).

4-67. The Output Filter is a 4-pole low pass filter network controlled by the front panel FREQUENCY RANGE switch. The purpose of the filter is to integrate the amplitude or phase information before it is applied to the Panel Meter and ANALOG OUTPUT. The filter response is controlled by three lines, F, M and S which come from the Phase Control Filter, A7. The Output Filter network is identical to the Phase Control Filter network which is discussed in Paragraph 4-34.

4-68. It should be noted that the standard Model 3575A which has a single panel meter requires only one Output Filter. This filter is designated A9. Instruments that are equipped with dual panel meters (Options 001, 002) require a separate Output Filter for each panel meter and, therefore, contain both A9 and A10 which are identical. Since the dual panel meter options are field installable, the standard Model 3575A has a vacant board slot and connector to permit the addition of A10.

4-69. Digital Panel Meter.

4-70. Refer to the Panel Meter Block Diagram (Figure 4-12) and Schematic No. 7 for the following discussion.

- 4-71. The Digital Panel Meter is a self-contained dc digital voltmeter which measures voltages within the range of -1.999 Vdc to +1.999 Vdc. The Panel Meter reading in dBV, dB or degrees corresponds with the applied dc voltage. For example, an indication of -180.0 degrees = -1.800 Vdc, -20.0 dBV = -200 mVdc, etc.
- 4-72. The Panel Meter is divided into three sections: the Analog section (A21), the Control Logic section (A20B) and the Display section (A22). The Analog section serves as a voltage to period converter where the period of the output signal is proportional to the dc input voltage. The Control Logic section converts the signal from the Analog section to bit-parallel, word-serial BCD-coded information. This digital information, which is sychronized by scanning signals from the Display section, is applied to the Display section which provides a 4-digit reading of the data.
- 4-73. Analog Section. The Analog section uses a dual-slope integrator to perform the voltage to period conversion. When a measurement is initiated by the Switch Drive signal from the Control Logic section, the integrator charges toward the input voltage for 1/60 second as shown in Figure 4-13. The integrator is then discharged at a fixed rate toward a reference voltage. Since the discharge rate is constant, the discharge time is proportional to the dc input voltage.
- 4-74. The output of the Analog section is low during the time the integrator is charging and discharging. When the integrator discharges to zero volts, the output of the Analog section goes high. Because this output is zero sensitive, it is called "Zero Detect".
- 4-75. The Zero Detect output is unaffected by the polarity of the input voltage. Input polarity is sensed in the Analog

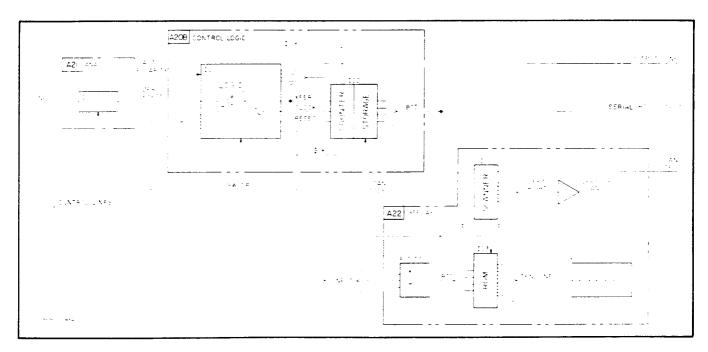


Figure 4-12. Panel Meter Block Diagram.

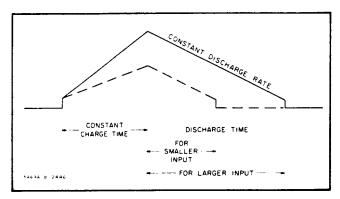


Figure 4-13. Dual-Slope Integration.

section and transferred (Auto Polarity line) by way of the Control Logic section to the output connector.

4-76. Control Logic. The Control Logic Assembly is divided into two sections: the Logic section (IC1) and the Counter Storage section (IC2). To begin a measurement, the sample rate circuit (in the Logic section) generates a Reset pulse which resets the Counter to zero. The trailing edge of the Reset pulse makes the Switch Drive signal go negative causing the integrator in the Analog section to begin charging. Following the Reset pulse, the Counter accumulates 1000 Clock pulses (1/60 second) and then causes another Reset pulse to be generated. This Reset pulse resets the Counter to zero and also turns off the Switch Drive signal causing the integrator to begin discharging. During the discharge time, the Clock continues to increment the Counter until the Analog section signals a Zero Detect. The Zero Detect signal triggers a "Transfer" pulse which transfers the accumulated count into Storage. This also places the polarity information in Storage. Due to the Clock frequency and the fixed discharge rate of the integrator, the number transferred to Storage is equal to the absolute value of the dc input voltage.

4-77. The Counter portion of the Counter Storage section is comprised of three decade counters that accumulate the number of Clock pulses between the trailing edge of one Reset pulse and the leading edge of the next. The "Transfer" pulse at the end of a measurement transfers the 1-2-4-8 BCD information contained in the Counter into the Storage buffers. The "b" and "c" scan signals from the Scanner (in the Display section) cause the BCD information to be transferred to the output lines in bit-parallel, word-serial form beginning with the least significant (right hand) digit.

4-78. Display Section. The Display section is divided into three parts: the Scanner (IC2), the Read Only Memory (ROM - IC3) and the display (DS1). In the Scanner, the "a", "b" and "c" scan signals are produced by three binary stages driven by a 10 kHz oscillator. The scanning signals are used to control six transistors (Q1 through Q6) through which positive voltage is sequentially applied to the three-digit display. The three digits are scanned, one-half digit at a time, beginning at the right. All three digits are scanned in approximately 0.65 milliseconds, and scanning is

continuous. The "a" scan signal is also applied to the Read Only Memory to ensure that the information is read at the proper time for the right and left half of each digit. The "b" and "c" scan signals are applied to the Storage section to synchronize the output data.

4-79. The Read Only Memory accepts BCD information from the Storage section and translates the information into a ten-line code. This ten-line coded output is synchronized by the right-left ("a") scan to provide a ground connection to the proper light emitting diodes in the Display element.

4-80. Interface Assembly (A16B Schematic No. 9).

4-81. The Interface Assembly (A16B) is installed in place of the Interface Substitution Assembly (A16A) in instruments that are equipped with the remote programming and dual panel meter option (Option 002). The purpose of the Interface Assembly is to provide the decoding, timing and switching logic required for the BCD outputs and remote controlled functions.

4-82. BCD Output Circuits. The BCD output circuitry shown on the left hand side of Schematic No. 9 (IC1 through IC12) receives bit-parallel, word-serial data from the two panel meters and converts this data into bit-parallel, word-parallel BCD outputs that are available at the rear panel Interface connector. The circuitry in the upper left portion of the schematic (IC1 through IC7) converts the data from the phase panel meter while the circuitry in the lower left portion of the schematic (IC8 through IC12) converts the data from the amplitude panel meter. Since the two BCD output sections are identical, the following discussion applies to both sections.

4-83. Figure 4-14 illustrates the scanned digital information as it appears at the output of the phase panel meter. In Figure 4-14, the output data corresponds with a phase reading of +134.8 degrees. The first digit, a one, is indicated by a grounded "1" line. The three remaining digits are scanned from right to left (8, 4, 3) and are synchronized by the two scanning signals, "b" scan and "c" scan. The scanning signals indicate which digit is being

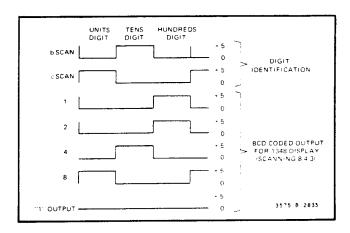


Figure 4-14. Scanned Panel Meter Output.

Model 3575A Section IV

transmitted at a given time. The polarity sign (+) is indicated by a grounded "±" line and the decimal point, which remains fixed, is not supplied.

4-84. The "1" line and the "±" line from the panel meter are applied to Al6B pins 7 and 8, buffered by ICID and IC1E and applied to pins 7 and 8 of the Interface connector. The four BCD coded outputs from the panel meter are applied to Al6B pins 3 through 6, inverted and applied directly to Al6B IC4, IC5 and IC7. Integrated circuits IC4, 5 and 7 are 4-bit bistable latches which are enabled individually as the corresponding ("units", "tens" or "hundreds") data character is transmitted. The "enable" commands are applied to pins 4 and 13 of the IC packages by means of IC2 and IC3 which are controlled by the scanning signals from the panel meter.

4-85. Referring to Figure 4-14, note that the "units" digit (8) is transmitted when "b" scan is low and "c" scan is high. This condition is detected by the logic circuits (IC2, IC3) which enable IC7 and disable IC4 and IC5. The BCD data being transmitted is then stored in IC7 and applied to pins 1, 2, 26 and 27 of the Interface connector. As the scanning sequence continues, the "tens" digit (4) is stored in IC5 and the "hundreds" digit (3) is stored in IC4. The resulting outputs at the Interface connector are three BCD coded digits, a single line overrange ("1") digit and a polarity sign.

4-86. Controller Section. The controller section of the Interface Assembly is located in the upper right portion of Schematic No. 9. This section is comprised of two 4-bit multiplexers (IC13 and IC14) and a Local/Remote control circuit (IC1C, IC17B). Each multiplexer has eight inputs and four outputs. Four of the inputs to each multiplexer come from the front panel controls and four come from the rear panel Interface connector, J1. The output lines go to the Function Switching Assembly (A8), the Phase Control Filter (A7), the Log Converter (A3/A4) and the Input Attenuators (A1/A2) to control the instrument functions. The multiplexers operate like 4-pole, doublethrow switches where the four output lines are connected to either the front panel controls (Local) or the remote control lines (Remote). Switching is accomplished by applying a logical "1" (+5 V) or "0" (0 V) to IC13, IC14 pin 9 which connects to the Local/Remote line through NAND gate IC17B. With no input to the Local/Remote line or when local control is programmed by an external controller, the line is held positive causing the output of IC17B to go low. This disables the remote inputs to IC13 and IC14 and enables the inputs from the front panel controls. When ground is applied to the Local/Remote line, the output of IC17B goes high and control is transferred to the remote control lines. The eight remote control lines use ground true logic and are normally held in a "0" (False) condition by the pull-up resistors within R5.

4-87. Note that the Local Remote line which connects to IC17B is also connected to a buffer stage, IC1C. When ground is applied to the Local Remote line (Remote Control), the output of IC1C goes low supplying a "hold"

to the panel meters. In the panel meters, the "hold" command disables the internal sampling and thereby inhibits measurements. In order to obtain meter readings or BCD outputs, it is then necessary to use external triggering. External triggering is accomplished by grounding the Remote/Measure line (J1 pin 21) which controls the timing circuits discussed in the following paragraphs. In some cases, it is desirable to use external triggering and, at the same time, control the instrument from the front panel. To accomplish this, a jumper is provided at the output of IC17B. When the jumper is connected between terminals 1 and 3 (gnd), the front panel controls remain operative and the remote lines that control front panel functions are disabled.

4-88. Timing Circuits. In the Remote Control mode, it is necessary to trigger the panel meters by applying a momentary ground to the Remote Measure line each time a meter reading or BCD output is required. Grounding the Remote Measure line sets the data flag and initiates a variable time delay which, in turn, triggers the panel meters and resets the data flag.

489. The external trigger and flag timing circuit is shown in the lower right hand portion of Schematic No. 9 and in the Timing Circuits Functional Block Diagram, Figure 4-15. Refer to Figure 4-15 for the following discussion.

4-90. The timing circuits are comprised of a Trigger Flip Flop, A Flag Flip Flop, a Variable Delay, an 80 ms Delay and associated logic circuitry. Before the timing circuits can operate, remote operation must be selected by grounding the Local/Remote line. This disables the internal sampling in the panel meters and enables the timing circuits. With the Local/Remote line grounded, it is further necessary to momentarily ground the Remote Measure line to initiate the timing sequence and trigger the panel meters. Grounding the Remote Measure line causes the output of IC16A to go high. This, in turn, initiates the Variable Time Delay and sets the Flag Flip Flop. Note that the two flip flops are set and reset by a low (0) rather than a high (1). This is the reason for the inverter between the output of IC16A and the "set" side of the Flag Flip Flop. When a "set" command is applied to the Flag Flip Flop, the + Data Flag line goes low and the - Data Flag line goes high. Since the + Flag line (\overline{Q}) is fed back to the input of IC16A, the output of IC16A remains high until the Flag Flip Flop is reset. The Variable Delay is initiated by a Logical 1 at the output of IC16A and controlled by the two frequency range lines, FR1 and FR2. Delay time is determined by the frequency range setting as indicated in Table 4-5. At the end of the delay period, the output of the Variable Delay circuit goes low applying a "set" command to the Trigger Flip Flop. When "set", the \overline{Q} side of the Trigger Flip Flop goes low to trigger the panel meters and the Q side goes high to initiate the 80 ms delay. When the 80 ms delay has elapsed, the output of the delay circuit goes low applying a "reset" command to both flip flops. This causes the Panel Meter Trigger line to go high, the + Flag line to go high and the - Flag line to go low. Resetting the flags indicates to an external controller that data is ready at the BCD outputs.

Section IV Model 3575A

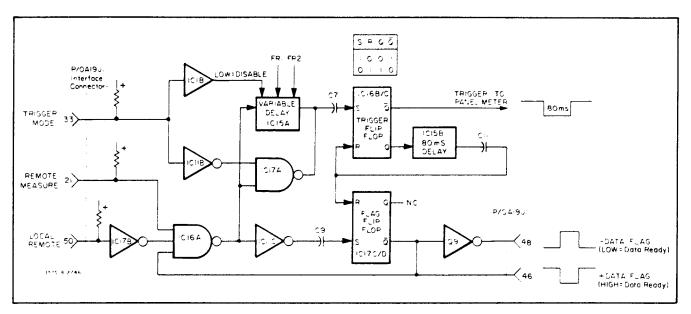


Figure 4-15. Timing Circuits Functional Block Diagram.

4-91. The purpose of the Variable Delay in the timing circuit is to ensure that the instrument has been given sufficient settling time before the data flags are returned.

Table 4-5. Variable Time Delays.

Frequency	Variable			
Range	Delay			
1 Hz - 1 kHz	33 sec.			
10 Hz - 100 kHz	3.3 sec.			
100 Hz - 1 MHz	0.42 sec.			
1 kHz - 13 MHz	0.02 sec.			

The 80 ms Delay determines the width of the trigger pulse applied to the panel meters. Since the actual settling time of the instrument is often less than the time provided by the Variable Delay circuit, the user may find it convenient to bypass the Variable Delay leaving only the 80 ms Delay. This can be accomplished by applying a continuous ground to the Trigger Mode line. Grounding the Trigger Mode line disables the Variable Delay circuit and enables IC17A. When a momentary ground is applied to the Remote Measure line, the output of IC16A goes high, the output of IC17A goes low and the two flip flops are set simultaneously. At the end of the 80 ms delay, both flip flops are reset, the Trigger line goes high and the data flags are returned to their original states.

5-29. Panel Meter Adjustments (Standard Model 3575A).

NOTE

Options 001, 002: Refer to Paragraph 5-31

5-30. The purpose of these adjustments is to set the de accuracy of the Digital Panel Meter. Before proceeding with these adjustments, perform the Panel Meter Accuracy Check (Paragraph 5-9) to determine if adjustments are necessary.

RECOMMENDED TEST EQUIPMENT:

DC Voltmeter (-hp- Model 412A)
DC Digital Voltmeter (-hp- Model 3450A)
Time Interval Counter (-hp- Model 5245L with 5267A
Plug-ln)*

- * See note following Step e.
- a. Perform Steps a through i of the Panel Meter Removal procedure (Figure 5-5) to gain access to the panel meter adjustments.
 - b. Set the 3575A controls as follows:

DISPLAY	PHASE
AMPLITUDE FUNCTION .	B/A
Voltage Range	0.2 mV - 2 V
	(both channels)
FREQUENCY RANGE	10 Hz - 100 kHz
PHASE REFERENCE	A

- c. Set A5S1 and A6S1 to CAL 1. Connect DC Voltmeter to ANALOG OUTPUT 1.
- d. Connect a short clip lead between A9TP1 and A9TP2 (see Figure 5-6).
- e. Adjust A9R27 for $0 V \pm 0.05 \text{ mVdc}$ at Analog Output 1.

NOTE

Steps f through k are the steps required to perform the Clock Rate adjustment (A21R6). It is not necessary to perform the Clock Rate adjustment unless the panel meter is malfunctioning or has just been repaired. If the Clock Rate adjustment is required, perform Steps f through k; if not, proceed to Step l.

- f. Set the 3575A LINE switch to OFF. Unplug the panel meter and remove it from its dust cover as outlined in Figure 5-5. Steps k and l.
- g. Place the A12 Assembly on a 22-pin PC Extender and plug the panel meter into A12. Set the 3575A LINE switch to ON.
 - h. Set the Time Interval Counter to measure a

16.67 ms, 10 V p-p (± 5 V) pulse. Set the Start Channel to trigger on the - slope and the Stop Channel to trigger on the + slope. Set the Trigger Level controls to Preset.

- i. Connect both inputs of the Time Interval Counter to A20ATP1 (marked "S").
- j. Adjust A21R6 for a time interval reading of 16.67 ms.
- k. Set the 3575A LINE switch to OFF. Reinstall the panel meter in its dust cover, replace A12 and install the panel meter in its normal position. Set the 3575A LINE switch to ON.
 - 1. Connect DC Voltmeter to A21TP1 (See Figure 5-7).
 - m. Adjust A21R1 for $0 V \pm 0.5 \text{ mVdc}$ at TP1.
 - n. Reconnect DC Voltmeter to ANALOG OUTPUT 1.
- o. Adjust A21R2 until the polarity sign alternates between + and -.
 - p. Adjust A9R27 for +0.5 mVdc at Analog Output 1.
- q. Adjust A21R5 until the last digit of the display alternates between 1 and 0.
- r. Readjust A9R27 for $0 V \pm 0.05 \text{ mVdc}$ at Analog Output 1.
 - s. Connect DC Digital Voltmeter to Analog Output 1.
 - t. Remove clip lead from between A9TP1 and A9TP2.
 - u. Set A6S1 to CAL 2.
- v. Adjust A6R19 (Y ADJ) for a reading of + 1.800 Vdc at Analog Output 1.
- w. Adjust A21R3 for a panel meter reading of + 180.0 degrees.
- x. This completes the panel meter adjustments. Reset A5S1 and A6S1 to NORMAL (4) and reassemble the instrument by reversing the procedure outlined in Figure 5-5. Perform the Output Filter Zero Adjustments (Paragraph 5-33), the Phase Detector Zero Adjustments (Paragraph 5-35) and the Current Source and Current Sink Adjustments (Paragraph 5-37) before using the 3575A in a phase measurement application.

5-31. Panel Meter Adjustments (Options 001, 002).

5-32. The purpose of these adjustments is to set the dc accuracy of the panel meters. Before proceeding with these adjustments, perform the Panel Meter Accuracy Check (Paragraph 5-9) to determine if adjustments are necessary.

RECOMMENDED TEST EQUIPMENT:

DC Voltmeter (-hp- Model 412A)
DC Digital Voltmeter (-hp- Model 3450A)
Time Interval Counter (-hp- Model 5245L with 5267A
Plug-In)*

* See note following Step e.

NOTE

The following procedure outlines the steps required to adjust the right-hand (phase) panel meter. When the adjustments for the right-hand panel meter are completed, place the left-hand panel meter in the right-hand slot and repeat the procedure.

- a. Perform Steps a through i of the Panel Meter Removal procedure (Figure 5-5) to gain access to the panel meter adjustments.
 - b. Set the 3575A controls as follows:

AMPLITUDE B/PHASE	PHASE
AMPLITUDE FUNCTION	B/A
Voltage Range	0.2 mV - 2 V
	(both channels)
FREQUENCY RANGE	10 Hz - 100 kHz
PHASE REFERENCE	Δ

- c. Set A5S1 and A6S1 to CAL 1. Connect DC Voltmeter to ANALOG OUTPUT 2.
- d. Connect a short clip lead between A10TP1 and A10TP2 (see Figure 5-6).
- e. Adjust A10R27 for 0 V \pm 0.05 mVdc at Analog Output 2.

NOTE

Steps f through k are the steps required to perform the Clock Rate adjustment (A21/A24R6). It is not necessary to perform the Clock Rate adjustment unless the panel meter is malfunctioning or has just been repaired. If the Clock Rate adjustment is required, perform Steps f through k; if not, proceed to Step l.

- f. Set the 3575A LINE switch to OFF. Unplug both panel meters and remove the panel meter to be adjusted from its dust cover as outlined in Figure 5-5, Steps k and l.
- g. Place the A12 Assembly on a 22-pin PC Extender and plug the panel meter to be adjusted into A12J2 (right-hand connector). Set the 3575A LINE switch to ON.

- h. Set the Time Interval Counter to measure a 16.67 ms, 10 V p-p (± 5 V) pulse. Set the Start Channel to trigger on the slope and the Stop Channel to trigger on the + slope. Set the Trigger Level controls to Preset.
- i. Connect both inputs of the Time Interval Counter to A23ATP1 (marked "S").
- j. Adjust A24R6 for a time interval reading of 16.67 ms.
- k. Set the 3575A LINE switch to OFF. Reinstall the panel meter in its dust cover, replace A12 and install the panel meter in the right-hand slot. Set the 3575A LINE switch to ON.
 - 1. Connect DC Voltmeter to A23TP1 (see Figure 5-7).
 - m. Adjust A23R1 for $0 V \pm 0.5 \text{ mVdc}$ at TP1.
 - n. Reconnect DC Voltmeter to ANALOG OUTPUT 2.
- o. Adjust A24R2 until the polarity sign alternates between + and .
 - p. Adjust A10R27 for +0.5 mVdc at Analog Output 2.
- q. Adjust A24R5 until the last digit of the display alternates between 1 and 0.
- r. Readjust A10R27 for 0 V $\pm\,0.05\,mVdc$ at Analog Output 2.
 - s. Connect DC Digital Voltmeter to Analog Output 2.
- t. Remove clip lead from between A10TP1 and A10TP2.
 - u. Set A6S1 to CAL 2.
- v. Adjust A6R19 (Y ADJ) for a reading of + 1.800 Vdc at Analog Output 2.
- w. Adjust A24R3 for a panel meter reading of + 180.0 degrees.
- x. Place the left-hand panel meter in the right-hand slot and repeat Steps c through w. When adjustments are completed for both panel meters, reset A5Sl and A6Sl to NORMAL (4), install the panel meters in their original slots and reassemble the instrument by reversing the procedure outlines in Figure 5-5. Perform the Output Filter Zero Adjustments (Paragraph 5-33), the Phase Detector Zero Adjustment (Paragraph 5-35) and the Current Source and Current Sink Adjustments (Paragraph 5-37) before using the 3575A in a phase measurement application.

Table 5-6. Power Supply Ratings.

Power Supply	Test Point	Voltage Limit	Ripple (p-p)	Line Regulation (115 V/230 V ± 10 %)	Nominal Load Current
+ 12 V *	A7P1 Pin 6	+ 11.997 V to + 12.003 V	1 mV	± 1 mV	180 mA
- 12 V	A7P1 Pin F	- 11.960 V to - 12.040 V	1 mV	± 1 mV	180 mA
-6 V (A)	A7P1 Pin D	-5.980 V to -6.020 V	1 mV	± 0.1 mV	200 mA
-6 V (B)	A7P1 Pin 4	- 5.980 V to - 6.020 V	1 mV	± 0.1 mV	200 mA
+5 V	A7P1 Pin 21	+ 4.980 V to + 5.020 V	1 mV	± 0.1 mV	500 mA **
5.3 V	A7P1 Pin Y	5.200 V to - 5.400 V	1 mV	± 0.1 mV	350 mA
+ 3.8 V	A7P1 Pin 3	+ 3.700 V to + 3.900 V	3 mV	± 0.2 mV	600 mA †

^{*} Adjustable (A14R6)


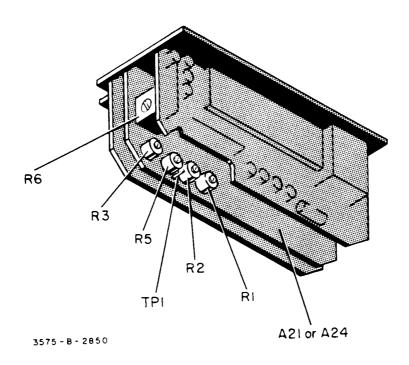


Figure 5-7. Location of Panel Meter Adjustments.

^{**} Load increases to 1.0 A in Option 002 instruments.

[†] Load increases to 750 mA in Option 001 instruments and 800 mA in Option 002 instruments.

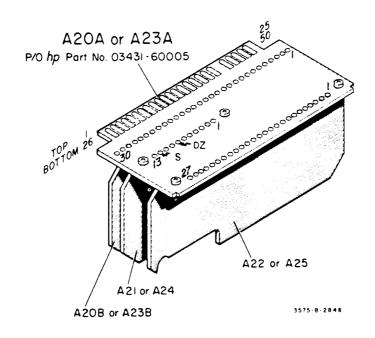

DIGITAL PANEL METER CONNECTIONS (A12 J1 OR J2)

TOP	(CIRCUIT SIDE)	вот	TOM (COMPONENT SIDE)
PIN		PIN	
1		26	
2		27	
3		28	‡
4		29	OVERLOAD
5	HOLD	30	
6	"1" OVERRANGE	31	
7	EXT. TRIGGER	32	
8	+ 5 V	33	
9	+ 5 V	34	
10	- 5.3 V	35	
11	- 10 V	36	
12		37	
13	+ 3.8 V	38	
14	"1"	39	AOL
15	"2"	40	"B/A" & "dB" ANNUNCIATOR CONTROL
16	"4"	41	
17	"8"	42	BOL
18	"b" SCAN	43	"A" ANNUNCIATOR CONTROL
19	"c" SCAN	44	HOLD
20		45	
21	GND	46	
22		47	
23	GND	48	"DEG" ANNUNCIATOR CONTROL
24	- 12 V	49	"dBV" ANNUNCIATOR CONTROL
25	+ 12 V	50	"B" ANNUNCIATOR CONTROL

MEASUREMENT CONDITIONS:

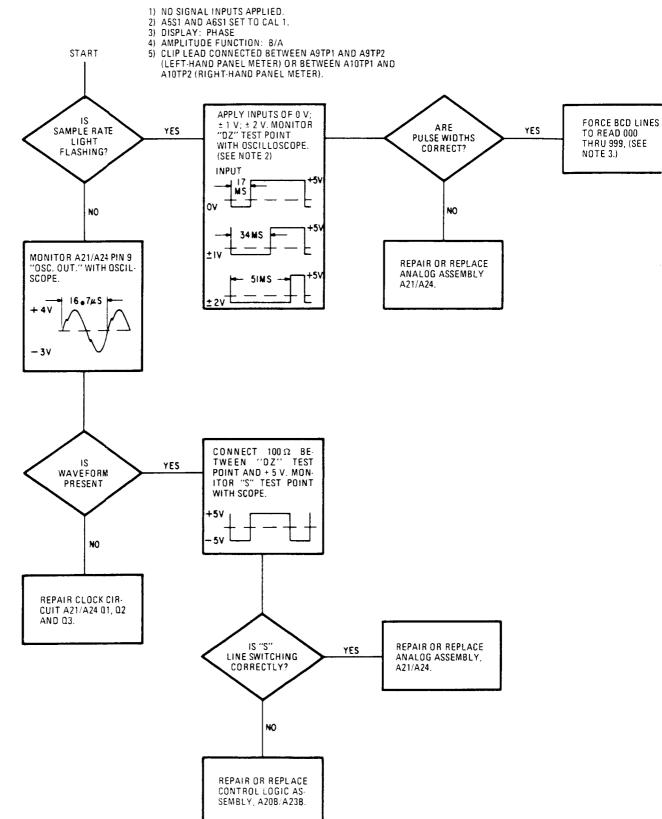


Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
#11MP1 #1101 #1102 #11R1 #11R2	4040-0749 1854-0C71 1854-0C71 C684-2221 0684-2251	5	EXTRACTOR:PC BOARD, BROWN TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704) R:FXD COMP 2200 OHM 10% 1/4W R:FXD COMP 2.2 MEGOMM 10% 1/4W	28480 28480 28480 01121 01121	4040-0749 1854-0071 1854-0071 CB 2221 CB 2251
A11R3 A11K4 A11K5 A11R6 A11R7	C698-3516 0656-3456 0757-0470 0684-5621	1 1 17	NOT ASSIGNED R:FXD FLM 6340 DHM 1% 1/8W R:FXD FLM 3-57K DHM 1% 1/8W R:FXU HET FLM 162K GHM 1% 1/8W R:FXD CCMP 5-6K DHM 10% 1/4W	284 80 284 80 284 80 01121	0698-3516 0698-3496 0757-0470 CB 5621
A11R8 A11R9 A11R10 A11R11 A11R12	0684-4721 0698-3264 0757-0410 0757-0289 0684-5621	ì	R:FXU COMP 4700 OHM 10% 1/4W R:FXD FLM 11.8K OHM 1% 1/8W R:FXD MET FLM 301 OHM 1% 1/8W R:FXD MET FLM 13.3K OHM 1% 1/8W R:FXD COMP 5.6K OHM 10% 1/4W	01121 28480 28480 28480 28480 01121	CB 4721 0698-3264 0757-0410 0757-0289 CB 5621
A11R13 A11R14 A11R15 A11R16 A11R17	0684-5631 C684-1021 C698-3193 C698-8025 C658-4494	1 1 2	R:FXD COMP 56K OHM 10% 1/4w R:FXD COMP 1000 OHM 10% 1/4w R:FXD FLM 10K OHM 0=25% 1/8w R:FXD FLM 1=91K OHM 0=25% 1/8w R:FXD FLM 35-7K OHM 1% 1/8w	01121 01121 28480 28480 28480	CB 5631 CB 1021 0698-3193 0698-8025 0698-4494
#11R18 #11R19 #11R20 #11R21 #11R2	0684-5621 0698-8024 0698-8025 0698-4488 0684-5621	1	R:FXD COMP 5.6K OHM 10% 1/4W R:FXD FLM 3.09K OHM 0.25% 1/8W R:FXD FLM 1.91K OHM 0.25% 1/8W R:FXD FLM 26.7K OHM 1% 1/8W R:FXD COMP 5.6K OHM 10% 1/4W	01121 28480 28480 28480 01121	CB 5621 0698-8024 0698-8025 0698-4488 CB 5621
#11R23 #11R23 #11R24 #11R25 #11R26	0684-4721 C684-1521 0684-4721 0684-1521 03575-66512	1	R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 1500 OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 1500 OHM 10% 1/4W BOARD ASSY:METER	01121 01121 01121 01121 01121 28480	CB 4721 CB 1521 CB 4721 CB 1521 CB 1521 O3575-66512
(\$10 MODEL 3575A A12C1 A12C2 A12CR1 A12J1 A12L1	C180-2419 0180-2419 1901-0040 1251-2955 9100-3337	4 4	C:FXD TANT. 470 UF 20% 10VDCW C:FXD TANT. 470 UF 20% 10VDCW DIGDE:SILICON 30MA 30WV CONNECTOR:PC 12 X 25150 CONTACT COIL:FXD 100 UH 20% 10 KHZ	56289 56289 07263 05574 99800	109D477X0010F2 109D477X0010F2 FDG1088 3KH25/21JV12/079 BP 2650
#1212 #12MP1 #12MP2 #12R1 #12R2	9100-3337 4040-0749 4040-0750 0684-2721 0698-4435	2	COIL:FXD 100 UH 20% 10 KHZ EXTRACTOR:PC BDARD, BROWN EXTRACTOR:PC BDARD, RED R:FXD COMP 2700 OHM 10% 1/4W R:FXD FLM 2.49K OHM 1% 1/8W	99800 28480 28480 01121 28480	BP 2650 4040-0749 4040-0750 CB 2721 0698-4435
A12R3 A12R4 A12R5 A12R6 A12R7	C698-0084 0684-2721 0684-2721 C684-2721 C684-2721	2	R:FXD MET FLM 2-15K OHM 1% 1/8W R:FXD COMP 2700 OHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W	28480 01121 01121 01121 01121	0698-0084 CB 2721 CB 2721 CB 2721 CB 2721
#12R8 #12R9 #12R10 #12R11 #12B	0684-2721 C698-3358 0684-2721 C698-3318 03575-66522	2 2 1	R:FXD COMP 2700 OHM 10% 1/4W R:FXD MET FLM 1K OHM 0.5% 1/8W R:FXD COMP 2700 OHM 10% 1/4W R:FXD FLM 200 OHM 0.5% 1/8W BOARD ASSY:METER	01121 28480 01121 28480 28480	C8 2721 0698-3358 C8 2721 0698-3318 03575-66522
(OPTION 001, 002) A12 C1 A12 C2 A12 J1 A12 J2 A12 L1	0180-2419 0180-2419 1251-2555 1251-2955 5100-3337		C:FXD TANT. 470 UF 20% 10VDCH C:FXD TANT. 470 UF 20% 10VDCW CONNECTOR:PC (2 X 25)50 CONTACT CONNECTOR:PC (2 X 25)50 CONTACT COIL:FXD 100 UH 20% 10 KHZ	56289 56289 05574 05574 99800	109D477X0010F2 109D477X0010F2 3KH25/21JV12/079 3KH25/21JV12/079 BP 2650
A12 L2 A12 MP1 A12 MP2 A12 R1 A12 R2	\$100-3337 4040-0749 4040-0750 6684-2721 6658-4435		COIL:FXD 100 UH 20% 10 KHZ EXTRACTOR:PC BOARD, BROWN EXTRACTOR:PC BOARD, RED R:FXD COMP 2700 OHM 10% 1/4W R:FXD FLM 2.49K OHM 1% 1/8W	99800 28480 28480 01121 28480	BP 2650 4040-0749 4040-0750 CB 2721 0698-4435
A12 R3 A12 R4 A12 R5 A12 R6 A12 R7	C658-0084 C664-2721 C684-2721 C684-2721 C684-2721		R:FXD MET FLM 2.15K OHM 1% 1/8W R:FXD COMP 2700 OHM 10% 1/4W K:FXD COMP 2700 OHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W R:FXD COMP 2700 OHM 10% 1/4W	284 80 01121 01121 01121 01121	0698-0084 CB 2721 CB 2721 CB 2721 CB 2721 CB 2721
A12 R8 A12 R9 A12 R10 A12 R11 A13	C6 84-2721 C6 98-3358 C6 84-2721 C6 98-3318 03575-66513	1	R:FXD COMP 2700 OHM 10% 1/4% R:FXD MET FLM 1K CHM 0.5% 1/8% R:FXD COMP 2700 OHM 10% 1/4% R:FXD FLM 200 OHM 0.5% 1/8% BOARD ASSY:PANEL SWITCH	01121 28480 01121 28480 28480	CB 2721 0698-3358 CB 2721 0698-3318 03575-66513
#13CR1 #13S1 #13S2 #13S3 #13S4	1901-0025 3100-2726 3100-2728 3100-2727 3100-2726	14 3 1 1	DIODE:SILICON ICOMA/lv SWITCH:ROTARY 2-POSITION SWITCH:ROTARY 4-POSITION SWITCH:ROTARY 3-POSITION SWITCH:ROTARY 2-POSITION	07263 28480 28480 28480 28480	FD 2387 3100-2726 3100-2728 3100-2727 3100-2726

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
#1355 #14 #14C1 #14C2 #14C3	3100-2726 C3575-66514 O150-0C71 C160-2207 C180-1835	1 5 7	SWITCH:RCTARY 2-POSITION BOARD ASSY:POWER SUPPLY C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD TA 68 UF 20% 15VDCW	2 84 80 284 80 562 89 284 80 562 89	3100-2726 03575-66514 C016B102E401J527-CDH 0160-2207 1500686X0015K2-DYS
81464 81465 81466 81467 81468	C160~2207 C18C-1835 C150-0071 C160-22C7 O180-0106		C:FXD MICA 300 PF 5% C:FXD TA 68 UF 20% 15VDCW C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW	28480 56289 56289 28480 28480	0160-2207 150D686X0015R2-DYS C016B102E401JS27-CDH 0160-2207 0180-0106
#1469 #14610 #14611 #14612 #14613	C150~0C71 0160~2207 0180~0106 0160~2207 0180~0106		C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW	562 89 284 80 284 80 284 80 284 80	C016B102F401JS27-CDH 0160-2207 0180-0106 0160-2207 0180-0106
A14C14 A14C15 A14C16 A14C17 A14C18	0150-0C71 0160-2207 0180-0106 0150-0C71 0160-2207		C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5% C:FXD ELECT 60 UF 20% 6VDCW C:FXD CER 400 PF 5% 1000VDCW C:FXD MICA 300 PF 5%	56289 28480 28480 56289 28480	C016B102E401JS27-C0H 0160-2207 0180-0106 C016B102E401JS27-C0H 0160-2207
£14C19 A14CR1 A14CR2 A14CR3 A14CR4	0180-0106 1901-0025 1901-0025 1901-0025		C:FXD ELECT 60 UF 20% 6VDCW NOT ASSIGNED DIODE:SILICON 100MA/IV DIODE:SILICON 100MA/IV DIODE:SILICON 100MA/IV	28480 07263 07263 07263	0180-0106 FD 2387 FD 2387 FD 2387
614CR5 614CR6 614CR7 614CR8 614CR10	1902-0025 1902-0777 1901-0025 1901-0025 1902-0025	2	DIODE, BREAKDCWN: 10.0V 5% 400 MW DIODE: BREAKDOWN 6.2V 5% DIODE: SILICON 100MA/IV DIODE: SILICON 100MA/IV DIODE; BREAKDCWN: 10.0V 5% 400 MW	28480 04713 07263 07263 28480	1902-0025 1N825 FD 2387 FD 2387 1902-0025
A14CR11 A14CR12 A14CR13 A14CR14 A14CR15	1901-0025 1901-0025 1901-0025 1901-0025 1901-0025		DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V	07263 07263 07263 07263 07263	FD 2387 FD 2387 FD 2387 FD 2387 FD 2387
A14CR16 A14CR17 A14CR18 A14IC1 £14IC2	1901-0025 1901-0025 1901-0025 1820-0223 1820-0223		DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V DIODE:SILICON 100MA/1V INTEGRATED CIRCUIT:OPERATIONAL AMPL. INTEGRATED CIRCUIT:OPERATIONAL AMPL.	07263 07263 07263 28480 28480	FD 2387 FD 2387 FD 2387 1820-0223 1820-0223
A141C3 A141C4 A141C5 A141C6 A141C7	1820-0223 1820-0223 1820-0223 1820-0223 1820-0223		INTEGRATED CIRCUIT: OPERATIONAL AMPL. INTEGRATED CIRCUIT: OPERATIONAL AMPL. INTEGRATED CIRCUIT: OPERATIONAL AMPL. INTEGRATED CIRCUIT: OPERATIONAL AMPL. INTEGRATED CIRCUIT: OPERATIONAL AMPL.	28480 28480 28480 28480 28480	1820-0223 1820-0223 1820-0223 1820-0223 1820-0223
£14MP1 614MP2 614MP3 61401 61402	4040-0749 4040-0752 1205-0033 1854-0404 1853-0010	1 4 3 4	EXTRACTOR:PC BOARD, BROWN EXTRACTOR:PC BOARD, YELLOW HEAT SINK:SEMICONDUCTOR TSTR:SI NPN TSTR:SI PNP(SELECTED FROM 2N3251)	28480 28480 05820 28480 28480	4040-0749 4040-0752 207-CB 1854-0404 1853-0010
A1403 A1404 A1405 A1406 A1407	1854-0226 1854-0404 1854-0226 1854-0404 1853-0010	2	TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI PNP(SELECTED FROM 2N3251)	80131 28480 80131 28480 28480	2N4384 1854-0404 2N4384 1954-0404 1853-0010
£1408 £1409 £14010 £14011 £14012	1853-0C51 1853-0051 1853-0010 1853-0051 1853-0051	4	TSTR:SI PNP TSTR:SI PNP TSTR:SI PNP(SELECTED FROM 2N3251) TSTR:SI PNP TSTR:SI PNP	80131 80131 28480 80131 80131	2N4037 2N4037 1853-0010 2N4037 2N4037
A14013 A14R1 A14R2 A14R3 A14R4	1853-0610 0911-3679 6684-4721 0684-1041 6698-3512	3	TSTR:SI PNP(SELECTED FROM 2N3251) R:FXD MW 0-51 OHM 5% 1/2W R:FXD CDMP 4700 OHM 10% 1/4W R:FXD CDMP 100K OHM 10% 1/4W R:FXD FLM 1180 OHM 1% 1/8W	28480 28480 01121 01121 28480	1853-0010 0811-3079 C8 4721 CB 1041 0698-3512
£14R5 A14K6 £14K7 £14R8 £14R9	C698-8061 2100-1758 C658-8039 C811-3079 0684-4721	4 1 1	R:FXD FLM 8.25K OHM 0.1% 1/8H R:VAR HW 1K OHM 5% TYPE V 1W R:FXD MET FLM 8.37K OHM 0.1% 1/8H R:FXD WW 0.51 OHM 5% 1/2W R:FXD CCMP 4700 OHM 10% 1/4W	28480 28480 28480 28480 01121	0698-8061 2100-1758 0698-8039 0811-3079 CB 4721
\$14R10 \$14K11 \$14R12 \$14R13 \$14K14	Ch84-1041 C658-8C61 C698-8061 C811-3056 C757-0284	2	R:FXD COMP 100K CHM 10% 1/4W R:FXD FLM 8.25K CHM 0.1% 1/8W R:FXD FLM 8.25K CHM 0.1% 1/8W R:FXD WW 0.24 CHM 5% 1/2W R:FXD MET FLM 150 CHM 1% 1/2W	01121 28480 28480 28480 28480	C8 1041 0659-8061 0698-8061 0811-3056 0757-0284

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
£14K15 £14K10 £14R17 £14K18 £14K19	Co 98-3279 Ob 64-4721 Co 84-1041 Ob 91-3153 C757-0444	2 1 2	K:FXD MET FLM 4990 CHM 1% 1/8h R:FXD CGMP 4700 CHM 10% 1/4h R:FXD CGMP 100K CHM 10% 1/4h R:FXD MET FLM 3.83K CHM 1% 1/6N K:FXD MET FLM 12.1K CHM 1% 1/8H	284 80 01121 01121 284 80 284 80	0698-3279 CE 4721 CE 1041 0698-3153 0757-0444
£14R20 £14R21 £14R22 £14R23 £14R24	0811-3056 C757-0284 C698-3279 C684-4721 0684-1041		R:FXD WH 0.24 OHM 5% 1/2H R:FXD MET FLM 150 CHM 1% 1/8H R:FXD MET FLM 4990 CHM 1% 1/8H R:FXD COMP 4700 CHM 10% 1/4H K:FXD COMP 100K CHM 10% 1/4H	28480 29480 28480 01121 01121	0311-3056 0757-0254 0698-3279 08 4721 08 1041
A14R25 £14R25 A14R27 A14R28 A14R29	C684-3321 C698-8C61 C698-8058 OP11-3C79 C684-4721	1	R:FXD COMP 3300 DHM 10% 1/4H R:FXD FLM 8.25K DHM 0.1% 1/8H R:FXD FLM 5.90K CHM 0.25% 1/4H R:FXD HN 0.51 DHM 5% 1/2H R:FXD COMP 4700 DHM 10% 1/4H	01121 29480 28480 28480 01121	CB 3321 0698-8061 0698-8058 0811-3079 CB 4721
£14K30 A14K31 £14K32 A14K33 A14K34	C684-1041 C698-3258 0757-0444 C811-3071 C811-3071	1	R:FXD COMP 100K OHM 10% 1/4h R:FXD MET FLM 5.36K OHM 1% 1/8W R:FXD MET FLM 12.1K OHM 1% 1/8W R:FXD WH 1.2 OHM 5% 1W R:FXD WH 1.2 OHM 5% 1W	01121 28480 28480 28480 28480 28480	C9 1041 0698-3258 0757-0444 0811-3071 0811-3071
A14R35 614R36 A14R37 614R38 A14R39	C684-4721 O684-1041 C698-8059 O658-8060 O811-3071	2 2	R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4H R:FXD FLM 4.32K CHM 0.1% 1/8W R:FXD FLM 8.04K OHM 0.1% 1/8W R:FXD WW 1.2 OHM 5% 1W	01121 01121 28480 28480 28480 28490	CB 4721 CB 1041 0698-8059 0699-8060 0811-3071
814840 814841 814842 814843 814844	C811-3C71 O684-4721 C684-1041 C698-8059 C698-8060		R:FXD WW 1.2 OHM 5% 1W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 100K OHM 10% 1/4W R:FXD FLM 4.32K CHM 0.1% 1/8W R:FXD FLM 8.64K OHM 0.1% 1/8W	28480 01121 01121 28480 28480	0811-3071 CB 4721 CB 1041 0695-8059 0698-6060
814845 814846 814847 814848 815	C684-4721 C684-4721 O3575-66515	1	NOT ASSIGNED NOT ASSIGNED R:FXD COMP 4700 OHM 10% 1/4H R:FXD COMP 4700 OHM 10% 1/4H BOARD ASSY:POWER SUPPLY(MCTHER BD)	31121 01121 28480	CB 4721 CB 4721 O3575-66515
A15C1 A15C2 A15C3 A15CR1 A15CR2	0180-2384 0180-2388 0180-2394 1901-9028 1901-0028	1 1 1 12	C:FXD AL ELECT DUAL 3500/1200 UF 15/25V C:FXD AL ELECT DUAL 3500/1200 UF 15/25V C:FXD AL ELECT 30CO UF +10C-10% 10VDCW D10DE:S1LICGN 0.75A 400PIV D10DE:S1LICGN 0.75A 400PIV	56289 28480 56289 04713 04713	968D20105 0180-2385 68D10359 SR1358-9 SR1358-9
A15CR 3 A15CR4 A15CR5 A15CR6 A15CR7	1901-0028 1901-0028 1901-0028 1901-0028 1901-0028		DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV	04713 04713 04713 04713 04713	SR1358-9 SR1358-9 SR1358-9 SR1358-9 SR1358-9
A15CR8 A15CR9 A15CR1C A15CR11 A15CR12	1901-0028 1901-0028 1901-0028 1901-0028 1901-0028		DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV DIODE:SILICON 0.75A 400PIV	04713 04713 04713 04713 04713	SR1358-9 SR1358-9 SR1358-9 SR1358-9 SR1358-9
A1501 A1502 A1503 A1504 A1505 A15XA14A A16A(STD & OPT 001 A16B(OPT 002 ONLY) A16C1 A16C2 A16C3	1854-0072 1854-0072 1854-0063 1854-0063 1854-0072 1251-2034 03575-66518 0160-3452 0160-3452 0160-3452	3 2 1 1 6	TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN TSTR:SI NPN CONNECTOR PC EDGE (2 X 10) 20 CONTACT BOARD ASSY: INTERFACE SUBSTITUTION BOARD ASSY: INTERFACE C:FXD DISC CER 0.02 UF 20% 100VDCW C:FXD DISC CER 0.02 UF 20% 100VDCW C:FXD DISC CER 0.02 UF 20% 100VDCW	80131 80131 80131 80131 80131 71785 28480 28480 56289 56289	2N3054 2N3054 2N3055 2N3055 2N3054 257:10:30:300 03575-26516 03575-66518 CO23B101H2O3MS25-CDH CO23B101H2O3MS25-CDH
\$16C4 \$16C5 \$16C6 \$16C7 \$16C8	0160-3452 0160-3452 0160-3452 0150-0050 0150-0050	4	C:FXD DISC CER 0.02 UF 20% 100VDCW C:FXD DISC CER 0.02 UF 20% 100VDCW C:FXD DISC CER 0.02 UF 20% 100VDCW C:FXD CER 1000 PF +80-20% 1000VDCW C:FXD CER 1000 PF +80-20% 1000VDCW	56289 56289 56289 56289 56289	C0238101H203MS25-CDH C0239101H203MS25-COH C0238101H203MS25-CDH C0678102E1022S26-CDH C0678102E102ZS26-CDH
A16C9 A16C10 A16C11 A16C12 A16C13	0150-0050 0180-0291 0150-0050 0180-0309 0160-3658	3	C:FXD CER 1000 PF +80-20% 1000VDCW C:FXD ELECT 1.0 UF 10% 35VDCW C:FXD CER 1000 PF +80-20% 1000VDCW C:FXD ELECT 4.7 UF 20% 10VDCW C:FXD FOLLY 10 UF 10 50VDCW	56289 56289 56289 56289 28480	C067B102E102Z526=CDH 150D105X9035A2=DYS C067B102E102Z526=CDH 1500475X0010A2=DYS 0160-3658
A 16C 14 A 16C 15 A 16C R 1 A 16C R 2 A 16C R 3	C180-0291 0180-0291 1901-0040 1901-0640 1901-0640		C:FXP ELECT 1.0 UF 10% 35VDCW C:FXD ELECT 1.0 UF 10% 35VDCW DIDDE:SILICON 30MA 30HV DIDDE:SILICON 30MA 30HV DIDDE:SILICON 30MA 30HV	562 39 562 89 07263 07263 07263	1500105X9035A2-DYS 1500105X9035A2-DYS FDG1088 FDG1088 FDG1088

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A16CR4 A16TC1 A16TC2 A16TC3 A16TC4	1901-0040 1820-0668 1820-0174 1820-0511 1826-0301	1 3 6	DIODE:SILICON JOMA JOWY IC:TTL HEX DRIVER W/OPEN COLL(JOV) IC:TTL HEX INVERTER IC:TTL QUAD 2-INPT AND GATE IC:TTL WUAD BI-STABLE D-LATCH	07263 01295 01295 01295 01295	F0G1088 SN7407N SN7404N SN7408N SN7475N
A161C5 A161C6 A161C7 A161C8 A161C9	1820-0301 1820-0174 1820-0301 1820-0511 1820-0301		IC:TIL QUAD BI-STABLE D-LATCH IC:TIL HEX INVERTER IC:TIL QUAD BI-STABLE D-LATCH IC:TIL QUAD 2-INPT AND GATE IC:TIL QUAD BI-STABLE D-LATCH	01295 01295 01295 01295 01295	SN7475N SN7404N SN7475N SN74760BN SN7475N
A161C10 A161C11 A161C12 A161C13 A161C14	1820-0301 1820-0174 1820-0301 1820-0506 1820-0506	2	IC:TTL QUAD BI-STABLE D-LATCH IC:TTL HEX INVERTER IC:TTL QUAD BI-STABLE D-LATCH IC:DIGITAL 2-INPT,4-BIT MULTIPLEXER IC:DIGITAL 2-INPT,4-BIT MULTIPLEXER	01295 01295 01295 18324 18324	SN7475N SN7404N SN7475N N8266B N8266B
A16IC15 A16IC16 A16IC17 A16MP1 A16MP2	1820-0515 1820-0068 1820-0054 4040-0747 4040-0749	1	IC:TTL DUAL RE-TRIG/RE-SET MONO-MULTI IC:TTL TRIPLE 3-IMPUT POS NAND GATE IC:TTL QUAD 2-IMPT NAND GATE EXTRACTOR:PC BOARD, GRAY EXTRACTOR:PC BOARD, BROWN	07263 12040 01295 28480 28480	U78960259X SN7410N SN7400N 4040-0747 4040-0749
A16Q1 416Q2 A16Q3 A16Q4 A16Q5	1854-0071 1854-0071 1854-0071 1854-0071 1854-0071 1853-0020		TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI PNP(SELECTED FROM 2N3702)	28480 28480 28480 28480 28480	1854-0071 1854-0071 1854-0071 1854-0071 1853-0020
A16Q6 A16Q7 A16Q8 A16Q9 A16Q1	1853-0C20 1853-0C20 1853-0C20 1854-0C71 1854-0C71		TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI PNP(SELECTED FROM 2N3702) TSTR:SI NPN(SELECTED FROM 2N3704) TSTR:SI NPN(SELECTED FROM 2N3704)	28480 28480 28480 28480 28480	1853-0020 1853-0020 1853-0020 1854-0071 1854-0071
A16K1 £16R2 A16R3 £16R4 A16K5	0684-5621 0684-5621 0684-5621 0684-5621 1810-0041	1	R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:METHORK,8 RES. 2.7K OHM 5%	01121 01121 01121 01121 28480	CB 5621 CB 5621 CB 5621 CB 5621 1810-0041
\$16R6 \$16R7 \$16H8 \$16R9 \$16R10	C684-5621 C684-4721 C684-5621 C684-4721 C684-1021		R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W	01121 01121 01121 01121 01121	CB 5621 CB 4721 CB 5621 CB 4721 CB 1021
#16R11 #16R12 #16R13 #16R14 #16R15	0683-1245 C683-1255 C683-1265 C698-3228 C684-4721	1 1 1 2	R:FXD COMP 120K DHM 5% 1/4W R:FXD COMP 1.2 MEGOHM 5% 1/4W R:FXD COMP 12 MEGOHM 5% 1/4W R:FXD MET FLM 49.9K OHM 1% 1/8W R:FXD COMP 4700 OHM 10% 1/4W	01121 01121 01121 284 60 01121	CB 1245 CB 1255 CB 1265 O698-3228 CB 4721
#16R16 #16R17 #16R18 #16R19	0684-5621 0684-4721 0684-5621 0684-4721 0684-5621		R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W	01121 01121 01121 01121 01121	CB 5621 CB 4721 CB 5621 CB 4721 CB 5621
416R21 416R22 416R23 416R24 416R25	0684-4721 0684-5621 0684-4721 0684-5621 0757-0476	1	R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD MET FLM 301K OHM 1% 1/8W	01121 01121 01121 01121 28480	C8 4721 C8 5621 C8 4721 CB 5621 O757-0476
#16R26 #16R27 #16R28 #16R29	0698-3228 0684-4721 0684-5621 0683-1235 0684-4721	1	R:FXD MET FLM 49.9K OHM 1% 1/8W R:FXD COMP 4700 OHM 10% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 12K OHM 5% 1/4W R:FXD COMP 4700 OHM 10% 1/4W	28480 01121 01121 01121 01121	0698-3228 CB 4721 CB 5621 CB 1235 CB 4721
AloR31 4loR32 AloR33 4loR34 AloR35	0684-1041 0684-1041 0684-1021 0684-1021 0684-1021 6684-1031		R:FXD COMP 100K DHM 10% 1/4W R:FXD COMP 100K DHM 10% 1/4W R:FXD COMP 1000 DHM 10% 1/4W R:FXD CCMP 1000 DHM 10% 1/4W R:FXD COMP 10K DHM 10% 1/4W	01121 01121 01121 01121 01121	CB 1041 CB 1041 CB 1021 CB 1021 CB 1031
AloR36 AloR37 AloR38 AloR39 AloR40	C664-1031 C684-1031 O684-1021 C684-1021 O684-5621		R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 10K OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W R:FXD COMP 1000 OHM 10% 1/4W R:FXD COMP 5-6K OHM 10% 1/4W	01121 01121 01121 01121 01121	CB 1031 CB 1031 CB 1021 CB 1021 CB 5621
#16XA19 #17 #17XA1 #17XA2 #17XA3	1251-2955 03575-66517 1251-1604 1251-1604 1251-1604	1 9	CONNECTOR:PC (2 X 25)50 CONTACT BOARD ASSY:MOTHER CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT CONNECTOR:PC EDGE 1 ROW 22 CONTACT	05574 28480 71785 71785 71785	3KH25/21JV12/079 03575-66517 252-22-30-310 252-22-30-310 252-22-30-310

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
\$17xA4 \$17xA5 \$17xA6 \$17xA7 \$17xA8	1251-1604 1251-1604 1251-1604 1251-1365 1251-1365	4	CONNECTUR: PC EDGE 1 ROW 22 CONTACT CUMMECTOR: PC EDGE 1 ROW 22 CONTACT CONNECTOR: PC EDGE 1 ROW 22 CUMIACT CONN: PC 44 (2X22) CONTACTS CGNN: PC 44 (2X22) CONTACTS	71785 71785 71785 71785 71785	252-22-30-310 252-22-30-310 252-22-30-310 252-22-30-300 252-22-30-300
#17XA9 #17XA10 #17XA11 #17XA12 #17XA13	1251~1604 1251~1604 1251~1604 1251~1365 1251~1633	1	CONNECTOR: PC EDGE 1 ROW 22 CONTACT CONNECTOR: PC EDGE 1 ROW 22 CONTACT CONNECTOR: PC EDGE 1 ROW 22 CONTACT CONNECTOR: PC 42X22 CONTACTS CONNECTOR: PC(1 X 15) 15 CONTACT	71785 71785 71785 71785 71785	252-22-30-310 252-22-30-310 252-22-30-310 252-22-36-300 252-15-30-310
#17XA14 #17XA16 #18 #19(OPT 002 ONLY #19J1	1251-1632 1251-1365 5060-1200 C3575-66519 1251-0C87	1 1 1 1	CONNECTOR:PC 1 x 12 CONTACT CONN:PC 44 (2x22) CUNTACTS MODULE PWR INPUT BOARD ASSY:INTERFACE CONNECTUR CONNECTOR:FEMALE 50→PIN MINAT	71785 71785 28480 28480 28480	252-12-30-310 252-22-30-300 5060 1200 0 3575-66519 1251-0087
A19MP1 A19MP2 A20A B T	03575-01208 1530-1698 0343160005	1 1	BRACKET: INTERFACE CONNECTOR SUPPORT: PC BOARD ASSY CONTROLLOGIC (INCLUDES MOTHER BOARD AZOA AND LOGIC BOARD AZOB) BOARD ASSY MUTHER	28480 28480 28480 28480	03575-01208 1530-1698 0343160005
A 20B A 20CR1 THRU CR5 A 20CR6 THRU CR10	1902 3190 1901 0040		BOARD ASSY LOGIC DIODE BREAKDOWN 13 V 5 DIODE SI 30 WIV 50 mA 2 pF 2 ns	07910 07263	C D 35735 F D G 1088
A20CR11 A20IC1 † A20IC2 † A21 † A21C1	1910 0016 1820 0671 1820 0698 03431 66513 0160 3674	1 1	DIODE GR 60 WIV LUS TO IC CONTROL LOGIC IC TRIDECADE BUFFER BOARD ASSY ANALOG C FXD 0 47 UF 5 100 VDC'V	82219 28480 28480 28480 84411	D 2361 1820 0671 1820 0698 03431 66513 H ENV 32
A21C2, C3 A21C4 A21CR1, CR2 A21CR3, CR4 A21IC1 †	0160-0990 0160-0181 1902-0686 1901-0040 0960-0160	2	C FXD MICA 100 pF 2 C FXD MICA 30 pF 5 DIODE BEEAKDOWN 5.2 V 2 DIODE S.30 WIV 50 mA 2 pF 2 ns IC A D HYBRID	72136 14655 04713 07263 28480	ROM15F101G3S ond ROM15E330J3S S21217C F0G1088 0960-0160
A21MP1 A2101, 02 A2103 A2181, R2 A21R3	03431-01201 1854-0071 1853-0020 2100-2030 2100-2497	2	BRACKET MOUNTING TSTR SI NPN 2N3391 TSTR SI PNP R VAR CER 20K OHM 10 12W B VAR CER 2K OHM 10 12W	28480 01295 01295 73138 73138	03431 01201 SKA1124 SKA1123 62 2101 62 207 1
A21R4 A21R5 A21R6 A21R7 A21R8	0757-0488 2100 1738 2100 3207 0757-0199 0757-0283	1	R FXD FLM 909 K OHM 1 1 2 W R VAR CER 10 K OHM 10 1 2 W R VAH CER 5 K OHM 10 1 2 W R FXD FLM 2 IS K OHM 1 1 8 W R FXD FLM 2 K OHM 1 1 8 W	75042 73138 28480 75042 75042	CEA T 0 62 209 1 1200 3207 CEA T-0 obd CEA T-0 obd
A21R9 A21R10 A21R11 A21R12 A21R13	0757-0442 0698-4477 0757-0448 0757-0442 0698-4488		R FXD FLM 10 K OHM 1 % 1 8 W R: FXD FLM 10.5 K OHM 1 % 1 8 W R FXD FLM 18.2 K OHM 1 % 1 8 V R FXD FLM 10 K OHM 1 % 1 8 W R FXD FLM 26 7 K OHM 1 % 1 8 W	19701 91637 19701 19701 91637	MF4CTO obd CMF:10:32T-1 obd MF4CTO obd MF4CTO obd CMF:110:32T1 obd
A 21 R 14 A 22 T A 22 I C 1 A 22 I C 2 A 22 I C 2	0757-0442 03431-66501 0160-0155 0180-0106 1990-0315	1 1 1 1	R FXD FLM 10 K OHM 1 - 1.8 W. ASSY DISPLAY (DOES NOT INCLUDE DS1) C FXD MY 0.0033 UF 10 - 200 VDCW C FXD ELECT 60 UF 20 - 6 VDCW DISPLAY NUMERIC	19701 28480 56269 28480 28480	MF4C obd 03431 66501 192P33292-PTS 0180-0106 1990 0315
A22DS2 A22DS3 THRU DS10 A22IC1 † A22IC2 † A22MP1	1990-0310 1990-0310 1820-0663 1820-0571 5040-5839	9 1 1	DIODE VISIBLE LIGHT EMITTER DIODE VISIBLE LIGHT EMITTER IC DIGITAL SCANNER IC TIL DIGITAL HOUSING ANNUNCIATOR	28480 28480 28480 28480 28480	1990 0310 1930 0310 1820 0663 1820 0571 5040 5839
A 22MP2 A 22MP3 A 2201 A 2202 TH RU 06 A 2207	03575-24301 1200-0448 1854-0094 1854-0094 1853-0016	1 74 6	MASK ANNUNCIATION SOCKET CONTACT DIP TSTR SI NPN TSTR SI NPN TSTR SI NPN TSTR SI NPN	28480 27264 80131 83131 80131	03575-24301 1938-461 2N3646 2N3646 2N3638
A2208 THRU Q18 A22R1 A22R2 A22R3 A22R4	1853-0016 1810-0066 1810-0067 1810-0068 1810-0069	1 1 1	TSTR. SI PNP R. NETWORK 4 (2) = 650 (2) = 350 OHM 10 · R. NETWORK 6 (2) = 190 (3) = 510 OHM R. NETWORK 3 X 410 OHM 10 R. NETWORK 3 X 48 OHM 10 = 0.05 W. EACH	8313! 28483 28466 28480 28480	2 \ 3638 1810-0966 1810-0967 1810-0368 1810-0369
A23A-B 1 (OPT 001, 002 ONLY)	03431-60005		ASSY CONTROL LOGIC UNCLUDES MOTHER BOARD A23A AND LOGIC BCARD A23B1	28480	03431 60005
A 23 A (SAME AS A 20A) A 23 B (SAME AS A 20B) A 24 T (OPT 001, 002 ONLY SAME AS A 21) A 25 T (OPT 001, 002 ONLY SAME AS A 22)	0343166513 034316650'		BOARD ASSY MOTHER BOARD ASSY LOGIC BOARD ASSY ANALOG BOARD ASSY DISPLAY	28480 28480 28480 28480	
		1			

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
C1 C2 F1 F1	0160 3441 0160 3441 2110 0335 2110 0044	2 1 1	CHASSIS MOUNTED COMPONENTS C FXO CER 0.002 UF ZO 3 K VDCW C FXO CER 0.002 UF ZO 3 K VDCW FUSE SLOW BLOW 0.6 A, 250 V (115 V OPERATION) FUSE SLOW BLOW 0.3 A 250 V (230 V OPERATION) CONNECTOR INPUT (P O WI)	71598 71590	D 0 3 0 2 0 2 D 0 3 0 2 0 2
J2 J3 J4 J5 S1	1250 0083 1250 0083 1510 0076 3101 0896 3101 1179 9100 3237	2 1 1 1 1 1 1	CONNECTOR INPUT (POW2) CONNECTOR RF CONNECTOR RF POST BINDING JADE GRAY SWITCH TOGGLE SWITCH TOGGLE XEMR POWER	77068 77068 28480 28480 28480 28480	30624 1 30624 1 1519 0076 3101 0895 3101 1179 9100 3237

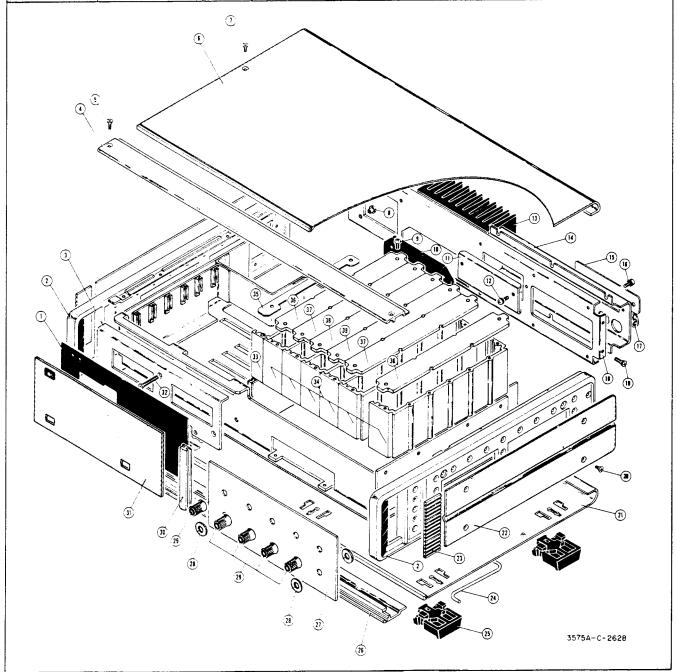


Figure 6-1 Mechanical Parts (Mainframe)

Model 3575A

_)

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number	
			CABLES			
W1 W2 : W3 : W4 W5	03575-61601 03575-61601 03575-61613 03575-61613 03575-61603	2 2	CABLE ASSY INPUT (INCLUDES J1) CABLE ASSY INPUT (INCLUDES J2) CABLE ASSY PREAMP (INCLUDES P1/J1 AND P2) CABLE ASSY PREAMP (INCLUDES P1/J1 AND P2) CABLE ASSY CHANNEL A (INCLUDES P1 AND P2)	28480 28480 28480 28480 28480	03575 6160 03575 6160 03575 61613 03575 61613 03575 61602	
W6 W7 W8 W9 W10	03575-61604 03575-61605 03575-61606 03575-61606 03575-61607	1 2 1	CABLE ASSY CHANNEL B (INCLUDES P1 AND P2) CABLE ASSY CURRENT (INCLUDES P1/J1 AND P2) CABLE ASSY (BETWEEN J1 AND CHASSIS) CABLE ASSY (BETWEEN J2 AND CHASSIS) CABLE ASSY (BETWEEN J2 AND CHASSIS)	28480 28480 28480 28480 28480	03575 61604 03575 61605 03575 61606 03575 61606 03575 61607	
W11 W12	03575-61608 8120 1378	1 1	CABLE ASSY. (BETWEEN JS AND CHASSIS) CABLE POWER	28480 28480	03575-61608 8120 1378	
MP1 (STD 3575A) MP1 (OPT 001, 002) MP2 MP3 MP4 MP5	7101 0266 7101 0265 03575 21201 03575 01204 03575 26802	1 1 2 1 1	MECHANICAL PARTS (REFER TO FIGURES 6-1 AND 6-2) MASK DISPLAY MASK DISPLAY ASSY FRAME PANEL DISPLAY TRIM TOP PANEL	28480 28480 28480 28480 28480	7101-0266 7101-0265 03575-21201 03575-01204 03575-26802	
MP6 MP7 MP8 MP9	2360-0184 03575-04101 2360-0196 0390-0006 2200-0766	4 1 4 59	SCREW COVER ASSY: TOP SCREW BUSHING (FOR T1) SCREW MACH	28480	03575 04101	
MP10 MP11 MP12	03575-01207 03575-04104 2200-0766	1	BRACKET TSTR MTNG COVER AC TERMINAL SCREW MACH	28480 28480	03575-01207 03575-04101	
MP13 MP14	03575-21101 03575-00203	1	HEAT SINK POWER SUPPLY PANEL CONNECTOR MING	28480 28480	03575-21101 03575-00203	
MP15 MP16 MP17 MP18	03575-04103 2360-0195 2190-0198 6960-0010 03575-00202	2	COVER INTERFACE CONN SCREW WASHER: LOCK PLUG HOLE PANEL REAR	28480	03575-04103	
MP19 RIGHT SIDE LEFT SIDE MP20 MP21 MP22 MP23 MP23 MP24	2510.0050 03575-24103 2510.0052 2510.0190 03575-24108 2190.0343 3050.0026 2190.0087 2580.0015 2360.0192 03575-04102 5000.8588 5000.0050 1490.0030	1 1 2 2 1	SCREW PLATE SPACER SCREW SCREW INSULATOR SPACER INSULATOR WASHER: INSULATOR WASHER: FLAT WASHER- LOCK NUT SCREW COVER ASSY BOTTOM COVER SIDE PLATE FLUTED STAND TILT	28480 28480 28480 28480 28480 28480	03575-24103 03575-24108 03575-04102 5000-8589 5000-0050 1490-0030	
MP25 MP26 MP27 MP28 MP29	5060-0767 03575-26803 03575-00201 00310-48801 0370-1099	5 1 1 4 5	ASSY FOOT TRIM BOTTOM PANEL PANEL FRONT WASHER: SHLDR KNOB POINTER	28480 28480 28480 28480 28480 28480	5060-0767 03575-26803 03575-00201 00310-48801 0370-1099	
MP30 MP31 (STD 3575A) MP31 (OPT 001,002) MP32 MP33	03575-26801 03575-40201 03575-40202 2200-0084	1 1 4	TRIM CENTER WINDOW DISPLAY WINDOW: DISPLAY SCREW SHIELD CARD NEST	28480 28480 28480 28480	03575-26801 03575-40201 03575-40202	
MP34 MP35 MP36 MP37 MP38	03575-25501 03575-01209 03575-24104 03575-24105 03575-24107	6 1 2 2	SHIELD CARD NEST STRAP RETAINER COVER: A1/A2 COVER: A3/A4 COVER: A6	28480 28480 28480 28480 28480	03575-25501 03575-01209 03575-24104 03575-24105 03575-24107	
MP39 MP40 MP41 MP42 MP43	03575-24106 5020-6871 5000-9520 3030-0009 5000-9523	1 1 1 2 1	COVER AS COVER PNL MTR INSULATOR SCREW SET INSULATOR	28480 28480 28480 28480	03575-24106 5020-6871 5000-9520 5000-9523	
		1				

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation HP Part Numbe	HD Dart Number (1tv 130correction		Mfr Code	Mfr Part Number
		MISCELLANEOUS PARTS		
\$35.75 01.211 14.10 1.017 5000 5.085 05.10 0.0075 5040 5.932 0403 01.51 0403 01.52 0403 01.53 0403 01.54 0403 01.56 0403 01.60 0340 07.04 035.75 241.01 0340 07.04 1200.0043 0340.01.62 035.75 844.01 5.060 5.988 5.060 5.988 5.060 5.989 5.060 87.39 5.020.76.19 5.020.76.20 5.040.66.77 2.5.10 0.0047	1 100 1 4 1 1 2 3 4 1 1 1 2 2 2 3 1 1 1 1 1 1 1	EHACKET INTERFACE BOARD (REINFORCES A)6B) BUSHING INSULATOR (FOR A15 01 05 MTNG) CLIP POWER MODULE (A18) CUP TINVERMAN (TOP AND BOTTOM COVERS) COVEH POWER SWITCH GUIDE PC BOARD GREY GUIDE PC BOARD BLACK GUIDE PC BOARD BLACK GUIDE PC BOARD WHITE INSULATOR (FOR JS) INSULATOR PLATE (BETWEEN CHASSIS AND A17) INSULATOR TSTR BAKT (BETWEEN CHASSIS AND A15) INSULATOR TSTR (FOR A15 03, 04) INSULATOR TSTR (FOR A15 01, 02, 05) KIT ACCESSORY, INCLUDES THE FOLLOWING EXTENDER PC 2 X 10 PIN EXTENDER PC 7 X 22 PIN E	28480 28480	03575.01211 1410.1017 5000.5085 0510.0075 5040.5932 0403.0151 0403.0152 0403.0153 0403.0154 0403.0156 0403.0160 03575.24101 0340.0770 1200.0043 03575.84401 5060.5989 5060.5989 5060.8739 5020.7619 5020.7620 5040.6677

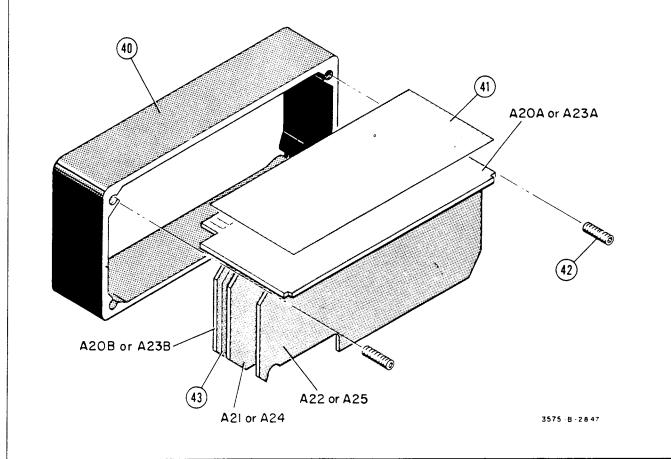


Figure (-2 Mechanical Parts (Panel Frame).

Table 7-1. Assembly Cross Reference.


Assembly Number	Assembly Title	Assembly Part Number	Schematic Number	Figure Number
A1	Preamplifier Assembly	03575-66501	1	7-2
A2	Preamplifier Assembly	03575-66501	1	7-2
A3	Log Converter Assembly	03575-66503	1	7-2
A4	Log Converter Assembly	03575-66503	1	7-2
A5	Phase Detector Assembly	03575-66505	2	7.3
A6	Current Source Assembly	03575-66506	3	7-4
Α7	Phase Control Filter Assembly	03575-66507	4	7-5
A8	Function Switching Assembly	03575-66508	5	7-6
A9	Output Filter Assembly	03575-66509	6	7-7
A10*	Output Filter Assembly	03575-66509	6	7-7
A11	Phase Control Logic Assembly	03575-66511	3	7-4
A12A	Panel Meter Connector Assembly	03575-66512	7, 10	7-8, 7-11
A12B*	Panel Meter Connector Assembly	03575-66522	7, 10	7-8, 7-11
A13	Front Panel Switching Assembly	03575-66513	5	7-6
A14	Power Supply Assembly	03575-66514	8	7.9
A15	Power Supply Mother Board Assembly	03575-66515	8	7-9
A16A	Interface Substitution Assembly	03575-26516	5	7-6
A16B**	Interface Assembly	03575-66518	9 İ	7-10
A17	Mother Board Assembly	03575-66517	i	
A18	Power Input Module	5060-1200	8	7-9
A19**	Interface Connector Assembly	03575-66519	9	7-10
A20A/B	Control Logic Assembly	03431-60005	7	7-8
A21	Analog Assembly	03431-66513	7	7-8
A22	Display Assembly	03431-66501	7	7-8
A23A/B*	Control Logic Assembly	03431-60005	10	7-11
A24*	Analog Assembly	03431-66513	10	7-11
A25*	Display Assembly	03431-66501	10	7-11


^{*} Options 001, 002 only.


^{**} Option 002 only.


			-




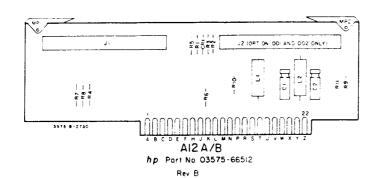

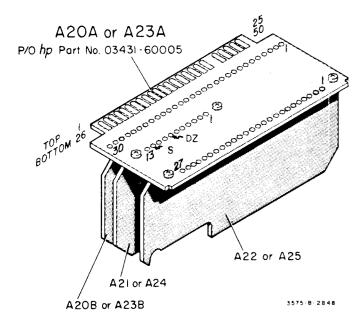


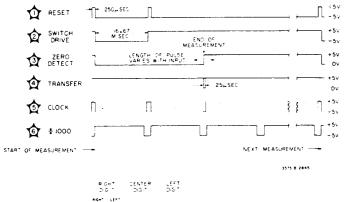

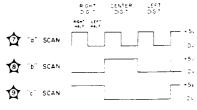


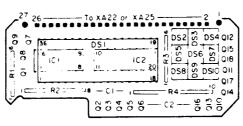


A22 or A25 hp Part No. 03431-66501 Rev A

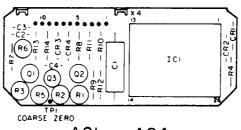

A21 or A24 hp Part No. 03431-66513

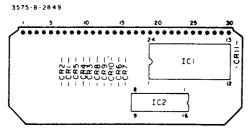

A20B or A23B P/O hp Part No. 03431-60005

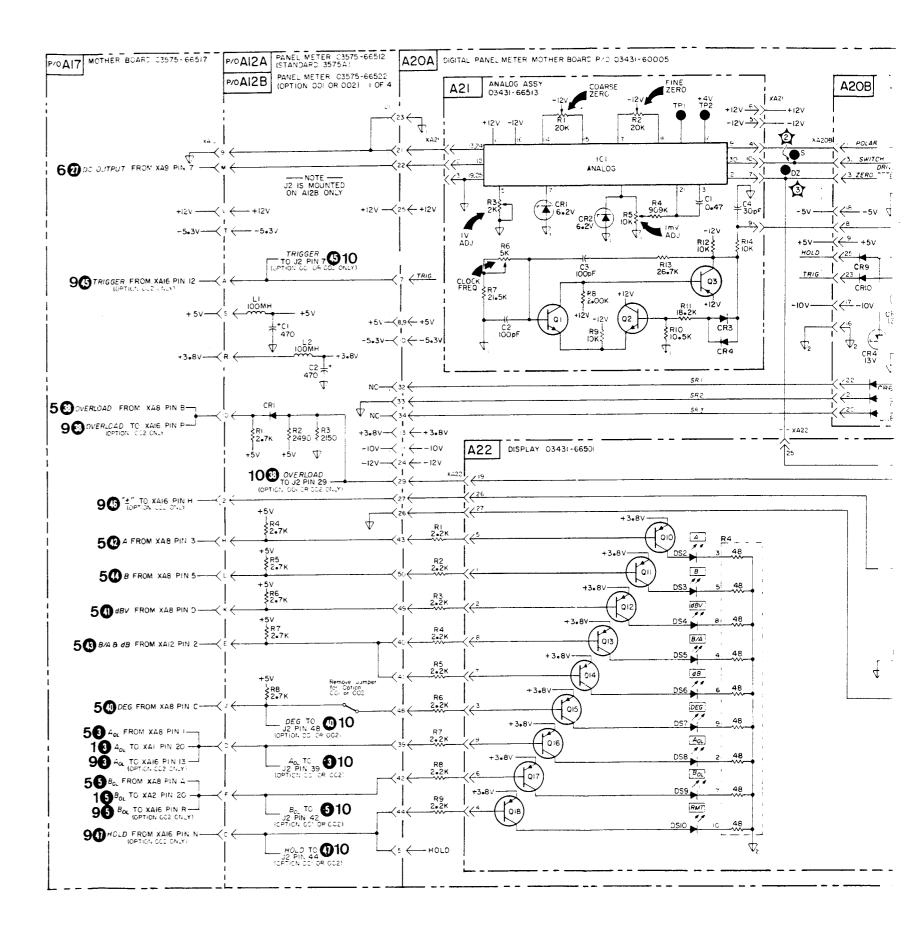



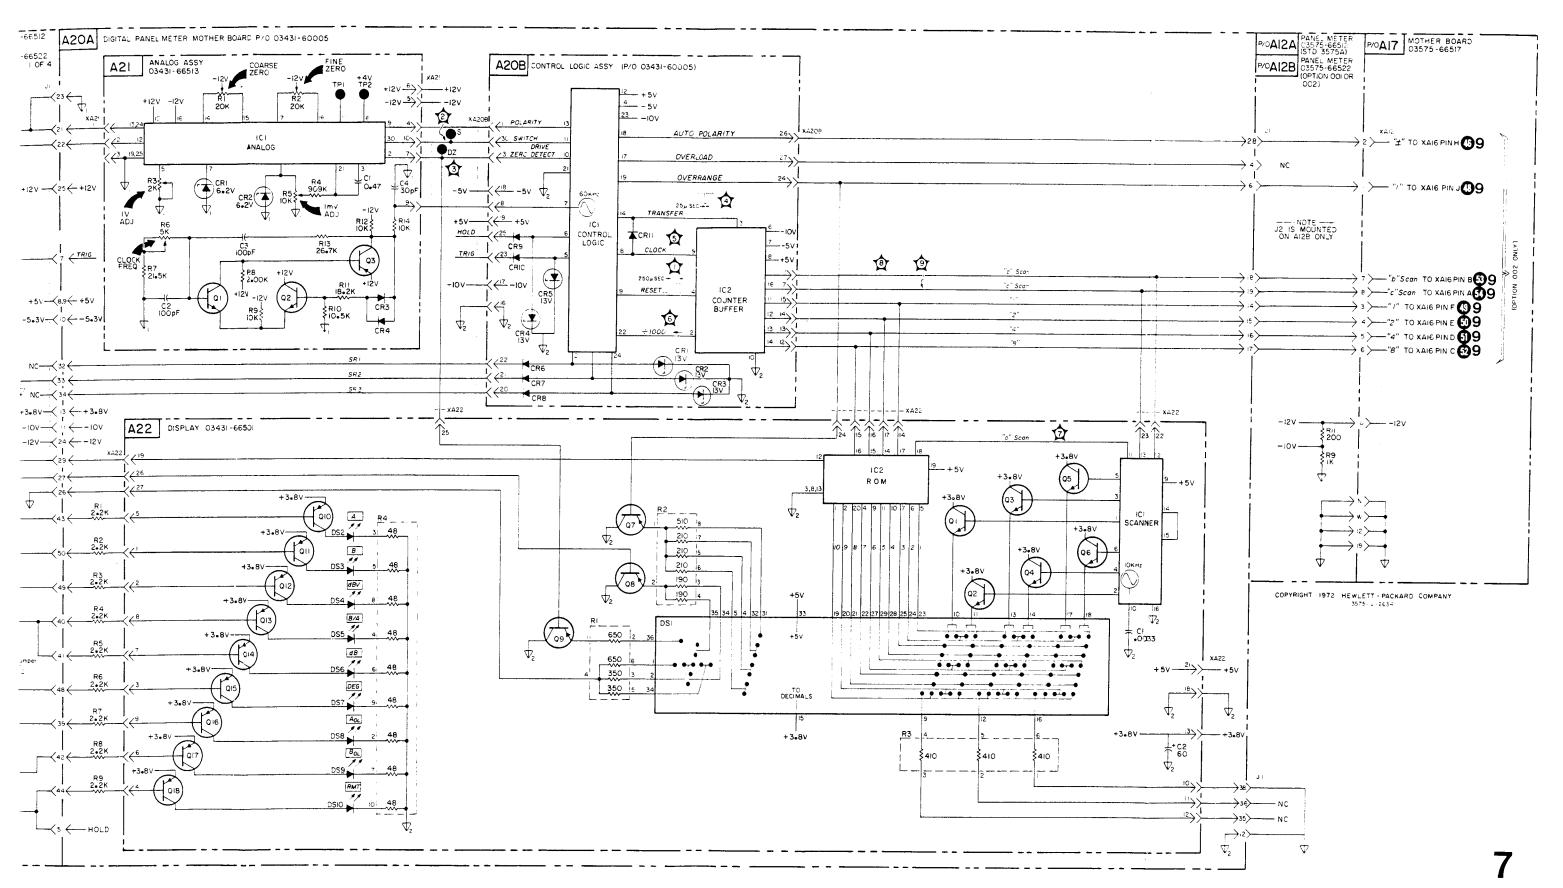


Figure 7-8. Panel Meter Connector (A12A/B) and Panel Meter (A20A/B, A21, A22) Schematics and Component Location Diagrams.

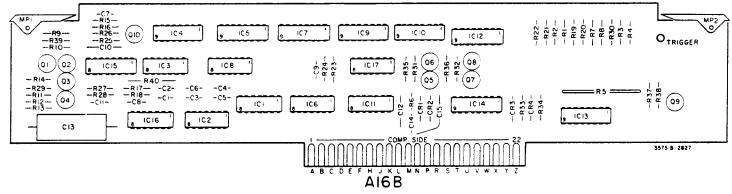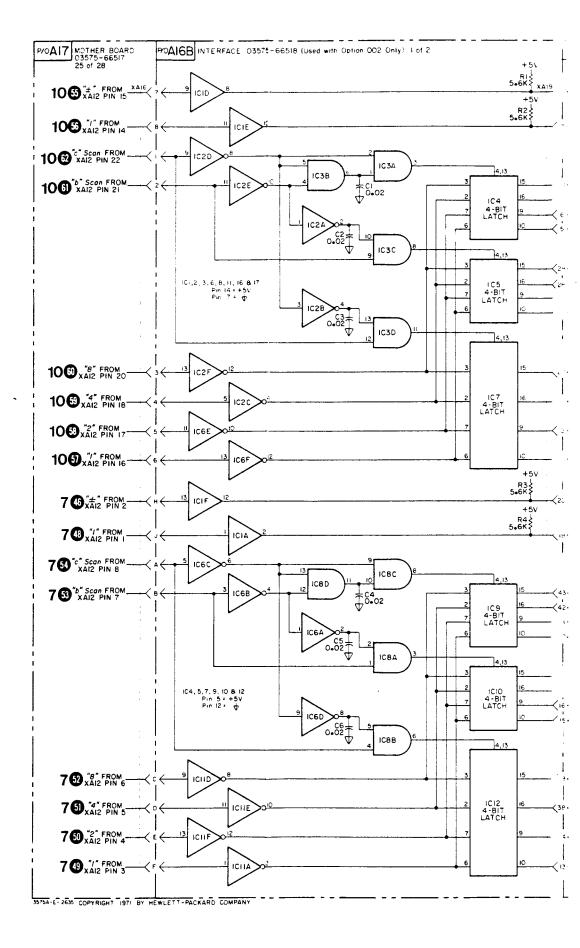

Part No. 03575 - 66518







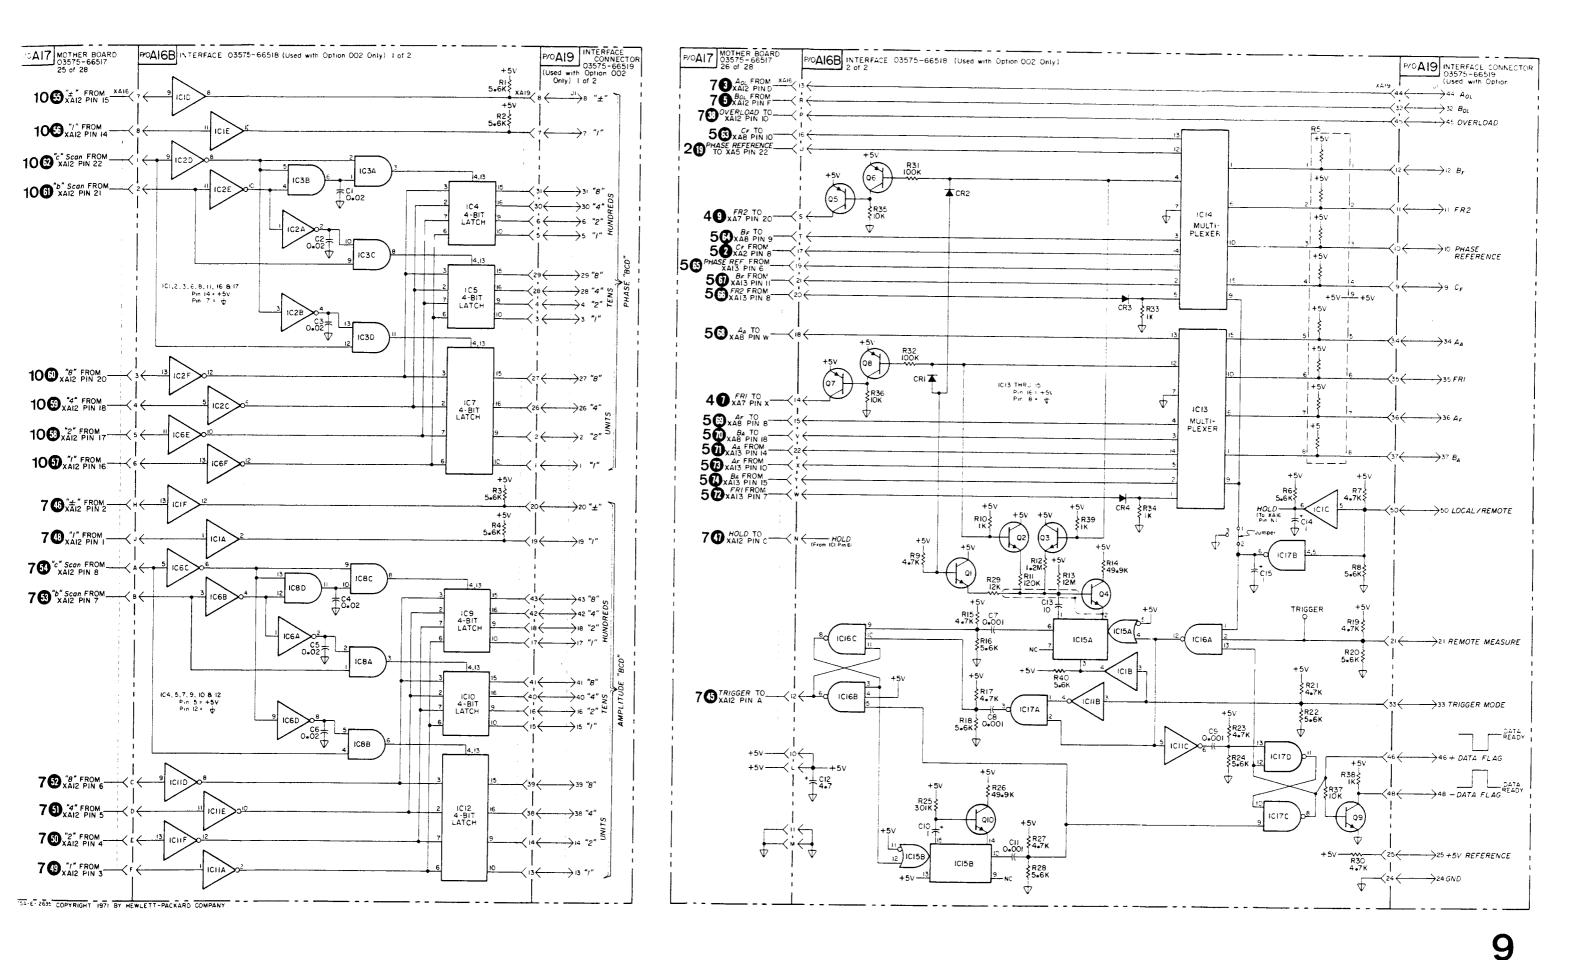



Figure 7-10. Interface Board (A16B) Schematic and Component Location Diagram.

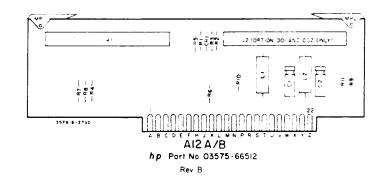

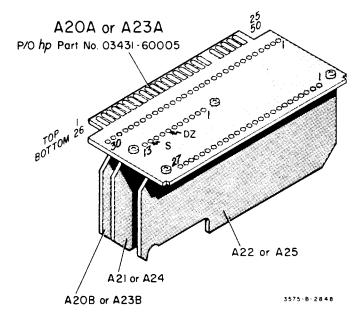


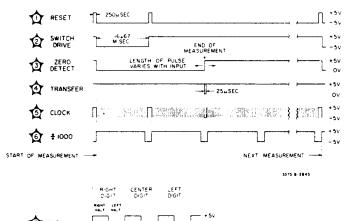

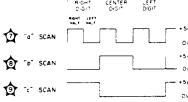

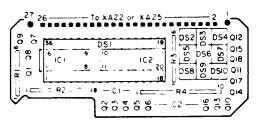


A22 or A25 hp Part No. 03431-66501 Rev A

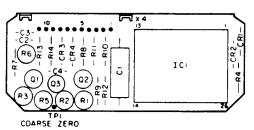

A21 or A24 hp Part No. 03431-66513

3575-8-2849

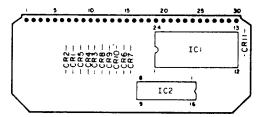

A20B or A23B P/O hp Part No. 03431-60005

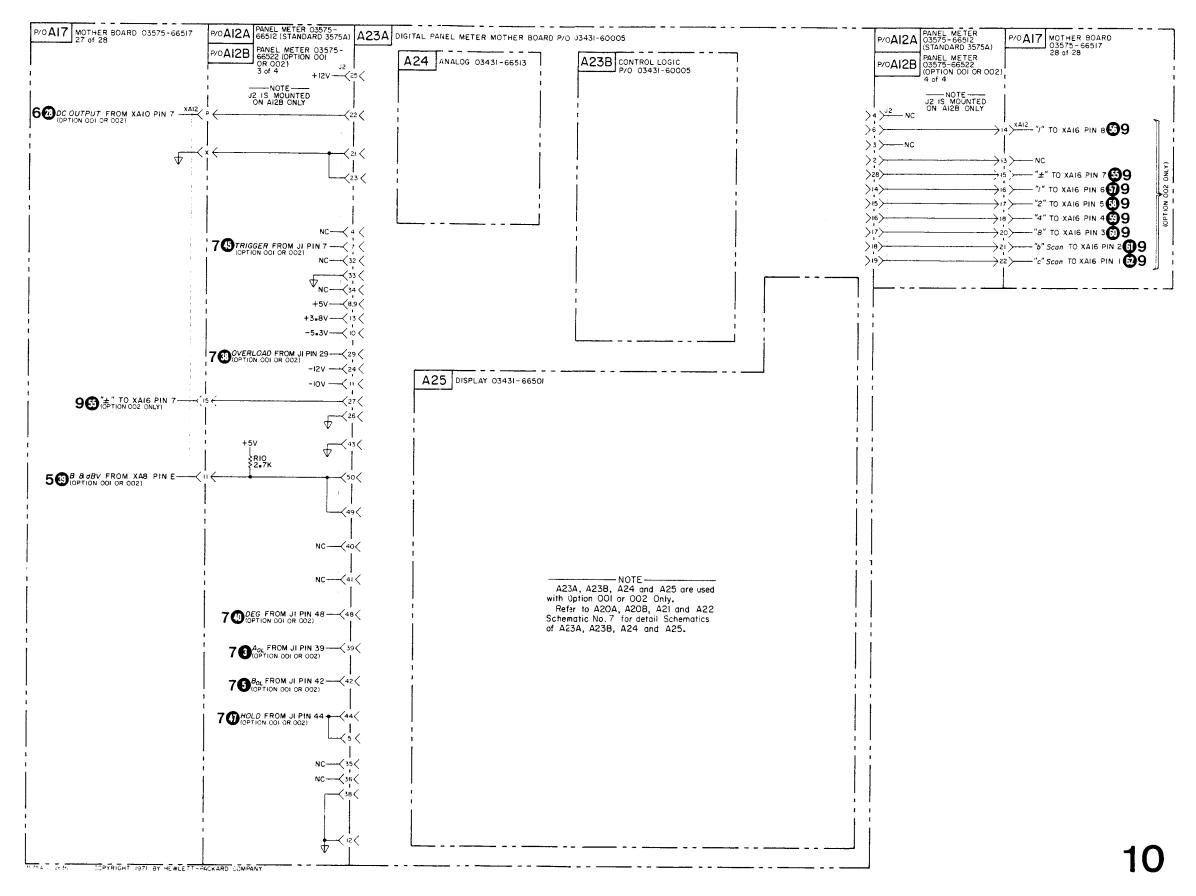


Figure 7-11. Panel Meter Connector (A12A/B) and Panel Meter (A23A/B, A24, A25) Schematics and Component Location Diagrams.



CHANGE NO. 4

Section III Changes

Pages 3-13, 3-14:

Delete Paragraphs 3-75 through 3-91, Figures 3-10 and 3-11. Substitute Appendix C Paragraphs 3-75 through 3-91, Figures 3-10 and 3-11.

Section IV Changes

Pages 4-11 through 4-17:

Delete Paragraphs 4-65 to 4-101 and all tables and figures therein. Substitute Appendix C Paragraphs 4-65 to 4-105 and all tables and figures therein.

Section V Changes

Pages 5-9 to 5-10:

Delete Paragraphs 5-19 to 5-34. Substitute Appendix C Paragraphs 5-19 to 5-34.

Pages 5-19 and 5-20:

Delete Paragraphs 5-87 to 5-89. Substitute Appendix C Paragraphs 5-87 to 5-96. Add Step 4 to Figure 5-5.

4. For repair or additional troubleshooting, remove two screws that fasten the Panel Meter boards together (MP42 Figure 6-2). Carefully and slowly unfold the Panel Meter. Do not bend the interconnecting wires further than necessary or more often than necessary.

Page 5-25/5-26:

Delete the Digital Panel Meter Troubleshooting Tree Figure 5-9. Substitute Appendix C Digital Panel Meter Troubleshooting Tree, Figure 5-9.

Section VI Changes

Page 6-13:

Delete A16C1

Change A16C10 to 0180-0291, C:fxd elect 1 μ F 10% 35 VDCW

Page 6-14:

Delete A16R1, R2

Change A16R25 to 0757-0476, 301 K 1% 1/8 W

Delete Pages 6-15 and 6-16. Substitute Appendix C Pages C-53 & C-54.

Section VII Changes

Delete Schematic Numbers 7, 9 and 10. Substitute Appendix C Schematic Numbers 7, 9 and 10.

CHANGE NO. 5

Page 6-11: On A12A (1 Panel Meter) Add A12L2, 9100-3337 (same as L1) On A12B (2 Panel Meters) Delete C12

Page 7-25/7-26:

Delete A12C12. Connect A12L2 inparallel with L1. (Parallel output goes to pins 8 and 9 of J1 and J2.) Delete A12C12. Connect A12L2 in parallel with L1. CHANGE NO. 6

Section VI Changes

Page 7-25/7-26:

Delete A12C12. Connect A12L2 in parallel with L1. (Parallel output goes to pins 8 and 9 of J1 and J2.)

	·		
			• •

Model 3575A Section III

- **3-75.** Local/Remote Control. Remote control operation is selected by applying a continuous ground (or -0.5 V to +0.4 V) to the Local/Remote control line (J1 pin 50). When ground is applied to the Local/Remote line, the following things take place within the 3575A:
- a. The front panel controls (except LINE switch) are disabled.
 - b. The remote control lines are enabled.
- c. The internal sampling in both panel meters is disabled (external triggering must be used).
- d. The external trigger and flag timing circuits are enabled.
- e. The "Remote" (REM) annunciators on the panel meters illuminate.
- 3-76. Remote Control Lines. In the remote control mode, the 3575A Option 002 will accept parallel binary instructions applied to the remote control lines. Since internal storage is not provided, the control lines must be held at ground (or -0.5 V to +0.4 V) by the external controller whenever a "true" condition is required. When remote operation is selected without inputs to the remote control lines, the lines are held in a "false" condition by the internal logic circuitry. With all control lines false, the control settings are programmed as follows:

- **3-77.** BCD Outputs. The 3575A Option 002 is equipped with separate BCD outputs for the two panel meters. These outputs provide parallel BCD information that corresponds with the respective panel meter readings. The BCD outputs each consist of three 8-4-2-1 BCD-coded digits, a single-line overrange ("1") digit and a single-line polarity indicator. Unlike the remote control lines, the BCD outputs are always enabled and can be used in the local or remote control mode.
- **3-78.** Overload Outputs. There are three overload indicator lines available at pins 32, 44 and 45 of the Interface connector. The A_{Ol} line (J1 pin 44) goes low when channel A is overloaded and the B_{Ol} (J1 pin 32) goes low when channel B is overloaded. The third line, labeled "overload" (J1 pin 45), goes low when either or both channels are overloaded. Since the overload outputs are not stored functions, they will automatically return to the "false" condition (+ 5 V) when the overload is removed.

3-79. External Triggering and Flag Timing Sequence. As previously indicated the internal sampling in both panel meters is disabled when ground is applied to the Local/Remote control line. This means that external triggering must be used to obtain sucessive meter readings or BCD outputs in the remote control mode.

3-80. In the 3575A Option 002, the external triggering circuit operates in conjunction with the flag timing circuit to allow adequate settling time, trigger the panel meters and provide a "data ready" flag to the external controller. The timing sequence is initiated by an external trigger pulse which is applied to the Remote Measure line (J1 pin 21). The duration of the timing sequence depends on the condition of the Trigger Mode line (J1 pin 33) which permits selection of two modes of operation: the Delayed Mode and Non-Delayed Mode.

NOTE

The Remote Measure command must be delayed for at least 0.5 ms following any change that affects the programmed state of the instrument.

- 3-81. Delayed Mode. When the Trigger Mode line is held in a "false" condition (open or + 2.4 V to + 5 V), the timing sequence is as shown in Figure 3-10. In Figure 3-10, the Remote Measure line is pulled low at T0 by the external controller. This initiates a variable delay period (determined by the Frequency Range setting) and sets the + and Data Flags. At the end of the variable delay period (T1), the panel meters are triggered, initiating a 140 ms measurement period. At the end of the measurement period (T2), the Data Flags are reset to indicate that data is ready at the BCD outputs.
- 3-82. The total time required to obtain a reading (T0 to T_2) is equal to 140 ms plus the variable delay period determined by the Frequency Range setting. The approximate *total* delay times for each frequency range are as follows:

Frequency	Total
Range	Delay
1 - 1 K	33 sec.
10 - 100 K	3.5 sec.
100 - 1 M	0.7 sec.
1 K - 13 M	0.2 sec.

3-83. The purpose of the variable delay in the timing sequence is to allow time for the instrument to stabilize before a reading is taken. Since the times allotted by the variable delay are maximum, the instrument will often stabilize before the end of the delay period. This depends on the change in input parameters or control settings prior to the Remote/Measure pulse. In some applications such as swept measurements where readings are taken after slight changes in input parameters, it may be desirable to speed up the measurement process by omitting the variable time delay. This can be accomplished by holding the Trigger

Section III Model 3575A

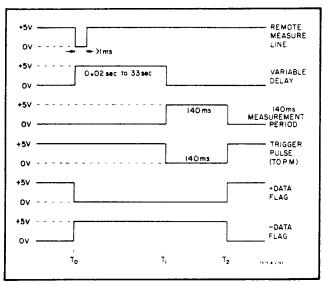


Figure 3-10. Flag Timing Delayed Mode.

Mode line in a "true" condition (gnd. or -0.5 V to +0.4 V). When the Trigger Mode line is grounded, the timing sequence is in the Non-Delayed Mode which operates as shown in Figure 3-11.

3-84. Non-Delayed Mode. In Figure 3-11, the Remote Measure line is pulled low at T0 by the external controller. This immediately triggers the panel meters and sets the + and - Data Flags. At the end of the 140 ms measurement period (T1), the Data Flags are reset to indicate that a reading has been taken.

3-85. Remote Measure Rate. As indicated in preceding paragraphs, the time required to obtain a reading depends on the selected mode of operation. In the Delayed Mode, the time varies from 0.2 second to 33 seconds as a function of the Frequency Range setting. In the Non-Delayed Mode, the time is fixed at approximately 140 ms. In order to obtain successive readings at a fixed rate, the time between Remote Measure pulses must be greater than the total delay period. For example, in the Non-Delayed Mode the 140 ms measurement period allows a maximum of 7 readings per

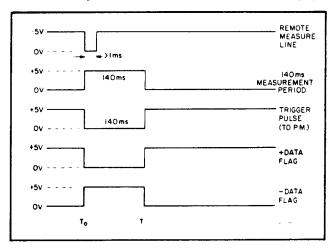


Figure 3-11. Flag Timing Non-Delayed Mode.

second. In the Delayed Mode, 0.2 sec. allows 5 readings per second, 0.7 sec. allows 1 reading per second, 3.5 sec. allows 17 readings per minute and 33 seconds allows 1.8 readings per minute. In all cases, the Remote Measure pulse width must be greater than 1 ms and less than the total measurement period.

3-86. Optional Control Scheme. For some applications, it is convenient to control the instrument from the front panel and, at the same time, use external triggering and the flag timing functions. To allow this, a jumper is provided on the Interface Assembly (A16B, Schematic No. 9). With the jumper connected between points 1 and 2 (normal), grounding the Local/Remote control line disables the front panel controls, enables the remote control lines and enables the external trigger and flag timing circuits. With the jumper connected between points 1 and 3, the front panel controls are enabled and the remote control lines are disabled regardless of the condition of the Local/Remote control line. The external triggering and flag timing functions can then be used along with the front panel controls by grounding the Local/Remote control line.

3-87. USING A PRINTER.

3-88. The 3575A Option 002 output lines are compatible with -hp- Digital Recorder Models 5050B and 5055A. These printers can be connected directly to the 3575A Interface connector using the -hp-562A-16C printer cable. Complete interfacing data is presented in Section II, Paragraph 2-29.

3-89. Triggering.

3-90. When using a printer, it is necessary to supply a ground-true (>1 ms) Remote Measure command to the 3575A each time a printout is required (see Paragraphs 2-30 and 3-80). The Remote Measure command sets the Data Flags and initiates the timing cycle within the 3575A. The printer receives a "print" command when the Data Flags are reset at the end of the timing cycle. Unless special arrangements have been made to ground the Trigger Mode line, the 3575A will remain in the Delayed mode and the "print" command will be transmitted at the end of the delay period. The delay period varies from approximately 33 seconds to 0.2 second as a function of the Frequency Range setting. If the Trigger mode line is grounded, the "print" command will be transmitted approximately 140 ms after the leading edge of the Remote Measure pulse.

3-91. Printout.

3-92. The -hp- Models 5050B and 5055A Digital Recorders provide a ten-column printout. The printer columns are numbered from right to left and the 3575A output data is printed as follows:

Model 3575A Section IV

4-65. Annunciator Logic (A8IC4 through IC6). The fourth section of the Function Switching Assembly is the annunciator logic circuitry, A8IC4 through IC6. This circuit receives inputs from the A_F, B_F and C_F control lines and two additional inputs from the overload detectors on the Preamplifier Assemblies, A1 and A2. The purpose of the annunciator logic is to control the overload indicators and the various function indicators that appear on the Panel Meter display.

4-66. Output Filter (A9/A10 Schematic No. 6).

4-67. The Output Filter is a 4-pole low pass filter network controlled by the front panel FREQUENCY RANGE switch. The purpose of the filter is to integrate the amplitude or phase information before it is applied to the Panel Meter and ANALOG OUTPUT. The filter response is controlled by three lines, F, M and S which come from the Phase Control Filter, A7. The Output Filter network is identical to the Phase Control Filter network which is discussed in Paragraph 4-34.

4-68. It should be noted that the standard Model 3575A which has a single panel meter requires only one Output Filter. This filter is designated A9. Instruments that are equipped with dual panel meters (Options 001–003) require a separate Output Filter for each panel meter and, therefore, contain both A9 and A10 which are identical. Since the dual panel meter options are field installable, the standard Model 3575A has a vacant board slot and connector to permit the addition of A10.

4-69. Digital Panel Meter.

4-70. Refer to the Panel Meter Block Diagram (Figure 4-12) and Schematic No. 7 for the following discussion.

4-71. The Digital Panel Meter is a self-contained dc digital voltmeter which measures voltages within the range of -1.999 Vdc to +1.999 Vdc. The panel meter reading in dB, dBV or degrees, corresponds with the applied dc voltage. For example, an input of -1.800 Vdc will produce a reading of -180.0 degrees; an input of +200 mVdc will produce a reading of +20.0 degrees or +20.0 dBV.

4-72. The Digital Panel Meter is divided into four major sections: the Analog section, the Counter/Display section, the Digital Controller section and the Decoder/Driver section. The Analog section uses a dual-slope integrator and a zero-detect comparator to perform a voltage to period conversion in response to sequential instructions from the Decoder/Driver section. The instructions are actually generated by the Digital Controller, but are processed by the Decoder/Driver before they are applied to the Analog section. The five instructions are: Charge, Discharge (+), Discharge (-), Measure and Auto Zero. The Measure instruction is given along with a Charge or Discharge instruction. The Auto Zero instruction is the complement of the Measure instruction and is given in the absence of a Charge or Discharge instruction.

4-73. To begin a measurement, the Charge instruction is given and the integrator within the Analog section charges toward the input voltage for 33 msec. At the end of the charge period, the Discharge (+) or Discharge (-) instruction is given and the integrator discharges at a fixed rate toward a reference voltage. The discharge period lasts for 66 msec. The selection of Discharge (+) or Discharge (-) depends on the polarity of the input voltage. If the input polarity is positive, the Discharge (-) instruction is given and the integrator discharges toward a negative reference voltage. Conversely, if the input polarity is negative, the Discharge (+) instruction is given and the integrator discharges toward

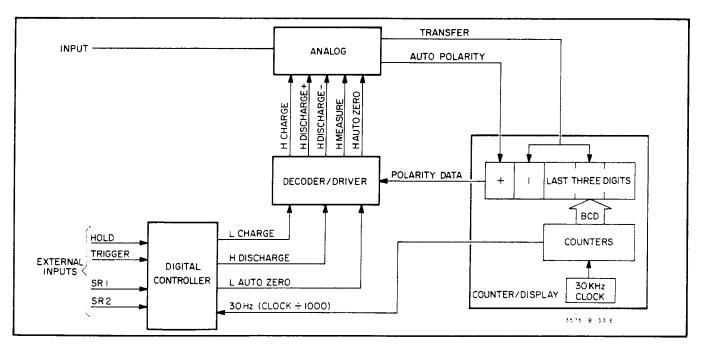


Figure 4-12. Panel Meter Block Diagram.

Section IV Model 3575A

a positive reference voltage. Since the discharge rate is constant, the time required for the integrator to discharge to zero volts is proportional to the dc input voltage.

4-74. When the integrator discharges to zero volts, the zero-detect comparator within the Analog section changes states, generating a "Transfer" pulse which is applied to the Counter/Display section. The Transfer pulse transfers the 8-4-2-1 BCD-coded information from the counters to the last three digits of the display. At the beginning of the discharge period, the counters are set to 000 and during the first half (33 msec) of the discharge period, they are incremented from 000 to 999. If a Transfer pulse occurs during the first 33 msec, a number between 000 and 999 is transferred to the display. During the second half of the discharge period, the counters are again incremented from 000 to 999. In this case, however, a Transfer pulse will transfer the accumulated count to the displays and will also light the overrange ("1") indicator. The number transferred to the display will, therefore, be between 1,000 and 1,999. Due to the fixed discharge rate of the integrator and the frequency at which the counters are incremented, the number transferred to the display is always equal to the absolute value of the dc input voltage. Polarity information is transferred to the polarity flip-flop and the polarity indicator by way of the Auto Polarity line from the Analog section.

4-75. At the end of the 66 msec discharge period, the Measure instruction is removed and the Auto Zero instruction is applied. The Auto Zero instruction disables the analog circuits and charges capacitors which, during the measurement period, provide voltages that null out any dc offsets introduced by the active elements in the Analog section. The Auto Zero instruction lasts until the Digital Controller recycles to state 0 where a new measurement is initiated.

4-76. Analog Section. The Analog section is comprised of a dual-slope integrator (U101A), a zero-detect comparator (Q102-Q106), a level translator/inverter (Q211) and a pulse generator (U507C, U509D). The integrator and zero-detect comparator circuits pass through three states in the course of making a measurement. These states are determined by the conditions of seven FET switches (Q107-Q113) which, in turn, are controlled by instruc-

tions from the Decoder/Driver section. Table 4-5 is a truth table which indicates the conditions of the various FET switches for each of the five instructions.

4-77. Figure 4-13 illustrates the three states of the integrator and zero-detect comparator during the measurement cycle. The integrator begins a measurement with both inputs at zero volts. When the Charge instruction is given (Figure 4-13A), FET switch Q107 is closed, connecting the non-inverting input of the integrator to the unknown input voltage. If the input voltage is positive, the output of integrator U101A goes positive and integrator capacitor C104 charges in a positive direction through R105. If the input polarity is negative, the output of U101A goes negative and C104 charges in a negative direction through R105. Feedback for the integrator is provided by capacitor C103 which connects to the inverting input of U101A through source follower Q101B. Due to the extremely high input impedance of Q101B, very little current flows in the feedback path and C103, not having time to accumulate a charge, functions as a short circuit. With an input of + 1 Vdc applied to the Panel Meter, the voltage at the input of integrator U101A is approximately + 0.1 Vdc. This is due to the input divider consisting of R101 and R102. At the first instant when Q107 closes, capacitor C104 acts as a short circuit, making the gain of U101A equal to one. The output of U101A and the voltage at the junction of C104 and R105 then immediately jumps to +0.1 Vdc. As C104 charges, the output of U101A rises to maintain + 0.1 Vdc at the junction of C104 and R105. Since a negligible amount of current flows in the feedback path, the current flowing through R105 is equal to the charge current flowing into C104. As long as the voltage drop across R105 is held constant, the current is constant and C104 charges at a linear rate. With an input of + 1 Vdc applied to the Panel Meter, C104 will charge to approximately 3 volts during the 33 ms charge period.

4-78. Note that integrator capacitor C104 is connected between the differential inputs of the zero-detect comparator. The zero-detect comparator functions as a X1000 amplifier and is used to detect the presence of a charge on C104. Due to the high gain of the comparator, even a slight charge on C104 will cause it to saturate in a positive or negative direction depending on the input polarity. The

Table 4-5. Panel Meter Switching Logic.

INSTRUCTION	Ω107	Q108	Q109	Q110	Q111	Q112	Q113
Charge	1	0	0	0	0	0	0
Discharge +	0	1	0	0	0	0	0
Discharge -	0	0	1	0	0	0	0
Measure*	0	0	0	0	0	1	0
Auto Zero **	0	0	0	1	1	0	1

(1 = closed; 0 = open)

^{*} The Measure instruction is given along with a Charge or Discharge

^{**} The Auto Zero instruction is given in the absence of a Charge or Discharge instruction.

Model 3575 A Section IV

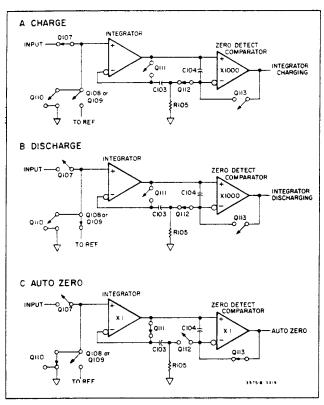


Figure 4-13. Analog Circuit.

output of the zero-detect comparator is applied to the level translator/inverter, Q211. The primary purpose of Q211 is to convert the level from the output of the comparator to a level that is compatible with the TTL logic used in succeeding stages. When the integrator capacitor is charged in a positive direction, the output of the zero-detect comparator goes positive, Q211 is gated on and the collector of Q211 drops to approximately + 0.2 Vdc. When the integrator capacitor is charged in a negative direction, the output of the comparator goes negative, Q211 is gated off and its collector rises to + 5 Vdc. The output of Q211 is applied to the pulse generator (U507C) and to the polarity flip-flop in the Counter/Display section.

4-79. At the end of the 33 msec charge period, a discharge instruction is given and the integrator discharges toward a reference voltage for 66 msec (Figure 4-13B). If the input voltage is positive, the Discharge (-) instruction is given. This closes FET switch Q109, placing a negative reference voltage at the input of the integrator. If the input voltage is negative, the Discharge (+) instruction is given. This closes FET switch Q108, placing a positive reference voltage at the input of the integrator. The positive or negative reference voltage at the input of the integrator causes integrator capacitor C104 to discharge. Due to the feedback configuration, the discharge rate of C104 is constant and the slope is linear. If the input voltage is ± 1.999 Vdc or less, capacitor C104 will discharge to zero volts before the discharge period is over. When C104 discharges through zero volts, the output of the zero-detect comparator changes polarity, producing a low-to-high or high-to-low

transition on the collector of Q211. This transition is sensed by the pulse generator which, in turn, produces a 1 μ sec, negative-going Transfer pulse which is applied to the Counter/Display section.

- 4-80. At the end of the 66 msec discharge period, the Auto Zero instruction is given for the remainder of the measurement cycle. When the Auto Zero instruction is applied, three things take place within the Analog section (Figure 4-13C):
- a. The Measure instruction is removed, causing FET switch Q112 to open.
- b. FET switch Q110 closes. This grounds the input of the integrator.
- c. FET switches Q111 and Q113 close. This transforms the integrator and the zero-detect comparator into unity gain (X1) amplifiers.
- 4-81. With the input of the integrator grounded and the two circuits set for unity gain, the integrator output and the zero-detect comparator output should, in theory, be zero volts. In actual operation, however, both circuits introduce a slight amount of offset which could affect the accuracy of measurements. If the offsets were fixed, they could simply be calibrated out during the accuracy adjustments. Due to circuit aging and varying environmental conditions, however, the offsets change and frequent adjustments would be required to counteract them. A more convenient method, then, is to automatically cancel the offsets during each measurement cycle. This is accomplished by the Auto Zero mode.
- 4-82. In a unity gain amplifier, the offset voltage is simply the difference of potential that exists between the input and the output. In the case of the integrator, the input is at ground and the offset potential is between the output and ground. Since capacitor C103 (in series with R105) is connected between the output and ground, it charges to the integrator offset voltage. Capacitor C104 is connected between the two inputs of the zero-detect comparator. Since the output of the comparator is connected directly to the inverting input through FET switch Q113, C104 charges to the difference between the non-inverting input and the output which is the offset voltage. During the course of a measurement, the charges placed on C103 and C104 in the Auto Zero mode, cancel the offsets introduced by the integrator and zero-detect comparator, thereby zeroing the analog circuits.
- 4-83. Counter/Display Section. The Counter/Display section consists of a 30 kHz clock oscillator (U401), three decade counters (U302-U304), three decade display modules (U415-U417), an overrange flip-flop (U212B), a polarity flip-flop (U212A) and an overrange/polarity display module (U414). The 30 kHz clock oscillator continuously feeds pulses into the first decade counter, U302. Counter U302 counts from 0 through 9 and, on the tenth clock pulse, resets to 0 and passes a "carry pulse" to the

Section IV Model 3575A

next decade counter, U303, Similarly, U303 counts from 0 to 9 and on the 100th clock pulse, resets to 0 and passes a carry pulse to the next decade counter, U304. Counter U304, in turn, counts from 0 to 9 and, on the 1000th clock pulse, resets to 0 and passes a carry pulse to the instruction counter (U505) in the Digital Controller section. The three counters, therefore, continuously count from 000 to 999. reset to 000 and increment the instruction counter. The 8-4-2-1 BCD output from each decade counter is applied to a decade display module. The decade display modules ignore the BCD inputs until they receive a Transfer pulse from the Analog section. Upon receipt of a Transfer pulse, the BCD code at the output of each decade counter is transferred to the associated display module where it is converted to decimal form and displayed until another Transfer pulse is received.

4-84. As previously indicated, the 66 msec discharge period is divided into two discharge periods each lasting 33 msec or 1,000 clock pulses. During the first half of the discharge period, the counters increment from 000 to 999 and are then reset to 000 on the 1,000th clock pulse. If the input voltage is ± 0.999 Vdc or less, the transfer pulse will occur during the first discharge period and the number transferred to the display will be within the range of 000 to 999. If the input voltage is between 1.000 Vdc and 1.999 Vdc, the transfer pulse will occur during the second half of the discharge period and again, the number transferred to the display will be between 000 and 999. In this case, however, the overrange ("1") indicator will be illuminated, yielding a corresponding display of 1000 to 1999. The information needed to light the overrange indicator is simply that a Transfer pulse has occurred during the second half of the discharge period. To obtain this information, the Discharge 2 instruction (L Discharge 2) from the Digital Controller section is applied to the "D" input of the overrange flip-flop (U212B) and the Transfer pulse is applied to the "Clock" input of the overrange flip-flop. When a transfer pulse occurs, the state of the "D" input is transferred to the "Q" output. During the first half of the discharge period, the "D" input is high and, if a Transfer pulse occurs, the "Q" output goes high and the overrange indicator does not light. During the second half of the discharge period, the "D" input is low and, if a Transfer pulse occurs, the "Q" output goes low causing the overrange indicator to illuminate.

4-85. To complete the display, the polarity information from the Analog section must be transferred to the polarity flip-flop (U212A) to light the + or - polarity sign. The polarity of the input voltage is indicated by a logic output from the level translator/inverter (Q211) in the Analog section. This output is labeled "Auto Polarity" and is connected to the "D" input of the polarity flip-flop, U212A. The "Clock" input of the polarity flip-flop is connected to the L Charge instruction line form the Digital Controller section. The L Charge line is low during the charge period. At the end of the charge period, the L Charge line goes high and the polarity information at the "D" input of the polarity flip-flop is transferred to the "Q" output. If the input polarity is positive, the "D" input will

be low, the "O" output will go low and the "Q" output will go high. Conversely, if the input polarity is negative, the "D" input will be high, the "Q" output will go high and the "Q" output will go low. Since the horizontal segment of the polarity sign is permanently grounded (R505) and is always illuminated, it is only necessary to light the vertical segment to obtain a + sign. If the input polarity is positive, the "Q" output of the polarity flip-flop goes high causing the output of inverter/driver Q502 to go low and the vertical segment to illuminate. Note that the "Q" and "Q" outputs from the polarity flip-flop are applied to the Decoder/Driver section. In the Decoder/Driver section, these outputs are used in conjunction with the Discharge instruction from the Digital Controller to produce the Discharge (+) or Discharge (-) instruction that is applied to the Analog section during the discharge period.

4-86. Digital Controller Section. The Digital Controller is a simple algorithmic state machine (ASM) which provides sequential instructions that are used to control the measurement process in the Digital Panel Meter. The Digital Controller section is comprised of a presettable binary instruction counter (U505), a four-line to ten-line decoder (U506) and associated logic circuitry. As previously indicated, the decade counters in the Counter/Display section continuously count from 000 to 999 and, on the 1,000th clock pulse, reset to 000 and pass a carry pulse to the instruction counter, U505. Each state of the instruction counter, therefore, lasts for 1,000 clock pulses or 33 msec.

4-87. The instruction counter is a fully synchronous 4-bit binary counter which can be preset to any number between 0000 (0) and 1111 (15). The instruction counter has four 8-4-2-1 binary-coded output lines, four 8-4-2-1 binarycoded input lines, a "Load" input line, a "Clear" input line and a "Clock" input line. All input and output lines except (L) Load and (L) Clear use positive true logic. Since the instruction counter is fully synchronous, the input lines have no effect until after a clock pulse is received. For example, when the Clear input line is low, the counter resets to 0000 (LLLL) after the next clock pulse. Similarly, when the Load input is low, the information on the four data input lines is transferred to the four output lines after the next clock pulse. Note that the "8" data input line is permanently grounded and is always a logical zero while the states of the "1", "2" and "4" data input lines are determined by the condition of the "Hold" line which is an external input to the Panel Meter. When the Hold line is high (no hold), the input code is equal to 4. When the Hold line is low, the input code is equal to 3. When the Load input line is low, the counter will, therefore, go to state 3 if a hold is applied and to state 4 if a hold is not applied.

4-88. The four 8-4-2-1 binary-coded output lines from the instruction counter are applied to a four-line to ten-line decoder, U506. The decoder converts the 4-bit input code into low true, mutually exclusive outputs which serve as instruction lines. Although ten lines are available at the output of the decoder, only four lines are actually used. These lines are Charge (State 0), Discharge 1 (State 1),

Model 3575A Section IV

Discharge 2 (State 2) and Hold (State 3). The first three output lines, Charge, Discharge 1 and Discharge 2 are applied to NAND gate U510B. When all of these lines are high (not Charge, not Discharge), the output of U510B is low supplying the (L) Auto Zero instruction. The Auto Zero instruction is, therefore, always given in the absence of a Charge or Discharge instruction. The two discharge instructions, Discharge 1 and Discharge 2, are applied to Exclusive OR gate U507A. When either of the Discharge lines is low, the output of U507A is high, supplying the (H) Discharge instruction which is applied to the Decoder/Driver section. Since the Discharge 1 and Discharge 2 instructions each last for 33 msec, the (H) Discharge instruction lasts for 66 msec.

4-89. Figure 4-14 is a flow diagram showing the instruction sequence for the Digital Controller. Remember that each state of the controller lasts for 1,000 clock pulses or 33 msec. At the beginning of a measurement, the instruction counter is in State 0 and the Charge instruction is given. After 1,000 clock pulses, the counter is incremented to State 1 (Discharge 1) and, after 2,000 clock pulses, the counter is incremented to State 2 (Discharge 2). Note that the (L) Discharge 2 line is connected to one input of U208B which functions as a negative OR gate. When either input to U208B is low, the output is low making the Load input to the instruction counter low. Thus, in State 2 the next state of the instruction counter is determined by the state of the "Hold" input line. If the Hold line is low, the counter will go to State 3 (Hold) after the next clock pulse. If the Hold line is high, the counter will jump to State 4. First, consider the case where the Hold line is low and the counter goes to State 3. The Hold output (State 3) of U506 is applied to the remaining input of U208B making the Load input to the instruction counter low. This again means that the next state of the instruction counter is determined by the condition of the Hold input line. As long as the Hold input line is held low, the instruction counter will remain in State 3 and measurements will be inhibited until an external trigger is applied. When ground is applied to the external "Trigger" line, a trigger pulse is generated causing the "O" output of the trigger flip-flop (U213A) to go high. This, in turn, causes the output of NAND gate U509B to go low, applying a low to the Clear input of the instruction counter. The Clear input line overrides the other input lines and the instruction counter will reset to State 0 on the next clock pulse. If the Hold line remains low, a new reading will be taken and the instruction counter will again stop when it reaches State 3. If the Hold line is high, the instruction counter will jump from State 2 to State 4. In State 4, the Digital Controller checks the condition of sample rate select line SR1. If SR1 is high, the instruction counter resets to State 0 on the next clock pulse. If SR1 is low, the instruction counter continues to increment until it reaches State 8. In State 8, the Controller checks the condition of sample rate select line SR2. If SR2 is high, the instruction counter resets to State 0 and begins a new measurement. If SR2 is low, the counter continues to increment to State 15 and then automatically resets to State 0. In the 3575A, SR1 is permanently grounded and SR2 is always high. The measurement cycle, therefore, lasts

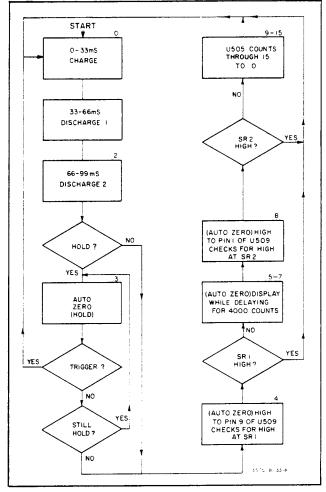


Figure 4-14. Digital Controller Flow Chart.

for approximately 264 msec making the sample rate approximately 4 per second. The "Hold" and "Trigger" lines are used only in 3575A Options 002 and 003 which are equipped for remote control operation. When Remote operation is selected, the Hold line is pulled low and an external trigger must be applied to initiate a measurement.

4-90. Decoder/Driver Section. The Decoder/Driver section is comprised of five individual circuits which receive instructions from the Digital Controller and, in turn, provide the output levels required to control the various FET switches in the Analog section.

4-91. The three circuits consisting of Q201/Q202, Q207/Q208 and Q209/Q210, provide the respective (H) Charge, (H) Auto Zero and (H) Measure instructions which control FET switches Q107 and Q110 through Q113. The two remaining circuits (Q203/Q204 and Q205/Q206) provide the (H) Discharge + and (H) Discharge - instructions which control FET switches Q109 and Q108, respectively. These two circuits are controlled by AND gates U208A and U208D which receive the (H) Discharge instruction from the Digital Controller and the (H) Pos. and (H) Neg. polarity indications from the polarity flip-flop, U212A.

Section IV Model 3575A

4-92. Additional Circuits. Two additional circuits not previously mentioned in the functional description include the blanking circuit and the reference supplies. In addition, there are several outputs from the Panel Meter that are used in 3575A Options 002 and 003 that should be noted. Refer to Schematic No. 7 for the following discussions.

4-93. Blanking Circuit (U213B, U510A, Q402). The last three digits of the display (U405-U417), receive their positive supply voltage (+5 Vdc, Vcc) through pass transistor Q402. When Q402 is conducting, the display is illuminated; when Q402 is cut off, the display is blanked. Pass transistor Q402 is controlled by NAND gate U510A which, in turn, is controlled by two input lines. One input line connects to the "Q" output of the overload flip-flop U213B and the other input line connects to the external "Digit Blank" input (pin 29) of the Panel Meter. When either of these lines is low, the output of U510A goes high, Q402 is cut off and the display is blanked. The "Digit Blank" input line is connected to the "Overload" output (pin B) of the Function Switching Assembly, A8 (Schematic No. 5). This line goes low when either channel is overloaded and will, therefore, cause the display to blank during an overload condition. Another condition that will cause the display to blank is if the voltage applied to the Panel Meter is greater than ± 1.999 Vdc. (This does not normally occur in the 3575A.) If the input to the Panel Meter is greater than ± 1.999 Vdc, a Transfer pulse will not occur during the discharge period. If a Transfer pulse has not occurred, the output of Exclusive OR gate U507B and the "D" input of U213B will be high at the end of the discharge period when U213B is clocked by a positive transistion on the L Discharge line. The high at the "D" input will then be transferred to the "Q" output, the "Q" output will go low and the display will blank.

4-94. Reference Supplies. The reference supplies (shown in the upper right-hand portion of Schematic No. 7) are Zener-regulated power supplies that furnish the positive and negative reference voltages that are applied to the input of the integrator during the discharge period. Both of the reference supplies are adjustable, allowing the Panel Meter to be set for optimum accuracy with both positive and negative input voltages.

4-95. Output Lines. In the lower right-hand portion of Schematic No. 7, there are four outputs from the Panel Meter that are used in 3575A Options 002 and 003 to obtain parallel BCD outputs. These lines are Auto Polarity, Gated Clock, Reset and Flag. The Auto Polarity output connects to the (H) Pos. output of the polarity flip-flop, U212A. This line goes high if the input polarity is positive and low if the input polarity is negative. The Gated Clock output supplies clock pulses from the start of the discharge period until the Transfer pulse occurs. The number of pulses delivered during this period is equal to the Panel Meter reading. For example if the reading is 90.0 degrees, 900 output pulses will be delivered. When pulses are not being transmitted, the Gated Clock output is high. The Reset output connects directly to the (L) Charge instruction line from the output of U506. This line goes low when

the instruction counter resets to State 0 at the beginning of a measurement and remains low during the charge period. The Flag output connects directly to the (L) Auto Zero instruction line from the output of U510B. This line is high during the charge and discharge periods and is low during the rest of the measurement cycle. Refer to Paragraph 4-99 for a description of how these lines are used to generate the BCD outputs.

4-96. Interface Assembly (A16B Schematic No. 9).

4-97. The Interface Assembly (A16B) is installed in place of the Interface Substitution Assembly (A16A) in instruments equipped with the remote programming and dual panel meter options (Options 002, 003). The purpose of the Interface Assembly is to provide the decoding, timing and switching logic required for the BCD outputs and remote controlled functions.

4-98. BCD Output Circuits. The BCD output circuitry shown on the left-hand side of Schematic No. 9 (IC1 through IC12) receives measurement data from the two panel meters and converts this data into parallel BCD outputs that are available at the rear panel Interface connector. The circuit in the upper portion of the schematic (IC2-IC4) converts the data from the right-hand (phase) panel meter, while the circuit in the lower portion of the schematic (IC5-IC7) converts the data from the left-hand (amplitude) panel meter. Since the two BCD output circuits are identical, the following description of the "phase" circuit applies to both circuits.

4-99. The BCD output circuit is comprised of three decade counters (IC2-IC4), an overrange flip-flop (IC1A) and associated logic circuitry. To begin a measurement, the Reset line (XA16 pin 2) from the panel meter goes low and remains low for 33 ms. This resets the decade counters to 000 and clears the overrange flip-flop. When the Reset line goes high, a series of pulses from the Gated Clock output of the panel meter are fed into the decade counters. Since the number of pulses is equal to the panel meter reading, the accumulated count at the end of the measurement cycle provides the required output data. If the count is greater than 999, counter IC2 passes a "carry" pulse to the overrange flip-flop which provides a single-line overrange indication. In 3575A Option 002, the high-true BCD outputs from the decade counters are applied to inverter gates (IC8, IC9) which provide low-true BCD outputs at the Interface connector. In Option 003 instruments, the inverter gates are replaced by non-inverting drivers which provide high-true BCD outputs at the Interface connector. Jumpers on the A16B board permit selection of high-true (P) or low-true (N) logic for the overrange and polarity output lines.

4-100. Controller Section. The controller section of the Interface Assembly is located in the upper right portion of Schematic No. 9. This section is comprised of two 4-bit multiplexers (IC13 and IC14) and a Local/Remote control circuit (IC17B, IC18B). Each multiplexer has eight inputs

Model 3575A Section IV

and four outputs. Four of the inputs to each multiplexer come from the front panel controls and four come from the rear panel Interface connector, J1. The output lines go to the Function Switching Assembly (A8), the Phase Control Filter (A7), the Log Converter (A3/A4) and the Input Attenuators (A1/A2) to control the instrument functions. The multiplexers operate like 4-pole, double-throw switches where the four output lines are connected to either the front panel controls (Local) or the remote control lines (Remote). Switching is accomplished by applying a logical "1" (+5 V) or "0" (0 V) to IC13, IC14 pin 9 which connects to the Local/Remote line through NAND gate IC17B. With no input to the Local/Remote line or when local control is programmed by an external controller, the line is held positive causing the output of IC17B to go low. This disables the remote inputs to IC13 and IC14 and enables the inputs from the front panel controls. When ground is applied to the Local/Remote line, the output of IC17B goes high and control is transferred to the remote control lines. The eight remote control lines use ground true logic and are normally held in a "0" (False) condition by the pull-up resistors within R5.

4-101. Note that the local/remote line from the output of IC17B is also connected to a buffer/inverter stage, IC18B. When ground is applied to the Local/Remote line (Remote Control), the output of IC18B goes low supplying a "hold" to the panel meters. In the panel meters, the "hold" command disables the internal sampling and thereby inhibits measurements. In order to obtain meter readings or BCD outputs, it is then necessary to use external triggering. External triggering is accomplished by grounding the Remote/Measure line (J1 pin 21) which controls the timing circuits discussed in the following paragraphs. In some cases, it is desirable to use external triggering and, at the same time, control the instrument from the front panel. To accomplish this, a jumper is provided at the output of IC17B. When the jumper is connected between terminals 1

and 3 (gnd), the front panel controls remain operative and the remote lines that control front panel functions are disabled.

4-102. Timing Circuits. In the Remote Control mode, it is necessary to trigger the panel meters by applying a momentary ground to the Remote Measure line each time a meter reading or BCD output is required. Grounding the Remote Measure line sets the data flag and initiates a variable time delay which, in turn, triggers the panel meters and initiates the measurement cycle.

4-103. The external trigger and flag timing circuit is shown in the lower right-hand portion of Schematic No. 9 and in the Timing Circuits Functional Block Diagram, Figure 4-15. Refer to Figure 4-15 for the following discussion.

4-104. The timing circuits are comprised of a Trigger Flip Flop, A Flag Flip Flop, a Variable Delay, a 40 ms Delay and associated logic circuitry. Before the timing circuits can operate, remote operation must be selected by grounding the Local/Remote line. This disables the internal sampling in the panel meters and enables the timing circuits. With the Local/Remote line grounded, it is further necessary to momentarily ground the Remote Measure line to initiate the timing sequence and trigger the panel meters. Grounding the Remote Measure line causes the output of IC16A to go high. This, in turn, initiates the Variable Time Delay and sets the Flag Flip Flop. Note that the two flip flops are set and reset by a low (0) rather than a high (1). This is the reason for the inverter between the output of IC16A and the "set" side of the Flag Flip Flop. When a "set" command is applied to the Flag Flip Flop, the + Data Flag line goes low and the - Data Flag line goes high. Since the + Flag line (Q) is fed back to the input of IC16A, the output of IC16A remains high until the Flag Flip Flop is reset. The Variable Delay is initiated by a Logical 1 at the output of IC16A and controlled by the two frequency

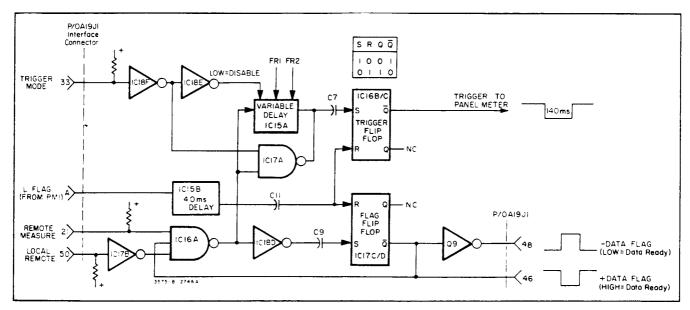


Figure 4-15. Timing Circuits Functional Block Diagram.

Section IV Model 3575A

range lines, FR1 and FR2. Delay time is determined by the frequency range setting as indicated in Table 4-6. At the end of the delay period, the output of the Variable Delay circuit goes low applying a "set" command to the Trigger Flip-Flop. When "set", the \overline{Q} side of the Trigger Flip-Flop goes low to trigger the panel meters. When the panel meters are triggered, the (L) Flag input from Panel Meter 1 goes high and remains high during the 100 ms measurement period. When the measurement is complete, the Flag line goes low, initiating the 40 ms time delay. When the 40 ms delay has elapsed, the output of the delay circuit goes low, applying a "reset" command to both flip-flops. This causes the panel meter Trigger line and the + Data Flag line to go high and the - Data Flag line to go low. Resetting the data flags indicates to an external controller that data is ready at the BCD outputs.

4-105. The purpose of the Variable Delay in the timing circuit is to ensure that the instrument has been given sufficient settling time before the data flags are returned. Since the actual settling time of the instrument is often less

Table 4-6. Variable Time Delays.

Frequency	Variable
Range	Delay
1 Hz - 1 kHz	33 sec.
10 Hz - 100 kHz	3.3 sec.
100 Hz - 1 MHz	0.42 sec.
1 kHz - 13 MHz	0.02 sec.

than the time provided by the Variable Delay circuit, the user may find it convenient to bypass the Variable Delay. This can be accomplished by applying a continuous ground to the Trigger Mode line. Grounding the Trigger Mode line disables the Variable Delay circuit and enables IC17A. When a momentary ground is applied to the Remote Measure line, the output of IC16A goes high, the output of IC17A goes low and the two flip-flops are set simultaneously. At the end of the 140 ms measurement cycle, both flip-flops are reset, the Trigger line goes high and the data flags are returned to their original states.

5-19. ADJUSTMENT PROCEDURES.

5-20. This portion of Section V contains complete adjustment procedures for the Model 3575A Gain-Phase Meter. Included are power supply adjustments (Paragraph 5-25), Panel Meter Adjustments (Paragraph 5-29), Output Filter Zero Adjustments (Paragraph 5-33), Phase Detector Zero Adjustment (Paragraph 5-35), Current Source and Current Sink Adjustments (Paragraph 5-37), Amplitude Offset Adjustment (Paragraph 5-39), Log Amplifier (amplitude accuracy) Adjustments (Paragraph 5-41), Input Attenuator Adjustments (Paragraph 5-43) and High Frequency Phase Adjustments (Paragraph 5-45).

5-21. Test Equipment.

5-22. The test equipment required for the adjustments is listed in Table 5-1 and at the beginning of each adjustment procedure. If the recommended model is not available, any instrument that has specifications equal to or better than the required specifications can be used.

5-23. Test Point and Adjustment Location.

5-24. Test point and adjustment locations are shown in Figures 5-6 (top view) and 5-7 (panel meter). Figures 5-6 and 5-7 are located on a single fold-out at the end of Section V. All measurement points are either at the Analog Ouptuts or at designated pins of A7P1. Test connector A7P1 is a male PC connector located at the top of the Phase Control Filter Assembly, A7. For convenience when making test connections to A7P1, connect a 2X22-Pin female PC connector (-hp- Part No. 1251-1887) to A7P1 and use the pins of the female connector as test points. If the appropriate PC connector is not available, use the 2X22-Pin PC extender (-hp- 5060-5989) supplied with the instrument. All test measurements should be made with respect to circuit ground which is available at A7P1 pin X or at any point on the instrument chassis. All adjustments are easily accessible with the top cover of the instrument removed. It is not necessary to use PC extenders or remove any of the PC assemblies except when performing the Panel Meter Adjustments, Paragraphs 5-35 through 5-38.

5-25. + 12 V Reference Adjustment.

5-26. This adjustment sets the level of the + 12 Vdc power supply which serves as a reference for the other regulated supplies in the instrument.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A)

- a. Connect DC Digital Voltmeter to A7P1 pin 6.
- b. Adjust A14R6 for $+12 \text{ V} \pm 3 \text{ mVdc}$.

5-27. Power Supply Voltage Checks.

5-28. The purpose of these checks is to verify that the non-adjustable power supply voltages are within design

tolerances. If any of the voltages are out of tolerance, refer to the Power Supply Troubleshooting procedure (Paragraph 5-84).

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A)

a. Measure the dc voltage at each test point listed in Table 5-4. At each test point, the dc voltage should be within the tolerance listed in the table.

Table 5-4. Power Supply Checks.

Test Point	Supply	Tolerance
A7P1 Pin A A7P1 Pin B A7P1 Pin B A7P1 Pin 3 A7P1 Pin D A7P1 Pin 4 A7P1 Pin F A7P1 Pin Y A7P1 Pin 21	+ 2 V (on A3) + 2 V (on A4) + 3.8 V - 6 V (A) - 6 V (B) - 12 V - 5.3 V + 5 V	+ 1.985 V to + 2.015 V + 1.985 V to + 2.015 V + 3.700 V to + 3.900 V - 5.980 V to - 6.020 V - 5.980 V to - 6.020 V - 11.96 V to - 12.04 V - 5.200 V to - 5.400 V + 4.980 V to + 5.020 V

5-29. Panel Meter Adjustments (Standard Model 3575A).

NOTE

Options 001-003: Refer to Paragraph 5-31

5-30. The purpose of these adjustments is to set the dc accuracy of the Digital Panel Meter. Before proceeding with these adjustments, perform the Panel Meter Accuracy Check (Paragraph 5-9) to determine if adjustments are necessary.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A)

- a. Perform Steps a through i of the Panel Meter Removal procedure (Figure 5-5) to gain access to the panel meter adjustments.
 - b. Set the 3575A controls as follows:

- c. Connect DC Digital Voltmeter to ANALOG OUT-PUT 1.
 - d. Set A5S1 to CAL 1. Set A6S1 to CAL 2.
- e. Adjust A6R19 (Y ADJ) for a reading of +1.8050 V on the Digital Voltmeter.

- f. On the panel meter, adjust R212 (inside adjustment) for a panel meter reading that alternates between + 180.0 degrees and + 180.1 degrees.
 - g. Set A5S1 to CAL 2. Set A6S1 to CAL 1.
- h. Adjust A5R40 (P1 ADJ) for a reading of -1.8050 V on the Digital Voltmeter.
- i. On the panel meter, adjust R211 (outside adjustment) for a panel meter reading that alternates between 180.0 degrees and 180.1 degrees.
- j. This completes the panel meter adjustments. Reset A5S1 and A6S1 to NORMAL (4) and reassemble the instrument by reversing the procedure outlined in Figure 5-5. Perform the Output Filter Zero Adjustments (Paragraph 5-33), the Phase Detector Zero Adjustments (Paragraph 5-35) and the Current Source and Current Sink Adjustments (Paragraph 5-37) before using the 3575A in a phase measurement application.

5-31. Panel Meter Adjustments (Options 001-003).

5-32. The purpose of these adjustments is to set the dc accuracy of the panel meters. Before proceeding with these adjustments, perform the Panel Meter Accuracy Check (Paragraph 5-9) to determine if adjustments are necessary.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A)

NOTE

The following procedure outlines the steps required to adjust the right-hand (phase) panel meter. When the adjustments for the right-hand panel meter are completed, place the left-hand panel meter in the right-hand slot and repeat the procedure.

- a. Perform Steps a through i of the Panel Meter Removal procedure (Figure 5-5) to gain access to the panel meter adjustments.
 - b. Set the 3575A controls as follows:

- c. Connect DC Digital Voltmeter to ANALOG OUTPUT 2.
 - d. Set A5S1 to CAL 1. Set A6S1 to CAL 2.
- e. Adjust A6R19 (Y ADJ) for a reading of $\pm 1.8050~V$ on the Digital Voltmeter.

- f. On the right-hand panel meter, adjust R212 (inside adjustment) for a panel meter reading that alternates between + 180.0 degrees and + 180.1 degrees.
 - g. Set A5S1 to CAL 2. Set A6S1 to CAL 1.
- h. Adjust A5R40 (P1 ADJ) for a reading of -1.8050 V on the Digital Voltmeter.
- i. On the right-hand panel meter, adjust R211 (outside adjustment) for a panel meter reading that alternates between 180.0 degrees and 180.1 degrees.
- j. Place the left-hand panel meter in the right-hand slot and repeat Steps d through i. When adjustments are completed for both panel meters, reset A5SI and A6SI to NORMAL (4), install the panel meters in their original slots and reassemble the instrument by reversing the procedure outlined in Figure 5-5. Perform the Output Filter Zero Adjustments (Paragraph 5-33), the Phase Detector Zero Adjustment (Paragraph 5-35) and the Current Source and Current Sink Adjustments (Paragraph 5-37) before using the 3575A in a phase measurement application.

5-33. Output Filter Zero Adjustments.

5-34. These adjustments null out any dc offsets introduced by the Output Filters, A9 and A10 (A10 is in Options 001-003 only).

RECOMMENDED TEST EQUIPMENT:

DC Voltmeter (-hp- Model 412A)

- a. Connect DC Voltmeter to ANALOG OUTPUT 1.
- b. Set the 3575A controls as follows:

- * Options 001-003: Set the AMPLITUDE B/PHASE switch to PHASE.
- c. Set A5S1 and A6S1 to CAL 1.
- d. Connect a short clip lead between A9TP1 and A9TP2. This grounds the input to the filter.
- e. Adjust A9R27 for 0 V $\pm\,0.05\,mVdc$ at Analog Output 1.
- f. Remove the clip lead. Leave A5S1 and A6S1 set to CAL I for the following procedure.
- g. Options 001-003: Perform the following additional steps:

- h. Connect DC Voltmeter to ANALOG OUTPUT 2.
- i. Connect a short clip lead between A10TP1 and A10TP2.
- j. Adjust A10R27 for $0 V \pm 0.05 \text{ mVdc}$ at Analog Output 2.
- k. Remove the clip lead. Leave A5SI and A6SI set to CAL I for the following procedure.

5-35. Phase Detector Zero Adjustment.

5-36. This adjustment nulls out any dc offset introduced by the Buffer/Integrator in the Phase Detector.

RECOMMENDED TEST EQUIPMENT:

DC Voltmeter (-hp- Model 412A)

- a. Connect DC Voltmeter to ANALOG OUTPUT 1.*
- * Options 001-003: Connect DC Voltmeter to ANALOG OUTPUT 2. Set the AMPLITUDE B/PHASE switch to PHASE.
 - b. Set the 3575A controls as follows:

DISPLAY	PHASE
Voltage Range	0.2 mV - 2 V
	(both channels)
FREQUENCY RANGE	.10 Hz - 100 kHz
PHASE REFERENCE.	A

- c. Set A5S1 and A6S1 to CAL 1.
- d. Adjust A5R31 (ZERO ADJ) for 0 V \pm 0.1 mVdc at the Analog Output.
- e. Leave A5S1 and A6S1 set to CAL 1 for the following procedure.

5-37. Current Source and Current Sink Adjustments.

5-38. These adjustments set the P1 and P2 Current Sources and the X and Y Current Sinks to produce the proper dc levels at the output of the Phase Detector. These are the primary phase accuracy adjustments in the instrument.

RECOMMENDED TEST EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A)

- a. Connect DC Digital Voltmeter to ANALOG OUT-PUT 1.*
- * Options 001-003: Connect DC Digital Voltmeter to ANALOG OUTPUT 2. Set the AMPLITUDE B/PHASE switch to PHASE.

b. Set the 3575A controls as follows:

DISPLAY	PHASE
Voltage Range	0.2 mV - 2 V
	(both channels)
FREQUENCY RANGE	.10 Hz - 100 kHz
PHASE REFERENCE.	A

- c. Set A5S1 to CAL 2. Set A6S1 to CAL 1.
- d. Adjust A5R40 (P1 ADJ) for -1.8 V \pm 0.1 mVdc at the Analog Output.
 - e. Leave A5S1 set to CAL 2. Set A6S1 to CAL 2.
- f. Adjust A6R19 (Y ADJ) for $0 \text{ V} \pm 0.1 \text{ mVdc}$ at the Analog Output.
 - g. Leave A5S1 set to CAL 2. Set A6S1 to CAL 3.
- h. Adjust A6R21 (X ADJ) for $0 V \pm 0.1 \text{ mVdc}$ at the Analog Output.
 - i. Leave A6S1 set to CAL 3. Set A5S1 to CAL 3.
- j. Adjust A5R39 (P2 ADJ) for $0 V \pm 0.1 \text{ mVdc}$ at the Analog Output.
 - k. Reset A5SI and A6SI to NORMAL (4).

5-39. Amplitude Offset Adjustment.

5-40. This adjustment sets the dc operating point of the Summing Amplifier in the Function Switching Assembly, A8.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)*
DC Digital Voltmeter (-hp- Model 3450A)
50-Ohm Feed-Thru Termination (-hp- Model 11048C)

- * A Test Oscillator such as the -hp- Model 651B can be used in place of the Frequency Synthesizer.
- a. Connect 50-ohm output of Frequency Synthesizer, terminated in 50-ohm load, to the Channel B input of the 3575A. Connect the DC Digital Voltmeter to A7P1 pin 2 (Options 001, 002: Connect DVM to ANALOG OUTPUT 2).
 - b. Set the 3575 A controls as follows:

DISPLAY*	AMPLITUDE
AMPLITUDE FUNCTION.	B
Voltage Range	0.2 mV - 2 V
(t	ooth channels)
FREQUENCY RANGE .10	Hz - 100 kHz

* Options 001-003: Set the AMPLITUDE B/PHASE switch to AMPLITUDE B.

- c. Set the Frequency Synthesizer amplitude to + 19.03 dBm (2 V rms/50 ohms) and frequency to 1 kHz.
 - d. Record the DVM reading: mVdc.
- e. Connect the DC Digital Voltmeter to ANALOG OUTPUT 1.
- f. Adjust A8R43 until the DVM indicates the value recorded in Step d \pm 0.2 mVdc.

5-41. Log Amplifier Adjustments.

5-42. These adjustments set the dc bias, gain and symmetry of the Log Amplifier and Synchronous Rectifier in each input channel. These are the primary amplitude accuracy adjustments in the instrument.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B)
DC Digital Voltmeter (-hp- Model 3450A)
Variable Attenuator (-hp- Model 355D)
50-Ohm Feed-Thru Termination (-hp- Model 11048C)

NOTE

The following procedure is performed first for channel B and then again for channel A. The channel B adjustments are located on the channel B Log Converter board, A4. The channel A adjustments are located on the channel A Log Converter board, A3.

- a. Connect the 50-ohm output of the Frequency Synthesizer to the input of the Variable Attenuator (no termination required). Connect the output of the Variable Attenuator, terminated in 50-ohm load, to the Channel B input of the 3575 A.
 - b. Set the 3575A controls as follows:

DISPLAY* AMPLITUDE
AMPLITUDE FUNCTION B
Voltage Range 0.2 mV - 2 V
(both channels)
FREQUENCY RANGE .10 Hz - 100 kHz
PHASE REFERENCE A

* Options 001-003: Set the AMPLITUDE B/PHASE switch to AMPLITUDE B.

- c. Set the Frequency Synthesizer amplitude to + 19.03 dBm (2 V rms/50 ohms) and frequency to 10 kHz.
 - d. Set the Variable Attenuator to 80 dB.
 - e. Connect DC Digital Voltmeter to A3/A4TP1.
- f. Adjust A1/A2 R40 (ZERO ADJ on A or B Preamp) for a DVM reading of 0 V \pm 0.1 Vdc.

- g. Connect DC Digital Voltmeter to A7P1 pin 22 (Channel B) or A7P1 pin 2 (Channel A).
- h. Adjust R18 (LOG BIAS ADJ) for a DVM reading of $0 \text{ V} \pm 0.2 \text{ mVdc}$.
- i. Connect DC Digital Voltmeter to ANALOG OUTPUT 1.
- j. Adjust R29 (AMPL SYM ADJ) until the absolute value of the voltage at Analog Output 1 is minimum e.g., -735 mVdc is less than -740 mVdc.
- k. Set the Variable Attenuator to 90 dB and repeat Step j.
 - 1. Set the Variable Attenuator to 70 dB.
 - m. Center R32 (LOG GAIN ADJ).
- n. Adjust R50 (LOG OFFSET ADJ) for -640 mV ± 0.5 mVdc at Analog Output 1.
 - o. Set the Variable Attenuator to 0 dB.
- p. Adjust R32 (LOG GAIN ADJ) for +60 mV ± 0.5 mVdc at Analog Output 1.
 - q. Reset the Variable Attenuator to 70 dB.
- r. Repeat Steps n through q until optimum adjustment is obtained.
- s. Connect the output of the Variable Attenuator, terminated in 50-ohm load, to the Channel A input of the 3575A.
- t. Set the 3575A AMPLITUDE FUNCTION switch to A.
- u. Repeat Steps c through r for channel A. The channel A adjustments are located on A3.

5-43. Input Attenuator Adjustments.

5-44. These adjustments compensate the input attenuators so that minimum phase shift is introduced by the attenuators on the 2 mV - 20 V range.

RECOMMENDED TEST EQUIPMENT:

Frequency Synthesizer (-hp- Model 3320B) Variable Attenuator (-hp- Model 355D)

(2) 50 Oh ... Food The ... Townshoot on

(2) 50-Ohm Feed-Thru Terminations (-hp- Model 11048C)

Power Splitter (See Figure 5-1)

- a. Connect test equipment as shown in Figure 5-2.
- b. Set the 3575 A controls as follows:

FREQUENCY RANGE .10 Hz - 100 kHz

Additional checks can be performed using the power supply data listed in Table 5-6. If any of the supply voltages are out of tolerance, troubleshoot the corresponding power supply or regulator circuit by checking for the dc voltages shown on the schematics.

NOTE

All of the regulators on A14 are directly or indirectly referenced to +12 Vdc. The +12 Vdc reference must, therefore, be properly adjusted to establish the accuracy of the other supply voltages. In addition, all of the IC regulators on A14 use +12 Vdc and -12 Vdc and a failure in either of these supplies can affect the other supply voltages.

5-87. No Load Checks. The Power Supply Assembly, A14, is equipped with separate input and output connectors to permit the supplies to be checked under no load conditions. The 2X10-pin connector on the left-hand side of A14 receives unregulated inputs from the raw supplies on A15. The 12-pin connector on the right-hand side of A14 outputs the regulated voltages from A14 to the main Mother Board Assembly, A17.

5-88. To check the supplies under no load conditions, proceed as follows:

- a. Place A14 on a 2X10-pin PC Extender (-hp-5060-5987). Leave the 12-pin output connector disconnected.
- b. Connect a short clip lead between chassis ground and pins 11 and 12 of the 12-pin connector on A14.
- c. Using a DC voltmeter, measure the regulated output voltages at pins 4 through 10 of the 12-pin connector on A14. The dc voltages should be as follows:

	Pin	Voltage
	4	+ 5 V ± 0.02 Vdc
	5	-5.3 V ± 0.1 Vdc
	6	- 6 V ± 0.02 Vdc
1	7	- 6 V ± 0.02 Vdc
	8	+ 3.8 V ± 0.1 Vdc
	9	- 12 V ± 0.04 Vdc
	10	+ 12 V + 3 mVdc *

* Adiustab

5-89. Troubleshooting the $+12\,V$ and $-12\,V$ Supplies. Due to the interaction between the $+12\,V$ and $-12\,V$ supplies, it is sometimes difficult to isolate failures in

these supplies. If difficulty is encountered, check suspected components with an ohmeter or transistor checker, replace A14IC1 and IC2 or isolate the trouble using an external dc source as outlined in the following procedure:

RECOMMENDED EQUIPMENT:

DC Digital Voltmeter (-hp- Model 3450A) ± 12 Vdc Variable Power Supply (-hp- Model 467A)


- a. Check to be sure that the raw supply voltages are present at XA14A pins 9 (+ 19 Vdc) and B (-19 Vdc).
 - b. Disconnect one end of A14R1.
- c. Place A14 on a 2X10 PC Extender (-hp- 5060-5987). Leave the 12-pin output connector disconnected.
- d. Connect a short clip lead between chassis ground and pins 11 and 12 of the 12-pin connector on A14.
- e. Connect the DC Digital Voltmeter to pin 9 of the 12-pin connector on A14.
- f. Apply + 12 Vdc from an external power supply to pin 10 of the 12-pin connector on A14.
- g. The DVM reading should now be -12 Vdc. If -12 Vdc is present, leave the external power supply connected and troubleshoot the +12 V regulator circuit by checking for the dc voltages shown on Schematic No. 8. If -12 Vdc is not present, perform the following steps.
- h. Disconnect the external power supply and reconnect A14R1. Disconnect one end of A14R8.
- i. Connect the DVM to pin 10 of the 12-pin connector on A14.
- j. Apply 12 Vdc from an external power supply to pin 9 of the 12-pin connector on A14.
- k. The DVM reading should now be +12 Vdc. If +12 Vdc is present, leave the external power supply connected and troubleshoot the -12 V regulator circuit by checking for the dc voltages shown on the schematics. If +12 Vdc is not present, there are failures in both regulator circuits.

Table 5-6. Power Supply Ratings.


Power Supply	Test Point	Voltage Limit	Ripple (p-p)	Line Regulation (115 V/230 V ± 10 %)	Nominal Load Current
+ 12 V *	A7P1 Pin 6	+ 11.997 V to + 12.003 V	1 mV	± 1 mV	180 mA
- 12 V	A7P1 Pin F	- 11.960 V to - 12.040 V	1 mV	± 1 mV	180 mA
- 6 V (A)	A7P1 Pin D	-5.980 V to -6.020 V	1 mV	± 0,1 mV	200 mA
-6 V (B)	A7P1 Pin 4	-5.980 V to -6.020 V	1 mV	± 0.1 mV	200 mA
+5 V	A7P1 Pin 21	+ 4.980 V to + 5.020 V	1 mV	± 0.1 mV	1 A **
-5.3 V	A7P1 Pin Y	-5.200 V to -5.400 V	1 mV	± 0.1 mV	350 mA
+ 3.8 V	A7P1 Pin 3	+ 3.700 V to + 3.900 V	3 mV	± 0.2 mV	300 mA

^{*} Adjustable (A14R6)

^{**} Load increases to 1.5 A in Option 001 instruments and to 2 A in Option 002, 003 instruments.

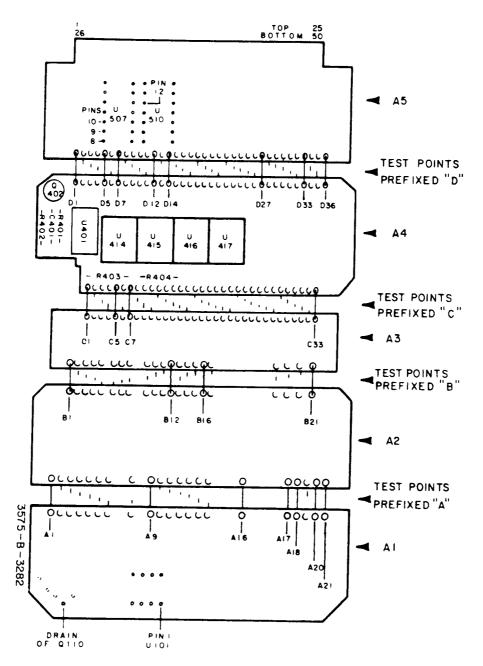

DIGITAL PANEL METER (A20 OR A23) -hp- PART NO. 5060-9132

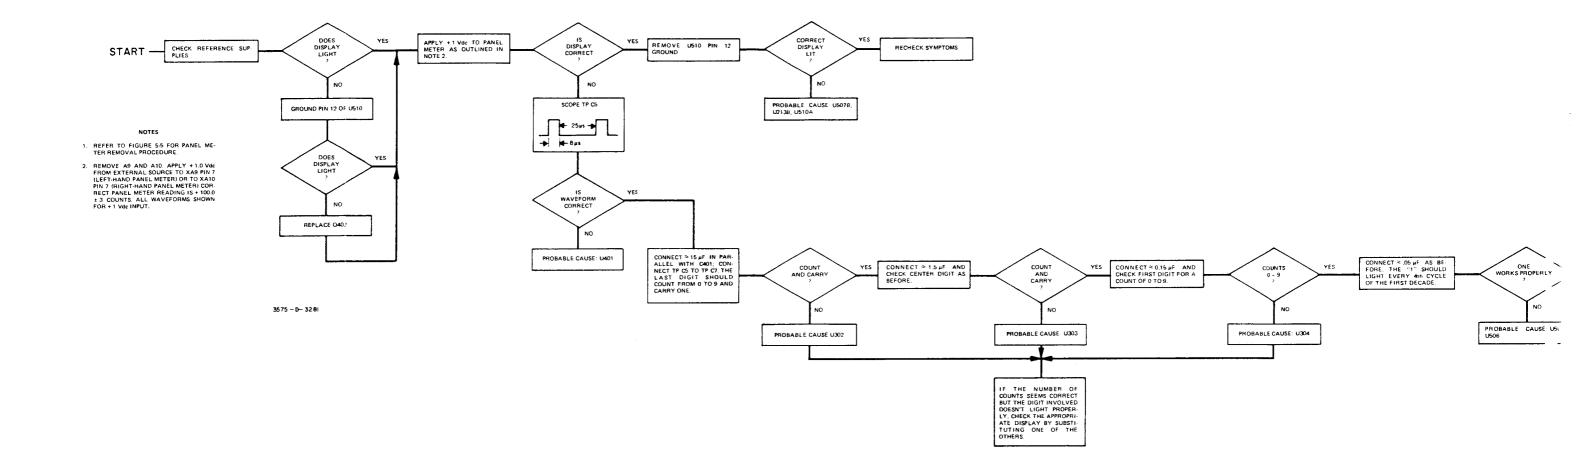

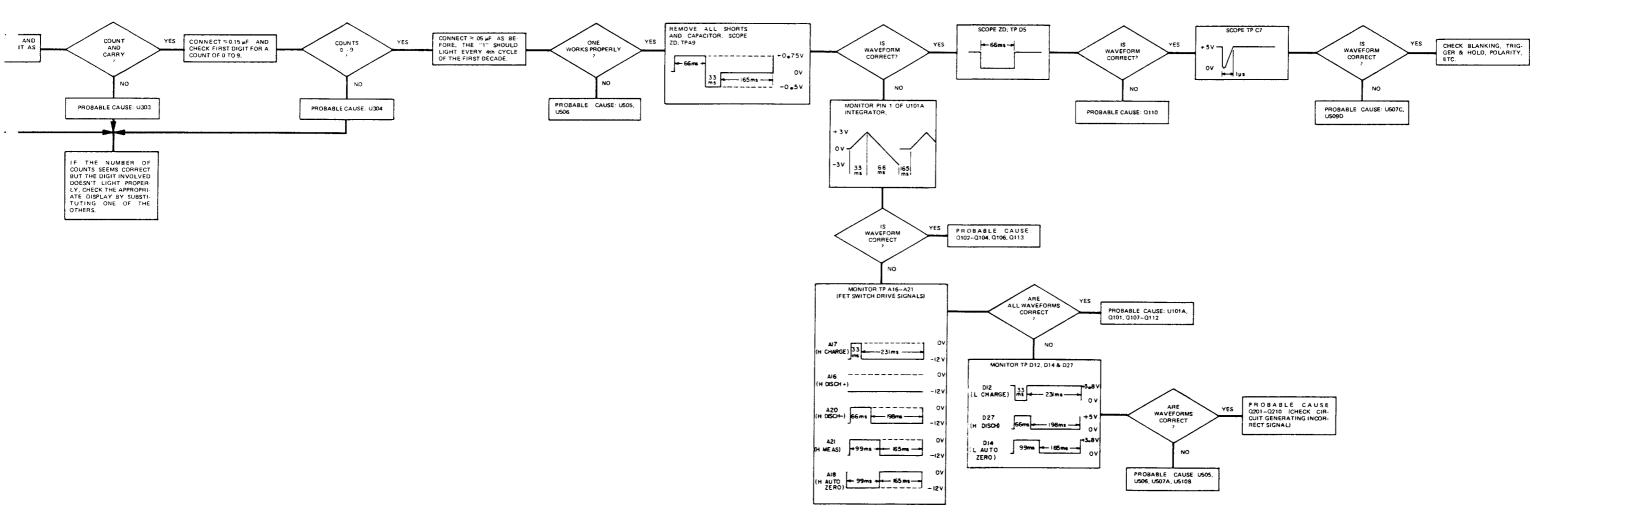


Figure 5-9. Digital Panel Meter Troubleshooting Tree.

C-51/C-52 5-25/5-26

(Ref. Change 4)


			•

Table 6-1. Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A20 C101 C102 C103, C104 C106—C400	5060-9132 0160-0170 0150-0046 0160-3826	1 1 2	PANEL METER C: FXD CER .22 UF 25 VDCW C: FXD .68 PF 500V C: FXD MET POLY .39 UF 10% 50 VDCW NOT ASSIGNED	28480 56289 78488 84411	5060-9132 5C98—CML TYPE GA HEW—249
C401 C402 THRU C500 C501, C502 C503	0140-0172 0150-0071 0150-0071	! ! !	C EXD MICA 3000 PF 1 NOT ASSIGNED C: FXD CER .01 U, .40 + 100 - 25 VDCW C: FXD CER .00 PF 1000 VDCW 5.	14655 14674 56289	obd CK12BX GMV C016B102E401JS274 DH
CR101 CR102 CR103 CR104 CR105	1902-0072 1910-0016 1901-0040 1902-0048 1901-0040	1 3 1	DIODE: BRKDN 7.67 v 5°. DIODE: GE 100MA/0.85V 60 PIV DIODE: SI 30WV 50MA 2 PF 2NS DIODE: BRKDN 6.81V 5°. DIODE: SI 30WV 50MA 2 PF 2NS	04713 93332 01295 04713 01295	SZ 10939-158 D2361 PG512 SZ10939-134 PG512
CR106 CR107 CR108 CR109 THRU CR200 CR201	1902-3149 1902-0686 1901-0040	f 1	NOT ASSIGNED DIODE: BRKDN 9.09V 5% DIODE: T.C.REF. 6.2V 2% NOT ASSIGNED DIODE: SI 30WV 50MA 2 PF 2NS	04713 04713 01295	SZ 10939-170 SZ 12170 obd
CR202	1901-0518	1	DIODE: HYBRID HOT CARRIER (2800)	28480	PG512 1901-0518
CR203	1902-3002	t	DIODE: BRKDN 2.37V 5%	04713	SZ 10939-2
DS1 THRU DS9	1990-0310 5040-5839	9	DIODE: VISIBLE LIGHT EMITTER HOUSING: ANNUNCIATOR	28480 28480	1990-0310 5040-5839
MP2	93575-24301	i	MASK: ANNUNCIATOR	28480	03575-24301
Q101, Q102 Q103 Q104 Q105	1855-0308 1853-0086 1854-0071	2 9	TRANS: SI PPN TRANS: SI PPP TRANS: SI NPN NOT ASSIGNED TRANS: SI NPN	17856 04713 04713	DN 324 SPS3322 SPS5103
Q106 Q107 Q108 Q109, Q110 Q111 Q112, Q113	1854-0071 1855-0081 1855-038c 1855-0081 1855-0377 1855-0386	3 3 1	TRANS: JEDEC TYPE 2N5245 TRANS: JEDEC TYPE 2N4392 TRANS: JEDEC TYPE 2N5245 TRANS: SI NPN TRANS: JEDEC TYPE 2N4392	04713 01295 012040 01295 17856 12049	SPS5103 obd obd obd FN2348 obd
Q114 THRU Q200 Q201 Q202 Q203 Q204	1853-0020 1854-0071 1853-0020 1854-0071	5	NOT ASSIGNED TRANS: SI PNP TRANS: SI NPN TRANS: SI NPN TRANS: SI PNP TRANS: SI NPN	04713 04713 04713 04713	SPS 3609 SPS 5103 SPS 3609 SPS 5103
Q205 Q206 Q207 Q208 Q209	1853-0020 1854-0071 1853-0020 1584-0071 1853-0020		TRANS: SI PNP TRANS: SI NPN TRANS: SI PNP TRANS: SI NPN TRANS: SI NPN TRANS: SI PNP	04713 04713 04713 04713 04713	SPS 3609 SPS 5103 SPS 3609 SPS 5103 SPS 3609
Q210 Q211—Q401	1854-0071	Ì	TRANS: SI NPN NOT ASSIGNED	04713	SPS 5103
Q402 Q403—Q500	1853-0093	,	TRANS: SI PNP NOT ASSIGNED	04713	\$\$8041
Q502	1854-0071	Ì	TRANS: SI NPN	04713	SPS 5103
R101 R102 R103, R104 R105 R106, R107	0698-8312 0698-8313 0698-3572 0698-4436 0698-3558	1 2 1 2 2	R: FXD FLM 499K OHM 1% R: FXD FLM 52.3K OHM 1% R: FXD FLM 60.4K OHM 1% R: FXD FLM 2.8K OHM 1% 1/8W R: FXD FLM 4.02K OHM 1% 1/8W	91637 91637 91637 14674 28480	CMF-55-1, T-2 CMF-55-1, T-2 CMF-1/10-32, T-1 C4 T-O obd 0698-3558
R108 R109 R110 R111 R112	0757-0418 0698-3495 0684-2221 0684-1231	1 1 1	R: FXD FLM 619 OHM 1% 1/8W R: FXD FLM 866 OHM 1% 1/8W R: FXD COMP 2200 OHM 10% 1/4W R: FXD COMP 12K OHM 10% 1/4W NOT ASSIGNED	14674 14674 01121 01121	C4 T-O obd C4 T-O obd CB 2221 CB 1231
R113 R114 R115 R116, R117 R118	0698-3122 0757-0417 0698-4486 0698-8316 0698-8314	1 1 1 2 2	R: FXD FLM 412 OHM 1% 1/8W R: FXD FLM 562 OHM 1% 1/8W R: FXD FLM 24.9K OHM 1% 1/8W R: FXD FLM 49.9K OHM 1.0% 1/8W R: FXD FLM 49.9K OHM 1.0% 1/8W	14674 14674 19701 91637 91637	C4 T-O obd C4 T-O obd MF4C T-O obd CMF-55-1 T-2 CMF-55-1 T-2
R119 R120 R121 R122 R123	0698-8315 0698-8314 0698-8315	2	NOT ASSIGNED R: FXD FLM 3.24K OHM 1% 1/8W R: FXD FLM 215K OHM 1% 1/8W NOT ASSIGNED R: FXD FLM 3.24K OHM 1% 1/8W	91637 91637 91637	CMF-55-1 T-2 CMF-55-1 T-2
R123	0698-4445	1	R: FXD FLM 5.76K OHM 1% 1/8W	14674	C4 T-O obd
R125 THRU R202 R203 R204 R205 THRU R209	1810-0135 1810-0155 0684-1031	1 1 5	NOT ASSIGNED R: NETWORK 0.125 W/PER R: NETWORK R: FXD COMP 10K OHM 10% 1/4W	56289 56289 01121	200C 200C CB 1031

Table 6.1 Replaceable Parts(Cont'd)

Reference Designation	HP Part Number	Oty	Description	Mfr Code	Mfr Part Number
R210 R211, R212	0684-4721 2100-2061	1 2	R TXD COMP 4790 OHM 10° 1 4W R VAR CER FLM 200 OHM 10° 1 2W	01121 80294	CB 4721 3329H-10-201
R213 THRU R400 R401 R402	0698-3160 0757-0468	1	NOT ASSIGNED R FXD FLM 31.6K OHM 17.178W R FXD FLM 130K OHM 17.178W	14674 14674	C4 T4O ohd MC55 T4I obd
R403 R404	0684-1011 0684-5611	1	R. FXD COMP 100 OHM 10% 1/4W R. FXD COMP 560 OHM 10% 1/4W	01121 01121	CB 1011 CB 5611
R405 THRU R500 R504 THRU R505 R506	0698-8318 0698-8317	5 1	NOT ASSIGNED R FXD FLM 150 OHM ,057 178W R: FXD FLM 3.9K OHM ,057 178W	80031 80031	MF4C T-2 obd MF4C T-2 obd
.101 .102.1HRU U207	1826-0111	ŀ	IC DUAL OP AMP SAME AS MC1458G NOT ASSIGNED	04713	SC25055GK obd
	1820-0273 1820-0077	1	IC. DIGITAL NOT ASSIGNED IC. EQUIV. 10: SN7474N	04713 01295	SC8166PK SN4354
(212, U213 (214 THRU U30)			NOT ASSIGNED		
/302 THRU U304 /305 THRU U400 /401 /402 THRU U413	1820-0055 1820-0207	.3 1	IC ITL HIGH SPD DECADE CNTR NOT ASSIGNED IC DIGITAL NOT ASSIGNED	01295 07263	\$N4356 \$1 12895
414 415 THRU U417	1990-0330	1 3	R. NUMERIC DISPLAY LED IC: NUMERIC DISPLAY LED	28480 28480	1990-0390 1990-0330
418 THRU U504 505	1820-0713 1820-0214	1	NOT ASSIGNED IC: DIGITAL TIL + LOGIC IC: TIL BCD TO DECIMAL DECODER	01295 01295	SN24744 SN9520
'506 '507	1820-0418		IC DIGITAL	04713	SC8169PK
1508 1509 1510 1511	1820-0094 1820-0068 1820-0328	1 1	NOL ASSIGNED IC: DTL QUAD 2-INPUT GATE IC: ITE TRIPLE 3-INPUT POSITIVE GATE IC: EQUIV TO SN7402N	04713 01295 01295	SC6903PK SN4343 SN4467
N21, A22 N23 HOPT 001 003 ONLY	5060-9132		NOT ASSIGNED DIGITAL PANEL METER	28480	5060-9132

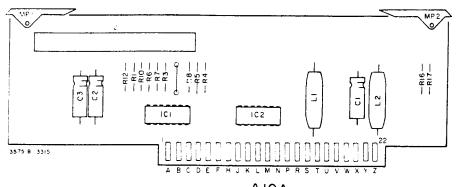


A12A hp Part No. 03575 -66530

CAUTION

Do not bend the wires (that connect the various parts of the digital panel meter) more than is necessary nor more often than is necessary. The digital panel meter was so designed that most of the test points are available at the front panel (prefixed "C" and "D") to minimize any necessity to flex the wires during troubleshooting.

After repair and calibration has been completed, gently and slowly refold the digital panel meter until it fits into its case.

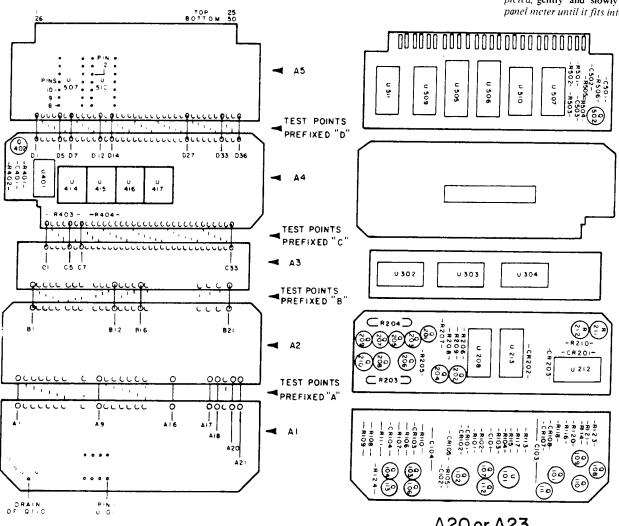


DIGITAL PANEL METER (A20 OR A23)

-hp- PART NO. 5060-9132

A20 or A23 hp Part No. 5060-9132



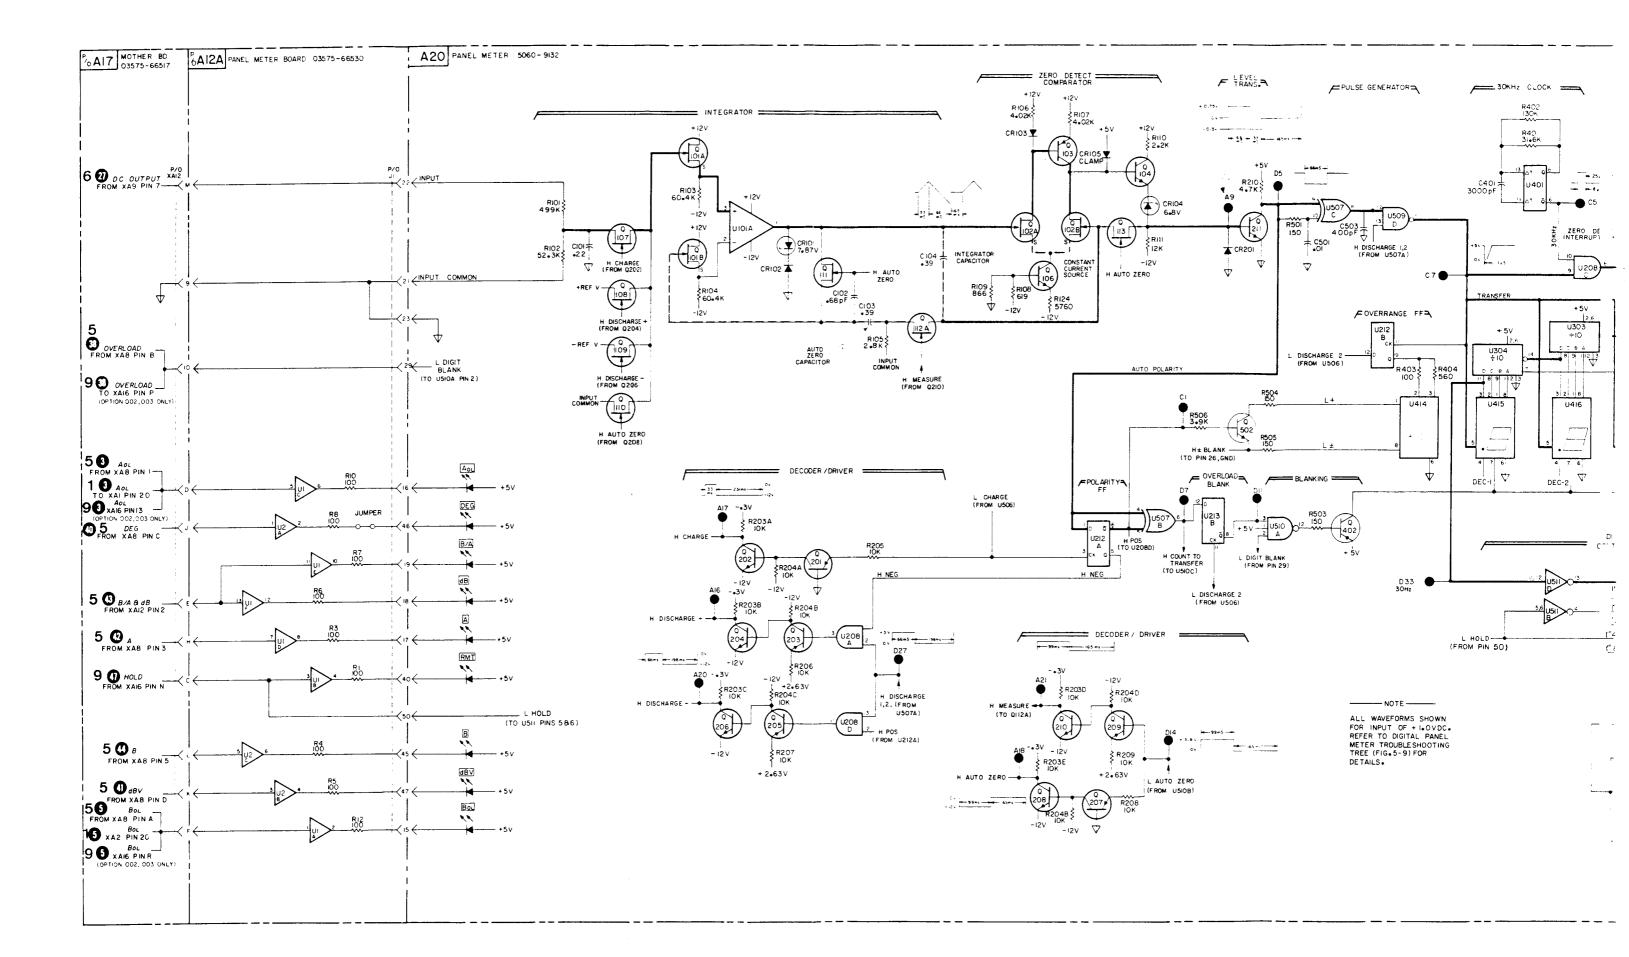


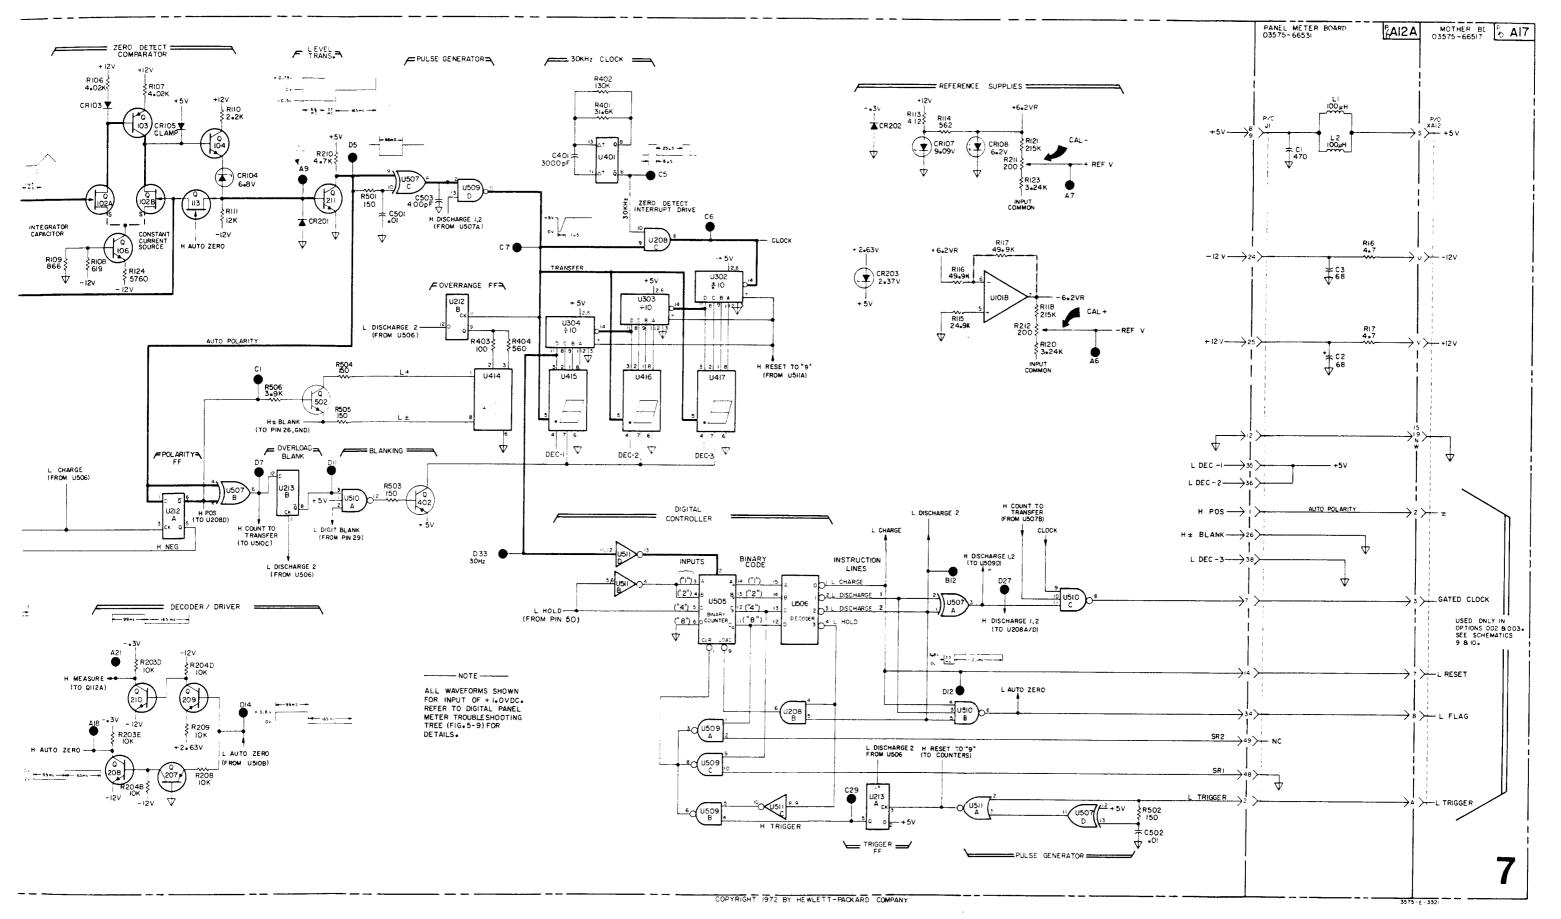



Figure 7-8. Panel Meter Connector (A12A) and Panel Meter (A20 Schematics and Component Location Diagrams.

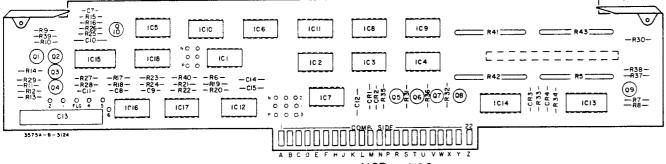


AI6B or AI6C

hp Part No. 03575-66532 (B) 0PT 002 66533 (C) 0PT 003

Rev. A

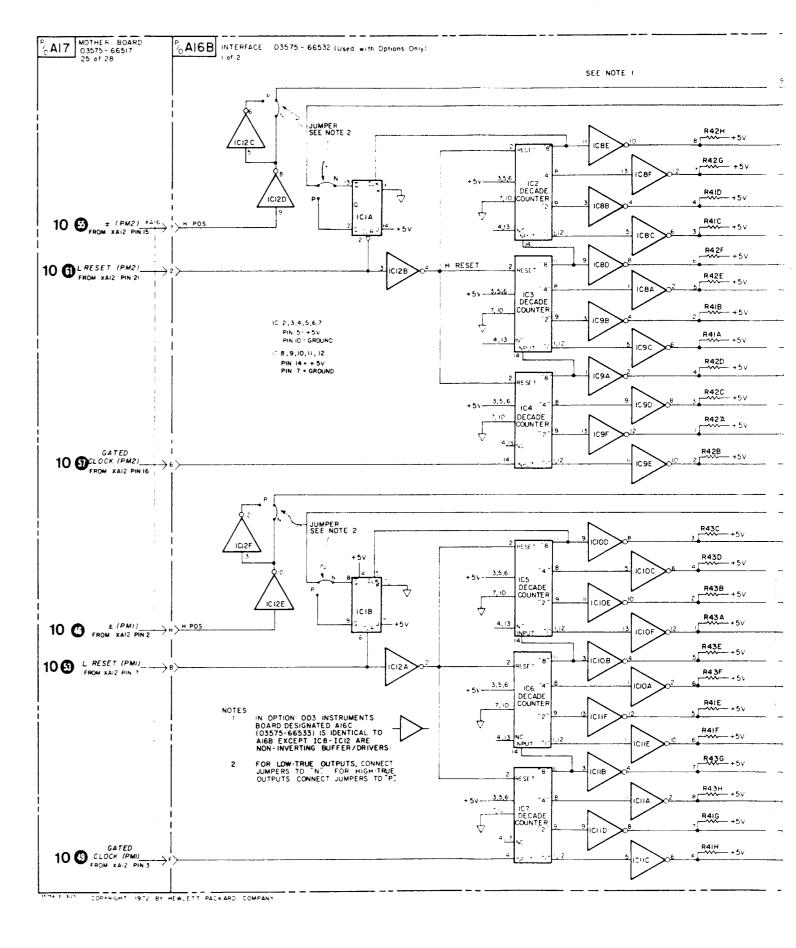

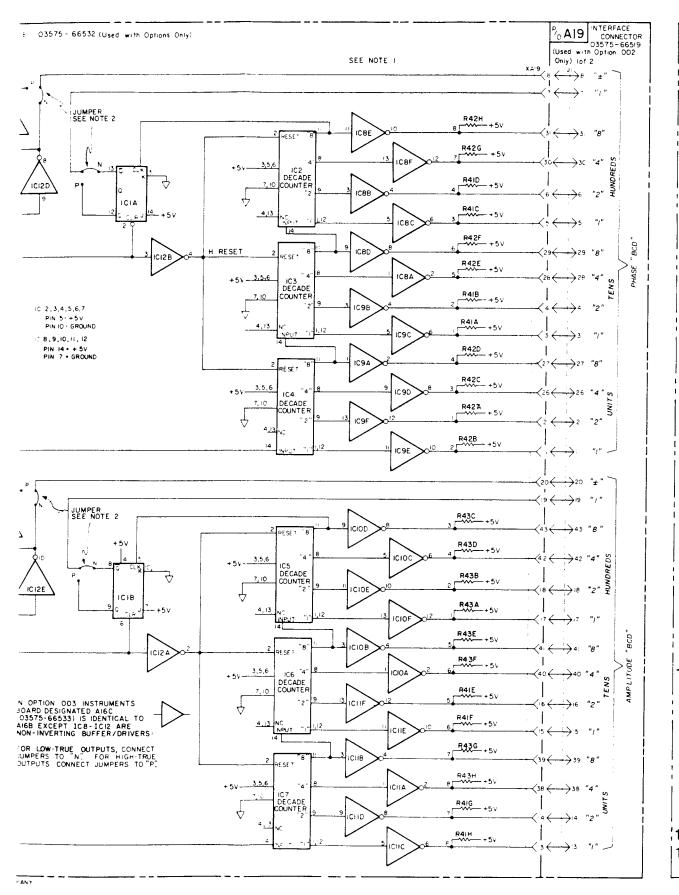

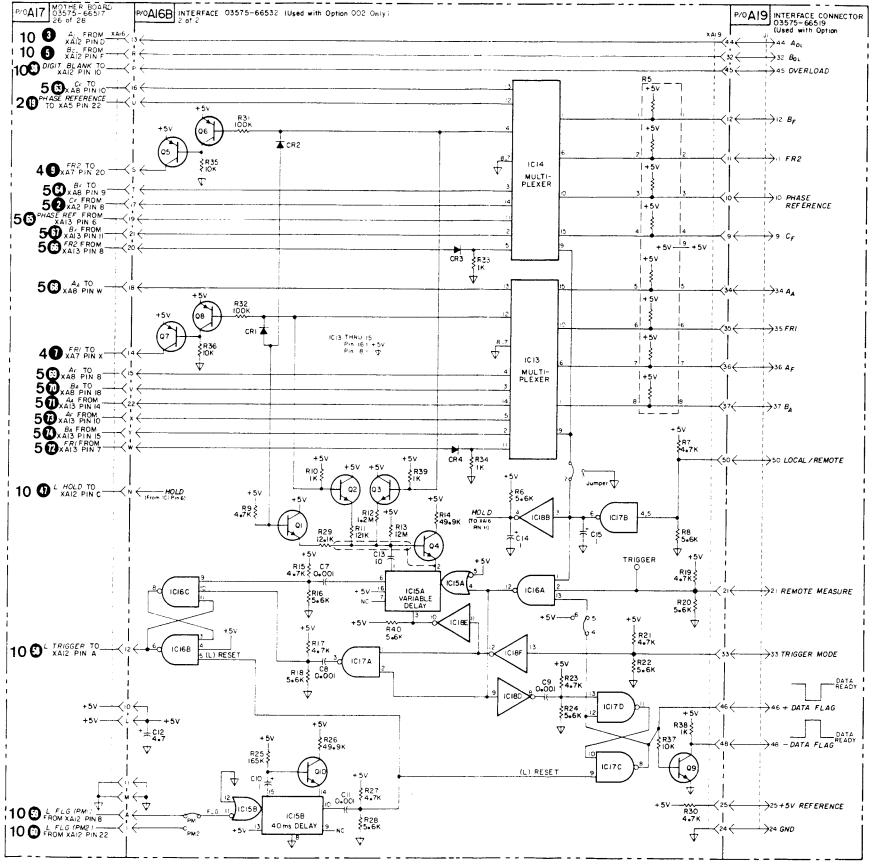
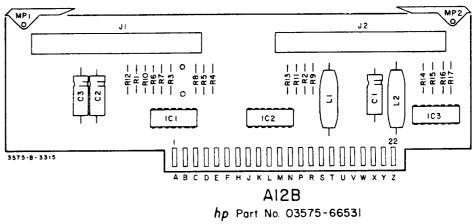


Figure 7-10. Interface Board A16B (Option 002) or A16C (Option 003) Schematic and Component Location Diagram.



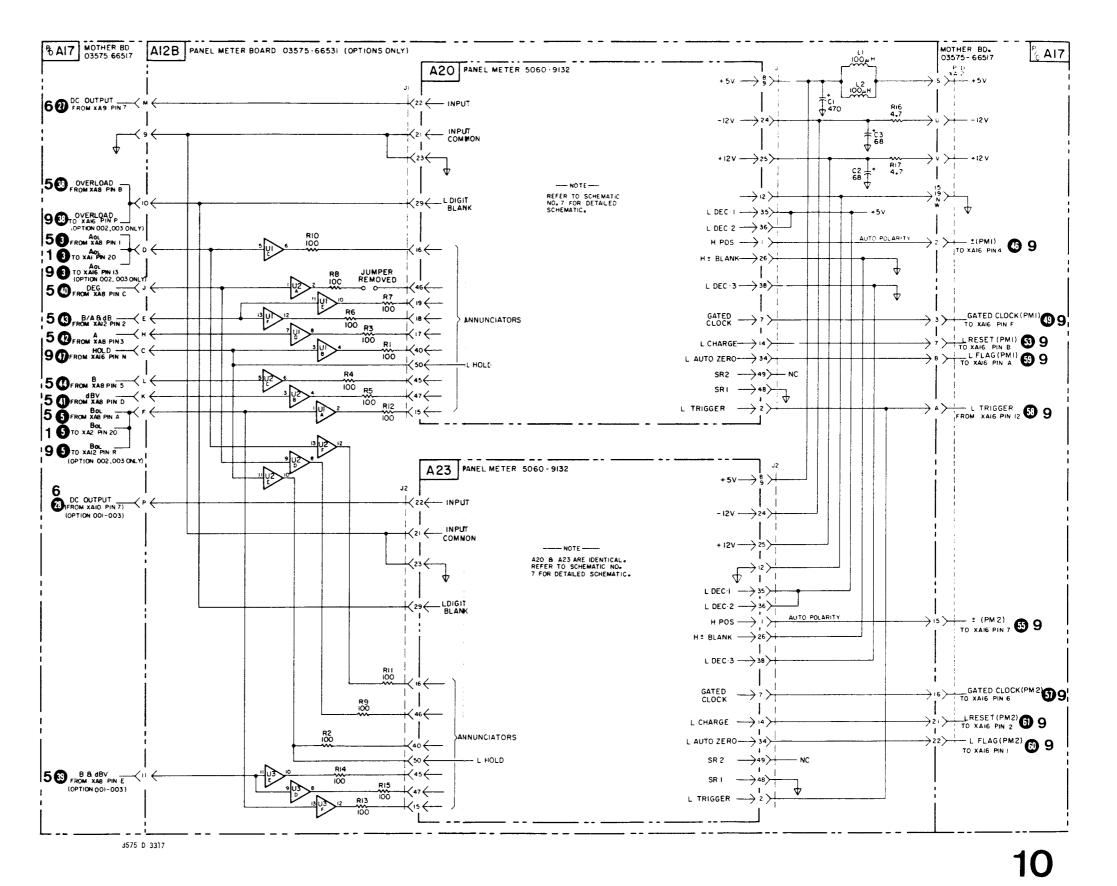


Figure 7-11. Panel Meter Connector (A12B) and Panel Meters (A20, A23)
Schematics and Component Location Diagrams.

Rev. A (Ref: Change 3)

Rev. B C-59/C-60 (Ref. Change 4)

7-25/7-26

Model 3575A Appendix C

CHANGE NO. 6

Section VI Changes

Change the A12B assembly part number to 03575-66541.

Change A12BC4-C11 to part number 0160-2964, C: fxd .01 μ F 25 V.

Delete A12BU5 and U6.

Change the A16B assembly part number to 03575-66542.

Change A16BU1 - U7 to part number 1820-0876, TTL Latch 74L75N.

Change the A16C assembly part number to 03575-66543.

Change A16CU1 - U7 to part number 1820-0876, TTL Latch 74L75N.

Section VII Changes.


Replace Schematic Numbers 9 and 10 with the following Appendix C schematics.

CHANGE NO. 7:

For a standard instrument, delete the A12A component locator (03575-66550) and reference to this part number on the schematic. Replace with Schematic 10, A12A schematic and locator of Change No. 6.

C-61

			- -

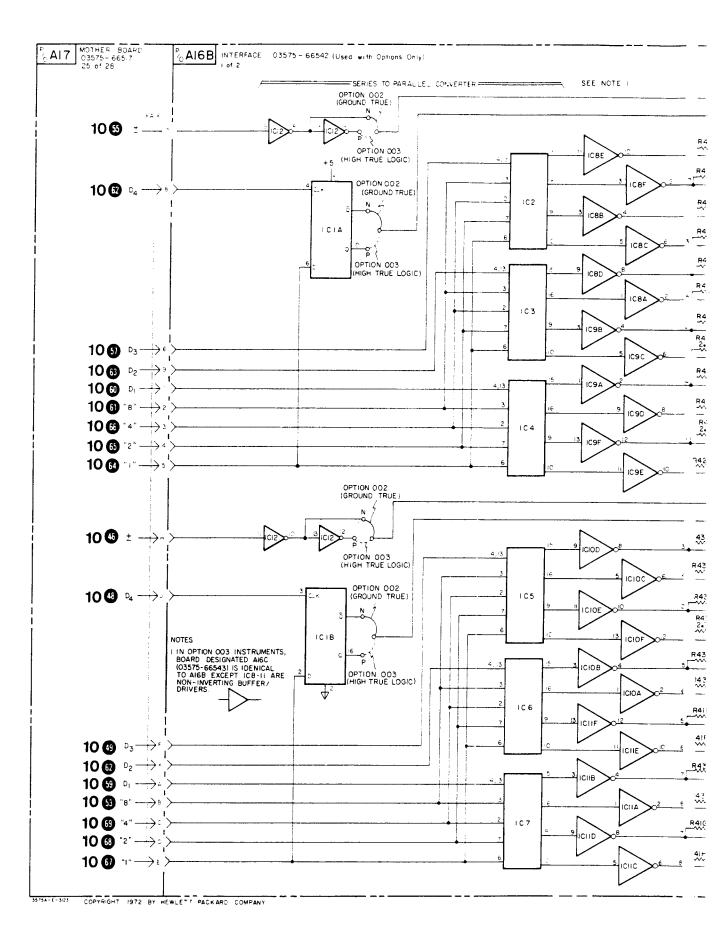



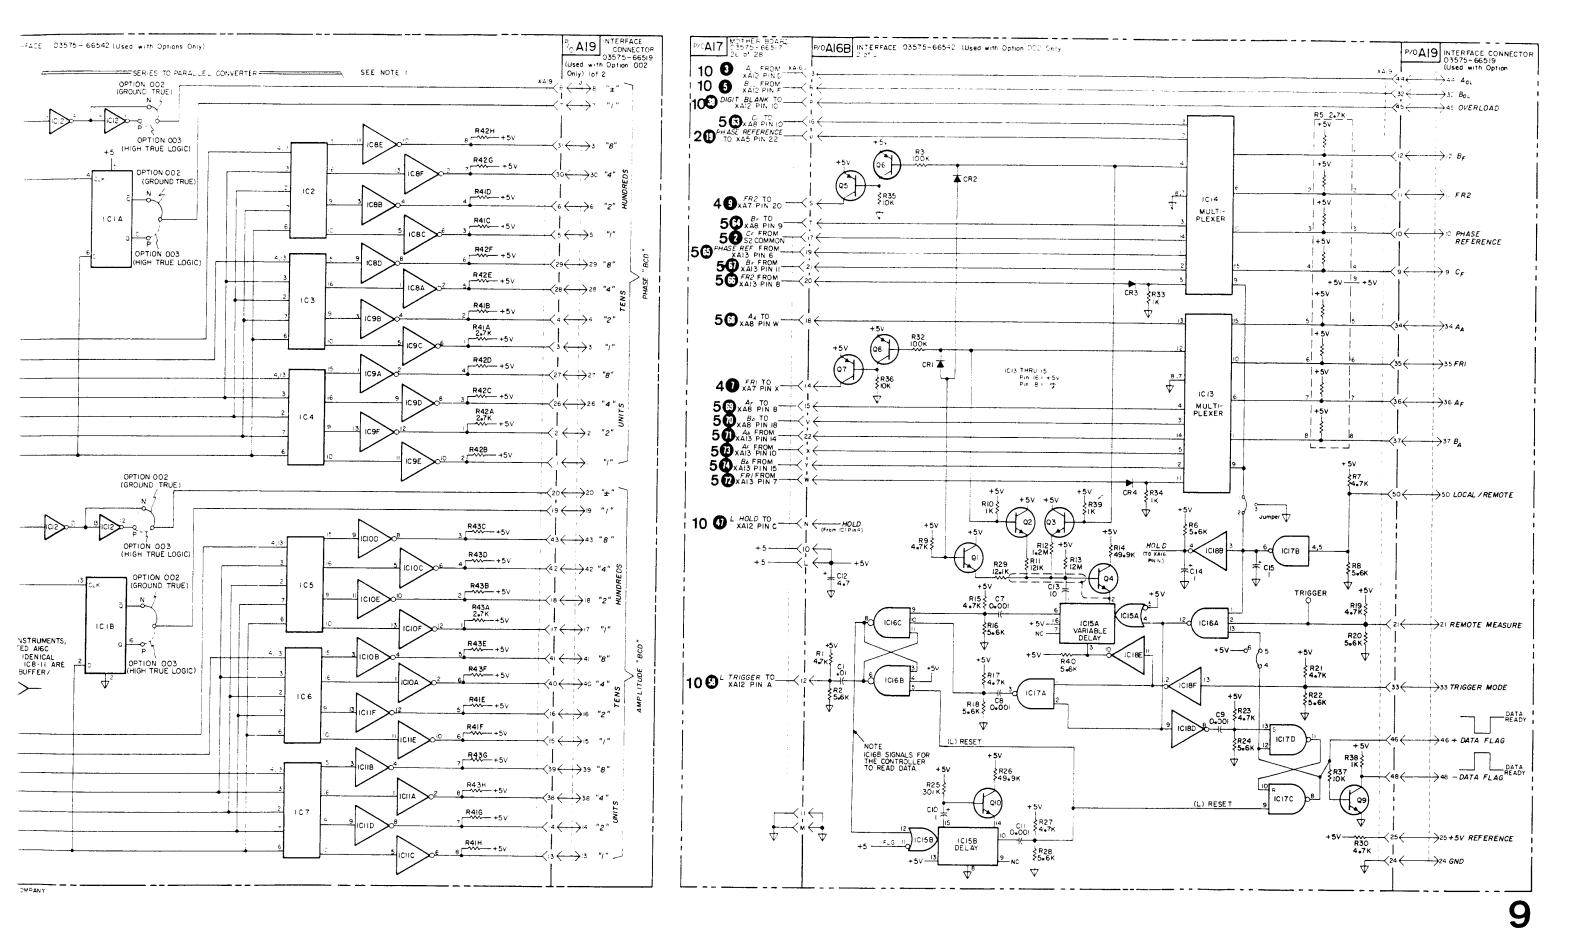


Figure 7-10. Interface Board A16B (Option 002) or A16C (Option 003) Schematic and Component Location Diagram.

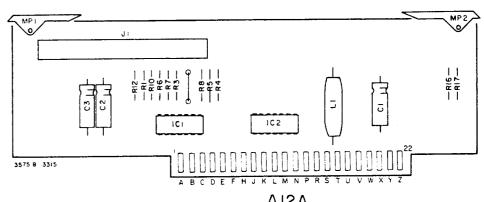

A12A hp Part No. 03575-66540

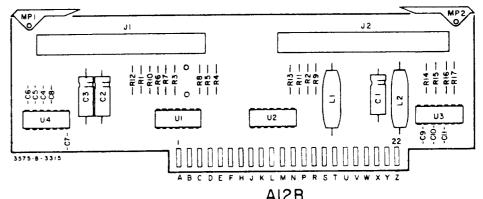

AI2B hp Part No. 03575-66541

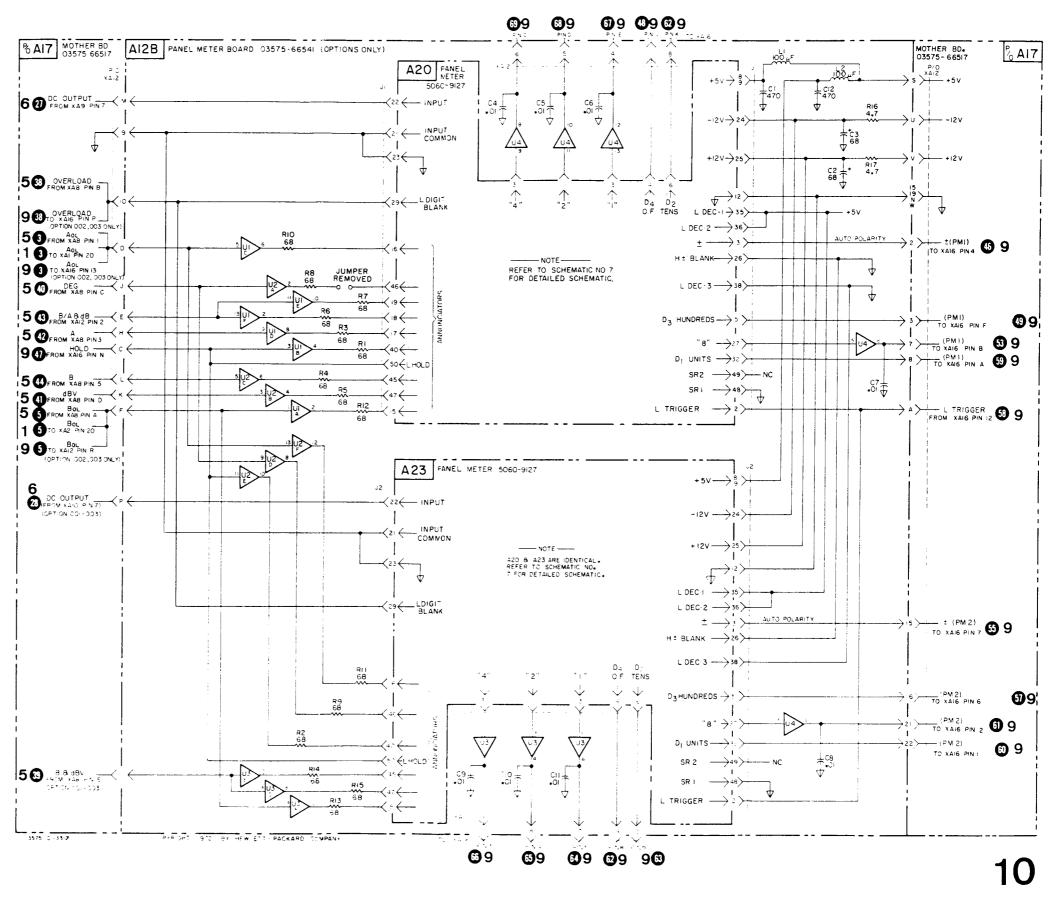


Figure 7-11. Panel Meter Connector (A12B) and Panel Meters (A20, A23) Schematics and Component Location Diagrams.

			-
			•