# **TEKTRONIX**®

L3

PLUG-IN MODULE

Tektronix, Inc. P.O. Box 500 Beaverton, Oregon 97077

INSTRUCTION MANUAL

070-2154-02

Serial Number .

FIRST PRINTING SEPT 1976

#### **WARRANTY**

This Tektronix product is warranted against defective materials and workmanship, under normal use, for a period of one year from date of initial shipment. Tektronix will repair or replace, at its option, those products determined to be defective within the warranty period and returned, freight prepaid, to a Tektronix Service Center. There is no implied warranty for fitness of purpose.

Please direct all requests for service or replacement parts to the nearest Tektronix Service Center or Field Office; include the type or part number of the product and its serial number.

Copyright © 1976, 1977, 1978 by Tektronix, Inc. All rights reserved. Contents of this publication may not be reproduced in any form without the permission of Tektronix, Inc.


Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE, TELEQUIPMENT, and are registered trademarks of Tektronix, Inc.

Printed in U.S.A. Specification and price change privileges are reserved.

# **TABLE OF CONTENTS**

		Page			Page
Section 1	GENERAL INFORMATION		Section 3	PERFORMANCE CHECK	
	DESCRIPTION	1-1		INTRODUCTION	3-1
	ELECTRICAL CHARACTERISTICS	1-1		EQUIPMENT REQUIRED	3-2
	ENVIRONMENTAL			PROCEDURE	3-3
	CHARACTERISTICS	1-4		•	
•			Section 4	SERVICE INFORMATION & DIAGR.	AM
Section 2	OPERATING INSTRUCTIONS			INTEGRACION	
	INTRODUCTION			INTRODUCTION	4-1
	INTRODUCTION	2-1		CALIBRATION PROCEDURE	4-2
	INSTALLATION	2-1		CIRCUIT DESCRIPTION	4-6
	FRONT PANEL CONTROLS			COMPONENT LOCATIONS	4-9
	AND CONNECTOR	2-1		SCHEMATIC DIAGRAM	4-13
	INITIAL CALIBRATION	2-2		INPUT IMPEDANCE CHANGE	
	USING THE ANALYZER	2-3		PROCEDURE	4-18
	Impedance Matching	2-3	0 - 11 - 5	DED! 4.0=45.	
	Signal Amplitude	2-3	Section 5		5-1
	USING THE L3 OPTION 1			Accessories	5-18
4	WITH BALANCED		Section 6	OPTIONS	
	CONNECTIONS	2-4	Occion o	OF FIGNS	
				L3 Option 1	6-1

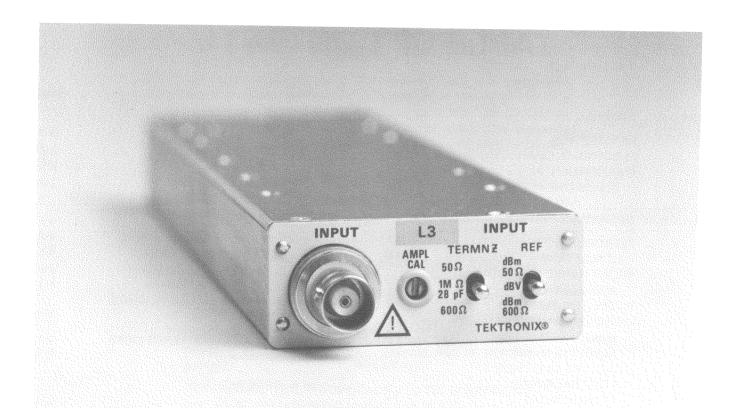

2154-1

Fig. 1-1. L3 Plug-In Module.

# **GENERAL INFORMATION**

#### **DESCRIPTION**

The L3 Plug-In Module is one of a series of modules that are used with the Tektronix 7L5 Spectrum Analyzer to provide it with various front end capabilities. The L3 has a switch-selectable input termination:  $50~\Omega$ ,  $600~\Omega$ , or a high impedance (1 M $\Omega$ /28 pF) probe compatible input.

Options for the L3 are described in the Options section.

#### **ELECTRICAL CHARACTERISTICS**

The following electrical characteristics apply when the L3 Plug-In Module, in combination with a 7L5 Spectrum Analyzer, is installed in a 7000-Series oscilloscope, and has had a warm-up period of ten minutes or more.

#### Intermodulation Distortion

With two on-screen signals within any frequency span and of any amplitudes, intermodulation distortion is at least 75 dB down for third-order products and at least 72 dB down for second-order products.

With two on-screen signals and reference levels of —53 dB or less, intermodulation distortion is at least 80 dB down.

With two out-of-band (>5 MHz) signals equal to or less than the reference level, second-order intermodulation products are at least 50 dB down.

With the INPUT BUFFER switch on, second- and thirdorder intermodulation products for any two on-screen signals within any frequency span are at least 80 dB down.

#### Sensitivity

The following tabulation of input noise for each resolution bandwidth is measured with: 1) an L3 Plug-In Module installed; 2) the INPUT BUFFER off; 3) the VIDEO PEAK/VIDEO AVERAGE control at maximum clockwise position; 4) the TIME/DIV control set at 10 s; 5) DIGITAL STORAGE DISPLAY A and B on; 6) the input impedance switch at 50  $\Omega$ .

Resolution Bandwidth	Equivalent Input Noise (equal to or less than)
10 Hz	−148 dBV
30 Hz	−146 dBV
100 Hz	−143 dBV
300 HZ	−138 dBV
1 kHz	−133 dBV
3 kHz	-128 dBV
10 kHz	−123 dBV
30 kHz	−118 dBV

#### NOTE

Sensitivity is degraded an additional 8 dB when the INPUT BUFFER is on (illuminated): e.g., at 3 kHz, the equivalent noise would be -120 dBV instead of -128 dBV. Noise level will increase by approximately 10 dB when operation is in the Video Peak mode.

#### **Residual Response**

Internally generated spurious signals are -143 dBV or less (referred to the input), or -138 dBV or less for calibrator harmonics.

#### **Display Flatness**

Maximum peak-to-peak amplitude variation is 0.5 dB from 25 Hz to 5 MHz, or 0.75 dB from 20 Hz to 5 MHz, plus quantization error if digital storage is used (see 7L5 specifications).

#### **Reference Level**

In the log mode, reference level refers to the top horizontal graticule line and is calibrated in 1 dB and 10 dB steps.

#### Range

MODE	50Ω	600Ω	High Z
LOG 2 dB/DIV	-128 dBm to +21 dBm,	-139 dBm to $+$ 10 dBm $-$ 81 dBm to $+$ 10 dBm	-141 dBV to +8 dBV
LOG 10 dB/DIV	-70 dBm to +21 dBm		-83 dBV to +8 dBV

With operation in LIN mode, reference level calibration range is from 20 nV/div to 200 mV/div, within 5%, in a 1-2-5 sequence. A variable reference level control, VAR, can be used to increase the display amplitude by  $\geqslant$ 8 dB.

#### NOTE

A > sign is displayed adjacent to the reference level readout when the reference level is not calibrated due to an incompatible selection of the REFERENCE LEVEL, FREQUENCY SPAN/DIV, and TIME/DIV controls.

#### **Incremental Accuracy**

Within 0.2 dB for any 1 dB change of reference level, with cumulative error of 0.25 dB for any change up to 10 dB.

Within 0.25 dB/10 dB for any change of 10 dB or more.

#### **Input Connector**

The INPUT connector is a three-conductor bnc connector with the outer ring used to detect the presence of a 10X probe so that the reference level readout is changed by 10X (+20 dB).

#### NOTE

Readout changes by a factor of only 10X if a 100X probe is connected.

Input Impedance: Switch selectable; 1 M $\Omega$  in parallel with 28 pF, 50  $\Omega$  termination, or 600  $\Omega$  termination.



#### **Maximum Input Levels**

1 M $\Omega/28$  pF: 15 V p-p for ac or pulse signals with risetimes of 2 V/ $\mu$ s or faster (pulses or ac beyond this specification may open an input fuse).

100 V (dc plus peak ac) for signals with risetimes slower than 2  $V/\mu s$ .

 $600~\Omega$  (internally terminated): 12 V dc or rms (+24 dBm).

 $50 \Omega$  (internally terminated): 3.5 V dc or rms (+24 dBm).

## **ENVIRONMENTAL CHARACTERISTICS**

The L3 Plug-In Module will meet the foregoing electrical characteristics when installed in a 7L5 Spectrum Analyzer within the environmental limits of a 7000-Series oscilloscope. Complete details on environmental test procedures including failure criteria etc., can be obtained from your local Tektronix Field Office or representative.

1-4

General Information—L3

@

# **OPERATING INSTRUCTIONS**

#### INTRODUCTION

This section of the manual contains installation instructions for the L3 plug-in, describes the function of its front panel controls and connectors, and includes general operating information such as initial calibration and signal application.

#### **INSTALLATION**

Visually inspect the 7L5 plug-in cavity to verify the absence of any obstruction such as misplaced internal cables or packing materials such as cardboard or styrofoam. Carefully inspect the L3 module to ensure that the cover plate is properly fastened with no protruding screw heads.

# CAUTION

Never install the L3 Plug-In Module without its cover plate. The metal grounding fingers within the 7L5 cavity will catch and be severely damaged when the plug-in is removed.

Align the L3 module in front of the 7L5 plug-in aperature with its edge card connector to the rear and the dBV/dBm switch to the right. Carefully slide the L3 into the 7L5 plug-in cavity and apply a steady pressure to the L3 front panel until its rear connector is firmly seated and its front panel is approximately flush with the 7L5 front panel.

## FRONT PANEL CONTROLS AND CONNECTOR

#### AMPL CAL

The AMPL CAL control is a potentiometer that is adjusted during the Operational Check to calibrate the full screen reference level. This control is used to compensate for gain differences in the RF and IF portions of the instrument. The AMPL CAL control should be adjusted or checked for proper setting each time the L3 Plug-In Module is installed in a 7L5. (Refer to Initial Calibration Section, which follows.)

#### **INPUT TERMN Z**

This three-position switch selects input termination of 50  $\Omega$ , 600  $\Omega$ , or the unterminated input of 1 M $\Omega$  in parallel with 28 pF.

**REV. A APR 1978** 

Section 2-L3

2-1

#### **INPUT REF**

This three-position switch selects the reference level scale factor: dBm for 50  $\Omega$ , dBm for 600  $\Omega$ , or dBV. This switch is independent of the INPUT TERMN Z selection.

#### INPUT

This three-conductor bnc connector uses the outer ring to detect the presence of a 10X probe, so that the readout changes by a factor of 10X (+20 dB).

#### NOTE

A 100X probe will change the readout by a factor of only 10X (20 dB) instead of 100X (40 dB).

## **INITIAL CALIBRATION**

The following procedure correlates deflection sensitivity of the L3 Plug-In Module, the 7L5 Spectrum Analyzer, and the oscilloscope mainframe. These steps should be performed each time the L3 is installed in a 7L5, and each time the instruments are turned on.

a. With the L3 installed in a 7L5 and the 7L5 installed in an oscilloscope mainframe, apply ac power and allow a 10-minute warmup period.

- b. Select mainframe Vertical Mode, Horizontal Mode, and Trigger Source (Right or Left) settings to correspond with plug-in compartments occupied by the 7L5.
- c. Connect the 7L5 CALIBRATOR signal to the INPUT connector on the L3 front panel with a short length of coaxial cable. Set the INPUT TERMN Z switch to 50  $\Omega$ , and the INPUT REF switch to dBV.
- d. Select the LOG 2 dB/DIV pushbutton and set the FREQUENCY SPAN/DIV to 2 kHz, RESOLUTION to 3 kHz, and TIME/DIV to 0.2 s. Switch the DISPLAY A and DISPLAY B display processing selectors on. Adjust the VERT POSITION to place the display on the bottom horizontal graticule line.
- e. Adjust the REFERENCE LEVEL to -40 dBV and set the DOT FREQUENCY to 500.00 kHz. Select the LOG 10 dB/DIV pushbutton and adjust the 7L5 LOG CAL control for a full screen (8-division) display.
- f. Select the LOG 2 dB/DIV display and adjust the L3 AMPL CAL control for a full screen display.
- g. Repeat steps e and f until the displayed waveform is 8 vertical divisions in both the 10 dB/DIV and 2 dB/DIV modes. Refer to Fig. 2-1.

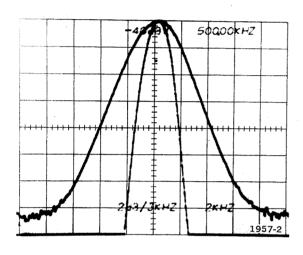


Fig. 2-1. Initial calibration waveform.

#### **USING THE ANALYZER**

#### Impedance Matching

When the L3 module is installed, the input impedance of the 7L5 Spectrum Analyzer is determined by the setting of the INPUT TERMN Z switch. Impedance mismatch between a signal source and the module's input connector causes reflections or standing waves in the interconnecting transmission line. Standing waves at the input

connector may cause amplitude errors in the display and an overall degraded performance of the analyzer. To minimize the probability of an impedance mismatch, all cables and transmission lines fastened to the input connector should have the same impedance as the plug-in module. All cables used should be of minimum length and of good quality with connector center conductors not worn, protruding or recessed. Degraded display caused by impedance mismatch may be improved by selecting the 7L5's INPUT BUFFER control.

#### Signal Amplitude

High amplitude signals (refer to Electrical Characteristics) should not be applied to the INPUT connector. Signals of unknown amplitude should be routed through a series attenuator. If spurious or multitone intermodulation signals are present in the display, or if saturation of the mixer is suspected, select the 7L5 INPUT BUFFER. This control adds 8 dB of attenuation in series with the input signal, and compensates with 8 dB of amplification in the 7L5. If the displayed signals show little or no amplitude change with the buffer on, the intermodulation is probably geing generated prior to the input. If the displayed signals decrease in amplitude, they are being generated within the analyzer as a result of excessive input signal amplitude.

**REV. A APR 1978** 

Operating Instructions—L3

2-3

# USING THE L3 OPTION 1 WITH BALANCED CONNECTIONS

Baseband telephony systems frequently utilize balanced connections. This is accommodated by a balanced to single-ended transformer, part number 013-0182-00. See Fig. 2-2. Frequency range of the Balanced Transformer is 50 kHz to 3 MHz (useable from 10 kHz to 20 MHz). Flatness is 0.25 dB peak-to-peak, including nominal 0.1 dB insertion loss, and a common mode rejection of 25 dB minimum (within the 50 kHz to 3 MHz range). The transformer has a three-position switch at the output to provide a 124  $\Omega$  termination, a 135  $\Omega$  termination, and no termination. Thus, an L3 Option 1 in conjunction with the accessory transformer provides all of the common baseband impedance levels (75  $\Omega$ , 600  $\Omega$ , 124  $\Omega$ , 135  $\Omega$ , and 1  $M\Omega$  for bridging).

Balanced connections at  $124\,\Omega$  or  $135\,\Omega$  is accomplished by connecting the Balanced Transformer between the balanced connections and the L3 INPUT. Switch the L3 INPUT TERMN Z to 1 M $\Omega$  and the REF to dBV. Switch the Balanced Transformer switch to the desired impedance. The relationship between dBV and dBm is: dBm = dBV - 10 LogZ + 30, where Z equals the terminating impedance. For the two impedances provided on the balanced transformer, the theoretical relationship is: dBm ( $124\,\Omega$ ) = dBV + 9.07, dBm ( $135\,\Omega$ ) = dBV + 8.7.

Since the transformer has an insertion loss of less than 0.1 dB, the theoretical correction factors offer sufficient accuracy.

Balance connection at other than 124  $\Omega$  or 135  $\Omega$  uses the transformer in the unterminated position with the termination provided either by the L3 or by a feed-through termination connected between the transformer and 7L5 input. When the termination is outside the 7L5, it is necessary to set the 7L5 in the 1 M $\Omega$  bridging position so as not to double terminate the connection. The reference level should be set to dBV.

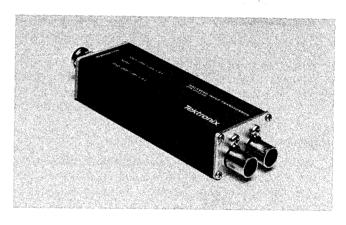


Fig. 2-2. Balance Transformer.

2-4

**REV. A APR 1978** 

# **PERFORMANCE CHECK**

#### INTRODUCTION

The following procedure verifies the electrical characteristics of the L3 Plug-In Module and includes checks on intermodulation distortion, residual response, reference level accuracy, and display flatness. Adjustments are not included; they are located in the Calibration Procedure in Section 4.

If the instrument fails to meet a performance requirement, refer to the related adjustment procedure in this manual or in the 7L5 manual.

@

## **EQUIPMENT REQUIRED**

Туре	Minimum Performance Requirements	Typical Model or Part No.
7L5 Spectrum Analyzer Plug-In installed in a 7000-series mainframe		
Signal Generators	10 kHz to 5 MHz +10 dBm to -89 dBm into 50 Ω	Hewlett-Packard 654 or 651
Signal Generators	10 MHz to 125 MHz +5 dBm to -40 dBm into 50 Ω	Hewlett-Packard 8654
Step Attenuator	1 dB/step	Tektronix 2701
Attenuators, 14 dB 50 Ω (2)		Tektronix 011-0060-02
Coaxial cables, 50 Ω (3)		Tektronix 012-0057-01
BNC T connector		Tektronix 103-0030-00
Cap, BNC non-shorting		Tektronix 200-0678-00 or Tektronix 200-0685-00

#### **PROCEDURE**

#### 1. Preliminary Steps

- a. Install the L3 in the 7L5, and install the 7L5 in the oscilloscope mainframe.
- b. Turn the instruments on and allow to warm up for 10 minutes or more.
- c. Perform the Initial Calibration procedure described in Section 2 of this manual.

#### 2. Check Readout

- a. Set REFERENCE LEVEL to  $\pm 21$  dBm 50  $\Omega$ .
- b. Switch INPUT REF to  $\,\mathrm{dBV}$  and check for a readout of  $+8\,\,\mathrm{dBV}$ .
- c. Switch INPUT REF to dBm 600  $\Omega$  and check for a readout of  $\pm 10$  dBm.
- d. Momentarily connect a 10X probe to the INPUT, or short circuit the INPUT connector ring to the shell, and check that the readout increases by 20 dB.

#### 3. Check Reference Level Accuracy

a. Set the front panel controls as follows:

DOT FREQUENCY 1 MHz
RESOLUTION COUPLED
FREQUENCY SPAN/DIV 10 kHz
INPUT REF dBV

REFERENCE LEVEL

-45 dBV; LOG 2 dB/DIV

TRIGGERING

FREE RUN NORM

TIME/DIV

AUTO

INPUT TERMN Z 50 Ω

- b. Connect a HP 654 signal generator, through a 2701 Step Attenuator, to the L3 INPUT. Set the attenuators for 48 dB attenuation, then adjust the signal generator for a 7-division display at 1 MHz.
- c. Set the REFERENCE LEVEL to  $-37\,$  dBV, set the step attenuator for 40 dB, and check for a display of 7 divisions  $\pm 0.1\,$  division (0.2 dB).
- d. Repeat the above procedure of adding 8 dB in the 7L5 and taking out 8 dB in the step attenuators, up to  $\pm 3$  dBV reference level. Check that the level at each step is within  $\pm 0.1$  division of the level at the previous step.

## 4. Check Display Flatness

a. Set the front panel controls as follows:

DOT FREQUENCY

10.00 kHz

FREQUENCY SPAN/DIV 20 kHz

**INPUT REF** 

dBm 50 Ω

REFERENCE LEVEL

0 dBm; LOG 2 dB/DIV

Leave all other controls as they were in the previous setup.

- b. Connect a HP 654 signal generator to the input and adjust it for a 7-division display at 10 kHz.
- c. Simultaneously tune the signal generator frequency and the DOT FREQUENCY from 10 kHz to 5 MHz, and check that the display flatness is within 0.5 dB peak-to-peak.

#### 5. Check Third-Order Intermodulation Distortion

a. Set the front panel controls as follows:

DOT FREQUENCY

4500.00 kHz

FREQUENCY SPAN/DIV

5 kHz

RESOLUTION

300 Hz

INPUT REF

dBV

REFERENCE LEVEL

-38 dBV; LOG 10 dB/DIV leas

Leave all other controls as they were in the previous setup.

b. Connect two signal generators, such as HP654 or 651, plus the attenuators, as shown in Fig. 3-1. Set the step attenuators for 32 dB of attenuation, and adjust the signal generators for two full-screen signals one division apart (such as 4495 kHz and 4500 kHz).

#### NOTE

Some generators may produce cross talk when in close proximity to the unit. Separate and orientate for best IM. In some cases an isolated combiner or directional bridge (e.g., HP Model 8721A) may be desirable instead of the attenuators shown in Fig. 3-1.

c. Check that the intermodulation sidebands are at least 75 dB below the signals.

3-4

Performance Check-L3

REV A, FEB 1979

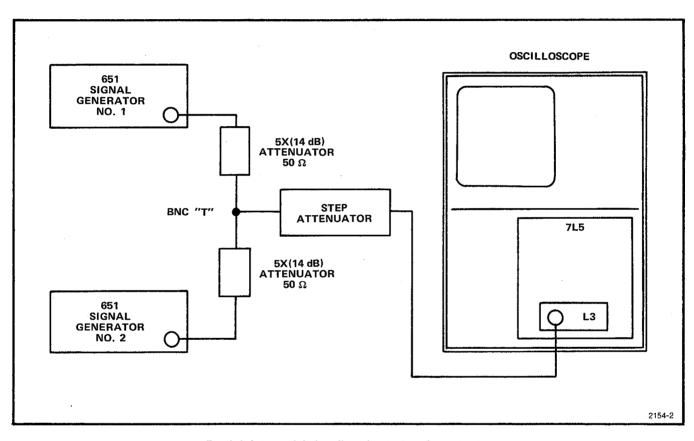


Fig. 3-1. Intermodulation distortion test equipment setup.

## 6. Check Second-Order Intermodulation Distortion

a. Set one signal generator to 5 kHz, then repeat the set-up and procedure in step 5, checking that the intermodulation sidebands are at least 72 dB below the signals.

## 7. Check Out-of-Band Intermodulation Distortion

a. Set the front panel control as follows:

DOT FREQUENCY

4500.00 kHz

REFERENCE LEVEL

-14 dBV

Leave all other controls as they were in the previous setup.

- b. Connect two signal generators, such as HP 8654, to the L3 as indicated in Fig. 3-2. Set generator one to 10 MHz and generator two to 14.5 MHz.
- c. Adjust the generators so that each signal is 560 mV P-P at the L3 input. To do this: monitor the L3 input with an oscilloscope, disconnect generator two, and terminate the

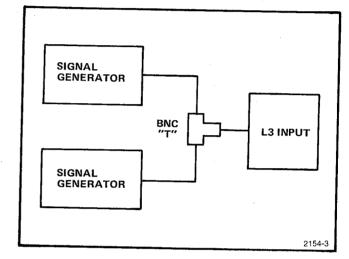


Fig. 3-2. Test set-up for out-of-band intermodulation distortion.

cable into 50  $\Omega$ . Adjust generator one, then disconnect it, terminate its cable into 50  $\Omega$ , and reconnect and adjust generator two. Remove the termination and reconnect generator one.

d. Check that the display at 4500 kHz is more than 50 dB below the signals.

e. Set the signal generators to the following frequencies and repeat steps c and d:

20 MHz	24.5 MHz
40	44.5
60	64.5
75	79.5
90	94.5
120	124.5

#### 8. Check Residual Response and Sensitivity

Refer to the 7L5 Instruction Manual and perform the residual response and sensitivity checks found there, with a non-shorting bnc cap installed on the INPUT connector. Make the checks with the INPUT TERMN Z switch set to both 1 M $\Omega/28$  pF and 50  $\Omega$ .

# **SERVICE INFORMATION & DIAGRAM**

WARNING

The service information in the remainder of this manual is intended for use by qualified personnel only. To avoid electrical hazards, DO NOT perform any servicing unless you are qualified to do so.

### INTRODUCTION

This section includes a calibration procedure, a circuit description, and other maintenance information which requires access to the interior of the instrument. Therefore, refer all servicing to qualified personnel.

4-1

Section 4—L3

@

## **CALIBRATION PROCEDURE**

## **Equipment Required**

Туре	Minimum Performance Requirements	Typical Model or Part No.		
7L5 Spectrum Analyzer Plug-In installed in a 7000-series mainframe				
Signal generator	10 kHz to 5 MHz +10 dBm to $-89$ dBm into 50 $\Omega$	Hewlett Packard 654		
Signal generator	10 MHz to 125 MHz +5 dBm to -40 dBm into 50 Ω	Hewlett Packard 8654		
Step attenuator	1 dB/step	Tektronix 2701		
Plug-in extender cables (2)		Tektronix 067-0616-00		
Termination, 50 Ω, bnc connectors		Tektronix 011-0049-01		
Coaxial cables, 50 $\Omega$ (2), bnc connectors		Tektronix 012-0057-01		

## 1. Preliminary

- a. Install the L3 in the 7L5 Spectrum Analyzer Plug-In.
- b. Connect the 7L5 to the oscilloscope mainframe through the two extender cables.
- c. Turn on the power and allow the instruments to warm up for at least 30 minutes.
- d. Refer to the Adjustment Locations drawing on the facing page while performing the following steps. Also included on the drawing are brief notes intended to aid the experienced calibrator; the numbers correspond to the following step numbers.

#### NOTE

This procedure presumes that the 7L5 plug-in has been calibrated and is working correctly.

## 2. Adjust 0 Hz Spur Amplitude

INPUT REF

a. Set the L3 and 7L5 front panel controls as follows:

DOT FREQUENCY 0.00 kHz DIGITAL STORAGE DISPLAY A and B ON; **BASELINE CLIPPER** midrange FREQUENCY SPAN/DIV 20 kHz RESOLUTION 30 kHz REFERENCE LEVEL LOG 10 dB/DIV; -30 dBm TRIGGERING FREE RUN and NORM TIME/DIV **AUTO** INPUT TERMN Z


50 Ω

dBm 50  $\Omega$ 

b. Adjust R220 and C210 for minimum 0 Hz response.

Repeat several times since the adjustments interact.

c. Check that the 0 Hz amplitude is below  $-45\ \mathrm{dBm}$ reference level.

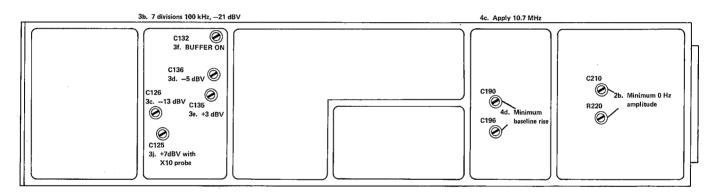

L-3 Adjustment locations.

## 3. Adjust Attenuators

a. Set the front panel controls as follows:

DOT FREQUENCY

1000.00 kHz

INPUT TERMN Z

50 Ω

INPUT REF

dBV

REFERENCE LEVEL

-21 dBV; LOG 2 dB/DIV

Leave all other controls as they were in the previous setup.

- b. Connect a signal generator, such as the HP654, through a step attenuator, such as the Tektronix 2701, to the L3 input. Set the attenuator for 24 dB attenuation, set the generator for 1 MHz, and adjust the generator for a 7-division display.
- c. Set the REFERENCE LEVEL to  $-13~\mathrm{dBV}$ , decrease the step attenuator setting to 16 dB, and adjust C126 for a 7-division display.
- d. Set the REFERENCE LEVEL to  $-5~\mathrm{dBV}$ , decrease the step attenuator setting to 8 dB, and adjust C136 for a 7-division display.

- e. Set the REFERENCE LEVEL TO  $\pm 3$  dBV, decrease the attenuator setting to 0 dB, and adjust C135 for a 7-division display.
- f. Push the INPUT BUFFER pushbutton to ON, then adjust C132 for a 7-division display. Push the button again to turn off the input buffer.
- g. Recheck all parts of step 3, and readjust as necessary.
- h. Disconnect the cable between the step attenuator and the L3, and connect a  $50\,\Omega$  terminator to the attenuator output. Set the REFERENCE LEVEL to -21 dBV, and set the attenuators for 8 dB attenuation.
- i. Set the INPUT TERMN Z to 1 M $\Omega$ /28 pF, and connect a P6105 probe to the INPUT (check that the readout is changed to -1 dBV). Connect the other end of the probe to the output of the 50  $\Omega$  terminator, and adjust the signal generator for a 7-division display.
- j. Set the REFERENCE LEVEL to  $+7~\rm dBV$ , reduce the attenuator setting to 0 dB, and adjust C125 for a 7-division display. Disconnect the probe from the L3.

#### 4. Adjust Low-Pass Filter

- a. Turn off the instruments, remove the L3 from the 7L5, then remove the bottom cover from the L3.
- b. Remove the bottom plate that forms the bottom of the L3 Plug-In Module housing. This is accomplished by removing its mounting screws at the rear of the plate, then sliding the plate back toward the rear of the 7L5 enough to clear the front edge. Next, the sides of the module housing are compressed enough at the rear end to allow the bottom cover to pop off.
- c. Re-install the L3 in the 7L5, turn the instruments on, and allow to warm up again.
  - d. Set the front panel controls as follows:

30 kHz
MAX
dBm 50 $\Omega$
-40 dBm; 10 dB/DIV
50 Ω

- e. Connect a signal generator, such as a HP8654, to the input, and set its output for 10.7 MHz at 0 dBm. Adjust the frequency slightly for maximum baseline rise.
  - f. Adjust C190 and C196 for minimum baseline rise.
- g. Replace the L3 bottom cover, and the bottom plate on the 7L5.

#### **CIRCUIT DESCRIPTION**

#### NOTE

Refer to the schematic diagram while reading the following paragraphs.

#### Input Impedance Selection

The input impedance is selected by the INPUT TERMN Z switch, S122. In the center position of the switch, no resistor is connected (both relays K62 and K64 deactivated) and the input impedance is 1 M $\Omega$ /28 pF. In the 600  $\Omega$  position, relay K62 is energized, terminating the input with R64. In the 50  $\Omega$  position, both K62 and K64 are energized, terminating the input with R66.

The other section of the INPUT TERMN Z switch connects P2210-B13 to ground through W58 in the 50  $\Omega$  position, or through R56 in the 600  $\Omega$  position. This sets the calibrator level in the 7L5 to provide the correct level for the input termination selected. Also, when the switch is in the 600  $\Omega$  position, the output of U55E goes high to insert R62 between ground and P2210-B14. This tailors the gain in the 7L5 to compensate for a roll-off due to the 28 pF input capacitance. C62 is for decoupling. These resistors (R56, W58, R62) may be changed if the input impedance is changed; refer to the change procedure later in this section.

#### **Attenuators**

Two, 2-element parallel RC attenuators with 1  $M\Omega$  impedance are inserted as needed by relays K130 and K140. In addition, Q130 gates in an additional 8 dB of attenuation when both attenuators are in and the input buffer is selected on the 7L5 (gain is added in the 7L5 to compensate). The first attenuator section inserts 8 dB; the second section inserts 16 dB. Thus, with the 4 dB attenuator in the output of the amplifier, the L3 provides attenuator steps of 4 dB up to 36 dB; the 1-dB steps between the 4-dB steps are handled in the 7L5.

Fuse F125 protects input diodes CR146 and CR148 from exceeding their maximum current limits when high voltage transitions at the input charge C127 and C146.

These capacitors block dc primarily for Q130 and Q150. L125, R125, and the plug-in input capacitance form a low-pass filter with cutoff at about 10 MHz.

#### **Amplifier**

Refer to Fig. 4-1. The gates of Q150 and Q160 can be thought of as the noninverting and inverting inputs, respectively, of an operational amplifier, the output of which is the collector of Q154. This arrangement reduces second-order intermodulation distortion generated by the nonlinear gate voltage-drain current transfer characteristics of the JFET. The collector of Q154 is connected to the base of Q158; the emitter of Q158 is connected back to the inverting input of the operational amplifier. The output signal is taken from the collector of Q158, and is proportional to the ratio of its collector resistance (R158) to its emitter resistance. The emitter resistance consists primarily of the gain-setting resistors, selected by relays K162 and K164. These resistors change the gain in 8-dB steps. Diodes CR146 and CR148 protect the input by limiting the signal voltage excursion. The 1-M $\Omega$ input impedance of the amplifier is composed of R146 and R148 in parallel. This arrangement is for bias considerations, and also provides a discharge path for C146. Q152 is a constant-current source. At the output of the amplifier is a 4-dB attenuator which is switched in and out as necessary (refer to Control Circuits paragraph). Capacitor C160 sets the point of frequency roll-off for the

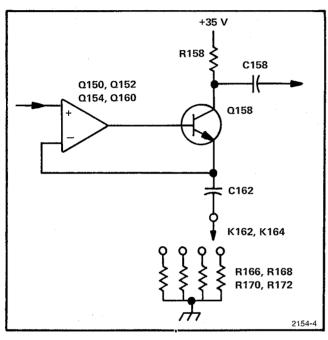


Fig. 4-1. L3 Amplifier (simplified diagram).

amplifier at 2 to 3 MHz (amplifier's 6 dB point); capacitor C162 blocks dc operating bias from the gain-setting resistors.


#### Low-Pass Filter

The low-pass filter is a seven-pole elliptical filter with a bandpass of slightly more than 5 MHz and an impedance of 300  $\Omega$ . The first zero point is at 10.7 MHz, giving about 110 dB of rejection at the 7L5 first IF frequency. The minimum out-of-band attenuation is 85 dB, up to 400 MHz. C202 and L200 are not part of the filter, but serve to correct a low-impedance mismatch near the edges of the 10.7 MHz passband of the 7L5.

#### Mixer

The first local oscillator from the 7L5 is coupled through T215 and applied to a balanced bridge mixer. The square waves developed at the end terminals of T215 are of equal amplitude but opposite polarity, so with no input signal applied, and assuming a perfectly balanced bridge, no current flows in the primary of T210. However, when a signal appears, the bridge is unbalanced and a squarewave-modulated input signal is coupled through T210 and T205 to the 10.7 MHz IF output. In the IF output line is a 2-dB attenuator to help improve the impedance match with the 7L5 IF port. Since the diode bridge is not perfectly matched, R220 provides a low frequency balance, and C210 provides a high frequency balance at 10.7 MHz.


(Circuit description continued on page 4-15.)

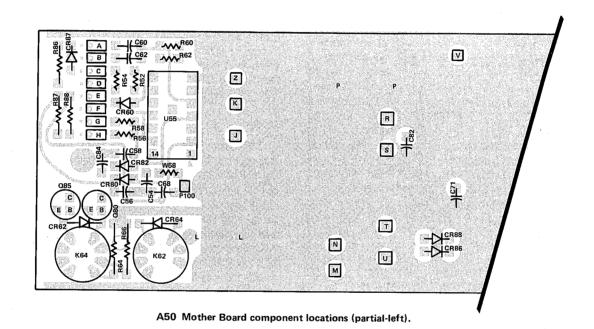


4-9


Service Information—L3

REV. A, OCT 1977

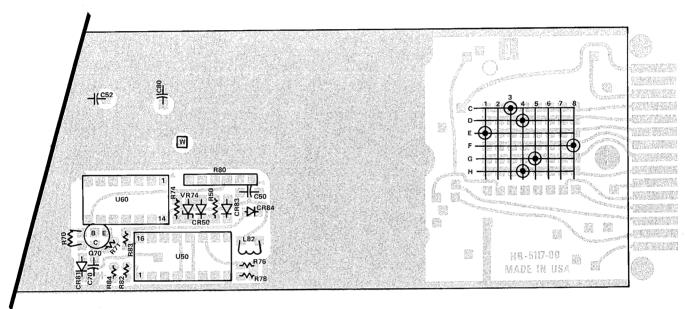


A50 Mother Board component locations (partial-right).

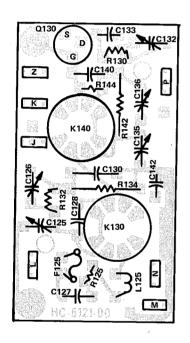

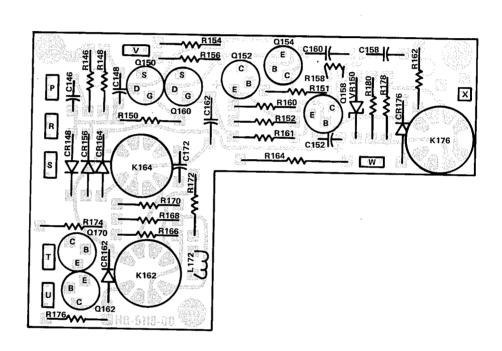


A125 Attenuators component locations.


A145 Amplifier component locations.

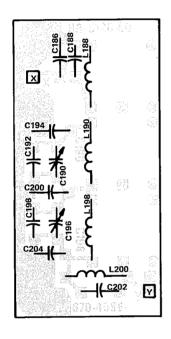

A185 Low-Pass Filter component locations.

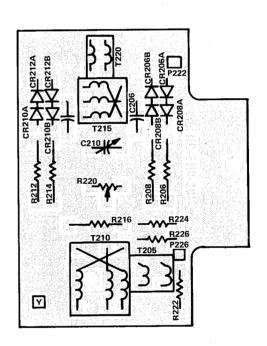

A205 Mixer component locations.

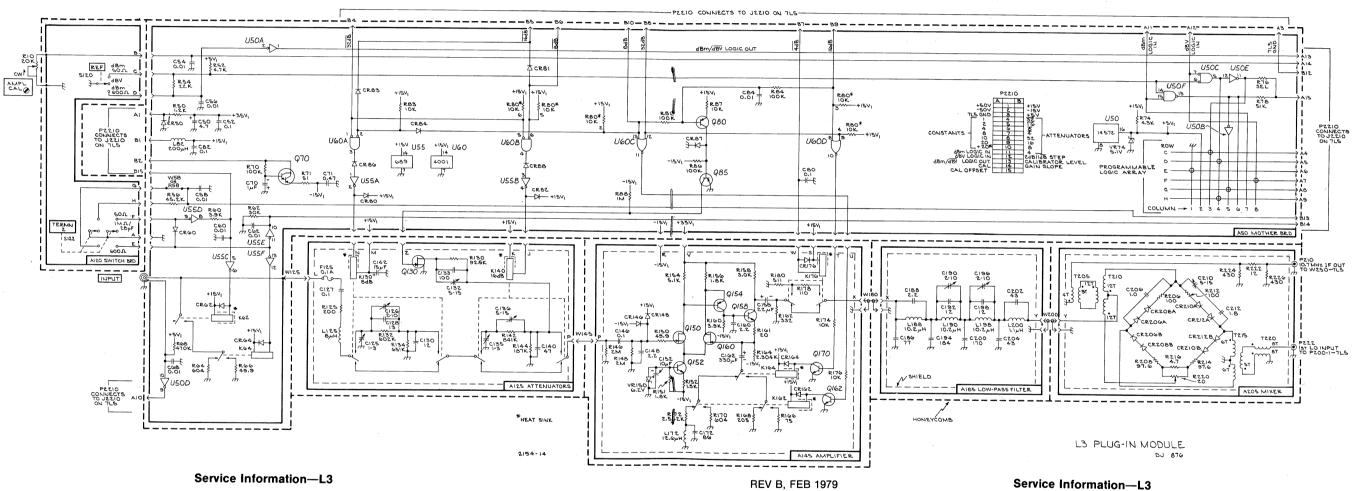

4-13

Service Information—L3

4-14

#### **Control Circuits**

The control circuits for the attenuator and amplifier gain settings decode the logic lines from the 7L5. Since the 7L5 logic lines are set up to operate only attenuators, a different decoding arrangement must be used. This is accomplished by diodes CR81, CR83, and CR84, gates

U60A, U60B, U60C, and U60D, and transistors Q80 and Q85. Table 4-1 gives the incoming codes for the various reference levels, and the manner in which they are established. Note that the reference levels given are the lowest in each 4-dB step (i.e., -28 dBm position is used for -28, -27, -26, and -25 dBm reference levels). The intermediate 1-dB steps are accomplished in the 7L5.

Table 4-1
Attenuator and gain switching logic

						Interface Pin Designations						
						U	Т	N	J	W	Z	
Lowest ref level Inputs (conn pin no.)					Outputs							
50 Ω dbm	dBV	32(B8)	16B(9)	8(B10)	4(B7) <sup>1</sup>	K162 <sup>2</sup>	K164 <sup>2</sup>	K130 <sup>1</sup>	K140 <sup>1</sup>	K176 <sup>1</sup>	Q130	
−29 to −128	-42 to -141	0	0	0	1	1	1	0	0	1	0	
-28	-41	0	0	0	0	1	1	0	0	0	0	
-24	-37	0	0	1	1	0	1	0	0	1	0	
	-33	0	0	1	0	0	1	0	0	0	0	
-16	-29	0	1	0	1	1	0	0	0	1	0	
-12	-25	0	1	0	0	1	0	0	0	0	0	
-8	-21	0	1	1	1	0	0	0	0	1	1 <sup>3</sup>	

Table 4-1 (cont)

					100) 1"+ 01	,					
						Interface Pin Designations					
						U	Т	N	J	W	Z
Lowest ref level Inputs (conn pin no.)				·	Outputs						
50 Ω dbm	dBV	32(B8)	16B(9)	8(B10)	4(B7) <sup>1</sup>	K162 <sup>2</sup>	K164 <sup>2</sup>	K130 <sup>1</sup>	K140 <sup>1</sup>	K176 <sup>1</sup>	Q130
-4	-17	0	1	1	0	0	0	0	0	0	1 <sup>3</sup>
0	-13	1	0	0	1	0	0	1	0	1	0
+4	-9	1	0	0	0	0	0	1	0	0	0
+8	<b>-5</b>	1	0	1	1	0	0	0	1	1	0
+12	-1	1	0	1	0	0	0	. 0	1	0	0
+16	+3	1	1	0	1	0	0	1	1	1	0
+20	+7	1	1	0	0	0	0	1	1	0	0
+16 with input	+3 t buffer	1	1	1	1	0	0	1	1	1	1
+20   with input	+7	1	1	1	0	0	0	1	1	0	1

<sup>&</sup>lt;sup>1</sup>0=relay energized <sup>2</sup>1=relay energized <sup>3</sup>Inconsequential, since the attenuator is not switched in.

#### **Input Impedance Change Provisions**

Although the L3 Plug-In Module is normally supplied with input terminations of 50  $\Omega$  and 600  $\Omega$ , it is possible to change either or both of these to any termination impedance desired from 50  $\Omega$  to about 900  $\Omega$ . The following is an outline of the changes involved; complete instructions are found in the Input Impedance Change Procedure, found later in this section.

These changes are involved in an input impedance change:

- (1) Resistor R64 or R66, or both, are changed to terminate the input.
- (2) Resistor R56 or R58 (W58 on schematic), or both, are changed to set the calibrator level in the 7L5 to provide the correct level for the input impedance selected (the calibrator output impedance remains at 50  $\Omega$ ).
- (3) Resistor R62 may be changed for high-frequency roll-off compensation. The value is determined from Fig. 4-2.

- (4) Resistor R76 or R78, or both, may be changed to add a small amount of gain (up to 1 dB) in the 7L5 so that the L3 will be calibrated in dBm with respect to the new termination impedance. The resistor value is given in Fig. 4-3.
- (5) The programmable logic array is reprogrammed so that the dBm readout(s) will be correct.

#### **Programmable Logic Array**

The 7L5 provides 149 reference level steps; the programmable logic array (pla) allows positioning of the range. For instance, with the INPUT REF switch set to dBm 50  $\Omega$ , the range is from +21 dBm to -128 dBm; with the switch set to dBV, the range is from +8 dBV to -141 dBV. (A separate line, A13, selects whether the readout is dBm or dBV.) The lines are coded in BCD as indicated in Table 4-4. A logic zero on all lines provides a maximum readout of -1. The Input Impedance Change Procedure describes how to reprogram the pla when the input impedance is changed.

#### **Power Supplies**

The supply voltages used in the 7L5 are -15 V, +5 V, +15 V, and +35 V. The -15 V supply is decoupled by Q70 to provide the improved ripple rejection needed by the amplifier. The +15 V supply is decoupled by L82-C82 and C142, and provides a source for the +5 V supply, R74-VR74. The +35 V supply is derived by dropping the 7L5's +50 V source through decoupling resistor R50.

# INPUT IMPEDANCE CHANGE PROCEDURE

The following describes the procedure necessary to change the input termination of the L3. No provision is made to change the front panel nomenclature, nor is any mention made of possible changes necessary in the calibration procedure.

### 1. Disassembly of the Unit

- a. Remove the L3 from the 7L5, then remove the screws securing the top and bottom covers.
- b. Disconnect the two wires coming from the INPUT connector to the circuit board. Note their locations for later replacement.
- c. Remove the five screws securing the mother board, then remove the mother board by carefully prying it straight out at the front and rear.

## 2. Changing Input Terminations (R64 and R66)

Replace input terminating resistors R64 or R66, or both, as desired. R64 should be the larger value of the two unless they are both less than 300  $\Omega.$  R66 should be less than 600  $\Omega$  and R64 should be less than 900  $\Omega$  to ensure that the instrument meets its 0.5 dB flatness specification at 5 MHz. These resistors are located on the mother board, between relays K62 and K64.

# 3. Change Calibrator Level-Setting Resistors (R56 and R58)

a. R56 sets the calibrator level for the R64 termination; R58 sets it for the R66 termination. Compute R56 or R58 according to the following formulas.

R56 = 4100 ( 
$$\frac{R64}{50 \Omega}$$
 -1) R58 = 4100 (  $\frac{R66}{50 \Omega}$  -1)

b. Replace the resistor(s), located on the mother board directly behind the switch that interconnects pins G and H. To maintain calibrator accuracy, use 1/8 watt, 0.1% T9 metal film resistors.

### 4. Replace Gain Slope Resistor

a. Select the gain slope resistor R62 value from the graph in Fig. 4-2 and replace.

#### NOTE

If the termination impedance is less than 200  $\Omega$ , R62 is 0  $\Omega$ . If the termination impedance is more than 700  $\Omega$ , R62 is omitted.

b. R62 is located on the mother board near U55 pin 7.

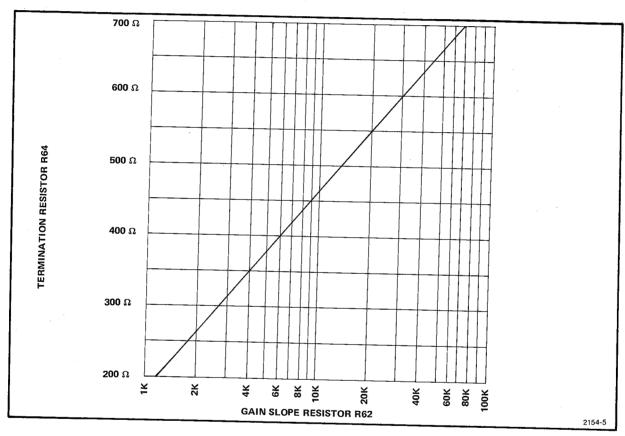


Fig. 4-2. Gain slope resistor R62 vs input impedance.

# 5. Set dBm Readout Code (reprogram the programmable logic array)

- a. Use Table 4-2 and the following procedure to calculate and incorporate the programmable logic array (pla) when the termination resistors R64 and R66 are changed.
  - b. Calculate the constants x or y as follows:

For R66 termination: y=10 (3— $log_{10}$  R66) Example: For 50  $\Omega$ , y=10 (3— $log_{10}$  50) = 13.01

For R64 termination: x=10 (3— $\log_{10}$  R64) Example: For 600  $\Omega$ , x=10 (3— $\log_{10}$  600) = 2.218 c. Add nine (constant) to the integer part of the x or y value, then insert the BCD equivalent in the appropriate row of Table 4-2 (R66 and R64). Table 4-3 can be used as an example (R66 =  $50~\Omega$ ).

d. Match the column binary number, generated for each column of Table 4-2, with those in Table 4-4 and enter the appropriate column numbers from Table 4-4 to the Column row of Table 4-2 (e.g., 100 has a column value of 4 and 011 a column value of 3).

Table 4-2

Readout	Most Significant BCD Digit			Least Significant BCD Digit			
Offset Value	20	10	8	4	2	1	
dBm—R66							←Y+9
dBV	0	0	1	0	0	1	<b>←</b> 9
dBm—R64							←X+9
Row	Н	G	F	E	D	С	
Column							

Readout	Most Significant BCD Digit			Least Significant BCD Digit			
Offset Value	20	10	8	4	2	1	
dBm 50 Ω—R66	1	0	0	0	1	0	←Y+9=22
dBV	0	0	1	0	0	1	<b>←</b> 9
dBm 600 Ω—R64	0	1	0	0	0	1	←X+9=11
Row	Н	G	F	E	D	С	
Column from Table 4-4	4	5	8	1	4	3	

Table 4-4
Column Binary-to-Decimal Conversion

1	2	3	4	5	6	7	8
0	1	0	1	0	1	1	0
0	1	1	0	0	1	0	1
0	1	1	0	1	0	1	0

**REV. A, OCT 1977** 

Service Information—L3

- e. Compare the row column pairs (e.g., H4, G5, etc.) generated in Table 4-2 to those of Table 4-3. Those that are different indicate the changes necessary in the pla. Change the programmable logic array (pla) as follows:
- 1) Remove plated-through connections by drilling through the hole with a #55 drill.
- 2) Install new connections by drilling a hole with #60 drill, then fill the hole with solder. Make sure that the run on both sides of the board connects to the plated hole.
- 3) Alternately run a short piece of wire through one of the holes in the pla board and solder it to the desired runs on both sides of the board. Use caution and ensure that the connections do not short to the metal housing when the board is installed.

#### Example:

If the desired termination is 50  $\Omega$  and 350  $\Omega$ . In step 2, since 350  $\Omega$  is larger than 300  $\Omega$ , R64 should be 350  $\Omega$  and R66 should remain 50  $\Omega$ . In step 3, part a, since R66 is not changed, R58 remains 0  $\Omega$ . R56 = 4100 (350  $\div$  50 -1) =

 $24.60~k\Omega$ . In step 4, part 1, the graph in Fig. 4-2 shows that R62 = 4.0 k $\Omega$  (a standard value is 3.9 k $\Omega$ , 5% resistor). In step 5, part b, for R66, y = 10 (3—log 50) = 13.01 and for R64, x = 10 (3—log 350) = 4.56.

In step 5, parts c and d, adding 9 to the integer of the x value and entering the BCD equivalent in the working Table 4-2, generates Table 4-5. Comparison with Table 4-4 gives the resultant column numbers listed in Table 4-5.

In step 5, part e, the comparison of row-column pairs of Table 4-5 with those of Table 4-3 shows that the only change required is to connect row D to column 7 instead of column 4. Therefore, the procedure calls for drilling out the plating at matrix point D on the "pla," drill a new hole at D7, and solder the front run to the back run at D7.

In step 6, part a, since R66 was not changed, R76 is not installed. Since the fractional part of x in step 5, part b, is 0.56, the graph of Fig. 4-3 shows R78 = 18 k $\Omega$  which is a standard 5% value.

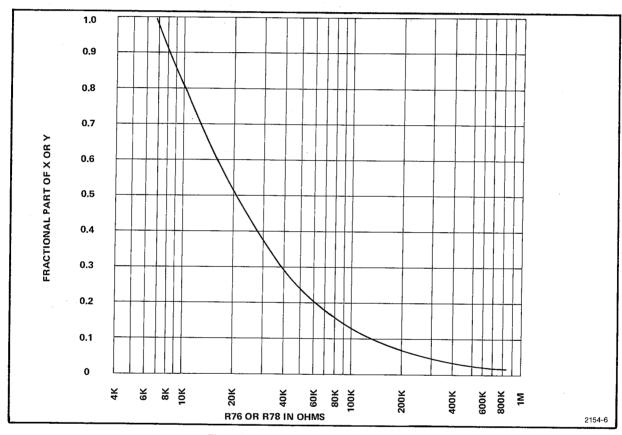


Fig. 4-3. R76 or R78 vs gain offset in dB.

Table 4-5
Impedance Change Example

Readout	Most Significant BCD Digit			Least Significant BCD Digit			
Offset Value	20	10	8	4	2	1	
dBm—R66	1	. 0	0	0	1	0	←Y+9=22
dBV	0	0	1	0	0	1	-9
dBm—R64	0	1	0	0	1	1	←X+9=13
Row	Н	G	F	Е	D	С	
Column from Table 4-4	4	5	8	1	7	3	

#### 6. Change the Gain Setting Resistors (R76 and R78)

a. The value of R76 and R78 can be determined from the graph in Fig. 4-3. R76 pairs with R66 termination and R78 goes with R64 termination. The horizontal axis of the graph represents the fractional part of x or y, determined by the computations in step 5, part b (e.g., 0.218 for y value of 2.218 is 51 k $\Omega$  for R78).

b. Replace R78 with the nearest standard value 5%, 0.25 W resistor. (R78 is located near U50, pin 8, on the mother board, and R76 is adjacent to R78. See Component Location figure for the mother board.)

### REPLACEABLE PARTS

#### PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

#### FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

#### **ITEM NAME**

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

#### **INDENTATION SYSTEM**

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

1 2 3 4 5

Name & Description

Assembly and/or Component
Attaching parts for Assembly and/or Component

Detail Part of Assembly and/or Component Attaching parts for Detail Part

Parts of Detail Part Attaching parts for Parts of Detail Part

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation. The separation symbol - - - \* - - - indicates the end of attaching parts.

Attaching parts must be purchased separately, unless otherwise specified.

#### ABBREVIATIONS

"INCH BLECTRIN ELECTRON IN INCH SE SINGLE END SECTION SHILLD								
	# ACTR ADPTR ALIGN AL ASSEM ASSEM ASSEM ASSEM ASSEM AWG BRKT BRS BRZ ESHG CAB CAP CHAS CKT CONN COV CPLG CRT	NUMBER SIZE ACTUATOR ADAPTER ALIGNMENT ALUMINUM ASSEMBLED ASSEMBLY ATTENUATOR AMERICAN WIRE GAGE BOARD BRACKET BRASS BRONZE BUSHING CABINET CAPACITOR CERAMIC CHASSIS CIRCUIT COMPOSITION CONNECTOR COVER COUPLING CATHODE RAY TUBE DEGREE	ELEC ELCTLT ELEM EPL EQPT EXT FIL FLEX FLH FLTR FR FSTNR FT TXD GSKT HDL HEX HEX HD HEX SOC HLCPS HLEXT HV IC ID IDENT	ELECTRICAL ELECTROLYTIC ELEMENT ELECTRICAL PARTS LIST EQUIPMENT EXTERNAL FILLISTER HEAD FLEXIBLE FLAT HEAD FILTER FRAME OF FRONT FASTENER FOOT FIXED GASKET HANDLE HEXAGONAL HEAD HEXAGONAL HEAD HEXAGONAL SOCKET HELICAL COMPRESSION HEICAL EXTENSION HIGH VOLTAGE INTEGRATED CIRCUIT INSIDE DIAMETER IDENTIFICATION	INCAND INSUL INTL LPHLDR MACH MECH MTG NIP NON WIRE OBD OVH PH BRZ PL PLSTC PN PNH PWR RCPT RES RGD RLF RTNR SCH SCOPE	INCANDESCENT INSULATOR INTERNAL LAMPHOLDER MACHINE MECHANICAL MOUNTING NIPPLE NOT WIRE WOUND ORDER BY DESCRIPTION OUTSIDE DIAMETER OVAL HEAD PHOSPHOR BRONZE PLAIN OF PLATE PLASTIC PART NUMBER PAN HEAD POWER RECEPTACLE RESISTOR RIGID RELIEF RETAINER SOCKET HEAD OSCILLOSCOPE	SECT SEMICONE SHLDR SHLDR SKT SL SLFLKG SLVG SPR SQ SST STL SW T TERM THD THK TNSN TPG TRH V VAR W/ WSHR XFMR	SECTION SEMICONDUCTOR SHIELD SHOULDERED SOCKET SLIDE SELF-LOCKING SLEEVING SPRING SQUARE STAINLESS STEEL STEEL SWITCH TUBE TERMINAL THREAD THICK TENSION TAPPING TRUSS HEAD VOLTAGE VARIABLE WITH WASHER TRANSFORMER

REV A, DEC 1979

# CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
000AH	STANDARD PRESSED STEEL CO., UNBRAKO DIV.	8535 DICE ROAD	SANTA EF SPRINGS CA 00070
0000A	LEMO USA	2015 SECOND ST.	SANTA FE SPRINGS, CA 90670 BERKELEY, CA 94710
00779	AMP, INC.	P O BOX 3608	HARRISBURG, PA 17105
00853	SANGAMO ELECTRIC CO., S. CAROLINA DIV.	P O BOX 128	PICKENS, SC 29671
01121	ALLEN-BRADLEY COMPANY	1201 2ND STREET SOUTH	MILWAUKEE, WI 53204
01295	TEXAS INSTRUMENTS, INC., SEMICONDUCTOR	P O BOX 5012, 13500 N CENTRAL	MILWAUKEE, WI 53204
	GROUP	EXPRESSWAY	DALLAS, TX 75222
04713	MOTOROLA, INC., SEMICONDUCTOR PROD. DIV.	5005 E MCDOWELL RD PO BOY 20023	
07263	FAIRCHILD SEMICONDUCTOR, A DIV. OF	TO BOX 20925	PHOENIX, AZ 85036
	FAIRCHILD CAMERA AND INSTRUMENT CORP.	464 ELLIS STREET	MOUNTAIN VIEW, CA 94042
14433	ITT SEMICONDUCTORS	3301 ELECTRONICS WAY	HOUNTAIN VIEW, CA 94042
		P O BOX 3049	WEST PALM BEACH, FL 33402
22526	BERG ELECTRONICS, INC.	YOUK EXPRESSWAY	NEW CUMBERLAND, PA 17070
24546	CORNING GLASS WORKS, ELECTRONIC		WEW COMBERLAND, PA 17070
	COMPONENTS DIVISION	550 HIGH STREET	BRADFORD, PA 16701
24931	SPECIALTY CONNECTOR CO., INC.	3560 MADISON AVE.	INDIANAPOLIS, IN 46227
28480	HEWLETT-PACKARD CO., CORPORATE HQ.	1501 PAGE MILL RD.	PALO ALTO, CA 94304
32559	BIVAR, INC.	1617 E EDINGER AVE.	SANTA ANA, CA 92705
			JANIA ANA, CA 92705

## CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip		
55210 56289	GETTIG ENG. AND MFG. COMPANY SPRAGUE ELECTRIC CO.	PO BOX 85, OFF ROUTE 45	SPRING MILLS, PA 16875 NORTH ADAMS, MA 01247		
71838	STANDARD PRESSED STEEL COMPANY, CLEVE-		nonth libinio, the 01247		
	LAND CAP SCREW DIVISION	4444 LEE ROAD	CLEVELAND, OH 44128		
72982	ERIE TECHNOLOGICAL PRODUCTS, INC.	644 W. 12TH ST.	ERIE, PA 16512		
73138	BECKMAN INSTRUMENTS, INC., HELIPOT DIV.		FULLERTON, CA 92634		
74445	HOLO-KROME CO.	31 BROOK ST. WEST	HARTFORD, CT 06110		
75042	TRW ELECTRONIC COMPONENTS, IRC FIXED				
	RESISTORS, PHILADELPHIA DIVISION	401 N. BROAD ST.	PHILADELPHIA, PA 19108		
75915	LITTELFUSE, INC.	800 E. NORTHWEST HWY	DES PLAINES, IL 60016		
77250	PHEOLL MANUFACTURING CO., DIVISION		out indicate, in occio		
	OF ALLIED PRODUCTS CORP.	5700 W. ROOSEVELT RD.	CHICAGO, IL 60650		
80009	TEKTRONIX, INC.	P O BOX 500	BEAVERTON, OR 97077		
82647	TEXAS INSTRUMENTS, INC.,		Bellianton, on 77077		
	CONTROL PRODUCTS DIV.	34 FOREST ST.	ATTLEBORO, MA 02703		
83385	CENTRAL SCREW CO.	2530 CRESCENT DR.	BROADVIEW, IL 60153		
87308	N. L. INDUSTRIES, INC., SOUTHERN SCREW		510115VIBW, 1E 00155		
	DIV.	P. O. BOX 1360	STATESVILLE, NC 28677		
90201	MALLORY CAPACITOR CO., DIV. OF	3029 E. WASHINGTON STREET	0111110V1111111, NO 20077		
	P. R. MALLORY AND CO., INC.	P. O. BOX 372	INDIANAPOLIS, IN 46206		
91637	DALE ELECTRONICS, INC.	P. O. BOX 609	COLUMBUS, NE 68601	,	
95146	ALCO ELECTRONICS PRODUCTS, INC.	P. O. BOX 1348	LAWRENCE, MA 01842		

Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
				Code	Mil Tull Hombel
A50	670-4563-00	•	CKT BOARD ASSY: MOTHER	80009	670-4563-00
A50	670-4563-01		CKT BOARD ASSY: MOTHER	80009	670-4563-01
			(OPTION 1 ONLY)		
A120	670-4609-00		CKT BOARD ASSY: SWITCH	80009	670-4609-00
A125	670-4567-00		CKT BOARD ASSY: ATTENUATOR	80009	670-4567-00
A145	670-4565-00		CKT BOARD ASSY: AMPLIFIER	80009	670-4565-00
A185	670-4566-00		CKT BOARD ASSY:LOW PASS FILTER	80009	670-4566-00
A205	670-4564-00		CKT BOARD ASSY:MIXER	80009	670-4564-00
C50	290-0525-00		CAP., FXD, ELCTLT: 4.7UF, 20%, 50V	56289	196D475X0050KA1
C52	283-0111-00		CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8121-N088Z5U104M
C54	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C56	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C58	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C60	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C62	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C68	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C70	290-0267-00		CAP., FXD, ELCTLT: 1UF, 20%, 35V	56289	162D105X0035CD2
C71	283-0346-00		CAP., FXD, CER DI:0.47UF, +80-20%, 100V	72982	8131-M100F474Z
C80	283-0111-00		CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8121-N088Z5U104M
C82	283-0111-00		CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8121-N088Z5U104M
C84	283-0204-00		CAP., FXD, CER DI:0.01UF, 20%, 50V	72982	8121N061Z5U0103M
C125	281-0151-00		CAP., VAR, CER DI:1-3PF, 100V	72982	518-600A1-3
C126	281-0221-00		CAP., VAR, CER DI: 2-10PF, 100V	72982	0513013A 2.0-10
C127	283-0178-00		CAP., FXD, CER DI:0.1UF, +80-20%, 100V	72982	8131N145651 104Z

**REV B, DEC 1979** 

Replaceable Electrical Parts—L3

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
C128	281-0657-00		CAP., FXD, CER DI:13PF, 2%, 500V	72982	374-005-C0G0130G
C130	281-0505-00		CAP., FXD, CER DI:12PF,+/-1.2PF,500V	72982	301-012C0G0120K
C132	281-0161-00		CAP., VAR, CER DI:5-15PF, 350V	72982	518-000A5-15
C133	283-0330-00		CAP., FXD, CER DI:100PF, 5%, 50V	72982	8111N068C0G0101J
C135	281-0151-00	•	CAP., VAR, CER DI:1-3PF, 100V	72982	518-600A1-3
C136	281-0161-00		CAP., VAR, CER DI:5-15PF, 350V	72982	518-000A5-15
C140	283-0115-00		CAP., FXD, CER DI:47PF, 5%, 200V	72982	805-519-COFO470J
C142	290-0527-00		CAP., FXD, ELCTLT: 15UF, 20%, 20V	90201	TDC156M020FL
C146	283-0178-00		CAP., FXD, CER DI:0.1UF, +80-20%, 100V	72982	8131N145651 104Z
C148	281-0604-00		CAP., FXD, CER DI:2.2PF, +/-0.25PF, 500V	72982	301-000C0J0229C
C152	290-0536-00		CAP., FXD, ELCTLT: 10UF, 20%, 25V	90201	TDC106M025FL
C158	290-0718-00		CAP., FXD, ELCTLT: 22UF, 20%, 35V	56289	196D226X0035PE4
C160	281-0604-00		CAP., FXD, CER DI:2.2PF, +/-0.25PF, 500V	72982	301-000C0J0229C
C168	290-0533-00		CAP., FXD, ELCTLT: 330UF, 20%,,6V	90201	TDC337M006WLD
C172	283-0352-00		CAP., FXD, CER DI:86PF, 5%, 100V	72982	8121-P3K860J
C186	283-0633-00		CAP., FXD, MICA D:77PF, 1%, 100V	00853	D151E770F0
C188	281-0610-00		CAP., FXD, CER DI:2.2PF, +/-0.1PF, 500V	72982	374001C0J0229B
C190	281-0221-00		CAP., VAR, CER DI: 2-10PF, 100V	72982	0513013A 2.0-10
C192	283-0168-00		CAP., FXD, CER DI:12PF, 5%, 100V	72982	8101B121C0G0120J
C194	283-0668-00		CAP., FXD, MICA D:184PF, 1%, 500V	00853	D155F1840F0
C196	281-0221-00		CAP., VAR, CER DI:2-10PF, 100V	72982	0513013A 2.0-10
C198	283-0168-00		CAP., FXD, CER DI:12PF, 5%, 100V	72982	8101B121C0G0120J
C200	283-0646-00		CAP., FXD, MICA D:170PF, 1%, 100V	00853	D151E171F0
C202	283-0600-00		CAP., FXD, MICA D: 43PF, 5%, 500V	00853	D105E430J0

5-6

Replaceable Electrical Parts—L3

**REV A, DEC 1979** 

Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
C204	283-0600-00		CAP., FXD, MICA D: 43PF, 5%, 500V	00853	D105E430J0
C206	281-0599-00		CAP., FXD, CER DI:1PF, +/-0.25PF, 500V	72982	374009C0K0109C
C210	281-0161-00		CAP., VAR, CER DI:5-15PF.350V	72982	518-000A5-15
C212	281-0670-00		CAP., FXD, CER DI:1.8PF, +/-0.1PF, 500V	72982	374005C0K0189B
CR50	152-0066-00		SEMICOND DEVICE: SILICON, 400V, 750MA	14433	LG4016
CR60	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR62	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR64	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR80	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR81	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR82	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 50NA	80009	152-0141-02
CR83	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR86	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR88	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR146	152-0457-00		SEMICOND DEVICE: SILICON, 25V	28480	5082-2068
CR148	152-0457-00		SEMICOND DEVICE: SILICON, 25V	28480	5082-2068
CR162	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR164	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR176	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 50NA	80009	152-0141-02
CR206	153-0025-00		SEMICOND DVC SE:50UA/10MV,1MA/5MV	80009	153-0025-00
CR208	153-0037-00		SEMICOND DVC SE:SILICON, MTCHD PAIR, 15V	80009	153-0037-00
CR210	153-0037-00		SEMICOND DVC SE:SILICON, MTCHD PAIR, 15V	80009	153-0037-00

REV A, DEC 1979

Replaceable Electrical Parts—L3

Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
CR212	153-0025-00		SEMICOND DVC SE:50UA/10MV,1MA/5MV	80009	153-0025-00
F125	159-0056-00		FUSE, CARTRIDGE: 0.1A, 125V, FAST-BLOW	75915	279-100
K62 K64 K130	148-0107-01 148-0107-01 148-0107-01 148-0107-01		RELAY, ARMATURE: 18VDC COIL RELAY, ARMATURE: 18VDC COIL RELAY, ARMATURE: 18VDC COIL RELAY, ARMATURE: 18VDC COIL	80009 80009 80009 80009	148-0107-01 148-0107-01 148-0107-01 148-0107-01
K140 K162 K164	148-0107-01 148-0107-01 148-0107-01		RELAY, ARMATURE: 18VDC COIL RELAY, ARMATURE: 18VDC COIL	80009 80009	148-0107-01 148-0107-01
К176	148-0107-01		RELAY, ARMATURE: 18VDC COIL	80009	148-0107-01
L82 L125 L172 L188 L190 L198	108-0598-00 108-0440-00 108-0724-00 108-0833-00 108-0833-00 108-0833-00		COIL,RF:200UH COIL,RF:8UH,TOROIDAL INDUCTOR COIL,RF:12.5NH COIL,RF:10.2UH COIL,RF:10.2UH COIL,RF:10.2UH	80009 80009 80009 80009 80009	108-0598-00 108-0440-00 108-0724-00 108-0833-00 108-0833-00 108-0833-00
L200	108-0215-00		COIL, RF:1.1UH	80009	108-0215-00
Q70 Q80 Q85 Q130 Q150 Q152	151-0435-00 151-0188-00 151-0188-00 151-1021-00 151-1070-00 151-0190-00		TRANSISTOR: SILICON, PNP TRANSISTOR: SILICON, PNP TRANSISTOR: SILICON, PNP TRANSISTOR: SILICON, JFE TRANSISTOR: SILICON, FE, N-CHANNEL TRANSISTOR: SILICON, NPN	80009 80009 80009 80009 07263	151-0435-00 151-0188-00 151-0188-00 151-1021-00 151-1070-00 8032677

Replaceable Electrical Parts—L3

5-8

REV A, DEC 1979

Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	AAEn Doort Normal
		Docom Docom	Nume & Description	Code	Mfr Part Number
Q154	151-0220-00		TRANSISTOR: SILICON, PNP	80009	151-0220-00
Q158	151-0333-00		TRANSISTOR: SILICON, NPN, SEL FROM MPS918	04713	SPS1752
Q160	151-1070-00	•	TRANSISTOR: SILICON, FE, N-CHANNEL	80009	151-1070-00
Q162	151-0190-00		TRANSISTOR: SILICON, NPN	07263	S032677
Q170	151-0190-00		TRANSISTOR: SILICON, NPN	07263	8032677
R10	311-1880-00		RES., VAR, NONWIR: 20K OHM, 1W	01121	14M871
R50	301-0122-00		RES.,FXD,CMPSN:1.2K OHM,5%,0.50W	01121	EB1225
R52	315-0472-00		RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	01121	CB4725
R54	315-0223-00		RES.,FXD,CMPSN:22K OHM,5%,0.25W	01121	CB2235
R56	321-1624-06		RES.,FXD,FILM:45.2K OHM,0.25%,0.125W	91637	MFF1816C45201C
R58	321-0223-00		RES., FXD, FILM: 2.05K OHM, 1%, 0.125W	91637	MFF1816G20500F
			(R58, OPTION 1 ONLY)		
R60	315-0392-00		RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	01121	СВ3925
R66	321-0085-03		RES., FXD, FILM: 75 OHM, 0.25%, 0.125W	24546	NC55C75R0C
R66			(R66, OPTION 1 ONLY)		
R62	315-0303-00		RES.,FXD,CMPSN:30K OHM,5%,0.25W	01121	CB3035
R64	322-0172-00		RES.,FXD,FILM:604 OHM,1%,0.25W	75042	CEBT0-6040F
R66	322-0068-00		RES., FXD, FILM: 49.9 OHM, 1%, 0.25W	75042	CEBTO-49R90F
R68	315-0474-00		RES.,FXD,CMPSN:470K OHM,5%,0.25W	01121	CB4745
R70	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	01121	CB1045
R71	317-0510-00		RES., FXD, CMPSN:51 OHM, 5%, 0.125W	01121	BB5105
R74	315-0432-00		RES., FXD, CMPSN: 4.3K OHM, 5%, 0.25W	01121	CB4325
R76	315-0513-00		RES.,FXD,CMPSN:51K OHM,5%,0.25W	01121	CB5135
			(R76, OPTION 1 ONLY)		

**REV C, DEC 1979** 

Replaceable Electrical Parts-L3

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R78	315-0513-00		RES., FXD, CMPSN:51K OHM, 5%, 0.25W	01121	CB5135
R80	307-0542-00		RES,NTWK,FXD,FI:10K OHM,5%,0.125W	91637	MSP06A01-103J
R82	315-0104-00		RES., FXD, CMPSN: 100K OHM, 5%, 0.25W	01121	CB1045
R83	315-0103-00	•	RES., FXD, CMPSN: 10K OHM, 5%, 0.25W	01121	CB1035
R84	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W	01121	CB1045
R86	317-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.125W	01121	BB1045
R87	317-0103-00		RES., FXD, CMPSN: 10K OHM, 5%, 0.125W	01121	BB1035
R88	317-0105-00		RES., FXD, CMPSN: 1M OHM, 5%, 0.125W	01121	BB1055
R125	315-0201-00		RES., FXD, CMPSN: 200 OHM, 5%, 0.25W	01121	CB2015
R130	321-0831-03		RES., FXD, FILM: 92.5K OHM, 0.25%, 0.125W	24546	NC55C9252C
R132	321-0976-04		RES., FXD, FILM: 602 OHM, 0.1%, 0.125W	91637	HFF188D60202B
R134	321-1654-07		RES.,FXD,FILM:651K OHM,0.1%,0.125W	91637	HMF188C65102B
R142	321-1697-01		RES.,FXD,FILM:841K OHM,0.5%,0.125W	91637	MFF1816G84102D
R144	321-0701-00		RES., FXD, FILM: 187K OHM, 0.25%, 0.125W	91637	MFF1816C18702C
R146	321-0510-00		RES.,FXD,FILM:2M OHM,1%,0.125W	91637	HFF188G20003F
R148	321-0510-00		RES., FXD, FILM: 2M OHM, 1%, 0.125W	91637	HFF188G20003F
R150	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	91637	MFF1816G49R90F
R152	315-0132-00		RES., FXD, CMPSN:1.3K OHM, 5%, 0.25W	01121	CB1325
R154	315-0512-00		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
R156	315-0182-00		RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	01121	CB1825
R158	315-0302-00		RES., FXD, CMPSN: 3K OHM, 5%, 0.25W	01121	CB3025
R160	315-0392-00		RES., FXD, CMPSN: 3.9K OHM, 5%, 0.25W	01121	CB3925
R161	315-0200-00		RES.,FXD,CMPSN:20 OHM,5%,0.25W	01121	CB2005
R162	321-0147-00		RES., FXD, FILM: 332 OHM, 1%, 0.125W	91637	MFF1816G332R0F

5-10

Replaceable Electrical Parts—L3

**REV C, DEC 1979** 


	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R164	322-0633-00		RES., FXD, FILM: 2.304K OHM, 1%, 0.25W	91637	MFF1421D23040C
R166	321-0085-03		RES., FXD, FILM: 75 OHM, 0.25%, 0.125W	24546	NC55C75ROC
R168	321-0127-01		RES., FXD, FILM: 205 OHM, 0.5%, 0.125W	91637	MFF1816G205R0D
R170	321-0172-02		RES., FXD, FILM: 604 OHM, 0.5%, 0.125W	91637	MFF1816D604R0D
R172	321-0710-01	•	RES., FXD, FILM: 2.542K OHM, 0.5%, 0.125W	91637	MFF1816G25420D
R174	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
R176	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
R178	321-0101-00		RES., FXD, FILM: 110 OHM, 1%, 0.125W	91637	MFF1816G110R0F
R180	321-0165-00		RES., FXD, FILM: 511 OHM, 1%, 0.125W	91637	MFF1816G511R0F
R206	321-0097-00		RES., FXD, FILM: 100 OHM, 1%, 0.125W	91637	MFF1816G100R0F
R208	321-0096-00		RES., FXD, FILM: 97.6 OHM, 1%, 0.125W	91637	MFF1816G97R60F
R212	321-0097-00		RES.,FXD,FILM:100 OHM,1%,0.125W	91637	MFF1816G100R0F
R214	321-0096-00		RES.,FXD,FILM:97.6 OHM,1%,0.125W	91637	MFF1816G97R60F
R216	307-0107-00		RES., FXD, CMPSN: 5.6 OHM, 5%, 0.25W	01121	CB56G5
R220	311-1007-00		RES., VAR, NONWIR: 20 OHM, 20%, 0.50W	73138	82-38-0
R222	317-0120-00		RES., FXD, CMPSN:12 OHM, 5%, 0.125W	01121	BB1205
R224	317-0431-00		RES., FXD, CMPSN: 430 OHM, 5%, 0.125W	01121	BB4315
R226	317-0431-00		RES.,FXD,CMPSN:430 OHM,5%,0.125W	01121	BB4315
S120	260-1841-00		SWITCH, TOGGLE: DPDT, 10MA, 5V	95146	TT-00126
S122	260-1841-00		SWITCH, TOGGLE: DPDT, 10MA, 5V	95146	TT-00126
T205	120-1076-00		XFMR, RF: TOROID, 2 WINDINGS	80009	120-1076-00
T210	120-1074-00		XFMR, RF: TOROID, 12 TURNS, TRIFILAR	80009	120-1074-00
T215	120-1075-00		XFMR, RF: TOROID, 3 WINDINGS, TRIFILAR	80009	120-1075-00
T220	120-0445-00		XFMR, TOROID: 8 TURNS, BIFILAR	80009	120-0445-00

REV A, DEC 1979

Replaceable Electrical Parts—L3

Ckt No.	Tektronix Part No.	Serial/Model No.  Eff Dscont		Mfr		
<u>CKI 140.</u>	raii No.	Eff Dscont	Name & Description	Code	Mfr. Part Number	
U50	156-0767-00		MICROCIRCUIT, DI: HEX GATE	04713	MC14572CL	
บ55	156-0790-00		MICROCIRCUIT, DI: HEX INVERTER	04713	MC689P	
บ60	156-0349-00	во10100 во20949	MICROCIRCUIT, DI: QUAD 2-INPUT NOR GATE	80009	156-0349-00	
U60	156-0349-03	в020950	MICROCIRCUIT, DI: QUAD 2-INPUT NOR GATE, SEL	80009	156-0349-03	
VR74	152-0279-00	•	SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0279-00	
VR150	152-0227-00		SEMICOND DEVICE: ZENER, 0.4W, 6.2V, 5%	80009	152-0227-00	
W58	131-0566-00		LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L	55210	L-2007-1	

FIG. 1 EXPLODED

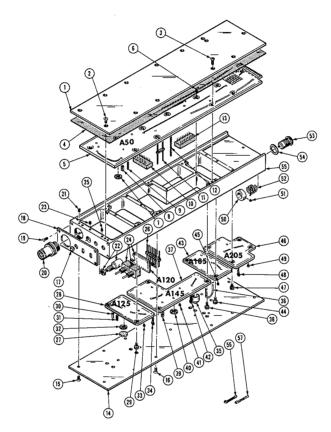

L3 PLUG-IN MODULE

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
1-1	337-2362-00		1	SHIELD, ELEC: C	OVER, TOP	80009	337-2362-00
-2	211-0030-00		. 2	SCREW, MACHINE	:2-56 X 0.25"82 DEG,FLH STL	83385	OBD
-3	211-0112-00		10	•	:4-40 X 0.375"100DEG, FLH STL	83385	OBD
-4	342-0351-00		1	INSULATOR, FIL	M:5.31 X 1.92 INCH	80009	342-0351-00
<b>-</b> 5			1		Y:MOTHER(SEE A50 EPL) (ATTACHING PARTS)		
-6	211-0030-00		5	SCREW, MACHINE	:2-56 X 0.25"82 DEG,FLH STL	83385	OBD .
			_	. CKT BOARD A	SSY INCLUDES:		
<b>-</b> 7	342-0356-00		3	. INSULATOR, P	LATE:NYLON,W/10 LEADS	32559	608-090
-8	136-0263-04		8	. SOCKET, PIN	TERM: FOR 0.025 INCH SQUARE PIN	22526	48059
-9	131-0608-00		1		N:0.365 L X 0.25 PH, BRZ, GOLD PL	22526	47357
-10	136-0269-02		2	. SOCKET, PLUG	-IN:14 CONTACT, LOW CLEARANCE	01295	C95140
-11	131-1612-02		2	. TERMINAL, FE	EDTH: U-SHAPED	80009	131-1612-02
-12	131-0787-00		11	. CONTACT, ELE	C:0.64 INCH LONG	22526	47359
-13	136-0260-02		1	. SOCKET, PLUG	-IN:16 CONTACT, LOW CLEARANCE	82647	C9316-18
-14	337-2361-00		1	SHIELD, ELEC: C	OVER, BOTTOM (ATTACHING PARTS)	80009	337-2361-00
-15	211-0030-00		1	SCREW, MACHINE	:2-56 X 0.25"82 DEG,FLH STL	83385	OBD
-16	211-0030-00		17	SCREW, MACHINE	:2-56 X 0.25"82 DEG, FLH STL	83385	OBD
-17	342-0301-00		1	INSULATOR, FIL	M:0.5 MM, TEFLON	80009	342-0301-00

5-14

Replaceable Mechanical Parts-L3

REV A, DEC 1979

Fig. & Index No.		Serial/Model No. Eff Dscont	Qty	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
1-18	333-2218-00		1	PANEL, FRONT:	80009	333-2218-00
	333-2218-01		1	PANEL, FRONT:	80009	333-2218-01
			_	(OPTION 1 ONLY) (ATTACHING PARTS)		
-19	213-0109-00	B010100 B010140	4		77250	OBD
	211-0650-00	в010141	4	SCREW, CAP.: 0-80 X 0.187, SCH, SST PSVT	71838	20098-90F-3
-20	131-0679-02		1	CONNECTOR, RCPT,:BNC, MALE, 3 CONTACT (ATTACHING PARTS)	24931	28JR270-1
-21	213-0048-00		1	SETSCREW:4-40 X 0.125 INCH, HEX SOC STL	74445	OBD
-22			1	RESISTOR, VAR: (SEE R10 EPL) (ATTACHING PARTS)		
-23	213-0048-00		2	SETSCREW:4-40 X 0.125 INCH, HEX SOC STL	74445	OBD
-24			1	CKT BOARD ASSY:SWITCH(SEE Al20 EPL) (ATTACHING PARTS)		
-25	213-0048-00		4	SETSCREW:4-40 X 0.125 INCH, HEX SOC STL	74445	OBD
			_	. CKT BOARD ASSY INCLUDES:		
-26	131-1956-00		1	. TERM. SET, PIN: 8 MALE CONT, RIGHT ANGLE	00779	87233-8
-27	348-0515-00		4	PAD, CUSHIONING: 0.281 DIA	80009	348-0515-00
-28			1	CKT BOARD ASSY:ATTENUATOR(SEE A125 EPL) (ATTACHING PARTS)		
-29	211-0196-00		2	SCREW, MACHINE: 4-40 X 0.188, SCH, HEX, STL	000АН	OBD
			_	. CKT BOARD ASSY INCLUDES:		
-30	136-0261-00		2	. SOCKET, PIN TERM: FOR 0.22 INCH PIN	00779	1-331677-6
-31	136-0263-04		7	. SOCKET, PIN TERM: FOR 0.025 INCH SQUARE PIN	22526	48059

**REV C, DEC 1979** 

Replaceable Mechanical Parts—L3

Fig. &						
Index	Tektronix	Serial/Model No.	O+-		Mfr	
No.	Part No.	Eff Dscont	Qty	1 2 3 4 5 Name & Description	Code	Mfr Part Number
1-32	342-0356-00		2	. INSULATOR, PLATE: NYLON, W/10 LEADS	32559	608-090
-33	136-0252-04		3	. SOCKET, PIN TERM: U/W 0.016-0.018 DIA PIN	IS 22526	75060-007
-34	214-0579-00		3	. TERM, TEST POINT: BRS CD PL	80009	214-0579-00
-35	214-2496-00		4	HEAT SINK, XSTR:	80009	214-2496-00
-36	195-0167-00		2	LEAD, ELECTRICAL: 50 OHM COAX, SEMI RIGID	80009	195-0167-00
<b>-</b> 37			1	CKT BOARD ASSY:AMPLIFIER(SEE A145 EPL) (ATTACHING PARTS)		
-38	213-0192-00		3	SCR, TPG, THD FOR: 6-32 X 0.50 INCH, PNH STL	87308	OBD
			_	. CKT BOARD ASSY INCLUDES:		•
-39	136-0263-04		7	. SOCKET, PIN TERM: FOR 0.025 INCH SQUARE P	IN 22526	48059
-40	342-0356-00		2	. INSULATOR, PLATE: NYLON, W/10 LEADS	32559	608-090
-41	136-0252-04		23	. SOCKET, PIN TERM: U/W 0.016-0.018 DIA PIN		75060-007
-42	214-0579-00		2	. TERM, TEST POINT: BRS CD PL	80009	214-0579-00
-43			1	CKT BOARD ASSY:LOW PASS FILTER(SEE A185 E (ATTACHING PARTS)		211 037,7 00
-44	211-0196-00		2	SCREW, MACHINE: 4-40 X 0.188, SCH, HEX, STL	000АН	OBD
			_	. CKT BOARD ASSY INCLUDES:		
-45	136-0252-04		2	. SOCKET, PIN TERM: U/W 0.016-0.018 DIA PIN	S 22526	75060-007
-46			1	CKT BOARD ASSY:MIXER(SEE A205 EPL) (ATTACHING PARTS)	_	
-47	211-0196-00		4	SCREW, MACHINE: 4-40 X 0.188, SCH, HEX, STL	000АН	OBD

Fig. & Index No.	Tektronix Serial/Model N Part No. Eff Dsco	(Jtv	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
1-		_	. CKT BOARD ASSY INCLUDES:		
-48	214-0579-00	2	. TERM, TEST POINT: BRS CD PL	80009	214-0579-00
-49	136-0252-04	3	. SOCKET, PIN TERM: U/W 0.016-0.018 DIA PINS	22526	75060-007
-50	343-0548-00	. 2	COLLAR, CONN:	80009	343-0548-00
			(ATTACHING PARTS)		
-51	213-0306-00	4	SETSCREW: 2-56 X 0.062 INCH, OX STL	74445	OBD
			*		
-52	214-2255-00	2	SPRING, HLCPS: 0.035 DIA MUSIC WIRE 0.25" L	80009	214-2255-00
-53	131-1604-00	2	CONNECTOR, RCPT, : FEMALE, 50 OHM, SLIDE-ON	A000A	RA 00.100.250
-54	210-1228-00	2	WASHER, FLAT: CONNECTOR MIXER	80009	210-1228-00
-55	337-2363-00	1	SHIELD, ELEC: HONEYCOMB	80009	337-2363-00
	198-3320-00	1	WIRE KIT, ELEC:	80009	198-3320-00
-56	131-0512-02	1	. CONTACT, ELEC: 0.315 INCH LONG	00779	61491-1
-57	131-0707-00	1	. CONNECTOR, TERM.: 22-26 AWG, BRS& CU BE GOLD	22526	47439

## ACCESSORIES

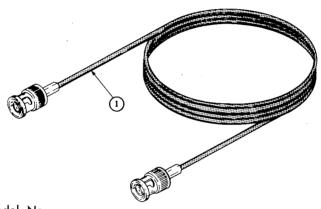


Fig. 8	t				Đ			
Index No.		Serial/Model No. Eff Dscont	Qty	1 2 3 4 5	Name & Descrip	otion	Mfr Code	Mfr Part Number
				STANDARD	ACCESSORIES			
-1	012 <b>-</b> 0113-00 070-2154-02		1	CABLE ASSY, RF: MANUAL, TECH: IN	50 OHM COAX,72 IN	CH LONG		012-0113-00 070-2154-02
				OPTIONAL	ACCESSORIES			
	011-0112-00		1 1 - - 1	P6105:10X PRO NTWK,IMPD MATC 2703:ATTENUATO (OPTION 1 ONLY 2701:ATTENUATO	CH:50 OHM TO 75 OHM CR,STEP,75 OHM	М		
5-18				L	.3			DEV D. DEG.

REV B, DEC 1979

## **OPTIONS**

#### L3 Option 1

The L3 Option 1 provides an input termination of 75  $\Omega$  in lieu of 50  $\Omega$ . The selectable terminations for the Option 1 are 75  $\Omega$  600  $\Omega$ , and 1 M $\Omega$ /28 pF.

The following changes and additions to the L3 manual apply for the L3 Option 1 Plug-In Module.

### Section 4, Input Impedance Change Procedure:

Add the following Table:

#### Standard pla for 75 $\Omega$ and 600 $\Omega$

Readout	Most Signifi	cant BCD Digit		Least Significant BCD Digit					
Offset Value	20	10	8	4	2	1			
dBm 75 Ω—R66	1	0	0	0	0	0	←Y+9=22		
dBV	0	0	1	0	0	1	<del>-</del> 9		
dBm 600 Ω—R64	0	1	0	0	0	1	←X+9=11		
Row	Н	G	F	E	D	С			
Column from Table 4-4	4	5	8	1	1	3			

@

SECTION 6 —L3