

cillunus etalkali com

RLEASE CHECK FOR CHANGE INFORMATION AT THE REAR OF THIS MANUAL.

7B53A/7B53AN DUAL TIME BASE

INSTRUCTION MANUAL

Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077

070-1342-01 Product Group 42

First Printing SEP 1980 Revised MAY 1988 Copyright © 1972, 1980 Tektronix, Inc. All rights reserved. Contents of this publication may not be reproduced in any form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and are registered trademarks of Tektronix, Inc. TELEQUIPMENT is a registered trademark of Tektronix U.K. Limited.

Printed in U.S.A. Specification and price change privileges are reserved.



INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag, or stamped on the chassis. The first number or letter designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits. The country of manufacture is identified as follows:

B000000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd., London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

TABLE OF CONTENTS

		Page			Page
LIST OF ILL	USTRATIONS	iii	Section 3	THEORY OF OPERATION (cont'd)	
LIST OF TA	BLES	iv		(cont a)	
OPERATOR	S SAFETY SUMMARY	v		Delayed Trigger Generator (SN B209999 & Below)	3-12
SERVICE S	AFETY SUMMARY	vii		Delayed Sweep Generator	
				Horizontal Preamp	
Section 1	SPECIFICATION	1-1		Readout Switching	3-18
Section 2	OPERATING INSTRUCTIONS	2-1		0.44.100.4.710.14	
	Controls and Connectors	2-1	Section 4	CALIBRATION	4-1
	Operating Checkout	2-3		Test Equipment Required	4-1
	General Operating Instructions	2-6		PART 1 PERFORMANCE CHECK	_
	Applications	2-13		Trigger System Check	
	Repackaging for Shipment	2-20		Horizontal System Check	
	3 3 1			PART 2 ADJUSTMENT	
	WARNING		all	Trigger System Adjustment	
			Man com	Horizontal System Adjustment	4-24
	ning portion of this Table of Contents lis		Section 5	MAINTENANCE	5-1
	nstructions. These servicing instructions a alified personnel only. To avoid electrical s		10.	Preventive Maintenance	
	orm any servicing other than that called out			Troubleshooting	
	nstructions unless qualified to do so.	Hill.		Corrective Maintenance	
				Contective Waintenande	0-4
Section 3	THEORY OF OPERATION	3-1	Section 6	OPTIONS	6-1
	Simplified Block Diagram				
	Circuit Operation	3-3			
	Main Trigger Preamp	3-4	Section 7	REPLACEABLE ELECTRICAL PARTS	
	Main Trigger Generator (SN B210000	2.4			
	& Up 7B53A Only)	3-4	Section 8	DIAGRAMS AND CIRCUIT BOARD	
	Main Trigger Generator (SN B209999 & Below)	3-7	Section 6	DESCRIPTIONS	
	Main Sweep Generator	3-9			
	Delayed Trigger Generator	~ ~			
	(SN B210000 & Up 7B53A Only)	3-12	Section 9	REPLACEABLE MECHANICAL PARTS	

REV DEC 1982 i

LIST OF ILLUSTRATIONS

Fig. No.		Page	Fig. No.		Page
	7B53A/7B53AN Dual Time Base	. viii	4-2	Typical delay time error measurement	4-16
2-1	Location of release latch	2-1	4-3	Typical Delay Time Error Figures	4-17
2-2	Front-panel controls and connectors	2-2	4-4	Allowable Delay Time Error	4-17
2-3	Frequency range of each COUPLING switch position	2-7	4-5	Typical CRT display when checking sweep length	
2-4	Effect of LEVEL control and SLOPE switch on CRT display		4-6	Typical CRT display for adjustment of Dly'd Sweep Start and Dly'd Sweep Stop	4- 2 6
2-5	Composite Time/Division switch	2-10	5-1	Location of pins on interface connector	5-3
2-6	Area of graticule used for accurate time measurements	2-11	5-2	Cam Switch Removal	
2-7	Operation of Sweep Magnifier	2-11		ustrations in Section 8 are located near	their
2-8	(A) Intensified Sweep display; (B) Delayed		as s ocia	ated diagrams on the foldout page.	
	Sweep display		8-1	Electrode configuration for	
2-9	Typical Mixed Sweep display (DELAY TIME			semiconductors in the instrument.	
2-10	MULT dial set to 3.55)		8-2	CLocation of circuit boards in the 7B53A/7B54AN.	
- 10	3.55	2-12	8,3	Partial A1—Interface circuit board	
2-11	Measuring the time duration between points on a waveform	la.	8-4	component locator (SN B090000 and up). Partial A1—Interface circuit board	
2-12	Measuring risetime	. / /		component locator (SN B089999 and	
2-13	Measuring time difference using delayed	40	8-5	below). A2—Source Switch circuit board	
	sweep	2-17	0-0	component locator.	
2-14	Using delayed sweep for magnification		8-6	A3—Coupling Switch circuit board	
2-15	Displaying a complex signal using delayed	-	- •	component locator.	
_ , .	sweep	2-19	8-7	Partial A4—Trigger circuit board	
2-16	Measuring pulse jitter			component locator 7B53A only	
3-1	7B53A/7B53AN Simplified Block Diagram.			(SN B210000 and up).	
3-2	Trigger Preamp and Input Switching Block		8-8	Partial A4—Trigger circuit board	
0 _	Diagram			component locator (SN B209999 and	
3-3	Main Trigger Generator Block Diagram	-	8-9	below). Partial A6—Sweep circuit board	
	(SN B210000 and up 7B53A only)	3-6	0-9	component locator (SN B090000 and up).	
3-4	Main Trigger Generator Block Diagram		8-10	Partial A6—Sweep circuit board	
	(SN B209999 and below)	3-8		component locator (SN B089999 and	
3-5	Main Sweep Generator Block Diagram			below).	
3-6	Delayed Trigger Generator Block Diagram		8-11	A5-Mode Switch circuit board.	
	(SN B210000 and up 7B53A only)		8-12	Partial A4—Trigger circuit board	
3-7	Delayed Trigger Generator Block Diagram			component locator 7B53A only	
	(SN B209999 and below)		0.40	(SN B210000 and up).	
3-8	Delayed Sweep Generator Block Diagram.		8-13	A7—Delayed Trigger Switch circuit board	
3-9	Horizontal Preamp Block Diagram		8-14	component locator. Partial A4—Trigger circuit board	
4-1	Location of Delayed Gate Out and Variable		U- 14	component locator (SN B209999 and	
• •	Selector multi-pin connectors			below).	

@ JUN 1980 iii

LIST OF ILLUSTRATIONS (cont)

Fig. No.		Fig. No.	
8-15	Partial A6—Sweep circuit board component locator (SN B090000 and up).	8-21	Partial A6—Sweep circuit board component locator (SN B089999 and
8-16	Partial A6—Sweep circuit board		below).
	component locator (SN B089999 and	8-22	Partial A6—Sweep circuit board
	below).		component locator (SN B090000 and up)
8-17	Partial A1-Interface circuit board (7B53A	8-23	Location of adjustments in the
	only) component locator.		7B53A/7B53AN (SN B209999 and below).
8-18	Partial A1-Interface circuit board	8-24	Location of adjustments in the 7B53A
	(7B53AN only) component locator.		(SN B210000 and up).
8-19	A8-Readout circuit board (7B53A only)	8-25	Location of adjustments in the
	component locator.		7B53A/7B53AN.
8-20	Partial A6-Sweep circuit board		
	component locator (SN B090000 and up)		



Table No.		Page
1-1	Electrical	1-1
1-2	Environmental	1-6
1-3	Physical	1-6
2-1	Deflection Factor of the X Signal	2-13
2-2	Risetime Measurements	2-16
4-1	Test Equipment	4-3
4-2	Main Sweep Timing	4-13
4-3	Delayed Sweep Timing	4-14
4-4	Main Sweep Magnifier Accuracy	4-15
4-5	Delayed Sweep Magnifier Accuracy	4-15
5-1	Relative Susceptibility to Static Discharge	
	Damage	5-2

ίv

OPERATORS SAFETY SUMMARY

The general safety information in this part of the summary is for both operating and servicing personnel. Specific warnings and cautions will be found throughout the manual where they apply, but may not appear in this summary.

TERMS

IN THIS MANUAL

CAUTION statements identify conditions or practices that could result in damage to the equipment or other property.

WARNING statements identify conditions or practices that could result in personal injury or loss of life.

AS MARKED ON EQUIPMENT

CAUTION indicates a personal injury hazard not immediately accessible as one reads the marking, or a hazard to property including the equipment itself.

DANGER indicates a personal injury hazard immediately accessible as one reads the marking.

SYMBOLS

IN THIS MANUAL



Static-Sensitive Devices.



This symbol indicates where applicable cautionary or other information is to be found.

AS MARKED ON EQUIPMENT



DANGER-High voltage.



Protective ground (earth) terminal.



ATTENTION---refer to manual.

WARNINGS

POWER SOURCE

This product is intended to operate in a mainframe connected to a power source that will not apply more than 250 volts rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the mainframe power cord is essential for safe operation.

GROUNDING THE PRODUCT

This product is grounded through the grounding conductor of the mainframe power cord. To avoid electrical shock, plug the mainframe power cord into a properly wired receptacle before connecting to the product input or output terminals. A protective ground connection by way of the grounding conductor in the mainframe power cord is essential for safe operation.

REV JAN 1985

7B53A/7B53AN

DANGER ARISING FROM LOSS OF GROUND

Upon loss of the protective-ground connection, all accessible conductive parts (including knobs and controls that may appear to be insulating), can render an electric shock.

DO NOT OPERATE IN EXPLOSIVE ATMOSPHERES

To avoid explosion, do not operate this product in an atmosphere of explosive gases unless it has been specifically certified for such operation.

DO NOT OPERATE PLUG-IN UNIT WITHOUT COVERS

To avoid personal injury, do not operate this product without covers or panels installed. Do not apply power to the plug-in unit via a plug-in extender.

http://www.etarran.com

vi @ JUN 1980

SERVICING SAFETY SUMMARY

FOR QUALIFIED SERVICE PERSONNEL ONLY

Refer also to the preceding Operators Safety Summary

DO NOT SERVICE ALONE

Do not perform internal service or adjustment of this product unless another person capable of rendering first aid and resuscitation is present.

USE CARE WHEN SERVICING WITH POWER ON


Dangerous voltages exist at several points in this product. To avoid personal injury, do not touch exposed connections and components while power is on.

Disconnect power before removing protective panels, soldering, or replacing components.

POWER SOURCE

This product is intended to operate in a mainframe connected to a power source that will not apply more than 250 volts rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the mainframe power cord is essential for safe operation.

vii

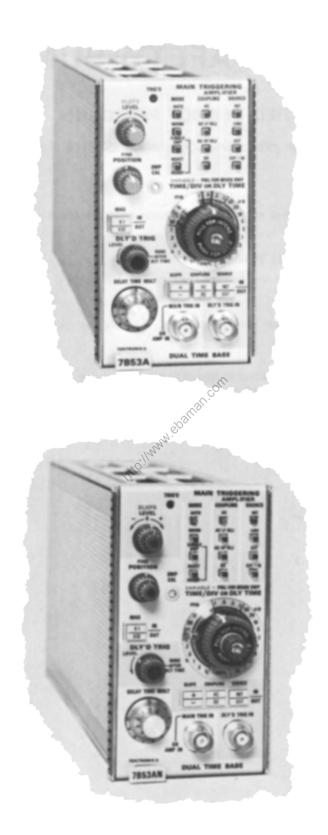

The 7B53A/7B53AN Dual Time Base.

SPECIFICATION

NOTE

The 7B53A and 7B53AN are electrically identical except that only the 7B53A is compatible with the alphanumeric readout system provided for the 7000-series oscilloscopes.

This instrument will meet the electrical characteristics listed under Performance Requirement in Table 1-1, following complete calibration. The following electrical characteristics apply over an ambient temperature range of 0° C to $+50^{\circ}$ C, except as otherwise indicated. Warmup time for given accuracy is 20 minutes.

Table 1-1
ELECTRICAL

Characteristics Performance Requirement					Supplemental Information
MAIN SWEEP			Mali.		
Sweep Rates	0.05 μs/div steps.	to 5 s /div	in 25 calib	rated	
Sweep Accuracy	Measured	in 7000-Se	ries Oscillo	scopes.	
	+15°C to	+35°C	0°C to	+50° C	
Over Center Eight Divisions	Unmag	Mag	Unmag	Mag	
50 ms/div to 0.5 μ s/điv	Within 2%	Within 2.5%	Within 3%	Within 4%	
5 s/div to 0.1 s/div and 0.2 μ s/div to 0.05 μ s/div	Within 3%	Within 3.5%	Within 4%	Within 5%	
Over any 2 div portion within center eight div (all sweep rates)	Within Within 5% 7%				
Variable Sweep Rates	Continuously variable between calibrated sweep rates. Extends sweep rate to at least 12.5 s/div.				Variable to at least 2.5:1. VARIABLE control internally switchable between variable main sweep rates, variable delayed sweep rates, and variable main sweep holdoff.
Sweep Hold-Off	Hold-off time may be varied at least 2:1 by front-panel VARIABLE control when Variable Selector connector (P140) is connected for variable holdoff.				

REV D JUN 1980 1-1

Table 1-1 (cont)

Characteristics	Performance Requirement			nt	Supplemental Information
DELAYED SWEEP		popular de la constitución de la			
Sweep Rates	0.05 μs/div steps.	to .5 s/div	in 22 calib	rated	
Sweep Accuracy	Measured i	n 700 0-S e	ries Oscillo	scopes.	
Over Center 8 Divisions	+15°C to	+35°C	0°C to	+50° C	
	Unmag	Mag	Unmag	Mag	
50 ms/div to 0.5 μs/div	Within 3%	Within 3.5%	Within 4%	Within 5%	Exclude the first and beyond the 9th division of the unmagnified sweep when
0.5 s/div to 0.1 s/div and 0.2 μ s/div to 0.05 μ s/div	Within 4%	Within 4.5%	Within 5%	Within 6%	measuring magnified or unmagnified accuracy.
Over any 2 div portion within center eight div (all sweep rates)	Wit 6º		Witi 89		
Variable Sweep Rate	Continuously variable between calibrated sweep rates.			Extends sweep rate to at least 1.25 s/div. Variable to at least 2.5:1. VARIABLE control switchable between variable main sweep rates, variable delayed sweep rates, and variable main sweep holdoff.	
MIXED SWEEP, VARIABLE TIME DELAY	Warn Spo				
Mixed Sweep Accuracy		Hill			
Main Sweep	Within 2%	plus main	sweep erro	r.	Exclude the following portions of the mixed sweep:
Delayed Sweep	Unchanged.				First 0.5 div after start of main sweep display and 0.2 div or 0.1 μ s (whichever is greater) after transition of main to delayed sweep.
Variable Time Delay		emment review reserved to the sale as in the sequence particular	namenna udana ka u uzuri da da ka		
Delay Time Range	0 to 10 times DLY TIME/DIV settings from 5 s/div to 1 μ s/div.				Full scale is 10 times the TIME/DIV OR DLY TIME setting. Accuracy applies over the center eight major DELAY TIME MULT dial divisions.
Differential Delay Time Measurement Accuracy (+15°C to +35°C)				, comments the state of the sta	MOLI didi divisions.
5 s/div to 1 s/div	Within 1.4% of measurement plus 0.3% of full scale.				
0.5 s/div to 1 μs/div	Within 0.7% 0.3% of full		urement plu	IS	
Delay Time Jitter at 1 ms/div	Less than 1 part in 20,000 of 10X the TIME/DIV setting.				

1-2

Table 1-1 (cont)

Characteristics	Performance	Requirem	Supplemental Information	
AMPLIFIER		The state of the s	with individual control of the vision decomposition of	
Deflection Factor		Advings the state of the state	MINISTER S.	
EXT, MAG X10	10 mV/div within 10%	o .		
EXT, MAG X1	100 mV/div within 10	%.		
EXT ÷ 10, MAG X1	1 v/div within 10%.	TO DESCRIPTION OF THE PROPERTY		A CONTRACTOR OF THE CONTRACTOR
Nominal Frequency Response	System -3 dB points Oscilloscope.	in 7000-S	eries	
enemente de la serie como de la Malifera de como de Malifera de como de como de Malifera de La Serie de Malifera de La Como de Como de Casa de Como de Casa de Como de Casa de	Lower -3 dB	Upper	3 dB	
AC	40 Hz	2 N	ЛНz	
AC LF REJ	16 kHz	2 N	ИHz	
AC HF REJ	40 Hz	100	kHz	
DC	DC	2 N	ЛНz	
MAIN TRIGGERING		Anagements and the Company of States State (Art.)	all flore Title services or State and are first	
Trigger Sensitivity		ethinin merikan ander a mantak propinsion	n all 48 shared and reduced to Market green end 4 month	
COUPLING	Triggering	Minimum Trigger Signal Required		
	Frequency Range	dNT ^a (div)	EXT (mV)	
AC	30 Hz to	0.3	100	
	10 MHz to 100 MHz	1.5	500	
AC LF REJ	30 kHz to 10 MHz	0.3		
	150 kHz 10 MHz		100	Triggering signal amplitude require ments increased 10 times for
	10 MHz to 100 MHz	1.5	500	EXT ÷ 10 operation.
AC HF REJ	30 Hz to 50 kHz	0.3	100	
DC	dc to 10 MHz	0.3	100	
	10 MHz to 100 MHz	1.5	500	

Specification-7B53A/7B53AN

Table 1-1 (cont)

Characteristics	Performance Requirement	Supplemental Information
External Trigger Input		
Input R and C		Approximately 1 M Ω paralleled by 20 pF.
Maximum Safe Input Voltage		500 V (dc + Peak ac). 500 V peak- to-peak ac at 1 kHz or less.
Level Range		
EXT	At least + and - 1.5 V.	
EXT ÷ 10	At least $+$ and $-$ 15 V.	
Internal Trigger Jitter	1 ns or less at 75 MHz.	

DELAYED TRIGGERING

Trigger Sensitivity	Triggering	Minimum Trigger Signal Required		
Coupling	Frequency Range	INT ^a (div)	EXT (mV)	
AC	30 Hz to 10 MHz	0.3	100	
	10 MHz to 100 MHz	10am 1.5	500	
DC	dc to 10 MHz j. lywyd	0.3	100	
	10 MHz to 100 MHz	1.5	500	
External Trigger Input		har and one of the second seco		
Maximum Safe Input Voltage (DLY'D TRIG SOURCE set to EXT)				500 V (dc + peak ac). 500 V peak- to-peak ac at 1 kHz or less.
Input R and C				1 MΩ paralleled by 20 pF.
Level Range	At least + and - 1.5	V.		
Internal Trigger Jitter	1 ns or less at 75 MH	Ηz.		

1-4 REV A JUN 1980

Table 1-1 (cont)

Characteristics	Performance Requirement	Supplemental Information
OUTPUT SIGNALS		The second secon
Delayed Sweep Gate		
Maximum Safe Input Voltage		± 10 V (dc \pm Peak ac). 20 V peakto-peak ac at 1 kHz or less.
Waveshape	Rectangular pulse.	
Amplitude	\geqslant 3.0 V with baseline at -0.2 to -1 V when loaded by at least 10 kΩ. \geqslant 0.475 with baseline at 0 to -0.2 V when loaded by 50 Ω.	Available at front-panel DLY'D TRIG IN connector when operating in the INTEN, DLY'D SWP, or MIXED Display Modes. The DLY'D TRIG SOURCE switch must be set to INT and P613 must be connected for Delayed Sweep Gate Out.
Output Resistance		Approximately 350 Ω.
Loading		At least 10 k Ω shunted by 100 pF or less.
Polarity	Positive-going.	
Duration DISPLAY MODE		
INTEN, DLY'D SWP	For the time that the delayed sweep runs.	
MIXED	Composite gate signal with timing determined by the setting of the TIME/ DIV OR DLY TIME switch during the main sweep portion of the display, and by the setting of the DLY'D Time/ Division switch during the delayed sweep portion of the display.	
Sweep Gate	Refer to associated oscilloscope manual.	
Duration		
DISPLAY MODE		
MAIN SWEEP, INTEN	Coincident with the main sweep interval.	
DLY'D SWP	Coincident with the main sweep interval.	
MIXED	Coincident with the main sweep interval plus the delayed sweep interval.	
Main Sweep Gate	Refer to associated oscilloscope manual.	
Duration	Coincident with the main sweep (all Display Modes).	

Table 1-1 (cont)

Characteristics	Performance Requirement	Supplemental Information
Sawtooth	Refer to associated oscilloscope manual.	
Waveshape DISPLAY MODE		
MAIN SWP, INTEN	Sawtooth signal with slope determined by setting of the TIME/DIV OR DLY TIME switch.	
DLY'D SWP	Sawtooth signal with slope determined by the setting of the DLY'D Time/Division switch.	
MIXED	Composite sawtooth signal with slope determined by the setting of the TIME/DIV OR DLY TIME switch during the main sweep portion of display, and by the setting of the DLY'D Time/Division switch during the delayed sweep portion of display.	
Duration	Coincident with the time that each sweep is displayed.	

^a For Internal Triggering only, the specified —3 dB frequency of the vertical system replaces any frequencies in the above table when the number in the table is greater than the —3 dB frequency of the vertical system.

Table 1-2

ENVIRONMENTAL

Refer to the Specification for the associated oscilloscope.

Table 1-3

PHYSICAL			
Characteristics	Description		
Size	Fits all 7000-series plug-in compartments.		
Weight	3.3 lbs (1.5 kg).		

OPERATING INSTRUCTIONS

7B53A/7B53AN Features

The 7B53A and 7B53AN Dual Time Base units provide Main, Intensified, Delayed, and Mixed sweep operation for TEKTRONIX 7000-Series Oscilloscopes. Calibrated sweep rates from 5 s/div to 50 ns/div (5 ns with X10 magnification) and triggering to 100 MHz are provided. The 7B53A and 7B53AN are electrically identical except that only the 7B53A is compatible with the alphanumeric readout system provided for 7000-Series Oscilloscopes.

Other features include 0 to 10 times continuous sweep delay, variable main and delayed sweep rates, and variable main sweep holdoff. Separate triggering controls are provided for main and delayed sweep triggering, and when operating in the AUTO MAIN TRIGGERING MODE, a bright base line is displayed in the absence of a trigger signal. The 7B53A/7B53AN can also be used as an amplifier for X-Y operation.

General

Series Oscilloscope and a 7A-Series Amplifier unit to form a complete oscilloscope system. To effectively use the 7B53A/7B53AN, its operation and capabilities should be known. This section explains the operation of the frontpanel controls and connectors, provides an Operating Checkout procedure, gives general operating information, and describes basic applications for this instrument.

Installation

The 7B53A/7B53AN is designed to operate in the horizontal compartment of the indicator oscilloscope. This instrument can also be installed in the Vertical plug-in compartment to provide a sweep that runs vertically on the crt. However, when used in this manner, there are no retrace blanking or internal triggering provisions, and the unit may not meet the specifications given in Section 1. The instructions in this manual are written for use of the 7B53A/7B53AN in the horizontal plug-in compartment.

Before proceeding with installation it is necessary to check the internal connections of the Variable Selector connector and the Delayed Sweep Gate Out connector. These connections should be checked against those shown in Fig. 4-1 by qualified service personnel.

To install the 7B53A/7B53AN in a plug-in compartment, push it in until it fits firmly into the compartment. The front panel of the 7B53A/7B53AN should be flush with the front panel of the indicator oscilloscope. Even though the gain of the indicator oscilloscope is standardized to minimize adjustment when inserting plug-in units, the sweep calibration of the 7B53A/7B53AN should be checked when installed. The procedure for checking the unit is given under Sweep Calibration in the Operating Checkout procedure in this section.

To remove the 7B53A/7B53AN, pull the release latch (see Fig. 2-1) to disengage the unit from the indicator oscilloscope and pull it out of the plug-in compartment.

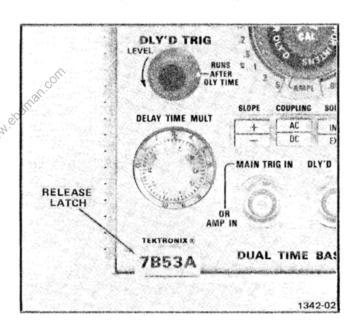


Fig. 2-1. Location of release latch.

CONTROLS AND CONNECTORS

General

All controls required for the operation of the 7B53A/7B53AN, except the Variable Selector and the Dly'd Sweep Gate Out connector are located on the front panel of the instrument. To make full use of the capabilities of this instrument, the operator should be familiar with the function and use of each control. A brief description of the front-panel controls and connectors is given here. More detailed information is given under

2-1 REV B JUN 1980

Operating Instructions—7B53A/7B53AN

General Operating Information. Fig. 2-2 shows the front panel and external controls and connectors of the 7B53A/7B53AN.

1. Main Triggering Controls

LEVEL. Selects the amplitude point on the trigger signal where sweep triggering occurs.

SLOPE. Two-position switch permits triggering on the positive-going or negative-going portion of the main triggering signal.

TRIG'D. Light indicates that the main sweep is triggered and will produce a display.

MODE. Pushbutton switches select the operating mode for the main triggering circuits.

COUPLING. Pushbutton switches select the method of coupling the triggering signal to the main triggering circuits.

SOURCE. Pushbutton switches select the source of the main triggering signal.

2. Sweep Controls

TIME/DIV OR DLY TIME. Selects the sweep rate of the main sweep generator (see Fig. 2-5).

DLY'D Time/Division. Selects the sweep rate of the delayed sweep generator and selects the MAIN SWP, INTEN, and DLY'D SWP Display Modes (see Fig. 2-5).

VARIABLE. Provides continuously variable main sweep rates, continuously variable delayed sweep rates,

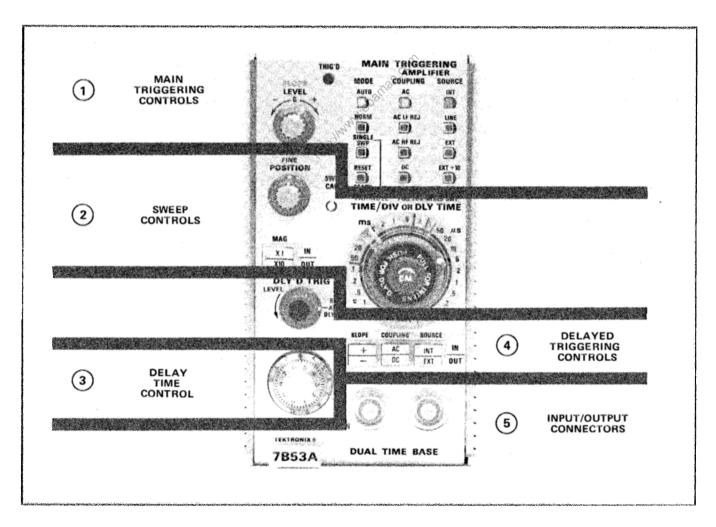


Fig. 2-2. Front-panel controls and connectors.

or variable main sweep holdoff; depending on the setting of the Variable Selector multi-pin connector (P140). The VARIABLE control also selects the MIXED Display Mode (see Fig. 2-5).

SWP CAL. Screwdriver adjustment to match the gain of the 7B53A/7B53AN to the indicator oscilloscope for calibrated sweep rates.

POSITION. Controls horizontal position of display.

FINE. Provides precise control of horizontal position adjustment.

MAG. Pushbutton switch selects X1 or X10 horizontal magnification.

3. Delay Time Control

DELAY TIME MULT. Provides variable sweep delay between 0.00 and 10.0 times the delay time indicated by the TIME/DIV OR DLY TIME switch.

4. Delayed Triggering Controls

LEVEL. Selects the RUNS AFTER DLY TIME or Triggerable After Dly Time Modes, and the amplitude point at which the delayed sweep is triggered.

SLOPE. Two-position switch permits triggering on the positive-going or negative-going portion of the delayed triggering signal.

COUPLING. Two-position switch selects the method of coupling the triggering signal to the delayed triggering circuits.

SOURCE. Two-position switch to select the source of the delayed triggering signal.

5. Input/Output Connectors

MAIN TRIG IN OR AMP IN. Front-panel bnc connector serving as an external trigger input for the main triggering circuit or as an external horizontal input, depending upon the setting of the TIME/DIV OR DLY TIME switch and the MAIN TRIGGERING SOURCE switch.

DLY'D TRIG IN. Front-panel bnc connector serving as an external trigger input for the delayed triggering circuits or as a delayed sweep gate output; depending upon the DLY'D TRIG SOURCE switch, the position of P613, and the DISPLAY MODE.

OPERATING CHECKOUT

Introduction

The following procedure checks the basic operation of the 7B53A/7B53AN. It may also be used for familiarization with this instrument or as an incoming inspection. This procedure is divided into two parts, Sweep Control Functions, and Main and Delayed Triggering Functions. A complete operating check of the 7B53A/7B53AN control functions can be made by performing both parts, or each part may be performed separately.

NOTE

For optimum performance, the 7B53A/7B53AN should be installed in an oscilloscope system with similar frequency and sweep rate capabilities.

Setup Procedure

- 1. Install the 7B53A/7B53AN in the right horizontal compartment of the indicator oscilloscope.
- 2. Install a Vertical Amplifier unit in the left vertical compartment.
- 3. Turn on the indicator oscilloscope and allow at least 20 minutes warmup.
 - 4. Set the 7B53A/7B53AN controls as follows:

MAIN TRIGGERING	à
-----------------	---

SLOPE (+)
MODE AUTO
COUPLING AC
SOURCE INT

DLY'D TRIG

LEVEL RUNS AFTER DLY

TIME (fully clockwise)

SLOPE (+)
COUPLING AC
SOURCE INT

Sweep Controls

POSITION Midrange
MAG X1-IN
TIME/DIV OR DLY TIME 1 ms
DLY'D Time/Division 1 ms

VARIABLE CAL (fully clockwise)

Variable Selector Main Variable

DELAY TIME MULT 1.00

5. Set the indicator oscilloscope to display the plug-in units and adjust for a well defined display. See indicator

REV C JUN 1980 2-3

Operating Instructions—7B53A/7B53AN

oscilloscope and vertical unit instruction manuals for detailed operating instructions.

Sweep Control Functions

The following procedure checks the operation of the sweep controls and checks the Display Modes.

Normal Sweep

1. Perform steps 1 through 5 of the Setup Procedure.

NOTE

The Time/Division switch selects main sweep rates, delayed sweep rates, and Display Modes (MAIN SWP, INTEN, DLY'D SWP, and MIXED). Refer to Selecting Sweep Rates and Display Modes discussions in the General Operating Instructions for further information.

- 2. To select the MAIN SWP Display Mode, press in the DLY'D Time/Division knob, and set the TIME/DIV OR DLY TIME switch and the DLY'D Time/Division switch to the same sweep rate (1 ms).
- 3. Connect the 1 kHz calibrator signal from the indicator oscilloscope to the vertical amplifier unit Input. Adjust the Calibrator and the vertical Volts/Division switch for four divisions of display.
- 4. Rotate the MAIN TRIGGERING LEVEL control for a stable MAIN SWP display (non-delayed). Rotate the DELAY TIME MULT dial and note that it has no effect on the display.
- 5. Rotate the POSITION control and note that it horizontally positions the trace. Rotate the FINE control and note that it provides precise horizontal positioning. Disconnect the calibrator signal.

Sweep Calibration

NOTE

For accurate sweep timing, apply a signal of known frequency or time period (time-mark signal, calibrator square wave, 60 Hz line etc.) to the associated vertical amplifier unit and adjust the TIME/DIV OR DLY TIME switch and the SWP CAL control to calibrate the signal to the oscilloscope graticule. Be sure that the sweep timing signal is accurate within 0.5%. The following sweep calibration procedure uses a TEKTRONIX Time-Mark Generator.

6. Connect a 1 ms time-mark signal from the Time-Mark Generator with a 50 Ω bnc coaxial cable with bnc connectors and 50 Ω bnc termination to the Input of the associated vertical unit. Adjust the vertical Volts/Div switch for about four divisions of display and rotate the MAIN TRIGGERING LEVEL control for a stable display. Check the crt display for one complete time-mark per division (position as necessary). If necessary, adjust the SWP CAL screwdriver adjustment for one complete time-mark per division over the center eight divisions of display. Disconnect the Time-Mark Generator.

Intensified, Delayed, and Mixed Sweep

- 7. Reconnect the oscilloscope Calibrator signal to the vertical unit and adjust for about four divisions of vertical display. Pull out the DLY'D Time/Division knob and rotate clockwise to .1 ms/div for the INTEN Display Mode (TIME/DIV OR DLY TIME switch remains at 1 ms/div). Note that a delaying sweep with an intensified portion (delayed sweep) is displayed on the crt (the oscilloscope Intensity may need to be varied to view the intensified display).
- 8. Rotate the DELAY TIME MULT dial and note that the amount of delay time before the intensified portion of display is controlled by the DELAY TIME MULT dial.
- 9. Rotate the VARIABLE control counterclockwise out of switch detent and note that the sweep rate indicated by the TIME/DIV OR DLY TIME switch can be varied to at least the sweep rate of the next adjacent position (2 ms/div). The internal Variable Selector connector must be set for variable main sweep rates. Return the VARIABLE control to the CAL position.
- 10. Press the DLY'D Time/Division switch to the inner position for the DLY'D SWP Display Mode. Note the magnified display with sweep rate determined by the DLY'D Time/Division switch. The oscilloscope Intensity may need to be increased to view the delayed sweep display.
- 11. Pull out the VARIABLE Time/Division knob for the MIXED Display Mode (MIXED Display Mode can be selected when operating in the DLY'D SWP Display Mode only). Note that the main sweep is displayed at a rate determined by the TIME/DIV OR DLY TIME switch followed by a delayed sweep display at the rate determined by the DLY'D Time/Division switch. Rotate the DELAY TIME MULT dial and note that the amount of display allocated to each sweep is determined by the DELAY TIME MULT dial.

2-4 REV C JUN 1980

Main and Delayed Sweep Triggering Functions

The following procedure checks the operation of the main and delayed triggering controls:

Partial Procedure. To begin the Operating Checkout with triggering, perform steps 1 through 5 of the Setup Procedure provided at the beginning of the Operating Checkout. Connect the 1 kHz calibrator signal from the indicator oscilloscope to the vertical unit Input and adjust for about four divisions of vertical display.

- 12. Set the TIME/DIV OR DLY TIME switch and the DLY'D Time/Division switch to 1 ms and press in the DLY'D Time/Division switch and the Variable control. CHECK—that a stable display can be obtained with the COUPLING switch for MAIN TRIGGERING set to AC, AC HF REJ, and DC for both the positive and negative positions of the SLOPE switch (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable main sweep display). Remove all connections from the oscilloscope system.
- 13. Connect a 60 Hz signal (line voltage, etc.) with a 50 Ω cable or voltage probe to the vertical unit Input and adjust the Volts/Div switch for about four divisions of display. Set the MAIN TRIGGERING COUPLING switch to AC LF REJ and set the TIME/DIV OR DLY TIME switch to 10 ms. Rotate the MAIN TRIGGERING LEVEL control throughout its range and check that a stable display cannot be obtained (TRIG'D light off).
- 14. Change the MAIN TRIGGERING SOURCE switch to LINE and the COUPLING switch to AC. Check that a stable main sweep display can be obtained with the MAIN TRIGGERING COUPLING switch set to AC, AC HF REJ, and DC (MAIN TRIGGERING LEVEL control may be adjusted as necessary). Remove all connections from the oscilloscope system.
- 15. Connect the indicator oscilloscope Calibrator signal to the vertical unit Input connector and to the MAIN TRIG IN connector. Set the Calibrator for a 0.4 V, 1 kHz signal and adjust the vertical unit Volts/Div switch for about four divisions of display. Set the TIME/DIV OR DLY TIME switch and the DLY'D Time/Division switch to 1 ms. Set the MAIN TRIGGERING SOURCE switch to EXT and check that a stable display can be obtained with the COUPLING switch for MAIN TRIGGERING set to AC, AC HF REJ, and DC, for both the positive and negative positions of the SLOPE switch (MAIN TRIGGERING LEVEL control may be adjusted as necessary for a stable display).
- 16. Change the MAIN TRIGGERING SOURCE switch to EXT \div 10. Set the oscilloscope Calibrator for 4 V at 1 kHz and adjust the vertical unit Volts/Div switch for

about 4 divisions of display. Check that a stable display can be obtained with the COUPLING switch for MAIN TRIGGERING set to AC, AC HF REJ, and DC, for both the positive and negative positions of the SLOPE switch (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable delaying sweep display). Remove the Calibrator signal from the MAIN TRIG IN connector.

- 17. Set the MAIN TRIGGERING COUPLING switch to AC and the SOURCE switch to INT. Adjust the MAIN TRIGGERING LEVEL control for a stable display. Set the MODE switch to NORM and check for a stable display. Change the MODE switch to AUTO and adjust the LEVEL control for a free-running display. Change the MODE switch to NORM and check for no display.
- 18. Adjust the MAIN TRIGGERING LEVEL control for a stable display. Change the MAIN TRIGGERING MODE switch to SINGLE SWP. Press the RESET button and check for one sweep. Remove the 1 kHz signal from the vertical unit and press the RESET button. CHECK for no display and that the READY light is on. Connect the 1 kHz signal to the vertical unit and check for one sweep as the signal is applied.
- 19. Set the MAIN TRIGGERING MODE switch to AUTO. With the TIME/DIV OR DLY TIME switch at 1 ms, pull out the DLY'D Time/Division switch and rotate to .2 ms (Intensified Display Mode). Rotate the MAIN TRIGGERING LEVEL control for a stable display (oscilloscope Intensity may need to be varied to view the intensified display). Rotate the DELAY TIME MULT dial and note that the intensified portion of display is continuously variable.
- 20. Rotate the DLY'D TRIG LEVEL control counter-clockwise out of switch detent for a triggered delayed sweep. With the DLY'D TRIG SLOPE, COUPLING, and SOURCE switches set to (+), AC, and INT; rotate the DLY'D TRIG LEVEL control for a stable intensified portion of display. Rotate the DELAY TIME MULT dial and note that the intensified portion of display does not start at the completion of the delay time (determined by the settings of the TIME/DIV OR DLY TIME switch and the DELAY TIME MULT dial), but waits for the next trigger pulse.
- 21. Press the DLY'D Time/Division switch in for the DLY'D SWP Display Mode. Rotate the DLY'D TRIG LEVEL control for a stable delayed sweep display (oscilloscope Intensity may need to be varied). Check that a stable delayed sweep display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for both + and positions of the SLOPE switch (DLY'D TRIG LEVEL control may be adjusted as necessary for a stable delayed sweep display).

REV A JUN 1980 2-5

Operating Instructions-7B53A/7B53AN

22. Change the DLY'D TRIG SOURCE switch to EXT. Connect the indicator oscilloscope Calibrator signal to the DLY'D TRIG IN connector. Set the oscilloscope Calibrator for 0.4 V at 1 kHz and adjust the vertical Volts/Division switch for about 4 divisions of display. Check that a stable delayed sweep display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for both the + and — positions of the SLOPE switch (DLY'D TRIG LEVEL control may be adjusted as necessary for a stable delayed sweep display).

GENERAL OPERATING INSTRUCTIONS

Pushbutton Switch Logic

The MODE, COUPLING, and SOURCE pushbuttons of the MAIN TRIGGERING switches are arranged in a sequence that places the most-often used position at the top of each series of pushbuttons. With this arrangement, a stable display can usually be obtained by pressing the top pushbuttons: AUTO, AC, and INT. When an adequate trigger signal is applied, the unit is triggered as indicated by the illuminated TRIG'D light, with the correct settings of the LEVEL control and SLOPE switch. If the TRIG'D light is not on, the LEVEL control is at a setting outside the range of the trigger signal applied to this unit from the vertical unit, the trigger signal is inadequate, or its frequency is below the lower frequency limit of the AC COUPLING switch position. If the desired display is not obtained with these buttons pushed in, other selections must be made. Refer to the following discussions or the intruction manuals for the associated oscilloscope and vertical unit for more information. MIL

Triagered Light

The TRIG'D light conveniently indicates the condition of the triggering circuits. If the MAIN TRIGGERING controls are correctly set and an adequate trigger signal is applied, the TRIG'D light is on. Under certain conditions, the TRIG'D light may be off, indicating that the sweep is not triggered. The cause could be a misadjusted LEVEL control, incorrectly set COUPLING or SOURCE switches, low trigger signal amplitude, or a triggering signal repetition rate outside the acceptable frequency range. This light can be used as a general indication of correct triggering. It is particularly useful when setting up the trigger circuits when a triggering signal is available without a display on the crt.

Main Trigger Mode

The pushbuttons located under the MODE title select the mode in which the main sweep is triggered.

AUTO. When the AUTO pushbutton is pressed, a triggered display is presented whenever an adequate trigger signal is applied and the LEVEL control and SLOPE

switch are correctly set. The TRIG'D light indicates when the display is triggered.

When the trigger repetition rate is below about 30 Hz, outside the frequency range selected by the COUPLING switch, or when the trigger signal is inadequate, the sweep free-runs at the sweep rate indicated by the TIME/DIV OR DLY TIME switch (TRIG'D light off). When an adequate trigger signal is again applied, the free-running condition ends and a triggered display is presented. The sweep also free-runs when the LEVEL control is at a setting outside the amplitude range of the trigger signal. This type of freerunning display can be useful when it is desired to measure only the maximum peak-to-peak amplitude of a signal without observing the waveshape (such as in bandwidth measurements). When the display is of a much greater amplitude than can be displayed on the crt, the sweep will be triggered in all positions of the LEVEL control and will not free-run.

NORM. When the NORM pushbutton is pressed, a triggered display is presented with the correct setting of the LEVEL control and SLOPE switch whenever an adequate trigger signal is applied. The TRIG'D light indicates when the display is triggered.

The NORM trigger mode must be used to produce triggered displays with trigger repetition rates below about 30 Hz. When the LEVEL control is at a setting outside the amplitude range of the trigger signal, when the trigger repetition rate is outside the frequency range selected by the COUPLING switch, or when the trigger signal is inadequate, there is no trace (TRIG'D light is off).

single sweep, reset-ready. When the signal to be displayed is not repetitive or varies in amplitude, waveshape, or repetition rate, a conventional repetitive type display may produce an unstable presentation. A stable display can often be obtained under these circumstances by using the SINGLE SWP feature of this unit. The SINGLE SWP MODE is also useful to photograph non-repetitive or unstable displays.

To obtain a single-sweep display of a repetitive signal, first obtain the best possible display in the NORM MODE. Then without changing the other MAIN TRIGGERING switches, press the SINGLE SWEEP pushbutton. When ready to view the single-sweep display, press the RESET-READY pushbutton. A single trace is presented each time the RESET-READY pushbutton is pressed (as long as the repetitive signal remains connected to the system and MAIN TRIGGERING switches are correctly set); further sweeps cannot be presented until the RESET-READY pushbutton is pressed again. If the display signal is a complex waveform composed of varying amplitude, successive single-sweep displays may not start at the

2-6 REV B JUN 1980

same point on the waveform. To avoid confusion due to the crt persistence, allow the display to disappear before pressing the RESET-READY pushbutton again. At fast sweep rates, it may be difficult to view the single-sweep display. The apparent trace intensity can be increased by reducing the ambient light level or using a viewing hood as recommended in the indicator oscilloscope instruction manual.

Non-repetitive, random signals can be displayed in the SINGLE SWP MODE by first obtaining the best possible display in the NORM MODE with a signal that is about the same amplitude and frequency as the random signal. Then without changing the other MAIN TRIGGERING controls, press the SINGLE SWP pushbutton. When ready for the random signal, press the RESET-READY pushbutton. The RESET-READY pushbutton remains illuminated to indicate that the unit has been reset and is ready to produce a sweep. The light goes out after the single sweep has been displayed. To prepare the unit for another single-sweep display, press the RESET-READY pushbutton.

When using the SINGLE SWP MODE to photograph waveforms, turn off the graticule illumination while the trace is being photographed. Then the graticule can be photographed later to produce a double-exposure picture showing complete information. Further information on photographic technique is given in the appropriate camera instruction manual.

Main Triggering Coupling

The MAIN TRIGGERING pushbuttons located below the COUPLING title select the method in which the trigger signal is connected to the trigger circuits. Each position permits selection or rejection of the frequency components of the trigger signal which trigger the sweep. Fig. 1-5 graphically illustrates the band of frequencies covered by each position of the COUPLING switch.

AC. In the AC position of the COUPLING switch, the DC component of the trigger signal is blocked. Signals with low-frequency components below about 30 Hz are attenuated. In general, AC COUPLING can be used for most applications. However, if the signal contains unwanted frequency components or if the sweep is to be triggered at a low repetition rate or DC level, one of the remaining COUPLING switch positions will provide a better display.

The triggering point in the AC position of the COUPLING switch depends upon the average voltage level of the trigger signal. If the trigger signal occurs randomly, the average voltage level will vary, causing the triggering point to vary also. This shift of the triggering point may make it impossible to maintain a stable display. In such cases, use DC COUPLING.

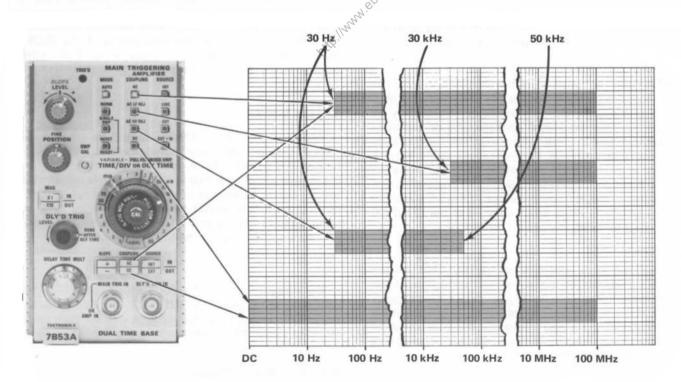


Fig. 2-3. Frequency range of each COUPLING switch position.

Operating Instructions-7B53A/7B53AN

AC LF REJ. In the AC LF REJ position of the COUPLING switch, dc is rejected and low-frequency trigger signals below about 30 kHz are attenuated. Therefore, the sweep is triggered only by the higher-frequency components of the trigger signal. This position is particularly useful for providing stable triggering if the trigger signal contains line-frequency components. Also, the AC LF REJ position provides the best alternate vertical displays at fast sweep rates when comparing two or more unrelated signals.

AC HF REJ. The AC HF REJ position of the COUPLING switch passes all low-frequency signals between about 30 Hz and 50 kHz. Dc is rejected and signals outside the above rage are attenuated. When triggering from complex waveforms, this position is useful to provide a stable display of the low-frequency components.

DC. The DC position of the COUPLING switch can be used to provide stable triggering with low-frequency signals which would be attenuated in the other modes, or with low-repetition rate signals. It can also be used to trigger the sweep when the trigger signal reaches a dc level selected by the setting of the LEVEL control. When using internal triggering, the setting of the vertical unit position control affects the dc triggering point.

Main Triggering Source

The MAIN TRIGGERING pushbutton located below the SOURCE title select the source of the trigger signal which is connected to the main triggering circuits.

INT. In the INT position of the SOURCE switch, the trigger signal is derived from the associated vertical unit. Further selection of the internal trigger signal may be provided by the associated vertical unit or indicator oscilloscope; see the instruction manuals for these instruments for information. For most applications, the INT position of the SOURCE switch can be used. However, some applications require special triggering which cannot be obtained in the INT position of the SOURCE switch. In such cases the LINE or EXT positions of the SOURCE switch must be used.

LINE. The LINE position of the SOURCE switch connects a sample of the power-line voltage from the indicator oscilloscope to the trigger circuit. Line triggering is useful when the input signal is time-related (multiple or submultiple) to the line frequency. It is also useful for providing a stable display of a line-frequency component in a complex waveform.

EXT. An external signal connected to the MAIN TRIG IN connector can be used to trigger the sweep in the EXT position of the SOURCE switch. The external signal must

be time-related to the displayed waveform for a stable display. An external trigger signal can provide a triggered display when the internal signal is too low in amplitude for correct triggering, or contains signal components on which it is not desired to trigger. It is also useful when signal tracing in amplifiers, phase shift networks, waveshaping circuits, etc. The signal from a single point in the circuit under test can be connected to the EXT TRIG IN connector with a probe or cable. The sweep is then triggered by the same signal at all times and allows amplitude, time relationship, or waveshape changes of signals at various points in the circuit to be examined without resetting the MAIN TRIGGERING controls.

EXT \div **10.** Operation in the EXT \div 10 position of the SOURCE switch is the same as described for EXT except that the external signal is attenuated 10 times. Attenuation of high-amplitude external trigger signals is desirable to broaden the range of the LEVEL control.

Trigger Slope

The MAIN TRIGGERING SLOPE switch (concentric with the MAIN TRIGGERING LEVEL control) determines whether the trigger circuit responds on the positive-going or negative-going portion of the trigger signal. When the SLOPE switch is in the + position, the display starts on the positive-going portion of the waveform; in the - position, the display starts with the negative-going portion of the waveform (see Fig. 2-4). When several cycles of a signal appear in a display, the setting of the SLOPE switch is often unimportant. However, if only a certain portion of a cycle is to be displayed, correct setting of the SLOPE switch is important to provide a display which starts on the desired slope of the input signal.

Trigger Level

The MAIN TRIGGER LEVEL control determines the voltage level on the trigger signal at which the sweep is triggered. When the LEVEL control is set in the + region, the trigger circuit responds at a more positive point on the trigger signal. When the LEVEL control is set in the region, the trigger circuit responds at a more negative point on the trigger signal. Fig. 2-4 illustrates this effect with different settings of the SLOPE switch.

Before setting the MAIN TRIGGERING LEVEL, set the desired SLOPE, MODE, COUPLING, and SOURCE. Set the LEVEL control fully counterclockwise and then rotate clockwise until the display starts at the desired point.

Selecting Sweep Rates

The TIME/DIV OR DLY TIME switch selects calibrated sweep rates for the main sweep generator and the DLY'D Time/Division switch selects calibrated sweep rates for

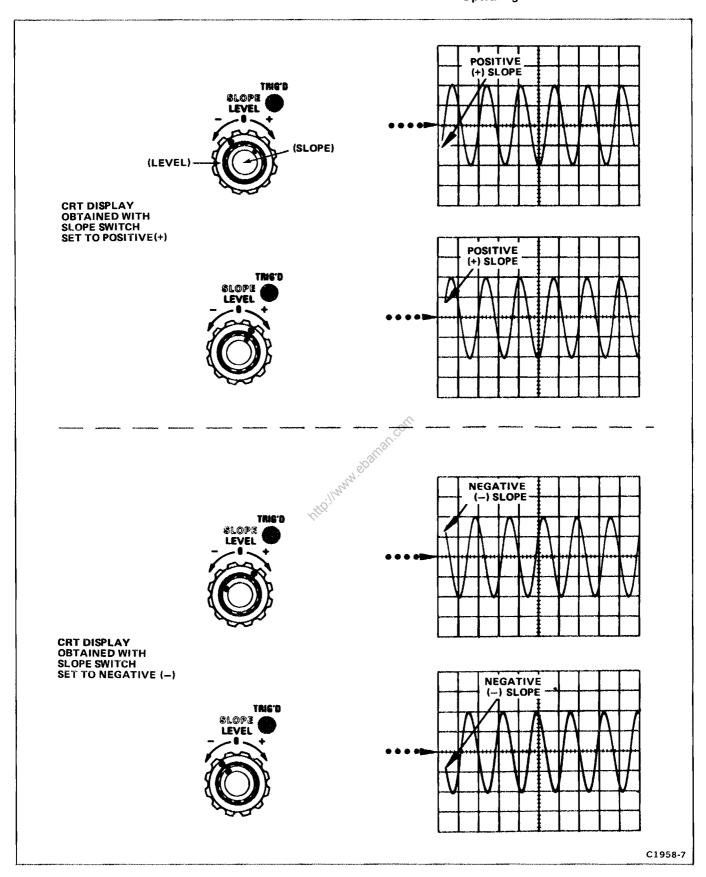


Fig. 2-4. Effect of LEVEL control and SLOPE switch on CRT display.

REV A JUN 1980 2-9

Operating Instructions—7B53A/7B53AN

the delayed sweep generator. The sweep rate of the main sweep generator is bracketed by the black lines on the clear plastic flange of the TIME/DIV OR DLY TIME switch (see Fig. 2-5). The sweep rate of the delayed sweep generator is indicated by the white line on the DLY'D Time/Division knob. When the TIME/DIV OR DLY TIME switch and the DLY'D Time/Division switch are set to the same sweep rate, the switches lock together and the sweep rate of both generators are changed at the same time. However, when the DLY'D Time/Division knob is pulled outward, the clear plastic flange is disengaged and only the delayed sweep generator sweep rate is changed. This allows changing the delayed sweep rate without changing the delay time determined by the main sweep generator. The DLY'D Time/Division switch also selects Display Modes. See Display Mode discussion in this section for further information.

A VARIABLE control is provided concentric with the TIME/DIV OR DLY TIME and the DLY'D Time/Division switches (see Fig. 2-5). When the VARIABLE control is rotated clockwise to the CAL position (into switch detent) the variable function is inoperative and the VARIABLE knob can be used only to select the MIXED Display Mode (see Display Mode discussion in this section for more information). However, when rotated counterclockwise (out of switch detent), the VARIABLE control is activated

for variable (uncalibrated) main sweep rates, delayed sweep rates, or main sweep holdoff; depending upon the setting of the Variable Selector multi-pin connector. The VARIABLE control allows the sweep rate in each Time/Division switch position (main or delayed) to be reduced to at least the next adjacent switch position and the holdoff time to be increased 2:1.

Time Measurement

When making time measurements from the graticule, the center eight divisions provide the most linear time measurements (see Fig. 2-6). Position the start of the timing area to the second vertical line and adjust the TIME/DIV OR DLY TIME switch so the end of the timing area falls between the second and tenth vertical lines.

Sweep Magnifier

The sweep magnifier can be used to expand the display ten times. The center division of the unmagnified display is the portion visible on the crt in the magnified form (see Fig. 2-7). Equivalent length of the magnified sweep is more than 100 divisions; any 10 division portion can be viewed by adjusting the POSITION control to bring the desired portion onto the viewing area.

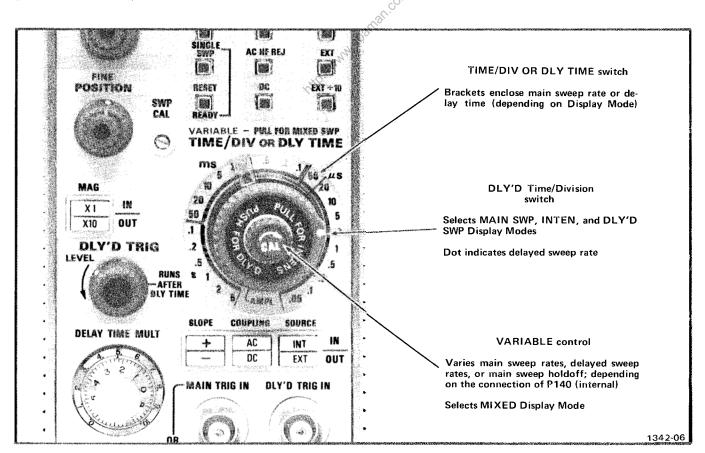


Fig. 2-5. Composite Time/Division switch.

2-10 REV B JUN 1980

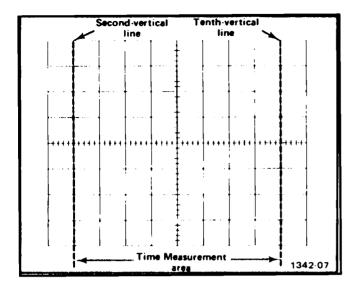


Fig. 2-6. Area of graticule used for accurate time measurements.

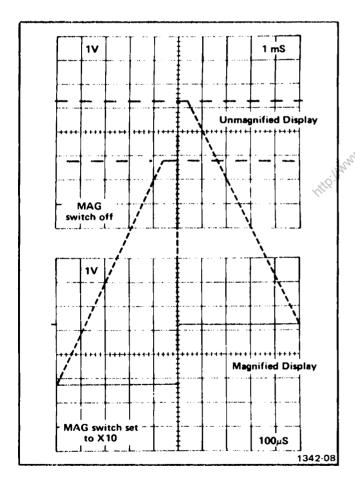


Fig. 2-7. Operation of Sweep Magnifier.

To use the MAG switch, first move the portion of the display which is to be expanded to the center of the graticule. Then press and release the MAG switch to the

OUT – X10 position. When the MAG switch is in the X10 position, the equivalent magnified sweep rate can be determined by dividing the Time/Division setting by 10. For example, if the TIME/DIV OR DLY TIME switch is set to 1 ms the equivalent sweep rate is 100 μ s. When operating in the INTEN, DLY'D SWP, or MIXED Display Modes the delayed sweep rate as well as the main sweep rate is increased 10 times.

Display Modes

Four Display Modes can be selected by appropriate settings of the Time/Division switches (see Fig. 2-5).

Main Sweep Operation. To select the MAIN SWP Display Mode (non-delayed sweep) set the TIME/DIV OR DLY TIME and DLY'D Time/Division switches to the same sweep rate and press in the DLY'D Time/Division switch. Calibrated sweep rates in the MAIN SWP Display Mode are available from 5 s/div to 0.05 μ s/div (5 ns/div with X10 magnification). The VARIABLE control (Variable Selector connector set to Main Variable) can be used to obtain uncalibrated sweep rates to 12.5 s/div. Triggering in the MAIN SWP Display Mode is controlled by the MAIN TRIGGER controls.

Mode, pull out the DLY'D Time/Division knob and rotate it to a desired sweep rate faster than the TIME/DIV OR DLY TIME switch setting. The INTEN Display Mode provides an intensified portion of the main sweep during the time the delayed sweep is in operation (see Fig. 2-8A). The time that the delayed sweep runs is determined by the DLY'D Time/Division switch. The amount of delay time between the start of the delaying sweep and the intensified portion is determined by the TIME/DIV OR DLY TIME switch and the DELAY TIME MULT dial. Triggering for the delaying sweep portion of display is controlled by the MAIN TRIGGERING controls; triggering for the intensified portion of display is controlled by the DLY'D TRIG controls.

Delayed Sweep Display. The DLY'D SWP Display Mode is selected when the DLY'D Time/Division switch is pulled out, rotated in the INTEN Mode for the desired sweep rate, and then pushed in. In this mode, the intensified portion of display, as viewed in the INTEN Display Mode, is displayed on the crt at the sweep rate indicated by the DLY'D Time/Division switch (see Fig. 2-8B). Calibrated sweep rates in the DLY'D SWP Display Mode are available from .5 s/div to 0.05 μ s/div. Uncalibrated delayed sweep rates to 1.25 s/div can be obtained by using the VARIABLE control (Variable Selector connector set to Dly'd Variable position). Triggering for the DLY'D SWP display is controlled by the DLY'D TRIG controls.

REV C JUN 1980 2-11

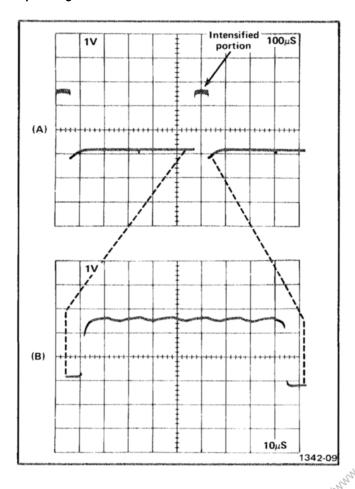


Fig. 2-8. (A) Intensified Sweep display; (B) Delayed Sweep display.

Mixed Sweep Operation. The MIXED Display Mode is selected when the DLY'D SWP Display Mode is selected and the VARIABLE knob is pulled out. In this mode, the main sweep is displayed on the crt to a point determined by the DELAY TIME MULT dial; the remainder of the sweep is at a rate determined by the delayed sweep. Triggering for the main sweep portion of display is controlled by the MAIN TRIGGERING controls; and triggering for the delayed sweep portion of display is controlled by the DLY'D TRIG controls. A typical mixed sweep display is shown in Fig. 2-9.

Delay Time Multiplier

The DELAY TIME MULT dial (functional in the INTEN, DLY'D SWP, and MIXED Display Modes) provides 0 to 10 times continuous sweep delay. The time that the main sweep runs before the start of the delayed sweep is determined by the settings of the TIME/DIV OR DLY TIME switch and the DELAY TIME MULT dial.

For example, the delay time indicated by the DELAY TIME MULT dial in Fig. 2-10 is 3.55; this corresponds to 3.55 crt divisions of main sweep. Thus 3.55 multiplied by

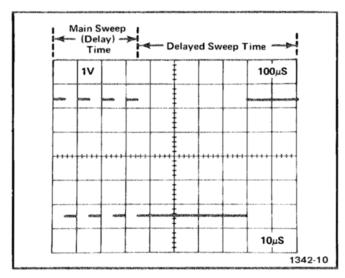


Fig. 2-9. Typical Mixed Sweep display (DELAY TIME MULT dial set to 3.55)

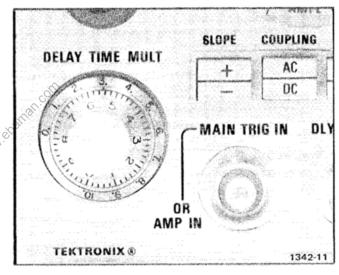


Fig. 2-10. DELAY TIME MULT dial. Reading shown: 3.55.

the delaying sweep rate, indicated by the TIME/DIV OR DLY TIME switch, gives the calibrated delay time before the start of the delayed sweep.

Delayed Sweep Triggering

A LEVEL control and SLOPE, COUPLING, and SOURCE switches are provided for delay sweep triggering. When the LEVEL control is rotated to the RUNS AFTER DLY TIME position the delayed sweep starts immediately after the delay time. The DLY'D TRIG LEVEL control and the SLOPE, COUPLING, and SOURCE switches are inoperative. This mode permits the selection of continuously variable delay times (by varying the DELAY TIME MULT dial).

2-12 REV C JUN 1980

When the DLY'D TRIG LEVEL control is rotated counterclockwise (out of switch detent), the delayed sweep is triggerable. The delayed sweep does not start at the completion of the delay time but, waits until a trigger pulse is received by the delayed sweep triggering circuit. The delay time in this mode is dependent not only on the settings of the delay-time controls, but on the delayed sweep triggering controls and the occurrence of the delayed sweep triggering signal. The primary purpose of this mode is to eliminate jitter from the display delayed sweep waveform. Since the delayed sweep is triggered by the input waveform, jitter is eliminated from the delayed sweep display even though it may be inherent in the input waveform.

When the delayed sweep is triggerable, the LEVEL control can be rotated to select the amplitude point on the trigger signal at which the delayed sweep is triggered. The DLY'D TRIG SLOPE, COUPLING, and SOURCE switches are activated and their functions are the same for delayed triggering as functions with the same title are for MAIN TRIGGERING (see Main Triggering Level, Slope, Coupling, and Source discussions in this section).

Input/Output Connectors

Two dual-function bnc connectors are provided on the instrument front-panel.

MAIN TRIG IN OR AMP IN. This connector is an external trigger input for the main triggering circuit when the MAIN TRIGGERING SOURCE switch is set to EXT or EXT ÷ 10 and the TIME/DIV OR DLY TIME switch is set to any position except AMPL. When the TIME/DIV OR DLY TIME switch is set to AMPL and the MAIN TRIGGERING SOURCE switch is set to EXT or EXT ÷ 10, this connector serves as an external horizontal input (see X-Y Operation).

DLY'D TRIG IN. This connector is an external input for the delayed triggering circuit when the DLY'D TRIG SOURCE switch is set to EXT. When the DLY'D TRIG SOURCE switch is set to INT and P613 is properly connected, the DLY'D TRIG IN connector serves as a Delayed Sweep Gate Out connector (not labeled). The Delayed Sweep Gate signal is a rectangular positive-going pulse with approximately 3.0 V amplitude and pulse width coincident with the delayed sweep.

X-Y Operation

Some applications required one signal displayed versus another rather than against time (internal sweep). The amplifier function of the 7B53A/7B53AN allows an external signal to be applied to the horizontal deflection system either externally via the MAIN TRIG IN OR AMP IN connector or internally by way of the triggering system.

To apply an external signal (X-signal) to the horizontal system, set the 7B53A/7B53AN TIME/DIV OR DLY TIME switch to AMPL and the MAIN TRIGGERING SOURCE switch to EXT. The MAIN TRIGGERING COUPLING selected affects the frequency response of the X-signal. Apply the external signal to the MAIN TRIG IN OR AMP IN connector. Deflection factor of the X-signal is provided in multiples of 10 as shown in Table 2-1. The Y-signal can be applied to the plug-in unit installed in the vertical compartment.

Table 2-1
DEFLECTION FACTOR OF THE X SIGNAL

Main Triggering Coupling	Mag	Deflection Factor (within 10%)
EXT	X10	10 mV/div
EXT	X1	100 mV/div
EXT ÷ 10	X1	1 V/div

To apply the X-signal internally via the triggering system set the TIME/DIV OR DLY TIME switch to AMPL and the MAIN TRIGGERING SOURCE switch to INT. Apply the external signal to the Amplifier unit installed in the vertical compartment. The attenuator switch of the Amplifier unit determines the horizontal deflection factor.

For information on X-Y applications see the oscilloscope manual. Also, the reference books listed under Applications provide information on X-Y measurements and interpreting the resultant lissajous displays.

Mainframe Operating Modes

The 7B53A/7B53AN can be operated in a 7000-Series Oscillsocope which has four plug-in compartments, either independently, in the Alternate or Chopped Horizontal Modes, or as a delayed sweep unit. However, when the 7B53A/7B53AN is operated as a delayed sweep unit, it must be triggered for a crt display. It cannot delay another time base unit but it can delay its own internal delayed sweep. Refer to the appropriate oscilloscope manual for additional mainframe horizontal operating information.

APPLICATIONS

General

The following information describes the procedure and techniques for making basic measurements with a 7B53A/7B53AN installed in a 7000-Series Oscilloscope. These applications are not described in detail, since each application must be adapted to the requirements of the

Operating Instructions---7B53A/7B53AN

individual measurement. This instrument can also be used for many applications not described in this manual. Contact your local Tektronix Field Office or representative for assistance in making specific measurements. The following books describe oscilloscope measurement techniques which can be adapted for use with this instrument.

J. Czech, "Oscilloscope Measuring Techniques", Phillips Technical Library, Springer-Verlag, New York, 1965.

John D. Lenk, "Handbook of Oscilloscope Theory and Applications", Prentice-Hall, Inc. Englewood Cliffs, N.J., 1968.

Charles H. Roth, Jr., "Use of the Oscilloscope", Programmed Text, Prentice-Hall, Inc., Englewood Cliffs, N.J., 1970.

J.H. Golding, "Measuring Oscilloscope", Transatlantic, 1971.

Comparison Measurement Techniques

Sweep Rates. To establish an arbitrary horizontal sweep rate based upon a specific reference frequency proceed as follows:

- 1. Connect the reference signal to the input of the vertical unit. Set the Volts/Division switch of the vertical unit for four or five divisions of vertical deflection. Obtain a triggered display.
- 2. Set the TIME/DIV OR DL'Y TIME switch and the VARIABLE control (Variable Selector connector set to Main Variable) so one cycle of the signal covers an exact number of horizontal divisions. Do not change the VARIABLE control after obtaining the desired deflection. This display can be used as a reference for frequency comparison measurements.
- 3. To establish an arbitrary sweep rate so the period (time for one complete cycle) of an unknown signal can be measured accurately at any setting of the TIME/DIV OR DLY TIME switch, the period of the reference signal must be known. If it is not known, it can be measured before the VARIABLE switch is set in step 2.

4. Divide the period of the reference signal (seconds) by the product of the horizontal deflection established in step 2 (division) and the setting of the TIME/DIV OR DLY TIME switch. This is the horizontal conversion factor:

- 5. To measure the period of an unknown signal disconnect the reference signal and connect the unknown signal to the vertical unit. Set the TIME/DIV OR DLY TIME switch to a setting that provides sufficient horizontal deflection to make an accurate measurement. Do not readjust the VARIABLE control.
- 6. Measure the horizontal deflection in divisions and calculate the period of the unknown signal using the following formual:

Period (Seconds)

TIME/DIV OR horizontal horizontal DLY TIME X conversion X deflection setting factor (divisions)

Example. Assume a reference signal frequency of 455 Hz (period 2.19 ms), a TIME/DIV OR DLY TIME switch setting of .2 ms, and the VARIABLE control adjusted to provide a horizontal deflection of eight divisions. Substituting these values in the horizontal conversion factor formula (step 4):

Then, with a TIME/DIV OR DLY TIME switch setting of 50 μ s, the period of an unknown signal which completes one cycle in seven horizontal divisions can be determined by using the period formual (step 6):

Period =
$$50 \mu s \ X \ 1.37 \ X \ 7 = 480 \mu s$$
 (Seconds)

This answer can be converted to frequency by taking the reciprocal of the period in seconds (see application on Determining Frequency Measurements).

Time Duration Measurements

To measure time between two points on a waveform, use the following procedure:

- Connect the signal to be displayed to the input of the vertical unit.
- 2. Set the Vertical and Horizontal Mode switches on the indicator oscilloscope to display the plug-in units used.
- 3. Set the Volts/Division switch of the vertical unit to display about four divisions of waveform.
- 4. Set the MAIN TRIGGERING controls to obtain a stable display.
- 5. Set the TIME/DIV OR DLY TIME switch to the fastest sweep rate that displays less than eight divisions between the time measurement points (see topic entitled "Time Measurements" and Fig. 2-6).
- 6. Adjust the vertical unit position control to move the points between which the time measurement is made to the center horizontal line.
- 7. Adjust the horizontal POSITION control to position the time-measurement points within the center eight divisions of the graticule.
- 8. Measure the horizontal distance between the time measurement points. Be sure the VARIABLE control is set to CAL.
- 9. Multiply the distance measured in step 8 by the setting of the TIME/DIV OR DLY TIME switch.

Example. Assume that the distance between the time measurement points is five divisions (see Fig. 2-11), and the TIME/DIV OR DLY TIME switch is set to .1 ms.

Using the formula:

Substituting the given values:

Time Duration = 5 X 0.1 ms

The time duration is 0.5 ms.

Determining Frequency

The time measurement technique can also be used to determine the frequency of a signal. The frequency of a periodically recurrent signal is the reciprocal of the time duration (period) of one complete cycle.

Use the following procedure:

- 1. Measure the time duration of one complete cycle of the waveform as described in the previous application.
- 2. Take the reciprocal of the time duration to determine the frequency.

Example. The frequency of the signal shown in Fig. 2-11 which has a time period of 0.5 ms is:

Frequency ==

$$\frac{1}{\text{time period}} \quad X \qquad \frac{1}{0.5 \text{ ms}} = 2 \text{ kHz}$$

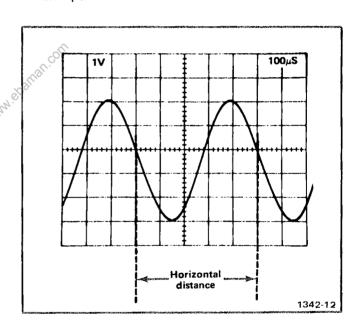


Fig. 2-11. Measuring the time duration between points on a waveform.

Risetime Measurements

Risetime measurements employ basically the same techniques as time-duration measurements. The main difference is the points between which the measurement is made. The following procedure gives the basic method of measuring risetime between the 10% and 90% points of the waveform. Falltime can be measured in the same manner on the trailing edge of the waveform.

Operating Instructions-7B53A/7B53AN

- 1. Connect the signal to be displayed to the input of the vertical unit.
- 2. Set the Vertical and Horizontal Mode switches on the indicator oscilloscope to display the plug-in unit used.
- 3. Set the Volts/Division switch and the Variable Volts/Division control of the vertical unit to produce a signal an exact number of divisions in amplitude.
- 4. Center the display about the center horizontal graticule line with the vertical unit Position control.
- Set the MAIN TRIGGERING controls to obtain a stable display.
- 6. Set the TIME/DIV OR DLY TIME switch to the fastest sweep rate that displays less than eight divisions between the 10% and 90% points on the waveform.
- 7. Determine the 10% and 90% points on the rising portion of the waveform. The figures given in Table 2-2 are for the points 10% up from the start of the rising portion and 10% down from the top of the rising portion (90% point).

Table 2-2
RISETIME MEASUREMENTS

Vertical display (divisions)	10% and 90% points	Divisions Vertically between 10% and 90% points
4	0.4 and 3.6 divisions	3.2
5	0.5 and 4.5 divisions	4.0
6	0.6 and 5.4 divisions	4.8
7	0.7 and 6.3 divisions	5.6
8	0.8 and 7.2 divisions	6.4

- 8. Adjust the horizontal POSITION control to move the 10% point of the waveform to the second vertical line of the graticule. For example, with a five-division display as shown in Fig. 2-12, the 10% point is 0.5 division up from the start of the rising portion.
- Measure the horizontal distance between the 10% and 90% points. Be sure the VARIABLE control is set to CAL.

10. Multiply the distance measured in step 9 by the setting of the TIME/DIV OR DLY TIME switch.

Example. Assume that the horizontal distance between the 10% and 90% points is four divisions (see Fig. 2-12) and the TIME/DIV OR DLY TIME switch is set to 1 μ s. Applying the time duration formula to risetime:

Time		horizontal		TIME/DIV OR
Duration	THE LOCAL	distance	Χ	DLY TIME
(Risetime)		(divisions)		setting

Substitute the given values:

Risetime = $4 \times 1 \mu s$.

The risetime is $4.0 \mu s$.

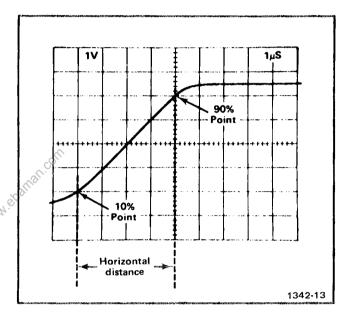


Fig. 2-12. Measuring risetime.

Delayed Sweep Measurement

The delayed sweep mode can be used to make accurate time measurements. The following measurement determines the time difference between two pulses displayed on the same trace. This application may also be used to measure time difference from two different sources (dual-trace) or to measure time duration of a single pulse. See Section 2 for measurement accuracy.

- 1. Connect the signal to be displayed to the input of the vertical unit.
- 2. Set the vertical and horizontal Mode switches on the indicator oscilloscope to display the plug-in units used.

2-16 REV A JUN 1980

- 3. Set the Volts/Division switch of the vertical unit to produce a display about 4 divisions in amplitude.
- 4. Adjust the MAIN TRIGGERING controls for a stable display.
- 5. If possible, set the TIME/DIV OR DLY TIME switch to a sweep rate which displays about eight divisions between pulses.
- 6. Set the DLY'D Time/Division switch to a setting 1/100 of the TIME/DIV OR DLY TIME switch setting and pull out the DLY'D Time/Division switch for the INTEN Display Mode. This produces an intensified portion approximately 0.1 division in length.

NOTE

Measurement accuracy will be affected if the LEVEL control setting for MAIN TRIGGERING or horizontal POSITION control setting is changed.

- 7. Rotate the DELAY TIME MULT dial to move the intensified portion of the trace to the first pulse.
- 8. Press in the DLY'D Time/Division switch for the DLY'D SWP Display Mode.
- 9. Adjust the DELAY TIME MULT dial to move the pulse (or the rising portion) to the center vertical graticule line. Note the exact setting of the dials.
- 10. Turn the DELAY TIME MULT dial clockwise until the second pulse is positioned to the same point as the first pulse. (If several pulses are displayed, return to the INTEN DISPLAY MODE to locate the correct pulse.) Again note the exact dial setting.
- 11. Subtract the first dial setting from the second and multiply by the delay time shown by the TIME/DIV OR DLY TIME switch. This figure is the time interval between pulses.

Example. Assume the first dial setting is 1.31 and the second dial setting 8.81 with the TIME/DIV OR DLY TIME switch set to 2 ms (see Fig. 2-13).

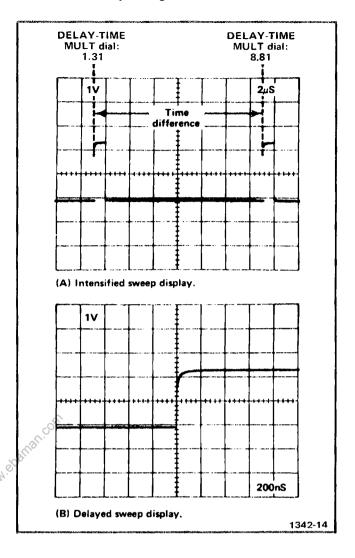


Fig. 2-13. Measuring time difference using delayed sweep.

Time Difference
(Delayed Sweep)

second first
dial - dial x
setting setting

delay time (TIME/DIV OR DLY TIME switch setting)

Substituting the given values:

Time Difference = $(8.81 - 1.31) \times 2 \mu s$

The time difference is 15 μ s.

@ JUN 1980 2-17

Operating Instructions—7B53A/7B53AN

Delayed Sweep Magnification

The delayed sweep feature of the 7B53A/7B53AN provides apparent magnification of the displayed waveform. The sweep rate of the delayed sweep is not actually increased; the apparent magnification is the result of delaying the Delayed Sweep an amount of time selected by the TIME/DIV OR DLY TIME switch and the DELAY TIME MULT dial before the display is presented at the sweep rate selected by the DLY'D Time/Division switch. The following method uses the RUNS AFTER DLY TIME DLY'D TRIG Mode to allow the delayed portion of the display to be positioned with the DELAY TIME MULT dial. If there is too much jitter in the delayed sweep display, use the Triggered delay sweep magnification procedure which follows this procedure.

- 1. Connect the signal to be displayed to the input connector of the vertical unit. Set the Vertical and Horizontal Mode switches on the indicator oscilloscope to display the plug-in units used.
- 2. Set the Volts/Division switch of the vertical unit to produce a display about 4 divisions in amplitude.
- Adjust the MAIN TRIGGERING controls for a stable display.
- 4. Set the TIME/DIV OR DLY TIME switch to a sweep rate which displays the complete waveform (see Fig. 2-14).
- 5. Pull out the DLY'D Time/Division switch for the INTEN Display Mode. Rotate the DLY'D TRIG LEVEL control clockwise to RUNS AFTER DLY TIME.
- 6. Position the start of the intensified portion with the DELAY TIME MULT dial to the part of the display to be magnified.
- 7. Set the DLY'D Time/Division switch to a setting which intensifies the full portion of the display to be magnified. The start of the intensified trace will remain as positioned in step 6.
- 8. Press in the DLY'D Time/Division switch for the DLY'D SWP Display Mode.
- 9. Time Measurements can be made from the display in the conventional manner. Sweep rate is determined by the setting of the DLY'D Time/Division switch.

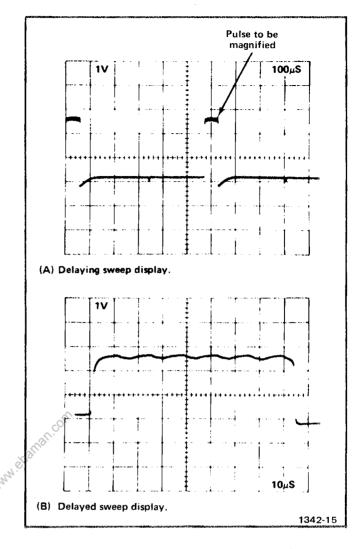


Fig. 2-14. Using delayed sweep for magnification.

10. The apparent sweep magnification can be calculated by dividing the TIME/DIV OR DLY TIME switch setting by the DLY'D Time/Division switch setting.

Example. The apparent magnification of the display shown in Fig. 2-14 with a TIME/DIV OR DLY TIME setting of .1 ms and a DLY'D Time/Division switch setting of 10 μ s is:

Substituting the given values:

Apparent
$$\frac{1 \times 10^{-4}}{1 \times 10^{-5}}$$

The apparent magnification is 10 times.

Triggered Delayed Sweep Magnification

The delayed sweep magnification method just described may produce too much jitter at high apparent magnification ranges. The Triggered Delayed Sweep Mode (DLY'D TRIG LEVEL control rotated out of switch detent) provides a more stable display, since the delayed sweep display is triggered at the same point each time.

- 1. Set up the display as instructed in steps 1 through 7 in the Delayed Sweep Magnification procedure.
- 2. Rotate the DLY'D TRIG LEVEL control in a counterclockwise direction but out of switch detent for a triggerable delayed sweep. Select the desired DLY'D TIRG SLOPE, COUPLING, and SOURCE.
- 3. Adjust the DLY'D TRIG LEVEL control to produce an intensified portion on the display.
- 4. Inability to produce an intensified portion of the display indicates that the DLY'D TRIG controls are incorrectly set, or that the signal does not meet triggering requirements. If the condition cannot be remedied with the DLY'D TRIG controls or by increasing the display amplitude (lower Volts/Division setting), externally trigger the delayed sweep.
- 5. When the correct portion of the display is intensified, press in the DLY'D Time/Division switch for the DLY'D SWP Display Mode, slight readjustment of the DLY'D TRIG LEVEL control may be necessary to produce a stable delayed sweep display.
- 6. Measurement and magnification are as described above in Delayed Sweep Magnification discussion.

Displaying Complex Signals Using Delayed Sweep

Complex signals often consist of a number of individual events of differing amplitudes, Since the trigger circuits are sensitive to changes in signal amplitude, a stable display can normally be obtained only when the sweep is triggered by the event(s) having the greatest amplitude. However, this may not produce the desired display of a lower-amplitude portion which follows the triggering event. The delayed sweep feature provides a means of delaying the start of the delayed sweep by a selected time following the event which triggers the main sweep generator. Then, the part of the waveform which contains the information of interest can be displayed at the delayed sweep rate.

Use the following procedure:

- 1. Set up the display as given in steps 1 through 8 of Delayed Sweep Magnification.
- 2. Time measurements can be made from the display in the conventional manner. Sweep rate is determined by the setting of the DLY'D Time/Division switch.

Example. Fig. 2-15 shows a complex waveform as displayed on the crt. The circled portion of the waveform cannot be viewed in any greater detail because the sweep is triggered by the larger amplitude pulses at the start of the display and a faster sweep rate moves this area of the waveform off the viewing area. The second waveform shows the area of interest magnified 10 times using Delayed Sweep. The DELAY TIME MULT dial has been adjusted so the delayed sweep starts just before the area of interest.

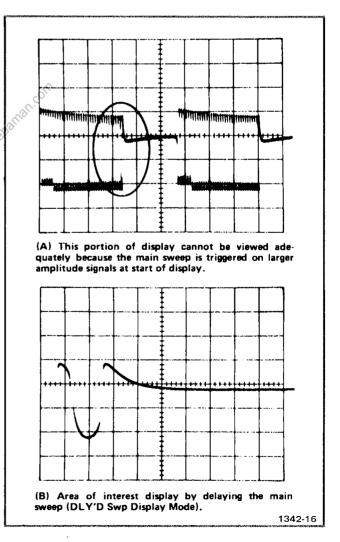


Fig. 2-15. Displaying a complex signal using delayed sweep.

@ JUN 1980 2-19

Operating Instructions—7B53A/7B53AN

Pulse Jitter Measurement

In some applications it is necessary to measure the amount of jitter on the leading edge of a pulse or jitter between pulses.

- 1. Connect the signal to be displayed to the input connector of the vertical unit. Set the Vertical and Horizontal Mode switches on the indicator oscilloscope to display the plug-in units used.
- 2. Set the Volts/Division switch on the vertical unit to produce a display about four divisions in amplitude.
- 3. Adjust the MAIN TRIGGERING controls for a stable display.
- 4. Set the TIME/DIV OR DLY TIME switch to a sweep rate which displays the complete waveform (see Fig. 2-14).
- 5. Pull out the DLY'D Time/Division switch for the INTEN Display Mode.
- 6. Position the start of the intensified portion with DELAY TIME MULT dial to the part of the display to be magnified.
- 7. Set the DLY'D Time/Division switch to a setting which intensifies the full portion of the display to be magnified. The start of the intensified trace will remain as positioned in step 6.
- 8. Press in the DLY'D Time/Division switch for the DLY'D SWP Display Mode.
- 9. Slight readjustment of the MAIN TRIGGERING LEVEL control may be necessary to produce as stable a display as possible.
- 10. Pulse jitter is shown by horizontal movement on the pules (take into account inherent jitter of delayed sweep). Measure the amount of horizontal movement. Be sure that both vertical and horizontal VARIABLE controls are set to CAL.
- 11. Multiply the distance measured in step 10 by the DLY'D Time/Division switch setting to obtain pulse jitter in time.

Example. Assume that the horizontal movement is 0.5 division (see Fig. 2-16) and the DLY'D Time/Division switch is .5 μ s.

Using the formula:

horizontal DLY'D
Pulse Jitter X Time/Division
(divisions) setting

Substituting the given values:

Pulse Jitter = $0.5 \times 0.5 \mu s$

The pulse jitter is 0.25 μ s.

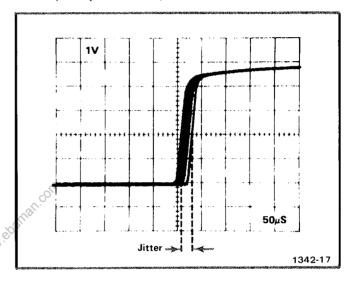


Fig. 2-16. Measuring pulse jitter.

Repackaging for Shipment

If the Tektronix instrument is to be shipped to a Tektronix Service Center for service or repair, attach a tag showing: owner (with address) and the name of an individual at your firm that can be contacted, complete instrument serial number and a description of the service required.

Save and re-use the package in which your instrument was shipped. If the original packaging is unfit for use or not available, repackage the instrument as follows:

Surround the instrument with polyethlene sheeting to protect the finish of the instrument. Obtain a carton of corrugated cardboard of the correct carton strength and having inside dimensions of no less than six inches more than the instrument dimensions. Cushion the instrument by tightly packing three inches of dunnage or urethane foam between carton and instrument, on all sides. Seal carton with shipping tape or industrial stapler.

The carton test strength for your instrument is 200 pounds.

THEORY OF OPERATION

Introduction

This section of the manual contains a description of the circuitry used in the 7B53A/7B53AN Dual Time Base. The description begins with a discussion of the major circuit functions using a simplified block diagram.

SIMPLIFIED BLOCK DIAGRAM

The Simplified Block Diagram, Fig. 3-1, shows interconnection of the basic circuit blocks in the 7B53A/7B53AN. In some cases, such as the Main Sweep Trigger, the block includes a number of separate circuits. The individual circuits are discussed in detail later in this section.

Main Sweep Mode

When the TIME/DIV OR DLY TIME switch is set to select MAIN SWP, operation is as follows:

Main Sweep Trigger. This block includes circuitry for selecting the trigger source, type of coupling, triggering mode, and point on the trigger signal where triggering occurs. Also, regardless of the trigger signal shape or amplitude (within specification), this circuitry provides a fast-rise, uniform-amplitude pulse to the Main Sweep Start Comparator. Termination of the pulse (or gate) occurs at the rise of Main Sweep Holdoff.

Main Sweep Start Comparator. This circuit is activated by the positive gate from the Main Sweep Trigger. The output signal coupled to the Main Sawtooth Generator is a positive gate with the same duration as the sweep. This gate is also coupled to the Sweep Gate Out. A negative-going gate (coincident with the positive gate) is coupled to the Delayed Sweep Lockout Multi and the Delayed Sweep Start Control.

Main Sawtooth Generator. The main sweep signal is developed by the Main Sawtooth Generator. When a positive gate from the Main Sweep Start Comparator is applied, a sawtooth waveform is generated. The sawtooth duration is determined by the positive gate duration. Rate of change of the sawtooth is set by Ct and Rt, selected by the TIME/DIV switch.

Sweep Stop Comparator. One side of this comparator is driven by the main sweep sawtooth signal, and the other

side is set by the Main Swp Stop adjustment. When the sawtooth waveform passes through the setting of the Main Swp Stop adjustment, the output of the Sweep Stop Comparator switches to a positive level. This positive step is applied to the Main Sweep Holdoff.

Main Sweep Holdoff. This circuit develops a gate which is used to prevent generation of a trigger signal until the sweep circuits have stabilized after a sweep. The positive step from the Sweep Stop Comparator initiates the positive holdoff gate. The duration of the hold off gate is variable, depending on the setting of the TIME/DIV OR DLY TIME switch. Holdoff timing capacitors are separate from sweep timing capacitors. Holdoff is longer for slower sweep rates.

Output from the Main Sweep Holdoff is coupled to the Main Sweep Trigger and the Delayed Sweep Holdoff circuit. A trigger signal cannot be generated during the holdoff interval. The holdoff serves to reset the trigger circuits so that they are ready to receive an input trigger signal after holdoff.

Horiz Output. The Horiz Output block includes the Ext Horiz Amp, Position Amp, Horiz Display Selector, and Horiz Out Amp circuits.

With the TIME/DIV OR DLY TIME switch set for main sweep, this circuit selects the signal from the Main Sawtooth Generator, amplifies the signal, and converts the single-ended input to a push-pull output signal. Dc positioning level is also applied to this block.

Delayed Sweep Mode

To generate the delayed sweep, the Main Sawtooth Generator must first be gated on (see Main Sweep Mode).

Delay Pickoff. This circuit supplies a positive gate which starts when the main sawtooth signal passes through the level selected by the DELAY TIME MULT control. The gate ends with the main sawtooth signal. The output signal is coupled to the Delayed Sweep Holdoff circuitry.

REV JAN 1985 3-1

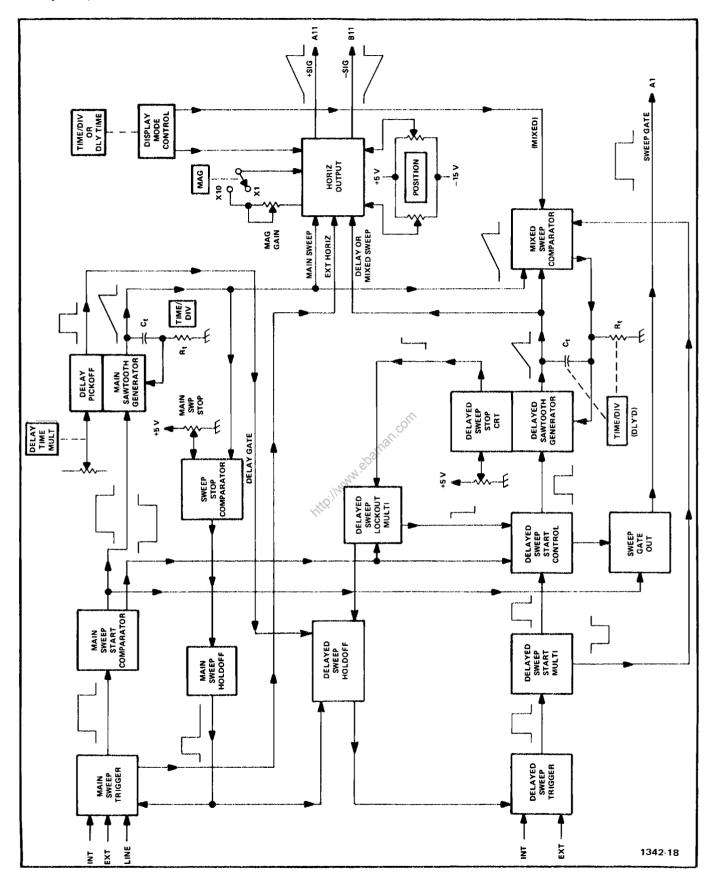


Fig. 3-1, 7B53A/7B53AN Simplified Block Diagram.

Delayed Sweep Trigger. When the DLY'D TRIG LEVEL is set to RUNS AFTER DLY TIME (into switch detent), the output trigger is generated as soon as the delayed gate is applied. If the DLY'D TRIG LEVEL control is in the triggerable mode (out of switch detent), the output trigger is initiated by the next input trigger that occurs after the Delay Gate is applied.

The Delayed Sweep Trigger output is a positive gate which is terminated by the Holdoff signal or the positive step from the Delayed Sweep Stop circuit. The positive output gate is coupled to the Delayed Sweep Start Multi.

Delayed Sweep Start Multi. The signal from the Delayed Sweep Trigger causes the Delayed Sweep Start Multi to flip so that a positive gate is coupled to the Delayed Sweep Start Control, and a negative gate is applied to the Mixed Sweep Comparator. The output gates are the same in duration as the positive gate from the Delayed Sweep Trigger.

Delayed Sweep Start Control. For delayed sweep mode of operation the Delayed Sweep Start Control serves to couple the positive gate from the Delayed Sweep Start Multi to the Delayed Sawtooth Generator and the Sweep Gate Out.

Input signals from the Main Sweep Start Comparator and the Delayed Sweep Lockout Multi are not effective in this mode.

Delayed Sawtooth Generator. The delayed sweep signal is developed by the Delayed Sawtooth Generator. The sawtooth is generated during the time that a positive gate is applied from the Delayed Sweep Start Control. Rate of change of the sawtooth is set by Ct and Rt, selected by the TIME/DIV (DIy'd) switch.

The sawtooth output signal is coupled to the Mixed Sweep Comparator and the Horiz Output circuits.

Delayed Sweep Stop Circuit. A positive step occurs at the output of the Delayed Sweep Stop circuit when the delayed sawtooth passes through the level selected by the Dly'd Swp Length adjustment. This step is coupled to the Delayed Sweep Trigger and the Delayed Sweep Lockout Multi.

Mixed Sweep Mode

In this mode of operation, the sweep is first running at the main sweep rate and then, after the selected delay interval, runs at the delayed sweep rate. The main sweep and delayed sweep are initiated as previously described. Operation of other circuit blocks follows.

Mixed Sweep Comparator. This circuit determines whether the delayed sweep generator runs at the main sweep rate or at the delayed sweep rate. Before the delay gate is generated (delay gate generated at delay pickoff as determined by the setting of the DELAY TIME MULT dial) the main sweep sawtooth signal is coupled through the Mixed Sweep Comparator, causing the delayed sweep generator to run at the main sweep rate. The resulting sawtooth signal is coupled to the Horizontal Output stage.

When a positive gate from the Delayed Sweep Trigger is applied to the Delayed Sweep Start Multi (at Delay Pickoff as determined by the DELAY TIME MULT dial setting) a negative gate is generated and coupled to the Mixed Sweep Comparator. This opens the Mixed Sweep Comparator, preventing the Delayed Sweep Generator from running at the main sweep rate. Simultaneously, the Delayed Sweep Generator is released to run at the delayed sweep rate.

Delayed Sweep Lockout Multi. The positive step from the Delayed Sweep Stop circuit is inverted by the Delayed Sweep Lockout Multi and coupled to the Delayed Sweep Start Control, thus turning off the Delayed Sawtooth Generator.

Sweep Gate Out. Depending on the selection of the TIME/DIV switch, this stage couples the positive gate from either the Main Sweep Start Multi or the Delayed Sweep Start Control to connector A1. The Sweep Gate signal serves to unblank the crt in the Oscilloscope during the sweep.

External Horiz Input

When the TIME/DIV switch is set to AMPL, part of the Main Sweep Trigger circuitry becomes the Horiz Input Amp. An external signal connected to the MAIN TRIG IN or AMPL input is amplified and then coupled to the Horiz Output stage. The main and delayed sawtooth generators are disabled to prevent intensity modulation of the crt trace by the unblanking waveforms.

CIRCUIT OPERATION

General

This section provides a detailed description of the electrical operation and relationship of the circuits in the 7B53A/7B53AN. The theory of operation for circuits unique to this instrument is described in detail in this discussion. Circuits which are commonly used in the electronics industry are not described in detail. If more

REV C JUN 1980 3-3

Theory of Operation-7B53A/7B53AN

information is desired in these commonly used circuits, refer to the following text-books.

Phillip Cutler, "Semiconductor Circuit Analysis", McGraw-Hill, New York, 1964.

Lloyd P. Hunter (Ed.), "Handbook of Semiconductor Electronics", second edition, McGraw-Hill, New York, 1962.

Jacob Millman and Herbert Taub, "Pulse, Digital, and Switching Waveforms", McGraw-Hill, New York, 1965.

The main headings in this circuit analysis refer to schematics in the diagrams section with the same name. The sub-headings indicate the individual circuit being described.

MAIN TRIGGER PREAMP



The Main Trigger Preamp coverts the push-pull internal trigger signal to a single-ended signal and selects the main trigger source and coupling for the Main Trigger Generator. Fig. 3-2 shows a detailed block diagram of the Main Trigger Preamp. The schematic of this circuit is shown on diagram 1 at the rear of this manual.

Trigger Preamp. The push-pull trigger signal from the Vertical Deflection System is converted to a single-ended output by emitter-coupled stage Q52-Q61. The output of Q61 drives current gain stage Q66-Q70. The dclevel of the output is set by internal Trig DC Bal Control, R72.

Input Switching. The MAIN TRIGGERING SOURCE switch, S10, selects the source of the trigger signal. Three trigger sources are available; internal, line, and external. The external signal may also be passed through a ÷ 10 attenuator network.

The MAIN TRIGGERING COUPLING switch, S20, offers a means of attenuating high or low frequency components of the trigger signal. In addition to ac and dc coupling, C23-R23 can be selected to provide low-frequency attenuation and R25-C25-C26 for high-frequency attenuation.

MAIN TRIGGER GENERATOR (SN B210000 & UP 7B53A ONLY)

The Main Trigger Generator provides selection of the level and slope where triggering occurs and supplies a fast-rise pulse to the main sweep start comparator. Fig. 3-3

shows a detailed block diagram of the Main Trigger Generator; the schematic of this circuit is shown on diagram 2 at the rear of this manual.

Input Stage. The input source-follower, Q310, provides a high input impedance for the trigger signal. It also provides isolation between the Main Trigger Generator and the input source. Input protection diode CR307 protects Q310 from excessive input signals by clamping the gate of the input FET if the input exceeds about —15 V. The signal at the source of Q310 is passing through emitter-follower Q315 to the base of Q320 in the Slope Comparator and to the External Horizontal circuit.

Slope Comparator. Q320 and Q322 are connected as a difference amplifier to provide selection of the slope and level at which the sweep is triggered. The reference voltage for the comparator is provided by LEVEL control R4 and Main Trig Level Center control R333. R333 sets the level at the base of Q322 so that the display is triggered at the 0 V dc level of the incoming trigger when the LEVEL control is centered. When MAIN TRIGGERING LEVEL control R4 is set to midrange, the base of Q322 is at approximately 0 V. This corresponds to the 0 V level at the input of Q320, thus switching the comparator at the 0 V level of the trigger signal. As the LEVEL control is turned clockwise, the voltage level on the base of Q322 becomes more positive. Now the trigger signal must rise to a more positive level before comparison takes place. The resultant crt display starts at a more positive point on the displayed signal. When the LEVEL control is turned counterclockwise from 0, the result is the opposite of the above reaction and produces a crt display that starts at a more negative point along the + slope of the trigger signal.

R326 establishes the emitter current for Q320 and Q322. The transistor with the most positive base controls conduction of the comparator. For example, assume that the trigger signal from the input stage is positive-going and Q320 is forward biased. The increased current flow through R326 makes the emitter of Q322 more positive and since the base is held constant by the level control voltage, the current through Q322 decreases. The increased current through Q320 makes the voltage at pin 14 of U350 less positive, and the decrease in current through Q322 makes voltage at pin 13 of U350 more positive.

Trigger Generator

An Integrated circuit converts the trigger signal from the trigger comparator to a gate waveform used for sweep control. With pin 1 connected to ground (~ SLOPE), a positive-going waveform on the input (pin 13) causes pin 3 (output) to rise to about 4.1 V and pin 4 (output) to drop to about 3.2 V. Pin 14 is negative going under the above conditions. The output gate occurs when pins 13 and 14 are within about 40 mV of each other. Opening pin 1

3-4 REV JAN 1985

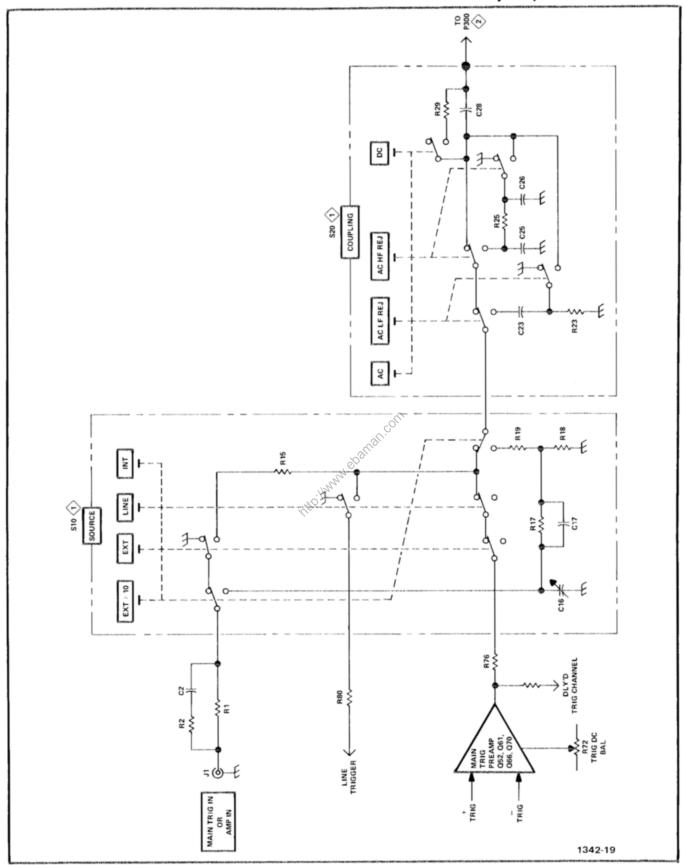


Fig. 3-2. Trigger Preamp and Input Switching Block Diagram.

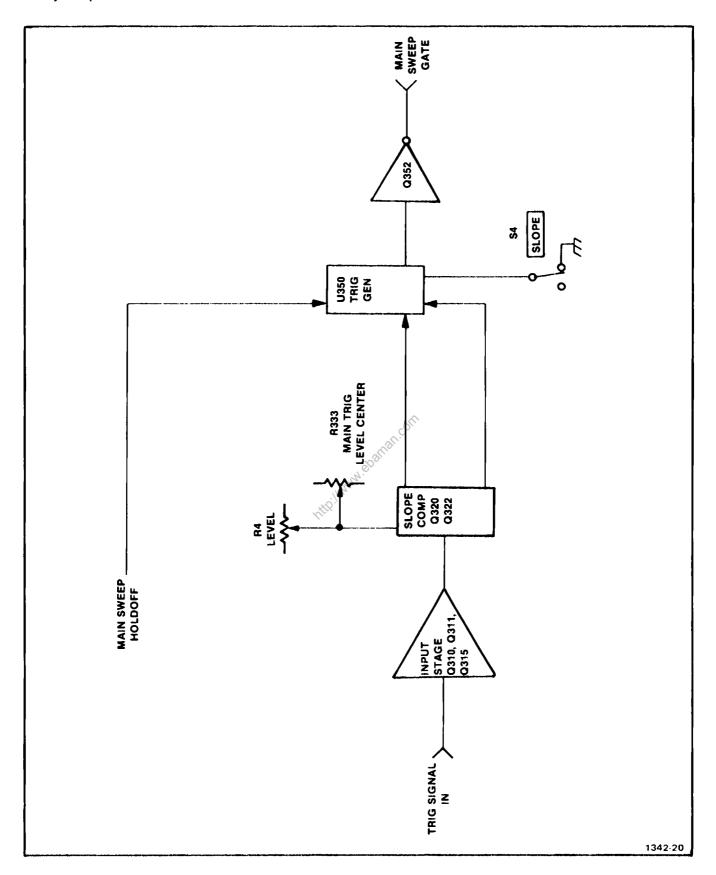


Fig. 3-3. Main Trigger Generator Block Diagram (SN B210000 and up 7B53A Only).

(- SLOPE) creates an output gate at pins 3 and 4 when pin 13 is negative going and pin 14 positive going. The output of pin 4 is inverted by Q352. After completion of the sweep (during holdoff time) pins 6 and 10 are high (about +4.2 V). This action inhibits the trigger generator until these pins drop to about 3.2 V, which occurs after holdoff time.

MAIN TRIGGER GENERATOR (2) (SN B209999 & BELOW)



The Main Trigger Generator provides selection of the level and slope where triggering occurs and supplies a fast-rise pulse to the main sweep start comparator. Fig. 3-4 shows a detailed block diagram of the Main Trigger Generator: the schematic of this circuit is shown on diagram 2 at the rear of this manual.

Input Stage. The input source-follower, Q310, provides a high input impedance for the trigger signal. It also provides isolation between the Main Trigger Generator and the input source. Input protection diode CR307 protects Q310 from excessive input signals by clamping the gate of the input FET if the input exceeds about -15 V. The signal at the source of Q310 is passed through emitter-follower Q315 to the base of Q320 in the Slope Comparator and to the External Horizontal circuit.

Slope Comparator. Q320 and Q322 are connected as a wind difference amplifier to provide selection of the slope and level at which the sweep is triggered. The reference voltage for the comparator is provided by LEVEL control R4 and Main Trig Level Center control R333. R333 sets the level at the base of Q322 so that the display is triggered at the 0 Vdc level of the incoming trigger when the LEVEL control is centered. When MAIN TRIGGERING LEVEL control R4 is set to midrange, the base of Q322 is at approximately 0 V. This corresponds to the 0 V level at the input of Q320, thus switching the comparator at the 0 V level of the trigger signal. As the LEVEL control is turned clockwise, the voltage level on the base of Q322 becomes more positive. Now the trigger signal must rise to a more positive level before comparison takes place. The resultant crt display starts at a more positive point on the displayed signal. When the LEVEL control is turned counterclockwise from 0, the result is the opposite of the above reaction and produces a crt display that starts at a more negative point along the + slope of the trigger signal.

R326 establishes the emitter current for Q320 and Q322. The transistor with the most positive base controls conduction of the comparator. For example, assume that the trigger signal from the input stage is positive-going and Q320 is forward-biased. The increased current flow through R326 imakes the emitter of Q322 more positive, and since the base is held constant by the level control voltage, the current through Q322 decreases. The increased current through Q320 makes the voltage at pin 4 of U350A less positive, and the decrease in current through Q322 makes voltage at pin 10 of U350C more positive. Notice that the signal currents at the collectors of Q320 and Q322 are opposite in phase. The sweep can be triggered from either the positive or negative edge of the input signal. The selection is made by SLOPE switch S4.

When SLOPE switch S4 is set to +, the voltage between R347 and R346 decreases and activates U350A by providing a low voltage level at pin 5 of U350A. A low level is also applied to pins 6 and 7 of U350B. The low level is inverted by U350B and this high level is applied to pin 11 of U350C. Thus, pin 14 of U350C goes low, as does pin 13 of U350D. Since pin 11 of U350C is high, pin 10 of U350C has no effect. If pin 4 of U350A goes low, pin 2 goes high. Pin 12 of U350D also goes high causing pin 9 of U350D to go high and the output at pin 3 of inverter U355B to go low. However, if pin 4 of U350A goes high, the process reverses and the output at pin 3 of U355B also goes high. Thus, pin 3 of U355B follows the input at pin 4 of U350A.

When the SLOPE switch S4 is set to -, +15 Vis applied to pin 5 of U350A. Pin 2 goes low, as does pin 12 of U350D. Pin 12 is held low, regardless of what happens at pin 4 of U350A. The +5 V at pin 5 of U350A is inverted by U350B, which makes pin 11 of U350C go low. Pin 3 of U355B now follows the signal at pin 10 of U350C.

R341, R339, and CR340, (between pin 3 of U355B and pin 4 of U350A), provide regenerative feedback. R343, R342, and CR343 provide regenerative feedback to pin 10 of U350C.

In the reset condition, pin 15 of U375B is low, as is pin 12 of U355D. When a negative pulse is applied to pin 4 of U350A, pin 3 of U355B goes low as well as pin 13 of U355D. Thus, pin 15 of U355D goes high, which sets pin 2 of U375A to the high state and provides the sweep gate output (trigger pulse) through Q382 and pin C to the Main Sweep Start Comparator. At the end of sweep, the positive-going holdoff pulse is coupled to the Sweep Gate Reset circuit through pin B. The high level at the base of Q366 turns it on, causing pin 4 and 5 of U355A to go low coincident with the holdoff pulse. Therefore, pin 2 of inverter U355A goes high and resets U375A. Pin 2 of U375A goes low and terminates.

The high at pin 2 of U355A sets U375B, causing pin 12 of U355D to go high and locking out any trigger pulse during the holdoff period. While pin 12 of U355D is high. pin 15 of U355D will stay low regardless of the state of pin 13 of U355D.

3-7 @ JUN 1980

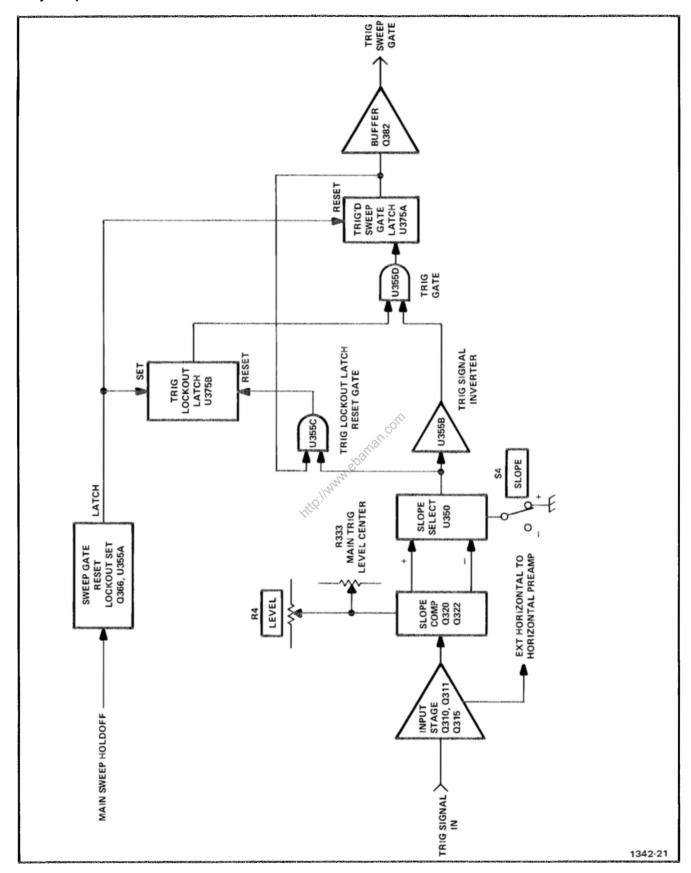


Fig. 3-4. Main Trigger Generator Block Diagram (SN B209999 and below).

Trigger Lockout Latch U375B can only be reset when Trig'd Sweep Gate Latch U375A is in the reset condition (pin 2 of U375A low, pin 11 of U355C low, and pin 13 of U355D high). Therefore, if pin 13 of U355D is low when the holdoff pulse terminates, U375B will stay set. When pin 13 of U355D goes positive, pin 11 of U355C goes negative, causing a positive level at pin 14 of U355C. This positive level resets trigger lockout latch U375B, causing pin 12 of U355D to go negative and allowing the next negative transition at pin 13 of U355D to set the trigger sweep gate latch U375A. This generates a new sweep gate at pin C.

MAIN SWEEP GENERATOR



The Main Sweep Generator circuit produces a sawtooth voltage which is amplified by the Horizontal Amplifier circuit to provide horizontal sweep deflection on the crt of the indicator oscilloscope. This output signal is generated on command (trigger pulse) from the Main Trigger Generator. The Main Sweep Generator also produces a Main Sweep Gate pulse coincident with the time that the Main Sweep runs. The Main Gate pulse is processed by the Sweep Gate Out circuit and the indicator oscilloscope for crt unblanking and Auxiliary Gate output. In addition, the Main Sweep Generator produces several control signals for other circuits within the instrument. Fig. 3-5 shows a detailed block diagram of the Main Sweep Generator and the schematic is shown on diagram 3 at the rear of the manual.

The MAIN TRIGGERING MODE switch allows three modes of operation. When the NORM button is pressed, a sweep is produced only when a trigger pulse is received from the Main Trigger Generator circuit. When the AUTO button is pressed, a sweep is produced as in NORM except that a free-running trace is displayed when a trigger pulse is not present. SINGLE SWP operation is also similar to NORM operation except that the sweep is not recurrent. The RESET button must be pressed to view another trace. The following circuit description is given with the MAIN TRIGGERING MODE switch pressed to NORM. Difference in operation for the other two modes is discussed later.

Main Sweep Start Comparator

Q544, Q547, and Q551 compose the Main Sweep Start comparator. In the absence of a trigger, Q544 is off and Q547 is held on by the high level from pin 3 of U520. The collector of Q547 is low and this low is coupled through emitter-follower Q551 to pin 1 of U580, thus preventing a sweep. When the Main Trigger Generator supplies a trigger, the positive transition is coupled to the base of Q544. The base of Q544 rises above the level at the base of Q547 and the current through common emitter resistor R545 is diverted from Q547 to Q544. The collector of Q547 rises and the positive step is coupled through emitter-follower Q551. The positive step appears across divider

R555/R556, causing pin 1 of U580 to go positive and start the sweep.

Sawtooth Generator

The lower half of the U580 diagram symbol constitutes a Miller Integrator. When pin 1 is positive, a linear sawtooth (positive-going) is generated and appears at pin 8. The timing components (Rt and Ct), connected to pins 8 and 9, determine the rate of change of the sawtooth waveform. Q596 prevents high-speed error currents from being coupled into U580 by way of C579 and pin 9.

Sweep Stop Comparator

The Sweep Stop Comparator consists of Q564 and Q568. In the absence of a sawtooth signal at pin 8 of U580, Q568 is conducting and Q564 is held off by the positive level set at its base by R564, the Main Sweep Length adjustment. When the sawtooth voltage at pin 8 of U580 raises the base of Q568 higher than the base of Q564, Q568 turns off and Q564 turns on. The collector of Q564 rises and the positive step is coupled through emitter-follower Q538 to pin 16 of U520 and sweep holdoff begins.

Holdoff Circuit

The Holdoff Circuit consists of pins 8, 10, 16, and 17 of U520 plus R and C time constants selected by the TIME/DIV switch. The holdoff prevents re-triggering the sweep generator until after the sweep timing capacitor(s) has discharged and the sweep circuits are again ready to generate a sweep.

At the end of the sawtooth waveform, a positive step is coupled to pin 16 of U520 by way of the Sweep Stop Comparator as previously described. The positive pulse seen at pin 16 of U520 is coupled internally through U520 to pin 17 and in turn to Q362 in the Main Trigger Generator. The Main Trigger Generator is reset and the output at connector pin C goes low. As a result, Q544 turns off and Q547 turns on. The collector of Q547 drops and the negative step is coupled through emitter-follower Q551, thus ending the sweep.

After a time determined by the timing components at pin 8, internal circuitry within U520 switches pin 17 to its low state and ends the holdoff gate. The Main Trigger Generator is released to generate a trigger signal.

A negative gate, coincident with the positive holdoff gate, appears at pin 10 of U520. This negative gate is inverted by Q528 and coupled to the Delayed Sweep Generator for composite holdoff functions.

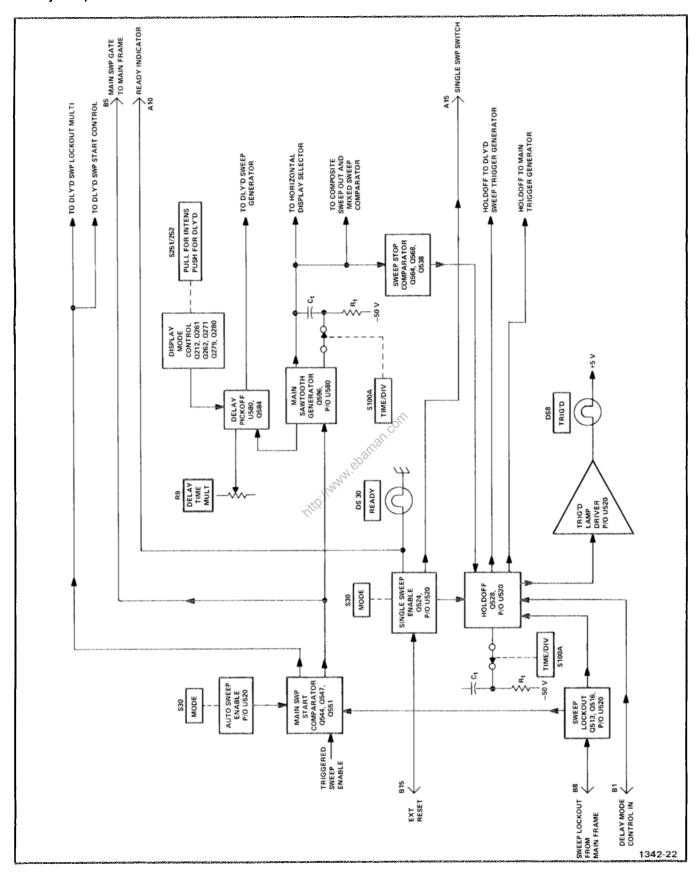


Fig. 3-5. Main Sweep Generator Block Diagram.

Trig'd Lamp Driver

When the main sweep gate is high and the sweep is running, the TRIG'D lamp is on. At all other times the lamp is off.

Delay Pickoff

The upper half of the diagram symbol for U580 includes the Delay Pickoff circuitry. Inside U580, the main sweep sawtooth signal is applied to one side of a comparator circuit. Pin 6 is connected to the other side of the comparator. The setting of DELAY TIME MULTIPLIER control R9 determines the point on the main sweep sawtooth at which the comparator switches.

When the comparator switches (delay pickoff occurs), a positive gate appears at pin 4 of U580. This gate terminates at the end of the main sweep sawtooth.

The positive-going gate at pin 4 of U580 is coupled through emitter-follower Q584 to the Delayed Sweep Holdoff Generator via Q671.

Auto Triggering Mode

Operation of the Main Sweep Generator circuit in the AUTO position of the MAIN TRIGGERING MODE switch is the same as for NORM position just described when a trigger pulse is applied. However, when a trigger pulse is not present, a free-running reference trace is produced in the AUTO position. This occurs as follows:

The Auto Triggering circuit consists of pins 1, 3, 6, and 19 of U520. When the AUTO button of the MAIN TRIGGERING MODE switch is pressed, a low at pin 19 of U520 enables the Auto Circuit. When a repetitive trigger signal above 30 Hz, and of adquate amplitude, is applied to the Main Sweep Start Comparator and pin 1 of U520, the internal Auto Multi at pin 6 of U520 charges towards five volts through C535 and R535, but is discharged by each incoming trigger pulse.

In the absence of a trigger pulse, C535 charges towards +5 V, switching pin 6 to its high state and pin 3 to its low state. Q547 turns off, its collector rises and a high is coupled through emitter follower Q551 to pin 1 of U580, causing the sweep to run.

Single Sweep Operation

Operation of the Main Sweep Generator in the SINGLE SWEEP position of the MAIN TRIGGERING MODE switch is similar to operation in the NORM position as previously described. However, after one sweep has run, all other sweeps are inhibited until the RESET button is pressed. A READY lamp is provided to indicate when the sweep is ready to accept a trigger.

The Single Sweep circuit consists of pins 11, 12, 14, 15, and 17 of U520. For SINGLE SWP operation, the +5 V supply is applied to pin 12 of U520. The holdoff pulse at pin 17 of U520 goes positive, preventing generation of a sweep. When the RESET button is pressed, pin 15 is momentarily held to ground and pin 17 goes low to allow the Main Trigger Generator to accept a trigger. The holdoff line (pin 17 of U520) stays low until a sweep has been completed. At this time, the holdoff pulse rises at pin 17 and stays in the holdoff state until the RESET button is pressed.

Q524 acts as a switch for the READY lamp. When the holdoff gate at pin 17 is high, preventing the sweep generator from accepting a trigger, pin 11 is high and Q524 and the READY lamp are off. When the RESET button is pressed, the holdoff gate at pin 17 goes low and allows the Main Sweep Generator to accept a trigger. Pin 11 rises and turns on Q524, which provides the current to turn on the READY lamp.

Sweep Lockout

Q513, Q516, Q538, and pins 3, 16, and 18 of U520 compose the Sweep Lockout circuit. The Sweep Lockout circuit is functional when the 7B53A/7B53AN is installed in the B Horizontal compartment of an indicator oscilloscope that accommodates two horizontal plug-in units and it is desired to operate in the Alternate Horizontal Mode, or to operate the 7B53A/7B53AN as a delayed sweep unit. Lockout is applied to the 7B53A/7B53AN during the time that the sweep from the associated time base is displayed.

The indicator oscilloscope controls initiation of a sweep by supplying current to the base of Q513 when lockout is required. This current causes a positive step at pin 18 of U520. Pin 3 of U520 steps positive and Q547 turns on. The collector of Q547 falls and the low is coupled through emitter-follower Q551 to pin 1 of U580, thus preventing the sweep. If lockout is initiated while the sweep is running, the leading edge of the lockout pulse is differentiated through C519 and R519, coupled through emitter-follower Q538, and appears as a high at pin 16 of U520. This starts the holdoff cycle. (The holdoff cycle is as described previously.)

Delayed Mode Control

When the 7B53A/7B53AN is installed in the B Horizontal compartment of an indicator oscilloscope with two horizontal compartments, the Delayed Mode Control determines whether the 7B53A/7B53AN operates as an independent time base or as a delayed sweep unit in triggerable after delay time mode. When approximately ±3 to 4.5 V is present at interface connector B1 (and therefore pin 13 of U520), the Auto Circuit (previously described) is disabled. A sweep can be enabled only by a trigger pulse

Theory of Operation-7B53A/7B53AN

to the Sweep Start Comparator. During delay time, determined by the settings of the delaying sweep unit, sweep lockout (previously described) inhibits the sweep. After delay time, the 7B53A/7B53AN can be triggered. An approximate zero volt level at pin 13 of U520 enables the Auto Circuit, causing the 7B53A/7B53AN to operate as an independent time base.

DELAYED TRIGGER GENERATOR 4 (SN B210000 & UP 7B53A ONLY)



The Delayed Trigger Generator circuitry is essentially the same as the Main Trigger Generator, except for the Runs After Dly Time and Triggerable After Delay Time modes. Therefore, only the circuitry involving these modes will be described. For detailed description of the remaining delayed trigger circuitry, refer to the Main Trigger Generator discussion. Fig. 3-6 shows a detailed block diagram of the Delayed Trigger Generator; the schematic is shown on diagram 4 at the rear of this manual.

When the DLY'D TRIG LEVEL is set to RUNS AFTER DLY TIME, S5 grounds R457, which turns Q456 off and allows pin 16 of U450 to go high. This generates a new sweep gate at pin 4 of U450.

When the DLY'D TRIG LEVEL control is in the Triggerable After Dly Time mode, Q456 is turned on, which allows pin 16 of U450 to go low and the Delayed Trigger Generator operates in the Triggerable After Dly Time in a manner similar to the Main Trigger Generator operation.

DELAYED TRIGGER GENERATOR (SN B209999 & BELOW)



The Delayed Trigger Generator circuitry is essentially the same as the Main Trigger Generator, except for the Runs After Dly Time and Triggerable After Delay Time modes. Therefore, only the circuitry involving these modes will be described. For detailed description of the remaining delayed trigger circuitry, refer to the Main Trigger Generator discussion. Fig. 3-7 shows a detailed block diagram of the Delayed Trigger Generator; the schematic is shown on diagram 4 at the rear of this manual.

When the DLY'D TRIG LEVEL is set to RUNS AFTER DLY TIME, S5 grounds R469 and pin 4 of U455A is forced to the low state. Thus, pin 2 of U455A will follow pin 5, but reversed in polarity. When the holdoff pulse is applied to the base of Q466, pin 4 of U455C goes to the high state, which resets U475B and terminates the sweep gate. When the holdoff pulse terminates, pin 4 of U455C goes to the low state and pin 2 of U455A goes to the high state. This sets U475B, which generates a new sweep gate.

When the DLY'D TRIG LEVEL control is in the Triggerable After Dly Time mode, pin 4 of U455A is high and pin 2 is low. Therefore, pin 12 of U475B is also low and the Delayed Trigger Generator operates in the Triggerable After Dly Time mode in a similar way as the Main Trigger Generator operates.

DELAYED SWEEP GENERATOR



The Delayed Sweep Generator produces a sawtooth voltage that is amplified by the Horizontal Amplifier circuits to provide a delayed sweep crt display. The sawtooth output voltage is generated on command of the Delayed Trigger Generator. The Delayed Sweep Generator also produces a Delayed Sweep Gate pulse. coincident with the time that the Delayed Sweep Generator runs, to be processed by the Sweep Gate Out circuit and the oscilloscope for crt unblanking. Fig. 3-8 shows a detailed block diagram of the Delayed Sweep Generator and the schematic is shown on diagram 5 at the rear of the manual.

Dly'd Swp Start Multi

Q603 and Q608 comprise the Dly'd Swp Start Multi. This circuit is connected as a bistable multivibrator, with Q608 normally conducting and Q603 off.

When the DLY'D Sweep Gate switches to its high state, the positive step appears at the base of Q603. This causes the multi to flip, so Q603 is on and Q608 is off, thus causing a positive step through Q610 to pin 1 of U650. Q608 remains in the positive state for the duration of the delay gate. At the end of the delay gate, the Dly'd Swp Start Multi reverts to its original state with Q603 off and Q608 on.

Dly'd Swp Start Control

The Dly'd Swp Start Control circuit includes Q656, Q654, and Q610. This circuit couples a positive gate to pin 1 of U650 (Miller Integrator) to control the period during which a sawtooth is generated.

In all Display Modes except MIXED, Q656 and Q654 are inactive due to the +5 V applied to the base of Q654 (through CR654 and Q280) from the +5 V supply. When the collector of Q608 (Dly'd Swp Start Multi) goes positive, Q610 couples the positive gate to pin 1 of U650, initiating the generation of the delayed sweep sawtooth.

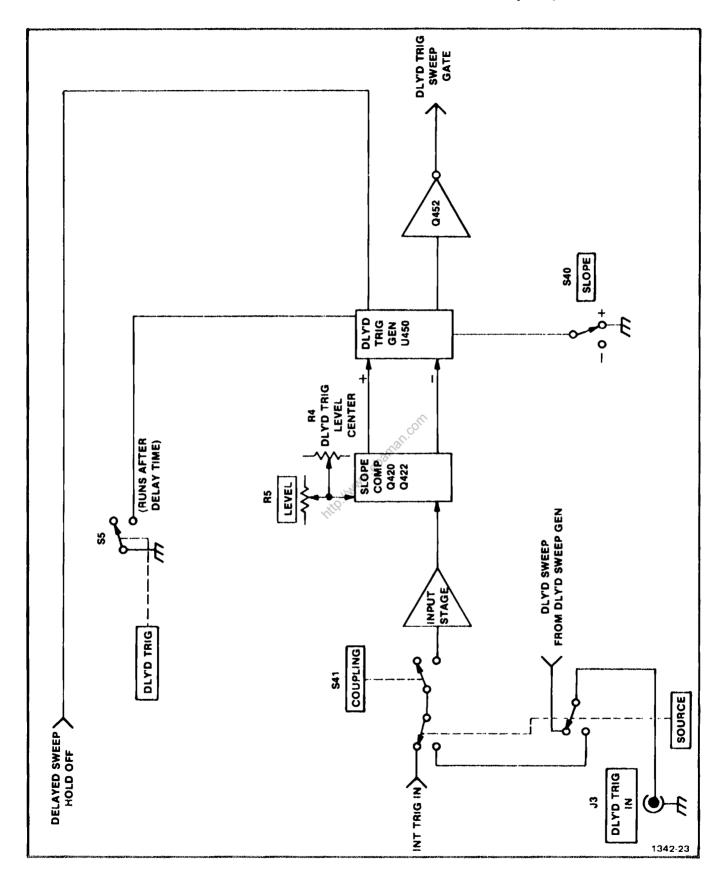


Fig. 3-6. Delayed Trigger Generator Block Diagram (SN B210000 and up 7B53A Only)

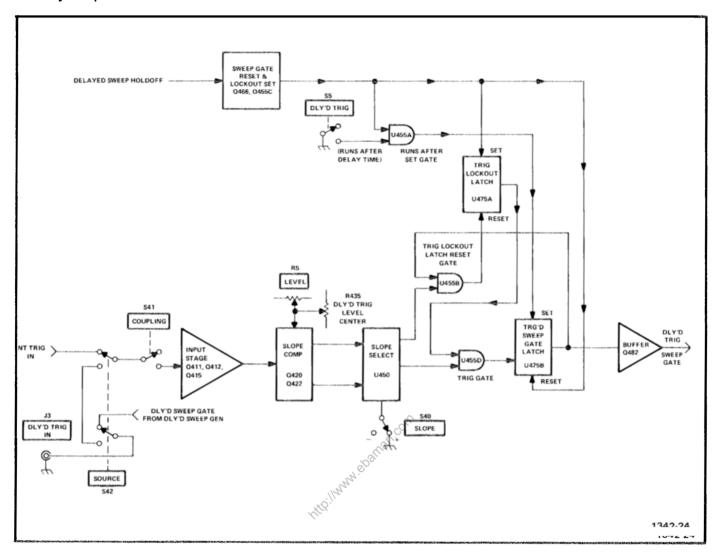


Fig. 3-7. Delayed Trigger Generator Block Diagram (SN B209999 and below).

When operating in the MIXED Display Mode, the anode circuit of CR654 is open. The gate from the Main Swp Start Multi is negative-going at the base of Q654. The resulting current from Q654 forward biases Q610, and a positive gate is coupled to pin 1 of U650.

Mixed Swp Comparator

Q678, Q682, Q684, and Q688 comprise the Mixed Swp Comparator circuit. This circuit determines whether U650 is running at the main sweep or delayed sweep rate.

When the VARIABLE control is pulled for MIXED, Q682 is forward biased. The main sweep sawtooth at the emitter (and thus, the collector) of Q682 is a positive-going ramp. This causes a ramp of increasing current through Q684. During the time that a Delay Gate is not being generated,

Q603 (Dly'd Swp Start Multi) is biased off and Q678 is on. In this condition, U650, Q678, Q684, and Q688 form an operational amplifier. The negative-going ramp at the collector of Q684 becomes a positive-going ramp at pin 8 of U650, running at the main sweep rate.

When the Delay Gate is generated, the Delayed Trigger Generator forward biases Q603. The collector current through R684 reverse biases Q678, opening the operational amplifier loop. U650 is released to run at the delayed sweep rate. Therefore, the sawtooth at pin 8 of U650 will first run at the main sweep rate and then change to the delayed sweep rate when the Delay Gate is generated.

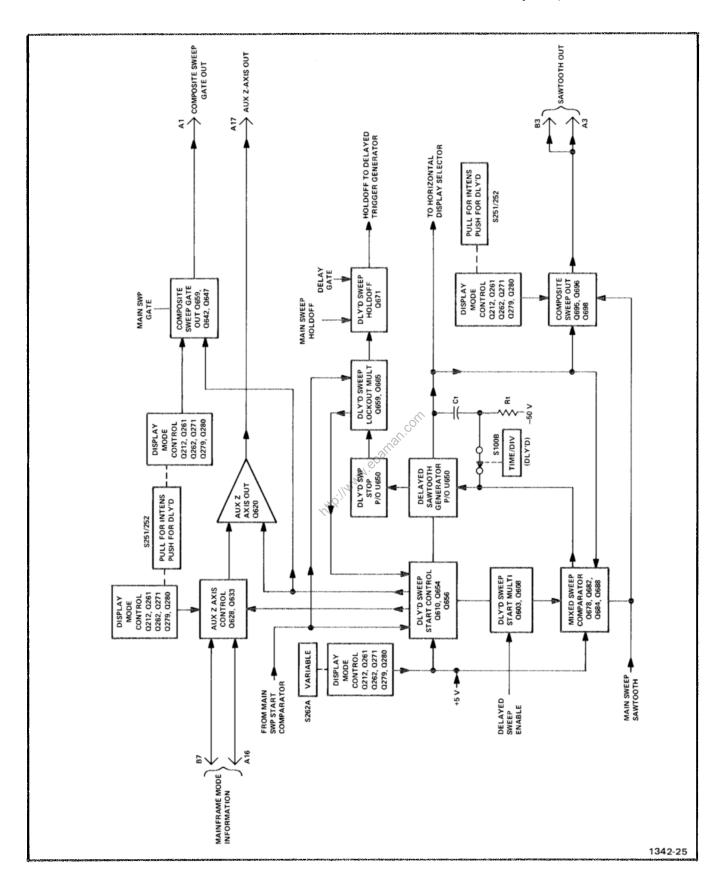


Fig. 3-8. Delayed Sweep Generator Block Diagram.

@ JUN 1980 3-15

Theory of Operation-7B53A/7B53AN

Dly'd Swp Stop

Pins 4, 5, and 6 of U650 (plus external circuitry) constitute the Dly'd Swp Stop circuit. The setting of the Dly'd Swp Length adjust (R652) determines the point on the delayed sweep sawtooth at which pin 4 of U650 goes positive.

Dly'd Swp Lockout Multi and Dly'd Swp Holdoff

The operation of the Dly'd Swp Lockout and Holdoff circuits is dependent on the following signals:

- 1. The Dly'd Swp Stop signal (positive-going) at pin 4 of U650.
- 2. The Main Sweep Holdoff signal (positive-going) by way of R673.
- 3. The Main Sweep Gate (positive-going) at the base of Q665 through CR662.
 - 4. The Dly Gate at the base of Q671.

Q659 and Q665 form the Dly'd Swp Lockout Multi. When the Dly'd Swp Stop circuit causes pin 4 of U650 to go positive, Q659 turns on and Q665 turns off, coupling a positive-going holdoff pulse to pin G. At the end of the main sweep, the positive going Main Sweep Gate pulse turns on Q665 and its collector falls. But the positive-going main holdoff pulse through R673 keeps pin G positive. When the main sweep holdoff pulse falls, the level at pin G remains positive due to the negative going Dly Gate pulse applied to Q671. After the delay time determined by the TIME/DIV OR DLY TIME switch and the DELAY TIME MULT dial, the Dly Gate pulse rises, Q671 turns off, and the holdoff pulse at pin G goes negative.

When operating in the MIXED Display Mode, the Delayed Sweep Stop signal (positive-going) at pin 4 of U650, turns on Q659. The negative step at its collector turns on Q656 and turns off Q654. The resulting negative level at the collector of Q654 is coupled through emitter follower Q610, thus removing the positive level from pin 1 of U650.

Composite Swp Out

Q695, Q696 and Q698 form the Composite Swp Out circuit. When the TIME/DIV switch is set for MAIN SWP or INTENS, Q696 is forward biased, coupling the main sweep sawtooth to the base of Q698. Q698 is an emitter-follower stage which couples the signal to output terminals A3 and B3.

If DLY'D or MIXED SWP is selected by the TIME/DIV OR DLY TIME switch, Q695 is forward biased and couples the delayed sweep or mixed sweep sawtooth to the base of Q698.

Q696 and Q698 or Q695 and Q698 (depending on TIME/DIV OR DLY TIME setting) are connected as an operational amplifier, providing a high degree of gain stability.

Composite Swp Gate Out

The Composite Sweep Gate Out circuit includes Q642, Q639, and Q647. The output at the collector of Q647 connects to interface connector pin A1 for use in the indicator oscilloscope. In the AMPL position of the TIME/DIV OR DLY TIME switch, connector A1 is set to approximately $\pm 4.3 \text{ V}$ (via CR201) to unblank the crt.

Q647 serves as the output stage. With the TIME/DIV OR DLY TIME switch set to either MAIN SWP or INTENS, Q642 couples the main sweep gate to the base of Q647. When either DLY'D or MIXED SWP is selected, Q639 is on. The gate signal at the emitter of Q610 (Dly'd Swp Start Control) is coupled to the base of Q647.

Aux Z Axis Control

The Aux Z Axis Control circuit includes Q628 and Q633. This circuit uses the indicator oscilloscope mode and switching levels to determine when the sweep signal from the 7B53A/7B53AN is being displayed on the crt. Information of this type is normally used only when operating the 7B53A/7B53AN in a four plug-in indicator oscilloscope.

Typical levels to cause the Aux Z Axis Control to intensify the crt are ± 5 V at terminal A16 and ± 0.6 V at terminal B7. This forward biases Q633, resulting in a positive level at its emitter.

When the 7B53A/7B53AN is used in a three plug-in indicator oscilloscope and the TIME/DIV OR DLY TIME switch is set to INTENS, Q628 is off and Q633 is forward biased.

Aux Z Axis Out

Q620 is the Aux Z-Axis Out stage. The output at connector DZ is connected to pin A17 on the interface connector and then to the Z-axis circuit in the indicator oscilloscope. A reduction in current through Q620 causes the crt trace to brighten.

For this description, assume that the 7B53A/7B53AN is used in a three plug-in indicator oscilloscope.

As described under Aux Z Axis Control, when INTENS is selected by the TIME/DIV OR DLY TIME switch, Q633 is turned on. The positive level at the emitter of Q633

reverse-biases CR635, which reduces conduction of Q620. The positive gate appearing at the emitter of Q610 (Dly'd Swp Start Control) during the delayed sweep further reduces current through Q620, causing the crt trace to intensify beyond the normal level of unblanking.

In all other selections of the TIME/DIV OR DLY TIME switch, Q628 is forward biased through CR285. This turns off Q633, which diverts current through CR635. Q620 is in saturation and the crt trace brightness is now set by the unblanking signal (Sweep Gate).

HORIZONTAL PREAMP



The Horizontal Preamp selects the source of the output signal (main or delayed sweep) and supplies an amplified sawtooth signal to the horizontal circuits in the indicator oscilloscope. In addition, this circuit contains the horizontal magnifier circuit and the horizontal positioning network. Fig. 3-9 shows a detailed block diagram of the Horizontal Preamp and the schematic is shown on diagram 8 at the rear of the manual.

Ext Horiz Amp

The Ext Horiz Amp consists of Q734. When the TIME/DIV OR DLY TIME switch is in any setting except AMPL, the ± 5 V coupled through CR735 to the base of Q734 holds this transistor off. Therefore, any incoming external horizontal signal is blocked. When the TIME/DIV OR DLY TIME switch is set to AMPL, the ± 5 V is removed from the base of Q734 and the output signal is coupled through R734.

Horiz Display Selector

Q724 and U720A, B, C, D, and E compose the Horiz Display Selector circuitry. Depending upon the setting of the TIME/DIV OR DLY TIME switch, this circuit determines which signal is coupled to the Horiz Out Amp.

When the TIME/DIV OR DLY TIME switch is set to AMPL, U720C is forward biased and couples the signal from the Ext Horiz Amp to the Horiz Out Amp. Simultaneously, ± 5 V is disconnected from the Display Mode Control circuit, ensuring that no internally

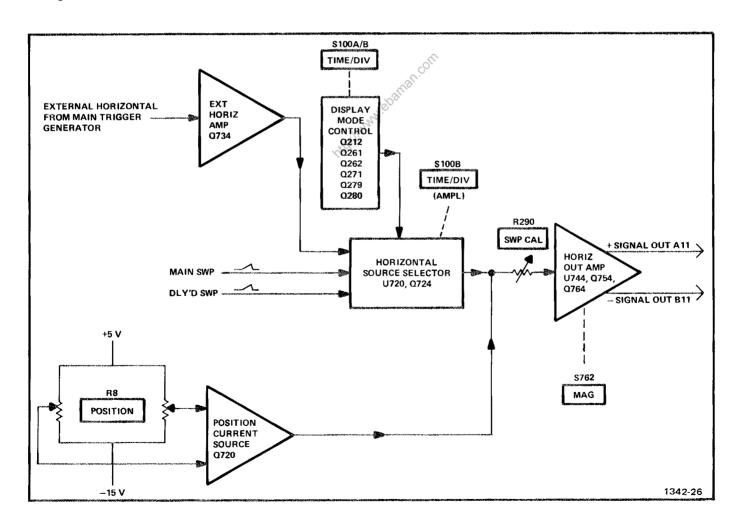


Fig. 3-9. Horizontal Preamp Block Diagram.

Theory of Operation-7B53A/7B53AN

generated sweep signal is coupled through at this time. In all other positions of the TIME/DIV OR DLY TIME switch, +5 V is connected to the Display Mode Control circuit.

When MAIN SWP or INTENS is selected by the TIME/DIV OR DLY TIME switch, ± 5 V is applied to the anode of CR283. This forward biases U720A, which couples the main sweep sawtooth to the Horiz Out Amp. Q724 is also forward biased so that any signal developed by the Delayed Sweep Generator is by-passed to ground (via the ± 15 V supply). Any output from the Ext Horiz Amp is coupled to ground through U720D.

When operating in the DLY'D SWP or MIXED Display Mode, +5 V is applied to the base of U720B through CR265. This forward-biases U720B, which couples the delayed sweep or the mixed sweep signal to the Horiz Out Amp. U720E is also forward biased, coupling the main sweep signal to ground.

Position Amp

The POSITION control R8 sets the bias on Q720, thus setting the dc current coupled to the Horiz Out Amp.

Horiz Out Amp

The Horiz Out Amp includes Q754, Q764, and U744A, B, C, and D. U744B and U744C are connected as an operational amplifier, with R_i being R768 and R_i the Swp Cal Adjust, R290.

U744C and U744D form a paraphase amplifier. This stage converts the single-ended input signal to a push-pull output signal, which is necessary to drive the horizontal output stage in the indicator oscilloscope.

This stage also provides the X10 magnification and Mag Gain adjustment. When the MAG X10 button is out, R761 and R762 are connected in parallel with R759 and R766, decreasing the emitter degeneration of the stage. This increases gain of the stage 10 times. The Mag Gain adjust is set to provide a calibrated gain when magnified.

Q754 and U744A set the operating bias for the output stage. Q764 serves as a constant-current source for U744C and U744D.

READOUT SWITCHING



The Readout Switching circuit consists of switching resistors that signal the oscilloscope readout system of the time-base unit sweep rate. The switching resistors are selected by the Time/Division and X10 MAG switch settings.

Refer to schematic diagram 7, Readout Switching, at the rear of this manual. The numbers 1, 2, or 5 are selected by resistors R940, R907, and R905 for Channel 1 (main sweep); and by resistors R941, R919, and R917 for Channel 2 (delayed sweep). The number of zeros is selected by R934, R911, and R909 for Channel 1; and by resistors R935, R923, and R921 for Channel 2. The time prefix (milli, micro, nano) is selected by resistors R928, R903, and R901 for Channel 1; and by resistors R929, R915, and R913 for Channel 2. Resistors R927 and R925 select the symbol S (seconds) for Channel 1 and resistors R939 and R926 select the symbol S for Channel 2. When the VARIABLE Time/Division control is in the Uncalibrated position, R931 selects the symbol > (greater than) for Channel 1 and R922 selects the symbol > for Channel 2. When the MAG switch is in the X10 position. R943 is switched out of the circuit for Channel 1 and R944 is switched out of the circuit for Channel 2.

3-18 @ JUN 1980

CALIBRATION

Introduction

To ensure instrument accuracy, check the calibration of the 7B53A/7B53AN every 1000 hours of operation, or every six months if used infrequently. Before complete calibration, thoroughly clean and inspect this instrument as outlined in the Maintenance section.

Tektronix Field Service

Tektonix, Inc., provides complete instrument repair and recalibration service at local Field Service Centers and the Factory Service Center. Contact your local Tektronix Field Office or representative for further information.

Using This Procedure

General. This section provides several features to facilitate checking or adjusting the 7B53A/7B53AN. These are:

Index. To aid in locating a step in the Performance Check or Adjustment procedure, an index is given preceding Part I—Performance Check and Part II—Adjustment procedure.

Performance Check. The performance of this instrument can be checked without removing the covers or making internal adjustments by performing only Part I—Preformance Check. This procedure checks the instrument against the tolerances listed in the Performance Requirement column of the Specification Section. Screwdriver adjustments accessible from the outside of the instrument are adjusted as part of the Performance Check procedure. In addition, a cross-reference is provided to the step in Part II—Adjustment, which will return the instrument to correct calibration. In most cases, the adjustment step can be performed without changing control settings or equipment connections.

Before proceeding with installation it is necessary to check the settings of the Variable Selector multi-pin connector (P140) and the Delayed Sweep Gate Out multi-pin connector (P613). The Variable Selector multi-pin connector (P140) determines whether the front-panel VARIABLE control varies main sweep rates, delayed sweep rates, or main sweep holdoff; the Delayed Sweep Gate Out multi-pin connector (P613) determines whether the Delayed Sweep Gate Out signal is connected to the front-panel DLY'D TRIG IN connector (see Fig. 4-1). Refer to General Operating Instructions in this section for VARIABLE control and DLY'D GATE OUT information.

Adjustment Procedure. To return this instrument to correct calibration with the minimum number of steps, perform only Part II—Adjustment. The Adjustment procedure gives the recommended calibration procedure for all circuits in this instrument. Procedures are not given for checks that can be made without removing the covers; see Part I—Performance Check for the procedure for these checks.

Partial Procedure. A partial check or adjustment is often desirable after replacing components, or to improve the adjustment of a portion of the instrument between major recalibrations. To check or adjust only part of the instrument, set the controls as given under Preliminary Control Settings and start with the nearest Equipment Required list preceding the desired portion. To prevent unnecessary recalibration of other parts of the instrument, readjust only if the tolerance given in the CHECK—part of the step is not met. If re-adjustment is necessary, also check the calibration of any steps listed in the INTERACTION—part of the step.

Complete Performance Check/Adjustment. To completely check and adjust all parts of this instrument, perform both Part I and II. Start the complete procedure by adjusting the trigger system as given in the adjustment procedure and follow this with the Performance Check for the same portion (e.g., Trigger System Check). This method ensures that the instrument is both correctly adjusted and performing within all given specifications.

NOTE

All waveforms shown in this section were taken with a TEKTRONIX Oscilloscope Camera System, unless noted otherwise.

TEST EQUIPMENT REQUIRED

General

The following test equipment and accessories, or its equivalent, is required for complete calibration of the 7B53A/7B53AN. Specifications given for the test equipment are the minimum necessary for accurate calibration. Therefore, some of the specifications listed here may be less precise than the actual performance capabilities of the test equipment. All test equipment is assumed to be correctly calibrated and operating within the listed specifications.

REV A JUN 1980 4-1

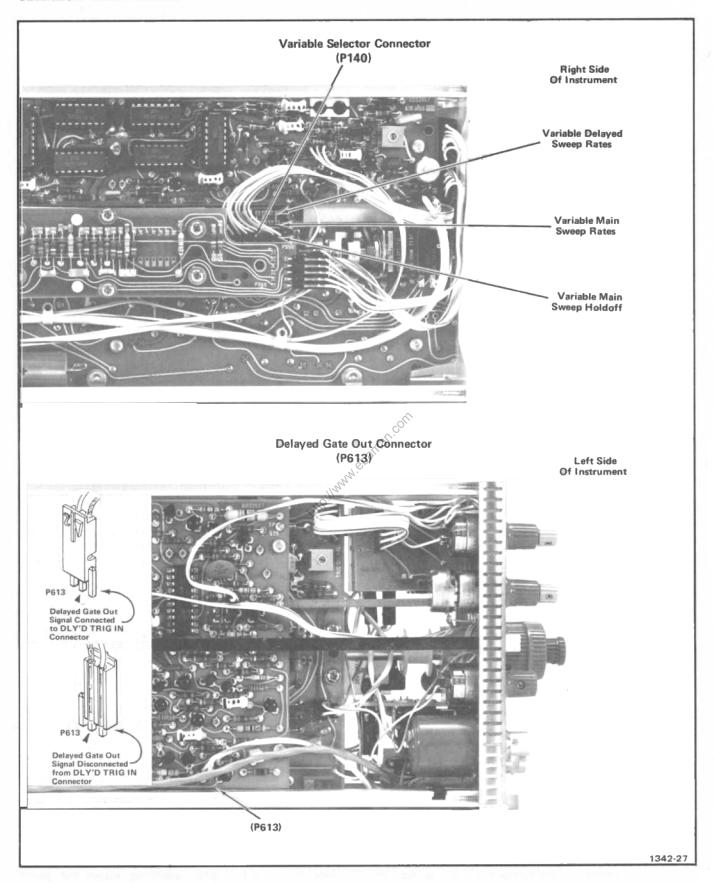


Fig. 4-1. Location of Delayed Gate Out and Variable Selector multi-pin connectors.

The Performance Check and Adjustment procedures are based on this recommended equipment. If other equipment is substituted, control settings or calibration setup may need to be altered to meet the requirements of the equipment used. Detailed operating instructions for the test equipment are not given in this procedure. Refer to the instruction manual for the test equipment if more information is needed.

Special Calibration Fixtures

Special Tektronix calibration fixtures are used in this procedure only where they facilitate instrument calibration. These special calibration fixtures are available from Tektronix, Inc. Order by part number through your local Tektronix Field Office or representative.

Calibration Equipment Alternatives

All of the listed test equipment, or equivalent, is required to completely check and adjust this instrument. The procedures are based on the first item of equipment given as an example of applicable equipment. When other equipment is substituted, control settings or setup might need to be altered to meet the requirements. If the exact item given as an example in the Test Equipment list is not available, first check the specification column to see if any other equipment might suffice. Then check the Usage column to see what this item is used for. If used for a check or adjustment that is of little or no importance to your measurement requirements, the item and corresponding step(s) can be deleted. For example, if only a Performance Check is to be performed, the square-wave generator can be omitted.

Table 4-1
TEST EQUIPMENT

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment
1. Oscilloscope	7000-series oscilloscope mainframe. Bandwidth cap- ability of 100 MHz re- quired.	Used throughout procedure to provide display.	a. TEKTRONIX 7603 Oscilloscope. b. Any TEKTRONIX 7000- series oscilloscope with 100 MHz bandwidth (com- bined with amplifier unit)
2. Amplifier Unit	7A-series amplifier unit. Combined bandwidth of amplifier unit and oscilloscope, 100 MHz.	Used throughout procedure to provide vertical input to oscilloscope system.	a. TEKTRONIX 7A16A Amplifier b. TEKTRONIX 7A18A Amplifier.
3. Medium-frequency	Frequency range, 50 kHz and 10 MHz to 100 MHz; out- put amplitude, variable from 15 to 500 mV into 50 Ω.	Internal and external trig- gering checks. Main and delayed trigger dc bal- ance adjustments.	a. TEKTRONIX Type SG 503 Signal Generator. ^a b. General Radio Model 1310B Oscillator with General Radio Type 274 QBJ Adapter to provide bnc output (can be used for trigger dc bal- ance adjustments only).
4. Low-frequency sine-wave generator	Frequency range, variable from 30 Hz to 2 MHz; output amplitude, variable from 30 mV to 4 V into 50 Ω and to 30 V into 1 M Ω .	Main and delayed triggering checks. Check trigger modes. Check external amplifier gain and bandwidth.	a. TEKTRONIX TYPE FG 504 Generator. ^a
5. Square-wave generator	Amplitude, 500 mV into 50 Ω ; repetition rate, 1 kHz; risetime, less than 12 ns into 50 Ω .	Main and delayed external trigger input compensation adjustments.	a. TEKTRONIX Type PG 506 Generator. ^a

REV JUN 1986 4-3

Table 4-1 (cont)

Description	Minimum Specifications	Usage	Examples
6. Time-mark generator	Marker or sine-wave out- puts, from 5 s to 5 ns; marker accuracy, within 0.1%; amplitude at least 0.3 V into 50 Ω.	Sweep timing checks and adjustments. Sweep delay checks and adjustments.	a. TEKTRONIX Type TG 501 Time-Mark Generator.* b. TEKTRONIX 2901 Time- Mark Generator.
7. 10X voltage probe	Compatible with 7A-series amplifier unit. Combined risetime of probe, amplifier, and oscilloscope must be less than 3.5 ns.	Check line triggering. External trigger input compensation adjustments. Main and delayed-sweep offset adjustments.	a. TEKTRONIX P6053B Probe. b. TEKTRONIX P6106A.
8. Cable	Impedance, 50 Ω; type, RG-58/U; length, 18 in. connectors, bnc.	Used throughout procedure for signal interconnection.	a. Tektronix Part No. 012-0076-00.
9. Cable (two required)	Impedance, 50 Ω; type, RG-58/U; length 42 in.; connectors, bnc.	Used throughout procedure for signal interconnection.	a. Tektronix Part No. 012-0057-01.
10. Plug-in extender	Rigid extender for 7000-series plug-in units.	Used throughout adjustment procedure to provide access to internal adjustments and test points.	a. Tektronix Part No. 067-0589-00.
11. T connector	Connectors, bnc.	External trigger checks.	a. Tektronix Part No. 103-0030-00.
12. Termination	Impedance, 50 Ω ; accuracy, $\pm 2\%$; connectors, bnc.	Used throughout procedure to terminate 50 Ω coaxial cable with bnc connectors.	a. Tektronix Part No. 011-0049-01.
13. Adapter	Connectors, GR874 to bnc female.	Internal and external trig- gering checks. Main and de- layed-trigger dc balance adjustments. External trig- ger input compensation adjustments.	a. Tektronix Part No. 017-0063-00.
14. Input RC Normalizer	Time constant, one $M\Omega$ times 20 pF; connectors, bnc.	External trigger input compensation adjustments.	a. Tektronix Calibration Fixture 067-0538-00.
15. Attenuator	Impedance, 50 Ω; attenuation; 10X; type, feedthrough; accuracy, ±3%; connectors, bnc.	External trigger input compensation adjustments.	a. Tektronix Part No. 011-0059-02.
16. Screwdriver	Three-inch shaft; 3/32-inch bit.	Used to adjust variable resistors.	a. Xcelite R-3323.
17. Low-capacitance screwdriver	1 1/2-inch shaft.	Used to adjust variable capacitors.	a. Tektronix Part No. 003-0000-00.
18. VOM	0-10 volt scale	Used for sweep offset and trigger null adjustment.	a. TEKTRONIX Type DM 501A Digital Multimeter. ^a b. Simpson 262.
			c. Tripplet 630NA.

^a Requires TM 500-Series Power Module.

Preliminary Control Settings

Set test equipment and 7B53A/7B53AN controls as follows (for both Performance Check and Adjustment procedure):

7A16A

Position	Midrange
AC-DC-GND	AC
Polarity	+UP
Volts/Div	50 mV
Variable Volts/Div	(CAL-IN)

7603 Oscilloscope

Vert Mode	Left
Trig Source	Vert Mode
F	

Focus Adjust for well-defined display

Intensity Midrange
Graticule Illum As desired

7B53A/7B53AN

MAIN TRIGGERING	
SLOPE	(+)
MODE	AUTO
COUPLING	AC
SOURCE	INT

DLY'D TRIG RUNS AFTER
LEVEL DLY TIME

SLOPE +
COUPLING AC
SOURCE INT

POSITION Midrange MAG X1

TIME/DIV OR

DLY'D TIME 20 µs

DLY'D Time/ 20 μ s (press in for

Division MAIN SWP Display Mode)

VARIABLE CAL
Variable Selector MAIN
DELAY TIME MULT 1.00

http://www.elbartati.com

PART I—PERFORMANCE CHECK

Introduction		12. Check Delay-Time Multiplier Differential
The following procedure checks the performance of the 7B53A/7B53AN without removing the side-covers or making internal adjustments. All tolerances given in this procedure are based on the Specification section of the		Accuracy
		13. Check Delay-Time Jitter 4-17
7B53A/7B53AN Operators Manual.		14. Check Mixed Sweep Operation 4-18
INDEX TO PART I—PERFORMANCE CHECK		15. Check Main and Delayed Sweep Variable Control Operation
		16. Check External Amplifier Gain 4-19
Trigger System Check	Page	17. Check External Horizontal Bandwidth 4-19
Check Main and Delayed Internal Triggering Operation	4-7	
2. Check Main and Delayed External Triggering Operation	4-8	Preliminary Procedure for Performance Check
3. Check Main and Delayed Internal Trigger Jitter	4-9	
4. Check Main and Delayed Low-Frequency Triggering Operation	4-9	NOTE The performance of this instrument can be checked
5. Check Main Triggering AC High-Frequency Reject Operation	4-10	at any temperature within 0°C to +50°C range unless otherwise stated.
6. Check Main Triggering AC Low-Frequency Reject Operation	4-10	ř
7. Check Main and Delayed Trigger Level and Slope Operation	4-11	1. Install the 7B53A/7B53AN into the right compartment of the indicator oscilloscope.
8. Check Main Trigger Modes	4-11	2. Install the 7A16A Vertical Amplifier unit into the left
9. Check Line Triggering Operation	4-12	vertical compartment.
Horizontal System Check		3. Turn on the oscilloscope and allow at least 20 minutes warmup before proceeding with the Performance
10. Check Main and Delayed Sweep Timing Accuracy and Linearity	4-13	Check.
11. Check Main and Delayed Sweep Magnifier Accuracy and Linearity	4-14	4. Set the equipment controls as given in this section under Preliminary Control Settings.

TRIGGER SYSTEM CHECK

Equipment Required

- 1. 7603 Oscilloscope
- 2, 7A16A Amplifier Unit
- 3. 10X probe
- 4. Medium-frequency signal generator
- 5. Low-frequency sine-wave generator

- 6. GR to bnc female adapter
- 7. Bnc T-connector
- 8. 42-inch 50 Ω bnc cable
- 9. 18-inch 50 Ω coaxial cable with bnc connectors
- 10. 50 Ω bnc termination

Control Settings

Set the controls as given under Preliminary Control Settings.

1. Check Main and Delayed Internal Triggering Operation

a. Connect the output of the medium-frequency signal generator to the 7A16A Input with a GR-to-bnc female adapter, 50 Ω coaxial cable, and 50 Ω bnc termination.

f. Change the following control settings:

MAIN TRIGGERING

COUPLING AC

LEVEL Set for stable main

sweep display

TIME/DIV OR

DLY TIME .2 μ s

DLY'D Time/ .1 μ s (press in for DLY'D

Division SWP Display Mode)

DLY'D TRIG DLY'D SWP
LEVEL TRIGGERABLE

b. Change the following control settings:

MAIN TRIGGERING

Set for stable main sweep display

LEVEL TIME/DIV OR

DLY TIME .1 μ s

DLY'D Time/ .1 μ s (press in

Division for MAIN SWP Display Mode)

- g. CHECK—Stable crt display can be obtained with DLY'D TRIG COUPLING switch set to AC and DC for both the + and SLOPE (DLY'D TRIG LEVEL control may be adjusted as necessary to obtain a stable displayed sweep display).
- c. Set the medium-frequency signal generator for a 0.3-division display at 10 MHz.
- d. Change the MAIN TRIGGERING MODE switch to
- NORM.
- e. CHECK—Stable crt display can be obtained with the MAIN TRIGGERING COUPLING switch set to AC, AC LF REJ, and DC for both the positive and negative positions of the MAIN TRIGGERING SLOPE switch (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable main sweep display, i.e., TRIG'D light on).

h. Change the following control settings:

MAIN TRIGGERING

MODE AUTO

TIME/DIV OR

DLY TIME .05 μ s

DLY'D Time/

Division .05 μ s MAG X10

- i. Set the medium-frequency generator for a 1.5-division display at 100 MHz.
 - j. Set the MAIN TRIGGERING MODE switch to NORM.
- k. CHECK—Stable crt display can be obtained with the COUPLING switch for MAIN TRIGGERING set to AC, AC LF REJ, and DC (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable display).

Calibration—7B53A/7B53AN Performance Check

I. Change the following control settings:

MAIN TRIGGERING

MODE AUTO COUPLING AC

LEVEL Set for a stable

main sweep display

TIME/DIV OR

DLY TIME .1 μ s

DLY'D Time/ .05 μ s (press in for

Division DLY'D SWP Display Mode)

m. CHECK—Stable crt display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for the + and - SLOPE (DLY'D TRIG LEVEL control may be adjusted as necessary to obtain stable display).

n. Disconnect all test equipment.

2. Check Main and Delayed External Triggering Operation

a. Change the following control settings:

MAIN TRIGGERING COUPLING AC SOURCE EXT DLY'D TRIG EXT SOURCE COUPLING AC X1 MAG TIME/DIV OR **DLY TIME** .1 µs DLY'D Time/ .1 μ s (press in for MAIN Division **SWP** Display Mode)

- b. Connect the medium-frequency signal generator to the 7A16A Input with a GR-to-bnc female adapter, 50 Ω coaxial cable, and bnc T-connector. Connect the output of the T-connector to the 7B53A/7B53AN MAIN TRIG IN connector with a 50 Ω coaxial cable and 50 Ω bnc termination.
- c. Set the medium-frequency signal generator for a two-division display (100 mV) at 10 MHz.
- d. CHECK—Stable crt display can be obtained with the MAIN TRIGGERING COUPLING switch set to AC, AC LF REJ, and DC for both the \pm and SLOPE (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable display).

- e. Disconnect the 50 Ω cable and termination from the MAIN TRIG IN connector and connect them to the DLY'D TRIG IN connector.
 - f. Change the following control settings:

MAIN TRIGGERING

SOURCE INT COUPLING AC

LEVEL Set for stable main

sweep display

TIME/DIV OR

DLY TIME .1 μ s

DLY'D Time/ .05 μ s (press in for

Division DLY'D SWP Display Mode)
DLY'D TRIG LEVEL RUNS AFTER DLY TIME

- g. Set the medium-frequency signal generator for a two-division display (100 mV) at 10 MHz.
- h. Rotate the DLY'D TRIG LEVEL control to the DLY'D SWP TRIGGERABLE position.
- i. CHECK—Stable crt display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for both the + and SLOPE (DLY'D TRIG LEVEL control may be adjusted as necessary to obtain a stable delayed sweep display).
- j. Disconnect the 50 Ω cable and termination from the DLY'D TRIG IN connector and connect it to the MAIN TRIG IN connector.
 - k. Change the following control settings:

7B53A/7B53AN

MAIN TRIGGERING

SOURCE EXT

TIME/DIV OR

DLY TIME .1 μ s

DLY'D Time/ .1 μ s (press in for

Division MAIN SWP Display Mode)

DLY'D TRIG

LEVEL RUNS AFTER DLY TIME

I. Set the 7A16A Volts/Division switch to .1 V and set the medium-frequency signal generator for a five-division display (500 mV) at 10 MHz. Rotate the MAIN TRIGGERING LEVEL control for a stable main sweep display.

Calibration-7B53A/7B53AN **Performance Check**

- m. Without changing the output amplitude, increase the output frequency of the generator to 100 MHz.
 - n. Press and release the MAG switch to X10.
- o. CHECK-Stable crt display can be obtained with the MAIN TRIGGERING COUPLING switch set to AC, AC LF REJ, and DC for both the + and - SLOPE (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable display).
- p. Disconnect the 50 Ω cable and termination from the MAIN TRIG IN connector and connect it to the DLY'D TRIG IN connector.
 - q. Change the following control settings:

MAIN TRIGGERING

SOURCE

INT

LEVEL

Set for stable display

TIME/DIV OR

DLY TIME

.1 μs

DLY'D Time/

.05 μ s (press in for the

Division

DLY'D SWP Display Mode)

MAG

- r. Set the medium-frequency signal generator for five divisions (500 mV) at 10 MHz.
- s. Without changing the amplitude, increase the output frequency to 100 MHz.
 - t. Change the following control settings:

MAG

X10

DLY'D TRIG LEVEL

DLY'D SWP

TRIGGERABLE

- u. CHECK-Stable crt display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for both the + and - SLOPE (DLY'D TRIG LEVEL control may be adjusted as necessary to obtain a stable delayed sweep display).
 - v. Disconnect all test equipment.

3. Check Main and Delayed Internal Trigger Jitter

a. Connect the medium-frequency signal generator to the 7A16A Input with a GR-to-bnc female adapter, 50 Ω coaxial cable, and a 50 Ω bnc termination.

b. Change the following control settings:

MAIN TRIGGERING

Set for stable display

(TRIG'D light on)

LEVEL DLY'D TRIG

INT

SOURCE COUPLING

AC

LEVEL

RUNS AFTER DLY TIME

- c. Set the medium-frequency signal generator for a 1.5 division display at 75 MHz.
- d. Rotate the DLY'D TRIG LEVEL control to DLY'D SWP TRIGGERABLE and rotate control for a stable display.
- e. CHECK-crt display for no more than 0.2 division (1 ns) of litter. Disregard any slow drift.
 - f. Change the following control settings:

TIME/DIV OR

DLY TIME

.05 μ**s**

DLY'D Time/

.05 μ s (press in for

Division

MAIN SWP Display Mode)

MAIN TRIGGERING

LEVEL

Set for stable display

- q. CHECK-crt display for less than 0.2 division (1 ns) of jitter. Disregard any slow drift.
 - h. Disconnect all test equipment.

4. Check Main and Delayed Low-Frequency **Triggering Operation**

- a. Connect the low-frequency sine-wave generator to the 7A16A Input with a 50 Ω coaxial cable and bnc Tconnector. Connect the output of the bnc T-connector to the MAIN TRIG IN connector with a 50 Ω coaxial cable and a 50 Ω bnc termination.
 - b. Change the following control settings:

TIME/DIV OR

DLY TIME

10 ms

X1

DLY'D Time/

10 ms (press in for

Division

MAIN SWP Display Mode)

MAG

c. Set the low-frequency sine-wave generator for a 0.3division display at 30 Hz.

Calibration-7B53A/7B53AN **Performance Check**

- d. CHECK-Stable crt display can be obtained with the MAIN TRIGGERING COUPLING switch set to AC, AC HF REJ, and DC for both the + and - SLOPE (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable display).
 - e. Change the following control settings:

MAIN TRIGGERING

COUPLING

AC

LEVEL

Set for stable main

sweep display

TIME/DIV OR

DLY TIME

10 ms

DLY'D Time/

5 ms (press in for DLY'D

Division

SWP Display Mode)

DLY'D TRIG

LEVEL

DLY'D SWP TRIGGERABLE

f. CHECK-Stable display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for both the + and - SLOPE (DLY'D TRIG LEVEL control may be adjusted as necessary to obtain a stable delayed sweep display).

g. Change the following control settings:

MAIN TRIGGERING

MODE

AUTO EXT

SOURCE TIME/DIV OR

DLY TIME

10 ms

DLY'D Time/

10 ms (press in for MAIN

Division

SWP Display Mode)

DLY'D TRIG

SOURCE

EXT

- h. Set the low-frequency sine-wave generator for a one-division display (100 mV) at 30 Hz; then return the MAIN TRIGGERING MODE switch to NORM.
- i. CHECK-Stable crt display can be obtained with the MAIN TRIGGERING COUPLING switch set to AC, AC HF REJ, and DC for both the + and - SLOPE (MAIN TRIGGERING LEVEL control may be adjusted as necessary to obtain a stable display).
 - j. Change the following control settings:

MAIN TRIGGERING

COUPLING

AC

SOURCE

INT

LEVEL

Set for stable display

TIME/DIV OR

DLY TIME

10 ms

DLY'D Time/ Division

5 ms (press in for DLY'D

SWP Display Mode)

- k. Disconnect the 50 Ω cable and termination from the MAIN TRIG IN connector and place it on the DLY'D TRIG IN connector.
- I. CHECK-Stable crt display can be obtained with the DLY'D TRIG COUPLING switch set to AC and DC for both the + and - SLOPE (DLY'D TRIG LEVEL control may be adjusted as necessary for a stable display).

5. Check Main Triggering AC High-Frequency **Reject Operation**

a. Change the following control settings:

MAIN TRIGGERING

MODE

AUTO

COUPLING

AC HF REJ

TIME/DIV OR

DLY TIME DLY'D Time/

Division

20 us

20 μ s (press in for MAIN SWP Display Mode)

- b. Set the low-frequency sine-wave generator for a 0.3-division display at 50 kHz; then return the MAIN TRIGGERING MODE switch to NORM.
- c. CHECK-Stable crt display can be obtained with The MAIN TRIGGERING LEVEL control.
 - d. Without changing the output amplitude, set the lowfrequency sine-wave generator to 1 MHz.
 - e. Press and release MAG switch to X10 position.
 - f. CHECK-Stable crt display cannot be obtained at any setting of the MAIN TRIGGERING LEVEL control.

6. Check Main Triggering AC Low-Frequency **Reject Operation**

a. Change the following control settings:

MAIN TRIGGERING

MODE

AUTO

COUPLING

AC LF REJ

MAG

X1

- b. Set the low-frequency sine-wave generator for a 0.3-division display at 30 kHz; then return the MAIN TRIGGERING MODE switch to NORM.
- c. CHECK-Stable crt display can be obtained with the MAIN TRIGGERING LEVEL control.

- d. Without changing the output amplitude, set the low-frequency sine-wave generator to 60 Hz.
- e. Set the TIME/DIV OR DLY TIME and DLY'D Time/Division switches to 2 ms (MAIN SWP Display Mode).
- f. CHECK—Stable crt display cannot be obtained at any setting of the MAIN TRIGGERING LEVEL control.

7. Check Main and Delayed Trigger Level and Slope Operation

a. Change the following control settings:

7A16A

Volts/Div 1 V

7B53A/7B53AN

MAIN TRIGGERING

MODE AUTO COUPLING DC

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ .5 ms (press in for DLY'D

Division SWP Display Mode)

DLY'D TRIG

LEVEL RUNS AFTER DLY TIME

- b. Remove the 50 Ω termination from the 7B53A/7B53AN DLY'D TRIG IN connector; then reconnect the cable.
- c. Set the low-frequency sine-wave generator for the three-divisions of 1 kHz signal.
- d. Rotate the DLY'D TRIG LEVEL control to the DLY'D SWP TRIGGERABLE position.
- e. CHECK—Rotate the DLY'D TRIG LEVEL control throughout its range and check that display can be triggered at any point along the positive slope of the waveform. Check that no display exists when the LEVEL control is rotated to either extreme.
 - f. Set the DLY'D TRIG SLOPE switch to -.
- g. CHECK—Rotate the DLY'D TRIG LEVEL control throughout its range and check that display can be triggered at any point along the negative slope of the

waveform (indicates DLY'D TRIG LEVEL control range at least \pm and \pm 1.5 V). Check that no display exists when the LEVEL control is rotated to either extreme.

h. Change the following control settings:

MAIN TRIGGERING

MODE NORM SOURCE EXT

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ 1 ms (press in for MAIN Division SWP Display Mode)

- i. Disconnect the cable from the DLY'D TRIG IN connector and connect it to the MAIN TRIG IN connector.
- j. CHECK—Rotate the MAIN TRIGGERING LEVEL control and check that all levels can be selected as the main sweep trigger point for both the \pm and SLOPE (indicates MAIN TRIGGERING LEVEL control range of at least \pm and \pm 1.5 V). Check that no display exists when the LEVEL control is rotated to either extreme.

k. Change the following control settings:

7A16A

Volts/Div 5 V

7B53A/7B53AN

MAIN TRIGGERING

SOURCE EXT ÷ 10

- I. Set the low-frequency sine-wave generator for six-divisions of 1 kHz signal.
- m. CHECK—Rotate the MAIN TRIGGERING LEVEL control and check that all levels can be selected as the main sweep trigger point for both the \pm and \pm SLOPE (indicates MAIN TRIGGERING LEVEL control range of at least \pm and \pm 15 V). Check that no display exists when the LEVEL control is rotated to either extreme.
 - n. Disconnect all test equipment.

8. Check Main Trigger Modes

a. Set the following control settings:

7A16A

Volts/div 1 V

REV A JUN 1980 4-11

Calibration—7B53A/7B53AN Performance Check

7B53A/7B53AN

MAIN TRIGGERING

MODE

AUTO

COUPLING SOURCE

AC INT

TIME/DIV OR

DLY TIME

20 μs

DLY'D Time/

20 μ s (press in for

Division

MAIN SWP Display Mode)

- b. Connect the low-frequency sine-wave generator to the 7A16A Input with a 50 Ω coaxial cable and 50 Ω bnc termination.
- c. Set the low-frequency sine-wave generator for a four-division display at 50 kHz.
- d. Rotate the MAIN TRIGGERING LEVEL control for a free-running display.
- e. Set the MAIN TRIGGERING MODE switch to NORM
 - f. CHECK---Crt for no display.
- g. Set the MODE switch to AUTO. Rotate the MAIN TRIGGERING LEVEL control so that the display is just triggered.
- h. Set the MAIN TRIGGERING MODE switch to NORM.
 - i. CHECK-Crt for triggered display.
- j. Set the low-frequency sine-wave generator for a four-division display at 500 Hz.
 - k. Change the following control settings:

TIME/DIV OR

DLY TIME

2 ms

DLY'D Time/

2 ms (press in for MAIN

Division

SWP Display Mode)

MAIN TRIGGERING

LEVEL

Set for a stable display

(TRIG'D light on)

MODE

SINGLE SWP

I. CHECK—Crt for no display.

- m. Press the MAIN TRIGGERING RESET button.
- n. CHECK—Crt for one sweep as RESET button is pressed (Intensity control on the indicator oscilloscope may need to be varied in order that a single sweep display can be observed).
- o. Remove the signal from the 7A16A Input, then press the RESET button.
 - p. CHECK-Crt for no display and READY light on.
 - q. Reconnect the signal to the 7A16A input.
- r. CHECK—That one sweep occurs as the signal is applied to the 7A16A and that the READY light is out after the completion of that sweep.
 - s. Disconnect all test equipment.

9. Check Line Triggering Operation

- a. Connect the 10X probe to the 7A16A Input.
- b. Change the following control settings:

7A16A

Volts/Div

5 V

7B53A/7B53AN

MAIN TRIGGERING

SOURCE

LINE

MODE

NORM

TIME/DIV OR

DLY TIME

5 ms

DLY'D Time/

5 ms (press in for

Division

MAIN SWP Display Mode)

- c. Connect the X10 probe tip to the same line-voltage source which is connected to the oscilloscope.
- d. CHECK—For a stable crt display that is triggered on the correct slope.
 - e. Disconnect all test equipment.

HORIZONTAL SYSTEM CHECK

Equipment Required

1. 7603 Oscilloscope

4. Low-frequency sine-wave generator

2. 7A16A Amplifier Unit

5. 42-inch 50 Ω cable

3. Time-mark generator

6. 50 Ω bnc termination

Control Settings

Set the controls as given under Preliminary Control Settings.

NOTE

The tolerances given in steps 10 and 11 are for an ambient temperature range of $+15^{\circ}$ C to $+35^{\circ}$ C. If outside this range, see Specifications in Section 1.

10. Check Main and Delayed Sweep Timing Accuracy and Linearity

- a. Connect the marker output of the time-mark generator to the 7A16A Input with the 50 Ω coaxial cable and 50 Ω bnc termination.
 - b. Change the following control settings:

7A16A

Volts/Div

.5 V

7B53A/7B53AN

MAIN TRIGGERING

MODE NORM

LEVEL Set for stable display

(TRIG'D light on)

- c. CHECK—Using the TIME/DIV OR DLY TIME switch settings and the time-mark generator settings given in Table 4-2, that the main sweep timing over the middle eight graticule divisions is within the tolerances in Table 4-2.
- d. CHECK—Using the time-mark generator settings and the TIME/DIV OR DLY TIME and DLY'D Time/Division switch settings given in Table 4-3, that the delayed sweep timing over the middle eight graticule divisions is within the tolerances in Table 4-3.

Table 4-2 MAIN SWEEP TIMING

NOTE

Main sweep timing must be checked when operating in the MAIN SWP or INTEN Display Modes.

7B53A/7B53AN TIME/DIV or DLY TIME	Time Markers	CRT Display (marker/ division)	Tolerance MAIN SWP
.05 μs	50 ns	1 (cycle)	±0.24
.1 <i>μ</i> s	.1 μs	1	division
.2 µs	.1 μs	2	
.5 μs	.5 μs	1	
1 μs	1 <i>μ</i> s	1]
2 μs	1 <i>μ</i> s	2]
5 <i>μ</i> s	5 μs	1]
10 <i>μ</i> s	10 <i>μ</i> s	1]
20 <i>μ</i> s	10 μs	2]
50 <i>μ</i> s	50 μs	1	±0.16
.1 ms	.1 ms	1	division
.2 ms	.1 ms	2]
.5 ms	.5 ms	1	
1 ms	1 ms	1	
2 ms	1 ms	2]
5 ms	5 ms	1]
10 ms	10 ms	1	
20 ms	10 ms	2	
50 ms	50 ms	1	Ì
.1 s	.1 s	1	Application of the state of the
.2 s	.1 s	2]
.5 s	.5 s	1	±0.24
1 s	1 s	1	division
2 s	1 s	2	
5 s	5 s	1	

Table 4-3

DELAYED SWEEP TIMING

NOTE

Delayed sweep timing must be checked when operating in the DLY'D SWP Display Mode.

***************************************				~~~
7B53A/7B53AN		CRT		
TIME/DIV or DLY TIME	DLY'D Time/ Division (press in)	Time Markers	Display (markers/ division)	Tolerance DLY'D SWP
.1 μs	.05 μs	50 ns	1 (cycle)	±0.32
.2 μs	.1 μs	.1 μs	1	division
.5 μs	.2 μs	.1 μs	2	
1 <i>µ</i> s	.5 μs	.5 μs	1	
2 <i>μ</i> s	1 <i>μ</i> s	1 μs	1	
5 <i>μ</i> s	2 <i>μ</i> s	1 μs	2	
10 <i>μ</i> s	5 μs	5 μs	1	
20 μs	10 <i>μ</i> s	10 <i>μ</i> s	1	
50 <i>μ</i> s	20 μs	10 <i>μ</i> s	2	
.1 ms	50 μs	50 μs	1	±0.24
.2 ms	.1 ms	.1 ms	1	division
.5 ms	.2 ms	.1 ms	2	
1 ms	.5 ms	.5 ms	1	
2 ms	1 ms	1 ms	1	
5 ms	2 ms	1 ms	2	
10 ms	5 ms	5 ms	1	
20 ms	10 ms	10 ms	1	Kitto III
50 ms	20 ms	10 ms	2	Hill
.1 s	50 ms	50 ms	1	
.2 s	.1 s	.1 s	1	±0.32
.5 s	.2 s	.1 s	2	division
1 s	.5 s	.5 s	1	

- e. Set the time-mark generator for 1 ms markers.
- f. Change the following control settings:

TIME/DIV OR

DLY TIME

2 ms

DLY'D Time/

1 ms (press in for

Division

DLY'D SWP Display Mode)

- g. Position the second marker to the second graticule line.
- h. CHECK—Fourth marker within 0.12 division (6%) of the fourth vertical line.

- i. Position the third marker to the third vertical line.
- j. CHECK—Fifth marker within 0.12 division of the fifth vertical line.
- k. Continue this check for each two-division portion of the sweep that is within the center eight division of the graticule.
- I. Set the TIME/DIV OR DLY TIME and DLY'D Time/Division switches to 1 ms (MAIN SWP Display Mode).
- m. CHECK Repeat sweep linearity check given in steps g through k. Check for main sweep linearity within 0.1 division (5%).
 - n. Calibration—See step 4 of adjustment procedure.

X10

Centered

11. Check Main and Delayed Sweep Magnifier Accuracy and Linearity

a. Change the following control settings:

MAG POSITION

- b. Check—Using the TIME/DIV OR DLT TIME switch and the time-mark generator settings given in Table 4-4, the main sweep magnified timing, excluding the first ten divisions and the last ten division of the total magnified display.
- c. Rotate the MAIN TRIGGERING LEVEL control for a stable display. Using the TIME/DIV OR DLY TIME settings, DLY'D Time/Division settings, and time-mark generator settings given in Table 4-5, check the delayed sweep magnified timing, excluding the first ten divisions and the last ten divisions of the total magnified display.
 - d. Change the following control settings:

TIME/DIV OR

DLY TIME DLY'D Time/ 2 ms

1 ms (press in for

Division

DLY'D SWP Display Mode)

e. Set the time-mark generator for 0.1 ms markers.

Table 4-4 MAIN SWEEP MAGNIFIER ACCURACY

NOTE

Main sweep magnifier accuracy must be checked when operating in the MAIN SWP or INTEN Display Modes.

7B53A/7B53AN TIME/DIV OR DLY TIME	Time-Mark Generator	Crt Display Markers/Div	Tolerance SWP
0.5 μs	5 ns	1 (cycle)	±0.28
.1 <i>μ</i> s	10 ns	1 (cycle)	division
.2 <i>μ</i> s	10 ns	2 (cycles)	
.5 μs	50 ns	1 (cycle)	
1 <i>μ</i> s	.1 μs	1	
2 μs	.1 <i>μ</i> s	2	
5 <i>μ</i> s	.5 μs	1	
10 <i>μ</i> s	1 <i>μ</i> s	1	
20 <i>μ</i> s	1 <i>µ</i> s	2	
50 <i>μ</i> s	5 μs	1	
.1 ms	10 <i>μ</i> s	1	
.2 ms	10 <i>μ</i> s	2	±0.2
.5 ms	50 <i>μ</i> s	1	division
1 ms	.1 ms	1	
2 ms	.1 ms	2	
5 ms	.5 ms	1	
10 ms	1 ms	1	,15
20 ms	1 ms	2	Ntto! No
50 ms	5 ms	1	11,
.1 s	10 ms	1	
.2 s	10 ms	2	
.5 s	50 ms	1	±0.28
1 s	.1 s	1	division
2 s	.1 s	2	
5 s	.5 s	1	
CARLO CONTRACTOR OF THE PARTY OF THE PROPERTY OF THE PARTY OF THE PART	Pro a reconstruir processor in the contract of		Commence and a second s

- f. Position the second displayed marker to the second vertical line of the graticule.
- g. CHECK—Fourth displayed marker is within 0.12 division (6%) of the fourth vertical line.
- h. Position the third displayed marker to the third vertical line.
- i. CHECK—Fifth displayed marker is within 0.12 division of the fifth vertical line.

Table 4-5

DELAYED SWEEP MAGNIFIER ACCURACY

NOTE

Delayed sweep magnifier accuracy must be checked when operating in the DLY'D SWP Display Mode.

7B53A/7	7B53AN	The state of the s		Annual or Proposition Annual Annua
TIME/DIV OR	DLY'D Time/ Division	Time-Mark	CRT Display Markers/	
DLY TIME		Generator	1	Tolerance
.1 <i>µ</i> s	.05 <i>μ</i> s	5 ns	1 (cycle)	±0.36
.2 μ s	.1 <i>μ</i> s	10 ns	1 (cycle)	division
.5 μs	.2 μs	10 ns	2 (cycles)	
1 <i>μ</i> s	.5 μs	50 ns	1 (cycle)	
2 μ s	1 <i>µ</i> s	.1 <i>μ</i> s	1	
5 μ s	2 μs	.1 <i>μ</i> s	2	
10 <i>μ</i> s	5 μs	.5 μs	1	
20 μs	10 <i>μ</i> s	1 <i>μ</i> s	1	
50 μ s	20 <i>μ</i> s	1 <i>μ</i> s	2	
.1 ms	50 <i>μ</i> s	5 μs	1	±0.28
.2 ms	.1 ms	10 <i>μ</i> s	1	division
.5 ms	.2 ms	10 <i>μ</i> s	2	
∂l ms	.5 ms	50 μs	1	
2 ms	1 ms	.1 ms	1	
5 ms	2 ms	.1 ms	2	
10 ms	5 ms	.5 ms	1	
20 ms	10 ms	1 ms	1	
50 ms	20 ms	1 ms	2	
.1 s	50 ms	5 ms	1	
.2 s	.1 s	10 ms	1	±0.36
.5 s	.2 s	10 ms	2	division
1 s	.5 s	50 ms	1	

- j. Continue this check for each two-division portion of the total displayed sweep within the center eight divisions of the graticule.
 - k. Change the following control settings:

TIME/DIV OR

DLY TIME

1 ms

DLY'D Time/

1 ms (press in for

Division

MAIN SWP Display Mode)

I. CHECK—Repeat magnified sweep linearity check given in steps f through j. Check for magnified main sweep linearity within 0.1 division (5%).

12. Check Delay Time Multiplier Differential Accuracy

- a. Set the time-mark generator for 1 ms markers.
- b. Change the following control settings:

MAG

X1

TIME/DIV OR

DLY TIME

1 ms

DLY'D Time/

10 μ s (press in for

Division

DLY'D SWP Display Mode)

MAIN TRIGGERING

LEVEL

Set for stable display

DLY'D TRIG

RUNS AFTER DLY TIME

NOTE

The following steps check delay time multiplier accuracy. Two factors must be determined: the maximum error allowable to be within the specification, and the actual error of the measurement.

- c. Rotate the DELAY TIME MULT dial to 1.00. If necessary, further rotate the dial to place a 1 ms marker on the crt. To provide a reference point, position the 1 ms marker to graticule center with the 7B53A/7B53AN POSITION control (see Fig. 4-2). Note the exact DELAY TIME MULT dial setting.
- d. Rotate the DELAY TIME MULT dial to major division points from the dial setting noted in part c (e.g., if the DELAY TIME MULT noted in part c is 0.90, major division points will be 1.90, 2.90, 3.90 through 8.90). Check and record the position of each time-marker (with respect to the reference point established at graticule center) at each major division over the center eight division. See Fig. 4-2 for error measurement and Fig. 4-3 for typical delay time error figures.
- e. CHECK—Scan the figures recorded in step d for all difference readings over the center eight divisions (see Fig. 4-3). Find the maximum error over any one division measurement. Check that it is within the allowable error (see Fig. 4-4).

Example. Refer to the curve in Fig. 4-4 for the 0.5 s/div to 1 μ s/div delay time range. For any one-division measurement the allowable error is 3.7%. At the same delay time range, for any five-division measurement the allowable error is 1.3%.

f. CHECK—Scan the figures recorded in step d for difference readings over the center eight divisions of


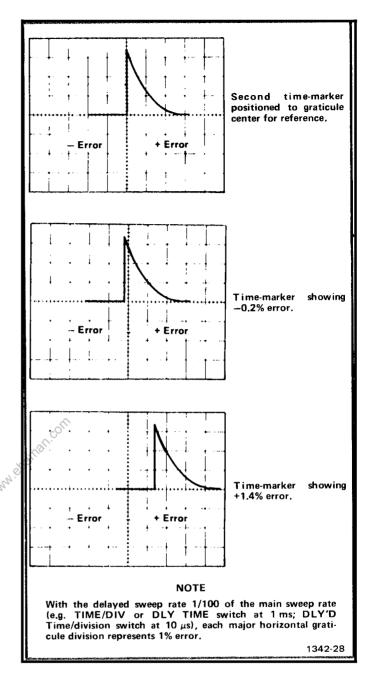


Fig. 4-2. Typical delay time error measurement.

display (see Fig. 4-3). Find the maximum error over any two division measurement, divide by two, and check that it is within the allowable error given in Fig. 4-4.

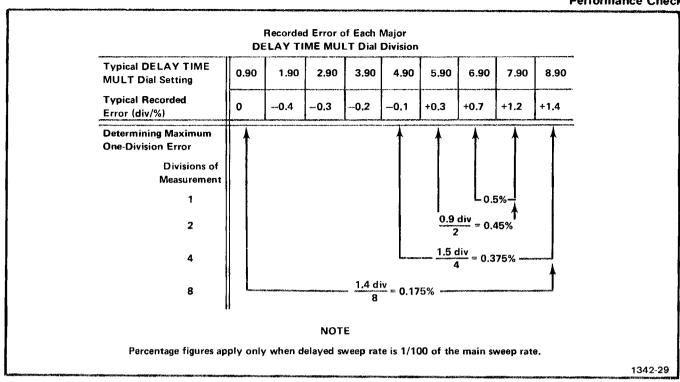

Percentage figures apply only when delayed sweep rate is 1/100 of the main sweep rate.

Fig. 4-3. Typical Delay Time Error Figures.

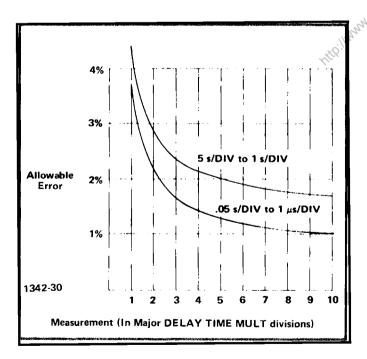


Fig. 4-4. Allowable Delay Time Error.

g. CHECK-Scan the figures recorded in step d for difference readings over the center eight divisions (see Fig. 4-3). Find the maximum error over any four division measurement, divide by four, and check that it is within the allowable error given in Fig. 4-4.

- h. CHECK-Scan the figures recorded in step d for difference readings over the center eight divisions (see Fig. 4-3). Find the maximum error over an eight-division measurement, divide by eight, and check that it is within the allowable error given in Fig. 4-4.
 - i. Set the time-mark generator for 10 μ s markers.
 - j. Change the following control settings:

TIME/DIV OR **DLY TIME**

DLY'D Time/ Division

.1 μ s (press in for DLY'D SWP Display Mode)

MAIN TRIGGERING

LEVEL

Set for stable display

k. Repeat steps c through h.

13. Check Delay-Time Jitter

a. Set the time-mark generator for 1 ms markers.

Calibration—7B53A/7B53AN Performance Check

b. Change the following control settings:

DELAY TIME MULT

1.00

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ .5 μ s (press in for DLY'D Division SWP Display Mode)

VARIABLE CAL

c. Position the pulse near the center of the crt display area with the DELAY TIME MULT dial.

- d. CHECK—Jitter in the leading edge of the pulse should not exceed one graticule division (one part in 20,000). Disregard any slow drift.
- e. Turn the DELAY TIME MULT dial to about 9.00 and adjust so the pulse is displayed near the center of the crt display area.
- f. CHECK--Jitter on the leading edge of the pulse should not exceed one graticule division.

14. Check Mixed Sweep Operation

a. Change the following control settings:

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ 1 ms (press in for MAIN SWP Display Mode)

DELAY TIME MULT 10.00

MAIN TRIGGERING

LEVEL Set for stable display

- b. CHECK—Timing over center eight graticule divisions. Note the error for part d.
 - c. Change the following settings:

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ .5 ms (press in for DLY'D SWP Display Mode)

VARIABLE Pull out for MIXED Display Mode

- d. CHECK—Timing over center eight graticule divisions is within 0.16 division (2%) plus the main sweep error noted in part b.
 - e. Set the DELAY TIME MULT dial to 0.00.

- f. Set the time-mark generator for 0.5 ms markers.
- g. CHECK—Timing over center eight divisions is within 0.16 division (2%). Position as necessary.

15. Check Main and Delayed Sweep Variable Control Operation

- a. Set the time-mark generator for 10 ms markers.
- b. Change the following control settings:

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ 1 ms (press in for MAIN Division SWP Display Mode)

MAIN TRIGGERING

LEVEL Set for stable display

- c. Position the markers to the far left and right graticule lines with the POSITION control.
 - d. Turn the VARIABLE control fully counterclockwise.
- e. CHECK—Crt display for equal to or less than four division spacing between markers (indicates adequate range for continuously variable sweep rates between calibrated steps).
 - f. Change the following control settings:

TIME/DIV OR

DLY TIME 5 ms

DLY'D Time/ 1 ms (press in for DLY'D Division SWP Display Mode)

Variable Selector

(Internal) Delayed Variable

VARIABLE CAL

- g. Position the markers to the far left and right graticule lines with the POSITION control.
- h. Rotate the VARIABLE control fully counterclockwise.
- i. CHECK—Crt display for equal to or less than four division spacing between markers (indicates adequate range for continuously variable delayed sweep rates between calibrated steps).
 - j. Disconnect all test equipment.

4-18 REV F JAN 1981

16. Check External Amplifier Gain

a. Change the following control settings:

7A16A

AC-DC-GND	DC
Volts/Div	.2 V

7B53A/7B53AN

MAIN TRIGGERING

MODE	AUTO
SOURCE	EXT

TIME/DIV OR

DLY TIME 10 μ s

DLY'D Time/ 10 μ s (press in for MAIN Division SWP Display Mode)

MAG X1

- b. Connect the low-frequency sine-wave generator to the 7A16A Input with a 50 Ω coaxial cable and 50 Ω bnc termination.
- c. Set the generator for a four-division display (800 mV) at 100 kHz.
- d. Disconnect the sine-wave generator from the 7A16A and connect it to the 7B53A/7B53AN MAIN TRIG IN OR AMPL connector.
- e. Change the TIME/DIV OR DLY TIME switch to AMPL. Rotate the POSITION control to center the display on the graticule.
- f. CHECK—Crt horizontal trace length must be eight divisions ± 0.8 division.
- g. Press the EXT $\div 10$ button of the MAIN TRIGGERING SOURCE switch.
- h. CHECK—Crt horizontal trace length must be 0.8 divisions with ± 0.08 division.
- i. Set the MAG switch to X10. Rotate the POSITION control to center the display on the graticule.
- j. CHECK---Crt horizontal trace length must be eight divisions ± 0.8 division.

17. Check External Horizontal Bandwidth

a. Change the following control settings:

MAIN TRIGGERING

COUPLING	AC
SOURCE	EXT
MAG	X1

- b. Set the sine-wave generator to 1 kHz and adjust the amplitude for a horizontal trace length of eight divisions.
- c. Without changing the amplitude, increase the frequency of the sine-wave generator until the horizontal trace length decreases to 5.6 divisions.
- d. CHECK—Sine-wave generator frequency must be 2 MHz or greater (upper —3 dB point).
- e. Change the MAIN TRIGGERING COUPLING switch to AC LF REJ. Repeat parts b, c, and d.
- f. Change the MAIN TRIGGERING COUPLING switch to DC. Repeat parts b, c, and d.
- g. Change the MAIN TRIGGERING COUPLING switch to AC HF REJ. Repeat parts b and c.
- h. CHECK—Sine-wave generator frequency must be 100 kHz or less (upper -3 dB point).

This completes the Performance Check procedure for the 7B53A/7B53AN. If the instrument has met all tolerances given in this procedure, it is correctly calibrated and within the specified tolerances. Disconnect all test equipment.

NOTE

This procedure does not check the Delayed Sweep Gate output signal as applied to the front panel Dly'd Trig In connector, since this requires removal of one side cover and changing an internal connection. This step is included in the Adjustment procedure since the side covers are already removed. If it is desired to check this step as part of the Performance Check refer to step 11 of the Adjustment procedure.

7. Adjust Magnified Sweep Gain (R762) 4-24

PART II—ADJUSTMENT

Introduction The following procedure returns the 7B53A/7B53AN to correct calibration. All limits and tolerances given in this procedure are calibration guides, and should not be interpreted as instrument specifications except as listed in the Performance Requirement column of the Specifications. The actual operation of the instrument may exceed the given limits or tolerances if the instrument meets the Performance Requirements as checked in Part I—Performance Check of this section.	8. Adjust Main and Delayed Sweep Length (R564, R652)			
INDEX TO PART II—ADJUSTMENT				
Trigger System Adjustment	Preliminary Procedure for Adjustment			
Page 1. Adjust Trigger DC Balance and Main Trigger Level Centering (R72, R333)	Install the Vertical Amplifier unit directly into the left vertical compartment of the oscilloscope.			
2. Adjust Delayed Trigger Level Centering (R435) 4-22	2. Install the 067-0589-00 plug-in extender into the horizontal compartment.			
 3. Adjust Main EXTernal ÷ 10 Compensation (C16) SN B210000 & UP 7B53A Only 4-22 4. Adjust Main and Delayed External 	3. Remove the side covers from the 7B53A/7B53AN and connect the instrument to the plug-in extender.			
Compensation (C401, C301, C16) SN B209999 & BELOW	Turn on the oscilloscope and allow at least 20 minutes warmup before proceeding with adjustments.			
Horizontal System Adjustment				
5. Adjust Main and Delayed Sweep Offset (R592, R675) 4-24	Set the equipment controls as given in this section under Preliminary Control Settings.			
6. Adjust SWP CAL (front-panel) 4-24	6. Refer to Figs. 8-23, 24, and 25, adjustment locations,			

for appropriate test point (TP) locations.

TRIGGER SYSTEM ADJUSTMENT

Equipment Required

- 1. 7603 Oscilloscope
- 2. 7A16A Amplifier
- 3. 10X Probe
- 4. Medium-frequency signal generator
- 5. Square-wave generator
- 6. Plug-in extender

- 7. 42-inch 50 Ω coaxial cable
- 8. 18-inch 50 Ω coaxial cable
- 9. 50 Ω bnc termination
- 10. GR to bnc female adapter
- 11. 50 Ω X10 attenuator
- 12. Input RC Normalizer; RC 1 MΩ X 20 pF
- 13. VOM

Control Settings

Set the controls as given under Preliminary Control Settings.

NOTE

See Figs. 8-23, 24, and 25 (located on pull-out page in rear of diagrams section) for location of trigger system adjustments and test points.

1. Adjust Trigger DC Balance and Main Trigger Level Centering (R72, R333)

a. To establish electrical center, set the 7A16A input coupling switch to GND. Connect a VOM across TP50 and TP59 on the 7B53A/7B53AN. Rotate the 7A16A position control for a 0 V reading on the VOM.

NOTE

Do not move the 7A16A position control until part 1 of this step has been completed.

- b. Set the 7A16A input coupling to DC and the 7B53A/7B53AN MAIN TRIGGERING COUPLING switch to DC.
- c. Connect the medium-frequency signal generator to the 7A16A Input with a GR-to-bnc female adapter, 50 Ω coaxial cable, and 50 Ω bnc termination.
- d. Set the medium-frequency signal generator for a one-division display at 50 kHz.

- e. Set the MAIN TRIGGERING LEVEL control to (0).
- f. CHECK—Crt for sweep trigger point (start of sweep) at the electrical center.
- g. ADJUST-R72, Trigger DC Balance, for sweep trigger point at crt electrical center.
- h. Change the MAIN TRIGGERING SLOPE switch to and +. Note the positions of the sweep trigger point with respect to crt electrical center.
- i. Change the MAIN TRIGGERING COUPLING switch to AC.
- j. CHECK—Sweep trigger points occur at crt electrical center or at points equally above and below crt electrical center of the and + SLOPE.
- k. ADJUST—R333, Main Trigger Level Center, for sweep trigger points equally above and below crt electrical center for the and + SLOPE.
- I. INTERACTION—Repeat the adjustment of R72, Trigger DC Balance, and R333, Main Trigger Level Center, as necessary.

REV E JUN 1980 4-21

Calibration—7B53A/7B53AN Adjustment

2. Adjust Delayed Trigger Level Centering (R435)

a. Change the following control settings:

TIME/DIV OR

DLY TIME

20 μs

DLY'D Time/

10 μ s (press in for DLY'D

Division SWP Display Mode)
DLY'D TRIG LEVEL RUNS AFTER DLY TIME

b. Rotate the DLY'D TRIG LEVEL control for a stable display with the sweep trigger point at crt electrical center.

- c. Change the DLY'D TRIG SLOPE switch to and \pm . Note the positions of the sweep trigger point with respect to crt electrical center.
- d. ADJUST—R435 for sweep trigger points to occur at crt electrical center or at points equally above and below crt electrical center for the and + DLY'D TRIG SLOPE.
 - e. Disconnect all test equipment.

3. Adjust Main EXTernal \div 10 Compensation (C16) SN B210000 & Up 7B53A Only

- a. Connect the output of the square-wave generator to the 7A16A Input with a 20 pF X 1 M Ω Input RC Normalizer.
 - b. Change the following control settings:

7A16A

Volts/Div

1 V

COUPLING

DC

7B53A/7B53AN

MAIN TRIGGERING

LEVEL

Set for stable display

COUPLING

DC

MAG

X1

TIME/DIV

.2 ms

SOURCE

EXT ÷ 10

- c. Set the square-wave generator for a five-division display at 1 kHz.
- d. Disconnect the RC Normalizer from the 7A16A Input and connect it to the MAIN TRIG IN connector.
- e. Connect the 10X probe (properly compensated) from the 7A16A input to TP315.

f. Change the following control settings:

7A16A

Volts/Div COUPLING 5 mV AC

g. ADJUST—EXT \div 10 Input Compensation C16 for best square corner on leading edge of waveform (ignore first 2 μ s).

h. Disconnect all test equipment.

4. Adjust Main and Delayed External Compensation (C401, C301, C16) SN B209999 & Below

a. Connect the output of the square-wave generator to the 7A16A Input with a GR-to-bnc female adapter, 50 Ω coaxial cable, 10X attenuator, 50 Ω termination and 20 pF X 1 M Ω Input RC Normalizer.

b. Change the following control settings:

7A16A

Volts/Div

.1 V

7B53A/7B53AN

MAIN TRIGGERING

LEVEL.

Set for stable display

COUPLING

DC

MAG

X1

TIME/DIV OR

DLY TIME

1 ms

DLY'D Time/

.5 ms (pull out for

Division

INTEN Display Mode)

DLY'D TRIG

COUPLING SOURCE DC EXT

- c. Set the square-wave generator for a five-division display at 1 kHz.
- d. Disconnect the RC Normalizer from the 7A16A Input and connect it to the DLY'D TRIG IN connector.
- e. Connect the 10X probe (properly compensated) from the 7A16A Input to TP415.
 - f. Change the following control settings:

7A16A

Volts/Div

5 mV

7B53A/7B53AN

MAIN TRIGGERING

LEVEL Set for TRIG'D light on DLY'D Time/ Press in for DLY'D SWP Division Display Mode

DLY'D TRIG Set for stable display LEVEL delayed sweep display

g. ADJUST-Dly'd Ext Comp adjustment C401 for best square corner on leading edge of displayed waveform.

h. Disconnect the 10X probe from TP415 and connect it to TP315. Disconnect the RC Normalizer from the DLY'D TRIG IN connector and connect it to the MAIN TRIG IN connector.

i. Change the following control settings:

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ 1 ms (press in for MAIN Division SWP Display Mode)

MAIN TRIGGERING

SOURCE **EXT**

LEVEL Adjust for stable main

sweep display

j. ADJUST -- Main Ext Comp adjustment C301 for best square corner on leading edge of waveform.

k. Remove the 10X attenuator and connect the 50 Ω termination directly to the Normalizer. Change the MAIN TRIGGERING SOURCE switch to EXT ÷ 10.

I. ADJUST -- Ext ÷ 10 Input Compensation C16 for best square corner on leading edge of waveform.

m. Disconnect all test equipment.

5. Adjust Main High Frequency Triggering

a. Change the following control settings:

7A16A

Volts/Div .17

7B53A

MAIN TRIGGERING

MODE Auto COUPLING AC INT SOURCE MAG X10

TIME/DIV OR

.05 μs **DLY TIME**

b. Connect the medium-frequency signal generator to the 7A16A input.

c. Set the medium-frequency signal generator for 100 MHz and an amplitude for 1.5 divisions of display.

ADJUST - C323 for a stable display, if necessary.

6. Adjust Delayed High Frequency Triggering

a. Change the following control settings:

7B53A

TIME/DIV OR

DLY TIME .1 µs

DLY'D Time/ .05 μ s (press in for DLY'D Division SWP Display Mode) DLY'D TRIG LEVEL Approx. 8 O'clock position

DLY'D TRIG

COUPLING AC SOURCE INT

b. ADJUST-DLY'D TRIG LEVEL for a triggered display.

c. ADJUST - C423 for a stable display, if necessary.

4-23 **REV JUL 1986**

HORIZONTAL SYSTEM ADJUSTMENT

Equipment Required

1. 7603 Oscilloscope

2. 7A16A Amplifier

6. 10X probe

3. Time-mark generator

7. Plug-in extender

5. 50 Ω bnc termination

4. 42-inch 50 Ω coaxial cable

8. VOM

Control Settings

Set the controls as given under Preliminary Control Settings.

g. INTERACTION-Check step 7.

h. Disconnect all test equipment.

NOTE

See Figs. 8-23, 24, and 25 (located on pull-out page in rear of diagrams section) for location of horizontal system adjustments and test points.

7. Adjust Main and Delayed Sweep Offset (R592, R675)

a. Change the following control settings:

7A16A

Volts/Div

5 mV

7B53A/7B53AN

TIME/DIV OR

DLY TIME

DLY'D Time/ 1 ms (press in for MAIN Division SWP Display Mode)

Mode Normal

8. Adjust SWP CAL (front-panel)

a. Connect the marker output of the time-mark generator to the 7A16A Input with the 50 Ω coaxial cable and 50 Ω bnc termination.

b. Set the time-mark generator for 1 ms markers.

c. Change the following control settings:

7A16A

Volts/Div

.5 V

7B53A/7B53AN

MAIN TRIGGERING

Set for stable main

LEVEL sweep display

TIME/DIV OR

display as necessary).

DLY TIME 1 ms

DLY'D Time/ 1 ms (press in for MAIN Division SWP Display Mode)

d. CHECK---Crt display for one marker each division between the second and tenth graticule lines (position the

Mode Auto

b. Connect a VOM between TP580 and ground.

c. ADJUST-R592, Main Sweep Offset, for 0 V.

d. Change the following control settings:

TIME/DIV OR

DLY TIME 2 ms

DLY'D Time/ 1 ms (press in for DLY'D

Division SWP Display Mode)

e. ADJUST-Front-panel SWP CAL control (R290) for one marker per division. The second and tenth markers must coincide exactly with their respective graticule lines (reposition the display slightly with the horizontal

POSITION control, if necessary).

- e. Move the test lead from TP580 to TP690.
- f. ADJUST-R675, Delayed Sweep Offset, for 0 V.

9. Adjust Magnified Sweep Gain (R762)

a. Set the time-mark generator for 0.1 ms markers.

- b. Press and release the MAG switch to X10 (increase the oscilloscope intensity as necessary).
- c. CHECK—Crt display for one marker per division between the second and tenth graticule lines.
- d. ADJUST—Mag Gain control R762 for one marker per division. The second and tenth markers must coincide exactly with their respective graticule lines (position the display as necessary with the horizontal POSITION control).

10. Adjust Main and Delayed Sweep Length (R564, R652)

- a. Set the time-mark generator for 0.1 and 1 ms markers. Press MAG switch to X1.
- b. Rotate the MAIN TRIGGERING LEVEL control for a triggered display. Rotate the POSITION control to position the eleventh 1 ms marker at the center vertical graticule line (see Fig. 4-5).

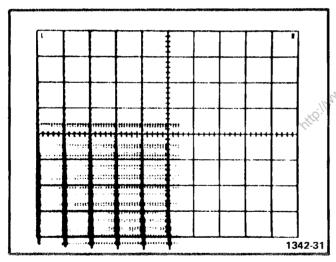


Fig. 4-5. Typical CRT display when checking sweep length.

- c. CHECK—Crt display for sweep length of 10.4 divisions within 0.3 division, as shown by 0.1 to 0.7 division of display to the right of the center vertical graticule line (see Fig. 4-5).
- d. ADJUST—Main Swp Length, R564 for four 0.1 ms markers to the right of the center vertical graticule line.

e. Change the following control settings:

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ .1 ms (press in for DLY'D Division SWP Display Mode)

MAIN TRIGGERING

LEVEL Set for TRIG'D light on

DLY'D TRIG

LEVEL DLY'D SWP TRIGGERABLE

- f. Set the time-mark generator for 0.1 ms and 10 μs markers.
- g. Rotate the DLY'D TRIG LEVEL control for a stable display. Rotate the horizontal POSITION control to position the eleventh 0.1 ms marker to the center vertical graticule line.
- h. CHECK—Crt display for sweep length of 10.4 divisions within 0.3 division, as shown by 0.1 to 0.7 division of display to the right of the center vertical graticule line.
- i. ADJUST--R652, Dly'd Swp Length, for four 10 μ s markers to the right of the center vertical graticule line.
 - i. INTERACTION-Check step 4.

11. Adjust Delayed Sweep Start and Delayed Sweep Stop (R576, R572)

- a. Set the time-mark generator for 1 ms markers.
- b. Change the following control settings:

7B53A/7B53AN

TIME/DIV OR

DLY TIME 1 ms

DLY'D Time/ 1 ms (pull out for Division INTEN Display Mode)

MAIN TRIGGERING

LEVEL Set for stable display

DLY'D TRIG

LEVEL RUNS AFTER DLY TIME

NOTE

Coarse adjustments of the Delayed Start and Delayed Stop controls will be made in the INTEN DISPLAY MODE followed by fine adjustment in the DLY'D SWP DISPLAY MODE.

Calibration-7B53A/7B53AN Adjustment

- c. CHECK-With the DELAY TIME MULT dial set to 1.00, check that the intensified sweep starts on the second marker (position as necessary).
- d. ADJUST-Dly'd Start, R576, to start the intensified sweep on the second marker.
- e. CHECK-Rotate the DELAY TIME MULT dial to 9.00 and check that the intensified sweep starts on the tenth marker.
- f. ADJUST-Dly'd Stop control R572 to start the intensified sweep on the tenth marker.
 - g. Change the following control settings:

TIME/DIV OR

DLY TIME

1 ms

DLY'D Time/

10 μ s (press in for

Division

DLY'D SWP Display Mode)

DELAY TIME MULT

1.00

- h. ADJUST-Observe the time-marker and adjust R576 to start the delayed sweep at the bottom of marker (see Fig. 4-6). Use the POSITION control to position the display to the center vertical graticule line. If the marker is not displayed, repeat parts b through d, g, and h.
- i. Rotate the DELAY TIME MULT to 9.00. Obeserve the time-marker and adjust R572 to start the delayed sweep at the bottom of marker (see Fig. 4-6). Use the POSITION control to position the display to the center vertical graticule line. If the marker is not displayed, repeat parts b, e, f, g, and i.
- j. INTERACTION—Repeat the adjustment of R572 and R576 as necessary.

12. Adjust Main and Delayed Sweep High-Frequency Timing (C594, C691)

- a. Set the time-mark generator for .1 μ s markers.
- b. Change the following control settings:

TIME/DIV OR

DLY TIME

 $.1 \mu s$

DLY'D Time/

Division

.1 µs

MAIN TRIGGERING

Set for stable main

LEVEL

sweep display

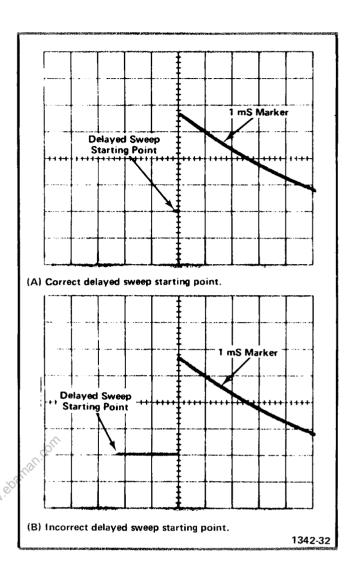


Fig. 4-6. Typical CRT display for adjustment of Dly'd Sweep Start and Dly'd Sweep Stop.

- c. Rotate the POSITION control to align the second .1 μ s marker with the second vertical graticule line and the tenth .1 µs marker with the tenth vertical graticule line.
- d. CHECK-Crt display for .1 μ s marker per division within 0.16 division (2%).
- e. ADJUST-Main Swp HF Timing control C594 for one marker each division.
 - f. Change the following control settings:

TIME/DIV OR

DLY TIME

.2 µs

DLY'D Time/

.1 μ s (press in for DLY'D

Division

SWP Display Mode)

DLY'D TRIG

LEVEL

RUNS AFTER DLY TIME

- g. Rotate the POSITION control to align the second .1 µs marker with the second vertical graticule line and the tenth marker with the tenth vertical graticule line.
- h. CHECK—Crt display for .1 μ s marker each division within 0.24 division (3%).
- i. ADJUST-Dly'd Swp HF Timing control C691 for one marker each division. Use the POSITION control as necessary to align the display.
 - j. Change the following control settings:

TIME/DIV OR

DLY TIME

 $1 \mu s$

DLY'D Time/

.05 μ s (press in for DLY'D

Division

SWP Display Mode)

MAIN TRIGGERING

LEVEL

Set for stable display

- k. Set the time-mark generator for 1 μ s markers.
- I. Rotate the DELAY TIME MULT dial to 1.00. Rotate the dial as necessary to start the delayed sweep in the second time-marker. Note the exact DELAY TIME MULT dial setting.
- m. Rotate the DELAY TIME MULT dial exactly 8:00 from the dial setting noted in part k.
- n. CHECK-Delayed sweep to start on the tenth time marker.
- o. ADJUST-C594, Main HF Timing, to start the delayed sweep on the tenth time-marker.
 - p. Disconnect all test equipment.

13. Check Delayed Sweep Gate Output

- a. Set the controls as given under Preliminary Control Settings.
- b. Connect the Delayed Gate Out multi-pin connector, P613, so the signal is connected to the front-panel DLY'D TRIG IN connector. See Fig. 4-1 for connector location.
- c. Connect a 42-inch 50Ω coaxial cable from the DLY'D TRIG IN connector to the 7A16A input.
 - d. Set the Delayed Triggering SOURCE switch to INT.
- e Set the 7A16A for a deflection factor of one volt/division with DC input coupling.
 - f. Change the following control settings:

DLY TIME MULT

5.00

TIME/DIV OR

DLY TIME

1 ms

DLY'D Time/

.1 ms (pull out for

- -r'D Tim -r'D Tim Division INTEN Display Mode)
 - g. CHECK-The crt display for positive-going rectangular pulse with the baseline level from 0 to 1 V and peak-topeak amplitude of 3.5 V within 1.4 V. Check that the top of the pulse is intensified (verifies that delayed-gate pulse is same duration as delayed sweep).
 - h. Disconnect the Delayed Gate Out signal from the DLY'D TRIG IN connector by reversing P613. See Fig. 4-1.

This completes the Adjustment procedure for the 7B53A/7B53AN. Disconnect all test equipment.

4-27 **REV JAN 1985**

MAINTENANCE

Introduction

This section of the manual contains maintenance information for use in preventive maintenance, corrective maintenance, and troubleshooting of the 7B53A/7B53AN.

PREVENTIVE MAINTENANCE

General

Preventive maintenance consists of cleaning, visual inspeciton, lubrication, etc. Preventive maintenance performed on a regular basis may prevent instrument breakdown and will improve reliability of this instrument. The severity of the environment to which the 7B53A/7B53AN is subjected determines the frequency of maintenance. A convenient time to perform preventive maintenance is preceding recalibration of the instrument.

Cleaning

The 7B53A/7B53AN should be cleaned as often as operating conditions require. Accumulation of dirt in the instrument can cause overheating and component breakdown. Dirt on components acts as an insulating blanket and prevents efficient heat dissipation. It may also provide an electrical conduction path.

The covers of the oscilloscope reduce the amount of dust which reaches the interior of the 7B53A/7B53AN. Operation of the system without the oscilloscope covers in place necessitates more frequent cleaning. When the instrument is not in use, it should be stored in a protected location such as a dust-tight cabinet.



Avoid the use of chemical agents which might damage the plastics used in this instrument. Avoid chemicals which contain benzene, toluene, zylene, acetone, or similar solvents.

Exterior. Loose dust accumulated on the outside of the 7B53A/7B53AN can be removed with a soft cloth or small paint brush. The paint brush is particularly useful for dislodging dirt on and around the front-panel controls. Dirt which remains can be removed with a soft cloth dampened in a mild detergent and water solution. Abrasive cleaners should not be used.

Interior. Dust in the interior of the instrument should be removed occasionally due to its electrical conductivity under high-humidity conditions. The best way to clean the interior is to blow off the accumulated dust with dry low-velocity air. Remove any dirt which remains with a soft paint brush or cloth dampened with a mild detergent and water solution. A cotton-tipped applicatior is useful for cleaning in narrow spaces.

Visual Inspection

The 7B53A/7B53AN should be inspected occasionally for such defects as broken connections, broken or damaged circuit boards, improperly seated transistors or relays, and heat-damaged parts.

The corrective procedure for most visible defects is obvious; however, particular care must be taken if heat-damaged components are found. Overheating usually indicates other trouble in the instrument; therefore, it is important that the cause of overheating be corrected to prevent a recurrence of the damage.

Semiconductor Checks

Periodic checks of the transistors, FET's, and IC's used in the 7B53A/7B53AN are not recommended. The best indication of performance is the actual operation of the device in the circuit. Performance of the circuits is thoroughly checked during recalibration; substandard semiconductors will usually be detected at that time.

Recalibration

To ensure accurate measurements, check the calibration of this instrument each 1000 hours of operation or every six months if used infrequently. In addition, replacement of components may necessitate recalibration of the affected circuits. Calibration instructions are given in Section 4.

Static-Sensitive Components

CAUTION

Static discharge can damage any semiconductor component in this instrument.

This instrument contains electrical components that are susceptible to damage from static discharge. See

Maintenance-7B53A/7B53AN

Table 5-1 for relative susceptibility of various classes of semiconductors. Static voltages of 1 kV to 30 kV are common in unprotected environments.

Observe the following precautions to avoid damage:

- 1. Minimize handling of static-sensitive components.
- Transport and store static-sensitive components or assemblies in their original containers, on a metal rail, or on conductive foam. Label any package that contains static-sensitive assemblies or components.
- Discharge the static voltage from your body by wearing a wrist strap while handling these components. Servicing static-sensitive assemblies or components should be performed only at a static-free work station by qualified service personnel.
- 4. Nothing capable of generating or holding a static charge should be allowed on the work station surface.
- 5. Keep the component leads shorted together whenever possible.
- 6. Pick up components by the body, never by the leads.
- 7. Do not slide the components over any surface.
- 8. Avoid handling components in areas that have a floor or work-surface covering capable of generating a static charge.
- 9. Use a soldering iron that is connected to earth ground.
- Use only special antistatic suction type or wick type desoldering tools.

Before using any test equipment to make measurements on static-sensitive components or assemblies, be certain that any voltage or current supplied by the test equipment does not exceed the limits of the component to be tested.

Table 5-1

RELATIVE SUSCEPTIBILITY TO STATIC DISCHARGE DAMAGE

Semiconduc	tor Classes	Relative Susceptibility Levels ^a
MOS or CMOS micror discretes, or linear mi with MOS inputs (M	crocircuits	Commission - Commission and American conditions in the Commission of the Commission
ECL		2
Schottky signal diode	s	3
Schottky TTL		4
High-frequency bipola	ar transistors	5
JFETS		6
Linear microcircuits		7
Low-power Schottky	8	
TTL (Le	east Sensitive)	9

^a Voltage equivalent for levels:

1 = 100 to 500 V 4 = 500 V 7 = 400 to 1000 V (est)

2 = 200 to 500 V 5 = 400 to 600 V 8 = 900 V

3 250 V 6 = 600 to 800 V 9 = 1200 V

(Voltage discharged from a 100 pF capacitor through a resistance of 100 ohms.)

TROUBLESHOOTING

Introduction

The following information is provided to facilitate troubleshooting of the 7B53A/7B53AN. Information contained in other sections of this manual should be used along with the following information to aid in locating the defective component. An understanding of the circuit operation is very helpful in locating troubles. See the Circuit Operation in Section 3.

Troubleshooting Aids

Diagrams. Circuit diagrams are given on foldout pages in Section 8. The component number and electrical value of each component in this instrument are shown on the diagrams.

Circuit Boards. Fig. 8-2 (located in the Diagrams section) shows the location of the circuit boards within this instrument along with the assembly numbers. The assembly numbers are used on the diagrams to aid in locating the boards. Pictures of the circuit boards are shown in the Diagrams section, on the back of the page opposite the circuit

diagram, to aid the cross-referencing between the diagrams and the circuit-board pictures. Each electrical component on the boards is identified by its circuit number as well as the interconnecting wire or connectors. The circuit boards are also outlined on the diagrams with a black line to show which portions of the circuit are located on a circuit board.

Switch Cam Identification. Switch cam numbers shown on the diagrams indicate the position of the cam in the complete switch assembly. The switch cams are numbered from front to rear.

Diode Color Code. The cathode end of each glass encased diode is identified by a stripe, a series of stripes, or a dot. For most silicon or germanium diodes with a series of stripes, the color code also indicates the type of diode or identifies the Tektronix Part Number using the resistor color-code system (e.g., a diode color coded blue-or-pink brown-gray-green indicates Tektronix Part No. 152-0185-00). The cathode and anode ends of a metal-encased diode can be identified by the diode symbol marked on the body.

Transistor and Integrated Circuit Basing. Fig. 8-1 (located in the diagrams section) illustrates basing configurations for all transistors and integrated circuits used in the 7B53A/7B53AN.

Wiring Color Code. Insulated wire and cable used in the 7B53A/7B53AN is color-coded to facilitate circuit tracing.

Interface Connector Pin Locations. The Interface circuit board couples the 7B53A/7B53AN to the associated oscilloscope. Fig. 5-1 illustrates the locations of pins on the interface connector as shown on the Voltage distribution and Output Connectors schematic in the diagrams section.

Troubleshooting Techniques

This troubleshooting procedure is arranged in an order which checks the simple trouble possibilities first. The first few checks ensure proper connection, operation, and calibration. If the trouble is not located by these checks, the remaining steps aid in locating the defective component. When the defective component is located, it sould be replaced following the replacement procedures given under Corrective Maintenance.

1. Check Control Settings. Incorrect control settings can indicate a trouble that does not exist. If there is any question about the correct function or operation of any control, see the Operating Instructions in this manual or

the detailed Operating Instructions in the 7B53A/7B53AN Operators Manual.

- 2. Check Associated Equipment. Before proceeding with troubleshooting of the 7B53A/7B53AN, check that the equipment used with this instrument is operating correctly. Check that the signal is properly connected and that the probe (if used) is not defective. The indicator oscilloscope and vertical plug-in unit can be checked for proper operation by substituting another time-base unit which is known to be operating properly (preferably another 7B53A/7B53AN or similar unit). If the trouble persists after substitution, the oscilloscope or vertical plug-in unit should be checked.
- **3. Visual Check.** Visually check the portion of the instrument in which the trouble is located. Many troubles can be located by visual indications such as unsoldered connections, borken wires, damaged components.
- 4. Check Instrument Calibration. Check the calibration of this instrument, or the affected circuit if the trouble exists in one circuit. The apparent trouble may only be a result of misadjustment and may be corrected by calibration. Complete calibration instructions are given in the Calibration section.
- 5. Isolate Trouble to a Circuit. To isolate a trouble to a particular circuit, note the trouble symptom. The symptom often indicates the circuit in which the trouble is located. For example, if stable triggering can be obtained in INT position of the SOURCE switch and cannot be obtained in the EXT or LINE positions, the External Trigger Preamp or Trigger Source Switching circuits are probably at fault. When trouble symptoms appear, use the front-panel controls and the crt display to isolate the trouble to one circuit. Remember, the amplifier unit or the indicator

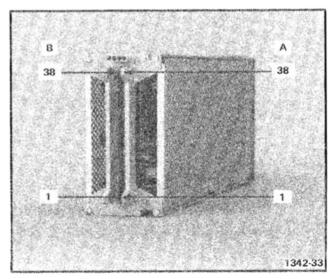


Fig. 5-1. Location of pins on Interface connector.

Maintenance-7B53A/7B53AN

oscilloscope may be responsible for the trouble. When trouble appears in more than one circuit, check all affected circuits by taking voltage and waveform measurements. Once the defective circuit has been located, proceed with steps 6 and 7 to locate the defective component(s).

- 6. Check Individual Components. The following procedures describe methods of checking individual components in the 7B53A/7B53AN. Components that are soldered in place are best checked by disconnecting one end. This isolates the measurement from the effects of surrounding circuitry.
 - a. TRANSISTORS. The best check of transistor operation is actual performance under operating conditions. If a transistor is suspected of being defective, it can be checked by substituting a new component or one which has been checked previously. However, be sure that circuit conditions are not such that a replacement transistor might also be damaged. If substitute transistors are not available, use a dynamic tester (such as TEKTRONIX Type 576).
 - b. INTEGRATED CIRCUITS. Integrated circuits should not be replaced unless they are actually defective. The best method for checking these devices is by direct substitution with a new component or one which is known to be good. Be sure that circuit conditions are not such that a replacement component might be damaged.
 - c. DIODES. A diode can be checked for an open or for a short circuit by measuring the resistance between terminals with an ohmmeter set to the R X 1k scale. The diode resistance should be very high in one direction and very low when the meter leads are reversed. Do not check tunnel diodes or back diodes with an ohmmeter.

CAUTION

Do not use an ohmmeter scale that has a high internal current. High currents may damage the diode.

- d. RESISTORS. Resistors can be checked with an ohmmeter. Check the Electrical Parts List for the tolerance of the resistors used in this instrument. Resistors normally do not need to be replaced unless the measured value varies widely from the specified value.
- e. INDUCTORS. Check for open inductors by checking continuity with an ohmmeter. Shorted or partially shorted inductors can usually be found by

checking the waveform response when high-frequency signals are passed through the circuit. Partial shorting often reduces high-frequency response.

- f. CAPACITORS. A leaky or shorted capacitor can best be detected by checking the resistance with an ohmmeter on the highest scale. Do not exceed the voltage rating of the capacitor. The resistance should be high after initial charge of the capacitor. An open capacitor can best be detected with a capacitance meter or by checking whether the capacitor passes ac signals.
- 7. Repair and Readjust the Circuit. If any defective parts are located, follow the replacement procedures given in this section. Be sure to check the performance of any circuit that has been repaired, or that has had any electrical components replaced.

CORRECTIVE MAINTENANCE

General

Corrective maintenance consists of component replacement and instrument repair. Special techniques required to replace components in the instrument are given here.

Obtaining Replacement Parts

Most electrical and mechanical parts can be obtained through your local Tektronix Field Office or representative. However, you should be able to obtain many of the standard electronic components from a local commercial source in your area. Before you purchase or order a part from a source other than Tektronix, Inc., please check the electrical parts list for the proper value, rating, tolerance and description.

NOTE

When selecting replacement parts, it is important to remember that the physical size and shape of a component may affect the performance in the instrument, particularly at high frequencies. All replacement parts should be direct replacements unless it is known that a different component will not adversely affect instrument performance.

When ordering replacement parts from Tektronix, Inc., include the following information:

- 1. Instrument Type.
- 2. Instrument Serial Number.

5-4 REV JUL 1986

- 3. A description of the part (if electrical, include circuit number).
- 4. Tektronix Part Number.

Component Replacement

WARNING

Disconnect the equipment from the power source before replacing components.

Semiconductor Replacement. Semiconductor devices used in this instrument should not be replaced unless actually defective. If removed from their sockets during routine maintenance, return them to their original sockets. Unnecessary replacement may affect the calibration of this instrument. When replaced, check the operation of that part of the instrument which may be affected.

Replacement devices should be of the original type or a direct replacement. Replace in the same manner as the original. Fig. 8-1 (located in diagram section) shows the lead configurations of the semiconductor devices used in this instrument. When replacing, check the manufacturer's basing diagram for correct basing.

Interconnecting Pin Replacement. Two methods of interconnection are used in this instrument to connect the circuit boards with other boards and components. When the interconnection is made with a coaxial cable, a special end-lead connector plugs into a socket on the board. Other interconnections are made with a pin soldered onto the board. Two types of mating connectors are used for these interconnecting pins. If the mating connector is mounted on a plug-on circuit board, a special socket is soldered into the board. If the mating connector is on the end of a lead, an end-lead pin connector is used which mates with the interconnecting pin. The following information provides the replacement procedure for the various interconnecting methods.

a. Coaxial-Type End-Lead Connectors

Replacement of the coaxial-type end-lead connectors requires special tools and techniques; only experienced maintenance personnel should attempt replacement of these connectors. It is recommended that the cable or wiring harness be replaced as a unit. For cable or wiring harness part numbers, see the Mechanical Parts List. An alternate method is to refer the replacement of the

defective connector ro your local Tektronix Field Office or representative.

b. Circuit-board Pins

NOTE

A circuit-board pin replacement kit including necessary tools, instructions, and replacement pins is available from Tektronix, Inc. Order Tektronix Part No. 040-0542-00.

To replace a pin which is mounted on a circuit board, first disconnect any pin connectors. Then, unsolder the damaged pin and pull it out of the circuit board with a pair of pliers. Be careful not to damage the wiring on the board with too much heat. Ream out the hole in the circuit board with a 0.031-inch drill. Remove the ferrule from the new interconnecting pin and press the new pin into the hole in the circuit board. Position the pin in the same manner as the old pin. Then, solder the pin on both sides of the circuit board. If the old pin was bent at an angle to mate with a connector, bend the new pin to match the associated pins.

. Circuit Board Pin Sockets

The pin sockets on the circuit boards are soldered to the rear of the board. To replace one of these sockets, first unsolder the pin (use a vacuum-type desoldering tool to remove excess solder). Then straighten the tabs on the socket and remove it from the hole in the board. Place the new socket in the circuit board hole and press the tabs down against the board. Solder the tabs of the socket to the circuit board, being careful that solder does not flow into the socket.

NOTE

The spring tension of the pin sockets ensures a good connection between the circuit board and the pin. This spring tension can be destroyed by using the pin sockets as a connecting point for spring-loaded probe tips, alligator clips, etc.

d. End-Lead Pin Connectors

The pin connectors used to connect the wires to the interconnecting pins are clamped to the ends of the associated leads. To replace damaged end-lead pin connectors, remove the old pin connector from the end of the lead and clamp the replacement connector to the lead.

REV JUL 1986 5-5

Maintenance-7B53A/7B53AN

Some of the pin connectors are grouped together and mounted in a plastic holder; the overall result is that these connectors are removed and installed as a multi-pin connector. To provide correct orientation of this multi-pin connector when it is replaced, an arrow (or dot) stamped on the circuit board and a matching arrow is molded into the plastic housing of the multi-pin connector. Be sure these arrows are aligned as the multi-pin connector is replaced. If the individual end-lead pin connectors are removed from the plastic holder, note the color of the individual wires for replacement.

Switch Replacement. Two type of switches used in the 7B53A/7B53AN are the pushbutton switches and the camtype switch. The following special maintenance information is provided.


a. PUSHBUTTON SWITCHES. Use the following procedure to replace pushbutton switches:

NOTE


See Mechanical Parts exploded views to aid in pushbutton switch removal.

- 1. Set the TIME/DIV OR DLY TIME and DLYD Time/Division switch to AMPL to provide easy access to the setscrew on the clear plastic flange and to facilitate replacement of the Time/Division switch.
- 2. Loosen the setscrews and remove the LEVEL, SLOPE, POSITION, FINE, VARIABLE, and DLY'D TRIG LEVEL controls. Loosen two setscrews and remove the DLY'D Time/Division knob. Loosen one setscrew and remove the clear plastic flange associated with the TIME/DIV OR DLY TIME switch (setscrew behind the front subpanel).
- 3. Remove the spring from the 7B53A/7B53AN release latch.
- 4. Remove front panel to gain access to pushbutton switch mounting screws.
- 5. Loosen four screws holding the front subpanel to the chassis and the screws holding the switch to be replaced to the front subpanel.

- 6. Loosen any multi-pin connector(s) associated with the switch being replaced and unsolder leads or components where necessary.
- 7. When the switch being replaced is clear from external connection, remove the complete switch assembly.
- 8. To replace the pushbutton switch, reverse the above procedure. Observe the following precautions:
 - a. Make sure that the clear plastic flange and the DLY'D Time/Division knob are replaced at the same switch position from which they were removed (AMPL).
 - b. When replacing the DLY'D Time/Division knob and the clear plastic flange, slide the plastic flange onto the shaft but do not tighten. Then install the DLY'D Time/Division knob (it takes a little pressure) and tighten in place. Next, push the clear plastic flange (from behind the front subpanel) until it seats properly with the DLY'D Time/Division knob and lock in place. This will prevent backlash between the clear plastic and the DLY'D Time/Division knob as the cam is rotated.
- b. CAM-TYPE SWITCH. The cam switch used in the 7B53A/7B53AN consists of two rotating cams (front portion for TIME/DIV OR DLY TIME and rear portion for DLY'D Time/Division) which mate with contacts on an adjacent Interface circuit board. These contacts are activated by lobes on the cams as the switch is rotated. The switch can be disassembled for inspection, cleaning, repair, or replacement, but it is recommended that the switch be removed from the instrument only as a unit. See Fig. 5-2 for special instructions on cam-switch removal.

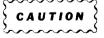

Repair of the cam switch should be undertaken only by skilled maintenance personnel. Switch alignment and contact spacing must be carefully maintained for proper operation of the switch. The cam switch repair kit (Tektronix Part No. 040-0541-00) contains special alignment tools for use in repairing or replacing the switch contacts. For information or assistance on maintenance of the cam switch, contact your local Tektronix Field Office or representative.

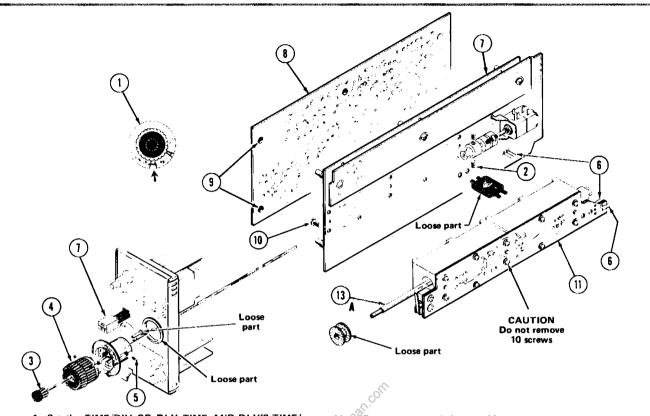

- 1. Set the TIME/DIV OR DLY TIME AND DLY'S TIME/ Division switches to AMPL to provide easy access to the setscrew on the clear plastic flange (rear of front subpanel) and to facilitate replacement of the switches.
- 2. Loosen two setscrews to allow removal of VARIABLE control shaft (rotate the VARIABLE control as necessary).
- 3. Remove VARIABLE knob and shaft through front of instrument.
- 4. Loosen two setscrews and remove DLY'D Time/Division knob.
- 5. Loosen setscrews (located rear of front subpanel) and remove clear plastic flange.
- Remove two interconnecting cables from rear of readout board (7B53A only) and one cable from interface board (rear of cam-switch.
- 7. Remove MAG switch extension from switch and remove extension through front panel.
 - 8. Remove four interconnecting cables from sweep board.
- 9. Remove six screws, from sweep board and $\ensuremath{\textit{rem}}$ ove sweep board.
- 10. Remove eight screws holding cam-switch assembly to Interface board (six screws 7B53AN).

CAUTION

Do not remove screws holding Readout board to cam-switch (7B53A only).

- 11. Remove cam switch assembly.
- 12. Follow the procedure as given in the switch repair kit to remove, replace, etc., the contacts on the Interface board.
- 13. To replace the cam switch, reverse the above procedure. Observe the following precautions.
 - a. The innerconcentric shaft of the cam switch must be properly aligned for correct switch operation. Insert innerconcentric shaft into rear of cam switch and push all the way (it may be necessary to rotate shaft slightly). Rotate shaft fully clockwise (as viewed from rear of cam switch) and pull outward to lock into place.
 - b. When fastening the cam-switch to the Interface board, tighten the screws evenly, (recommended torque is three inch pounds).
 - c. When replacing the sweep board, do not apply must pressure until it is certain that all pins from the Interface board have mated with the connectors on the Sweep board.
 - d. Make sure that the clear plastic flange and the DLY'D Time/Division knob replaced at the same switch position from which they were removed (AMPL)
 - e. When replacing the DLY'D Time/Division knob and the clear plastic flange slide the flange onto the shaft but do not tighten. Then install the DLY'D Time/Division knob (it takes a little pressure) and tighten in place. Next, push the clear plastic flange (from behind the front sub-panel) until it seats properly with the DLY'D Time/Division knob and lock in place. This will assure no backlash between the DLY'D Time/Division knob and the clear plastic flange as the cam is rotated.

1342-34

Fig. 5-2. Cam Switch Removal.

OPTIONS

Information pertaining to Option 5 can be found in Tektronix manual part number: 070-1471-00.

http://www.abarnan.com

@ JUN 1980 6-1

REPLACEABLE ELECTRICAL PARTS

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

SPECIAL NOTES AND SYMBOLS

X000 Part first added at this serial number
00X Part removed after this serial number

ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

ABBREVIATIONS

ACTR	ACTUATOR	PLSTC	PLASTIC
ASSY	ASSEMBLY	QTZ	QUARTZ
CAP	CAPACITOR	RECP	RECEPTACLE
CER	CERAMIC	RES	RESISTOR
CKT	CIRCUIT	RF	RADIO FREQUENCY
COMP	COMPOSITION	SEL	SELECTED
CONN	CONNECTOR	SEMICOND	SEMICONDUCTOR
ELCTLT	ELECTROLYTIC	SENS	SENSITIVE
ELEC	ELECTRICAL	VAR	VARIABLE
INCAND	INCANDESCENT	ww	WIREWOUND
LED	LIGHT EMITTING DIODE	XFMR	TRANSFORMER
NONWIR	NON WIREWOUND	XTAL	CRYSTAL

REV DEC 1982 7-1

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip Code
00213	NYTRONICS COMPONENTS GROUP INC SUBSIDIARY OF NYTRONICS INC	ORANGE ST	DARLINGTON SC 29532
00853	SANGAMO WESTON INC COMPONENTS DIV	SANGAMO RD PO BOX 128	PICKENS SC 29671-9716
01121	ALLEN-BRADLEY CO	1201 SOUTH 2ND ST	MILWAUKEE WI 53204-2410
01963	CHERRY ELECTRICAL PRODUCTS CORP	1201 SOUTH 2ND ST 3600 SUNSET AVE	WAUKEGAN IL 60087-3214
02111	HAMILTON STANDARD CONTROLS INC	17070 E GALE AVE	CITY OF INDUSTRY CA 91749
	SPECTROL DIV	P 0 BOX 1220	
02114	AMPEREX ELECTRONIC CORP FERROXCUBE DIV	5083 KINGS HWY	SAUGERTIES NY 12477
02735	RCA CORP SOLID STATE DIVISION	ROUTE 202	SOMERVILLE NJ 08876
03 50 8	GENERAL ELECTRIC CO SEMI-CONDUCTOR PRODUCTS DEPT	W GENESEE ST	AUBURN NY 13021
03888	PYROFILM DIV DIV OF KDI ELECTRONICS INC	60 S JEFFERSON RD	WHIPPANY NJ 07981-1001
04222	AVX CERAMICS DIV OF AVX CORP	19TH AVE SOUTH P O BOX 867	MYRTLE BEACH SC 29577
04713	MOTOROLA INC SEMICONDUCTOR PRODUCTS SECTOR	5005 E MCDOWELL RD	PHOENIX AZ 85008-4229
05397	UNION CARBIDE CORP MATERIALS SYSTEMS DIV	11901 MADISON AVE	CLEVELAND OH 44101
07263	FAIRCHILD SEMICONDUCTOR CORP NORTH AMERICAN SALES SUB OF SCHLUMBERGER LTD MS 118	10400 RIDGEVIEW CT	CUPERTINO CA 95014
07716	TRW INC TRW IRC FIXED RESISTORS/BURLINGTON	2850 MT PLEASANT AVE	BURLINGTON IA 52601
10389	LICON DIV OF ILLINOIS TOOL WORKS INC	1714 N DAMEN AVE	CHICAGO IL 60647-5509
12697	CLAROSTAT MFG CO INC	LOWER WASHINGTON ST	DOVER NH 03820
13511	AMPHENOL CADRE DIV BUNKER RAMO CORP	7:	LOS GATOS CA
14433	ITT SEMICONDUCTORS DIV	in	WEST PALM BEACH FL
15238	ITT SEMICONDUCTORS A DIVISION OF INTERNATIONAL TELEPHONE AND TELEGRAPH CORP	2850 MT PLEASANT AVE 1714 N DAMEN AVE LOWER WASHINGTON ST 500 BROADWAY P 0 BOX 168	LAWRENCE MA 01841-3002
19647	CADDOCK ELECTRONICS INC	1717 CHICAGO AVE	RIVERSIDE CA 92507-2302
19701	MEPCO/CENTRALAB A NORTH AMERICAN PHILIPS CO	P 0 BOX 760 550 HIGH ST HWY 276 SE PO BOX 5928	MINERAL WELLS TX 76067-0760
24546	CORNING GLASS WORKS	550 HIGH ST	BRADFORD PA 16701-3737
31433	UNION CARBIDE CORP	HWY 276 SE	GREENVILLE SC 29606
01.00	ELECTRONICS DIV	PO 80X 5928	GIETITEE OF COOP
31918	ITT SCHADOW INC	8081 WALLACE RD	EDEN PRAIRIE MN 55344-2224
32997	BOURNS INC	1200 COLUMBIA AVE	RIVERSIDE CA 92507-2114
02001	TRIMPOT DIV	TEGO OPERIDIA VIE	171 FUCTOR MY OFFICE PATA
33095	SPECTRUM CONTROL INC	2185 WEIGHT ST	ERIE PA 16505
50434	HEWLETT-PACKARD CO	370 W TRIMBLE RD	SAN JOSE CA 95131
50 10 ∃	OPTOELECTRONICS DIV	OF OUR PRESENCE THE	WHI COOF MY DOTAL
52648	PLESSEY TRADING CORP PLESSEY OPTOELECTRONICS AND	1641 KAISER AVE	IRVINE CA 92714-5703
52763	MICROWAVE STETTNER ELECTRONICS INC	6135 AIRWAYS BLVD PO BOX 21947	CHATTANOOGA TN 37421-2970
54 5 83	TDK ELECTRONICS CORP	12 HARBOR PARK DR	PORT WASHINGTON NY 11550
55680	NICHICON /AMERICA/ CORP	927 E STATE PKY	SCHAUMBURG IL 60195-4526
56289	SPRAGUE ELECTRIC CO WORLD HEADQUARTERS	92 HAYDEN AVE	LEXINGTON MA 02173-7929
57668	R-OHM CORP	16931 MILLIKEN AVE	IRVINE CA 92713
58361	GENERAL INSTRUMENT CORP OPTOELECTRONICS DIV	3400 HILLVIEW AVE	PALO ALTO CA 94304-1319
58854	GTE PRODUCTS CORP LIGHTING PRODUCTS GROUP	60 BOSTON ST	SALEM MA 01970-2147
59660	TUSONIX INC	7741 N BUSINESS PARK DR PO BOX 37144	TUCSON AZ 85740-7144
59821	MEPCO/CENTRALAB A NORTH AMERICAN PHILIPS CO	7158 MERCHANT AVE	EL PASO TX 79915-1207
749 70	JOHNSON E F CO	299 10TH AVE S W	WASECA MN 56093-2539

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

Manufacturer	Address	City, State, Zip Code
IRC ELECTRONIC COMPONENTS PHILADELPHIA DIV TRW FIXED RESISTORS	401 N BROAD ST	PHILADELPHIA PA 19108-1001
TEKTRONIX INC	14150 SW KARL BRAUN DR PO BOX 500 MS 53-111	BEAVERTON OR 97707-0001
MEPCO/ELECTRA INC	22 COLUMBIA RD	MORRISTOWN NJ 07960
DALE ELECTRONICS INC	2064 12TH AVE PO BOX 609	COLUMBUS NE 68601-3632
ZMAN AND ASSOCIATES	7633 S 180TH	KENT WA 98032
	IRC ELECTRONIC COMPONENTS PHILADELPHIA DIV TRW FIXED RESISTORS TEKTRONIX INC MEPCO/ELECTRA INC DALE ELECTRONICS INC	IRC ELECTRONIC COMPONENTS PHILADELPHIA DIV TRW FIXED RESISTORS TEKTRONIX INC 14150 SW KARL BRAUN DR PO BOX 500 MS 53-111 MEPCO/ELECTRA INC DALE ELECTRONICS INC 2064 12TH AVE PO BOX 609



REV MAR 1988

	Tektronix	Serial/Asse		Name & Description	Mfr.	Mfr. Part No.
Component No.	Part No.	Effective	Decont	Name & Description	Code	na 1964 ka 1945 ng 1965 ng 196
A1	670-2257-00	B010100	B089999	CIRCUIT BD ASSY:INTERFACE (7B53A ONLY)	80009	670-2257-00
A1	670-2257-02	8090000	8209999	CIRCUIT BD ASSY:INTERFACE (7853A ONLY)	80009	670-2257-02
A1	670-2257-04	B210000		CIRCUIT BD ASSY:INTERFACE (7B53A ONLY)	80009	670-2257-04
A1	670-1863-00	B010100	B019999	CIRCUIT BD ASSY:INTERFACE (7B53AN ONLY)	80009	6 70- 1863-00
A1	670-1863-01	B020000	B089999	CIRCUIT BD ASSY:INTERFACE (7853AN ONLY)	80009	670-1863-01
A1	670 - 1863-02	B09 000 0		CIRCUIT BD ASSY:INTERFACE (7B53AN ONLY)	80009	670- 1863-02
A 2	670-1869-00			CIRCUIT BD ASSY:TRIGGER SOURCE SW	80009	670-1869-00
A2 A3	670-1868-00			CIRCUIT BD ASSY:TRIGGER COUPLING SW	80009	670-1868-00
A3 A4	670-1865-01	8010100	B069999	CIRCUIT BD ASSY:TRIGGER	80009	670-1865-01
A4 A4	670-1865-02		B209999	CIRCUIT BD ASSY:TRIGGER	80009	670-1865-02
	670-1865-04		DZ03333	CIRCUIT BD ASSY:TRIGGER	80009	670-1865-04
A4	0/0-1003-04	DZ10000		(7B53A ONLY)	00000	0,0 1303 04
A4	670-1865-00	8010100	B019999	CIRCUIT BD ASSY:TRIGGER	80009	670-1865-00
	670-1865-01		B069999	CIRCUIT BD ASSY:TRIGGER	80009	670-1865-01
A4	670-1865-02		0003333	CIRCUIT BD ASSY:TRIGGER	80009	670-1865-02
A4	0/0-1005-02	6070000		(7B53AN ONLY)	00000	0/0 1003 UE
ar.	C70 10C7 00			CIRCUIT BD ASSY:TRIGGER MODE SW	80009	670-1867-00
A5	670-1867-00	0010100	P000000	CIRCUIT BD ASSY:SWEEP	80009	670-1864-00
A6	670-1864-00		B089999		80009	670-1864-01
A6	670-1864-01		B 2099 99	CIRCUIT BD ASSY:SWEEP	80009	670-1864-02
A6	670-1864-02		B229999	CIRCUIT BD ASSY:SWEEP	80009	670-1864-03
A6	670-1864-03		B241889	CIRCUIT BD ASSY:SWEEP		670-1864-04
A6	67 0- 1864-04	B241890		CIRCUIT BD ASSY:SWEEP	80009	
A7	670-1866-00		B209999	CIRCUIT BD ASSY: DELAYED COUPLING	80009	670-1866-00
A7	670-1866-01	B210000		CIRCUIT BD ASSY: DELAYED COUPLING	80009	670-1866-01
A8	67 0- 2258-01	B010100	8179999	CIRCUIT BD ASSY:READOUT (7853A INCLUDES READOUT AND ACTUATOR)	80009	670-2258-01
A8	670-2258-00	B010100	8179999	CIRCUIT BD ASSY:READOUT (7853A,READOUT ONLY,SUBPART OF 670-2258-01)	80009	670-2258-00
A8	6 70- 2258-00	B180000	B192519	ČIRCUIT BD ASSY:READOUT (7B53A ONLY)	80009	670-2258-00
A8	670-2258-02	B192520	B241159	CIRCUIT BD ASSY:READOUT (7853A ONLY)	80009	670-2258-02
A8	670-2258-03	B241160		CIRCUIT BD ASSY:READOUT (7853A ONLY)	80009	670-2258-03
A9	670-2216-00			CIRCUIT BD ASSY:TRIGGER SHIELD	80009	670-2216-00
C2	283-0636-00			CAP, FXD, MICA DI:36PF, 1.4%, 100V	00853	D155E360G0
C16	281-0092-00			CAP, VAR, CER DI:9-35PF, 200V	33095	53-717-001 D9-35
C17	281-0526-00			CAP, FXD, CER DI:1.5PF,+/-0.5PF,500V	52763	2RDPLZ007 1P50DS
C23	281-0549-00			CAP.FXD.CER DI:68PF.10%.500V	52763	2RDPLZ007 68P 0 KU
C25	281-0601-00			CAP, FXD, CER DI: 7.5PF, +/-0.5PF, 500V	52763	2RDPLZ007 7P50DC
C26	281-0628-00			CAP, FXD, CER DI:15PF, 5%, 500V	52763	2RDPLZ007 15POJC
C28	283-0068-00			CAP, FXD, CER DI:0.01UF, +100-0%, 500V	59660	871-533E103P
C41	283-0068-00			CAP, FXD, CER DI: 0.01UF, +100-0%, 500V	59660	871-533E103P
C43	283-0599-00	B010100	B209999	CAP, FXD, MICA DI:98PF, 5%, 500V	00853	D105F980J0
C43	281-0512-00		DE00000	CAP, FXD, CER DI:27PF,+/-2.7PF,500V	52763	2RDPLZ007 27P0KC
C51	281-0512-00	DE10000		CAP, FXD, CER DI:2.7PF,+/-0.25PF,500V	52763	2RDPLZ007 2P70CC
C31	201-0347-00			(7B53A ONLY)	32,00	2101 22007 217000
C51	281-0547-00	B020000		CAP,FXD,CER DI:2.7PF,+/-0.25PF,500V (7B53AN ONLY)	52763	2RDPLZ007 2P70CC
050	000 0000 00			CAR EVE CER DI LA GOOVE LOG COM CEN	E0001	200116052227
C52	283-0080-00	0010100	D000000	CAP, FXD, CER DI: 0.022UF, +80-20%, 25V	59821	200060E223Z
C55	281-0523-00		B209999	CAP, FXD, CER DI: 100PF, 20%, 350V	52763	2RDPLZ007 100PMU
C55	283-0639-00	B210000		CAP, FXD, MICA DI:56PF, 1%, 100V	00853	D155E560F0
C60	281-0547-00			CAP,FXD,CER DI:2.7PF,+/-0.25PF,500V	52763	2RDPLZ007 2P70CC

7-4 REV MAR 1988

Component No.	Tektronix Part No.	Serial/Ass Effective	•	Name & Description	Mfr. Code	Mfr. Part No.
C60	281-0547-00	B020000		(7B53A ONLY) CAP,FXD,CER DI:2.7PF,+/-0.25PF,500V	52763	2RDPLZ007 2P70CC
C63 C63 C64 C66 C68	283-0000-00 281-0605-00 281-0518-00 283-0080-00 283-0080-00		B209999	(7853AN ONLY) CAP,FXD,CER DI:0.001UF,+100-0%,500V CAP,FXD,CER DI:200PF,10%,500V CAP,FXD,CER DI:47PF,+/-9.4PF,500V CAP,FXD,CER DI:0.022UF,+80-20%,25V CAP,FXD,CER DI:0.022UF,+80-20%,25V	59660 59660 52763 59821 59821	831-610-Y5U0102P 301000Y5D201K 2RDPLZ007 47POMU 2DDU60E223Z 2DDU60E223Z
C70 C74 C82 C101 C103 C103	283-0080-00 283-0080-00 283-0080-00 290-0523-00 283-0010-00 283-0341-00		8049999	CAP, FXD, CER DI:0.022UF, +80-20%, 25V CAP, FXD, CER DI:0.022UF, +80-20%, 25V CAP, FXD, CER DI:0.022UF, +80-20%, 25V CAP, FXD, ELCTLT:2.2UF, 20%, 25V CAP, FXD, CER DI:0.05UF, +80-20%, 50V CAP, FXD, CER DI:0.047UF, 10%, 100V	59821 59821 59821 05397 04222 04222	2DDU60E223Z 2DDU60E223Z 2DDU60E223Z T368A225M020AS SR305E503ZAA SR301C473KAA
C134 C136 C138	295-0156-00			CAP SET,MATCHED:(2) 1UF,(2)0.01UF,(1)10.1UF MATCHED 0.75% (C134,C136,C138,C150 AND C152 FURNISHED AS A UNIT) (INDIVIDUAL TIMING CAPACITORS IN THIS ASSY MUST BE ORDERED BY THE 9-DIGIT PART NUMBER LETTER SUFFIX AND TOLERANCE PRINTED ON THE TIMING CAP TO BE REPLACED. THE TOLERANCE AND LETTER SUFFIX SHOULD BE THE SAME FOR ALL OF THE TIMING CAPS IN THE ASSY. EXAMPLE: 285-XXXX-XX F-) (SEE FOOTNOTE ON C134) (SEE FOOTNOTE ON C134)	80009	295-0156-00
C141 C141 C141 C150	290-0522-00 283-0111-00 283-0178-00	B110000	B019999 B236699	CAP, FXD, ELCTLT: 1UF, 20%, 50V CAP, FXD, CER DI: 0.1UF, 20%, 50V CAP, FXD, CER DI: 0.1UF, 20%, 100V (SEE FOOTNOTE ON C134)	05397 05397 05397	T368A105M050AZ C330C104M5U1CA C330C104Z1U1CA
C152 C230 C232 C234 C236 C238	283-0000-00 283-0178-00 283-0000-00 283-0178-00 283-0000-00			(SEE\FOOTNOTE ON C134) CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:0.1UF, 20%, 100V CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:0.1UF, 20%, 100V CAP, FXD, CER DI:0.001UF, +100-0%, 500V	59660 05397 59660 05397 59660	831-610-Y5U0102P C330C104Z1U1CA 831-610-Y5U0102P C330C104Z1U1CA 831-610-Y5U0102P
C240 C242 C244 C301 C305 C310	283-0178-00 283-0000-00 283-0178-00 281-0178-00 283-0081-00 283-0000-00	8010100 B210000	B209999	CAP, FXD, CER DI:0.1UF, 20%, 100V CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:0.1UF, 20%, 100V CAP, VAR, PLASTIC:1-3.5PF, 500V CAP, FXD, CER DI:0.1UF, +80-20%, 25V CAP, FXD, CER DI:0.001UF, +100-0%, 500V	05397 59660 05397 80031 59821 59660	C330C104Z1U1CA 831-610-Y5U0102P C330C104Z1U1CA 2805D013R5BH02F0 2DDU69E104Z 831-610-Y5U0102P
C311 C312 C313 C313 C317 C317	281-0523-00 283-0081-00 281-0542-00 281-0605-00 283-0079-00 283-0002-00	B210000 B010100 B130000 B010100	B129999 B209999 B209999	CAP, FXD, CER DI: 100PF, 20%, 350V CAP, FXD, CER DI: 0.1UF, +80-20%, 25V CAP, FXD, CER DI: 18PF, 10%, 500V CAP, FXD, CER DI: 200PF, 10%, 500V CAP, FXD, CER DI: 0.01UF, 20%, 250V CAP, FXD, CER DI: 0.01UF, +80-20%, 500V	52763 59821 52763 59660 04222 59821	2RDPLZ007 100PMU 2DDU69E104Z 2RDPLZ007 18POKC 301000Y5D201K SR503C103MAA D103Z40Z5ULADEG
C319 C323 C323 C324 C330 C330	290-0517-00 281-0511-00 281-0123-00 283-0633-00 283-0212-00 283-0203-00	B210000 B230000 B010100 B010100	B209999 B229999 B209999 B209999	CAP, FXD, ELCTLT: 6.8UF, 20%, 35V CAP, FXD, CER DI: 22PF, +/-2.2PF, 500V CAP, VAR, CER DI: 5-25PF, 100V CAP, FXD, MICA DI: 77PF, 1%, 100V CAP, FXD, CER DI: 2UF, 20%, 50V CAP, FXD, CER DI: 0.47UF, 20%, 50V	05397 52763 59660 00853 04222 04222	T368B685M035AZ 2RDPLZ007 22POKC 518-000A5-25 D155E770F0 SR405E205MAA SR305SC474MAA
C340	281-0513-00	B010100	B147117	CAP,FXD,CER DI:27PF,+/-5.4PF,500V (7B53A ONLY)	52763	2RDPLZ007 27POMP
C340	281-0605-00	8147118	B209999	CAP, FXD, CER DI:200PF, 10%, 500V (7B53A ONLY)	59660	301000Y5D201K
C340	281-0513-00	B010100	B144429	CAP, FXD, CER DI: 27PF,+/-5.4PF,500V	52763	2RDPLZ007 27POMP

Camponent No.	Tektronix Part No.	Serial/Assa Effective		Name & Description	Mfr. Code	Mfr. Part No.
C340	281-0605-00	B144430	B209999	(7853AN ONLY) CAP,FXD,CER DI:200PF,10%,500V	59660	301000Y5D201K
C344	281-0513-00	B010100	B147117	(7853AN ONLY) CAP,FXD,CER DI:27PF,+/-5.4PF,500V	52763	2RDPLZ007 27POMP
C344	281-0605-00	B147118	B209999	(7B53A ONLY) CAP,FXD,CER DI:200PF,10%,500V (7B53A ONLY)	59660	301000Y5D201K
C344	281-0513-00	B010100	B144429	CAP, FXD, CER DI: 27PF, +/-5.4PF, 500V (7B53A ONLY)	52763	2RDPLZ007 27POMP
C344	281-0605-00	B144430	B209999	CAP, FXD, CER DI: 200PF, 10%, 500V (7B53AN ONLY)	59660	301000Y5D201K
C347	283-0000-00	B010100	B209999	CAP, FXD, CER DI:0.001UF, +100-0%, 500V	59660	831-610-Y5U0102P
C350 C359	283-0203-00 283-0114-00		8019999	CAP,FXD,CER DI:0.47UF,20%,50V CAP,FXD,CER DI:1500PF,5%,200V (7853AN ONLY)	04222 59660	SR305SC474MAA 805-534-Y500152J
C363	283-0047-00		8209999	CAP, FXD, CER DI: 270PF, 5%, 500V	59660 55680	0831604Z5F0271J ULB1V4R7TAAANA
C370 C372	290 -0782-00 29 0-0782- 00			CAP, FXD, ELCTLT: 4.7UF, +75-10%, 35VDC CAP, FXD, ELCTLT: 4.7UF, +75-10%, 35VDC	55680	ULB1V4R7TAAANA
C374	290-0782-00			CAP, FXD, ELCTLT: 4.7UF, +75-10%, 35VDC	55680	ULB1V4R7TAAANA
C377	281-0504-00		B209999	CAP, FXD, CER DI: 10PF, +/-1PF, 500V	54583	TCC20CH2H100FYA
C396	290-0522-00		B209999	CAP, FXD, ELCTLT: 1UF, 20%, 50V	05397	T368A105M050AZ
C401 C405	281-0091-00 283-0081-00		B209999	CAP, VAR, CER DI:2-8PF, 350V CAP, FXD, CER DI:0.1UF, +80-20%, 25V	33 09 5 59821	53-717-001 A2-8 2DDU69E104Z
C410	283-0001-00			CAP, FXD, CER DI:0.107, 760-20%, 25V CAP, FXD, CER DI:0.001UF, +100-0%, 500V	59660	831-610-Y5U0102P
C411	283-0000-00		B209999	CAP, FXD, CER DI:0.001UF, +100-0%, 500V	59660	831-610-Y5U0102P
C411	281-0523-00	B210000		CAP, FXD, CER DI:100PF, 20%, 350V	52763	2RDPLZ007 100PMU
C412	283-0081-00			CAP, FXD, CER DI:0.1UF, +80-20%, 25V	59821	200U69E104Z
C414	281-0542-00		B209999	CAP, FXD, CER DI-18PF, 10%, 500V	52763 04222	2RDPLZ007 18POKC SR503C103MAA
C417 C417	283-0079-00 283-0002-00		8209999	CAP,FXD,CER_DI:0.01UF,20%,250V CAP,FXD,CER_DI:0.01UF,+80-20%,500V	59821	D103Z40Z5ULADEG
C417	290-0517-00		B209999	CAP, FXD, ELCTLT: 6.8UF, 20%, 35V	05397	T368B685M035AZ
C423	281-0628-00		B229999	CAP, FXD, CER DI: 15PF, 5%, 500V	52763	2RDPLZ007 15POJC
C423	281-0123-00	B230000		CAP, VAR, CER DI:5-25PF, 100V	59660	518-000A5-25
C424	283-0633-00		B209999	CAP, FXD, MICA DI:77PF, 1%, 100V	00853	0155E770F0
C430	283-0203-00		0000000	CAP, FXD, CER DI: 0.47UF, 20%, 50V	04222 04222	SR305SC474MAA
C431	283-0212-00		B209999	CAP,FXD,CER DI:2UF,20%,50V CAP,FXD,CER DI:27PF,+/-5.4PF,500V	52763	SR405E205MAA 2RDPLZ007 27POMP
C440 C444	281 - 0513-00 281 - 0513-00		B209999 B209999	CAP, FXD, CER DI:27PF,+/-5.4PF,500V	52763	2RDPLZ007 27POMP
C447	283-0000-00		B209999	CAP, FXD, CER DI:0.001UF, +100-0%, 500V	59660	831-610-Y5U0102P
C450 C459	283-0203-00 283-0114-00		B019999	CAP,FXD,CER DI:0.47UF,20%,50V CAP,FXD,CER DI:1500PF,5%,200V (7B53AN ONLY)	0 4222 59660	SR305SC474MAA 805-534-Y5D0152J
C463	283 -004 7-00		B209999	CAP, FXD, CER DI: 270PF, 5%, 500V	59660	0831604Z5F0271J
C468	283-0000-00		B209999	CAP, FXD, CER DI: 0.001UF, +100-0%, 500V	59660	831-610-Y5U0102P
C468 C477	283-0002-00 281-0523-00		8209999	CAP, FXD, CER DI:0.01UF, +80-20%, 500V CAP, FXD, CER DI:100PF, 20%, 350V	59821 52763	D103Z40Z5ULADEG 2RDPLZ007 100PMU
C496	290-0522-00	B010100	B209999	CAP.FXD.ELCTLT:1UF.20%.50V	05397	T368A105M050AZ
C506	290-0527-00			CAP, FXD, ELCTLT: 15UF, 20%, 20V	05397	T368B156M020AS
C519	281-0523-00			CAP, FXD, CER DI: 100PF, 20%, 350V	52763	2RDPLZ007 100PMU
C520	290-0522-00	5000000		CAP, FXD, ELCTLT: 1UF, 20%, 50V	05397	T368A105M050AZ
C527 C528	281-0650-00 283-0047-00			CAP,FXD,CER DI:18PF,10%,200V CAP,FXD,CER DI:270PF,5%,500V	59660 59660	374-018C0G0-180K 0831604Z5F0271J
C533	283-0047-00	D210000		CAP, FXD, CER DI:300PF, 10%, 1000V	59660	0838020X5F00301K
C535	290-0522-00			CAP, FXD, ELCTLT: 1UF, 20%, 50V	05397	T368A105M050AZ
C551	290-0522-00			CAP, FXD, ELCTLT: 1UF, 20%, 50V	05397	T368A105M050AZ
C555	281-0504-00			CAP, FXD, CER DI:10PF, +/-1PF, 500V	54583	TCC20CH2H100FYA
C568	281-0523-00			CAP, FXD, CER DI: 100PF, 20%, 350V	52763	2RDPLZ007 100PMU
C572	290-0524-00			CAP, FXD, ELCTLT: 4.7UF, 20%, 10V	05397	T368A475M010AZ
C578	290-0522-00			CAP, FXD, ELCTLT: 1UF, 20%, 50V	05397	T368A105M050AZ

Component No.	Tektronix Part No.	Serial/Ass Effective		Name & Description	Mfr. Code	Mfr. Part No.
C579 C580 C582 C589 C590 C591 C591	283-0003-00 290-0522-00 281-0593-00 290-0522-00 281-0523-00 281-0629-00 281-0519-00 281-0574-00	B010100 B020000	B019999 B237099	CAP, FXD, CER DI: 0.01UF, +80-20%, 150V CAP, FXD, ELCTLT: 1UF, 20%, 50V CAP, FXD, CER DI: 3.9PF, +/-0.25PF, 500V CAP, FXD, ELCTLT: 1UF, 20%, 50V CAP, FXD, CER DI: 100PF, 20%, 350V CAP, FXD, CER DI: 33PF, 5%, 600V CAP, FXD, CER DI: 47PF, +/-4.7PF, 500V CAP, FXD, CER DI: 82PF, 10%, 500V	59821 05397 52763 05397 52763 52763 52763 52763	D103Z40Z5UJDCEX T368A10SM050AZ 2RDPLZ007 3P9OCC T368A10SM050AZ 2RDPLZ007 100PMU 2RDPLZ007 33POJC 2RDPLZ007 47POKC 2RDPLZ007 82POKS
C594 C595 C610 C611 C615 C615	281-0166-00 283-0631-00 290-0523-00 281-0504-00 283-0051-00 283-0000-00	B010100 B060000	B059999	CAP,VAR,AIR DI:1.9-15.7 PF,250V CAP,FXD,MICA DI:95PF,1%,500V CAP,FXD,ELCTLT:2.2UF,20%,20V CAP,FXD,CER DI:10PF,+/-1PF,500V CAP,FXD,CER DI:0.0033UF,5%,100V CAP,FXD,CER DI:0.001UF,+100-0%,500V	74970 00853 05397 54583 04222 59660	187-0109-055 D155F950F0 T368A225M020AS TCC20CH2H100FYA SR301A332JAA 831-610-Y5U0102P
C616 C618 C637 C638 C639 C643	281-0504-00 283-0059-00 281-0518-00 281-0518-00 283-0003-00 283-0003-00	B080000		CAP, FXD, CER DI:10PF, +/-1PF, 500V CAP, FXD, CER DI:1UF, +80-20%, 25V CAP, FXD, CER DI:47PF, +/-9.4PF, 500V CAP, FXD, CER DI:47PF, +/-9.4PF, 500V CAP, FXD, CER DI:0.01UF, +80-20%, 150V CAP, FXD, CER DI:0.01UF, +80-20%, 150V	54583 31433 52763 52763 59821 59821	TCC20CH2H100FYA C330C105M5R5CA 2RDPLZ007 47P0MU 2RDPLZ007 47P0MU D103Z40Z5UJDCEX D103Z40Z5UJOCEX
C644 C647 C650 C652 C660 C663	281-0504-00 290-0523-00 290-0522-00 283-0003-00 281-0504-00 281-0504-00			CAP, FXD, CER DI:10PF,+/-1PF,500V CAP, FXD, ELCTLT:2.2UF,20%,20V CAP, FXD, ELCTLT:1UF,20%,50V CAP, FXD, CER DI:0.01UF,+80-20%,150V CAP, FXD, CER DI:10PF,+/-1PF,500V CAP, FXD, CER DI:10PF,+/-1PF,500V	54583 05397 05397 59821 54583 54583	TCC20CH2H100FYA T368A225M020AS T368A105M050AZ D103Z40Z5UJDCEX TCC20CH2H100FYA TCC20CH2H100FYA
C677 C678 C679 C680 C683 C689	281-0523-00 281-0518-00 290-0522-00 283-0000-00 281-0544-00 281-0504-00			CAP, FXD, CER DI: 100PF, 20%, 350V CAP, FXD, CER DI: 47PF, +/-9, 4PF, 500V CAP, FXD, ELCTLT: 1UF, 20%, 50V CAP, FXD, CER DI: 0.001UF, +100-0%, 500V CAP, FXD, CER DI: 5.6PF, +/0.5PF, 500V CAP, FXD, CER DI: 10PF, +/-1PF, 500V	52763 52763 05397 59660 52763 54583	2RDPLZ007 100PMU 2RDPLZ007 47POMU T368A105M050AZ 831-610-Y5U0102P 2RDPLZ007 270PM0 TCC20CH2H100FYA
C690 C691 C706 C708 C710 C713	283-0631-00 281-0166-00 283-0000-00 283-0003-00 283-0000-00 283-0003-00			CAP, FXD, MICA DI:95PF, 1%, 500V CAP, VAR, AIR DI:1.9-15.7 PF, 250V CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:0.01UF, +80-20%, 150V CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:0.01UF, +80-20%, 150V	00853 74970 59660 59821 59660 59821	D155F950F0 187-0109-055 831-610-Y5U0102P D103Z40Z5UJDCEX 831-610-Y5U0102P D103Z40Z5UJDCEX
C716 C718 C728 C731 C768 C800	283-0003-00 290-0522-00 283-0000-00 283-0000-00 281-0612-00 290-0522-00			CAP, FXD, CER DI:0.01UF, +80-20%, 150V CAP, FXD, ELCTLT:1UF, 20%, 50V CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:0.001UF, +100-0%, 500V CAP, FXD, CER DI:5.6PF, +/-0.5PF, 500V CAP, FXD, ELCTLT:1UF, 20%, 50V	59821 05397 59660 59660 52763 05397	D103Z40Z5UJDCEX T368A105M050AZ 831-610-Y5U0102P 831-610-Y5U0102P 2RDPLZ007 5P60DC T368A105M050AZ
C801 C801 C801 C803 C804 C806	290-0529-00 290-0134-00 290-0162-00 283-0003-00 290-0535-00 290-0522-00	B010100 B050000 B120000	B049999 B119999	CAP, FXD, ELCTLT: 47UF, 20%, 20V CAP, FXD, ELCTLT: 22UF, 20%, 15V CAP, FXD, ELCTLT: 22UF, 20%, 35V CAP, FXD, CER DI: 0.01UF, +80-20%, 150V CAP, FXD, ELCTLT: 33UF, 20%, 10V TANTALUM CAP, FXD, ELCTLT: 1UF, 20%, 50V	05397 05397 05397 59821 56289 05397	T362C476M020AS T110B226M015AS T110C226M035AS D103Z40Z5UJDCEX 196D336X0010KA1 T368A105M050AZ
C807 C807 C807 C809 CR31 CR109	290-0529-00 290-0134-00 290-0162-00 283-0003-00 152-0141-02 152-0141-02	B010100 B050000 B120000	B049999 B119999	CAP, FXD, ELCTLT: 47UF, 20%, 20V CAP, FXD, ELCTLT: 22UF, 20%, 15V CAP, FXD, ELCTLT: 22UF, 20%, 35V CAP, FXD, CER DI: 0.01UF, +80-20%, 150V SEMICOND DVC, DI: SW, SI, 30V, 150MA, 30V, D0-35 SEMICOND DVC, DI: SW, SI, 30V, 150MA, 30V, D0-35	05397 05397 05397 59821 03508 03508	T362C476M020AS T110B226M015AS T110C226M035AS D103Z40Z5UJDCEX DA2527 (1N4152) DA2527 (1N4152)
CR182	152-0075-00	8010100	8241889	SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7 (7B53A ONLY)	14433	G866

Component: No.	Tektronix Part No.	Serial/Asso		Name & Description	Mfr. Code	Mfr. Part No.
CR182	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR184	152-0141-02			(7B53A ONLY) SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)
CR185	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR186	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR187	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR188	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)
CR201	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR210	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR220	15 2- 0141-02			SEMICOND DVC.DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR255	15 2- 0141-02			SEMICOND DVC.DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR257	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR263	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR265	152-0141-02			SEMICOND DVC.DI:SW.SI.30V.150MA.30V.DO-35	03508	DA2527 (1N4152)
CR267	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR275	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR280	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR281	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR283				SEMICOND DVC.DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
UK203	152-0141-02					
CR285	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR288	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR306	152-0141-02	B210000		SEMICOND DVC, DI SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR307	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR308	152-0141-02	8035836	B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
			5200000	(7B53A ONLY)		
CR308	152 - 0141-02	B134215		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53AN ONLY)	03508	DA2527 (1N4152)
CR340	152-0141-02	B010100	B209999	SEMICOND DVC.DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR343	152-0141-02		B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
					03508	DA2527 (1N4152)
CR361	152-0141-02		B209999	SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35		
CR365	152-0141-02		B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR401	152-0141-02	B135836	B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR401	152-0141-02	B134215	B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
				(75B3AN ONLY)		
CR406	152-0141-02	B210000		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR407	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR409	152-0141-02		B209999	SEMICOND DVC.DI:SW.SI.30V.150MA,30V.DO-35	03508	DA2527 (1N4152)
CR440	152-0141-02		B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR443	152-0141-02		B209999	SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
			B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR461	152-0141-02	POTOTOO	0203333	36MICOM DAC.DI:3W,31,304,130M,304,00-33	03300	•
CR465	152-0141-02	B010100	B209999	SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR468	152-0141-02	B210000		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N41 52)
CR469	152-0141-02	B210000		SEMICOND DVC.DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR504	152-0141-02			SEMICOND DVC.DI:SW.SI.30V.150MA.30V.DO-35	03508	DA2527 (1N4152)
CR505	152-0141-02			SEMICOND DVC.DI:SW.SI.30V.150MA.30V.DO-35	03508	DA2527 (1N4152)
CR513	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR516	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR519	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR528	152-0141-02	B210000		SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR556	152-0141-02			SEMICOND DVC.DI:SW.SI.30V.150MA.30V.DO-35	03508	DA2527 (1N4152)
CR566	152-0141-02	2100000		SEMICOND DVC.DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR582		B010100	R2//1000	SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7	14433	G866
	152-0075-00		B241889	SEMICOND DVC.DI:SCHOTTKY.SI,15V,1.2PF,DO-35	50434	5082-2672
CR582	152-0322-00	0241090		PERIODIO DAC'OT'OCIDI IVI''21'17A''T''ELL''IM-93	J U-10-7	JUL LUIL

Component No.	Tektronix Part No.	Serial/Asse		Name & Description	Mfr. Code	Mfr. Part No.
***************************************		LITECTIVE	CONT			
CR617	152-0141-02			SEMICOND DVC.DI:SW.SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152) DA2527 (1N4152)
CR624	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR629	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35 SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	03508 03508	DA2527 (1N4152)
CR635	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR641 CR648	152-0141-02 152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CK040	132-0141-02			3Liteon Dec, D1.34, 31, 304, 130, 14, 304, 30	00000	B/E3E/ (1//13E/
CR654	152-0075-00	B010100	B241889	SEMICOND DVC, DI:SW, GE, 22V, 80MW, DO-7	14433	G866
CR655	152-0141-02		DE 11000	SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR661	152-0141-02	********		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR662	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR677	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR678	152-0075-00		B241889	SEMICOND DVC, DI:SW, GE, 22V, 80MW, DO-7	14433	G866
CR678	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR686	152-0307-00			SEMICOND DVC.DI:SW.SI.100V,0.13A,D0-92	04713	SSD1150
CR695	152-0307-00			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR697	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR717	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR728	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR731	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR735	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152)
CR736	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35	03508	DA2527 (1N4152)
CR743	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR752	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508	DA2527 (1N4152) DA2527 (1N4152)
CR776	152-0141-02			SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35	03508 03508	DA2527 (1N4152)
CR777	152-0141-02			SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	05300	UMEJET (INTIJE)
CR901	152-0075-00	B010100	B241889	SEMICOND DVC, DI:SW, GE, 22V, 80MW, D0-7	14433	G866
CR901	152-0141-02	B241890		SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR903	152-0075-00	B010100	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7 (7853A ONLY)	14433	G866
CR903	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR905	152-0075-00	B010100	8241889	SEMICOND DVC, DI:SW, GE, 22V, 80MW, D0-7 (7853A ONLY)	14433	G866
CR905	152-0141-02	8241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)
CR907	152-0075-00	B010100	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,D0-7 (7B53A ONLY)	14433	G866
CR907	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,D0-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR909	152-0075-00	B010100	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7 (7853A ONLY)	14433	6866
CR909	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)
CR911	152-0075-00	B010100	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,D0-7 (7B53A ONLY)	14433	G866
CR911	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)
CR913	152-0075-00	B010100	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,D0-7 (7B53A ONLY)	14433	G866
CR913	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR915	152-0075-00	8010100	8241889	SEMICOND DVC,DI:SW,GE,22V,80MW,D0-7 (7B53A ONLY)	14433	G866
CR915	152-0141-02	B241890		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7853A ONLY)	03508	DA2527 (1N4152)
CR917	152-0075-00	B010100	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7 (7B53A ONLY)	14433	G866
CR917	152-0141-02	8241890		SEMICOND DVC, DI:SW, SI, 30V, 150MA, 30V, DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)

Commonant No.	Tektronix Part No.	Serial/Asse		Name & Description	Mfr. Code	Mfr. Part No.
Component No. CR919	152-0075-00	·	B241889	SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7	14433	6866
CR919	152-00/3-00		D241000	(7B53A ONLY) SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR921	152-0075-00	B010100	B241889	(7B53A ONLY) SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7	14433	G866
CR921	152-0141-02	B241890		(7B53A ONLY) SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35	03508	DA2527 (1N4152)
CR923	152-0075-00	B010100	B241889	(7853A ONLY) SEMICOND DVC,DI:SW,GE,22V,80MW,DO-7 (7853A ONLY)	14433	G866
CR923	152-0141-02	B2418 90		SEMICOND DVC,DI:SW,SI,30V,150MA,30V,DO-35 (7B53A ONLY)	03508	DA2527 (1N4152)
DS8 DS8 DS8 DS30 E376	150-0048-01 150-1029-00 150-1078-00 150-0048-01 276-0543-00	B200000 B242464	8199999 8242463 8209999	LAMP, INCAND:5V, 0.06A, #683, AGED & SEL LT EMITTING DIO:GREEN, 565NM, 35MA LT EMITTING DIO:GREEN, 565NM, 20MA LAMP, INCAND:5V, 0.06A, #683, AGED & SEL SHLD BEAD, ELEK:FERRITE (NOMINAL INSTALLED, TEST SELECTED)	58854 58361 50434 58854 80009	683AS15 Q6480/MV5274C HLMP 1503 683AS15 276-0543-00
J1	131-0955-00			CONN, RCPT, ELEC: BNC, FEMALE	13511	31-279
J3 L231 L235 L239 L243 L330	131-0955-00 120-0382-00 120-0382-00 120-0382-00 120-0382-00 276-0507-00	B010100	B209999	CONN,RCPT,ELEC:BNC,FEMALE COIL,RF:210UH,+28%-43%,14 TURNS COIL,RF:210UH,+28%-43%,14 TURNS COIL,RF:210UH,+28%-43%,14 TURNS COIL,RF:210UH,+28%-43%,14 TURNS SHLD BEAD,ELEK:FERRITE	13511 80009 80009 80009 80009 02114	31-279 120-0382-00 120-0382-00 120-0382-00 120-0382-00 56-590-658/38
L431 LR580 LR650 Q52 Q61 Q66	276-0507-00 108-0333-00 108-0333-00 151-0223-00 151-0223-00 151-0190-00	B010100	B209999	SHLD BEAD, ELEK: FERRITE COIL, RF: FIXED, 881NH COIL, RF: FIXED, 881NH TRANSISTOR: NPN, SI, 625MW, TO-92 TRANSISTOR: NPN, SI, 625MW, TO-92 TRANSISTOR: NPN, SI, TO-92		56-590-658/38 108-0333-00 108-0333-00 SPS8026 SPS8026 151-0190-00
Q70 Q212 Q261 Q261 Q262 Q271	151-0220-00 151-0341-00 151-0341-00 151-0302-00 151-0341-00 151-0341-00		B049999	TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: NPN,SI,TO-106 TRANSISTOR: NPN,SI,TO-106 TRANSISTOR: NPN,SI,TO-18 TRANSISTOR: NPN,SI,TO-106 TRANSISTOR: NPN,SI,TO-106 TRANSISTOR: NPN,SI,TO-106	80009 04713 04713 04713 04713	151-0220-00 SPS6919 SPS6919 ST899 SPS6919 SPS6919
Q279 Q279 Q280 Q310 Q311 Q315	151-0341-00 151-0302-00 151-0220-00 151-1042-00 151-0221-00	B050000	B049999 B209999	TRANSISTOR: NPN,SI,TO-106 TRANSISTOR: NPN,SI,TO-18 TRANSISTOR: PNP,SI,TO-92 SEMICOND DVC SE: FET,SI,TO-92 (PART OF Q310) TRANSISTOR: PNP,SI,TO-92	04713 04713 80009 04713	SPS6919 ST899 151-0220-00 SPF627M2 151-0221-00
Q315 Q315	151-0220-00		6209999	TRANSISTOR: PNP, SI, TO-92	80009	151-0220-00
Q320 Q320 Q322 Q322 Q352 Q355	151-0367-00 151-0223-00 151-0367-00 151-0223-00 151-0199-04 151-0199-04	B210000 B010100 B210000 B210000	B209999 B209999	TRANSISTOR: NPN,SI,X-55 TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: NPN,SI,X-55 TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92	04713 04713 04713 04713 80009 80009	SPS 8811 SPS8026 SPS 8811 SPS8026 151-0199-04 151-0199-04
Q362 Q366 Q382 Q410 Q411 Q415	151-0223-00 151-0223-00 151-0188-00 151-1042-00 151-0221-00	B010100 B010100	B209999 B209999 B209999	TRANSISTOR: NPN, SI, 625MW, TO-92 TRANSISTOR: NPN, SI, 625MW, TO-92 TRANSISTOR: PNP, SI, TO-92 SEMICOND DVC SE: FET, SI, TO-92 (PART OF Q410) TRANSISTOR: PNP, SI, TO-92	04713 04713 80009 04713	SPS8026 SPS8026 151-0188-00 SPF627M2 151-0221-00
Q415 Q420 Q420	151-0220-00 151-0367-00 151-0223-00	B010100	8209999	TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: NPN, SI, X-55 TRANSISTOR: NPN, SI, 625MW, TO-92	80009 04713 04713	151-0220-00 SPS 8811 SPS8026

7-10 REV MAR 1988

Companent No.	Tektronix Part No.	Serial/Assa Effective		Name & Description	Mfr. Code	Mfr. Part No.
Q422 Q422 Q452 Q455 Q456 Q462	151-0367-00 151-0223-00 151-0199-04 151-0199-04 151-0190-00 151-0223-00	B010100 B210000 B210000 B210000 B210000	B209999	TRANSISTOR: NPN,SI,X-55 TRANSISTOR: NPN,SI,625MM,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: NPN,SI,625MW,TO-92	04713 04713 80009 80009 80009 04713	SPS 8811 SPS8026 151-0199-04 151-0199-04 151-0190-00 SPS8026
Q466 Q482 Q513 Q516 Q524 Q528	151-0223-00 151-0188-00 151-0188-00 151-0190-00 151-0301-00 151-0221-00	B010100 B010100	B209999 B209999	TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: PNP,SI,TO-18 TRANSISTOR: PNP,SI,TO-92	04713 80009 80009 80009 04713 80009	SPS8026 151-0188-00 151-0188-00 151-0190-00 ST898 151-0221-00
Q538 Q544 Q547 Q551 Q560 Q562	151-0190-00 151-0223-00 151-0223-00 151-0190-00 151-0190-00 151-0188-00			TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92	80009 04713 04713 80009 80009 80009	151-0190-00 SPS8026 SPS8026 151-0190-00 151-0190-00 151-0188-00
Q564 Q568 Q584 Q596 Q596 Q603	151-0220-00 151-0220-00 151-0221-00 151-1004-00 151-1078-00 151-0223-00	B010100 B18 630 0	B186299	TRANSISTOR: PNP, SI.TO-92 TRANSISTOR: PNP, SI.TO-92 TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: FET, N-CHAN, SI, TO-106 TRANSISTOR: FET, N-CHAN, SI, TO-92 TRANSISTOR: NPN, SI, 625MW, TO-92	80009 80009 80009 04713 04713	151-0220-00 151-0220-00 151-0221-00 SPF3034 SPF3040 SPS8026
Q608 Q610 Q620 Q628 Q633 Q639	151-0223-00 151-0190-00 151-0221-00 151-0192-00 151-0190-00 151-0223-00			TRANSISTOR: NPN, SI, 625MW, TO-92 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: NPN, SI, 625MW, TO-92	04713 80009 80009 04713 80009 04713	SPS8026 151-0190-00 151-0221-00 SPS8801 151-0190-00 SPS8026
Q642 Q647 Q654 Q656 Q659 Q665	151-0223-00 151-0221-00 151-0221-00 151-0220-00 151-0223-00 151-0223-00			TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: NPN,SI,625MW,TO-92 TRANSISTOR: NPN,SI,625MW,TO-92	04713 80009 80009 80009 04713 04713	SPS8026 151-0221-00 151-0221-00 151-0220-00 SPS8026 SPS8026
Q671 Q678 Q682 Q684 Q688 Q695	151-0220-00 151-0289-00 151-0190-00 151-0259-00 151-0259-00 151-0216-00			TRANSISTOR: PNP, SI, TO-92 TRANSISTOR: PNP, SI, TO-18 TRANSISTOR: NPN, SI, TO-92 TRANSISTOR: NPN, SI, TO-106 TRANSISTOR: NPN, SI, TO-106 TRANSISTOR: PNP, SI, TO-92	80009 80009 80009 07263 07263 04713	151-0220-00 151-0289-00 151-0190-00 S39288 S39288 SPS8803
Q696 Q698 Q720 Q724 Q734 Q754	151-0216-00 151-0220-00 151-0192-00 151-0190-00 151-0219-00 151-0224-00			TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: PNP,SI,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: NPN,SI,TO-92 TRANSISTOR: PNP,SI,R-124 TRANSISTOR: NPN,SI,TO-92	04713 80009 04713 80009 07263 04713	SPS8803 151-0220-00 SPS8801 151-0190-00 S022650 SPS6917
Q764 R1 R2 R4 R4 R5 R5	151-0190-00 323-0452-00 315-0101-00 311-1192-00 311-2303-00 311-1322-00 311-2304-00	B010100 B242520 B010100 B242520	B242519 B242519	TRANSISTOR:NPN,SI,TO-92 RES,FXD,FILM:499K OHM,1%,0.5W,TC=TO RES,FXD,FILM:100 OHM,5%,0.25W RES,VAR,NONW:PNL,10K OHM,1W,W/SW RES,VAR,NONW:PNL,10K OHM,10%,LINEAR,0.25W RES,VAR,NONW:PNL,5K OHM,1W,W/SW RES,VAR,NONW:PNL,5K OHM,1W,W/SW	80009 75042 57668 12697 12697 12697 12697	151-0190-00 CECT0-4993F NTR25J-E 100E 381-CM39695 CM45205 381-CM39701 CM45204
R7 R7 R8	315-0151-00 315-0201-00 311-1162-00	B200000 B242464 B010100	B242463 B242519	RES,FXD,FILM:150 OHM,5%,0.25W RES,FXD,FILM:200 OHM,5%,0.25W RES,VAR,NONWW:PNL,2 X 10K OHM,1W	57668 57668 12697	NTR25J-E150E NTR25J-E200E D381-CM 39691

	Tektronix	Serial/Asse	mbly No		Mfr.	
Component No.	Part No.	Effective	•	Name & Description	Code	Mfr. Part No.
R8	311-2315-00	B242520		RES, VAR, NONWW: (2)10K, 10%, 0.5W	12697	CM45209
R9	311-0946-00			RES. VAR, WW: TRMR, 50K OHM, 2W	02111	534-0070
R15	315-0470-00			RES, FXD, FILM: 47 OHM, 5%, 0.25W	57668	NTR25J-E47E0
R17	321-0448-00			RES, FXD, FILM: 453K OHM, 1%, 0.125W, TC=TO	07716	CEAD45302F
R18	321-0361-00			RES.FXD.FILM:56.2K OHM.1%.0.125W.TC=T0	07716	CEAD56201F
R19	315-0470-00			RES, FXD, FILM: 47 OHM, 5%, 0.25W	57668	NTR25J-E47E0
1123	010 04/0 00			NEGITABLE III II GIANGONGO ZON	•. • • • • • • • • • • • • • • • • • •	
R23	315-0224-00			RES.FXD.FILM:220K OHM,5%,0.25W	57668	NTR25J-E220K
R25	315-0333-00			RES, FXD, FILM: 33K OHM, 5%, 0.25W	57668	NTR25J-E33K0
R29	315-0101-00			RES.FXD.FILM:100 0HM.5%.0.25W	57668	NTR25J-E 100E
R41	315-0101-00			RES.FXD.FILM:100 OHM,5%,0.25W	57668	NTR25J-E 100E
R42	323-0452-00			RES.FXD.FILM: 499K OHM. 1%, 0.5W.TC=T0	75042	CECT0-4993F
R43	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
11.40	010 0101 00					
R50	321-0071-00			RES, FXD, FILM: 53.6 OHM, 1%, 0.125W, TC=TO	91637	CMF55116G53R60F
R52	321-0126-00			RES, FXD, FILM: 200 OHM, 1%, 0.125W, TC=T0	19701	5033ED200R0F
1104	041 0110 00			(7B53A ONLY)		
R52	315-0431-00	B010100	8019999	RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
NOC	010 0-01 00	5515155	0010000	(7B53AN ONLY)	•••	
R52	321-0126-00	B020000		RES, FXD, FILM: 200 OHM, 1%, 0.125W, TC=T0	19701	5033ED200R0F
1102	002 0120 00	502000		(7B53AN ONLY)		
R54	321-0020-00	B010100	B209999	RES, FXD, FILM: 15.8 OHM, 1%, 0.125W, TC=TO	57668	RB14FXE 15E8
R54	321-0039-00		DEGOSSO	RES.FXD.FILM:24.9 OHM.1%,0.125W,TC=T0	91637	CMF55116G24R90F
11.04	321 0000 00	0210000		(CO)(NO) (TEILE 4.0 OIN (TO) (TEILE 3.1) (O		5, 11, 5522532 111, 51
R56	323-0151-00			RES,FXD,FILM:365 OHM,1%,0.5W,TC=T0	19701	50 53 RD365R0F
R58	321-0020-00	B010100	8209999	RES, FXD, FILM: 15.8 OHM, 1%, 0.125W, TC=TO	57668	RB14FXE 15E8
R58	321-0039-00		DE00000	RES, FXD, FILM: 24.9 OHM, 1%, 0.125W, TC=T0	91637	CMF55116G24R90F
R59	321-0071-00	021000		RES, FXD, FILM: 53.6 OHM, 1%, 0.125W, TC=T0	91637	CMF55116G53R60F
R60	315-0121-00			RES, FXD, FILM: 120 OHM, 5%, 0.25W	19701	5043CX120R0J
NOU	010 0121 00			(7853A ONLY)		33.03.03
R60	315-0121-00	B020000		RES, FXD, FILM: 120 OHM, 5%, 0.25W	19701	5043CX120R0J
***************************************	010 0111 00	000000		(7B53AN ONLY)		
				(, 233, 11, 3, 8, 7,		
R61	321-0126-00			RES, FXD, FILM: 200 OHM, 1%, 0.125W, TC=T0	19701	5033ED200R0F
1101	001 0120 00			(7B53A ONLY)		
R61	321-0158-00	B010100	B019999	RES, FXD, FILM: 432 OHM, 1%, 0.125W, TC=T0	07716	CEAD432ROF
1101	021 0100 00	5015100	5010000	(7B53AN ONLY)	•	
R61	321-0126-00	B020000		RES, FXD, FILM: 200 OHM, 1%, 0.125W, TC=T0	19701	5033ED200R0F
NOI	061 0160 00	DOLOGO		(7853AN ONLY)		
R62	315-0101-00	B010100	B209999	RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R62	315-0223-00		5230000	RES, FXD, FILM: 22K OHM, 5%, 0.25W	19701	5043CX22K00J92U
R63	321-0237-00	5510000		RES, FXD, FILM: 2.87K OHM, 1%, 0.125W, TC=T0	07716	CEAD 28700F
1100				,		-
R64	315-0821-00	8010100	B209999	RES, FXD, FILM: 820 OHM, 5%, 0.25W	19701	5043CX820R0J
R64	315-0101-00		522255	RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R66	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R67	315-0510-00			RES.FXD.FILM:51 OHM.5%.0.25W	19701	5043CX51R00J
R68	315-0201-00			RES, FXD, FILM: 200 OHM, 5%, 0.25W	57668	NTR25J-E200E
R70	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R72	311-1227-00			RES, VAR, NONWY: TRMR, 5K OHM, 0.5W	32997	3386F-T04-502
R73	321-0324-00			RES, FXD, FILM: 23.2K OHM, 1%, 0.125W, TC=TO	07716	CEAD23201F
R74	321-0210-00			RES.FXD.FILM:1.50K OHM,1%,0.125W,TC=T0	19701	5033ED1K50F
R76	315-0510-00			RES.FXD.FILM:51 OHM.5%.0.25W	19701	5043CX51R00J
R80	315-0472-00			RES.FXD.FILM:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
R82	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R105	315-0103-00			RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
R107	315-0623-00			RES, FXD, FILM: 62K OHM, 5%, 0.25W	19701	5043CX62K00J
R109	315-0624-00			RES, FXD, FILM: 620K OHM, 5%, 0.25W	19701	5043CX620K0J
R110	325-0082-00	B010100	B160099	RES, FXD, FILM: 33.51 MEG OHM, 0.1%, 1W, TC=T2	03888	PME75C33514B
R110	325-0082-03	B160100		RES, FXD, FILM: 33.51M OHM, 0.25%, 1W, TC=T2	19647	MG731 33.51M.25%
R112	325-0081-00			RES, FXD, FILM: 11.17 MEG OHM, 0.1%, 0.5W, TC=T9	03888	PME7011.17MOHM.1
R114	325-0081-00			RES, FXD, FILM:11.17 MEG OHM, 0.1%, 0.5W, TC=T9	03888	PME7011.17MOHM.1
R117	325-0080-00			RES, FXD, FILM: 3.351 MEG OHM, 0.1%, 0.5W, TC=T9	91637	MFF1-C335138

7-12 REV MAR 1988

Component No.	Tektronix Part No.	Serial/Asse Effective		Name & Description	Mfr. Code	Mfr. Part No.
R119 R121 R124 R126 R128 R130	323-0789-07 323-0789-07 323-0788-07 323-0787-07 323-0786-07 323-0785-07		A STATE OF THE STA	RES,FXD,FILM:1.117MEG OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:1.117MEG OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:558.5K OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:223.4K OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:111.7K OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:55.85K OHM,0.1%,0.5W,TC=T9	07716 07716 19701 19701 19701 19701	CECE11173B CECE11173B 5053RE558K5B 5053RE223K4B 5053RE111K7B MF7CE55851B
R139 R141 R144 R146 R149 R154	315-0510-00 315-0101-00 311-1321-00 315-0103-00 315-0510-00 323-0785-07			RES,FXD,FILM:51 OHM,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W RES,VAR,NONWW:PNL,20K OHM,0.5W,W/SW RES,FXD,FILM:10K OHM,5%,0.25W RES,FXD,FILM:51 OHM,5%,0.25W RES,FXD,FILM:55.85K OHM,0.1%,0.5W,TC=T9	19701 57668 01121 19701 19701 19701	5043CX51R00J NTR25J-E 100E 18M652 5043CX10K00J 5043CX51R00J MF7CE55851B
R156 R158 R160 R164 R166 R168	323-0786-07 323-0787-07 323-0788-07 325-0080-00 323-0789-07 323-0789-07			RES, FXD, FILM:111.7K OHM, 0.1%, 0.5W, TC=T9 RES, FXD, FILM:223.4K OHM, 0.1%, 0.5W, TC=T9 RES, FXD, FILM:558.5K OHM, 0.1%, 0.5W, TC=T9 RES, FXD, FILM:3.351 MEG OHM, 0.1%, 0.5W, TC=T9 RES, FXD, FILM:1.117MEG OHM, 0.1%, 0.5W, TC=T9 RES, FXD, FILM:1.117MEG OHM, 0.1%, 0.5W, TC=T9	19701 19701 19701 91637 07716 07716	5053RE111K7B 5053RE223K4B 5053RE558K5B MFF1-C33513B CECE11173B CECE11173B
R170 R170 R172 R174 R181	325-0082-00 325-0082-03 325-0081-00 325-0081-00 315-0151-00	B160100	B160099	RES,FXD,FILM:33.51 MEG OHM,0.1%,1W,TC=T2 RES,FXD,FILM:33.51M OHM,0.25%,1W,TC=T2 RES,FXD,FILM:11.17 MEG OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:11.17 MEG OHM,0.1%,0.5W,TC=T9 RES,FXD,FILM:150 OHM,5%,0.25W	03888 19647 03888 03888 57668	PME75C33514B MG731 33.51M.25% PME7011.17MOHM.1 PME7011.17MOHM.1 NTR25J-E150E
R182	315-0133-00			(7B53A ONLY) RES,FXD,FILM:13K OHM,5%,0.25W (7B53A ONLY)	19701	5043CX13K00J
R184	315-0332-00			RES,FXD,FILM:3:3K OFM,5%,0.25W (7B53A ONLY)	57668	NTR25J-E03K3
R185	31 5-0332 -00			RES, FXD, FILM: 3.3K OHM, 5%, 0.25W (7B53A ONLY)	57668	NTR25J-E03K3
R186	315-0332-00			RES,FXD,FILM:3.3K OHM,5%,0.25W (7853A ONLY)	57668	NTR25J-E03K3
R188	315-0332-00			RES, FXD, FILM: 3.3K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E03K3
R205 R210	315-0470-00 315-0103-00			RES, FXD, FILM: 47 OHM, 5%, 0.25W RES, FXD, FILM: 10K OHM, 5%, 0.25W	57668 19701	NTR25J-E47E0 5043CX10K00J
R211 R231 R235 R239 R243 R258 R258	315-0203-00 315-0101-00 315-0101-00 315-0101-00 315-0101-00 315-0103-00 315-0272-00	8010100 8050000	B049999	RES,FXD,FILM:20K OHM,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W RES,FXD,FILM:100 OHM,5%,0.25W RES,FXD,FILM:10K OHM,5%,0.25W RES,FXD,FILM:20K OHM,5%,0.25W	57668 57668 57668 57668 57668 19701 57668	NTR25J-E 20K NTR25J-E 100E NTR25J-E 100E NTR25J-E 100E NTR25J-E 100E 5043CX10K00J NTR25J-E02K7
R259 R259 R261 R262 R263 R264	315-0203-00 315-0202-00 315-0203-00 315-0103-00 315-0203-00 315-0203-00	B010100 B050000	B049999	RES.FXD.FILM:20K OHM.5%,0.25W RES.FXD.FILM:2K OHM.5%,0.25W RES.FXD.FILM:20K OHM.5%,0.25W RES.FXD.FILM:10K OHM.5%,0.25W RES.FXD.FILM:20K OHM.5%,0.25W RES.FXD.FILM:20K OHM.5%,0.25W	57668 57668 57668 19701 57668 57668	NTR25J-E 20K NTR25J-E 2K NTR25J-E 20K 5043CX10K00J NTR25J-E 20K NTR25J-E 20K
R268 R269 R271 R276 R276 R277 R277	315-0103-00 315-0203-00 315-0104-00 315-0103-00 315-0272-00 315-0203-00 315-0202-00	B010100 B050000 B010100 B050000	B049999 B049999	RES,FXD,FILM:10K OHM,5%,0.25W RES,FXD,FILM:20K OHM,5%,0.25W RES,FXD,FILM:100K OHM,5%,0.25W RES,FXD,FILM:10K OHM,5%,0.25W RES,FXD,FILM:2.7K OHM,5%,0.25W RES,FXD,FILM:20K OHM,5%,0.25W RES,FXD,FILM:20K OHM,5%,0.25W	19701 57668 57668 19701 57668 57668 57668	5043CX10K00J NTR25J-E 20K NTR25J-E100K 5043CX10K00J NTR25J-E02K7 NTR25J-E 20K NTR25J-E 2K
R279 R280 R281	315-0104-00 315-0103-00 315-0203-00			RES,FXD,FILM:100K OHM,5%,0.25W RES,FXD,FILM:10K OHM,5%,0.25W RES,FXD,FILM:20K OHM,5%,0.25W	57668 19701 57668	NTR25J-E100K 5043CX10K00J NTR25J-E 20K

	Talakanas	C:-1 /A			Mfr.	
Component No.	T ek tronix Part No.	Serial/Asse Effective		Name & Description	Code	Mfr. Part No.
R290	311-1060-00	Landing was considered the second section of the second section of the second section of the second section of	Andreas and the second second second second second	RES. VAR. NONW: TRMR, 500 OHM, 0.75W	02111	70Y-501T613
R301	315-0510-00			RES, FXD, FILM: 51 OHM, 5%, 0.25W	19701	5043CX51R00J
R303	321-0452-00			RES.FXD.FILM: 499K OHM. 1%. 0.125W. TC=TO	19701	5043ED499K0F
R305	315-0102-00	B210000		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R306	315-0202-00			RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R307	315-0512-00	B010100	B135835	RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
				(7B53A ONLY)		
R307	315-0512-00	B010100	B134214	RES,FXD,FILM:5.1K OHM,5%,0.25W	57668	NTR25J-E05K1
				(7B53AN ONLY)		
D210	215 0511 00			RES.FXD.FILM:510 OHM.5%.0.25W	19701	5043CX510R0J
R310 R311	315-0511-00 315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R312	315-0101-00			RES.FXD.FILM: 430 OHM.5%, 0.25W	19701	5043CX430R0J
R313	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R315	315-0101-00	B010100	B209999	RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R315	315-0202-00		DEGOOGG	RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
					F3000	N70053 F756F
R317	315-0751-00		B209999	RES, FXD, FILM: 750 OHM, 5%, 0.25W	57668	NTR25J-E750E
R317	315-0821-00			RES, FXD, FILM: 820 OHM, 5%, 0.25W	19701	5043CX820R0J
R320	315-0221-00		B129999	RES, FXD, FILM: 220 OHM, 5%, 0.25W	57668	NTR25J-E220E
R320	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R320	315-0121-00			RES, FXD, FILM: 120 OHM, 5%, 0.25W	19701	5043CX120R0J
R321	315-0820-00	B210000		RES,FXD,FILM:82 OHM,5%,0.25W	57668	NTR25J-E82E0
R322	315-0221-00	B010100	B129999	RES, FXD, FILM: 220 OHM, 5%, 0.25W	57668	NTR25J-E220E
R322	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R322	315-0121-00			RES.FXD.FILM:120 OHM.5%,0.25W	19701	5043CX120R0J
R325	315-0150-00		B069999	RES.FXD.FILM:15 OHM.5%.0.25W	19701	5043CX15R00J
R325	315-0100-00		B209999	RES.FXD.FILM:10 OHM.5%,0.25W	19701	5043CX10RR00J
R325	315-0750-00			RES, FXD, FILM: 75 OHM, 5%, 0.25W	57668	NTR25J-E75E0
8206	215 0102 00	0010100	B10000	RES, FXD, FILM 1.2K OHM, 5%, 0.25W	57668	NTR25J-E01K2
R326	315-0122-00		B129999 B209999	RES,FXD,FIEM91.2K OHM,5%,0.25W RES,FXD,FIEM:1.6K OHM,5%,0.25W	19701	5043CX1K600J
R326 R326	315-0162-00 315-0182-00		0209999	RES, FXD, FILM: 1.8K OHM, 5%, 0.25W	57668	NTR25J-E1K8
R328	315-0150-00		B069999	RES.FXD.FILM:15 OHM.5%,0.25W	19701	5043CX15R00J
R328	315-0100-00		B209999	RES.FXD.FILM:10 OHM.5%,0.25W	19701	5043CX10RR00J
R328	315-0750-00		0203333	RES.FXD.FILM:75 OHM,5%,0.25W	57668	NTR25J-E75E0
NOZO	313-0/30-00	0210000		KES, (AD,) 1EH. / G (WY, 5/6, G. 25#	5,000	WINESD EFFE
R329	315-0330-00	B210000		RES,FXD,FILM:33 OHM,5%,0.25W	19701	5043CX33R00J
R330	315-0102-00	B010100	B209999	RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R330	315-0511-00	B210000		RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
R332	315-0472-00			RES,FXD,FILM:4.7K OHM,5%,0.25W	57668	NTR25J-E04K7
R333	311-1228-00			RES, VAR, NONWY: TRMR, 10K OHM, 0.5W	32997	3386F-T04-103
R335	315-0152-00	B010100	B209999	RES,FXD,FILM:1.5K OHM,5%,0.25W	576 6 8	NTR25J-E01K5
R335	315-0472-00	B210000		RES, FXD, FILM: 4.7K OHM, 5%, 0.25W	57668	ntr25j-e04k7
				(NOMINAL VALUE, SELECTED)		
R339	315-0431-00	B010100	B209999	RES,FXD,FILM:430 OHM,5%,0.25W	19701	5043CX430R0J
				(7B53A ONLY)		
R339	315-0431-00	B020000	B209999	RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
R340	315-0201-00	8010100	B147117	(7B53AN ONLY) RES,FXD,FILM:200 OHM.5%,O.25W	57668	NTR25J-E200E
1070	313 0281 00	0010100	014/11/	(7853A ONLY)	5, 000	
R340	315-0120-00	B147118	B209999	RES, FXD, FILM: 12 OHM, 5%, 0.25W	57668	NTR25J-R12
R340	315-0220-00	B210000		(7B53A ONLY) RES,FXD,FILM:22 OHM,5%,0.25W	19701	5043CX22R00J
K340	315-0220-00	9510000		(7B53A ONLY)	13/01	JUHUUNZZINUUU
R340	315-0201-00	B010100	8144429	RES, FXD, FILM: 200 OHM, 5%, 0.25W	57668	NTR25J-E200E
R340	315-0120-00	B1////30	B209999	(7B53AN ONLY) RES,FXD,FILM:12 OHM,5%,0.25W	57668	NTR25J-R12
INCTO	212-0150-00	017770	UL4333 3	(7B53AN ONLY)		
R340	315-0220-00	B210000		RES, FXD, FILM: 22 OHM, 5%, 0.25W	19 70 1	5043CX22R00J
				(7B53AN ONLY)		
R341	315-0242-00	B010100	B209999	RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
R342	315-0431-00		B209999	RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
· · · ·	511 U. 51 U			(7B53A ONLY)		

7-14 REV MAR 1988

Community No.	Tektronix	Serial/Assa Effective		Norm 9 Deposituhing	Mfr. Code	Mfr. Part No.
Component No.	Part No.		Latert particulation with the management	Name & Description		MANAGEMENT STREET, STR
R342	315-0431-00		B209999	RES,FXD,FILM:430 OHM,5%,0.25W (7B53AN ONLY)	19701	5043CX430R0J
R343	315-0242-00		B209999	RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
R344	315-0201-00	B01 0100	B147117	RES,FXD,FILM:200 OHM,5%,0.25W (7B53A ONLY)	5 7668	NTR25J-E200 E
R344	315-0120-00	B147118	B209999	RES,FXD,FILM:12 OHM,5%,0.25W (7B53A ONLY)	57668	NTR25J-R12
R344	315-0220-00	B210000		RES, FXD, FILM: 22 OHM, 5%, 0.25W (7B53A ONLY)	19701	5043CX22R00J
R344	315-0201-00	B010100	B144429	RES,FXD,FILM:200 OHM,5%,0.25W (7B53AN ONLY)	57668	NTR25J-E200E
R344	315-0120-00	8144430	8209999	RES, FXD, FILM: 12 OHM, 5%, 0.25W (7B53AN ONLY)	5 7668	NTR25J-R12
R344	315-0220-00	B210000		RES,FXD,FILM:22 OHM,5%,0.25W (7B53AN ONLY)	19701	5043CX22R00J
R345	315-0102-00	B010100	8209999	RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R346	315-0511-00		B209999	RES.FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R347	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R352	317-0271-00		8169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
				RES.FXD.FILM:510 OHM.5%.0.25W	19701	5043CX510R0J
R352	315-0511-00		B209999			
R352	315-0222-00			RES, FXD, FILM: 2.2K OHM, 5%, 0.25W	57668	NTR25J~E02K2
R353	315-0101-00			RES,FXD,FILM:100 OHM,5%,0.25W	57668	NTR25J-E 100E
R354	317-0271-00		B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
R3 54	315-0511-00		B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R3 54	315-0151-00	B210000		RES, FXD, FILM: 150 OHM, 5%, 0.25W	5 766 8	NTR25J-E150 E
R355	315-0222-00	B210000		RES, FXD, FILM: 2.2K OHM, 5%, 0.25W	57668	NTR25J-E02K2
R357	317-0271-00	B010100	B169999	RES.FXD.CMPSN:270_0HM,5%,0.125w	01121	BB2715
R357	315-0511-00	B170000	B209999	RES, FXD, FILM: 510 OFM, 5%, 0.25W	19701	5043CX510R0J
R358	315-0201-00	B210000		RES, FXD, FILM: 200 OHM, 5%, 0.25W	57668	NTR25J-E200E
R359	317-0271-00		B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W (7B53A ONLY)	01121	BB2715
R359	315-0511-00	B170000	B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W (7853A ONLY)	19701	5043CX510R0J
R359	317-0102-00	B010100	B019999	RES, FXD, CMPSN: 1K OHM, 5%, 0125W (7B53AN ONLY)	01121	BB1025
R359	317-0271-00	B020000	8169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W (7B53AN ONLY)	01121	BB2715
R359	315-0511-00	8170000	B209999	RES,FXD,FILM:510 OHM,5%,0.25W (7B53AN ONLY)	19701	5043CX510R 0J
R360	315-0510-00	B210000		RES.FXD.FILM:51 OHM.5%.0.25W	19701	5043CX51R00J
R361	315-0471-00	B010100	B209999	RES, FXD, FILM: 470 OHM, 5%, 0.25W	57668	NTR25J-E470E
R362	315-0472-00			RES, FXD, FILM: 4.7K OHM, 5%, 0.25W	57668	NTR25J-E04K7
R363	315-0471-00		B209999	RES, FXD, FILM: 470 OHM, 5%, 0.25W	57668	NTR25J-E470E
R363	315-0821-00		520000	RES.FXD.FILM:820 OHM.5%.0.25W	19701	5043CX820R0J
R364	315-0203-00		B209999	RES.FXD.FILM:20K OHM.5%,0.25W	57668	NTR25J-E 20K
R364	315-0432-00		525555	RES, FXD, FILM: 4.3K OHM, 5%, 0.25W	57668	NTR25J-E04K3
R365	315-0242-00	B210000		RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
			R200000			
R366	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R366	315-0162-00		0000000	RES, FXD, FILM: 1.6K OHM, 5%, 0.25W	19701	5043CX1K600J
R367	315-0511-00		B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R374	317-0271-00		B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
R374	315-0511-00	8170000	8209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R375	317-0102-00	B010100	B169999	RES, FXD, CMPSN: 1K OHM, 5%, 0125W (7853A ONLY)	01121	881025
R375	315-0102-00	B170000	B209999	RES,FXD,FILM:1K OHM,5%,0.25W (7B53A ONLY)	5766 8	NTR25JE01K0
R375	317-0102-00	B020000	B169999	RES, FXD, CMPSN: 1K OHM, 5%, 0125W (7B53AN ONLY)	01121	BB1025
R375	315-0102-00	B170000	B209999	RES.FXD.FILM:1K OHM.5%.0.25W (7B53AN ONLY)	57668	NTR25JE01K0
R376	317-0271-00	B010100	B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715

	Tektronix	Serial/Asse	mhlv No		Mfr.	
Component No.	Part No.	Effective		Name & Description	Code	Mfr. Part No.
R376	315-0271-00		B209999	RES.FXD.FILM:270 OHM,5%,0.25W	57668	NTR25J-E270E
R377	315-0271-00		B209999	RES, FXD, FILM: 270 OHM, 5%, 0.25W	57668	NTR25J-E270E
R379	315-0751-00		B209999	RES, FXD, FILM: 750 OHM, 5%, 0.25W	5 766 8	NTR25J-E750E
R383	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	5 766 8	NTR25J-E330E
R384	315-0511-00		B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R386	315-0361-00	8010100	B209999	RES.FXD,FILM:360 OHM,5%,0.25W	19701	5043CX360R0J
D207	315-0620-00	B010100	B209999	RES,FXD,FILM:62 OHM,5%,0.25W	19701	5043CX63R00J
R387 R401	315-0510-00	8010100	DZU3333	RES.FXD.FILM:51 0HM.5%.0.25W	19701	5043CX51R00J
R401 R403	321-0452-00			RES.FXD.FILM: 499K OHM. 1%. 0.125W. TC=T0	19701	5043ED499K0F
R405	315-0102-00	B210000		RES, FXD, FILM: 1K-OHM, 5%, 0.25W	57668	NTR25JE01KO
R406	315-0202-00			RES.FXD.FILM:2K OHM.5%,0.25W	57 6 68	NTR25J-E 2K
R409	315-0512-00		B135835	RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
	313 3312 33			(7B53A ONLY)		
R409	315-0512-00	B010100	8134214	RES,FXD,FILM:5.1K OHM,5%,0.25W (7853AN ONLY)	5 766 8	NTR25J-E05K1
R410	315-0511-00			RES.FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
R411	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R412	315-0101-00	B010100	B209999	RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R412	315-0431-00			RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
R413	315-0431-00		B209999	RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
R413	315-0101-00	B210000		RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R415	315-0102-00	B010100	B209999	RES.FXD.FILM:1K OHM.5%.0.25W	57668	NTR25JE01K0
R415	315-0202-00		DE00000	RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R417	315-0751-00		B209999	RES, FXD, FILM: 750 OHM, 5%, 0.25W	57668	NTR25J-E750E
R417	315-0821-00			RES, FXD, FILM: 820 OHM, 5%, 0.25W	19701	5043CX820R0J
R420	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	5 76 68	NTR25J-E330E
R420	315-0121-00	B210000		RES, FXD, FILM: 120 OHM, 5%, 0.25W	19701	5043CX120R0J
R421	315-0820-00	B210000		RES, FXD, FILM:82 OHM, 5%, 0.25W	57668	NTR25J-E82E0
R422	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R422	315-0121-00		5200000	RES, FXD, FILM: 120 OHM, 5%, 0.25W	19701	5043CX120R0J
R425	315-0750-00			RES, FXD, FILM: 75 OHM, 5%, 0.25W	57668	NTR25J-E75E0
R426	315-0150-00	8010100	B209999	RES, FXD, FILM: 15 OHM, 5%, 0.25W	19701	5043CX15R00J
R426	315-0182-00	8210000		RES, FXD, FILM: 1.8K OHM, 5%, 0.25W	57668	NTR25J-E1K8
R428	315-0150-00	B010100	B209999	RES,FXD,FILM:15 OHM,5%,0.25W	19701	5043CX15R00J
R428	315-0750-00			RES, FXD, FILM: 75 OHM, 5%, 0.25W	57668	NTR25J-E75E0
R429	315-0162-00	B010100	B209999	RES, FXD, FILM: 1.6K OHM, 5%, 0.25W	19701	5043CX1K600J
R429	315-0330-00	B210000		RES,FXD,FILM:33 OHM,5%,0.25W	19701	5043CX33R00J
R430	315~0511-00			RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
R431	315-0511-00	B010100	B2 0 9999	RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
R432	315-0242-00	B210000		RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
R433	315-0242-00		B209999	RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
R433	311-1228-00		•	RES, VAR, NONW: TRMR, 10K OHM, 0.5W	32997	3386F-T04-103
R435	311-1228-00		B209999	RES, VAR, NONWW: TRMR, 10K OHM, 0.5W	32997	3386F-T04-103
R435	315-0332-00			RES, FXD, FILM: 3.3K OHM, 5%, 0.25W	57668	NTR25J-E03K3
R437	315-0751-00	B010100	B209999	RES,FXD,FILM:750 OHM,5%,0.25W	57668	NTR25J-E750E
R439	315-0431-00	B010100	B209999	RES, FXD, FILM: 430 OHM, 5%, 0.25W (7B53A ONLY)	19701	5043CX430R0J
R439	315-0431-00	B020000	B209999	RES, FXD, FILM: 430 OHM, 5%, 0.25W (7B53AN ONLY)	19701	5043CX430R0J
R440	315-0201-00		B209999	RES, FXD, FILM: 200 OHM, 5%, 0.25W	57668	NTR25J-E200E
R440	315-0220-00			RES, FXD, FILM: 22 OHM, 5%, 0.25W	19701	5043CX22R00J
R441	315-0242-00		B209999	RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
R442	315-0431-00	B010100	B209999	RES,FXD,FILM:430 OHM,5%,0.25W (7853A ONLY)	19701	5043CX430R0J
R442	315-0431-00	8020000	B209999	RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
				(7B53AN ONLY)		
R443	315-0242-00	8010100	B209999	RES.FXD.FILM:2.4K OHM.5%,0.25W	57668	NTR25J-E02K4
R444	315-0201-00		B209999	RES.FXD.FILM:200 OHM,5%,0.25W	57668	NTR25J-E200E
R444	315-0220-00		220000	RES,FXD,FILM:22 OHM,5%,0.25W	19701	5043CX22R00J
		· -				

Communicate No.	Tektronix	Serial/Assa		N 9 Consuistina	Mfr. Code	Mfr. Part No.
Component No.	Part No.	<u>Effective</u>	reder en expresse automorphism and production and the second	Name & Description	-	
R445	315-0102-00		B209999	RES,FXD,FILM:1K OHM,5%,0.25W	5 76 68	NTR25JE01K0
R446	315-0511-00		B209999	RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
R447	315-0331-00		B209999	RES,FXD,FILM:330 OHM,5%,0.25W	57668	NTR25J-E330E
R452	317-0271-00		B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
R452	315-0511-00		B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R452	315-0222-00	B210000		RES,FXD,FILM:2.2K OHM,5%,0.25W	57668	NTR25J-E02K2
					***	WEDGEL E 4005
R453	315-0101-00			RES, FXD, FILM: 100 OHM, 5%, 0.25W	57668	NTR25J-E 100E
R454	317-0271-00		8169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
R454	315-0511-00		82 09999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R454	315-0151-00			RES, FXD, FILM: 150 OHM, 5%, 0.25W	57668	NTR25J-E150E
R455	315-0222-00			RES, FXD, FILM: 2.2K OHM, 5%, 0.25W	57668 E7668	NTR25J-E02K2
R456	315-0202-00	B210000		RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R457	317-0751-00	B010100	B169999	RES.FXD.CMPSN:750 OHM.5%.0.125W	01121	BB7515
R457	315-0511-00		B209999	RES.FXD.FILM:510 OHM.5%, 0.25W	19701	5043CX510R0J
R457	315-0103-00		BEUSSSS	RES.FXD.FILM:10K OHM.5%,0.25W	19701	5043CX10K00J
R459	317-0271-00		B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
11100	017 0271 00	5010100	D100000	(7B53A ONLY)	V	552, 25
R459	315-0511-00	B170000	B209999	RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
				(7B53A ONLY)		
R459	317-0102-00	B010100	B019999	RES, FXD, CMPSN: 1K OHM, 5%, 0125W	01121	BB1025
				(7B53AN ONLY)		
R459	317-0271-00	B020000	B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
				(7B53AN ONLY)		
R459	315-0511-00	B170000	B209999	RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
				(7B53AN ONLY)		
0.400	215 0001 00	DO10000		DEC EVE ETIM-200 OIM EV C 2EI	EZECO	NTR25J-E200E
R460	315-0201-00		B200000	RES, FXD, FILM: 200 OHN, 5%, 0.25W	57668 57668	NTR25J-E200E NTR25J-E470E
R461	315-0471-00		B209999	RES, FXD, FILM: 470 OHM, 5%, 0.25W	19701	5043CX10K00J
R462	315-0103-00		P200000	RES, FXD, FILM: 10K OHM, 5%, 0.25W	57668	NTR25J-E470E
R463	315-0471-00		B209999	RES, FXD, FILM: 470 OHM, 5%, 0.25W	19701	5043CX820R0J
R463	315-0821-00		B209999	RES,FXD,FILM:820 OHM,5%,0.25W RES,FXD,FILM:20K OHM,5%,0.25W	57668	NTR25J-E 20K
R464 R464	315 - 0203-00 315 - 0512-00		0203333	RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
K404	313-0312-00	DZ10000		RESTEND, FILM. S. IN GERM, 5%, U. 25W	37 000	WINESO EUSKI
R465	315-0432-00	B210000		RES.FXD.FILM:4.3K OHM.5%,0.25W	57668	NTR25J-E04K3
R466	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R466	315-0152-00		5200000	RES, FXD, FILM: 1.5K OHM, 5%, 0.25W	57668	NTR25J-E01K5
R467	315-0511-00		B209999	RES.FXD.FILM:510 OHM.5%.0.25W	19701	5043CX510R0J
R468	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R469	315-0511-00		B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
				,,,,,,,		
R474	317-0271-00	B010100	B169999	RES, FXD, CMPSN: 270 OHM, 5%, 0.125W	01121	BB2715
R474	315-0511-00	B17000	B209999	RES,FXD,FILM:510 OHM,5%,0.25W	19701	5043CX510R0J
R475	317-0102-00	B010100	B169999	RES, FXD, CMPSN: 1K OHM, 5%, 0125W	01121	BB1025
				(7B53A ONLY)		
R475	315-0102-00	8170000	B209999	RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
DATE	217 0100 00	D000000	0100000	(7B53A ONLY)	01101	DD1005
R475	317-0102-00	8020000	B169999	RES, FXD, CMPSN: 1K OHM, 5%, 0125W	01121	BB1025
R475	315-0102-00	R170000	B209999	(7B53AN ONLY) RES,FXD,FILM:1K OHM,5%,0.25W	57668	NTR25JE01K0
K473	315-0102-00	B170000	0203333	(7B53AN ONLY)	37000	MIKESSEGIKO
				(7BOOMI GIVET)		
R476	317-0271-00	8010100	B169999	RES.FXD.CMPSN:270 OHM.5%.0.125W	01121	BB2715
R476	315-0271-00		B209999	RES, FXD, FILM: 270 OHM, 5%, 0.25W	57668	NTR25J-E270E
R477	315-0271-00		B209999	RES.FXD.FILM:270 OHM.5%.0.25W	57668	NTR25J-E270E
R479	315-0751-00	B010100	8209999	RES.FXD.FILM:750 OHM.5%,0.25W	57668	NTR25J-E750E
R483	315-0331-00		B209999	RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R484	315-0511-00		B209999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19 70 1	5043CX510R0J
R486	315-0361-00		B209999	RES, FXD, FILM: 360 OHM, 5%, 0.25W	19701	5043CX360R0J
R487	315-0620-00	B010100	B209999	RES, FXD, FILM: 62 OHM, 5%, 0.25W	19701	5043CX63R00J
R502	315-0512-00			RES, FXD, FILM: 5.1K OHM, 5%, 0.25W	57668	NTR25J-E05K1
R504	315-0393-00			RES, FXD, FILM: 39K OHM, 5%, 0.25W	57668	NTR25J-E39KO
R505	315-0622-00			RES, FXD, FILM: 6.2K OHM, 5%, 0.25W	19701	5043CX6K200J
R508	315-0101-00			RES,FXD,FILM:100 OHM,5%,0.25W	57668	NTR25J-E 100 E

	Tektronix	Serial/Ass			Mfr.	MC 2 1 N
Component No.	Part No.	Effective	Dscont	Name & Description	Code	Mfr. Part No.
R509	315-0151-00			RES,FXD,FILM:150 OHM,5%,0.25W	57 668	NTR25J-E150E
R510	321-0313-00			RES, FXD, FILM: 17.8K OHM, 1%, 0.125W, TC=TO	07716	CEAD17801F
R511	315-0511-00			RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R513	315-0431-00			RES, FXD, FILM: 430 OHM, 5%, 0.25W	19701	5043CX430R0J
R514	315-0182-00			RES.FXD.FILM:1.8K OHM,5%,0.25W	57668	NTR25J-E1K8
R516	321-0231-00			RES,FXD,FILM:2.49K 0HM,1%,0.125W,TC=T0	19701	5033ED2K49F
R517	315-0821-00			RES.FXD.FILM:820 OHM.5%,0.25W	19701	5043CX820R0J
R518	315-0102-00			RES.FXD.FILM:1K OHM,5%,0.25W	57668	NTR25JE01K0
R519	315-0392-00			RES.FXD.FILM:3.9K OHM.5%.0.25W	57668	NTR25J-E03K9
R520	315-0472-00			RES, FXD, FILM: 4.7K OHM, 5%, 0.25W	57668	NTR25J-E04K7
R521	315-0241-00			RES, FXD, FILM: 240 CHM, 5%, 0.25W	19701	5043CX240R0J
R522	315-0102-00			RES, FXD, FILM: 1K OHM, 5%, 0.25W	57 668	NTR25JE01K0
, R523	315-0102-00			RES.FXD.FILM:1K OHM,5%,0.25W	57 66 8	NTR25JE01K0
R526	315-0102-00			RES.FXD.FILM:1K OHM,5%,0.25W	57668	NTR25JE01K0
R527	315-0102-00			RES.FXD.FILM:1K OHM,5%,0.25W	57668	NTR25JE01K0
R528	315-0391-00			RES, FXD, FILM: 390 OHM, 5%, 0.25W	57668	NTR25J-E390E
R529	315-0822-00			RES.FXD.FILM:8.2K OHM.5%.0.25W	19701	5043CX8K200J
R533	315-0104-00			RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
R535	315-012 4-00			RES.FXD.FILM:120K OHM,5%,0.25W	19701	5043CX120K0J
R539	315-0102-00			RES, FXD, FILM: 1K OHM, 5%, 0.25W	5 7668	NTR25JE01K0
R541	315-0331 -00			RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R542	315-0270-00			RES, FXD, FILM: 27 OHM, 5%, 0.25W	19701	5043CX27R00J
R543	315-0620-00			RES.FXD.FILM:62 OHM.5%,0.25W	19701	5043CX63R00J
R544	315-0241-00	B010100	B241889	RES.FXD.FILM:240 OHM.5%.0.25W	19701	5043CX240R0J
R544	315-0271-00		DE 12000	RES, FXD, FILM: 270 OHM, 5%, 0.25W	57668	NTR25J-E270E
R545	323-0192-00			RES, FXD, FILM: 976 OHM, 1%, 0.5W, TC=TO	19701	5053RD976R0F
R547	321-0146-00			RES, FXD, FILM: 324 OHM, 1%, 0.125W, TC=T0	07716	CEAD324R0F
R548	315-0151-00			RES.FXD.FILM:150 OHM.5%,0.25W	57668	NTR25J-E150E
R549	315-0332-00			RES, FXD, FILM: 3.3K OHM, 5%, 0.25W	57668	NTR25J-E03K3
R551	315-0331-00			RES, FXD, FILM: 330 OHM, 5%, 0.25W	57668	NTR25J-E330E
R553	315-0152-00			RES, FXD, FILM: 1.5K OHM, 5%, 0.25W	57668	NTR25J-E01K5
R555	315-0202-00			RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R556	315-0511-00	B010100	8099999	RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R558	321-0260-00	5010100	0000000	RES.FXD.FILM:4.99K OHM.1%,0.125W,TC=T0	19701	5033ED4K990F
R559	321-0289-00			RES, FXD, FILM: 10.0K OHM, 1%, 0.125W, TC=T0	19701	5033ED10K0F
R561	315-0103-00			RES.FXD.FILM:10K OHM.5%,0.25W	19701	5043CX10K00J
R563	315-0202-00			RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R564	311-1224-00			RES. VAR. NONWY: TRMR. 500 OHM. 0.5W	32997	3386F-T04-501
R565	315-0432-00			RES, FXD, FILM: 4.3K OHM, 5%, 0.25W	57668	NTR25J-E04K3
R566	315-0153-00			RES, FXD, FILM: 15K OHM, 5%, 0.25W	19701	5043CX15K00J
R567	315-0272-00			RES, FXD, FILM: 2.7K OHM, 5%, 0.25W	57668	NTR25J-E02K7
R568	315-0471-00			RES.FXD.FILM:470 OHM,5%,0.25W	57668	NTR25J-E470E
R569	315-0202-00			RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R570	321-0201 - 00			RES.FXD.FILM:1.21K OHM,1%,0.125W,TC=T0	19701	5043ED1K210F
R571	315-0103-00			RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
R572	311-1230-00			RES. VAR. NONW: TRMR. 20K OHM. 0.5W	32997	3386F-T04-203
R574	315-0622-00			RES, FXD, FILM: 6.2K OHM, 5%, 0.25W	19701	5043CX6K200J
R575	315-0101-00			RES.FXD.FILM:100 OHM,5%,0.25W	57668	NTR25J-E 100E
R576	311-1230-00			RES, VAR, NONWY: TRMR, 20K OHM, 0.5W	32997	3386F-T04-203
R578	315-0103 - 00			RES.FXD.FILM:10K OHM,5%,0.25W	19701	5043CX10K00J
R579	315-0304-00			RES, FXD, FILM: 300K OHM, 5%, 0.25W	57668	NTR25J-E300K
R581	315-0752-00			RES.FXD.FILM:7.5K OHM.5%,0.25W	57668	NTR25J-E07K5
R582	315-0752-00			RES.FXD.FILM:7.5K OHM,5%,0.25W	57 66 8	NTR25J-E07K5
R583	315-0563-00			RES, FXD, FILM: 56K OHM, 5%, 0.25W	19701	5043CX56K00J
R584	315-0202-00			RES, FXD, FILM: 2K OHM, 5%, 0.25W	57668	NTR25J-E 2K
R589	315-0621-00			RES.FXD.FILM:620 OHM.5%,0.25W	57668	NTR25J-E620E
R590	315-0820-00			RES.FXD,FILM:82 OHM,5%,0.25W	57668	NTR25J-E82E0
R591	315-0433-00			RES, FXD, FILM: 43K OHM, 5%, 0.25W	19701	5043CX43K00J
	222 2.30 00			* *		

C	Tektronix Part No.	Serial/Asse Effective	•	Name & Description	Mfr. Code	Mfr. Part No.
R592 R597 R601 R603 R604 R606	311-1235-00 315-0153-00 315-0270-00 315-0361-00 322-0210-00 315-0301-00	LITOLINE	USCORE	RES, VAR, NONW: 100K OHM, 0.5W RES, FXD, FILM: 15K OHM, 5%, 0.25W RES, FXD, FILM: 27 OHM, 5%, 0.25W RES, FXD, FILM: 360 OHM, 5%, 0.25W RES, FXD, FILM: 1.50K OHM, 1%, 0.25W, TC=TO RES, FXD, FILM: 300 OHM, 5%, 0.25W	32997 19701 19701 19701 75042 57668	3386F-T04-104 5043CX15K00J 5043CX27R00J 5043CX360R0J CEBT0-1501F NTR25J-E300E
R607 R608 R609 R610 R611 R612	315-0620-00 321-0164-00 315-0511-00 315-0270-00 315-0202-00 315-0511-00	B080000		RES, FXD, FILM: 62 OHM, 5%, 0.25W RES, FXD, FILM: 499 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 510 OHM, 5%, 0.25W RES, FXD, FILM: 27 OHM, 5%, 0.25W RES, FXD, FILM: 2K OHM, 5%, 0.25W RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701 19701 19701 19701 57668 19701	5043CX63R00J 5033ED499R0F 5043CX510R0J 5043CX27R00J NTR25J-E 2K 5043CX510R0J
R613 R614 R614 R615 R616 R617	315-0102-00 315-0102-00 321-0148-00 315-0910-00 315-0103-00 315-0683-00		B059999	RES, FXD, FILM: 1K OHM, 5%, 0.25W RES, FXD, FILM: 1K OHM, 5%, 0.25W RES, FXD, FILM: 340 OHM, 1%, 0.125W, TC=TO RES, FXD, FILM: 91 OHM, 5%, 0.25W RES, FXD, FILM: 10K OHM, 5%, 0.25W RES, FXD, FILM: 68K OHM, 5%, 0.25W	57668 57668 07716 19701 19701 57668	NTR25JE01K0 NTR25JE01K0 CEAD340R0F 5043CX91R00J 5043CX10K00J NTR25J-E68K0
R618 R619 R621 R622 R624 R626	315-0102-00 315-0623-00 315-0153-00 315-0102-00 315-0243-00 315-0472-00	8080000		RES,FXD,FILM:1K OHM,5%,0.25W RES,FXD,FILM:62K OHM,5%,0.25W RES,FXD,FILM:15K OHM,5%,0.25W RES,FXD,FILM:1K OHM,5%,0.25W RES,FXD,FILM:24K OHM,5%,0.25W RES,FXD,FILM:4.7K OHM,5%,0.25W	57668 19701 19701 57668 57668 57668	NTR25JE01K0 5043CX62K00J 5043CX15K00J NTR25JE01K0 NTR25J-E24K0 NTR25J-E04K7
R627 R628 R629 R631 R634 R635	315-0682-00 315-0203-00 315-0103-00 315-0472-00 315-0122-00 315-0123-00			RES, FXD, FILM: 6.8K OHM, 5%, 0.25W RES, FXD, FILM: 20K OHM, 5%, 0.25W RES, FXD, FILM: 10K OHM, 5%, 0.25W RES, FXD, FILM: 4.7K OHM, 5%, 0.25W RES, FXD, FILM: 1.2K OHM, 5%, 0.25W RES, FXD, FILM: 12K OHM, 5%, 0.25W	57668 57668 19701 57668 57668 57668	NTR25J-E06K8 NTR25J-E 20K 5043CX10K00J NTR25J-E04K7 NTR25J-E01K2 NTR25J-E12K0
R637 R638 R639 R641 R642 R644	315-0102-00 315-0202-00 315-0271-00 315-0202-00 315-0271-00 315-0102-00			RES, FXD, FILM: 1K OHM, 5%, 0.25W RES, FXD, FILM: 2K OHM, 5%, 0.25W RES, FXD, FILM: 270 OHM, 5%, 0.25W RES, FXD, FILM: 2K OHM, 5%, 0.25W RES, FXD, FILM: 270 OHM, 5%, 0.25W RES, FXD, FILM: 270 OHM, 5%, 0.25W	57668 57668 57668 57668 57668 57668	NTR25JE01K0 NTR25J-E 2K NTR25J-E270E NTR25J-E 2K NTR25J-E270E NTR25JE01K0
R645 R647 R648 R649 R651 R652	315-0202-00 315-0100-00 315-0241-00 315-0682-00 315-0752-00 311-1225-00			RES,FXD,FILM:2K OHM,5%,0.25W RES,FXD,FILM:10 OHM,5%,0.25W RES,FXD,FILM:240 OHM,5%,0.25W RES,FXD,FILM:6.8K OHM,5%,0.25W RES,FXD,FILM:7.5K OHM,5%,0.25W RES,FXD,FILM:7.5K OHM,0.5W	57668 19701 19701 57668 57668 32997	NTR25J-E 2K 5043CX10RR00J 5043CX240R0J NTR25J-E06K8 NTR25J-E07K5 3386F-T04-102
R653 R655 R657 R658 R659 R660	315-0752-00 315-0201-00 315-0102-00 315-0302-00 315-0471-00 315-0362-00	B080000		RES,FXD,FILM:7.5K OHM,5%,0.25W RES,FXD,FILM:200 OHM,5%,0.25W RES,FXD,FILM:1K OHM,5%,0.25W RES,FXD,FILM:3K OHM,5%,0.25W RES,FXD,FILM:470 OHM,5%,0.25W RES,FXD,FILM:3.6K OHM,5%,0.25W	57668 57668 57668 57668 57668 19701	NTR25J-E07K5 NTR25J-E200E NTR25JE01K0 NTR25J-E03K0 NTR25J-E470E 5043CX3K600J
R661 R662 R663 R665 R665 R666	315-0302-00 315-0202-00 315-0362-00 315-0431-00 315-0271-00 315-0511-00	B010100 B080000	B079999	RES,FXD,FILM:3K OHM,5%,0.25W RES,FXD,FILM:2K OHM,5%,0.25W RES,FXD,FILM:3.6K OHM,5%,0.25W RES,FXD,FILM:430 OHM,5%,0.25W RES,FXD,FILM:270 OHM,5%,0.25W RES,FXD,FILM:510 OHM,5%,0.25W	57668 57668 19701 19701 57668 19701	NTR25J-E03K0 NTR25J-E 2K 5043CX3K600J 5043CX430R0J NTR25J-E270E 5043CX510R0J
R668 R669 R670 R672	315-0752-00 315-0162-00 315-0471-00 315-0511-00			RES,FXD,FILM:7.5K OHM,5%,0.25W RES,FXD,FILM:1.6K OHM,5%,0.25W RES,FXD,FILM:470 OHM,5%,0.25W RES,FXD,FILM:510 OHM,5%,0.25W	57668 19701 57668 19701	NTR25J-E07K5 5043CX1K600J NTR25J-E470E 5043CX510R0J

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description	Mfr. Code	Mfr. Part No.
R673	315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R675	311-1235-00		RES, VAR, NONWY: 100K OHM, 0.5W	32997	3386F-T04-104
R676	315-0433-00		RES,FXD,FILM:43K OHM,5%,0.25W	19701	5043CX43K00J
R677	315-0820-00		RES, FXD, FILM: 82 OHM, 5%, 0.25W	57668	NTR25J-E82E0
R679	315-0621-00		RES, FXD, FILM: 620 OHM, 5%, 0.25W	57668	NTR25J-E620E
R680	315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
R681	315-0623-00		RES, FXD, FILM: 62K OHM, 5%, 0.25W	19701	5043CX62K00J
R682	315-0303-00		RES, FXD, FILM: 30K OHM, 5%, 0.25W	19701	5043CX30K00J
R683	315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R684	321-0192-00		RES, FXD, FILM: 976 OHM, 1%, 0.125W, TC=T0	19701 19701	5033ED976R0F 5043CX51R00J
R685 R686	315-0510-00 301-0133-00		RES,FXD,FILM:51 OHM,5%,0.25W RES,FXD,FILM:13K OHM,5%,0.5W	57668	TR50J-E13K
				19701	5043CX51R00J
R687	315-0510-00		RES,FXD,FILM:51 OHM,5%,0.25W RES,FXD,FILM:1K OHM,5%,0.25W	5 766 8	NTR25JE01K0
R689 R690	315-0102-00 315-0752-00		RES.FXD.FILM:7.5K OFM.5%,0.25W	57668	NTR25J-E07K5
R691	321-0260-00		RES.FXD.FILM: 4.99K OHM, 1%, 0.125W, TC=TO	19701	5033ED4K990F
R692	321-0268-00		RES.FXD.FILM:6.04K OHM.1%,0.125W,TC=T0	19701	5043ED6K040F
R693	321-0268-00		RES, FXD, FILM: 6.04K OHM, 1%, 0.125W, TC=TO	19701	5043ED6K040F
R694	321-0260-00		RES.FXD.FILM:4.99K OHM.1%.0.125W.TC=TO	19701	5033ED4K990F
R695	315-0391-00		RES.FXD.FILM:390 OHM.5%.0.25W	57668	NTR25J-E390E
R696	315-0242-00		RES, FXD, FILM: 2.4K OHM, 5%, 0.25W	57668	NTR25J-E02K4
R697	315-0391-00		RES, FXD, FILM: 390 OHM, 5%, 0.25W	576 68	NTR25J-E390E
R698	315-0102-00		RES, FXD, FILM: 1K OHM, 5%, 0.25W	57668	NTR25JE01K0
R701	321-0222-07		RES, FXD, FILM: 2.0K OHM, 0.1%, 0.125W, TC=T9	19701	5033RE2K000B
R704	321-0222-07		RES, FXD, FILM: 2.0K OFM, 0.1%, 0.125W, TC=T9	19701	5033RE2K000B
R706	315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
R707	315-0104-00		RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
R710	321-0327-00		RES.FXD,FILM:24.9K OHM,1%,0.125W,TC=T0	07716	CEAD24901F
R711	315-0104-00		RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
R713	321-0452-00		RES, FXD, FILM: 499K OHM, 1%, 0.125W, TC=TO	19701	5043ED499K0F
R714	321-0356-00		RES_FXD, FILM: 49.9K OHM, 1%, 0.125W, TC=TO	19701	5033ED49K90F
R716	321-0356-00		RES,FXD,FILM:49.9K OHM,1%,0.125W,TC=TO	19701	5033ED49K90F
R717	321-0268-00		RES,FXD,FILM:6.04K OHM,1%,0.125W,TC=TO	19701	5043ED6K040F
R720	321-0174-00		RES, FXD, FILM: 634 OHM, 1%, 0.125W, TC=T0	07716	CEAD634R0F
R722	315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
R723	315-0104-00		RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
R725	321-0327-00		RES,FXD,FILM:24.9K OHM,1%,0.125W,TC=TO	07716	CEAD24901F
R726	315-0104-00		RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
R728	315-0103-00		RES, FXD, FILM: 10K OHM, 5%, 0.25W	19701	5043CX10K00J
R729	315-0104-00		RES, FXD, FILM: 100K OHM, 5%, 0.25W	57668	NTR25J-E100K
R731 R732	315-0273-00 315-0104-00		RES,FXD,FILM:27K OHM,5%,0.25W RES,FXD,FILM:100K OHM,5%,0.25W	57668 57668	NTR25J-E27K0 NTR25J-E100K
K/32	313-0104-00		RES, FAD, FIEH. 1000 OFFI, 50, 0.25W		WINESS LIBOR
R734	315-0511-00		RES, FXD, FILM: 510 OHM, 5%, 0.25W	19701	5043CX510R0J
R736	315-0103-00		RES, FXD, FILM: 10K 0HM, 5%, 0.25W	19701	5043CX10K00J
R738	321-0225-00		RES, FXD, FILM: 2.15K OHM, 1%, 0.125W, TC=TO	19701	5033ED2K15F
R739	321-0132-00		RES, FXD, FILM: 232 OHM, 1%, 0.125W, TC=T0	19701	5043ED232R0F
R741	321-0260-00		RES, FXD, FILM: 4.99K OHM, 1%, 0.125W, TC=TO	19701 57668	5033ED4K990F NTR25J-E620E
R745	315-0621-00		RES, FXD, FILM: 620 OHM, 5%, 0.25W	3/000	NTR25J=E020L
R747	321-0207-00		RES, FXD, FILM: 1.40K OHM, 1%, 0.125W, TC=TO	19701	5033ED1K400F
R748	321-0186-00		RES, FXD, FILM: 845 OHM, 1%, 0.125W, TC=TO	19701	5043ED845R0F 5033ED1K91F
R750	321-0220-00		RES,FXD,FILM:1.91K OHM,1%,0.125W,TC=TO RES,FXD,FILM:2.80K OHM,1%,0.125W,TC=TO	19701 07 716	CEAD28000F
R751 R753	321-0236-00 315-0912-00		RES.FXD.FILM:2.80K UHM,1%,U.125W,TC=1U RES.FXD.FILM:9.1K OHM.5%,0.25W	57668	NTR25J-E09K1
R757	321-0164-00		RES,FXD,FILM:9.1K OFM,3%,U.25W RES,FXD,FILM:499 OHM,1%,0.125W,TC=TO	19701	5033ED499R0F
0750	201 0140 00		RES.FXD.FILM:340 OHM.1%,0.125W.TC=T0	07716	CEAD340R0F
R759 R761	321-0148-00 321-0057-00		RES, FXD, FILM: 340 OFM, 1%, 0.125W, 7C=10 RES, FXD, FILM: 38.3 OHM, 0.5%, 0.125W, 7C=T0	91637	CMF55116G38R30F
R762	311-1221-00		RES. VAR. NONWY: TRMR. 50 OHM. 0.5W	32997	3386F-T04-500
R764	308-0300-00		RES, FXD, WW: 1.75K OHM, 1%, 3W	00213	1240S-1750-1
•	312 3000 30				

7-20 REV MAR 1988

Component No.	Tektronix Part No.	Serial/Assembly No. Effective Dscont	Name & Description	Mfr. Code	Mfr. Part No.
R766	321-0148-00		RES.FXD.FILM:340 OHM.1%,0.125W.TC=T0	07716	CEAD340R0F
R768	321-0222-07		RES.FXD.FILM:2.0K OHM, 0.1%, 0.125W, TC=T9	19701	5033RE2K000B
R770	315-0432-00		RES, FXD, FILM: 4.3K OHM, 5%, 0.25W	57668	NTR25J-E04K3
R772	315-0302-00		RES, FXD, FILM: 3K OHM, 5%, 0.25W	57668	NTR25J-E03K0
R774	321-0153-00		RES, FXD, FILM: 383 OHM, 1%, 0.125W, TC=T0	07716	CEAD383R0F
				57668	NTR25J-E75K0
R901	315-0753-00		RES,FXD,FILM:75K OHM,5%,0.25W (7B53A ONLY)	3/000	N1K230-E73N0
R903	315-0154-00		RES,FXD,FILM:150K OHM,5%,0.25W (7853A ONLY)	57668	NTR25J-E150K
R905	321-0344-00		RES.FXD.FILM:37.4K OHM.1%.0.125W.TC=TO (7B53A ONLY)	19701	5033ED 37K40F
R907	315-0154-00		ŔĖS,FXD,FILM:150K OHM,5%,0.25W (7B53A ONLY)	57668	NTR25J-E150K
R909	315-0154-00		RES,FXD,FILM:150K OHM,5%,0.25W (7B53A ONLY)	57668	NTR25J-E150K
R911	315-0753-00		RES,FXD,FILM:75K OHM,5%,0.25W (7B53A ONLY)	57668	NTR25J-E75K0
R913	315-0753-00		RES,FXD,FILM:75K OHM,5%,0.25W (7853A ONLY)	57668	NTR25J-E75K0
R915	315-0154-00		RES,FXD,FILM:150K OHM,5%,0.25W (7853A ONLY)	57668	NTR25J-E150K
R917	321-0344-00		RES,FXD,FILM:37.4K OHM,1%,0.125W,TC=TO (7853A ONLY)	19701	5033ED 37K40F
R919	315-0154-00		RES, FXD, FILM: 150K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E150K
R921	315-0753-00		RES, FXD, FILM: 75K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E75K0
R923	315-0154-00		RES, FXD, FILM: 150K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E150K
R925	321-0344-00		RES,FXD,FILM:37.4K OHM,1%,0.125W,TC=TO (7B53A ONLY)	19701	5033ED 37K40F
R926	321-0344-00		RES, FXD, FILM:37.4K OHM, 1%, 0.125W, TC=TO (7853A ONLY)	19701	5033ED 37K40F
R927	315-0151-00	B150000	RES,FXD,FILM:150 OHM,5%,0.25W (7853A ONLY)	57668	NTR25J-E150E
R928	315-0513-00		RES, FXD, FILM: 51K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E51K0
R929	315-0513-00		RES, FXD, FILM: 51K OHM, 5%, 0.25W (7853A ONLY)	5 766 8	NTR25J-E51K0
R931	315-0154-00		RES,FXD,FILM:150K OHM,5%,0.25W (7B53A ONLY)	57668	NTR25J-E150K
R932	315-0154-00		RES, FXD, FILM: 150K OHM, 5%, 0.25W (7B53A ONLY)	57668	NTR25J-E150K
R934	315-0753-00		RES,FXD,FILM:75K OHM,5%,0.25W (7B53A ONLY)	57668	NTR25J-E75K0
R935	315-0753-00		RES, FXD, FILM: 75K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E75K0
R937	315-01 54-00		RES, FXD, FILM: 150K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E150K
R938	315-0154 -00		RES, FXD, FILM: 150K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E150K
R940	315-0753 -00		RES, FXD, FILM: 75K OHM, 5%, 0.25W (7853A ONLY)	57668	NTR25J-E75K0
R941	315 -0753-00		(7853A ONLY)	57668	NTR25J-E75K0
R943	315-0154-00		RES,FXD,FILM:150K OHM,5%,0.25W (7853A ONLY)	5 766 8	NTR25J-E150K
R944	315-0154-00		(7853A ONLT) RES,FXD,FILM:150K OHM,5%,0.25W (7853A ONLY)	57668	NTR25J-E150K
S4			(PART OF R4)		
\$5			(PART OF R5)		
\$10			(PART OF A2)		
			(we swell		

REV MAR 1988 7-21

Tektronix		Serial/Assembly No.			Mfr.		
Component No.	Part No.	Effective	Discont	Name & Description	Code	Mfr. Part No.	
S20			and and comment of the comment of th	(PART OF A3)			
S30				(PART OF A5)			
S40	260-1133-00			SWITCH, PUSH: DP, 1A, 25VDC, 3 BUTTON	31918	ORDER BY DESCR	
S41	200 1100 00			(PART OF S40)			
S42				(PART OF S40)			
S100	263-1099-00			SW CAM ACTR AS:TIME/DIV	80009	263-1099-00	
3100	200 1000 00			(7B53A ONLY)			
S100	105-0326-00			ACTR ASSY, CAM S:TIME/CM	80009	105-0326-00	
5100	200 0222 00			(7B53AN ONLY)			
S144				(PART OF R144)			
S251	260-0960-01			SWITCH, SLIDE: FORM Z, 0.5A, 120VDC, BLACK BTTN	10389	23-021-043	
S2 5 2	260-1309-00			SWITCH, SENS: SPDT, 5A, 250AC, MOM	01963	E63-10H	
S262	260-0960-01			SWITCH, SLIDE: FORM Z, 0.5A, 120VDC, BLACK BTTN	10389	23-021-043	
S762	260-1208-00			SWITCH, PUSH: DPDT, 28VDC, PUSH-PUSH	31918	ORDER BY DESCR	
U350	156-0205-00	B010100	B209999	MICROCKT, DGTL: ECL, QUAD 2-INPUT NOR GATE	80009	156-0205-00	
U350	155-0109-01		525555	MICROCKT, LINEAR: MONOLITHIC TRIG	80009	155-0109-01	
	• • • • • • • • • • • • • • • • • • • •			•			
U355	156-0205-00	B010100	B209999	MICROCKT, DGTL: ECL, QUAD 2-INPUT NOR GATE	80009	156-0205-00	
U3 75	156-0204-01		B209999	MICROCKT, DGTL: DUAL CLOCK LATCH W/CUT LD	80009	156-0204-01	
				(7853A ONLY)			
U375	156-0204-00	B010100	B019999	MICROCKT, DGTL: ECL, DUAL CLOCK LATCH	52648	SP1669B	
				(7B53AN ONLY)			
U375	156-0204-01	B020000	B209999	MICROCKT, DGTL: DUAL CLOCK LATCH W/CUT LD	80009	156-0204-01	
				(7B53AN ONLY)			
U450	156-0205-00	B010100	8209999	MICROCKT,DGTL:ECL,QUAD 2-INPUT NOR GATE	80009	156-0205-00	
U450	155-0109-01	B210000		MICROCKT, LINEAR: MONOLITHIC TRIG	80009	155-0109-01	
				A			
U455	156-0205-00		B209999	MICROCKT, DGTL: ECL, QUAD 2-INPUT NOR GATE	80009	156-0205-00	
U475	156-0204-00	B010100	B209999	MICROCKT,DGTL:ECL,DUAL CLOCK LATCH	52648	SP1669B	
U520	155-0049-01	B010100	B185439	MICROCKT, DGTL: W/LOCKOUT DSBL FCTN	80009	155-0049-01	
U520	155-00 49-02	B185440		MICROCKT, DGTL: SWEEP CONTROL, W/LOCKOUT	80009	155-0049-02	
				DISABLE FUNCTION		455 0040 00	
U 580	155-0042 -0 3		B191179	MICROCKT, LINEAR: MILLER INTEGRATOR	80009	155-0042-03	
U580	155-0028-00	B191180		MICROCKT, LINEAR: MILLER INTEGRATOR	80009	155-0028-00	
				ATTORNEY LINEAR MALLER THEFTONATOR	00000	155 0040 00	
U650	155-0042-03		B191179	MICROCKT, LINEAR: MILLER INTEGRATOR	80009	155-0042-03	
U650	155-0028-00	B191180		MICROCKT, LINEAR: MILLER INTEGRATOR	80009	155-0028-00	
U720	156-0048-00			MICROCKT, LINEAR: 5 XSTR ARRAY	02735	CA3046	
U744	156-0048-00			MICROCKT, LINEAR: 5 XSTR ARRAY	02735	CA3046	
VR320	152-0149-00		B209999	SEMICOND DVC, DI:ZEN, SI, 10V, 5%, 0.4W, DO-7	15238	Z5406	
VR420	152-01 49-00	B010100	B209999	SEMICOND DVC,DI:ZEN,SI,10V,5%,0.4W,DO-7	15238	Z5406	
VR570	152-0461-00			SEMICOND DVC.DI:ZEN,SI,6.2V,5%,0.4W,DO-7	04713	SZG25002K2	
VR708	152-0227-00			SEMICOND DVC.DI:ZEN,SI,6.2V,5%,0.4W,DO-7	04713	SZ13903	
W654	131-0566-00	B241890		BUS, CONDUCTOR: DUMMY RES, 0.094 OD X 0.225 L	24546	OMA 07	

DIAGRAMS AND CIRCUIT BOARD ILLUSTRATIONS

Symbols

Graphic symbols and class designation letters are based on ANSI Standard Y32.2-1975.

Logic symbology is based on ANSI Y32.14-1973 in terms of positive logic. Logic symbols depict the logic function performed and may differ from the manufacturer's data.

The overline on a signal name indicates that the signal performs its intended function when it is in the low state.

Abbreviations are based on ANSI Y1.1-1972.

Other ANSI standards that are used in the preparation of diagrams by Tektronix, Inc. are:

Y14.15, 1966 Drafting Practices.

Y14.2, 1973 Line Conventions and Lettering.

Y10.5, 1968 Letter Symbols for Quantities Used in Electrical Science and Electrical

Engineering.

American National Standard Institute 1430 Broadway New York, New York 10018

Component Values

Electrical components shown on the diagrams are in the following units unless noted otherwise:

Capacitors = Values one or greater are in picofarads (pF).
Values less than one are in microfarads

 (μF) .


Resistors = Ohms (Ω) .

The information and special symbols below may appear in this manual.

Assembly Numbers and Grid Coordinates

Each assembly in the instrument is assigned an assembly number (e.g., A20). The assembly number appears on the circuit board outline on the diagram, in the title for the circuit board component location illustration, and in the lookup table for the schematic diagram and corresponding component locator illustration. The Replaceable Electrical Parts list is arranged by assemblies in numerical sequence; the components are listed by component number *(see following illustration for constructing a component number).

The schematic diagram and circuit board component location illustration have grids. A lookup table with the grid coordinates is provided for ease of locating the component. Only the components illustrated on the facing diagram are listed in the lookup table. When more than one schematic diagram is used to illustrate the circuitry on a circuit board, the circuit board illustration may only appear opposite the first diagram on which it was illustrated; the lookup table will list the diagram number of other diagrams that the circuitry of the circuit board appears on.

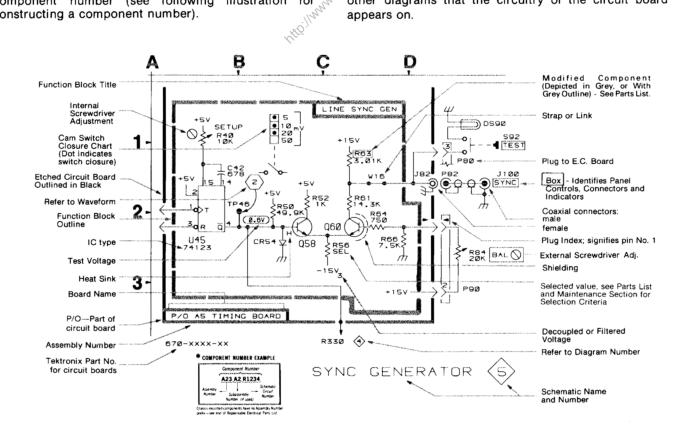



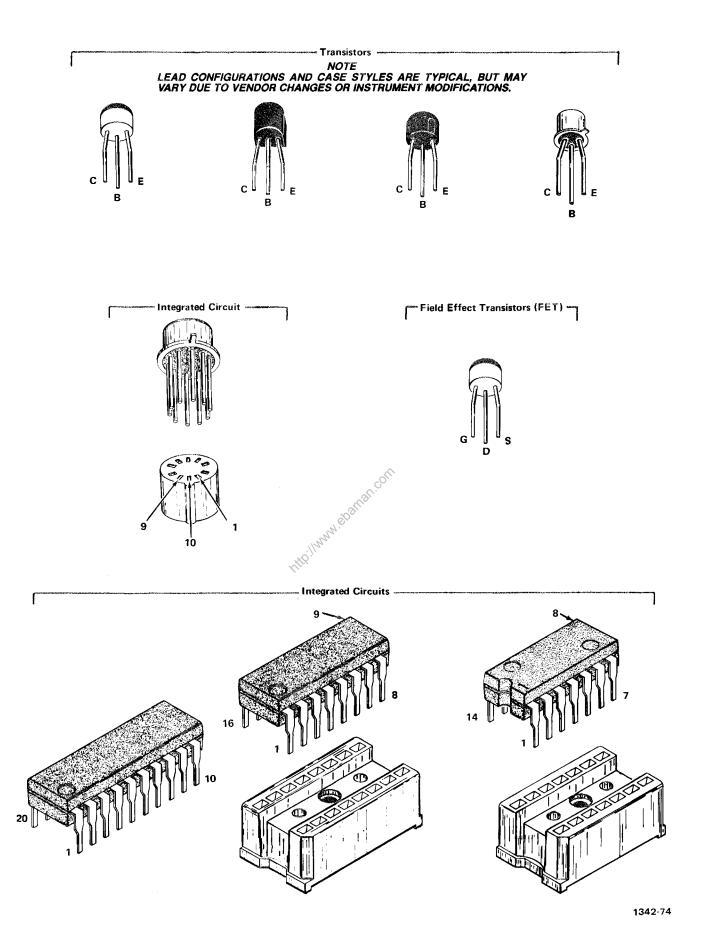


Fig. 8-1. Electrode configuration for semiconductors in this instrument.

REV DEC 1981

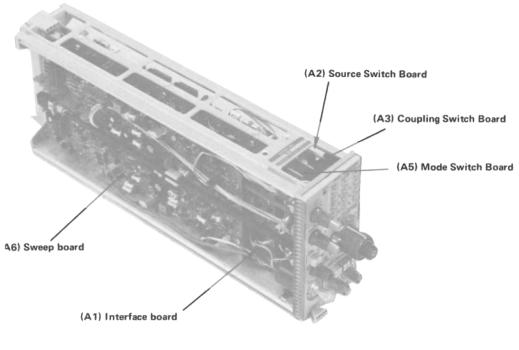

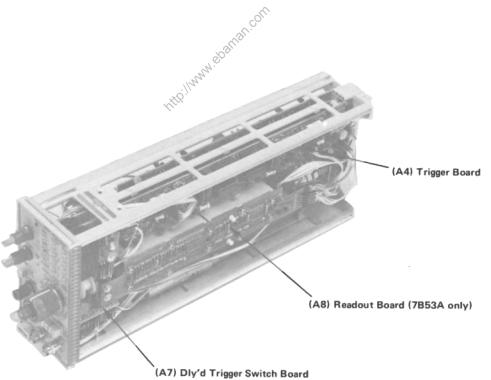

1342-75


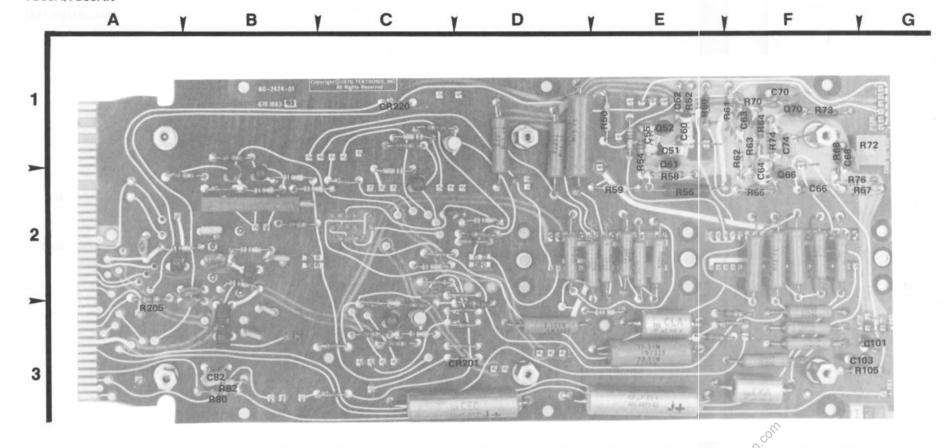


Fig. 8-3. Partial A1-Interface circuit board component locator (SN B090000 and up).

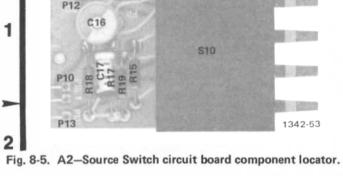

В

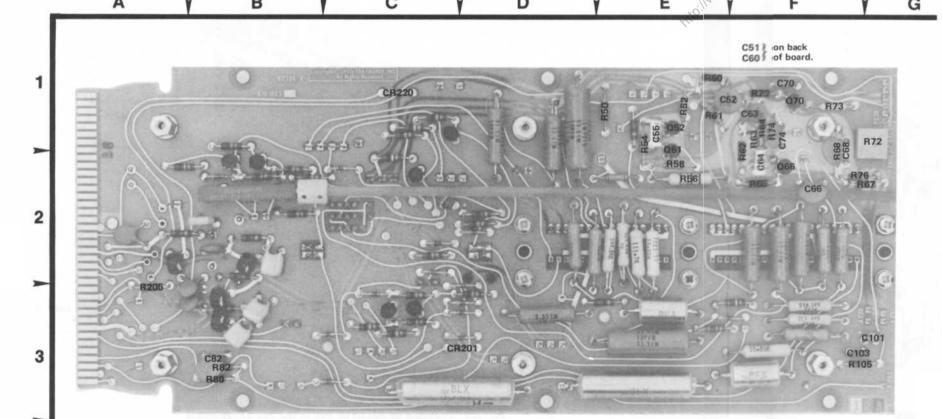


Fig. 8-4. Partial A1-Interface circuit board component locator (SN B089999 and below),

Static Sensitive Devices See Maintenance Section

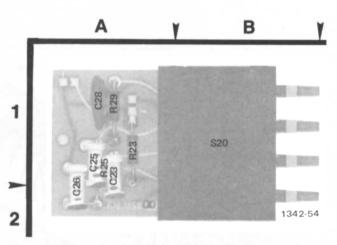


Fig. 8-6. A3-Coupling Switch circuit board component locator.

1342-52

1342-51

	P/O A1 ASSY (SN B010000 & up) Main Trigger Preamp						
CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION		
C51* C52 C55 C60* C63 C64 C66 C68 C70 C74 C82	B2 B1 B3 B4 C4 C4 D3 D5 C6 C5	E1 E1 E1 F2 F1 F1 B3 E1	R61 R62 R63 R64 R66 R67 R68 R70 R72 R73 R74 R76	B4 C4 C4 C4 C5 C5 C5 C5 D5	E1 F2 F1 F2 G2 F1 F1 G1 F1 G2		
Q52 Q61 Q66 Q70	B2 B4 C4 C5	E2 F2 F1	R80 R82 TP50 **	C6 C6 A2 A4	A3 A3 C1		
R50 R52 R54 R56 R58 R59 R60	A2 B2 B3 A3 A4 B3	E1 E1 E1 E2 E2 E2 E1	C2 R1	E3 E3 E3	CHASSIS CHASSIS CHASSIS		
A2 ASSY		46; 144	(Stockey of a Na-stigle-ancient energy), estembly to energy energy energy energy energy energy energy energy e	Main Trigger	Preamp 🚺		
C16 C17 P10 P11 P12 P13	F3 F4 E5 E3 G4 E6	A1 A1 A1 A1 A1 A2	R15 R17 R18 R19	F4 F3 G4 F4	A1 A1 A1 A1 B1		
A3 ASSY		gans, manyani wa wa nakazi wa kasa wana wa kasa wa kasa wa kasa wa kasa wa kasa wa kasa ka ka ka ka ka ka ka k	ngga Connegoga La Dallo - nag-Carpo ngo ka 2000kay a 1604-1900 a 1800 iyo na	Main Trigger	Preamp 🚺		
C23 C25 C26 C28	G4 H4 H4 H5	A1 A1 A1 A1	R23 R25 R29 S20	G3 H4 A1 G5	A1 A1 A1 B1		

^{*} Location of parts for SN B089999 & below on back of board (F1)

^{**} TP50 and TP59 located on 7B53A only.

The voltages and waveforms shown on this diagram were obtained by using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFICATIONS	RECOMMENDED TYPE
Oscilloscope	Frequency response DC to 65 MHz Deflection factor 5 mV to 5 V/Div Input impedance 10 MΩ, 20 pF Sweep rate 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B50 Time-Base Unit, or equivalent.
Probe	Fast rise 10X attenuation probe compatible with the vertical amplifier of the test oscilloscope.	Tektronix P6053A, or equivalent.
Voltmeter (Non-loading digital multimeter)	Input impedance $10~\text{M}\Omega$ Range $0-500~\text{V}$	Tektronix 7D13 Digital Multimeter (test oscilloscope must have readout system) or Fairchild Model 7050, or equivalent.
Extender	Required for extending the 7B53AN from the mainframe when making waveform and voltage measurements.	Tektronix extender plug-in. Tektronix Part Number 067-0589-00 or Tektronix flexible extender, Tektronix Part Number 067-0616-00, or equivalent.

Voltage Conditions

The 7B53AN Unit under test must be connected to a mainframe separate from the test oscilloscope. No signal is applied for voltage measurements. Voltmeter common is connected to chassis ground.

7B53AN Control Settings

MAIN TRIGGERING

MODE **AUTO** COUPLING AC **SOURCE** INT SLOPE (+)

LEVEL Control center

TIME/DIV OR DLY TIME

1 ms

DLY'D Time/Division 0.5 ms (press in for DLY'D

display mode)

VARIABLE CAL (pull out for MIXED

display mode)

DELAY TIME MULT

5.00

MAG

POSITION DLY'D TRIG

Center display horizontally

LEVEL SLOPE

Control center (+)

COUPLING


AC


SOURCE

INT

Waveform Conditions

Front panel controls are set the same as for voltage measurements. The test oscilloscope 0.4 Volt calibration signal is applied to the vertical amplifier of the mainframe to which the 7B53AN is connected. The vertical amplifier of the system under test is set for 100 mV/Division. The test oscilloscope is triggered from the calibration signal; vertical input is AC coupled.

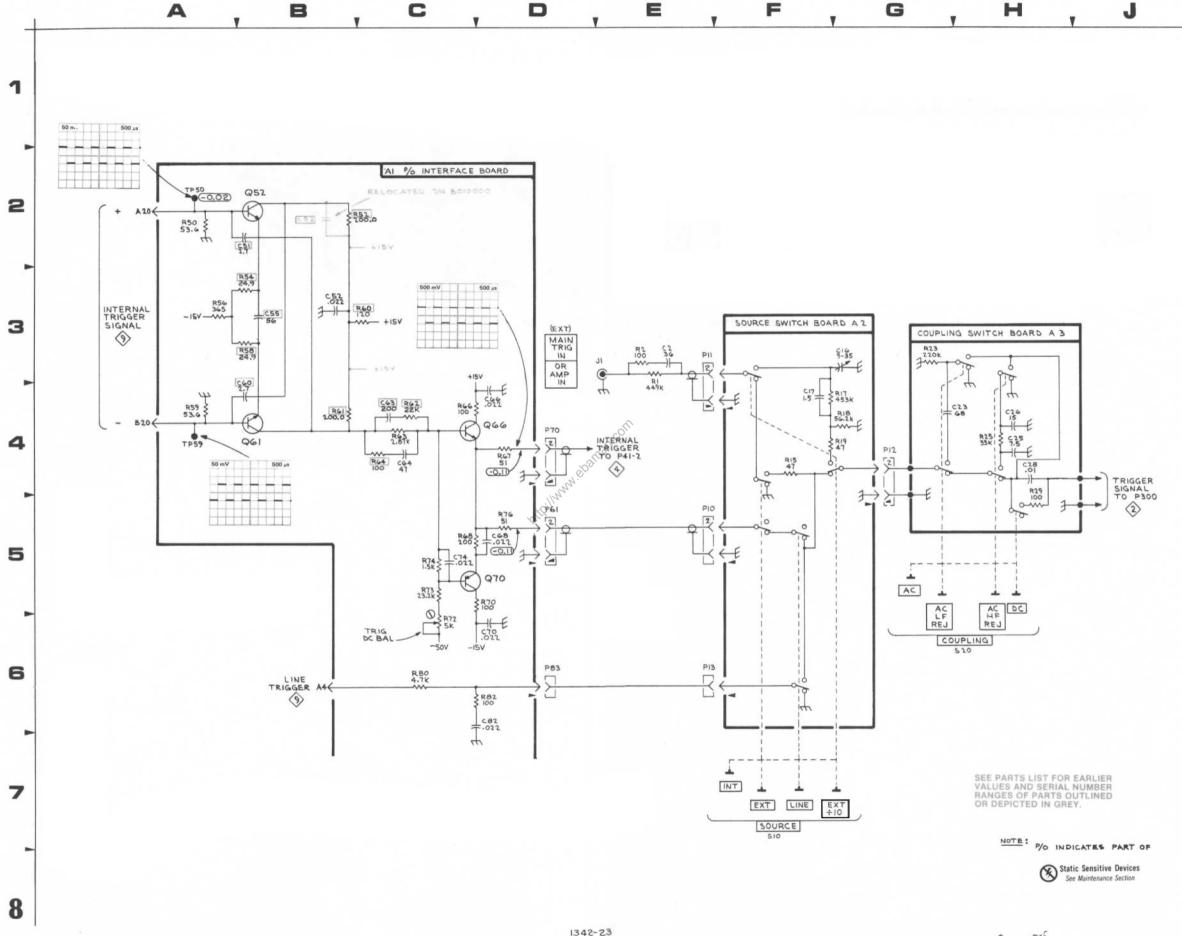

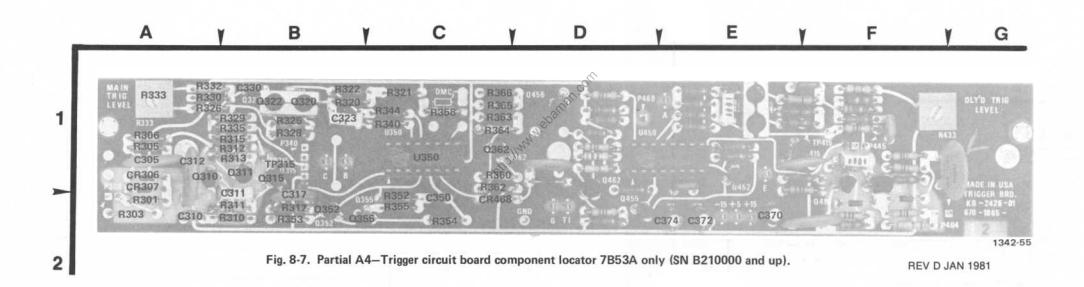



D/O		4 CCV
P/U	Α4	ASSY

Main Trigger Generator (SN B210000 & Up)



			011 D2 10000 a O		
CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION
C305 C310 C311 C312 C317 C323 C330 C350 C370 C372 C374 CR306 CR307 P300 P340 Q310 Q311 Q315 Q320 Q322 Q355 Q362 R301 R303 R305 R306 R310 R311 R311	C7 D4 D5 E7 E6 F4 K5 K1 B1 B2 C6 C4 B4 M3 D4 D5 E5 F5 H2 L2 D3 C4 B5 C7 D7 D6	A1282 A1 B2 B1 C2 E2 E2 A1 A2 B1 B1 B2 C1 A2 A1 B2 B1 B2 B1 B2 B1 B2 B1	R313 R315 R317 R320 R321 R322 R325 R326 R328 R329 R330 R332 R333 R335 R340 R344 R352 R353 R354 R355 R364 R365 R360 R362 R363 R365 R365 R366 TP315 U350 P300 R4 S4	DE56 F444 H56 F55 H55 H544 M544 M544 M544 M544 M544 M54	B1 B2 B1 C1 B1 B1 A1 D1 CC2 CC1 CC1 CC1 B1 CHASSIS CHASSIS

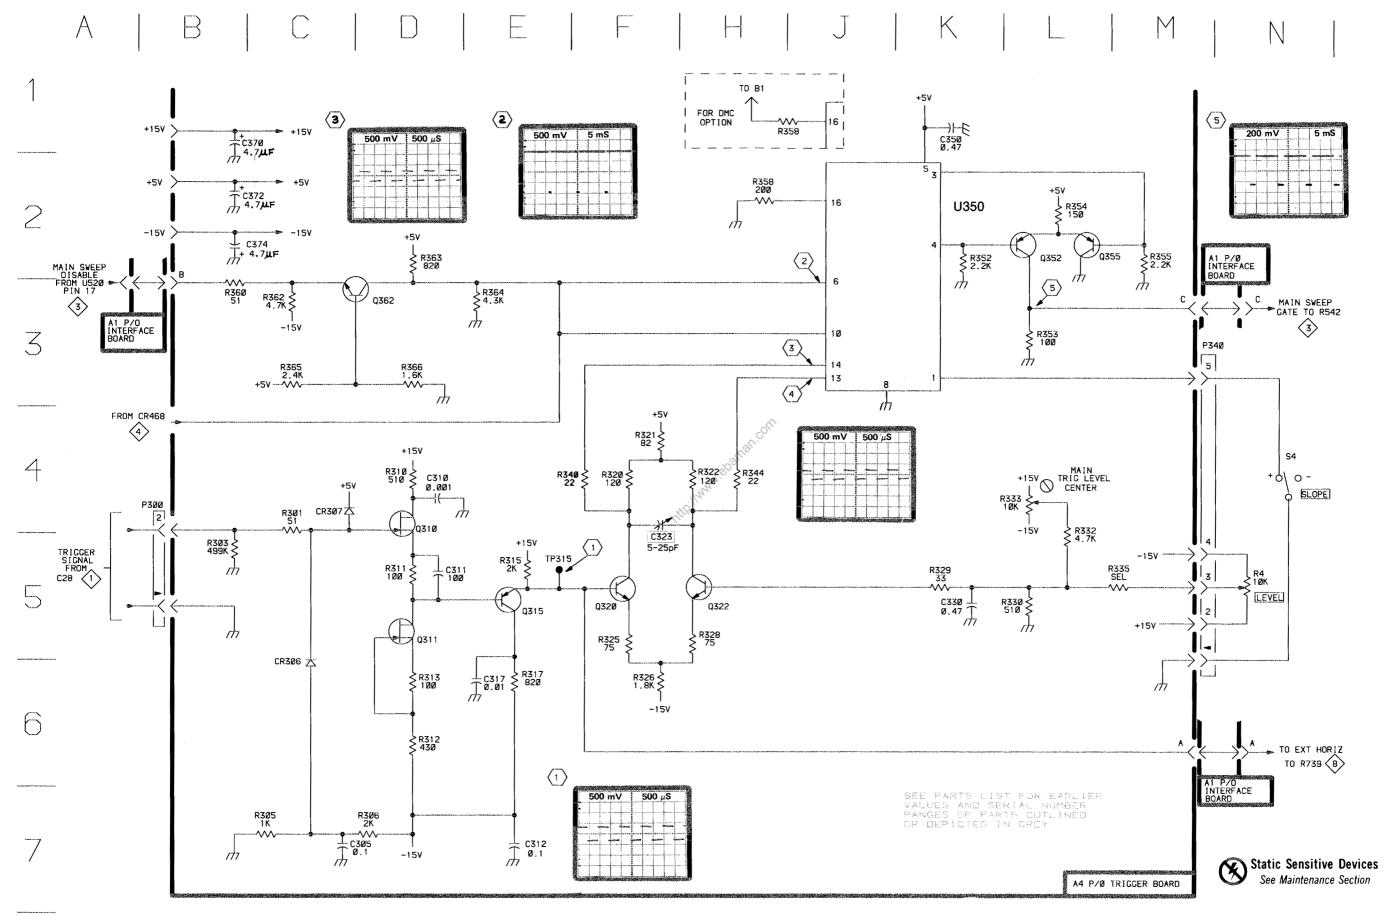

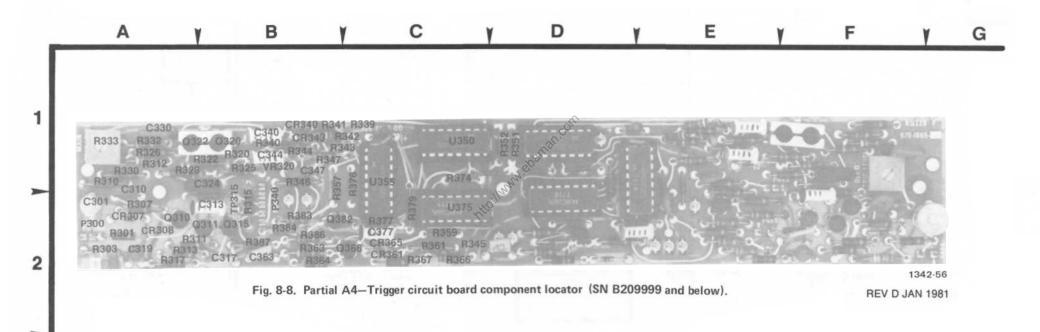

D/O	ΛΛ	VSSV	

Main Trigger Generator (SN B209999 & Below)

_	^
/	2 N
`	-/

CIRCUIT	SCHEMATIC	BOARD	CIRCUIT	SCHEMATIC	BOARD
NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION
C301 C310 C310 C313 C317 C319 C324 C324 C330 C340 C344 C347 C359 C363 C377 CR307 CR308 CR340 CR343 CR361 CR365 Q310 Q311 Q315 Q320 Q322 Q366 Q382 R301 R303 R307 R310 R311 R312 R313 R315 R317 R320 R311 R312 R313 R315 R317 R320 R322 R325 R326 R328	A7 B6 B7 B7 C7 C7 C4 C5 D2 E4 A6 A7 D2 E7 B7 B7 C7 F13 A7 A6 B6 B7 B8 B6 C7 C7 C7	A21 B2 B2 B11 B11 B11 B11 B11 B11 B11 B11	R330 R332 R333 R335 R339 R340 R342 R343 R344 R345 R346 R347 R351 R352 R357 R359 R361 R366 R367 R376 R377 R379 R378 R378 R378 R378 R379 R379 R379 R379 R379 R379 R379 R379	D76CC66D44D5554532222222334444333334D554244433344C4	A1 A1 A1 B2 B1 BCC1 BB1 CC2 BB1 CC2 BBCCCCCCCCCC

The voltages and waveforms shown on this diagram were obtained by using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFIC	ATIONS	RECOMMENDED TYPE
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 MΩ, 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B50 Time-Base Unit, or equivalent.
Probe	Fast rise 10X atten patible with the verti		Tektronix P6053A, or equivalent.
Voltmeter (Non-loading digital multimeter)	Input impedance Range	10 MΩ 0 – 500 V	Tektronix 7D13 Digital Multimeter (test oscilloscope must have readout system) or Fairchild Model 7050, or equivalent.
Extender	Required for extend from the mainframe form and voltage meas	when making wave-	Tektronix extender plug-in. Tektronix Part Number 067-0589-00 or Tektronix flexible extender, Tektronix Part Number 067-0616-00, or equivalent.

Voltage Conditions

The 7B53AN Unit under test must be connected to a mainframe separate from the test oscilloscope. No signal is applied for voltage measurements. Voltmeter common is connected to chassis ground.

7B53AN Control Settings

MAIN TRIGGERING

MODE AUTO
COUPLING AC
SOURCE INT
SLOPE (+)

LEVEL Control center

TIME/DIV OR DLY TIME

IE 1 ms

DLY'D Time/Division 0.5 ms (press in for DLY'D

display mode)

VARIABLE CAL (pull out for MIXED

display mode)

DELAY TIME MULT

5.00

POSITION

MAG

Center display horizontally

DLY'D TRIG

LEVEL

Control center

SLOPE (+)
COUPLING AC
SOURCE INT

Waveform Conditions

Front panel controls are set the same as for voltage measurements. The test oscilloscope 0.4 Volt calibration signal is applied to the vertical amplifier of the mainframe to which the 7B53AN is connected. The vertical amplifier of the system under test is set for 100 mV/Division. The test oscilloscope is triggered from the calibration signal; vertical input is AC coupled.

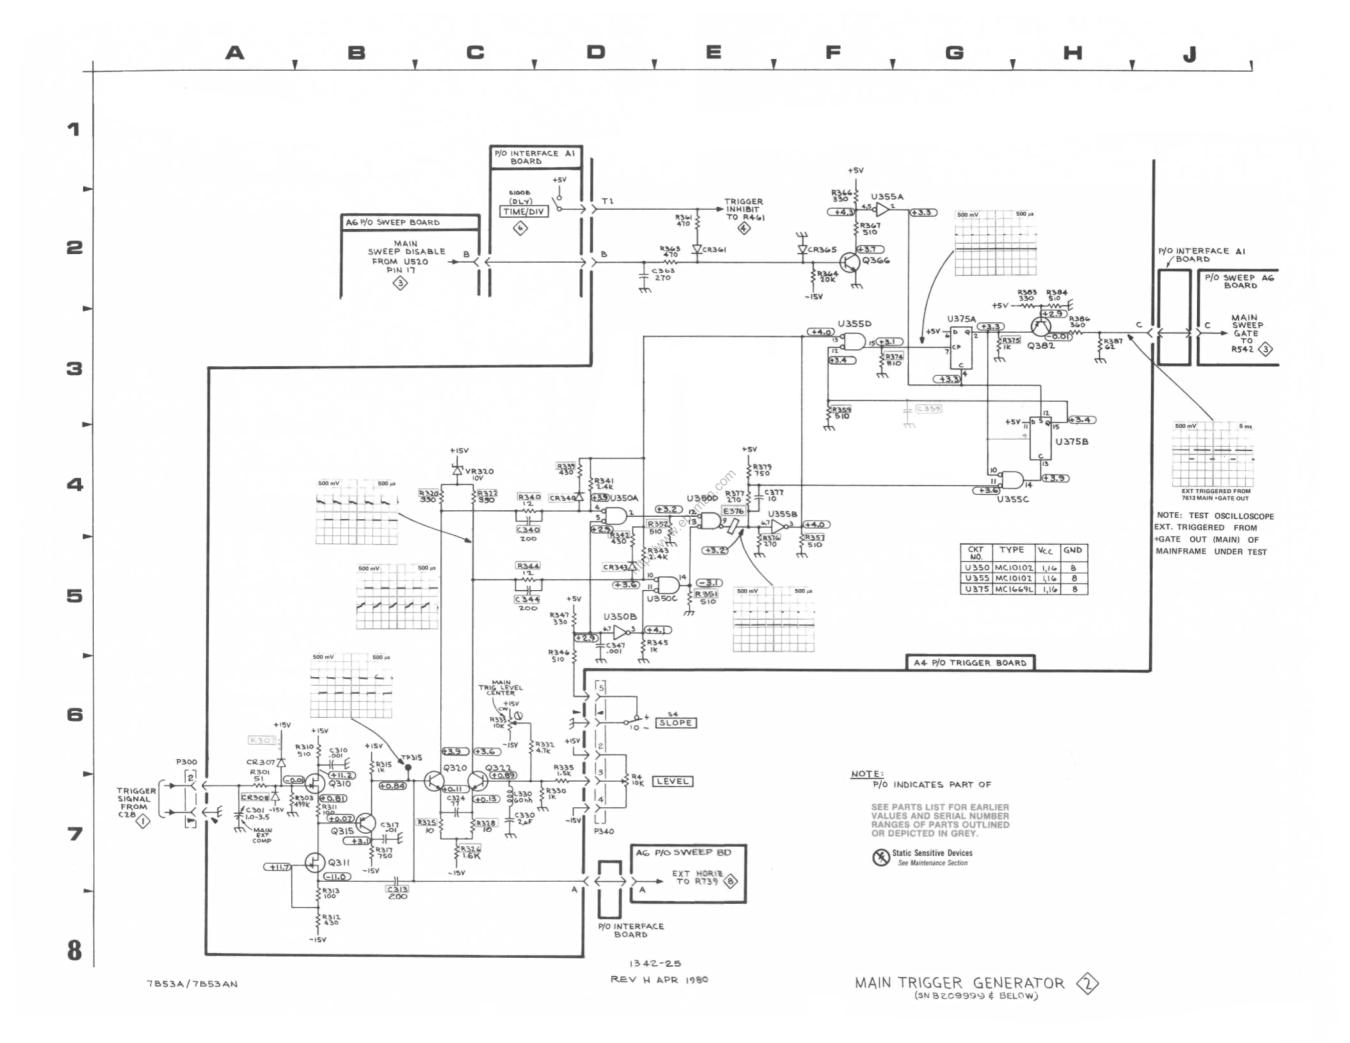


Fig. 8-9. Partial A6-Sweep circuit board component locator (SN B090000 and up),

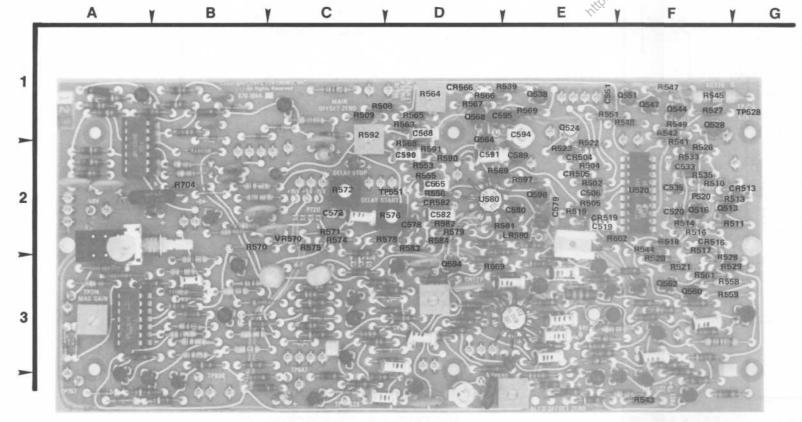


Fig. 8-10. Partial A6-Sweep circuit board component locator (SN B089999 and below).



*See Parts List for serial number ranges.

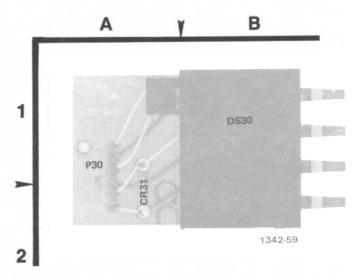


Fig. 8-11. A5-Mode Switch circuit board.

P/O A1 ASS SEE FIG. 8				Main Sweep Gen	erator 3
CIRCUIT NUMBER	SCHEMATIC	BOARD LOCATION	CIRCUIT	SCHEMATIC LOCATION	BOARD
C101 C103	E3 E3	G3 G3	R105 R205	E3 B3	F3 A3
CR220	B2	C1			
A5 ASSY				Main Sweep Ge	enerator 3
CR031	A2	A1	P030	A3	A1
DS030	A3	B1	7 000		
P/O A6 A	SSY			Main Sweep Gen (SN B090000 & I	
C506 C519 C520 C527 C528 C533 C535 C551 C555 C568 C572 C578 C579 C580 C582 C582 C590 C591 C594 C595	C3 B5 D1 E2 F2 D3 D4 E6 F6 D8 F5 G5 G4 F6 G7 H6 H6 G6	E2 E2 F1 F1 F2 E1 D2 D1 C2 D2 E2 D2 E2 D2 D2 E2 D2 E2	CR504 CR505 CR513 CR516 CR519 CR528 CR556* CR566 CR582 LR580 P570 Q513 Q516 Q524 Q528 Q538 Q538 Q544	B3 C3 B5 B5 C5 F2 G7 C8 F6 G4 F5 B5 B5 B3 D2 C5 C7	E2 E2 F2 F2 E2 D2 D1 D2 E2 C2 F2 E1 F1 E1

1342-58

1342-57

P/O A6 ASS\	D A6 ASSY						n Sweep Generato B090000 & up)	or 3
CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION
Q547 Q551 Q560 Q562 Q564 Q568 Q584 Q596	D7 D6 D6 D6 C8 D8 H5 H7	F1 F1 F3 F3 D2 D1 D3 E2	R535 R539 R541 R542 R543 R544 R545 R547 R548	D4 C5 C5 C7 C6 C6 D7 D6	F2 E1 F1 F1 F4 F2 F1 F1	R579 R581 R582 R583 R584 R589 R590 R591 R592	G5 H5 F6 H5 H5 G7 G7 G6 H6	D2 D2 D2 D2 D2 D2 D2 D2 D2 C1
R502 R504 R505 R508 R509 R510	C2 C3 C3 B2 C8 B5	E2 E2 E2 C1 C1 F2	R549 R551 R553 R555* R556 R558	D5 E6 E7 F7 F7 C6	F1 E1 D2 D2 D2 F3	R597 TP528 TP551 TP580	G7 E2 E6 J5	G1 D1 D2 D1
R511 R513 R514	B5 B4 B5	F2 F2 F2	R559 R561 R563	C6 D6 C8	F3 F3 D1	U520 U580	D3 G5	F2 D2
R516 R517 R518 R519 R520 R521 R522 R523 R526 R527 R528 R529 R533	B5 B4 C5 C4 C3 C3 C2 CD2 E3 D3	F2 22 E3 3 E2 E F F F F F F F F F F F F F F F F F	R564 R565 R566 R567 R568 R569 R570 R571 R572 R574 R575 R576 R576	D8 D8 D7 D8 E8 F4 F4 F5 F5 F5	D1 D1 D1 D2 E1 B2 C2 C2 C2 C2 D2	VR570 C528 CR528 DS8 R07 R09 S30 S100A	F4 F2 F2 G1 F1 E5 A2 F3	C2 CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS
P/O A6 ASS	Y	Property limit will state or recommendation of the state)III		Sweep Generate 3089999 & Below	(3)
C506 C519 C520 C527 C533 C535 C555 C555 C555 C568 C572 C579 C580 C582 C590 C591 C594 C595 CR505 CR513 CR516 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR519 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566 CR566	C3 B51 ED34 E66 B55 F55 G46 F5 G77 G66 BC35 BCC8 G F5 BB53 2 C C C C C C C C C C C C C C C C C C	E2 E2 FF1 F221000000000000000000000000000000	Q562 Q564 Q568 Q584 Q596 R502 R504 R505 R508 R511 R513 R516 R517 R518 R522 R522 R522 R523 R522 R523 R523 R523	D6 C8 D8 H5 H7 C2 C3 B2 C2 B5 B5 B4 B5 B5 B4 C5 B5 C4 C3 C3 C3 C3 C3 C3 C3 C7 C6 C6 C7 C6 C6	F3 D2 D1 D3 E2 E22 E12 F1 F2 F2 F2 F2 F2 F3 F3 E22 F1	R561 R563 R564 R565 R566 R567 R568 R569 R570 R571 R572 R574 R575 R578 R578 R578 R581 R583 R584 R589 R590 R591 R582 R583 R584 R589 R590 R591 R592 R597 TP528 TP551 TP580 U520 U580 VR570 CR528 CR528 DS8 R07 R09 S30 S100A	D6 C8 D8 C8 D7 E8 F4 F5 F5 F6 F6 F1 F6 F7 F6 F6 F7 F6 F7 F6 F7 F6 F7 F6 F7 F6 F7 F6 F7 F6 F7 F6 F7 F7 F7 F7 F7 F7 F7 F7 F7 F7 F7 F7 F7	F3 D1 D1 D1 D1 D1 D1 D1 D2 E1 B2 C2 C2 C2 D2 C1 E2 G1 D2 C1 E2 CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS

The voltages and waveforms shown on this diagram were obtained by using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFICATIONS	RECOMMENDED TYPE
Oscilloscope	Frequency response DC to 65 MHz Deflection factor 5 mV to 5 V/Div Input impedance 10 MΩ, 20 pF Sweep rate 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B50 Time-Base Unit, or equivalent.
Probe	Fast rise 10X attenuation probe compatible with the vertical amplifier of the test oscilloscope.	Tektronix P6053A, or equivalent.
Voltmeter (Non-loading digital multimeter)	Input impedance 10 MΩ Range 0 500 V	Tektronix 7D13 Digital Multimeter (test oscilloscope must have readout system) or Fairchild Model 7050, or equivalent.
Extender	Required for extending the 7B53AN from the mainframe when making waveform and voltage measurements.	Tektronix extender plug-in. Tektronix Part Number 067-0589-00 or Tektronix flexible extender, Tektronix Part Number 067-0616-00, or equivalent.

Voltage Conditions

The 7B53AN Unit under test must be connected to a mainframe separate from the test oscilloscope. No signal is applied for voltage measurements. Voltmeter common is connected to chassis ground.

7B53AN Control Settings

MAIN TRIGGERING

MODE AUTO
COUPLING AC
SOURCE INT
SLOPE (+)

LEVEL Control center

TIME/DIV OR DLY TIME 1 ms

DLY'D Time/Division 0.5 ms (press in for DLY'D

display mode)

VARIABLE CAL (pull out for MIXED

display mode)

DELAY TIME MULT

5.00

MAG

X 1

POSITION

DLY'D TRIG LEVEL

Control center

Center display horizontally


SLOPE

(+)

COUPLING SOURCE AC INT

Waveform Conditions

Front panel controls are set the same as for voltage measurements. The test oscilloscope 0.4 Volt calibration signal is applied to the vertical amplifier of the mainframe to which the 7B53AN is connected. The vertical amplifier of the system under test is set for 100 mV/Division. The test oscilloscope is triggered from the + GATE OUT (MAIN) of the mainframe under test; vertical input is AC coupled.

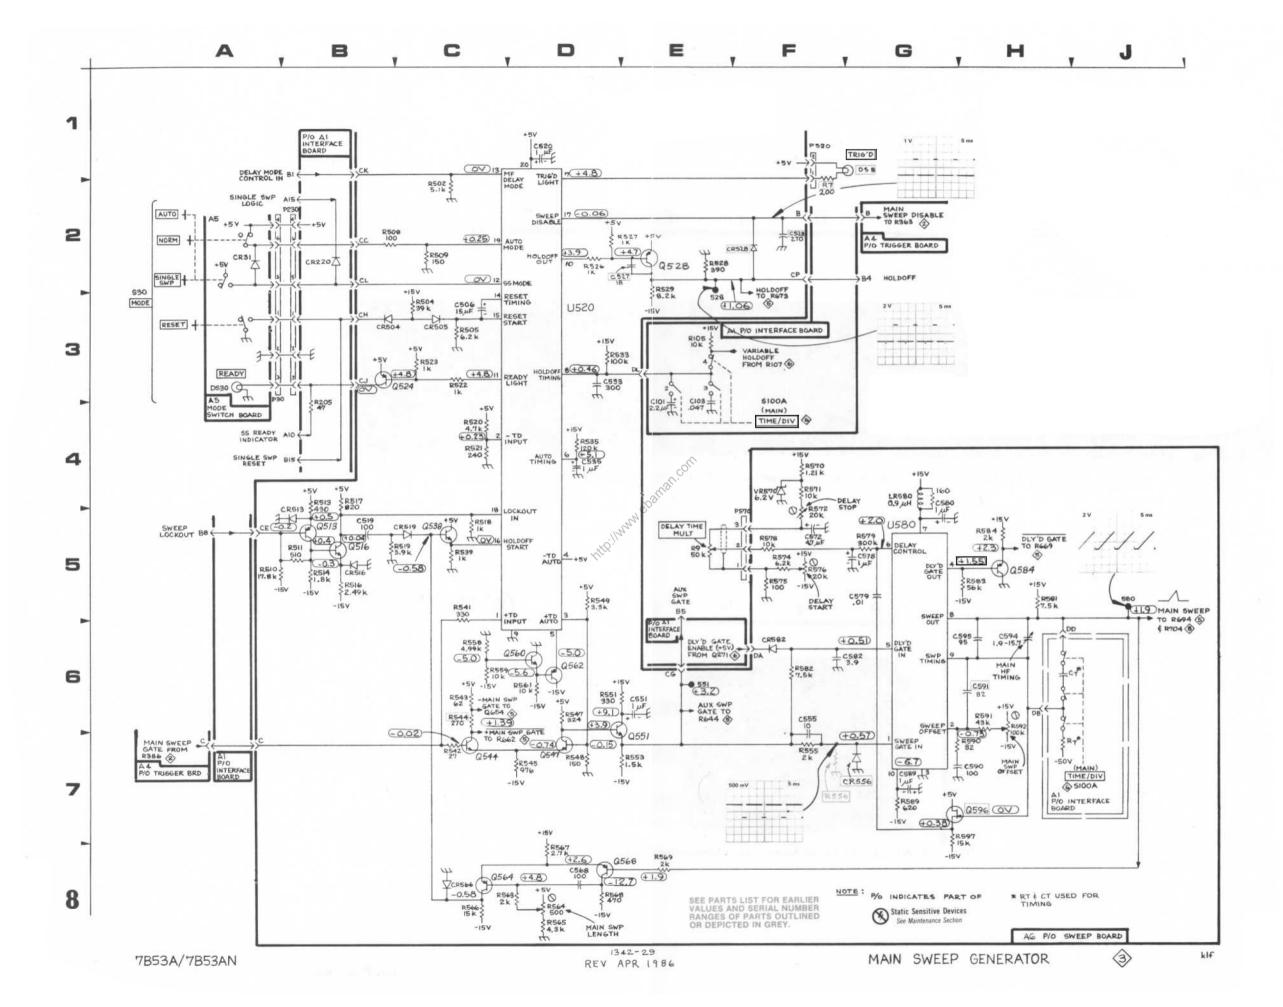

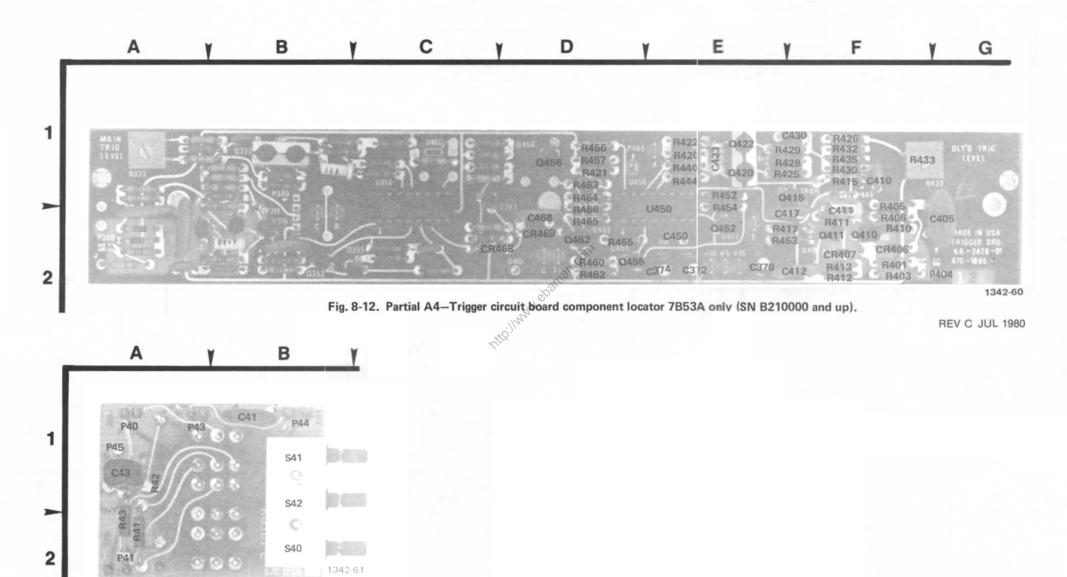



Fig. 8-13. A7-Delayed Trigger Switch circuit board component locator.

P/O A4 ASSY Delayed Trigger Generator (SN B210000 & UP							
CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER				
C405 C410 C411 C412 C417 C423 C430 C450 C468 CR406 CR407 CR468 CR469 P404 Q410 Q411 Q415 Q420 Q452 Q452 Q455 Q456 Q462 R401 R403 R405 R406 R410 R411	D8 E6 E6 F8 F7 H5 K7 K1 F4 D7 D6 F4 F3 D6 E6 E7 F6 H6 J6 L2 N2 F1 E3 D6 D8 E8 E6 E6	G2 F1 F2 E2 E1 E1 E2 D2 F2 F2 C2 D2 C2 F2 F1 E1 E1 E2 D2 F2 F2 F1 F2 F2 F2 F2 F2 F2	R412 R413 R415 R417 R420 R421 R422 R425 R426 R428 R429 R430 R432 R433 R435 R440 R444 R452 R453 R454 R456 R457 R456 R457 R460 R462 R463 R464 R465 R465 R466 TP415	E7 F6 F7 H5 H5 H7 H7 L6 M6 H4 J4 M3 M3 M2 N3 F1 D3 E2 E3 D3 E3 F6 K2	F2 F1 F1 E2 E01 E1 F1 F1 F1 F1 E1 E1 E2 E02 D01 D02 D01 D02 D7 E2		
A7 ASSY Delayed Trigger Generator 4							
C41 C43 R41 R42	C6 C5	B2 A1 A2 A1	P40 P43 P45 P41	B4 B5 N4 B5	A1 A2 A1 A2		
R43	C5 C5	A1 A2	S40 S41 S42	N4 C4 B4	82 B1 B1		

R5

CHASSIS

N6

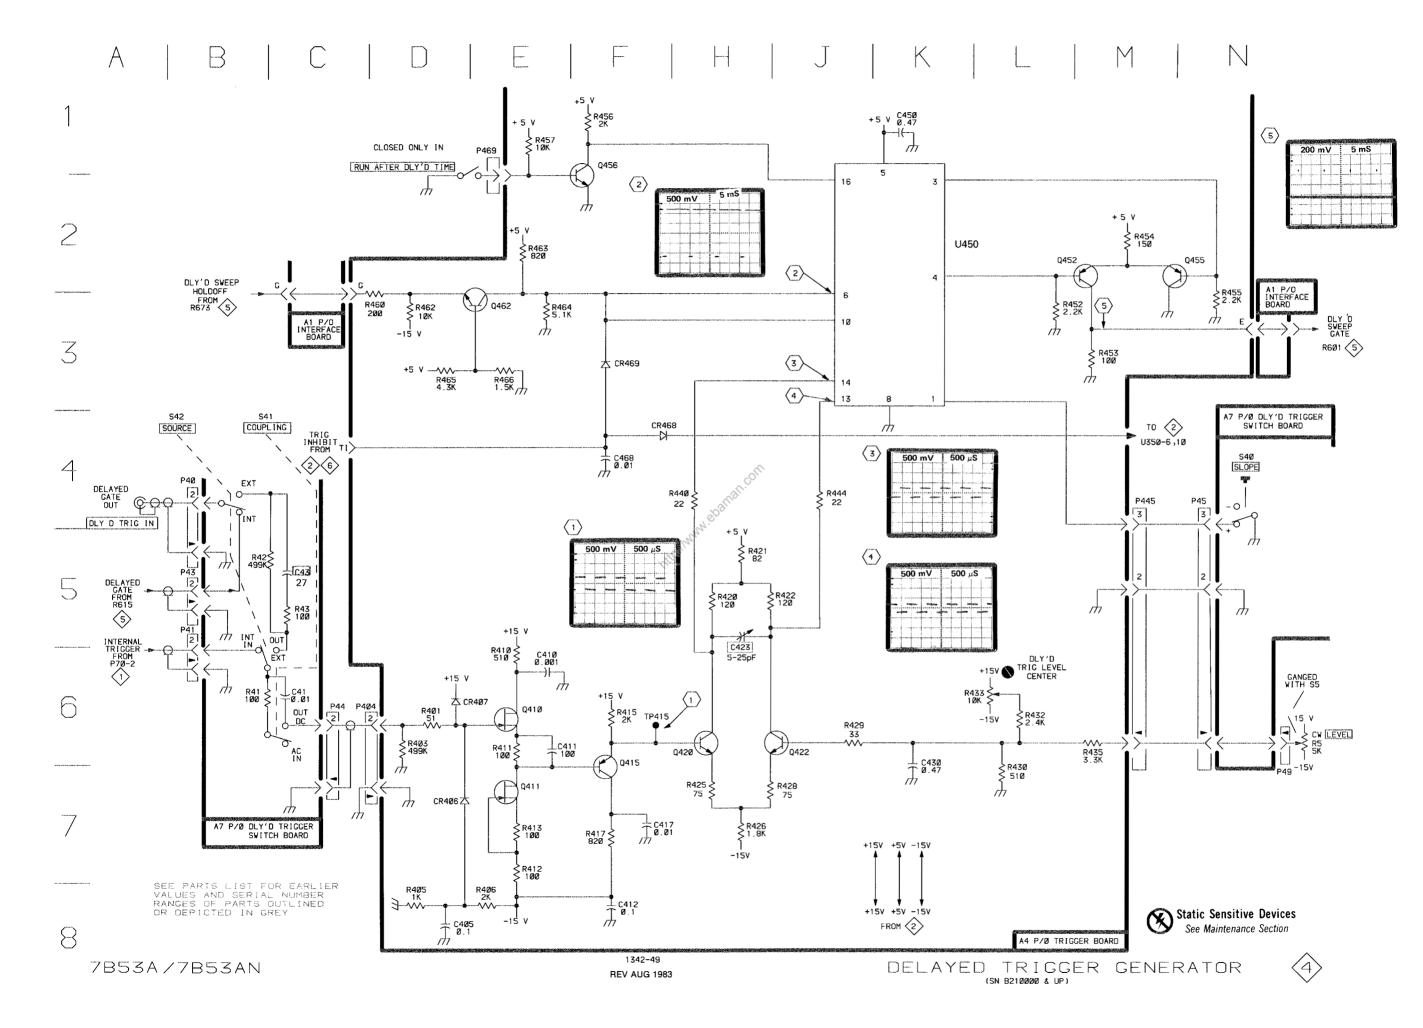

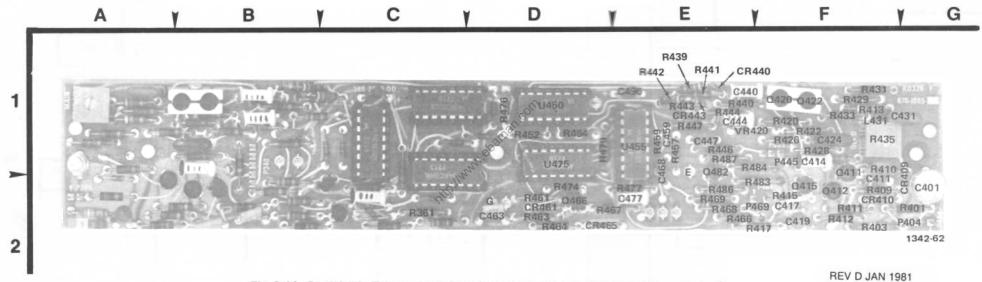


Fig. 8-14. Partial A4-Trigger circuit board component locator (SN B209999 and below).

P/O A4 ASSY Delayed Trigger Generator (SN B209999 & Below)					
SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	
C7 C7 C7 D8 D7 E5 E5 E5 F6 G4 E2 F3 G4	G2 F2 F2 F1 F1 E1 E1 E1 E2 E2 E1	R439 R440 R441 R442 R443 R444 R445** R446 R447 R452 R454 R457 R459 R461 R463	E4 E4 E5 F5 F6 E6 E5 F5 G5 G4 E2	E1 E1 E1 E1 E1 E2 E1 D1 D1 E1 E1 D2	
C6 C7 E4 F5 F2 FC7 C7 D7 D7 EG2 H3	G2 F2 E1 D2 D2 G2 F2 F1 D2 F1 D2 E2	R464 R466 R467 R468 R469 R474 R475** R476 R477 R479 R483 R484 R486 R487	F2 G2 G3 F3 G3 H3 G5 G5 H3 H3 H3	D2 E2 D2 E2 D2 E2 D1 E2 D1 E2 E2 E2	
C7 C6 C6 C7 C7 C8 D6	G2 F2 F2 F2 F2 F1 F2 E2	U450A U450B U450C U450D U455A U455B U455C U455D U475A	F5 F4 F6 F5 G3 H4 G3 H4	D1 D1 D1 D1 E1 E1 E1 D2	
E4	F1	U475B	Н3	D2	
E7	F1	VR420	D4	E1	
E7 E7 E6 E6 E7	F1 F1 F1 F2	R5 S5	G7 D3	CHASSIS CHASSIS	
	SCHEMATIC LOCATION C7 C7 C8 D7 E5 E5 E5 E5 F6 G4 E2 F3 G4 C6 C7	SCHEMATIC LOCATION BOARD LOCATION C7 G2 C7 F2 D8 F2 D7 F1 E5 E1 E5 E1 E5 E1 E6 E1 E2 E2 E4 E1 E7 E2 E4 E1 E7 E2 C7 C7 C7 F2 D7 F1 E7 F2 C6 F2 C7 F2 C7 F2 C7 F2 C6 F2 C7 F2 C7 F2 C7 F2	SCHEMATIC LOCATION BOARD LOCATION LOCATION LOCATION LOCATION NUMBER C7 G2 R439 R440 R445 R457 R446 R466 R467 R467 R468 R467 R468 R469 R475 R4	SCHEMATIC BOARD LOCATION LOCATION	

^{**} LOCATED ON BACK OF BOARD

^{*}See Parts List for serial number ranges.

The voltages and waveforms shown on this diagram were obtained by using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFICATIONS	RECOMMENDED TYPE
Oscilloscope	$\begin{array}{lll} \text{Frequency response} & \text{DC to 65 MHz} \\ \text{Deflection factor} & \text{5 mV to 5 V/Div} \\ \text{Input impedance} & \text{10 M}\Omega\text{, 20 pF} \\ \text{Sweep rate} & \text{500 ns} \\ \end{array}$	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B50 Time-Base Unit, or equivalent.
Probe	Fast rise 10X attenuation probe compatible with the vertical amplifier of the test oscilloscope.	Tektronix P6053A, or equivalent.
Voltmeter (Non-loading digital multimeter)	Input impedance 10 M Ω Range 0 $-$ 500 V	Tektronix 7D13 Digital Multimeter (test oscilloscope must have readout system) or Fairchild Model 7050, or equivalent.
Extender	Required for extending the 7B53AN from the mainframe when making waveform and voltage measurements.	Tektronix extender plug-in. Tektronix Part Number 067-0589-00 or Tektronix flexible extender, Tektronix Part Number 067-0616-00, or equivalent.

Voltage Conditions

The 7B53AN Unit under test must be connected to a mainframe separate from the test oscilloscope. No signal is applied for voltage measurements. Voltmeter common is connected to chassis ground.

7B53AN Control Settings

MAIN TRIGGERING

MODE **AUTO** COUPLING AC SOURCE INT SLOPE (+)

LEVEL Control center

TIME/DIV OR DLY TIME

1 ms

DLY'D Time/Division 0.5 ms (press in for DLY'D

display mode)

VARIABLE

CAL (pull out for MIXED

display mode)

DELAY TIME MULT

5.00

MAG

POSITION

Center display horizontally

DLY'D TRIG

LEVEL

Control center


SLOPE COUPLING (+) AC


SOURCE

INT

Waveform Conditions

Front panel controls are set the same as for voltage measurements. The test oscilloscope 0.4 Volt calibration signal is applied to the vertical amplifier of the mainframe to which the 7B53AN is connected. The vertical amplifier of the system under test is set for 100 mV/Division. The test oscilloscope is triggered from the + GATE OUT (MAIN) of the mainframe under test; vertical input is AC coupled.

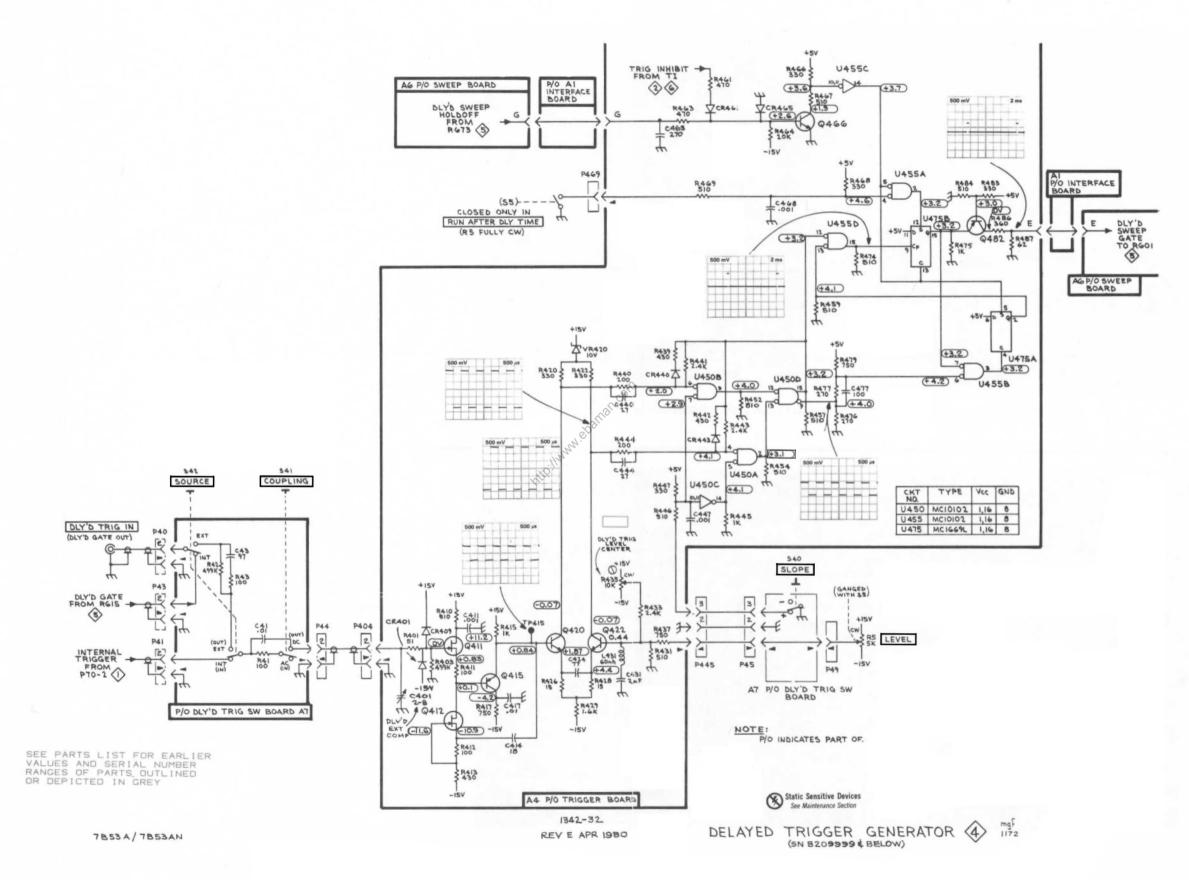

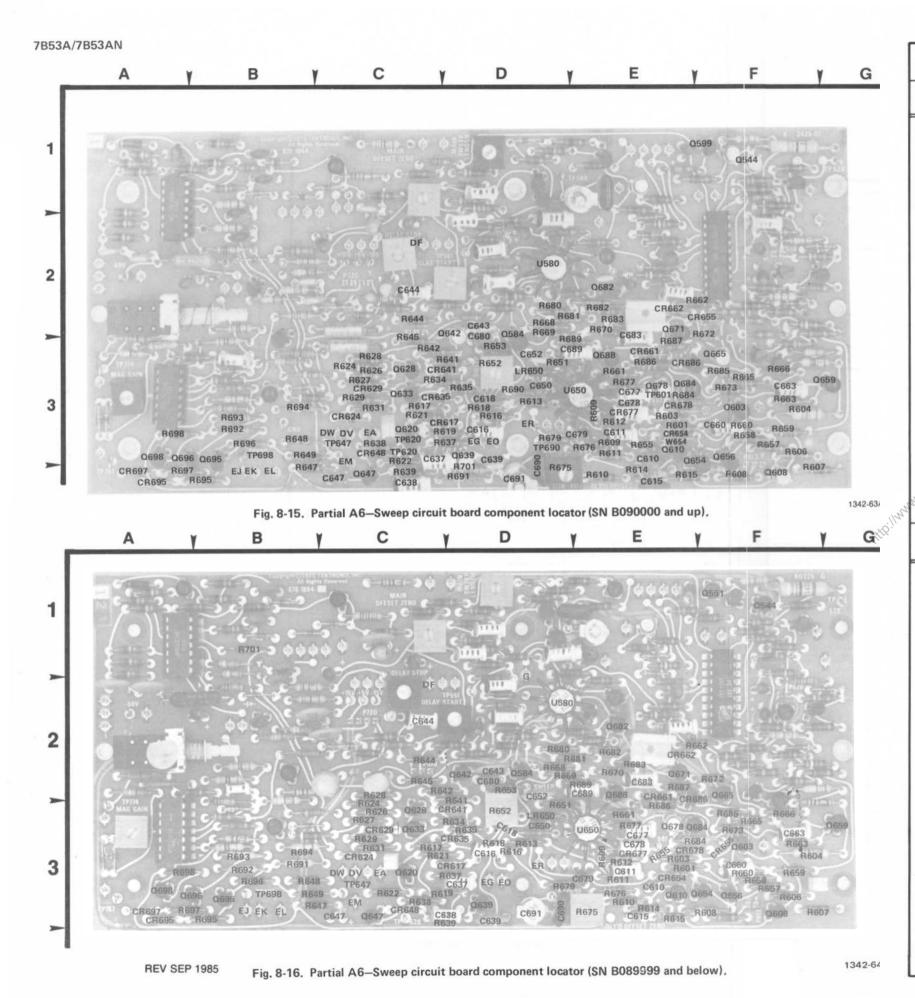

P/O A6 ASS	Y	COLUMN ACCUSATION	na sanakan sa sanakan sanakan sa	SSCONTESPECTORIANT SAMEN CARCIO PRÍVES EN EL TRANS EN T	erroscos (mark merco toto curb nos entre den tronolemia entre inflormation toto entre tro	general version and a state of the effective series of the	· "阿拉克斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯	ALT ZOTE IN THE STATE OF THE ST		elayed Sweep Ge SN B090000 & U	()
CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATIO
C610 C611 C615 C618 C616 C637 C638 C639 C643 C644 C647 C650 C652 C660 C663 C677 C678 C678 C677 C680 C683 C691 CR617 CR624 CR629 CR635 CR641 CR641 CR648 CR654 CR654 CR656 CR656 CR656 CR661 CR656 CR661 CR661 CR661 CR661 CR661 CR662 CR661 CR662 CR661 CR662 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR667 CR66	C56C33C733GFHC55A44C66CA87TC6CBCCABCCH23A4TCCBCCABCCH2ACCCBCCBCCBCCCCCBCCCCCCCCCCCC	E3 E3 E4 D3 D3 C3 C4 D3 D2 C2 C4 D3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3	CR695 CR697 LR650 Q603 Q608 Q610 Q628 Q633 Q639 Q642 Q647 Q656 Q659 Q665 Q671 Q678 Q682 Q684 Q688 Q695 Q698 R601 R603 R604 R607 R609** R610 R611 R612 R613	G6 H6 D4 B6 B6 C5 B2 C3 G3 G3 G5 BD5 E5 C6 B6 B6 B6 B6 C5 C6 C6 C6 C6 C6 C6	A4 A4 D3 F3 F4 E3 C3 C3 C3 D3 D2 C4 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3	R614 R615 R616 R617 R618 R619 R621 R622 R624 R626 R627 R628 R629 R631 R634 R635 R637 R638 R639 R641 R642 R644 R645 R647 R648 R649 R651 R652 R653 R655 R657 R658 R659 R660 R661 R662 R663	D3 D3 C3 C3 C7 C2 D3 D2 A2 B2 B2 B2 B2 C2 F3 G3 H3 C5 C5 C4 D4 D5 E5 E4	E4 4 4 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	R665 R666 R668 R669 R672 R673 R675 R676 R677 R679 R680 R681 R682 R683 R684 R685 R689 R690 R691 R692 R693 R694 R695 R696 R697 R698 TP601 TP620 TP647 TP698 U650 W654*	E4 F4 F4 F4 F4 F6 D07 C7 A8 B7 B5 B7 B5 B7 B5 B7 B5 B7 B5 B7 B6 G6 B6 H6 A6 D12 F5 D5 B7 B7 B5 B7 B5 B7 B5 B7 B5 B7 B5 B7 B5 B7 B7 B6 B7 B7 B7 B7 B7 B7 B7 B7 B7 B7 B7 B7 B7	F3 F3 D2 D2 D2 E2 F3 D4 E3 D3 D2 E2 E3
P/O A6 AS	SY	NAMES I DESCRIPTION	Marines and commentations are supplied to the second				and you as now make the property of the proper	PACIFICACION ASSISTANCIA SE ASTRONOMICA ANTANCIA SE ASTRONOMICA ANTANCIA SE ASTRONOMICA ANTANCIA SE ASTRONOMICA SE ASTRONOMICA ANTANCIA SE ASTRONOMICA SE AS	Delay	l yed Sweep Gener 3089999 & Below)	ator 💪
C610 C611 C615 C616 C618 * C637 C638 C639 C643 C644 C647 C650 C652 C660 C663 C677 C678 C679 C680 C683 C677 C678 C679 C680 C683 C689 C690 C691 CR617 CR624 CR629 CR635 CR641 CR655 * CR661 CR655 * CR661 CR677 CR678 CR678 CR677 CR678 CR678 CR6686	C5 C5 C3 C7 F3 G3 F2 HD5 D4 ED0 C6 A3 FD0 E6 C2 B2 H2 D5 D5 H3 B7 D6 E0 H2 D5 D6 D7 D7 D7 D7 D7 D7 D7 D7 D7 D7 D7 D7 D7	E3 E3 E4 D3 D3 C3 C4 D3 D2 C4 D3 D3 F3 E3 E3 E3 D4 D4 D3 C3 C3 C3 C3 C3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3 E3	CR695 CR697 LR650 Q603 Q608 Q610 Q620 Q628 Q633 Q639 Q642 Q647 Q656 Q659 Q665 Q671 Q678 Q688 Q688 Q688 Q696 Q698 R601 R603 R604 R606 R607 R609** R611 R612 R613	G6 H6 D4 B6 B6 C5 C5 B2 C3 G3 H2 C5 B4 C7 B8 C7 B8 C7 G6 H1 A6 B6 B6 C5 C6 C6 C6 C6 C6	A4 A4 D3 F3 F4 E3 C3 C3 C3 C3 C3 C3 C3 C3 C3 C3 C3 C3 C3	R614 R615 R616 R617 R618* R619 R621 R622 R624 R626 R627 R628 R629 R631 R635 R637 R638 R639 R641 R642 R644 R645 R647 R648 R649 R651 R655 R657 R658 R657 R658 R659 R660 R661 R662 R663	D3 D3 C3 C7 C2 D2 A2 B2 B2 B2 C2 F3 G3 H3 G2 F3 G3 H2 C6 C5 C6 C4 C4 D4 D5 E5 E4	E4	R665 R666 R668 R669 R670 R672 R673 R675 R676 R677 R689 R681 R682 R683 R684 R685 R686 R687 R689 R690 R691 R692 R693 R694 R695 R696 R697 R698 TP601 TP620 TP647 TP698	E4 F4 F4 F4 F4 F3 F4 E6 D7 C7 A8 B7 B5 B7 C8 C7 D6 G6 G6 G7 H6 A5 D12 F5 J6 D5	F3 F3 F3 D2 D2 E2 F2 F3 D4 E3 D3 D2 E2 E2 E3 F3 E3

The voltages and waveforms shown on this diagram were obtained by using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFICATIONS	RECOMMENDED TYPE		
Oscilloscope	Frequency response DC to 65 MHz Deflection factor 5 mV to 5 V/Div Input impedance 10 M Ω , 20 pF Sweep rate 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B50 Time-Base Unit, or equivalent.		
Probe	Fast rise 10X attenuation probe compatible with the vertical amplifier of the test oscilloscope.	Tektronix P6053A, or equivalent.		
Voltmeter (Non-loading digital multimeter)	Input impedance 10 MΩ Range 0 ~ 500 V	Tektronix 7D13 Digital Multimeter (test oscilloscope must have readout system) or Fairchild Model 7050, or equivalent.		
Extender	Required for extending the 7B53AN from the mainframe when making waveform and voltage measurements.	Tektronix extender plug-in. Tektronix Part Number 067-0589-00 or Tektronix flexible extender, Tektronix Part Number 067-0616-00, or equivalent.		

Voltage Conditions

The 7B53AN Unit under test must be connected to a mainframe separate from the test oscilloscope. No signal is applied for voltage measurements. Voltmeter common is connected to chassis ground.

7B53AN Control Settings

MAIN TRIGGERING

MODE AUTO
COUPLING AC
SOURCE INT
SLOPE (+)

LEVEL Control center

TIME/DIV OR DLY TIME 1 ms

DLY'D Time/Division 0.5 ms (press in for DLY'D

display mode)

VARIABLE CAL (pull out for MIXED

display mode)

DELAY TIME MULT

5.00

POSITION

MAG

Center display horizontally

DLY'D TRIG


LEVEL

Control center


SLOPE COUPLING SOURCE (+) AC INT

Waveform Conditions

Front panel controls are set the same as for voltage measurements. The test oscilloscope 0.4 Volt calibration signal is applied to the vertical amplifier of the mainframe to which the 7B53AN is connected. The vertical amplifier of the system under test is set for 100 mV/Division. The test oscilloscope is triggered from the + GATE OUT (MAIN) of the mainframe under test; vertical input is AC coupled.

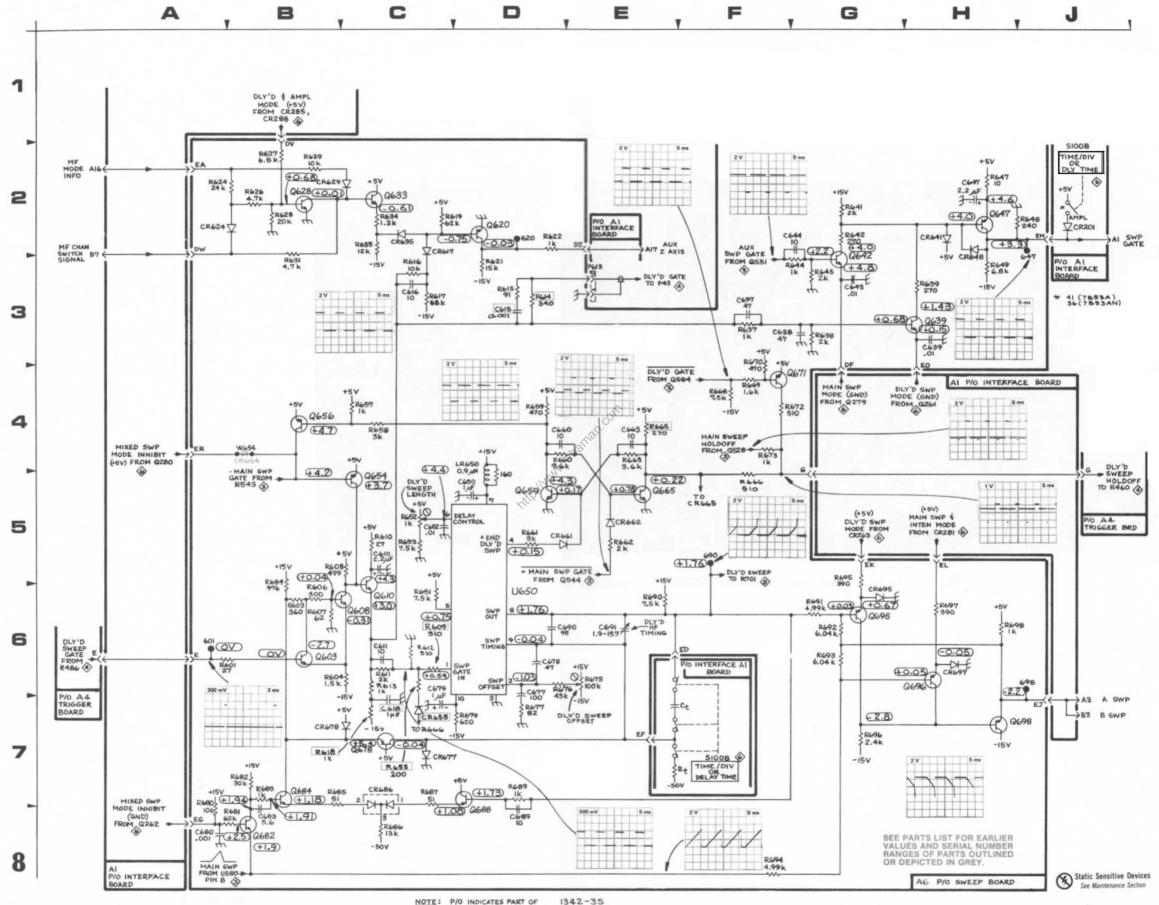

\$

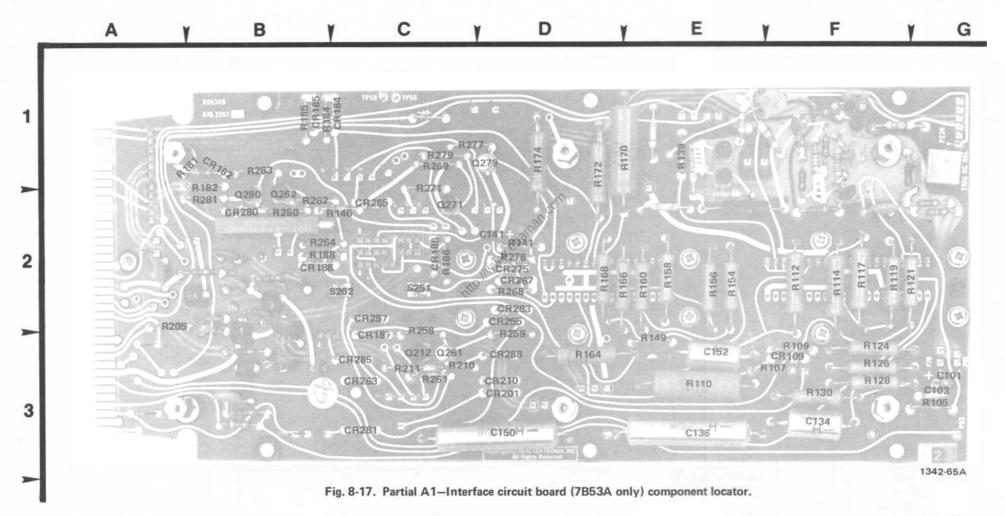



D/O	Δ1	VPPA

Timing Switches 7B53A




CIRCUIT	SCHEMATIC	BOARD	CIRCUIT	SCHEMATIC	BOARD
NUMBER	LOCATION	LOCATION	NUMBER	LOCATION	LOCATION
C101 C103 C134 C136 C138* C141 C150 C152 CR109 CR201 CR201 CR255 CR263 CR265 CR267 CR263 CR268 CR288 P140B Q212 Q261 Q261 Q271 Q279 Q280 R105 R107 R109 R110 R112 R114 R117 R119 R121	A33333555 A3442233332111355 E5 4223322 A4AAABBB	GGEEFDDE FDDDCCCCDBCDCD CCBCDB GEFEFFFFF	R124 R126 R128 R130 R139 R141 R146 R149 R154 R156 R158 R160 R164 R166 R168 R172 R174 R205 R210 R211 R258 R259 R261 R259 R261 R262 R263 R264 R268 R269 R271 R276 R277 R279 R280 R281 S251 S262A S144A S144B	B5 55 50 D5 B5 55 55 55 55 55 55 55 55 55 55 55 55	F3 G3 F3 F3 F3 F1 C2 E22 E22 E22 E22 E22 E22 E22 E23 C33 C32 B1 C22 C33 C32 C1 C22 CHASSIS CHASSIS

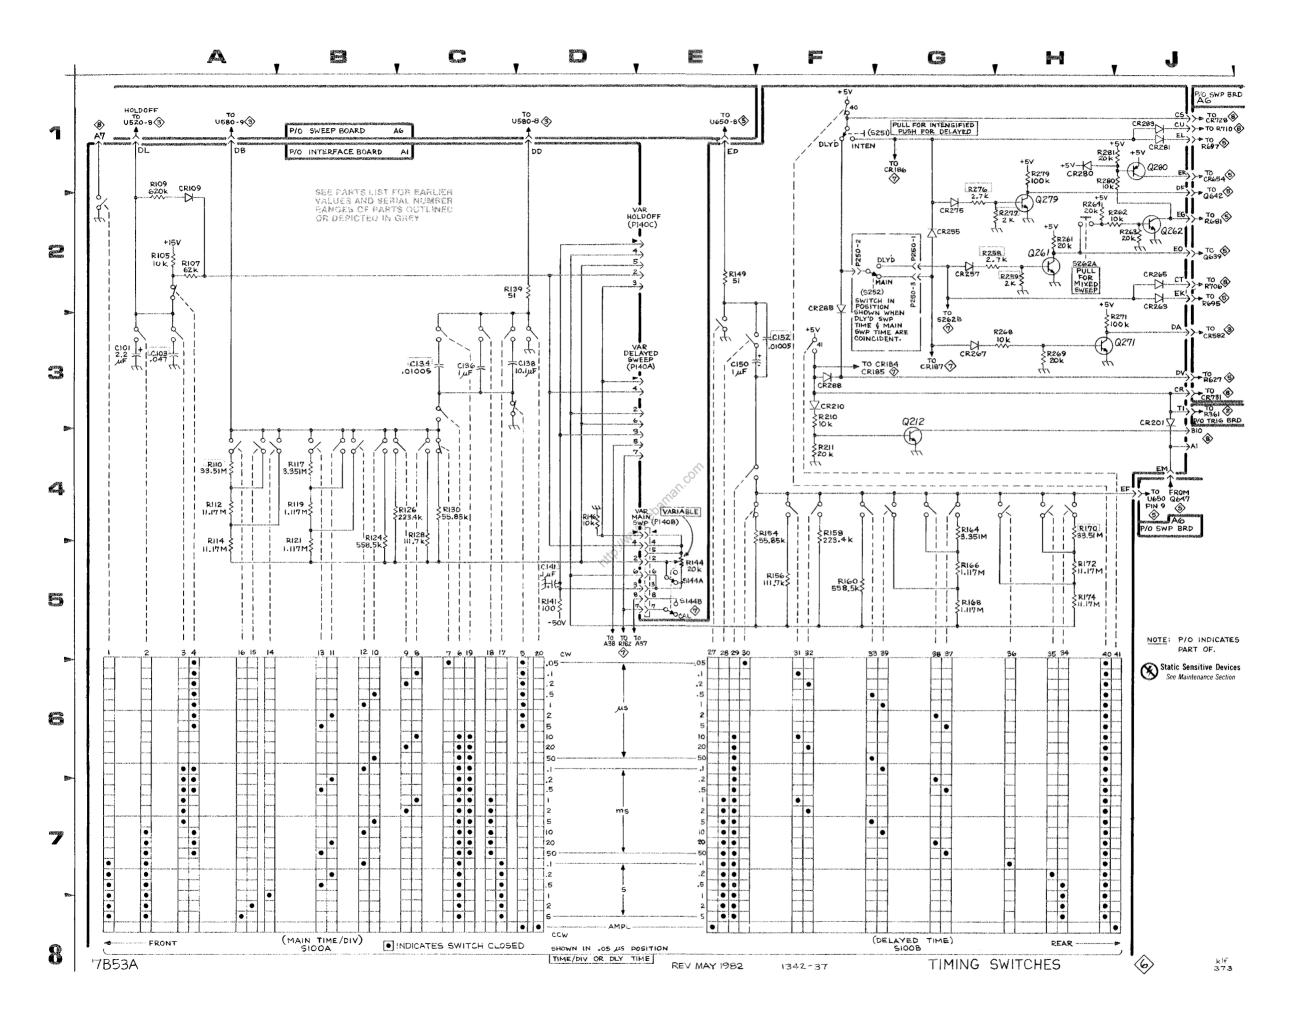


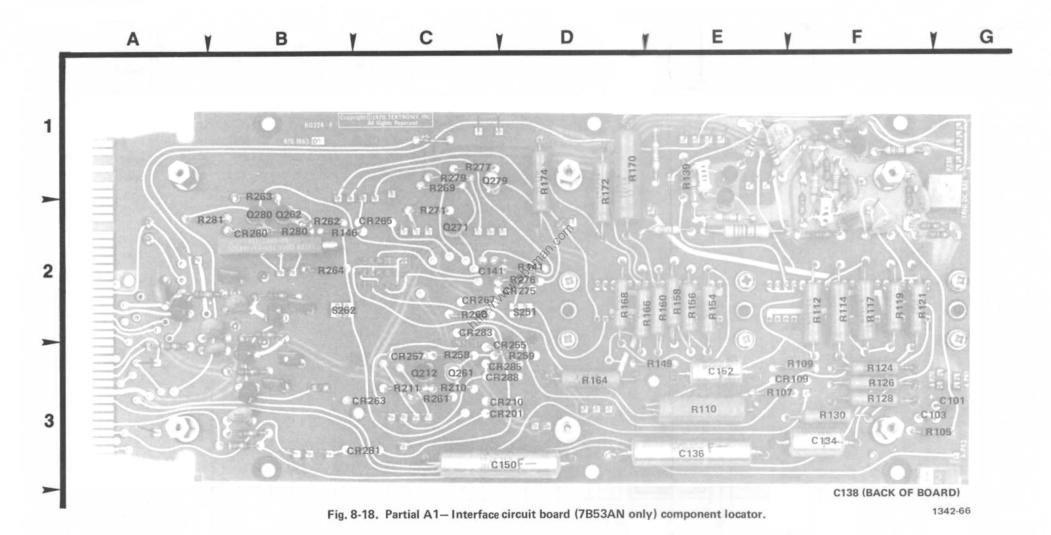

Timing Switches (6) P/O A1 ASSY **7B53AN** CIRCUIT SCHEMATIC **BOARD** CIRCUIT **SCHEMATIC** BOARD LOCATION NUMBER LOCATION LOCATION NUMBER LOCATION F2 R121 C101 **A3** G3 B5 F3 A3 C3 G3 R124 C103 F3 B5 F3 R126 C134 C5 F3 Č3 E3 R128 C136 Č5 F3 Č3 R130 C138 F3* D5 R139 D3 E1 C141 D2 D2 C150 E3 D3 R141 D₅ F3 R146 D5 B2 E3 C152 E3 R149 Ë3 Ē2 **E**5 CR109 R154 A2 F3 F5 E2 R158 CR201 J4 D3 E2 D3 R160 F5 CR210 F4 D3 R164 G5 D2 CR255 G2 Ď2 C3 C3 Ğ5 R166 **CR257** G2 D2 R168 G5 **CR263** J3 R170 D1 **CR265** J3 Č2 **H5** D1 **CR267** G3 C2 R172 **H**5 **B174** H5 D1 CR280 H₂ B₂ $\overline{C3}$ F4 C3 C3 C3 D3 C3 B2 J1 R210 CR281 F4 C2 R211 **CR283** J1 R258 G2 F3 D3 D3 CR285 F3 R259 **H3 CR288** H₂ R261 R262 H2 P140B **E**5 B1 R263 J2 C3 C3 H2 B₂ Q212 G4 R264 **H3** C2 Q261 H2 R268 Č1 **B**2 R269 НЗ Q262 J2 Č2 R271 **H3** Q271 **H3** C2 R276 G2 D2 Q279 H₂ C1 C1 R277 H2 Q280 B2 J2 R279 H2 C₁ R280 H2 B₂ R105 A2 G3 B2 R281 H2 R107 **A3** E3 R109 A2 F3 D2 S251 F1 R110 A4 **E3** B2 H2 Α5 F2 S262A R112 F2 R114 **A**5 F2 R117 B4 **E**5 CHASSIS **B**5 F2 S144A R119

^{*}See Parts List for serial number ranges.

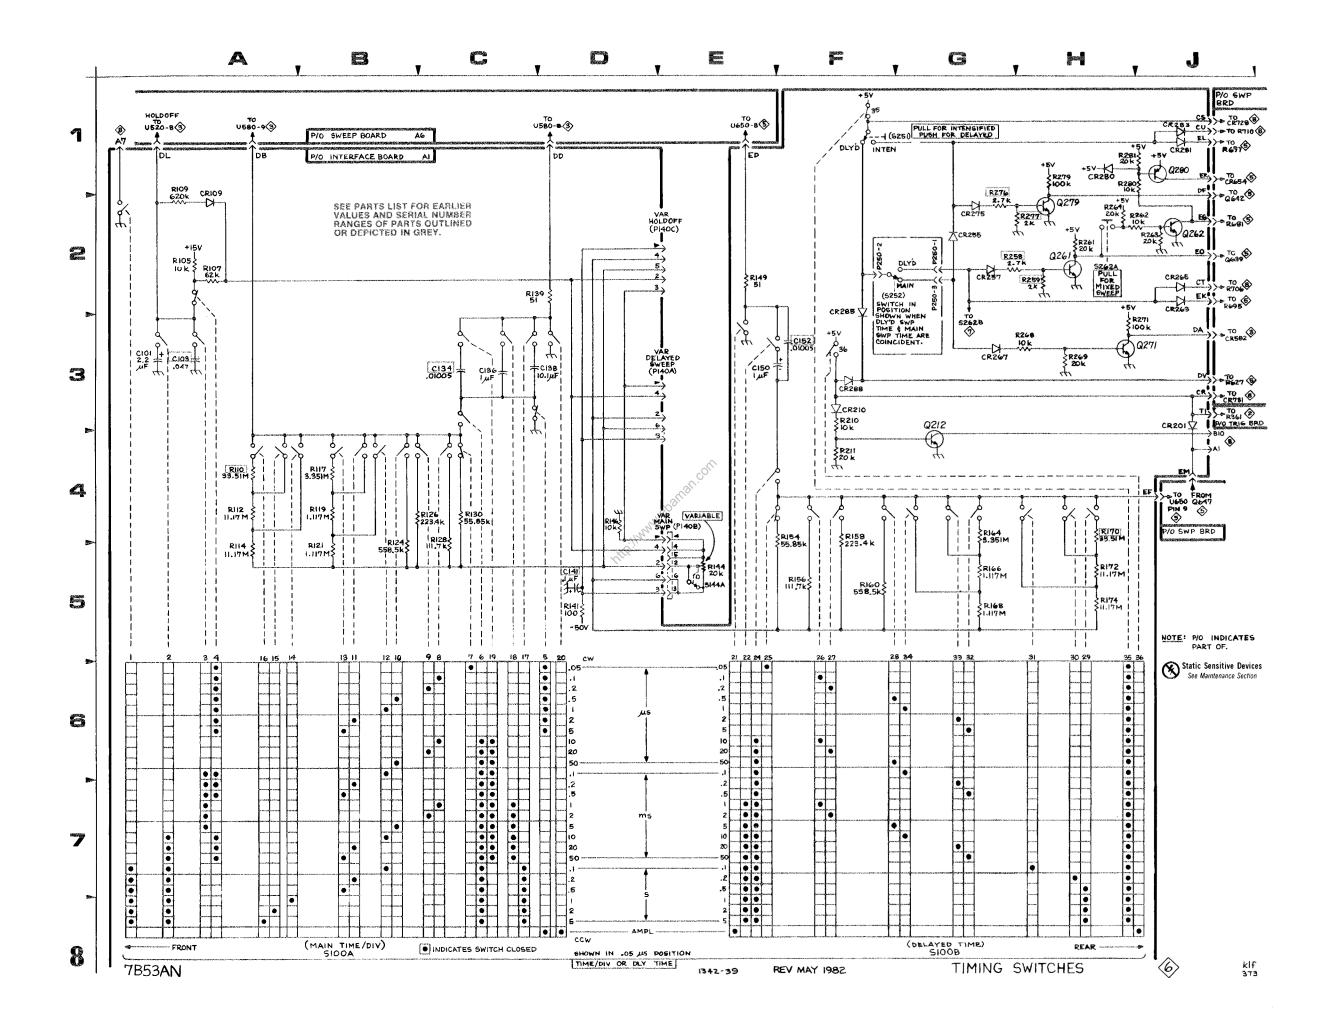


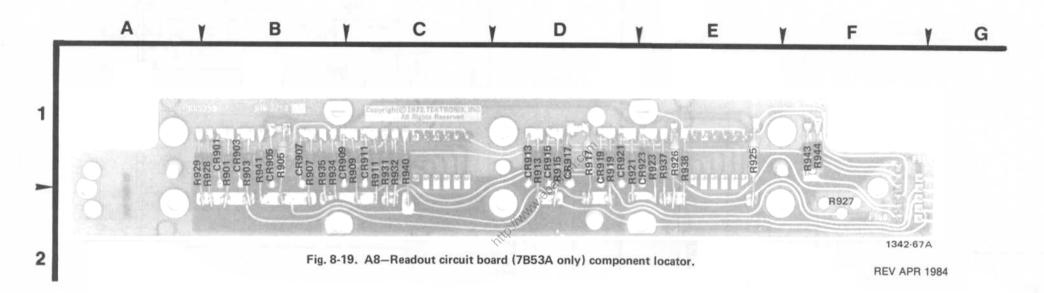

P/O A1 ASS See Fig. 8.				Readout Swit	ching 💎
CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION
CR182 CR184 CR185 CR187 CR188	H3 H2 H1 H2 H1	B1 B1 B1 C3 B2	R181 * R182 R184 R185 R186	H3 H4 H2 H1 H2	A1 B2 B1 B1 C2
P/O A6 ASS See Fig. 8.2	-			Readout Swi	tching 🐬
\$762B	G4	A2	colf.		
P/O A8 AS	SY		tching 🐬		
CR901 CR903 CR905 CR907 CR909 CR911 CR913 CR915 CR917 CR921 CR923 R901 R903 R905 R907 R907 R909 R911 R913 R915	A2 A2 A2 B2 B2 B3 C3 C3 C3 D3 D3 A3	B1 B1 B1 B1 C1 D1 D1 D1 D1 D1 D1 D1 D1 D1 D1 D1 D1	R917 R919 R921 R923 R925 R926 R927 *** R928 R929 R931 R932 R934 R935 R937 R938 R940 R941 R943 R944 S144B	C4 C4 D4 D4 D3 D3 E2 E3 E2 E3 F2 F2 F2 F2 F2 F2	D1 D1 D1 E1 E1 E1 E1 E1 B1 C1 C1 B1 E1 E1 E1 C1

^{*}See Parts List for serial number ranges.

^{**}Located on back of board (SN B192519 & below)

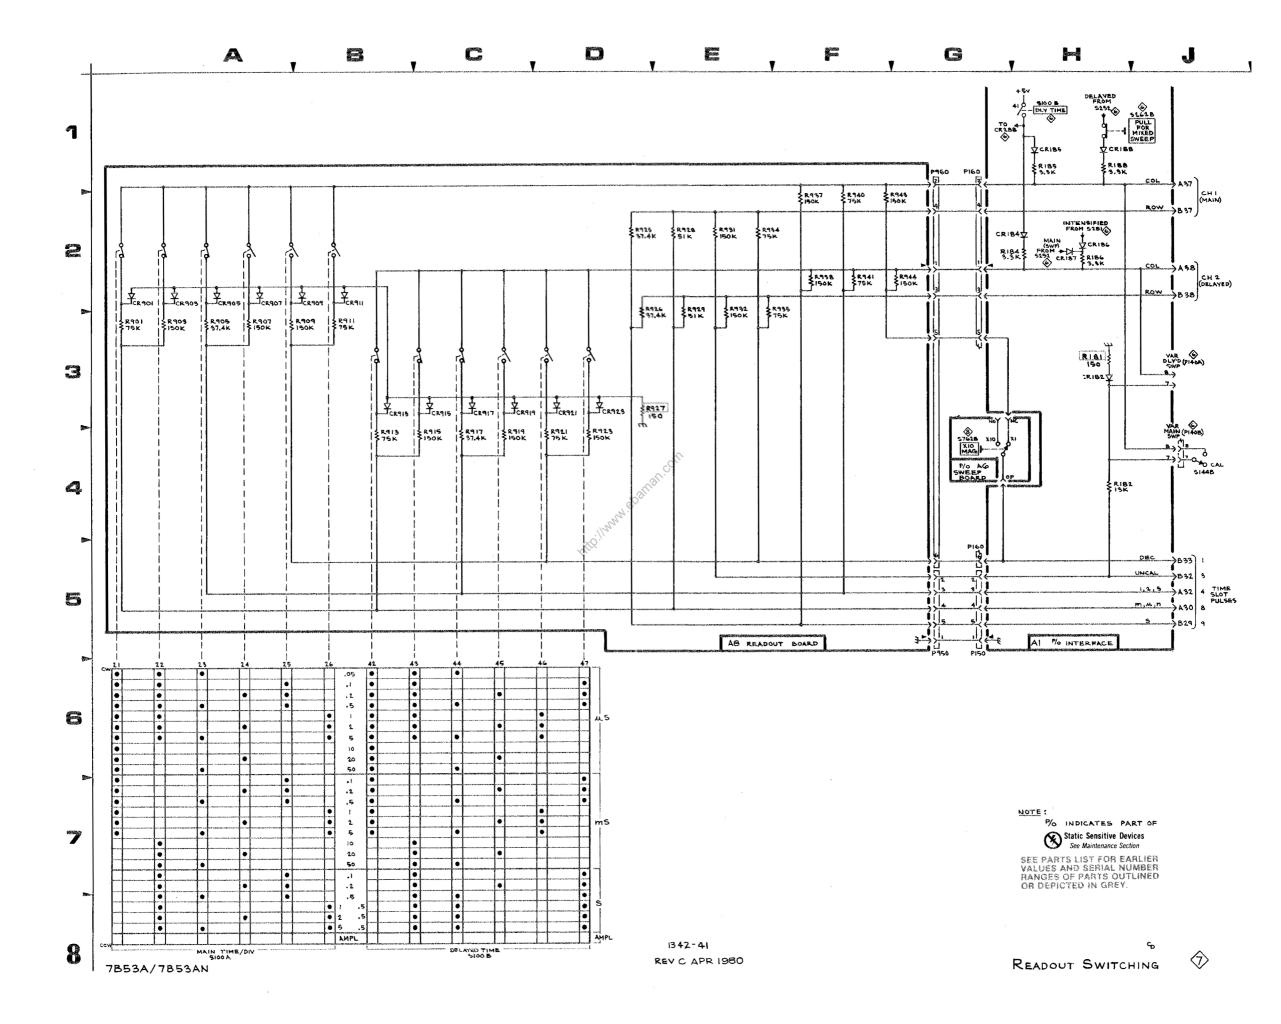

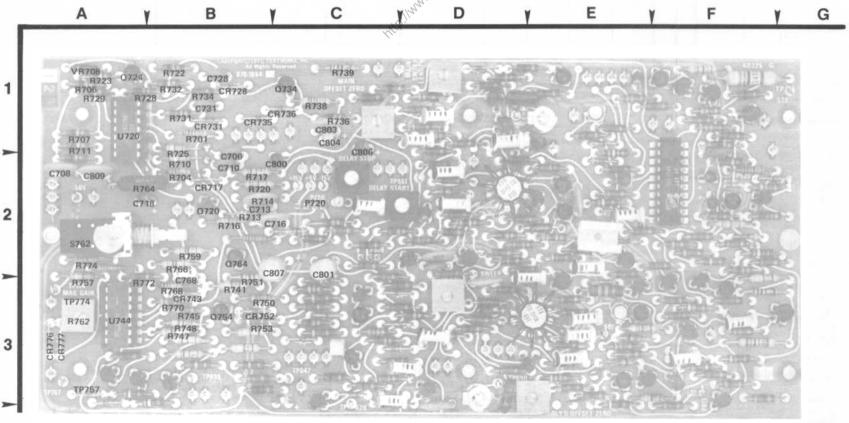


Fig. 8-21. Partial A6-Sweep circuit board component locator (SN B089999 and below).

P/O A6 ASSY (SN B010000 & up)


Horizontal Preamp (8)




CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION	CIRCUIT NUMBER	SCHEMATIC LOCATION	BOARD LOCATION
C708 C710 C713 C716 C718 C728 C731 C768	B5 B4 B6 B6 C6 E3 E3 F7	A2 B2 B2 B2 B2 B1 B1 B1	R734 R736 R738 R739 R741 R745 R747 R748 R750 R751	E2 D2 D2 E7 F8 F8 F8 F7 F8	B1 C1 C1 B3 B3 B3 B3 B3 B3
CR717 CR728 CR731 CR735 CR736 CR743 CR752 CR776 CR777	C6 E3 F3 E2 D2 E6 F7 H7	B2 B1 B1 A3 C1 B3 B3 A3	R753 R757 R759 R759 R761 R762 R764 R766 R768 R770 R772 R774	F7 G8 G7 G7 G7 F7 F7 F6 G6 G6	B3 A3 B2 A3 A3 A2 B2 B3 B3 B3 A2
Q720 Q724 Q734 Q754 Q764	C6 C4 D2 F8 G7	B2 A1 C1 B3 B2	S762A	G7	A1
R701* R704 R706 R707 R710 R711 R713 R714 R716 R717 R720 R722 R723	C3 C3 D4 D5 B4 B5 B6 C6 B6 C6 D6 C4 C5	D3 B2 A1 A1 B2 A2 B2 B2 B2 B2 B2 B1 A1	U720A U720B U720C U720D U720E U744A U744B U744C U744D	C5 D5 F5 E5 D5 F8 F6 G6 G8	A1 A1 A1 A1 A3 A3 A3 A3
R725* R726 R728 R729 R731 R732	D4 D5 E4 E5 F4 F5	B1 A1 A1 A1 A3 B1	VR708 R008A R008B	B5 A6 A6	A1 CHASSIS CHASSIS

^{*}Board location of parts (SN B089999 & below)

R701 **D3** R725 В1

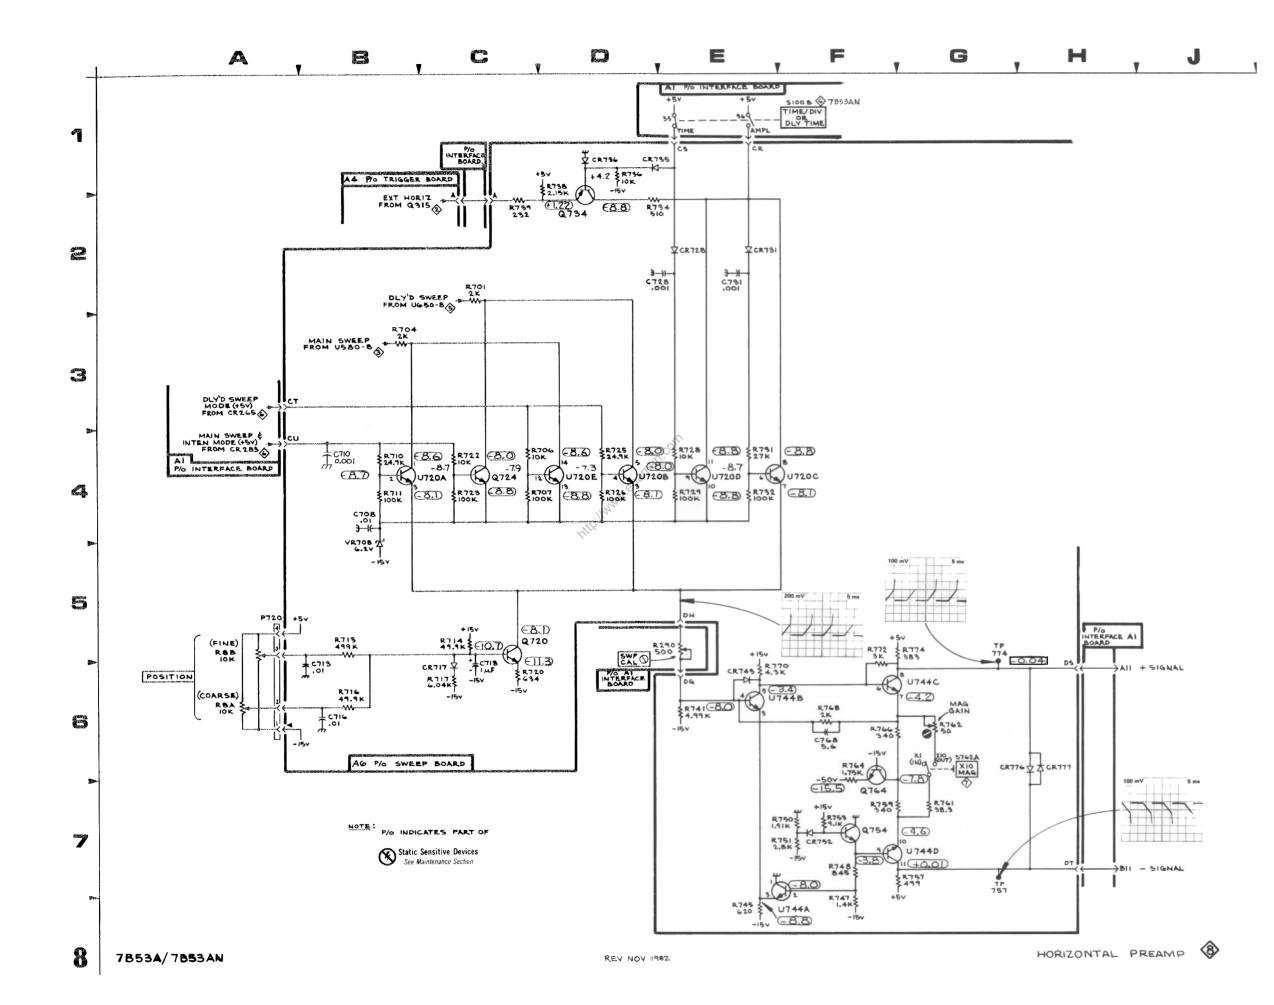

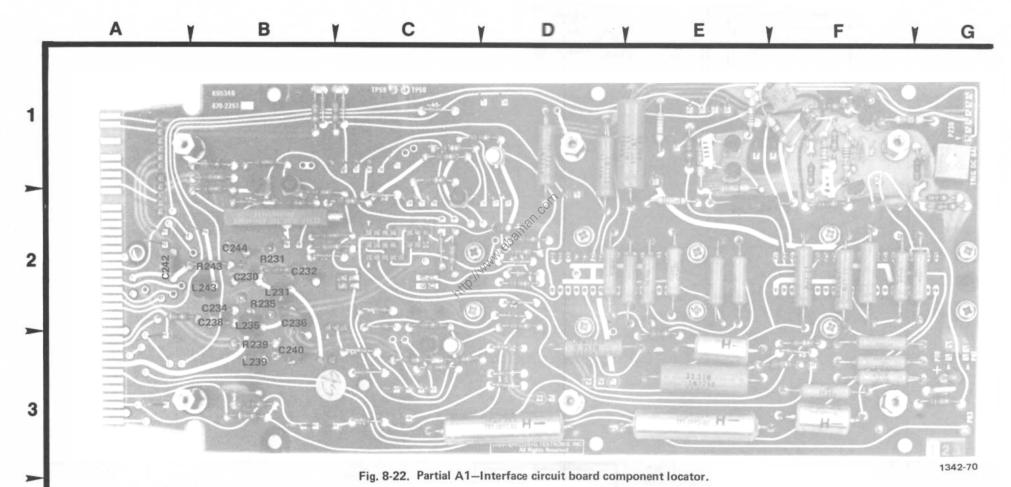

REV B JUL 1980

OSTORIO I	SAMPLE	aco men	A SECONDARY SERVICES	
F	P/O	Α1	ASSY	,
,				

Voltage Distribution & **Output Connectors**




CIRCUIT	SCHEMATIC	BOARD			
NUMBER	LOCATION	LOCATION			
C230	A2	B2			
C232	B2	B2			
C234	A2	B2			
C236	B2	B2			
C238	A3	B2			
C240	B3	B3			
C242	B3	A2			
C242	B3	B2			
L231	B1	B2			
L235	B2	B3			
L239	B2	B3			
L243	A3	A2			
R231	B2	B2			
R235	B2	B2			
R239	A3	B3			
R243	A3	B2			
P/O A4 ASSY See Fig. 8.8 & 8.14 Voltage Distribution & Output Connectors					
		l .			

C319	D5	A2
C396	D5	C1
C419	D5	F2
C496	D5	F1
C496	D5	⊨1

P/O A6 ASSY See Fig. 8.20 & 8.21 Output Connectors

Voltage Distribution &



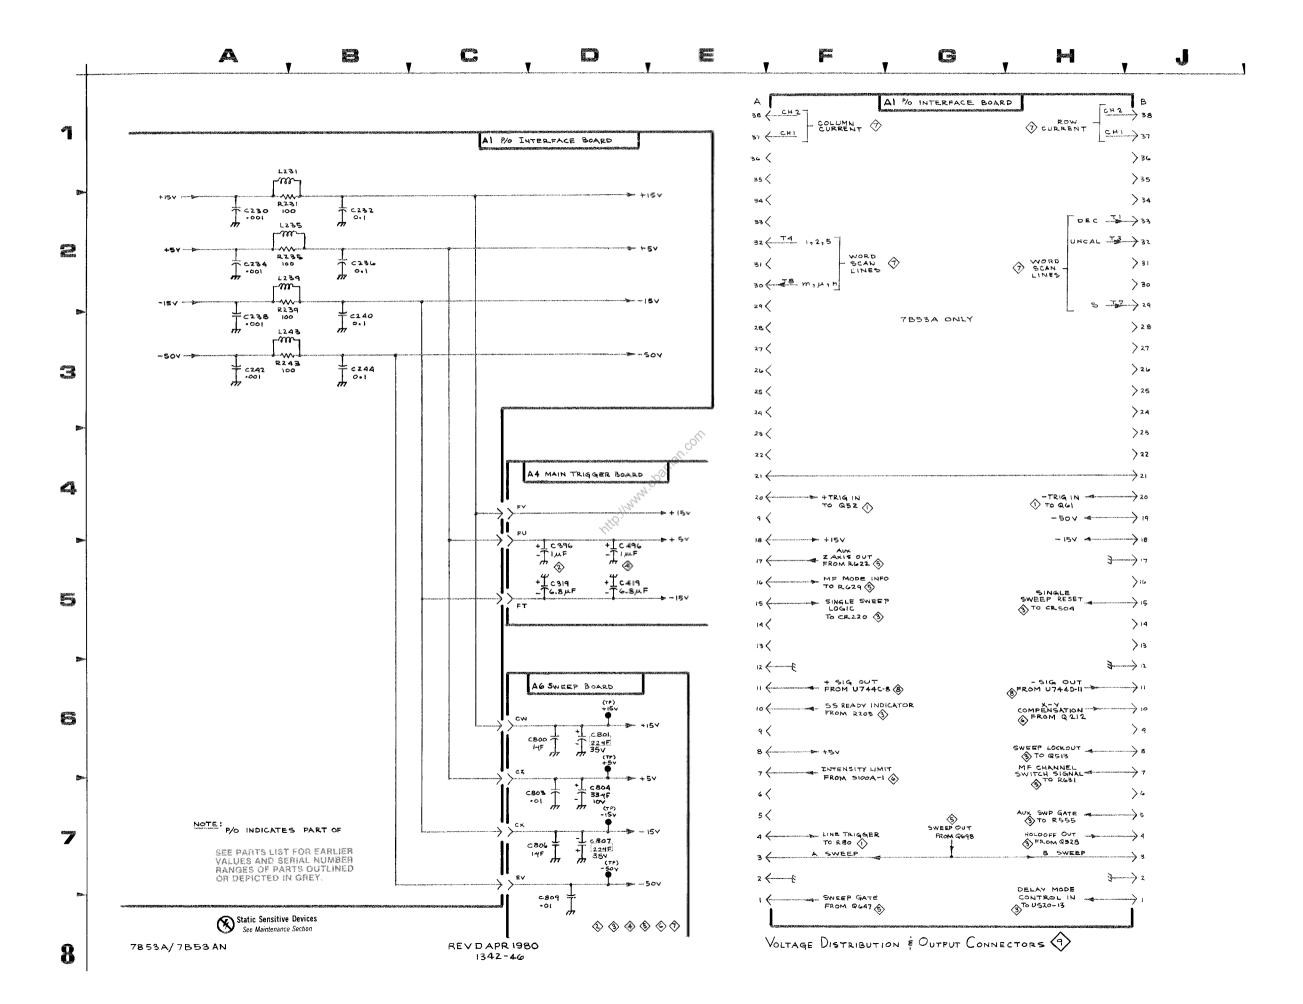

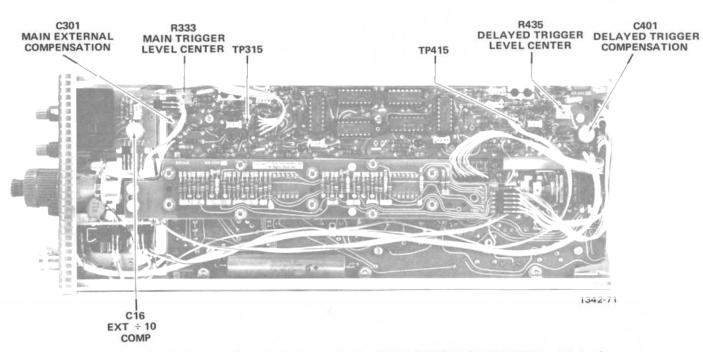


Fig. 8-23. Location of adjustments in the 7B53A/7B53AN (SN B209999 and below).

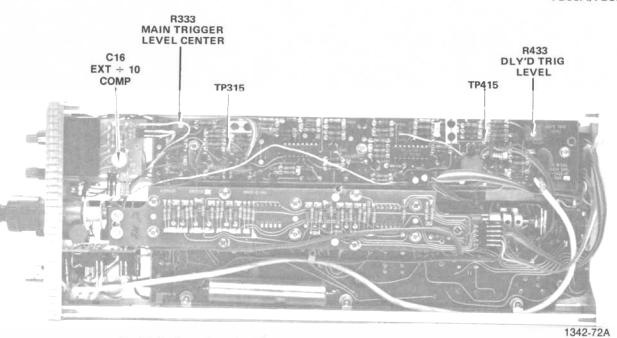


Fig. 8-24. Location of adjustments in the 7B53A (SN B210000 and up).

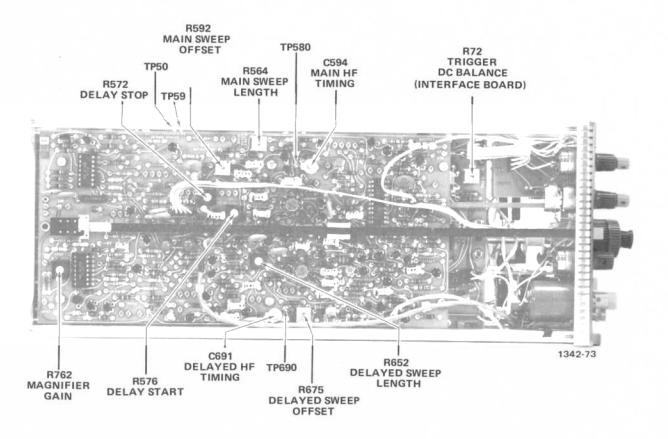


Fig. 8-25. Location of adjustments in the 7B53A/7B53AN.

REPLACEABLE MECHANICAL PARTS

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

SPECIAL NOTES AND SYMBOLS

X000	Part first added at this serial number
00 X	Part removed after this serial number

FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

INDENTATION SYSTEM

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

1 2 3 4 5

Name & Description

Assembly and/or Component
Attaching parts for Assembly and/or Component

Detail Part of Assembly and/or Component Attaching parts for Detail Part

Parts of Detail Part Attaching parts for Parts of Detail Part

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation. The separation symbol - - - * - - - indicates the end of attaching parts.

Attaching parts must be purchased separately, unless otherwise specified.

ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

ABBREVIATIONS

	INCH	ELCTRN	ELECTRON	IN	INCH	SE	SINGLE END
	NUMBER SIZE	ELEC	ELECTRICAL	INCAND	INCANDESCENT	SECT	SECTION
ACTR	ACTUATOR	ELCTLT	ELECTROLYTIC	INSUL	INSULATOR	SEMICOND	SEMICONDUCTOR
ADPTR	ADAPTER	ELEM	ELEMENT	INTL	INTERNAL	SHLD	SHIELD
ALIGN	ALIGNMENT	EPL	ELECTRICAL PARTS LIST	LPHLDR	LAMPHOLDER	SHLDR	SHOULDERED
AL	ALUMINUM	EQPT	EQUIPMENT	MACH	MACHINE	SKT	SOCKET
ASSEM	ASSEMBLED	EXT	EXTERNAL	MECH	MECHANICAL	SL	SLIDE
ASSY	ASSEMBLY	FIL	FILLISTER HEAD	MTG	MOUNTING	SLFLKG	SELF-LOCKING
ATTEN	ATTENUATOR	FLEX	FLEXIBLE	NIP	NIPPLE	SLVG	SLEEVING
AWG	AMERICAN WIRE GAGE	FLH	FLAT HEAD	NON WIRE	NOT WIRE WOUND	SPR	SPRING
BD	BOARD	FLTR	FILTER	OBD	ORDER BY DESCRIPTION	SQ	SQUARE
BRKT	BRACKET	FR	FRAME or FRONT	OD	OUTSIDE DIAMETER	SST	STAINLESS STEEL
BRS	BRASS	FSTNR	FASTENER	OVH	OVAL HEAD	STL	STEEL
BRZ	BRONZE	FT	FOOT	PH BRZ	PHOSPHOR BRONZE	SW	SWITCH
BSHG	BUSHING	FXD	FIXED	PL	PLAIN or PLATE	T	TUBE
CAB	CABINET	GSKT	GASKET	PLSTC	PLASTIC	TERM	TERMINAL
CAP	CAPACITOR	HDL	HANDLE	PN	PART NUMBER	THD	THREAD
CER	CERAMIC	HEX	HEXAGON	PNH	PAN HEAD	THK	THICK
CHAS	CHASSIS	HEX HD	HEXAGONAL HEAD	PWR	POWER	TNSN	TENSION
CKT	CIRCUIT	HEX SOC	HEXAGONAL SOCKET	RCPT	RECEPTACLE	TPG	TAPPING
COMP	COMPOSITION	HLCPS	HELICAL COMPRESSION	AES	RESISTOR	TRH	TRUSS HEAD
CONN	CONNECTOR	HLEXT	HELICAL EXTENSION	RGD	RIGID	V	VOLTAGE
COV	COVER	HV	HIGH VOLTAGE	RLF	RELIEF	VAR	VARIABLE
CPLG	COUPLING	IC	INTEGRATED CIRCUIT	RTNR	RETAINER	W/	WITH
CRT	CATHODE RAY TUBE	ID	INSIDE DIAMETER	SCH	SOCKET HEAD	WSHR	WASHER
DEG	DEGREE	IDENT	IDENTIFICATION	SCOPE	OSCILLOSCOPE	XFMR	TRANSFORMER
DWR	DRAWER	IMPLR	IMPELLER	SCR	SCREW	XSTR	TRANSISTOR

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip Code
00779	AMP INC	2800 FULLING MILL.	HARRISBURG PA 17105
01963	CHERRY ELECTRICAL PRODUCTS CORP	3600 SUNSET AVE	WAUKEGAN IL 60087-3214
05129	KILO ENGINEERING CO	2118 D ST	LA VERNE CA 91750-5422
05820	FG AND G WAKEFIELD ENGINEERING	60 AUDUBON RD	WAKEFIELD MA 01880-1203
06950	AMP INC CHERRY ELECTRICAL PRODUCTS CORP KILO ENGINEERING CO EG AND G WAKEFIELD ENGINEERING SCREWCORP VSI AEROSPACE PRODUCTS DIV SUB OF FAIRCHILD INDUSTRIES INC NELSON NAME PLATE CO SPECTRA-STRIP AN ELTRA CO WEST COAST LOCKWASHER CO INC BURNDY CORP LICON DIV OF ILLINOIS TOOL WORKS INC	13001 E TEMPLE AVE PO BOX 730	CITY OF INDUSTRY CA 91746-1417
07416	NELSON NAME PLATE CO	3191 CASITAS	LOS ANGELES CA 90039-2410
08261	SPECTRA-STRIP AN ELTRA CO	7100 LAMPSON AVE	GARDEN GROVE CA 92642
09772	WEST COAST LOCKWASHER CO INC	16730 E JOHNSON DRIVE P O BOX 3588	CITY OF INDUSTRY CA 91744
09922	BURNDY CORP	RICHARDS AVE	NORWALK CT 06852
10389	LICON	1714 N DAMEN AVE	CHICAGO IL 60647-5509
	DIV OF ILLINOIS TOOL WORKS INC		
12327	FREEWAY CORP	9301 ALLEN DR	CLEVELAND OH 44125-4632
13511	AMPHENOL CADRE DIV BUNKER RAMO CORP		LOS GATOS CA
18310	CONCORD ELECTRONICS CORP	37 GREAT JONES ST	NEW YORK NY 10012-1115
22526	FREEWAY CORP AMPHENOL CADRE DIV BUNKER RAMO CORP CONCORD ELECTRONICS CORP DU PONT E I DE NEMOURS AND CO INC DU PONT CONNECTOR SYSTEMS DIV MILITARY PRODUCTS GROUP		
22599	AMERACE CORP ESNA DIV	15201 BURBANK BLVD SUTTE C	VAN NUYS CA 91411-3532
28520	DIV MILITARY PRODUCTS GROUP AMERACE CORP ESNA DIV HEYCO MOLDED PRODUCTS ITT SCHADOW INC SPS TECHNOLOGIES INC AEROSPACE & INDUSTRIAL PRODUCTS INC	750 BOULEVARD P 0 BOX 160	KENILWORTH NJ 07033-1721
31918	ITT SCHADOW INC	8081 WALLACE RD	EDEN PRAIRIE MN 55344-2224
56878	SPS TECHNOLOGIES INC AEROSPACE & INDUSTRIAL PRODUCTS INC	HIGHLAND AVE	JENKINTOWN PA 19046
71785			ELK GROVE VILLAGE IL 60007-5723
73743	FISCHER SPECIAL MEG CO	111 INDUSTRIAL RD	COLD SPRING KY 41076-9749
74445	HOLO-KROME CO	31 BROOK ST	ELMW000 CT 06110-2350
77900	SHAKEPROOF	SAINT CHARLES RD	ELGIN IL 60120
	DIV OF THE TNOTS TOOL WORKS	70	
78189	TRW INC TRW CINCH CONNECTORS DIV FISCHER SPECIAL MFG CO HOLO-KROME CO SHAKEPROOF DIV OF ILLINOIS TOOL WORKS ILLINOIS TOOL WORKS SHAKEPROOF DIV	ST CHARLES ROAD	ELGIN IL 60120
79136	WALDES KOHINOR IN	47-16 AUSTEL PLACE	LONG ISLAND CITY NY 11101-4402
80009	SHAKEPROOF DIV WALDES KOHINOR IN TEKTRONIX INC ELCO INDUSTRIES INC FARLEY METALS INC SOUTHERN SCREW DIV WINCHESTER ELECTRONICS LITTON SYSTEMS—USECO DIV CONNOR SPERING AND MEC. CO.	14150 SW KARL BRAUN DR PO BOX 500 MS 53-111	BEAVERTON OR 97707-0001
83486	ELCO INDUSTRIES INC	1101 SAMUELSON RD	ROCKFORD IL 61101
8 7308	FARLEY METALS INC	BARKLEY RD	STATESVILLE NC 28677-9774
	SOUTHERN SCREW DIV	P O BOX 1360	
88245	WINCHESTER ELECTRONICS LITTON SYSTEMS-USECO DIV	13536 SATICOY ST	VAN NUYS CA 91409
91260	CONNOR SPRING AND MFG CO	1729 JUNCTION AVE	SAN JOSE CA 95112
93907		1729 JUNCTION AVE 600 18TH AVE	ROCKFORD IL 61108-5181
TK0282	SONIC WIRE SALES INC	2698 MARINE WAY	MOUNTAINVIEW CA 94043-1126
TK0392	NORTHWEST FASTENER SALES INC	7923 SW CIRRUS DRIVE	BEAVERTON OR 97005-6448
TK0435	LEWIS SCREW CO	4300 S RACINE AVE	CHICAGO IL 60609-3320
TK0507	SONIC WIRE SALES INC NORTHWEST FASTENER SALES INC LEWIS SCREW CO O HARA METAL PRODUCTS CO	542 BRANNAN ST	SAN FRANCISCO CA 94107
TK1326	NORTHWEST FOURSLIDE INC	18224 SW 100TH CT	TUALATIN OR 97062

Fig. &							
Index	Tektronix	Serial/Ass				Mfr.	
No.	Part No.		Dscont	<u> Qty</u>	12345 Name & Description	Code	Mfr. Part No.
1-1	366-1391-02 366-1077-00 213-0153-00 366-1391-02 366-1077-00 213-0153-00 366-0494-00 213-0153-00 366-1405-05			1	KNOB:LT GY,0.081 ID X 0.28 OD X 0.32 H KNOB:GRAY W/SETSCREW .SETSCREW:5-40 X 0.125,STL KNOB:LT GY,0.081 ID X 0.28 OD X 0.32 H KNOB:GRAY W/SETSCREW .SETSCREW:5-40 X 0.125,STL KNOB:GRAY WITH SETSCREW .SETSCREW:5-40 X 0.125,STL KNOB:GRAY WITH SETSCREW .SETSCREW:5-40 X 0.125,STL KNOB:RED,CAL,0.082 ID X 0.45 OD X 0.466 H KNOB:RED,CAL,0.08 ID X 0.45 OD X 0.466 H	80009	366-1391-02
-2	366-1077-00			1	KNOB: GRAY W/SETSCREW	80009	366-10//-00
-3	213-0153-00			1 1	.5E15UREW:5-40 X U.125,51L	1 KU392 80009	366-1391-02
-3 -4	366-1077-00			1	KNOR-CRAY W/SFTSCREW	80009	366-1077-00
7	213-0153-00			1	.SETSCREW:5-40 X 0.125.STL	TK0392	ORDER BY DESCR
-5	366-0494-00			ĩ	KNOB:GRAY WITH SETSCREW	8000 9	366-0494-00
	213-0153-00			1	.SETSCREW:5-40 X 0.125,STL	TK0392	ORDER BY DESCR
_	366-1405-05	B010100	B024024	1	KNOB: RED, CAL, 0.082 ID X 0.45 OD X 0.466 H	8000 9	366-1405-05
-6	200-1402-00	0240230		Ţ	KNOB: RED, CAL, 0.08 ID X 0.45 OD X 0.466 H	80009	366-1405-00
	213-0153-00 366-2052-00			1	SETSCREW:5-40 X 0.125,STL	90000	ORDER BY DESCR
-7	366-1321-00	0240230		1	KNOB-GY DLYD INTENS 0 203 ID X 0.430 ID	80009	366-1321-00
,	213-0890-00			2	.SETSCREW:6-32 X 0.25 L.STL	5687 8	ORDER BY DESCR
-8	354-0410-00			1	SETSCREW:5-40 X 0.125,STL KNOB:RED,CAL,0.08 ID X 0.45 OD X 0.456 H KNOB:GY,DLYD,INTENS,0.203 ID X 0.976 OD SETSCREW:6-32 X 0.25 L,STL RING,KNOB SKIRT:CLEAR,1.0 OD SETSCREW:6-32 X 0.188,STL PUSH BUTTON:SIL GY,X1 X10 PUSH BUTTON:SIL GY,X1 X10 PUSH BUTTON:SIL GY,AC DC PUSH BUTTON:SIL GY,AC DC PUSH BUTTON:SIL GY,INT EXT FRAME,PUSH BTN:	80009	354-0410-00
	213-0004-00			2	.SETSCREW:6-32 X 0.188,STL	74445	ORDER BY DESCR
-9	366-1257-93			1	PUSH BUTTON:SIL GY,XI X10	80009	366-1257-93
-10	366-1257-90			1	PUSH BUTTON: SIL GY,+-	80009	366-1257-90
-11 -12	366-1257-91 366-1257-92			1 1	PUSH BUITON SIL GY INT EVT	80009	366_1257_02
-13	426-0681-00			4	FRAME, PUSH BTN:	80003	426-0681-00
-14	358-0378-00	8010100	B191549		BUSHING. SLEEVE: 0.131 ID X 0.18 OD X 0.125 L	80009	358-0378-00
	358-0599-00			1	BUSHING, SLEEVE: 0.131 ID X 0.18 OD X 0.125 L BUSHING, SLEEVE: 0.125 ID X 0.25 OD X 0.234	28520	B-187-125
-15	366-1058-50			1	MNOR-CDAY 7853A	คกกก ด	366-1058-50
	366-1058-35			1	KNOB: GRAY, 7B53AN	80009	366-1058-35
-16	214-1095-00	D010100	0000004	1	PIN, SPRING: 0.187 L X 0.094 OD, STL, CD PL	22599	52-022-094-018/
-17	337-1064-04 337-1064-12	8010100	8238924	2	SMIELD, ELEC. SIDE FOR PLUG-IN UNII	80009	337-1004-04
-18	333-1542-02			1	KNOB:GRAY,7853AN PIN,SPRING:0.187 L X 0.094 OD,STL,CD PL SHIELD,ELEC:SIDE FOR PLUG-IN UNIT SHIELD,ELEC:SIDE FOR PLUG-IN UNIT PANEL,FRONT: BRG,KNOB SKIRT:DELRIN 0.861 ID X 0.975 OD X	80009	333-1542-02
-19	401-0126-00			ī	BRG.KNOB SKIRT:DELRIN 0.861 ID X 0.975 OD X	80009	401-0126-00
				_	0.125		
-20	****			1	RESISTOR, VAR: (SEE R9 REPL)		
					(ATTACHING PARTS)	25100	771 0 1
-21	331-0247-00			1	DIAL, CONTROL: 10 TURNS W/O BRAKE (END ATTACHING PARTS)	05129	//1-2-1
-22	131-0955-00			2	.CONN,RCPT, ELEC:BNC, FEMALE	13511	31-279
C.L.	101 0000 00			_	.(ATTACHING PARTS)	10011	31 273
-23	210-0590-00	B010100	B242519	2	NUT, PLAIN, HEX: 0.375-32 X 0.438 BRS CD PL	7374 3	28269-402
					(FND ATTACHING DADTS)		
	210-0012-00	B010100	B242519	2	WASHER, LOCK: 0.384 ID, INTL, 0.022 THK, STL TERMINAL, STUD: 0.593 L (ATTACHING PAGES)	09772	ORDER BY DESCR
-24	131-0373-00			1	TERMINAL, STUD: 0.593 L	88245	MIS-/
-25	210-0405-00			1			
-26	210-0001-00			1	NUT.PLAIN,HEX:2-56 X 0.188,BRS CD PL WASHER,LOCK:#2 INTL,0.013 THK,STL	77900	1202-00-00-0541C
	210 0001 00			•	(END ATTACHING PARTS)	,,,,,,	2202 00 00 00 120
-27	337-1317-00			1	SHIELD, ELEC: INPUT CONNECTOR	80009	337-1317-00
-28	CD CC 275 (16) CD AND AND UTO VAN VER VAN			2	RESISTOR, VAR: (SEE R4, S4 REPL)		
22				_	(ATTACHING PARTS)		
-29	210-0583-00 210-0046-00			2	NUT, PLAIN, HEX: 0.25-32 X 0.312, BRS CD PL		2X-20319-402
	210-0046-00			2	WASHER, LOCK: 0.261 ID, INTL, 0.018 THK, STL (END ATTACHING PARTS)	77900	1214-05-00-0541C
-30				1	RESISTOR, VAR: (SEE R8 REPL)		
•				•	(ATTACHING PARTS)		
-31	210-0583-00			1	NUT, PLAIN, HEX: 0.25-32 X 0.312, BRS CD PL	73743	2X-20319-402
-32	210-0940-00			1	WASHER, FLAT: 0.25 ID X 0.375 OD X 0.02, STL		ORDER BY DESCR
	210-0046-00			2	WASHER, LOCK: 0.261 ID, INTL, 0.018 THK, STL	77900	1214-05-00-0541C
-33	when about their fields with the major of the company copy.			1	(END ATTACHING PARTS) CKT BOARD ASSY:DLY COUPLING(SEE A7 REPL)		
-33 -34	131-0608-00			1 8	.TERMINAL, PIN: 0.365 L X 0.025 BRZ GLD PL	22526	48283-036
J-7	131-0589-00			4	TERMINAL, PIN: 0.46 L X 0.025 SQ PH BRZ		48283-029
-35	260-1133-00			i	.SWITCH, PUSH: DP, 1A, 25VDC, 3 BUTTON		ORDER BY DESCR
-36	220-0637-00			1	.NUT BLOCK: 2-56/4-40 X 1.050, AL		220-0637-00
	011 0000 00			_	.(ATTACHING PARTS)	* 1.2 * * * *	apara ay brasa
-37	211-0022-00			2	.SCREW, MACHINE: 2-56 X 0.188, PNH, STL	1 K04 35	ORDER BY DESCR
					.(END ATTACHING PARTS) .(ATTACHING PARTS FOR CKT BD)		
-38	211-0101-00			2	SCREW, MACHINE: 4-40 X 0.25, FLH, 100 DEG, STL	TK0435	ORDER BY DESCR
	00			-	(END ATTACHING PARTS)		
					·		

Fig. &							
Index	Tektronix	Serial/Ass				Mfr.	
No.	Part No.	Effective	Dscont	<u> Qty</u>	12345 Name & Description	Code	Mfr. Part No.
1-39	NATIONAL PROPERTY AND ADDRESS OF THE PARTY ADDRESS OF THE PARTY AND ADD			1	CKT BOARD ASSY:TRIG SOURCE SW(SEE A2 REPL)		
	211-0156-00			2	(ATTACHING PARTS) SCREW,MACHINE:1-72 X 0.250,FLH,82 DEG,STL	93907	ORDER BY DESCR
	211 0130 00			2	(END ATTACHING PARTS)	30307	ONDER DI DESCR
				_	CKT BOARD ASSY INCLUDES:		
-40 -41	131-0589-00			7 1	.TERMINAL,PIN:0.46 L X 0.025 SQ PH BRZ CKT BD ASSY:TRIG COUPLING SW(SEE A3 REPL)	22526	48283-029
-41				1	(ATTACHING PARTS)		
-42	211-0156-00			2	SCREW, MACHINE: 1-72 X 0.250, FLH, 82 DEG, STL	93907	ORDER BY DESCR
-43				1	(END ATTACHING PARTS) CKT BOARD ASSY:TRIG MODE SW(SEE A5 REPL)		
-43				1	(ATTACHING PARTS)		
	211-0156-00			2	SCREW, MACHINE: 1-72 X 0.250, FLH, 82 DEG, STL	93907	ORDER BY DESCR
					(END ATTACHING PARTS)		
-44	131-0608-00			6	CKT BOARD ASSY INCLUDES: .TERMINAL,PIN:0.365 L X 0.025 BRZ GLD PL	22526	48283-036
-45	352-0157-00			1	LAMPHOLDER: (1)T-2 UNBASED, WHITE	80009	352-0157-00
-46	378-0602-00			1	LENS, LIGHT: GREEN		378-0602-00
-47 -48	200-0935-00 386-1447-58			1	BASE,LAMPHOLDER: 0.29 OD X 0.19 L,BK PLSTC SUBPANEL, FRONT:	80009 80009	200-0935-00 386-1447-58
40	300-1447-30			1	(ATTACHING PARTS)	00003	300-1447-30
-49	213-0192-00		B220204	4	SCREW, TPG, TF:6-32 X 0.5, SPCL TYPE, FILH, STL		ORDER BY DESCR
	213-0793-00	B220205		4	SCREW, TPG, TF:6-32 X 0.4375, TAPTITE, FILH	8348 6	239-006-406043
-50	** ** ** ** ** ** ** ** ** ** ** **			1	(END ATTACHING PARTS) CKT BOARD ASSY:TRIGGER(SEE A4 REPL)		
-51	131-0589-00			2	.TERMINAL, PIN: 0.46 L X 0.025 SQ PH BRZ	22526	48283-029
	131-0608-00			11	.TERMINAL,PIN:0.365 L X 0.025 BRZ GLD PL		48283-036
-52	136-0252-04 136-0350-00		B113699 B209999	42 14	.SOCKET,PIN TERM:U/W 0.016-0.018 DIA PINS .SKT,PL-IN ELEK:TRANSISTOR,3 CONTACT		75060-007 136-0350-00
	136-0252-04		0203333	51	SOCKET, PIN TERM: UAN 0.016-0.018 DIA PINS		75060-007
-53	136-0263-03	B010100	B158929	9	.SOCKET, PIN TERM; UN 0.025 SQ PINS	00779	85864-2
54	136-0263-04		DOGGOOO	9	SOCKET, PIN TERM: U/W 0.025 SQ PIN		75377-001
-54	136-0260-02 136-0260-02		B209999 B237199	6 2	.SKT,PL-IN ELEK:MICROCIRCUIT,16 DIP .SKT,PL-IN ELEK:MICROCIRCUIT,16 DIP		DILB16P-108T DILB16P-108T
	136-0729-00		0207100	2	.SKT, PL-IN ELEK: MICROCKT, 16 CONTACT		DILB16P-108T
-55	200-0945-00			2	.COVER HALF, XSTR: DUAL TO-18 ALUMINUM		200-0945-00
-56	200-0945-01			2	.COVER HALF,XSTR:DUAL TO-18 W/2-56 THD AL	80009	200-0945-01
-57	211-0062-00	8010100	B209999	2	.(ATTACHING PARTS) .SCREW,MACHINE:2-56 X 0.312,PNH,STL	06950	ORDER BY DESCR
	211-0001-00			2	.SCREW,MACHINE:2-56 X 0.25,PNH,STL		ORDER BY DESCR
.	014 0570 00	2010100	0000000	0	.(END ATTACHING PARTS)	00000	014 0570 00
-58	214-0579-00 214-0579-00		B209999	. 2 3	.TERM,TEST POINT:BRS CD PL .TERM,TEST POINT:BRS CD PL		214-0579-00 214-0579-00
	217 0375 00	0210000		Ŭ	.(ATTACHING PARTS FOR CKT BD)		
-59	211-0008-00			3	SCREW, MACHINE: 4-40 X 0.25, PNH, STL	93907	ORDER BY DESCR
-60	343-0088-00	B010100	B109999	2	(END ATTACHING PARTS) CLAMP,CABLE:0.062 DIA,PLASTIC	80009	343-0088-00
00	343-0088-00	B110000	0103333	1	CLAMP, CABLE: 0.062 DIA, PLASTIC	80009	343-0088-00
-61	348-0235-00			2	SHLD GSKT, ELEK: FINGER TYPE, 4.734 L	80009	348-0235-00
-62	105-0076-02 105-0076-04	B010100 B237225	B237224	1 1	RELEASE BAR, LCH: PLUG-IN UNIT	80009	105-0076-02
-63	214-1280-00	023/223		1	RELEASE BAR, LCH: PLUG-IN UNIT SPRING, HLCPS: 0.14 OD X 1.126 L, TWIST LOOP	8 000 9 91260	105-0076-04 ORDER BY DESCR
-64	214-1054-00			ī	SPRING, FLAT: 0.825 X 0.322, SST		ORDER BY DESCR
-65	105-0075-00			1	BOLT, LATCH:	8 000 9	105-0075-00
-66 -67	131-0608-00	B010100	B089999	1 11	CKT BOARD ASSY:SWEEP(SEE A6 REPL) .TERMINAL,PIN:0.365 L X 0.025 BRZ GLD PL	22526	48283-036
0,	131-0608-00	B090000	0003333	12	.TERMINAL, PIN: 0.365 L X 0.025 BRZ GLD PL	22526	48283-036
-68	136-0269-02	B010100	8237199	2	.SKT,PL-IN ELEK:MICROCIRCUIT,14 DIP	09922	DILB14P-108T
. 60	136-0728-00	B237200	D112600	2	.SKT,PL-IN ELEK:MICROCKT,14 CONTACT	09922	DILB14P-108
-69	136-0252-04 136-0252-04	B010100 B113700	B113699 B148050	140 37	.SOCKET, PIN TERM:U/W 0.016-0.018 DIA PINS .SOCKET, PIN TERM:U/W 0.016-0.018 DIA PINS		75060-007 75060-007
	136-0252-04	B148051	2. 10000	17	.SOCKET, PIN TERM: U/W 0.016-0.018 DIA PINS		75060-007
	136-0350-00	8148051	B217999	41	.SKT,PL-IN ELEK:TRANSISTOR,3 CONTACT	8000 9	136-0350-00
	136-0252-07 136-0634-00	B218000 B148051	8237199	123 1	.SOCKET,PIN CONN:W/O DIMPLE .SKT,PL-IN ELEK:MICROCIRCUIT,20 DIP		75060-012 DILB20P-108
	136-0654-00	B237200	023/133	1	.SKT,PL-IN ELEK:MICROCIRCUIT,20 DIP		DILB20P-108
-70	136-0263-03	B010100	B158929	15	.SOCKET, PIN TERM: U/W 0.025 SQ PINS	00779	85864-2
	136-0263-04	B158930		45	.SOCKET,PIN TERM:U/W 0.025 SQ PIN	22526	75377-001

9-4 REV MAR 1988


Fig. & Index No.	Tektronix Part No.	Serial/Ass Effective		Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
OCHMO SAKAGOS SCHOOLS	A THE RESIDENCE OF THE PARTY OF THE PROPERTY OF THE PARTY		Management of the Same Management and Springers (1997)	CALIFORNIA CANADA CANAD		THE RESERVE OF THE PERSON NAMED IN	We will have been an additional to the second secon
1-71	136-0241-00		8089999	2	.SKT,PL-IN ELEK:MICROCIRCUIT,10 CONT,PCB MT		133-99-12-064
-72	214-0579-00		B089999	15	.TERM,TEST POINT:BRS CD PL		214-0579-00
	214-0579-00	B090000		16	.TERM,TEST POINT:BRS CD PL		214-0579-00
-73	214-1292-00			2	.HEAT SINK,XSTR:TO-5,SIL BRZ PTD BLACK	05820	205SB
-74	260-1208-00			1	.SWITCH, PUSH: DPDT, 28VDC, PUSH-PUSH	31918	ORDER BY DESCR
-75	352-0240-00			1	.WITCH, POSH: DPD1, 28VDC, POSH-POSH .HOLDER, CABLE: 0.125 DIA CA, HORIZ CKT BD MT	80009	352-0240-00
-76	386-2141-00			1	.SPKI.FXI SMAFI:PUSH SWELLH	oudus	386-2141-00
-77	361-0007-00			1	.SPACER, SLEEVE: 0.188 L X 0.111 ID, POLTHN	8000 9	361-0007-00
					.(ATTACHING PARTS FOR CKT BD)		
-78	211-0008-00			6	SCREW,MACHINE:4-40 X 0.25,PNH,STL (END ATTACHING PARTS)	93907	ORDER BY DESCR
-79	384-1120-00			1	EXTENSION SHAFT:10.0 L X 0.123 OD, EPOXY GL	80000	384-1120-00
-80	376-0101-00				CPLG, SHAFT, RGD: 0.125 ID X 0.312 OD, AL		376-0101-00
-81	3/0-0101-00			1 1	CKT BOARD ASSY:TRIGGER SHIELD(SEE A9 REPL)	00003	370-0101-00
-82	386-1556-00	9010100	B192519		•	90000	386-1556-00
-02			0192519	1	.SUPPORT, CKT BD: 0.215 H, ACETAL		386-2228-00
02	386-2228-00	8192520		1	SUPPORT, CKT BD: DELRIN		131-0937-00
-83	131-0937-00	0010100	000000	2	.TERMINAL,LUG:SHLD GND,O.22 ID,PLAIN,BRS		
	672-0049-00		B089999	1	CIRCUIT BD ASSY TIME/DIV SW		672-0049-00
	672-0049-01		B179999	1	CIRCUIT BD ASST: IME/DIV SW		672-0049-01
	672-0049-02		B209999	1	CIRCUIT BD ASSY:TIME/DIV SW CIRCUIT BD ASSY:TIME/DIV SW CIRCUIT BD ASSY:TIME/DIV SW CIRCUIT BD ASSY:TIME/DIV SW		672-0049-02
	672-0049-04	B210000		1	CIRCUIT BD ASSY: TIME/DIV SW	80009	672-0049-04
					(ATTACHING PARTS)		
-84	211-0008-00			6	SCREW, MACHINE: 4-40 X 0.25, PNH, STL	93907	ORDER BY DESCR
					(END ATTACHING PARTS)		
					CKT BOARD ASSY INCLUDES:		
-85	384-0871-00	B010100	B179999	1	.SHAFT,CAM SW:9.426 L X 0.125 OD,INNER	8000 9	384-0871-00
	204 2000 00	D1 00000			.CONCENTRIC W/DRIVER	20000	204 0000 00
	384-0882-02	8180000		1	.SHAFT,CAM SW:9.329 L X 0.125 OD INNER		384-0882-02
00	204 1152 00				.CONCENTRIC W/DRIVER .EXTENSION SHAFT:11.61 L X 0.081 OD,SST .SPOOL,SW ACTR:0.128 & 0.203 ID,AL .SETSCREW:4-40 X 0.094,STL	00000	204 1152 00
-86	384-1153-00			1	.EXTENSION SHAFT: 11:01 L X 0.001 00,551	00009	384-1153-00
87	376-0129-01			1	.SPUOL, SW ACIR: 0.128 & 0.203 10, AL	34445	376-0129-01
20	213-0075-00			2	SETSCREW: 4-40 X 0.094,STL .ACTUATOR,SWITCH: SLIDE SW SETSCREW: 4-40 X 0.188 STI	/4445	ORDER BY DESCR
-88	105-0340-00			1	ACTUATOR, SWITCH: SLIDE SW	80009	105-0340-00
20	213-0022-00			1	SEISCREW: 4-40 X U.188, STL	/4445	ORDER BY DESCR
-89	376-0092-01			1	ACTUATOR, SWITCH: SLIDE SWSETSCREW: 4-40 X 0.188, STL .CPLG HALF, SHAFT: 0.125 ID, DELRINSETSCREW: 4-40 X 0.125, STL .CPLG HALF, SHAFT: 0.125 ID, BLACK POLYAMIDESETSCREW: 4-40 X 0.125. STL	80009	376-0092-01
	213-0048-00			2	SETSCREW: 4-40 X 0.125, STL	TK0392	ORDER BY DESCR
-90	376-0092-03			1	.CPLG HALF,SHAFT:0.125 ID,BLACK POLYAMIDE	80009	376-0092-03
	213-0048-00			2			ORDER BY DESCR
-91	214-1630-00	B010100	B139999	1	.DETENT, SWITCH:	80009	214-1630-00
-92				1	.SWITCH, SENS: (SEE S252 REPL)		
					.(ATTACHING PARTS)		
-93	211-0185-00			2	. (ATTACHTMS PARTS) .SCREW,MACHINE:2-56 X 0.438,PNH,STL .WASHER,FLAT:0.093 ID X 0.281 OD X 0.02,STL .NUT,PLAIN,PLATE:2-56 X 0.6 X 0.063,AL	TK0435	ORDER BY DESCR
-94	210-0850-00			2	.WASHER,FLAT:0.093 ID X 0.281 OD X 0.02,STL	12327	ORDER BY DESCR
-95	220-0619-00			2	.NUT,PLAIN,PLATE:2-56 X 0.6 X 0.063,AL	8000 9	220-0619-00
					.(END ATTACHING PARTS)		
-96				1	.CKT BOARD ASSY:READOUT(SEE A8 REPL)		
					.(ATTACHING PARTS)		
-97	211-0116-00	B010100	B090824	10	.SCR,ASSEM WSHR:4-40 X 0.312,PNH,BRS,NP,POZ	77900	ORDER BY DESCR
	211-0292-00	B090825		10	.SCR,ASSEM WSHR:4-40 X 0.29,PNH,BRS NI PL	78189	51-040445-01
					.(END ATTACHING PARTS)		
					.CKT BOARD ASSY INCLUDES:		
	131-0157-00			2	TERMINAL,PIN:0.25 L X 0.04 OD,BRS,SLDR PL	18310	1100-34-0519
-98	131-0604-00			12	CONTACT,ELEC:CKT BD SW,SPR,CU BE	8000 9	131-0604-00
-9 9	131-0590-00			6	TERMINAL.PIN:0.71 L X 0.025 SQ PH BRZ	22526	47331
	131-0589-00			5	TERMINAL, PIN: 0.46 L X 0.025 SQ PH BRZ		48283-029
	210-0406-00			4	.NUT.PLAIN.HEX:4-40 X 0.188.BRS CD PL		12161-50
-100	200-1440-00			2	.COVER.CAM SW:26 ELEMENTS	80009	
-00				_	.(ATTACHING PARTS)		-
-101	211-0116-00			4	.SCR, ASSEM WSHR:4-40 X 0.312, PNH, BRS, NP, POZ	77900	ORDER BY DESCR
	210-0406-00			4	.NUT, PLAIN, HEX: 4-40 X 0.188, BRS CD PL		12161-50
				7	.(END ATTACHING PARTS)		
					.ACTR ASSY,CAM S:TIME/DIV(SEE S100 REPL)		
					.(ATTACHING PARTS)		
-102	211-0116-00			6	.SCR,ASSEM WSHR:4-40 X 0.312,PNH,BRS,NP,POZ	77000	ORDER BY DESCR
-102	C11-0110-00			O	• - :	77300	OVOEK OL DESCK
					.(END ATTACHING PARTS)		
-103	210-0406-00			7	.CAM SWITCH ASSY INCLUDES:	727/2	12161-50
-103 -104	131-0963-00			í	NUT,PLAIN,HEX:4-40 X 0.188,BRS CD PL CONTACT,ELEC:GROUNDING,PH BRZ,W/BRACKET		ORDER BY DESCR
-104	101 .0303-00			1	COMPACT, LELC. GROUNDING, FIT DRZ, W/ BRACKET	i NUOU/	ONDER DI DESOR

Fig. & Index No.	Tektronix Part No.		sembly No. e Dscont	Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
1-105	214-1139-02			2	SPRING,FLAT:0.885 X 0.156 CU BE GRN CLR(REPLACE ONLY WITH PART BEARINGTHE SAME COLOR CODE AS THE ORIGINALPART IN YOUR INSTRUMENT)	80009	214-1139-02
	214-1139-03			2	SPRING,FLAT:0.885 X 0.156 CU BE RED CLR (SEE FOOTNOTE ON FIG.1-105)	80009	214-1139-03
-106	214-1127-00		B179999	4	ROLLER, DETENT: 0.125 DIA X 0.125, SST	80009	
-107	214-1752-00 401-0081-02		B179999	4 2	ROLLER, DETENT: 0.125 OD X 0.16, SST BEARING, CAM SW: FRONT W/O MOUNTING BOSSES	80009 80009	214-1752-00 401-0081-02
	401-0180-00	8180000		2	BEARING,CAM SW:FR & REAR,0.80 & 0.83 DIA(ATTACHING PARTS)	80009	401-0180-00
-108	354-0391-00 354-0390-00	B010100 B180000	B179999	2 1	RING,RETAINING:BASIC EXT,U/O 0.438 DIA SFT RING,RETAINING:BASIC EXT,U/O 0.375 DIA SFT (END ATTACHING PARTS)	79136 79136	5100-43 MD 5100-37-ZD
	384-0878-04	B180000		1	SHAFT,CAM SW:2.868 L X 0.248 OD OUTER CONCENTRIC W/DRIVER	8000 9	384-0878-04
-109	105-0386-00	8010100	B179999	1	ACTUATOR, CAM SW:TIME/CM, FRONT (7853A ONLY)	8000 9	105-0386-00
	105-0386-01	B180000		1	(755A GNET) ACTUATOR,CAM SW:TIME/CM,FRONT (7853A ONLY)	8 000 9	105-0386-01
	210-0406-00			4	NUT,PLAIN,HEX:4-40 X 0.188,BRS CD PL		12161-50
-110	401-0115-00 401-0178-00		B179999	1 1	BEARING,CAM SW:CENTER,O.83 DIA CAM BEARING,CAM SW:CENTER/REAR	8000 9 8000 9	401-0115-00 401-0178-00
-111	105-0387-00		B179999	1	ACTUATOR, CAM SW:TIME/CM, REAR (7853A ONLY)	80009	105-0387-00
	105-0387-01	B180000		1	(7553 ONLT) ACTUATOR,CAM SW:TIME/CM,REAR (7853A ONLY)	80009	105-0387-01
-112	स्त्रक स्त्रक अर्थन अर्थन अर्थन अर्थन अर्थन स्त्रक अर्थन स्त्रक अर्थन स्त्रक स्त्रक स्त्रक स्त्रक स्त्रक स्त्र			1	RESISTOR, VAR: (SEE R144/S144 REPL) .(ATTACHING PARTS)		
-113	210-0583-00			1	.NUT,PLAIN,HEX:0.25-32 X 0.312,BRS CD PL		2X-20319-402
-114	210-0046-00			1	.WASHER,LOCK:0.261 D,INTL,0.018 THK,STL .(END ATTACHING PARTS)		1214-05-00-0541C
-115	407-0803-00 175-3802-00	B23218		1 1	.BRACKET,ELEC SW:BRASS .CA ASSY,SP,ELEC:8,26 AWG,6.0 L,RIBBON		407-0803-00 175-3802-00
	352-0166-00	B23218		1	HLDR, TERM CONN:8 WIRE, BLACK	80009	352-0166-00
	175 - 3803-00	823218		1	.CA ASSY,SP,ELEC:3,26 AWG,10.0 L,RIBBON		175-3803-00
-116	352-0161-02	B23218		1 1	HLDR,TERM CONN:3 WIRE,RED .CKT BOARD ASSY:INTERFACE(SEE A1 REPL)	8000 9	352-0161-02
-117	131-0608-00			42	TERMINAL, PIN: 0.365 L X 0.025 BRZ GLD PL	2252 6	48283-036
	131-0589-00			2	TERMINAL,PIN:0.46 L X 0.025 SQ PH BRZ	22526	48283-029
	131-0590-00			3	TERMINAL, PIN:0.71 L X 0.025 SQ PH BRZ	22526 22526	47331 47333
-118	131-0592-00 131-0595-00	B010100	B089999	37 10	TERMINAL,PIN:0.885 L X 0.025 SQ BRS TERMINAL,PIN:1.37 L X 0.025 SQ BRS TIN PL	8 000 9	131-0595-00
110	131-0595-00	B090000	2000000	7	TERMINAL,PIN:1.37 L X 0.025 SQ BRS TIN PL	8000 9	131-0595-00
	131-0665-00	B090000		1	TERMINAL,PIN:0.88 L X 0.025 SQ,BRS TIN PL	22526	47338
-119 -120	131-0604-00 136-0252-04	B010100	B113699	35 30	CONTACT,ELEC:CKT BD SW,SPR,CU BE SOCKET,PIN TERM:U/W 0.016-0.018 DIA PINS		131-0604-00 75060-007
120	136-0350-00	B113700	D11303 3	10	SKT,PL-IN ELEK:TRANSISTOR,3 CONTACT	80009	136-0350-00
-121	129-0308-00			6	SPACER,POST:0.465 L X 0.25 HEX,BRS (ATTACHING PARTS)	8000 9	129-0308-00
-122	129-0339-00 211-0008-00			4 6	SPACER, POST: 0.28 L, 4-40 TAP/STUD, BRS SCREW, MACHINE: 4-40 X 0.25, PNH, STL (END ATTACHING PARTS)	80009 93907	129-0339-00 ORDER BY DESCR
-123	and the same wife and the same state of the same state.			1	RESISTOR, VAR: (SEE R290 REPL)		
-124	120 0220 00			2	SWITCH, SLIDE: (SEE S251, S262 REPL)	90000	120 .022000
-125	129-0339-00 220-0547-01			2 6	SPACER, POST: 0.28 L, 4-40 TAP/STUD, BRS NUT BLOCK: 4-40 X 0.282, NI SIL NP		129-0339 - 00 220-0547-01
120	220 00 17 01			Ū	(ATTACHING PARTS)		
-126	211-0105-00			6	SCREW,MACHINE:4-40 X 0.188,FLH,100 DEG (END ATTACHING PARTS) CKT BOARD ASSY:INTERFACE(SEE A1 REPL)	TK0435	ORDER BY DESCR
	131-0595-00	8010100	B089999	8	(7B53AN ONLY) .TERMINAL,PIN:1.37 L X 0.025 SQ BRS TIN PL	80009	131-0595-00
	131-0595-00	B090000	500000	7	.TERMINAL,PIN:1.37 L X 0.025 SQ BRS TIN PL	80009	131-0595-00
	131-0665-00	B090000		1	TERMINAL, PIN: 0.88 L X 0.025 SQ, BRS TIN PL	22526	
	131-0590-00 131-0589-00			3 2	TERMINAL,PIN:0.71 L X 0.025 SQ PH BRZ TERMINAL,PIN:0.46 L X 0.025 SQ PH BRZ	22526 22526	4/331 48283-029
	131-0604-00			35	.CONTACT, ELEC: CKT BD SW, SPR, CU BE		131-0604-00

Fig. &							
Index	Tektronix	Serial/Ass				Mfr.	
No.	Part No.	Effective	e Dscorrt	<u> Oty</u>	12345 Name & Description	Code	Mfr. Part No.
1-	131-0608-00	0010100	0112000	29	TERMINAL, PIN: 0.365 L X 0.025 BRZ GLD PL		48283-036
	136-0252-04 136-0350-00		B113699	30 10	.SOCKET,PIN TERM:U/W 0.016-0.018 DIA PINS .SKT,PL-IN ELEK:TRANSISTOR,3 CONTACT		75060-007 136-0350-00
	214-0579-00	0137000		2	TERM. TEST POINT: BRS CD PL		214-0579-00
	260-0960-01			1	.SWITCH, SLIDE: FORM Z, O. 5A, 120VDC, BLACK BTTN		23-021-043
	348-0056-00	B191300		1	.GROMMET, PLASTIC: GRAY, ROUND, 0.332 ID		348-0056-00
	129-0308-00			6	.SPACER, POST: 0.465 L X 0.25 HEX, BRS		129-0308-00
	129-0339-00			3 1	.SPACER, POST: 0.28 L,4-40 TAP/STUD, BRS		129-0339-00 376-0101-00
	376-0101-00 384-1120-00			1	.CPLG,SHAFT,RGD:0.125 ID X 0.312 OD,AL .EXTENSION SHAFT:10.0 L X 0.123 OD,EPOXY GL		384-1120-00
	210-0583-00			1	.NUT. PLAIN, HEX: 0.25-32 X 0.312, BRS CD PL		2X-20319-402
	210-0046-00			1	.WASHER, LOCK: 0.261 ID, INTL, 0.018 THK, STL	77900	1214-05-00-0541C
	407-0803-00			1	.BRACKET, ELEC SW:BRASS		407-0803-00
-127	384-0838-00			1	.SHAFT, CAM SW: INNER CONCENTRIC W/DRIVER		384-0838-00 105-0326-00
	105-0326-00			1	.ACTR ASSY,CAM S:TIME/CM .(7B53AN ONLY)	00009	100-0020-00
	334-3448-00	B191010		1	.MARKER, IDENT: MARKED NOTICE	07416	ORDER BY DESCR
-128	200-1310-00			1	COVER, CAM SW:36 ELEMENTS	8 000 9	200-1310-00
				_	(ATTACHING PARTS)	22227	000F0 0V 05000
-129	211-0008-00			6	SCREW,MACHINE:4-40 X 0.25,PNH,STL WASHER,LOCK:#4 INTL,0.015 THK,STL		ORDER BY DESCR 1204-00-00-0541C
-130	210-0004-00			6	(END ATTACHING PARTS)	77900	1204-00-00-03410
-131	260-1309-00			1	SWITCH, SENS: SPDT, 5A, 250AC, MOM	01963	E63-10H
					(ATTACHING PARTS)		
-132	211-0159-00			2	SCREW,MACHINE:2-56 X 0.375,PNH,STL		1183-302
-133	210-0850-00			2	WASHER,FLAT:0.093 ID X 0.281 0D X 0.02,STL		ORDER BY DESCR 220-0619-00
-134	220-0619-00			1	NUT,PLAIN,PLATE:2-56 X 0.6 X 0.063,AL (END ATTACHING PARTS)	00009	220-0019-00
	384-0838-00			1	SHAFT, CAM SW:INNER CONCENTRIC W/DRIVER	80009	384-0838-00
					(7B53AN ONLY)		
-135	354-0391-00			2	RING, RETAINING: BASIC EXT, U/O 0.438 DIA SFT		5100-43 MD
-136	401-0081-02			2	BEARING,CAM SW: FRONT W/O MOUNTING BOSSES		401-0081-02 214-1139-00
-137	214-1139-00			AR	SPRING,FLAT:0.885 X 0.156 CU BE GLD CLR (REPLACE ONLY WITH PART BEARING THE	00009	214-1139-00
					SAME COLOR CODE AS THE ORIGINAL PART		
					IN YOUR INSTRUMENT)		
	214-1139-02			AR	SPRING, FLAT: 0.885 X 0.156 CU BE GRN CLR	8000 9	214-1139-02
	214-1139-03			AR	(SEE FOOTNOTE ON FIG.1-137) SPRING,FLAT:0.885 X 0.156 CU BE RED CLR	80000	214-1139-03
	214-1139-03			AK	(SEE FOOTNOTE ON FIG.1-137)	500 03	214-1155-05
-138	214-1127-00			4	ROLLER, DETENT: 0.125 DIA X 0.125, SST	8000 9	214-1127-00
-139	105-0325-00			1	ACTUATOR,CAM SW:TIME/CM,FRONT		105-0325-00
-140	401-0115-00			1	BEARING,CAM SW:CENTER,O.83 DIA CAM		401-0115-00
-141 -142	105-0324-00 210-0406-00			1 11	ACTUATOR,CAM SW:TIME/CM,REAR NUT,PLAIN,HEX:4-40 X 0.188,BRS CD PL		105-0324-00 12161-50
-143	131-0963-00			1	CONTACT, ELEC:GROUNDING, PH BRZ, W/BRACKET		ORDER BY DESCR
				_	(ATTACHING PARTS FOR ACTR ASSY)		
-144	211-0116-00			6	.SCR, ASSEM WSHR: 4-40 X 0.312, PNH, BRS, NP, POZ	7 790 0	ORDER BY DESCR
	384-0838-00			,	.(END ATTACHING PARTS) .SHAFT,CAM SW:INNER CONCENTRIC W/DRIVER	90000	204 0020 00
-145	214-1597-00			1	ADAPTER, SW ACTR: 0.252 ID X 0.75 OD X 0.425,		384-0838-00 214-1597-00
140	214 1007 00			•	PLASTIC	0000	214 1007 00
-146	384-1059-00			1	EXTENSION SHAFT:6.58 L		384-1059-00
-147	384-1087-00			1	SHAFT, PUSH, ACTR: 0.76 L X 0.065 STEPPED		384-1087-00
-148 -149	384-1101-00 386-1402-00	8010100	D2/2712	1	EXTENSION SHAFT: 4.14 L X 0.187 SQ, PLASTIC		384-1101-00 386-1402-00
-143	386-5466-00		B243712	1	PANEL, REAR: PANEL, REAR:		386-5466-00
	100 000			•	(ATTACHING PARTS)		
-150	213-0192-00	B010100	B220204	4	SCREW, TPG, TF: 6-32 X 0.5, SPCL TYPE, FILH, STL		ORDER BY DESCR
151	213-0793-00	B220205		4	SCREW, TPG, TF:6-32 X 0.4375, TAPTITE, FILH		239-006-406043
-151	361-0326-00			1	SPACER, SLEEVE: 0.1 L X 0.18 ID, AL (NO LONGER USED)	auuu 9	361-0326-00
					(END ATTACHING PARTS)		
-152	214-1061-00			1	CONTACT, ELEC: GROUNDING, CU BE	80009	214-1061-00
-153	426-0505-11			1	FR SECT, PLUG-IN: TOP		426-0505-11
-154	426-0499-11	DO10100	0000170	1	FR SECT, PLUG-IN:BOTTOM		426-0499-11
	198-2121-00 198-2121-02		B232179	1	WIRE SET, ELEC: WIRE SET, ELEC:		198-2121-00 198-2121-02
	WE	3221,00		•		-3000	

REV MAR 1988 9-7

Fig. & Index No.	Tektronix Part No.	Serial/Ass Effective		Qty	12345 Name & Description	Mfr. Code	Mfr. Part No.
1-155	131-0707-00	B010100	B232179	58	.CONTACT, ELEC: 22-26 AWG, BRS, CU BE GLD PL	22526	47439-000
	131-0707-00	B231780		47	.CONTACT, ELEC: 22-26 AWG, BRS, CU BE GLD PL	22526	47439-000
	131-0708-00			4	.CONTACT, ELEC: 28-32 AWG, BRS, CU BE GLD PL	22526	47437-000
-156	131-0621-00			4	.CONN,TERM:22-26 AWG,BRS,CU BE GLD PL	22526	46231-000
	131-0622-00			2	.CONTACT, ELEC: 28-32 AWG, BRS & CU BE GLD PL	22526	46241-000
	131-0792-00			2	.CONNECTOR, TERM: 18-20 AWG, CU BE GOLD PL	22526	46221
-157	352-0169-00			4	.HLDR,TERM CONN:2 WIRE,BLACK	80009	352-0169-00
-158	352-0198-00			4	.HLDR,TERM CONN:2 WIRE,BLACK	80009	352-0198-00
-159	352-0161-00			2	.HLDR,TERM CONN:3 WIRE,BLACK	8 000 9	352-0161-00
	352-0161-02	8010100	B232179	1	.HLDR,TERM CONN:3 WIRE,RED	8000 9	352-0161-02
-160	352-0163-00			3	.HLDR,TERM CONN:5 WIRE,BLACK	8 000 9	352-0163-00
-161	352-0164-00			4	.HLDR,TERM CONN:6 WIRE,BLACK	8 000 9	352-0164-00
-162	352-0166-00	B010100	B232179	1	.HLDR,TERM CONN:8 WIRE,BLACK	80009	352-0166-00
-163	175-0825-00			AR	.CABLE,SP,ELEC:2,26 AWG,STRD,PVC JKT,RBN	8 000 9	175-0825-00
-164	175-0826-00			AR	.CABLE,SP,ELEC:3,26 AWG,STRD,PVC JKT,RBN	8 000 9	175-0826-00
-165	175-0828-00			AR	.CABLE,SP,ELEC:5,26 AWG,STRD,PVC JKT,RBN	08261	111-2699-955
-166	175-0829-00			AR	.CABLE,SP,ELEC:6,26 AWG,STRD,PVC JKT,RBN		111-2699-973
-167	175-0831-00	B010100	B232179	AR	.CABLE,SP,ELEC:8,26 AWG,STRD,PVC INSUL,RBN	08261	111-2699-971
	198-2443-00			1	WIRE SET, ELEC:	8000 9	198-2443-00
	131-0707-00			1	.CONTACT, ELEC: 22-26 AWG, BRS, CU BE GLD PL	2252 6	47439-000
	131-0708-00			1	.CONTACT, ELEC: 28-32 AWG, BRS, CU BE GLD PL	2252 6	47437-000
	175-0821-00			AR	.WIRE,ELECTRICAL:STRD,30 AWG,250V RMS,GREEN, .PVC.SIL PLD COPPER	TK0282	30-MT-738-UL-5
	352-0169-00			1	.HLDR,TERM CONN:2 WIRE,BLACK	80000	352-0169-00
	225-0102-00			1	HEDR, I CIVIT COMMIT. C. WINCE, DEMON	00003	55E 5105 60
					STANDARD ACCESSORIES		
	070-1342-01			1	MANUAL, TECH: INSTR, 7B53A/7B53AN	8000 9	070-1342-01

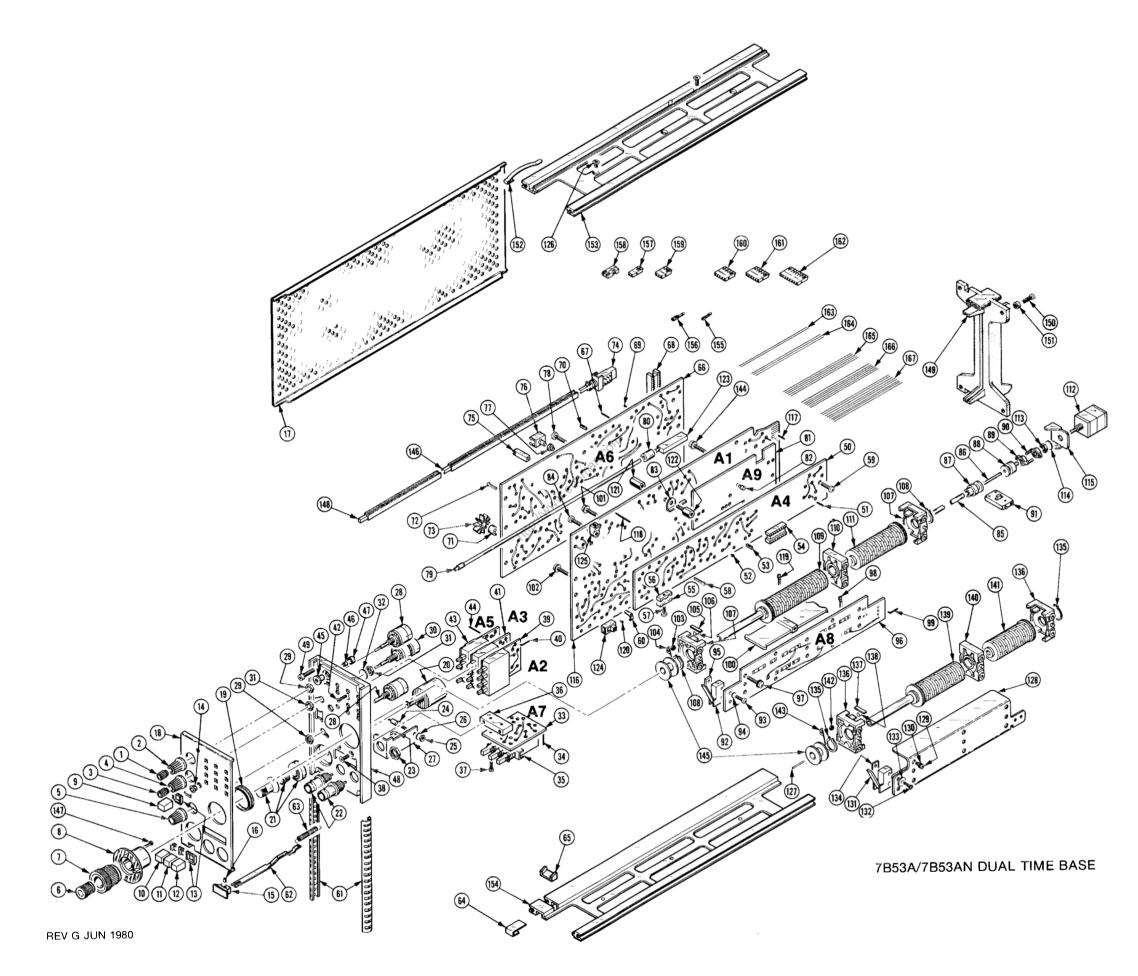

MANUAL CHANGE INFORMATION

At Tektronix, we continually strive to keep up with latest electronic developments by adding circuit and component improvements to our instruments as soon as they are developed and tested.

Sometimes, due to printing and shipping requirements, we can't get these changes immediately into printed manuals. Hence, your manual may contain new change information on following pages.

A single change may affect several sections. Since the change information sheets are carried in the manual until all changes are permanently entered, some duplication may occur. If no such change pages appear following this page, your manual is correct as printed.



MANUAL CHANGE INFORMATION

Date: 5/6/88 Change Reference: C110/0588 Rev 2

Manual Part No.:

see product

Product:

All 7000 Service manuals

Product Group:

42

DESCRIPTION

Effective for all serial numbers.

Revised 9/26/88 Revised 10/13/88

REPLACEABLE ELECTRICAL PARTS LIST CHANGES

The part number has changed for a transistor which may be used in your 7000-Series product. Part number 151-0220-00 has changed to 151-0220-07. Use the new 151-0220-07 part number when ordering a replacement for transistors listed as 151-0220-00 in your Replaceable Electrical Parts List.

Most berg sockets, part number 136-0252-07, have been removed from this 7000-Series instrument to facilitate assembly and improve reliability.

