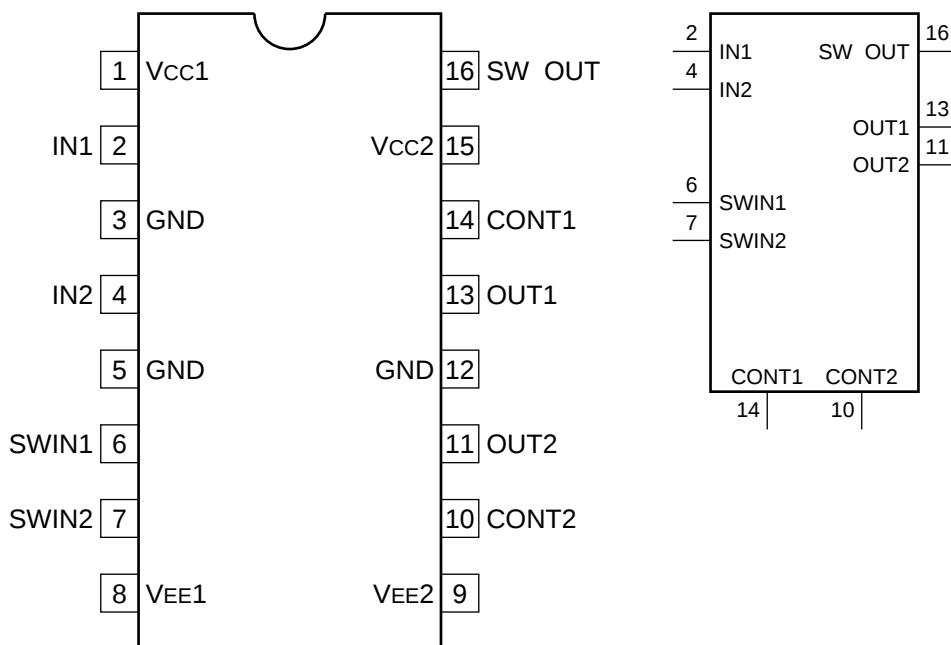


WIDEBAND VIDEO SWITCH

—TOP VIEW—

**INPUT**

CONT1, 2 : POWER SAVE CONTROL PIN OF DRV. 1 AND DRV. 2

INT1, 2 : 1/2-CHANNEL INPUT PIN

SWIN1, 2 : IN1/IN2 PINS SWITCH CONTROL PIN

OUTPUT

OUT1, 2 : OUTPUT PIN OF DRV. 1/2

SWOUT : OUTPUTS IN1 PIN OR IN2 PIN WHICH HAS BEEN
SELECTED BY SWITCH