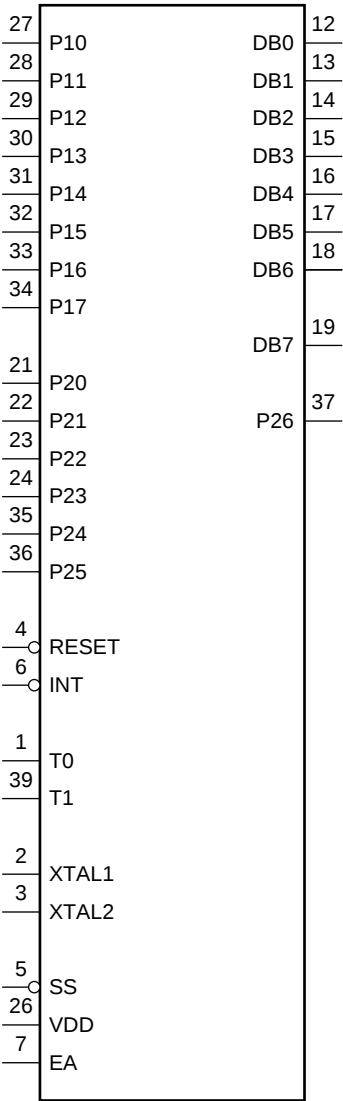 
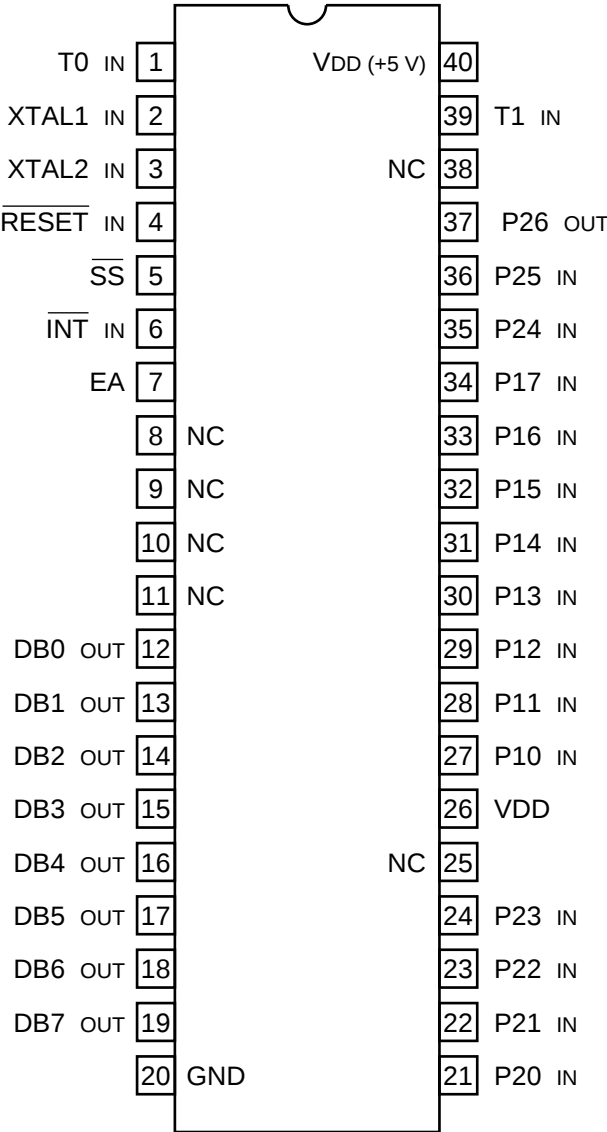 
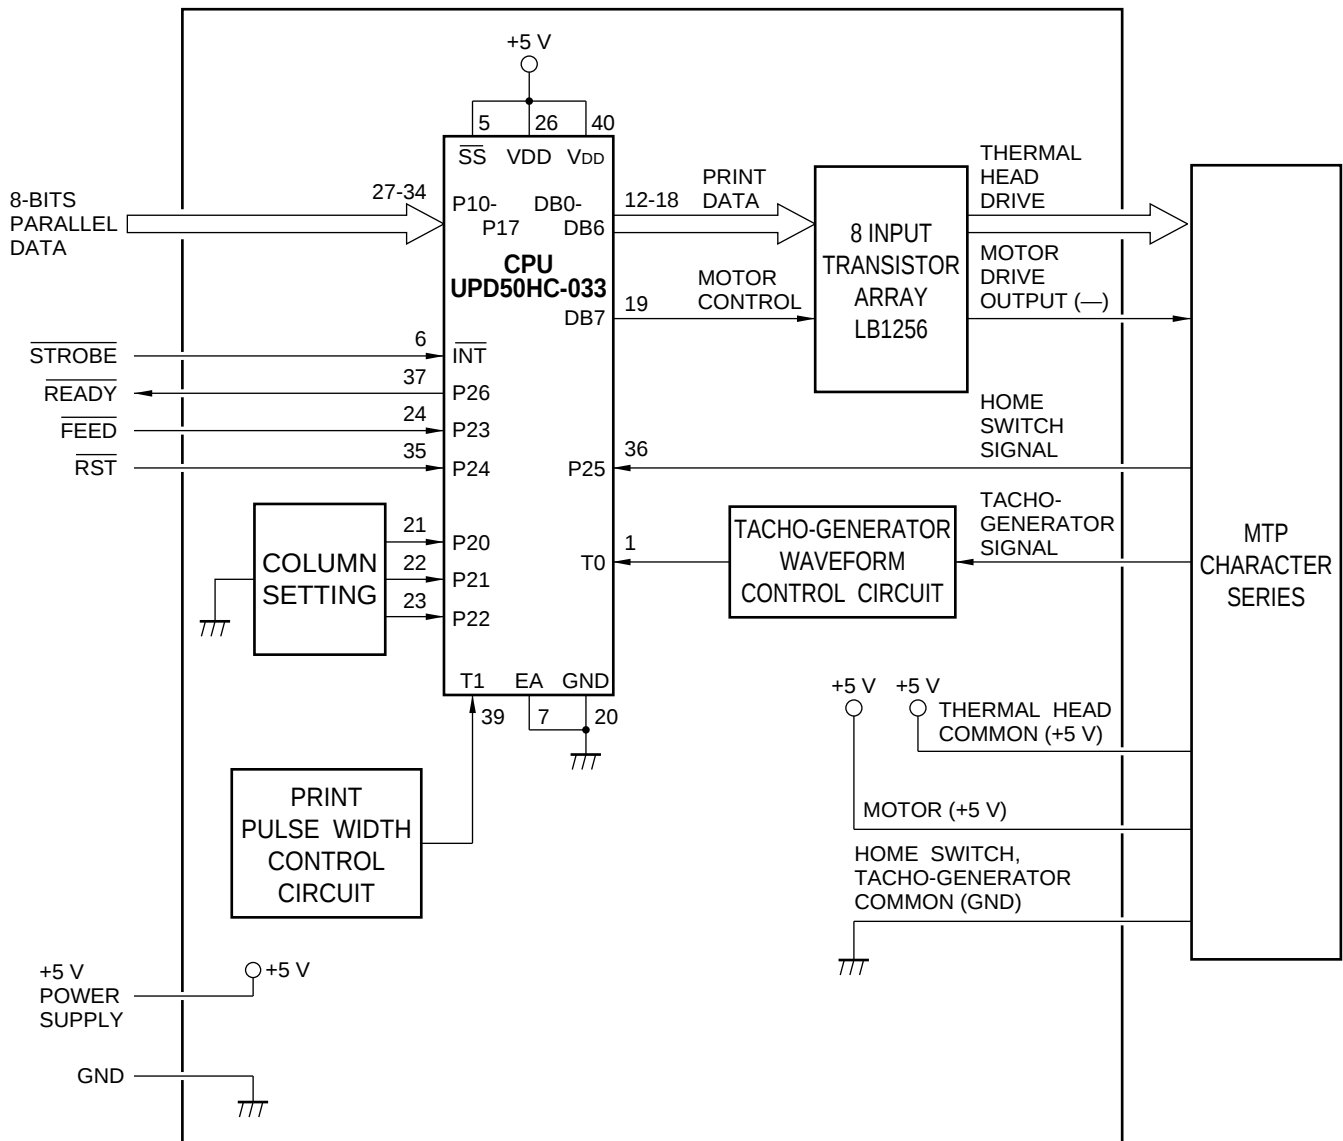 

N-MOS PRINTER CONTROLLER
- TOP VIEW -





INPUT

INT ; STROBE
P10-P17 ; PARALLEL DATA
P20-P22 ; PRINT COLUMN SELECT
P23 ; PRINTER PAPER FEED
P24 ; ERROR RESET
P25 ; HOME SW
RESET ; RESET
T0 ; TACHO-GENERATOR
T1 ; OSCILLATOR FOR
PULSE WIDTH SETTING
XTAL1, XTAL2 ; CRYSTAL

OUTPUT

DB0-DB6 ; THERMAL HEAD DRIVE
DB7 ; MOTOR DRIVE
P26 ; READY

OTHER

EA ; NOT USE (GND CONNECT)
SS ; NOT USE (VDD (+5 V) CONNECT)
VDD ; NOT USE (VDD (+5 V) CONNECT)