



AAL1 VIDEO ERROR PROCESSOR

—TOP VIEW—

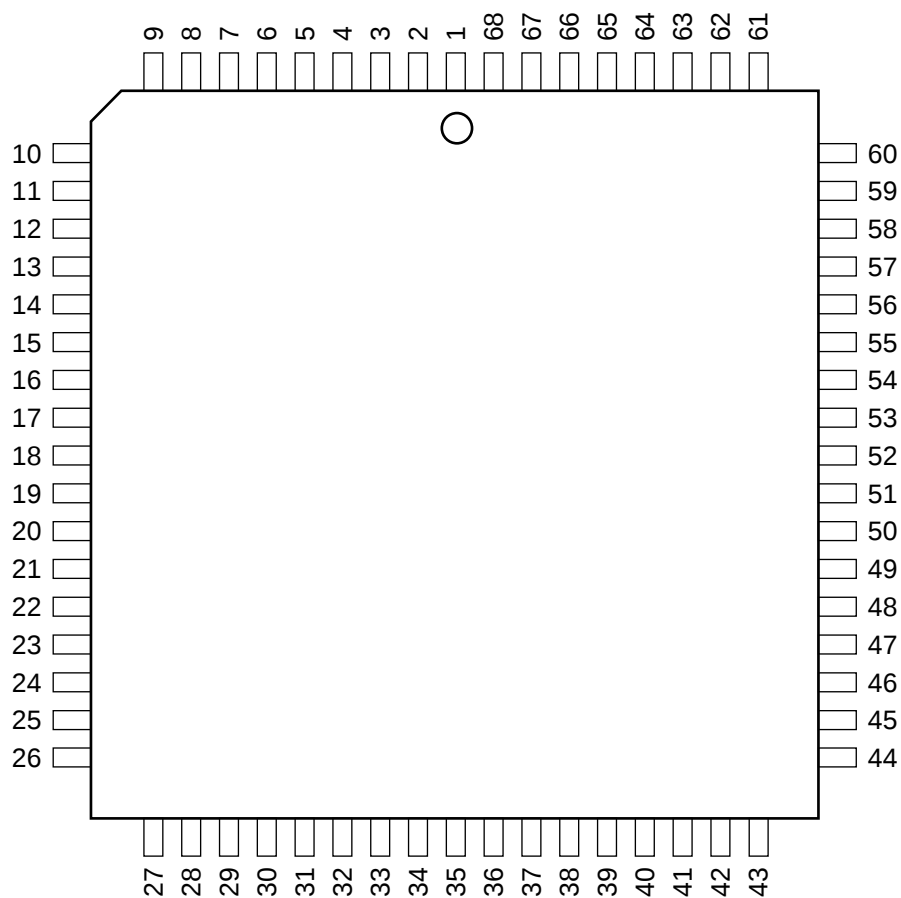

PIN NO.	I/O	SIGNAL	PIN NO.	I/O	SIGNAL	PIN NO.	I/O	SIGNAL	PIN NO.	I/O	SIGNAL
1	I/O	DUP3	18	—	GND	35	I	CLK	52	—	Vcc
2	—	Vcc	19	I	MODE	36	—	Vcc	53	—	GND
3	—	GND	20	O	ENR	37	—	Vcc	54	O	DOUT4
4	—	GND	21	I	TCK	38	—	GND	55	O	DOUT5
5	I/O	DUP4	22	I	RESET	39	—	GND	56	O	DOUT6
6	I/O	DUP5	23	—	GND	40	I	DIN3	57	O	DOUT7
7	I/O	DUP6	24	I	NOR4	41	I	DIN2	58	O	MATSTART
8	I/O	DUP7	25	I	NOR3	42	I	DIN1	59	O	UNCORR
9	—	Vcc	26	I	NOR2	43	I	DIN0	60	O	FUS
10	I	ADR2	27	I	NOR1	44	I	SCOR/F	61	O	FTOT
11	I	ADR1	28	I	NOR0	45	I	ENNOR	62	I	CSEL
12	I	ADR0	29	—	GND	46	O	TDO	63	—	Vcc
13	I	TRST	30	I	DIN7	47	O	DOUT0	64	I	RD
14	I	TMS	31	I	DIN6	48	O	DOUT1	65	I	WR
15	I	TDI	32	I	DIN5	49	O	DOUT2	66	I/O	DUP0
16	—	RESERVED	33	I	DIN4	50	O	DOUT3	67	I/O	DUP1
17	—	GND	34	—	GND	51	—	Vcc	68	I/O	DUP2

RECEPTION (MODE = 0)

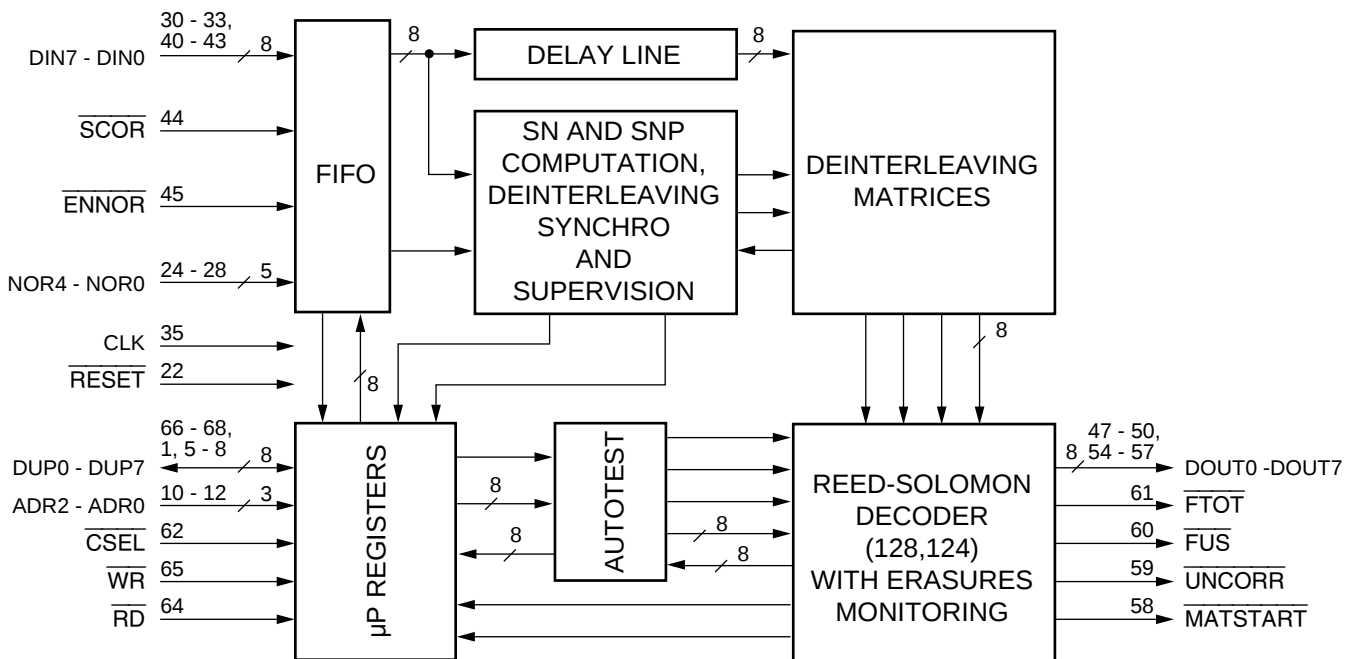

TRANSMISSION (MODE = 1)

