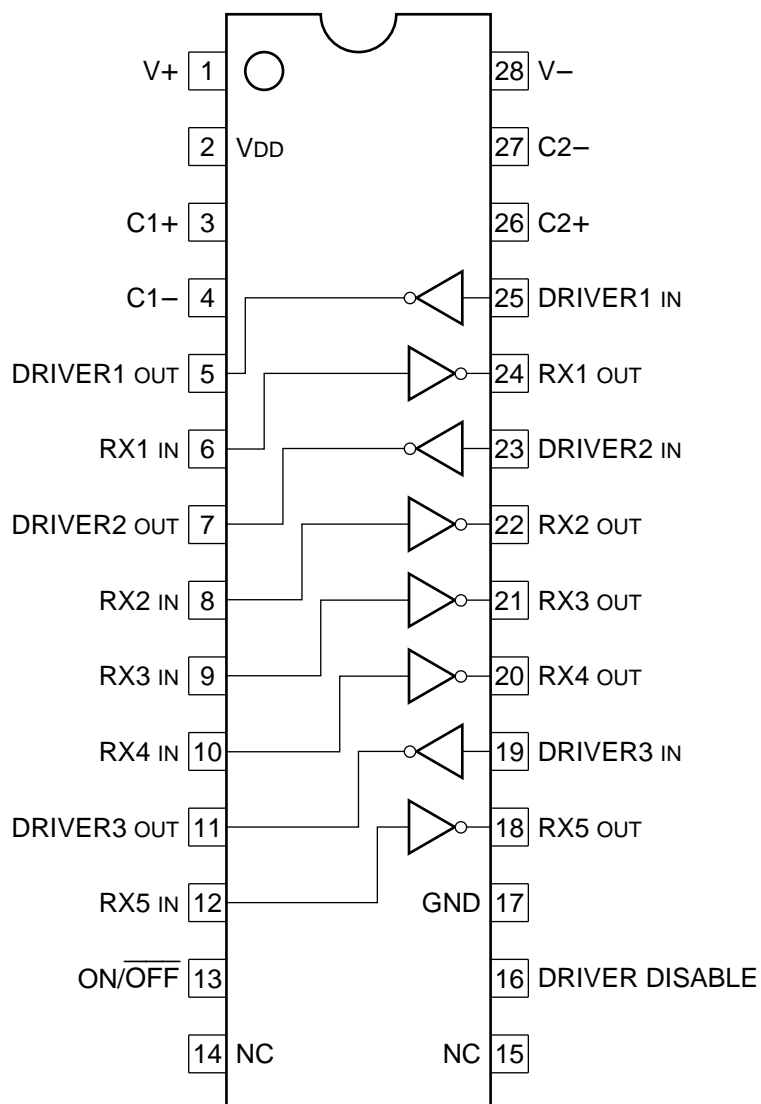


RS232 TRANSCEIVER/RECEIVER

—TOP VIEW—

**INPUT**

DRIVER1 - DRIVER3 : RS-232 DRIVER

RX1 - RX5 : RECEIVER

DRIVER DISABLE : ALTERNATE CONTROL FOR THE CHARGE PUMP
AND RS232 DRIVERS

C1+, C1-, C2+, C2- : EXTERNAL CAPACITORS

OUTPUT

DRIVER1 - DRIVER3 : RS-232 DRIVER

RX1 - RX5 : RECEIVER OUTPUTS WITH TTL/CMOS VOLTAGE LEVELS

V+ : POSITIVE SUPPLY (RS-232 DRIVERS)

V- : NEGATIVE SUPPLY (RS-232 DRIVERS)