#### **General Description**

The MAX1714B evaluation kit (EV kit) demonstrates a standard 4A application circuit. This DC-DC converter steps down high-voltage batteries and/or AC adapters, generating a precision, low-voltage rail for use as chipset, dynamic random-access memory (DRAM), and other low-voltage supplies.

The MAX1714B EV kit provides a 2.5V output voltage from a +4.5V to +24V battery input range. It delivers up to 4A output current with greater than 90% efficiency while operating at a 300kHz switching frequency, and has superior line- and load-transient response.

This EV kit is a fully assembled and tested circuit board. It also allows evaluation of other output voltages in the 1.0V to 5.5V range by changing feedback resistors R1 and R2.

#### Features

- +4.5V to +24V Input Voltage Range
- Preset 2.5V Output Voltage
- ♦ 1.0V to 5.5V Adjustable Output
- ♦ 4A Output Current
- ♦ 94% Efficient (V<sub>OUT</sub> = 2.5V, V<sub>BATT</sub> = 7V, I<sub>LOAD</sub> = 2A)
- ♦ 300kHz Switching Frequency
- ♦ No Current-Sense Resistor
- Power-Good Output
- ♦ 16-Pin QSOP Package
- Low-Profile Components
- Fully Assembled and Tested

## \_\_\_\_

#### **Ordering Information**

PART	TEMP. RANGE	IC PACKAGE
MAX1714BEVKIT	0°C to +70°C	16 QSOP

DESIGNATION	QTY	DESCRIPTION	
C1	1	10µF, 25V ceramic capacitor (1812) Taiyo Yuden TMK432BJ106KM or Tokin C34Y5U1E106Z	
C2	1	330µF, 6.3V low-ESR capacitor Sanyo 6TPB330M or Kemet T510X337M010AS	
C3	1	0.1µF ceramic capacitor (0805)	
C4	1	0.22µF ceramic capacitor (1206)	
C5	1	4.7μF, 10V X5R ceramic cap (1206) Taiyo Yuden LMK316BJ475ML	
C6	1	3.3µF, 10V X5R ceramic cap (1206) Taiyo Yuden LMK316BJ335ML	
C7	1	2200pF ceramic capacitor (0805)	
D1	1	1A Schottky diode Nihon EP10QY03 or EC10QS03, Motorola MBRS130LT3, or International Rectifier 10MQ040N 100mA, 30V Schottky diode Central Semiconductor CMPSH-3	
D2	1		

#### \_Component List

DESIGNATION	QTY	DESCRIPTION
JU1, JU2	2	2-pin headers
L1	1	4.7µH power inductor Sumida CDRH124-4R7MC (shielded), Coiltronics UP2B-4R7 (unshielded), or Coilcraft DO3316P-472 (unshielded)
N1A, N1B	1	Dual N-channel MOSFET Fairchild FDS6982A
R1, R2, R3, R9	0	Not installed
R4	1	100k $\Omega$ ±5% resistor (0805)
R5, R6	2	$1M\Omega \pm 5\%$ resistors (0805)
R7	1	$20\Omega \pm 5\%$ resistor (0805)
R8	1	$200\Omega \pm 5\%$ resistor (0805)
U1	1	MAX1714BEEE (16-pin QSOP)
None	1	Shunt (JU1)
None	1	MAX1714B PC board
None	1	MAX1714 data sheet
None	1	MAX1714B EV kit data sheet

#### 

\_ Maxim Integrated Products 1

For free samples & the latest literature: http://www.maxim-ic.com, or phone 1-800-998-8800. For small orders, phone 1-800-835-8769.

m
V
N
Σ
_
:Si
ates:
uates:
lates:
uates:
aluates:

#### **Component Suppliers**

SUPPLIER	PHONE	FAX
Central Semiconductor	516-435-1110	516-435-1824
Coilcraft	708-639-6400	708-639-1469
Coiltronics	561-241-7876	561-241-9339
Fairchild	408-721-2181	408-721-1635
International Rectifier	310-322-3331	310-322-3332
Motorola	602-303-5454	602-994-6430
Nihon	847-843-7500	847-843-2798
Sanyo	619-661-6835	619-661-1055
Sumida	708-956-0666	708-956-0702
Taiyo Yuden	408-573-4150	408-573-4159
Tokin	408-432-8020	408-434-0375

**Note:** Please indicate that you are using the MAX1714B when contacting these component suppliers.

#### **Recommended Equipment**

- +5V to +24V power supply, battery, or notebook AC adapter
- DC bias power supply, 5V at 100mA
- Dummy load capable of sinking 4A
- Digital multimeter (DMM)
- 100MHz dual-trace oscilloscope

#### Quick Reference

- 1) Ensure that the circuit is connected correctly to the supplies and dummy load prior to applying any power.
- 2) Verify that the shunt is placed across JU1.
- Turn on the battery power before the +5V bias power; otherwise, the output undervoltage lockout (UVLO) timer will time out and the FAULT latch will be set, disabling the regulator until +5V power is cycled or shutdown is toggled.
- Observe the 2.5V output with the DMM and/or oscilloscope. Look at the LX switching node and MOS-FET gate-drive signals while varying the load current.

#### **Detailed Description**

#### **Jumper Settings**

Tables 1–4 show the functions you can achieve with various jumper settings.

#### **Evaluating Other Output Voltages**

The EV kit output is preset to +2.5V. However, the output voltage can also be adjusted between 1.0V and 5.5V by selecting R1 and R2 values. Cut the PC board trace shorting R2; then select feedback resistor R2 in the  $2k\Omega$  to  $20k\Omega$  range. R1 is then given by:

$$R1 = R2 [(V_{OUT} / V_{FB}) - 1]$$

where  $V_{FB} = 1.0V$ .

If a 3.3V output is desired, cut the trace shorting R2, then short JU7.

### Table 1. Jumper JU1 Functions(Shutdown Mode)

SHUNT LOCATION	SHDN PIN	MAX1714B OUTPUT
On	Connected to VCC	MAX1714B enabled
Off	Connected to GND	Shutdown mode, V <sub>OUT</sub> = 0

### Table 2. Jumper JU2 Functions(Low-Noise Mode)

SHUNT LOCATION	SKIP PIN	OPERATIONAL MODE	
On Connected to VCC		Low-noise mode, forced fixed- frequency PWM operation	
Off	Connected to GND	Normal operation, allows auto- matic PWM/PFM switchover for pulse skipping at light load, resulting in highest efficiency.	

### Table 3. Jumper JU3 Functions (Fixed/Adjustable Current-Limit Selection)

SHUNT LOCATION	ILIM PIN	CURRENT-LIMIT THRESHOLD
On	Connected to VCC	100mV (default)
Off	Connected to REF through voltage-divider R3/R9. Refer to the <i>Current-Limit Circuit</i> section in the MAX1714 data sheet for information on selecting R3/R9.	Adjustable from 50mV to 200mV



#### Table 4. Jumper JU4/JU5/JU6 Functions (Switching-Frequency Selection)

JUMPER	SHUNT LOCATION	TON PIN	FREQUENCY (kHz)	
JU4, JU5, JU6	Off	Floating	300	
JU4	On	Connected to VCC	200	
JU5, JU6	Off		200	
JU5	On	<ul> <li>Connected to REF</li> </ul>	450	
JU4, JU6	Off		450	
JU6	On	Connected to GND	600	
JU4, JU5	Off		000	

**IMPORTANT:** Don't change the operating frequency without first recalculating component values because the frequency has a significant effect on the preferred inductor value, peak current-limit level, MOSFET heating, PFM/PWM switchover point, output noise, efficiency, and other critical parameters.

#### Table 5. Troubleshooting Guide

SYMPTOM	POSSIBLE PROBLEM	SOLUTION	
Circuit won't start when power is applied.	Power-supply sequencing: +5V bias supply was applied first	Cycle SHDN by removing and reinstalling JU1.	
	Output overvoltage due to shorted high-side MOSFET	Replace the MOSFET.	
	Output overvoltage due to load recovery overshoot	Reduce the inductor value, raise the switching frequency, or add more output capacitance.	
Circuit won't start when SHDN and +5V bias supply are cycled.	Overload condition	Remove the excessive load or raise the ILIM threshold by changing R3/R9.	
	Broken connection, bad MOSFET, or other catastrophic problem	Troubleshoot the power stage. Are the DH and DL gate- drive signals present? Is the 2V VREF present?	
On-time pulses are erratic or have unexpected changes in period.	VBATT power source has poor impedance characteristic	Add a bulk electrolytic bypass capacitor across the bench- top power supply, or substitute a real battery.	
Load-transient V <sub>OUT</sub> waveform shows excess ringing. <b>OR</b> LX switching waveform exhibits double-pulsing (pulses separat- ed only by a 400ns min off-time).	Instability due to low-ESR ceramic or polymer capacitors placed across fast feedback path (FB-GND)	Add parasitic PC board trace resistance between the LX-FB connection and the ceramic capacitor. <b>OR</b> Substitute a different capacitor type (OS-CONs, tantalums, or aluminum electrolytics work well).	

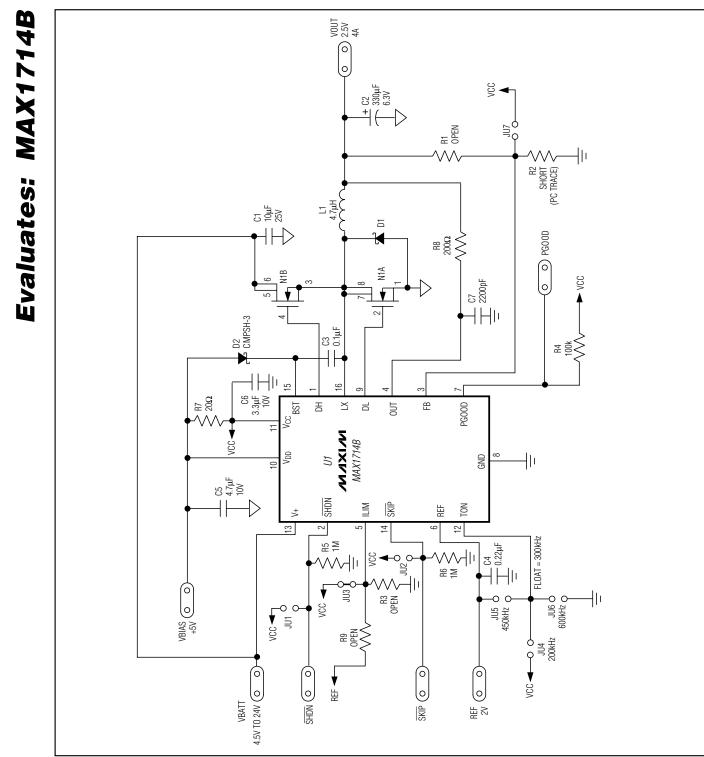


Figure 1. MAX1714B EV Kit Schematic

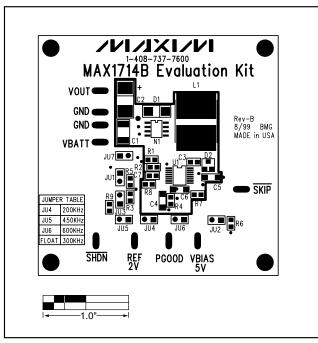


Figure 2. MAX1714B EV Kit Component Placement Guide— Component Side

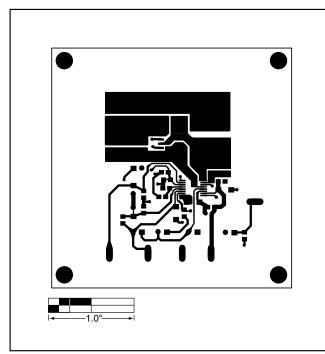


Figure 3. MAX1714B EV Kit PC Board Layout—Component Side

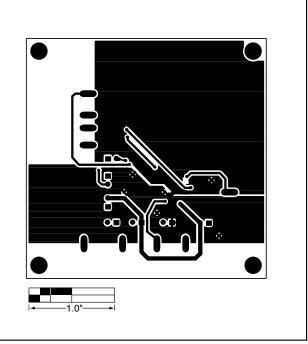


Figure 4. MAX1714B EV Kit PC Board Layout—Solder Side

NOTES

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Printed USA

\_\_\_\_\_Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600

© 1999 Maxim Integrated Products

6

**MAXIM** is a registered trademark of Maxim Integrated Products.