

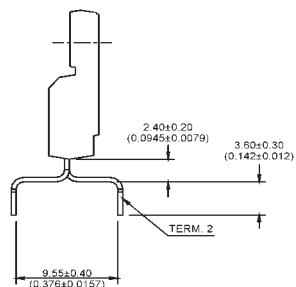
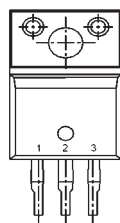




# TO-220 FullPak Leadform Options

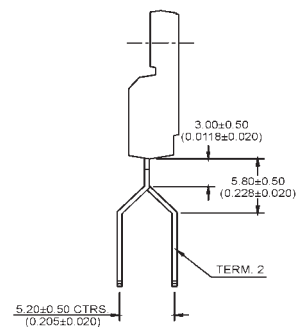



**Option - 101**





**Option - 102**

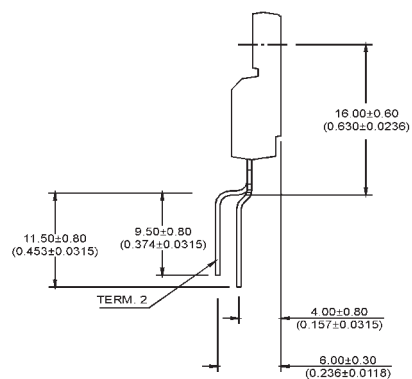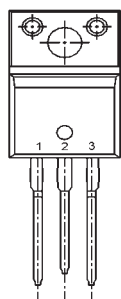



**Option - 103**

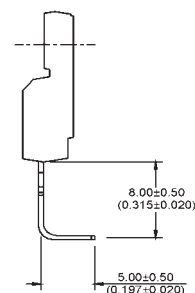

**Option - 104**

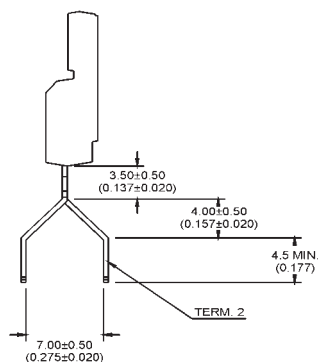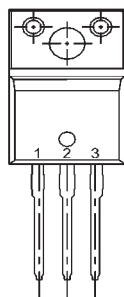

**Option - 105**

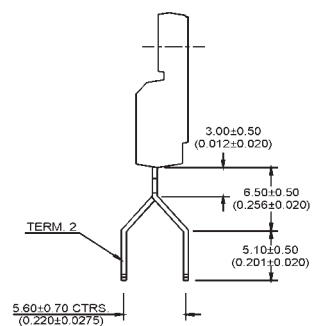


**Option - 106**

Lead Assignments


- 1 - Gate
- 2 - Drain
- 3 - Source

All dimensions in millimetres (inches)


## TO-220 FullPak Leadform Options cont'd

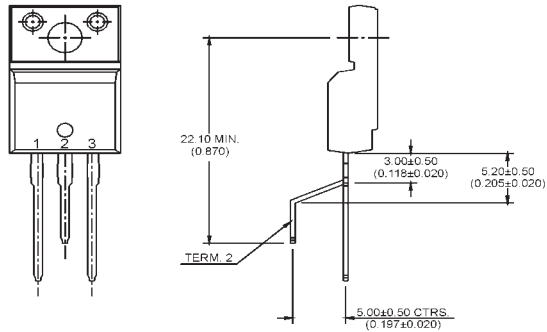


**Option - 107**

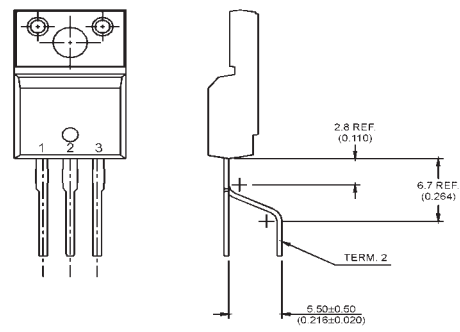


**Option - 108**

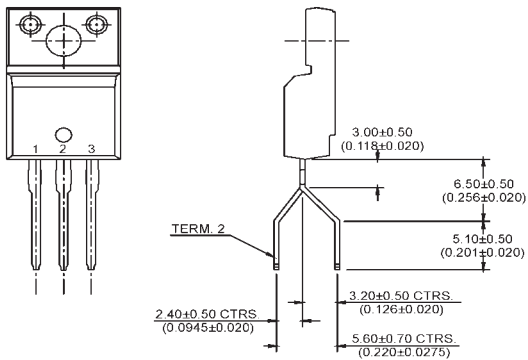


**Option - 109**

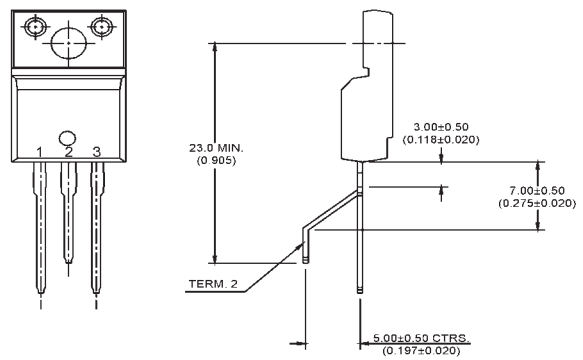

**Option - 110**

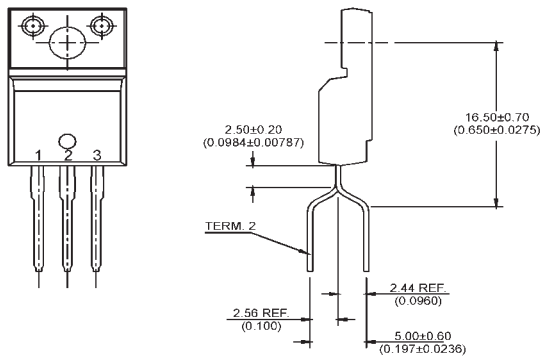

**Option - 111**

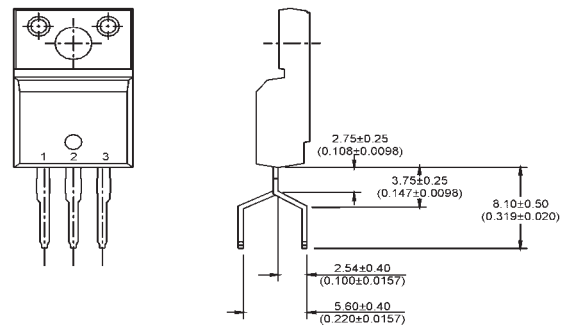

**Option - 112**

Lead Assignments

- 1 - Gate
- 2 - Drain
- 3 - Source

All dimensions in millimetres (inches)