
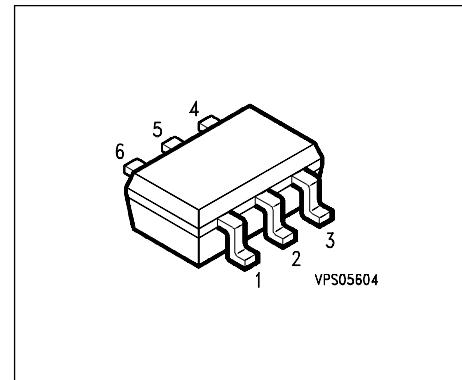


**NPN Silicon RF Transistor**

- For low-noise, high-gain broadband amplifier at collector currents from 0.5 to 12 mA
- $f_T = 8$  GHz  
 $F = 1.4$  dB at 900 MHz
- Two (galvanic) internal isolated Transistors in one package

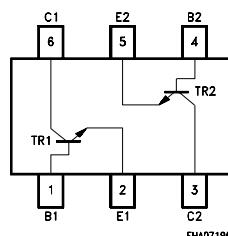

**ESD:** Electrostatic discharge sensitive device, observe handling precaution!

Type	Marking	Ordering Code	Pin Configuration		Package
BFS 481	RFs	Q62702-F1572	1/4 = B	2/5 = E	3/6 = C

data below is of a single transistor

**Maximum Ratings**

Parameter	Symbol	Values	Unit
Collector-emitter voltage	$V_{CEO}$	12	V
Collector-emitter voltage	$V_{CES}$	20	
Collector-base voltage	$V_{CBO}$	20	
Emitter-base voltage	$V_{EBO}$	2	
Collector current	$I_C$	20	mA
Base current	$I_B$	2	
Total power dissipation	$P_{tot}$		mW
$T_S \leq 83^\circ\text{C}$		175	
Junction temperature	$T_j$	150	°C
Ambient temperature	$T_A$	- 65 ... + 150	
Storage temperature	$T_{stg}$	- 65 ... + 150	

**Thermal Resistance**

Junction - soldering point <sup>1)</sup>	$R_{thJS}$	$\leq 380$	K/W
--	------------	------------	-----

1)  $T_S$  is measured on the collector lead at the soldering point to the pcb.

**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
<b>DC Characteristics</b>					
Collector-emitter breakdown voltage $I_C = 1 \text{ mA}, I_B = 0$	$V_{(\text{BR})\text{CEO}}$	12	-	-	V
Collector-emitter cutoff current $V_{\text{CE}} = 20 \text{ V}, V_{\text{BE}} = 0$	$I_{\text{CES}}$	-	-	100	$\mu\text{A}$
Collector-base cutoff current $V_{\text{CB}} = 10 \text{ V}, I_E = 0$	$I_{\text{CBO}}$	-	-	100	nA
Emitter-base cutoff current $V_{\text{EB}} = 1 \text{ V}, I_C = 0$	$I_{\text{EBO}}$	-	-	1	$\mu\text{A}$
DC current gain $I_C = 5 \text{ mA}, V_{\text{CE}} = 8 \text{ V}$	$h_{\text{FE}}$	50	100	200	-

**Electrical Characteristics** at  $T_A = 25^\circ\text{C}$ , unless otherwise specified.


<b>Parameter</b>	<b>Symbol</b>	<b>Values</b>			<b>Unit</b>
		min.	typ.	max.	
<b>AC Characteristics</b>					
Transition frequency $I_C = 10 \text{ mA}, V_{CE} = 8 \text{ V}, f = 500 \text{ MHz}$	$f_T$	6	8	-	GHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{cb}$	-	0.24	0.4	pF
Collector-emitter capacitance $V_{CE} = 10 \text{ V}, f = 1 \text{ MHz}$	$C_{ce}$	-	0.11	-	
Emitter-base capacitance $V_{EB} = 0.5 \text{ V}, f = 1 \text{ MHz}$	$C_{eb}$	-	0.35	-	
Noise figure $I_C = 2 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_{Sopt}$ $f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$F$	-	1.45	-	dB
-		-	1.8	-	
Power gain 1) $I_C = 5 \text{ mA}, V_{CE} = 8 \text{ V}, f = 900 \text{ MHz}$ $Z_S = Z_{Sopt}, Z_L = Z_{Lopt}$	$G_{ms}$	-	19	-	
Power gain 2) $I_C = 5 \text{ mA}, V_{CE} = 8 \text{ V}, f = 1.8 \text{ GHz}$ $Z_S = Z_{Sopt}, Z_L = Z_{Lopt}$	$G_{ma}$	-	14.5	-	
Transducer gain $I_C = 5 \text{ mA}, V_{CE} = 8 \text{ V}, Z_S = Z_L = 50 \Omega$ $f = 900 \text{ MHz}$ $f = 1.8 \text{ GHz}$	$ S_{21e} ^2$	-	15.5	-	
-		-	10.5	-	

$$1) G_{ms} = |S_{21}/S_{12}|$$


$$2) G_{ma} = |S_{21}/S_{12}| (k - (k^2 - 1)^{1/2})$$

**Total power dissipation**  $P_{\text{tot}} = f(T_A^*, T_S)$


\* Package mounted on epoxy

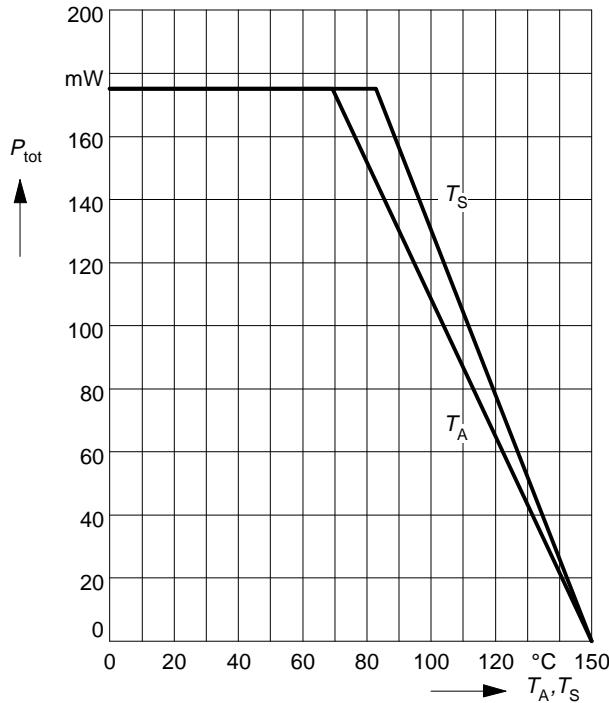


**Permissible Pulse Load**  $R_{\text{thJS}} = f(t_p)$

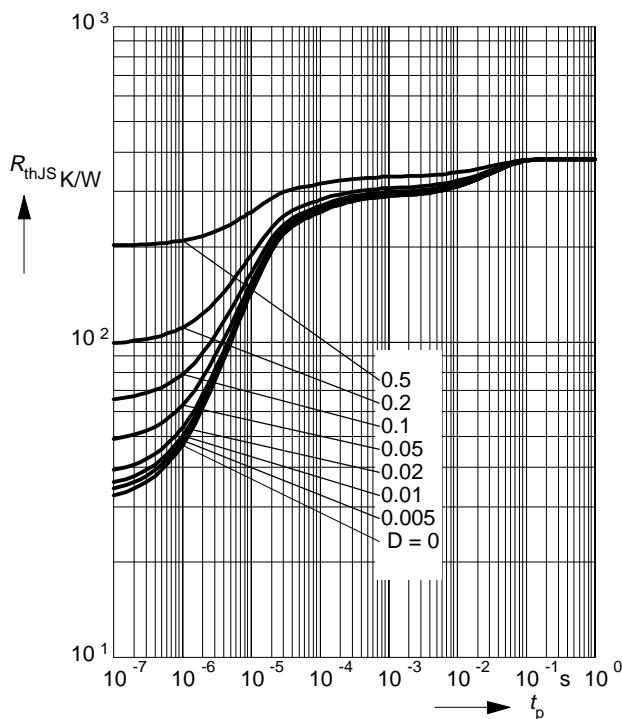

**Permissible Pulse Load**  $P_{\text{totmax}}/P_{\text{totDC}} = f(t_p)$

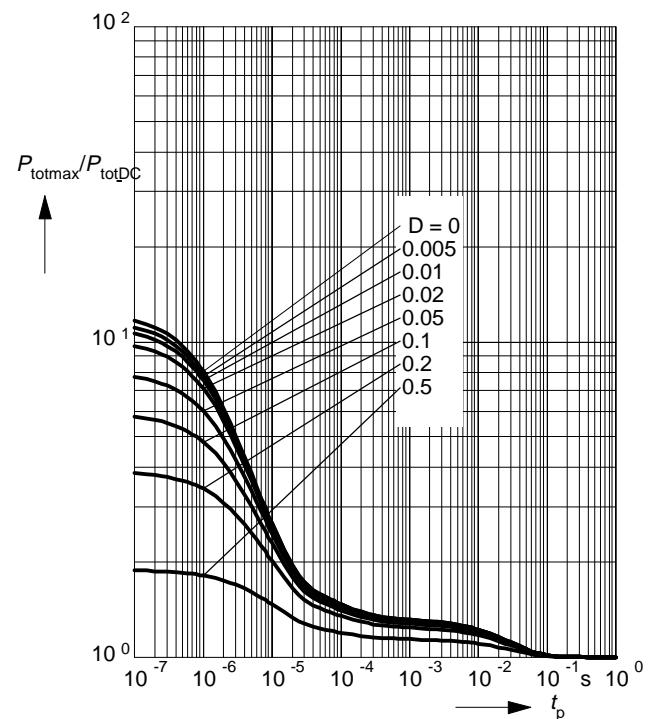


**Collector-base capacitance**  $C_{cb} = f(V_{CB})$   
 $V_{BE} = v_{be} = 0$ ,  $f = 1\text{MHz}$

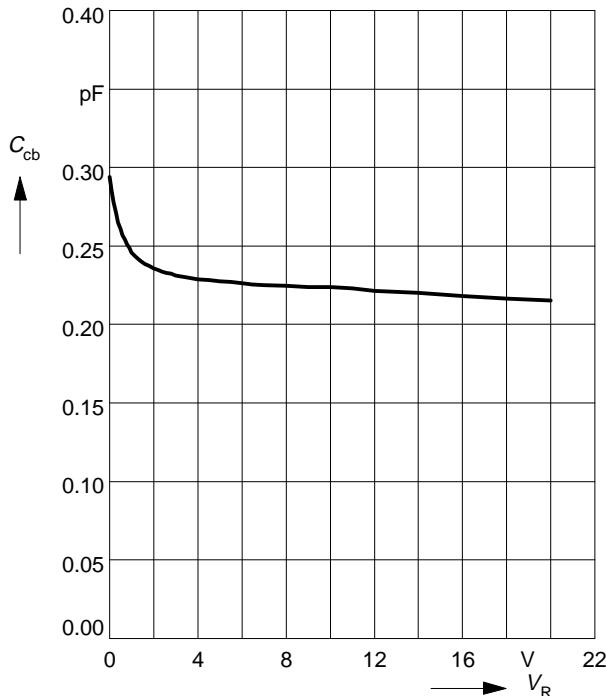

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$


$f = 0.9\text{GHz}$

$V_{CE}$  = Parameter

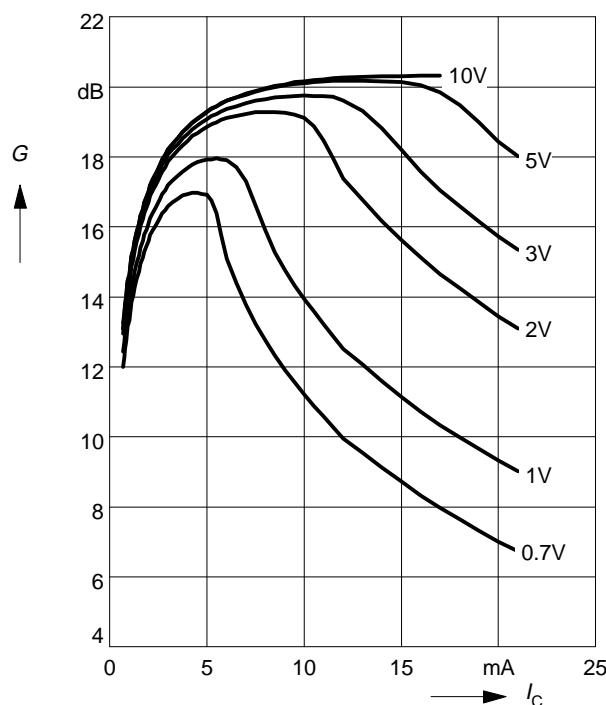

**Transition frequency**  $f_T = f(I_C)$


$V_{CE}$  = Parameter

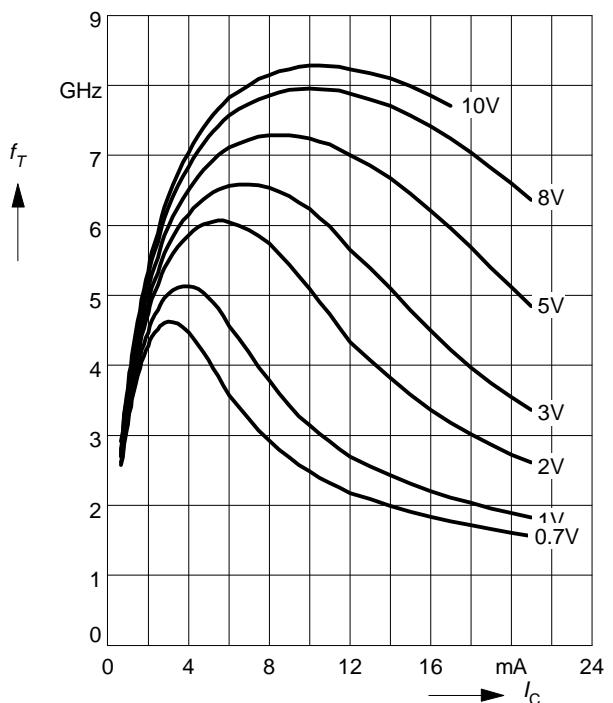

**Power Gain**  $G_{ma}, G_{ms} = f(I_C)$

$f = 1.8\text{GHz}$


$V_{CE}$  = Parameter

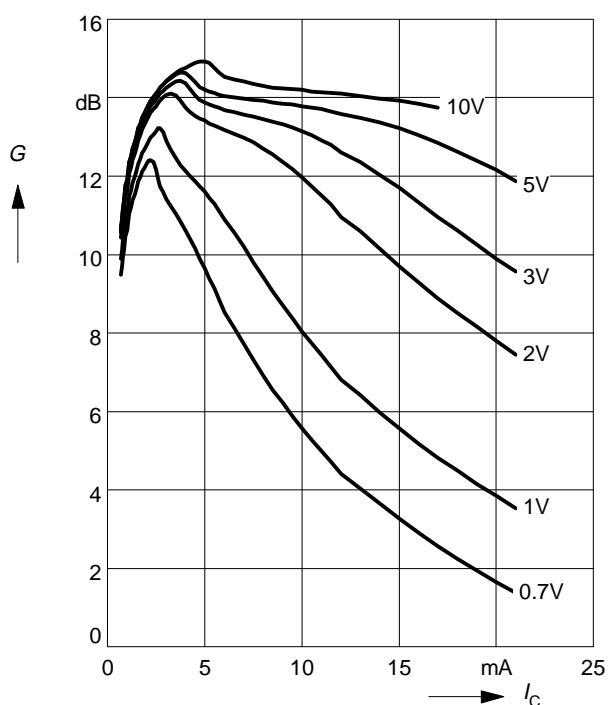

**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(V_{CE})$ : \_\_\_\_\_


$|S_{21}|^2 = f(V_{CE})$ : -----

$f$  = Parameter

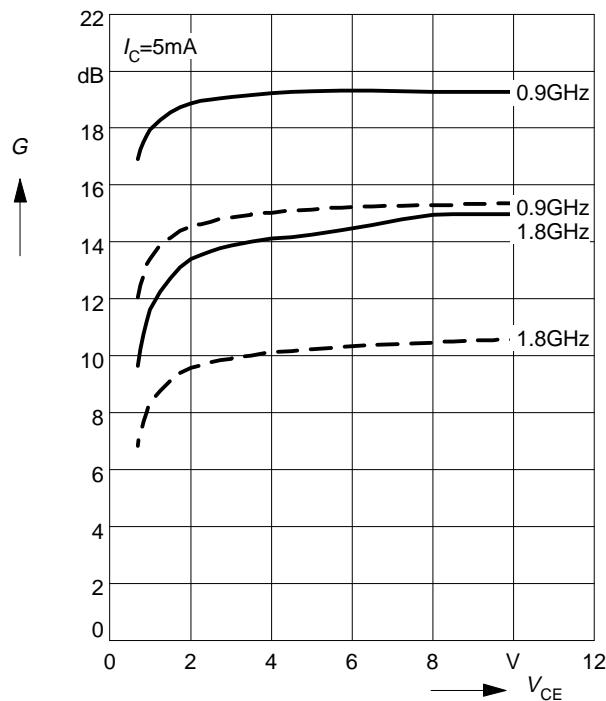

**Power Gain**  $G_{ma}$ ,  $G_{ms} = f(f)$


$V_{CE}$  = Parameter

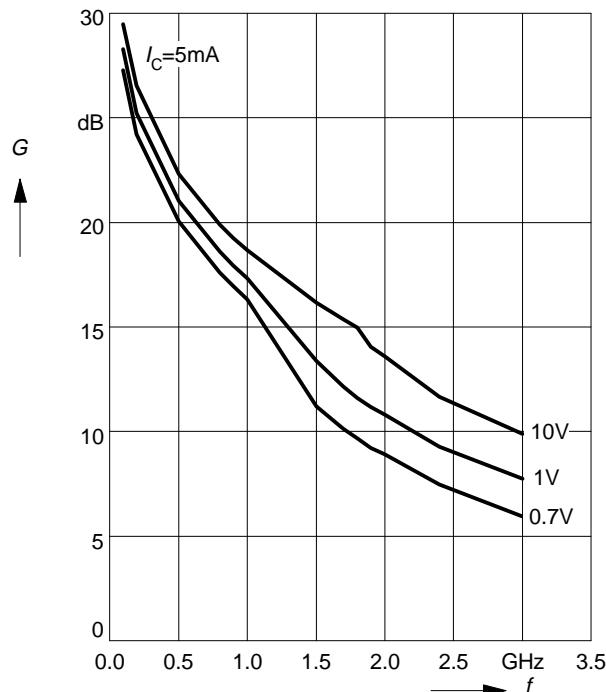

**Intermodulation Intercept Point**  $IP_3 = f(I_C)$

(3rd order, Output,  $Z_S = Z_L = 50\Omega$ )

$V_{CE}$  = Parameter,  $f = 900\text{MHz}$

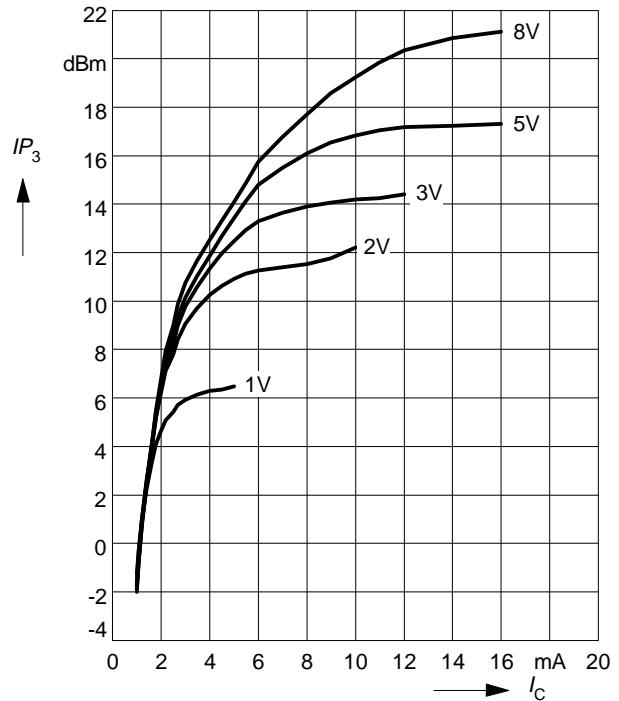

**Power Gain**  $|S_{21}|^2 = f(f)$

$V_{CE}$  = Parameter

