

April 1995

6A, 100V - 200V Ultrafast Diodes
Features

- Ultrafast with Soft Recovery <30ns
- Operating Temperature +175°C
- Reverse Voltage Up To 200V
- Avalanche Energy Rated
- Planar Construction

Applications

- Switching Power Supplies
- Power Switching Circuits
- General Purpose

Description

RURD610, RURD615, RURD620, RURD610S, RURD615S and RURD620S (TA49037) are ultrafast diodes with soft recovery characteristics ($t_{RR} < 30\text{ns}$). They have low forward voltage drop and are ion-implanted epitaxial planar construction.

These devices are intended for use as freewheeling/clamping diodes and rectifiers in a variety of switching power supplies and other power switching applications. Their low stored charge and ultrafast soft recovery minimize ringing and electrical noise in many power switching circuits reducing power loss in the switching transistors.


PACKAGING AVAILABILITY

PART NUMBER	PACKAGE	BRAND
RURD610	TO-251	RUR610
RURD615	TO-251	RUR615
RURD620	TO-251	RUR620
RURD610S	TO-252	RUR610
RURD615S	TO-252	RUR615
RURD620S	TO-252	RUR620


NOTE: When ordering, use the entire part number. Add the suffix 9A to obtain the TO-252 variant in the tape and reel, i.e., RURD610S9A.

Packaging

JEDEC STYLE TO-251

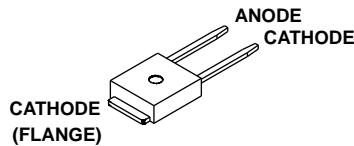

JEDEC STYLE TO-252


Symbol

Absolute Maximum Ratings $T_C = +25^\circ\text{C}$, Unless Otherwise Specified

	RURD610 RURD610S	RURD615 RURD615S	RURD620 RURD620S	UNITS
Peak Repetitive Reverse Voltage.....	V_{RRM}	100	150	V
Working Peak Reverse Voltage	V_{RWM}	100	150	V
DC Blocking Voltage.....	V_R	100	150	V
Average Rectified Forward Current	$I_{F(AV)}$	6	6	A
($T_C = +160^\circ\text{C}$)				
Repetitive Peak Surge Current.....	I_{FSM}	12	12	A
(Square Wave, 20kHz)				
Nonrepetitive Peak Surge Current	I_{FSM}	60	60	A
(Halfwave, 1 Phase, 60Hz)				
Maximum Power Dissipation	P_D	45	45	W
Avalanche Energy ($L = 40\text{mH}$)	E_{AVL}	10	10	mJ
Operating and Storage Temperature	T_{STG}, T_J	-65 to +175	-65 to +175	°C

Specifications RURD610, RURD615, RURD620, RURD610S, RURD615S, RURD620S

Electrical Specifications $T_C = +25^\circ\text{C}$, Unless Otherwise Specified

SYMBOL	TEST CONDITION	LIMITS									UNITS	
		RURD610 RURD610S			RURD615 RURD615S			RURD620 RURD620S				
		MIN	Typ	MAX	MIN	Typ	MAX	MIN	Typ	MAX		
V_F	$I_F = 6\text{A}, T_C = +25^\circ\text{C}$	-	-	1.0	-	-	1.0	-	-	1.0	V	
	$I_F = 6\text{A}, T_C = +150^\circ\text{C}$	-	-	0.83	-	-	0.83	-	-	0.83	V	
I_R	$V_R = 100\text{V}, T_C = +25^\circ\text{C}$	-	-	100	-	-	-	-	-	-	μA	
	$V_R = 150\text{V}, T_C = +25^\circ\text{C}$	-	-	-	-	-	100	-	-	-	μA	
	$V_R = 200\text{V}, T_C = +25^\circ\text{C}$	-	-	-	-	-	-	-	-	100	μA	
I_R	$V_R = 100\text{V}, T_C = +150^\circ\text{C}$	-	-	500	-	-	-	-	-	-	μA	
	$V_R = 150\text{V}, T_C = +150^\circ\text{C}$	-	-	-	-	-	500	-	-	-	μA	
	$V_R = 200\text{V}, T_C = +150^\circ\text{C}$	-	-	-	-	-	-	-	-	500	μA	
t_{RR}	$I_F = 1\text{A}, dI_F/dt = 100\text{A}/\mu\text{s}$	-	-	30	-	-	30	-	-	30	ns	
	$I_F = 6\text{A}, dI_F/dt = 100\text{A}/\mu\text{s}$	-	-	35	-	-	35	-	-	35	ns	
t_A	$I_F = 6\text{A}, dI_F/dt = 100\text{A}/\mu\text{s}$	-	16	-	-	16	-	-	16	-	ns	
t_B	$I_F = 6\text{A}, dI_F/dt = 100\text{A}/\mu\text{s}$	-	7	-	-	7	-	-	7	-	ns	
Q_{RR}	$I_F = 6\text{A}, dI_F/dt = 100\text{A}/\mu\text{s}$	-	15	-	-	15	-	-	15	-	nC	
C_J	$V_R = 10\text{V}, I_F = 0\text{A}$	-	30	-	-	30	-	-	30	-	pF	
$R_{\theta JC}$		-	-	3.5	-	-	3.5	-	-	3.5	$^\circ\text{C}/\text{W}$	

DEFINITIONS

V_F = Instantaneous forward voltage ($pw = 300\mu\text{s}$, $D = 2\%$).

I_R = Instantaneous reverse current.

t_{RR} = Reverse recovery time (See Figure 2), summation of $t_A + t_B$.

t_A = Time to reach peak reverse current (See Figure 2).

t_B = Time from peak I_{RM} to projected zero crossing of I_{RM} based on a straight line from peak I_{RM} through 25% of I_{RM} (See Figure 2).

$R_{\theta JC}$ = Thermal resistance junction to case.

E_{AVL} = Controlled avalanche energy (See Figures 9 and 10).

pw = pulse width.

D = duty cycle.

V_1 AMPLITUDE CONTROLS I_F
 V_2 AMPLITUDE CONTROLS dI_F/dt

L_1 = SELF INDUCTANCE OF
 $R_4 + L_{LOOP}$

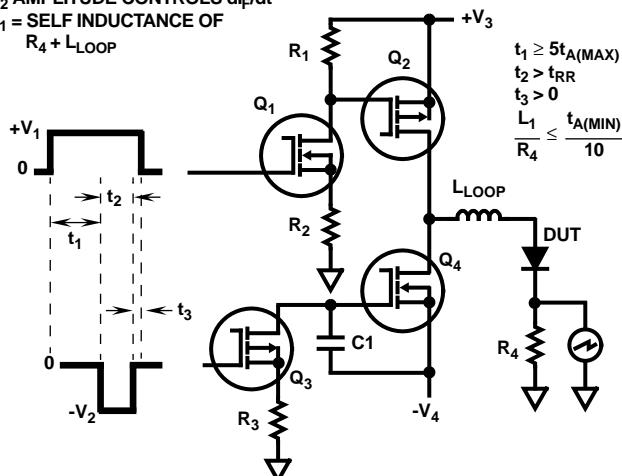


FIGURE 1. t_{RR} TEST CIRCUIT

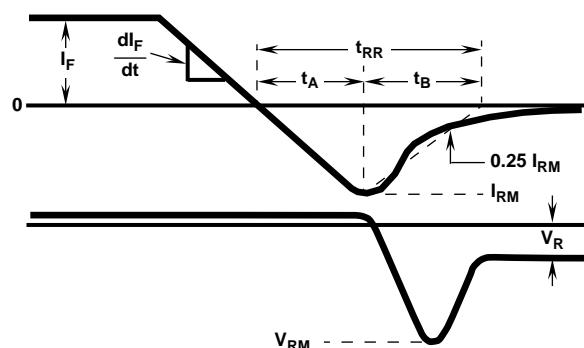


FIGURE 2. t_{RR} WAVEFORMS AND DEFINITIONS

Typical Performance Curves

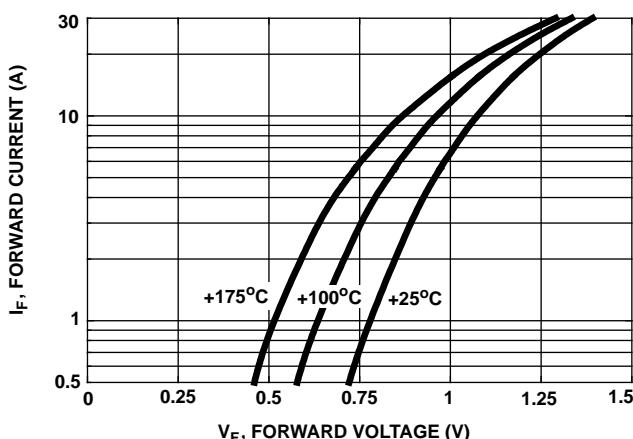


FIGURE 3. TYPICAL FORWARD CURRENT vs FORWARD VOLTAGE DROP

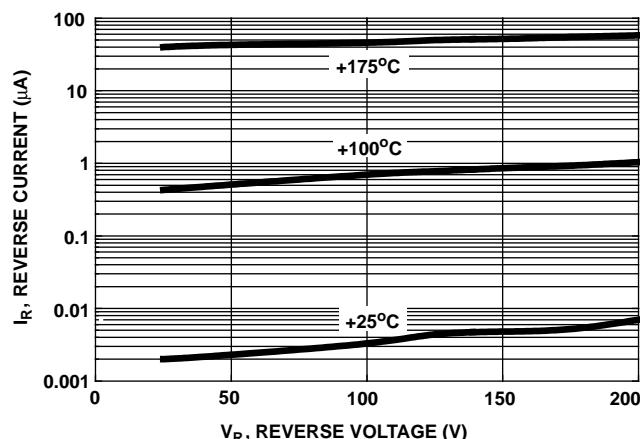


FIGURE 4. TYPICAL REVERSE CURRENT vs REVERSE VOLTAGE

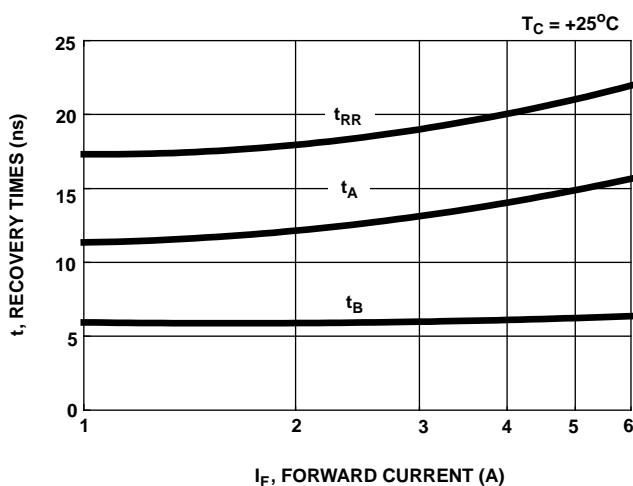


FIGURE 5. TYPICAL t_{RR}, t_A AND t_B CURVES vs FORWARD CURRENT

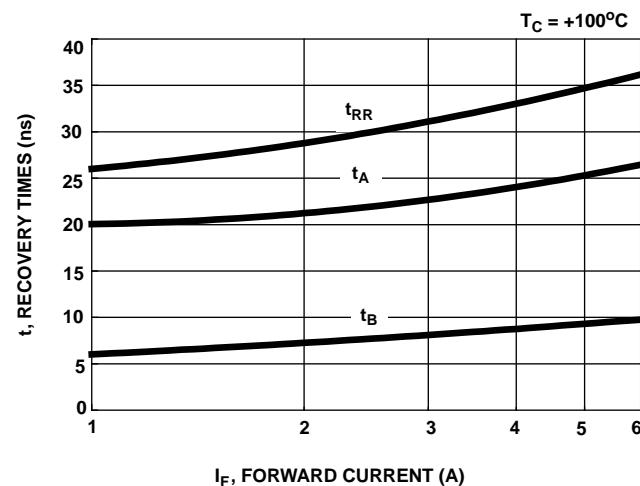


FIGURE 6. TYPICAL t_{RR}, t_A AND t_B CURVES vs FORWARD CURRENT

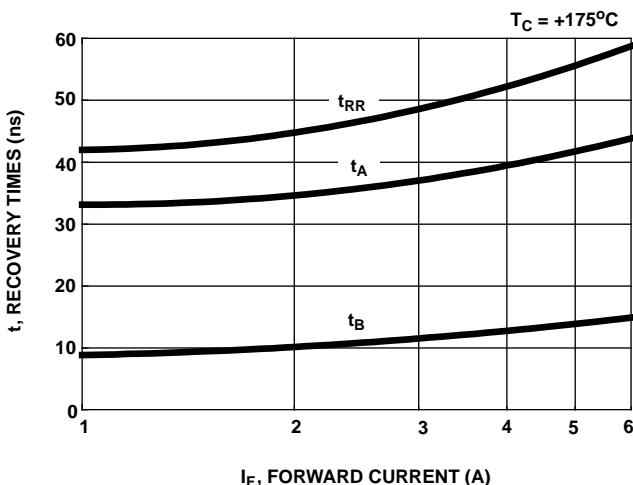


FIGURE 7. TYPICAL t_{RR}, t_A AND t_B CURVES vs FORWARD CURRENT

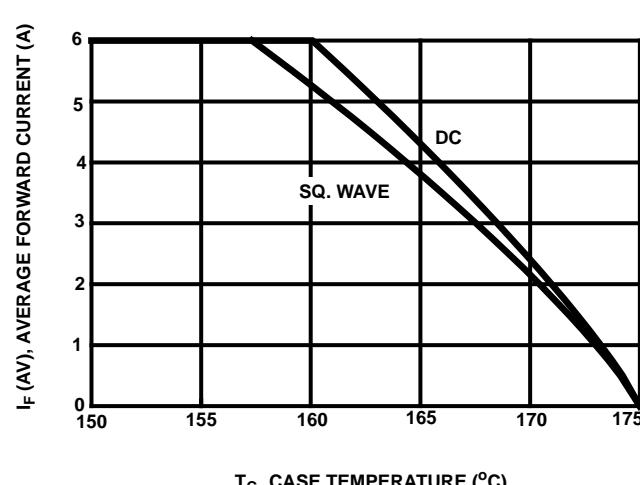


FIGURE 8. CURRENT DERATING CURVE FOR ALL TYPES

RURD610, RURD615, RURD620, RURD610S, RURD615S, RURD620S

$I_{MAX} = 1A$

$L = 40mH$

$R < 0.1\Omega$

$$E_{AVL} = \frac{1}{2} L^2 [V_{AVL}/(V_{AVL} - V_{DD})]$$

Q_1 AND Q_2 ARE 1000V MOSFETs

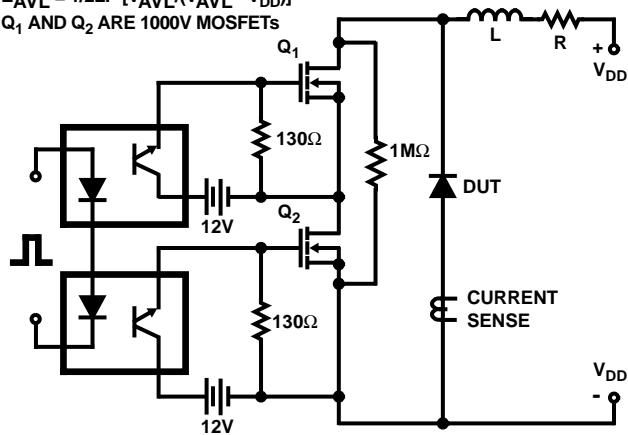


FIGURE 9. AVALANCHE ENERGY TEST CIRCUIT

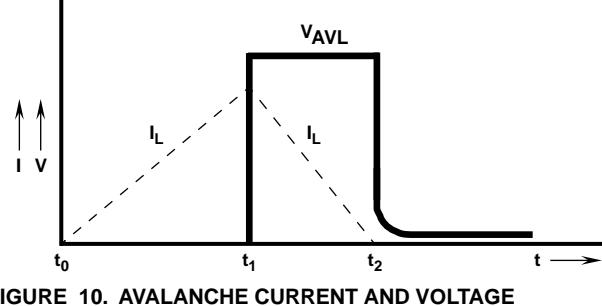


FIGURE 10. AVALANCHE CURRENT AND VOLTAGE WAVEFORMS