




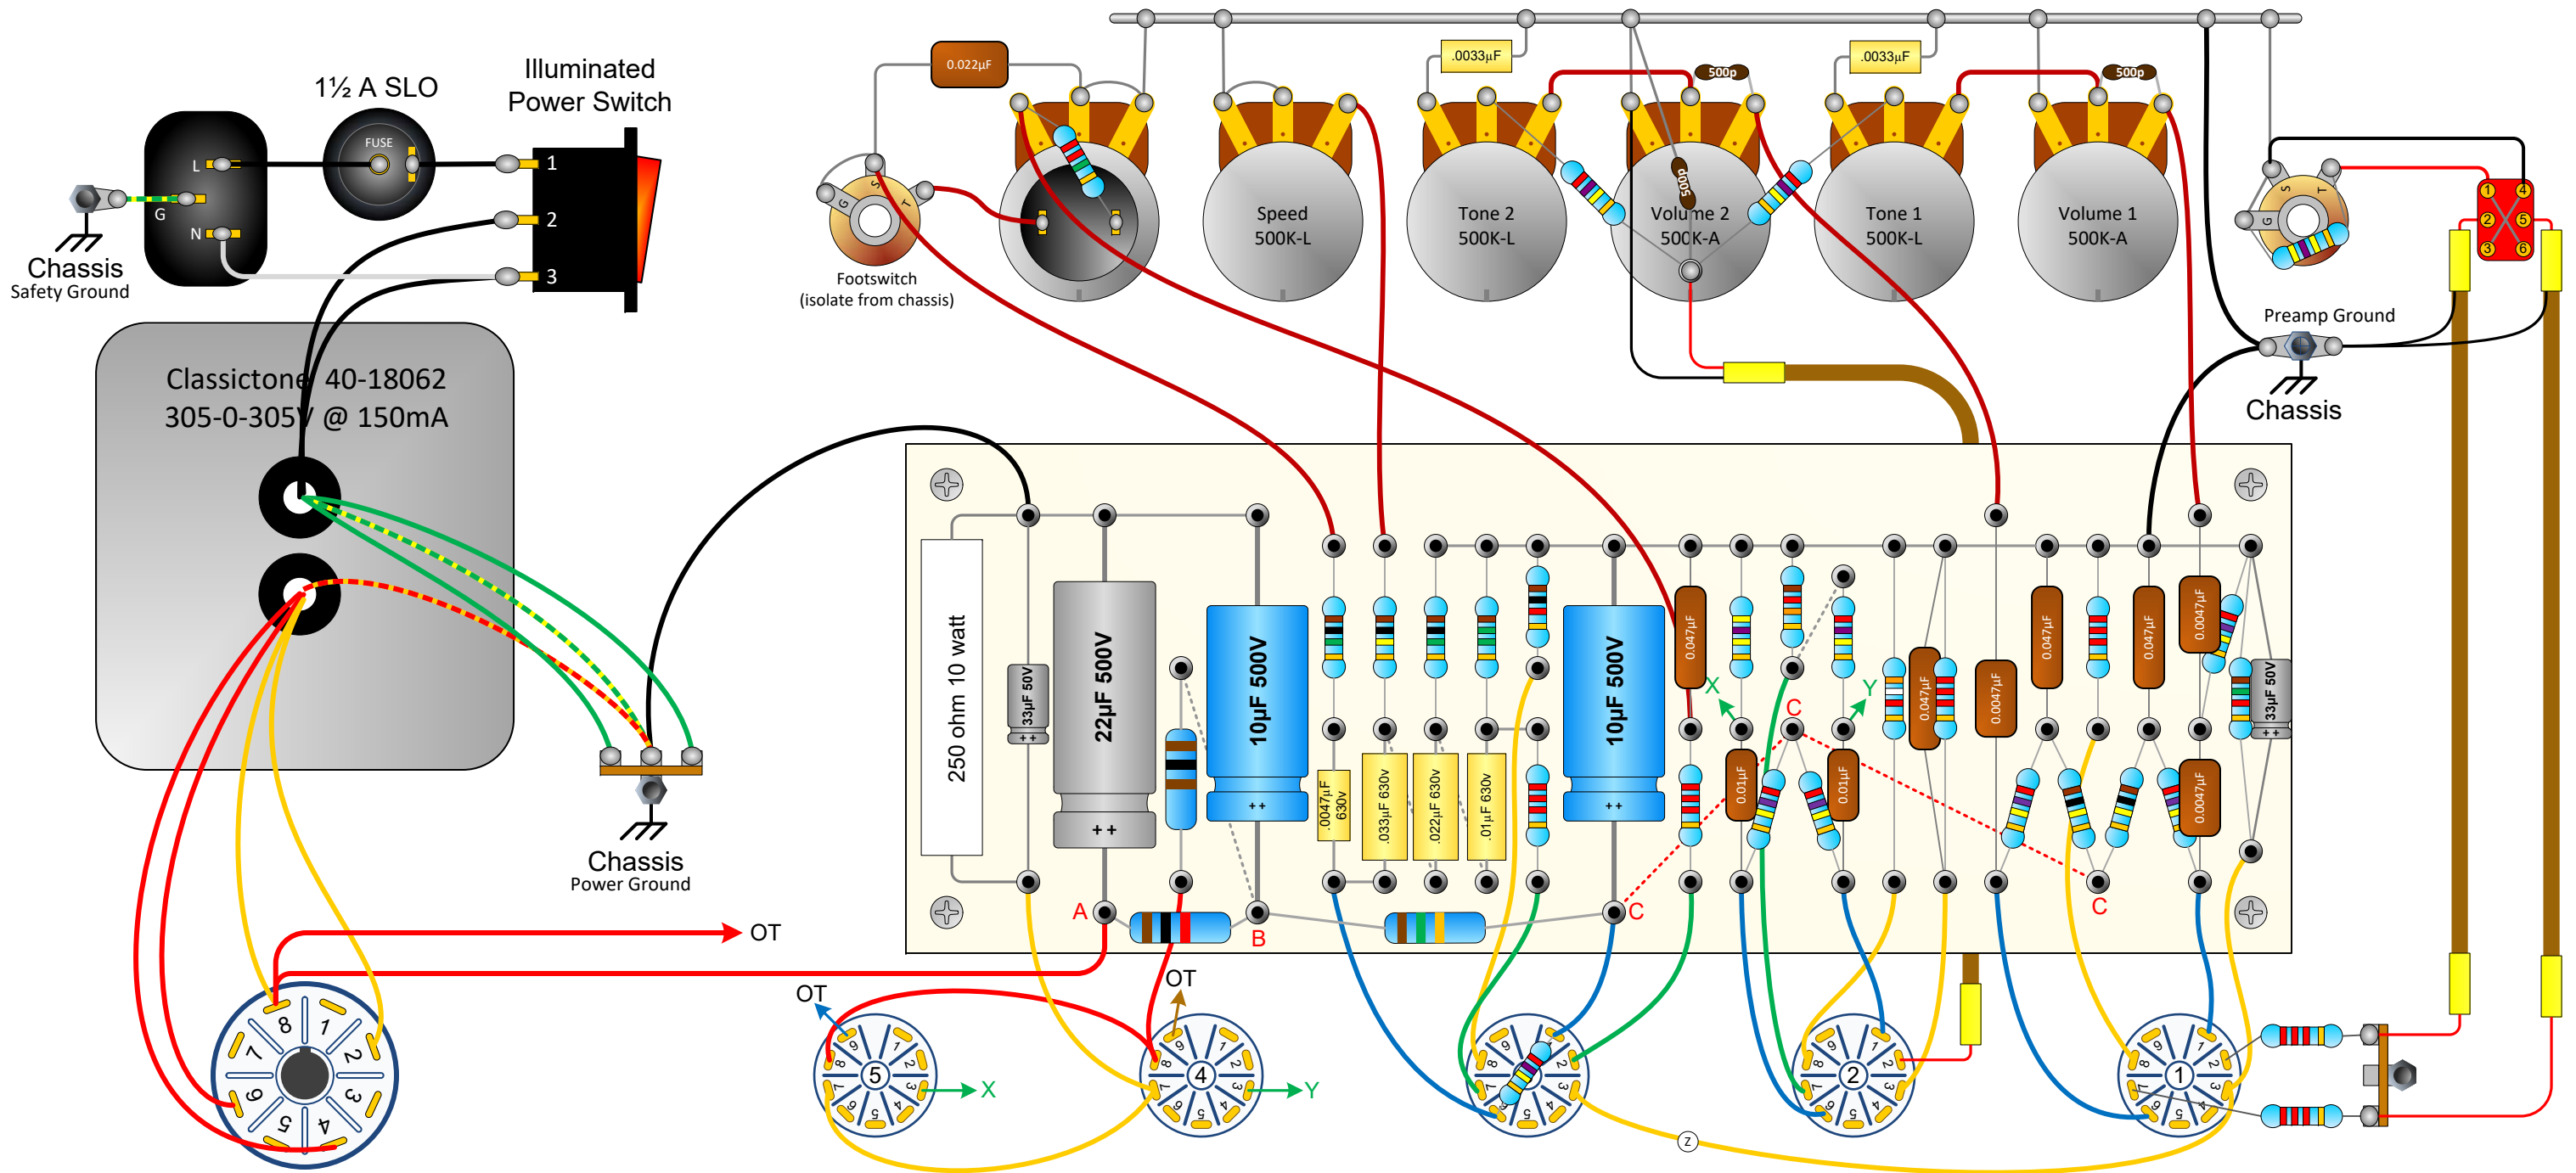

Latest revision date 08/25/2017
Check for latest revision at <http://sluckeyamps.com/supro/supro.pdf>

Check for latest revision at <http://sluckeyamps.com/supro/supro.pdf>




DRILL GUIDE

INSTRUCTIONS FOR PRINTING DRILL GUIDE


-  Turret --- drill size is 3/32"
-  Standoff – drill size to fit
-  Hole for wire pass thru – drill size to fit
-  Dashed lines are underboard jumpers

NOTE... This drawing contains layers. Turn off any layers that you don't want to print.

Board size is 3 1/8" X 8 1/2". Print this drill guide **FULL SIZE** on letter sized paper. Measure the board length of the printout to verify it is 8 1/2". Attach to blank board using double sided carpet tape. Use a center punch to put a mark at the cross hairs of each turret, standoff, and hole. Use a 3/32" drill bit to drill all holes. Then enlarge holes as needed for screws and wire pass thru.

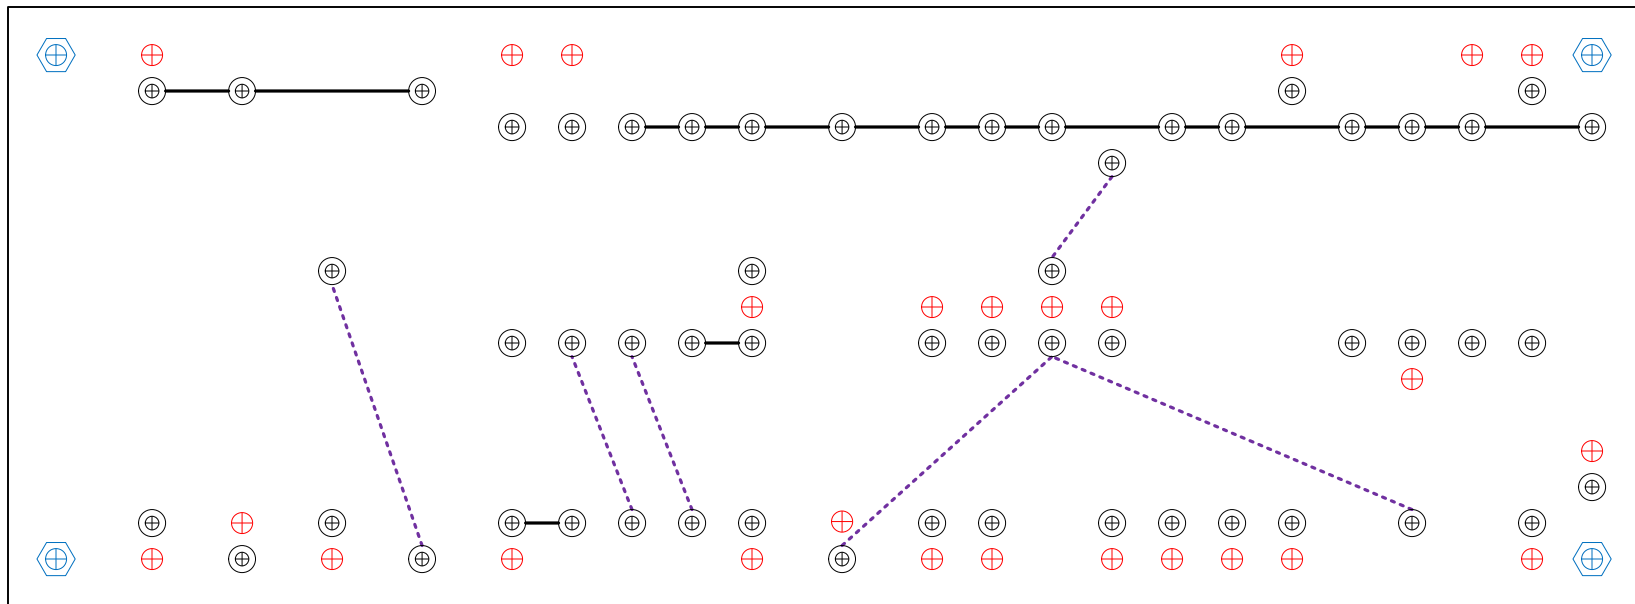

POWER



SUPRO
Dual Tone

Model S-6424

FOOTSWITCH



INTENSITY
Pull ON



SPEED



TONE



VOLUME



CHANNEL 2

TONE



VOLUME



CHANNEL 1

INPUT



CHANNEL SELECT



BOTH

INSTRUMENT

MV Mod... I don't have this mod in my amp and really don't think it's necessary.
But I know someone will ask, so this is how I would do it.

