



SERVICE MANUAL

HF AUTOMATIC ANTENNA TUNER

AT-130
AT-130E
AT-140

INTRODUCTION

This service manual describes the latest service information for the **AT-130/AT-130E/AT-140** HF AUTOMATIC ANTENNA TUNER at the time of publication.

MODEL	SYMBOL	VERSION
AT-130	USA	U.S.A.
	USA-1	U.S.A.-1
	USA-2	U.S.A.-2
AT-130E	EUR	Europe
	EUR-1	Europe-1
AT-140	USA-3	U.S.A.-3

To upgrade quality, any electrical or mechanical parts and internal circuits are subject to change without notice or obligation.

DANGER

NEVER connect the antenna tuner to an AC outlet or to a DC power supply that uses more than 16 V. This will ruin the antenna tuner.

DO NOT expose the antenna tuner to rain, snow or any liquids.

DO NOT reverse the polarities of the power supply when connecting the antenna tuner.



ORDERING PARTS

Be sure to include the following four points when ordering replacement parts:

1. 10-digit order numbers
2. Component part number and name
3. Equipment model name and unit name
4. Quantity required

<SAMPLE ORDER>

1140003000 IC μPD78212CW AT-130 TUNER UNIT 5 pieces
8810000660 Screw PH M4x12 SUS AT-130 Top case 10 pieces
Addresses are provided on the inside back cover for your convenience.

REPAIR NOTES

1. Make sure a problem is internal before disassembling the antenna tuner.
2. **DO NOT** open the antenna tuner until the antenna tuner is disconnected from its power source.
3. **DO NOT** force any of the variable components. Turn them slowly and smoothly.
4. **DO NOT** short any circuits or electronic parts. An insulated tuning tool **MUST** be used for all adjustments.
5. **DO NOT** keep power ON for a long time when the antenna tuner is defective.
6. **READ** the instructions of test equipment thoroughly before connecting equipment to the antenna tuner.

TABLE OF CONTENTS

SECTION 1 SPECIFICATIONS

SECTION 2 INSIDE VIEW

SECTION 3 CIRCUIT DESCRIPTION

SECTION 4 ADJUSTMENT PROCEDURES

SECTION 5 PARTS LIST

SECTION 6 MECHANICAL PARTS

SECTION 7 SEMI-CONDUCTOR INFORMATION

SECTION 8 BOARD LAYOUTS

8 - 1	TUNER UNIT	8 - 1
8 - 2	MANUAL UNIT (AT-130E ONLY)	8 - 2

SECTION 9 BLOCK DIAGRAM

SECTION 10 VOLTAGE DIAGRAM

SECTION 1 SPECIFICATIONS

■ GENERAL

- Number of memory channels : 45
- Frequency range : 1.6 MHz to 30 MHz with a 7 m (23 ft) or longer antenna element
- Maximum input power : 150 W PEP
100 W continuous
- Input impedance : 50 Ω
- Minimum operating input power : 5 to 15 W
- Automatic tuning time :
(General) Approx. 2 to 3 sec. (max. 15 sec.)
(Returning to a memorized frequency) Approx. 1 sec.
- Tuning accuracy (VSWR) : Less than 2.0 : 1
(after tuning; except for multiples of 1/2 λ)
- Antenna required : Marconi-type with suitable RF ground
(More than 7 m (23 ft) is suggested)
- Power supply required : DC 13.6 V ± 15 % (supplied from HF transceiver)
- Current drain : Less than 2 A
- Usable temperature range : -30°C to +60°C; -22°F to +140°F
- Dimensions (projections not included) : 230(W) × 80(H) × 340(D) mm
93/32(W) × 33/32(H) × 1313/32(D) in
- Case construction : Weatherproof
- Weight :
(AT-130/AT-140) Approx. 2.5 kg; 5 lb 8 oz
(AT-130E) Approx. 2.7 kg; 6 lb
- Control cable : OPC-420 (For [IC-77/78])
OPC-566 (For [IC-M700PRO], [IC-M710/RT])
OPC-1147 (For [IC-M802])
OPC-1186 (For [IC-F7000])

All stated specifications are subject to change without notice or obligation.

SECTION 2 INSIDE VIEW

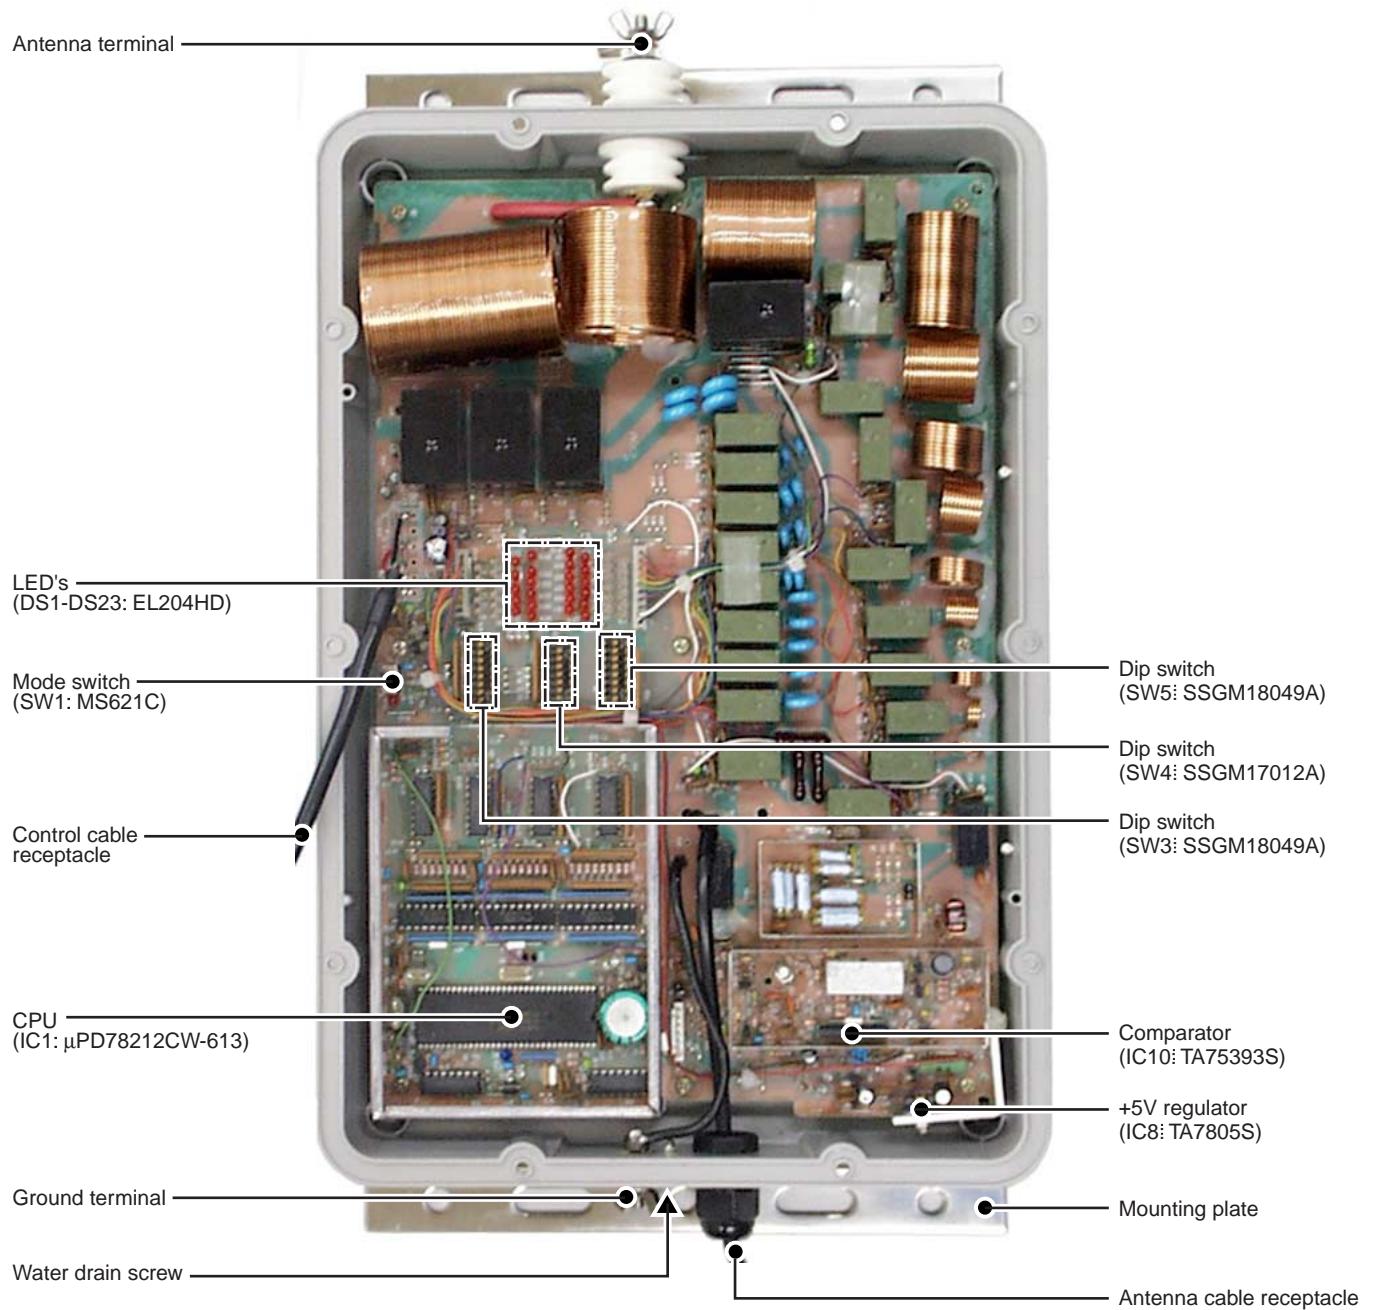


Photo: AT-140

SECTION 3 CIRCUIT DESCRIPTION


3-1 GENERAL

An 8-bit microprocessor controls the AT-130/AT-130E/AT-140. The tuner matches the antenna system to the transceiver by using four kinds of detector circuits. These circuits are:

- (1) FORWARD POWER DETECTOR
- (2) SWR DETECTOR
- (3) PHASE DETECTOR
- (4) IMPEDANCE DETECTOR

Detailed descriptions of each circuit as follows.

• GENERAL

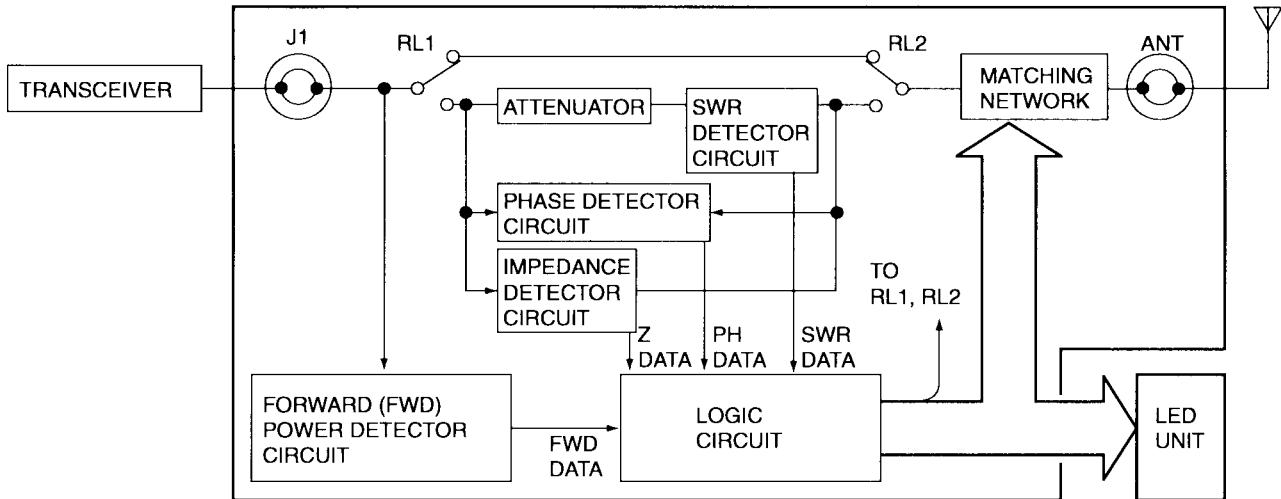


3-2 FORWARD (FWD) POWER DETECTOR CIRCUIT

This circuit ensures the input power from the transceiver is low enough to be handled by the attenuator within the tuner.

In the TUNER UNIT, L1 and D1 detects the RF input current. C2 and C3 divide the detected voltage and feed it to IC10a.

• FORWARD POWER DETECTOR CIRCUIT

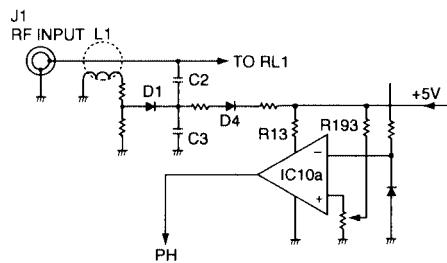


3-3 SWR DETECTOR CIRCUIT

The reflected power from the antenna system provides a detection voltage.

The voltage doubler, consisting of D13 and D14, rectifies this voltage and passes through the voltage divider formed by R36 and R37.

These SWR data from voltage divider feed into IC1, The CPU. The CPU controls the setting of the coils and capacitors in the matching network.

• SWR DETECTOR CIRCUIT

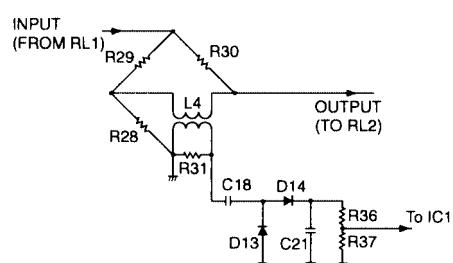


3-4 PHASE DETECTOR CIRCUIT

This circuit consists of L2, L3 and IC9. The phase detector's purpose is to detect reactance components and provide a pure resistance.

The output of IC9 is a reference voltage of approximately 4 V when the load of L3 is a pure resistance with no reactance. An inductive load produces an output voltage from IC9 which is lower than the reference voltage, whereas, a capacitive load produces an output voltage higher than the reference voltage. IC10a amplifies the output voltage and passes it to comparator IC10a.

• PHASE DETECTOR CIRCUIT

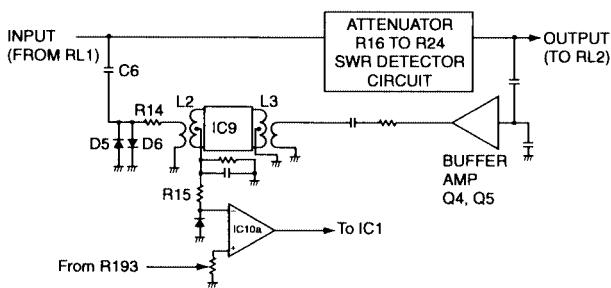


3-5 IMPEDANCE DETECTOR CIRCUIT

The tuner uses an attenuator to reduce the transmit power to a very low level. The low power minimizes the risk of interference to other stations while matching an antenna to the transmitter.

The VSWR at the input terminal is usually close to 1:1 even with a large change of impedance at the attenuator output due to the 16 dB of isolation between the input and the matching network.

The circuit uses the constant voltage at D7 and D8 on The TUNER unit as a reference. If the impedance of the attenuator output is higher than 50 Ω, the detected voltage by D11 and D12 is HIGH. If the impedance is lower than 50 Ω, the voltage is LOW. Both the reference and detected voltages feed to comparator IC10b.

• IMPEDANCE DETECTOR CIRCUIT

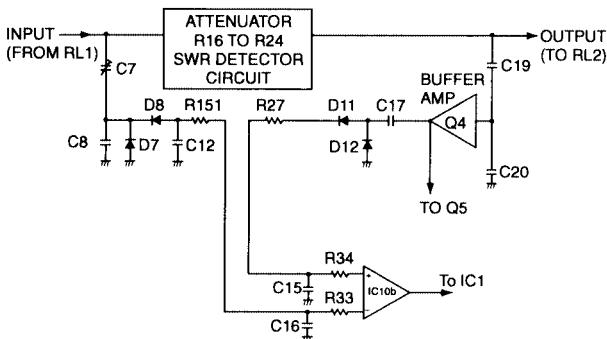

3-6 LOGIC CIRCUIT

IC1, The CPU, controls the antenna matching network. The CPU receives +5V through IC8 when DC power is applied to the tuner. This voltage initializes the CPU. The stored program in the Read Only Memory (ROM) IC12 sets each relay to the initial condition.


The tuning program begins only if the START line is at LOW level. RL1 and RL2 activate when RF power at the input antenna connector from the transceiver is present at an appropriate level (See Section 6-2).

The data from the previously described detectors (input RF power, reflected RF power, phase difference, impedance difference) feed into the CPU. The coil data then passes to IC4, the capacitor data to IC3 and the control data to IC2 according to the tuning program.

3-8 ANTENNA CURRENT DETECTOR CIRCUIT (MANUAL UNIT — Europe version only)

On the MANUAL UNIT, L319 detects the antenna current. D305 rectifies the detected voltage and feed it to J301 through low-pass filter comprising R305, C305 and C306.

• ANTENNA CURRENT DETECTOR CIRCUIT

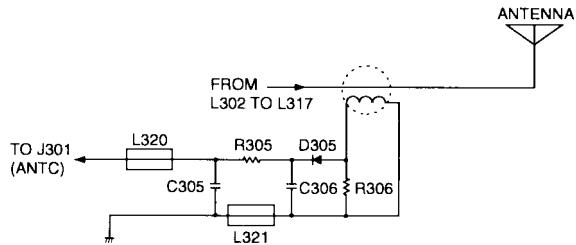



SECTION 4 ADJUSTMENT PROCEDURES

4-1 PREPARATION

■ REQUIRED TEST EQUIPMENT

EQUIPMENT	GRADE AND RANGE
DC power supply	Output voltage : Depended on connecting transceiver (Ex; 13.8 V DC) Current capacity : Depended on connecting transceiver (Ex; 30 A or more)
Oscilloscope	Frequency range : DC–20 MHz Measuring range : 0.01–10 V
Transceiver	: Icom transceiver


• CONNECTION

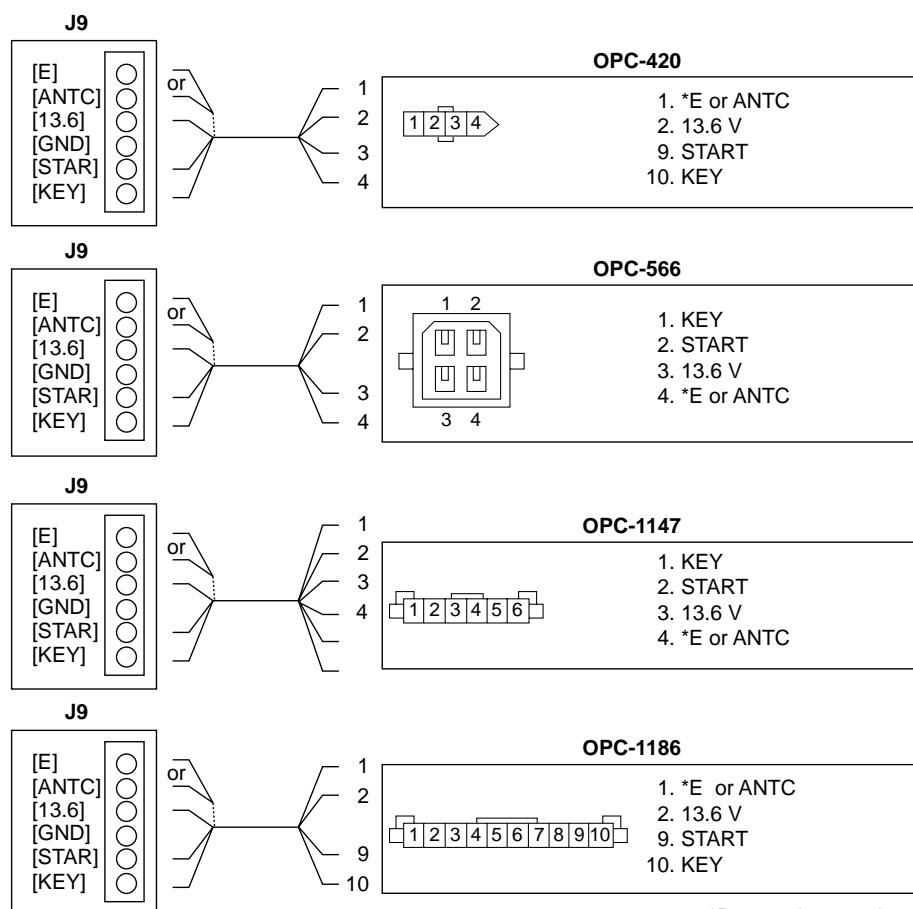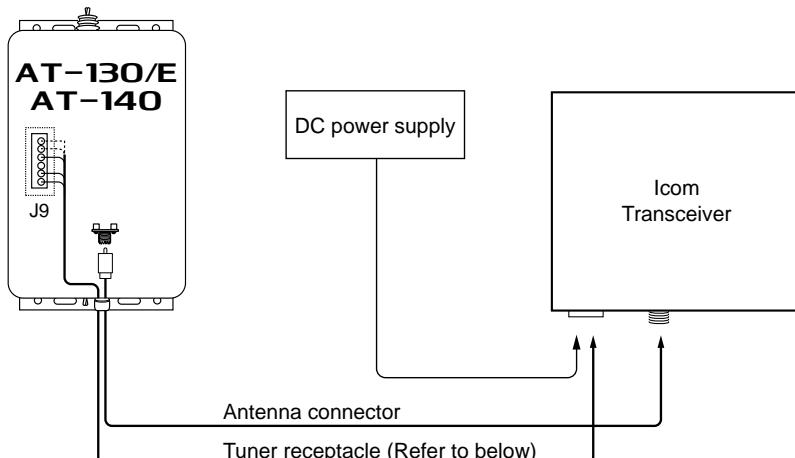

4-2 ANTENNA TUNER ADJUSTMENTS

ADJUSTMENT		ADJUSTMENT CONDITION	MEASUREMENT		VALUE	ADJUSTMENT POINT	
			UNIT	LOCATION		UNIT	ADJUST
PHASE DETECTOR CIRCUIT	1	<ul style="list-style-type: none"> • S1 : PRESET • S4-7 : OFF • Short pins of J13. • Disconnect P6 from J6. • Ground J15 with a jumper wire. • TRANSCEIVER <ul style="list-style-type: none"> Display freq. : 1.6 MHz Output power : 10 W (carrier only) Transmitting 	TUNER	Connect an oscilloscope to the check point pin 2 of J8.	5 V (Tune R194 just before droped.)	TUNER	R56
							C7
							Verify
IMPEDANCE DETECTOR CIRCUIT	2	• Same as above		Connect an oscilloscope to check point pin 3 of J8.	5 V (Tune C7 just before droped.)		
FORWARD DETECTOR CIRCUIT	3	• Same as above		Connect an oscilloscope to check point pin 1 of J8.	1.4 – 2.4 V		Verify
SWR DETECTOR CIRCUIT	4	• Same as above		Connect an oscilloscope to check point pin 4 of J8.	0 – 0.1 V		Verify

NOTE: • After adjustment, remove the jumper wires from J15 and ground.
 • After adjustment, Disconnect pins of J13.
 • After adjustment, reconnect P6 to J6 and set S1 to [NORMAL] position.

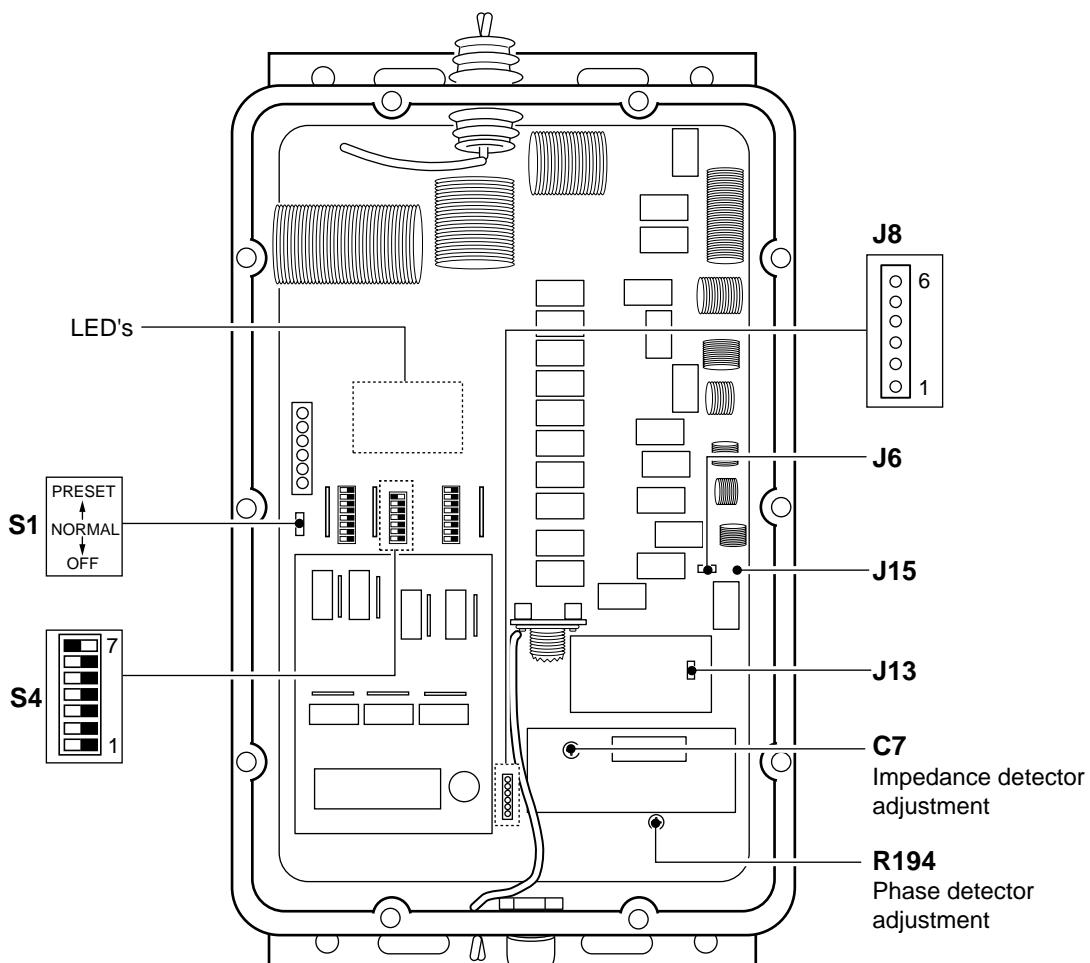

SECTION 5 PARTS LIST

[TUNER UNIT]

REF NO.	ORDER NO.		DESCRIPTION	M.
IC1	1140003000	IC	μPD78212CW-613	T
IC2	1130006930	IC	TC74HC574AP	T
IC3	1130006930	IC	TC74HC574AP	T
IC4	1130006930	IC	TC74HC574AP	T
IC5	1130005200	IC	TC74HC393AP	T
IC6	1130000050	IC	TC4013BP	T
IC7	1110005750	IC	S-80841CLY-B	T
IC8	1110002020	IC	TA7805S	T
IC10	1110000060	IC	TA75393S	T
IC11	1160000100	IC	μPA2004C	T
IC12	1160000100	IC	μPA2004C	T
IC13	1160000100	IC	μPA2004C	T
IC14	1160000100	IC	μPA2004C	T
Q1	1560000110	FET	2SK241-GR	T
Q2	1530000150	TRANSISTOR	2SC2668-O	T
Q3	1590000350	TRANSISTOR	RN1204	T
Q4	1530000110	TRANSISTOR	2SC2458-GR	T
Q5	1530000110	TRANSISTOR	2SC2458-GR	T
Q7	151000080	TRANSISTOR	2SA1048-GR	T
Q8	1530000110	TRANSISTOR	2SC2458-GR	T
Q9	1590000350	TRANSISTOR	RN1204	T
Q10	1530000110	TRANSISTOR	2SC2458-GR	T
Q11	1530000110	TRANSISTOR	2SC2458-GR	T
D1	1710000021	DIODE	1N60 <AMI>	T
D2	1710000580	DIODE	1SS265	T
D3	1710000580	DIODE	1SS265	T
D4	1710000160	DIODE	1SS133	T
D5	171000021	DIODE	1N60 <AMI>	T
D6	171000021	DIODE	1N60 <AMI>	T
D7	171000021	DIODE	1N60 <AMI>	T
D8	171000021	DIODE	1N60 <AMI>	T
D9	1710000160	DIODE	1SS133	T
D10	1710000160	DIODE	1SS133	T
D11	171000021	DIODE	1N60 <AMI>	T
D12	171000021	DIODE	1N60 <AMI>	T
D13	171000021	DIODE	1N60 <AMI>	T
D14	171000021	DIODE	1N60 <AMI>	T
D15	1710000160	DIODE	1SS133	T
D16	171000060	DIODE	1SS55-T4	T
D17	171000060	DIODE	1SS55-T4	T
D18	1710000350	DIODE	1N4002	T
D19	1710000350	DIODE	1N4002	T
D20	1710000350	DIODE	1N4002	T
D21	1710000160	DIODE	1SS133	T
D22	1710000160	DIODE	1SS133	T
D24	171000040	DIODE	1S953	T
D25	1730000170	ZENER	RD8.2E B1	T
D26	171000040	DIODE	1S953	T
D29	1710000160	DIODE	1SS133	T
D30	1710000160	DIODE	1SS133	T
D31	1710000160	DIODE	1SS133	T
D32	1710000160	DIODE	1SS133	T
D33	1710000160	DIODE	1SS133	T
D34	1710000160	DIODE	1SS133	T
D35	1710000160	DIODE	1SS133	T
D36	1710000160	DIODE	1SS133	T
D37	1710000160	DIODE	1SS133	T
D38	1710000160	DIODE	1SS133	T
D39	1710000160	DIODE	1SS133	T
D40	1710000160	DIODE	1SS133	T
D41	1710000160	DIODE	1SS133	T
D42	1710000160	DIODE	1SS133	T
D43	1710000160	DIODE	1SS133	T
D44	1710000160	DIODE	1SS133	T
D45	1710000160	DIODE	1SS133	T
D46	1710000160	DIODE	1SS133	T
D47	1710000160	DIODE	1SS133	T
D48	1710000160	DIODE	1SS133	T
D49	1710000160	DIODE	1SS133	T
D50	1710000160	DIODE	1SS133	T
D51	1710000160	DIODE	1SS133	T
D52	171000060	DIODE	1SS55-T4	T
D53	171000060	DIODE	1SS55-T4	T
D54	171000060	DIODE	1SS55-T4	T
D55	171000060	DIODE	1SS55-T4	T
D56	171000060	DIODE	1SS55-T4	T

M.=Mounted side (T: Mounted on the Top side, B: Mounted on the Bottom side)

[TUNER UNIT]

REF NO.	ORDER NO.		DESCRIPTION	M.
D57	1710000060	DIODE	1SS55-T4	T
D58	1710000060	DIODE	1SS55-T4	T
D59	1710000060	DIODE	1SS55-T4	T
D60	1710000060	DIODE	1SS55-T4	T
D61	1710000060	DIODE	1SS55-T4	T
D62	1710000060	DIODE	1SS55-T4	T
D63	1710000060	DIODE	1SS55-T4	T
D64	1710000060	DIODE	1SS55-T4	T
D65	1710000060	DIODE	1SS55-T4	T
D66	1710000060	DIODE	1SS55-T4	T
D67	1710000060	DIODE	1SS55-T4	T
D68	1710000060	DIODE	1SS55-T4	T
D69	1710000060	DIODE	1SS55-T4	T
D70	1710000060	DIODE	1SS55-T4	T
D71	1710000060	DIODE	1SS55-T4	T
D72	1710000060	DIODE	1SS55-T4	T
D73	1710000060	DIODE	1SS55-T4	T
D74	1710000060	DIODE	1SS55-T4	T
D75	1710000060	DIODE	1SS55-T4	T
D76	1710000060	DIODE	1SS55-T4	T
D77	1790001780	DIODE	MA700	T
D78	1710000160	DIODE	1SS133	T
D79	1710000160	DIODE	1SS133	T
D80	1790001780	DIODE	MA700	T
D81	1790001780	DIODE	MA700	T
D82	1790001780	DIODE	MA700	T
D83	1790001780	DIODE	MA700	T
D84	1790001780	DIODE	MA700	T
X1	6050006930	XTAL	RF-4A3 FAT NKD (9.8304 MHz)	T
L1	6140000100	COIL	LR-22A	T
L2	6140000930	COIL	LR-116	T
L3	6140000930	COIL	LR-116	T
L4	6140000070	COIL	LR-19	T
L5	61800003300	COIL	T6-222J (2.2M)	T
L6	61100002750	COIL	LA-459	T
L7	61100002760	COIL	LA-460	T
L8	61100002770	COIL	LA-461	T
L9	61100002780	COIL	LA-462	T
L10	61100002790	COIL	LA-463	T
L11	61100002800	COIL	LA-464	T
L12	61100002810	COIL	LA-465	T
L13	61100002820	COIL	LA-466	T
L14	61100002830	COIL	LA-467	T
L15	61100002840	COIL	LA-468	T
L16	61100002850	COIL	LA-469	T
L17	61100002860	COIL	LA-470	T
L18	6180000900	COIL	LAL 03NA 101K	T
L19	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62) [AT-130E] only	T
L20	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62)	T
L22	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62)	T
L23	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62)	T
L24	6180000900	COIL	LAL 03NA 101K	T
L25	6180000900	COIL	LAL 03NA 101K	T
L26	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62)	T
L27	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62)	T
L28	6180000900	COIL	LAL 03NA 101K	T
L29	6180000900	COIL	LAL 03NA 101K	T
L30	6910000670	COIL	BL01RN1A1D2B (BL01RN1-A62)	T
L31	61800001220	COIL	LAL 04NA 100K	T
L32	6180000880	COIL	LAL 03NA 100K	T
L33	6180002270	COIL	LAL 03NA 470K	T
R1	7010004190	RESISTOR	R20J 1 kΩ	T
R2	7010004670	RESISTOR	R50XJ 22 Ω	T
R3	7010004670	RESISTOR	R50XJ 22 Ω	T
R4	7010003340	RESISTOR	ELR20J 330 Ω	T
R5	7010003740	RESISTOR	ELR20J 470 kΩ	T
R6	7010003240	RESISTOR	ELR20J 47 Ω	T
R8	7010004320	RESISTOR	R20J 10 kΩ	T
R9	7010004230	RESISTOR	R20J 2.2 kΩ	T
R10	7010004410	RESISTOR	R20J 47 kΩ	T
R11	7010003440	RESISTOR	ELR20J 2.2 kΩ	T
R12	7010003480	RESISTOR	ELR20J 4.7 kΩ	T
R13	701000290	RESISTOR	ELR25J 220 Ω	T

S.=Surface mount

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION	M.
R14	7010003950	RESISTOR R20J 10 Ω	T
R15	7010004320	RESISTOR R20J 10 kΩ	T
R16	7070000730	RESISTOR CRH200 R-02J 330 Ω	T
R17	7070000731	RESISTOR ERG2SJ 331 (330 Ω)	T
R18	7070000721	RESISTOR ERG2SJ 271 (270 Ω)	T
R19	7070000291	RESISTOR ERG2SJ 221 (220 Ω)	T
R20	7070000291	RESISTOR ERG2SJ 221 (220 Ω)	T
R21	7070000291	RESISTOR ERG2SJ 221 (220 Ω)	T
R22	7070000301	RESISTOR ERG1SJ 331 (330 Ω)	T
R23	7070000301	RESISTOR ERG1SJ 331 (330 Ω)	T
R24	7070000711	RESISTOR ERG1SJ 271 (270 Ω)	T
R25	7010004410	RESISTOR R20J 47 kΩ	T
R26	7010004410	RESISTOR R20J 47 kΩ	T
R27	7010003440	RESISTOR ELR20J 2.2 kΩ	T
R28	7010004690	RESISTOR R50XJ 47 Ω	T
R29	7010004690	RESISTOR R50XJ 47 Ω	T
R30	7010004690	RESISTOR R50XJ 47 Ω	T
R31	7010004690	RESISTOR R50XJ 47 Ω	T
R32	7010004030	RESISTOR R20J 47 Ω	T
R33	7010004490	RESISTOR R20J 220 kΩ	T
R34	7010004490	RESISTOR R20J 220 kΩ	T
R35	7010004420	RESISTOR R20J 56 kΩ	T
R36	7010004230	RESISTOR R20J 2.2 kΩ	T
R37	7010004410	RESISTOR R20J 47 kΩ	T
R38	7010004190	RESISTOR R20J 1 kΩ	T
R39	7010004320	RESISTOR R20J 10 kΩ	T
R40	7010004320	RESISTOR R20J 10 kΩ	T
R41	7010004320	RESISTOR R20J 10 kΩ	T
R42	7010003400	RESISTOR ELR20J 1 kΩ	T
R43	7010001020	RESISTOR R25XJ 82 Ω	T
R44	7010004110	RESISTOR R20J 220 Ω	T
R45	7540000010	ABSORBER DSA-301LA	T
R46	701000590	RESISTOR ELR25J 47 kΩ	T
R47	7010003200	RESISTOR ELR20J 22 Ω	T
R49	7010000160	RESISTOR ELR25J 18 Ω	T
R51	7010004940	RESISTOR ELR25J 68 Ω	T
R52	7010001010	RESISTOR R25XJ 68 Ω	T
R53	7010004400	RESISTOR R20J 39 kΩ	T
R54	7010003380	RESISTOR ELR20J 680 Ω	T
R55	7100000150	RESISTOR SRW2P 22 Ω (220)	T
R56	7010003580	RESISTOR ELR20J 22 kΩ	T
R57	7010004450	RESISTOR R20J 100 kΩ	T
R58	7010004250	RESISTOR R20J 3.3 kΩ	T
R59	7010003550	RESISTOR ELR20J 15 kΩ	T
R60	7010004230	RESISTOR R20J 2.2 kΩ	T
R61	7010003490	RESISTOR ELR20J 5.6 kΩ	T
R62	7010004110	RESISTOR R20J 220 Ω	T
R63	7010003390	RESISTOR ELR20J 820 Ω	T
R64	7010003620	RESISTOR ELR20J 47 kΩ	T
R66	7010003660	RESISTOR ELR20J 100 kΩ	T
R67	7010004410	RESISTOR R20J 47 kΩ	T
R68	7080001191	RESISTOR RN14K2E 390 kΩ	T
R70	7410000082	ARRAY RGLD4X473J	T
R71	7010003400	RESISTOR ELR20J 1 kΩ	T
R72	7010004190	RESISTOR R20J 1 kΩ	T
R73	7010004190	RESISTOR R20J 1 kΩ	T
R74	7010004190	RESISTOR R20J 1 kΩ	T
R75	7010003320	RESISTOR ELR20J 220 Ω	T
R76	7010003660	RESISTOR ELR20J 100 kΩ	T
R77	7010003700	RESISTOR ELR20J 220 kΩ	T
R78	7080000411	RESISTOR RN14K2E 480 kΩ	T
R79	7410000222	ARRAY RGLD8X473J	T
R80	7410000222	ARRAY RGLD8X473J	T
R81	7410000222	ARRAY RGLD8X473J	T
R82	7010003620	RESISTOR ELR20J 47 kΩ	T
R83	7410000202	ARRAY RGLD8X222J	T
R84	7010004150	RESISTOR R20J 470 Ω	T
R85	7010004150	RESISTOR R20J 470 Ω	T
R86	7010004150	RESISTOR R20J 470 Ω	T
R87	7010004150	RESISTOR R20J 470 Ω	T
R88	7010004150	RESISTOR R20J 470 Ω	T
R89	7010004150	RESISTOR R20J 470 Ω	T
R90	7010004150	RESISTOR R20J 470 Ω	T
R91	7410000202	ARRAY RGLD8X222J	T
R92	7010004150	RESISTOR R20J 470 Ω	T
R93	7010004150	RESISTOR R20J 470 Ω	T
R94	7010004150	RESISTOR R20J 470 Ω	T
R95	7010004150	RESISTOR R20J 470 Ω	T
R96	7010004150	RESISTOR R20J 470 Ω	T
R97	7010004150	RESISTOR R20J 470 Ω	T
R98	7010004150	RESISTOR R20J 470 Ω	T
R99	7010004150	RESISTOR R20J 470 Ω	T
R100	7410000202	ARRAY RGLD8X222J	T
R101	7010004150	RESISTOR R20J 470 Ω	T
R102	7010004150	RESISTOR R20J 470 Ω	T
R103	7010004150	RESISTOR R20J 470 Ω	T
R104	7010004150	RESISTOR R20J 470 Ω	T
R105	7010004150	RESISTOR R20J 470 Ω	T

M.=Mounted side (T: Mounted on the Top side, B: Mounted on the Bottom side)

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION	M.
R106	7010004150	RESISTOR R20J 470 Ω	T
R107	7010004150	RESISTOR R20J 470 Ω	T
R108	7010004150	RESISTOR R20J 470 Ω	T
R109	7010003990	RESISTOR R20J 22 Ω	T
R111	7010003990	RESISTOR R20J 22 Ω	T
R113	7010003990	RESISTOR R20J 22 Ω	T
R115	7010003990	RESISTOR R20J 22 Ω	T
R117	7010003990	RESISTOR R20J 22 Ω	T
R119	7010003990	RESISTOR R20J 22 Ω	T
R121	7010003990	RESISTOR R20J 22 Ω	T
R123	7010003990	RESISTOR R20J 22 Ω	T
R125	7010003990	RESISTOR R20J 22 Ω	T
R127	7010003990	RESISTOR R20J 22 Ω	T
R129	7010003990	RESISTOR R20J 22 Ω	T
R131	7010003990	RESISTOR R20J 22 Ω	T
R133	7010003200	RESISTOR ELR20J 22 Ω	T
R135	7010003990	RESISTOR R20J 22 Ω	T
R137	7010003990	RESISTOR R20J 22 Ω	T
R139	7010003990	RESISTOR R20J 22 Ω	T
R141	7010003990	RESISTOR R20J 22 Ω	T
R143	7010003990	RESISTOR R20J 22 Ω	T
R145	7010003990	RESISTOR R20J 22 Ω	T
R147	7010003990	RESISTOR R20J 22 Ω	T
R149	7010004150	RESISTOR R20J 470 Ω	T
R150	7010003480	RESISTOR ELR20J 4.7 kΩ	T
R151	7010003440	RESISTOR ELR20J 2.2 kΩ	T
R152	7010000940	RESISTOR R25XJ 18 Ω	T
R154	7010000940	RESISTOR R25XJ 18 Ω	T
R156	7010003620	RESISTOR ELR20J 47 kΩ	T
R157	7080001191	RESISTOR RN14K2E 390 kΩ	T
R158	7010003450	RESISTOR ELR20J 2.7 kΩ	T
R159	7010003530	RESISTOR ELR20J 10 kΩ	T
R160	7010003360	RESISTOR ELR20J 470 Ω	T
R161	7010003620	RESISTOR ELR20J 47 kΩ	T
R162	7010003620	RESISTOR ELR20J 47 kΩ	T
R163	7010004450	RESISTOR R20J 100 kΩ	T
R164	7010004450	RESISTOR R20J 100 kΩ	T
R165	7010000940	RESISTOR R25XJ 18 Ω	T
R167	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R168	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R169	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R170	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R171	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R172	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R173	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R174	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R175	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R176	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R177	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R178	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R179	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R180	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R181	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R182	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R183	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R184	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R185	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R186	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R187	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R188	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R189	7010003410	RESISTOR ELR20J 1.2 kΩ	T
R190	7010001030	RESISTOR R25XJ 100 Ω	T
R191	7010001190	RESISTOR R25XJ 2.2 kΩ	T
R192	7010003520	RESISTOR ELR20J 8.2 kΩ	T
R193	7010003720	RESISTOR ELR20J 330 kΩ	T
R194	7310000660	TRIMMER RH0621C14J19A (103)	T
R195	7010003400	RESISTOR ELR20J 1 kΩ	T
R196	7010003490	RESISTOR ELR20J 5.6 kΩ	T
R197	7010005210	RESISTOR R20J 10 MΩ	T
R198	7010004420	RESISTOR R20J 56 kΩ	T
R200	7010003660	RESISTOR ELR20J 100 kΩ	T
R201	7010004190	RESISTOR R20J 1 kΩ	T
R202	7010003700	RESISTOR ELR20J 220 kΩ	T
R203	7010003620	RESISTOR ELR20J 47 kΩ	T
R204	7010004410	RESISTOR R20J 47 kΩ	T
R205	7410000352	ARRAY RGLD3X104J	T
R206	7410000352	ARRAY RGLD3X104J	T
R207	7410000352	ARRAY RGLD3X104J	T
R208	7410000352	ARRAY RGLD3X104J	T
R209	7410000352	ARRAY RGLD3X104J	T
C1	4020000990	CYLINDER UP050 B 473K-NA-CZ	T
C2	4010005610	CERAMIC HM60SJ SL 100D 500V	T
C3	4010000380	CERAMIC DD106-601 SL 221J 50V	T
C4	4010000410	CERAMIC DD107 SL 331J 50V	T
C5	4020000990	CYLINDER UP050 B 473K-NA-CZ	T
C6	4010005660	CERAMIC HM60SJ SL 220J 500V	T

S.=Surface mount

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION	M.
C7	4610000740	TRIMMER	ECV-1ZW 10X53T
C8	4010000360	CERAMIC	DD106 SL 181J 50V
C9	4510005110	ELECTROLYTIC	16 MV 33 HC
C10	4010000520	CERAMIC	DD107-601 B 472K 50V
C11	4020000990	CYLINDER	UP050 B 473K-NA-CZ
C12	4010000410	CERAMIC	DD107 SL 331J 50V
C13	4010000410	CERAMIC	DD107 SL 331J 50V
C14	4020000990	CYLINDER	UP050 B 473K-NA-CZ
C15	4020001000	CERAMIC	RPER11H472K2P1A01B
C16	4010000520	CERAMIC	DD107-601 B 472K 50V
C17	4020000980	CYLINDER	UP050 B 104K-NA-CZ
C18	4020000990	CYLINDER	UP050 B 473K-NA-CZ
C19	4020000420	CYLINDER	UP050 SL 100J
C20	4010000210	CERAMIC	DD104 SL 300J 50V
C21	4010000410	CERAMIC	DD107 SL 331J 50V
C22	4010000520	CERAMIC	DD107-601 B 472K 50V
C23	4020000990	CYLINDER	UP050 B 473K-NA-CZ
C24	4320000661	DIP MICA	KD20C 122J5A
C25	4320000661	DIP MICA	KD20C 122J5A
C26	4320000661	DIP MICA	KD20C 122J5A
C28	4010004740	CERAMIC	DE1207 SL 271J 2KV
C29	4010004750	CERAMIC	DE1510 SL 331J 2KV
C30	4010004280	CERAMIC	DE1207 SL 151J 3KV
C31	4010004280	CERAMIC	DE1207 SL 151J 3KV
C32	4010004280	CERAMIC	DE1207 SL 151J 3KV
C34	4010000520	CERAMIC	DD107-601 B 472K 50V
C35	4010004280	CERAMIC	DE1207 SL 151J 3KV
C36	4010004280	CERAMIC	DE1207 SL 151J 3KV
C37	4010004790	CERAMIC	DEC1X3J680JC4B (DE1210SL680J)
C38	4010004260	CERAMIC	DE0907 SL 820J 3KV
C39	4010004770	CERAMIC	DEC1X3J390JC4B (DE0910SL390J)
C40	4010004770	CERAMIC	DEC1X3J390JC4B (DE0910SL390J)
C41	4010005040	CERAMIC	DE0707 SL 180J 3KV
C42	4010005040	CERAMIC	DE0707 SL 180J 3KV
C43	4010000520	CERAMIC	DD107-601 B 472K 50V
C44	4010004810	CERAMIC	DEC1X3J101JC4B (DE1310SL101J)
C45	4010004810	CERAMIC	DEC1X3J101JC4B (DE1310SL101J)
C46	4010004810	CERAMIC	DEC1X3J101JC4B (DE1310SL101J)
C47	4010004810	CERAMIC	DEC1X3J101JC4B (DE1310SL101J)
C48	4010000520	CERAMIC	DD107-601 B 472K 50V
C50	4020000980	CYLINDER	UP050 B 104K-NA-CZ
C52	4010000520	CERAMIC	DD107-601 B 472K 50V
C53	4510003900	ELECTROLYTIC	16 MV 22 HW
C54	4010000520	CERAMIC	DD107-601 B 472K 50V
C55	4010000520	CERAMIC	DD107-601 B 472K 50V
C56	4510005120	ELECTROLYTIC	16 MV 47 HC
C57	4010000520	CERAMIC	DD107-601 B 472K 50V
C58	4010000520	CERAMIC	DD107-601 B 472K 50V
C59	4020000990	CYLINDER	UP050 B 473K-NA-CZ
C60	4510004590	ELECTROLYTIC	16 MV 470 HC
C61	4010000520	CERAMIC	DD107-601 B 472K 50V
C62	4010000520	CERAMIC	DD107-601 B 472K 50V
C64	4010000520	CERAMIC	DD107-601 B 472K 50V
C65	4010000520	CERAMIC	DD107-601 B 472K 50V
C66	4010000520	CERAMIC	DD107-601 B 472K 50V
C68	4020001000	CERAMIC	RPER11H472K2P1A01B
C69	4010000500	CERAMIC	DD104 B 102K 50V
C70	4010000520	CERAMIC	DD107-601 B 472K 50V
C71	4010000520	CERAMIC	DD107-601 B 472K 50V
C72	4020001000	CERAMIC	RPER11H472K2P1A01B
C73	4020001000	CERAMIC	RPER11H472K2P1A01B
C74	4010000520	CERAMIC	DD107-601 B 472K 50V
C75	4310000520	MYLAR	50 F2D 224J
C76	4010000520	CERAMIC	DD107-601 B 472K 50V
C77	4010000520	CERAMIC	DD107-601 B 472K 50V
C78	4010000430	CERAMIC	DD108-601 SL 471J 50V
C79	4010000460	CERAMIC	DD104 B 471K 50V
C81	4020001000	CERAMIC	RPER11H472K2P1A01B
C82	4550000340	TANTALUM	DN 1C 100M
C83	4510005460	ELECTROLYTIC	FYDOH 474Z
C84	4310000520	MYLAR	50 F2D 224J
C85	4310000520	MYLAR	50 F2D 224J
C86	4010000500	CERAMIC	DD104 B 102K 50V
C87	4010000810	CERAMIC	DD104 CH 300J 50V
C88	4010000810	CERAMIC	DD104 CH 300J 50V
C89	4020001000	CERAMIC	RPER11H472K2P1A01B
C90	4530000250	ARRAY	B8XC0112-33N
C91	4010000520	CERAMIC	DD107-601 B 472K 50V
C92	4020001000	CERAMIC	RPER11H472K2P1A01B
C93	4530000250	ARRAY	B8XC0112-33N
C94	4010000520	CERAMIC	DD107-601 B 472K 50V
C95	4010000520	CERAMIC	DD107-601 B 472K 50V
C96	4530000250	ARRAY	B8XC0112-33N
C98	4010000520	CERAMIC	DD107-601 B 472K 50V
C100	4010000520	CERAMIC	DD107-601 B 472K 50V
C102	4010000520	CERAMIC	DD107-601 B 472K 50V
C104	4010000520	CERAMIC	DD107-601 B 472K 50V
C106	4010000520	CERAMIC	DD107-601 B 472K 50V

M.=Mounted side (T: Mounted on the Top side, B: Mounted on the Bottom side)

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION	M.
C108	4010000520	CERAMIC	DD107-601 B 472K 50V
C110	4010000520	CERAMIC	DD107-601 B 472K 50V
C112	4010000520	CERAMIC	DD107-601 B 472K 50V
C114	4010000520	CERAMIC	DD107-601 B 472K 50V
C116	4010000520	CERAMIC	DD107-601 B 472K 50V
C118	4010000520	CERAMIC	DD107-601 B 472K 50V
C120	4010000520	CERAMIC	DD107-601 B 472K 50V
C122	4010000520	CERAMIC	DD107-601 B 472K 50V
C124	4010000520	CERAMIC	DD107-601 B 472K 50V
C126	4010000520	CERAMIC	DD107-601 B 472K 50V
C128	4010000520	CERAMIC	DD107-601 B 472K 50V
C130	4010000520	CERAMIC	DD107-601 B 472K 50V
C132	4010000520	CERAMIC	DD107-601 B 472K 50V
C134	4010000520	CERAMIC	DD107-601 B 472K 50V
C136	4010000520	CERAMIC	DD107-601 B 472K 50V
C137	4530000250	ARRAY	B8XC0112-33N
C138	4530000250	ARRAY	B8XC0112-33N
C139	4530000250	ARRAY	B8XC0112-33N
C140	4530000250	ARRAY	B8XC0112-33N
C141	4530000250	ARRAY	B8XC0112-33N
C142	4530000250	ARRAY	B8XC0112-33N
C144	4530000050	ARRAY	B5RC0126-33N
C147	4010000520	CERAMIC	DD107-601 B 472K 50V
C148	4020001000	CERAMIC	RPER11H472K2P1A01B
C150	4010000520	CERAMIC	DD107-601 B 472K 50V
C152	4010000520	CERAMIC	DD107-601 B 472K 50V
C153	4010000520	CERAMIC	DD107-601 B 472K 50V
C155	4010000520	CERAMIC	DD107-601 B 472K 50V
C156	4020001000	CERAMIC	RPER11H472K2P1A01B
C162	40100005610	CERAMIC	HM60SJ SL 100D 500 V [AT-130E]
C163	4020001000	CERAMIC	HM60SJ SL 220J 500V [OTHER]
C164	4010000520	CERAMIC	DD107-601 B 472K 50V
C165	4010000520	CERAMIC	DD107-601 B 472K 50V
C166	4530000250	ARRAY	B8XC0112-33N
C167	4530000250	ARRAY	B8XC0112-33N
C168	4530000250	ARRAY	B8XC0112-33N
C169	4010000520	CERAMIC	DD107-601 B 472K 50V
C170	4020001000	CERAMIC	RPER11H472K2P1A01B
C171	4010000520	CERAMIC	DD107-601 B 472K 50V
C172	4010000520	CERAMIC	DD107-601 B 472K 50V
C173	4010000520	CERAMIC	DD107-601 B 472K 50V
C174	4020000990	CYLINDER	UP050 B 473K-NA-CZ
C175	4020001000	CERAMIC	RPER11H472K2P1A01B
C176	4010000520	CERAMIC	DD107-601 B 472K 50V
C177	4020001000	CERAMIC	RPER11H472K2P1A01B
C178	4010000520	CERAMIC	DD107-601 B 472K 50V
C179	4010000520	CERAMIC	DD107-601 B 472K 50V
C181	4020001000	CERAMIC	RPER11H472K2P1A01B
C182	4010003930	CERAMIC	DD06 SL 270K 500V
RL1	6330001070	RELAY	AQJ1341 B01
RL2	6330001070	RELAY	AQJ1341 B01
RL3	6330001060	RELAY	APQ 3311
RL4	6330000570	RELAY	AR-39251
RL5	6330001060	RELAY	APQ 3311
RL6	6330001060	RELAY	APQ 3311
RL7	6330001060	RELAY	APQ 3311
RL8	6330001060	RELAY	APQ 3311
RL9	6330001060	RELAY	APQ 3311
RL10	6330001060	RELAY	APQ 3311
RL11	6330001060	RELAY	APQ 3311
RL12	6330001060	RELAY	APQ 3311
RL13	6330001060	RELAY	APQ 3311
RL14	6330001060	RELAY	APQ 3311
RL15	6330001060	RELAY	APQ 3311
RL16	6330001060	RELAY	APQ 3311
RL17	6330001060	RELAY	APQ 3311
RL18	6330001060	RELAY	APQ 3311
RL19	6330001060	RELAY	APQ 3311
RL20	6330001060	RELAY	APQ 3311
RL21	6330001060	RELAY	APQ 3311
RL22	6330001060	RELAY	APQ 3311
RL23	6330001060	RELAY	APQ 3311
RL24	6330001060	RELAY	APQ 3311
RL25	6330000570	RELAY	AR-39251
RL26	6330000570	RELAY	AR-39251
RL27	6330000570	RELAY	AR-39251
J1	6510000130	CONNECTOR	FM MDR MI [AT-130/E] only
J4	6910003140	CONNECTOR	IMSA-9202B-1-02T
J5	6910003140	CONNECTOR	IMSA-9202B-1-02T
J6	6910003140	CONNECTOR	IMSA-9202B-1-02T
J8	6510024500	CONNECTOR	B06B-XH-A
J9	6510015150	CONNECTOR	ML-800S1V-6P [AT-130/E] only
J13	6910003140	CONNECTOR	IMSA-9202B-1-02T

S.=Surface mount

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION	M.
J15	6510003100	CONNECTOR	RT01T-1.3B
J16	6510003100	CONNECTOR	RT01T-1.3B [AT-130/E] only
P4	6910003120	CONNECTOR	IMSA-9206H-T
P5	6910003120	CONNECTOR	IMSA-9206H-T
P6	6910003120	CONNECTOR	IMSA-9206H-T
DS1	5040002860	LED	EL-204HD
DS2	5040002860	LED	EL-204HD
DS3	5040002860	LED	EL-204HD
DS4	5040002860	LED	EL-204HD
DS5	5040002860	LED	EL-204HD
DS6	5040002860	LED	EL-204HD
DS7	5040002860	LED	EL-204HD
DS8	5040002860	LED	EL-204HD
DS9	5040002860	LED	EL-204HD
DS10	5040002860	LED	EL-204HD
DS11	5040002860	LED	EL-204HD
DS12	5040002860	LED	EL-204HD
DS13	5040002860	LED	EL-204HD
DS14	5040002860	LED	EL-204HD
DS15	5040002860	LED	EL-204HD
DS16	5040002860	LED	EL-204HD
DS17	5040002860	LED	EL-204HD
DS18	5040002860	LED	EL-204HD
DS19	5040002860	LED	EL-204HD
DS20	5040002860	LED	EL-204HD
DS21	5040002860	LED	EL-204HD
DS22	5040002860	LED	EL-204HD
DS23	5040002860	LED	EL-204HD
DS24	5040002860	LED	EL-204HD
S1	2260000200	SWITCH	MS621C
S2	2260000580	SWITCH	SKHLAD035A
S3	2260000830	SWITCH	SSGM18049A
S4	2260000610	SWITCH	SSGM17012A
S5	2260000830	SWITCH	SSGM18049A
W1	7120000010	JUMPER	JPW 02A
W2	6910001030	JUMPER	IPS-1041-4
W3	6910001030	JUMPER	IPS-1041-4
W4	6910001030	JUMPER	IPS-1041-4
W5	6910001020	JUMPER	IPS-1041-2
W6	6910001030	JUMPER	IPS-1041-4
W7	6910001030	JUMPER	IPS-1041-4
W8	6910001020	JUMPER	IPS-1041-2
W9	6910001020	JUMPER	IPS-1041-2
W10	6910001020	JUMPER	IPS-1041-2
W11	6910001020	JUMPER	IPS-1041-2
W12	6910001030	JUMPER	IPS-1041-4
W13	6910001030	JUMPER	IPS-1041-4
W16	6910001020	JUMPER	IPS-1041-2
W17	9040401015	WIRE	74/98/045/X98/X98
W19	9045201001	WIRE	74/98/040/X98/X98 [AT-130/E] only
W20	9045201001	WIRE	74/98/040/X98/X98 [AT-130/140] only
W36	6910001030	JUMPER	IPS-1041-4
W37	9040401015	WIRE	74/98/045/X98/X98
W38	9040401015	WIRE	74/98/045/X98/X98
W39	9040401015	WIRE	74/98/045/X98/X98
W40	9040401015	WIRE	74/98/045/X98/X98
W42	6910001030	JUMPER	IPS-1041-4
W49	6910001030	JUMPER	IPS-1041-4
W50	6910001030	JUMPER	IPS-1041-4
W51	6910001030	JUMPER	IPS-1041-4
W52	6910001030	JUMPER	IPS-1041-4
W53	6910001030	JUMPER	IPS-1041-4
W54	6910001030	JUMPER	IPS-1041-4
W55	6910001030	JUMPER	IPS-1041-4
W56	6910001030	JUMPER	IPS-1041-4
W57	6910001030	JUMPER	IPS-1041-4
W58	6910001030	JUMPER	IPS-1041-4
W59	6910001030	JUMPER	IPS-1041-4
W60	6910001030	JUMPER	IPS-1041-4
W70	6910001030	JUMPER	IPS-1041-4
W71	6910001030	JUMPER	IPS-1041-4
W72	6910001020	JUMPER	IPS-1041-2
W73	6910001030	JUMPER	IPS-1041-4
W74	6910001030	JUMPER	IPS-1041-4
W75	6910001030	JUMPER	IPS-1041-4
W76	6910001020	JUMPER	IPS-1041-2
W77	7120000010	JUMPER	JPW 02A
W78	6910001030	JUMPER	IPS-1041-4
W79	6910001020	JUMPER	IPS-1041-2

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION	M.
W80	6910001030	JUMPER	IPS-1041-4
W81	6910001030	JUMPER	IPS-1041-4
W82	6910001020	JUMPER	IPS-1041-2
W83	6910001020	JUMPER	IPS-1041-2
W84	6910001020	JUMPER	IPS-1041-2
W85	6910001030	JUMPER	IPS-1041-4
W87	6910001030	JUMPER	IPS-1041-4
W88	6910001030	JUMPER	IPS-1041-4
W89	6910001030	JUMPER	IPS-1041-4
W90	6910001020	JUMPER	IPS-1041-2
W91	6910001030	JUMPER	IPS-1041-4
W92	6910001020	JUMPER	IPS-1041-2
W93	6910001030	JUMPER	IPS-1041-4
W94	6910001030	JUMPER	IPS-1041-4
W95	6910001030	JUMPER	IPS-1041-4
W96	7120000010	JUMPER	JPW 02A
W97	7120000010	JUMPER	JPW 02A
W98	6910001030	JUMPER	IPS-1041-4
W99	6910001020	JUMPER	IPS-1041-2
W100	6910001020	JUMPER	IPS-1041-2
W102	6910001030	JUMPER	IPS-1041-4
W104	6910001020	JUMPER	IPS-1041-2
W105	6910001020	JUMPER	IPS-1041-2
W106	6910001020	JUMPER	IPS-1041-2
W107	6910001020	JUMPER	IPS-1041-2
W108	6910001030	JUMPER	IPS-1041-4
W109	6910001020	JUMPER	IPS-1041-2
W110	6910001030	JUMPER	IPS-1041-4
W111	6910001020	JUMPER	IPS-1041-2
W112	6910001030	JUMPER	IPS-1041-4
W113	6910001030	JUMPER	IPS-1041-4
W114	6910001020	JUMPER	IPS-1041-2
W115	6910001030	JUMPER	IPS-1041-4
W116	6910001020	JUMPER	IPS-1041-2
W117	6910001020	JUMPER	IPS-1041-2
W120	6910001030	JUMPER	IPS-1041-4
W121	7120000010	JUMPER	JPW 02A
W122	6910001030	JUMPER	IPS-1041-4
W123	6910001030	JUMPER	IPS-1041-4
W124	6910001020	JUMPER	IPS-1041-2
W125	6910001030	JUMPER	IPS-1041-4
W126	6910001030	JUMPER	IPS-1041-4
W127	6910001030	JUMPER	IPS-1041-4
W128	6910001030	JUMPER	IPS-1041-4
W129	6910001030	JUMPER	IPS-1041-4
W130	6910001030	JUMPER	IPS-1041-4
W131	6910001020	JUMPER	IPS-1041-2
W132	6910001030	JUMPER	IPS-1041-4
W133	6910001030	JUMPER	IPS-1041-4
W134	6910001030	JUMPER	IPS-1041-4
W135	6910001030	JUMPER	IPS-1041-4
W136	6910001030	JUMPER	IPS-1041-4
W137	6910001020	JUMPER	IPS-1041-2
W138	6910001020	JUMPER	IPS-1041-2
W139	6910001020	JUMPER	IPS-1041-2
W140	6910001020	JUMPER	IPS-1041-2
W141	6910001020	JUMPER	IPS-1041-2
W142	6910001030	JUMPER	IPS-1041-4
W144	6910001020	JUMPER	IPS-1041-2
W145	6910001030	JUMPER	IPS-1041-4
W146	6910001030	JUMPER	IPS-1041-4
W147	6910001020	JUMPER	IPS-1041-2
W148	6910001020	JUMPER	IPS-1041-2
W149	6910001030	JUMPER	IPS-1041-4
W150	6910001030	JUMPER	IPS-1041-4
W151	6910001030	JUMPER	IPS-1041-4
W152	7120000010	JUMPER	JPW 02A
W153	7120000010	JUMPER	JPW 02A [AT-140] only
W157	6910001030	JUMPER	IPS-1041-4
W158	7120000010	JUMPER	JPW 02A
W159	9045201001	WIRE	74/98/040/X98/X98
W160	6910001020	JUMPER	IPS-1041-2
W161	6910001030	JUMPER	IPS-1041-4
W162	6910001020	JUMPER	IPS-1041-2
W163	6910001020	JUMPER	IPS-1041-2
W164	6910001030	JUMPER	IPS-1041-4
W165	6910001020	JUMPER	IPS-1041-2
W166	6910001020	JUMPER	IPS-1041-2
W167	9040401015	WIRE	74/98/045/X98/X98 [AT-140] only
W168	6910001020	JUMPER	IPS-1041-2
W169	9040401015	WIRE	74/98/045/X98/X98 [AT-140] only
W170	9040401015	WIRE	74/98/045/X98/X98 [AT-140] only
W171	6910001020	JUMPER	IPS-1041-2 [AT-140] only
W172	6910001020	JUMPER	IPS-1041-2 [AT-140] only
W174	6910001020	JUMPER	IPS-1041-2 [AT-140] only
W176	6910001020	JUMPER	IPS-1041-2 [AT-140] only

M.=Mounted side (T: Mounted on the Top side, B: Mounted on the Bottom side)

S.=Surface mount

[TUNER UNIT]

REF NO.	ORDER NO.	DESCRIPTION		M.
WS1	8970020241	OTHER	EX1157 J BOARD SET-1 (10)/TU	T
WS2	8600030510	OTHER	EX1157 J03TU [OTHER]	T
	8970020250	OTHER	EX1157 J LEAD SET (3) /TU [AT-130E]	T
WS3	8600030510	OTHER	EX1157 J03TU [AT-130E]	T
	8600030520	OTHER	EX1157 J02TU [OTHER]	T
WS4	8600030520	OTHER	EX1157 J02TU [AT-130E]	T
	8970020260	OTHER	EX1157 J LEAD SET (2) /TU [OTHER]	T
WS5	8600030530	OTHER	EX1157 P01TU [AT-130E]	T
EP1	0910037487	PCB	B 3678G	
EP2	9030602001	TUBE	IRRAX 1 (d) L=10 mm	T
EP3	9029403902	TUBE	IRRAX 1 (d) L=5 mm	T
EP4	0910037981	PCB	B 3758A [AT-130/E] only	

[MANUAL UNIT]

REF NO.	ORDER NO.	DESCRIPTION		M.
RL304	6330000570	RELAY	AR-39251	T
J301	6510002250	CONNECTOR	TL25P03V1	T
J302	6910003160	CONNECTOR	IMSA-9202B-2-08T	T
J303	6510003100	CONNECTOR	RT01T-1.3B	T
J305	6510003100	CONNECTOR	RT01T-1.3B	T
J307	6510006600	CONNECTOR	RT01N-2.3A	T
J308	6510006600	CONNECTOR	RT01N-2.3A	T
J309	6510006600	CONNECTOR	RT01N-2.3A	T
J310	6510006600	CONNECTOR	RT01N-2.3A	T
J311	6510006600	CONNECTOR	RT01N-2.3A	T
J312	6510006600	CONNECTOR	RT01N-2.3A	T
J313	6510006600	CONNECTOR	RT01N-2.3A	T
J314	6510006600	CONNECTOR	RT01N-2.3A	T
J315	6510006600	CONNECTOR	RT01N-2.3A	T
J316	6510006600	CONNECTOR	RT01N-2.3A	T
J317	6510006600	CONNECTOR	RT01N-2.3A	T
J318	6510006600	CONNECTOR	RT01N-2.3A	T
J319	6510006600	CONNECTOR	RT01N-2.3A	T
J320	6510006600	CONNECTOR	RT01N-2.3A	T
J321	6510006600	CONNECTOR	RT01N-2.3A	T
J322	6510006600	CONNECTOR	RT01N-2.3A	T
J323	6510006600	CONNECTOR	RT01N-2.3A	T
P301	6910003120	CONNECTOR	IMSA-9206H-T	T
P302	6910003120	CONNECTOR	IMSA-9206H-T	T
P303	6910003120	CONNECTOR	IMSA-9206H-T	T
P304	6910003120	CONNECTOR	IMSA-9206H-T	T
W304	9054500720	WIRE	76/98/040/X98/X98	T
WS1	8970020270	OTHER	EX1157 J LEAD SET (3) /MN	T
WS2	8600030540	OTHER	EX1157 P305MN	T
EP301	0910015134	PCB	B 1238D	
R301	7010001000	RESISTOR	R25XJ 56 Ω	T
R302	7010001000	RESISTOR	R25XJ 56 Ω	T
R303	7010001000	RESISTOR	R25XJ 56 Ω	T
R304	7010000940	RESISTOR	R25XJ 18 Ω	T
R305	7010001340	RESISTOR	R25XJ 33 kΩ	T
R306	7070000341	RESISTOR	ERG1SJ 330 (33 Ω)	T
C301	4010000520	CERAMIC	DD107-601 B 472K 50V	T
C302	4010000520	CERAMIC	DD107-601 B 472K 50V	T
C303	4010000520	CERAMIC	DD107-601 B 472K 50V	T
C304	4010000520	CERAMIC	DD107-601 B 472K 50V	T
C305	4010000520	CERAMIC	DD107-601 B 472K 50V	T
C306	4010000420	CERAMIC	DD107-601 SL 391J 50V	T
C309	4320000661	DIP MICA	KD20C 122J5A	T
C310	4320000681	DIP MICA	KD19C 681J5A	T
C311	4320000651	DIP MICA	KD20C 102J5A	T
C312	4010004260	CERAMIC	DE0907 SL 820J 3KV	T
C313	4010004260	CERAMIC	DE0907 SL 820J 3KV	T
C314	4010004260	CERAMIC	DE0907 SL 820J 3KV	T
C315	4010004250	CERAMIC	DE1007 SL 101J 3KV	T
C316	4010004250	CERAMIC	DE1007 SL 101J 3KV	T
C317	4010004250	CERAMIC	DE1007 SL 101J 3KV	T
C318	4010004290	CERAMIC	DE1310 SL 181J 3KV	T
C319	4010004290	CERAMIC	DE1310 SL 181J 3KV	T
C320	4010005010	CERAMIC	DE1105 SL 331J 1KV	T
C321	4010005080	CERAMIC	DEA1X3F470JC3B (DE0707SL470J)	T
RL301	6330000840	RELAY	G2R-1 DC12V	T
RL302	6330000840	RELAY	G2R-1 DC12V	T
RL303	6330000840	RELAY	G2R-1 DC12V	T

M.=Mounted side (T: Mounted on the Top side, B: Mounted on the Bottom side)

S.=Surface mount

SECTION 6 MECHANICAL PARTS

[CHASSIS PARTS]

REF. NO.	ORDER NO.	DESCRIPTION	QTY.
W501	8900011380	Cable OPC-1146 [AT-140] only	1
W502	8900011400	Cable OPC-1164 [AT-140] only	1
EP501	6910000880	Sheet NC-1 (SUS) [AT-130/E] only	1
EP502	6910000880	Sheet NC-1 (SUS) [AT-130/E] only	1
MP501	8310006540	High voltage waring seal	1
MP502	8010003411	Case (A)-1 [USA][EUR][USA-2]	1
	8010016911	Case (I)-1 [USA-1][EUR-1]	1
	8010019030	1157 U-case [AT-140]	1
MP503	8010003331	Case (B)-1 [USA][EUR][USA-2]	1
	8010016921	Case (J)-1 [USA-1][EUR-1]	1
	8010019020	1157 L-case [AT-140]	1
MP504	8930006900	Mounting plate	2
MP505	8930006540	Waterproof seal	1
MP506	8930002800	O ring (G)	2
MP507	8930006550	Sealing washer (A) [AT-130/E] only	1
MP508	8930006560	Sealing washer (C)	1
MP509	8930006570	Sealing washer (D)	4
MP510	6910000470	Pair insulator	1
MP512	8310027360	1157 caution seal (P) [AT-130] only	1
	8310053950	Caution seal (P) [AT-140] only	1
MP517	8810000620	Screw PH M3 × 13 SUS [AT-130/E] only	1
MP518	8830000230	Nut M3 SUS [AT-130/E] only	1
MP519	8810003480	Hexagon bolt M5 × 60 SUS	1
MP520	8860000160	Earth lug B8 (M5) AG BS	1
MP521	8850000500	Spring washer M5 SUS	1
MP522	8850000180	Flat washer M5 SUS	1
MP523	8830000250	Nut M5 SUS	1
MP524	8860000190	Earth lug (M5) AG BS	1
MP525	8850000600	Gear Washer M5 SUS	1
MP526	8830000370	Wing nut M5 SUS	1
MP527	8810003470	Hexagon bolt M5 × 20 SUS	1
MP528	8860000160	Earth lug B8 (M5) AG BS	1
MP529	8850000500	Spring washer M5 SUS	1
MP530	8850000180	Flat washer M5 SUS	1
MP531	8830000250	Nut M5 SUS	1
MP532	8860000190	Earth lug D5 (M5) AG BS	1
MP533	8850000600	Gear Washer M5 SUS	1
MP534	8830000370	Wing nut M5 SUS	1
MP535	8810002800	Screw trass head M5 × 10 SUS	4
MP536	8810000660	Screw PH M4 × 14 SUS	10
MP537	8810001480	Screw PH A M5 × 10 SUS	2
MP538	8810001690	Screw PH B0 3 × 8 (PL) [AT-130E]	6
	8810001690	Screw PH B0 3 × 8 (PL) [AT-130/140]	9
MP539	8830000240	Nut M4 SUS	10
MP541	8930006570	Sealing washer (D)	1
MP544	8930006570	Sealing washer (D)	1
MP545	8930006550	Sealing washer (A) [AT-130/E] only	1
MP546	8810000620	Screw PH M3 × 16 SUS [AT-130/E] only	1
MP547	8830000230	Nut M3 SUS [AT-130/E] only	1
MP548	8930010360	Spacer D=4 L=28 T=0.6 [AT-130E] only	3
MP549	8810004260	Screw PH B1 M3 × 40 [AT-130E] only	3
MP550	8850000130	Flat washer M3 NI BS [AT-130E] only	3
MP551	8950001980	Cable tie-140 [AT-140] only	1
MP552	6910014570	Super ground (FGA13-08B) [AT-140] only	1
MP553	6910014570	Super ground (FGA13-08B) [AT-140] only	1


[TUNER UNIT]

REF. NO.	ORDER NO.	DESCRIPTION	QTY.
MP1	8930006910	Connector angle [AT-130/E] only	1
MP2	8510000821	RF case (B)-1	1
MP3	8510000840	RF case (B) upper cover	1
MP4	8510001081	Shield case (A)-1	1
MP5	8510001101	Shied case (A) cover (A)-1	1
MP6	8510004810	545 shield case	1
MP7	8510002020	MIX shield case	1
MP8	8410000100	DR heatsink	1
MP9	8810003170	Setscrew A M3 × 8 [AT-130/E] only	2
MP10	8810003160	Setscrew A M3 × 6 [AT-130/E] only	2
MP11	8810003180	Setscrew A M3 × 10	1
MP12	8830000190	Nut M3 NI BS	1
MP13	8510003350	RF case (B) lower case (A)	1
MP16	8860000130	Earth lug B5 (M3) AG BS [AT-130/E] only	1
MP17	8860000130	Earth lug B5 (M3) AG BS [AT-130E] only	1
MP18	8930000230	Stat (S) [AT-130E] only	1
MP19	8830000190	Nut M3 NI BS [AT-130E] only	1
MP20	8930017190	Earth spring (F) [USA-1][EUR-1] only	2
MP21	8810003290	Setscrew B M3 × 6 [AT-130E] only	1
MP22	8930004041	TR terminal-1 [AT-140] only	1
MP23	8930004041	TR terminal-1 [AT-140] only	1

[ACCESSORIES]


REF. NO.	ORDER NO.	DESCRIPTION	QTY.
W701	8900004200	Cable OPC-412	1
MP701	8820000440	U-bolt A SUS	2
MP702	8010000110	U-bolt plate	2
MP703	8830000260	Nut M6 SUS	4
MP704	8850000510	Spring washer M6 SUS	4
MP705	8850000190	Flat washer M6 SUS	4
MP706	8810001500	Screw PH A M6 × 30 SUS	4
MP707	8810003500	Hexagon bolt M6 × 50 SUS	4
MP708	8850000200	Flat washer M6 SUS	8
MP709	8830000260	Nut M6 SUS	4
MP710	8850000510	Spring washer M6 SUS	4
MP711	6950000010	Waterproof cap	1

Screw abbreviations A,B0,B1: Self-tapping
 PH: Pan head BS: Brass
 NI: Nickel SUS: Stainless

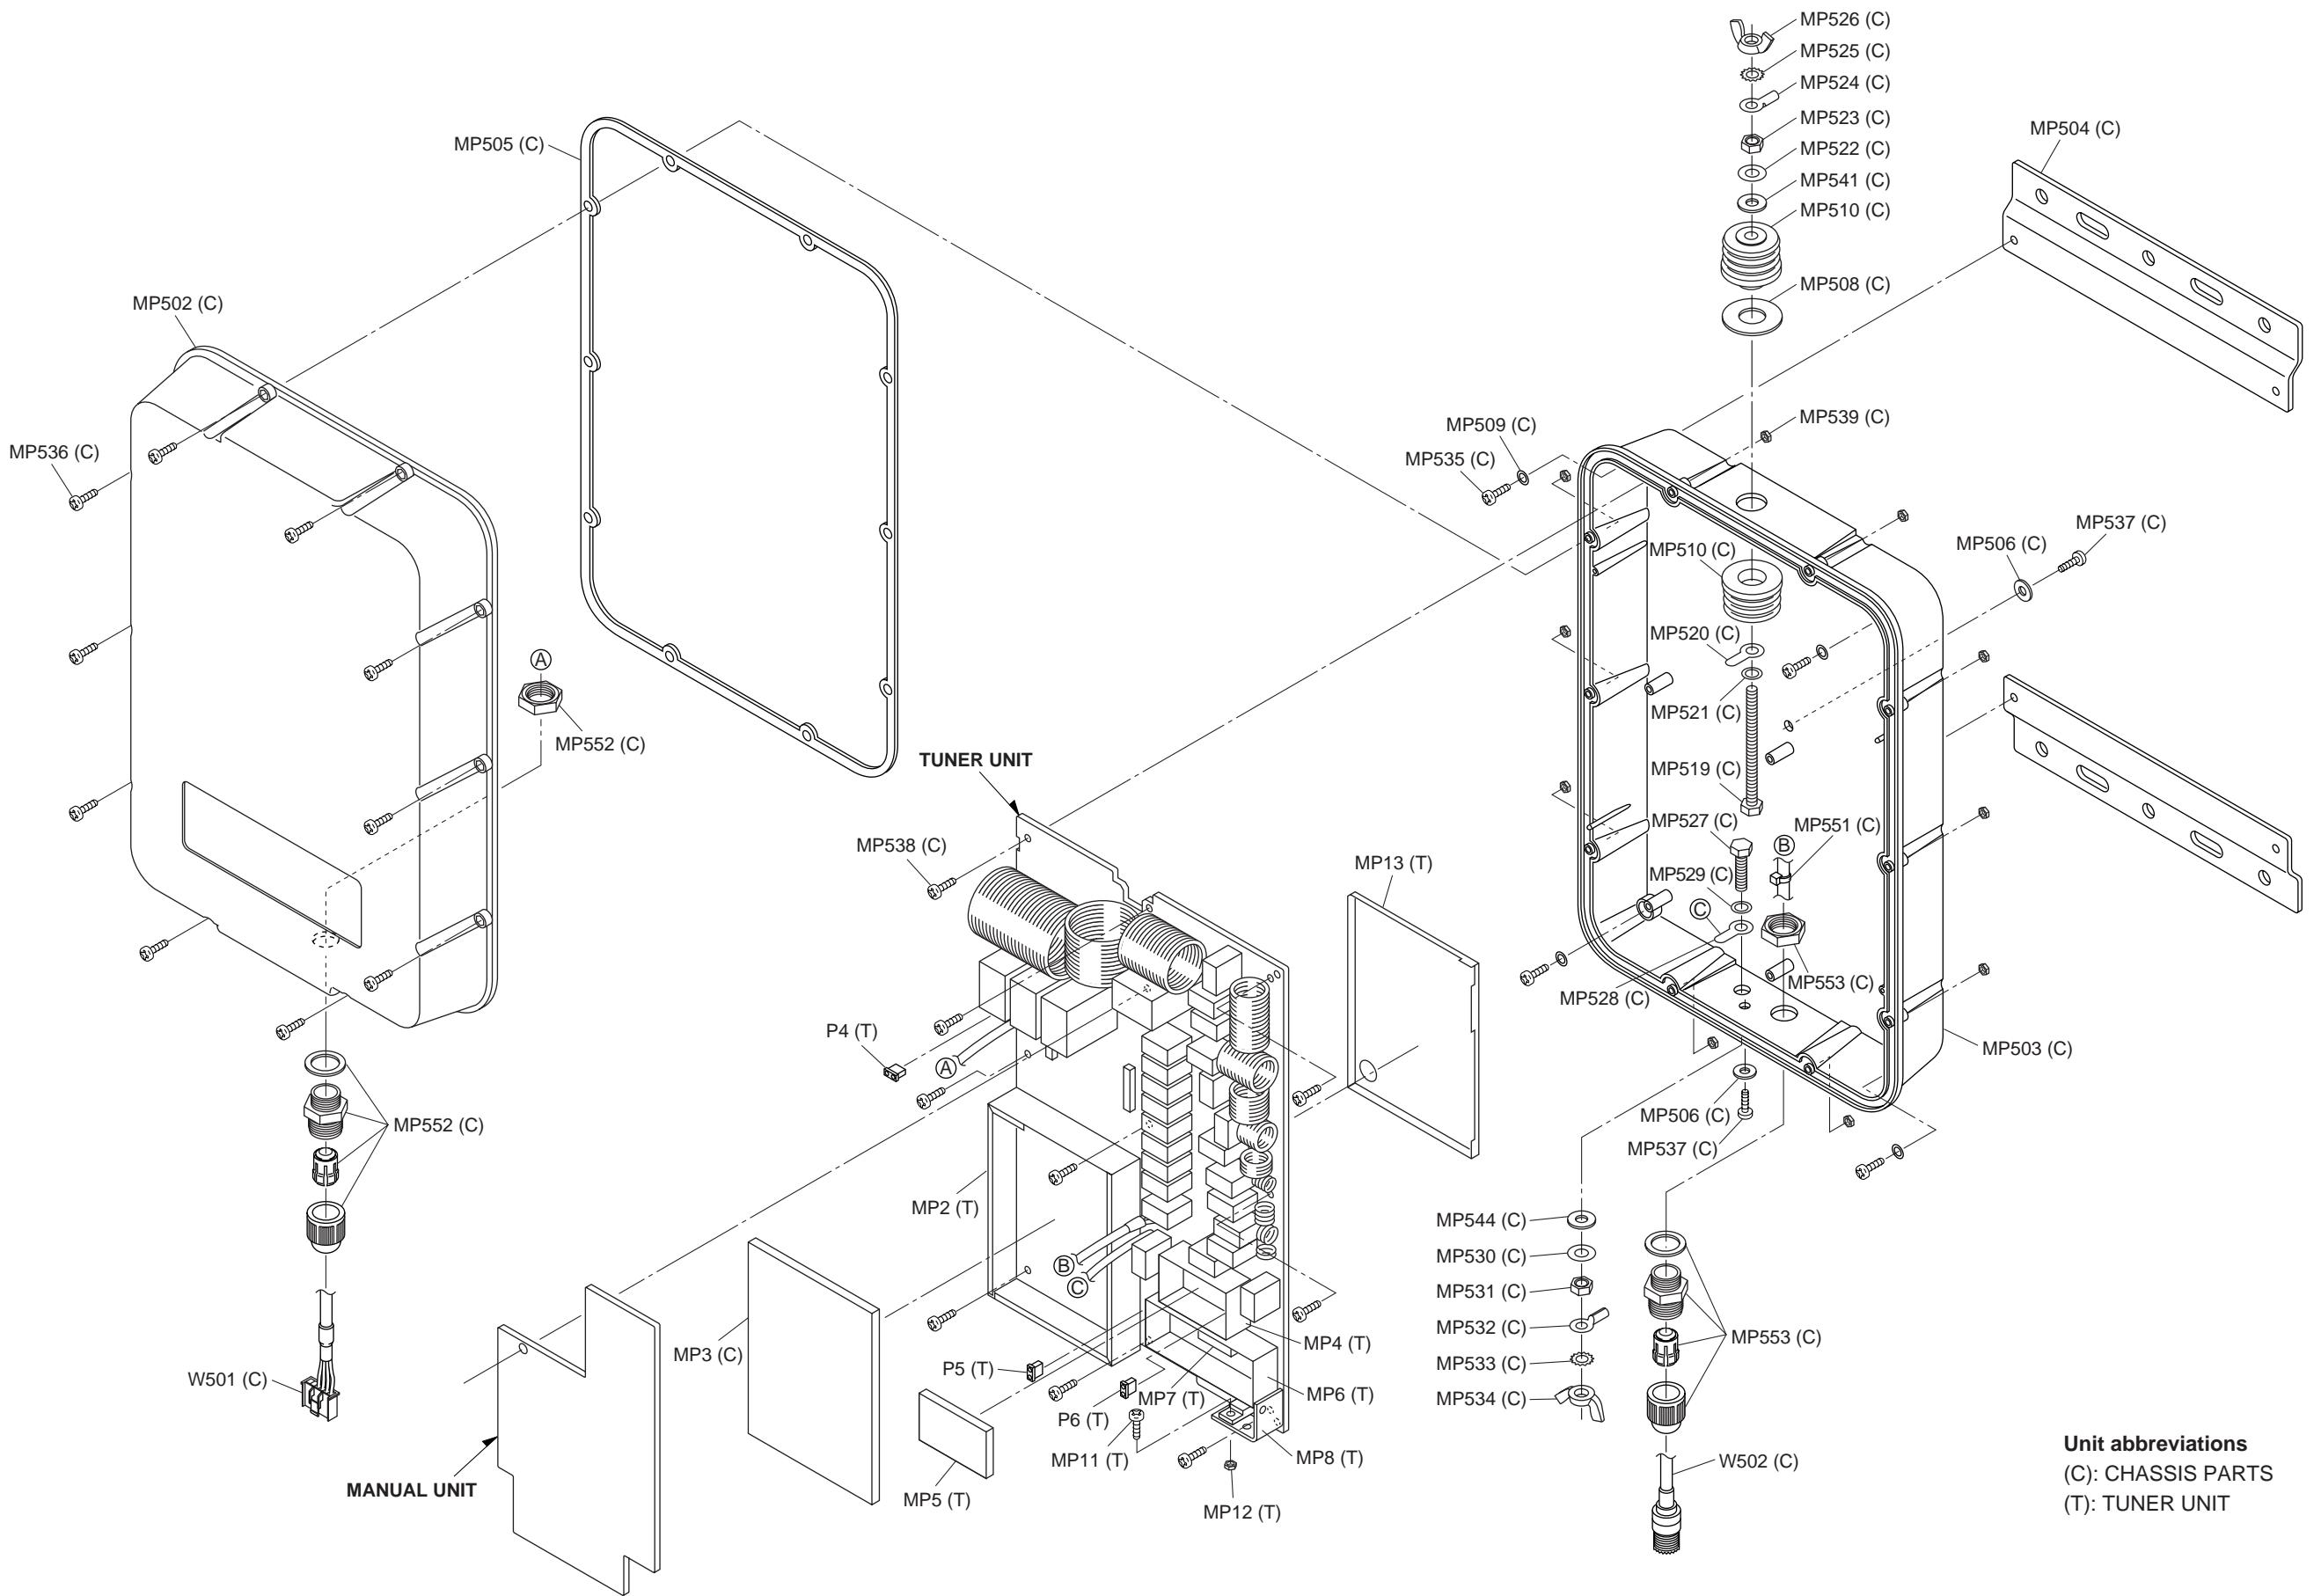


SECTION 7 SEMI-CONDUCTOR INFORMATION

• TRANSISTORS AND FET'S

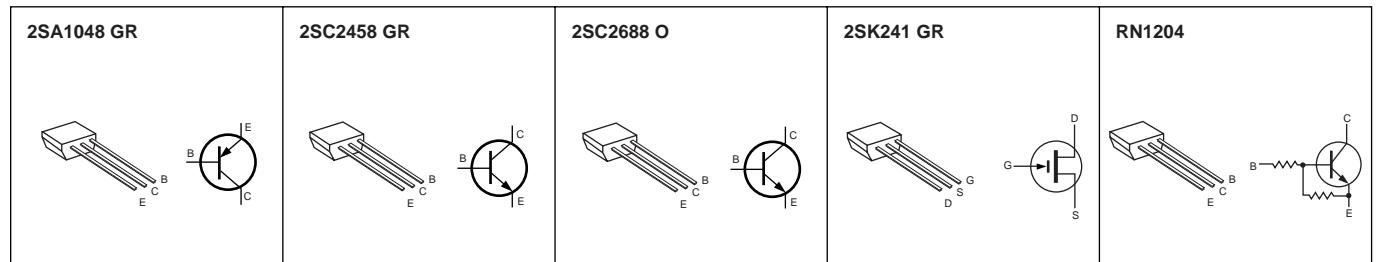


• DIODES

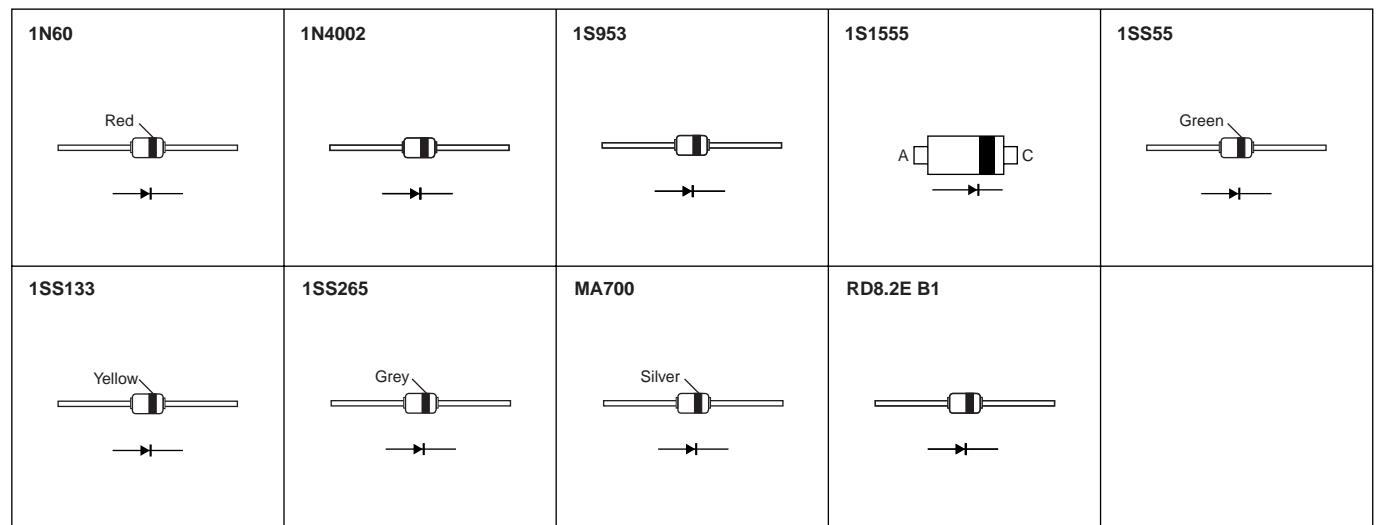


SECTION 8 BOARD LAYOUTS


8-1 TUNER UNIT

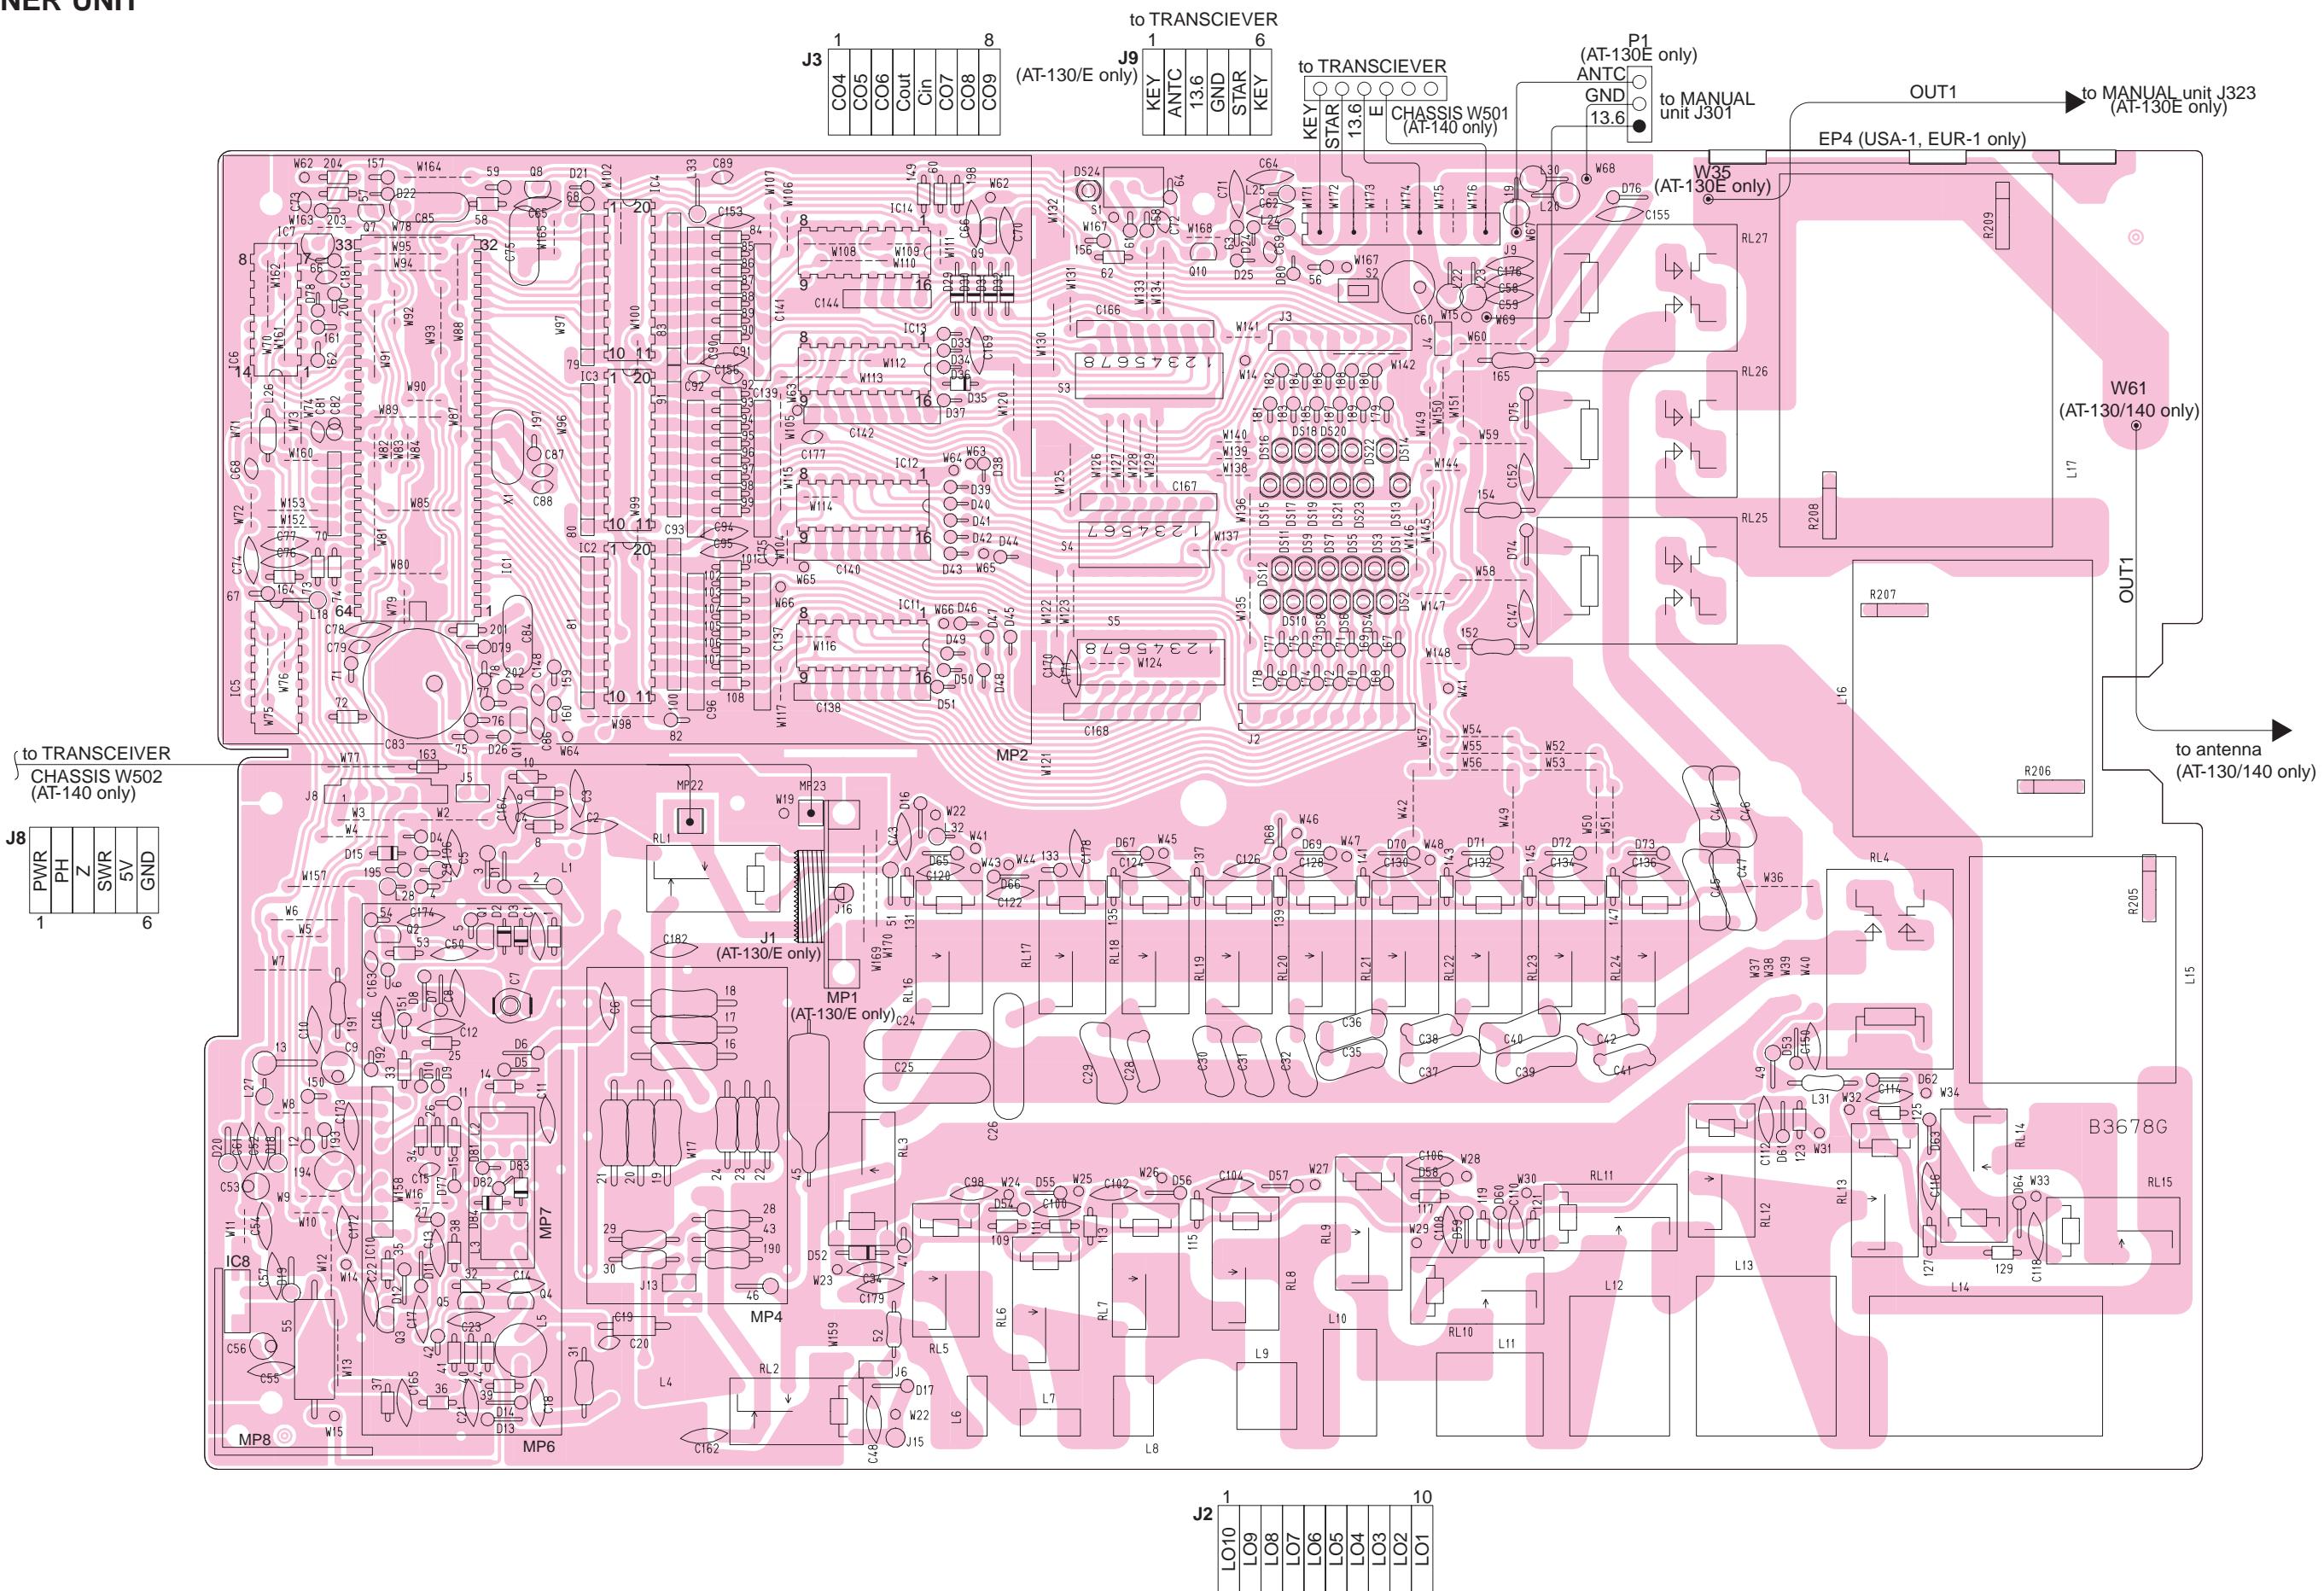


8-2 MANUAL UNIT (AT-130E ONLY)

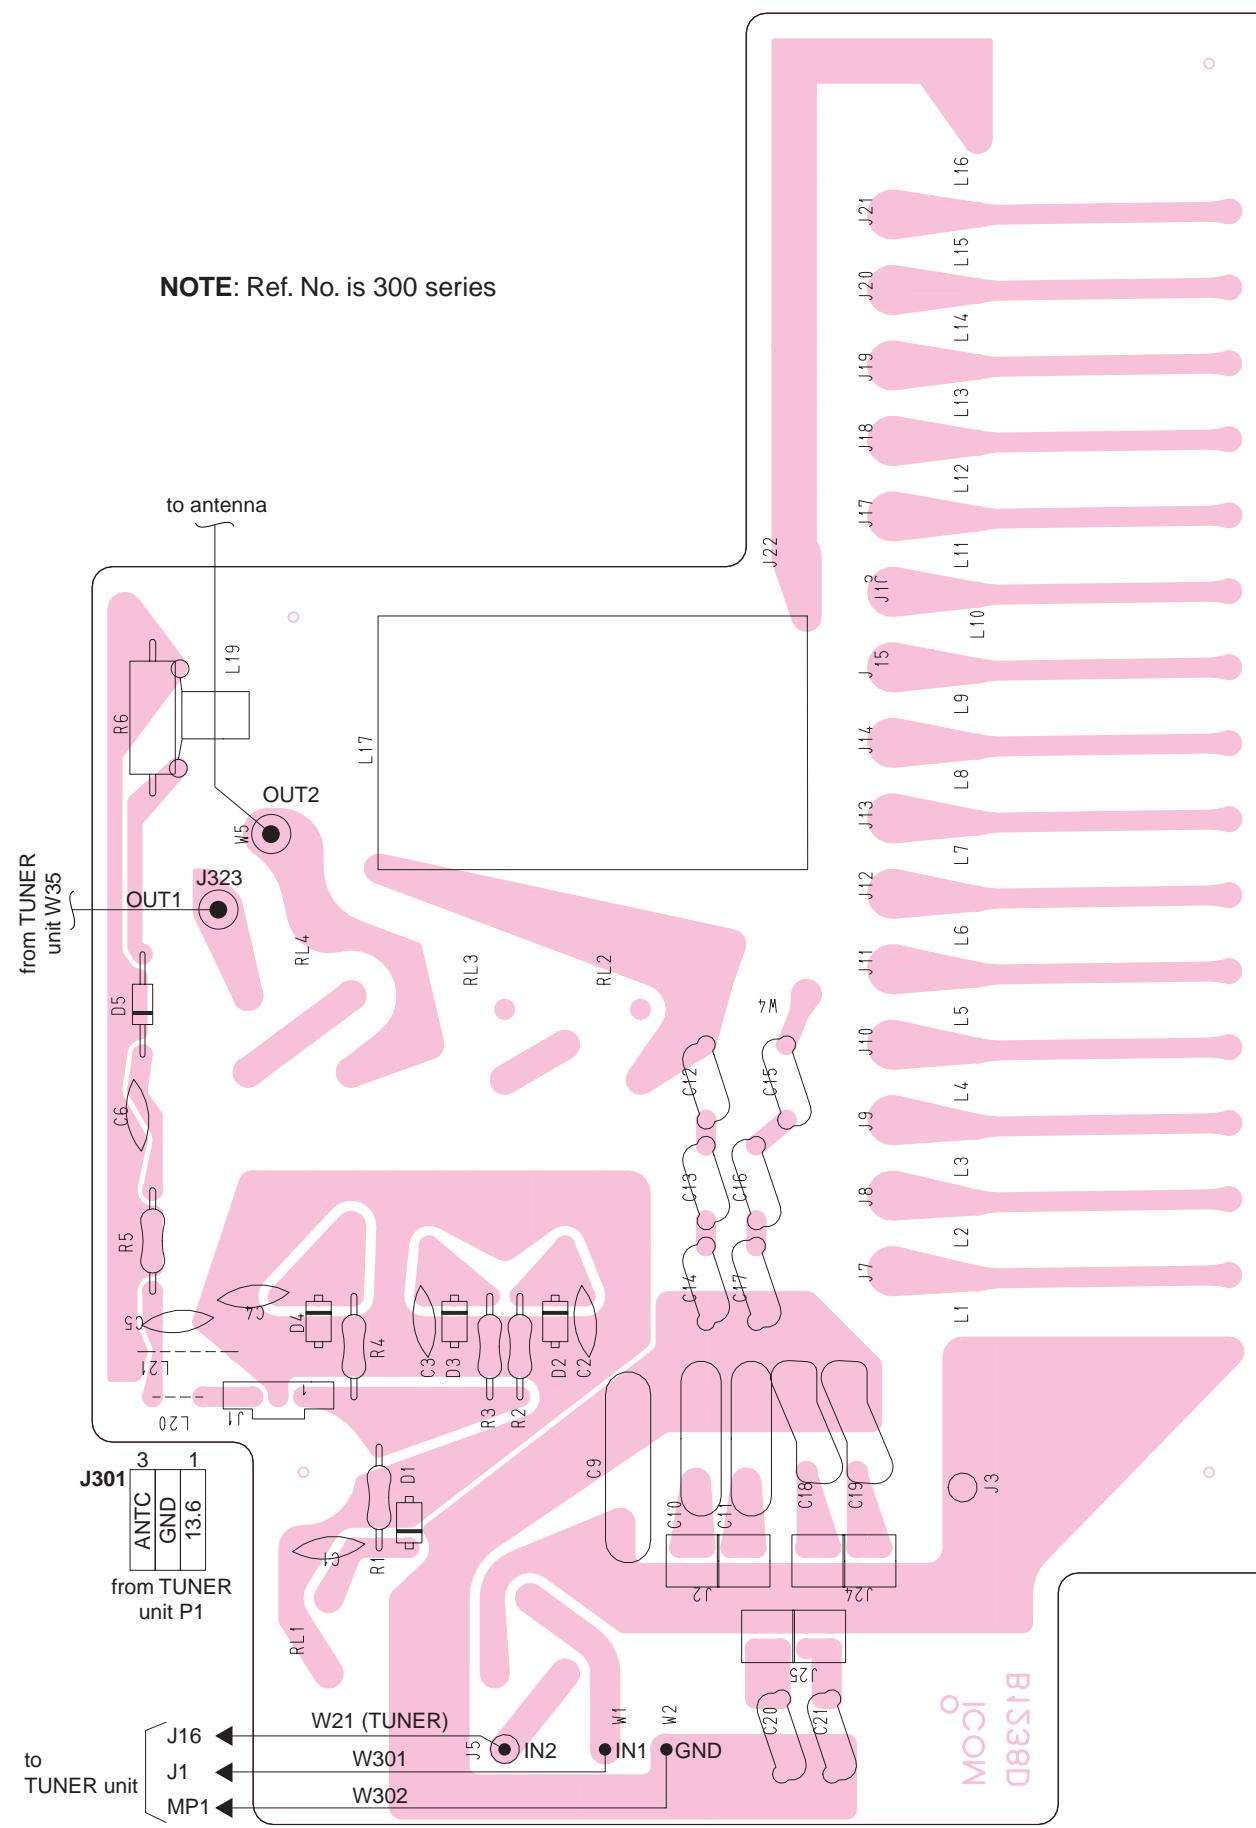

SECTION 9 BLOCK DIAGRAM

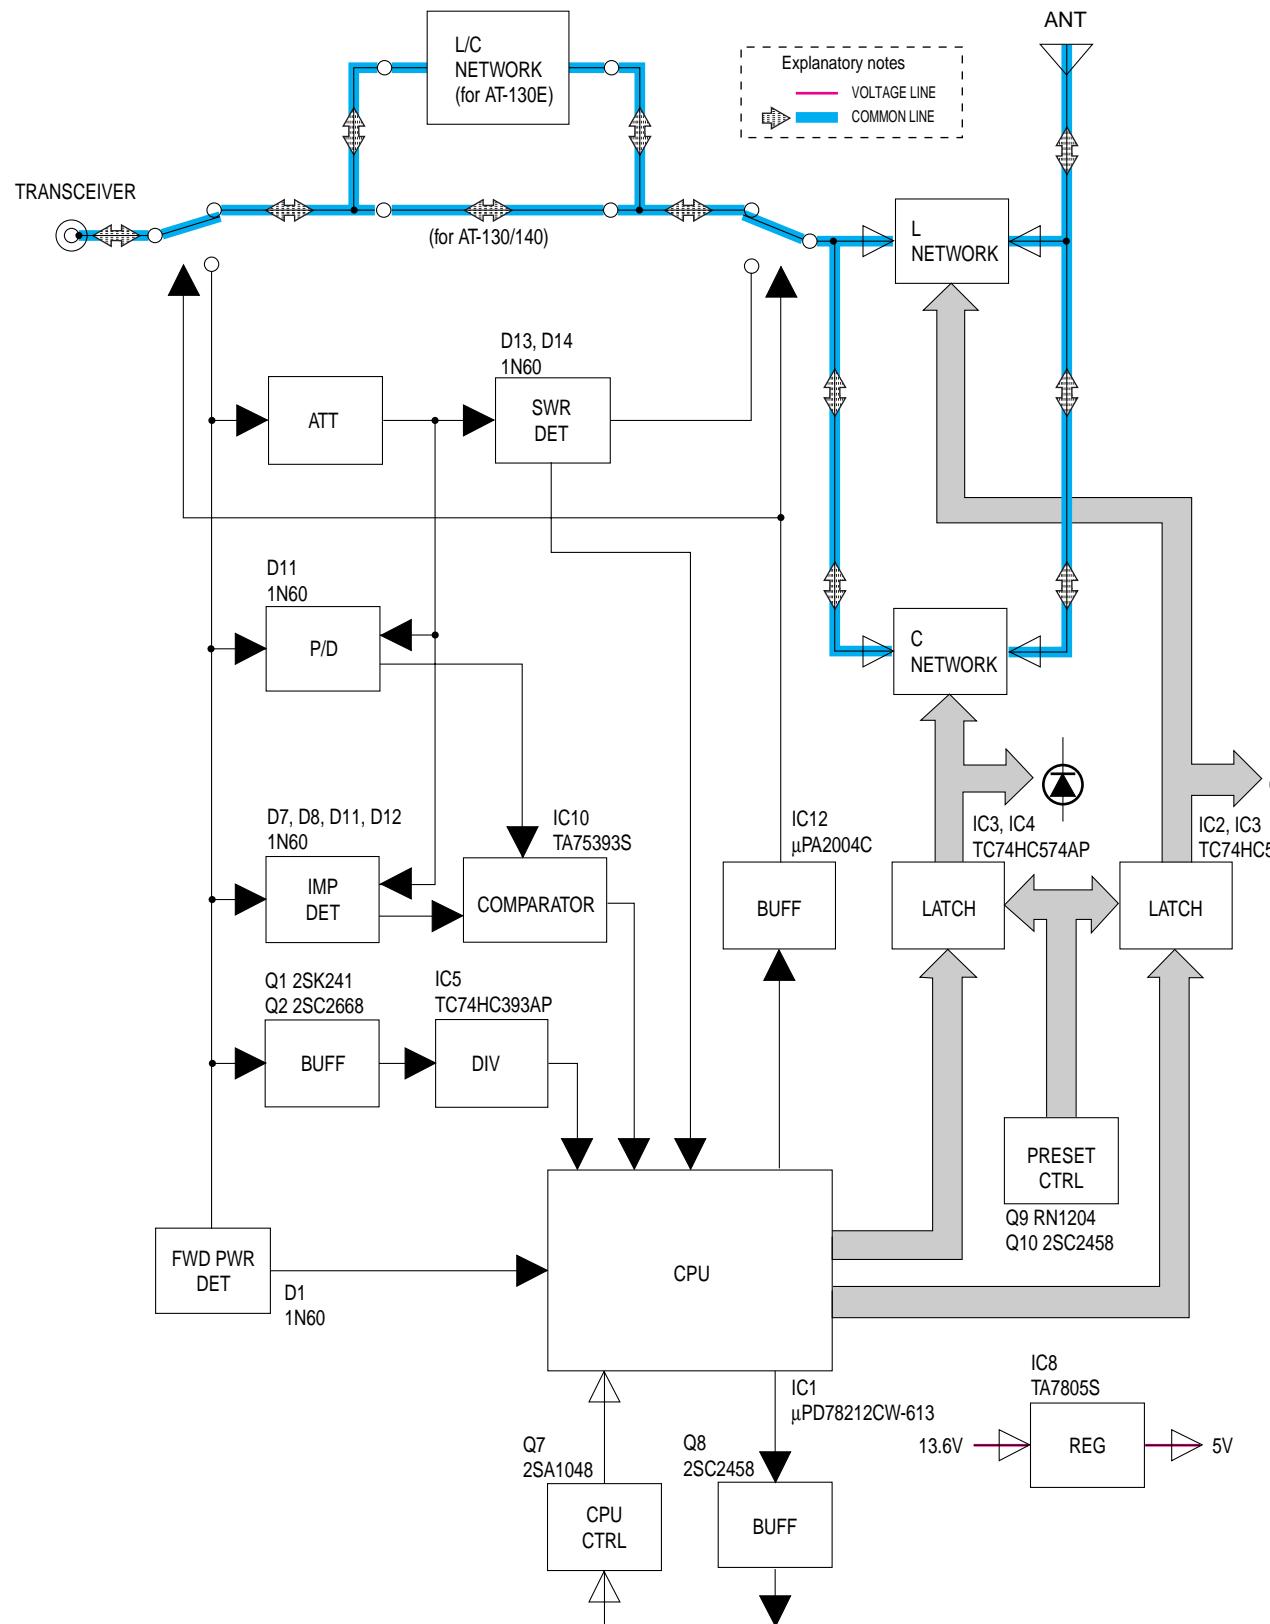

SECTION 10 VOLTAGE DIAGRAM

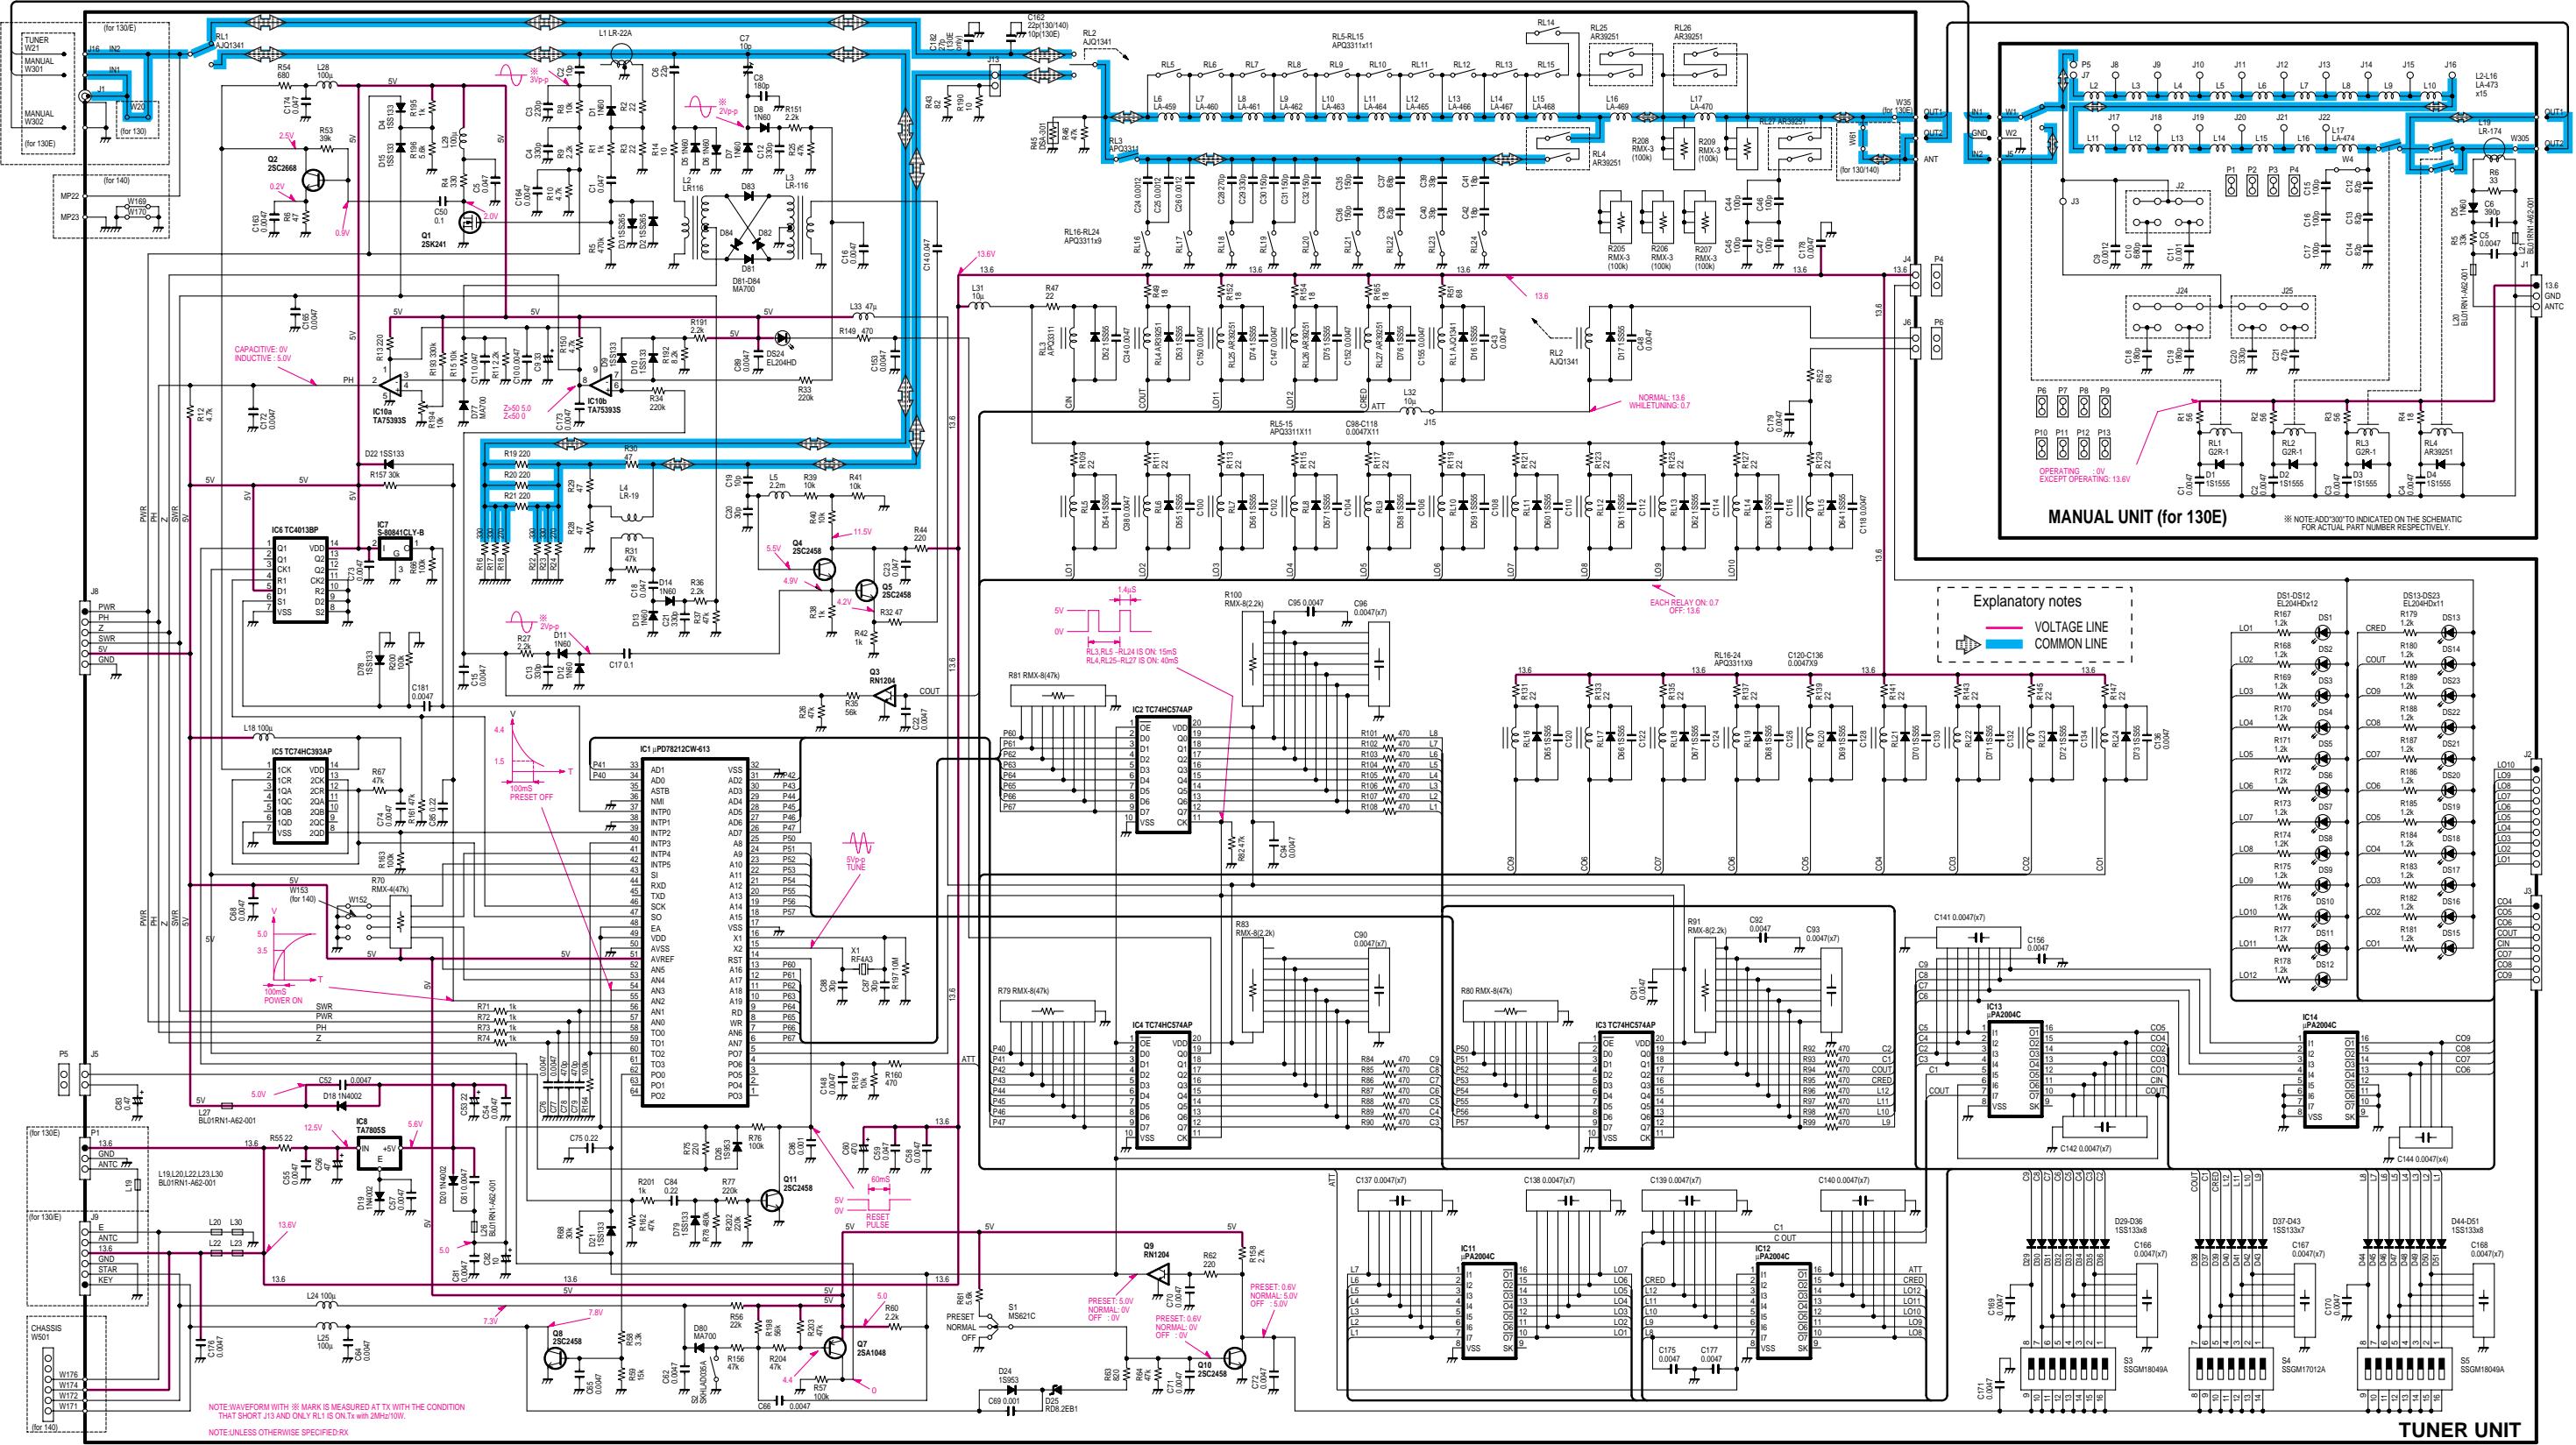

Icom Inc.

1-1-32, Kamiminami, Hirano-ku, Osaka 547-0003, Japan
Phone : +81 (06) 6793 5302
Fax : +81 (06) 6793 0013
URL : <http://www.icom.co.jp/world/index.html>

Icom America Inc.

<Corporate Headquarters>
2380 116th Avenue N.E., Bellevue, WA 98004, U.S.A.
Phone : +1 (425) 454-8155 Fax: +1 (425) 454-1509
URL : <http://www.icomamerica.com>
E-mail : sales@icomamerica.com
<Customer Service>
Phone : +1 (425) 454-7619

Icom Canada

Glenwood Centre #150-6165
Highway 17 Delta, B.C., V4K 5B8, Canada
Phone : +1 (604) 952-4266 Fax: +1 (604) 952-0090
URL : <http://www.icomcanada.com>
E-mail : info@icomcanada.com

Icom (Australia) Pty. Ltd.

A.B.N. 88 006 092 575
290-294 Albert Street, Brunswick, Victoria, 3056, Australia
Phone : +61 (03) 9387-0666 Fax: +61 (03) 9387-0022
URL : <http://www.icom.net.au>
E-mail : sales@icom.net.au

Icom New Zealand

146A Harris Road, East Tamaki,
Auckland, New Zealand
Phone : +64 (09) 274 4062 Fax: +64 (09) 274 4708
URL : <http://www.icom.co.nz>
E-mail : inquiries@icom.co.nz

Beijing Icom Ltd.

1305, Wanshang Plaza, Shijingshan Road, Beijing China
Phone : +86 (010) 6866 6337 Fax: +86 (010) 6866 3553
URL : <http://www.bjicom.com>
E-mail : bjicom@bjicom.com

Icom (Europe) GmbH

Communication Equipment
Himmelgeister Str. 100, D-40225 Düsseldorf, Germany
Phone : +49 (0211) 346047 Fax: +49 (0211) 333639
URL : <http://www.icomeurope.com>
E-mail : info@icomeurope.com

Icom Spain S.L.

Ctra. de Gracia a Manresa Km. 14,750
08190 Sant Cugat del Vallès Barcelona, SPAIN
Phone : +34 (93) 590 26 70 Fax: +34 (93) 589 04 46
URL : <http://www.icomspain.com>
E-mail : icom@icomspain.com

Icom (UK) Ltd.

Unit 9, Sea St., Herne Bay, Kent, CT6 8LD, U.K.
Phone : +44 (01227) 741741 Fax: +44 (01227) 741742
URL : <http://www.icomuk.co.uk>
E-mail : info@icomuk.co.uk

Icom France S.a

Zac de la Plaine, 1, Rue Brindejonc des Moulinais
BP 5804, 31505 Toulouse Cedex, France
Phone : +33 (5) 61 36 03 03 Fax: +33 (5) 61 36 03 00
URL : <http://www.icom-france.com>
E-mail : icom@icom-france.com

Asia Icom Inc.

6F No.68, Sec. 1 Cheng-Teh Road, Taipei, Taiwan, R.O.C.
Phone : +886 (02) 2559 1899 Fax: +886 (02) 2559 1874
URL : <http://www.asia-icom.com>
E-mail : sales@asia-icom.com

Icom Polska

Sopot, 3 Maja 54 Poland
Phone : +48 (58) 550 7135 Fax: +48 (58) 551 0484
E-mail : icompolska@icompolska.com.pl

Count on us!