

# SERVICE MANUAL

**DUAL BAND FM TRANSCEIVER** 

IC-32A IC-32AT IC-32E

> Downloaded by RadioAmateur.EU

Icom Inc.

### INTRODUCTION

This service manual describes the latest service information for the IC-32A/AT/E DUAL BAND FM TRANSCEIVER at the time of going to press.

Six versions of the IC-32A/AT/E have been designed. This service manual covers each version.

VERSION NO.	VERSION	RAI	JENCY NGE Hz]	ST	UNING INITIAL STEP OFFSET [kHz] [MHz]		ENCODERS	
		VHF	UHF	VHF	UHF	VHF	UHF	,
#03	Europe (IC-32E)	144~146	430~440	25	25	0.6	7.6	Tone call
#04	Italy (IC-32E)	144~148	430~440	25	25	0.6	7.6	Tone call
#05	U.S.A. (IC-32AT)	144~148	440~450	15	25	0.6	5.0	CTCSS/DTMF
#06	U.S.A. (IC-32A)	144~148	440~450	15	25	0.6	5.0	_
#07	Australia (IC-32A)	144~148	430~440	25	25	0.6	5.0	_
#09	Asia (IC-32AT)	144~148	430~440	15	25	0.6	5.0	CTCSS/DTMF

### DANGER

**NEVER** connect the transceiver to an AC outlet or to a DC power supply that uses more than 16 V. This will ruin the transceiver.

**DO NOT** expose the transceiver to rain, snow or any liquids.

**DO NOT** reverse the polarities of the power supply when connecting the transceiver.

**DO NOT** apply an RF signal of more than 20 dBm (100 mW) to the antenna connector. This could damage the transceiver's front end.

### REPAIR NOTE

- Make sure a problem is internal before disassembling the transceiver.
- DO NOT open the transceiver until the transceiver is disconnected from a power source.
- DO NOT force any of the variable components. Turn them slowly and smoothly.
- DO NOT short any circuits or electronic parts. An insulated tuning tool MUST be used for all adjustments.
- DO NOT keep power ON for a long time when the transceiver is defective.
- DO NOT transmit power into a signal generator or a sweep generator.
- ALWAYS connect a 30 dB~40 dB attenuator between the transceiver and a deviation meter or spectrum analyzer when using such test equipment.
- READ the instructions of test equipment thoroughly before connecting equipment to the transceiver.



### ORDERING PARTS

Be sure to include the following four points when ordering replacement parts:

- 1. Component part number and name
- Equipment model name and unit name
- 10-digit order numbers for mechanical parts
- Quantity required

### <SAMPLE ORDER>

IC  $\mu$ PD4094BG IC-32A MAIN UNIT — 2 pieces Screw PH BO 2 × 31.5 ZK IC-32E Front panel 8810004000 4 pieces

Addresses are provided on the inside back cover for your convenience.

### for free by RadioAmateur.eu

### **TABLE OF CONTENTS**

SECTION	1	SPECIFICATIONS	1 — 1
SECTION	<b>2</b> 2 · 1 2 · 2		
SECTION	3	BLOCK DIAGRAM	3 — 1
SECTION	4 - 1 4 - 2 4 - 3 4 - 4 4 - 5 4 - 6 4 - 7	TRANSMITTER CIRCUITS.  VHF PLL CIRCUITS.  UHF PLL CIRCUITS.  POWER SUPPLY CIRCUITS.  OTHER CIRCUITS.	4 — 1 4 — 2 4 — 3 4 — 3 4 — 4 4 — 4
SECTION	<b>5</b> 5 - 1 5 - 2		
SECTION	6 - 1 6 - 2 6 - 3	RECEIVER ADJUSTMENT	6 — 1 6 — 3
SECTION	7 7-1 7-2 7-3 7-4 7-5 7-6 7-7	MAIN UNIT RF UNIT (1) RF UNIT (2) U-VCO UNIT V-VCO UNIT	$1 \sim 12$ $7 - 1$ $7 - 2$ $7 - 4$ $7 - 6$ $7 - 8$ $7 - 10$ $7 - 11$ $7 - 12$
SECTION	8	PARTS LIST 8—	1 ~ 8
SECTION	9 - 1 9 - 2 9 - 3 9 - 4 9 - 5	UT-40 VOLTAGE/CIRCUIT DIAGRAM UT-40 BOARD LAYOUTS UT-40 BLOCK DIAGRAM	
SECTION	10	VOLTAGE DIAGRAMS 10 —	1~2

### SECTION 1 SPECIFICATIONS

#### GENERAL

Frequency coverage

GUARANTEED OPERATIONAL RANGE RANGE VERSION TRANSMITTER TRANSCEIVER RECEIVER 144.00 ~ 148.00 440.00 ~ 450.00 138.00 ~ 174.00 440.00 ~ 450.00 140.00 ~ 150.00 440.00 ~ 450.00 IC-32A/AT (U.S.A. version) 144.00 ~ 148.00 430.00 ~ 440.00 144.00 ~ 148.00  $144.00 \sim 148.00$ IC-32A (Australia version) 430.00~440.00 430.00~440.00 138.00 ~ 174.00 430.00 ~ 440.00 140.00 ~ 150.00 430.00 ~ 440.00 144.00~148.00 IC-32AT (Asia version) 430.00~440.00 144.00 ~ 146.00 430.00 ~ 440.00 144.00 ~ 146.00 430.00 ~ 440.00 144.00 ~ 146.00 430.00 ~ 440.00 IC-32E (Europe version) 140.00 ~ 150.00 430.00 ~ 440.00 138.00 ~ 174.00 430.00 ~ 440.00 144.00 ~ 148.00 IC-32E (Italy version) 430.00~440.00

(Unit: MHz)

• Mode : F3 (FM)

• Tuning step increment

IC-32A/AT 5, 10, 15, 20, or 25 kHz
IC-32E 12.5 or 25 kHz

Antenna impedance : 50 Ω unbalanced

Power supply requirement : 5.5~16.0 V DC (from the bottom terminal)

12.0~16.0 V DC (from [DC IN 13.8 V] jack)

• Current drain (at 13.2 V DC)

TX/RX	DESCRIPTION	VHF	UHF	
Donaire	Power saved typical	10 mA	12 mA 250 mA	
Receive	Max. audio output	250 mA		
T	HIGH power	2.0 A	2.2 A	
Transmit	LOW power	900 mA	1.0 A	

• Usable temperature range :  $-10^{\circ}\text{C} \sim +60^{\circ}\text{C} (+14^{\circ}\text{F} \sim +140^{\circ}\text{F})$ 

• Frequency stability :  $\pm 10 \text{ ppm} (-10^{\circ}\text{C} \sim +60^{\circ}\text{C}, +14^{\circ}\text{F} \sim +140^{\circ}\text{F})$ 

Dimensions and weight:

ATTACHED BATTERY PACK	DIM	WEIGHT		
ATTACHED BATTERT PACK	W	Н	D	Unit: g (lb)
With BP-70 (U.S.A. version)	65 (2.6)	180.5 (7.1)	35 (1.4)	590 (1.3)
With BP-4 (Asia version)	65 (2.6)	169.0 (6.7)	35 (1.4)	545 (1.2)
With BP-3 (Other versions)	65 (2.6)	159.0 (6.3)	35 (1.4)	510 (1.1)

#### TRANSMITTER

Output power

	VHF	UHF
HIGH	5.5 W	5.0 W
LOW	1.0 W	1.0 W

Modulation system : Variable reactance frequency modulation

• Max. frequency deviation : ±5 kHz

Spurious emissions
 ∴ Less than −60 dB

• Microphone impedance : 2 kΩ

### RECEIVER

Receive system
 Intermediate frequencies
 Sensitivity
 Double-conversion superheterodyne
 1st 30.875 MHz 2nd 455 kHz
 Less than 0.25 μV for 12 dB SINAD

• Squelch sensitivity (threshold) : Less than  $0.158~\mu V$ 

• Selectivity : Less than ±7.5 kHz/-6 dB

More than  $\pm 15 \text{ kHz/} - 60 \text{ dB}$ 

Spurious response rejection : Less than -60 dB
 Intermodulation rejection : Less than -50 dB

• Audio output power : More than 400 mW at 10 % distortion with an 8  $\Omega$  load


Audio output impedance : 8 Ω

All stated specifications are subject to change without notice or obligation.

### SECTION 2 OUTSIDE AND INSIDE VIEWS


#### 2-1 OUTSIDE VIEWS

#### • TOP PANEL

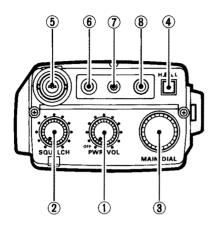


- 1 POWER/VOLUME CONTROL [PWR/VOL]
- ② SQUELCH CONTROL [SQUELCH]
- 3 MAIN DIAL [MAIN DIAL]
- (4) RF OUTPUT POWER SWITCH [H/L]
- (5) ANTENNA CONNECTOR
- (6) EXTERNAL SPEAKER JACK [EXT SP]
- 7 EXTERNAL MICROPHONE JACK [MIC]
- (8) EXTERNAL DC POWER JACK [DC IN 13.8 V]


#### • FRONT AND SIDE PANELS

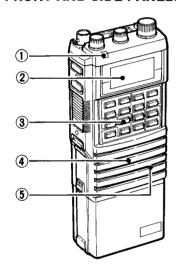

- ① TRANSMIT INDICATOR [TX]
- 2 FUNCTION DISPLAY
- (3) KEYBOARD
- 4 SPEAKER
- (5) MICROPHONE
- ⑥ MONITOR SWITCH [MONITOR]
- TUNCTION SWITCH [FUNCTION]
- (8) PTT SWITCH
- 9 LIGHT SWITCH [LIGHT]
- (1) BATTERY PACK RELEASE BUTTON [RELEASE]

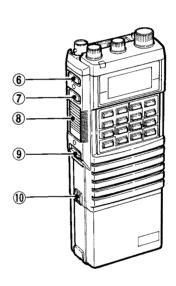


#### FUNCTION DISPLAY

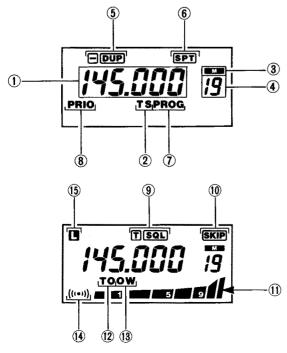


- 1 FREQUENCY DISPLAY
- ② TS INDICATOR "TS"
- 3 MEMORY MODE INDICATOR "M"
- **4** MEMORY CHANNEL INDICATOR
- (5) DUPLEX INDICATORS "-" "DUP"
- **6** FULL DUPLEX INDICATOR "SPT"
- 7 PROGRAMMED SCAN INDICATOR "PROG"
- 8 PRIORITY WATCH INDICATOR "PRIO"
- (9) TONE AND SQUELCH INDICATORS "T" "SQL"
- (10) MEMORY SKIP INDICATOR "SKIP"
- (1) S/RF INDICATOR
- 12 TONE SETTING INDICATOR "TO"
- (3) OFFSET FREQUENCY WRITE INDICATOR "OW"
- 14 POCKET BEEP INDICATOR "(((\*)))"
- **(5)** LOCK INDICATOR "L"

# 2-2 INSIDE VIEWS


## • LOGIC UNIT

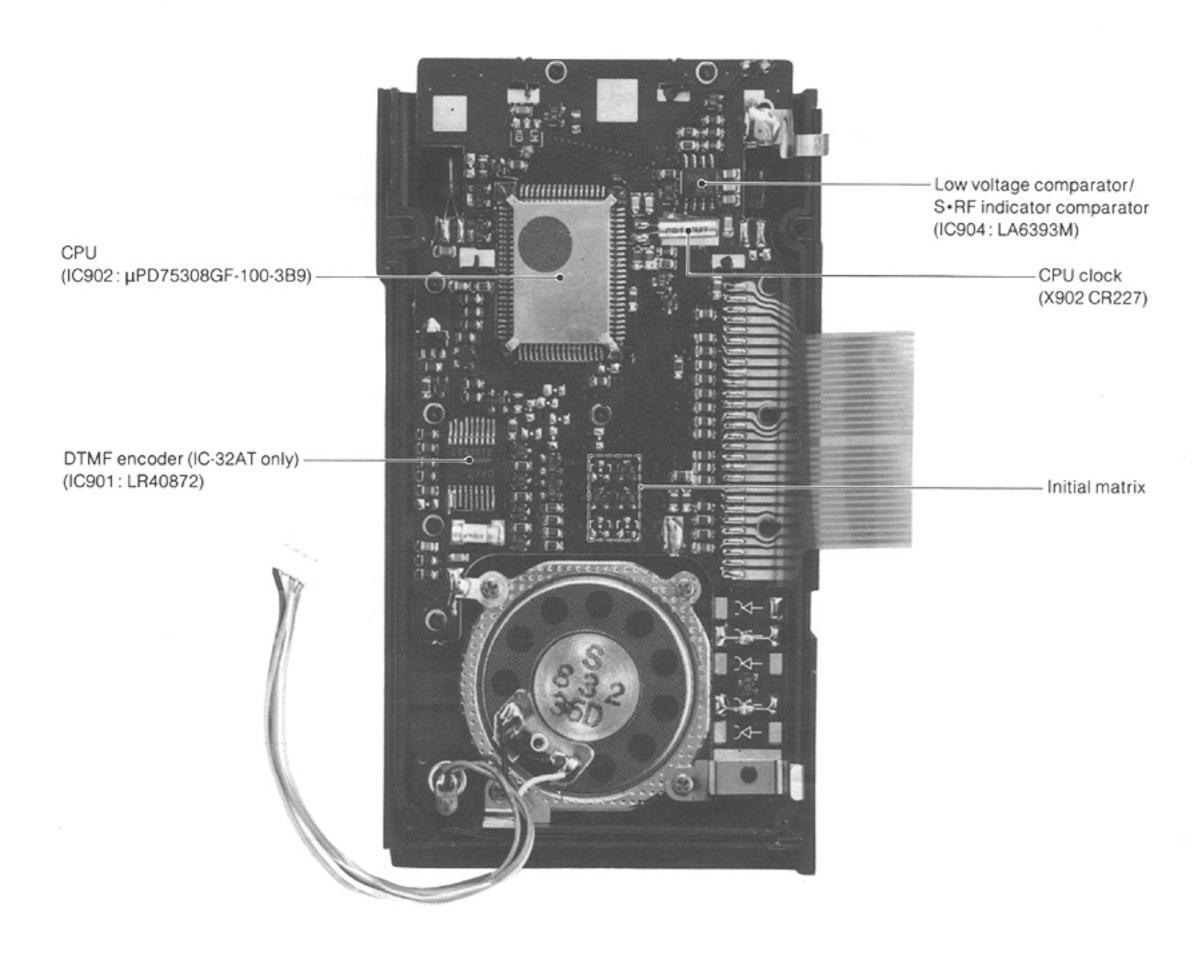


## MAIN UNIT

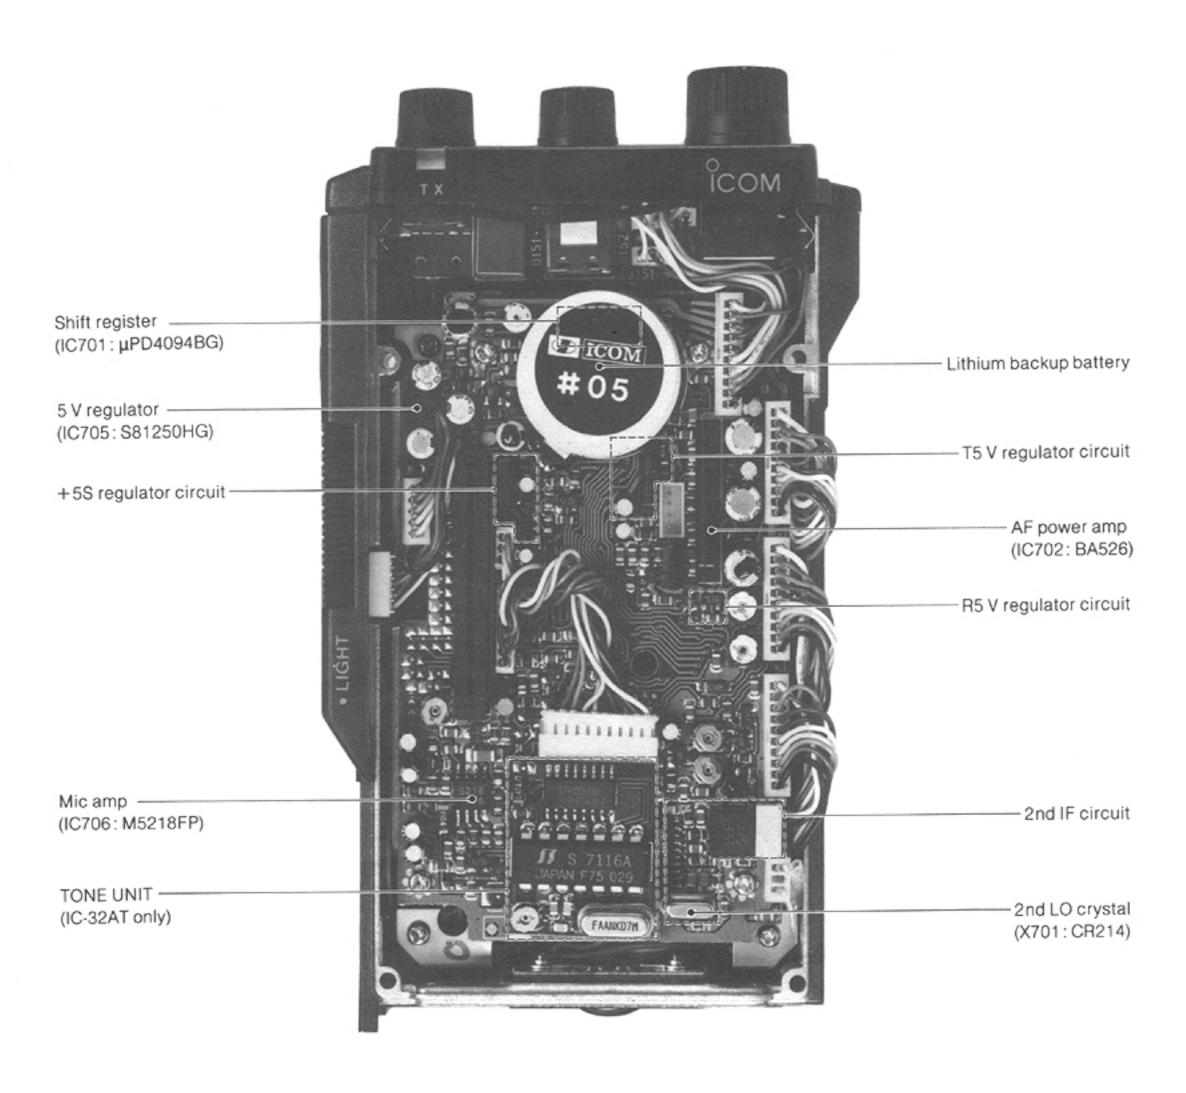

## • RF UNIT

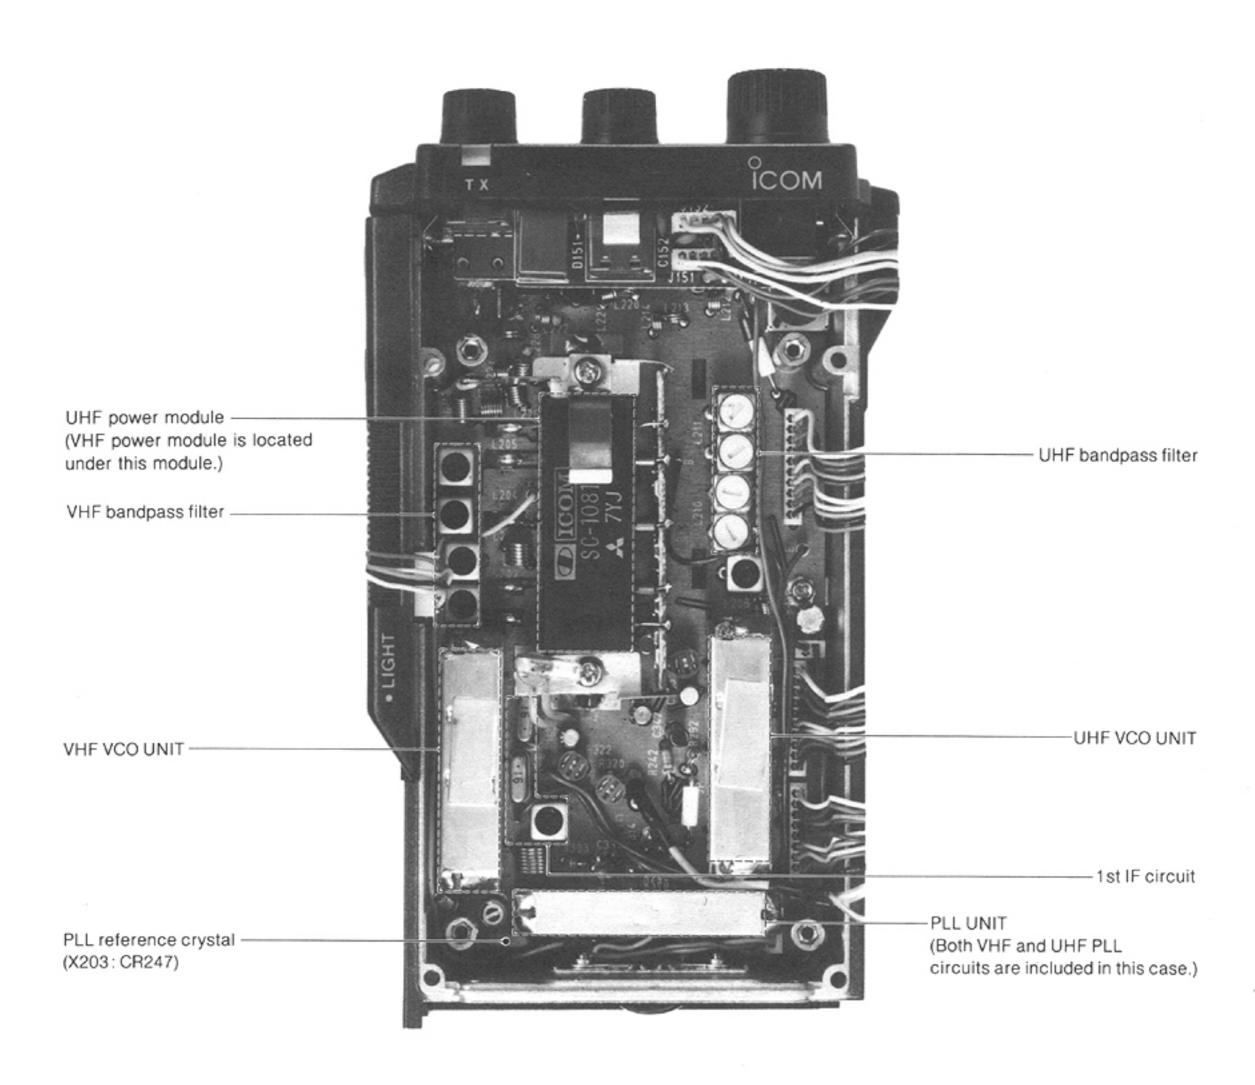

## SECTION 3 BLOCK DIAGRAM

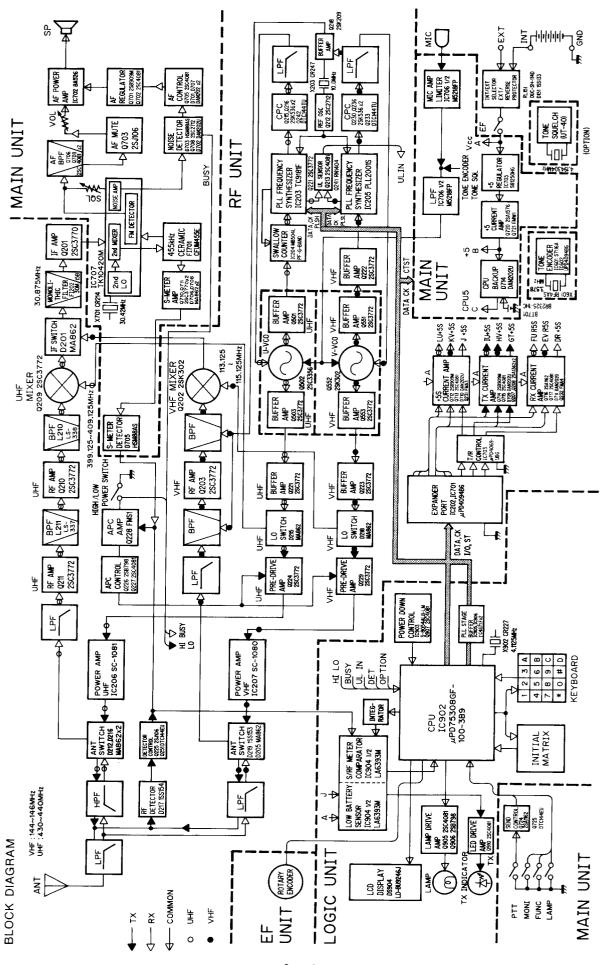

### SECTION 4 CIRCUIT DESCRIPTION

#### 4-1 RECEIVER CIRCUITS

# 4-1-1 ANTENNA SWITCHING CIRCUIT (RF UNIT)

Received signals enter the ANTENNA CONNECTOR (J210) and pass through a low-pass filter (L222, L223 and C354  $\sim$ C358). The low-pass filter is designed to filter signals higher than 450 MHz.

To separate VHF and UHF signals, a low-pass filter (L226~L228, C376~C240) for VHF and a high-pass filter (L220, L221, C346~C350) for UHF are included.

The VHF antenna switching circuit employs a  $\lambda/4$ -type diode switching system consisting of D205, D219, L206, L207 and C244 $\sim$ C246. While receiving, D205 and D219 turn OFF and receive signals are applied to the VHF RF amplifier circuit.

The UHF antenna switching circuit consists of D201, D216, L214 and C283~C285. While receiving, D212 and D216 turn OFF and receive signals are applied to the UHF RF amplifier circuit.

#### 4-1-2 VHF RF CIRCUIT (RF UNIT)

VHF receive signals from the antenna switching circuit pass through a bandpass filter consisting of D204, L205, C241 and C242. The signals are then amplified at the VHF RF amplifier (Q203). Amplified signals pass through a bandpass filter consisting of D202, D203, C231, C233, C236, L203 and L204.

# 4-1-3 VHF 1ST MIXER CIRCUIT (RF AND V-VCO UNITS)

Filtered signals are mixed with the 1st LO signal from the V-VCO UNIT at the VHF 1st mixer (Q202) for conversion to 30.875 MHz 1st IF signals.

#### 4-1-4 UHF RF CIRCUIT (RF UNIT)

UHF receive signals from the antenna switching circuit pass through a high-pass filter (C281, C282 and L212) and are then amplified at the UHF RF amplifiers (Q210 and Q211). Bandpass filters (L210 and L211) suppress out-of-band signals.

# 4-1-5 UHF 1ST MIXER CIRCUIT (RF AND U-VCO UNITS)

The filtered signals are mixed with UHF 1st LO signals from the U-VCO UNIT at the UHF 1st mixer (Q209) for conversion to 30.875 MHz 1st IF signals.

### 4-1-6 1ST IF CIRCUIT (RF AND MAIN UNITS)


1st IF signals in both the VHF and UHF bands utilize the same frequency (30.875 MHz), and the same 1st IF circuit is used.

1st IF signals from Q209 (UHF) or Q202 (VHF) are applied to a pair of mechanical crystal filters (FI202) which determine receiver selectivity. 1st IF signals amplified at Q201 are applied to an FM IC chip (IC707) on the MAIN UNIT.

IC707 contains the oscillator, mixer, limiter amplifier, and quadrature detector circuits. 1st IF signals from the RF UNIT are applied to pin 20 of IC707. Signals are mixed with the 2nd LO signal at the mixer section for conversion to 455 kHz 2nd IF signals.

2nd IF signals are output from pin 4 and pass through FI701 for removal of unwanted heterodyned signals. The filtered signals re-enter at pin 6 and are amplified in the limiter amplifier section. Amplified signals are detected at the quadrature detector section using ceramic resonator X702 for conversion to audio signals.

#### IF CIRCUIT

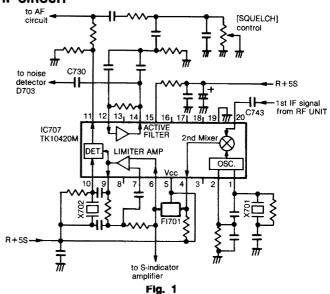

# 4-1-7 AF CIRCUIT (MAIN, EF AND LOGIC UNITS)

AF signals from pin 11 of IC707 are applied to a deemphasis circuit (R724 and C732) and are amplified at Q706 and Q709. The de-emphasis circuit is an integrator circuit with frequency characteristics of  $-6~\mathrm{dB/cot}$ 

Amplified signals pass through the AF mute switch (Q703) and VOLUME CONTROL (R151), and are then applied to the AF power amplifier (IC702).

The AF power amplifier (IC702) amplifies signals to drive the speaker (SP901).

# 4-1-8 SQUELCH CIRCUIT (MAIN AND EF UNITS)

A portion of signals from pin 11 of IC707 is applied to active filter pin 12 of IC707. The SQUELCH CONTROL (R152) is connected to the active filter input to control the input level. The active filter amplifies noise components of 20 kHz or more.

The noise components output from pin 14 are then rectified by D703 for conversion to DC voltage. When this voltage is at a "HIGH" level, Q708 turns ON, and Q705 turns OFF. Thus Q701 and Q702, the power source circuit of AF power amplifier IC702, is deactivated.

While transmitting, R+5S is not applied to Q705, thus the power source circuit (Q701 and Q702) is deactivated.

#### 4-2 TRANSMITTER CIRCUITS

# 4-2-1 MICROPHONE AMPLIFIER CIRCUIT (MAIN UNIT)

AF signals from microphone MC901 or from the EXTERNAL MICROPHONE JACK (J203) are amplified at a limiter amplifier (pin 3 of IC706). This limiter amplifier is formed by a negative feedback circuit with frequency characteristics set at +6 dB/oct. This causes the limiter amplifier to function as a pre-emphasis circuit.

AF signals from the limiter amplifier (pin 1 of IC706) are applied to a splatter filter (pin 6 of IC706) for removing harmonic distortion components higher than 3 kHz. The output signal from the splatter filter (pin 7 of IC706) is applied to D552 through R781 (VHF) or applied to D501 through R779 (UHF) for performing frequency modulation.

# 4-2-2 VHF BUFFER AMPLIFIER CIRCUIT (V-VCO AND RF UNITS)

VHF signals from the V-VCO UNIT are amplified at buffer amplifiers Q553 and Q223, pass through transmit and receive switching diode D218, and are amplified at driver Q229, thus obtaining drive power.

# 4-2-3 VHF POWER AMPLIFIER CIRCUIT (RF UNIT)

Amplified signals at Q229 are power amplified at IC207 and obtain more than 5.5 W (when HIGH is selected) or 1 W (when LOW is selected). Output power from IC207 passes through an antenna switching circuit (D219) and a low-pass filter, and then is applied to the ANTENNA CONNECTOR (J210).

# 4-2-4 UHF BUFFER AMPLIFIER CIRCUIT (U-VCO AND RF UNITS)

UHF signals from the U-VCO UNIT are amplified at buffer amplifiers Q501 and Q221, pass through transmit and receive switching diode D215 and are amplified at driver amp Q224, thus obtaining drive power.

# 4-2-5 UHF POWER AMPLIFIER CIRCUIT (RF UNIT)

Amplified signals at Q224 are power amplified at IC206 and obtain more than 5 W (when HIGH is selected) or 1 W (when LOW is selected). Output power from IC206 passes through an antenna switching circuit (D216), a high-pass filter and a low-pass filter, and then is applied to the ANTENNA CONNECTOR (J210).

#### 4-2-6 APC CIRCUIT (RF UNIT)

The APC circuit protects the power modules (IC206 and IC207) from a mismatched output load and selects HIGH and LOW output power.

The output power level from the power module (IC206 or IC207) is detected at the APC detector (D217). When antenna impedance is matched at 50  $\Omega$ , the detected level is at a minimum. However, when antenna impedance is mismatched, the detected voltage is higher than when matched.

When the antenna impedance is mismatched, the base voltage of Q228 is higher than the other base voltage of Q228 (reference voltage). Q228 decreases the collector current of Q226 using Q227. Q226 collector current is used at the driver amplifier (Q224 or Q229). Hence, when the antenna impedance is mismatched, output power is decreased.

#### **APC CIRCUIT**

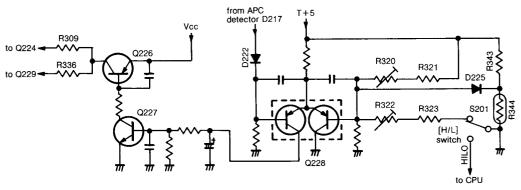


Fig. 2

The output power selecting circuit uses the APC circuit. The [H/L] switch on the top panel selects the reference voltage, changing output power to HIGH or LOW.


#### 4-3 VHF PLL CIRCUITS

#### 4-3-1 GENERAL (RF AND V-VCO UNITS)

The VHF PLL circuit uses a one chip PLL IC (IC205) which contains a programmable divider, phase detector, data shift register and data latch circuits. IC205 controls the VHF VCO oscillating frequency using varicap diodes D553 and D554. The VHF VCO oscillating frequency is used as a VHF transmitting frequency while transmitting or as a VHF 1st LO signal while receiving.

The oscillated signal at the VHF VCO circuit is buffer amplified at Q551 and Q222, and is applied to pin 8 of IC205. IC205 divides the signal using N-data from the CPU (IC902) and phase detects the divided signal using the reference oscillator signal. The phase detected signal is converted to a DC voltage (lock voltage) by the charge pump and loop filter. The lock voltage is applied to varicap diodes D553 and D554 in the VHF VCO circuit to control the VCO oscillating frequency. A stable, desired frequency is thus obtained by this loop.

#### VHF PLL CIRCUIT BLOCK DIAGRAM

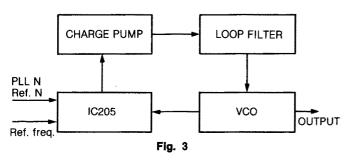

# 4-3-2 REFERENCE OSCILLATOR CIRCUIT (RF UNIT)

Q212 and X203 oscillate a 10.0 MHz signal. The signal is divided in the divider inside IC205 to obtain the reference frequency. The reference frequency, 6.25 kHz or 5 kHz, is determined by the IC205 dividing ratio using N-data from the CPU (IC902) to obtain selectable tuning steps of 5, 10, 12.5, 15, 20 or 25 kHz.

# 4-3-3 CHARGE PUMP AND LOOP FILTER CIRCUITS (RF UNIT)

The phase detected signals output from pins 5 and 12 of IC205 are pulse signals. These signals are converted to DC voltage by the charge pump (Q217 and Q219) and the loop filter (R283, R284, R303, C314, C331 and C333).

Q230 and Q236 form the charge pump control circuit which cuts off charge pump output. Signals are not applied to the VCO circuit while the power saver is activated. Q218 is a DC amplifier which amplifies the lock voltage to tune the center frequency of the VHF bandpass filter.

#### 4-3-4 VCO CIRCUIT (V-VCO UNIT)

The VCO (Variable Control Oscillator) circuit oscillates the 1st LO frequency in receive mode and transmit frequency in transmit mode. The VCO free-run frequency is shifted by D551 using C556. The generated frequency is controlled by D553 and D554 using the lock voltage output from the loop filter.

#### 4-4 UHF PLL CIRCUITS

### 4-4-1 GENERAL (RF AND U-VCO UNITS)

The UHF VCO circuits use a PLL IC (IC203) and a swallow counter (IC204).

IC203 controls the UHF VCO oscillating frequency using varicap diode D501. The UHF VCO oscillating frequency is used as a UHF transmitting frequency while transmitting or as a UHF 1st LO signal while receiving.

The oscillated signal at the UHF VCO circuit is buffer amplified at Q503, and is applied to pin 1 of IC204. IC204 divides the signal either 1/64 or 1/65. The divided signal is then applied to pin 9 of IC203. IC204 divides the signal using the N-data from the CPU (IC902) and phase detects the divided signal using the reference oscillator signal. The phase detected signal is converted to a DC voltage (lock voltage) by the charge pump and loop filter. The lock voltage is applied to varicap diode D501 in the UHF VCO circuit to control the VCO oscillating frequency. A stable desired frequency is thus obtained by this loop.

# 4-4-2 REFERENCE OSCILLATOR CIRCUIT (RF UNIT)

Q212 and X203 oscillate a 10.0 MHz signal. The signal is divided in the divider inside IC203 to obtain the reference frequency. The reference frequency, 6.25 kHz or 5 kHz, is determined by the IC203 dividing ratio using N-data from the CPU (IC902) to obtain selectable tuning steps of 5, 10, 12.5, 15, 20 or 25 kHz.

# 4-4-3 CHARGE PUMP AND LOOP FILTER CIRCUITS (RF UNIT)

The phase detected signals output from pins 19 and 21 of IC203 are pulse signals. These signals are converted to a DC voltage by the charge pump (Q237, Q238 and Q239) and the loop filter (C309, C310, R276, R277, R292 and C508).

Q215 and Q216 form the charge pump control circuit which cuts off charge pump output. Signals are not applied to the VCO circuit while the power saver is activated.

#### 4-4-4 VCO CIRCUIT (U-VCO UNIT)

The VCO (Variable Control Oscillator) circuit oscillates the 1st LO frequency in receive mode and transmit frequency in transmit mode. The VCO free run frequency is shifted by D502. The generated frequency is controlled by D501 using the lock voltage output from the loop filter.

#### 4-5 POWER SUPPLY CIRCUITS

#### 4-5-1 VOLTAGE LINES (MAIN UNIT)

LINE	DESCRIPTION
Vcc	Battery pack voltage or external DC power that passes through the POWER CONTROL (R151). Vcc is applied to the power modules (IC206 or IC207), the AF power amp. regulator, and the following 5 V lines.
+5	Common 5 V current amplified at Q720 and Q721 using IC705 output as a reference voltage.
+58	5 V controlled by the power saver function. Current amplified at Q712 and Q713.
R+5S	5 V controlled by the power saver function. Current amplified at Q716 and Q717. Used by the receive circuits.
T+5	5 V current amplified at Q714 and Q715. Used by the transmitter circuits.

# 4-5-2 VOLTAGE REGULATOR CIRCUIT (MAIN UNIT)

When the battery voltage is  $5.5\sim16\,\text{V}$ , the regulator (IC705) outputs a reference voltage of 5 V. The noise components are removed by the noise filter (C785, R756). This output is applied to the current amplifier (Q720, Q721).

# 4-5-3 CPU POWER SOURCE CIRCUIT (MAIN UNIT)

When the transceiver is turned OFF, a voltage is applied to IC902 (CPU) from lithium backup battery BT701.

# 4-5-4 T+5/R+5S SWITCHING CIRCUIT (MAIN AND LOGIC UNITS)

When the PTT switch (S703) is pushed, Q724 is turned ON. The collector of Q725 outputs a "LOW" signal to pin 64 of IC902 (CPU).

Pin 40 of IC902 sends transmit data to IC701. Pin 12 of IC701 outputs a "HIGH" signal. Pin 11 of IC701 outputs a "LOW" signal to pin 13 of IC703c, controlling the base of Q717. Thus, R5+S is turned OFF. Pin 12 of IC701 outputs a "HIGH" signal to pin 1 of IC703e, controlling the base of Q715. Thus T+5 is turned ON.

#### 4-6 OTHER CIRCUITS

# 4-6-1 SUBAUDIBLE TONE ENCODER UNIT (TONE UNIT) (IC-32AT only)

IC601 generates subaudible tones. A generated tone is made via the dividing oscillator, and a dividing ratio is controlled by 6-bit data from a shift resistor (IC602). R601 adjusts deviation.

# 4-6-2 DTMF ENCODER CIRCUIT (MAIN AND LOGIC UNITS) (IC-32AT only)

The DTMF encoder (IC901), generates Dual Tone Multi Frequencies. If any key on the KEYBOARD is pushed while transmitting, the proper frequency dividing ratio for the frequency of X901 (3.58 MHz) is selected. One set of audio frequencies corresponding to row input and column input is then output from pin 17.

Also, a "HIGH" level signal is output from pin 11 of IC901 when the KEYBOARD is activated. This level is applied to an integrator circuit (R750, R754 and C773) in the MAIN UNIT to obtain a time constant of approx. 1 sec. for turning Q719 ON. Thus transmission continues during keying.

# 4-6-3 TONE CALL CIRCUIT (MAIN UNIT) (IC-32E only)


This circuit generates a 1750 Hz tone to open a repeater. When the TONE CALL switch (R152) is pushed, Q718 is turned ON and T+5 voltage is applied to IC704. IC704 divides 7.1680 MHz by 4096 and outputs 1750 Hz tones from pin 4. R748 adjusts deviation.

# 4-6-4 S/RF-INDICATOR CIRCUIT (MAIN AND LOGIC UNITS)

A portion of signals passed from FI701 is amplified at the S-indicator amplifier (Q711, Q710), and is detected at voltage doubler (D705). The voltage from D705 or APC detector voltage from D222 is applied to indicator comparator pin 2 of IC904b.

The signal passes through an integrator circuit (R933 and C908); the voltage at pin 3 of IC904 increases with time. When the voltage at pin 3 is greater than pin 2, pin 1 outputs "HIGH." The voltage of pin 3 of IC904 depends on time. IC902 measures the time during which pin 49 outputs "HIGH" and pin 50 receives "HIGH." The S/RF-INDICATOR, DS904, is for indicating the relative signal strength or output power.

#### S/RF INDICATOR CIRCUIT

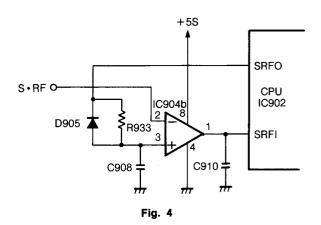

### for free by RadioAmateur.eu

### 4-6-5 LAMP CIRCUIT (LOGIC UNIT)

When the LIGHT SWITCH (S701) is pushed, pin 46 of IC902 (CPU) remains "HIGH" for 5 sec. The current of this signal is amplified at Q905 and Q906 to illuminate backlights DS902 and DS903.

If the LIGHT switch is pushed again when pin 46 is in a "HIGH" condition, pin 46 returns to "LOW" when switches are not being used.

#### 4-6-6 POWER SAVER CIRCUIT (MAIN UNIT)

The power saver function starts after approx. 30 sec. when no switch is pushed and the squelch is closed, or when the transceiver is in receive mode.

When the power saver function starts, pin 47 of IC902 (CPU) outputs a power saver signal (IOST) as in the following timing diagram. A +5M signal from pin 13 of IC701 controls +5S signals; RX5 signals from pin 11 control R+5S signals.

# 4-6-7 LOW VOLTAGE DETECTED CIRCUIT (LOGIC UNIT)

This circuit consists of IC904a, R928 and R926. 1.16 V is applied to pin 5 of IC904a. The Vcc voltage is divided by R926 and R928, and the divided voltage is applied to pin 6 of IC904a. When the Vcc voltage exceeds 5.7 V, the voltage at pin 6 becomes greater than that at pin 5 and pin 7 becomes "LOW." When the Vcc voltage is less than 5.7 V, the voltage at pin 5 exceeds that at pin 6 and pin 7 outputs in a "HIGH" condition. TRANSMIT INDICATOR DS901 does not light even when transmitting.

### 4-7 CPU PORT ALLOCATIONS (LOGIC UNIT)

PORT NO.	PIN NO.	DESCRIPTION	PORT NO.	PIN NO.	DESCRIPTION
RESET	68	When a "LOW" signal is applied, CPU IC902 is initialized.	P33 [ENC]	53	Input port for acknowledge signal whether the tone encoder IC601 is
PO0 [INT4]	38	Detects a signal for the standby mode of the CPU. The CPU enters the standby mode when the port reads	P40~P43 [KR0~KR3]	29~32	Connected or not.  These are input ports for the keyboard matrices.
PO1 [CK]	39	the trailing edge of a signal.  Outputs a serial data output clock for PLL N-data, subaudible tones, and I/O expander data.	P50~P53 [KS0~KS3]	34~37	These are output ports for strobe signals for the initial and keyboard matrices.
PO2 [DATA]	40	Outputs serial data synchronized with CK signals.	P60 [UNLKLV]	60	Input port for a PLL unlock signal.  Normally this port is "LOW." When the PLL is unlocked the port receives "HIGH" signals.
PO3 [BUSY]	41	Inputs a squelch signal. When the squelch opens, a "HIGH" signal is applied.	P61 [DET]	61	Input port for an acknowledge signal in the optional UT-40 TONE
PO10~PO13 [KIR0~KIR3]	42~45	Input ports for the initial matrix.			SQUELCH UNIT. The port becomes "HIGH" when the tone squelch opens.
P2 [LAMPO]	46	Outputs control signals for the FUNCTION DISPLAY intensity.	P62 [DIAL DN]	62	Input port for the down signal of the MAIN DIAL (S151).
P21 [IOSTB]	47	Outputs a strobe signal for serial data to the output expander.	P63 [DIAL UP]	63	Input port for the up signal of the MAIN DIAL (S151).
P22 [CTSTB]	48	Outputs a strobe signal for serial data to the subaudible tone encoder or optional UT-40 TONE SQUELCH UNIT.	P70 [PTT]	64	Input signal on the PTT line. This port receives "HIGH" signals when the PTT switch is pushed.
P23 [SRFO]	49	Outputs a reference voltage for the S/RF INDICATOR.	P71 [FUNC]	65	Input port for the FUNCTION switch (\$702).
P30 [SRFI]	50	Inputs a comparated signal for the S/RF INDICATOR.	P72 [MONI]	66	Input port for the MONITOR switch (S151).
P31 [HI/LO]	51	Output port for the RF INDICATOR. This port becomes "HIGH" when	P73 [LAMP]	67	Input port for the LIGHT switch (S701).
P32	52	HIGH output power is selected.  Input port for acknowledge signal	BP6 [PLSL]	19	Outputs a strobe signal for the VHF PLL IC (IC205).
[ENC/DEC]	52	which acknowledges whether the optional UT-40 TONE SQUELCH UNIT is connected or not.	BP7 (PLSH)	20	Outputs a strobe signal for the UHF PLL IC (IC203).

### for free by RadioAmateur.eu

### I/O EXPANDER IC701 (MAIN UNIT)

PORT NO.	PIN NO.	DESCRIPTION
Q1 [SQL OFF]	4	Outputs a "HIGH" signal when the MONITOR switch (S701) is pushed.
Q2 [RMUTE]	5	Outputs an AF mute signal when the optional UT-40's pocket beep function is activated.
Q4 [BEEPO]	7	Outputs 500 Hz or 1 kHz beep tones.
Qs [+5M]	9	Outputs a square wave during the power saver condition. When this port is "HIGH," a +5S signal is cut OFF.
Q7 [TX5]	12	Outputs "HIGH" signals during transmissions. Controls the T+5 line.
Q8 [RX5]	11	Outputs square waves during the power saver condition. When this port is "HIGH," the R+5S line is cut OFF.

### I/O EXPANDER IC202 (RF UNIT)

PORT NO.	PIN NO.	DESCRIPTION
Q1 [BANDL]	4	Outputs "LOW" signals when the VHF band is selected.
Q2 [TXL]	5	Outputs "LOW" signals during VHF band transmission.
Q3 [RXL]	6	Outputs "LOW" signals during VHF band reception.
Q4 [CPCL]	7	Outputs square waves during the power saver condition. Outputs "LOW" signals when the VHF band is selected and during the power saver condition.
Q5 [BANDH]	14	Outputs "LOW" signals when the VHF band is selected.
Qs [TXH]	9	Outputs "HIGH" signals during UHF band transmission.
Q7 [RXH]	12	Outputs "HIGH" signals during UHF band reception.
Q8 [CPCH]	11	Outputs square waves during the power saver condition. When this port is "HIGH," the VLV line is cut OFF.

#### SECTION 5 **MECHANICAL PARTS AND DISASSEMBLY**


### **5-1 MECHANICAL PARTS**

LABELLED NUMBER	DESCRIPTION	ORDERING NUMBER	QTY.
1	PH B0 2×31.5 ZK	8810004000	4
2	575 Rear panel	8010007140	1
3	575 PTT rubber	8930012400	1
4	PTT plates	8930011600	2
(5)	PTT holder	8930013110	1
6	PTT button	8930011910	1
1	PH No. 0-3 M2×6 ZK	8810004890	2
8	PH B0 No. 0-3 M1.4×3.5 ZK	8810001710	11
9	Plate (SP)	8930012760	1
10	PH B0 No. 0-1 M2×4	8810004800	4
10	575 Front ground plate	8930013300	1
12	SP plate	8930012100	1
(13)	562 Keyboard (A)	8010007150	1
13	573 MIC holder	8930011930	1
(15)	SP seal	8930011580	1
16	573 Casing seal (center)	8930012410	1
	575 Front panel (A) (IC-32E)	8210003300	1
<b>1</b>	575 Front panel (B) (IC-32AT)	8210003310	1
	575 Front panel (C) (IC-32A)	8210003320	1
(18)	Knob (MAIN) N128	8610004290	1
19	Knobs (SQUELCH, PWR/VOL) N126	8610004230	2
20	VR nuts (E)	8830000550	3
20	PH M2×6 ZK	8810004860	2
22	Connector seal	8930012420	1
- 6	575 Top panel-1 (IC-32A/AT)	8210003200	1
23	575 Top panel (A)-1 (IC-32E)	8210003210	<del>-</del>
23	Top seal	8930012390	1
25	Seal plate	8930012300	1
26	PH No. 0-3 M1.4×3.5 ZK	8810001710	1
<u> </u>	PH No. 0-1 M2×2.5	8810004870	2
28	LCD holder	8930012190	<u>-</u> 1
29	LCD reflector	6910002060	1
30	PH M2×4 Ni FE	8810005320	4
30	PH M2×3 Ni FE	8810004950	5
32	573 standoff	8930012081	4
33	PH M2×3 Ni FE	8810004950	1
34)	PH M2.6×10 Ni	8810004730	2
39	Plate	8930012280	1
36	Screw lug M2	886000010	2
<b>3</b> 9	Contact holder	8930011880	1
38	BuH M2×6 Ni BS	8810002580	1
39	Latch plate (B)	8930013430	1
40	Sliding guide	8010006990	1
40	FH M2×4 Ni BS	8810002310	4
42	Release button (A)	8930008610	1
43	PH M2×5 Ni	8810005310	1
49	Connection spring	8930005980	1


Screw type Screw head style Screw: M2 × 3, etc.

Self-tapping screw: B0 2 × 15, etc. Precision type screw: No. 0-1, etc. PH: Pan head FH: Flat head BuH: Button head

### • CASE AND CHASSIS

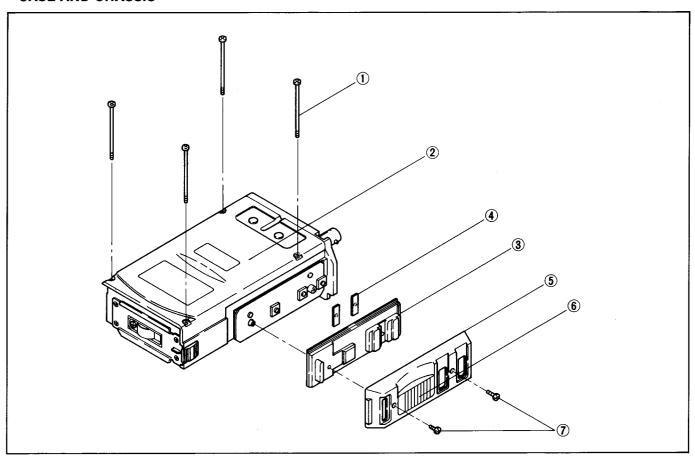



### • LOGIC UNIT

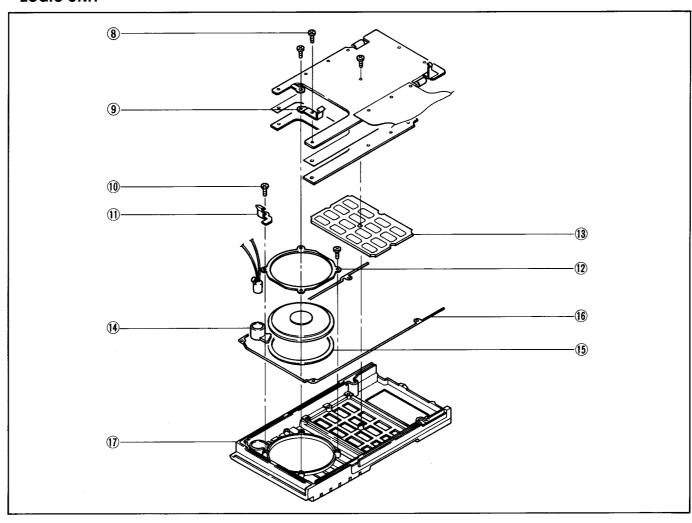


### • TOP PANEL

### • MAIN UNIT

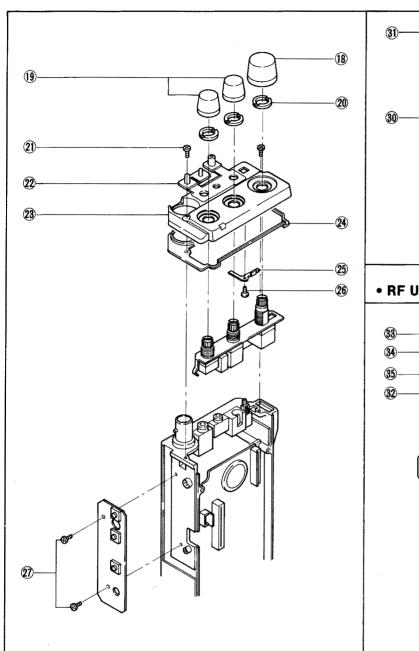

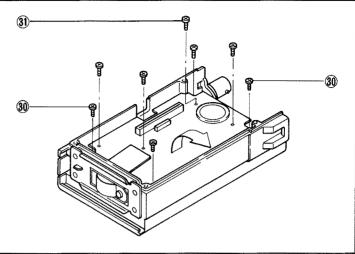



### • RF UNIT

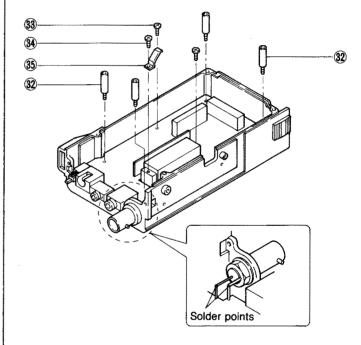

### • LCD

### • CONTACT HOLDER

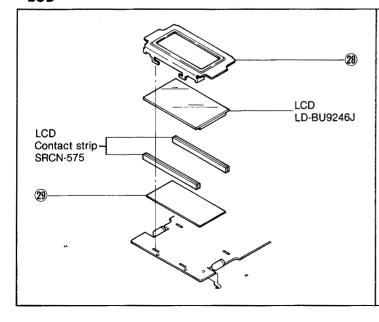


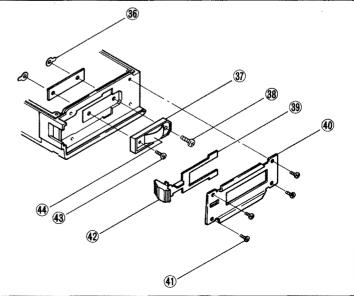

### **5-2 BATTERY PACK**

### • BP-2 AND BP-5


LABELLED NUMBER	DESCRIPTION	ORDERING NUMBER	QTY.
①	Rear plate (B)	8310004310	1
	Rear case (3) B (BP-2)	8010002780	1
2	Rear case (5) B (BP-5)	8010002830	1
3	Sliding metal (E)	8010004230	1
4	PH B0 2×4	8810000980	4
<u> </u>	Front case (3) A (BP-2)	8010002760	1
<b>⑤</b>	Front case (5) A (BP-5)	8010002820	1
	Name plate BP-2	8310002540	1
6	Name plate BP-5	8310002570	1
1	Charging metal	8010001920	2
8	PH B0 2×4	8810000980	2
9	Sponge (O)	8930001440	4
10	Charging selector plate (B)	8930002150	1
10	FFH M2×4 Ni	8810004671	2

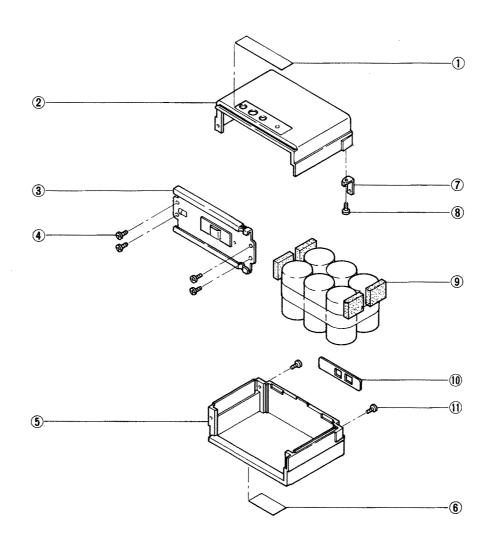

### for free by RadioAmateur.eu

### • BP-3


LABELLED NUMBER	DESCRIPTION	ORDERING NUMBER	QTY.
①	Rear plate (A)	8310004260	1
2	FH M2×5	8810002060	2
	Rear case (3) F (supplied BP-3)	8010002300	1
3	Rear case (3) B (optional BP-3)	8010002780	1
4	Charging jack metal (A)	8930005740	1
5	Isolating washer (J)	8850000850	1
6	Charger jack metal (B)	8930005750	1
<b>7</b>	Charger jack metal (C)	8930006130	1
8	Isolating washer	8850000310	1
9	Square nut	8930007370	1
10	Plate spring	8930004670	1
10	LED (SCLC26UR)	5040000160	1
(12)	Sliding metal (D)	8930007220	1
13	PH B0 2×4	8810000980	4
14	FFH M2×8	8810004660	2
(5)	Charger terminal (D)	8930006240	1
16	Spring (A)	8930007220	1
0	Isolating seat	8930005400	1
	Front case (3) E (supplied BP-3)	8010002290	1
18	Front case (3) A (optional BP-3)	8010002760	1
19	Name plate	8310002550	1
20	Charging metal	8010001920	2
<b>2</b> 1)	PH B0 2×4	8810000980	2
22	Charging selector plate (B)	8930002150	1
23	FFH M2×4 Ni	8810004671	2

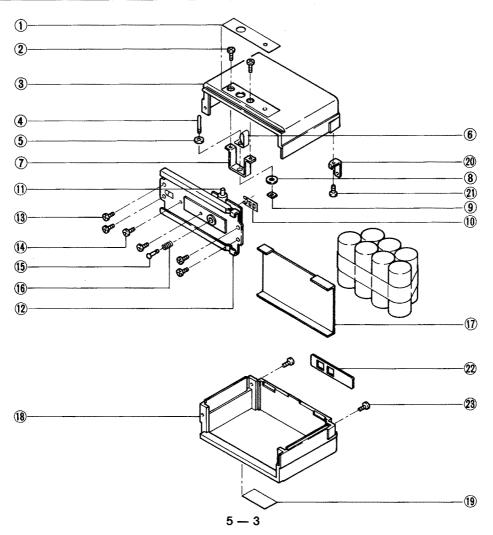

### for free by RadioAmateur.eu


### • BP-5A, BP-7, BP-8, BP-70

LABELLED NUMBER	DESCRIPTION	ORDERING NUMBER	QTY.
	Name plate BP-5A	8310006970	1
	Name plate BP-7	8310002580	1
1	Name plate BP-8	8310002590	1
	Name plate BP-70	8310012080	1
	Front case (7) A (BP-5A, BP-7, BP-8)	8010002860	1
2	Front case (9) A (BP-70)	8010007030	1
3	Charge jack (A) HEC0779-01-030	6450000240	1
4	LED (SLB23VR5F)	5040000390	1
(5)	Sliding metal (D)	8930007220	1
6	PH B0 2×4	8810000980	4
7	Charging terminal (D)	8930006240	1
8	Spring (A)	8930007220	1
9	FFH M2×8	8810004660	2
10	Rubber cap (for jack A)	8930001740	1
0	Rear case (7) B (BP-5A, BP-7, BP-8)	8010002870	1
0	Rear case (9) B (BP-70)	8010007040	1
12	FFH M2×4 Ni	8810004671	2
	Charging selector plate (B) (BP-5A, BP-7, BP-8)	8930002150	1
13	Charging selector plate (C) (BP-70)	8930012830	1
(1)	Plate spring	8930004670	1
15	Charger jack (B) HEC1737-01-020	6450000230	1
16	PH B0 2×4	8810000980	2
17	Charging metal	8010001920	2
18)	Rubber cap (for jack B)	8930001750	1
(9)	PH B0 2×15 ZK	8810004910	2

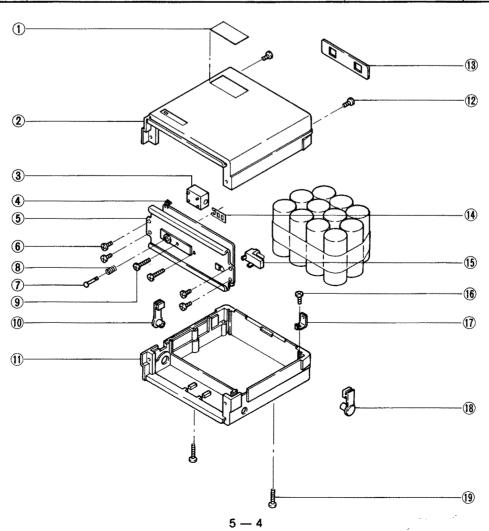


# SECTION 6 MAINTENANCE AND ADJUSTMENT

### **6-1 PLL ADJUSTMENT**

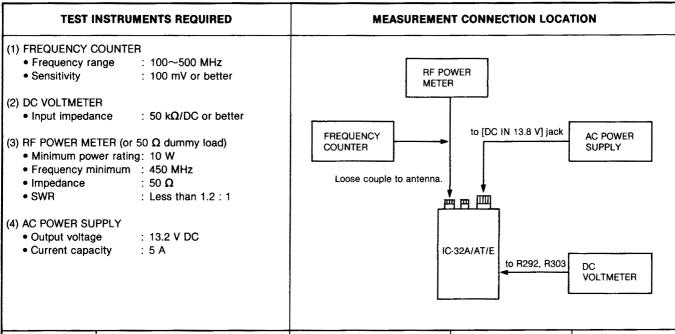

ADJUSTMENT		ADJUSTMENT CONDITIONS	MEASUREMENT		VALUE	ADJUSTMENT POINT	
			UNIT	LOCATION	VALUE	UNIT	ADJUST
LOCK VOLTAGE		Frequency display:     430.00 MHz (except U.S.A.)     440.00 MHz (U.S.A.)     Receiving	RF	Connect the DC voltmeter to R292.	1.2 V	U-VCO	C510
	2	Frequency display:     144.00 MHz     Receiving	RF	Connect the DC voltmeter to R303.	1.5 V	V-VCO	L554
REFERENCE FREQUENCY	1	Frequency display:     440.00 MHz (except U.S.A.)     450.00 MHz (U.S.A.)     Transmitting	Top panel	Loose couple the frequency counter to the antenna connector.	Same as the displayed frequency.	RF	C288

## **RF UNIT**

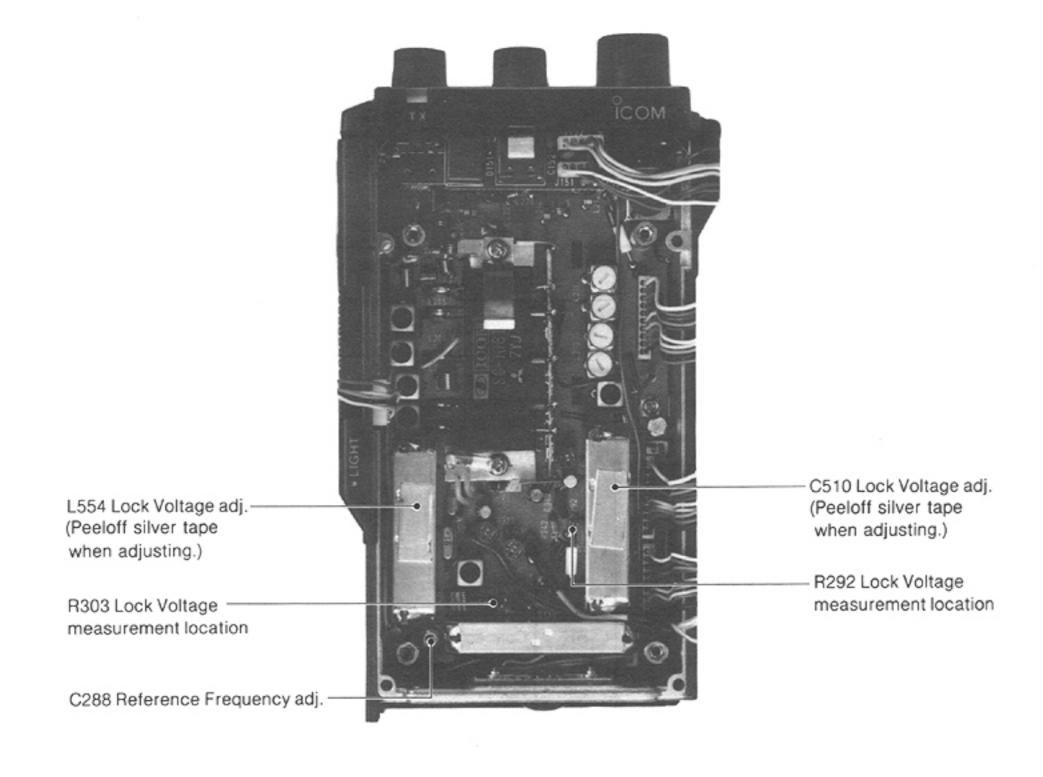


## 6-2 RECEIVER ADJUSTMENT


TEST INSTRUMENTS REQUIRED		MEASUREMENT CONNECTION LOCATION					
(1) STANDAF  • Frequer  • Output if  (2) DC VOLTI  • Input im  (3) AC POWE  • Output v  • Current	METE  peda  R SU  voltag	: -127~-17 dBm (0.1 μV~32 mV) ER ance : 50 kΩ/V DC or better JPPLY ge : 13.2 V DC	S	TANDARD IGNAL ENERATOR	to [DC IN 13.8 V] jack	AC POI SUPPL	Y
AD HISTME		AD INCOMENT CONDITIONS	MEASUREMENT		VALUE	ADJUSTMENT POINT	
ADJUSTME	ADJUSTMENT ADJUSTMENT CONDITIONS		UNIT	LOCATION	VALUE	UNIT	ADJUST
UHF SENSITIVITY	general production of the contract of the cont	Frequency display: 432.00 MHz (except U.S.A.) 442.00 MHz (U.S.A.)  Receiving Apply an RF signal to the antenna connector. Level: -87 dBm (10.0 μV) Dev.: ±3.5 kHz Mod.: 1 kHz  SQL] control: Max. CCW*	RF	Connect the DC voltmeter to J206 pin 10.	Maximum	RF	Adjust in sequence L211 L210 L208 L201
VHF SENSITIVITY		• Frequency display:  146.00 MHz (except Europe)  145.00 MHz (Europe)  • Apply an RF signal to the antenna connector.  Level: -81 dBm (20.0 μV)  Dev.: ±3.5 kHz  Mod.: 1 kHz	RF	Connect the DC voltmeter to J206 pin 10.	Maximum	RF	Adjust in sequence L205 L204 L203 L202
S-METER	1	• Frequency display: 435.00 MHz (except U.S.A.) 445.00 MHz (U.S.A.) • Apply an RF signal to the antenna connector. Level: -107 dBm (1.0 μV) Dev.: ±3.5 kHz Mod.: 1 kHz	FUNCTION DISPLAY	S/RF INDICATOR	2 dots	MAIN	R738
	2	• Frequency display:  146.00 MHz (except Europe)  145.00 MHz (Europe)  • Apply an RF signal to the antenna connector.  Level: —101 dBm (2.0 μV)  Dev.: ±3.5 kHz  Mod.: 1 kHz					R739

<sup>\*</sup> CCW: Counterclockwise


## **RF UNIT**

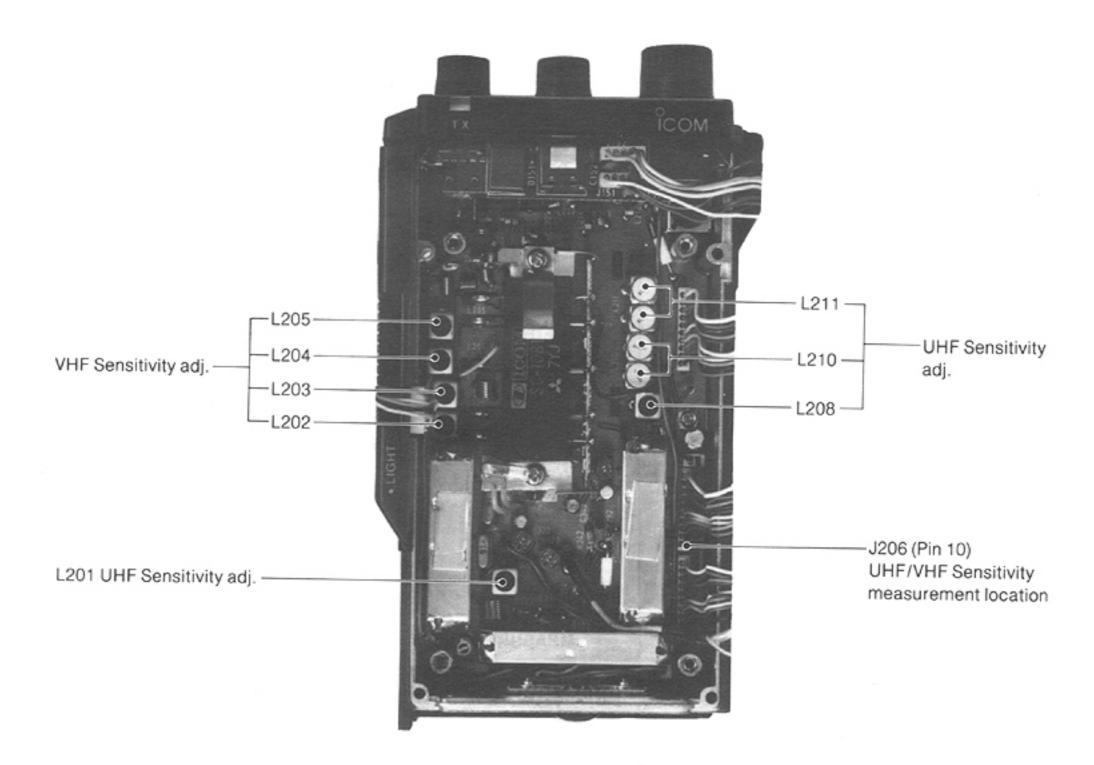

## **MAIN UNIT**

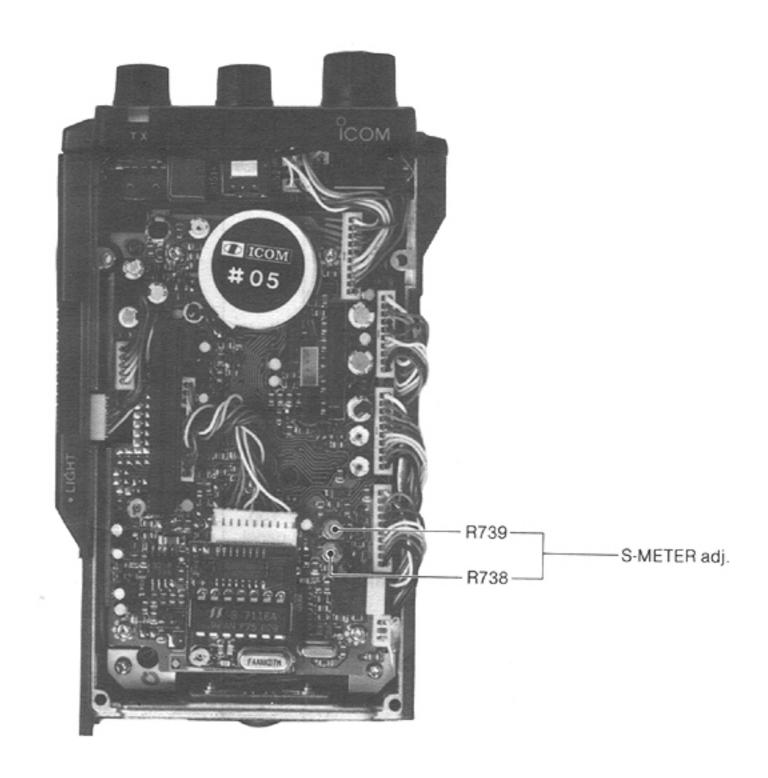

### **6-3 TRANSMITTER ADJUSTMENT**

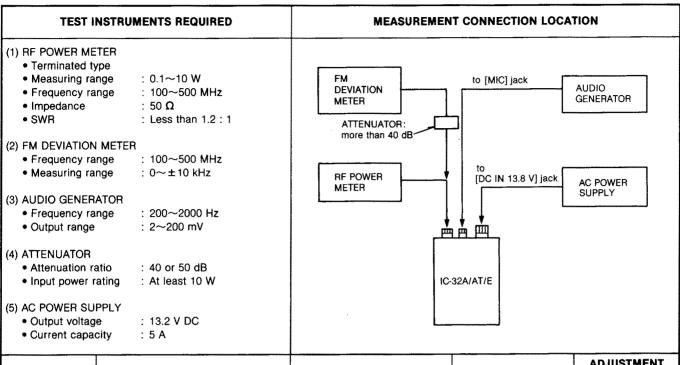


ADJUSTMENT		ADJUSTMENT CONDITIONS	MEASUREMENT		VALUE		ADJUSTMENT POINT	
ADJUSTNIL	141	ADJUSTMENT CONDITIONS	UNIT LOCATION		VALUE .	UNIT	ADJUST	
OUTPUT 1 POWER .	- Personal Property and Propert	Frequency display: 435.00 MHz (except U.S.A.) 445.00 MHz (U.S.A.)  [H/L] switch: High Transmitting	Top panel	Connect the RF power meter to the antenna connector.	5.0 W	RF	R314	
	2	Frequency display:     146.00 MHz (except Europe)     145.00 MHz (Europe)	***************************************		5.5 W		R320	
DEVIATION	1	Frequency display:  435.00 MHz (except U.S.A.)  445.00 MHz (U.S.A.)  Apply an AF signal to the [MIC] jack.  50 mV/1 kHz (except U.S.A.)  110 mV/1 kHz (U.S.A.)  Set the deviation meter.  HPF : 50 Hz LPF : 20 kHz De-emphasis: OFF Detector : (P-P)/2	Top panel	Connect the deviation meter to the antenna connector via the attenuator.	±4.8 kHz	MAIN	R779	
	2	<ul> <li>Frequency display:</li> <li>146.00 MHz (except Europe)</li> <li>145.00 MHz (Europe)</li> </ul>			±4.8 kHz		R781	
SUBAUDIBLE TONE DEVIATION (IC-32AT only)	1	Frequency display:  445.00 MHz (U.S.A.)  435.00 MHz (Asia)  Apply no AF signal to the [MIC] jack.  Set the deviation meter.  HPF : OFF  LPF : 20 kHz  De-emphasis: OFF  Detector : (P-P)/2  Set the tone frequency to 88.5 Hz.	Top panel	Connect the deviation meter to the antenna connector via the attenuator.	±0.75 kHz	TONE	R601	


# TRANSMITTER ADJUSTMENT (CONTINUED)

ADJUSTMENT	NT	AD ILICTMENT COMPLETIONS	MEASUREMENT		VALUE	ADJUSTMENT POINT	
ADJUSTMENT		ADJUSTMENT CONDITIONS	UNIT	LOCATION		UNIT	ADJUST
DTMF TONE DEVIATION (IC-32AT only)	1	Frequency display:     445.00 MHz (U.S.A.)     435.00 MHz (Asia)     Push and hold the [D] key while transmitting.	Top panel	Connect the deviation meter to the antenna connector via the attenuator.	±3.5 kHz	MAIN	R751
TONE CALL DEVIATION (IC-32E only)	1	Frequency display:     435.00 MHz     Push and hold the [T. CALL]     switch.	Top panel	Connect the deviation meter to the antenna connector via the attenuator.	±3.5 kHz	MAIN	R748

## **RF UNIT**

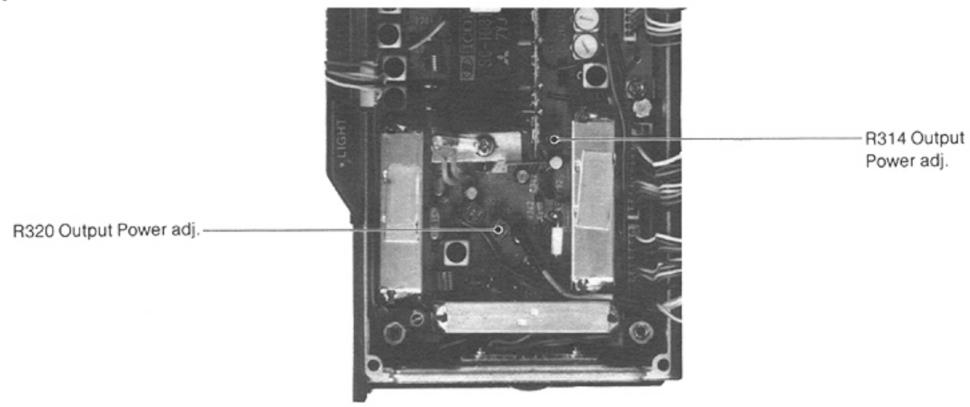


## MAIN UNIT

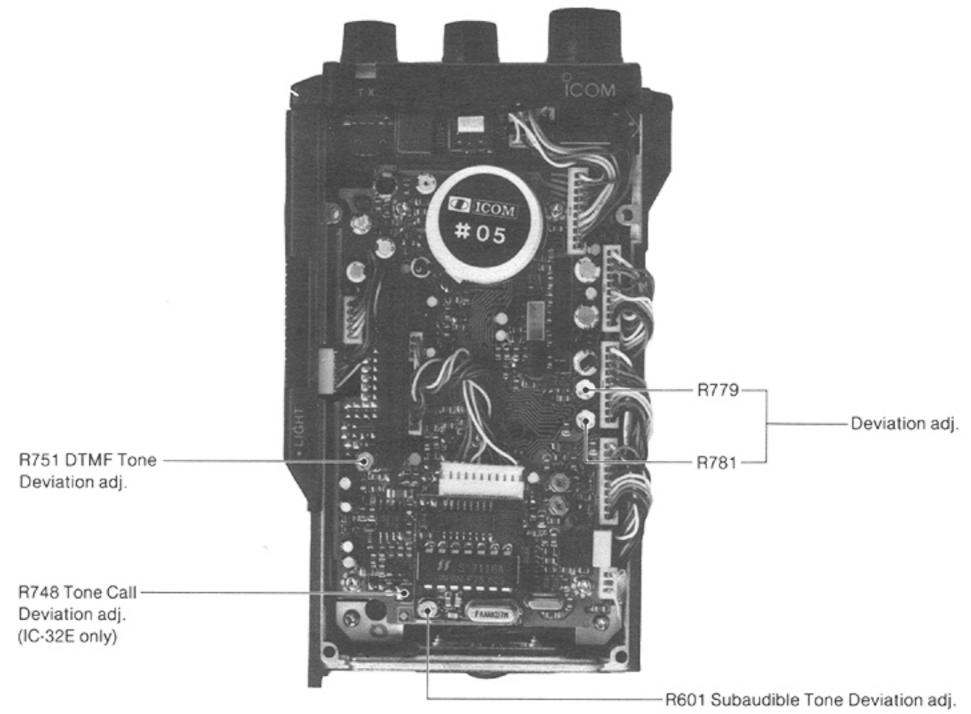


The above pictures show the IC-32AT.


# SECTION 7 BOARD LAYOUTS

# 7-1 EF UNIT

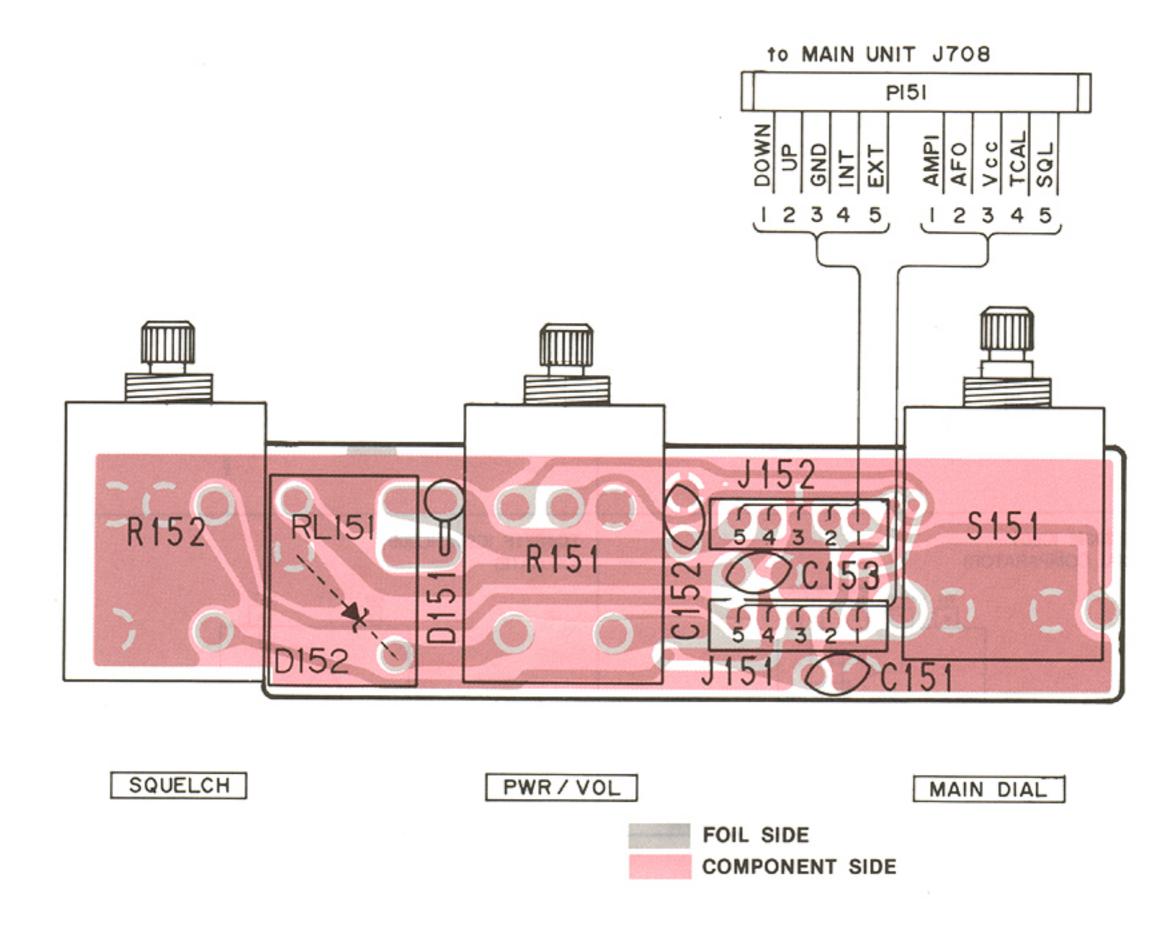


### **7-2 LOGIC UNIT**

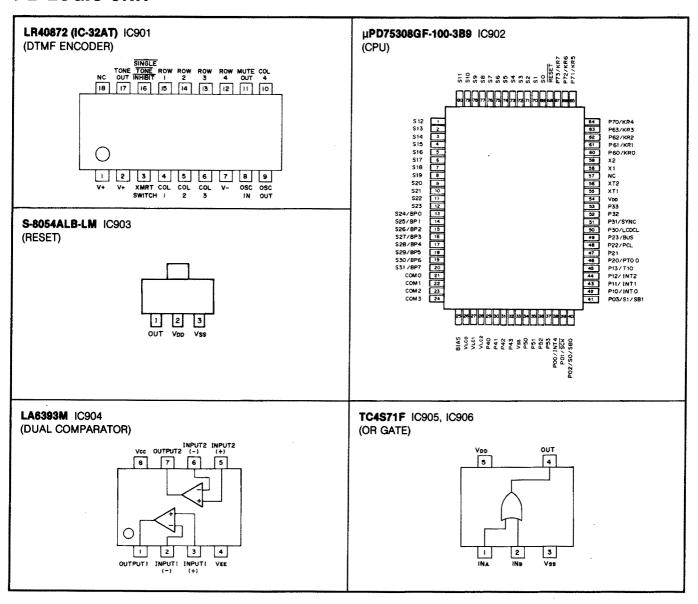

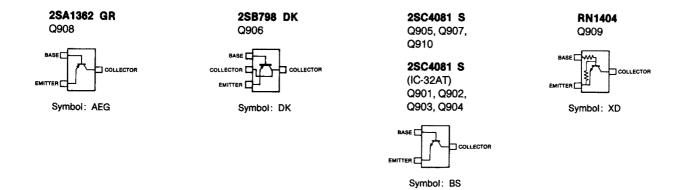

## **COMPONENT SIDE**

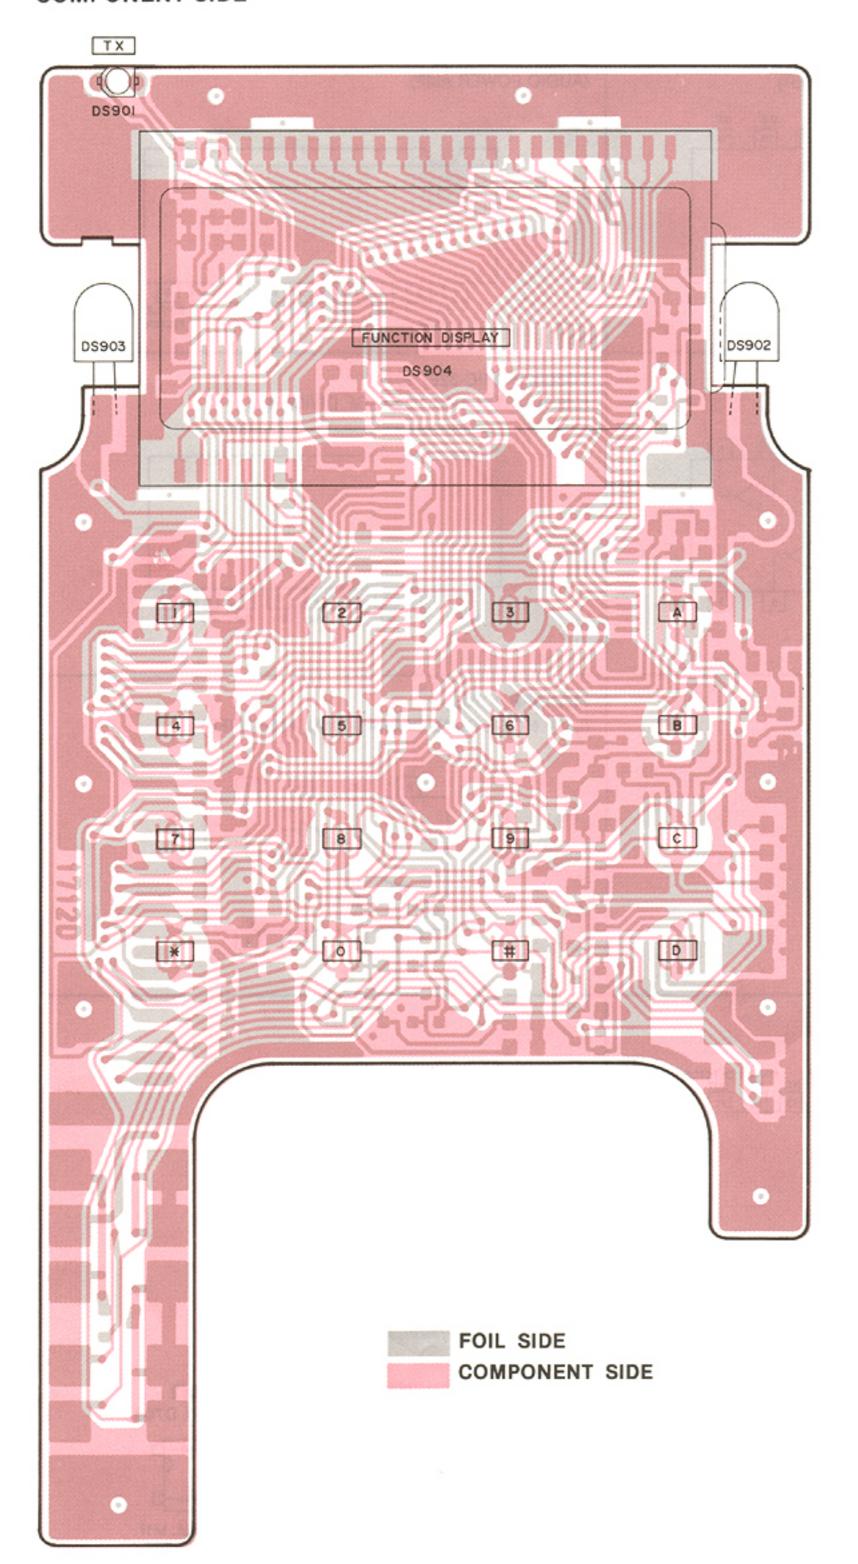

### **1SS184**

D915 (IC-32E: Italy) D916 (IC-32E)



Symbol: B3

### **1SS193**

D905

D909 (IC-32A/AT: U.S.A., Asia) D910 (IC-32A/AT: U.S.A.) D915 (IC-32E: Europe)



Symbol: F3

### **1SS196**

D915 (IC-32A: Australia), D916 (IC-32A/AT), D918



Symbol: G3

# DAP202U

D906



Symbol: P


## DWA010

D901 (IC-32AT) D902 (IC-32AT) D903, D904




Symbol: BM


## **FOIL SIDE**

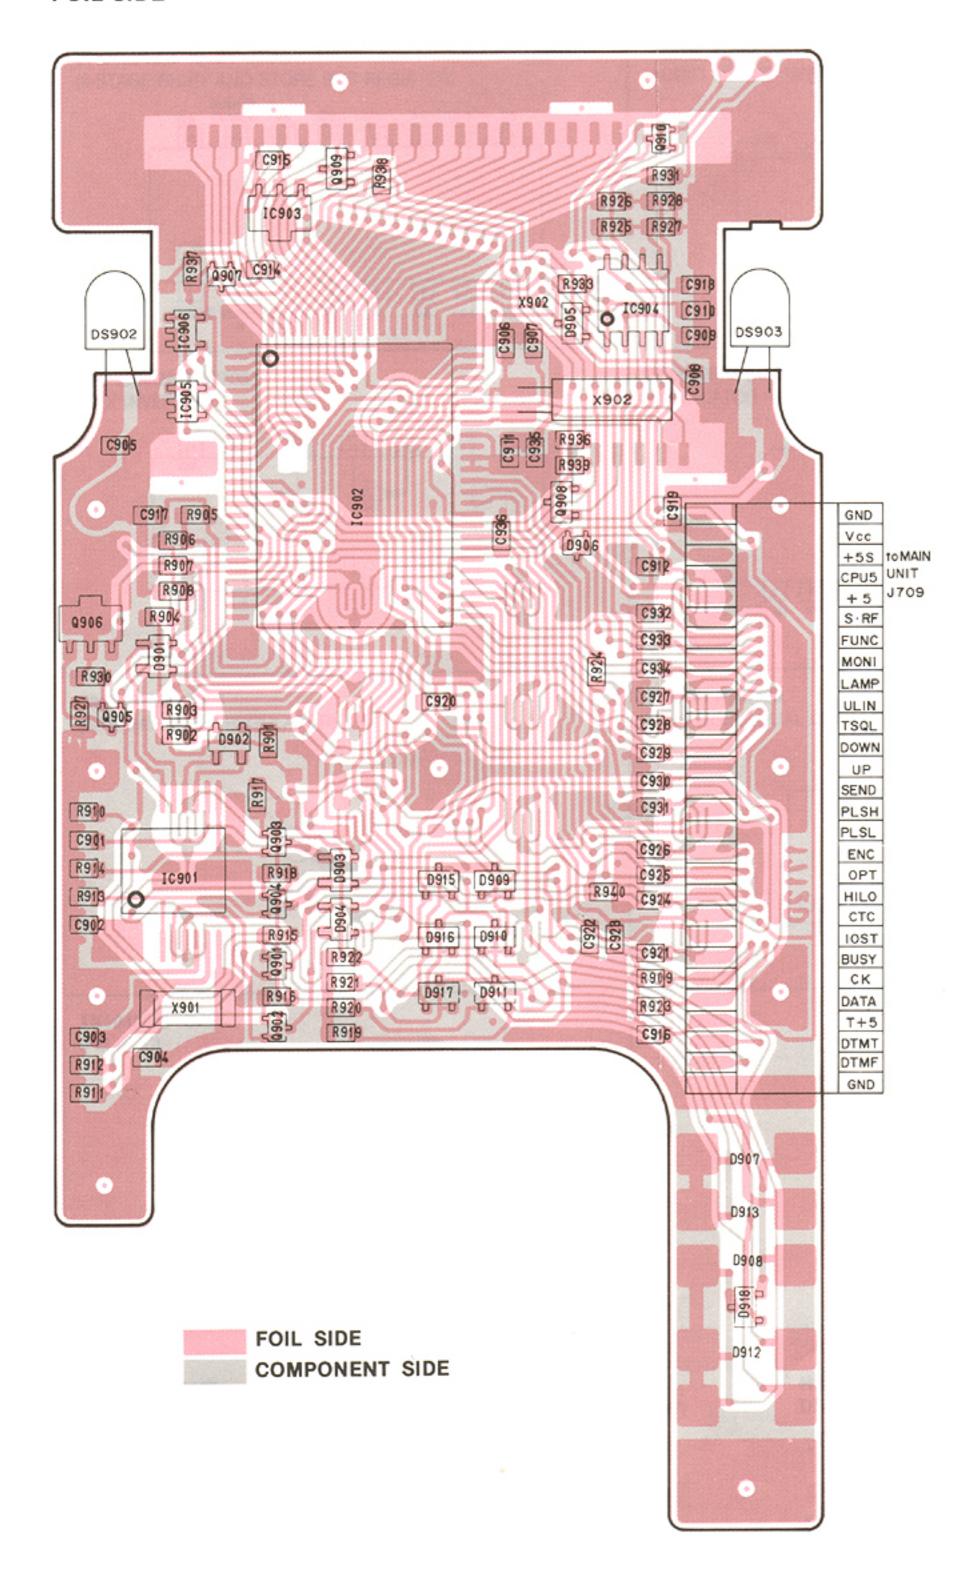

### 7-3 MAIN UNIT

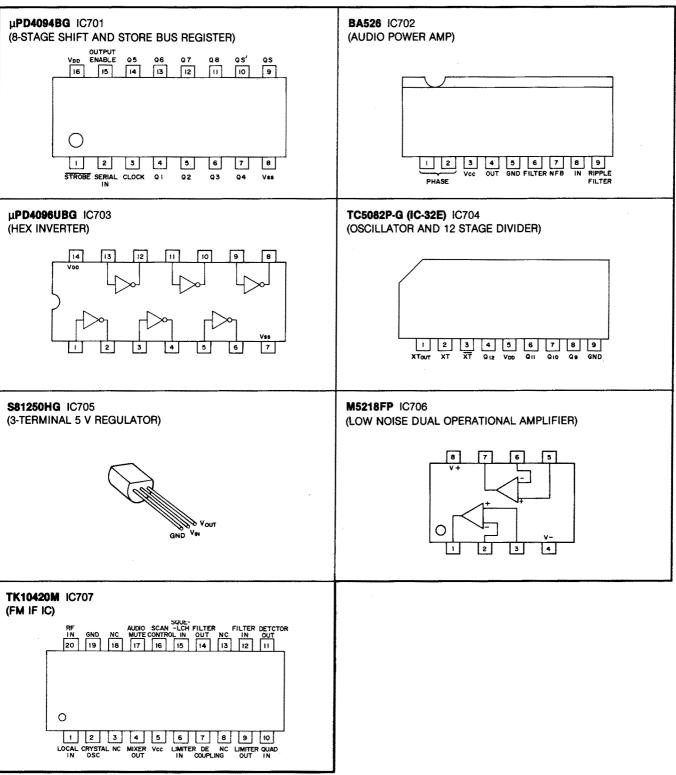




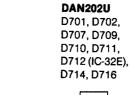








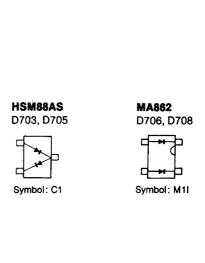

### MAIN UNIT

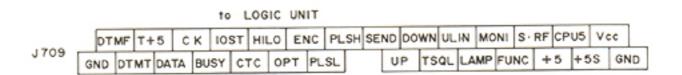


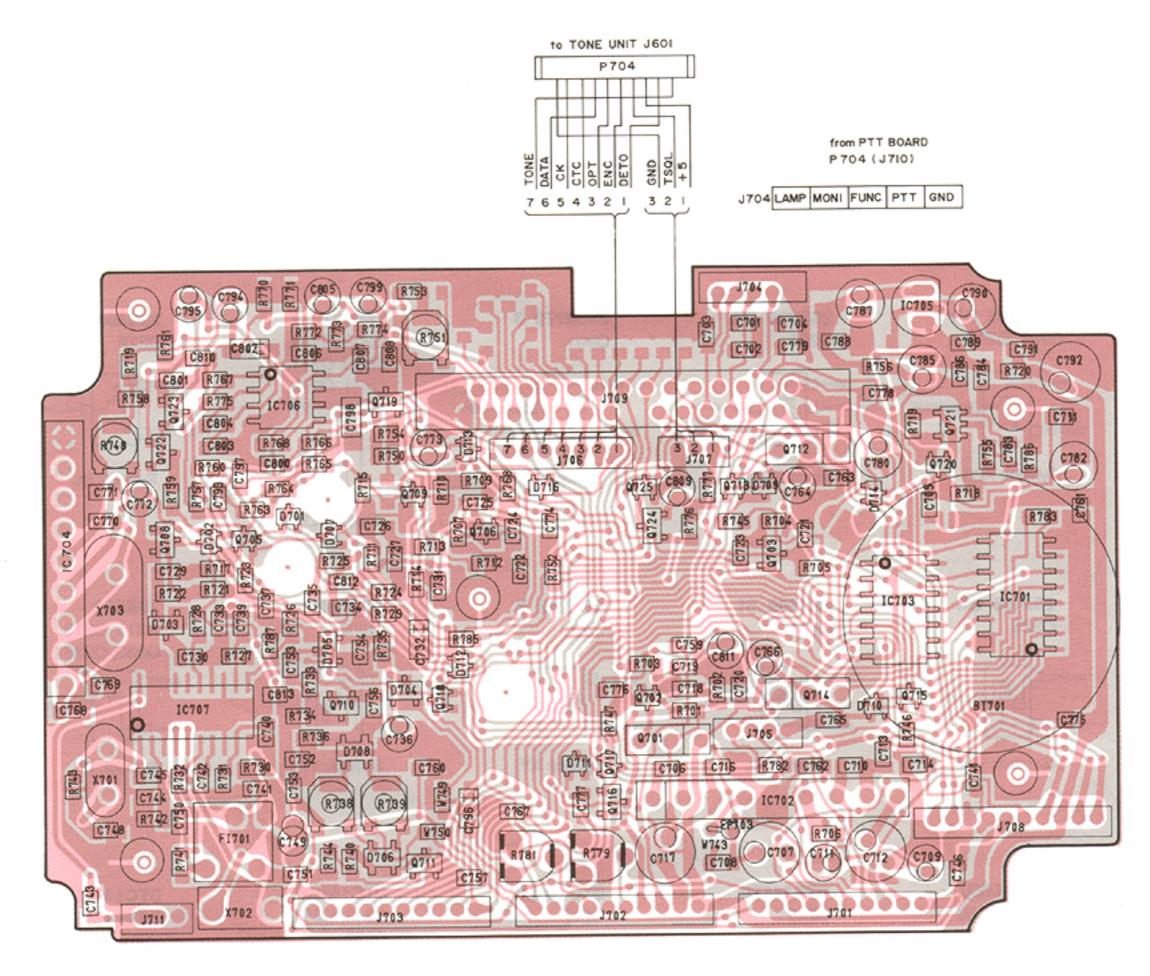

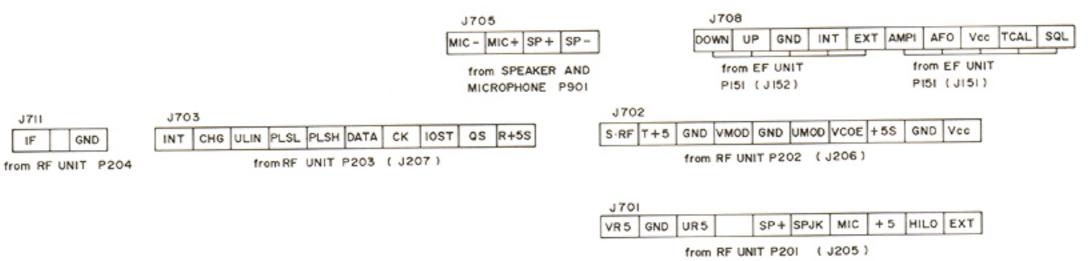




## PTT BOARD

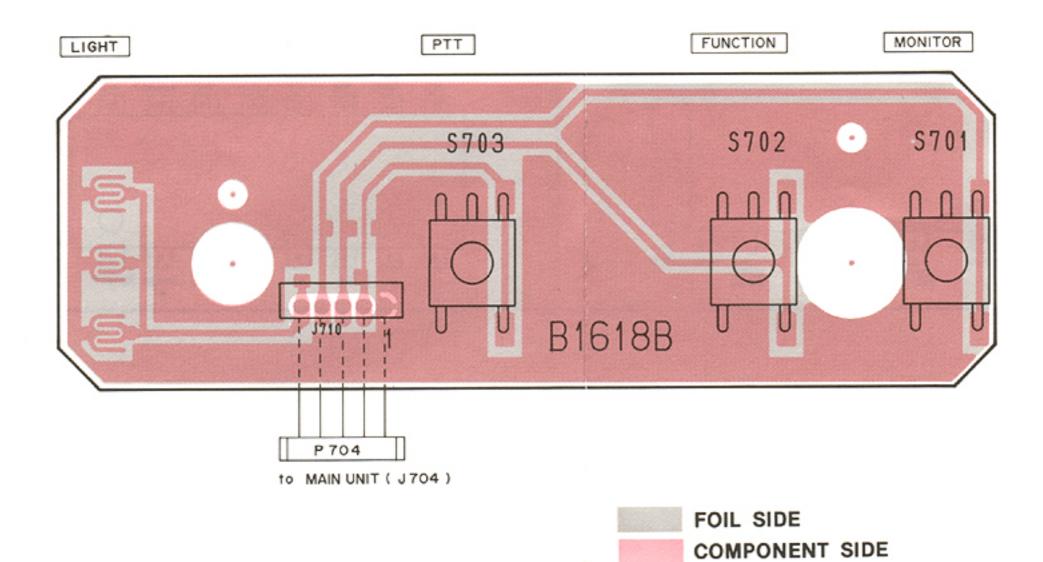



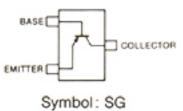

2SC3770 3


Q710, Q711


Symbol: JY3

COLLECTOR


BASE -


EMITTER [

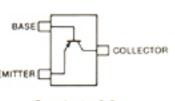


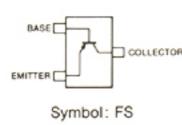


2SA1576 S

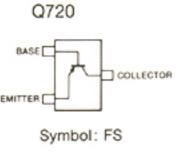

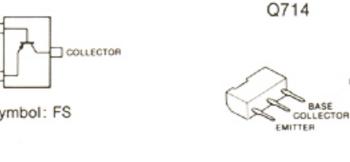


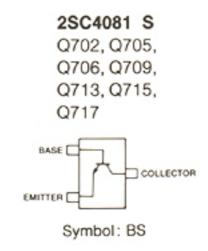

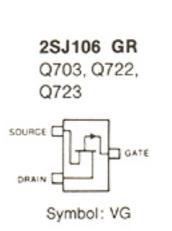



2SB909M R

Q701, Q712,

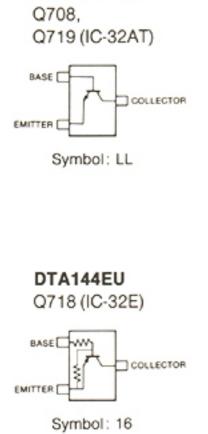



2SC2712 BL

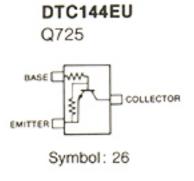

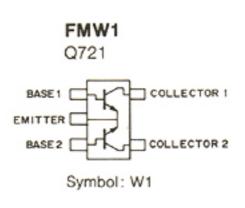


### 7-4 RF UNIT (1)

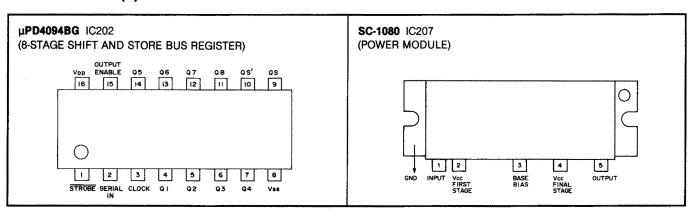


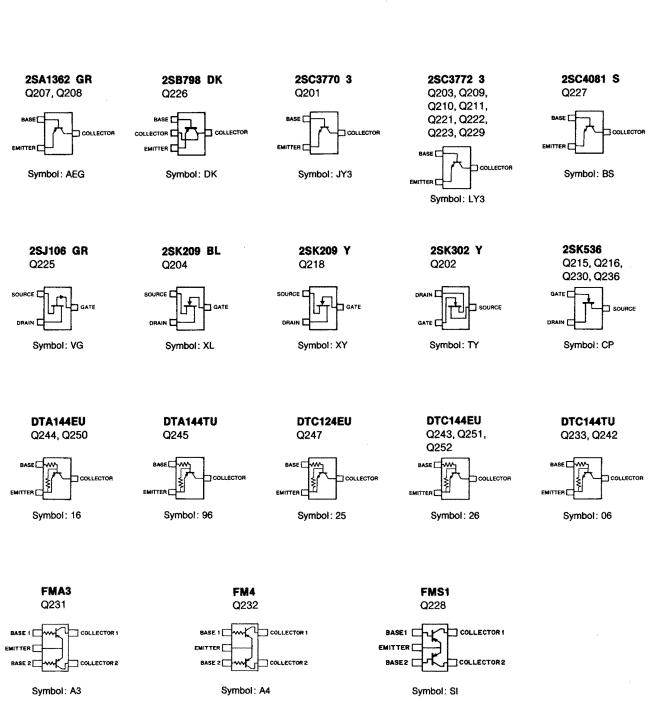

## **COMPONENT SIDE**

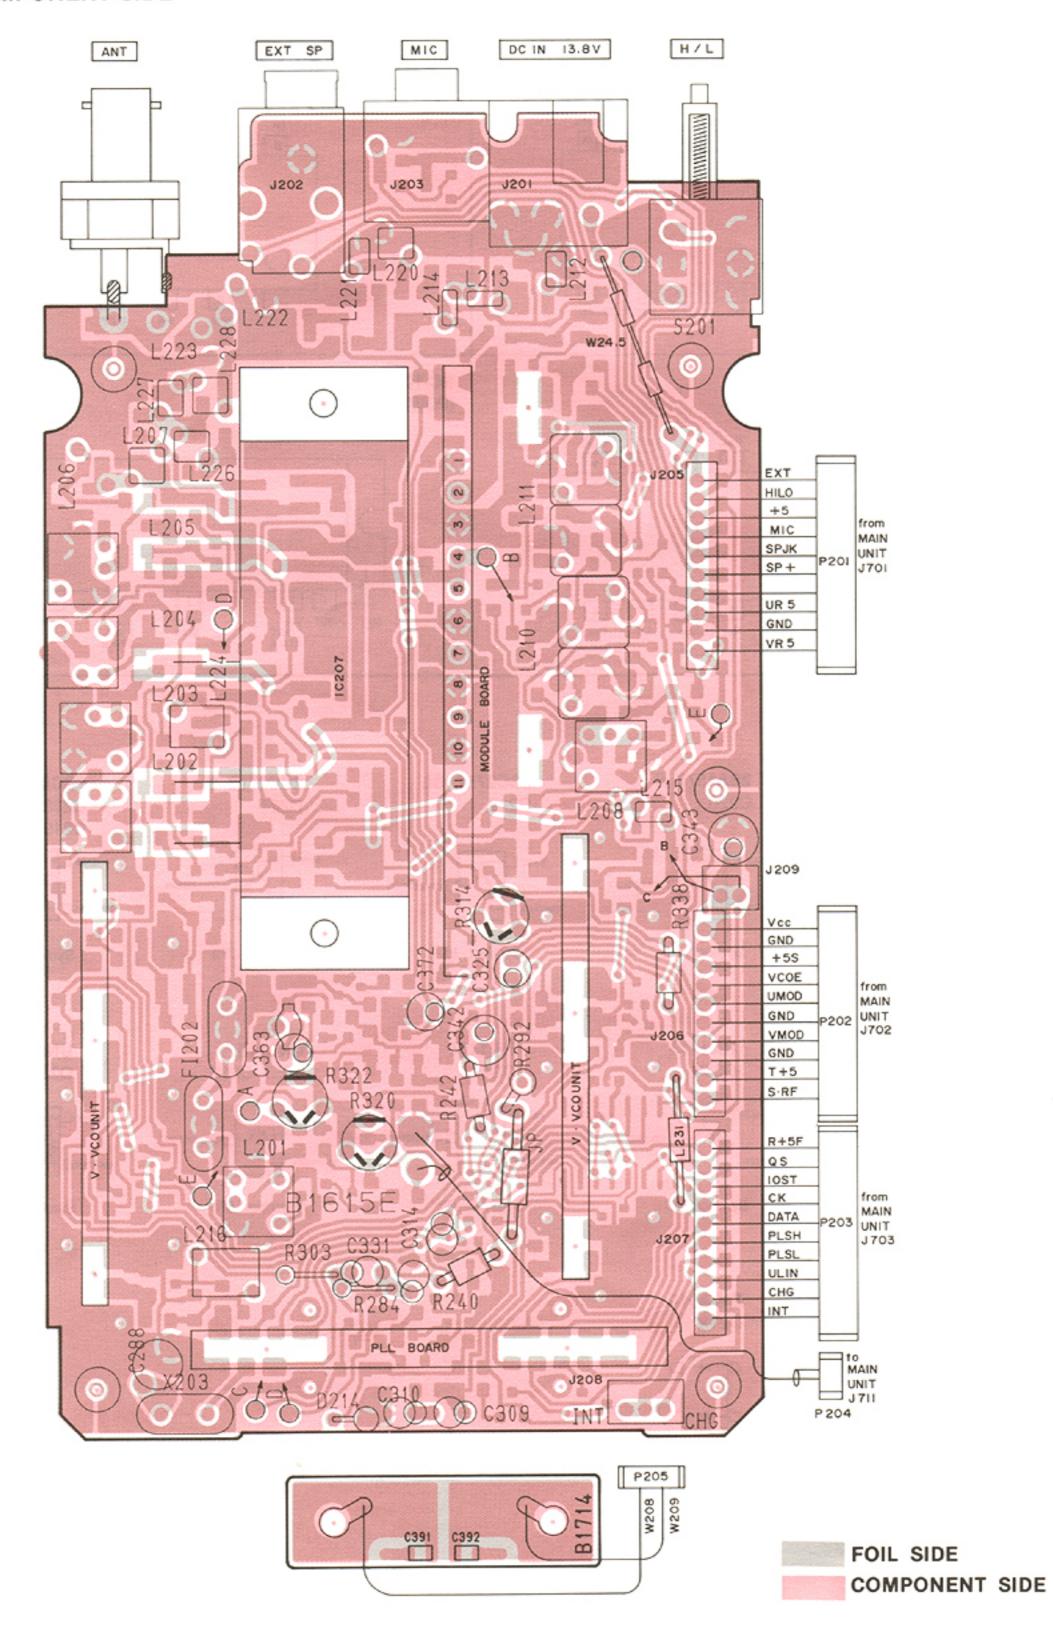

# FOIL SIDE

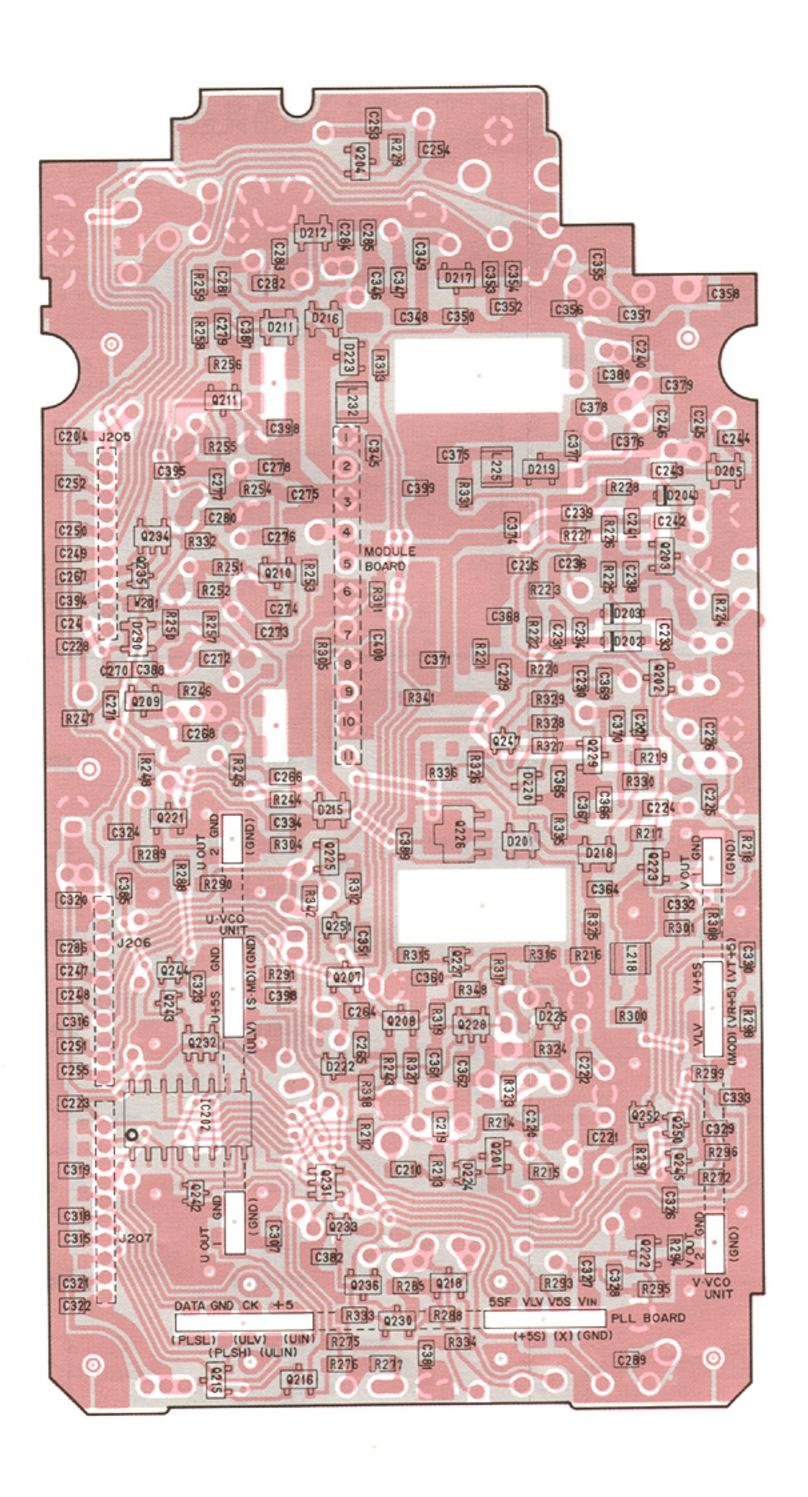

**1SS153** D219, D223



Symbol: A9

**1SS154** D217



Symbol: BA

1SV172

D220



Symbol: BE

DA204U

D224




Symbol: K

### DAN202U D222, D225



Symbol: N

### MA334 B D202, D203, D204

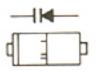

Symbol: 6D82

### MA862


D201, D205, D212, D215, D216, D218




Symbol: M1I

FOIL SIDE COMPONENT SIDE


### 7-5 RF UNIT (2)

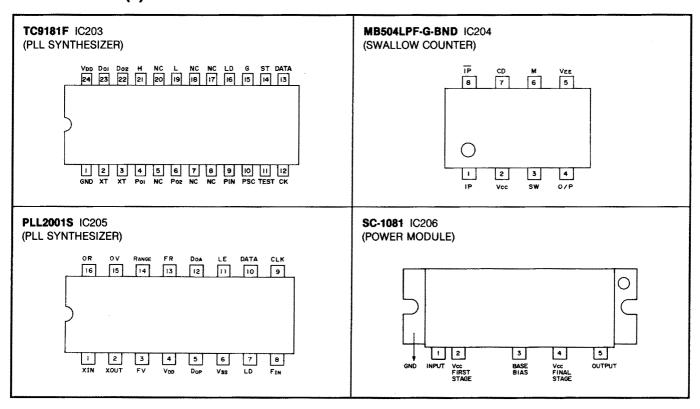

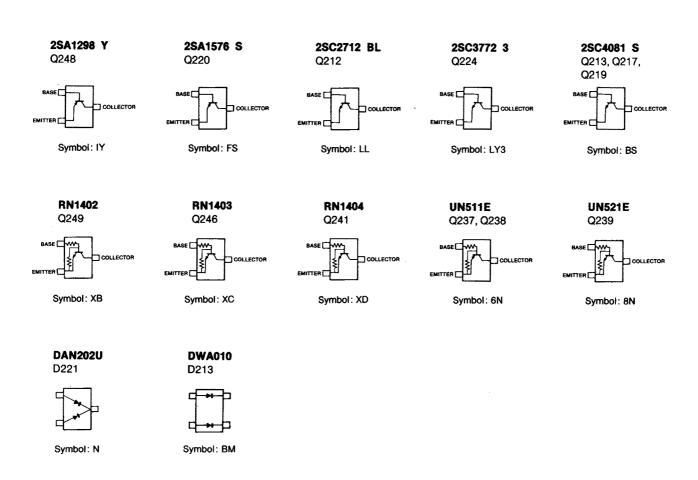


# **PLL BOARD**


# **COMPONENT SIDE**

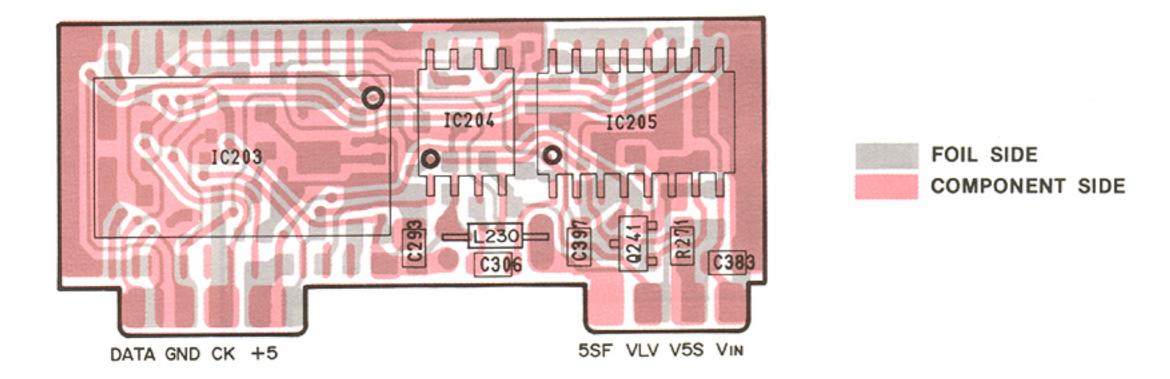


# **FOIL SIDE**

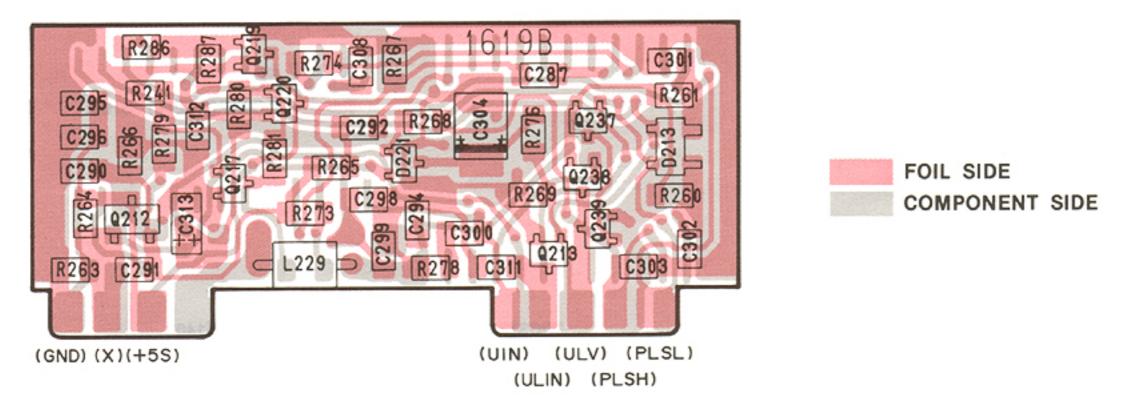



# MODULE BOARD

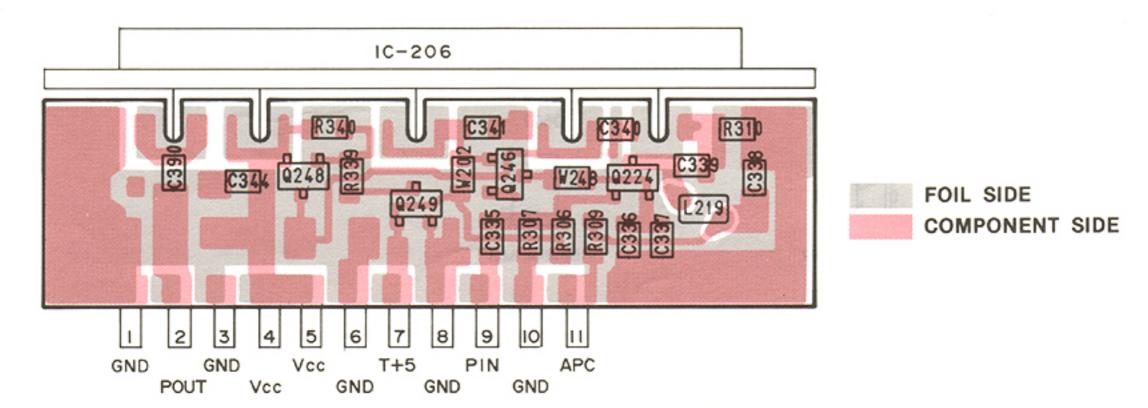

# 7-6 U-VCO UNIT

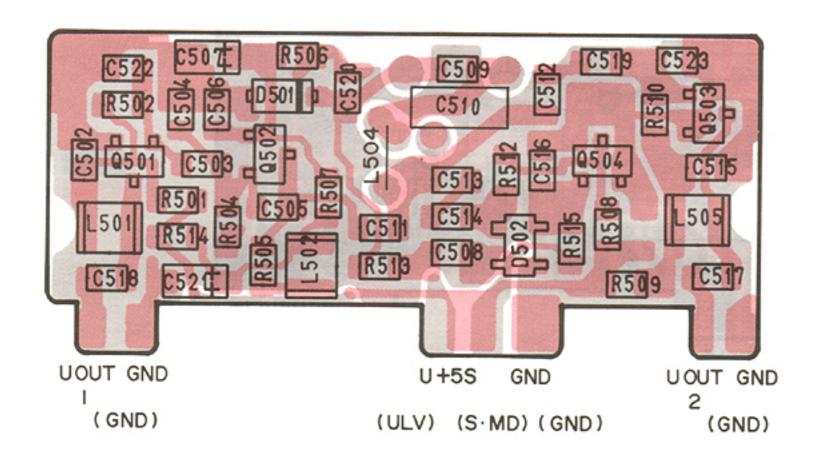


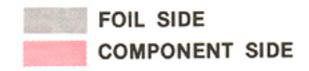

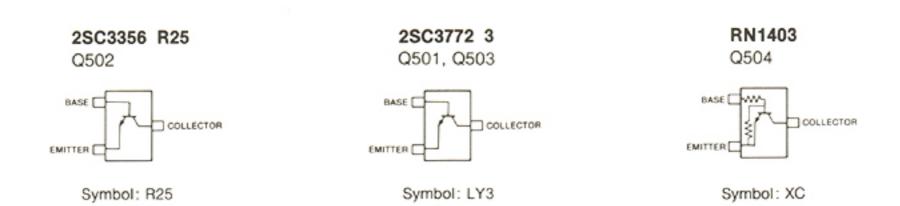






# 7-7 V-VCO UNIT

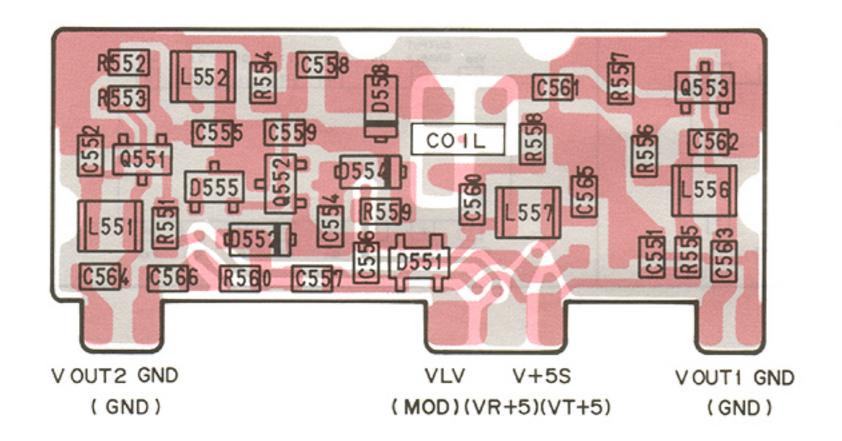

**COIL BOARD** 

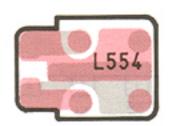

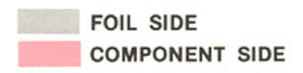

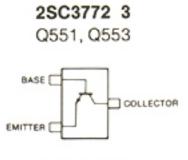



Symbol: LY3







Symbol: TY

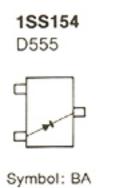

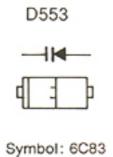



**MA333** 

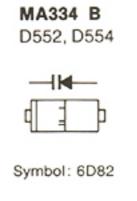

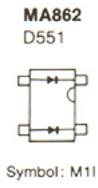

# 7-8 TONE UNIT (IC-32AT)

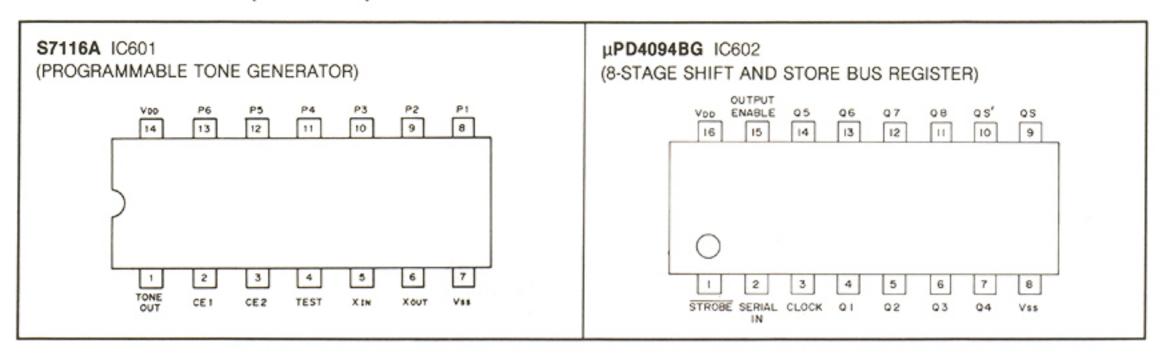

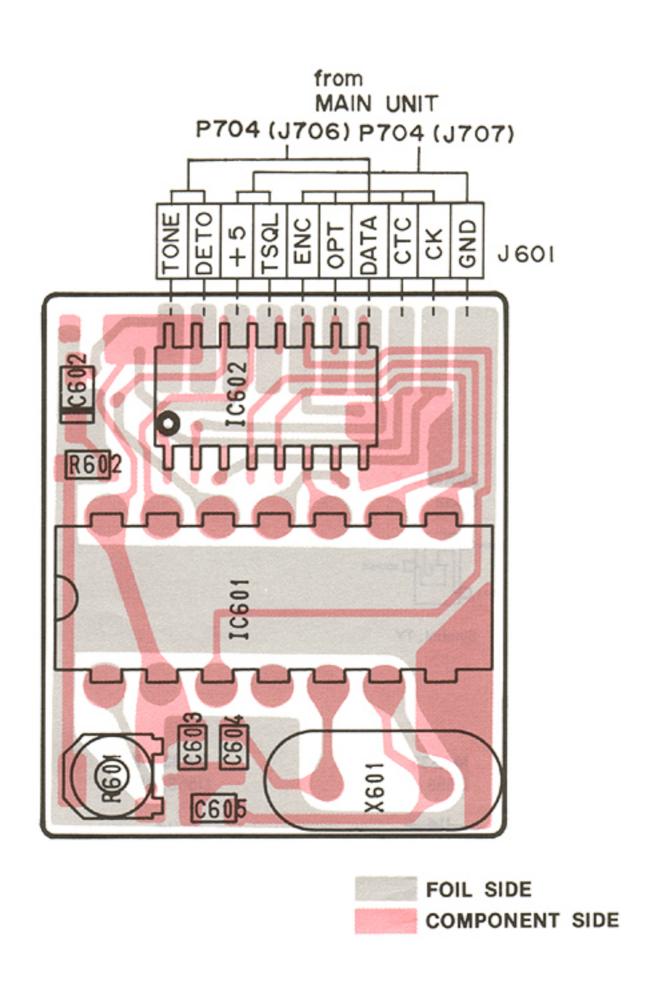

# SECTION 8 PARTS LIST

### [EF UNIT]

[EF UNI		
REF. NO.	DESCRIPTION	PART NO.
D151	Diode	1SS133
D152	Zener	RD20E B2
R151	Variable Resistor	10 kΩ A RK097111101NA
R152	Variable Resistor	10 kΩ B RK0971110051A (IC-32A/AT)
R152	Variable Resistor	10 kΩ B RK0971114003A (IC-32E)
]		
C151	Ceramic	47 pF 50 V
C152	Ceramic	47 pF 50 V
C153	Ceramic	47 pF 50 V
RL151	Relay	OUC-SH-114D
J151	Connector	TZB-P05H-A1
J152	Connector	TZB-P05H-A1
P151	Connector	PI28A10F
S151	Encoder	SRBM1L040A
EP151	P.C. Board	B-1617B

### [LOGIC UNIT]

REF. NO.	DESCRIPTION	PART NO.
IC901	IC	LR40872 (IC-32AT)
IC902	IC	μPD75308GF-100-3B9
IC903	IC .	S-8054ALB-LM
IC904	IC	LA6393M
IC905	IC	TC4S71F
IC906	IC	TC4S71F
Q901	Transistor	2SC4081 S (IC-32AT)
Q902	Transistor	2SC4081 S (IC-32AT)
Q903	Transistor	2SC4081 S (IC-32AT)
Q904	Transistor	2SC4081 S (IC-32AT)
Q905	Transistor	2SC4081 S
Q906	Transistor	2SB798 DK
Q907	Transistor	2SC4081 S
Q908	Transistor	2SA1362 GR
Q909	Transistor	RN1404
Q910 /	Transistor	2SC4081 S
D901	Diode	DWA010 (IC-32AT)
D902	Diode	DWA010 (IC-32AT)
D903	Diode	DWA010
D904	Diode	DWA010
D905	Diode	1SS193
D906	Diode	DAP202U
D907	Diode	1SS254
		(IC-32A/E: Australia, Europe)

### [LOGIC UNIT]

REF. NO.	DESCRIPTION	PART NO.
D909	Diode	1SS193 (IC-32A/AT: U.S.A., Asia)
D910	Diode	1SS193 (IC-32A/AT: U.S.A.)
D912	Diode	1SS254
D913	Diode	1SS254 1SS193 (IC-32E: Europe)
D915 D915	Diode Diode	1SS193 (IC-32E: Europe) 1SS184 (IC-32E: Italy)
D915 D915	Diode	1SS196 (IC-32A: Australia)
D916	Diode	1SS184 (IC-32E)
D916	Diode	1SS196 (IC-32A/AT)
D918	Diode	1SS196
X901 X902	Ceramic Resonator Crystal	CSAC3.58MGC300CD (IC-32AT) CR227 (4.1125 MHz)
R901	Resistor	82 kΩ MCR10
R902	Resistor	82 kΩ MCR10
R903	Resistor	82 kΩ MCR10
R904	Resistor	82 kΩ MCR10
R905	Resistor	10 kΩ MCR10
R906	Resistor	47 kΩ MCR10 47 kΩ MCR10
R907 R908	Resistor Resistor	47 kΩ MCR10 47 kΩ MCR10
R909	Resistor	1 MΩ MCR10
R910	Resistor	47 kΩ MCR10 (IC-32AT)
R911	Resistor	82 kΩ MCR10 (IC-32AT)
R912	Resistor	82 kΩ MCR10 (IC-32AT)
R913	Resistor	82 kΩ MCR10 (IC-32AT)
R914	Resistor	82 kΩ MCR10 (IC-32AT)
R915	Resistor	1 MΩ MCR10 (IC-32AT)
R916 R917	Resistor	1 MΩ MCR10 (IC-32AT) 1 MΩ MCR10 (IC-32AT)
R917	Resistor Resistor	1 MΩ MCR10 (IC-32AT)
R919	Resistor	150 kΩ MCR10
R920	Resistor	150 kΩ MCR10
R921	Resistor	150 kΩ MCR10
R922	Resistor	150 kΩ MCR10
R923	Resistor	1 MΩ MCR10
R924	Resistor	1 MΩ MCR10 330 kΩ MCR10
R925 R926	Resistor Resistor	390 kΩ MCR10
R927	Resistor	100 kΩ MCR10
R928	Resistor	100 kΩ MCR10
R929	Resistor	2.2 kΩ MCR10
R930	Resistor	1.5 kΩ MCR10
R931	Resistor	220 Ω MCR10
R933	Resistor	1.2 MΩ MCR10
R936 R937	Resistor Resistor	100 kΩ MCR10 100 kΩ MCR10
R938	Resistor	47 kΩ MCR10
R939	Resistor	1.2 MΩ MCR10
R940	Resistor	1 MΩ MCR10
		0.001 5 001445 (0.000
C901	Ceramic	0.001 µF GRM40 (IC-32AT)
C902 C903	Ceramic Ceramic	0.1 μF GRM40 F (IC-32AT) 30 pF GRM40 SL 50PT
0303	Jerannic	(IC-32AT)
C904	Ceramic	30 pF GRM40 SL 50PT (IC-32AT)
C905	Ceramic	0.001 μF GRM40
C906	Ceramic	15 pF GRM40
C907	Ceramic	15 pF GRM40
C908	Ceramic	330 pF GRM40 CH
C909	Ceramic	0.001 µF GRM40
C910 C911	Ceramic Ceramic	47 pF GRM40 0.001 μF GRM40
C911	Ceramic	0.001 μF GRM40 F
C912	Ceramic	470 pF 50 V
		·

# [LOGIC UNIT]

[200.0	<u> </u>		
REF. NO.	DESCRIPTION	PART	NO.
C914	Ceramic	0.01 µF	GRM40 F
C915	Ceramic	0.001 µF	
C916	Ceramic	470 pF	GRM40
C917	Ceramic	470 pF	GRM40
C918	Ceramic	470 pF	GRM40
C919	Ceramic	470 pF	GRM40
C920	Ceramic	470 pF	GRM40
C921	Ceramic	470 pF	GRM40
C922	Ceramic	470 pF	GRM40
C923	Ceramic	470 pF	GRM40
C924	Ceramic	470 pF	GRM40
C925	Ceramic	470 pF	GRM40
C926	Ceramic	470 pF	GRM40
C927	Ceramic	470 pF	GRM40
C928	Ceramic	470 pF	GRM40
C929	Ceramic	470 pF	GRM40
C930	Ceramic	470 pF	GRM40
C931	Ceramic	470 pF	GRM40
C932	Ceramic	470 pF	GRM40
C933	Ceramic	470 pF	GRM40
C934	Ceramic	470 pF	GRM40
C935	Ceramic	470 pF	GRM40
C936	Ceramic	470 pF	GRM40
1			·
P901	Connector	P128A04F	
DS901	LED	CLN 040VC	
DS901 DS902	i	SLN-210VC HRS-3060A	
DS902 DS903	Lamp	HRS-3060A	
DS903	Lamp LCD	LD-BU9246	
D0304	LOD	LD-D09240	JU
		1410000	
MC901	Microphone	KUC2023-0	11-006
npoc.	0	0100000	
SP901	Speaker	Si36D04	
	D.O. Daniel	047405	
EP901 EP902	P.C. Board F.P.C Board	B-1712D	
EP902 EP903	LCD Contact Strip	B-1622B SPCN-575	
EF9U3	LOD COMACI SIMP	9UCIN-019	
]			

### [MAIN UNIT]

REF. NO.	DESCRIPTION	PART NO.
IC701	IC	μPD4094BG
IC702	IC	BA526
IC703	IC	μPD4069UBG
IC704	IC	TC5082P-G (IC-32E)
IC705	IC	S81250HG
IC706	IC	M5218FP
IC707	IC	TK10420M
Q701	Transistor	2SB909M R
Q702	Transistor	2SC4081 S
Q703	FET	2SJ106 GR
Q705	Transistor	2SC4081 S
Q706	Transistor	2SC4081 S
Q708	Transistor	2SC2712 BL
Q709	Transistor	2SC4081 S
Q710	Transistor	2SC3770 3
Q711	Transistor	2SC3770 3
Q712	Transistor	2SB909M R
Q713	Transistor	2SC4081 S

# [MAIN UNIT]

r -	,,,,,	
REF. NO.	DESCRIPTION	PART NO.
Q714	Transistor	2SB909M R
Q715	Transistor	2SC4081 S
Q716	Transistor	2SA1162 GR
Q717 Q718	Transistor	2SC4081 S
Q718 Q719	Transistor Transistor	DTA144EU (IC-32E) 2SC2712 BL (IC-32AT)
Q719 Q720	Transistor	2SA1576 S
Q721	Transistor	FMW1
Q722	FET	2SJ106 GR
Q723	FET	2SJ106 GR
Q724	Transistor	2SA1162 GR
Q725	Transistor	DTC144EU
D701	Diode	DAN202U
D702	Diode	DAN202U
D703	Diode	HSM88AS
D704	Diode	1SS187
D705	Diode	HSM88AS MA862
D706 D707	Diode Diode	DAN202U
D708	Diode	MA862
D709	Diode	DAN202U
D710	Diode	DAN202U
D711	Diode	DAN202U
D712	Diode	DAN202U (IC-32E)
D713 D714	Diode Diode	DAP202U (IC-32AT) DAN202U
D714	Diode	DAN202U
F1701	Ceramic	CFUM455E
		<b>979.1.</b> (99.19.19.)
X701	Crystal	CR214 (30.42 MHz) CDB455C7A
X702 X703	Discriminator Crystal	CR251 (7.168 MHz) (IC-32E)
X100	Orysta:	0/1207 (7.100 W/12) (10-02E)
R701	Resistor	820 Ω MCR10
R702	Resistor	680 Ω MCR10
R703	Resistor	4.7 kΩ MCR10
R704 R705	Resistor Resistor	1 MΩ MCR10 100 kΩ MCR10
R705	Resistor	1 kΩ MCR10
R707	Resistor	4.7 kΩ MCR10
R708	Resistor	39 kΩ MCR10
R709	Resistor	39 kΩ MCR10
R710	Resistor	4.7 kΩ MCR10
R711 R712	Resistor Resistor	150 kΩ MCR10 2.2 kΩ MCR10
R713	Resistor	15 kΩ MCR10
R714	Resistor	27 kΩ MCR10
R715	Resistor	330 kΩ MCR10
R717	Resistor	47 kΩ MCR10
R718	Resistor	560 Ω MCR10 3.3 kΩ MCR10
R719 R720	Resistor Resistor	680 Ω MCR10
R721	Resistor	1 MΩ MCR10
R722	Resistor	100 kΩ MCR10
R723	Resistor	22 kΩ MCR10
R724	Resistor	6.8 kΩ MCR10
R725	Resistor	2.2 kΩ MCR10
R726 R727	Resistor Resistor	470 Ω MCR10 330 kΩ MCR10
R728	Resistor	100 kΩ MCR10
R729	Resistor	5.6 kΩ MCR10
R730	Resistor	1.5 kΩ MCR10
R731	Resistor	47 kΩ MCR10
R732	Resistor	1.5 kΩ MCR10 680 kΩ MCR10
R733 R734	Resistor Resistor	10 kΩ MCR10
R735	Resistor	100 kΩ MCR10
R736	Resistor	47 kΩ MCR10
R738	Trimmer	22 kΩ B RH04A3AJ4J01A

#### [MAIN UNIT]

#### REF. NO. DESCRIPTION PART NO. R739 Trimmer 22 kΩ B RH04A3AJ4J01A MCR10 R740 Resistor 560 kΩ R741 Resistor $1.5~k\Omega$ MCR10 R742 MCR10 Resistor $4.7 \text{ k}\Omega$ R743 MCR<sub>10</sub> Resistor 1.5 kQ R744 $4.7 k\Omega$ MCR<sub>10</sub> Resistor R745 Resistor $10~k\Omega$ MCR10 R746 Resistor $5.6~k\Omega$ MCR10 R747 Resistor 22 k $\Omega$ MCR10 R748 RH04A3A14J02A Trimmer 10 kO B (IC-32E) R749 Resistor 47 kΩ MCR10 (IC-32E) R750 Resistor 150 k**Ω** MCR10 (IC-32AT) R751 Trimmer 10 kΩ B RH04A3A14J02A (IC-32AT) R752 Resistor 33 kΩ MCR10 (IC-32AT) R753 Resistor 22 kΩ MCR10 (IC-32AT) R754 Resistor 100 kΩ MCR10 (IC-32AT) R755 4.7 kΩ MCR10 Resistor R756 Resistor $4.7~k\Omega$ MCR10 R757 Resistor 68 kΩ MCR10 MCR10 R758 Resistor $2.2 M\Omega$ R759 Resistor MCR10 100 kO R760 Resistor 100 kΩ MCR10 R761 Resistor $2.2~M\Omega$ MCR10 R763 MCR10 Resistor 68 kΩ R764 Resistor 220 kΩ MCR10 **B765** MCR10 Resistor 82 kΩ R766 Resistor 82 kΩ MCR10 R767 Resistor 270 kΩ MCR10 R768 Resistor 220 k $\Omega$ MCR10 MCR10 R770 Resistor 120 Ω (IC-32A/AT/E: except U.S.A.) Resistor 270 Ω MCR10 (IC-32A/AT: U.S.A.) R771 Resistor 240 kΩ MCR10 R772 Resistor 180 kO MCR10 R773 Resistor 47 kΩ MCR10 R774 Resistor 1 kΩ MCR10 R775 180 kΩ Resistor MCR10 MCR10 R776 Resistor 10 kΩ R777 470 Ω MCR10 Resistor R779 Trimmer 47 kΩ B RH0421CS4J08A R781 Trimmer 47 kΩ B RH0421CS4J08A R782 Resistor 33 kΩ MCR10 R783 MCR10 Resistor 220 kO R785 MCR<sub>10</sub> Resistor $2.2 k\Omega$ R786 Resistor 22 kΩ MCR10 R787 Resistor $8.2~k\Omega$ MCR10 C701 470 pF GRM40 Ceramic C702 Ceramic 470 pF GRM40 C703 Ceramic 470 pF GRM40 470 pF C704 Ceramic GRM40 C705 0.1 µF GRM40 F Ceramic C706 Ceramic 0.01 µF GRM40 B 25PT C707 Electrolytic 100 µF 6.3 V RC2 D=5.0 C708 470 pF Ceramic GRM40 C709 Electrolytic 2.2 µF 35 V MS5 D=3.0 GRM40 C710 0.001 µF Ceramic C711 Electrolytic 1 µF 50 V MS5 C712 Electrolytic 47 µF 16 V RC2 D=5.0 C713 Ceramic 0.1 µF GRM40 F C714 GRM40 Ceramic 47 pF C716 GRM40 Ceramic 0.001 µF C717 16 V RC2 D=5.0 Electrolytic 47 µF C718 Ceramic 470 pF GRM40 C719 Ceramic 470 pF GRM40 C720 Ceramic 470 pF GRM40 0.001 µF C721 Ceramic GRM40 C722 Ceramic GRM40 F 0.1 µF 0.1 µF GRM40 F C723 Ceramic C724 Ceramic 0.001 µF GRM40 C725 Ceramic 0.0022 µF GRM40

#### [MAIN UNIT]

REF. NO.	DESCRIPTION	PAR	Γ NO.
C726	Ceramic	0.01 μF	GRM40 B 25PT
C727	Ceramic	0.01 µF	GRM40 B 25PT
C729	Ceramic	0.1 μF	GRM40 F
C730 C731	Ceramic Ceramic	0.001 μF 0.01 μF	GRM40 GRM40 B 25PT
C731	Tantalum	0.01 μF	35 V SV
C733	Ceramic	33 pF	GRM40
C734	Ceramic	0.001 μF	GRM40
C735	Ceramic	470 pF	GRM40
C736 C737	Electrolytic Ceramic	0.22 μF 0.001 μF	50 V MS5 GRM40
C739	Ceramic	0.001 µF	
C740	Ceramic	82 pF	GRM40
C741	Ceramic	0.1 μF	GRM40 F
C742 C743	Ceramic Ceramic	0.1 μF 0.001 μF	GRM40 F GRM40
C744	Ceramic	18 pF	GRM40
C745	Ceramic	56 pF	GRM40
C746	Ceramic	470 pF	GRM40
C747	Ceramic	470 pF	GRM40
C748 C749	Ceramic Tantalum	0.001 μF 2.2 μF	GRM40 16 V DN
C750	Ceramic	0.1 μF	GRM40 F
C751	Ceramic	100 pF	GRM40
C752	Ceramic	0.1 μF	GRM40 F
C753 C754	Ceramic Ceramic	470 pF 100 pF	GRM40 GRM40
C756	Ceramic	470 pF	GRM40
C757	Ceramic	0.1 μF	GRM40 F
C758	Ceramic	0.1 μF	GRM40 F
C759	Ceramic	470 pF	GRM40 GRM40
C760 C761	Ceramic Ceramic	470 pF 470 pF	GRM40
C762	Ceramic	470 pF	GRM40
C763	Ceramic	0.1 μF	GRM40 F
C764	Electrolytic	2.2 μF	35 V MS5 D=3.0 GRM40 F
C765 C766	Ceramic Electrolytic	0.1 μF 4.7 μF	16 V MS5
C767	Ceramic	0.1 μF	GRM40 F
C768	Ceramic	47 pF	GRM40 (IC-32E)
C769 C770	Ceramic Ceramic	10 pF 10 pF	GRM40 (IC-32E) GRM40 (IC-32E)
C770	Ceramic	0.001 µF	
C772	Electrolytic	0.1 μF	50 V MS5 (IC-32E)
C773	Electrolytic	4.7 μF	16 V MS5 (IC-32AT)
C774	Ceramic	0.1 μF	GRM40 F (IC-32AT) GRM40
C775 C776	Ceramic Ceramic	470 pF 470 pF	GRM40
C777	Ceramic	470 pF	GRM40
C778	Ceramic	470 pF	GRM40
C779	Ceramic	0.001 μF	GRM40
C780 C781	Electrolytic Ceramic	47 μF 0.001 μF	6.3 V RC2 D=4.0 GRM40
C782	Electrolytic	47 μF	6.3 V RC2 D=4.0
C783	Ceramic	470 pF	GRM40
C784	Ceramic	470 pF	. GRM40
C785 C786	Electrolytic Ceramic	47 μF 0.001 μF	6.3 V RC2 D=4.0 GRM40
C787	Electrolytic	47 μF	6.3 V RC2 D=4.0
C788	Ceramic	470 pF	GRM40
C789	Ceramic	470 pF	GRM40
C790 C791	Electrolytic Ceramic	22 μF 0.001 μF	16 V RC2 D=4.0 GRM40
C792	Electrolytic	47 μF	16 V RC2 D=5.0
C793	Ceramic	100 pF	GRM40
C794	Electrolytic	0.47 μF	50 V MS5
C795 C796	Electrolytic Tantalum	0.47 μF 1 μF	50 V MS5 16 V SV
C797	Ceramic	0.001 μF	GRM40 SL 50PT
C798	Ceramic	0.0022 µF	GRM42-6 SL 50PT
C799	Electrolytic	4.7 μF	16 V MS5
C800 C801	Ceramic Ceramic	120 pF 0.1 μF	GRM40 GRM40 F
C802	Tantalum	0.22 μF	TESVA1V224K1-8L
		(IC-32A/AT/	E: except U.S.A.)
	-		

# [MAIN UNIT]

[10074117 0		
REF. NO.	DESCRIPTION	PART NO.
C802	Tantalum	0.1 μF TESVA1V104K1-8L (IC-32/AT: U.S.A.)
C803	Ceramic	
C804	Ceramic	470 pF GRM40 470 pF GRM40 10 μF 10 V MS5 D=3.0
C805	Electrolytic	10 μF 10 V MS5 D=3.0
C806	Ceramic	0.0047 µF GRM40
C807	Ceramic	0.001 µF GRM40 B 25PT
C808	Ceramic	0.001 µF GRM40
C809	Electrolytic	10 μF 10 V MS5 D=3.0
C810	Ceramic	0.1 μF GRM40 F
C811	Electrolytic	$2.2 \mu\text{F}$ 35 V MS5 D=3.0
C812	Ceramic	47 pF GRM40
C813	Ceramic	10 μF 10 V MS5 D=3.0 0.0047 μF GRM40 0.001 μF GRM40 B 25PT 0.001 μF GRM40 10 μF 10 V MS5 D=3.0 0.1 μF GRM40 F 2.2 μF 35 V MS5 D=3.0 47 pF GRM40 0.001 μF GRM40
J701	Connector	PI28A10M
J702	Connector	PI28A10M
J703	Connector	PI28A10M
J704	Connector	PI28A05M
J705	Connector	PI28A04M
J706	Connector	TZB-P07H-A1
J707	Connector	TZB-P03H-A1
J708	Connector	PI28A10M
J709	Connector	CFP4128-0121
J710	Connector	TZB-P05H-A1
J711	Connector	PI28A03M
P704 P706	Connector Connector	PI28A10F PI28A05F
S701	Switch	SKHMPD004A
S702	Switch	SKHMPD004A
S703	Switch	SKHMPD004A
BT701	Lithium Battery	BR2325-1HC
W749 W750	Jumper Jumper	MCR10-JPW MCR10-JPW
EP701 EP702 EP703	P.C. Board P.C. Board Ferrite Bead	B-1614D (MAIN) B-1618B (PTT) DL2-OP2.6-3-1.2H

### [RF UNIT]

REF. NO.	DESCRIPTION	PART NO.	
IC202	IC	µPD4094BG	
IC203	IC	TC9181F	
IC204	IC	MB504LPF-G-BND	
IC205	IC	PLL2001S	
IC206	IC	SC-1081	
IC207	IC	SC-1080	
Q201 Q202 Q203 Q204 Q207	Transistor FET Transistor FET Transistor	2SC3770 3 2SK302 Y 2SC3772 3 2SK209 BL 2SA1362 GR	
Q208	Transistor	2SA1362 GR	
Q209	Transistor	2SC3772 3	
Q210	Transistor	2SC3772 3	

### [RF UNIT]

IRF UNI	1]	
REF. NO.	DESCRIPTION	PART NO.
Q211	Transistor	2SC3772 3
Q212	Transistor	2SC2712 BL
Q213 Q215	Transistor	2SC4081 S
Q215 Q216	FET FET	2SK536 2SK536
Q216 Q217	Transistor	2SC4081 S
Q218	FET	2SK209 Y
Q219	Transistor	2SC4081 S
Q220	Transistor	2SA1576 S
Q221 Q222	Transistor Transistor	2SC3772 3 2SC3772 3
Q222 Q223	Transistor	2SC3772 3 2SC3772 3
Q224	Transistor	2SC3772 3
Q225	FET	2SJ106 GR
Q226	Transistor	2SB798 DK
Q227 Q228	Transistor Transistor	2SC4081 S FMS1
Q228 Q229	Transistor Transistor	PMS1 2SC3772 3
Q229 Q230	FET	2SK536
Q231	Transistor	FMA3
Q232	Transistor	FMA4
Q233	Transistor	DTC144TU
Q236 Q237	FET Transistor	2SK536 UN511E
Q237 Q238	Transistor	UN511E UN511E
Q239	Transistor	UN521E
Q241	Transistor	RN1404
Q242	Transistor	DTC144TU
Q243	Transistor	DTC144EU
Q244 Q245	Transistor Transistor	DTA144EU DTA144TU
Q245 Q246	Transistor	RN1403
Q246 Q247	Transistor	DTC124EU
Q248	Transistor	2SA1298 Y
Q249	Transistor	RN1402
Q250	Transistor	DTA144EU
Q251 Q252	Transistor Transistor	DTC144EU DTC144EU
Q252	Transisioi	D1C144EU
D201	Diode	MA862
D202	Varicap	MA334 B
D203 D204	Varicap Varican	MA334 B MA334 B
D204 D205	Varicap Diode	MA334 B MA862
D203 D212	Diode	MA862
D213	Diode	DWA010
D214	Zener	RD6.8E B2
D215	Diode	MA862
D216 D217	Diode Diode	MA862 1SS154
D217 D218	Diode Diode	MA862
D219	Diode	188153
D220	Diode	1SV172
D221	Diode	DAN202U
D222	Diode Diode	DAN202U 1SS153
D223 D224	Diode Diode	1SS153 DA204U
D224 D225	Diode	DAN202U
F1202	Monolithic	30M15B
X203	Crystal	CR247 (10.0 MHz)
L201	Coil	LS-320
L202	Coil	LS-319
L203	Coil	LS-321
L204	Coil	LS-321
L205 L206	Coil Coil	LS-321 LA-228
L206 L207	Coil	LA-227
L208	Coil	LS-319

#### [RF UNIT]

#### REF. NO. DESCRIPTION PART NO. L210 Coil LS-338 L211 Coil LS-337 L212 Coil LA-224 L213 Coil LA-223 L214 Coil LA-223 L215 Coil LA-224 L216 Coil LA-247 L218 Coil LQN2A R15K L219 LA-224 Coil L220 Coil LA-224 L221 Coil LA-225 L222 Coil LA-223 L223 Coil LA-232 1224 Coil LA-236 LQH3N 1R5M L225 Coil L226 Coil LA-226 L227 Coil LA-225 L228 Coil LA-227 L229 Coil LAL02TA 100K L230 Coil LAL02TA 100K L231 Coil LAL02TA 1R5M L232 LQN2A 56NM Coil R212 1.5 kΩ MCR10 Resistor R213 1 kΩ MCR10 Resistor MCR10 39 k $\Omega$ R214 Resistor R215 Resistor $10\;k\Omega$ MCR<sub>10</sub> R216 Resistor 22 kΩ MCR10 R217 10 kΩ MCR10 Resistor R218 Resistor 470 Ω MCR10 R219 Resistor $4.7\;k\Omega$ MCR<sub>10</sub> R220 Resistor 56 Ω MCR10 R221 Resistor $2.2 \text{ k}\Omega$ MCR10 100 kΩ MCR10 R222 Resistor R223 Resistor 100 kΩ MCR10 R224 Resistor 22 Ω MCR10 R225 Resistor 330 Ω MCR10 R226 Resistor 15 kΩ MCR10 MCR10 R227 Resistor 5.6 kΩ MCR10 R228 Resistor $100~k\Omega$ R229 Resistor 33 Ω MCR10 R240 Resistor 100 Ω R20 R241 Resistor 47 kΩ MCR10 R242 6.8 kQ R20 Resistor MCR10 R243 Resistor $6.8 \text{ k}\Omega$ R244 Resistor 10 kΩ MCR10 R245 Resistor 1 kΩ MCR10 R246 Resistor 150 kΩ MCR10 68 kΩ MCR10 R247 Resistor R248 Resistor 22 Q MCR10 R251 Resistor 22 Ω MCR10 R252 Resistor 470 Ω MCR10 R253 39 kΩ MCR10 Resistor R254 Resistor 47 Ω MCR10 R255 MCR10 Resistor 22 Q R256 MCR10 Resistor 39 kO R257 Resistor 47 kΩ MCR10 R260 Resistor 15 kΩ MCR10 R261 Resistor 15 $k\Omega$ MCR10 R263 100 kΩ MCR10 Resistor R264 100 kΩ MCR10 Resistor R265 Resistor 1 kΩ MCR10 R266 Resistor $2.2\;k\Omega$ MCR10 R267 Resistor 10 k $\Omega$ MCR10 R268 330 kΩ MCR10 Resistor MCR10 R269 Resistor 680 kO 680 kO MCR10 R270 Resistor R271 Resistor 330 k $\Omega$ MCR10 R272 Resistor 100 kΩ MCR10 R273 Resistor 1 kΩ MCR10 R274 $2.2 \text{ k}\Omega$ MCR10 Resistor MCR10 R275 Resistor 12 MO MCR<sub>10</sub> R276 Resistor 1 kΩ R277 Resistor $1.5\;k\Omega$ MCR10

#### [RF UNIT]

	· .		
REF. NO.	DESCRIPTION	PAR	T NO.
R278	Resistor	100 Ω	MCR10
R279	Resistor	47 kΩ	MCR10
R280	Resistor	10 k <b>Ω</b>	MCR10
R281	Resistor	47 kΩ	MCR10
R283	Resistor	4.7 kΩ	MCR10
R284	Resistor	1.8 kΩ	ELR20
R285	Resistor	100 kΩ	MCR10
R286 R287	Resistor	47 kΩ 10 kΩ	MCR10 MCR10
R288	Resistor Resistor	220 Ω	MCR10
R289	Resistor	22 kΩ	MCR10
R290	Resistor	5.6 kΩ	MCR10
R291	Resistor	150 kΩ	MCR10
R292	Resistor	8.2 kΩ	R20
R293	Resistor	470 Ω	MCR10
R294	Resistor	15 kΩ	MCR10
R295	Resistor	47 kΩ 100 kΩ	MCR10 MCR10
R296 R297	Resistor Resistor	47 kΩ	MCR10
R298	Resistor	47 kΩ	MCR10
R299	Resistor	100 kΩ	MCR10
R300	Resistor	100 Ω	MCR10
R301	Resistor	22 k $\Omega$	MCR10
R302	Resistor	5.6 k <b>Ω</b>	MCR10
R303	Resistor	8.2 kΩ	R20
R304	Resistor	10 kΩ	MCR10
R305	Resistor	56 Ω 18 kΩ	MCR10 MCR10
R306 R307	Resistor Resistor	6.8 kΩ	MCR10
R309	Resistor	330 Ω	MCR10
R310	Resistor	220 Ω	MCR10
R311	Resistor	100 Ω	MCR10
R312	Resistor	1 ΜΩ	MCR10
R313	Resistor	4.7 kΩ	MCR10
R314	Trimmer		EVM-LGG A00 B15
R315	Resistor	5.6 k <b>Ω</b> 560 k <b>Ω</b>	MCR10 MCR10
R316 R317	Resistor Resistor	220 kΩ	MCR10
R318	Resistor	22 kΩ	MCR10
R319	Resistor	82 kΩ	MCR10
R320	Trimmer	30 kΩ B 6	EVM-LGG A00 B34
R321	Resistor	33 kΩ	MCR10
R322	Trimmer		VM-LGG A00 B53
R323	Resistor	1.8 kΩ	MCR10 MCR10
R324 R325	Resistor Resistor	22 k <b>Ω</b> 10 k <b>Ω</b>	MCR10
R326	Resistor	4.7 kΩ	MCR10
R327	Resistor	18 kΩ	MCR10
R328	Resistor	$6.8~\text{k}\Omega$	MCR10
R329	Resistor	10 Ω	MCR10
R330	Resistor	220 Ω	MCR10
R331	Resistor	150 <b>Ω</b> 100 <b>Ω</b>	MCR10
R332 R333	Resistor Resistor	1.2 <b>MΩ</b>	MCR10 MCR10
R334	Resistor	47 kΩ	MCR10
R336	Resistor	330 Ω	MCR10
R337	Resistor	220 Ω	MCR10
R338	Resistor	1 ΜΩ	R20
R339	Resistor	1.8 kΩ	MCR10
R340	Resistor	10 kΩ	MCR10
R341 R342	Resistor Resistor	100 kΩ 100 kΩ	MCR10 MCR10
R343	Resistor	47 kΩ	MCR10
R344	Thermistor	ERT-D2FHI	
C204	Ceramic	0.001 μF	GRM40
C210	Ceramic	0.001 μF	GRM40
C219	Ceramic	0.1 μF	GRM40 F
C220	Ceramic	0.01 μF	GRM40 F
C221 C222	Ceramic Ceramic	47 pF 12 pF	GRM40 GRM40
C222	Ceramic	0.001 μF	GRM40
C224	Ceramic	10 pF	GRM40
C225	Ceramic	22 pF	GRM40

# [RF UNIT]

# [RF UNIT]

REF. NO.	DESCRIPTION	PART	NO.
	Ceramic	0.001 µF	GRM40
C227	Ceramic	0.001 µF	GRM40
228	Ceramic	0.001 µF	GRM40
229	Ceramic Ceramic	0.01 μF 47 pF	GRM40 F GRM40
C230 C231	Ceramic	47 pr 56 pF	GRM40 GRM40
233	Ceramic	1 pF	GRM40
C234	Ceramic	7 pF	GRM40
C235	Ceramic	0.001 μF	GRM40
C236	Ceramic	56 pF	GRM40
C238	Ceramic	0.001 µF	GRM40
C239	Ceramic	0.001 μF	GRM40
C240	Ceramic	22 pF	GRM40
C241 C242	Ceramic Ceramic	12 pF	GRM40 GRM40
C242 C243	Ceramic	33 pF 18 pF	GRM40
C243	Ceramic	22 pF	GRM40
C245	Ceramic	27 pF	GRM40
C246	Ceramic	22 pF	GRM40
C247	Ceramic	47 pF	GRM40
C248	Ceramic	470 pF	GRM40
C249	Ceramic	470 pF	GRM40
C250	Ceramic	470 pF	GRM40
2251	Ceramic	0.001 µF	GRM40
252	Ceramic	0.001 μF	GRM40
C253	Ceramic	470 pF	GRM40
C254 C255	Ceramic Ceramic	470 pF 0.001 μF	GRM40 GRM40
0255 0264	Ceramic	470 pF	GRM40
C265	Ceramic	470 pF 470 pF	GRM40
C266	Ceramic	10 pF	GRM40
C267	Ceramic	470 pF	GRM40
C268	Ceramic	22 pF	GRM40
C269	Ceramic	470 pF	GRM40
C271	Ceramic	0.5 pF	GRM40
C272	Ceramic	470 pF	GRM40
C273	Ceramic	470 pF	GRM40
C274	Ceramic	470 pF	GRM40
C275	Ceramic	470 pF	GRM40
C276 C277	Ceramic Ceramic	10 pF 470 pF	GRM40 GRM40
C277 C278	Ceramic Ceramic	470 pF 470 pF	GRM40 GRM40
C276 C280	Ceramic	0.001 µF	GRM40
C281	Ceramic	5 pF	GRM40
C282	Ceramic	5 pF	GRM40
C283	Ceramic	7 pF	GRM40
C284	Ceramic	22 pF	GRM40
C285	Ceramic	8 pF	GRM40
C286	Ceramic	0.001 µF	GRM40
C287	Ceramic	0.001 µF	GRM40
C288	Trimmer	15 pF	ECR-GA015E30
C289	Ceramic	18 pF	GRM40 CH
C290	Ceramic	56 pF	GRM40 CH
C291 C292	Ceramic Ceramic	120 pF 0.001 µF	GRM40 CH GRM40
C292	Ceramic	0.001 μr 470 pF	GRM40
C293	Ceramic	470 pF 0.1 μF	GRM40 F
C295	Ceramic	0.1 μF	GRM40 F
C296	Ceramic	0.001 µF	GRM40
C298	Ceramic	0.001 µF	GRM40
C299	Ceramic	0.1 μF	GRM40 F
C300	Ceramic	470 pF	GRM40
C301	Ceramic	47 pF	GRM40
C302	Ceramic	47 pF	GRM40
2303	Ceramic	47 pF	GRM40
C304	Tantalum	6.8 µF	6.3 V SV
C306	Ceramic	0.001 μF	GRM40
C307 C308	Ceramic Ceramic	47 pF 0.001 μF	GRM40 GRM40
C309	Tantalum	0.001 μF 0.1 μF	35 V DN
C310	Tantalum	3.3 µF	16 V DN
C311	Ceramic	470 pF	GRM40
C312	Ceramic	0.001 µF	GRM40
C313	Tantalum	3.3 µF	6.3 V SV
C314	Tantalum	3.3 µF	16 V DN

# [RF UNIT]

•	-						
REF. NO.	DESCRIPTION	PART	NO.				
C394	Ceramic	470 pF	GRM40				
C395	Ceramic	470 pF	GRM40				
C396	Ceramic	470 pF	GRM40				
C397	Ceramic	470 pF	GRM40				
C398	Ceramic	100 pF	GRM40				
C399	Ceramic	0.001 µF	GRM40				
C400	Ceramic		GRM40				
		•					
J201	Connector	HEC0779-0	11-030				
J202	Connector	HSJ0836-0					
J203	Connector	HSJ1102-0					
J205	Connector	TZB-P10H-					
J206	Connector	TZB-P10H-					
J207	Connector	TZB-P10H-					
J208	Connector	PI28A03M					
J209	Connector	TZB-P02H-	Δ1 .				
J210	Connector	BNC-R111-					
02.0	Connector	BROTTE	<b>-</b>				
P201	Connector	PI28A10F					
P202	Connector	PI28A10F					
P203	Connector	PI28A10F					
P204	Connector	PI28A03F					
P205	Connector	PI28A03F					
, 200	0000.07						
S201	Switch	SPPJ62					
W201	Jumper	MCR10-JPV	V				
W202	Jumper	MCR10-JPV	٧				
W248	Jumper	MCR10-JPV	V				
W249	Jumper	JPW-02A					
W250	Jumper	JPW-02A					
EB004	DO Broad	D 40455 (5	ne.				
EP201	P.C. Board	B-1615E (F	•				
EP202	P.C. Board	B-1619B (P	•				
EP203	P.C. Board	B-1668B (N					
EP205	P.C. Board	•	TTERY TERMINAL)				
EP208	Ferrite Bead	DL2-OP2.6-					
EP209	Ferrite Bead	DL2-OP2.6-					
EP210	Ferrite Bead	DL2-OP2.6-					
EP211	Ferrite Bead	DL2-OP2.6-	3-1.2H				
<b>!</b>							
[							
[							

# [U-VCO UNIT]

REF. NO.	DESCRIPTION	PART NO.
Q501	Transistor	2SC3772 3
Q502	Transistor	2SC3356 R25
Q503	Transistor	2SC3772 3
Q504	Transistor	RN1403
D501 D502	Varicap Varicap	MA334 B MA862
L501	Coil	LQN2A 47NM
L502	Coil	LQH3N R39M
L504	Coil	LA-225
		(IC-32A/AT/E: except U.S.A.)
L504	Coil	LA-224 (IC-32/AT: U.S.A.)
L505	Coil	LQN2A 47NM

# [U-VCO UNIT]

DEE NO	DECODINE	n	
REF. NO.	DESCRIPTION	PAH	T NO.
R501	Resistor	330 Ω	MCR10
R502	Resistor	33 kΩ	MCR10
R504	Resistor	220 Ω	MCR10
R505	Resistor	47 Ω	MCR10
R506	Resistor	4.7 kΩ	MCR10
R507	Resistor	6.8 kΩ	MCR10
R508	Resistor	47 kΩ	MCR10
R509	Resistor	330 Ω	MCR10
R510	Resistor	33 kΩ	MCR10
R512	Resistor	4.7 kΩ	MCR10
R513	Resistor	4.7 kΩ	MCR10
R514	Resistor	100 Ω	MCR10
R515	Resistor	2.2 k <b>Ω</b>	MCR10
CEOO	Coromio	470 pE	CDMAD
C502	Ceramic Ceramic	470 pF 0.5 pF	GRM40 GRM40
C503 C504	Ceramic	0.5 pr 6 pF	GRM40 CH
C504 C505	Ceramic	6 pF	GRM40 CH
C505 C506	Ceramic	470 pF	GRM40 Cri
C506	Tantalum	470 pr 1 μF	16 V SV
C507	Ceramic	0.1 μF	GRM40 F
C509	Ceramic	12 pF	GRM40
C509	Trimmer	10 pF	ECR-LB010A12
C511	Ceramic	12 pF	GRM40
C512	Ceramic	0.3 pF	GRM40 SL 50PT
C513	Ceramic	8 pF	GRM40
C514	Ceramic	6 pF	GRM40
C515	Ceramic	470 pF	GRM40
C516	Ceramic	470 pF	GRM40
C517	Ceramic	4 pF	GRM40
C518	Ceramic	4 pF	GRM40
C519	Ceramic	0.5 pF	GRM40
C521	Tantalum	1 µF	16 V SV
C522	Ceramic	10 pF	GRM40
C523	Ceramic	10 pF	GRM40
		•	
EP501	P.C. Board	B-1718A	

# [V-VCO UNIT]

REF. NO.	DESCRIPTION	PART NO.
Q551 Q552	Transistor FET	2SC3772 3 2SK302 Y
Q553	Transistor	2SC3772 3
D551	Diode	MA862
D552	Varicap	MA334 B
D553	Varicap	MA333
D554	Varicap	MA334 B
D555	Diode	1SS154
L551	Coil	LQN2A R15K
L552	Coil	LQH3N 1R5M
L554	Coil	LB-230
L556	Coil	LQN2A R15K
L557	Coil	LQH3N 1R5M
R551	Resistor	1 kΩ MCR10
R552	Resistor	39 kΩ MCR10
R553	Resistor	100 kΩ MCR10
R554	Resistor	10 kΩ MCR10
R555	Resistor	1 kΩ MCR10

# [V-VCO UNIT]

REF. NO.	DESCRIPTION	PARI	NO.
R556	Resistor	100 kΩ	MCR10
R557	Resistor	39 kΩ	MCR10
R558	Resistor	4.7 kΩ	MCR10
R559	Resistor	1 kΩ	MCR10
R560	Resistor	10 k <b>Ω</b>	MCR10
C551	Ceramic	0.001 µF	GRM40
C552	Ceramic	0.001 µF	GRM40
C554	Ceramic	0.001 µF	GRM40
C555	Ceramic	0.5 pF	GRM40
C556	Ceramic	15 pF	GRM40
C557	Ceramic	3 pF	GRM40
C558	Ceramic	100 pF	GRM40
C559	Ceramic	0.001 µF	GRM40
C560	Ceramic	0.001 μF	GRM40
C561	Ceramic	0.75 pF	GRM40 SL 50PT
C562	Ceramic	0.001 µF	GRM40
C563	Ceramic	7 pF	GRM40
C564	Ceramic	7 pF	GRM40
C565	Ceramic	0.001 µF	GRM40
C566	Ceramic	470 pF	GRM40
EP551	P.C. Board	B-1623C (	V-VCO)
EP552	P.C. Board	B-1604 (C	OIL)

# [TONE UNIT] (IC-32AT)

REF. NO.	DESCRIPTION	PART NO.
IC601 IC602	IC IC	S7116A μPD4094BG
X601	Crystal	RF4A3 FAA (3.578 MHz)
R601 R602	Trimmer Resistor	47 kΩ RH04A3AS4J01A 47 kΩ MCR10
C602 C603 C604 C605	Tantalum Ceramic Ceramic Ceramic	0.47 μF 25 V SV 470 pF GRM40 47 pF GRM40 39 pF GRM40
J601	Connector	PI28A10M
EP601	P.C. Board	B-1566B

### SECTION 9 OPTIONAL UNITS

### 9-1 UT-40 TONE SQUELCH UNIT CIRCUIT DESCRIPTION

#### 9-1-1 GENERAL DESCRIPTION

IC1 is a tone encoder/decoder IC chip that outputs and detects 37 different kinds of tones. A tone is set by serial data from IC902 on the LOGIC UNIT in the IC-32A/AT/E.

IC2 functions as a serial/parallel converter, applying 6-bit parallel data to IC1. The following table shows the relation between frequency and input data in IC1.

OUTPUT	IC	C1 INF	PUT F	IN N	JMBE	:R	OUTPUT	1			PIN NUMBER OUTPUT FREQUENC			OUTPUT					R	
FREQUENCY [Hz]	3	4	5	6	7	8	FREQUENCY [Hz]	3	4	5	6	7	8	[Hz]	3	4	5	6	7	8
67.0	Н	L	Н	Н	Н	L	110.9	Н	L	Н	L	Н	Η	173.8	L	L	L	Н	L	Н
71.9	L	L	Н	Н	Н	L	114.8	L	L	Н	L	Н	Н	179.9	Ξ	Н	Н	L	L	Н
74.4	Н	Н	L	Н	Н	L	118.8	Н	Н	L	L	Н	Н	186.2	L	Н	H	L	L	Н
77.0	L	Н	L	Н	Н	L	123.0	L	Н	L	L	Н	Н	192.8	Η	٦	Η	اد	L	Н
79.7	Н	L	L	Н	Н	L	127.3	Н	L	L	L	Н	Н	203.5	L	۲	Τ	L	L	Н
82.5	L	L	L	Н	Н	L	131.8	L	L	L	L	Н	Н	210.7	I	Ξ	L	L	L	Н
85.4	Н	Н	Н	L	Н	L	136.5	Н	Н	Н	Н	L	Н	218.1	L	Ι	┙	٦	L	Н
88.5	L	Н	Н	L	Н	L	141.3	L	Н	Н	Н	L	Н	225.7	Ι	اـ	ا ـ	لــ	L	Н
91.5	Н	L	Н	L	Н	L	146.2	Н	L	Н	Н	L	Н	233.6	L	L	٦	L	L	Н
94.8	Н	L	L	Н	Н	Н	151.4	L	L	Н	Н	L	Н	241.8	Н	Н	Η	Н	Н	L
100.0	L.	L	L	Н	Н	Н	156.7	Н	Н	L	H	L	Ξ	250.3	L	Н	Н	Н	Н	L
103.5	Н	Н	Н	L	Н	Н	162.2	L	Н	L	Ξ	L	H		_	_	_	_	_	_
107.2	L	Н	Н	L	Н	Н	167.9	Н	L	L	Н	L	H		_	-	-	1	_	_

H: HIGH

L: LOW

#### 9-1-2 ENCODER CIRCUIT

Pin 26 in IC1 outputs a programmed tone frequency when pin 12 in IC1 becomes "LOW."

Q4 functions as a buffer amplifier. The collector of Q4 outputs the tone signal and the signal is applied to the VCO circuit to be modulated.

Tone deviation can be adjusted by R10.

#### 9-1-3 DECODER CIRCUIT

Detected signals from pin 11 in IC707 on the MAIN UNIT of the IC-32A/AT/E are applied to pin 29 in IC1 on the UT-40 through the DETO line. When the signals have a tone modulated and the tone is matched with the programmed tone frequency by IC2, pin 23 in IC1 changes from "LOW" to "HIGH."

#### When the tone squelch function is turned OFF:

Both pins 11 and 12 in IC2 are "HIGH" and +5 V are not applied to IC1. Q2 and Q3 turn OFF and the TSQL line is "HIGH."


#### When the tone squelch function is turned ON:

Pin 11 of IC2 is "HIGH" and pin 12 of IC2 is "LOW." Both Q2 and Q3 turn ON.

When the received tone frequency is not matched with the programmed tone frequency, pin 23 of IC1 is "LOW" and the TSQL line is "LOW."


When the received tone frequency is matched with the programmed tone, pin 23 becomes "HIGH" and the TSQL line becomes "HIGH."

### 9-2 UT-40 VOLTAGE/CIRCUIT DIAGRAM

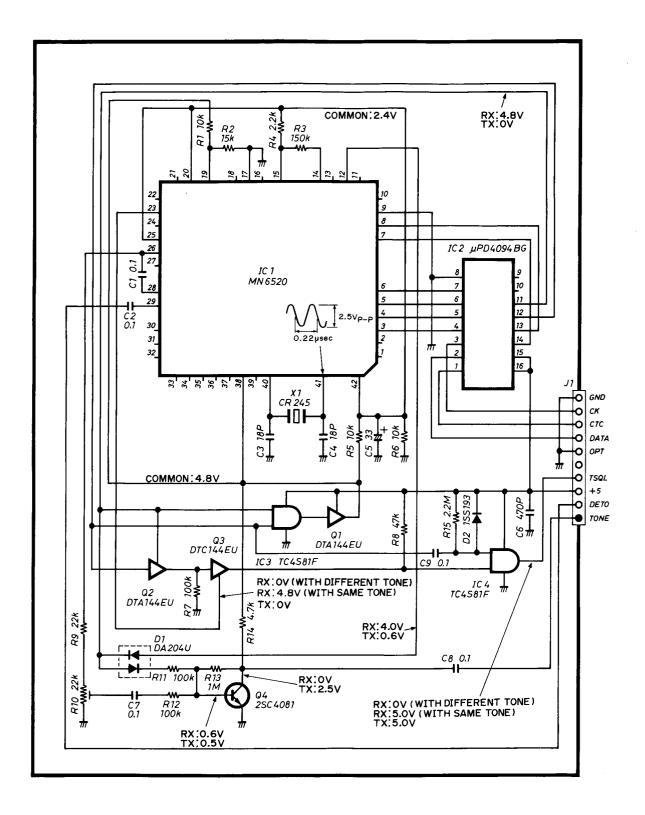


# 9-3 UT-40 BOARD LAYOUTS


# **COMPONENT SIDE**

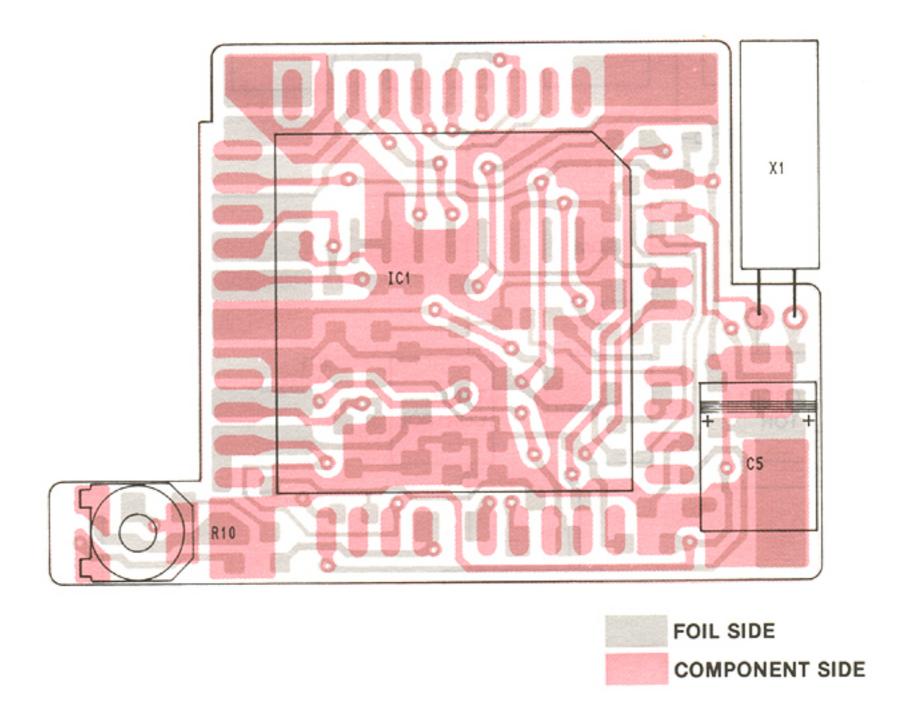

# **FOIL SIDE**

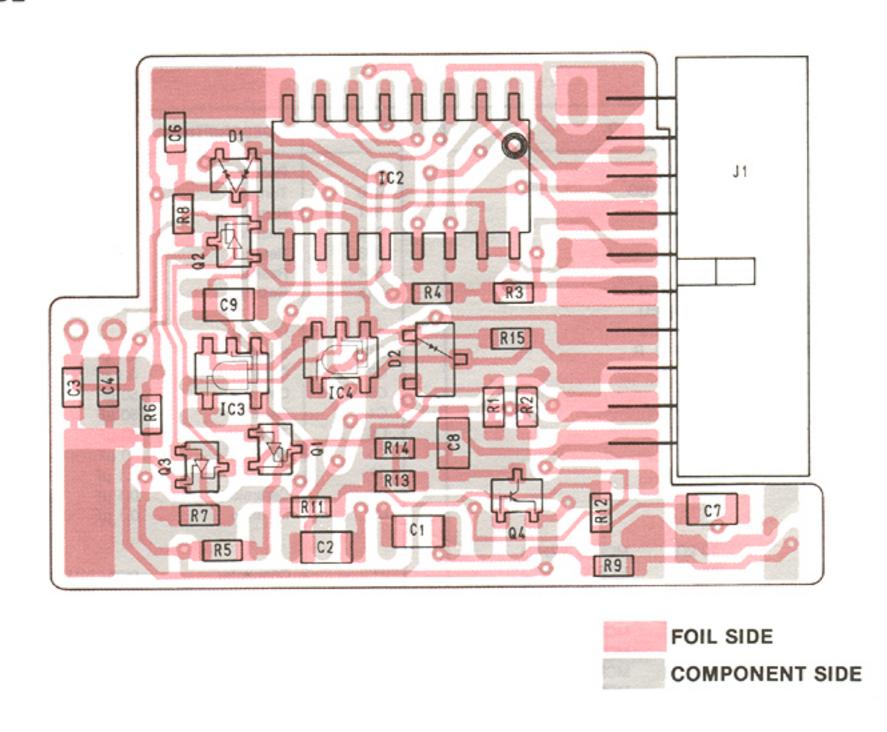

### 9-4 UT-40 BLOCK DIAGRAM

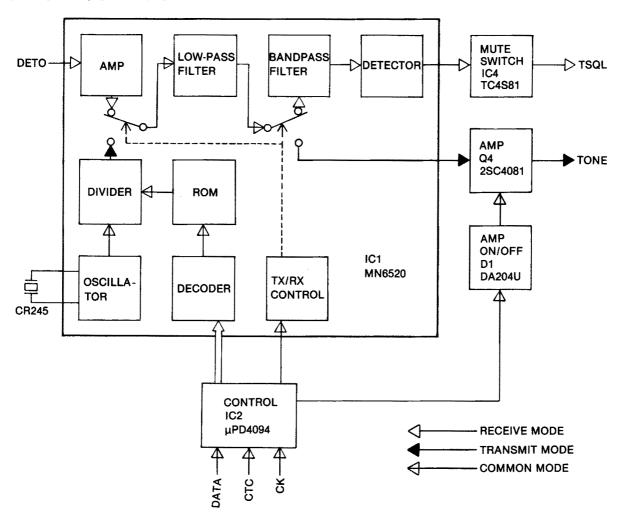

### 9-5 UT-40 PARTS LIST


### [T. SQL UNIT]


REF. NO.	DESCRIPTION	PART NO.
IC1	IC	MN6520
IC2	IC	μPD4094BG
IC3	l IC	TC4S81F
IC4	IC .	TC4S81F
Q1	Transistor	DTA144EU
Q2	Transistor	DTA144EU
Q3	Transistor	DTC144EU
Q4	Transistor	2SC4081 R
D1 D2	Diode Diode	DA204U 1SS193
X1	Crystal	CR245
R1	Resistor	10 kΩ MCR03 EZH J
R2	Resistor	15 kΩ MCR03 EZH J
R3	Resistor	150 kΩ MCR03 EZH J
R4	Resistor	2.2 kΩ MCR03 EZH J
R5	Resistor	10 kΩ MCR03 EZH J
R6	Resistor	10 kΩ MCR03 EZH J
R7	Resistor	100 kΩ MCR03 EZH J
R8	Resistor	47 kΩ MCR03 EZH J


REF. NO.	DESCRIPTION	PART	· NO.
R9 R10 R11	Resistor Trimmer Resistor	22 kΩ 22 kΩ 100 kΩ	RH04A3AJ4J
R12 R13 R14	Resistor Resistor Resistor	100 kΩ 1 MΩ 4.7 kΩ	MCR03 EZH J MCR03 EZH J MCR03 EZH J
R15	Resistor  Ceramic	2.2 MΩ 0.1 μF	
C2 C3 C4	Ceramic Ceramic Ceramic	0.1 μF	GRM40 F GRM39 SL 180J
C5 C6 C7	Tantalum Ceramic Ceramic	33 μF 50 μF	-
C8 C9	Ceramic Ceramic	•	GRM40 F
J1	Connector	PI28A10M	
EP1	P.C. Board	B-1577C	


# SECTION 10 VOLTAGE DIAGRAMS


### **LOGIC AND MAIN UNITS**

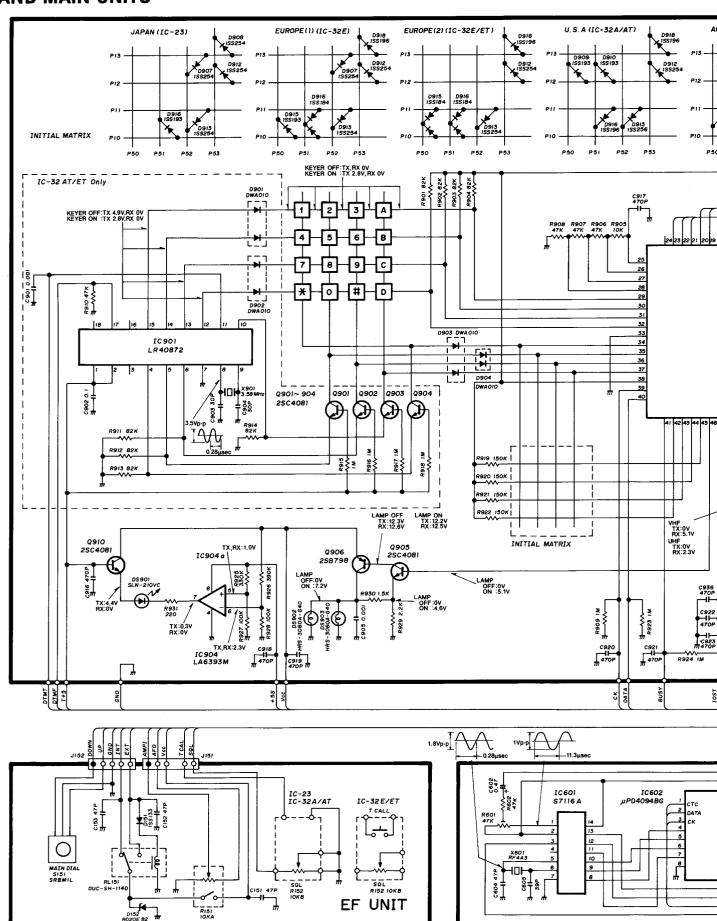

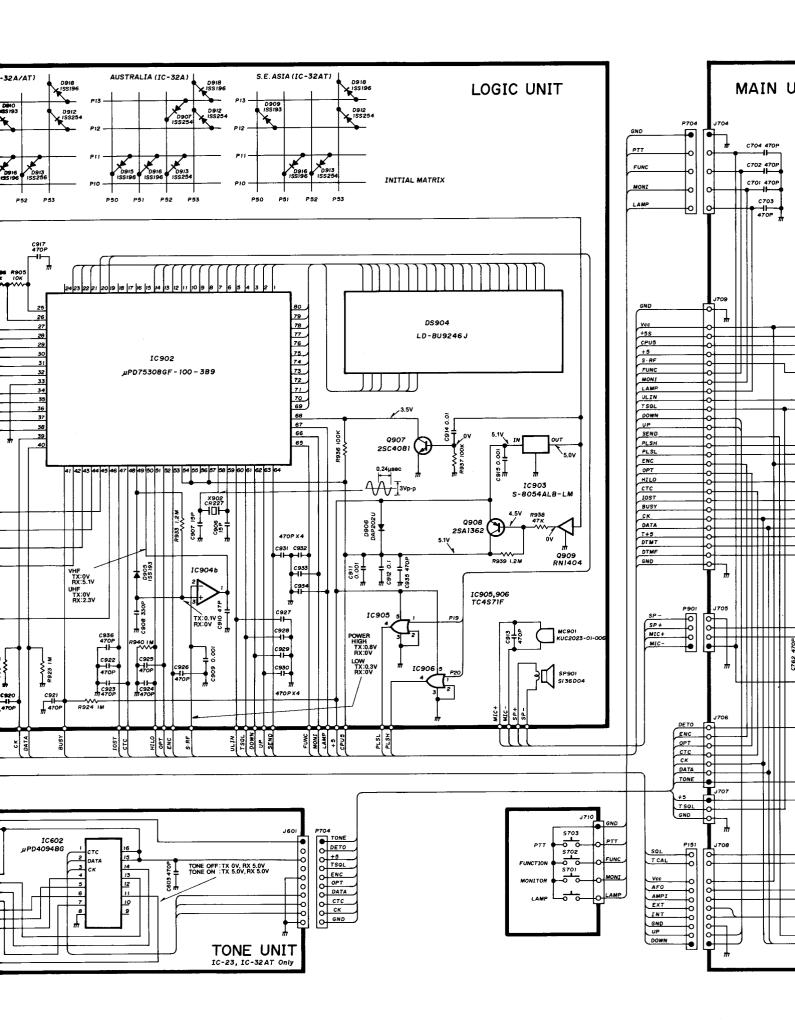

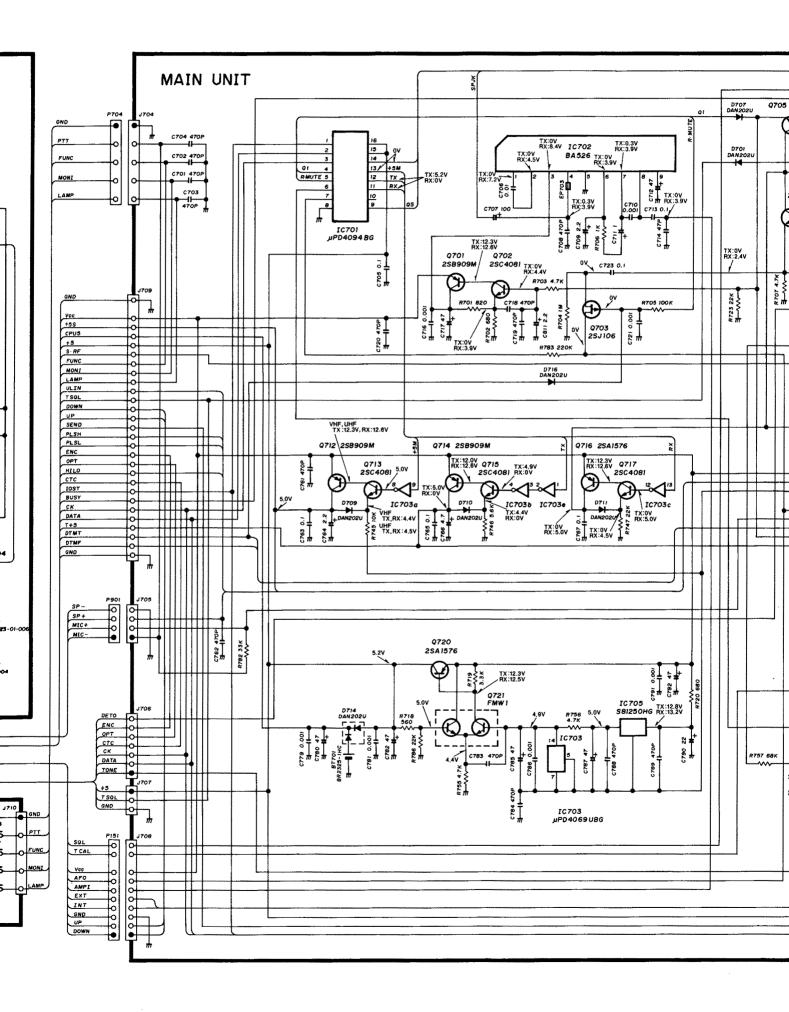


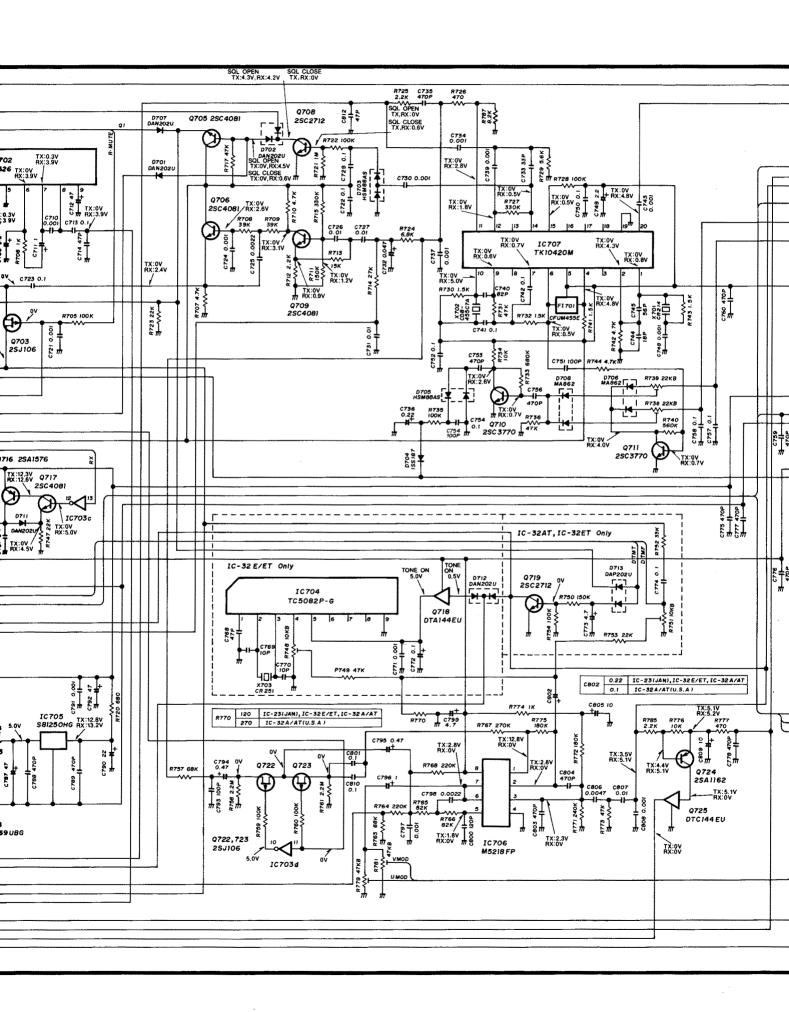


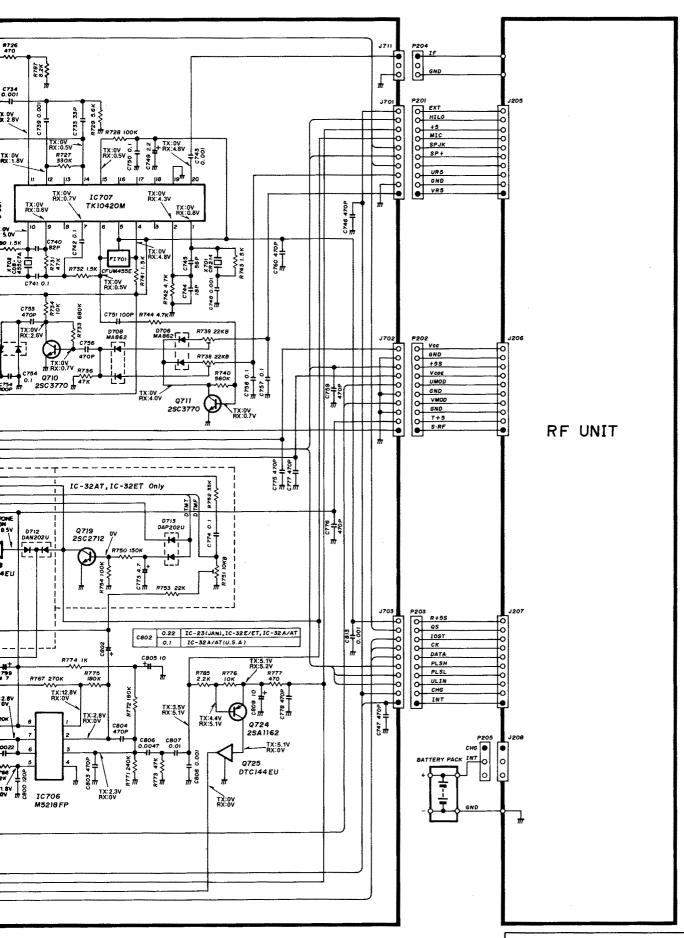


To upgrade quality, some components may be subject to change without notice.

### **RF UNIT**

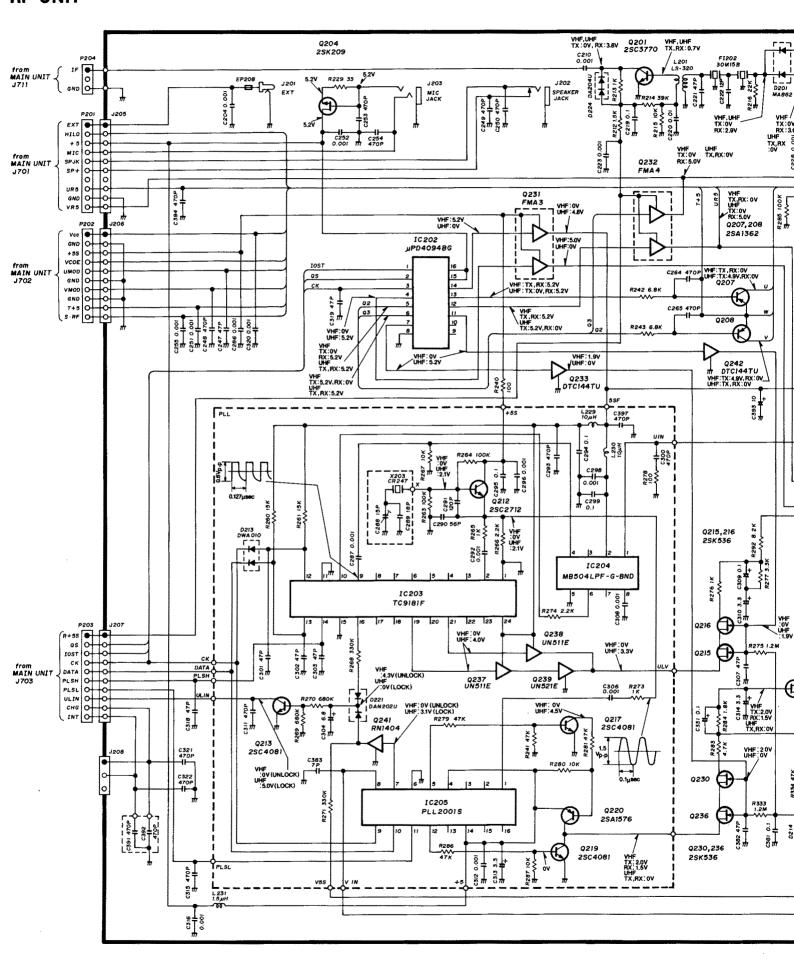

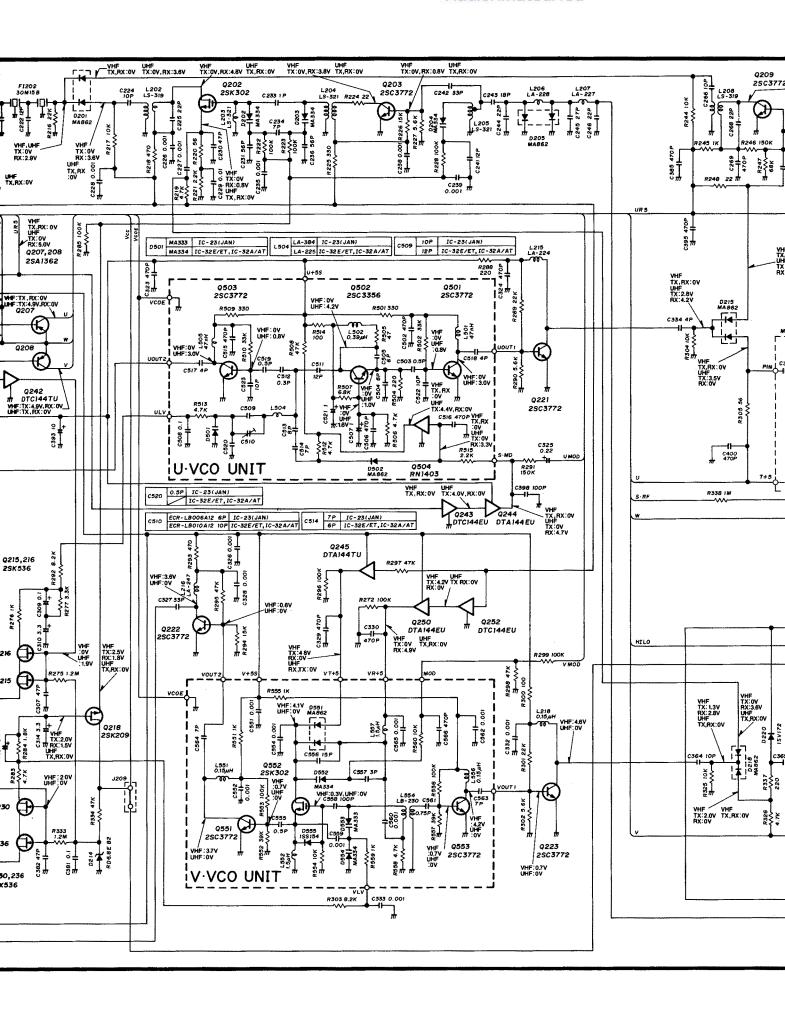

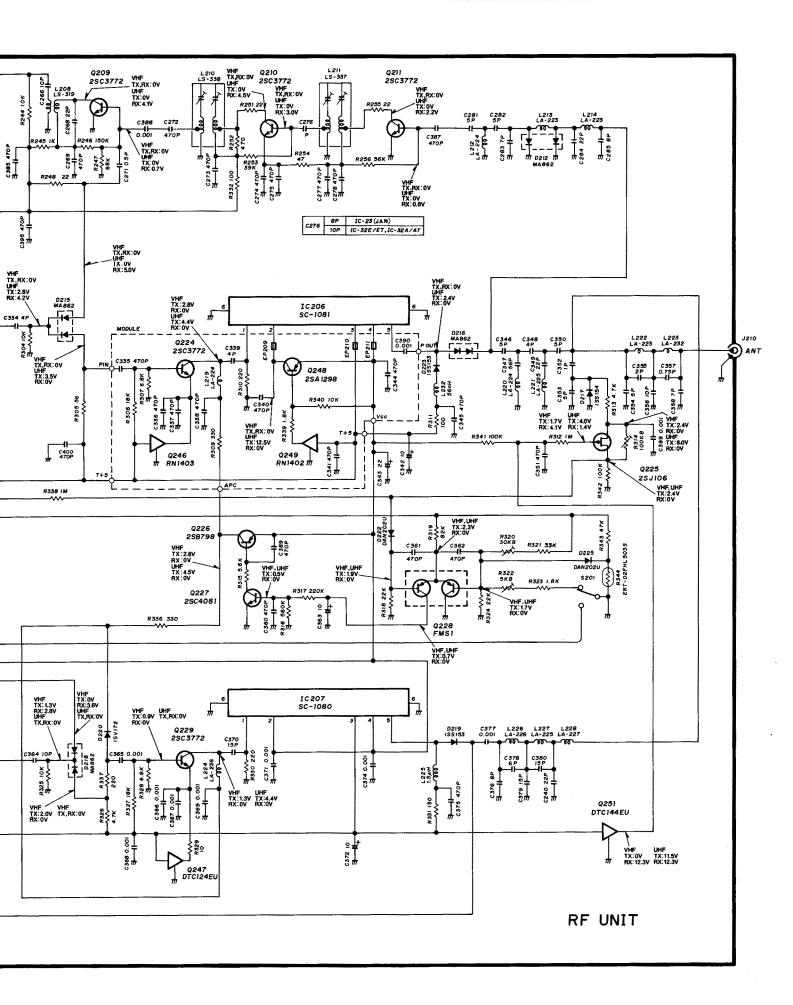

### for free by RadioAmateur.eu

### Icom Inc.

6-9-16, Kamihigashi, Hirano-ku, Osaka 547, Japan

Phone: 06 793 5301 Fax : 06 793 0013 Telex: 05277822 ICOMTR J

#### Icom America Inc.

<Corporate Headquarters>

Corporate Headquarters
 2380 116th Avenue N.E., Bellevue, WA 98004, U.S.A.
 Phone: (206) 454-8155
 Fax : (206) 454-1509
 Telex : 152210 ICOM AMER BVUE

<Customer Service> Phone: (206) 454-7619

<Regional Customer Service Centers> 3150 Premier Drive, Suite 126, Irving, TX 75063, U.S.A. Phone : (214) 550-7525 Fax : (214) 550-7423

1777 Phoenix Parkway, Suite 201, Atlanta, GA 30349, U.S.A. Phone : (404) 991-6166 Fax : (404) 991-6327

#### Icom Canada

A Division of Icom America Inc. 3071 #5 Road, Unit 9, Richmond, B.C., V6X 2T4, Canada Phone: (604) 273-7400 Fax: (604) 273-1900

#### Icom (Europe) GmbH

Communication Equipment
Himmelgeister Str. 100, 4000 Düsseldorf 1, W. Germany
Phone: 0211 346047
Fax : 0211 333639
Telex: 8588082 ICOM D

#### Icom (Australia) Pty. Ltd.

Incorporated In Victoria

Phone: 03 529 7582
Fax: 03 529 8485
Telex: AA 35521 ICOM AS

#### Icom (UK) Ltd.

Unit 9, Sea St., Herne Bay, Kent, U.K.

Phone: 0227 363859 Fax : 0227 360155 Telex : 965179 ICOM G

#### Icom France S.a

120 Route de Revel, BP4063, 31029 Toulouse Cedex, France

Phone: 61. 20. 31. 49
Fax : 61. 34. 05. 91
Telex : 521515 ICOM FRA



Downloaded by RadioAmateur.EU