



**SPECTRACOM**

PUBLIC SAFETY | SECURITY | GOVERNMENT

LEGALLY TRACEABLE TIME™



# Frequency Distribution System Distribution Amplifier

Model 8140



- **Eliminates Periodic Frequency Calibration of Test Equipment**
- **For Calibration Lab or Production Test**
- **10-MHz or Custom Outputs**
- **Trunk-Line Frequency Distribution Lowers Wiring Costs**
- **Unlimited System Size When Daisy Chaining**
- **5-Year Warranty**

Spectracom's Frequency Distribution System comprises the Model 8140 Distribution Amplifier and combinations of Model 8140T LineTaps, Model 8140MT MultiTaps, and Model 8140VT VersaTaps.

The Model 8140 Distribution Amplifier sends accurate frequencies to multiple locations over long distances. The amplifier derives 10 MHz from the input signal, and sends it on the trunk line coaxial cables to up to 25 remote stations. Running a separate cable to each station is not necessary. Input and output signals are monitored. Faults light a visual indicator or activate an optional Audible Alarm. Unlimited numbers of remote stations may receive output from one frequency standard by adding distribution amplifiers.

Remote station LineTaps receive both 10 MHz and DC power from the trunk line cable. The signal is buffered, then converted to the frequency needed at that station. MultiTaps are configurable dividers with three square wave outputs. VersaTaps are single-frequency synthesizers that provide custom frequency outputs.

# Frequency Distribution System Model 8140 Specifications

## FREQUENCY OUTPUT:

Four connectors provide 10-MHz sine wave signals to terminated cable via separate buffer amplifiers. Level is 0.5 V<sub>rms</sub>, 50 ohms, superimposed on +12 VDC. One front panel TTL-compatible output is selectable between 0.1, 1, 5, and 10 MHz. Phase noise is typically less than -130 dB/Hz 1 kHz from the carrier when the distribution amplifier is fed with noise-free 10 MHz.

## NUMBER OF REMOTE STATIONS:

Each Distribution Amplifier will drive up to 25 standard Line Tap loads. If additional loads must be driven, another Model 8140 Distribution Amplifier may be "daisy-chained" onto the output of a Line Tap to drive 25 more loads.

TAP	STANDARD LINE TAP LOAD
8140T	1
8140MT	3
8140MT-40	1
8140VT-10-00	3
8140VT-10-00-40	1

## DISTANCE TO REMOTE STATIONS:

Up to 25 LineTaps on RG-58 50-ohm cable at a maximum distance of 1500 feet from base station. Model 8140TA Distribution Line Extender extends this distance to up to 3000 feet with fewer Line Taps allowed. Using low-loss cable such as RG-8 extends distance to 3000 feet for all 25 Line Taps.

## AUDIBLE ALARM (Option 20):

Activated by input or output loss.

## FREQUENCY INPUT:

10 MHz; Signal level 0.25 to 3.0 V<sub>rms</sub>, 50-ohm impedance.

Input options: 5 or 1 MHz.

POWER: 115/230 VAC ±15%, 50/60 Hz; 40 W

## PHYSICAL & ENVIRONMENTAL

### SIZE:

8.5"W x 5.25"H x 13.5"D  
216W x 133H x 343D mm

### WEIGHT:

12 lbs

### CONNECTORS:

Input/Output: BNC; 4 DC-isolated output terminators included

AC power: 3-prong connector, 7' cord included

### CONTROLS:

Power switch, frequency select

### INDICATORS:

Power, output fault

### TEMPERATURE:

0° to +50°C (32°F to 122°F) operating range  
-40°C to 85°C (-40°F to 185°F) storage range

### HUMIDITY:


95% R.H.non-condensing

## SYSTEM ORDERING INFORMATION

- Specify Spectracom **Model 8140** plus  
**Option 01** for 19" EIA rack mount  
**Option 07** for 5-MHz input  
**Option 08** for 1-MHz input  
**Option 20** for audible alarm
- Specify output taps:  
 Model **8140Txx** provides fixed sine wave outputs  
 8140T10 = 10 MHz  
 8140T5 = 5 MHz  
 8140T1 = 1 MHz  
 8140TR1 = 0.1 MHz  
 Model **8140MT** provides configurable TTL frequencies.  
 Model **8140VT** provides fixed custom frequencies.
- Specify any required Line Extenders, **8140TA**.
- When exceeding 25 standard Line Tap loads, (see table) order additional Model 8140 Amplifiers.

WARRANTY: 5-Year Warranty

## Frequency Distribution System, Typical Interconnection Diagram

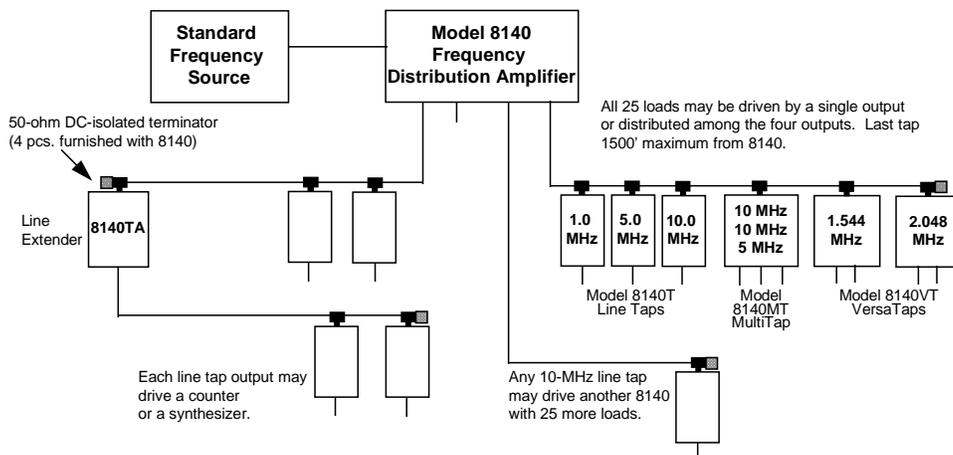

Specifications subject to change or improvement without notice.  
Spectracom is a registered trademark.

All other products are identified by trademarks of their respective companies or organizations.  
Copyright 2004 Spectracom Corporation. Printed in USA 1/04

For more information, please contact Spectracom.

DS8140(C)

Spectracom Corporation • www.spectracomcorp.com • sales@spectracomcorp.com

95 Methodist Hill Drive • Suite 500 • Rochester, NY 14623 USA

Phone: +1.585.321.5800 • Fax: +1.585.321.5218



**SPECTRACOM**


PUBLIC SAFETY | SECURITY | GOVERNMENT

LEGALLY TRACEABLE TIME™



# VersaTap

## Model 8140VT

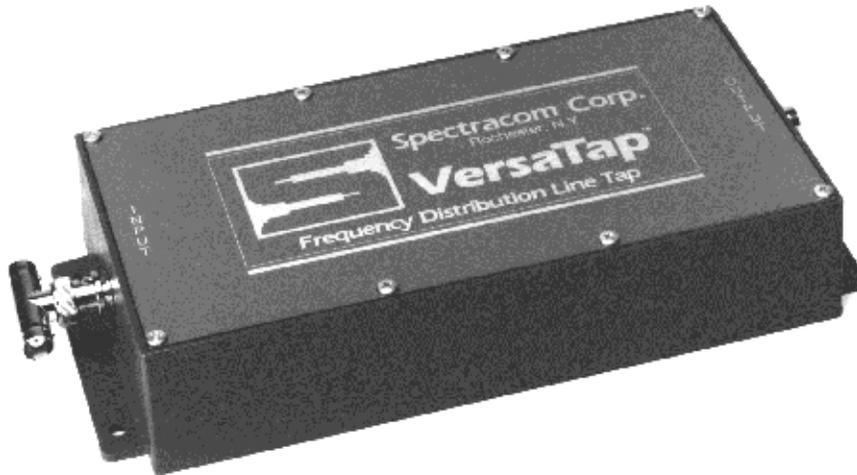

- **Synthesizer and Telecom Clock Converter or Extractor**
- **Custom Phase-Locked Output Frequency**
- **Locks to Input Reference**
- **5-Year Warranty**

The standard VersaTap is a single-frequency synthesizer whose output is factory-set to any frequency between 1 kHz and 20 MHz. Special frequencies are available, such as the 3.5795454... MHz (TV color subcarrier), 1.544 MHz (T1 data rate), 64 kHz (DSO data rate), etc. Specify exact frequency at time of order.

There are many versions of the VersaTap not shown here. These include variations in signal frequency, format, voltage level and impedance. For features not listed in the table below, please consult the factory.

### OUTPUT SPECIFICATIONS

**OUTPUT FREQUENCY:** Factory-set to any 1-kHz increment up to 18 MHz; 2-kHz increments up to 20 MHz. Accuracy equals input accuracy. Consult factory for other frequencies.

**OUTPUT A:** 600 mV rms sinewave into 50 ohms. If unterminated, will drive TTL load. (TTL square wave below 56 kHz). Harmonic distortion -35 dBc.

**OUTPUT B:** TTL square wave.

# Frequency Distribution System Model 8140VT Specifications

## PERFORMANCE SPECIFICATIONS

**INPUT:** 10 MHz, 0.1 to 5.5 V p-p; high impedance. For special input frequency or impedance, consult factory.

**PHASE LOCK INDICATIONS:** Indicator lamp is on when output is phase-locked to input signal. An internal jumper converts Output B to a TTL high when Output A is phase locked.

**POWER:** DC power is supplied via the coaxial 10-MHz signal line from a Spectracom Model 8140, or Option O3 Distribution Amplifier. Other power options are:

- Option 40, external 115 VAC to DC converter
- Option 52, ±12 VDC
- Option 53, ±24 VDC
- Option 54, ±48 VDC

**WARRANTY:** 5-Year Warranty

## PHYSICAL & ENVIRONMENTAL

**SIZE:**  
8.3" L x 4.2" W x 1.7" H  
(211 x 107 x 43 mm)

**MOUNTING HOLES:**  
8.87" x 2.75"  
(225 x 70 mm)

**WEIGHT:**  
3 lbs. maximum

**TEMPERATURE:**  
-30 to +60°C (32°F to 122°F) operating range  
-40 to +85°C (-40°F to 185°F) storage range

**HUMIDITY:**  
95% R. H. non-condensing

## ORDERING INFORMATION

**Part Number** **8140VT-XX-XX-XX**  
 Input Option \_\_\_\_\_  
 Output Option \_\_\_\_\_  
 (add user-specified frequency for  
 00 or 45 if required by table below) \_\_\_\_\_  
 Power Option (if required) \_\_\_\_\_

## STANDARD OPTIONS LIST

INPUT		OUTPUTS	
SIGNAL (Connector)	OPTION	OPTION	SIGNAL (Connector)
10 MHz (BNC)	10	00	User-specified Sine and TTL (BNCs)
	10	45	User-specified RS-422 and TTL (9-pin D); Same Frequency Sine (BNC)
	10	48	DS1 Framed All 1's (310 jack); 1.544-MHz Sine (BNC)
	10	50	Composite Clock (310 jack); 64-kHz Sine (BNC)
	10	58	CEPT Framed All 1's (310 jack); 2.048-MHz Sine (BNC)
	10	62	DS1 Framed All 1's (Terminal Block); DS1 Framed All 1's (Terminal Block)
	10	66	CEPT Framed All 1's (Terminal Block); CEPT Framed All 1's (Terminal Block)
	DS1 (310 jack)	46	00
46		45	User-specified RS-422 and TTL (9-pin D); Same Frequency Sine (BNC)
46		50	Composite Clock (310 jack); 64-kHz Sine (BNC)
Dual DS1 (310 jacks)	60	60	Frame Pulse (BNC); Frame Pulse (BNC)
CEPT (310 jack)	65	00	User-specified Sine (BNC); 2.048-MHz TTL (BNC)
	65	45	User-specified RS-422 and TTL (9-pin D); Same Frequency Sine (BNC)
STS-1 (WECO 560A jack)	74	00	4-kHz TTL (BNC); Retransmitted Output (WECO 560A)
DS3 (WECO 560A jack)	75	00	4-kHz TTL (BNC); Retransmitted Output (WECO 560A)
DS1 (Bantam jack)	76	00	4-kHz TTL (BNC); Retransmitted Output (Bantam)
CEPT (Bantam jack)	77	00	4-kHz TTL (BNC); Retransmitted Output (Bantam)

Specifications subject to change or improvement without notice.  
Spectracom is a registered trademark.

All other products are identified by trademarks of their respective companies or organizations.  
Copyright 2004 Spectracom Corporation. Printed in USA 1/04

For more information, please contact Spectracom.

DS8140VT(C)



## Line Tap

### Model 8140T



#### PERFORMANCE SPECIFICATIONS

**OUTPUT FREQUENCY CHOICES:** 10, 5, 1, or 0.1 MHz.  
Specify for each Line Tap.

**OUTPUT LEVEL:** 600 mV rms sine wave into 50 ohms.  
TTL-compatible when used without termination.

**INPUT SIGNAL:** 10 MHz from Model 8140

**HARMONIC DISTORTION:** -40 dBc

**REVERSE ISOLATION:** 80 dB typical

**POWER:** DC power is supplied via the coaxial trunk line from a Spectracom Distribution Amplifier.

#### PHYSICAL & ENVIRONMENTAL

**SIZE:** 5.25" W x 2.63"H x 1.71"D  
133 W x 67 H x 43 D mm

**HOLE PATTERN:** 4.75" x 1.75"; 121 x 44 mm

**WEIGHT:** 1 lb

**CONNECTORS:** BNC - Input tee included

**TEMPERATURE:** 0°C to +50°C (32°F to 122°F) operating  
-40°C to 85°C (-40°F to 185°F) storage

**HUMIDITY:** 95% R.H. non-condensing

#### ORDERING INFORMATION

For 10 MHz sine wave output tap, specify **8140T10**  
For 5 MHz sine wave output tap, specify **8140T5**  
For 1 MHz sine wave output tap, specify **8140T1**  
For 100 Khz sine wave output tap, specify **8140TR1**

For more information, please contact Spectracom.

## MultiTap

### Model 8140MT

#### PERFORMANCE SPECIFICATIONS

##### FREQUENCY OUTPUTS:

Three square wave outputs per MultiTap. 1.5 V p-p into 50 ohms. There are four groups of output frequency choices. Once a group is chosen, each of the three outputs may be set to any frequency in the group. For a 10-MHz input, the outputs are:

##### GROUPS

10 MHz	10 MHz	2 MHz	2 MHz
5	5	1	1
1	0.5	0.2	0.1
0.2	0.1	0.04	0.02
0.04	0.02	0.008	0.004

**FREQUENCY INPUT:** Typically 10 MHz. TTL input range is 1 kHz to 20 MHz; sine input range is 100 kHz to 20 MHz. 300 mV p-p to 5V p-p sine; high impedance. Output frequencies are proportional to input frequency. Coaxial input line must be properly terminated.

**POWER:** DC power is supplied through the coaxial trunk line from a Spectracom Distribution Amplifier. An optional AC/DC adapter allows the MultiTap to be driven from sources other than a Spectracom Distribution Amplifier. External power must always be used if any output frequencies desired are less than 100 kHz even if used with a distribution amplifier.

#### PHYSICAL & ENVIRONMENTAL

**CONNECTORS:** BNC - Input tee included  
Power: 2.1 mm I.D. DC jack

All other physical and environmental parameters are the same as 8140T.

#### ORDERING INFORMATION

Specify **Model 8140MT** plus **Option 40** for 115 VAC adapter.



#### Stand-Alone Operation

Specifications subject to change or improvement without notice.  
Spectracom is a registered trademark.  
All other products are identified by trademarks of their respective companies or organizations.  
Copyright 2004 Spectracom Corporation. Printed in USA 1/04

DS8140TMT(C)