

PIC16C50X

EPROM Memory Programming Specification

This document includes the programming specifications for the following devices:

PIC16C505

1.0 PROGRAMMING THE PIC16C50X

The PIC16C50X can be programmed using a serial method. Due to this serial programming, the PIC16C50X can be programmed while in the user's system increasing design flexibility. This programming specification applies to PIC16C50X devices in all packages.

1.1 <u>Hardware Requirements</u>

The PIC16C50X requires two programmable power supplies, one for VDD (2.0V to 6.5V recommended) and one for VPP (12V to 14V). Both supplies should have a minimum resolution of 0.25V.

1.2 **Programming Mode**

The programming mode for the PIC16C50X allows programming of user program memory, and the configuration word for the PIC16C50X.

PIN DIAGRAM

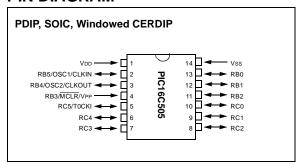


TABLE 1-1: PIN DESCRIPTIONS (DURING PROGRAMMING): PIC16C50X

Pin Name	During Programming					
Pin Name	Pin Name	Pin Type	Pin Description			
RB1	CLOCK	I	Clock input			
RB0	DATA	I/O	Data input/output			
RB3/MCLR/VPP	VPP	Р	Programming Power			
VDD	VDD	Р	Power Supply			
Vss	Vss	Р	Ground			

Legend: I = input, O = Output, P = Power

2.0 PROGRAM MODE ENTRY

The program/verify test mode is entered by holding pins RB0 and RB1 low while raising MCLR pin from VIL to VIHH. Once in this test mode the user program memory and the test program memory can be accessed and programmed in a serial fashion. The first selected memory location is the configuration word. RB0 and RB1 are Schmitt trigger inputs in this mode.

Incrementing the PC once (using the increment address command) selects location 0x000 of the regular program memory. Afterwards all other memory locations from 0x001-03FF can be addressed by incrementing the PC.

If the program counter has reached the last user program location and is incremented again, the on-chip special EPROM area will be addressed. (See Figure 2-2 to determine where the special EPROM area is located for the various PIC16C50X devices).

2.1 Programming Method

The programming technique is described in the following section. It is designed to guarantee good programming margins. It does, however, require a variable power supply for Vcc.

2.1.1 PROGRAMMING METHOD DETAILS

Essentially, this technique includes the following steps:

- 1. Perform blank check at VDD = VDDmin. Report failure. The device may not be properly erased.
- Program location with pulses and verify after each pulse at VDD = VDDP: where VDDP = VDD range required during programming (4.5V -5.5V).
- a) Programming condition:

VPP = 12.75V to 13.25V

VDD = VDDP = 4.5V to 5.5V

VPP must be ≥ VDD + 7.25V to keep "programming mode" active.

b) Verify condition:

VDD = VDDP

VPP ≥ VDD + 7.5V but not to exceed 13.25V

If location fails to program after "N" pulses, (suggested maximum program pulses of 8) then report error as a programming failure.

Note: Device must be verified at minimum and maximum specified operating voltages as specified in the data sheet.

- Once location passes 'Step 2', apply 11X overprogramming, i.e., apply 11 times the number of pulses that were required to program the location. This will guarantee a solid programming margin. The overprogramming should be made "software programmable" for easy updates.
- 4. Program all locations.

- Verify all locations (using speed verify mode) at VDD = VDDmin
- 6. Verify all locations at VDD = VDDmax

VDDmin is the minimum operating voltage spec. for the part. VDDmax is the maximum operating voltage spec. for the part.

2.1.2 SYSTEM REQUIREMENTS

Clearly, to implement this technique, the most stringent requirements will be that of the power supplies:

VPP: VPP can be a fixed 13.0V to 13.25V supply. It must not exceed 14.0V to avoid damage to the pin and should be current limited to approximately 100mA.

VDD: 2.0V to 6.5V with 0.25V granularity. Since this method calls for verification at different VDD values, a programmable VDD power supply is needed.

Current Requirement: 40 mA maximum

Microchip may release devices in the future with different VDD ranges which make it necessary to have a programmable VDD.

It is important to verify an EPROM at the voltages specified in this method to remain consistent with Microchip's test screening. For example, a PIC16C50X specified for 4.5V to 5.5V should be tested for proper programming from 4.5V to 5.5V.

Note: Any programmer not meeting the programmable VDD requirement and the verify at VDDmax and VDDmin requirement may only be classified as "prototype" or "development" programmer but not a production programmer.

2.1.3 SOFTWARE REQUIREMENTS

Certain parameters should be programmable (and therefore easily modified) for easy upgrade.

- a) Pulse width
- b) Maximum number of pulses, present limit 8.
- Number of over-programming pulses: should be = (A • N) + B, where N = number of pulses required in regular programming. In our current algorithm A = 11, B = 0.


2.2 **Programming Pulse Width**

Program Memory Cells: When programming one word of EPROM, a programming pulse width (TPW) of $100~\mu s$ is recommended.

The maximum number of programming attempts should be limited to 8 per word.

After the first successful verify, the same location should be over-programmed with 11X over-programming.

Configuration Word: The configuration word for oscillator selection, WDT (watchdog timer) disable and code protection, and MCLR enable, requires a programming pulse width (TPWF) of 10 ms. A series of 100 μs pulses is preferred over a single 10 ms pulse.

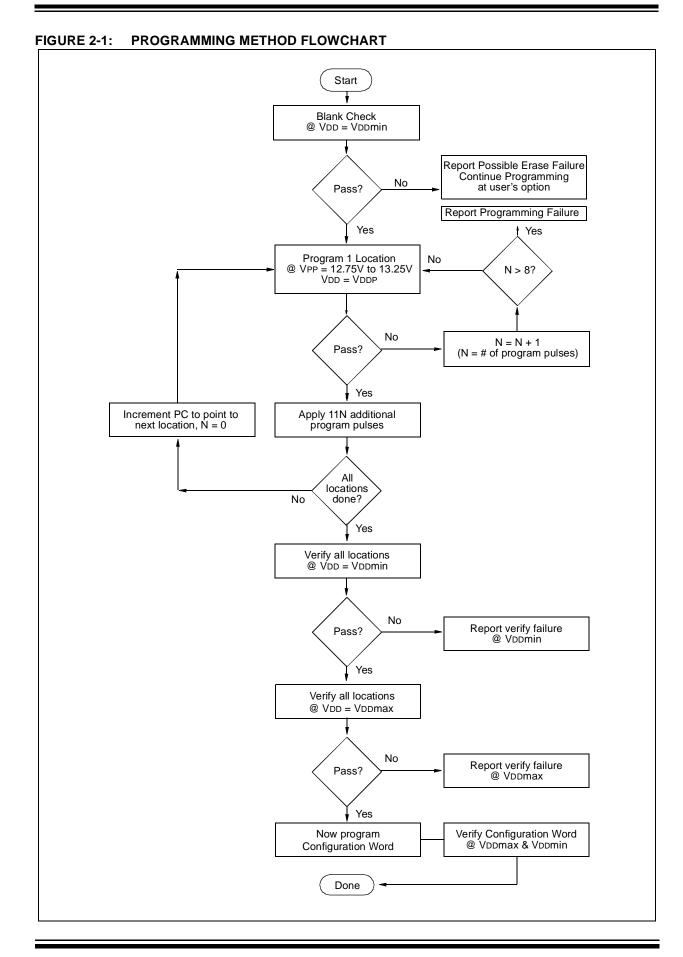

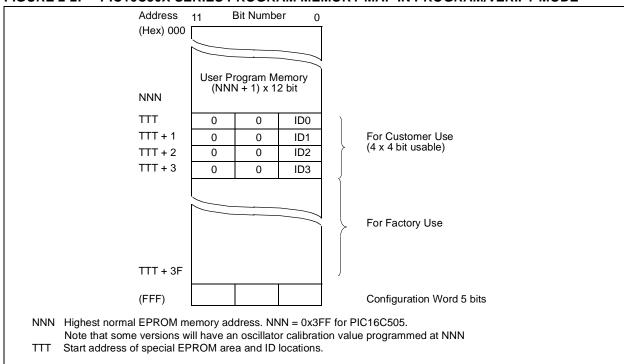


FIGURE 2-2: PIC16C50X SERIES PROGRAM MEMORY MAP IN PROGRAM/VERIFY MODE

2.3 **Special Memory Locations**

The highest address of program memory space is reserved for the internal RC oscillator calibration value. This location should not be overwritten except when this location is blank, and it should be verified, when programmed, that it is a MOVLW XX instruction.

The ID Locations area is only enabled if the device is in programming/verify mode. Thus, in normal operation mode only the memory location 0x000 to 0xNNN will be accessed and the Program Counter will just roll over from address 0xNNN to 0x000 when incremented.

The configuration word can only be accessed immediately after \overline{MCLR} going from VIL to VHH. The Program Counter will be set to all '1's upon \overline{MCLR} = VIL. Thus, it has the value "0xFFF" when accessing the configuration EPROM. Incrementing the Program Counter once causes the Program Counter to roll over to all '0's. Incrementing the Program Counter 4K times after reset (\overline{MCLR} = VIL) does not allow access to the configuration EPROM.

2.3.1 CUSTOMER ID CODE LOCATIONS

Per definition, the first four words (address TTT to TTT + 3) are reserved for customer use. It is recommended that the customer use only the four lower order bits (bits 0 through 3) of each word and filling the eight higher order bits with '0's.

A user may want to store an identification code (ID) in the ID locations and still be able to read this code after the code protection bit was programmed.

EXAMPLE 2-1: CUSTOMER CODE 0xD1E2

The Customer ID code "0xD1E2" should be stored in the ID locations 400-403 like this:

 400:
 0000 0000 1101

 401:
 0000 0000 0001

 402:
 0000 0000 1110

 403:
 0000 0000 0010

Reading these four memory locations, even with the code protection bit programmed would still output on Port A the bit sequence "1101", "0001", "1110", "0010" which is "0xD1E2".

Note: All other locations in PICmicro™ configuration memory are reserved and should not be programmed.

2.4 Program/Verify Mode

The program/verify mode is entered by holding pins RB1 and RB0 low while raising MCLR pin from VIL to VIHH (high voltage). Once in this mode the user program memory and the configuration memory can be accessed and programmed in serial fashion. The mode of operation is serial, and the memory that is accessed is the user program memory. RB0 and RB1 are Schmitt Trigger inputs in this mode.

The sequence that enters the device into the programming/verify mode places all other logic into the reset state (the MCLR pin was initially at VIL). This means that all I/O are in the reset state (High impedance inputs).

Note: The MCLR pin should be raised from VIL to VIHH within 9 ms of VDD rise. This is to ensure that the device does not have the PC incremented while in valid operation range.

2.4.1 PROGRAM/VERIFY OPERATION

The RB1 pin is used as a clock input pin, and the RB0 pin is used for entering command bits and data input/ output during serial operation. To input a command, the clock pin (RB1) is cycled six times. Each command bit is latched on the falling edge of the clock with the least significant bit (LSB) of the command being input first. The data on pin RB0 is required to have a minimum setup and hold time (see AC/DC specs) with respect to the falling edge of the clock. Commands that have data associated with them (read and load) are specified to have a minimum delay of 1µs between the command and the data. After this delay the clock pin is cycled 16 times with the first cycle being a start bit and the last cycle being a stop bit. Data is also input and output LSB first. Therefore, during a read operation the LSB will be transmitted onto pin RB0 on the rising edge of the second cycle, and during a load operation the LSB will be latched on the falling edge of the second cycle. A minimum 1µs delay is also specified between consecutive commands.

All commands are transmitted LSB first. Data words are also transmitted LSB first. The data is transmitted on the rising edge and latched on the falling edge of the clock. To allow for decoding of commands and reversal of data pin configuration, a time separation of at least 1µs is required between a command and a data word (or another command).

The commands that are available are listed in Table 2-1.

TABLE 2-1: COMMAND MAPPING

Command	Mapping (MSB LSB)					Data	
Load Data	0	0	0	0	1	0	0, data(14), 0
Read Data	0	0	0	1	0	0	0, data(14), 0
Increment Address	0	0	0	1	1	0	
Begin programming		0	1	0	0	0	
End Programming	0	0	1	1	1	0	

Note: The clock must be disabled during in-circuit programming.

2.4.1.1 LOAD DATA

After receiving this command, the chip will load in a 14-bit "data word" when 16 cycles are applied, as described previously. Because this is a 12 bit core, the two msb's of the data word are ignored. A timing diagram for the load data command is shown in Figure 5-1.

2.4.1.2 READ DATA

After receiving this command, the chip will transmit data bits out of the memory currently accessed starting with the second rising edge of the clock input. The RB0 pin will go into output mode on the second rising clock edge, and it will revert back to input mode (hi-impedance) after the 16th rising edge. A timing diagram of this command is shown in Figure 5-2.

2.4.1.3 INCREMENT ADDRESS

The PC is incremented when this command is received. A timing diagram of this command is shown in Figure 5-3.

2.4.1.4 BEGIN PROGRAMMING

A load data command must be given before every begin programming command. Programming of the appropriate memory (test program memory or user program memory) will begin after this command is received and decoded. Programming should be performed with a series of 100µs programming pulses. A programming pulse is defined as the time between the begin programming command and the end programming command.

2.4.1.5 END PROGRAMMING

After receiving this command, the chip stops programming the memory (configuration program memory or user program memory) that it was programming at the time.

2.5 <u>Programming Algorithm Requires</u> <u>Variable VDD</u>

The PIC16C50X uses an intelligent algorithm. The algorithm calls for program verification at VDDmin as well as VDDmax. Verification at VDDmin guarantees good "erase margin". Verification at VDDmax guarantees good "program margin".

The actual programming must be done with VDD in the VDDP range (4.75 - 5.25V).

VDDP = VCC range required during programming.

VDD min. = minimum operating VDD spec for the part.

VDDmax = maximum operating VDD spec for the part.

Programmers must verify the PIC16C50X at its specified VDDmax and VDDmin levels. Since Microchip may introduce future versions of the PIC16C50X with a broader VDD range, it is best that these levels are user selectable (defaults are ok).

Note: Any programmer not meeting these requirements may only be classified as "prototype" or "development" programmer but not a "production" quality programmer.

3.0 CONFIGURATION WORD

000 = LP oscillator

The PIC16C50X family members have several configuration bits. These bits can be programmed (reads '0') or left unprogrammed (reads '1') to select various device configurations. Figure 3-1 provides an overview of configuration bits.

FIGURE 3-1: CONFIGURATION WORD BIT MAP

Bit Number: 11 10 8 7 6 5 3 2 1 0 Register: CONFIG CP CP CP CP CP CP **MCLRE** CP WDTE FOSC2 FOSC1 FOSC0 Address 0FFFh bit 11-6, 4: CP Code Protection bits (1)(2) MCLRE: RB3/MCLR pin function select bit 5: $1 = RB3/\overline{MCLR}$ pin function is \overline{MCLR} $0 = RB3/\overline{MCLR}$ pin function is digital I/O, \overline{MCLR} internally tied to Vdd bit 3: WDTE: Watchdog Timer Enable bit 1 = WDT enabled 0 = WDT disabled bit 2-0: FOSC2:FOSC0: Oscillator Selection bits 111 = external RC oscillator / CLKOUT function on RB4/OSC2/CLKOUT pin 110 = external RC oscillator / RB4 function on RB4/OSC2/CLKOUT pin 101 = internal RC oscillator / CLKOUT function on RB4/OSC2/CLKOUT pin 100 = internal RC oscillator / RB4 function on RB4/OSC2/CLKOUT pin 011 = invalid selection010 = HS oscillator 001 = XT oscillator

Note 1: All of the CP pins have to be given the same value to enable the code protection scheme listed.

2: 03FFh is always uncode protected on the PIC16C505. This location contains the MOVLW xx calibration instruction for the INTRC.

4.0 CODE PROTECTION

The program code written into the EPROM can be protected by writing to the CP bit of the configuration word.

In PIC16C50X, it is still possible to program and read locations 0x000 through 0x03F, after code protection. Once code protection is enabled, all protected segments read '0's (or "garbage values") and are prevented from further programming. All unprotected

segments, including ID locations and configuration word, read normally. These locations can be programmed.

Once code protection is enabled, all code protected locations (0x040 to 0x3FE) read 0's. All unprotected segments, including the internal oscillator calibration value (0x3FF location), ID, config word read as normal.

4.1 Embedding Configuration Word and ID Information in the Hex File

To allow portability of code, the programmer is required to read the configuration word and ID locations from the hex file when loading the hex file. If configuration word information was not present in the hex file then a simple warning message may be issued. Similarly, while saving a hex file, configuration word and ID information must be included. An option to not include this information may be provided.

Microchip Technology Inc. feels strongly that this feature is important for the benefit of the end customer.

TABLE 4-1: CODE PROTECTION

PIC16C505 To code protect:

(CP enable pattern: 000000X0XXXX)

Program Memory Segment	R/W in Protected Mode	R/W in Unprotected Mode			
Configuration Word (0xFFF)	Read enabled, Write Enabled	Read enabled, Write Enabled			
[0x00:0x3F]	Read enabled, Write Enabled	Read enabled, Write Enabled			
[0x40:0x3FE]	Read disabled (all 0's), Write Disabled	Read enabled, Write Enabled			
0x3FF	Read enabled, Write Enabled	Read enabled, Write Enabled			
ID Locations (0x400 : 0x403)	Read enabled, Write Enabled	Read enabled, Write Enabled			

4.2 Checksum

4.2.1 CHECKSUM CALCULATIONS

Checksum is calculated by reading the contents of the PIC16C50X memory locations and adding up the opcodes up to the maximum user addressable location, (not including the last location which is reserved for the oscillator calibration value) e.g., 0x3FE for the PIC16C505. Any carry bits exceeding 16-bits are neglected. Finally, the configuration word (appropriately masked) is added to the checksum. Checksum computation for each member of the PIC16C50X family is shown in Table 4-2.

The checksum is calculated by summing the following:

- · The contents of all program memory locations
- · The configuration word, appropriately masked
- Masked ID locations (when applicable)

The least significant 16 bits of this sum is the checksum. The following table describes how to calculate the checksum for each device. Note that the checksum calculation differs depending on the code protect setting. Since the program memory locations read out differently depending on the code protect setting, the table describes how to manipulate the actual program memory values to simulate the values that would be read from a protected device. When calculating a checksum by reading a device, the entire program memory can simply be read and summed. The configuration word and ID locations can always be read.

At the oscillator calibration value location is not used in the above checksums.

TABLE 4-2: CHECKSUM COMPUTATION

Device	Code Protect	Checksum*		0x723 at 0 and max address
PIC16C505	OFF	SUM[0x000:0x3FE] + CFGW & 0xFFF	FC00	EA48
	ON	SUM[0x000:0x03F] + CFGW & 0xFFF + SUM(IDS)	FBEF	E15B

Legend: CFGW = Configuration Word

SUM[a:b] = [Sum of locations a through b inclusive]

SUM_ID = ID locations masked by 0xF then made into a 16-bit value with ID0 as the most significant nibble. For example,

ID0 = 0x12, ID1 = 0x37, ID2 = 0x4, ID3 = 0x26, then $SUM_ID = 0x2746$.

*Checksum = [Sum of all the individual expressions] **MODULO** [0xFFFF]

+ = Addition

& = Bitwise AND

5.0 PROGRAM/VERIFY MODE ELECTRICAL CHARACTERISTICS

TABLE 5-1: AC/DC CHARACTERISTICS TIMING REQUIREMENTS FOR PROGRAM/VERIFY MODE

Standard Operating Conditions

Operating Temperature: $+10^{\circ}C \le TA \le +40^{\circ}C$, unless otherwise stated, (20°C recommended)

Operating Voltage: $4.5V \le VDD \le 5.5V$, unless otherwise stated.

Parameter No.	Sym.	Characteristic	Min.	Тур.	Max.	Units	Conditions
		General					
PD1	VDDP	Supply voltage during programming	4.75	5.0	5.25	V	
PD2	IDDP	Supply current (from VDD) during programming			20	mA	
PD3	VDDV	Supply voltage during verify	VDDmin		VDDmax	V	Note 1
PD4	VIHH1	Voltage on MCLR/VPP during programming	12.75		13.25	V	Note 2
PD5	VIHH2	Voltage on MCLR/VPP during verify	VDD + 4.0		13.5		
PD6	IPP	Programming supply current (from VPP)			50	mA	
PD9	VIH1	(RB1, RB0) input high level	0.8 VDD			V	Schmitt Trigger input
PD8	VIL1	(RB1, RB0) input low level	0.2 VDD			V	Schmitt Trigger input

Serial Program Verify							
P1	TR	MCLR/VPP rise time (VSS to VHH)			8.0	μs	
P2	Tf	MCLR Fall time			8.0	μs	
P3	Tset1	Data in setup time before clock ↓	100			ns	
P4	Thld1	Data in hold time after clock \downarrow	100			ns	
P5	Tdly1	Data input not driven to next clock input (delay required between command/data or command/command)	1.0			μs	
P6	Tdly2	Delay between clock ↓ to clock ↑ of next command or data	1.0			μs	
P7	Tdly3	Clock ↑ to date out valid (during read data)	200			ns	
P8	Thld0	Hold time after MCLR ↑	2			μs	

Note 1: Program must be verified at the minimum and maximum VDD limits for the part.

2: VIHH must be greater than VDD + 4.5V to stay in programming/verify mode.

FIGURE 5-1: LOAD DATA COMMAND (PROGRAM/VERIFY)

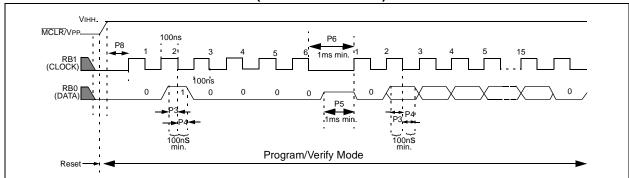


FIGURE 5-2: READ DATA COMMAND (PROGRAM/VERIFY)


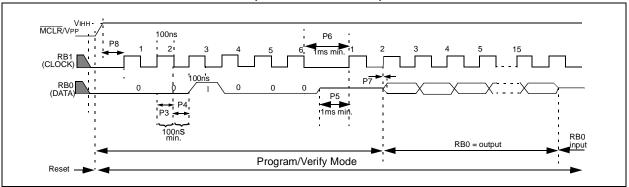


FIGURE 5-3: INCREMENT ADDRESS COMMAND (PROGRAM/VERIFY)



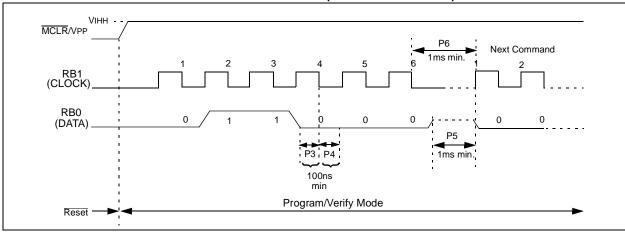

WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

Microchip Technology Inc. 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 602-786-7200 Fax: 602-786-7277 Technical Support: 602 786-7627 Web: http://www.microchip.com

Atlanta

Microchip Technology Inc. 500 Sugar Mill Road, Suite 200B Atlanta, GA 30350 Tel: 770-640-0034 Fax: 770-640-0307

Boston

Microchip Technology Inc. 5 Mount Royal Avenue Marlborough, MA 01752 Tel: 508-480-9990 Fax: 508-480-8575

Chicago

Microchip Technology Inc. 333 Pierce Road, Suite 180 Itasca, IL 60143

Tel: 630-285-0071 Fax: 630-285-0075

Microchip Technology Inc. 14651 Dallas Parkway, Suite 816 Dallas, TX 75240-8809 Tel: 972-991-7177 Fax: 972-991-8588

Dayton

Microchip Technology Inc. Two Prestige Place, Suite 150 Miamisburg, OH 45342 Tel: 937-291-1654 Fax: 937-291-9175

Microchip Technology Inc. 42705 Grand River, Suite 201 Novi, MI 48375-1727

Tel: 248-374-1888 Fax: 248-374-2878

Los Angeles

Microchip Technology Inc. 18201 Von Karman, Suite 1090 Irvine, CA 92612 Tel: 714-263-1888 Fax: 714-263-1338

New York

Microchip Technology Inc. 150 Motor Parkway, Suite 202 Hauppauge, NY 11788 Tel: 516-273-5305 Fax: 516-273-5335

San Jose

Microchip Technology Inc. 2107 North First Street, Suite 590 San Jose CA 95131 Tel: 408-436-7950 Fax: 408-436-7955

AMERICAS (continued)

Toronto

Microchip Technology Inc. 5925 Airport Road, Suite 200 Mississauga, Ontario L4V 1W1, Canada Tel: 905-405-6279 Fax: 905-405-6253

ASIA/PACIFIC

Hong Kong

Microchip Asia Pacific RM 3801B, Tower Two Metroplaza 223 Hing Fong Road Kwai Fong, N.T., Hong Kong Tel: 852-2-401-1200 Fax: 852-2-401-3431

Microchip Technology Inc. India Liaison Office No. 6, Legacy, Convent Road Bangalore 560 025, India Tel: 91-80-229-0061 Fax: 91-80-229-0062

Japan

Microchip Technology Intl. Inc. Benex S-1 6F 3-18-20, Shinyokohama Kohoku-Ku, Yokohama-shi Kanagawa 222-0033 Japan Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea

Microchip Technology Korea 168-1, Youngbo Bldg. 3 Floor Samsung-Dong, Kangnam-Ku Seoul, Korea Tel: 82-2-554-7200 Fax: 82-2-558-5934

Shanghai

Microchip Technology RM 406 Shanghai Golden Bridge Bldg. 2077 Yan'an Road West, Hong Qiao District Shanghai, PRC 200335 Tel: 86-21-6275-5700 Fax: 86 21-6275-5060

ASIA/PACIFIC (continued)

Singapore

Microchip Technology Singapore Pte Ltd. 200 Middle Road #07-02 Prime Centre Singapore 188980 Tel: 65-334-8870 Fax: 65-334-8850

Taiwan, R.O.C

Microchip Technology Taiwan 10F-1C 207 Tung Hua North Road Taipei, Taiwan, ROC Tel: 886-2-2717-7175 Fax: 886-2-2545-0139

Arizona Microchip Technology Ltd.

EUROPE

United Kingdom

505 Eskdale Road Winnersh Triangle Wokingham Berkshire, England RG41 5TU Tel: 44-1189-21-5858 Fax: 44-1189-21-5835

Arizona Microchip Technology SARL Zone Industrielle de la Bonde 2 Rue du Buisson aux Fraises 91300 Massy, France Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany

Arizona Microchip Technology GmbH Gustav-Heinemann-Ring 125 D-81739 Müchen, Germany Tel: 49-89-627-144 0 Fax: 49-89-627-144-44

Italy


Arizona Microchip Technology SRL Centro Direzionale Colleoni Palazzo Taurus 1 V. Le Colleoni 1 20041 Agrate Brianza Milan, Italy Tel: 39-39-6899939 Fax: 39-39-6899883

6/11/98



Microchip received ISO 9001 Quality System certification for its worldwide headquarters, design, and wafer fabrication facilities in January, 1997. Our field-programmable PICmicro™ 8-bit MCUs, Serial EEPROMs, related specialty memory products and development systems conform to the stringent quality standards of the International Standard Organization (ISO).

All rights reserved. © 1998, Microchip Technology Incorporated, USA. 6/98 Printed on recycled paper.



Information contained in this publication regarding device applications and the like is intended for suggestion only and may be superseded by updates. No representation or warranty is given and no liability is assumed by Microchip Technology Incorporated with respect to the accuracy or use of such information, or infingement of patents or other intellectual property rights arising from such use or otherwise. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip, No licenses are conveyed, implicitly or otherwise, under any intellectual property rights. The Microchip logo and name are registered trademarks of Microchip Technology Inc. in the U.S.A. and other countries. All rights reserved. All other trademarks mentioned herein are the property of their respective companies.