

## $512K \times 4$ BANKS $\times$ 32 BITS SDRAM

### **GENERAL DESCRIPTION**

W986432AH is a high-speed synchronous dynamic random access memory (SDRAM), organized as 512K words  $\times$  4 banks  $\times$  32 bits. Using pipelined architecture and 0.20  $\mu$ m process technology, W986432AH delivers a data bandwidth of up to 732M bytes per second (-55). For different application, W986432AH is sorted into four speed grades: -55, -6, -7 and -8.

Accesses to the SDRAM are burst oriented. Consecutive memory location in one page can be accessed at a burst length of 1, 2, 4, 8 or full page when a bank and row is selected by an ACTIVE command. Column addresses are automatically generated by the SDRAM internal counter in burst operation. Random column read is also possible by providing its address at each clock cycle. The multiple bank nature enables interleaving among internal banks to hide the precharging time.


By having a programmable Mode Register, the system can change burst length, latency cycle, interleave or sequential burst to maximize its performance. W986432AH is ideal for main memory in high performance applications.

### **FEATURES**

- 3.3V ±0.3V power supply
- 524288 words × 4 banks × 32 bits organization
- Auto Refresh and Self Refresh
- · CAS latency: 2 and 3
- Burst Length: 1, 2, 4, 8, and full page
- · Sequential and Interleave burst
- Burst read, single write operation

- · Byte data controlled by DQM
- Power-down Mode
- · Auto-precharge and controlled precharge
- 4K refresh cycles/64 mS
- Interface: LVTTL
- Packaged in 86-pin TSOP II, 400 mil 0.50

### **PIN CONFIGURATION**

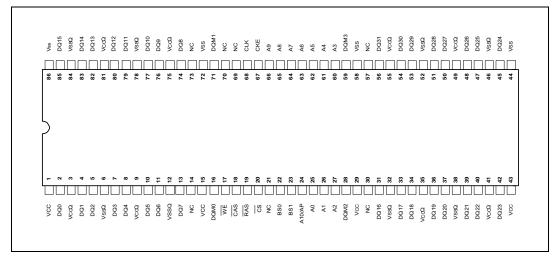

Publication Release Date: December 1999 Revision A1




# **PIN DESCRIPTION**

PIN NAME	FUNCTION	DESCRIPTION
A0-A10	Address	Multiplexed pins for row and column address.
		Row address: A0–A10. Column address: A0–A7.
		A10 is sampled during a precharge command to determine if all banks are to be precharged or bank selected by BS0, BS1.
BS0, BS1	Bank Select	Select bank to activate during row address latch time, or bank to read/write during address latch time.
DQ0-DQ31	Data Input/ Output	Multiplexed pins for data output and input.
CS	Chip Select	Disable or enable the command decoder. When command decoder is disabled, new command is ignored and previous operation continues.
RAS	Row Address Strobe	Command input. When sampled at the rising edge of the clock $\overline{RAS}$ , $\overline{CAS}$ and $\overline{WE}$ define the operation to be executed.
CAS	Column Address Strobe	Referred to RAS
WE	Write Enable	Referred to RAS
DQM0- DQM3	Input/output mask	The output buffer is placed at Hi-Z (with latency of 2) when DQM is sampled high in read cycle. In write cycle, sampling DQM high will block the write operation with zero latency.
CLK	Clock Inputs	System clock used to sample inputs on the rising edge of clock.
CKE	Clock Enable	CKE controls the clock activation and deactivation. When CKE is low, Power Down mode, Suspend mode, or Self Refresh mode is entered.
Vcc	Power (+3.3V)	Power for input buffers and logic circuit inside DRAM.
Vss	Ground	Ground for input buffers and logic circuit inside DRAM.
Vccq	Power (+3.3V) for I/O buffer	Separated power from VCC, to improve DQ noise immunity.
Vssq	Ground for I/O buffer	Separated ground from Vss, to improve DQ noise immunity.
NC	No Connection	No connection



# **BLOCK DIAGRAM**

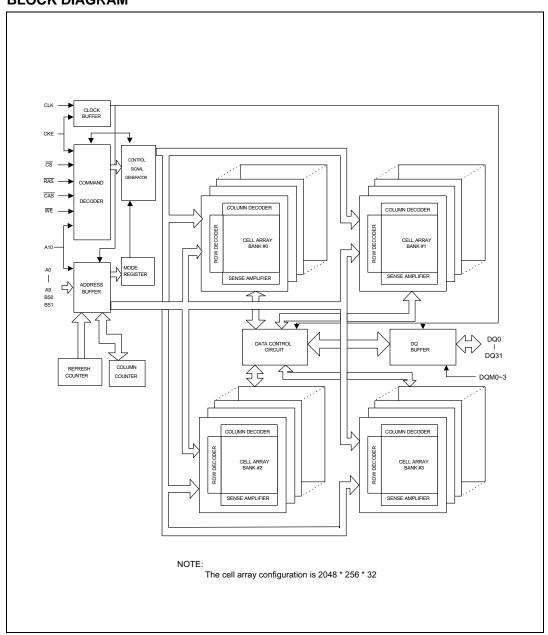



### **FUNCTIONAL DESCRIPTION**

### Power Up and Initialization

The default power up state of the mode register is unspecified. The following power up and initialization sequence need to be followed to guarantee the device being preconditioned to each user specific needs.

During power up, all VCC and VCCQ pins must be ramp up simultaneously to the specified voltage when the input signals are held in the "NOP" state. The power up voltage must not exceed VCC +0.3V on any of the input pins or VCC supplies. After power up, an initial pause of 200  $\mu S$  is required followed by a precharge of all banks using the precharge command. To prevent data contention on the DQ bus during power up, it is required that the DQM and CKE pins be held high during the initial pause period. Once all banks have been precharged, the Mode Register Set Command must be issued to initialize the Mode Register. An additional eight Auto Refresh cycles (CBR) are also required before or after programming the Mode Register to ensure proper subsequent operation.

### **Programming Mode Register**

After initial power up, the Mode Register Set Command must be issued for proper device operation. All banks must be in a precharged state and CKE must be high at least one cycle before the Mode Register Set Command can be issued. The Mode Register Set Command is activated by the low signals of RAS, CAS, CS and WE at the positive edge of the clock. The address input data during this cycle defines the parameters to be set as shown in the Mode Register Operation table. A new command may be issued following the mode register set command once a delay equal to tresc has elapsed. Please refer to the next page for Mode Register Set Cycle and Operation Table.

#### **Bank Activate Command**

The Bank Activate command must be applied before any Read or Write operation can be executed. The operation is similar to RAS activate in EDO DRAM. The delay from when the Bank Activate command is applied to when the first read or write operation can begin must not be less than the RAS to CAS delay time (trac). Once a bank has been activated it must be precharged before another Bank Activate command can be issued to the same bank. The minimum time interval between successive Bank Activate commands to the same bank is determined by the RAS cycle time of the device (trac). The minimum time interval between interleaved Bank Activate commands (Bank A to Bank B and vice versa) is the Bank to Bank delay time (trrd). The maximum time that each bank can be held active is specified as Tras (max.).

### **Read and Write Access Modes**

After a bank has been activated, a read or write cycle can be followed. This is accomplished by setting  $\overline{\text{RAS}}$  high and  $\overline{\text{CAS}}$  low at the clock rising edge after minimum of  $t_{\text{RCD}}$  delay.  $\overline{\text{WE}}$  pin voltage level defines whether the access cycle is a read operation ( $\overline{\text{WE}}$  high), or a write operation ( $\overline{\text{WE}}$  low). The address inputs determine the starting column address. Reading or writing to a different row within an activated bank requires the bank be precharged and a new Bank Activate command be issued. When more than one bank is activated, interleaved bank Read or Write operations are possible. By using the programmed burst length and alternating the access and precharge operations between multiple banks, seamless data access operation among many different pages can be realized. Read or Write Commands can also be issued to the same bank or between active banks on every clock cycle.



#### **Burst Read Command**

The Burst Read command is initiated by applying logic low level to  $\overline{\text{CS}}$  and  $\overline{\text{CAS}}$  while holding  $\overline{\text{RAS}}$  and  $\overline{\text{WE}}$  high at the rising edge of the clock. The address inputs determine the starting column address for the burst. The Mode Register sets type of burst (sequential or interleave) and the burst length (1, 2, 4, 8, full page) during the Mode Register Set Up cycle. Table 2 and 3 in the next page explain the address sequence of interleave mode and sequence mode.

#### **Burst Command**

The Burst Write command is initiated by applying logic low level to  $\overline{\text{CS}}$ ,  $\overline{\text{CAS}}$  and  $\overline{\text{WE}}$  while holding  $\overline{\text{RAS}}$  high at the rising edge of the clock. The address inputs determine the starting column address. Data for the first burst write cycle must be applied on the DQ pins on the same clock cycle that the Write Command is issued. The remaining data inputs must be supplied on each subsequent rising clock edge until the burst length is completed. Data supplied to the DQ pins after burst finishes will be ignored.

### Read Interrupted by a Read

A Burst Read may be interrupted by another Read Command. When the previous burst is interrupted, the remaining addresses are overridden by the new read address with the full burst length. The data from the first Read Command continues to appear on the outputs until the CAS latency from the interrupting Read Command the is satisfied.

### Read Interrupted by a Write

To interrupt a burst read with a Write Command, DQM may be needed to place the DQs (output drivers) in a high impedance state to avoid data contention on the DQ bus. If a Read Command will issue data on the first and second clocks cycles of the write operation, DQM is needed to insure the DQs are tri-stated. After that point the Write Command will have control of the DQ bus and DQM masking is no longer needed.

### Write Interrupted by a Write

A burst write may be interrupted before completion of the burst by another Write Command. When the previous burst is interrupted, the remaining addresses are overridden by the new address and data will be written into the device until the programmed burst length is satisfied.

#### Write Interrupted by a Read

A Read Command will interrupt a burst write operation on the same clock cycle that the Read Command is activated. The DQs must be in the high impedance state at least one cycle before the new read data appears on the outputs to avoid data contention. When the Read Command is activated, any residual data from the burst write cycle will be ignored.

### **Burst Stop Command**

A Burst Stop Command may be used to terminate the existing burst operation but leave the bank open for future Read or Write Commands to the same page of the active bank, if the burst length is full page. Use of the Burst Stop Command during other burst length operations is illegal. The Burst Stop Command is defined by having  $\overline{RAS}$  and  $\overline{CAS}$  high with  $\overline{CS}$  and  $\overline{WE}$  low at the rising edge of the clock. The data DQs go to a high impedance state after a delay, which is equal to the CAS



Latency in a burst read cycle, interrupted by Burst Stop. If a Burst Stop Command is issued during a full page burst write operation, then any residual data from the burst write cycle will be ignored.

### **Addressing Sequence of Sequential Mode**

A column access is performed by increasing the address from the column address which is input to the device. The disturb address is varied by the Burst Length as shown in Table 2.

DATA **ACCESS ADDRESS BURST LENGTH** Data 0 BL = 2 (disturb address is A0) Data 1 No address carry from A0 to A1 n + 1 Data 2 BL = 4 (disturb addresses are A0 and A1) n + 2 Data 3 n + 3No address carry from A1 to A2 Data 4 n + 4 Data 5 BL = 8 (disturb addresses are A0, A1 and A2) n + 5 No address carry from A2 to A3 Data 6 n + 6 Data 7 n + 7

**Table 2 Address Sequence of Sequential Mode** 

### **Addressing Sequence of Interleave Mode**

A column access is started in the input column address and is performed by inverting the address bit in the sequence shown in Table 3.

DATA	ACCESS ADDRESS	BUST LENGTH
Data 0	A8 A7 A6 A5 A4 A3 A2 A1 A0	BL = 2
Data 1	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 2	A8 A7 A6 A5 A4 A3 A2 A1 A0	BL = 4
Data 3	A8 A7 A6 A5 A4 A3 A2 A1 A0	IJ
Data 4	A8 A7 A6 A5 A4 A3 $\overline{\text{A2}}$ A1 A0	BL = 8
Data 5	A8 A7 A6 A5 A4 A3 $\overline{\text{A2}}$ A1 $\overline{\text{A0}}$	
Data 6	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 7	A8 A7 A6 A5 A4 A3 A2 A1 A0	V

**Table 3 Address Sequence of Interleave Mode** 



### **Auto-precharge Command**

If A10 is set to high when the Read or Write Command is issued, then the auto-precharge function is entered. During auto-precharge, a Read Command will execute as normal with the exception that the active bank will begin to precharge automatically before all burst read cycles have been completed. Regardless of burst length, it will begin a certain number of clocks prior to the end of the scheduled burst cycle. The number of clocks is determined by CAS latency.

A Read or Write Command with auto-precharge cannot be interrupted before the entire burst operation is completed for the same bank. Therefore, use of a Read, Write, or Precharge Command is prohibited during a read or write cycle with auto-precharge. Once the precharge operation has started, the bank cannot be reactivated until the Precharge time (trp) has been satisfied. Issue of Auto-Precharge command is illegal if the burst is set to full page length. If A10 is high when a Write Command is issued, the Write with Auto-Precharge function is initiated. The SDRAM automatically enters the precharge operation one clock delay from the last burst write cycle. This delay is referred to as write topl. The bank undergoing auto-precharge cannot be reactivated until topl and trp are satisfied. This is referred to as total, Data-in to Active delay (total = topl + trp). When using the Auto-precharge Command, the interval between the Bank Activate Command and the beginning of the internal precharge operation must satisfy tras (min).

### **Precharge Command**

The Precharge Command is used to precharge or close a bank that has been activated. The Precharge Command is entered when  $\overline{CS}$ ,  $\overline{RAS}$  and  $\overline{WE}$  are low and  $\overline{CAS}$  is high at the rising edge of the clock. The Precharge Command can be used to precharge each bank separately or all banks simultaneously. Three address bits, A10, BS0, and BS1 are used to define which bank(s) is to be precharged when the command is issued. After the Precharge Command is issued, the precharged bank must be reactivated before a new read or write access can be executed. The delay between the Precharge Command and the Activate Command must be greater than or equal to the Precharge time (trp).

### Self Refresh Command

The Self Refresh Command is defined by having  $\overline{\text{CS}}$ ,  $\overline{\text{RAS}}$ ,  $\overline{\text{CAS}}$  and CKE held low with  $\overline{\text{WE}}$  high at the rising edge of the clock. All banks must be idle prior to issuing the Self Refresh Command. Once the command is registered, CKE must be held low to keep the device in Self Refresh mode. When the SDRAM has entered Self Refresh mode all of the external control signals, except CKE, are disabled. The clock is internally disabled during Self Refresh Operation to save power. The device will exit Self Refresh operation after CKE is returned high. A minimum delay time is required when the device exits Self Refresh Operation and before the next command can be issued. This delay is equal to the tac cycle time plus the Self Refresh exit time.

If, during normal operation, AUTO REFRESH cycles are issued in bursts (as opposed to being evenly distributed), a burst of 4,096 AUTO REFRESH cycles should be completed just prior to entering and just after exiting the self refresh mode.

#### **Power Down Mode**

The Power Down mode is initiated by holding CKE low. All of the receiver circuits except CKE are gated off to reduce the power. The Power Down mode does not perform any refresh operations, therefore the device can not remain in Power Down mode longer than the Refresh period (tree) of the device.

Publication Release Date: December 1999



The Power Down mode is exited by bringing CKE high. When CKE goes high, a No Operation Command is required on the next rising clock edge, depending on tck. The input buffers need to be enabled with CKE held high for a period equal to tces (min.) + tck (min.).

### **No Operation Command**

The No Operation Command should be used in cases when the SDRAM is in a idle or a wait state to prevent the SDRAM from registering any unwanted commands between operations. A No Operation Command is registered when  $\overline{CS}$  is low with  $\overline{RAS}$ ,  $\overline{CAS}$ , and  $\overline{WE}$  held high at the rising edge of the clock. A No Operation Command will not terminate a previous operation that is still executing, such as a burst read or write cycle.

#### **Deselect Command**

The Deselect Command performs the same function as a No Operation Command. Deselect Command occurs when  $\overline{CS}$  is brought high, the  $\overline{RAS}$ ,  $\overline{CAS}$ , and  $\overline{WE}$  signals become don't cares.

#### **Clock Suspend Mode**

During normal access mode, CKE must be held high enabling the clock. When CKE is registered low while at least one of the banks is active, Clock Suspend Mode is entered. The Clock Suspend mode deactivates the internal clock and suspends any clocked operation that was currently being executed. There is a one clock delay between the registration of CKE low and the time at which the SDRAM operation suspends. While in Clock Suspend mode, the SDRAM ignores any new commands that are issued. The Clock Suspend mode is exited by bringing CKE high. There is a one clock cycle delay from when CKE returns high to when Clock Suspend mode is exited.



### **TABLE OF OPERATING MODES**

Fully synchronous operations are performed to latch the commands at the positive edges of CLK. Table 1 shows the truth table for the operation commands.

## TABLE 1 TRUTH TABLE (NOTE (1), (2))

Command	Device state	CKEn-1	CKEn	DQM	BS0, 1	A10	A0-A9	cs	RAS	CAS	WE
Bank Active	Idle	Н	Х	х	٧	٧	V	L	L	Н	Н
Bank Precharge	Any	Н	Х	х	٧	L	Х	L	L	Н	L
Precharge All	Any	Н	Х	х	Х	Н	Х	L	L	Н	L
Write	Active (3)	Н	Х	х	٧	L	٧	L	Н	L	L
Write with Autoprecharge	Active (3)	Н	Х	х	٧	Н	٧	L	Н	L	L
Read	Active (3)	Н	Х	Х	٧	L	٧	L	Н	L	Н
Read with Autoprecharge	Active (3)	Н	Х	х	٧	Н	٧	L	Н	L	Н
Mode Register Set	Idle	Н	Х	х	٧	٧	٧	L	L	L	L
No-Operation	Any	Н	Х	х	х	х	х	L	Н	Н	Н
Burst Stop	Active (4)	Н	Х	х	Х	х	Х	L	Н	Н	L
Device Deselect	Any	Н	Х	х	Х	х	Х	Н	х	х	х
Auto-Refresh	Idle	Н	Н	х	Х	х	Х	L	L	L	Н
Self-Refresh Entry	Idle	Н	L	х	Х	х	Х	L	L	L	Н
Self Refresh Exit	idle	L	Н	х	Х	х	Х	Н	х	х	х
	(S.R)	L	Н	х	х	х	х	L	Н	Н	х
Clock suspend Mode Entry	Active	Н	L	х	х	х	х	х	х	х	х
Power Down Mode Entry	Idle	Н	L	х	Х	х	Х	Н	х	х	Х
	Active (5)	Н	L	х	х	х	х	L	Н	Н	Н
Clock Suspend Mode Exit	Active	L	Н	х	х	х	х	х	х	х	Х
Power Down Mode Exit	Any	L	Н	х	х	х	х	Н	х	х	Х
	(power down)	L	Η	Х	х	х	х	L	Н	H	Н
Data write/Output Enable	Active	Н	х	L	х	х	Х	х	х	х	х
Data Write/Output Disable	Active	Н	Х	Н	Х	х	Х	х	х	х	х

### Notes:

- (1) v = valid, x = Don't care, L = Low Level, H = High Level
- (2) CKEn signal is input leve I when commands are provided.
- (3) These are state of bank designated by BS0, BS1 signals.
- (4) Device state is full page burst operation.
- (5) Power Down Mode can not be entered in the burst cycle. When this command asserts in the burst cycle, device state is clock suspend mode.



# **DC CHARACTERISTICS**

### **Absolute Maximum Rating**

PARAMETER	SYM.	RATING	UNIT	NOTES
Input, Column Output Voltage	VIN, VOUT	-0.3 - Vcc+0.3	V	1
Power Supply Voltage	Vcc, Vccq	-0.3 – 4.6	V	1
Operating Temperature	TOPR	0 – 70	°C	1
Storage Temperature	TSTG	-55 – 150	°C	1
Soldering Temperature (10s)	TSOLDER	260	۰C	1
Power Dissipation	PD	1	W	1
Short Circuit Output Current	lout	50	mA	1

Note: Exposure to conditions beyond those listed under Absolute Maximum Ratings may adversely affect the life and reliability of the device.

## RECOMMENDED DC OPERATING CONDITIONS

(TA = 0 to 70 ° C)

PARAMETER	SYM.	MIN.	TYP.	MAX.	UNIT	NOTE S
Power Supply Voltage	Vcc	3.0	3.3	3.6	V	2
Power Supply Voltage (for I/O Buffer)	Vccq	3.0	3.3	3.6	V	2
Input High Voltage	VIH	2.0	-	Vcc +0.3	V	2
Input Low Voltage	VIL	-0.3	-	0.8	V	2

Note: ViH (max.) = Vcc/VccQ+1.2V for pulse width  $\leq$  5 nS ViL (min.) = Vss/VssQ-1.2V for pulse width  $\leq$  5 nS

## **CAPACITANCE**

 $(V_{DD} = 3.3V, T_A = 25 \, {}^{\circ}C, f = 1 \, MHz)$ 

PARAMETER	SYM.	MIN.	MAX.	UNIT
Input Capacitance	CI	2.5	4	pf
(A0 to A11, BS0, BS1, $\overline{\mathtt{CS}}$ , $\overline{\mathtt{RAS}}$ , $\overline{\mathtt{CAS}}$ , $\overline{\mathtt{WE}}$ , DQM, CKE)				
Input Capacitance (CLK)		2.5	4	pf
Input/Output capacitance (DQ0-DQ31)	Co	4	6.5	pf

Note: These parameters are periodically sampled and not 100% tested



## **DC CHARACTERISTICS**

(Vcc =  $3.3V_{\pm}0.3V$ , TA =  $0 \circ \sim 70 \circ C$ )

PARAMETER		SYM.	-55	-6	-7	-8	UNIT	NOTES
			MAX.	MAX.	MAX.	MAX.		
Operating Current	1 bank operation	Icc1	105	100	90	80		3
tcк = min., tRC = min.								
Active precharge command cycling without burst operation								
Standby Current tck = min., $\overline{CS}$ = ViH ViH/L = ViH (min.)/ViL (max.)	CKE = VIH	ICC2	55	50	45	40		3
Bank: inactive state	CKE = VIL (Power Down mode)	ICC2P	1	1	1	1		3
Standby Current	CKE = VIH	Icc2s	8	8	8	8		
CLK = VIL, $\overline{CS}$ = VIH VIH/L=VIH (min.)/VIL (max.)								
BANK: inactive state	CKE = VIL (Power Down mode)	ICC2PS	1	1	1	1	mA	
No Operating Current tck = min., $\overline{CS}$ = Vih (min.)	CKE = VIH	Icc3	70	65	55	45		
BANK: active state (4 banks)	CKE = VIL (Power Down mode)	Іссзр	3	3	3	3		
Burst Operating Current	(t <sub>CK</sub> = min.)	Icc4	160	155	145	125		3, 4
Read/Write command cycling								
Auto Refresh Current	(t <sub>CK</sub> = min.)	ICC5	145	135	125	105		3
Auto refresh command cycling								
Self Refresh Current	(CKE = 0.2V)	ICC6	1	1	1	1		
Self refresh mode								

PARAMETER	SYMBOL	MIN.	MAX.	UNIT	NOTES
Input Leakage Current	lı(L)	-5	5	μA	
(0V ≤ V <sub>IN</sub> ≤ V <sub>CC</sub> , all other pins not under test = 0V)					
Output Leakage Current	Vo(L)	-5	<u>5</u>	μA	
7(Output disable, 0V ≤ Vouт ≤ VccQ)					
LVTTL Output "H" Level Voltage	Voн	2.4	=	V	
(IOUT = -2 mA)					
LVTTL Output *L" Level Voltage	Vol	-	0.4	V	
(IOUT = 2 mA)					



# **AC CHARACTERISTICS**

(V<sub>CC</sub> = 3.3V  $\pm$  0.3V, V<sub>SS</sub> = 0V, Ta = 0 to 70 °C) (Notes: 5, 6, 7, 11)

PARAMETER	-55			-6	-7		-8		UNIT	NOTE	
		MIN.	MAX.	MIN.	MAX.	MIN.	MAX.	MIN.	MAX.		
Ref/Active to Ref/Active Command Period	tRC	60		60		70		72		nS	9
Active to precharge Command Period	tras	38.5	100000	42	100000	48	100000	48	100000		9
Active to Read/Write Command Delay Time	tRCD	16.5		18		20		20			9
Read/Write(a) to Read/Write(b)Command Period	tCCD	1		1		1		1		Cycle	9
Precharge to Active(b) Command Period	trp	18		18		20		20		nS	9
Active(a) to Active(b) Command Period	trpd	11		12		14		16			9
Write Recovery Time CL* = 2	twr	10		10		10		10			
CL* = 3		5.5		6		7		8			
CLK Cycle Time CL* = 2	tcĸ	10	1000	10	1000	10	1000	10	1000		
CL* = 3		5.5	1000	6	1000	7	1000	8	1000		
CLK High Level	tсн	2		2.5		3		3			10
CLK Low Level	tcL	2		2.5		3		3			10
Access Time from CLK CL* = 2	tac		7		7		7		7		
CL* = 3			5		5.5		5.5		6		
Output Data Hold Time	tон	2		2		2.5		3			
Output Data High Impedance Time	tHZ	2	5.5	2	6	2.5	7	3	8		8
Output Data Low Impedance Time	tLZ	0		0		0		0			
Power Down Mode Entry Time	tsB	0	5.5	0	6	0	7	0	8		
Transition Time of CLK (Rise and Fall)	tт	0.3	10	0.3	10	0.3	10	0.3	10		
Data-in-Set-up Time	tos	1.5		2		2		2			
Data-in Hold Time	tDH	1		1		1		1			
Address Set-up Time	tas	1.5		2		2		2			
Address Hold Time	tан	1		1		1		1			
CKE Set-up Time	tcks	1.5		2		2		2			
CKE Hold Time	tскн	1		1		1		1			
Command Set-up Time	tcms	1.5		2		2		2			
Command Hold Time	tсмн	1		1		1		1			
Refresh Time	tref		64		64		64		64	mS	
Mode Register Set Cycle Time	trsc	11		12		14		16		nS	9

# W986432AH



## (2) A.C Latency Characteristics

CKE to clock disable (CKE Latency)		1	Cycle
DQM to output to HI-Z (Read DQM Latency)	2		
DQM to output to HI-Z (Write DQM Latency)		0	
Write command to input data (Write Data Latency)		0	
CS to Command input (CS Latency)		0	
Precharge to DQ Hi-Z Lead time	CL = 2	2	
	CL = 3	3	
Precharge to Last Valid data out	CL = 2	1	
	CL = 3	2	
Bust Stop Command to DQ Hi-Z Lead time	CL = 2	2	
	CL = 3	3	
Bust Stop Command to Last Valid Data out	CL = 2	1	
	CL = 3	2	
Read with Auto-precharge Command to Active/Ref Command	CL = 2	BL + t <sub>RP</sub>	Cycle + nS
	CL = 3	BL + t <sub>RP</sub>	
Write with Auto-precharge Command to Active/Ref Command	CL = 2	BL + t <sub>RP</sub>	
	CL = 3	BL + t <sub>RP</sub>	




#### Notes:

- 1. Operation exceeds "ABSOLUTE MAXIMUM RATING" may cause permanent damage to the devices.
- 2. All voltages are referenced to VSS
- These parameters depend on the cycle rate and listed values are measured at a cycle rate with the minimum values of tCK and tRC.
- These parameters depend on the output loading conditions. Specified values are obtained with output open.
- 5. Power up Sequence
  - (1) Power up must be performed in the following sequence.
  - (2) Power must be applied to Vcc and VccQ (simultaneously) while all input signals are held in the "NOP" state. The CLK signals must be started at the same time.
  - (3) After power-up a pause of at least 200 i seconds is required. It is required that DQM and CKE signals then be held 'high' (Vcc levels) to ensure that the DQ output is impedance.
  - (4) All banks must be precharged.
  - (5) The Mode Register Set command must be asserted to initialize the Mode Register.
  - (6) A minimum of eight Auto Refresh dummy cycles is required to stabilize the internal circuitry of the device.

#### 6. AC Testing Conditions

PARAMETER	CONDITIONS
Output Reference Level	1.4V
Output Load	See diagram below
Input Signal Levels (Vıн/Vı∟)	2.4V/0.4V
Transition Time (Rise and Fall) of Input Signal	1 nS
Input Reference Level	1.4V

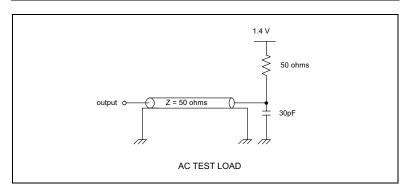


- 1. Transition times are measured between VIH and VIL.
- 2. thz defines the time at which the outputs achieve the open circuit condition and is not referenced to output level.
- These parameters account for the number of clock cycles and depend on the operating frequency of the clock, as follows the number of clock cycles = specified value of timing/ clock period (count fractions as whole number)
  - (1) tch is the pulse width of CLK measured from the positive edge to the negative edge referenced to Vih (min.). tcl is the pulse width of CLK measured from the negative edge to the positive edge referenced to Vil (max.).




# **TIMING WAVEFORMS**

# **Command Input Timing**

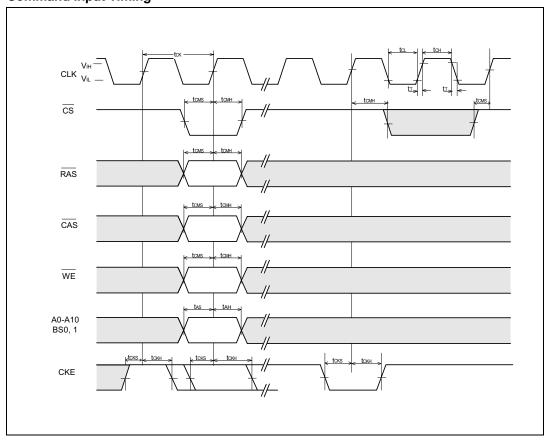




# **Read Timing**

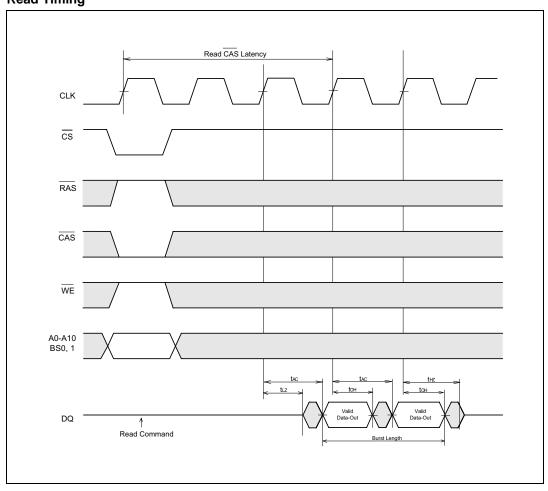




# **Control Timing of Input Data**

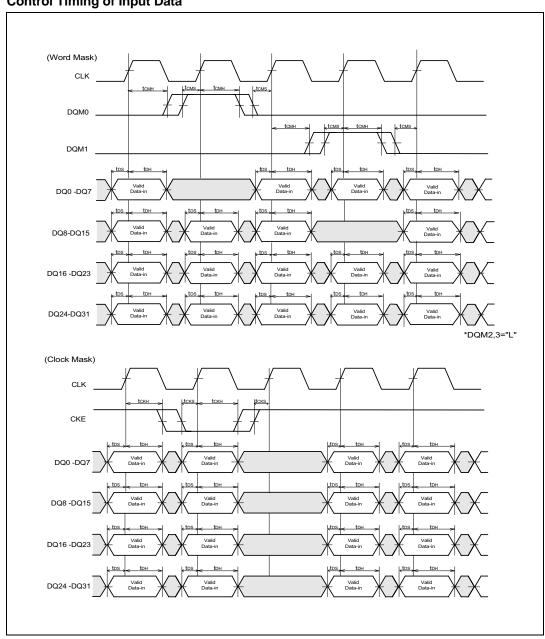




# **Control Timing of Output Data**

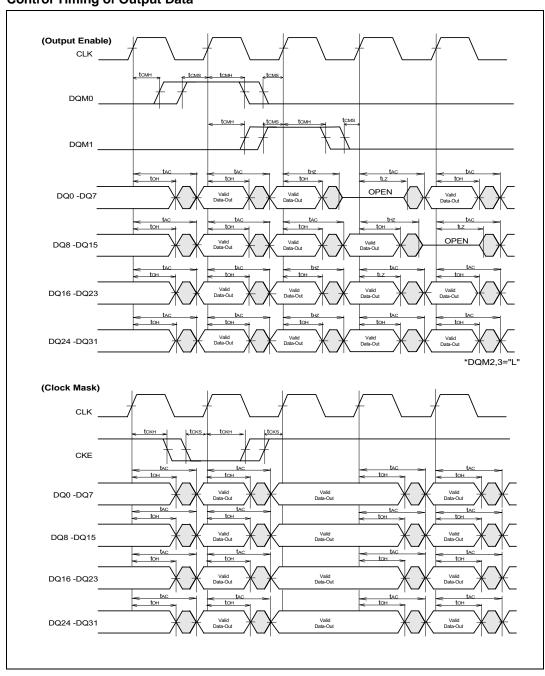




## **Mode Register Set Cycle**

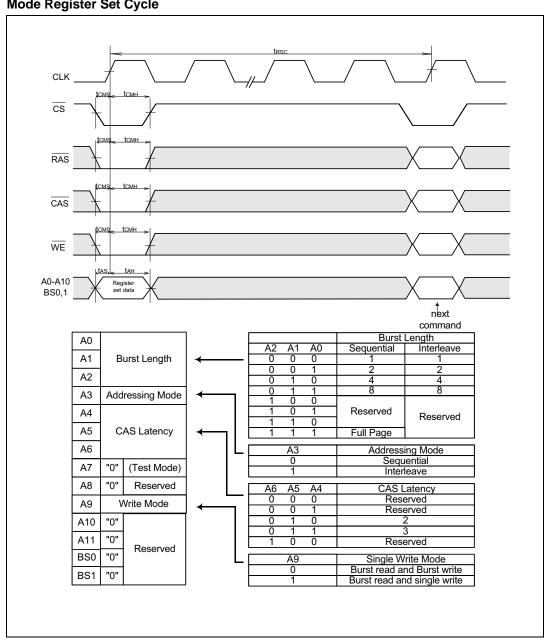




# **OPERATING TIMING EXAMPLE**

## Interleaved Bank Read (Burst Length = 4, CAS Latency = 3)

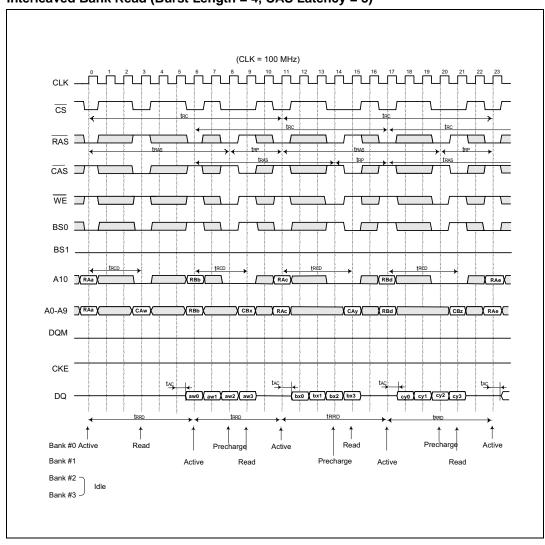




# Interleaved Bank Read (Burst Length = 4, CAS Latency = 3, Autoprecharge)

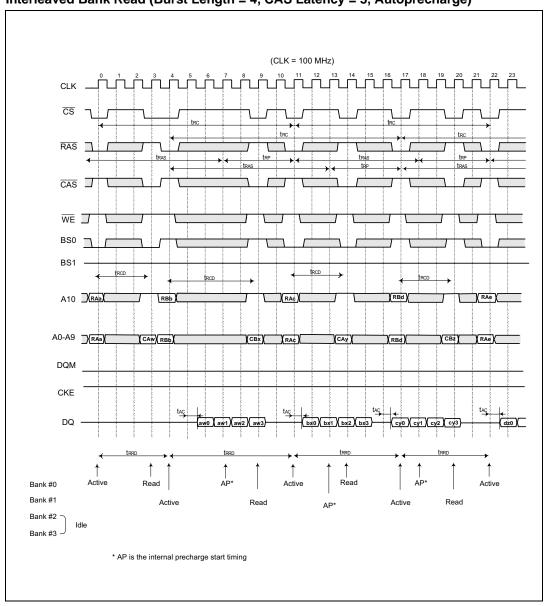




# Interleaved Bank Read (Burst Length = 8, CAS Latency = 3)

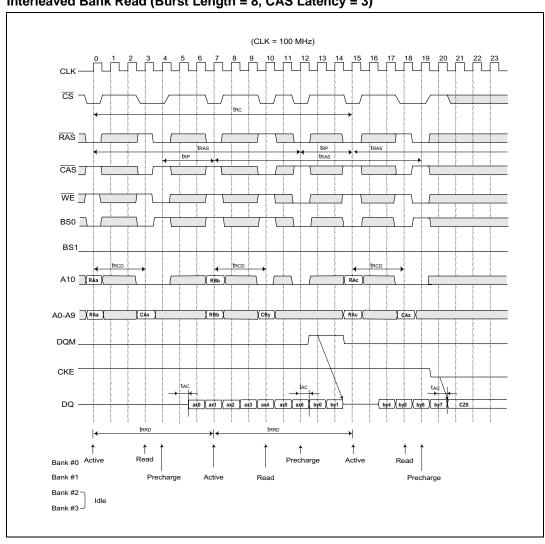




# Interleaved Bank Read (Burst Length = 8, CAS Latency = 3, Autoprecharge)

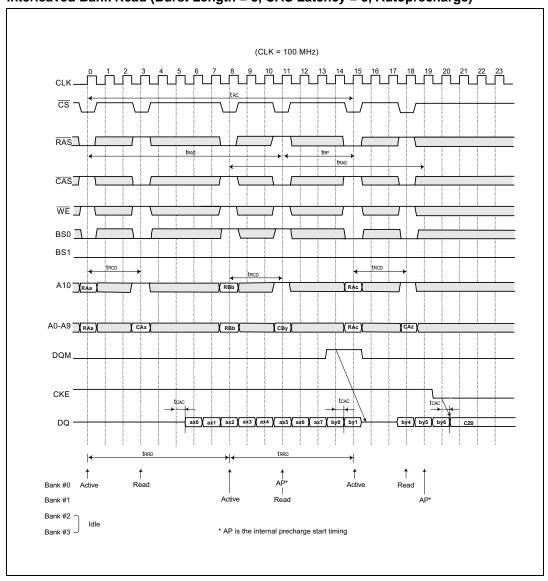




# Interleaved Bank Write (Burst Length = 8)

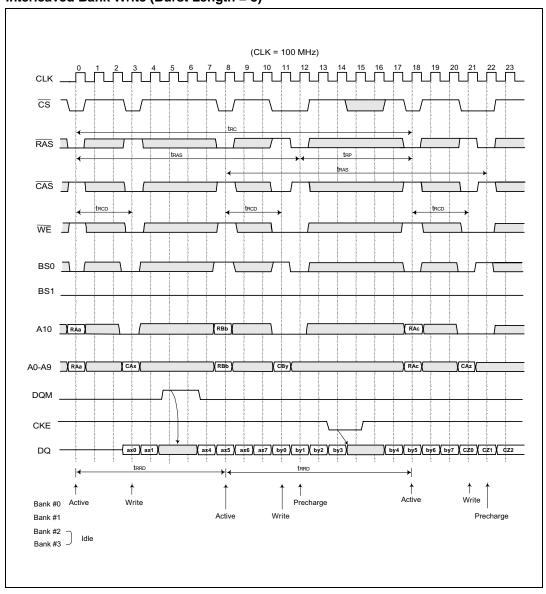




# Interleaved Bank Write (Burst Length = 8, Autoprecharge)

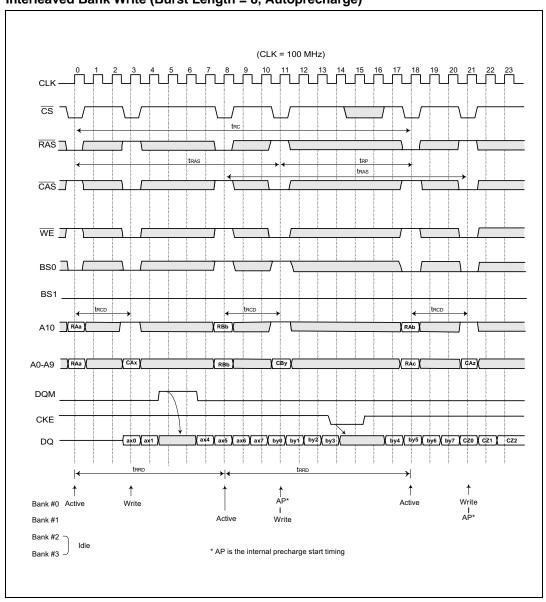




# Page Mode Read (Burst Length = 4, CAS Latency = 3)

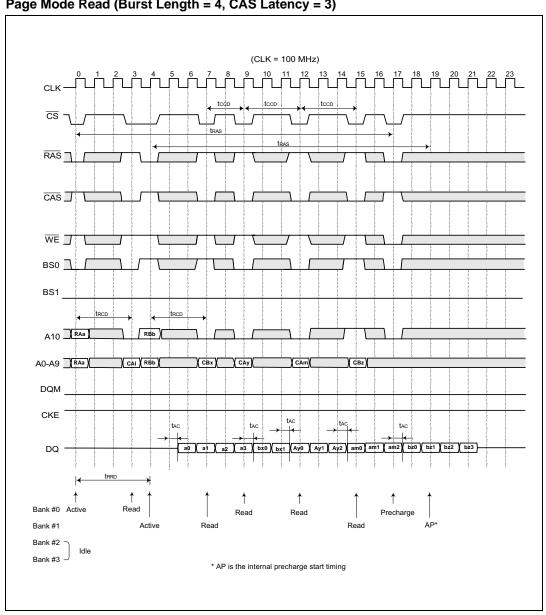




# Page Mode Read/Write (Burst Length = 8, CAS Latency = 3)

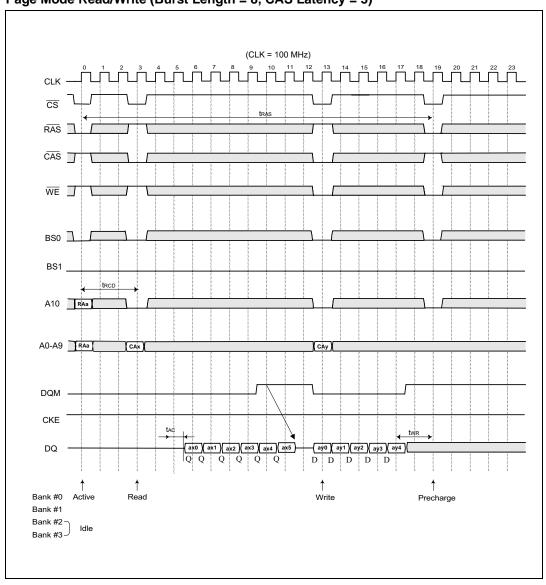




# Autoprecharge Read (Burst Length = 4, CAS Latency = 3)

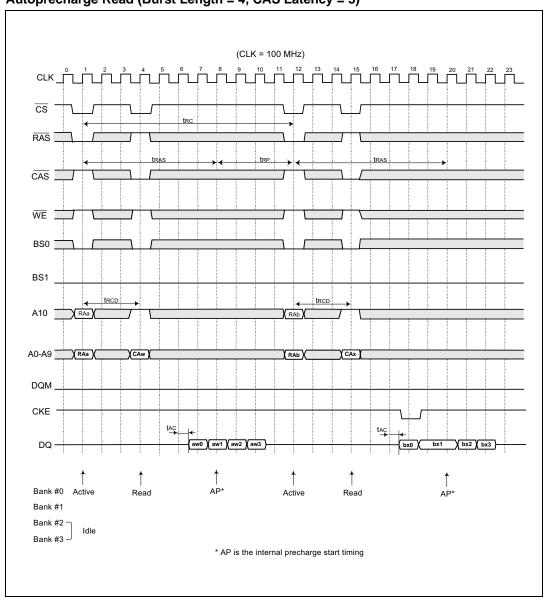




# Autoprecharge Write (Burst Length = 4)

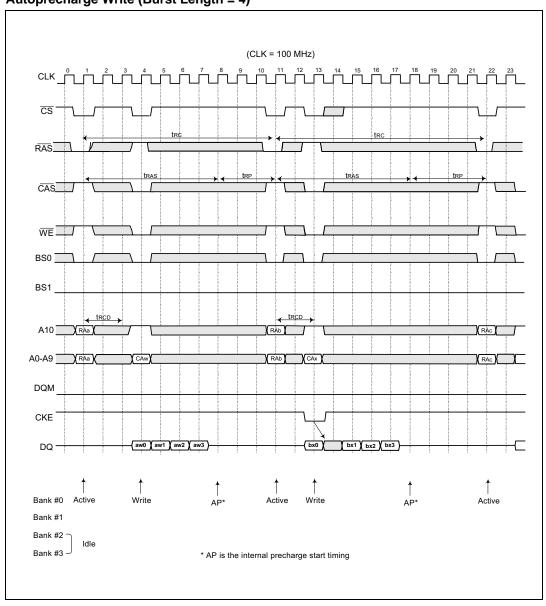




# **Autorefresh Cycle**

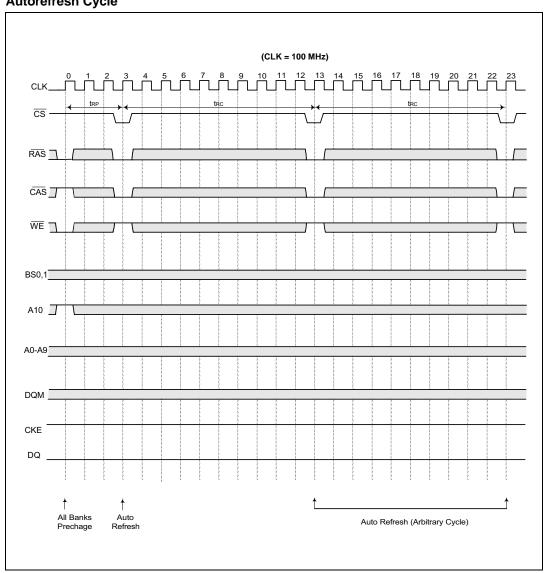




# Self-refresh Cycle

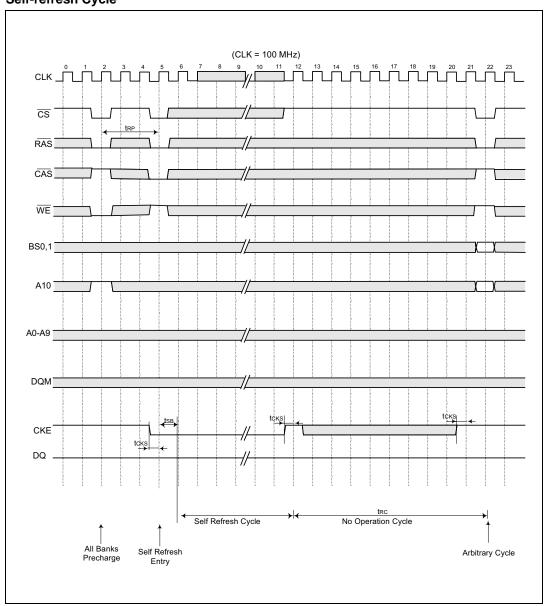




# Bust Read and Single Write (Burst Length = 4, CAS Latency = 3)

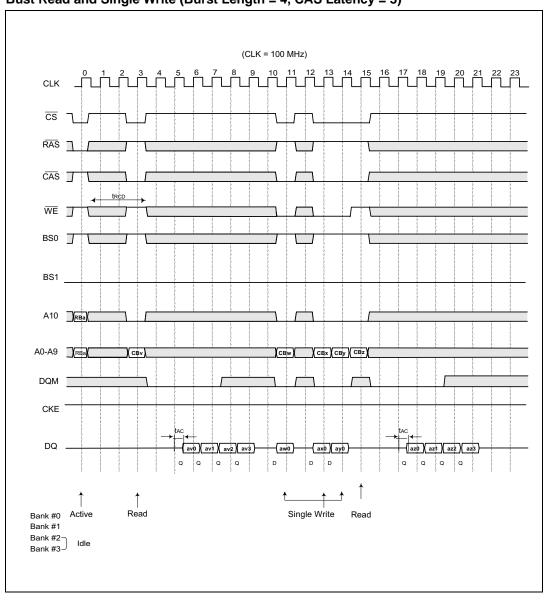




### **Power-down Mode**

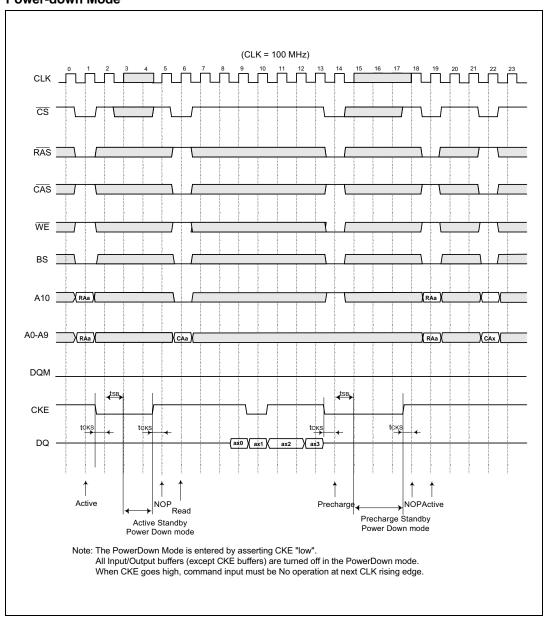




## **Auto-precharge Timing (Write Cycle)**

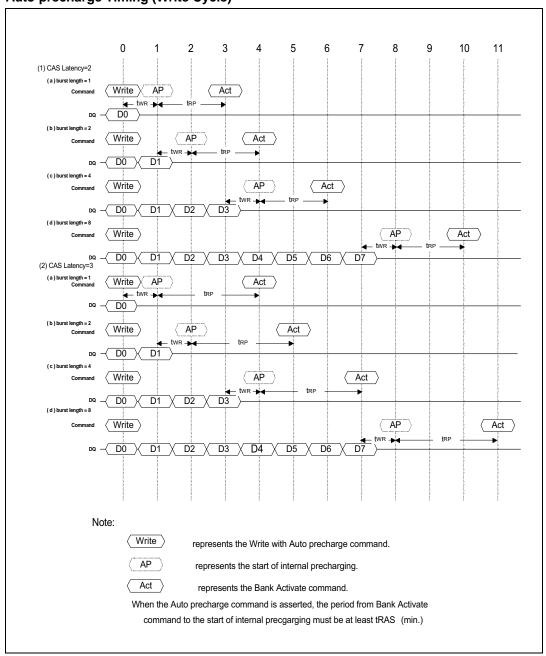




## **Auto-precharge Timing (Read Cycle)**

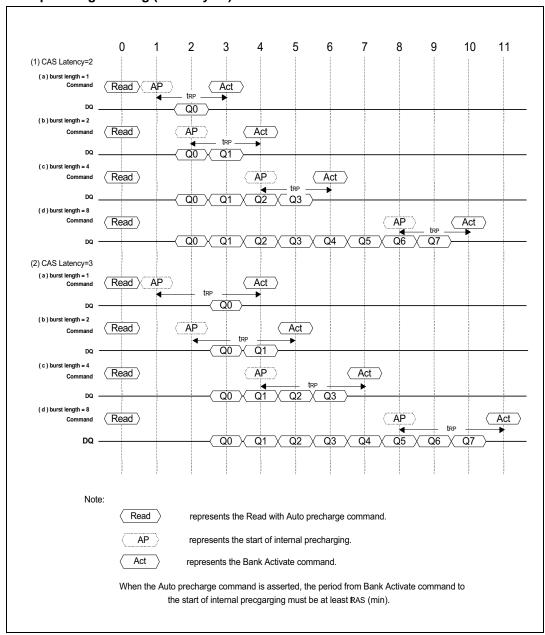




# **Timing Chart of Read to Write Cycle**

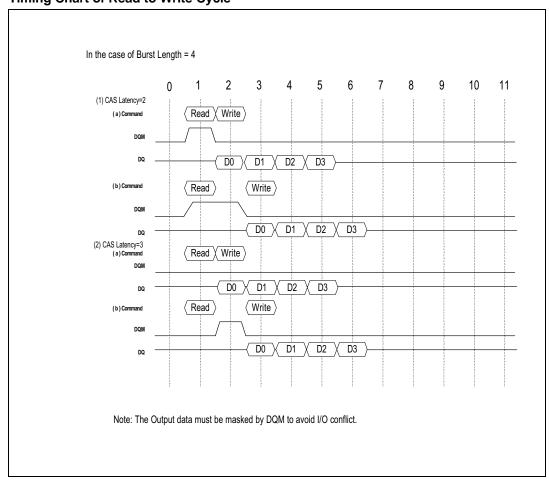




# **Timing Chart of Write to Read Cycle**

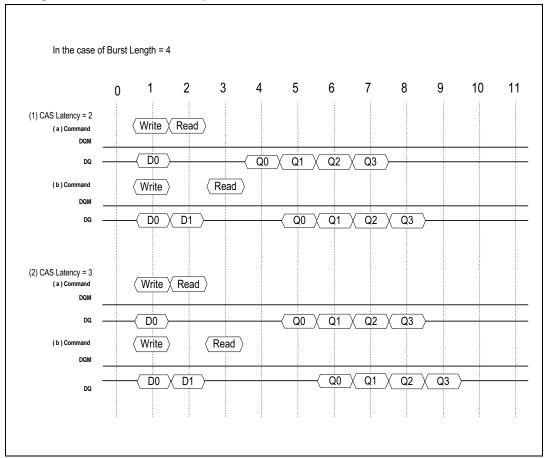




# Timing Chart of Burst Stop Cycle (Burst Stop Command)

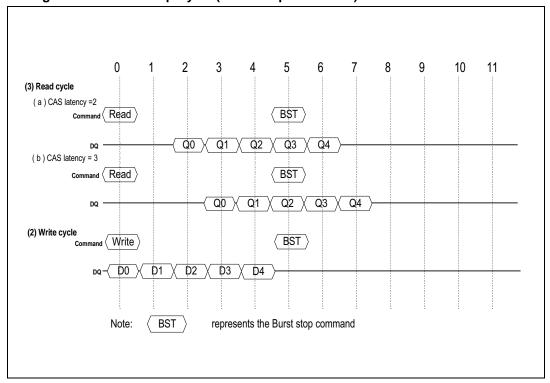




# Timing Chart of Burst Stop Cycle (Precharge Command)

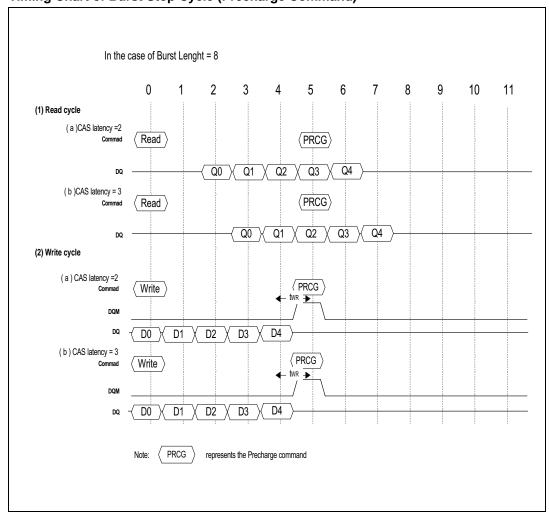




# **CKE/DQM Input Timing (Write Cycle)**

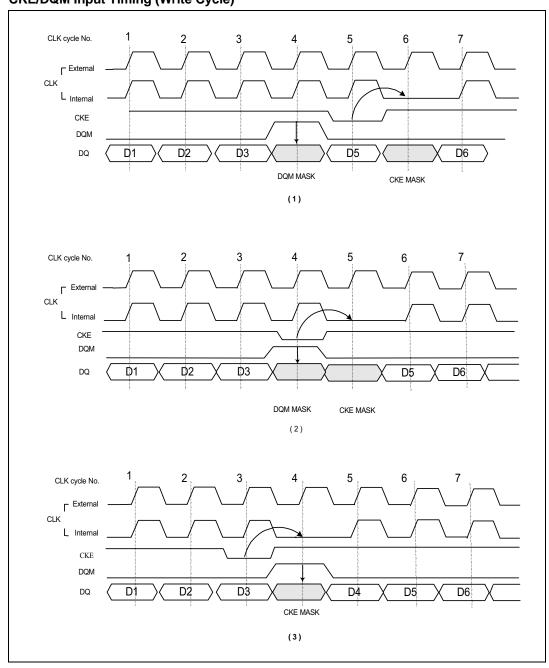




# **CKE/DQM Input Timing (Read Cycle)**

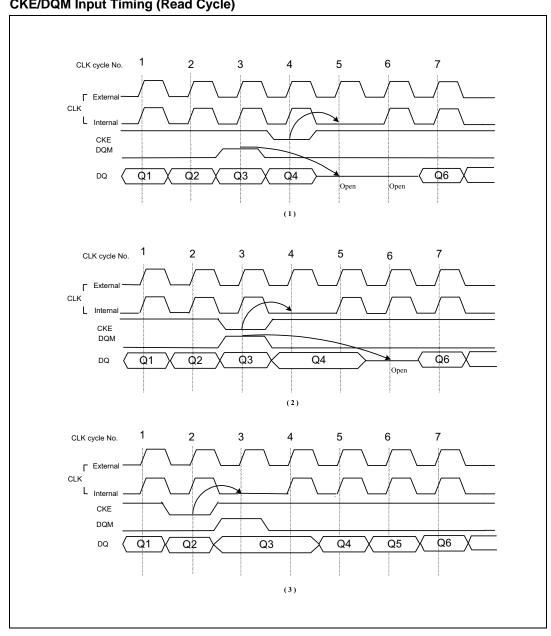




## Self Refresh/Power Down Mode Exit Timing

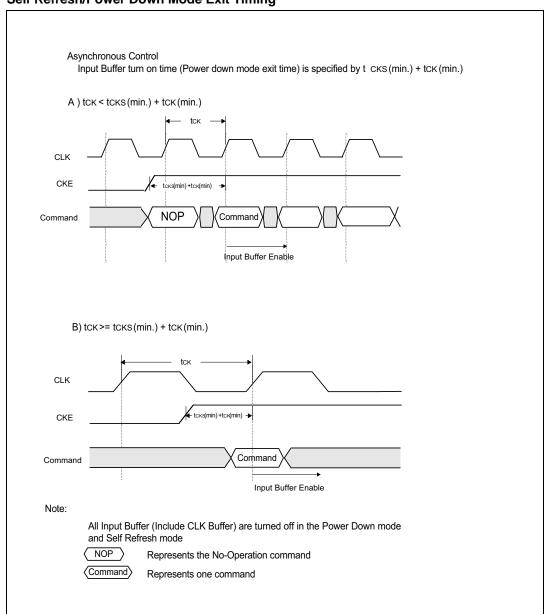



## **PACKAGE DIMENSIONS**

## 86L TSOP (II)-400 mil

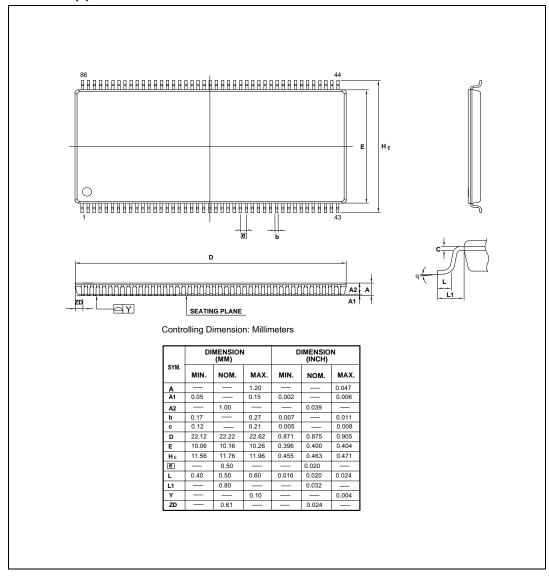





### Headquarters

No. 4, Creation Rd. III, Science-Based Industrial Park, Hsinchu, Taiwan TEL: 886-3-5770066 FAX: 886-3-5796096

http://www.winbond.com.tw/ Voice & Fax-on-demand: 886-2-27197006

### **Taipei Office**

11F, No. 115, Sec. 3, Min-Sheng East Rd., Taipei, Taiwan TEL: 886-2-27190505 FAX: 886-2-27197502

Winbond Electronics (H.K.) Ltd. Rm. 803, World Trade Square, Tower II, 123 Hoi Bun Rd., Kwun Tong, Kowloon, Hong Kong TEL: 852-27513100 FAX: 852-27552064

Winbond Electronics North America Corp. Winbond Memory Lab. Winbond Microelectronics Corp. Winbond Systems Lab. 2727 N. First Street, San Jose, CA 95134, U.S.A. TEL: 408-9436666 FAX: 408-5441798

Note: All data and specifications are subject to change without notice.