


A-MP* TERMI-POINT* EXTRACTION TOOL Catalog No. 69357-



1. INTRODUCTION

Tools No. 69357- \square , listed in Figure 1, are used to remove A-MP TERMI-POINT clips. Clips may be individually removed from an A-MP post (size .031" x .062") without disturbing other clips on the same post or adjacent posts.

Tools No. 69357-3 and 69357-5, are dual purpose tools that may be used to advance clips previously applied to a lower position on the post. This will allow an additional clip to be placed on the post.

CLIP NO.	EXTRACTION TOOL NO.
□-330495-□	69357-3
□- 67042-□	69357-5

Figure 1

2. EXTRACTION PROCEDURE

- (a) Hold tool perpendicular to panel. Then, hook the tip of the extraction tool under the curl on the clip. See Figure 2.
- (b) Twist tool in clockwise direction away from open portion of TERMI-POINT clip until clip is free. See Figure 4.
- (c) Remove clip from post.
- (d) Repeat above steps for each clip to be removed. NOTE: Clip cannot be reused and should be discarded after removal.

3. CLIP POSITIONING PROCEDURE (TOOLS NO. 69357-3 AND 69357-5)

- (a) After removing a termination (other than the top termination) it will become necessary to advance the existing clips toward the panel to permit the installation of additional clips.
- (b) Position flat tip of tool against clip on post. See Figure 3. NOTE: TO INSURE CONTACT RELIABILITY, THIS TOOL SHOULD NOT BE USED TO PUSH MORE THAN ONE CLIP AT A TIME.
- (c) Carefully push clip to desired position on post.

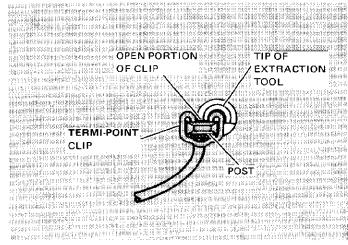


Figure 2

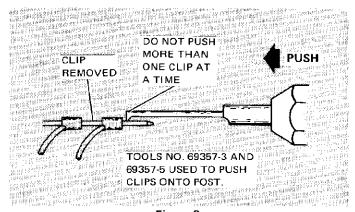


Figure 3

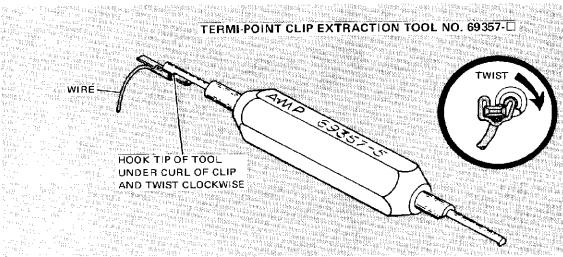


Figure 4