


EICO ST-40 Stereo Amp

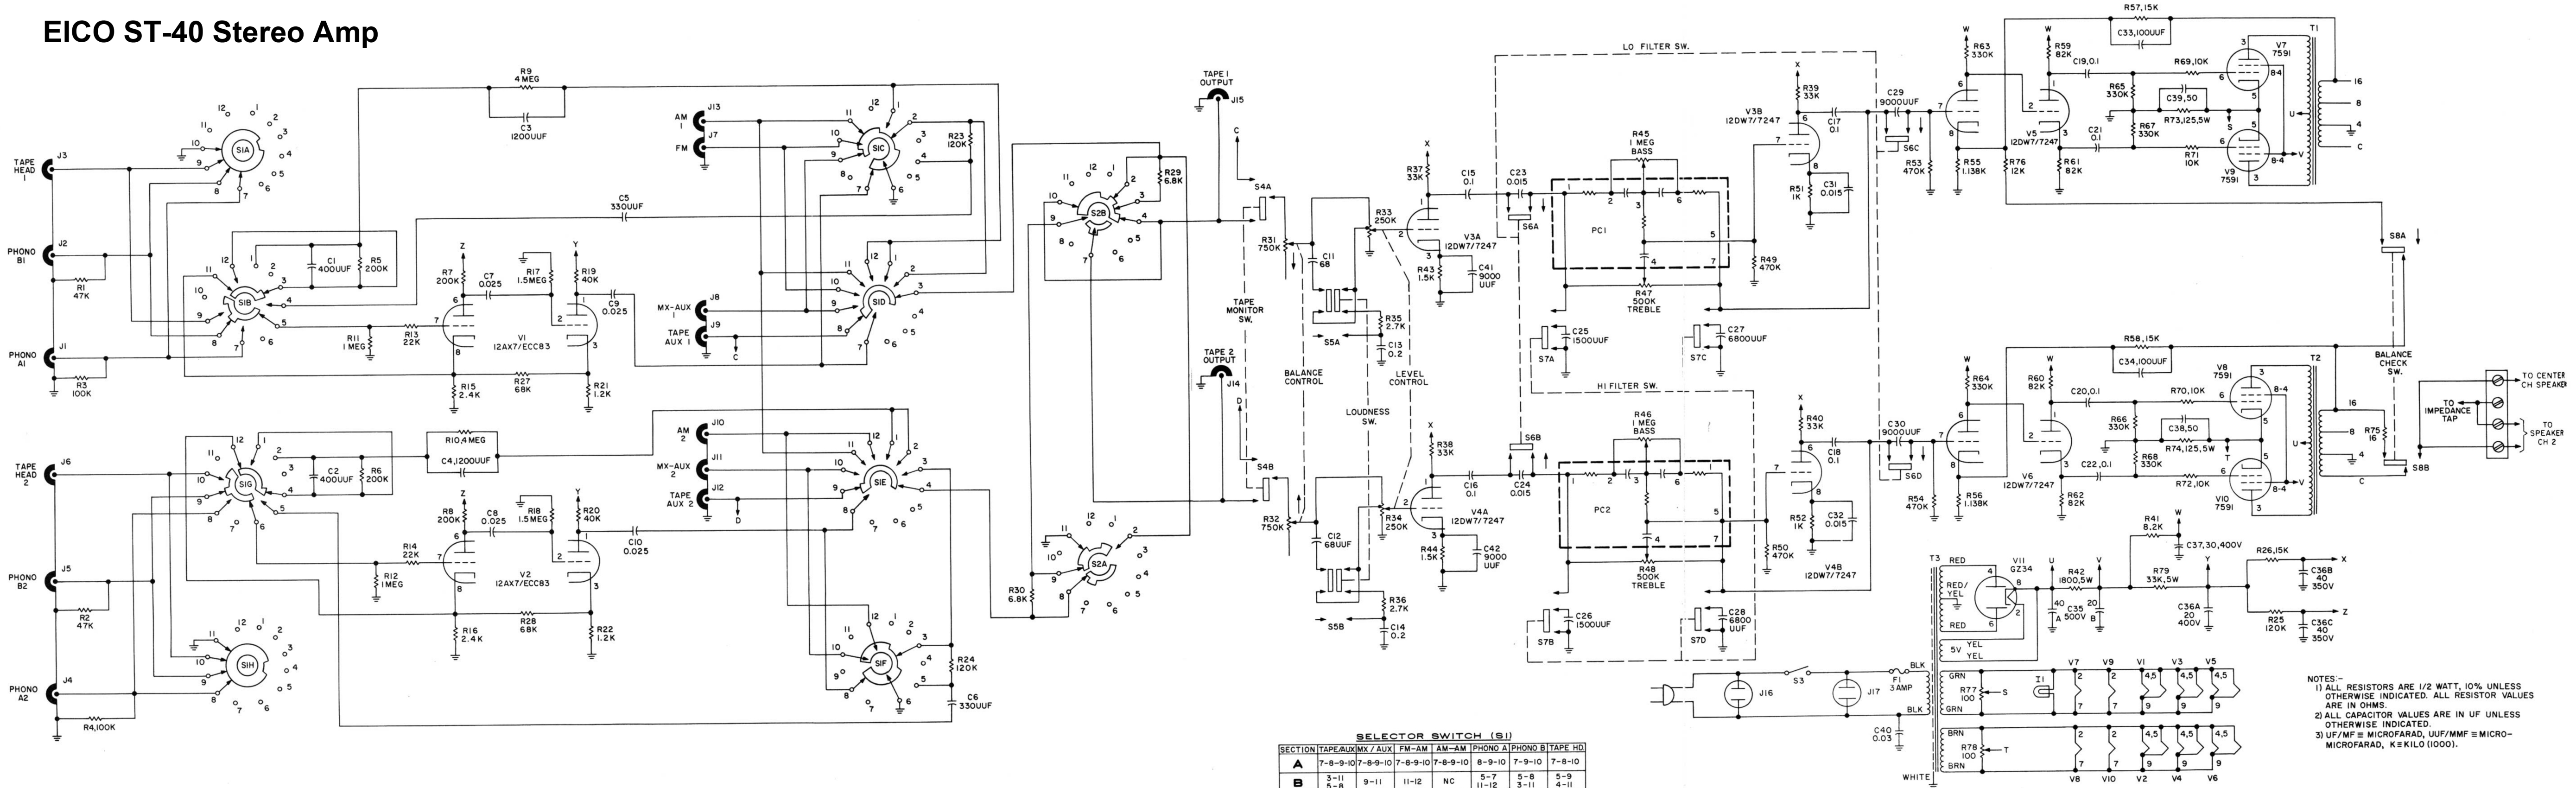

MODE SWITCH (S2)						
SECTION	✓ CH. 1	✓ CH. 2	STEREO	REVERSE	MONO 1	MONO 1-2
A	9-11	2-11 8-9	8-9	8-9	8-9-11	NC
B	2-3-4-10	7-9	7-9	9-10 7-2-3	2-3-4-7	3-4-7-9

SELECTOR SWITCH (S1)							
SECTION	TAPE/AUX	MX / AUX	FM-AM	AM-AM	PHONO A	PHONO B	TAPE HD
A	7-8-9-10	7-8-9-10	7-8-9-10	7-8-9-10	8-9-10	7-9-10	7-8-10
B	3-11 5-8	9-11	11-12	NC	5-7 11-12	5-8 3-11	5-9 4-11
C	2-6-7-9-10-11	1-2-6-7-10-11	1-2-6-7-9	1-2-6-7-9-10	2-6-9-10-11	2-6-9-10-11	1-6-9-10-11
D	3-8	3-9	3-10	3-11	3-7-12	1-3-7	2-3-7
E	4-9	4-10	4-11	4-12	1-4-8	2-4-8	3-4-8
F	3-6-8-10-12	3-6-8-12	3-6-8-10-12	3-6-8-10	3-6-10-12	3-6-10-12	6-10-12
G	4-12 6-9	10-12	1-12	NC	1-12 6-8	4-12 6-9	5-12 6-10
H	8-9-10-11	8-9-10-11	8-9-10-11	8-9-10-11	9-10-11	8-10-11	8-9-11

NOTES:-
1) ALL RESISTORS ARE 1/2 WATT, 10% UNLESS OTHERWISE INDICATED. ALL RESISTOR VALUES ARE IN OHMS.
2) ALL CAPACITOR VALUES ARE IN UF UNLESS OTHERWISE INDICATED.
3) UF/MF ≡ MICROFARAD, UUF/MMF ≡ MICRO-MICROFARAD, K ≡ KILO (1000).