PREPARED BY:	DATE:			No. YH-7S10-01
THE PRES ST.	DATE.			FILE No.
·		SHA	RP	ISSUE: <b>Feb. 27, 1998</b>
APPROVED BY:	DATE:	<b>—————————————————————————————————————</b>		PAGE 7 Pages
	,	APPLIANCE SYSTE		APPLICABLE DIVISION
		SHARP CORPOR	RATION	YAO PLANT
				APPLIANCE SYSTEMS GROUP
		SPECIFICA	ATION	
		0 0		
0.000				.=
SPECIF	FICATIONS F	OR COLOR O	CCD CAN	MERA MODULE
		. •		
	Model I			
		YH-7S10		
		YH-8S10		
□ CUSTOM!	ER'S APPROVAL			
5.475				·
DATE	1	<del></del>		
		F	PRESENTED	1 1 1
BY			ΙΥ	J. Aoh
			J . Aoki	
			/ice President	
			Department Gen	
		<b>.</b>	TOUSE EIECTFONI	cs Business Promotion Dept.

Appliance Systems Group

SHARP CORPORATION

# **RECORDS OF REVISION**

SPEC No.	DATE	REVISED No.	PAGE	SUMMARY	NOTE
YH-7510-01	Feb.27.1998	01			1st issue
				i 	
	,			 	
	L		<u> </u>	1	

- Handle this document carefully for it contains material protected by international copyright law. Any reproduction, full or in part, of this material is prohibited without the express written permission of the company.
- When using the products covered herein, please observe the conditions and the precautions written herein. In no event shall the company be liable for any damages resulting from failure to strictly adhere to these conditions and precautions.
- ◆ Those contemplating using the products which demands high reliability, should accept responsibility for incorporating into the design fail-safe operation, redundancy, and other appropriate measures for ensuring reliability and safety of the equipment and the overall system.
- Do not use the products covered herein for the following equipment which demands extremely high performance in terms of functionality, reliability, or accuracy.
  - · Aerospace equipment
  - · Communications equipment for trunk lines
  - · Control equipment for the nuclear power industry
  - · Medical equipment related to life support, etc.
- Please direct all queries regarding the products covered herein to a sales representative of the company.

1. Application

This document describes the specifications of Color CCD Camera to be supplied to

All figures described in this document are based on the conditions that the camera is used under \*normal operating temperature, normal operating humidity.

\*Normal operating temperature

; +20 ~ +25℃

\*Normal operating humidity

;65±5%RH

The monitor to be used shall be standard monitor.

Model No.	TV system	Output signal	Iris control	Lens
YH-7S10	NTSC	Composite	1/120 sec.(fixed)	O .
YH-8S10	PAL		1/100 sec.(fixed)	

## 2. General Description

This color CCD camera modules incorporates 1/4-inch CCD with following characteristics:

- 1) Hunting free
- 2) Focus; manual adjustable
- 3) Structure; Soft base with tilt adjustment
- 4) Output signal; Composite
- 5) TV system ;NTSC,PAL
- 6) White balance; Auto (TTL auto tracing white balance)
- 7) Built-in compact lens specially designed for the module.
- 8) 5V signal operation

3. Specification


3. Specification				
TV system	NTSC	PAL		
Image sensor	1/4*Inter-line transfer CCD			
Total pixels	542(H)x492(V)(Total;270K)	542(H)x582(V)(Total;320K)		
Effective pixels	512(H)x492(V)(Total;250K)	512(H)x582(V)(Total;300K)		
Resolution	Horizontal: 300 TV lines	Horizontal: 300 TV lines		
Distance from chart to camera: 70cm		-		
Focus	manual adjustable (30mm to infinity)			
S/N ratio	≧43dB			
	Condition: AGC off	•		
	High pass filter 10KHz			
	Fsc trap			
	Weighting filter on			
	· · · · · · · · · · · · · · · · · · ·	SC;4.2MHz,PAL;5.0KHz)		
	Light shield			
Minimum illumination	≦20 lx			
	Condition: ITE gray scale cha	•		
	Y signal amplitude			
White balance	TTL auto tracing white balance			
Iris control	1/120 sec.(fixed)	1/100 sec.(fixed)		
Gamma correction	approx.0.6			
Auto gain control	Au			
Sub-carrier frequency	3.579545MHz±200Hz	4.43361875MHz ± 200Hz		
Sync. system	Internal only			
Output video signal				
Composite type	1.0Vp-p/75Ω	1.0Vp-p/75Ω		
Y signal amplitude	714mV±100mV	700mV±100mV		
*(Condition 1)				
· Color signal*(Condition 2)		040105 + 0504		
R amplitude	88.25 IRE±25%	94.8 IRE±25%		
R phase	103.4° ± 15	103.4°±15		
B amplitude	62.2 IRE±25% 347.1 * ±15	67.2 IRE±25%		
B phase	286mV±80mV	347.1 * ± 15 300mV ± 80mV		
<ul><li>Sync.amplitude</li><li>Burst amplitude</li></ul>	286mV±90mV	300mV±90mV		
Lens	2001114 = 301114	1 2001114 ± 301114		
focal length	approx 3 8	mm(fived)		
F number	approx.3.8mm(fixed) approx.2.2			
viewing angle	Horizontal:approx.51	Vertical :approx.39 *		
TV distortion				
DC power supply	approx.0.5%			
	DC 4.5V - DC7.0V,≦1.8W			
Operating temperature	-10 to +40 ° C			
Storage temperature	-20 to +60 ° C			
Dimension	62(H) x40(V)	x25.5(D)mm		
*Condition 1: ITE grov cools of				

<sup>\*</sup>Condition 1:

ITE gray scale chart(Gamma=1.0)

\*Condition 2:

Exclusive color chart (YH-7S10-01-3) Line select ; 141 lines (NTSC),166lines(PAL) Y (white) amplitude ; 714mV (NTSC),700mV(PAL) Color temp ; 5,100° K

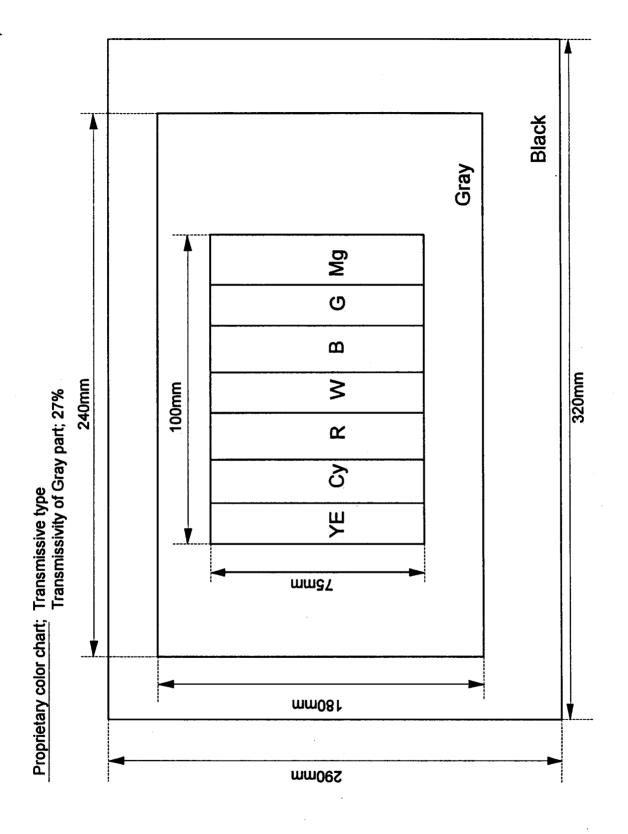

- 4.Connector ( CN101 )

  1) Power input , Signal Output
  2) Pin assignment

<del>, , , , , , , , , , , , , , , , , , , </del>	
No.	Name
1	Power input
2	GND
3	NC
4	Composite video signal
5	GND
6	GND
7	NC

3)Connector used in the module

Molex 53398-0790

# 5 Reliability Tests

Unless otherwise stated, the following reliability tests are conducted (sampling base) to confirm the reliability of the module in the testing room kept in normal temp. and humidity.

# 1) Low temp. storage test

To prove that the module shows no abnormal operation and function after it is stored at ambient temp. of -20°C for 24H and then left at room temp, for 2H min.

## 2) Low temp. operation test

To prove that the module normally operates for continuously 5H at the ambient temp. of -10℃.

## 3) High temp. storage test


To prove that the module shows no abnormal operation and function after it is stored at ambient temp. of 60℃ for 24H and then left at room temp, for 2H min.

# 4) High temp. operation test

To prove that the module normally operates for continuously 5H at the ambient temp. of 40℃.

# 5) Temp. cycle test

To prove that the module shows no abnormal operation and function during 5 cycles as stipulated in the following pattern and, then 2H storage at room temp.

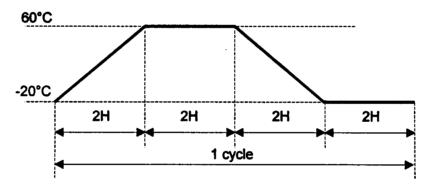

#### 6) High humidity test

To prove that the module shows no abnormal operation and function after the module has been operated for 24H at ambient temp. of 30°C and relative humidity of 90%RH, and take out from test chamber with water drop removed.

#### 7) Vibration test

To prove that the module shows no abnormal operation and function after vibration test under the condition of 10~55~10Hz/min. at acceleration speed 3.6G and up/down for 4H and left/right for 2H and back/forward for 2H.

# 8) Shock test

Three successive shocks shall be applied in both direction of 3 mutually perpendicular axes (a total of 18 shocks).

Peak acceleration: 50G, Duration of pulse: 10msec

6. Pixel Defect

Number of defective pixels not more than 10

Condition:

Temperature 25℃ Shield the light

AGC off

Standard monitor (NTSC/PAL)

\*10 pixels in both horizontal edges and 9 pixels in both vertical edges shall be disregarded as a void area.


- 7. Operating manual; Not included
- 8. Precautions & Notes
  - Do not shoot at direct sunlight.
     The display picture disappears in case of shooting at direct sunlight.
  - 2) Care shall be used not to damage the components during installation or removed of the extension cable.
  - 3) These products are made specifically for indoor use. (Office and ordinary home-use environment.)
  - 4) Since EMI and CE vary depending on various systems, these agency approvals need to be taken at customer side.
  - 5) Any agency approval for safety is not applicable to these components.
  - 6) An earth band or conductive mat shall be used to avoid the generation of static electricity that easily damages the CCD sensors.

Please note that Sharp cannot guarantee the performance and quality under any use other than the conditions stated above, such as circumstances where vibrations are constant as in a moving vehicle, where shocks may occur as in a moving vehicle or where shocks exceed ordinary house-hold or office use.

7) Don't touch lens.

Keep lens away from dirt and dust.

Please don't touch lens. Cause it's made from plastic, it's scratched easily. In case of dust sticking, please blow it off in blower and never touch lens. As lens is spoiled, use of the solvent such as alcohol is strict prohibition.

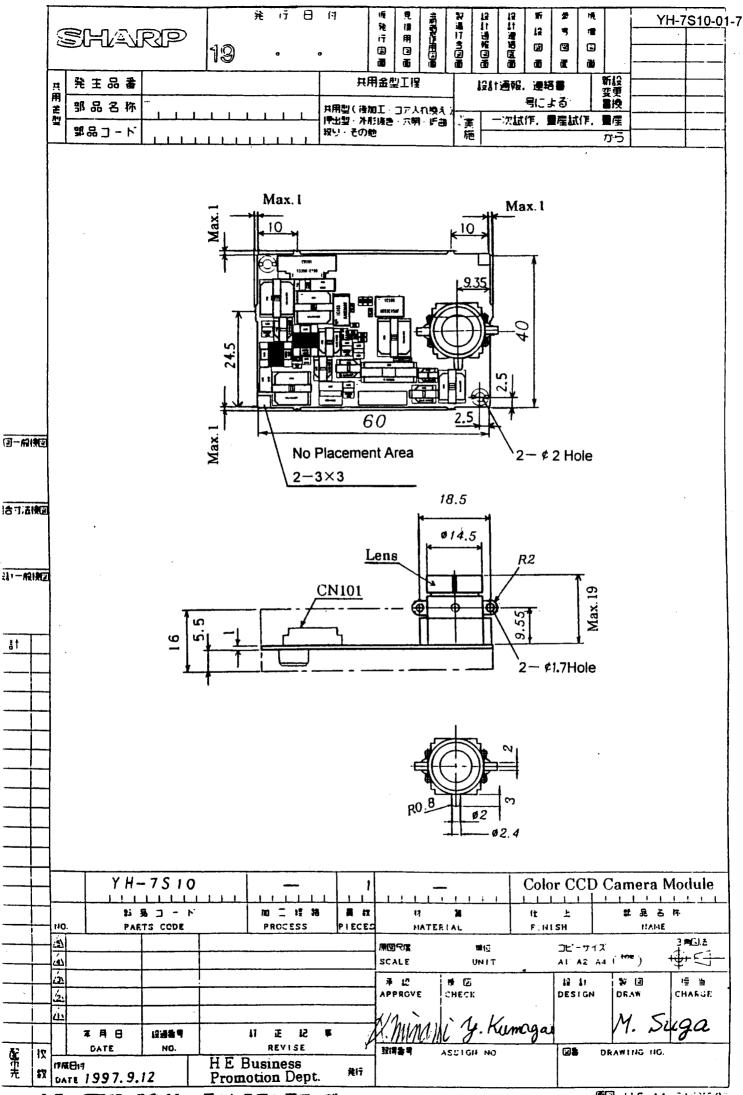

āt