

8-bit Proprietary Microcontroller

CMOS

F²MC-8L MB89930A Series**MB89935A/935B/P935A/PV930A****■ DESCRIPTION**

The MB89930A series is a line of single-chip microcontrollers. In addition to a compact instruction set, the microcontrollers contain a variety of peripheral functions such, timers, a serial interface, an A/D converter and an external interrupt.


■ FEATURES

- MB89600 Series CPU core
- Maximum memory space : 64 Kbytes
- Minimum execution time : 0.4 μ s/10 MHz
- Interrupt processing time : 3.6 μ s/10 MHz
- I/O ports : max. 21channels
- 21-bit timebase timer
- 8-bit PWM timer
- 8/16-bit capture timer/counter
- 10-bit A/D converter : 8 channels
- UART
- 8-bit serial I/O
- External interrupt 1 : 3 channels
- External interrupt 2 : 8 channels
- Wild Register : 2 bytes

(Continued)


■ PACKAGE

30-pin plastic SSOP

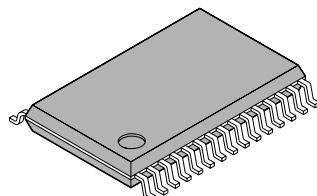

(FPT-30P-M02)

48-pin ceramic MQFP

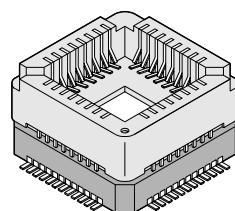

(MQP-48C-P01)

MB89930A Series

(Continued)

- Low-power consumption modes (sleep mode, and stop mode)
- SSOP-30 and MQFP-48 package
- CMOS Technology

■ PRODUCT LINEUP

Parameter \ Part number	MB89935A	MB89935B	MB89P935A	MB89PV930A
Classification	Mass production product (mask ROM product)	One-time PROM product (for small-scale production)	Piggyback/evaluation product (for development)	
ROM size	16 K × 8 bits (internal mask ROM)	16 K × 8 bits (internal PROM)	32 K × 8 bits (external EPROM)	
RAM size	512 × 8 bits			
CPU functions	Number of instructions : 136 Instruction bit length : 8 bits Instruction length : 1 to 3 bytes Data bit length : 1, 8, 16 bits Minimum execution time : 0.4 µs to 6.4 µs (10 MHz) Interrupt processing time : 3.6 µs to 57.6 µs (10 MHz)			
Ports	General-purpose I/O ports (CMOS) : 21 (also serve as peripherals) (4 ports are also an N-ch open-drain type.)			
21-bit time base timer	21-bit Interrupt cycle : 0.82 ms, 3.3 ms, 26.2 ms, or 419.4 ms with 10-MHz main clock			
Watching timer	Reset generation cycle : 419.4 ms minimum with 10-MHz main clock			
8-bit PWM timer	8-bit interval timer operation (square output capable, operating clock cycle : 0.4 µs , 3.2 µs, 6.4 µs, 25.6 µs) 8-bit resolution PWM operation (conversion cycle : 102.4 µs to 26.84 ms) Count clock selectable between 8-bit and 16-bit timer/counter outputs			
8/16-bit capture, timer/counter	8-bit capture timer/counter × 1 channel + 8-bit timer or 16-bit capture timer/counter × 1 channel Capable of event count operation and square wave output using external clock input with 8-bit timer 0 or 16-bit counter			
UART	Transfer data length : 6/7/8 bits			
8-bit Serial I/O	8 bits LSB first/MSB first selectable One clock selectable from four operation clocks (one external shift clock, three internal shift clocks : 0.8 µs, 6.4 µs, 25.6 µs)			
12-bit PPG timer	Output frequency : Pulse width and cycle selectable			
External interrupt 1 (wake-up function)	3 channels (Interrupt vector, request flag, request output enabled) Edge selectable (Rising edge, falling edge, or both edges) Also available for resetting stop/sleep mode (Edge detectable even in stop mode)			
External interrupt 2 (wake-up function)	1 channel with 8 inputs (Independent L-level interrupt and input enable) Also available for resetting stop/sleep mode (Level detectable even in stop mode)			

(Continued)

MB89930A Series

(Continued)

Parameter \ Part number	MB89935A	MB89935B	MB89P935A	MB89PV930A
10-bit A/D converter	10-bit precision × 8 channels A/D conversion function (Conversion time : 15.2 µs/10 MHz) Continuous activation by 8/16-bit timer/counter output or time-base timer counter			
Wild Register	8-bit × 2			
Standby mode	Sleep mode, and Stop mode			
*Power supply Voltage	2.2 V to 5.5 V	3.0 V to 5.5 V	2.7 V to 5.5 V	

* : The minimum operating voltage varies with the operating frequency, the function, and the connected ICE.

■ PACKAGE AND CORRESPONDING PRODUCTS

Package	MB89935A	MB89935B	MB89P935A	MB89PV930A
FPT-30P-M02	○	○	○	✗*
MQP-48C-P01	✗	✗	✗	○

○ : Available ✗ : Not available

* : Adapter for 48-pin to 30-pin conversion (manufactured by Sun Hayato Co., Ltd.)

Part number : 48QF-30SOP-8L

Inquiry : Sun Hayato Co., Ltd. : TEL (81) -3-3986-0403

■ DIFFERENCES AMONG PRODUCTS

1. Memory Size

Before evaluating using the piggyback product, verify its differences from the product that will actually be used.

2. Current Consumption

In the case of the MB89PV930A, add the current consumed by the EPROM which is connected to the top socket.

3. Mask Options

Functions that can be selected as options and how to designate these options vary by the product. Before using options check section “■ MASK OPTIONS”. Take particular care on the following points :

Options are fixed on the MB89PV930A and MB89P935A.


4. Difference between MB89935A and MB89935B

MB89935B is different from MB89935A in that the internal circuit and oscillator have been changed and the radiated noise and current consumption while oscillation is active is reduced. For details of the characteristics of current consumption, see “■ EXAMPLE CHARACTERISTICS”.

MB89930A Series

■ PIN ASSIGNMENT

(TOP VIEW)

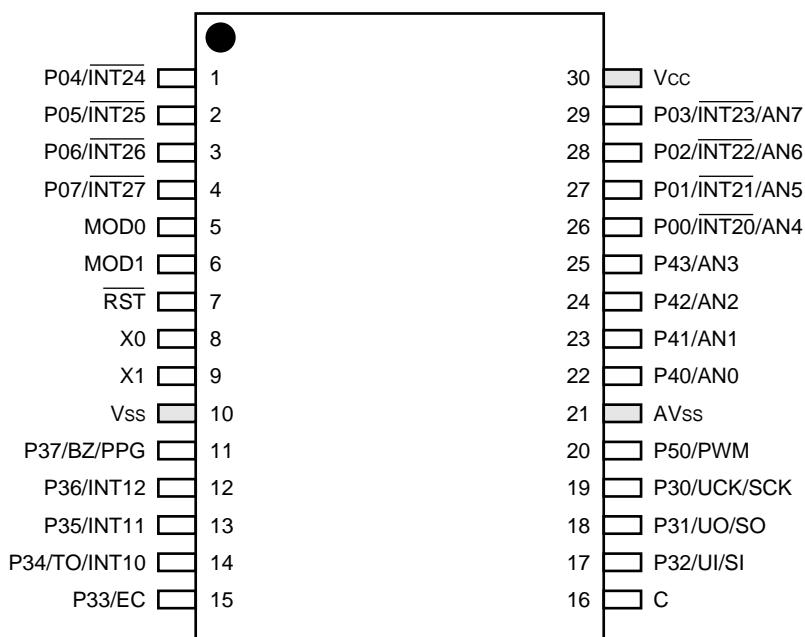


(FPT-30P-M02)

(Continued)

MB89930A Series

(Continued)

(TOP VIEW)

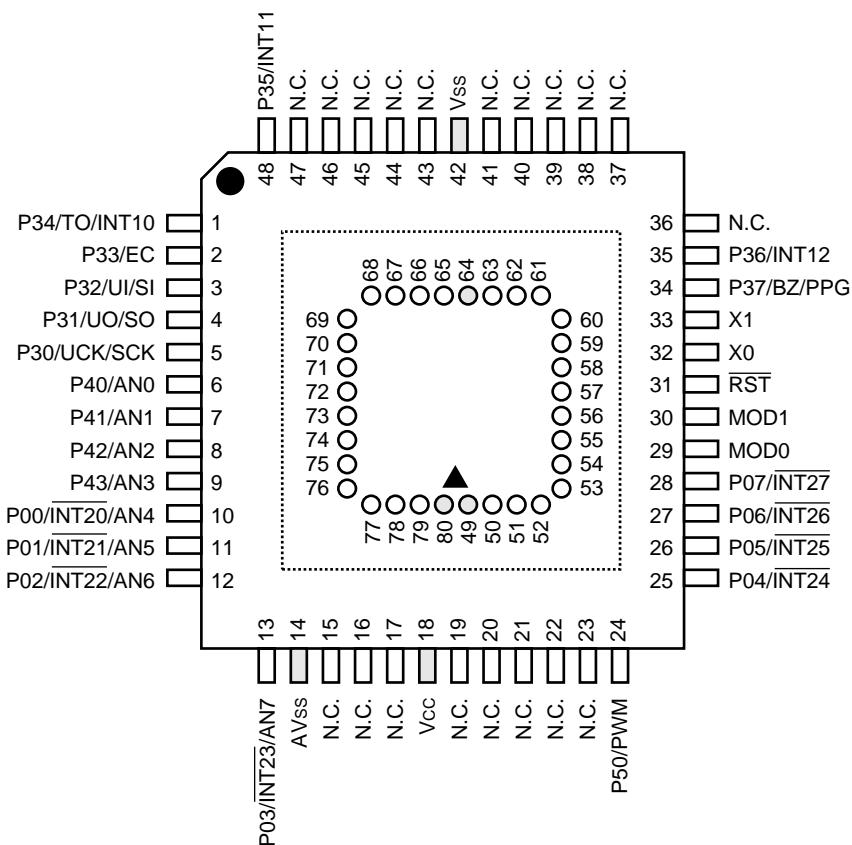

(MQP-48C-P01)

Pin no.	Pin name	Pin no.	Pin name	Pin no.	Pin name	Pin no.	Pin name
49	V _{PP}	57	N.C.	65	O4	73	OE
50	A12	58	A2	66	O5	74	N.C.
51	A7	59	A1	67	O6	75	A11
52	A6	60	A0	68	O7	76	A9
53	A5	61	O1	69	O8	77	A8
54	A4	62	O2	70	CE	78	A13
55	A3	63	O3	71	A10	79	A14
56	N.C.	64	V _{SS}	72	N.C.	80	V _{CC}

N.C. : Internally connected. Do not use.

MB89930A Series

■ PIN DESCRIPTION

Pin No.		Pin name	Circuit type	Function
SSOP ^{*1}	MQFP ^{*2}			
8	32	X0	A	Pins for connecting the crystal resonator for the main clock. To use an eternal clock, input the signal to X0 and leave X1 open.
9	33	X1		
5	29	MOD0	B	Memory access mode setting input pins. Connect the pin directly to Vss.
6	30	MOD1		
7	31	$\overline{\text{RST}}$	C	Reset I/O pin. This pin serves as an N-channel open-drain output with pull-up resistor and a hysteresis input as well. The pin outputs the "L" signal (optionally) in response to an internal reset request. Also, it initializes the internal circuit upon input of the "L" signal.
26 to 29	10 to 13	P00/INT20/AN4 to P03/INT23/AN7	G	General-purpose CMOS I/O ports. These pins also serve as an input (wake-up input) of external interrupt 2 or as an A/D converter analog input. The input of external interrupt 2 is a hysteresis input.
1 to 4	25 to 28	P04/INT24 to P07/INT27	D	General-purpose CMOS I/O ports. These pins also serve as an input (wake-up input) of external interrupt 2. The input of external interrupt 2 is a hysteresis input.
19	5	P30/UCK/SCK	D	General-purpose CMOS I/O ports. This pin also serves as the clock I/O pin for the UART or 8-bit serial I/O. The resource is a hysteresis input.
18	4	P31/UO/SO	E	General-purpose CMOS I/O ports. This pin also serves as the data output pin for the UART or 8-bit serial I/O.
17	3	P32/UI/SI	D	General-purpose CMOS I/O ports. This pin also serves as the data input pin for the UART or 8-bit serial I/O. The resource is a hysteresis input.
15	2	P33/EC	D	General-purpose CMOS I/O ports. This pin also serves as the external clock input pin for the 8/16-bit capture timer/counter. The resource is a hysteresis input.
14	1	P34/TO/INT10	D	General-purpose CMOS I/O ports. This pin also serves as the output pin for the 8/16-bit capture timer/counter or as the input pin for external interrupt 1. The resource is a hysteresis input.
13, 12	48, 35	P35/INT11, P36/INT12	D	General-purpose CMOS I/O ports. These pins also serve as the input pin for external interrupt 1. The resource is a hysteresis input.

(Continued)

*1 : FPT-30P-M02

*2 : MQP-48C-P01

MB89930A Series

(Continued)

Pin No.		Pin name	Circuit type	Function
SSOP ^{*1}	MQFP ^{*2}			
11	34	P37/BZ/PPG	E	General-purpose CMOS I/O ports. This pin also serves as the buzzer output pin or the 12-bit programmable pulse generator output.
20	24	P50/PWM	E	General-purpose CMOS I/O ports. This pin also serves as the 8-bit PWM output pin. The pin is a hysteresis input.
22 to 25	6 to 9	P40/AN0 to P43/AN3	F	General-purpose CMOS I/O ports. These pins can also be used as N-channel open-drain ports. The pins also serve as A/D converter analog input pins.
30	18	V _{cc}	—	Power supply pin
10	42	V _{ss}	—	Power (GND) pin
21	14	A _{Vss}	—	Power supply pin for the A-D converter. Apply equal potential to this pin and the V _{ss} pin.
16	—	C	—	Capacitance pin for regulating the power supply. Connect an external ceramic capacitor of about 0.1 μF.
—	15,16,17 19,20,21 22,23,36 37,38,39 40,41,43 44,45,46 47	N.C.	—	Internally connected pins Be sure to leave them open.

*1 : FPT-30P-M02

*2 : MQP-48C-P01




MB89930A Series

■ EXTERNAL EPROM PIN DESCRIPTION (MB89PV930A only)

Pin No.	Pin name	I/O	Function
49	V _{PP}	O	"H" level output pin
50	A12		
51	A7		
52	A6		
53	A5		
54	A4	O	Address output pins
55	A3		
58	A2		
59	A1		
60	A0		
61	O1		
62	O2	I	Data input pins
63	O3		
64	V _{ss}	O	Power supply (GND) pin
65	O4		
66	O5		
67	O6	I	Data input pins
68	O7		
69	O8		
70	CE	O	ROM chip enable pin Outputs "H" during standby.
71	A10	O	Address output pin
73	OE	O	ROM output enable pin Outputs "L" at all times.
75	A11		
76	A9		
77	A8		
78	A13	O	Address output pins
79	A14		
80	V _{cc}	O	EPROM power supply pin
56	N.C.	—	Internally connected pins Be sure to leave them open.
57			
72			
74			

MB89930A Series




■ I/O CIRCUIT TYPE

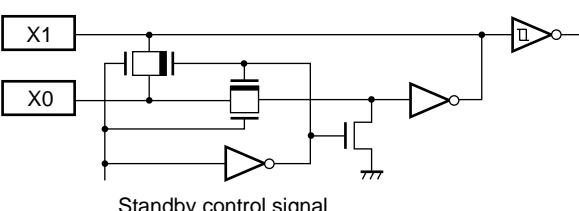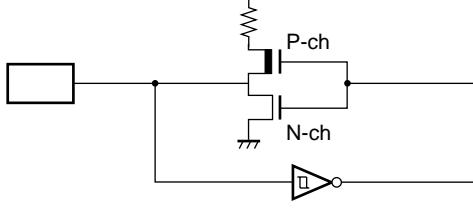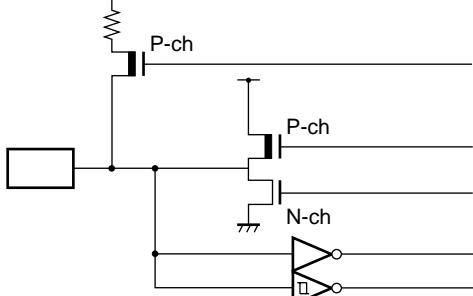Type	Circuit	Remarks
A	 <p>Standby control signal</p>	<ul style="list-style-type: none"> • Crystal oscillation type
B		<ul style="list-style-type: none"> • Hysteresis input
C		<ul style="list-style-type: none"> • At an output pull-up resistor (P-ch) of approximately 50 kΩ/5.0 V • Hysteresis input
D		<ul style="list-style-type: none"> • CMOS output • CMOS input • Hysteresis input (Resource input) • Pull-up resistor optional

(Continued)

MB89930A Series

(Continued)

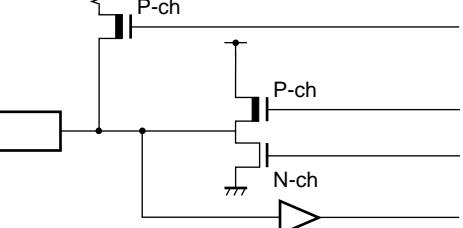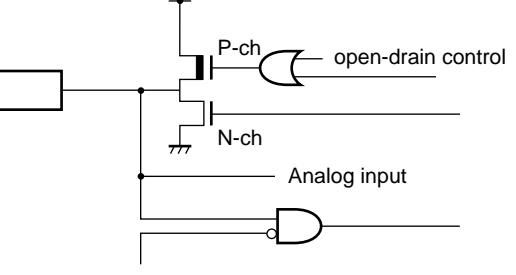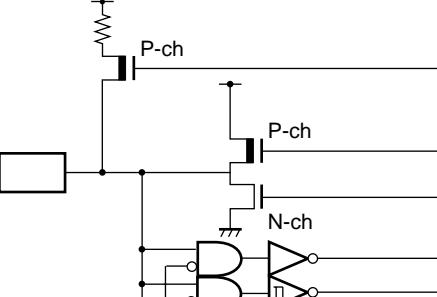Type	Circuit	Remarks
E		<ul style="list-style-type: none"> • CMOS output • CMOS input • Pull-up resistor optional
F	 <p>A/D enable</p>	<ul style="list-style-type: none"> • CMOS output • CMOS input • Analog input • N-ch open-drain output available
G	 <p>A/D enable</p>	<ul style="list-style-type: none"> • CMOS output • CMOS input • Hysteresis input (Resource input) • Analog input

MB89930A Series

■ HANDLING DEVICES

1. Preventing Latchup

Latchup may occur on CMOS ICs if voltage higher than V_{CC} or lower than V_{SS} is applied to input and output pins other than medium- and high-voltage pins or if higher than the voltage which shows on "1. Absolute Maximum Ratings" in section "■ ELECTRICAL CHARACTERISTICS" is applied between V_{CC} and V_{SS}.

When latchup occurs, power supply current increases rapidly and might thermally damage elements. When using, take great care not to exceed the absolute maximum ratings.

Also, take care to prevent the analog input from exceeding the digital power supply (V_{CC}) when the analog system power supply is turned on and off.

2. Treatment of Unused Input Pins

Leaving unused input terminals open may lead to permanent damage due to malfunction and latchup; pull up or pull down the terminals through the resistors of 2 kΩ or more.

Make the unused I/O terminal in a state of output and leave it open and if it is in an input state, handle it with the same procedure as the input terminals.

3. Treatment of N.C. Pins

Be sure to leave (internally connected) N.C. pins open.

4. Power Supply Voltage Fluctuations

Although V_{CC} power supply voltage is assured to operate within the rated range, a rapid fluctuation of the voltage could cause malfunctions, even if it occurs within the rated range. Stabilizing voltage supplied to the IC is therefore important. As stabilization guidelines, it is recommended to control power so that V_{CC} ripple fluctuations (P-P value) will be less than 10% of the standard V_{CC} value at the commercial frequency (50 to 60 Hz) and the transient fluctuation rate will be less than 0.1 V/ms at the time of a momentary fluctuation such as when power is switched.

5. Treatment of Power Supply Pins on Microcontrollers with A/D Converters

Connect to be AV_{SS} = V_{SS} even if the A/D converters are not in use.

6. Precautions when Using an External Clock

When an external clock is used, oscillation stabilization time is required even for power-on reset (optional) and wake-up from stop mode.

7. About the Wild Register Function

No wild register can be debugged on the MB89PV930A. For the operation check, test the MB89P935A installed on a target system.

8. Program Execution in RAM

When the MB89PV930A is used, no program can be executed in RAM.

MB89930A Series

■ PROGRAMMING TO THE EPROM WITH PIGGYBACK/EVALUATION DEVICE

1. EPROM for Use

MBM27C256A-20TVM


2. Programming Socket Adapter

To program to the PROM using an EPROM programmer, use the socket adapter (manufacturer : Sun Hayato Co., Ltd.) listed below.

Package	Compatible socket part number
LCC-32	ROM-32LC-28DP-S

Inquiry : Sun Hayato Co., Ltd. : TEL (81) -3-3986-0403
FAX (81) -3-5396-9106

3. Memory Space.

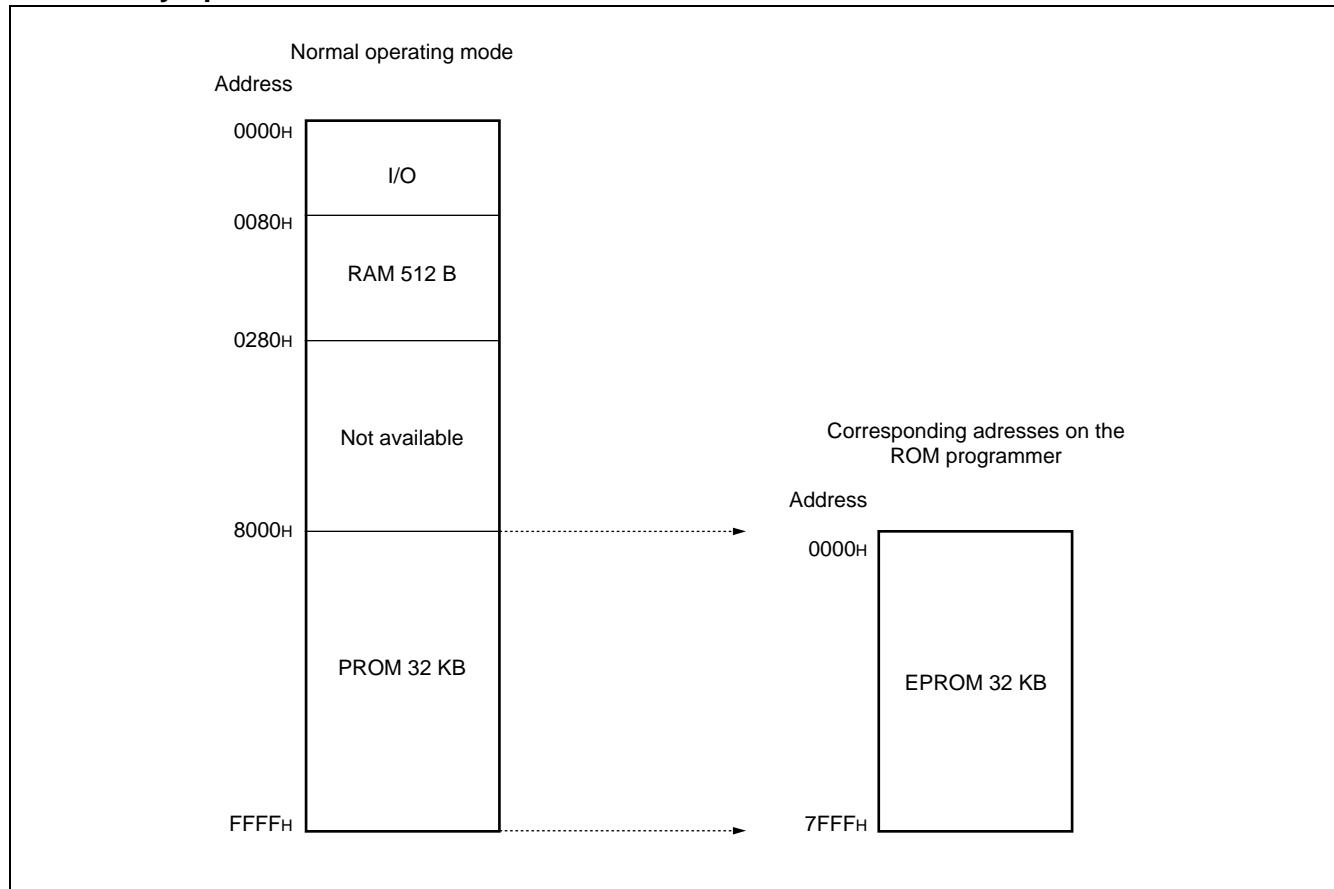


4. Programming to the EPROM

- (1) Set the EPROM programmer to the MBM27C256A.
- (2) Load program data into the EPROM programmer at 0000_H to 7FFF_H.
- (3) Program to 0000_H to 7FFF_H with the EPROM programmer.

MB89930A Series

■ PROGRAMMING TO THE OTPROM WITH MB89P935A

1. Memory Space

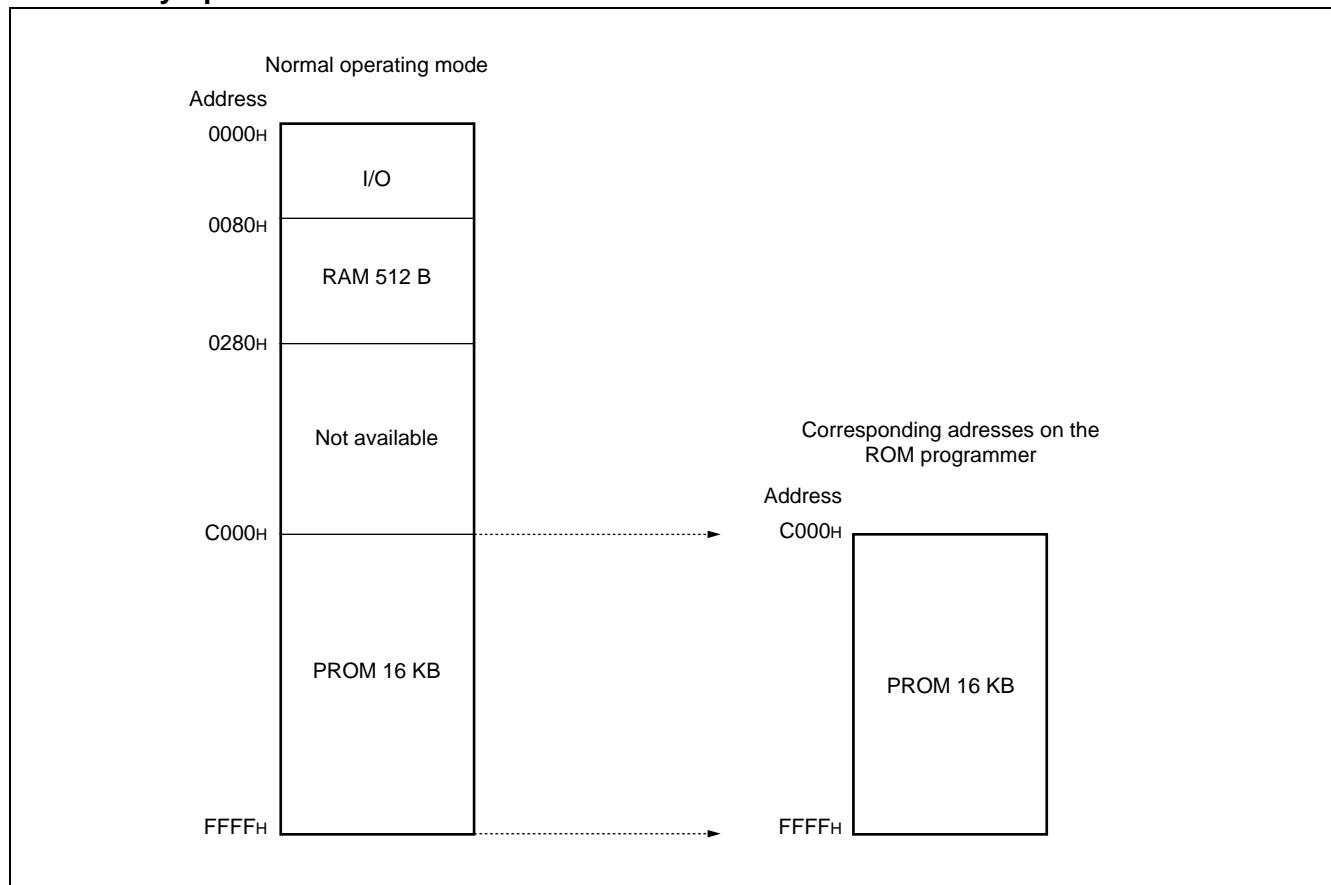

2. Programming to the OTPROM

To program to the OTPROM using an EPROM programmer AF200 (manufacturer : Yokogawa Digital Computer Corp.) .

Inquiry : Yokogawa Digital Computer Corp. : TEL (81) -42-333-6224

Note : Programming to the OTPROM with MB89P935A is serial programming mode only.

3. Programming Adaptor for OTPROM

To program to the OTPROM using an EPROM programmer AF200, use the programming adapter (manufacturer : Sun Hayato Co., Ltd.) listed below.


Adaptor socket : ROM3-FPT30M02-8L

Inquiry : Sun Hayato Co., Ltd. : TEL (81) -3-3986-0403

FAX (81) -3-5396-9106

MB89930A Series

■ BLOCK DIAGRAM

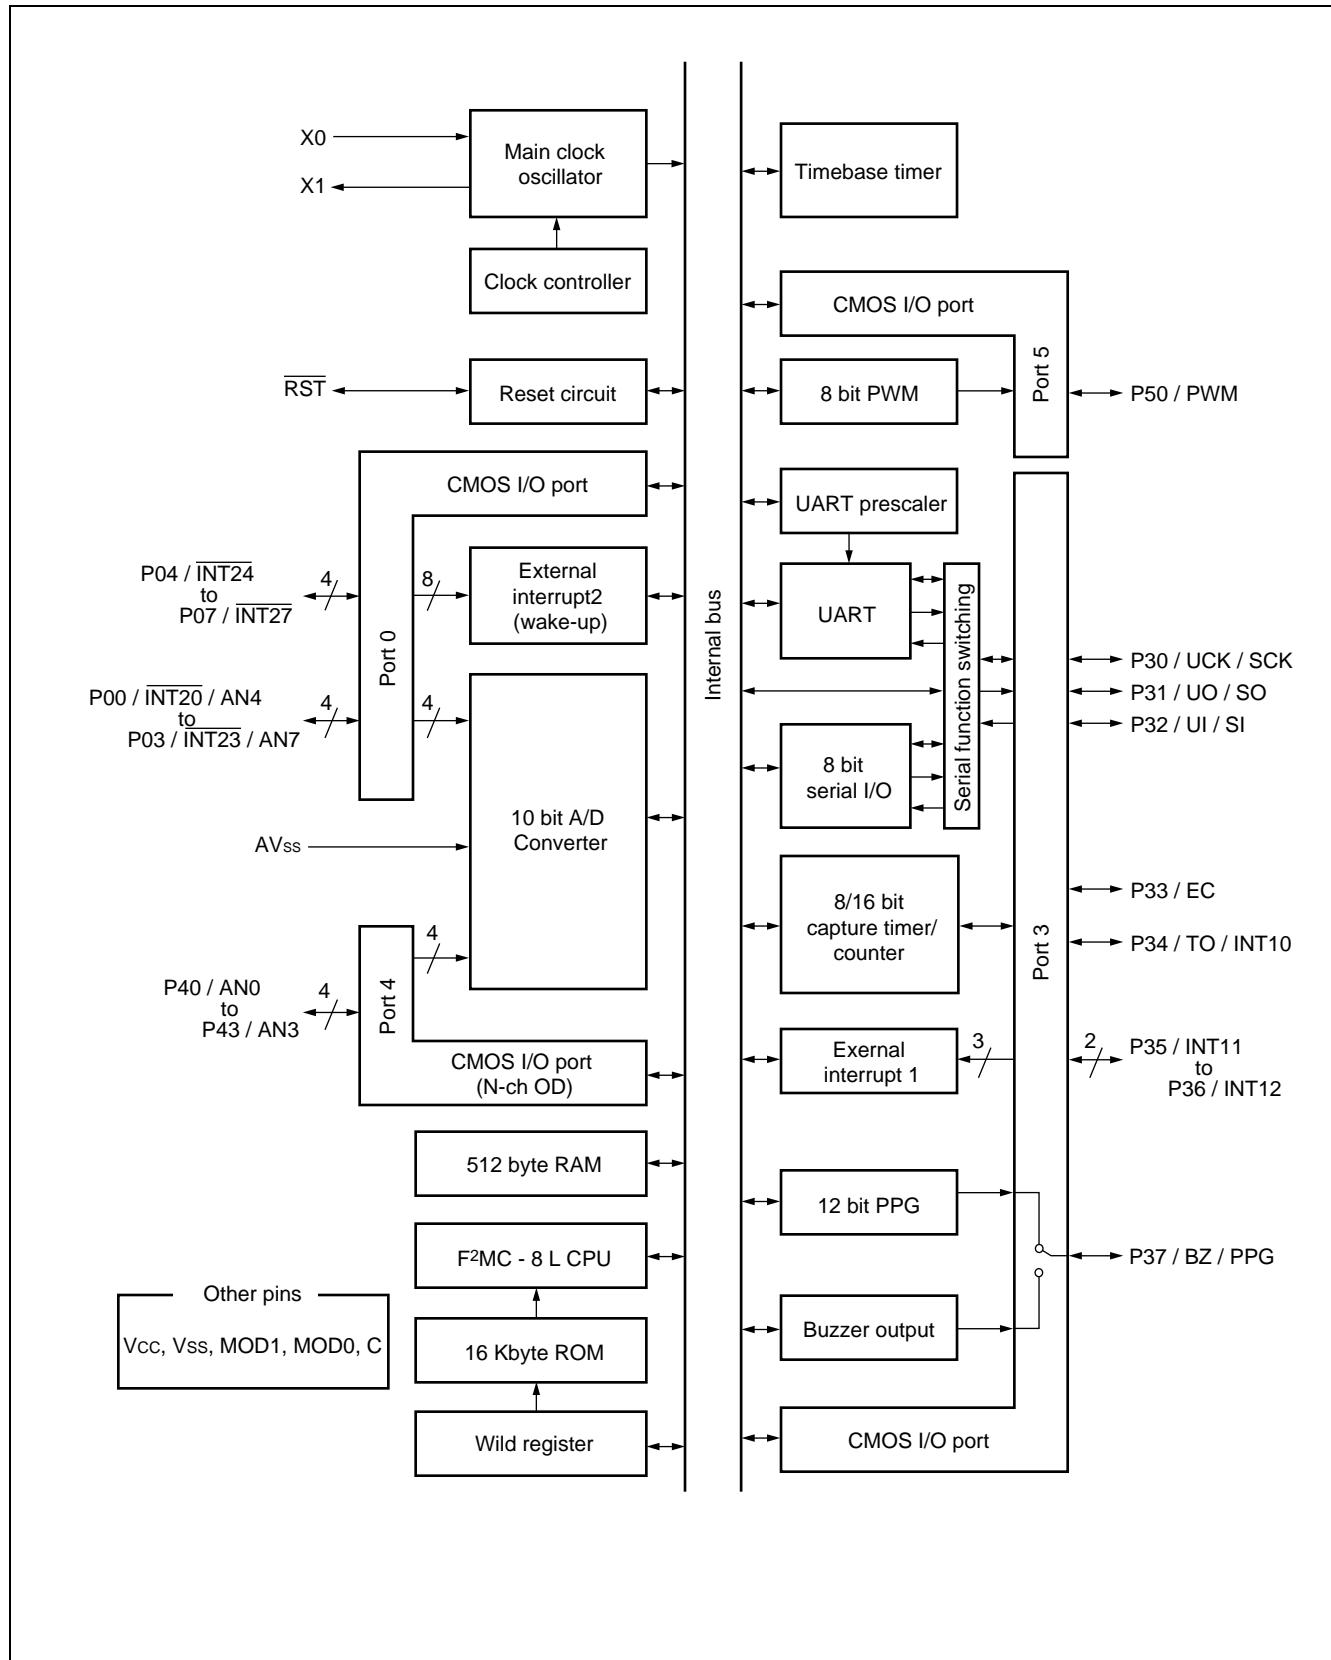


MB89930A Series

■ CPU CORE

1. Memory Space

The microcontrollers of the MB89930A series offer a memory space of 64 Kbytes for storing all of I/O, data, and program areas. The I/O area is located at the lowest address. The data area is provided immediately above the I/O area. The data area can be divided into register, stack, and direct areas according to the application. The program area is located at exactly the opposite end, that is, near the highest address. Provide the tables of interrupt reset vectors and vector call instructions toward the highest address within the program area. The memory space of the MB89930A series is structured as illustrated below.

- Memory Space

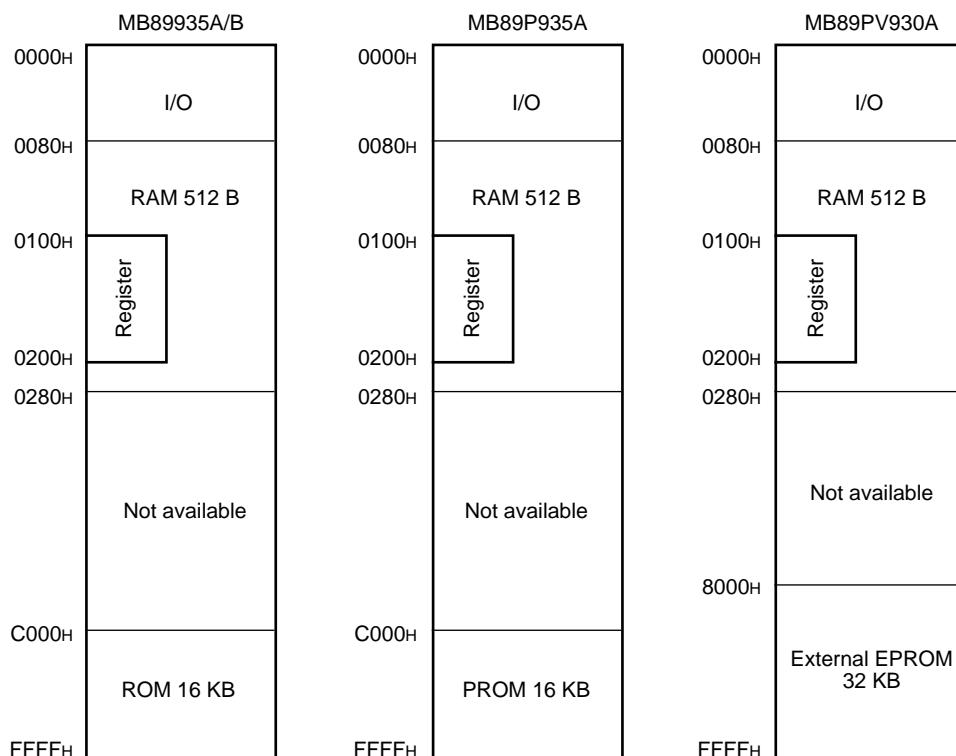

MB89930A Series

2. Registers

The MB89930A series has two types of registers; dedicated registers in the CPU and general-purpose registers in the memory. The following dedicated registers are provided :

Program counter (PC) : A 16-bit register for indicating instruction storage positions

Accumulator (A) : A 16-bit temporary register for storing arithmetic operations, etc. When the instruction is an 8-bit data processing instruction, the lower byte is used.







Temporary accumulator (T) : A 16-bit register which performs arithmetic operations with the accumulator
When the instruction is an 8-bit data processing instruction, the lower byte is used.

Index register (IX) : A 16-bit register for index modification

Extra pointer (EP) : A 16-bit pointer for indicating a memory address


Stack pointer (SP) : A 16-bit register for indicating a stack area

Program status (PS) : A 16-bit register for storing a register pointer, a condition code

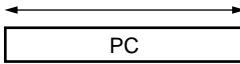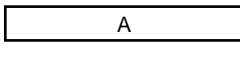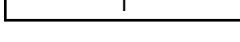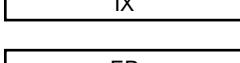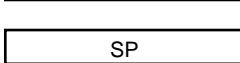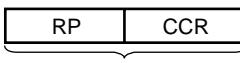		Initial value
16 bit		
	: Program counter	FFFD _H
	: Accumulator	Indeterminate
	: Temporary accumulator	Indeterminate
	: Index register	Indeterminate
	: Extra pointer	Indeterminate
	: Stack pointer	Indeterminate
	: Program status	I-flag = 0, IL1, 0 = 11 The other bit values are indeterminate.

The PS can further be divided into higher 8 bits for use as a register bank pointer (RP) and the lower 8 bits for use as a condition code register (CCR) . (See the diagram below.)


• Structure of the Program Status Register

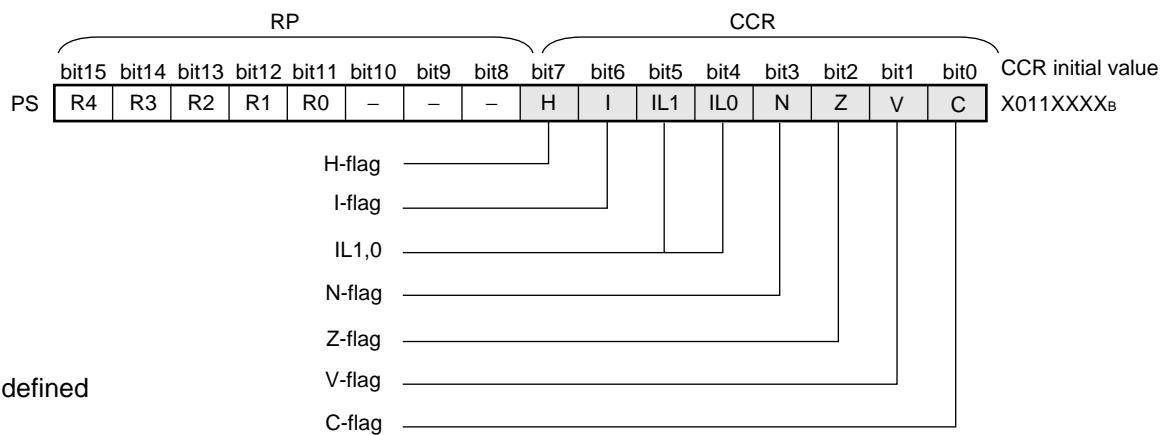

MB89930A Series

The RP indicates the address of the register bank currently in use. The relationship between the pointer contents and the actual address is based on the conversion rule illustrated below.

- Rule for Conversion of Actual Addresses of the General-purpose Register Area

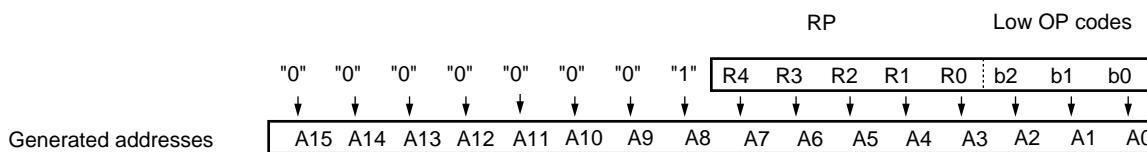

The CCR consists of bits indicating the results of arithmetic operations and the contents of transfer data and bits for control of CPU operations at the time of an interrupt.

- H-flag : Set to "1" when a carry or a borrow from bit 3 to bit 4 occurs as a result of an arithmetic operation. Cleared to "0" otherwise. This flag is for decimal adjustment instructions.
- I-flag : Interrupt is enabled when this flag is set to "1". Interrupt is disabled when the flag is cleared to "0". Cleared to "0" at the reset.
- IL1, 0 : Indicates the level of the interrupt currently allowed. Processes an interrupt only if its request level is higher than the value indicated by this bit.

IL1	IL0	Interrupt level	High-low
0	0	1	High
0	1		
1	0	2	
1	1	3	Low = no interrupt

- N-flag : Set to "1" if the MSB becomes to "1" as the result of an arithmetic operation. Cleared to "0" when the bit is cleared to "0".
- Z-flag : Set to "1" when an arithmetic operation results in 0. Cleared otherwise.
- V-flag : Set to "1" if the complement on 2 overflows as a result of an arithmetic operation. Cleared to "0" if the overflow does not occur.
- C-flag : Set to "1" when a carry or a borrow from bit 7 occurs as a result of an arithmetic operation. Cleared to "0" otherwise. Set to the shift-out value in the case of a shift instruction.


MB89930A Series

The following general-purpose registers are provided :

General-purpose registers : An 8-bit register for storing data

The general-purpose registers are 8 bits and located in the register banks of the memory. One bank contains eight registers and up to a total of 16 banks can be used on the MB89930A series. The bank currently in use is indicated by the register bank pointer (RP) ..

- **Register Bank Configuration**

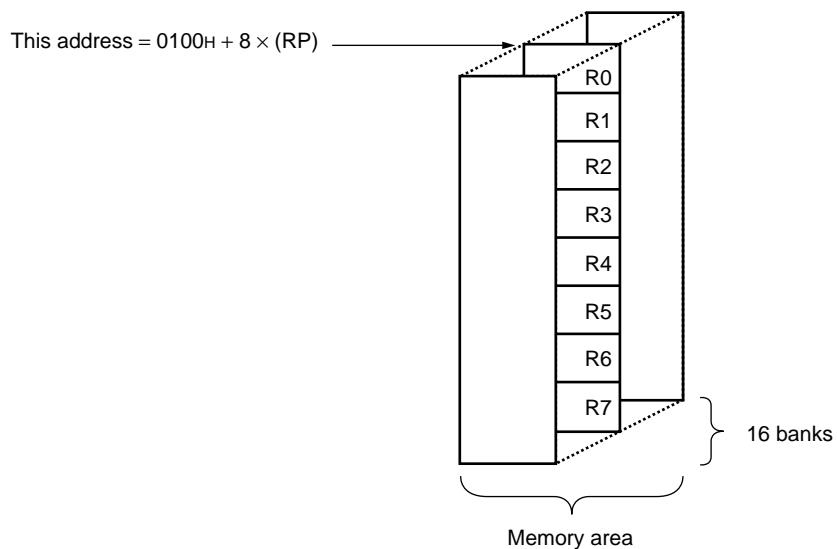

MB89930A Series

■ I/O MAP

Address	Register name	Register description	Read/write	Initial value
0000 _H	PDR0	Port 0 data register	R/W	X X X X X X X X X
0001 _H	DDR0	Port 0 data direction register	W	0 0 0 0 0 0 0 0
0002 _H to 00006 _H	Vacancy			
0007 _H	SYCC	System clock control register	R/W	1 - - MM1 0 0
0008 _H	STBC	Standby control register	R/W	0 0 0 1 0 - - -
0009 _H	WDTC	Watchdog timer control register	W	0 - - - X X X X
000A _H	TBTC	Timebase timer control register	R/W	0 0 - - - 0 0 0
000B _H	Vacancy			
000C _H	PDR3	Port 3 data register	R/W	X X X X X X X X
000D _H	DDR3	Port 3 data direction register	W	0 0 0 0 0 0 0 0
000E _H	RSFR	Reset flag register	R	X X X X - - - -
000F _H	PDR4	Port 4 data register	R/W	- - - - X X X X
0010 _H	DDR4	Port 4 data direction register	R/W	- - - - 0 0 0 0
0011 _H	OUT4	Port 4 output format register	R/W	- - - - 0 0 0 0
0012 _H	PDR5	Port 5 data register	R/W	- - - - - - - X
0013 _H	DDR5	Port 5 data direction register	R/W	- - - - - - - 0
0014 _H	RCR21	12-bit PPG control register 1	R/W	0 0 0 0 0 0 0 0
0015 _H	RCR22	12-bit PPG control register 2	R/W	- - 0 0 0 0 0 0
0016 _H	RCR23	12-bit PPG control register 3	R/W	0 - 0 0 0 0 0 0
0017 _H	RCR24	12-bit PPG control register 4	R/W	- - 0 0 0 0 0 0
0018 _H	BZCR	Buzzer register	R/W	- - - - - 0 0 0
0019 _H	TCCR	Capture control register	R/W	0 0 0 0 0 0 0 0
001A _H	TCR1	Timer 1 control register	R/W	0 0 0 0 0 0 0 0
001B _H	TCR0	Timer 0 control register	R/W	0 0 0 - 0 0 0 0
001C _H	TDR1	Timer 1 data register	R/W	X X X X X X X X
001D _H	TDR0	Timer 0 data register	R/W	X X X X X X X X
001E _H	TCPH	Capture data register H	R	X X X X X X X X
001F _H	TCPL	Capture data register L	R	X X X X X X X X
0020 _H	TCR2	Timer output control register	R/W	- - - - - 0 0
0021 _H	Vacancy			
0022 _H	CNTR	PWM control register	R/W	0 - 0 0 0 0 0 0
0023 _H	COMR	PWM compare register	W	X X X X X X X X
00024 _H	EIC1	External interrupt 1 Control register 1	R/W	0 0 0 0 0 0 0 0

(Continued)

MB89930A Series

Address	Register name	Register description	Read/write	Initial value
0025 _H	EIC2	External interrupt 1 Control register 2	R/W	- - - - 0 0 0 0
0026 _H		Vacancy		
0027 _H				
0028 _H	SMC	Serial mode control register	R/W	0 0 0 0 0 - 0 0
0029 _H	SRC	Serial rate control register	R/W	- - 0 1 1 0 0 0
002A _H	SSD	Serial status and data register	R/W	0 0 1 0 0 - 1 X
002B _H	SIDR	Serial input data register	R	X X X X X X X X X
	SODR	Serial output data register	W	X X X X X X X X X
002C _H	UPC	Clock division selection register	R/W	- - - - 0 0 1 0
002D _H to 0002F _H		Vacancy		
0030 _H	ADC1	A/D converter control register 1	R/W	- 0 0 0 0 0 0 0
0031 _H	ADC2	A/D converter control register 2	R/W	- 0 0 0 0 0 0 1
0032 _H	ADDH	A/D converter data register H	R/W	- - - - - X X
0033 _H	ADDL	A/D converter data register L	R/W	X X X X X X X X X
0034 _H	ADEN	A/D enable register	R/W	0 0 0 0 0 0 0 0
0035 _H		Vacancy		
0036 _H	EIE2	External interrupt 2 control register1	R/W	0 0 0 0 0 0 0 0
0037 _H	EIF2	External interrupt 2 control register2	R/W	- - - - - - - 0
0038 _H		Vacancy		
0039 _H	SMR	Serial mode register	R/W	0 0 0 0 0 0 0 0
003A _H	SDR	Serial data register	R/W	X X X X X X X X X
003B _H	SSEL	Serial function switching register	R/W	- - - - - - - 0
003C _H to 003F _H		Vacancy		
0040 _H	WRARH0	Upper-address setting register	R/W	X X X X X X X X X
0041 _H	WRARL0	Lower-address setting register	R/W	X X X X X X X X X
0042 _H	WRDR0	Data setting register 0	R/W	X X X X X X X X X
0043 _H	WRARH1	Upper-address setting register	R/W	X X X X X X X X X
0044 _H	WRARL1	Lower-address setting register	R/W	X X X X X X X X X
0045 _H	WRDR1	Data setting register 1	R/W	X X X X X X X X X
0046 _H	WREN	Address comparison EN register	R/W	X X X X X X X 0 0
0047 _H	WROR	Wild-register data test register	R/W	- - - - - - - 0 0
0048 _H to 006F _H		Vacancy		
0070 _H	PUL0	Port-0 pull-up setting register	R/W	0 0 0 0 0 0 0 0

(Continued)

MB89930A Series

(Continued)

Address	Register name	Register description	Read/write	Initial value
0071H	PUL3	Port-3 pull-up setting register	R/W	0 0 0 0 0 0 0 0
0072H	PUL5	Port-5 pull-up setting register	R/W	- - - - - 0
0073H to 007AH	Vacancy			
007BH	ILR1	Interrupt level setting register1	W	1 1 1 1 1 1 1 1
007CH	ILR2	Interrupt level setting register2	W	1 1 1 1 1 1 1 1
007DH	ILR3	Interrupt level setting register3	W	1 1 1 1 1 1 1 1
007EH	ILR4	Interrupt level setting register4	W	1 1 1 1 1 1 1 1
007FH	ITR	Interrupt test register	Not available	- - - - 0 0

- : Unused, X : Undefined, M : Set using the mask option

Note : Do not use vacancies.

MB89930A Series

■ ELECTRICAL CHARACTERISTICS

1. Absolute Maximum Ratings


Parameter	Symbol	Value		Unit	Remarks
		Min.	Max.		
Power supply voltage	V _{CC}	V _{SS} - 0.3	V _{SS} + 6.0	V	
Input voltage	V _I	V _{SS} - 0.3	V _{CC} + 0.3	V	
Output voltage	V _O	V _{SS} - 0.3	V _{CC} + 6.0	V	
"L" level maximum output current	I _{OL1}	—	20	mA	Pins P40 to P43
	I _{OL2}	—	10	mA	Pins excluding P40 to P43
"L" level average output current	I _{OLAV}	—	4	mA	Average value (operating current × operating rate)
"L" level total maximum output current	ΣI _{OL}	—	100	mA	
"H" level maximum output current	I _{OH}	—	-10	mA	
"H" level average output current	I _{OHAV}	—	-2	mA	Average value (operating current × operating rate)
"H" level total maximum output current	ΣI _{OH}	—	-50	mA	
Power consumption	P _D	—	200	mW	
Operating temperature	T _a	-40	+85	°C	
Storage temperature	T _{STG}	-55	+150	°C	

WARNING: Semiconductor devices can be permanently damaged by application of stress (voltage, current, temperature, etc.) in excess of absolute maximum ratings. Do not exceed these ratings.

MB89930A Series

2. Recommended Operating Conditions

Parameter	Symbol	Value		Unit	Remarks
		Min.	Max.		
Power supply voltage	V _{CC}	2.2	5.5	V	Normal operation assurance range MB89935A/B
		1.5	6.0	V	Retains the RAMstate in stop mode
"H" level input voltage	V _{IH}	0.7 V _{CC}	V _{CC} + 0.3	V	P00 to P07, P30 to P37, P40 to P43, P50, UI/SI
	V _{IHS}	0.8 V _{CC}	V _{CC} + 0.3	V	MOD0/1, RST, EC, INT20 to INT27, UCK/SCK, INT10 to INT12
"L" level input voltage	V _{IL}	V _{SS} - 0.3	0.3 V _{CC}	V	P00 to P07, P30 to P37, P40 to P43, P50, UI/SI
	V _{ILS}	V _{SS} - 0.3	0.2 V _{CC}	V	MOD0/1, RST, EC, INT20 to INT27, UCK/SCK, INT10 to INT12
Open-drain output pin application voltage	V _D	V _{SS} - 0.3	V _{CC} + 0.3	V	P40 to P43
Operating temperature	T _a	-40	+85	°C	

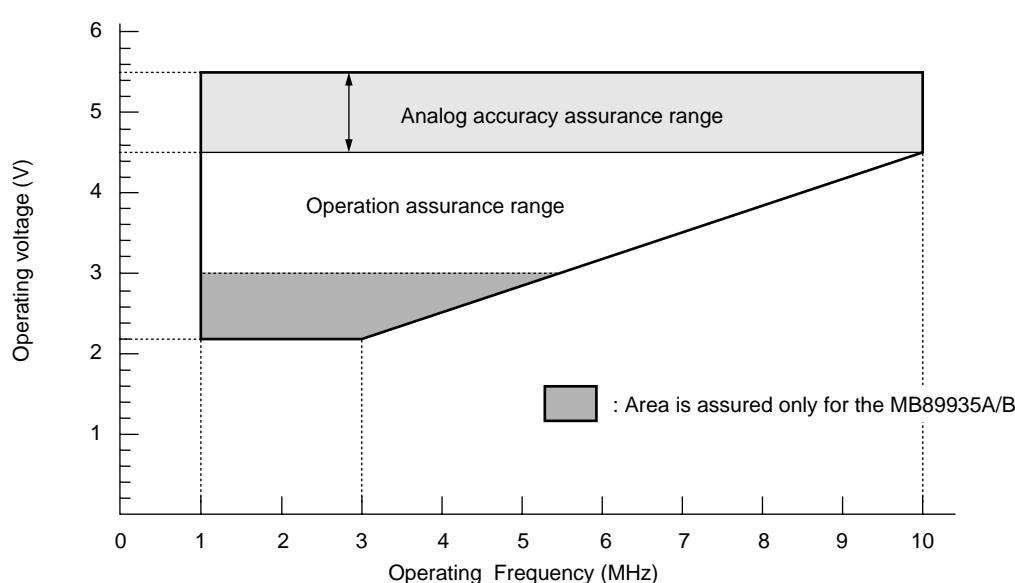

WARNING: The recommended operating conditions are required in order to ensure the normal operation of the semiconductor device. All of the device's electrical characteristics are warranted when the device is operated within these ranges.

Always use semiconductor devices within their recommended operating condition ranges. Operation outside these ranges may adversely affect reliability and could result in device failure.

No warranty is made with respect to uses, operating conditions, or combinations not represented on the data sheet. Users considering application outside the listed conditions are advised to contact their FUJITSU representatives beforehand.

MB89930A Series

3. DC Characteristics

($V_{CC} = 5.0 \text{ V} \pm 10\%$, $AV_{SS} = V_{SS} = 0.0 \text{ V}$, $F_{CH} = 10 \text{ MHz}$ (External clock), $T_a = -40 \text{ }^{\circ}\text{C}$ to $+85 \text{ }^{\circ}\text{C}$)

Parameter	Symbol	Pin name	Condition	Value			Unit	Remarks	
				Min.	Typ.	Max.			
"H" level input voltage	V_{IH}	P00 to P07, P30 to P37, P40 to P43, P50 , UI/SI	—	0.7 V_{CC}	—	$V_{CC} + 0.3$	V		
	V_{IHS}	<u>RST</u> , MOD0/1, <u>UCK/SCK</u> , EC, <u>INT20</u> to <u>INT27</u> , <u>INT10</u> to <u>INT12</u>	—	0.8 V_{CC}	—	$V_{CC} + 0.3$	V		
"L" level input voltage	V_{IL}	P00 to P07, P30 to P37, P40 to P43, P50 , UI/SI	—	$V_{SS} - 0.3$	—	0.3 V_{CC}	V		
	V_{ILS}	<u>RST</u> , MOD0/1, <u>UCK/SCK</u> , EC, <u>INT20</u> to <u>INT27</u> , <u>INT10</u> to <u>INT12</u>	—	$V_{SS} - 0.3$	—	0.2 V_{CC}	V		
Open-drain output pin application voltage	V_D	P40 to P43	—	$V_{SS} - 0.3$	—	$V_{CC} + 0.3$	V		
"H" level output voltage	V_{OH}	P00 to P07, P30 to P37, P40 to P43, P50	$I_{OH} = -4.0 \text{ mA}$	2.4	—	—	V		
"L" level output voltage	V_{OL1}	P00 to P07, P30 to P37, P50, RST	$I_{OL} = 4.0 \text{ mA}$	—	—	0.4	V		
	V_{OL2}	P40 to P43	$I_{OL} = 12.0 \text{ mA}$	—	—	0.4	V		
Input leakage current	I_{LI}	P00 to P07, P30 to P37, P40 to P43, P50 , MOD0/1	$0.45 \text{ V} < V_I < V_{CC}$	—	—	± 5	μA	Without pull-up resistor	
Pull-up resistance	R_{PULL}	P00 to P07, P30 to P37, P40 to P43, P50	$V_I = 0.0 \text{ V}$	25	50	100	$k\Omega$		
Power supply current	I_{CC}	V_{CC}	Normal operation mode (External clock, highest gear speed)	When A/D converter stops	—	8	12	mA	MB89935A/ B
					—	6	9	mA	MB89P935 A
	I_{CCS}		When A/D converter starts		—	10	15	mA	MB89935A/ B
					—	8	12	mA	MB89P935 A
			Sleep mode (External clock, highest gear speed)	When A/D converter stops	—	4	6	mA	MB89935A/ B
					—	3	5	mA	MB89P935 A

(Continued)

MB89930A Series

(Continued)

($V_{CC} = 5.0 \text{ V} \pm 10\%$, $AV_{SS} = V_{SS} = 0.0 \text{ V}$, $F_{CH} = 10 \text{ MHz}$ (External clock), $T_a = -40 \text{ }^{\circ}\text{C}$ to $+85 \text{ }^{\circ}\text{C}$)

Parameter	Symbol	Pin name	Condition	Value			Unit	Remarks	
				Min.	Typ.	Max.			
Power supply current	I_{CCH}	V_{CC}	Stop mode $T_a = +25 \text{ }^{\circ}\text{C}$ (External clock)	When A/D converter stops	—	—	1	μA	MB89935A/ B
					—	—	10	μA	MB89P935 A
Input capacitance	C_{IN}	Other than AV_{SS} , V_{CC} , V_{SS}		—	—	10	—	pF	MB89P935 A


MB89930A Series

4. AC Characteristics

(1) Reset Timing

(AV_{SS} = V_{SS} = 0.0 V, Ta = -40 °C to +85 °C)

Parameter	Symbol	Condition	Value		Unit	Remarks
			Min.	Max.		
RST "L" pulse width	t _{TLZH}	—	16 t _{HCYL}	—	ns	

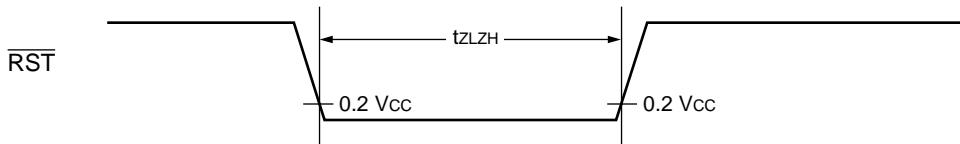
t_{HCYL} : 1 oscillating clock cycle time

Note : When the power-on reset option is not on, leave the external reset on until oscillation becomes stable.

(2) Power-on Reset

(AV_{SS} = V_{SS} = 0.0 V, Ta = -40 °C to +85 °C)

Parameter	Symbol	Condition	Value		Unit	Remarks
			Min.	Max.		
Power supply rising time	t _R	—	—	50	ms	
Power supply cutoff time	t _{OFF}	—	1	—	ms	Due to repeated operations

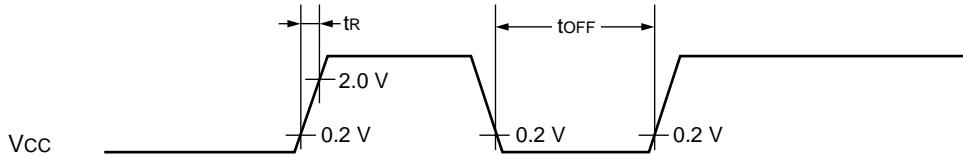

Note : The supply voltage must be set to the minimum value required for operation within the prescribed default oscillation settling time.


MB89930A Series

(3) Clock Timing

(AV_{SS} = V_{SS} = 0.0 V, Ta = -40°C to +85°C)


Parameter	Symbol	Condition	Value		Unit	Remarks
			Min.	Max.		
Clock frequency	F _{CH}	—	1	10	MHz	
Clock cycle time	t _{CYCL}		100	1000	ns	
Input clock pulse width	t _{WH} t _{WL}		20	—	ns	
Input clock rising/falling time	t _{CR} t _{CF}		—	10	ns	

- X0 and X1 Timing and Conditions

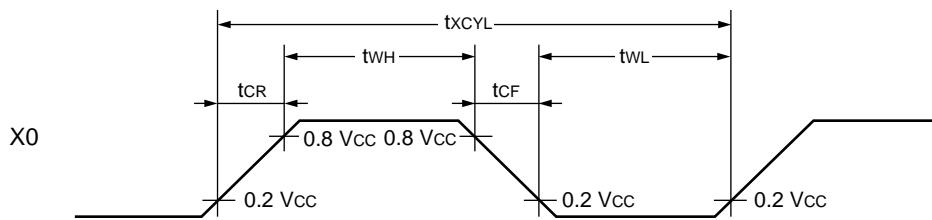


- Main Clock Conditions

When a crystal or ceramic resonator is used

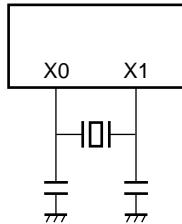

When an external clock is used

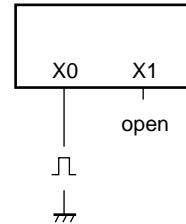


(4) Instruction Cycle.

Parameter	Symbol	Value (typical)	Unit	Remarks
Instruction cycle (minimum execution time)	t _{INST}	4/F _{CH} , 8/F _{CH} , 16/F _{CH} , 64/F _{CH}	μs	t _{INST} = 0.4 μs when operating at F _{CH} = 10 MHz (4/F _{CH})

MB89930A Series

(5) Recommended Resonator Manufactures

- Sample application of ceramic resonator

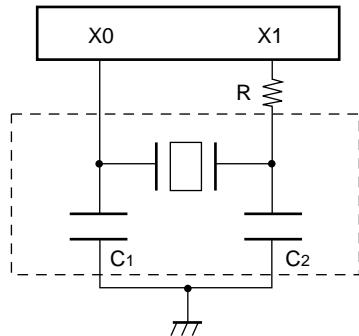

Resonator manufacturer	Resonator	Frequency (MHz)	C ₁	C ₂	R
Murata Mfg. Co., Ltd.	CSTS0400MG06	4.00	Built-in	Built-in	330 Ω
	CSTCC4.00MG0H6	4.00	Built-in	Built-in	330 Ω
	CSTS0800MG06	8.00	Built-in	Built-in	Not required
	CSTCC8.00MG0H6	8.00	Built-in	Built-in	Not required
	CST10.0MTW	10.00	Built-in	Built-in	Not required
	CSTCC10.0MG0H6	10.00	Built-in	Built-in	Not required

Inquiry : Murata Mfg. Co., Ltd.

- Murata Electronics North America, Inc. : TEL 1-404-436-1300
- Murata Europe Management GmbH : TEL 49-911-66870
- Murata Electronics Singapore (Pte.) : TEL 65-758-4233


MB89930A Series

(6) Peripheral Input Timing

($V_{CC} = 5.0 \text{ V} \pm 10\%$, $AV_{SS} = V_{SS} = 0.0 \text{ V}$, $T_a = -40^\circ\text{C}$ to $+85^\circ\text{C}$)


Parameter	Symbol	Pin name	Value		Unit	Remarks
			Min.	Max.		
Peripheral input "H" pulse width	t_{ILIH}	INT10 to INT12, INT20 to INT27, EC	2 t_{INST}^*	—	μs	
Peripheral input "L" pulse width	t_{IHIL}		2 t_{INST}^*	—	μs	

* : For information on t_{INST} see "(4) Instruction Cycle".

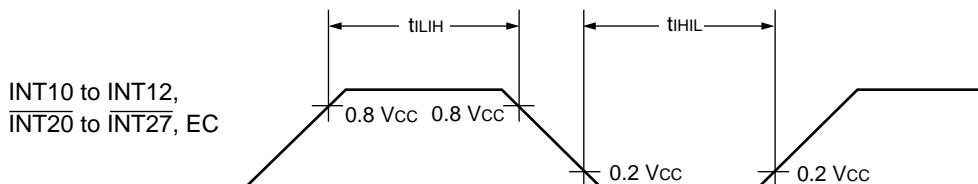

($V_{CC} = 5.0 \text{ V} \pm 10\%$, $AV_{SS} = V_{SS} = 0.0 \text{ V}$, $T_a = -40^\circ\text{C}$ to $+85^\circ\text{C}$)

Parameter	Symbol	Pin name	Value			Unit	Remarks
			Min.	Typ.	Max.		
Peripheral input "H" noise limit	t_{IHNC}	INT10 to INT12, EC	7	15	23	ns	
Peripheral input "L" noise limit	t_{ILNC}		7	15	23	ns	

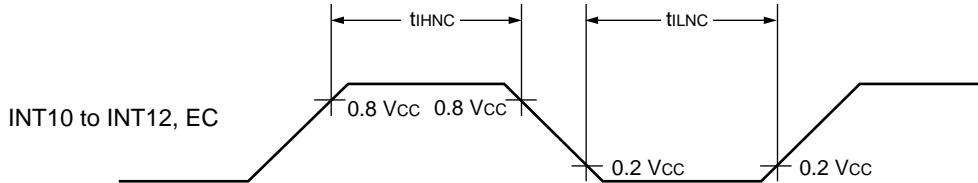

MB89930A Series


(7) UART, Serial I/O Timing

($V_{CC} = 5.0 \text{ V} \pm 10\%$, $AV_{SS} = V_{SS} = 0.0 \text{ V}$, $T_a = -40^\circ\text{C}$ to $+85^\circ\text{C}$)


Parameter	Symbol	Pin name	Condition	Value		Unit	Remarks
				Min.	Max.		
Serial clock cycle time	tSCYC	UCK/SCK	Internal shift clock mode	2 tINST*	—	μs	
UCK/SCK ↓ → SO time	tsLOV	UCK/SCK, SO		-200	200	ns	
Valid SI → UCK/SCK↑	tIVSH	UCK/SCK, SI		1/2 tINST*	—	μs	
UCK/SCK ↑ → Valid SI hold time	tSHIX	UCK/SCK, SI		1/2 tINST*	—	μs	
Serial clock "H" pulse width	tSHSL	UCK/SCK	External shift clock mode	tINST*	—	μs	
Serial clock "L" pulse width	tSLSH	UCK/SCK		tINST*	—	μs	
UCK/SCK ↓ → SO time	tsLOV	UCK/SCK, SO		0	200	ns	
Valid SI → UCK/SCK	tIVSH	UCK/SCK, SI		1/2 tINST*	—	μs	
UCK/SCK ↑ → Valid SI hold time	tSHIX	UCK/SCK, SI		1/2 tINST*	—	μs	

* : For information on t_{inst} , see "(4) Instruction Cycle".

- Internal Shift Clock Mode

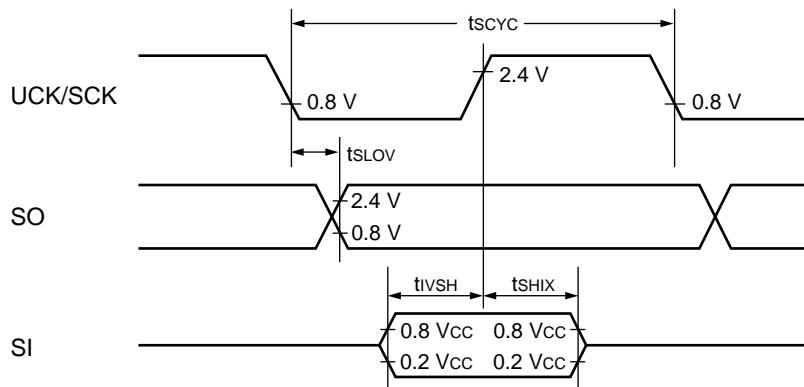

- External Shift Clock Mode

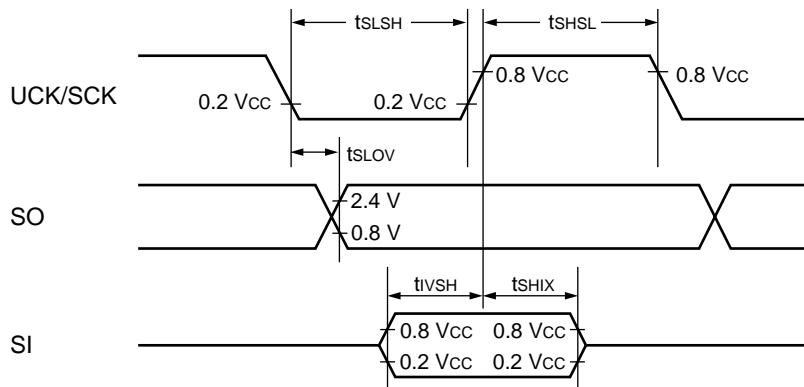

MB89930A Series

5. A/D Converter

(1) A/D Converter Electrical Characteristics

($V_{CC} = 5.0 \text{ V} \pm 10\%$, $AV_{SS} = V_{SS} = 0.0 \text{ V}$, $T_a = -40^\circ\text{C}$ to $+85^\circ\text{C}$)

Parameter	Symbol	Value			Unit	Remarks
		Min.	Typ.	Max.		
Resolution	—	—	—	10	bit	
Total error		-5.0	—	+5.0	LSB	
Linearity error		-3.0	—	+3.0	LSB	
Differential linearity error		-2.5	—	+2.5	LSB	
Zero transition voltage	V_{OT}	$AV_{SS} - 3.5 \text{ LSB}$	$AV_{SS} + 0.5 \text{ LSB}$	$AV_{SS} + 4.5 \text{ LSB}$	V	
Full-scale transition voltage	V_{FST}	$V_{CC} - 6.5 \text{ LSB}$	$V_{CC} - 1.5 \text{ LSB}$	$V_{CC} + 2.0 \text{ LSB}$	V	
A/D mode conversion time		—	—	$38 t_{INST}^*$	μs	
Analog port input current	I_{AIN}	—	—	10	μA	
Analog input voltage range	—	0	—	V_{CC}	V	

* : For information on t_{INST} , see "(4) Instruction Cycle" in "4. AC Characteristics."

(2) A/D Converter Glossary

- Resolution

Analog changes that are identifiable with the A/D converter

When the number of bits is 10, analog voltage can be divided into $2^{10} = 1024$.

- Linearity error (unit : LSB)


The deviation of the straight line connecting the zero transition point ("00 0000 0000" \leftrightarrow "00 0000 0001") with the full-scale transition point ("11 1111 1111" \leftrightarrow "11 1111 1110") from actual conversion characteristics

- Differential linearity error (unit : LSB)





The deviation of input voltage needed to change the output code by 1 LSB from the theoretical value

- Total error (unit : LSB)

The difference between theoretical and actual conversion values

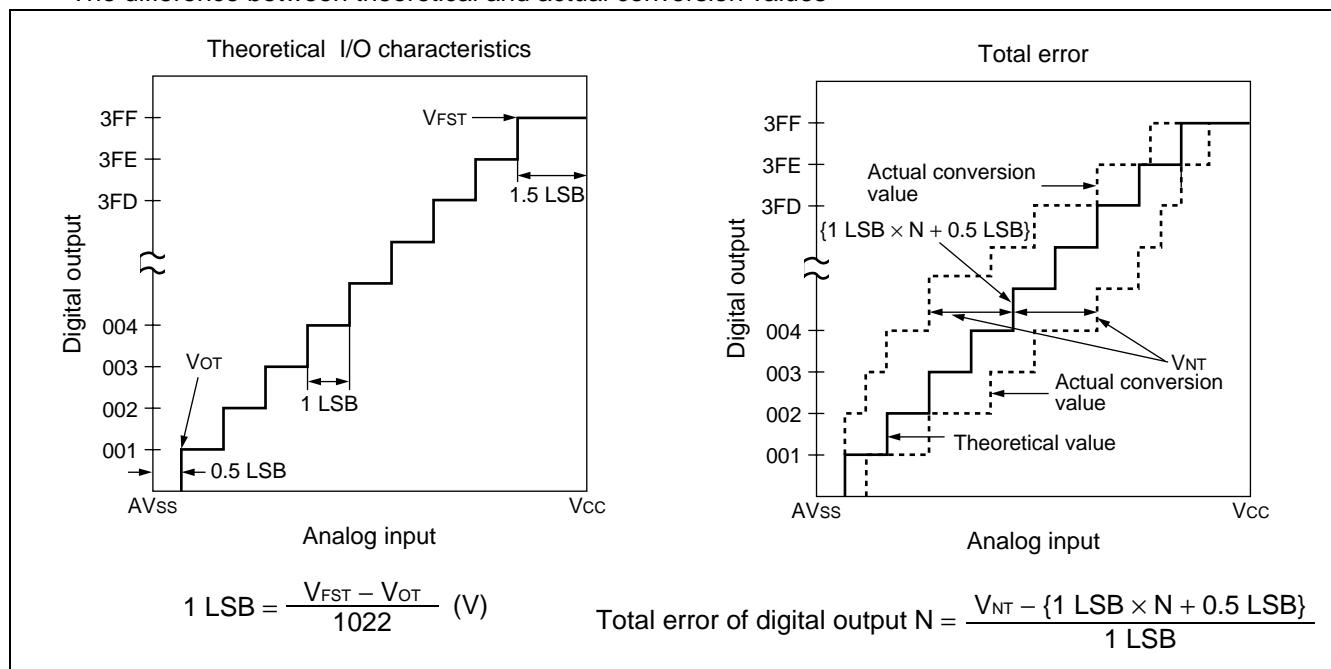

MB89930A Series

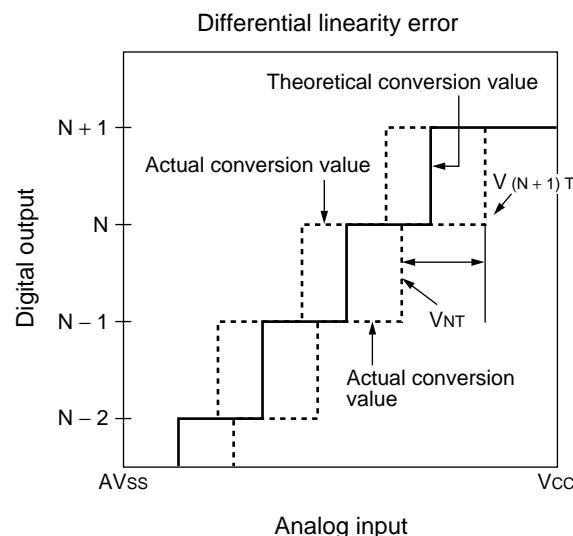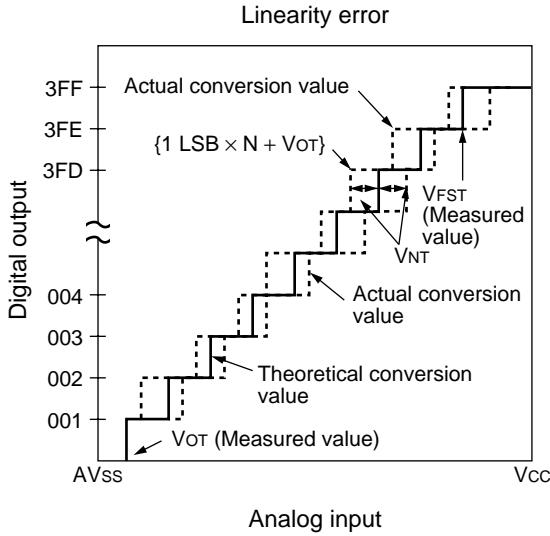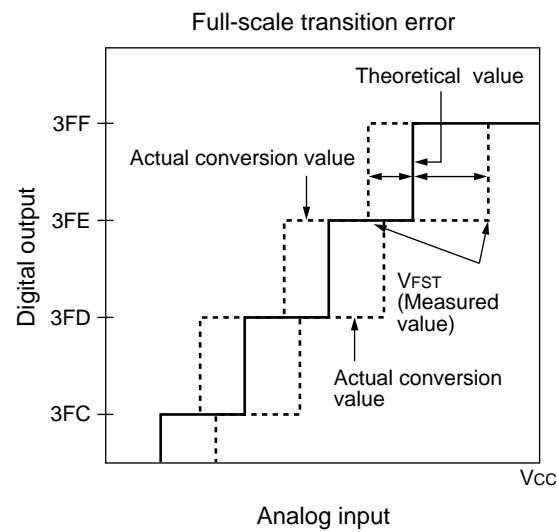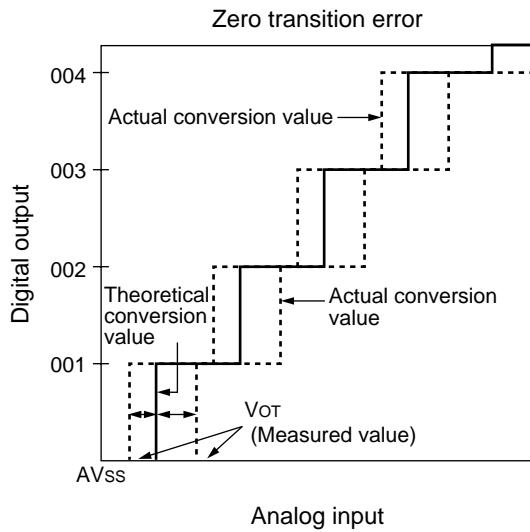

$$\text{Linearity error of digital output } N = \frac{V_{NT} - \{1 \text{ LSB} \times N + Vot\}}{1 \text{ LSB}}$$

$$\text{Differential linearity of error digital output } N = \frac{V_{(N+1)T} - V_{NT}}{1 \text{ LSB}} - 1$$

MB89930A Series

(3) Notes on Using A/D Converter


- Input impedance of the analog input pins

The A/D converter used for the MB89930A series contains a sample hold circuit as illustrated below to fetch analog input voltage into the sample hold capacitor for 16 instruction cycles after activating A/D conversion. For this reason, if the output impedance of the external circuit for the analog input is high, analog input voltage might not stabilize within the analog input sampling period. Therefore, it is recommended to keep the output impedance of the external circuit low (below 4 kΩ) .

Note that if the impedance cannot be kept low, it is recommended to connect an external capacitor of about 0.1 μF for the analog input pin.

- Analog Input Equivalent Circuit

If the analog input impedance is higher than 4 kΩ, it is recommended to connect an external capacitor of approx. 0.1 μF.

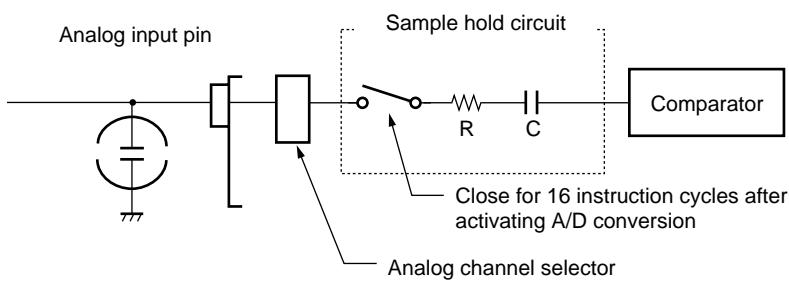


- Error

The smaller the | V_{cc} – AV_{ss} |, the greater the error would become relatively.

MB89930A Series



■ EXAMPLE CHARACTERISTICS

- Power supply current (MB89935A/MB89935B/MB89P935A : 8 MHz (when FAR resonator [NM8000] is used)

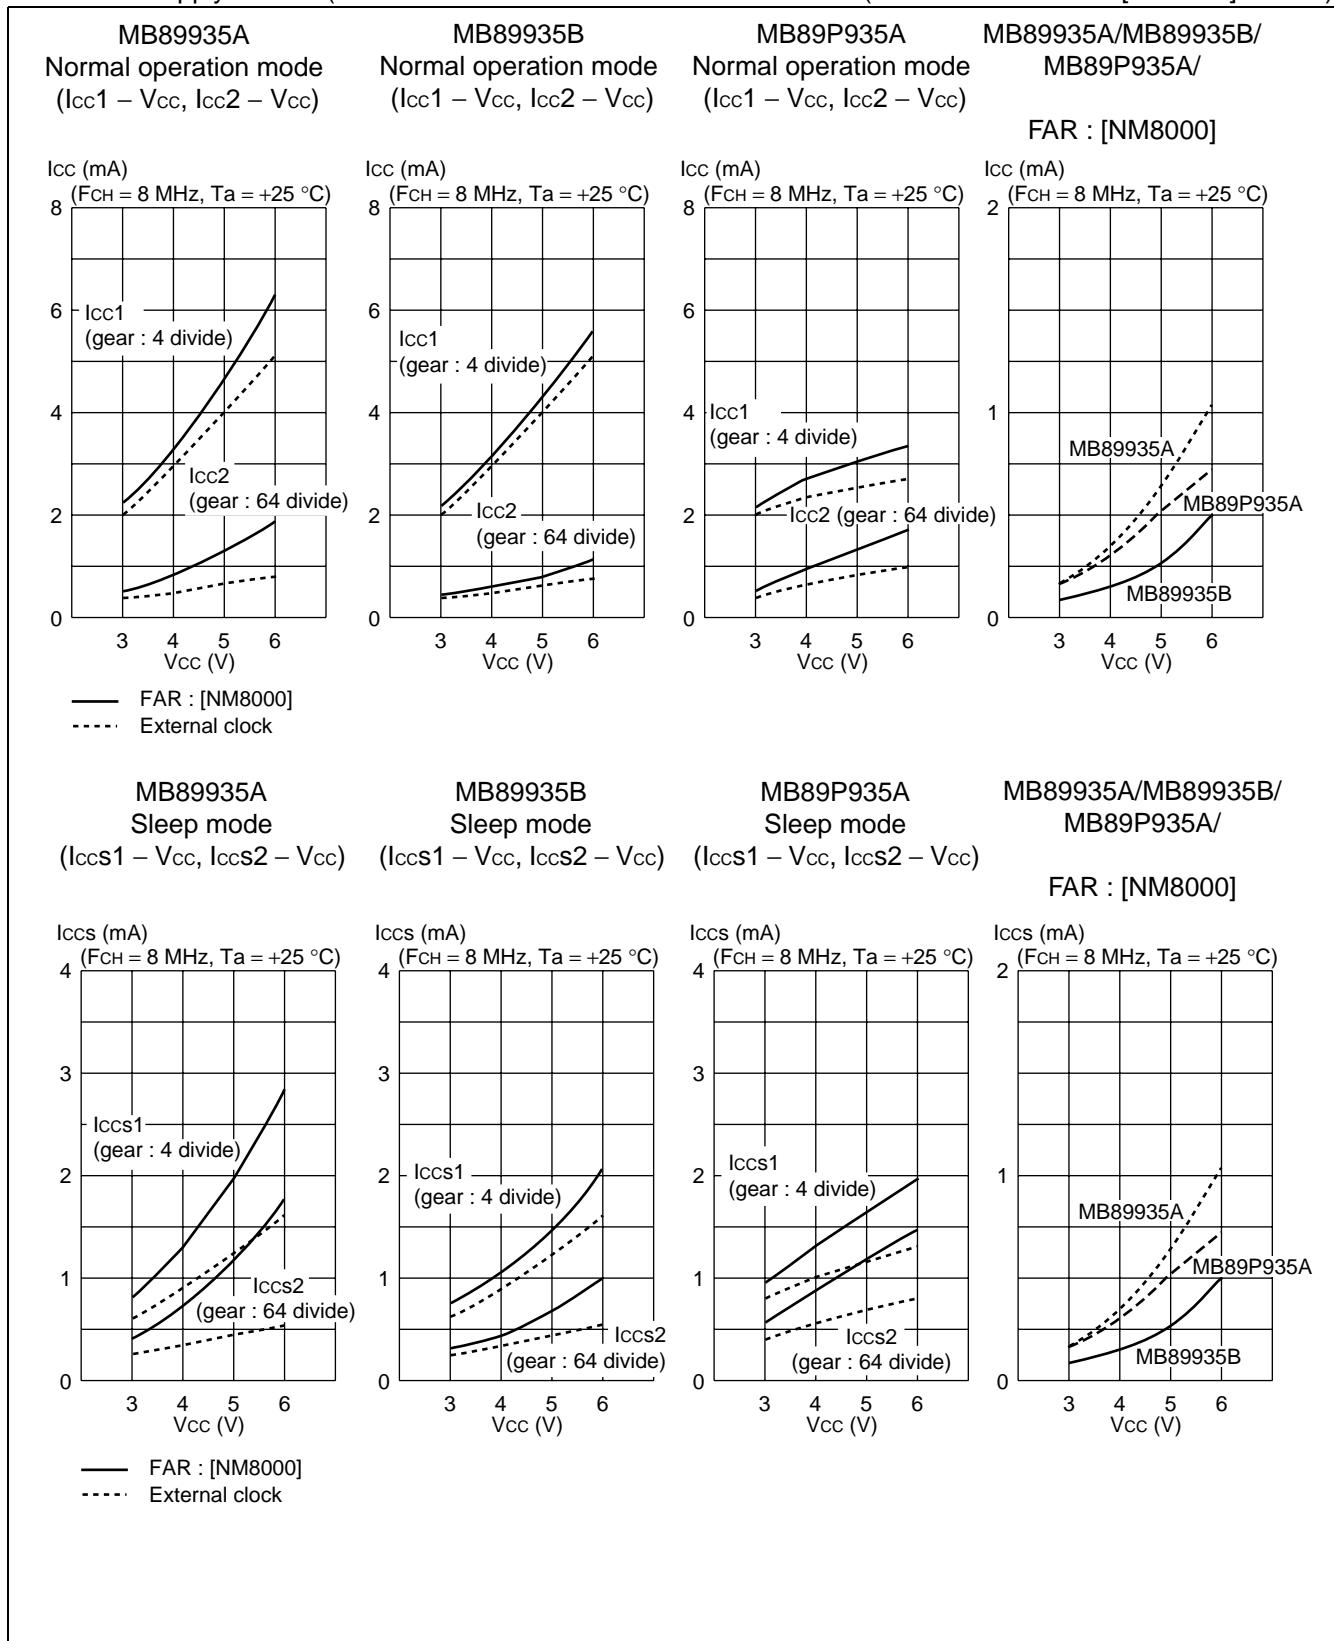






MB89930A Series

- MB89935A/MB89935B/MB89P935A : 4 MHz (when FAR resonator [NM4000] used)

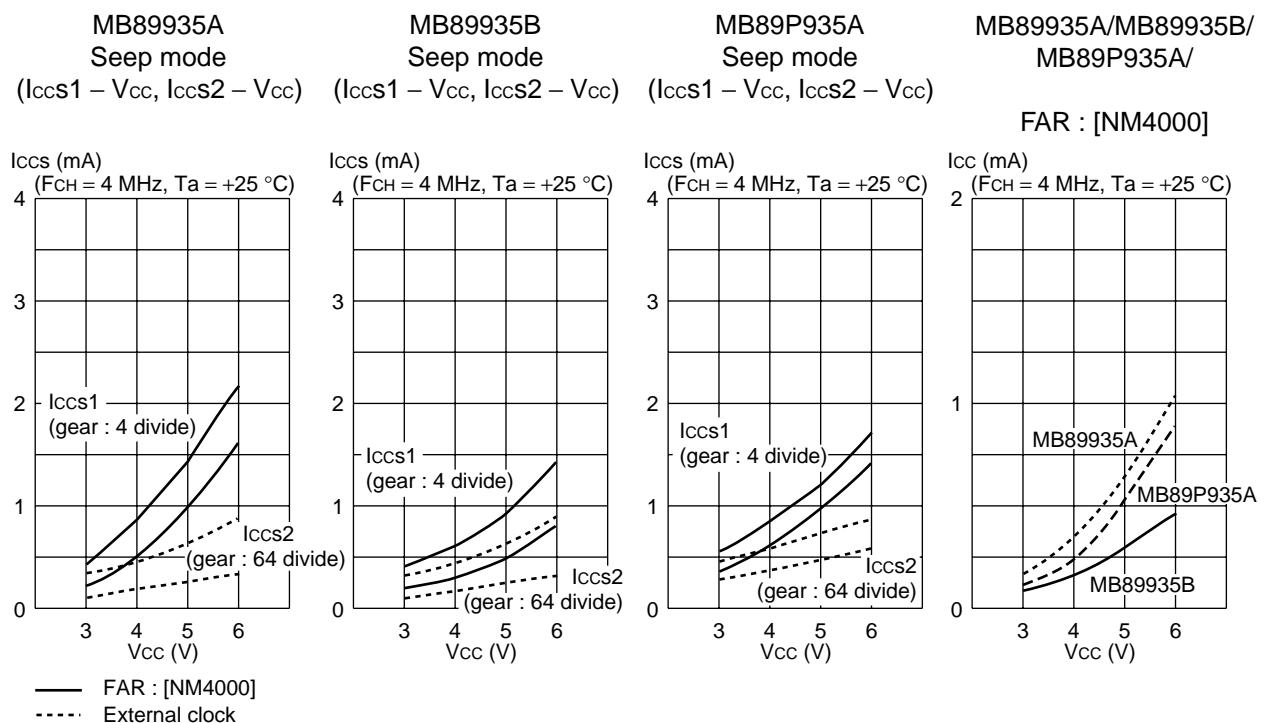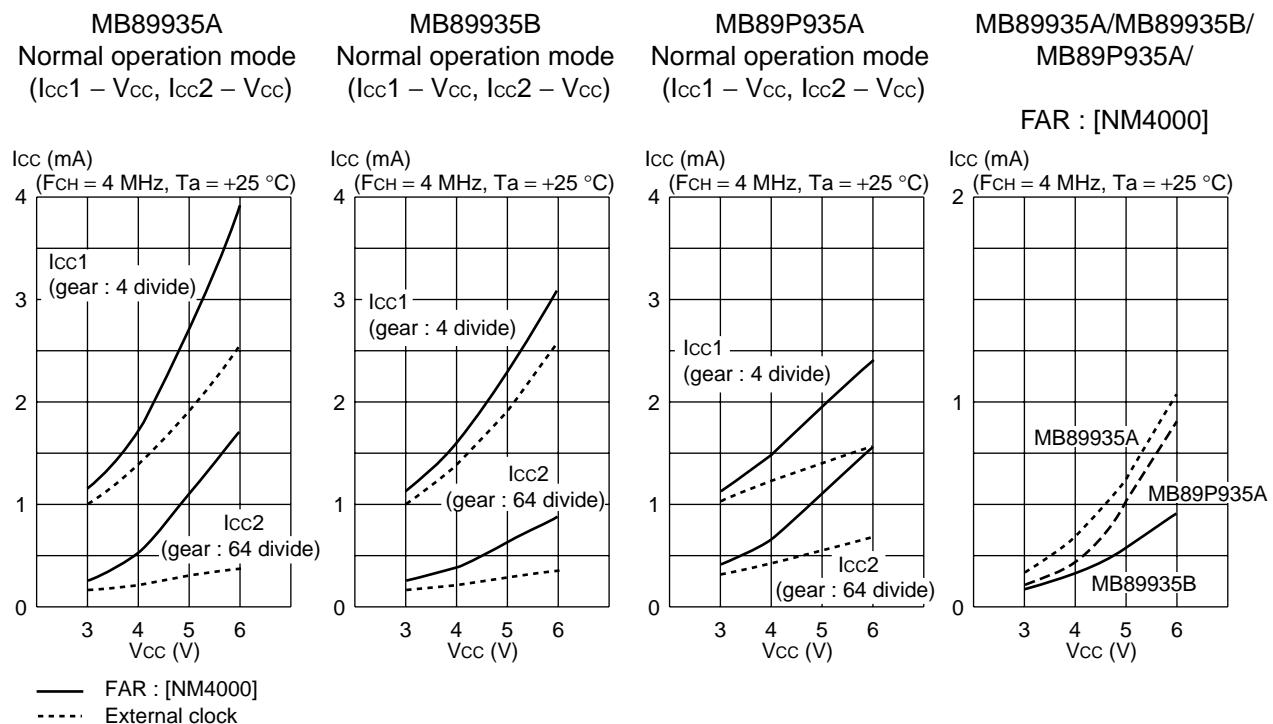


MB89930A Series

- MB89935A/MB89935B : 10 MHz (when external clock is used)

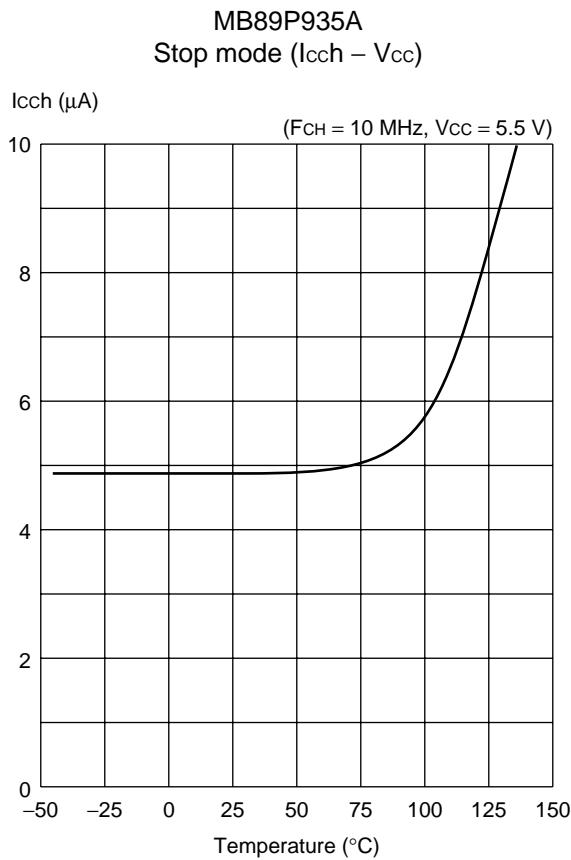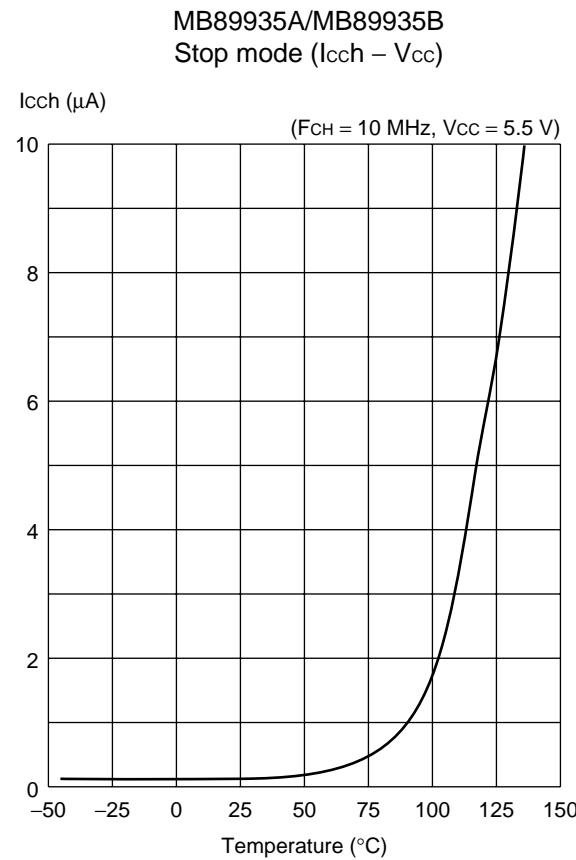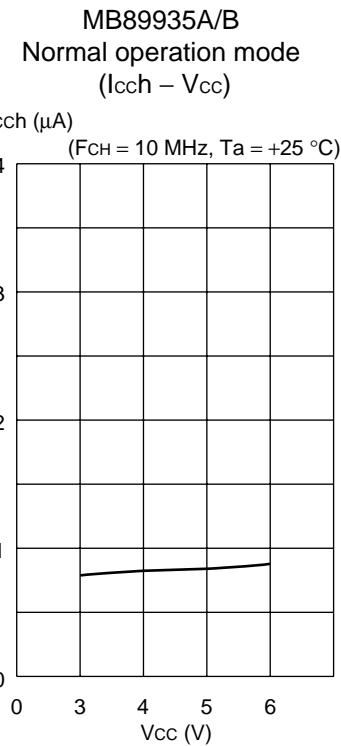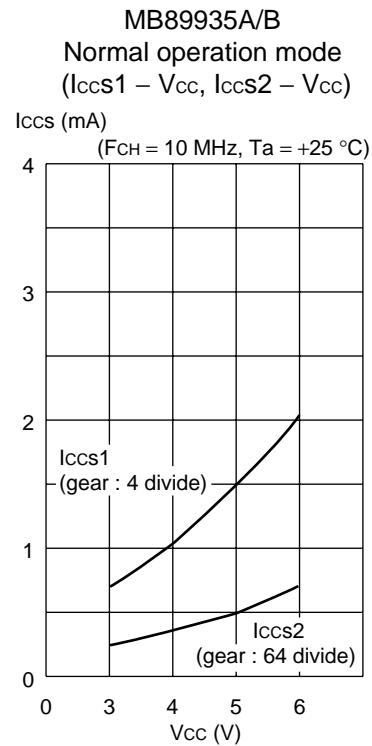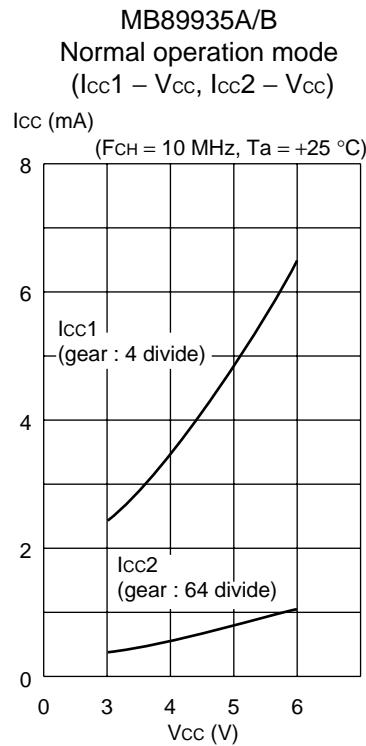


MB89930A Series

(2) "L" level output voltage

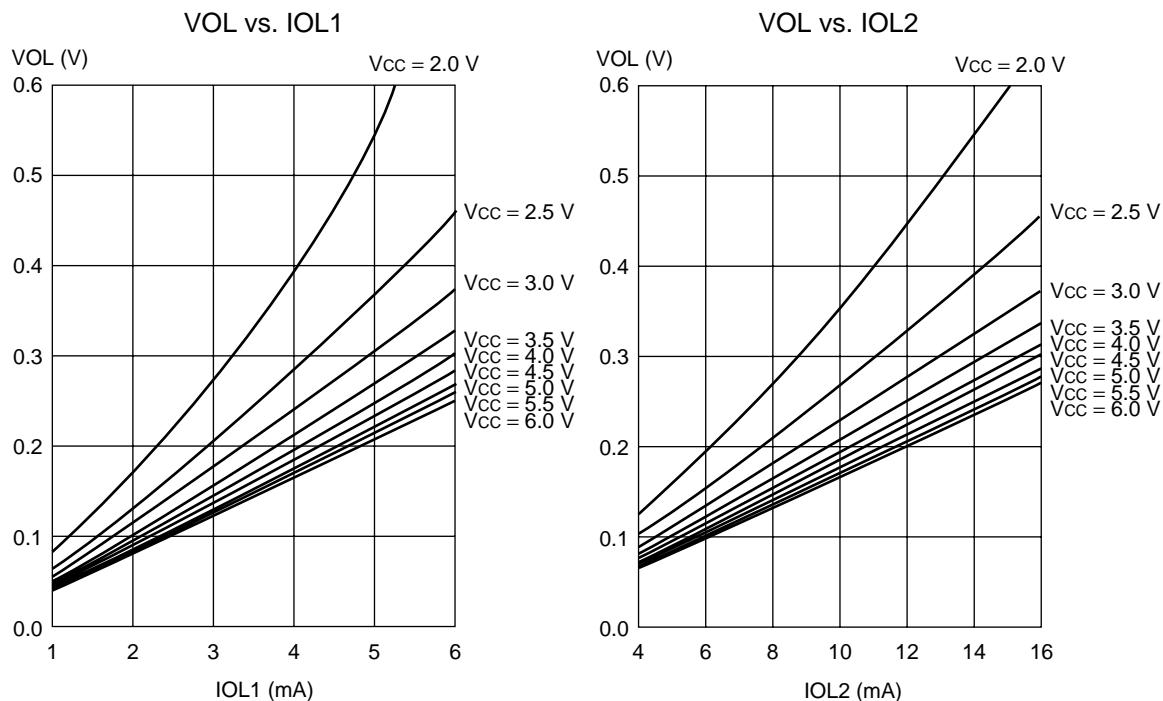

(3) "H" level output voltage

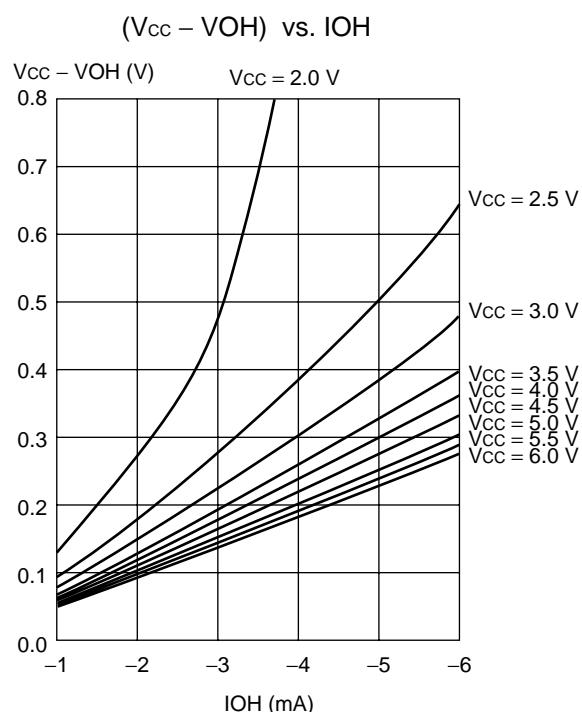

MB89930A Series

■ INSTRUCTIONS (136 INSTRUCTIONS)

Execution instructions can be divided into the following four groups:

- Transfer
- Arithmetic operation
- Branch
- Others

Table 1 lists symbols used for notation of instructions.

Table 1 Instruction Symbols

Symbol	Meaning
dir	Direct address (8 bits)
off	Offset (8 bits)
ext	Extended address (16 bits)
#vct	Vector table number (3 bits)
#d8	Immediate data (8 bits)
#d16	Immediate data (16 bits)
dir: b	Bit direct address (8:3 bits)
rel	Branch relative address (8 bits)
@	Register indirect (Example: @A, @IX, @EP)
A	Accumulator A (Whether its length is 8 or 16 bits is determined by the instruction in use.)
AH	Upper 8 bits of accumulator A (8 bits)
AL	Lower 8 bits of accumulator A (8 bits)
T	Temporary accumulator T (Whether its length is 8 or 16 bits is determined by the instruction in use.)
TH	Upper 8 bits of temporary accumulator T (8 bits)
TL	Lower 8 bits of temporary accumulator T (8 bits)
IX	Index register IX (16 bits)
EP	Extra pointer EP (16 bits)
PC	Program counter PC (16 bits)
SP	Stack pointer SP (16 bits)
PS	Program status PS (16 bits)
dr	Accumulator A or index register IX (16 bits)
CCR	Condition code register CCR (8 bits)
RP	Register bank pointer RP (5 bits)
Ri	General-purpose register Ri (8 bits, i = 0 to 7)
×	Indicates that the very × is the immediate data. (Whether its length is 8 or 16 bits is determined by the instruction in use.)
(×)	Indicates that the contents of × is the target of accessing. (Whether its length is 8 or 16 bits is determined by the instruction in use.)
((×))	The address indicated by the contents of × is the target of accessing. (Whether its length is 8 or 16 bits is determined by the instruction in use.)

Columns indicate the following:

Mnemonic: Assembler notation of an instruction

~: The number of instructions

#: The number of bytes

Operation: Operation of an instruction

TL, TH, AH: A content change when each of the TL, TH, and AH instructions is executed. Symbols in the column indicate the following:

- “_” indicates no change.
- dH is the 8 upper bits of operation description data.
- AL and AH must become the contents of AL and AH prior to the instruction executed.
- 00 becomes 00.

N, Z, V, C: An instruction of which the corresponding flag will change. If + is written in this column, the relevant instruction will change its corresponding flag.

OP code: Code of an instruction. If an instruction is more than one code, it is written according to the following rule:

Example: 48 to 4F ← This indicates 48, 49, ... 4F.

MB89930A Series

Table 2 Transfer Instructions (48 instructions)

Mnemonic	~	#	Operation	TL	TH	AH	NZVC	OP code
MOV dir,A	3	2	(dir) \leftarrow (A)	—	—	—	-----	45
MOV @IX +off,A	4	2	((IX) +off) \leftarrow (A)	—	—	—	-----	46
MOV ext,A	4	3	(ext) \leftarrow (A)	—	—	—	-----	61
MOV @EP,A	3	1	((EP)) \leftarrow (A)	—	—	—	-----	47
MOV Ri,A	3	1	(Ri) \leftarrow (A)	—	—	—	-----	48 to 4F
MOV A,#d8	2	2	(A) \leftarrow d8	AL	—	—	+ + --	04
MOV A,dir	3	2	(A) \leftarrow (dir)	AL	—	—	+ + --	05
MOV A,@IX +off	4	2	(A) \leftarrow ((IX) +off)	AL	—	—	+ + --	06
MOV A,ext	4	3	(A) \leftarrow (ext)	AL	—	—	+ + --	60
MOV A,@A	3	1	(A) \leftarrow ((A))	AL	—	—	+ + --	92
MOV A,@EP	3	1	(A) \leftarrow ((EP))	AL	—	—	+ + --	07
MOV A,Ri	3	1	(A) \leftarrow (Ri)	AL	—	—	+ + --	08 to 0F
MOV dir,#d8	4	3	(dir) \leftarrow d8	—	—	—	-----	85
MOV @IX +off,#d8	5	3	((IX) +off) \leftarrow d8	—	—	—	-----	86
MOV @EP,#d8	4	2	((EP)) \leftarrow d8	—	—	—	-----	87
MOV Ri,#d8	4	2	(Ri) \leftarrow d8	—	—	—	-----	88 to 8F
MOVW dir,A	4	2	(dir) \leftarrow (AH), (dir + 1) \leftarrow (AL)	—	—	—	-----	D5
MOVW @IX +off,A	5	2	((IX) +off) \leftarrow (AH), ((IX) +off + 1) \leftarrow (AL)	—	—	—	-----	D6
MOVW ext,A	5	3	(ext) \leftarrow (AH), (ext + 1) \leftarrow (AL)	—	—	—	-----	D4
MOVW @EP,A	4	1	((EP)) \leftarrow (AH), ((EP) + 1) \leftarrow (AL)	—	—	—	-----	D7
MOVW EP,A	2	1	(EP) \leftarrow (A)	—	—	—	-----	E3
MOVW A,#d16	3	3	(A) \leftarrow d16	AL	AH	dH	+ + --	E4
MOVW A,dir	4	2	(AH) \leftarrow (dir), (AL) \leftarrow (dir + 1)	AL	AH	dH	+ + --	C5
MOVW A,@IX +off	5	2	(AH) \leftarrow ((IX) +off), (AL) \leftarrow ((IX) +off + 1)	AL	AH	dH	+ + --	C6
MOVW A,ext	5	3	(AH) \leftarrow (ext), (AL) \leftarrow (ext + 1)	AL	AH	dH	+ + --	C4
MOVW A,@A	4	1	(AH) \leftarrow ((A)), (AL) \leftarrow ((A) + 1)	AL	AH	dH	+ + --	93
MOVW A,@EP	4	1	(AH) \leftarrow ((EP)), (AL) \leftarrow ((EP) + 1)	AL	AH	dH	+ + --	C7
MOVW A,EP	2	1	(A) \leftarrow (EP)	—	—	dH	-----	F3
MOVW EP,#d16	3	3	(EP) \leftarrow d16	—	—	—	-----	E7
MOVW IX,A	2	1	(IX) \leftarrow (A)	—	—	—	-----	E2
MOVW A,IX	2	1	(A) \leftarrow (IX)	—	—	dH	-----	F2
MOVW SP,A	2	1	(SP) \leftarrow (A)	—	—	—	-----	E1
MOVW A,SP	2	1	(A) \leftarrow (SP)	—	—	dH	-----	F1
MOV @A,T	3	1	((A)) \leftarrow (T)	—	—	—	-----	82
MOVW @A,T	4	1	((A)) \leftarrow (TH), ((A) + 1) \leftarrow (TL)	—	—	—	-----	83
MOVW IX,#d16	3	3	(IX) \leftarrow d16	—	—	—	-----	E6
MOVW A,PS	2	1	(A) \leftarrow (PS)	—	—	dH	-----	70
MOVW PS,A	2	1	(PS) \leftarrow (A)	—	—	—	+ + + +	71
MOVW SP,#d16	3	3	(SP) \leftarrow d16	—	—	—	-----	E5
SWAP	2	1	(AH) \leftrightarrow (AL)	—	—	AL	-----	10
SETB dir: b	4	2	(dir): b \leftarrow 1	—	—	—	-----	A8 to AF
CLRB dir: b	4	2	(dir): b \leftarrow 0	—	—	—	-----	A0 to A7
XCH A,T	2	1	(AL) \leftrightarrow (TL)	AL	—	—	-----	42
XCHW A,T	3	1	(A) \leftrightarrow (T)	AL	AH	dH	-----	43
XCHW A,EP	3	1	(A) \leftrightarrow (EP)	—	—	dH	-----	F7
XCHW A,IX	3	1	(A) \leftrightarrow (IX)	—	—	dH	-----	F6
XCHW A,SP	3	1	(A) \leftrightarrow (SP)	—	—	dH	-----	F5
MOVW A,PC	2	1	(A) \leftarrow (PC)	—	—	dH	-----	F0

Note During byte transfer to A, T \leftarrow A is restricted to low bytes.

Operands in more than one operand instruction must be stored in the order in which their mnemonics are written. (Reverse arrangement of F²MC-8 family)

MB89930A Series

Table 3 Arithmetic Operation Instructions (62 instructions)

Mnemonic	~	#	Operation	TL	TH	AH	NZVC	OP code
ADDC A,Ri	3	1	(A) \leftarrow (A) + (Ri) + C	—	—	—	++++	28 to 2F
ADDC A,#d8	2	2	(A) \leftarrow (A) + d8 + C	—	—	—	++++	24
ADDC A,dir	3	2	(A) \leftarrow (A) + (dir) + C	—	—	—	++++	25
ADDC A,@IX +off	4	2	(A) \leftarrow (A) + ((IX) +off) + C	—	—	—	++++	26
ADDC A,@EP	3	1	(A) \leftarrow (A) + ((EP)) + C	—	—	—	++++	27
ADDCW A	3	1	(A) \leftarrow (A) + (T) + C	—	—	dH	++++	23
ADDC A	2	1	(AL) \leftarrow (AL) + (TL) + C	—	—	—	++++	22
SUBC A,Ri	3	1	(A) \leftarrow (A) - (Ri) - C	—	—	—	++++	38 to 3F
SUBC A,#d8	2	2	(A) \leftarrow (A) - d8 - C	—	—	—	++++	34
SUBC A,dir	3	2	(A) \leftarrow (A) - (dir) - C	—	—	—	++++	35
SUBC A,@IX +off	4	2	(A) \leftarrow (A) - ((IX) +off) - C	—	—	—	++++	36
SUBC A,@EP	3	1	(A) \leftarrow (A) - ((EP)) - C	—	—	—	++++	37
SUBCW A	3	1	(A) \leftarrow (T) - (A) - C	—	—	dH	++++	33
SUBC A	2	1	(AL) \leftarrow (TL) - (AL) - C	—	—	—	++++	32
INC Ri	4	1	(Ri) \leftarrow (Ri) + 1	—	—	—	+++-	C8 to CF
INCW EP	3	1	(EP) \leftarrow (EP) + 1	—	—	—	-----	C3
INCW IX	3	1	(IX) \leftarrow (IX) + 1	—	—	—	-----	C2
INCW A	3	1	(A) \leftarrow (A) + 1	—	—	dH	+---	C0
DEC Ri	4	1	(Ri) \leftarrow (Ri) - 1	—	—	—	+++-	D8 to DF
DECW EP	3	1	(EP) \leftarrow (EP) - 1	—	—	—	-----	D3
DECW IX	3	1	(IX) \leftarrow (IX) - 1	—	—	—	-----	D2
DECW A	3	1	(A) \leftarrow (A) - 1	—	—	dH	+---	D0
MULU A	19	1	(A) \leftarrow (AL) \times (TL)	—	—	dH	-----	01
DIVU A	21	1	(A) \leftarrow (T) / (AL),MOD \rightarrow (T)	dL	00	00	-----	11
ANDW A	3	1	(A) \leftarrow (A) \wedge (T)	—	—	dH	++R-	63
ORW A	3	1	(A) \leftarrow (A) \vee (T)	—	—	dH	++R-	73
XORW A	3	1	(A) \leftarrow (A) $\vee\vee$ (T)	—	—	dH	++R-	53
CMP A	2	1	(TL) - (AL)	—	—	—	++++	12
CMPW A	3	1	(T) - (A)	—	—	—	++++	13
RORC A	2	1	$\square \rightarrow C \rightarrow A \square$	—	—	—	++-+	03
ROLC A	2	1	$\square C \leftarrow A \square$	—	—	—	++-+	02
CMP A,#d8	2	2	(A) - d8	—	—	—	++++	14
CMP A,dir	3	2	(A) - (dir)	—	—	—	++++	15
CMP A,@EP	3	1	(A) - ((EP))	—	—	—	++++	17
CMP A,@IX +off	4	2	(A) - ((IX) +off)	—	—	—	++++	16
CMP A,Ri	3	1	(A) - (Ri)	—	—	—	++++	18 to 1F
DAA	2	1	Decimal adjust for addition	—	—	—	++++	84
DAS	2	1	Decimal adjust for subtraction	—	—	—	++++	94
XOR A	2	1	(A) \leftarrow (AL) \vee (TL)	—	—	—	++R-	52
XOR A,#d8	2	2	(A) \leftarrow (AL) \vee d8	—	—	—	++R-	54
XOR A,dir	3	2	(A) \leftarrow (AL) \vee (dir)	—	—	—	++R-	55
XOR A,@EP	3	1	(A) \leftarrow (AL) \vee ((EP))	—	—	—	++R-	57
XOR A,@IX +off	4	2	(A) \leftarrow (AL) \vee ((IX) +off)	—	—	—	++R-	56
XOR A,Ri	3	1	(A) \leftarrow (AL) \vee (Ri)	—	—	—	++R-	58 to 5F
AND A	2	1	(A) \leftarrow (AL) \wedge (TL)	—	—	—	++R-	62
AND A,#d8	2	2	(A) \leftarrow (AL) \wedge d8	—	—	—	++R-	64
AND A,dir	3	2	(A) \leftarrow (AL) \wedge (dir)	—	—	—	++R-	65

(Continued)

MB89930A Series

(Continued)

Mnemonic	~	#	Operation	TL	TH	AH	NZVC	OP code
AND A,@EP	3	1	(A) \leftarrow (AL) \wedge ((EP))	—	—	—	++ R —	67
AND A,@IX +off	4	2	(A) \leftarrow (AL) \wedge ((IX) +off)	—	—	—	++ R —	66
AND A,Ri	3	1	(A) \leftarrow (AL) \wedge (Ri)	—	—	—	++ R —	68 to 6F
OR A	2	1	(A) \leftarrow (AL) \vee (TL)	—	—	—	++ R —	
OR A,#d8	2	2	(A) \leftarrow (AL) \vee d8	—	—	—	++ R —	74
OR A,dir	3	2	(A) \leftarrow (AL) \vee (dir)	—	—	—	++ R —	75
OR A,@EP	3	1	(A) \leftarrow (AL) \vee ((EP))	—	—	—	++ R —	77
OR A,@IX +off	4	2	(A) \leftarrow (AL) \vee ((IX) +off)	—	—	—	++ R —	76
OR A,Ri	3	1	(A) \leftarrow (AL) \vee (Ri)	—	—	—	++ R —	78 to 7F
CMP dir,#d8	5	3	(dir) - d8	—	—	—	+++ +	
CMP @EP,#d8	4	2	((EP)) - d8	—	—	—	+++ +	97
CMP @IX +off,#d8	5	3	((IX) + off) - d8	—	—	—	+++ +	96
CMP Ri,#d8	4	2	(Ri) - d8	—	—	—	+++ +	98 to 9F
INCW SP	3	1	(SP) \leftarrow (SP) + 1	—	—	—	-----	
DECW SP	3	1	(SP) \leftarrow (SP) - 1	—	—	—	-----	D1

Table 4 Branch Instructions (17 instructions)

Mnemonic	~	#	Operation	TL	TH	AH	NZVC	OP code
BZ/BEQ rel	3	2	If Z = 1 then PC \leftarrow PC + rel	—	—	—	-----	FD
BNZ/BNE rel	3	2	If Z = 0 then PC \leftarrow PC + rel	—	—	—	-----	FC
BC/BLO rel	3	2	If C = 1 then PC \leftarrow PC + rel	—	—	—	-----	F9
BNC/BHS rel	3	2	If C = 0 then PC \leftarrow PC + rel	—	—	—	-----	F8
BN rel	3	2	If N = 1 then PC \leftarrow PC + rel	—	—	—	-----	FB
BP rel	3	2	If N = 0 then PC \leftarrow PC + rel	—	—	—	-----	FA
BLT rel	3	2	If V \forall N = 1 then PC \leftarrow PC + rel	—	—	—	-----	FF
BGE rel	3	2	If V \forall N = 0 then PC \leftarrow PC + rel	—	—	—	-----	FE
BBC dir: b,rel	5	3	If (dir: b) = 0 then PC \leftarrow PC + rel	—	—	—	-+--	B0 to B7
BBS dir: b,rel	5	3	If (dir: b) = 1 then PC \leftarrow PC + rel	—	—	—	-+--	
JMP @A	2	1	(PC) \leftarrow (A)	—	—	—	-----	E0
JMP ext	3	3	(PC) \leftarrow ext	—	—	—	-----	21
CALLV #vct	6	1	Vector call	—	—	—	-----	E8 to EF
CALL ext	6	3	Subroutine call	—	—	—	-----	
XCHW A,PC	3	1	(PC) \leftarrow (A), (A) \leftarrow (PC) + 1	—	—	dH	-----	F4
RET	4	1	Return from subroutine	—	—	—	-----	20
RETI	6	1	Return form interrupt	—	—	—	Restore	30

Table 5 Other Instructions (9 instructions)

Mnemonic	~	#	Operation	TL	TH	AH	NZVC	OP code
PUSHW A	4	1		—	—	—	-----	40
POPW A	4	1		—	—	dH	-----	50
PUSHW IX	4	1		—	—	—	-----	41
POPW IX	4	1		—	—	—	-----	51
NOP	1	1		—	—	—	-----	00
CLRC	1	1		—	—	—	--- R	81
SETC	1	1		—	—	—	--- S	91
CLRI	1	1		—	—	—	-----	80
SETI	1	1		—	—	—	-----	90

MB89930A Series

■ INSTRUCTION MAP

L \ H	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	NOP	SWAP	RET	RETI	PUSHW	POPW	MOV A,ext	MOVW A,PS	CLRI	SETI	CLRB dir: 0	BBC dir: 0,rel	INCW A	DECW A	JMP @A	MOVW A,PC
1	MULU A	DIVU A	JMP addr16	CALL addr16	PUSHW IX	POPW IX	MOV ext,A	MOV PS,A	CLRC	SETC	CLRB dir: 1	BBC dir: 1,rel	INCW SP	DECW SP	MOVW SP,A	MOVW A,SP
2	ROLC A	CMP A	ADDC A	SUBC A	XCH A,T	XOR A	AND A	OR A	MOV A,@A,T	MOVW A,@A,T	CLRB dir: 2	BBC dir: 2,rel	INCW IX	DECW IX	MOVW IX,A	MOVW A,IX
3	RORC A	CMPW A	ADD CW A	SUB CW A	XCHW A,T	XORW A	ANDW A	ORW A	MOVW A,@A,T	MOVW A,@A,T	CLRB dir: 3	BBC dir: 3,rel	INCW EP	DECW EP	MOVW EP,A	MOVW A,EP
4	MOV A,#d8	CMP A,#d8	ADDC A,#d8	SUBC A,#d8	XOR A,#d8	AND A,#d8	OR A,#d8	DAA	DAS	CLRB dir: 4	BBC dir: 4,rel	MOVW A,ext	MOVW ext,A	MOVW A,d16	XCHW A,PC	
5	MOV A,dir	CMP A,dir	ADDC A,dir	SUBC A,dir	MOV dir,A	XOR A,dir	AND A,dir	OR A,dir	MOV dir,#d8	CMP dir,#d8	CLRB dir: 5	BBC dir: 5,rel	MOVW A,dir	MOVW dir,A	MOVW SP#d16	XCHW A,SP
6	MOV A,@IX+d	CMP A,@IX+d	ADDC A,@IX+d	SUBC A,@IX+d	MOV @IX+d,A	XOR A,@IX+d	AND A,@IX+d	OR A,@IX+d	MOV @IX+d,#d8	CMP @IX+d,#d8	CLRB dir: 6	BBC dir: 6,rel	MOV A,@IX+d	MOVW A,@IX+d	MOVW IX,d16	XCHW A,IX
7	MOV A,@EP	CMP A,@EP	ADDC A,@EP	SUBC A,@EP	MOV A,@EP	XOR A,@EP	AND A,@EP	OR A,@EP	MOV @EP#d8	CMP @EP#d8	CLRB dir: 7	BBC dir: 7,rel	MOV A,@EP	MOVW A,@EP	MOVW EP#d16	XCHW A,EP
8	MOV A,R0	CMP A,R0	ADDC A,R0	SUBC A,R0	MOV R0,A	XOR A,R0	AND A,R0	OR A,R0	MOV R0,#d8	CMP R0,#d8	SETB dir: 0	BBS dir: 0,rel	INC R0	DEC R0	#0	CALLV BNC rel
9	MOV A,R1	CMP A,R1	ADDC A,R1	SUBC A,R1	MOV R1,A	XOR A,R1	AND A,R1	OR A,R1	MOV R1,#d8	CMP R1,#d8	SETB dir: 1	BBS dir: 1,rel	INC R1	DEC R1	#1	CALLV BC rel
A	MOV A,R2	CMP A,R2	ADDC A,R2	SUBC A,R2	MOV R2,A	XOR A,R2	AND A,R2	OR A,R2	MOV R2,#d8	CMP R2,#d8	SETB dir: 2	BBS dir: 2,rel	INC R2	DEC R2	#2	CALLV BP rel
B	MOV A,R3	CMP A,R3	ADDC A,R3	SUBC A,R3	MOV R3,A	XOR A,R3	AND A,R3	OR A,R3	MOV R3,#d8	CMP R3,#d8	SETB dir: 3	BBS dir: 3,rel	INC R3	DEC R3	#3	CALLV BN rel
C	MOV A,R4	CMP A,R4	ADDC A,R4	SUBC A,R4	MOV R4,A	XOR A,R4	AND A,R4	OR A,R4	MOV R4,#d8	CMP R4,#d8	SETB dir: 4	BBS dir: 4,rel	INC R4	DEC R4	#4	CALLV BNZ rel
D	MOV A,R5	CMP A,R5	ADDC A,R5	SUBC A,R5	MOV R5,A	XOR A,R5	AND A,R5	OR A,R5	MOV R5,#d8	CMP R5,#d8	SETB dir: 5	BBS dir: 5,rel	INC R5	DEC R5	#5	CALLV BZ rel
E	MOV A,R6	CMP A,R6	ADDC A,R6	SUBC A,R6	MOV R6,A	XOR A,R6	AND A,R6	OR A,R6	MOV R6,#d8	CMP R6,#d8	SETB dir: 6	BBS dir: 6,rel	INC R6	DEC R6	#6	CALLV BGE rel
F	MOV A,R7	CMP A,R7	ADDC A,R7	SUBC A,R7	MOV R7,A	XOR A,R7	AND A,R7	OR A,R7	MOV R7,#d8	CMP R7,#d8	SETB dir: 7	BBS dir: 7,rel	INC R7	DEC R7	#7	CALLV BLT rel

MB89930A Series

■ MASK OPTIONS

No	Part number	MB89935A/B	MB89P935A	MB89PV930A
	Specifying procedure	Specify when ordering masking	Setting not possible	
1	Selection of initial value of main clock oscillation settling time* (with $F_{CH} = 10$ MHz) 01 : $2^{14}/F_{CH}$ (Approx. 1.63 ms) 10 : $2^{17}/F_{CH}$ (Approx. 13.1 ms) 11 : $2^{18}/F_{CH}$ (Approx. 26.2 ms)	Selectable	Fixed to $2^{18}/F_{CH}$ (Approx. 26.2 ms)	Fixed to $2^{18}/F_{CH}$ (Approx. 26.2 ms)
2	Power-on reset selection With power-on reset Without power-on reset	Selectable	Available	Available
3	Reset pin output With reset output Without reset output	Selectable	With reset output	With reset output

F_{CH} : Main clock oscillation frequency

* : Initial value to which the oscillation settling time bit (SYCC : WT1, WT0) in the system clock control register is set

■ ORDERING INFORMATION


Part number	Package	Remarks
MB89935APFV MB89935BPFV MB89P935APFV	30-pin Plastic SSOP (FPT-30P-M02)	
MB89PV930ACFV	48-pin Ceramic MQFP (MQP-48C-P01)	

MB89930A Series

■ PACKAGE DIMENSIONS

30-pin plastic LQFP
(FPT-30P-M02)

* : This dimension does not include resin protrusion.

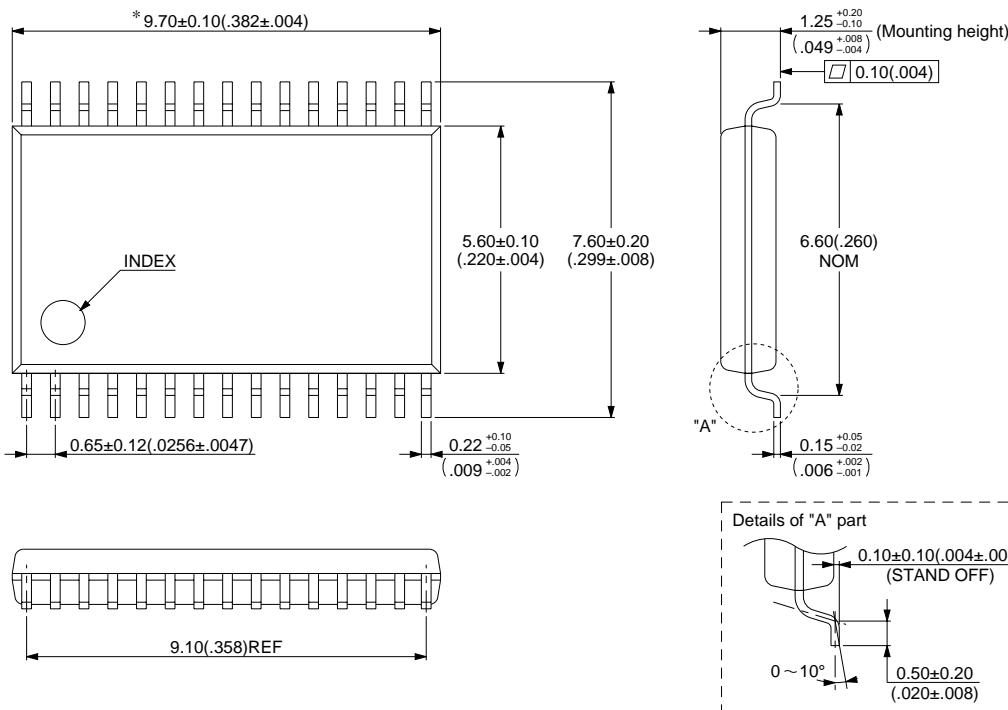

© 1994 FUJITSU LIMITED F30003S-2C-3


Dimensions in mm (inches)

(Continued)

MB89930A Series

(Continued)

48-pin ceramic MQFP
(MQP-48C-P01)

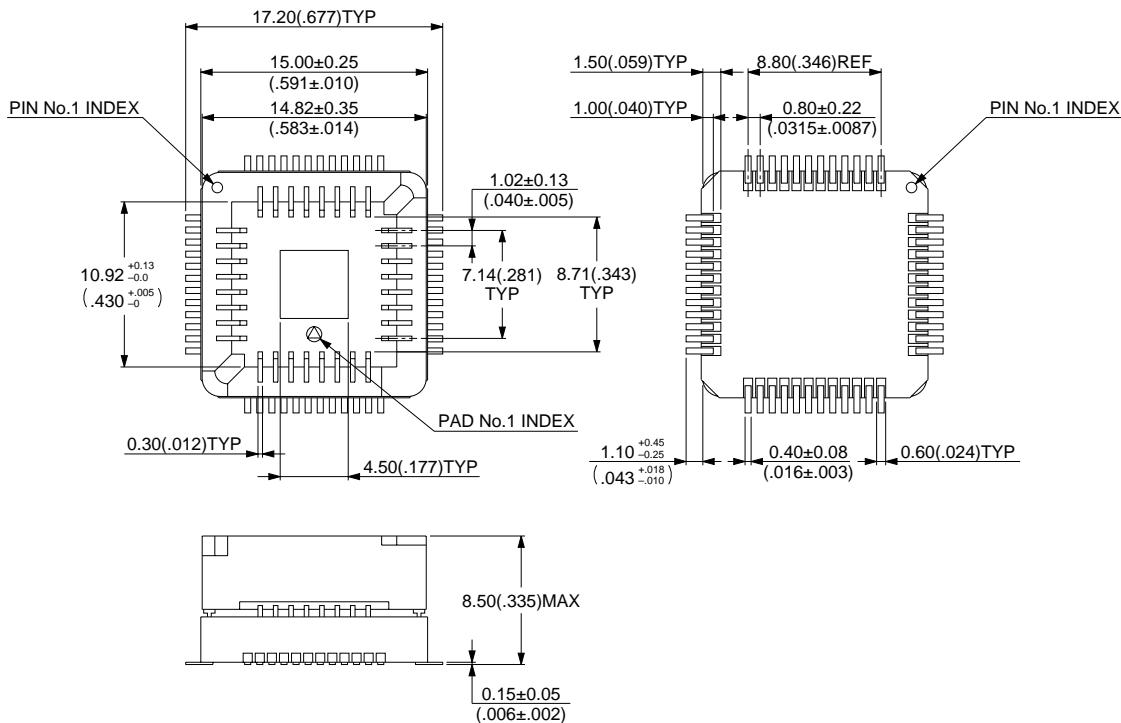

© 1994 FUJITSU LIMITED M48001SC-4-2

Dimensions in mm (inches)

MB89930A Series

FUJITSU LIMITED

For further information please contact:

Japan

FUJITSU LIMITED
 Corporate Global Business Support Division
 Electronic Devices
 Shinjuku Dai-Ichi Seimei Bldg. 7-1,
 Nishishinjuku 2-chome, Shinjuku-ku,
 Tokyo 163-0721, Japan
 Tel: +81-3-5322-3347
 Fax: +81-3-5322-3386

<http://edevice.fujitsu.com/>

North and South America

FUJITSU MICROELECTRONICS, INC.
 3545 North First Street,
 San Jose, CA 95134-1804, U.S.A.
 Tel: +1-408-922-9000
 Fax: +1-408-922-9179

Customer Response Center
Mon. - Fri.: 7 am - 5 pm (PST)
 Tel: +1-800-866-8608
 Fax: +1-408-922-9179
<http://www.fujitumicro.com/>

Europe

FUJITSU MICROELECTRONICS EUROPE GmbH
 Am Siebenstein 6-10,
 D-63303 Dreieich-Buchschlag,
 Germany
 Tel: +49-6103-690-0
 Fax: +49-6103-690-122
<http://www.fujitsu-fme.com/>

Asia Pacific

FUJITSU MICROELECTRONICS ASIA PTE. LTD.
 #05-08, 151 Lorong Chuan,
 New Tech Park,
 Singapore 556741
 Tel: +65-281-0770
 Fax: +65-281-0220
<http://www.fmap.com.sg/>

Korea

FUJITSU MICROELECTRONICS KOREA LTD.
 1702 KOSMO TOWER, 1002 Daechi-Dong,
 Kangnam-Gu, Seoul 135-280
 Korea
 Tel: +82-2-3484-7100
 Fax: +82-2-3484-7111

All Rights Reserved.

The contents of this document are subject to change without notice.
 Customers are advised to consult with FUJITSU sales
 representatives before ordering.

The information and circuit diagrams in this document are
 presented as examples of semiconductor device applications, and
 are not intended to be incorporated in devices for actual use. Also,
 FUJITSU is unable to assume responsibility for infringement of
 any patent rights or other rights of third parties arising from the use
 of this information or circuit diagrams.

The contents of this document may not be reproduced or copied
 without the permission of FUJITSU LIMITED.

FUJITSU semiconductor devices are intended for use in standard
 applications (computers, office automation and other office
 equipments, industrial, communications, and measurement
 equipments, personal or household devices, etc.).

CAUTION:

Customers considering the use of our products in special
 applications where failure or abnormal operation may directly
 affect human lives or cause physical injury or property damage, or
 where extremely high levels of reliability are demanded (such as
 aerospace systems, atomic energy controls, sea floor repeaters,
 vehicle operating controls, medical devices for life support, etc.)
 are requested to consult with FUJITSU sales representatives before
 such use. The company will not be responsible for damages arising
 from such use without prior approval.

Any semiconductor devices have inherently a certain rate of failure.
 You must protect against injury, damage or loss from such failures
 by incorporating safety design measures into your facility and
 equipment such as redundancy, fire protection, and prevention of
 over-current levels and other abnormal operating conditions.

If any products described in this document represent goods or
 technologies subject to certain restrictions on export under the
 Foreign Exchange and Foreign Trade Control Law of Japan, the
 prior authorization by Japanese government should be required for
 export of those products from Japan.