DS04-13103-6E

Linear IC

6-Channel 8-BIT A/D Converter

MB4053

■ DESCRIPTION

The Fujitsu MB4053 is 6-channel, 8-bit, single-slope A/D converter subsystem designed to be used in a microprocessor based data control system.


The MB4053 is single monolithic bipolar IC providing a 1 of 8 address decoder, 8-channel analog multiplier, sample and hold, constant current generator, ramp integrator and comparator in a 16-pin package.

This A/D converter subsystems are suitable for a wide range of applications. The resolution required by an application can be obtained by arbitarily selecting a suitable integration time. Also zero offset and full-scale error corrections can be made automatically (auto-zero and auto-calibration) to minimize conversion error.


■ FEATURES

- Microprocessor compatible
- Digital input/output: TTL compatible
- · Zero offset and full-scale error correction capability
- Ratiometric conversion capability
- Available in 16-pin DIP and Flat Package
- Compatible with MC 14443 and μA9708 (DIP package)
- Single power supply: +4.75 V to +15 V
- Excellent linearity: ±0.2% max. error
- Fast conversion time: 300 μs/ch typ.
- Analog input volgage: 0 V to Vcc 2 V (5.25 V max.)
- Power Dissipation: 25 mW typ. at Vcc = 5 V

■ PACKAGES

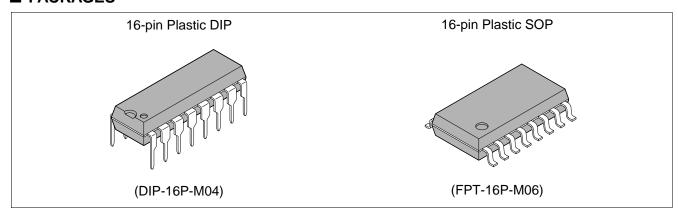


■ PIN ASSIGNMENT

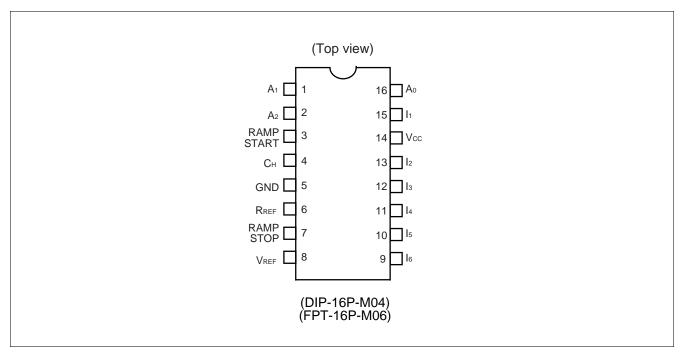

■ PIN DESCRIPTION

Pin no.	Pin name	Symbol	Function		
9 to 13 15	Analog input	I₁ thru I6	Analog inputs for the six channels. One of the 6 is selected by a specific bit pattern on A_0 to A_2 .		
16 1 2	Channel selection input	A ₀ A ₁ A ₂	Input for selecting an analog input channel. Either GND, one of channels I $_1$ to I $_6$ or V _{REF} is selected by a specific bit pattern on the 3 inputs.		
3	RAMP START signal input	RAMP START	A/D conversion start signal input. RAMP START (1 \rightarrow 0) Ramp time start signal input. RAMP START (0 \rightarrow 1)		
7	RAMP STOP signal output	RAMP STOP	Indicates that C _H is charged over comparator reference voltage V _{BE2} . RAMP STOP (0 \rightarrow 1) A/D conversion end signal (C _H discharged to comparator reference voltage). RAMP STOP (0 \rightarrow 1)		
4	Ramp capacitor pin	Сн	Pin for externally connecting the ramp capacitor. The value of C _H in conjunction with V _{REF} and R _{REF} establishes the ramp time.		
8	Reference voltage supply pin	Vref	Reference voltage supply pin. This is the reference voltage source for determining the discharge current and the analog reference voltage for full-scale factor correction. When the channel selection input is set 111, this pin is selected for channel conversion. The full-scale factor is corrected using the conversion results. The voltage at this pin must be set to (GND + 2 V) to ($Vcc - 2$ V) and 5.25 V or less.		
6	Reference		Pin for external reference resistance for setting the discharge current.		
	resistance pin		The external resistance is connected between the power source pin (Vcc) and the reference resistance pin (Rref). The discharge current is then, $I_R = (V_{CC} - V_{REF})/R_{REF}$.		
14	Power supply	Vcc	Power supply pin		
5	Ground	GND	Ground pin This pin is grounded. When the channel selection input is set to 000, this terminal is selected for channel conversion. The zero offset is corrected using the conversion results.		

■ BLOCK DIAGRAM

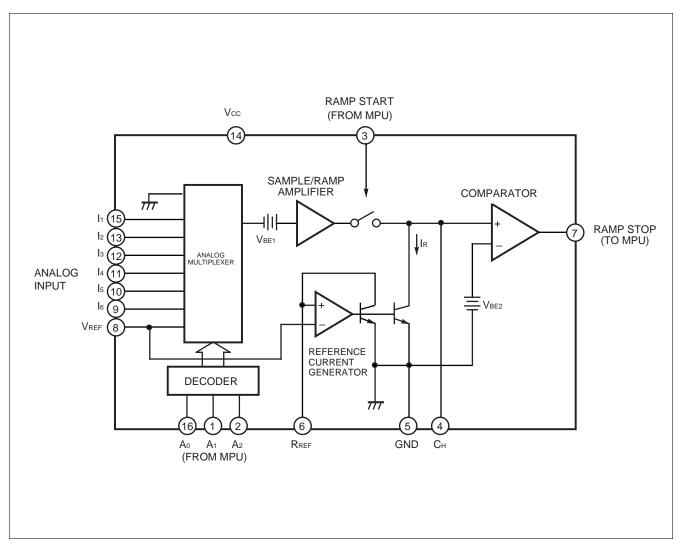

■ ABSOLUTE MAXIMUM RATINGS

Parameter	Symbol	Rat	Unit		
Farameter	Symbol	Min.	Max.	Ollit	
Power supply voltage	Vcc	_	18	V	
Digital input voltage	VIND	-0.5	+30	V	
Digital output voltage when off	Vон	-0.5	+18	V	
Analog input voltage	VINA	-0.5	+30	V	
Output current	lo	_	10	mA	
Storage temperature	Ceramic	Tota	– 55	+150	°C
Storage temperature	Plastic	Tstg	- 55	+125	°C

WARNING: Semiconductor devices can be permanently damaged by application of stress (voltage, current, temperature, etc.) in excess of absolute maximum ratings. Do not exceed these ratings.

■ RECOMMENDED OPERATING CONDITIONS

Parameter	Symbol	Value				
rarameter	Symbol	Min.	Min. Typ.		- Unit	
Power supply voltage	Vcc	4.75	5.0	15	V	
Reference voltage*	VREF	2.0	_	5.25	V	
Ramp capacity	Сн	300	_	_	pF	
Reference current	l _R	12	_	50	μΑ	
Analog input voltage	VIA	0	_	VREF	V	
Output current	lo	_	_	1.6	mA	
Operating temperature	Та	-40	_	+85	°C	

^{*:} $2 V \le V_{REF} \le V_{CC} - 2 V$

WARNING: Recommended operating conditions are normal operating ranges for the semiconductor device. All the device's electrical characteristics are warranted when operated within these ranges.

Always use semiconductor devices within the recommended operating conditions. Operation outside these ranges may adversely affect reliability and could result in device failure.

No warranty is made with respect to uses, operating conditions, or combinations not represented on the data sheet. Users considering application outside the listed conditions are advised to contact their FUJITSU representative beforehand.

■ ELECTRICAL CHARACTERISTIC

 $(Vcc = 4.75 V to 15 V, Ta = -40^{\circ}C to +85^{\circ}C)$

Parameter	Symbol	Value			Unit	Remarks	
r ai ainetei	Syllibol	Min.	Тур.	Max.	Onit	Remarks	
Conversion error	EA	_	±0.2	±0.3	%	*1	
Linearity error	ER	_	±0.08	±0.2	%	*2	
Analog input current	Ів	_	-50	-250	nA		
Crosstalk between any two channels	Vcr	60	_		dB	*3	
Multiplexer input offset voltage	Vosm	_	2.0	4.0	mV		
Conversion time	tc	_	296	350	μs/ch	See "■MEASURMENT CIRCUIT" Analog input: 0 thru V _{REF} C _H = 3300 pF, I _R = 50 μA	
Acquisition time	t A	_	20	40	μs	See "■MEASURMENT CIRCUIT" CH = 1000 pF*4	
Acquisition current	lΑ	150	_		μΑ		
Ramp start delay time	to	_	100	_	ns		
Multiplexer address time	tм	_	1	_	μs		
Digital high level input voltage	Vıн	2.0	_	_	V		
Digital low level input voltage	VIL	_	_	0.8	V		
Digital low level input current	lıL	_	-5	-15	μΑ	VIL = 0.4 V	
Digital high level input current	Іін	_	_	1	μΑ	V _{IH} = 5.5 V	
High level output current	Іон	_	_	10	μΑ	Vон = 15 V	
Low level output voltage	Vol	_	_	0.4	V	IoL = 1.6 mA	
Power supply current	Icc		5	10	mA		


A minus sign (-) prefixing a current value indicates that the current flows from the IC to the external circuit.


^{*1:} Conversion error: For all channels, deviation from a straight line between two points obtained by channel addresses 000 (0 scale) and 111 (full scale).

^{*2:} Linearity error; Deviation from a straight line between the 0 and full scale points for each channel.


^{*3:} Crosstalk between channels: Voltage change V_{CH} of C_H terminal occurring when an input voltage of a channel is changed by ΔV_1 while another channel is already charged (RAMP START = 0). This calculated by $20\log\frac{\Delta V_{CH}}{\Delta V_1}$

^{*4:} Acquisition time: Sum of multiplexer delay time, RAMP START delay time, and time required to charge the selected input voltage to the ramp capacitor.

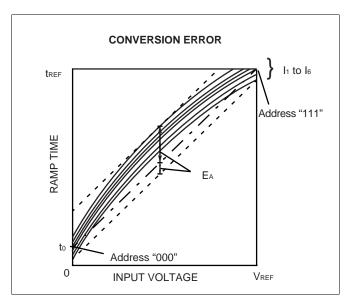


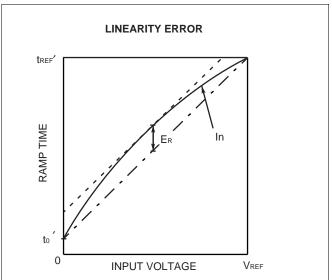

■ MEASURMENT CIRCUIT

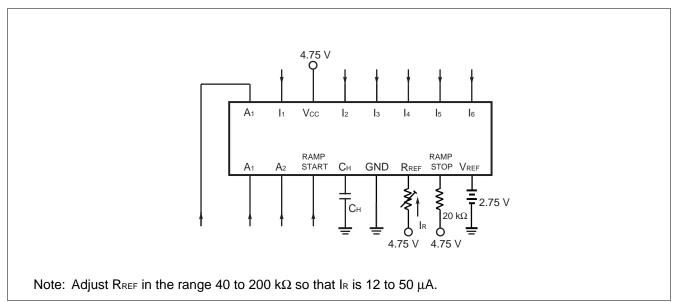


■ DIAGRAM

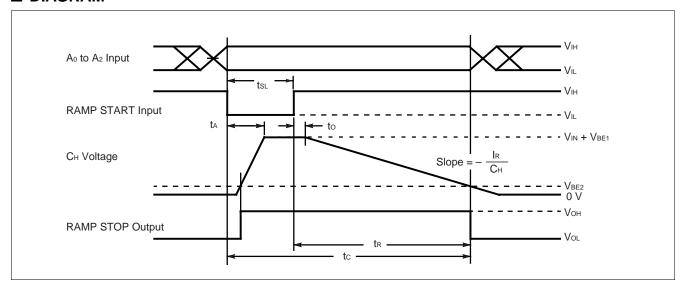

■ CHANNEL SELECTION

Input address line			Selected analog input	
A ₂	A 1	Ao	Selected analog input	
0	0	0	GND	
0	0	1	I 1	
0	1	0	l ₂	
0	1	1	l ₃	
1	0	0	l 4	
1	0	1	l 5	
1	1	0	l 6	
1	1	1	V_REF	

■ TYPICAL CHARACTERISTICS

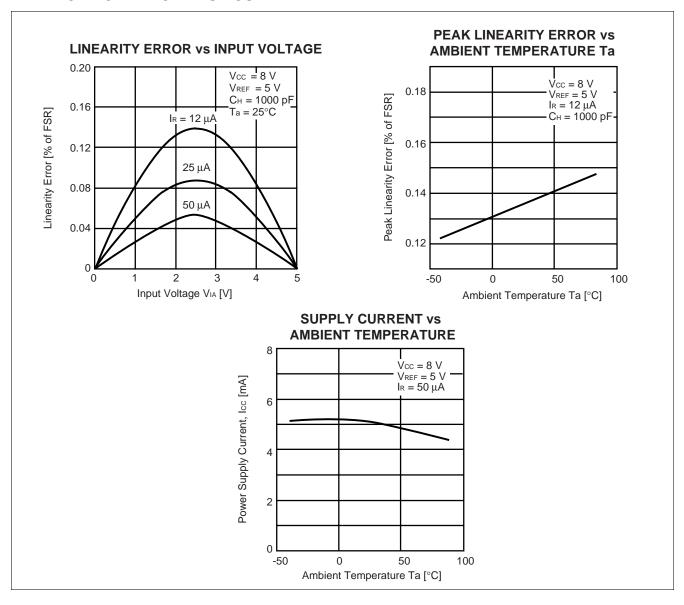

■ OPERATION DESCRIPTION

Refer to BLOCK DIAGRAM, and DIAGRAM. Address inputs A₀ to A₂ are used to select the analog input to be converted, (one of the six analog inputs I₁ to I₆). The RAMP START input is switched from a logic 1 to a logic zero. This causes the external ramp capacitor C_H to charge at a fixed rate. (Note 1) until it reaches the sum of the selected analog input voltage and a constant offset voltage V_{BE1}. The RAMP STOP output (open-collector switches from a logic 0 to logic 1 when the voltage on C_H reaches the comparator reference voltage V_{BE2}. The RAMP START input is switched back to a logic 1 after C_H is completely charged. This disconnects the analog input from C_H and allows it to be gin discharging at a fixed rate (Note 2). When the voltage on C_H reaches the comparator reference voltage V_{BE2} the RAMP STOP output switches back to a logic 0. This completes a conversion cycle for 1 channel.

The time between the RAMP START input switching $(0\rightarrow1)$ and RAMP STOP output switching $(1\rightarrow0)$ is the RAMP TIME tr. This would be directly proportional to the analog input voltage for the ideal situation where there was no comparator switching level error, leakage, switching delay times or effect of the impedance of the internal reference current source. tr can be calculated for the ideal case as follows:

$$t_R = V_{IN} \times \frac{C_H}{I_R}$$

Where: VIN = Analog input voltage to be measured

Cн = External ramp capacitor

$$I_{R} = \frac{V_{CC} - V_{REF}}{R_{REF}}$$

This ramp time is converted to a digital representation by counting to with the microprocessor. If a small error can be tolerated, the A/D conversion software can be reduced and the conversion time minimized by omitting corrections.

Notes:

*1 Charge slope =
$$\frac{I_A - I_R}{C_H} \ge \frac{150 \mu A - I_R}{C_H}$$

Where: IA is the acquisition current whose value is determined from the circuit constant in the IC.


*2 Discharge slope =
$$-\frac{I_R}{C_H}$$

■ ZERO OFFSET AND FULL-SCALE FACTOR CORRECTIONS

High precision conversions can be achieved by correcting for zero offset and full scale factor as follows:

The channel select address (A_0 to A_2) is set to 000. Ground (GND) is selected (internally) as the analog input and converted. This results in ramp time t_R . Next the address is set to 111. V_{REF} is selected (internally) and converted. This results in ramp time, t_{REF} . Finally the desired analog input (one of I_1 to I_6) is selected and converted. This results in ramp time t_R . This conversion sequence is arbitrary and the GND and V_{REF} conversions are not needed each time a channel is converted but only as required for calibration. The relationships between the inputs and ramp times are shown below.

$$\begin{aligned} &(\mathsf{VBE1})\mathsf{C} = \mathsf{tz} \\ &(\mathsf{VREF} + \mathsf{VBE1})\mathsf{C} = \mathsf{tREF} \\ &(\mathsf{VIN} + \mathsf{VBE1})\mathsf{C} = \mathsf{tx} \\ &(\mathsf{VREF})\mathsf{C} = \mathsf{tREF} - \mathsf{tz} \\ &(\mathsf{VIN})\mathsf{C} = \mathsf{tx} - \mathsf{tz} \\ &\frac{(\mathsf{VIN})\mathsf{C}}{(\mathsf{VREF})\mathsf{C}} = \frac{\mathsf{tx} - \mathsf{tz}}{\mathsf{tREF} - \mathsf{tz}} \end{aligned}$$

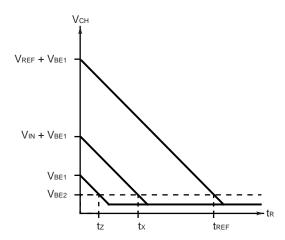

The conversion error can then be minimized by using the above results in the expression below to calculate the corrected analog input voltage.

$$(V_{IN})_C = (V_{REF})_C \times \frac{t_X - t_Z}{t_{REF} - t_Z}$$

Where: V_{IN} = Analog input voltage to be measured

V_{REF} = Reference voltage

V_{BE1} = Shift voltage in sample/ramp amplifer


 V_{BE2} = Threshold voltage of comparator

Vcн = Cн voltage

The GND and VREF conversion sequence is arbitary, the GND and VREF conversions not being needed each time a channel (I₁ to I₆) is converted.

■ APPLICATION EXAMPLES

Examples of analog voltage (0 to 5 V) A/D conversion with 10-bit resolution are shown in "PEAK LINEARITY ERROR vs AMBIENT TEMPERATURE Ta" and "SUPPLY CURRENT vs AMBIENT TEMPERATURE".

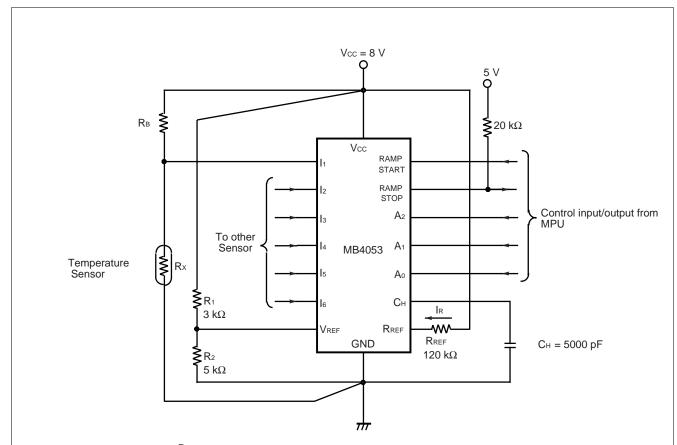

Reference Voltage:
$$V_{REF} = \frac{R_2}{R_1 + R_2} \ Vcc \dots 7-1$$

$$Ramp \ Current: I_R = \frac{R_1}{R_1 + R_2} \cdot \frac{1}{R_{REF}} \ Vcc \ \dots \ 7-2$$

Ramp Time:
$$t_R = V_{IN} \cdot \frac{C_H}{I_R}$$

$$= \frac{R_X}{R_X + R_B} \cdot (1 + \frac{R_2}{R_1}) \cdot C_H \cdot R_{REF} \dots 7-4$$

$$V_{REF} = \frac{5 \text{ k}\Omega}{3 \text{ k}\Omega + 5 \text{ k}\Omega} \times 8 \text{ V} = 5 \text{ V}$$

$$\begin{array}{lll} I_{R} = & \frac{V_{CC} - V_{REF}}{R_{REF}} & = & \frac{8 \ V - 5 \ V}{120 \ k\Omega} & = 25 \ \mu A \\ \\ t_{SL} \geq & \frac{C_{H} \times V_{REF}}{I_{A(min)} - I_{R}} & = & \frac{5000 \ pF \times (5 \ V + 0.7 \ V)}{150 \ \mu A - 25 \ \mu A} = 228 \ \mu S \\ \\ t_{Rmax} \coloneqq & \frac{C_{H} \times V_{REF}}{I_{R}} & = & \frac{5000 \ pF \times 5 \ V}{I_{R}} & = 1000 \ \mu S \end{array}$$

25 μΑ

If the ramp time is counted with a 1 MHz clock, the following resolution is obtained.

$$\frac{1000 \, \mu s}{1 \, \mu s} = 1000 = 2^{10}$$

As shown in this example, the voltage output of the sensor is proportional to Vcc (Eq. 7-3) and VREF is also proportional to Vcc (Eq. 7-1), the sensor output conversion results (Eq. 7-4) are not influenced by power supply voltage fluctuation. Such a conversion is called ratio metric conversion and is effective for minimizing the effects of conversion error. Supply voltage fluctuations during discharge do result in error, however.

■ USAGE PRECAUTIONS

- 1. Shince the impedance of the ramp capacitor pin is approximately 30 M Ω (high), a resistance must not be connected in paralleled with this input. A ramp capacitor with no leakage must be used.
- 2. At $V_{IN} = 0$ V, t_R has a finite value.
- 3. Since RAMP STOP is an open collector output, an external pull-up resistor is required. (For example, when a 20 k Ω external pull-up resistor is used.)
- 4. All digital inputs/output are TTL compatible.
- 5. The time from RAMP START input switching $(0 \rightarrow 1)$ to RAMP STOP output switching $(1 \rightarrow 0)$ is ramp time tr.

6.
$$t_{SL} \ge t_A \text{ (max)} = \frac{C_H}{150 \ \mu A - 1_R} \times \text{(V_{REF} + 0.7 V)}$$

7.
$$t_R = \frac{C_H}{I_R} \times V_{IN}, t_R \text{ (max)} = \frac{C_H}{I_R} \times V_{REF}$$


8.
$$I_R = \frac{V_{CC} - V_{REF}}{R_{REF}}$$

- 9. $2 \text{ V} \leq \text{VREF} \leq (\text{Vcc} 2 \text{ V})$ and $\text{VREF} \leq 5.25 \text{ V}$
- 10. While and analog input voltage is being sampled, channel selection signals A₀, A₁, and A₂ must not be changed for (t_{SL}).
- 11. When I_R is little, Linearity Error extends. However, Linearity Error is ±0.2 [% of FSR] or less in I_R (min) = 12 μA.

■ ORDERING INFORMATION


Part number	Package	Remarks
MB4053M	16-pin Plastic DIP (DIP-16P-M04)	
MB4053PF	16-pin Plastic SOP (FPT-16P-M06)	

■ PACKAGE DIMENSIONS

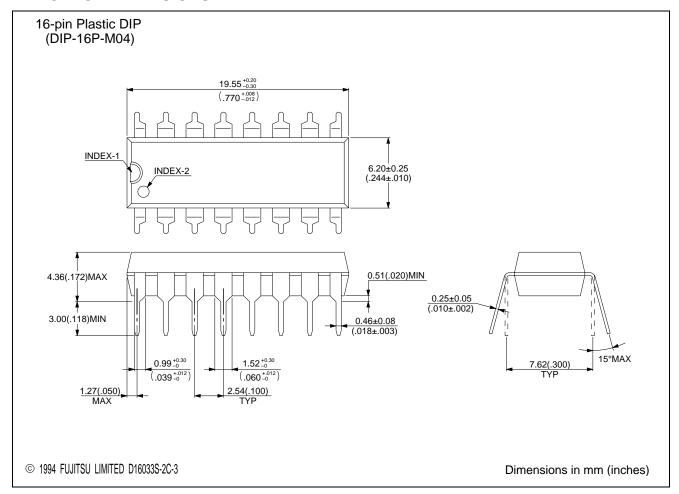

(Continued)

(Continued)

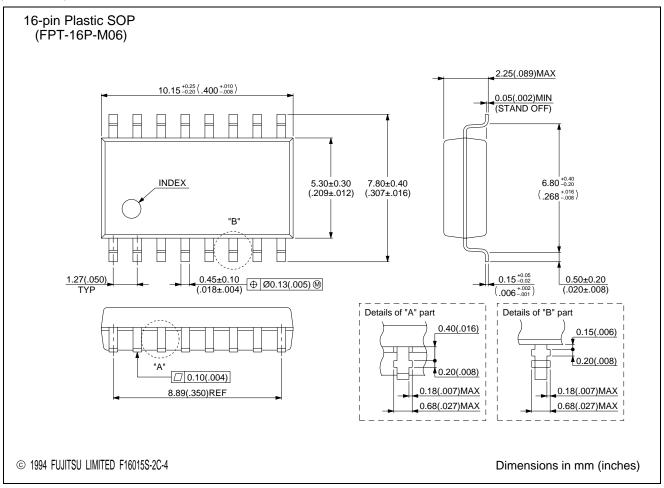

FUJITSU LIMITED

For further information please contact:

Japan

FUJITSU LIMITED

Corporate Global Business Support Division

Electronic Devices

KAWASAKI PLANT, 4-1-1, Kamikodanaka

Nakahara-ku, Kawasaki-shi Kanagawa 211-8588, Japan

Tel: (044) 754-3763 Fax: (044) 754-3329

http://www.fujitsu.co.jp/

North and South America

FUJITSU MICROELECTRONICS, INC.

Semiconductor Division 3545 North First Street

San Jose, CA 95134-1804, USA

Tel: (408) 922-9000 Fax: (408) 922-9179

Customer Response Center Mon. - Fri.: 7 am - 5 pm (PST)

Tel: (800) 866-8608 Fax: (408) 922-9179

http://www.fujitsumicro.com/

Europe

FUJITSU MIKROELEKTRONIK GmbH Am Siebenstein 6-10 D-63303 Dreieich-Buchschlag Germany

Tel: (06103) 690-0 Fax: (06103) 690-122

http://www.fujitsu-ede.com/

Asia Pacific

FUJITSU MICROELECTRONICS ASIA PTE LTD #05-08, 151 Lorong Chuan New Tech Park

Singapore 556741 Tel: (65) 281-0770 Fax: (65) 281-0220

http://www.fmap.com.sg/

F9803

© FUJITSU LIMITED Printed in Japan

All Rights Reserved.

The contents of this document are subject to change without notice. Customers are advised to consult with FUJITSU sales representatives before ordering.

The information and circuit diagrams in this document presented as examples of semiconductor device applications, and are not intended to be incorporated in devices for actual use. Also, FUJITSU is unable to assume responsibility for infringement of any patent rights or other rights of third parties arising from the use of this information or circuit diagrams.

FUJITSU semiconductor devices are intended for use in standard applications (computers, office automation and other office equipment, industrial, communications, and measurement equipment, personal or household devices, etc.).

CAUTION:

Customers considering the use of our products in special applications where failure or abnormal operation may directly affect human lives or cause physical injury or property damage, or where extremely high levels of reliability are demanded (such as aerospace systems, atomic energy controls, sea floor repeaters, vehicle operating controls, medical devices for life support, etc.) are requested to consult with FUJITSU sales representatives before such use. The company will not be responsible for damages arising from such use without prior approval.

Any semiconductor devices have inherently a certain rate of failure. You must protect against injury, damage or loss from such failures by incorporating safety design measures into your facility and equipment such as redundancy, fire protection, and prevention of over-current levels and other abnormal operating conditions.

If any products described in this document represent goods or technologies subject to certain restrictions on export under the Foreign Exchange and Foreign Trade Control Law of Japan, the prior authorization by Japanese government should be required for export of those products from Japan.