

7633/R7633 STORAGE OSCILLOSCOPE

WITH OPTIONS

SERVICE

INSTRUCTION MANUAL

Tektronix, Inc. P.O. Box 500 Beaverton, Oregon 97005

Serial Number

First Printing MAR 1974 070-1767-00

WARRANTY All TEKTRONIX instruments are warranted against defective materials and workmanship for one year. Any questions with respect to the warranty should be taken up with your TEKTRONIX Field Engineer or representative. All requests for repairs and replacement parts should be directed to the TEKTRONIX Field Office or representative in your area. This will assure you the fastest possible service. Please include the instrument Type Number or Part Number and Serial Number with all requests for parts or service. Specifications and price change privileges reserved. Copyright © 1974 by Tektronix, Inc., Beaverton, Oregon. Printed in the United States of America. All rights reserved. Contents of this publication may not be reproduced in any form without permission of Tektronix, Inc. U.S.A. and foreign TEKTRONIX products covered by U.S. and foreign patents and/or patents pending. TEKTRONIX is a registered trademark of Tektronix, Inc.

TABLE OF CONTENTS

		PAGE
LIST OF ILLUST	RATIONS	vi
LIST OF TABLE	S	ix
SECTION 1	OPERATING INFORMATION	
PREL	IMINARY OPERATION	1-1
	AC POWER SOURCES	1-1
	AC POWER CORD	1-1
	OPERATING VOLTAGE	1-1
	OPERATING TEMPERATURE	1-3
	RACKMOUNTING	1-3
PLUG	G-IN UNITS	1-4
	PLUG-IN INSTALLATION AND REMOVAL	1-4
CON	TROLS AND CONNECTORS	1-5
	FRONT PANEL CONTROLS AND CONNECTORS	1-6
	REAR PANEL CONTROLS AND CONNECTORS	1-8
GENERAL OPERATING INFORMATION		1-10
	INTENSITY CONTROL	1-10
	DISPLAY FOCUS	1-11
	GRATICULE	1-11
	LIGHT FILTER	1-12
	BEAMFINDER	1-12
	REDUCED SCAN MODE	1-12
	READOUT MODES	1-13
	DISPLAY PHOTOGRAPHY	1-13
	STORAGE	1-14
	CARE OF STORAGE SCREEN	1-15
	VERTICAL MODE	1-16
	TRIGGER SOURCE	1-17
	X-Y OPERATION	1-18
	INTENSITY MODULATION	1-18
	RASTER DISPLAY	1-19
	CALIBRATOR	1-19
	SIGNALS OUT	1-20
	APPLICATIONS	1-21
SECTION 2	SPECIFICATIONS	
INTF	RODUCTION	2-1
STA	NDARD ACCESSORIES	2-9

i

		PAGE
SECTION 3 TH	HEORY OF OPERATION	
LOGIC	FUNDAMENTALS	3-1
	SYMBOLS	3-2
	LOGIC POLARITY	3-5
	INPUT/OUTPUT TABLES	3-5
	NON DIGITAL DEVICES	3-5
BLOCK	DIAGRAM	3-5
THEOR	Y OF OPERATION	3-9
MAINI	NTERFACE 1	3-9
LOGIC	CIRCUIT (2)	3-9
	Z-AXIS LOGIC	3-9
	CLOCK GENERATOR	3-11
	VERTICAL CHOPPED BLANKING	3-12
	CHOP COUNTER	3-15
	VERTICAL MODE CONTROL	3-17
	VERTICAL BINARY	3-18
	PLUG-IN BINARY	3-20
	OUTPUT BUFFERS	3-21
TRIGGI	ER SELECTOR 3	3-21
	TRIGGER MODE AND ADD SIGNALS	3-21
	TRIGGER CHANNEL SWITCH	3-23
	TRIGGER OUTPUT AMPLIFIER	3-24
	VERTICAL SIGNAL BUFFER	3-25
VERTIC	CAL INTERFACE 4	3-25
	VERTICAL CHANNEL SWITCH	3-25
	AUXILIARY Y-AXIS INPUT AMPLIFIER	3-26
	DELAY-LINE BUFFER	3-26
	DELAY LINE	3-27
VERTIC	CAL AMPLIFIER 4	3-27
	CENTERING AND READOUT AMPLIFIER	3-27
	INPUT AMPLIFIER	3-28
	BEAMFINDER NETWORK	3-28
	OUTPUT AMPLIFIER	3-28
HORIZO	ONTAL AMPLIFIER 5	3-29
	HORIZONTAL CHANNEL SWITCH	3-29
	RIGHT OUTPUT AMPLIFIER	3-30
	LEFT OUTPUT AMPLIFIER	3-30

ii

	PAGE
SIGNALS OUT BOARD 6	3-31
VERT SIG OUT	3-31
+ GATE OUT	3-31
+ SAWTOOTH OUT	3-31
CRT CIRCUIT (7)	3-31
HIGH VOLTAGE REGULATION	3-31
AUTO FOCUS DC RESTORER	3-33
AUTO FOCUS	3-34
CONTROL GRID DC RESTORER	3-34
Z-AXIS AMPLIFIER	3-34
CRT CONTROL CIRCUITS	3-35
LOW-VOLTAGE POWER SUPPLY (8)	3-35
POWER INPUT	3-35
-50-VOLT SUPPLY	3-38
-15-VOLT SUPPLY	3-40
+5-VOLT SUPPLY	3-40
+15-VOLT SUPPLY	3-40
+50-VOLT SUPPLY	3-40
+130-VOLT SUPPLY	3-40
GRATICULE LIGHT SUPPLY	3-41
CALIBRATOR AND FRONT PANEL (10)	3-41
CALIBRATOR	3-42
READOUT SYSTEM (9)	3-43
INTRODUCTION	3-43
THREE-COMPARTMENT MAINFRAMES	3-43
DISPLAY FORMAT	3-44
DEVELOPING THE DISPLAY	3-44
TIMER	3-51
TIME-SLOT COUNTER	3-53
WORD TRIGGER	3-54
CHANNEL COUNTER	3-54
READOUT CONTROL	3-54
SINGLE-SHOT LOCKOUT	3-55
ENCODING THE DATA	3-56
COLUMN AND ROW DATA SWITCHES	3-59
DISPLAY-SKIP GENERATOR	3-60
COLUMN AND ROW DECODERS	3-60

(A)

	PAGE
ZEROS LOGIC AND MEMORY	3-61
CHARACTER GENERATORS	3-64
DECIMAL POINT LOGIC AND CHARACTER	POSITION COUNTER 3-64
FORMAT GENERATOR	3-65
Y-OUTPUT AMPLIFIER	3-67
X-OUTPUT AMPLIFIER	3-67
DISPLAY SEQUENCE	3-67
STORAGE SYSTEM (10)	3-68
LOGIC	3-68
OPERATIONAL AMPLIFIERS	3-73
SECTION 4 MAINTENANCE	
PRELIMINARY INFORMATION	4-1
PANEL REMOVAL	4-1
POWER UNIT REMOVAL	4-2
PREVENTIVE MAINTENANCE	4-3
CLEANING	4-3
LUBRICATION	4-4
VISUAL INSPECTION	4-5
SEMICONDUCTOR CHECKS	4-5
RECALIBRATION	4-5
TROUBLESHOOTING	4-5
TROUBLESHOOTING AIDS	4-5
TROUBLESHOOTING EQUIPMENT	4-8
TROUBLESHOOTING TECHNIQUES	4-8
CORRECTIVE MAINTENANCE	4-13
OBTAINING REPLACEMENT PARTS	4-13
SOLDERING TECHNIQUES	4-13
COMPONENT REPLACEMENT	4-13
SEMICONDUCTOR REPLACEMENT	4-18
CATHODE-RAY TUBE REPLACEMENT	4-20
SWITCH REPLACEMENT	4-21
GRATICULE-BULB REPLACEMENT	4-22
POWER TRANSFORMER REPLACEMENT	4-22
HIGH VOLTAGE COMPARTMENT	4-22
FUSE REPLACEMENT	4-23
RECALIBRATION AFTER REPAIR	4-23
INSTRUMENT REPACKAGING	4-23

iv

		PAGE
SECTION 5	PERFORMANCE CHECK/CALIBRATION	
PR	ELIMINARY INFORMATION	5-1
	CALIBRATION INTERVAL	5-1
	TEKTRONIX FIELD SERVICE	5-1
	USING THIS PROCEDURE	5-1
TE	ST EQUIPMENT REQUIRED	5-1
	SPECIAL CALIBRATION FIXTURES	5-2
	CALIBRATION EQUIPMENT ALTERNATIVES	5-2
	SIGNAL CONNECTIONS	5-2
	WARM-UP AND TEMPERATURE REQUIREMENTS	5-2
PA	RT I-PERFORMANCE CHECK	5-6
	INTRODUCTION	5-6
	OUTLINE FOR PART I—PERFORMANCE CHECK	5-6
PA	ART II-CALIBRATION	5-28
	INTRODUCTION	5-28
	OUTLINE FOR PART II—CALIBRATION	5-28
SECTION 6	OPTIONS	
SECTION 7	ELECTRICAL PARTS LIST	
SECTION 8	DIAGRAMS	
SECTION 9	MECHANICAL PARTS LIST	
CHANGE INF	ORMATION	

LIST OF ILLUSTRATIONS

		PAGE
Frontispiece		
Figure 1-1. Location of voltage-selector jumper.		1-2
Figure 1-2. Front panel controls and connectors.		1-5
Figure 1-3. Rear panel controls and connectors.		1-10
Figure 1-4. Definition of measurement lines on the graticule.		1-11
Figure 1-5. Location of Readout Mode switch.		1-13
Figure 1-6. Location of Calibrator jumper on Storage circuit board.		1-20
Figure 3-1. Block diagram 7633.		3-6
Figure 3-2. Logic circuit block diagram.		3-8
Figure 3-3. Z-Axis logic block diagram.		3-10
Figure 3-4. (A) Clock Generator stage of U55A. (B) Idealized wavefor Generator stage.	rms from Clock	3-11
Figure 3-5. (A) Input and output pins for Vertical Chopped Blanking swaveforms for Vertical Chopped Blanking stage.	stage. (B) Idealized	3-13
Figure 3-6. (A) Logic diagram for Vertical Chopped Blanking stage. (I combinations for Vertical Chopped Blanking stage.	3) Table of input/output	3-16
Figure 3-7. Detailed logic diagram of Chop Counter stage.		3-17
Figure 3-8. Idealized input and output waveforms for Chop Counter st	tage	3-17
Figure 3-9. Logic diagram of Vertical Mode Control and Vertical Mode stages.	Buffer Amplifier	3-19
Figure 3-10. Logic diagram of Vertical Binary stage.		3-19
Figure 3-11. Idealized waveforms showing relationship between input for Vertical Binary and Plug-In Binary stages when operations are considered in the control of the cont		3-20
Figure 3-12. Logic diagram of Plug-In Binary and Plug-In Alternate Bu	ffer stage.	3-21
Figure 3-13. Detailed block diagram of Trigger Selector circuit along wo of trigger source selection circuitry.	vith simplified diagram	3-22
Figure 3-14. Input levels at pin 4 of U324.		3-23
Figure 3-15. Input/output table for Trigger Channel Switch stage.		3-24
Figure 3-16. Vertical Interface detailed block diagram.		3-25
Figure 3-17. Input/output table for Vertical Channel Switch.		3-26
Figure 3-18. Vertical Amplifier detailed block diagram.		3-27
Figure 3-19. Horizontal Amplifier detailed block diagram.		3-29
Figure 3-20. CRT circuit detailed block diagram.		3-32
Figure 3-21. Low-Voltage Power Supply detailed block diagram.		3-36
Figure 3-22. Schematic illustrating voltage drop between power supply to resistance of interconnecting wire.	output and load due	3-39
Figure 3-23. Calibrator detailed block diagram.		3-41
Figure 3-24. Location of readout words on the crt identifying the orig	inating plug-in unit	3-44

vi

LIST OF ILLUSTRATIONS (cont.)

	PAGE
Figure 3-25. Character Selection Matrix for 7633 Readout System.	3-46
Figure 3-26. Typical readout display where only channel 2 of the Right Vertical and Horizontal units is displayed.	3-47
Figure 3-27. Detailed block diagram of the Readout System.	3-48
Figure 3-28. Output waveforms of Timer stage.	3-50
Figure 3-29. Detail of output at pins 12, 13, 14, and 16 of U2126.	3-51
Figure 3-30. Timer stage operation when Display-Skip condition occurs.	3-52
Figure 3-31. Time relationship of the time-slot (TS) pulses produced by U2159.	3-53
Figure 3-32. Typical encoding scheme for voltage-sensing amplifier plug-in unit. Coding shown for deflection factor of 100 microvolts.	3-57
Figure 3-33. Idealized current waveforms of: (A) Row analog data, (B) Column analog data	a. 3-58
Figure 3-34. Block representation of memory sequence in U2232.	3-61
Figure 3-35. Typical output waveforms for Zeros Logic and Memory stage operation (at pir 7 of U2232).	n 3-62
Figure 3-36. Readout word relating 10 possible character locations to the decimal point instructions that can be encoded, and the resultant crt display.	3-65
Figure 3-37. Flow chart for character generation by the Readout System.	3-66
Figure 3-38. Storage circuit simplified block diagram.	3-68
Figure 3-39. Time relationship of Storage logic pulses.	3-69
Figure 3-40. BISTABLE mode Storage waveforms.	3-70
Figure 3-41. VAR PERSIST mode Storage waveforms.	3-71
Figure 3-42. FAST BISTABLE mode Storage waveforms.	3-72
Figure 3-43. FAST VAR PERSIST mode Storage waveforms.	3-74
Figure 4-1. Power Unit removal.	4-2
Figure 4-2. Location of circuit boards in the 7633.	4-6
Figure 4-3. Location of circuit boards in the R7633.	4-7
Figure 4-4. Circuit isolation troubleshooting chart.	4-10
Figure 4-5. Location of screws holding Low Voltage sub-chassis.	4-17
Figure 4-6. Location of screws holding Signals Out rear panel.	4-18
Figure 5-1. Typical crt display when checking X-Y phase shift.	5-15
Figure 5-2. Location of Calibrator AC/DC jumper.	5-17
Figure 5-3. Location of High-Voltage Test Point.	5-32
Figure 5-4. Location of adjustments in High-Voltage cover.	5-34
Figure 5-5. Typical display showing front corner of waveform for Horizontal system high-frequency compensation adjustment.	5-46
Figure 5-6. Typical crt display when checking X-Y phase shift.	5-47
Figure 5-7. Location of Calibrator AC/DC jumper.	5-50
Figure 5-8. Idealized Erase waveform.	5-57

⊗ vii

LIST OF ILLUSTRATIONS (cont.)

PAGE

5-58 5-61 5-63

Figure 5-9. Idealized Erase and Transfer waveform.
Figure 5-10. VAR PERSIST Front Mesh ramp.
Figure 5-11. PERSISTENCE pulses.
Section 8 figures are located near their associated diagrams on the foldout pages.
occion o figures are located fiear their associated diagrams on the follout pages.
Figure 8-1. Semiconductor lead configurations.
Figure 8-2. A1-Main Interface Board.
Figure 8-3. A2-Logic Board.
Figure 8-4. A3-Trigger Selector Board.
Figure 8-5. A4-Vertical Interface Board.
Figure 8-6. A5-Vertical Amplifier Board (front).
Figure 8-7. A5-Vertical Amplifier Board (rear).
Figure 8-8. A6-Horizontal Amplifier Board.
Figure 8-9. A7-Output Signals Board.
Figure 8-10. A8-Z-Axis Board.
Figure 8-11. A9-Anode Board.
Figure 8-12. A10-High-Voltage Board.
Figure 8-13. All-Low-Voltage Rectifier Board.
Figure 8-14. A12-Low-Voltage Regulator Board.
Figure 8-15. A13-Readout Board.
Figure 8-16. A14-Storage Board.
Figure 8-17. Adjustment locations-Z-Axis Board.
Figure 8-18. Adjustment locations-High-Voltage Board.
Figure 8-19. Adjustment locations-Vertical Amplifier Board.
Figure 8-20. Adjustment locations-Horizontal Amplifier Board.
Figure 8-21. Adjustment locations-Readout Board.
Figure 8-22. Adjustment locations-Signals Out Board.

Figure 8-23. Adjustment locations-Low-Voltage Regulator Board.


Figure 8-24. Adjustment locations-Storage Board.

viii


LIST OF TABLES

	PAGE
TABLE 1-1. Power Cord Color-Coding	1-1
TABLE 1-2. Regulating Range and Fuse Data	1-3
TABLE 2-1. ELECTRICAL	2-1
TABLE 2-2. ENVIRONMENTAL	2-8
TABLE 2-3. PHYSICAL	2-8
TABLE 2-4. 7633 SYSTEM SPECIFICATIONS	2-10
TABLE 3-1. Basic Logic Reference	3-2
TABLE 3-2. Standard Readout Format	3-45
TABLE 3-3. Channel Address Code	3-55
TABLE 4-1. Power Supply Tolerances	4-9
TABLE 4-2. Fuse Rating	4-23
TABLE 5-1. Test Equipment	5-3
TABLE 5-2. Power Supply Tolerances	5-32
TABLE 5-3. High-Frequency Compensation Adjustments	5-41

⊗
ix

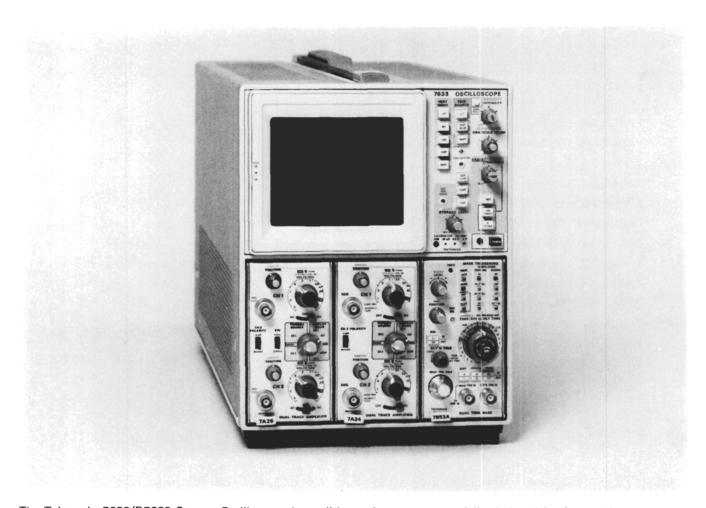

The Tektronix 7633/R7633 Storage Oscilloscope is a solid-state instrument especially designed for fast writing rate storage applications. The 7633 operates in three display modes—NON STORE, STORE, and SAVE, and four storage modes—BISTABLE, VAR PERSIST, FAST BISTABLE, and FAST VAR PERSIST. The display and storage functions can be operated in either a full scan or a Reduced Scan mode. In FAST VAR PERSIST, the Reduced Scan feature effectively increases the writing speed approximately seven times. The instrument accepts any Tektronix 7-Series plug-in units to form a highly flexible measurement system.

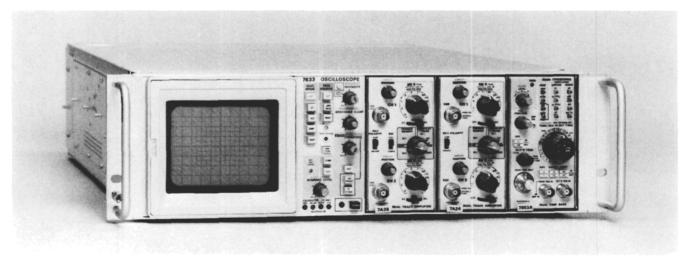

OPERATING INFORMATION

PRELIMINARY OPERATION

To effectively use the 7633/R7633 Storage Oscilloscope, the operation and capabilities of the instrument must be known. This section provides preliminary operating information, describes operation of controls and connectors, and provides general operating information.

AC POWER SOURCES

This instrument is intended to be operated from a single-phase, earth-referenced power source having one current-carrying conductor (the Neutral Conductor) near earth potential. Operation from power sources where both current-carrying conductors are live with respect to earth (such as phase-to-phase on a three-wire system) is not recommended since only the Line Conductor has over-current (fuse) protection within the instrument.

AC POWER CORD

This instrument has a three-wire power cord with a three-terminal polarized plug for connection to the power source and safety-earth. The safety-earth terminal of the plug is directly connected to the instrument frame. For electric-shock protection, insert this plug only in a mating outlet with a safety-earth contact or otherwise connect the frame to a safety earth system. The color-coding of the cord conductors is in accordance with recognized standards as shown in Table 1-1.

NOTE

The power cord on Tektronix instruments may conform to either of the following two electrical codes:

TABLE 1-1
Power Cord Color Coding

Conductor	USA (NEC) & Canada	IEC
Line	Black	Brown
Neutral	White	Light Blue*
Safety-Earth	Green with Yellow stripe	Green with Yellow stripe

^{*}Tinned copper conductor.

OPERATING VOLTAGE

The 7633/R7633 can be operated from either a 110-volt or a 220-volt nominal line-voltage source. In addition, three operating ranges can be selected within each nominal line voltage source. Use the following procedure to obtain correct instrument operation from the line voltage available:

- 1. Disconnect the instrument from the power source.
- 2. Remove the six screws securing the power unit (nine screws in the R7633; see Figure 1-1).
- 3. Slide the power unit out of the rear of the chassis.

REV. B, JULY, 1975

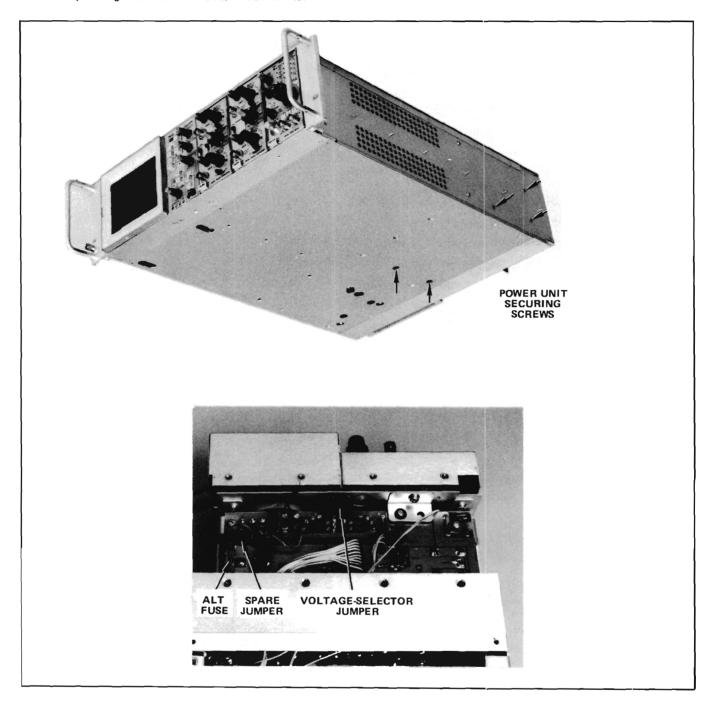


Figure 1-1. Location of voltage-selector jumper.

4. To convert from 110-volts to 220-volts nominal line voltage, or vice versa, remove the voltage-selector jumper and replace it with the spare jumper stored on the pins adjacent to the voltage selector area (see Figure 1-1). The jumpers are color coded to indicate the nominal voltage for which they are intended; brown for 110-volt nominal operation and red for 220-volt nominal operation. Change the fuse to provide protection for the selected nominal line voltage. Use the fuse located in the Alt Fuse holder on the Rectifier board (see Figure 1-1 for fuse location and Table 1-2 for fuse type). Also, change the line-cord plug to match the power-source receptacle or use a suitable adapter.

1-2

5. To convert the instrument from one regulating range to another, remove the voltage selector jumper and re-install it on the set of pins corresponding to the desired regulating range. The proper regulating range will center about the average line voltage to which the instrument is to be connected (see Table 1-2).

TABLE 1-2
Regulating Range and Fuse Data

Pins	Regulating Range	
Selected	110-volts (nominal)	220-volts (nominal)
LOW	90 to 110 volts	180 to 220 volts
MED	99 to 121 volts	198 to 242 volts
н	108 to 132 volts	218 to 262 volts
Line Fuse	3.2 A slow-blow	1.6 A slow-blow

OPERATING TEMPERATURE

The 7633 can be operated where the ambient air temperature is between 0° C and $+50^{\circ}$ C. This instrument can be stored in ambient temperatures between -55° C and $+75^{\circ}$ C. After storage at temperatures beyond the operating limits, allow the chassis temperature to come within the operating limits before power is applied.

The 7633 is cooled by air drawn in through the top, side, and bottom panels and exhausted through the rear panel. Components that require most cooling are mounted externally on a heat radiator. Adequate clearance must be provided on all sides to allow heat to be dissipated from the instrument. Do not block or restrict the air flow through the holes in the cabinet or the heat radiator. Maintain the clearance provided by the feet on the bottom and allow about two inches clearance on the top, sides, and rear (more if possible).

The R7633 is cooled by air drawn in through the air filter on the rear panel and exhausted through ports on the right side of the instrument. Adequate clearance must be provided at these locations. Allow at least one and one-half inches clearance behind the air filter and at least one inch on the right side.

A thermal cutout interrupts power to the instrument if the internal temperature exceeds a safe operating level. Power is automatically restored when the temperature returns to a safe level. Operation in confined areas or close to a heat source may cause the thermal cutout to open.

RACKMOUNTING

Instructions and dimensional drawings for rackmounting the R7633 are located in Section 3 of the Operators manual.

PLUG-IN UNITS

The 7633 will accept up to three 7-series plug-in units. This plug-in feature permits a variety of display combinations and also allows selection of bandwidth, sensitivity, display mode, etc. to meet many measurement requirements. In addition, it allows expansion of the oscilloscope system to meet future measurement requirements. The overall capabilities of the resultant system are in large part determined by the characteristics of the plug-in selected. For complete information on plug-ins available for use with this instrument, see the current Tektronix, Inc., catalog.

PLUG-IN INSTALLATION AND REMOVAL

To install a plug-in unit into one of the plug-in compartments, align the slots in the top and bottom of the plug-in with the associated guide rails in the plug-in compartment. Push the plug-in unit firmly into the plug-in compartment until it locks into place. To remove a plug-in, pull the release latch on the plug-in unit to disengage it and pull the unit out of the plug-in compartment. Plug-in units can be removed or installed without turning off the instrument power.

It is not necessary that all of the plug-in compartments be filled to operate the instrument; the only plug-in units needed are those required for the measurement to be made. However, at environmental extremes, excess radiation may be radiated into or out of this instrument through the open plug-in compartments. Blank plug-in panels are available from Tektronix, Inc., to cover the unused compartment; order Part No. 016-0155-00.

When the 7633 is calibrated in accordance with the calibration procedure given in the Service manual, the vertical and horizontal gains are standardized. This allows calibrated plug-in units to be changed from one plug-in compartment to another without recalibration. However, the basic calibration of the individual plug-in units should be checked when they are installed in this system to verify their measurement accuracy. See the plug-in unit instruction manual for verification procedure.

Special purpose plug-in units may have specific restrictions regarding the plug-in compartments in which they can be installed. This information will be given in the instruction manual for these plug-in units.

1-4

CONTROLS AND CONNECTORS

The major controls for operation of the 7633 are located on the front panel of the instrument. These are illustrated in Figure 1-2. Figure 1-3 shows the location of rear panel controls and connectors. The following is a brief description of the controls and connectors shown in Figures 1-2 and 1-3. More detailed operating information is given under General Operating Information.

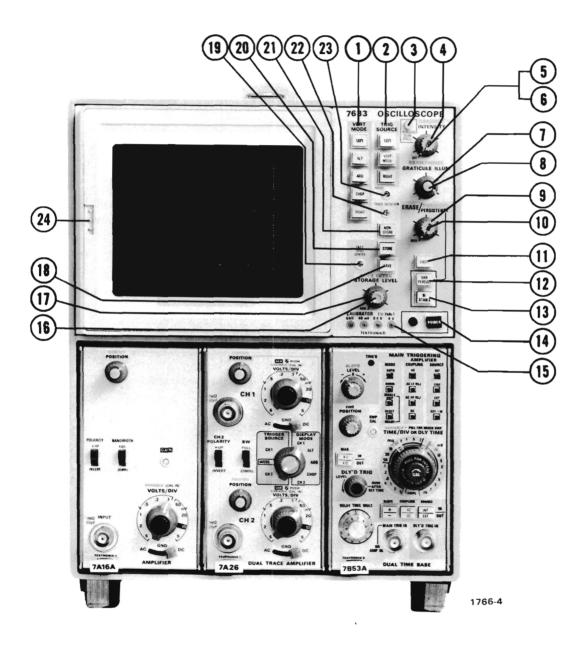


Figure 1-2. Front panel controls and connectors.

REV. B, DEC. 1974

Operating Information-7633/R7633 Service

FRONT PANEL CONTROLS AND CONNECTORS

The following descriptions are referenced to Figure 1-2.

(1) VERT MODE: Selects vertical mode operation.

LEFT: Selects signals from the left vertical amplifier compartment for display.

ALT: Selects signals from both vertical compartments for display on alternate

sweeps (dual trace).

ADD: Algebraically adds the signals from both vertical compartments and dis-

plays the sum.

CHOP: Selects signals from both vertical compartments for display (dual trace).

The display switches between both vertical compartment signals, during

the sweep, at a one megahertz rate.

RIGHT: Selects signals from the right vertical amplifier compartment for display.

(2) TRIG SOURCE: Selects the source of the internal trigger for the plug-in unit in the hori-

zontal compartment.

LEFT: Selects the left vertical compartment as the internal trigger source.

VERT MODE: Internal trigger signals are determined by the VERT MODE switch.

RIGHT: Selects the right vertical compartment as the internal trigger source.

- (3) REDUCED SCAN-Indicator light illuminates when in the Reduced Scan mode.
- (4) INTENSITY—Controls the brightness of the display.
- (5) REDUCED SCAN-Pull switch selects Reduces Scan operation; push for normal operation.
- 6 READOUT—Turns on the Readout system and controls the brightness of the Readout display. (Option 1 deletes this function.)
- BEAMFINDER—When pressed, this switch limits the display to within the graticule area.
- (8) GRATICULE ILLUM—Controls the illumination of the graticule.

FRONT PANEL CONTROLS AND CONNECTORS (cont.)

(9) ERASE-Initiates erase cycles; either MANual or PERIODIC.

MANual: When pressed, initiates an erase cycle to erase the stored display and

provide a single-shot reset command to the plug-in time-base unit.

Operation is locked out in SAVE display mode.

PERIODIC: Controls the time between automatic erase cycles. If the erase period

ends during a sweep, the erasure is delayed till the end of that sweep.

This control has a counterclockwise OFF detent position. Operation

is locked out in the SAVE display mode.

10 PERSISTENCE—Controls the view time of the VAR PERSIST and FAST VAR PERSIST stored displays. Operation is locked out in the SAVE display mode.

- [11] FAST—Used in conjunction with the VAR PERSIST and BISTABLE storage selections to choose the fast transfer storage modes of either FAST VAR PERSIST or FAST BISTABLE.
- (12) VAR PERSIST—Selects the Variable Persistence storage mode. The stored display is of variable intensity dependent upon the setting of the STORAGE LEVEL, density of charge deposited when storing, etc. The stored display can be erased at a controllable, continuous rate determined by the setting of the PERSISTENCE control. When not being erased, the view time is limited by the natural bright fading of the storage target.
- 13 BISTABLE—Selects the BISTABLE storage mode. The stored display is substantially of two fixed intensity levels; written (bright) and unwritten (background). An erase cycle returns the display to the unwritten state.
- POWER Switch and indicator. Switch applies power to the instrument and the indicator illuminates to indicate the power is on.
- (15) CALIBRATOR—Positive going square wave or dc voltage selected by an internal jumper. Output voltage at pin jacks (4 V, 0.4 V, and 4C mV).
- (16) STORAGE LEVEL—Controls the voltage level on the storage targets. Adjusts writing speed in FAST BISTABLE, VAR PERSIST, and FAST VAR PERSIST.
- (17) SAVE INTEN—Used in conjunction with SAVE to control the storage viewing intensity. At reduced intensity, the view time of the stored VAR PERSIST display is proportionately extended.
- (18) SAVE—Selects the SAVE display mode. The stored display is retained at a controllable SAVE INTENSITY and the erase functions are locked out. The time-base unit is inhibited except when the SAVE mode is entered from STORE before a sweep occurs. If this is done, the display will wait in the STORE mode and enter SAVE automatically at the end of the next

Operating Information-7633/R7633 Service

FRONT PANEL CONTROLS AND CONNECTORS (cont.)


occuring sweep. This is referred to as the 'babysitting' mode.


- 19 FAST LEVEL CENTER-Adjusts the voltage level of the FAST target relative to the viewing target and, therefore, the tracking of the STORAGE LEVEL for the two targets.
- 20 STORE—Selects the STORE display mode.
- (21) NON STORE—Selects conventional display mode. Storage system is inoperative.
- (22) TRACE ROTATE—Adjusts alignment of the trace with the horizontal graticule line.
- (23) FOCUS—Provides adjustment for display definition.
- CAMERA POWER-Three-pin connector on crt bezel provides power output and receives remote single-sweep reset signal from compatible camera systems.

REAR PANEL CONTROLS AND CONNECTORS

The following descriptions are referenced to Figure 1-3.

- 25 FUSE-Line voltage fuse.
- 26 REMOTE ERASE IN—Provides external connection for remote erase.
- 27) EXT SS RESET IN—Remote single sweep reset.
- (28) EXT Z AXIS IN-Input for intensity modulation of the crt display.
- VERT SIG OUT—Vertical signal selected by TRIG SOURCE switch (LEFT, RIGHT, ALT, and ADD).
- (30) + GATE OUT—Gate signal selected by gate selector switch (Main, Auxiliary, and Delay).
- (31) + SAWTOOTH OUT—Positive-going sawtooth from time-base unit.

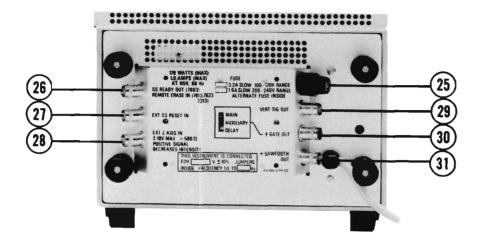

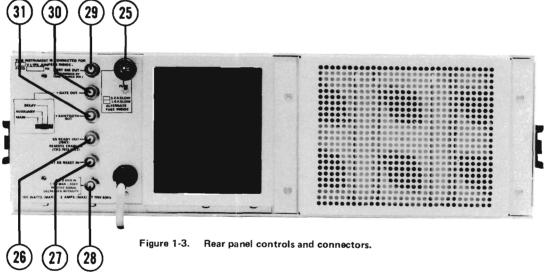

GENERAL OPERATING INFORMATION

INTENSITY CONTROL

The setting of the INTENSITY control may affect the correct focus of the display. Slight re-adjustment of the FOCUS adjustment may be necessary, when the intensity level is changed. To protect the crt phosphor, do not turn the INTENSITY control higher than necessary to provide a satisfactory display. The light filters reduce the observed light output from the crt. When using these filters, avoid advancing the INTENSITY control to a setting that may burn the phosphor. When the highest intensity display is desired, remove the filters and use only the clear faceplate protector (permanently installed behind bezel). Apparent trace intensity can also be improved in such cases by reducing the ambient light level or using a viewing hood. Also, be careful that the INTENSITY control is not set too high when changing the time-base unit sweep rate from a fast to a slow sweep rate, or when changing to the X-Y mode of operation. The instrument incorporates protection circuitry which automatically reduces the display intensity to a lower level when the time-base unit is set to a slow sweep rate. This reduces the danger of damaging the crt phosphor at these lower sweep rates.

(A)

DISPLAY FOCUS

The FOCUS adjustment allows control for best definition of the crt display. The Readout intensity should be turned on when adjusting the focus. Slight re-adjustment of this control may be necessary as display conditions change. If a properly focused display cannot be obtained with the FOCUS adjustment, the internal Astigmatism adjustment must be re-set; see the Calibration section of the Service manual.

GRATICULE

The graticule of the 7633 is marked on the inside of the faceplate of the crt, providing accurate, non-parallax measurements. The graticule is divided into eight vertical and ten horizontal divisions. Each full scan division is 0.9 centimeter square divided into five minor divisions. A Reduced Scan graticule is etched in the center of the full scan graticule. Each Reduced Scan division is exactly half (0.45 centimeter) of a full scan division. The vertical gain and horizontal timing of the plug-in units are calibrated to the graticule so accurate measurements can be made from the crt. The illumination of the graticule lines can be varied with the GRATICULE ILLUM control.

Fig. 1-4 shows the graticule of the 7633 and defines the various measurement lines. The terminology defined here will be used in all discussions involving graticule measurements. Notice the 0%, 10%, 90%, and 100% markings on the left side of the graticule. These markings are provided to facilitate rise-time measurements.

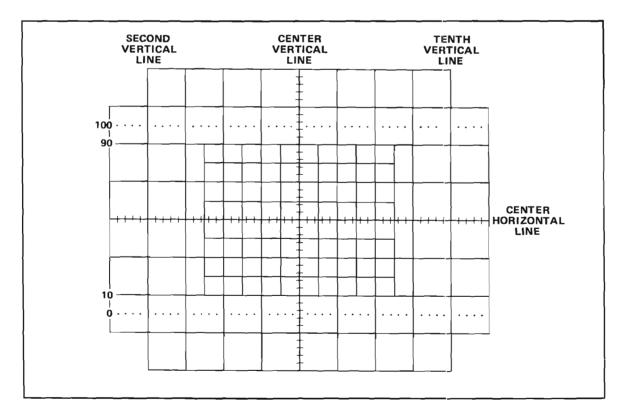


Figure 1-4. Definition of measurement lines on the graticule.

1-10

LIGHT FILTER

The tinted filter provided with the 7633 minimizes light reflections from the face of the crt to improve contrast when viewing the display under high ambient light conditions. This filter should be removed for waveform photographs or when viewing high writing rate displays. To remove the filter, pull outward on the bottom of the plastic crt mask and remove it from the crt bezel. Remove the tinted filter; leave the clear plastic faceplate protector installed and replace the bezel. The faceplate protector should be left in place at all times to protect the crt faceplate from scratches.

An optional mesh filter is available for use with the 7633. This filter provides shielding against radiated EMI (electro-magnetic interference) from the face of the crt. It also serves as a light filter to make the trace more visible under high ambient light conditions. The mesh filter fits in place of the plastic crt mask and the tinted filter. The filter can be ordered by Tektronix Part No. 378-0603-00.

BEAMFINDER

The BEAMFINDER switch provides a means of locating a display which overscans the viewing area either vertically or horizontally. When the BEAMFINDER switch is pressed and held, the display is compressed within the graticule area. Release the BEAMFINDER switch to return to a normal display. To locate and reposition an overscanned display, use the following procedure:

- 1. Press and hold the BEAMFINDER switch.
- 2. Increase the vertical and horizontal deflection factors until the vertical deflection is reduced to about two divisions and the horizontal deflection is reduced to about four divisions (the horizontal deflection needs to be reduced only when in the X-Y mode of operation).
- 3. Adjust the vertical and horizontal position controls to center the display about the vertical and horizontal center lines of the graticule.
 - 4. Release the BEAMFINDER switch; the display should remain within the viewing area.

REDUCED SCAN MODE

The Reduced Scan mode increases the stored writing speed (in centimeters/microsecond) to about four times that of the full scan mode. This is achieved by increasing the crt cathode voltage from 1.5 kilovolts in the full scan mode to 3 kilovolts in the Reduced Scan mode, which results in higher beam energy and a smaller spot size.

The calibrated division size changes from 0.9 centimeters in the full scan mode to 0.45 centimeters in Reduced Scan. Calibrated measurements are confined to the inner 8×10 Reduced Scan divisions of the graticule area.

(a) 1·11

READOUT MODES (Option 1 deletes)

The characters of the readout display are written by the crt beam on a time-share basis with signal waveforms. The Readout System operates in a free-running mode to randomly interrupt the waveform display to present the readout characters. The Readout System can also operate in a GATE TRIG'D mode; no readout signal is produced until after the sweep has occurred. In this mode the sweep must run to have a readout display. Switch 2110, located on the Readout board, changes the Readout modes. See Figure 1-5 for location of S2110.

DISPLAY PHOTOGRAPHY

A permanent record of the crt display can be obtained with an oscilloscope camera system. The instruction manuals for the Tektronix Oscilloscope Cameras include complete instructions for obtaining waveform photographs. The following information applies only to the 7633 Oscilloscope.

The crt bezel of the 7633 provides integral mounting for Tektronix Oscilloscope Cameras. Three pins, located on the crt bezel, connect power to compatible camera systems. These pins also sense control signals from Tektronix automatic cameras to permit camera-controlled single-shot photography (see the camera manual for further information).

Photographs of waveforms stored in the VAR PERSIST mode are obtained in the same manner as those taken in normal operation. However, to obtain satisfactory photographs of a stored BISTABLE display, it is often necessary to switch into the SAVE mode and use reduced intensity.

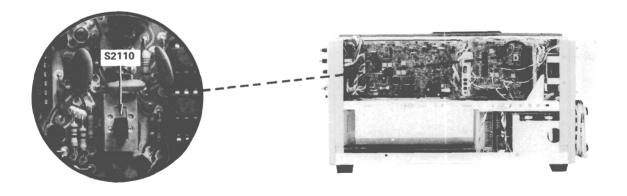


Figure 1-5. Location of Readout Mode switch.

1-12

STORAGE

The 7633 Transfer Storage Oscilloscope has four selectable storage modes (listed in order of increasing writing speed): BISTABLE, VAR PERSIST, FAST BISTABLE, and FAST VAR PERSIST. The storage writing speed in all storage modes is affected by the setting of the INTENSITY control. The STORAGE LEVEL control also adjusts writing speed in all storage modes except BISTABLE. The STORAGE LEVEL control adjusts the bias voltage on the Front Mesh in VAR PERSIST mode and on the Fast Mesh in the FAST modes.

Fastest writing speed is obtained with the INTENSITY control set to maximum without blooming the trace and the STORAGE LEVEL set in the two o'clock position.

The erase cycle removes any previous display from the Front (view) Mesh and prepares this mesh for receipt of a waveform. Erase cycles are initiated by pressing the MANual knob or by rotating it out of the MAX detent position for PERIODIC erasure. Frequency of PERIODIC ERASE cycles can be controlled in the 2 - 10 second range. If a sweep is in progress when the PERIODIC ERASE cycle occurs, the erase cycle is delayed until the end of sweep. Thus, the PERIODIC ERASE control can be used to set up an erase-after-sweep operation for slower periodic sweeps. A Single Sweep Reset is sent to the time-base unit at the end of each erase cycle. Consequently, if the time-base unit is in the single-sweep mode, it is automatically armed to run once following each erase cycle.

REMOTE ERASE is commanded by a ground closure applied to the rear panel input.

BISTABLE MODE

In the BISTABLE storage mode, the INTENSITY control adjusts for optimum stored display. Slower signals require less intensity to store than faster signals. The STORAGE LEVEL and PERSISTENCE controls do not operate in the BISTABLE mode.

VARIABLE PERSISTENCE MODE

In the VAR PERSIST mode, the INTENSITY and STORAGE LEVEL controls adjust the writing speed and the PERSISTENCE control adjusts the length of time the stored signal is visible before it fades into the background.

FAST MODES

Time-base unit operation is modified by the Storage system in the FAST storage modes to permit individual sweeps to recur at about one second intervals. This permits the Fast Mesh to be prepared between sweeps. After each sweep, the signal is transferred from the Fast Mesh to the Front Mesh for viewing. Then, the Fast Mesh is prepared again for the next sweep and the cycle repeats.

If an erase cycle occurs, Fast Mesh preparation takes place during the erase cycle. However, it is not necessary to ERASE for the sweep and transfer functions to cycle. For instance, if the time-base

A

Operating Information-7633/R7633 Service

unit is set for single-sweep, multiple sweeps can be stored by pressing the reset button on the time-base unit. If the time-base unit is set for auto triggering, the sweep and transfer functions automatically operate in a cyclical fashion. After each sweep, the display transfers to the Front Mesh for viewing and the Fast Mesh is prepared for the next sweep. Since no erase cycle is generated, multiple sweeps can be stored automatically in this manner. This can be more easily observed if the vertical position is varied between sweeps.

FAST BISTABLE MODE

This mode operates the same as BISTABLE except the display is written on the Fast Mesh and transferred to the Front Mesh for viewing as described above. Therefore, the STORAGE LEVEL control setting affects the stored writing speed.

FAST VARIABLE PERSISTENCE MODE

This mode combines the operation of both VAR PERSIST and FAST BISTABLE. The PERSISTENCE control adjusts the view time, the STORAGE LEVEL adjusts writing speed, and the display will automatically sweep and transfer when the time-base unit is set for auto triggering.

SAVE MODE

The SAVE mode can be entered from either storage mode to retain a stored display indefinitely. The intensity of the stored display in the SAVE mode is adjusted by the SAVE INTEN control. When the SAVE mode is selected, the ERASE function is locked out to prevent erasure of the stored display. Also, the time-base unit is inhibited except when the SAVE mode is entered from STORE before a sweep occurs. If this is done, the display will wait in the STORE mode until a sweep occurs. When a sweep occurs the display will automatically enter SAVE. This is referred to as the 'Babysitting' mode.

CARE OF STORAGE SCREEN

The following precautions will prolong the useful storage life of the crt screen used in this instrument,

- 1. Use minimum beam intensity to produce a clear, well-defined display.
- 2. Use minimum SAVE INTEN when storing images for extended periods of time.
- 3. Avoid repeated use of the same area of the screen. If a particular display is being stored repeatedly, change the vertical position occasionally to use other portions of the display area.

VERTICAL MODE

LEFT AND RIGHT MODE

When the LEFT or RIGHT button of the VERT MODE switch is pressed, only the signal from the plug-in unit in the selected compartment is displayed.

ALTERNATE MODE

The ALT position of the VERT MODE switch produces a display which alternates between the plug-in units in the left vertical and right vertical compartments with each sweep of the crt. Although the ALT mode can be used at all sweep rates, the CHOP mode provides a more satisfactory display at sweep rates below about 20 milliseconds/division. At these slower sweep rates, alternate-mode switching becomes visually perceptible.

NOTE

This instrument will not operate in the ALT mode if the horizontal plug-in unit is not operated in the time-base mode.

The TRIG SOURCE switch allows selection of the triggering for an alternate display. When this switch is set to the VERT MODE position, each sweep is triggered by the signal being displayed on the crt. This provides a stable display of two unrelated signals, but does not indicate the time relationship between the signals. In either the LEFT or RIGHT positions of the TRIG SOURCE switch, the two signals are displayed showing true time relationship. However, if the signals are not time-related, the display from the plug-in unit which is not providing a trigger signal will appear unstable on the crt.

CHOPPED MODE

The CHOP position of the VERT MODE switch produces a display which is electronically switched between channels at a one-megahertz rate. In general, the CHOP mode provides the best display at sweep rates lower than about 20 milliseconds/division, or whenever dual-trace single-shot phenomena are to be displayed. At faster sweep rates, the chopped switching becomes apparent and may interfere with the display.

Correct internal triggering for the CHOP mode can be obtained in any of the three positions of the TRIG SOURCE switch. When the TRIG SOURCE switch is set to VERT MODE, the internal trigger signals from the vertical plug-in units are algebraically added and the time-base unit is triggered from the resultant signal. Use of the LEFT or RIGHT trigger-source positions triggers the time-base unit on the internal trigger signal from the selected vertical unit only. This allows two time-related signals to be displayed showing true time relationship. However, if the signals are not time-related, the display for the channel which is not providing the trigger signal will appear unstable. The CHOP mode can be used to compare two single-shot, transient, or random signals which occur within the time interval determined by the time-base unit (ten times selected sweep rate). To provide correct triggering, the display which provides the trigger signal must precede the second display in time. Since the signals show true time-relationship, time-difference

Operating Information-7633/R7633 Service

measurements can be made from the display.

ALGEBRAIC ADDITION

The ADD position of the VERT MODE switch can be used to display the sum or difference of two signals, for common-mode rejection to remove an undesired signal, or for dc offset (applying a dc voltage to one channel to offset the dc component of a signal on the other channel). The common-mode rejection ratio between the vertical plug-in compartments of the 7633 is greater than 20:1 at 50 megahertz. The rejection ratio increases to 100:1 at dc.

The overall deflection factor on the crt in the ADD mode is the resultant of the algebraic addition of the signals from the two vertical plug-in units. It is difficult to determine the voltage amplitude of the resultant display unless the amplitude of the signal applied to one of the plug-in units is known. This is particularly true when the vertical units are set to different deflection factors, since it is not obvious which portion of the display is a result of the signal applied to either plug-in unit. Also, the polarity and repetition rate of the applied signals enters into the calculation.

The following general precautions should be observed to provide the best display when using the ADD mode:

- 1. Do not exceed the input voltage rating of the plug-in units.
- 2. Do not apply large signals to the plug-in inputs. A good rule to follow is not to apply a signal which exceeds an equivalent of about eight times the vertical deflection factors. For example, with a vertical deflection factor of 0.5 volt/division, the voltage applied to that plug-in unit should not exceed 4 volts. Larger voltages may result in a distorted display.
- 3. To ensure the greatest dynamic range in the ADD mode, set the position controls of the plug-in units to a setting which would result in a mid-screen display if viewed in the LEFT or RIGHT positions of the VERT MODE switch.
 - 4. For similar response from each channel, set the plug-in units for the same input coupling.

TRIGGER SOURCE

The TRIG SOURCE switch allows selection of the internal trigger signal for the time-base unit. For most applications, this switch can be set to the VERT MODE position. This position is the most convenient, since the internal trigger signal is automatically switched as the VERT MODE switch is changed, or as the display is electronically switched between the left vertical and right vertical plug-in units in the ALT position of the VERT MODE switch. It also provides a usable trigger signal in the ADD or CHOP positions of the VERT MODE switch, since the internal trigger signal in these modes is the algebraic sum of the signals applied to the vertical plug-in units. Therefore, the VERT MODE position ensures that the time-base unit receives a trigger signal regardless of the VERT MODE switch setting, without the need to change the trigger source selection.

1-16

If correct triggering for the desired display is not obtained in the VERT MODE position, the LEFT or RIGHT positions can be used to obtain the trigger signal from either the left vertical or right vertical plug-in unit. The internal trigger signal is obtained from the selected vertical compartment, whether the plug-in unit in that compartment is selected for display on the crt or not. If the internal trigger signal is obtained from one of the vertical units, but the other vertical unit is selected for display, the internal trigger signal must be time-related to the displayed signal in order to obtain a triggered (stable) display.

X-Y OPERATION

For some applications, it is desirable to display one signal versus another (X-Y) rather than against time (internal sweep). The flexibility of the plug-in units available for use with the 7633 provides a means for applying an external signal to the horizontal deflection system for this type of display. Some of the 7B-series time-base units can be operated as amplifiers in addition to their normal use as time-base generators. This feature allows an external signal to provide the horizontal deflection on the crt. For most of the time-base units with the amplifier function, the X (horizontal) signal can be connected either to an external input connector on the time-base unit or it can be routed to the time-base unit through the internal triggering system (see time-base instruction manual for details). If the latter method is used, the TRIG SOURCE switch must be set so that the X (horizontal) signal is obtained from one of the vertical units and the Y (vertical) signal is obtained from the other vertical unit. The advantages of using the internal trigger system to provide the X signal are that the attenuator switch of the amplifier unit providing the horizontal signal determines the horizontal deflection factor to allow full-range operation. The plug-in units do not have to be removed between compartments when X-Y operation is desired.

Another method of obtaining an X-Y display is to install an amplifier plug-in unit in the horizontal plug-in compartment (check amplifier unit gain as given in the plug-in instruction manual to obtain calibrated horizontal deflection factors). This method provides the best X-Y display, particularly if two identical amplifier units are used, since both the X and Y input systems will have the same delay time, gain characteristics, input coupling, etc. For further information on obtaining X-Y displays, see the plug-in unit manuals. Also, the reference books listed under Applications provide information on X-Y measurements and interpreting the resultant lissajous displays.

INTENSITY MODULATION

Intensity (Z-axis) modulation can be used to relate a third item of electrical phenomena to the vertical (Y-axis) and the horizontal (X-axis) coordinates without affecting the waveshape of the displayed signal. The Z-axis modulating signal applied to the crt circuit changes the intensity of the displayed waveform to provide this type of display. 'Gray scale' intensity modulation can be obtained by applying signals which do not completely blank the display. Large amplitude signals of the correct polarity will completely blank the display; the sharpest display is provided by signals with a fast risetime and fall. The voltage amplitude required for visible trace modulation depends upon the setting of the INTENSITY control. A two-volt peak-to-peak signal will completely blank the display even at high intensity levels. Lower amplitude signals can be used to only change the trace brightness rather than completely blank the display. Negative-going modulating signals increase the display intensity and positive-going modulating signals decrease the

 \bigcirc

Operating Information-7633/R7633 Service

display intensity. Useful input frequency range is dc to 10 megahertz (input voltage derating necessary above two megahertz). The maximum input voltage should be limited to 10 volts (dc plus peak ac).

Time markers applied to the EXT Z AXIS input connector provide a direct time reference on the display. With uncalibrated horizontal sweep or external horizontal mode operation, the time markers provide a means of reading time directly from the display. However, if the markers are not time-related to the displayed waveform, a single-sweep display should be used (for internal sweep only) to provide a stable display.

RASTER DISPLAY

A raster-type display can be used to effectively increase the apparent sweep length. For this type of display, the trace is deflected both vertically and horizontally by sawtooth signals. This is accomplished in the 7633 by installing a 7B-series time-base unit in one of the vertical plug-in compartments. Normally, the time-base unit in the vertical compartment should be set to a slower sweep rate than the time-base unit in the horizontal compartment; the number of horizontal traces in the raster depends upon the ratio between the two sweep rates. Information can be displayed on the raster using several different methods. In the ADD position of the VERT MODE switch, the signal from an amplifier unit can be algebraically added to the vertical deflection. With this method, the vertical signal amplitude on the crt should not exceed the distance between the horizontal lines of the raster. Another method of displaying information on the raster is to use the EXT Z AXIS input to provide intensity modulation of the display. This type of raster display could be used to provide a television-type display. Complete information on operation using the Z-axis feature is given under Intensity Modulation.

To provide a stable raster display, both time-base units must be correctly triggered. Internal triggering is not provided for the time-base units when they are in the vertical compartments; external triggering must be used. Also, blanking is not provided from the time-base units when they are installed in a vertical compartment. To blank out the retrace portion from the time-base unit in the vertical compartment, special connections must be made from this time-base unit to the blanking network of the 7633. If this mode of operation is desirable, contact your local Tektronix Field Office or representative for specific information on obtaining blanking with the specific time-base unit being used in the vertical compartment.

CALIBRATOR

GENERAL

The internal calibrator of the 7633 provides a convenient signal source for checking basic vertical gain and for adjusting probe compensation as described in the probe instruction manual. In addition, the calibrator can be used as a convenient signal source for application to external equipment.

VOLTAGE

The calibrator provides accurate output voltages of 40 millivolts, 0.4 volt, and 4 volts at the three front-panel pin-jack connectors into high-impedance loads. Output resistance is approximately 50 ohms at the 40 mV and 0.4 V pin jacks and approximately 450 ohms at the 4 V pin jack.

1-18

CURRENT

A 40-milliampere, one-kilohertz output current is provided when the optional current-loop accessory (Tektronix Part No. 012-0259-00) is connected between the 4 V pin jack and ground. This output can be used to check and calibrate current-measuring probe systems.

WAVESHAPE

The square-wave output signal of the calibrator can be used as a reference waveshape when checking or adjusting the compensation of passive, high-resistance probes. Since the square-wave output from the calibrator has a flat top, any distortion in the displayed waveform is due to the probe compensation. Do voltage output is also available by changing a jumper on the calibrator board; see Figure 1-6.

SIGNALS OUT

VERTICAL SIGNAL

The VERT SIG OUT connector provides a sample of the vertical deflection signal. The source of the output signal is determined by the TRIG SOURCE switch. The source will follow the setting of the TRIG SOURCE switch. When the TRIG SOURCE is in the VERT MODE the output will follow the VERTICAL MODE switch. In the CHOP mode the signals are added. The output signals are LEFT, ALT, ADD, and RIGHT. The output signal into 50 ohms is about 25 millivolts/division of the vertical signal displayed on about 0.5 volts/division of the vertical signal displayed on the systems crt.

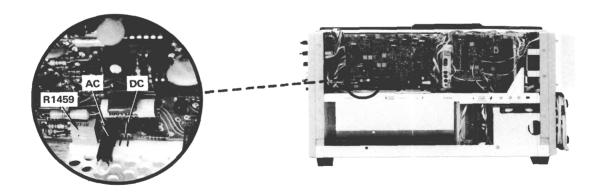


Figure 1-6. Location of Calibrator jumper on Storage circuit board.

Operating Information-7633/R7633 Service

+ GATE

The + GATE connector provides a sweep gate signal that is generated by the time-base plug-in unit. The gate selector switch provides one of three possible gates (MAIN, AUXILIARY, and DELAY). The duration of the gate pulse is determined by the respective sweep. Auxiliary and Delay gates can only be produced by dual sweep time-base plug-in units. The amplitude of the gate signal is about 50 millivolts into 50 ohms or 10 volts into 1 megohm.

+ SAWTOOTH

The SAWTOOTH connector provides a positive going sample of the sawtooth from the time-base unit in the horizontal compartment. The rate of rise of the sawtooth signal is about 50 millivolts/unit of time into 50 ohms or 1 volt/unit of time into 1 megohm. Unit of time is determined by the time/division switch of the horizontal plug-in unit.

APPLICATIONS

The 7633 Oscilloscope and its associated plug-in units provide a very flexible measurement system. The capabilities of the overall system depend mainly upon the plug-in units that are chosen for use with this instrument. Specific applications for the individual plug-in units are described in the plug-in manuals. The overall system can also be used for many applications which are not described in detail either in this manual or in the manuals for the individual plug-in units. Contact your local Tektronix Field Office or representative for assistance in making specific measurements with this instrument.

The following books describe oscilloscope measurement techniques which can be adapted for use with this instrument.

John D. Lenk, 'Handbook of Oscilloscopes, Theory, and Application', Prentice-Hall Inc., Englewood Cliffs, New Jersey, 1968.

- J. Czech, 'Oscilloscope Measuring Techniques', Springer-Verlag, New York, 1965.
- J. F. Golding, 'Measuring Oscilloscopes', Transatlantic Arts, Inc., 1971.

Charles H. Roth Jr., 'Use of the Oscilloscope', A Programmed Text, Prentice-Hall Inc., Englewood Cliffs, New Jersey, 1970.

1-20

SPECIFICATIONS

INTRODUCTION

The Tektronix 7633 Storage Oscilloscope is a solid-state, high-performance instrument designed for fast writing rate storage applications. This instrument accepts Tektronix 7-series plug-in units to form a complete measurement system. The flexibility of this plug-in feature and the variety of plug-in units available allow the system to be used for many measurement applications.

This instrument will meet the electrical characteristics listed in the Performance Requirement column of Table 2-1 following complete calibration as given in the Service manual. The following characteristics apply over an ambient temperature range of 0°C to +50°C, except as otherwise indicated. Warmup time for given accuracy is 30 minutes.

NOTE

Many of the measurement capabilities of this instrument are determined by the choice of plug-in units. The following characteristics apply to the 7633 Storage Oscilloscope only. See the System Specifications later in this section for characteristics of the complete system.

TABLE 2-1 ELECTRICAL

Characteristic	Performance Requirement	Supplemental Information
VERTICAL DEFLECTION SYSTEM		
Deflection Factor	Compatible with all 7000-series plug-in units.	
Between Compartments	Within 1%.	
Low Frequency Linearity	0.1 division or less compression or expansion of a 2-division (at center-screen) signal when positioned vertically within the graticule area.	
Bandwidth	See System Specifications for 7600-series instruments.	
Step Response Risetime	See System Specifications for 7600-series instruments.	
Isolation Between Vertical Compartments	At least 100:1 from DC to 100 MHz.	

(A)

TABLE 2-1 (cont.) ELECTRICAL

Characteristic	Performance Requirement	Supplemental Information
Delay Line		Permits viewing leading edge of trigger signal.
Chopped Mode		
Repetition Rate	1 MHz within 20%.	
Time Segment From Each Compartment	0.4 to 0.6 μs.	
Difference in Delay Between Vertical Compartments		0.5 ns or less.
Vertical Display Modes	LEFT: Left vertical unit only.	Selected by VERT MODE switch
	ALT: Dual trace, alternate between vertical units.	
	ADD: Added algebraically.	
	CHOP: Dual trace, chopped between vertical units.	
	RIGHT: Right vertical unit only.	
	TRIGGERING	
Trigger Source	LEFT VERT: From left vertical only.	Selected by TRIGGER SOURCE switch.
	VERT MODE: Determined by vertical mode switch.	
	RIGHT VERT: From right vertical only.	
	HORIZONTAL DEFLECTION SYSTE	M
Fastest Calibrated Sweep Rate	5 ns/division.	
Deflection Factor	Compatible with all 7000-series plug-in units.	

TABLE 2-1 (cont.) ELECTRICAL

0°C to +50°C Within 3%.	al Information
Vertical and Horizontal Amplifiers Frequency Response Bandwidth (8-Division Reference) CALIBRATOR Wave shape Positive-going square wave or dc (dc voltage selected by internal jumper). Voltage Outputs 40 mV, 0.4 V, and 4 V. Into 1 MΩ I Voltage Output Accuracy +15°C to +35°C Within 1%. Current Output 40 mA. Current Output Accuracy +15°C to +35°C Within 2%. Within 2%. O°C to +50°C Within 3%. Within 3%. Approximate	
CALIBRATOR Wave shape Positive-going square wave or dc (dc voltage selected by internal jumper). Voltage Outputs 40 mV, 0.4 V, and 4 V. Into 1 MΩ I Voltage Output Accuracy +15°C to +35°C Within 1%. Within 2%. Current Output 40 mA. Within 2%. Current Output Accuracy +15°C to +35°C Within 2%. Within optic accessory (0 nected betw and ground Repetition Rate Approximat	
Wave shape Positive-going square wave or dc (dc voltage selected by internal jumper). Voltage Outputs 40 mV, 0.4 V, and 4 V. Into 1 MΩ I Voltage Output Accuracy +15°C to +35°C Within 1%. 0°C to +50°C Within 2%. Current Output 40 mA. Current Output Accuracy +15°C to +35°C Within 2%. 0°C to +50°C Within 3%. Within 3%. Approximate	
(dc voltage selected by internal jumper). Voltage Outputs 40 mV, 0.4 V, and 4 V. Into 1 MΩ I Voltage Output Accuracy +15°C to +35°C Within 2%. Current Output Accuracy +15°C to +35°C Within 2%. Within optic accessory (0 nected betwand ground O°C to +50°C Within 3%. Approximat	
Voltage Output Accuracy +15°C to +35°C Within 1%. 0°C to +50°C Within 2%. Current Output 40 mA. Current Output Accuracy +15°C to +35°C Within 2%. Within 2%. Within optic accessory (0 nected betwand ground) Repetition Rate Approximat	
+15°C to +35°C Within 1%. 0°C to +50°C Within 2%. Current Output 40 mA. Current Output Accuracy +15°C to +35°C Within 2%. 0°C to +50°C Within 3%. Within optic accessory (0 nected betwand ground) Repetition Rate Approximate	oad.
0°C to +50°C Within 2%. Current Output 40 mA. Current Output Accuracy +15°C to +35°C Within 2%. 0°C to +50°C Within 3%. Within 3%. Repetition Rate Approximat	
Current Output 40 mA. Current Output Accuracy +15°C to +35°C Within 2%. 0°C to +50°C Within 3%. Repetition Rate Approximat	
Current Output Accuracy +15°C to +35°C Within 2%. O°C to +50°C Within 3%. Repetition Rate Within 3%. Approximat	
+15°C to +35°C Within 2%. 0°C to +50°C Within 3%. Within optic accessory (0 nected betwand ground) Repetition Rate Approximate	
0°C to +50°C Within 3%. Repetition Rate Approximat	
0°C to +50°C Within 3%. Repetition Rate Approximat	Within optional current loop accessory (012-0259-00) con- nected between 4 V pin jack and ground pin jack.
Output Resistance	ely 1 kHz.
50 mV and 0.4 V Approximat	ely 50 Ω .
4 V Approximat	ely 450 $\Omega_{ m c}$

TABLE 2-1 (cont.) ELECTRICAL

Characteristic	Performance Requirement	Supplemental Information
	OUTPUTS	
Camera Power (P1041 at crt bezel)		
Pin 1 — +15 V		
Pin 3 — single sweep reset		
Pin 5 — ground		
	EXTERNAL Z AXIS INPUT	
Sensitivity (Full Intensity Range)	2 V peak to peak.	
Useful Input Voltage Versus Frequency	2 V peak to peak, dc to 2 MHz; reducing to 0.4 V peak to peak at 10 MHz.	
Polarity of Operation	Positive-going signal decreases intensity.	
Maximum Input Voltage		10 V (dc to peak ac).
Input Resistance		Approximately 500 Ω .
	CHARACTER GENERATOR	-
Character Size	Adjustable (Vertically Only).	
Modes of Operation	Free-run independent of sweep.	Selected by internal Readout mode switch.
	Triggered after sweep.	
	POWER SOURCE	•
Line Voltage Ranges		
110 V nominal	100 V ± 10%.	<u> </u>
	110 V ± 10%.	
	120 V ± 10%.	

TABLE 2-1 (cont.) ELECTRICAL

Characteristic	Performance Requirement	Supplemental Information
Line Voltage Ranges		
220 V nominal	200 V ± 10%.	
	220 V ± 10%.	
	240 V ± 10%.	
Line Frequency		50 to 60 Hz.
Maximum Power Consumption (115 Vac ; 60 Hz)		7633: 170 W, 1.9 A. R7633: 180 W, 2 A.
Fuse Data		
110 V line (F1000)		3.2 A slow blow.
220 V line (F1000)		1.6 A slow blow.
+130 V Supply (F855)		0.15 A fast blow.
+15 V unregulated		2.0 A fast blow.
	DISPLAY (CRT)	
Cathode-Ray Tube Type	T7411.	
Graticule		
Туре	Internal and illuminated.	
Area Reduced Scan	8 x 10 divisions 8 x 10 divisions in center of faceplate	
Division	0.9 centimeter Full Scan 0.45 centimeter Reduced Scan	
Phosphor	P31	
Accelerating Potential	Approximately 8.5 kV (approximately 10 kV in Reduced Scan).	
BEAMFINDER	Limits display to within graticule area when BEAMFINDER switch is actuated.	

TABLE 2-1 (cont.) ELECTRICAL

Characteristic	Performance Requirement	Supplemental Information
Stored Writing Speed		
Full Scan (center 6 x 8 divisions)		
FAST VAR PERSIST	150 div/μs	
FAST BISTABLE	50 div/μs	
VAR PERSIST	0.5 div/μs	
BISTABLE	0.03 div/µs	
Reduced Scan		
FAST VAR PERSIST	2222 div/μs	
FAST BISTABLE	400 div/μs	
VAR PERSIST	3 div/μs	
BISTABLE	0.2 div/μs	
	SIGNALS OUT	
VERT SIG OUT	See Systems Specifications for 7600-series instruments.	
Vertical Signals	LEFT, RIGHT, ALT and ADD	Selected by TRIG SOURCE switch.
Gain		
Into 50 Ω		25 mV/division ±20% system crt to VERT SIG OUT.
Into 1 M Ω		0.5 V/division ±20% system crt to VERT SIG OUT.
Risetime (Into 50 Ω)		5 ns or less.
Centering		± 3 division system crt to VERT SIG OUT. (1.5 V into 1 M Ω or 75 mV into 50 Ω .)
Output Resistance		950 Ω within 2%.

TABLE 2-1 (cont.) ELECTRICAL

Characteristic	Performance Requirement	Supplemental Information		
+GATE OUT				
Gate Signals	MAIN, AUXILIARY, and DELAY.	Selected by Gate Selector switch.		
Output				
Into 50 Ω		0.5 V within 10%.		
Into 1 M Ω		10 V within 10%.		
Risetime (Into 50 Ω)		20 ns or less.		
Output Resistance		950 Ω within 2%.		
+SAWTOOTH OUT				
Output				
Into 50 Ω		50 mV/unit time ¹ within 15%.		
Into 1 MΩ		1 V/unit time ¹ within 10%.		
Output Resistance		950 Ω within 2%.		
	ELECTRO-MAGNETIC INTERFERENCE			
Electro-magnetic inter- ference(emi) in accord- ance with MIL-STD-461A as tested in MIL-STD-462 (when equipped with Op- tion 3)	Any unused plug-in compartments must be covered with a blank plug-in panel (emi shielded) in order to meet emi specifications. See Options section for additional information.			
Radiated interference	Interference radiated from the instru- ment under test within the given limits from 150 kilohertz to 1000 megahertz.			
Conducted interference	Interference conducted out of the instrument under test through the power cord within the given limits from 150 kilohertz to 25 megahertz.			
Transportation (packaged instrument, without plugins)	Qualifies under National Safe Transit Committee test procedure 1A, Category II.			

¹ Referenced to Time/Div setting.

2-7

A

TABLE 2-2 ENVIRONMENTAL

Characteristic	Information
	NOTE
	the electrical characteristics given in the
ing environmental limits.	column of the Specifications over the follow-
mperature Range	
Operating	0°C to +50°C.
Non-Operating	−55°C to +75°C.
titude	
Operating	15,000 ft.
Non-Operating	Test limit 50,000 ft.

Transportation (packaged instrument, without plug-in units) qualifies under National Safe Transit test procedure 1A, Category II.

TABLE 2-3 PHYSICAL

Characteristic	Information				
Ventilation	Safe operating temperature maintained by force cooling. Automatic resetting thermal cutout protects instrument from overheating.				
Finish	Anodized aluminum front panel. Painted cabinet.				
7633 Overall Dimensions (measured at maximum point)					
Height	12.0 in (30.4 cm).				
Width	8.7 in (23.0 cm).				
Length	23.7 in (50.2 cm).				
Net Weight (instrument only)	30 lb (13.6 kg).				

TABLE 2-3 (cont.) PHYSICAL

Characteristic	Information
R7633 Overall Dimensions (measured at maximum points)	
Height	5.25 in (13.4 cm).
Width	19 in (48.3 cm).
Length	23 in (57.96 cm).
Net Weight (instrument only)	30 lb (13.6 kg).

STANDARD ACCESSORIES

Standard accessories supplied with the 7633 are given in the Mechanical Parts List, in the Service manual. For optional accessories available for use with this instrument, see the Tektronix, Inc., catalog.

TABLE 2-4
7633 SYSTEM SPECIFICATIONS

Amplifier			Risetime		ccuracy *	AL	SIG O	UT
Plug-In Unit	Probe	Bandwidth	(Calculated)	0.25% Acc	15 to 35° C	0 to 50° C	BW	Tr
7A11	Integral	100 MHz	3.5 ns	2%	3%	4%	60 MHz	5.9 ns
7A12	None P60538	80 MHz 80 MHz	4.4 ns 4.4 ns	2% 3%	3% 4%	4% 5%	55 MHz 55 MHz	6.4 ns 6.4 ns
7A13	None or P6053B or P6055	75 MHz 55 MHz	4.7 ns 6.4 ns	1.5% 1.5%	2.5% 2.5%	3.5% 3.5%	55 MHz 45 MHz	6.4 ns 7.8 ns
7A14	P6021 P6022	50 MHz 80 MHz	7.0 ns 4.7 ns	2% 2%	3% 3%	4% 4%	40 MHz 50 MHz	8.8 ns 7.0 ns
7A15A	None P6065A	65 MHz 60 MHz	5.4 ns 5.4 ns	2% 3%	4% 4%	5% 5%	50 MHz 50 MHz	7.0 ns 7.0 ns
7A16A	None P6053B	100 MHz 100 MHz	3.5 ns 3.5 ns	2% 3%	3% 4%	4% 5%	60 MHz 60 MHz	5.9 ns 5.9 ns
7A17	None	100 MHz	3.5 ns		-		15 MHz	24 ns
7A18	None P6065A	75 MHz 70 MHz	4.7 ns 4.7 ns	2% 3%	3% 4%	4% 5%	50 MHz 50 MHz	7.0 ns 7.0 ns
7A19	None P6056/ P6057	100 MHz 100 MHz	3.5 ns 3.5 ns	3% 4%	4% 5%	5% 6%	65 MHz 65 MHz	5.4 ns 5.4 ns
7A22	None or P6055/ P6060	1.0 MHz, ±10%	350 ns, ±9%	2%	3%	4%	1.0 MHz, ±10%	350 ns ±9%
7A24	None P6056/ P6057	100 MHz 100 MHz	3.5 ns 3.5 ns				60 MHz 60 MHz	5.9 ns 5.9 ns
7A26	None P6053B	100 MHz 100 MHz	3.5 ns 3.5 ns	2% 3%	3% 4%	4% 5%	60 MHz 60 MHz	5.9 ns 5.9 ns

^{*}Deflection Factor Accuracy. Plug-in gain set at a temperature within 10°C of the operating temperature.

Bandwidth checked from 0°C to +50°C.

The bandwidth of a vertical plug-in used in the horizontal compartment is 2 MHz except for the 7A22 which has a bandwidth of 850 kHz. The X-Y phase shift between 2 similar units is 2° at 35 kHz.

THEORY OF OPERATION

This section begins with a brief discussion of logic fundamentals followed by a general, block diagram description and a detailed description of the circuits that comprise the 7633 Oscilloscope. The circuit description is keyed to the schematic diagrams located in the diagrams section of this manual. Circuits commonly used in the electronics industry are not described in detail. If more information on these circuits is desired, refer to the following textbooks:

Robert C. Baron and Albert T. Piccirilli, 'Digital Logic and Computer Operation', McGraw-Hill, New York, 1967.

Phillip Cutler, 'Semiconductor Circuit Analysis', McGraw-Hill, New York, 1964.

Lloyd P. Hunter (Ed.), 'Handbook of Semiconductor Electronics', second edition, McGraw-Hill, New York, 1962.

Jacob Millman and Herbert Taub, 'Pulse, Digital, and Switching Waveforms', McGraw-Hill, New York, 1965.

REV. B, FEB. 1976

LOGIC FUNDAMENTALS

Digital logic techniques are used to perform many functions within this instrument. The function and operation of the logic circuits are described using logic symbology and terminology. This portion of the manual is provided to aid in the understanding of these symbols and terms. The following information is a basic introduction to logic concepts.

SYMBOLS

The operation of circuits within the 7633 which use digital techniques is described using the graphic symbols set forth in military standard MIL-STD-806B. Table 3-1 provides a basic logic reference for the logic devices used within this instrument. Any deviations from the standard symbology, or devices not defined by this standard will be described in the circuit description for the applicable device.

TABLE 3-1
Basic Logic Reference

Device	Symbol	Description	Input	/Output	Table
AND gate		A device with two or more inputs	Inj	/Output	
		and one output. The output of the	A	В	X
	A X	AND gate is HI if and only if all of the inputs are at the HI state.	LO	LO	LO
	В —	the inputs are at the in state.	LO	HI	LO
			HI	LO	LO
			HI	HI	HI
NAND gate		A device with two or more inputs	Inj	put	/Output
		and one output. The output of the	A	В	×
	A	NAND gate is LO if and only if all of the inputs are at the HI state.	LO	LO	ні
В —	1		LO	HI	HI
			HI	LO	HI
			HI	HI	LO
OR gate		A device with two or more inputs	Input		/Output
		and one output. The output of the OR gate is HI if one or more of the inputs are at the HI state.	A	В	T X
	A —		LO	LO	LO
	В Х		LO	НІ	НІ
			HI	LO	н
			ні	ні	НІ
NOR gate		A device with two or more inputs	In	put	/Output
		and one output. The output of the	A	В	×
	A	NOR gate is LO if one or more of the inputs are at the HI state.	LO	LO	Н
	В ХО Х	die inputs are at the fir state.	LO	HI	LO
			HI	LO	LO
			HI	HI	LO

TABLE 3-1 (cont)

Device	Symbol	Description	Input/Output			ble
Inverter		A device with one input and one	Inpu	ıt	/ Out	put
	A	output. The output state is always opposite to the input state.	A		X	
	^	opposite to the input state.	LO		н	
			HI		L	0
LO-state		A small circle at the input or	Ir	put	/0	utput
indicator	-1	output of a symbol indicates that the LO state is the significant state.	Α	В		X
	<u> </u>	Absence of the circle indicates that	LO	LC	<u> </u>	LO
		the HI state is the significant state.	LO	Н	\vdash	н
	'	Two examples follow:	HI	LC	5	LO
		AND gate with LO-state indicator at the A input.	НІ	Н		LO
	A — C X	The output of this gate is HI if and only if the A input is LO and the B input is HI.				
		OR gate with LO-state indicator at	lr.	put	/Output	
		the A input:	A	В		<u>.</u>
	A — (The output of this gate is HI if	LO	LC	_+-	HI
	x	either the A input is LO or the B	LO	H		HI
	В —	input is HI.	HI	LC		LO
			НІ	Н	-	н
Edge symbol		Normally superimposed on an input line to a logic symbol. Indicates that this input (usually the trigger input of a flip-flop) responds to the indicated transition of the applied signal.				
Triggered		A bistable device with one input	Inp	ut	/ Out	tput
(toggle) Flip-Flop	1 X FF	and two outputs (either or both outputs may be used). When trig- gered, the outputs change from one stable state to the other stable state	before trigger		after pu	Ise
		with each trigger. The outputs are	X	Х	X	X
		complementary (i.e., when one out-	LO	HI	HI	LO
	o X	put is HI the other is LO). The edge symbol on the trigger (T) input may be of either polarity depending on the device.	HI	LO	LO	НІ_

TABLE 3-1 (cont)

Device	Symbol	Description	ln	put/Out	put 7	Table	
Set-Clear (J-K) Flip-Flop	A — J 1 X	A bistable device with two inputs and two outputs (either or both outputs may be used). The outputs change state in response to the states at the inputs. The outputs are complementary (i.e., when one out-		B LO HI	X	x x change HI	
D (data) Type	в — к 0 — х	put is HI the other is LO). A bistable device with two inputs	HI	HI it /		anges tate out	
Flìp-Flop	A X	and two outputs (either or both outputs may be used). When triggered the state of the "1" output changes to the state at the data (D) input prior to the trigger. The	A LO HI	L(2	X HI LO	
	T 0 \overline{X} input prior to the trigger. The outputs are complementary (i.e., when one output is HI the other is LO). The edge symbol on the trigger (T) input may be of either polarity, depending on the device.			Output conditions shown after trigger pulse			
Triggered Set-Clear (J-K) Flip-Flop	A J X X T	A bistable device with three or more inputs and two outputs (either or both outputs may be used). When triggered, the outputs change state in response to the states at the inputs prior to the trigger. The outputs are complementary (i.e., when one output is	A LO LO HI	B LO HI LO	X No LO HI	X change HI LO langes tate	
	B K 0 X HI the other is LO). The ed symbol on the trigger (T) inp may be of either polarity depending on the device.		t Output conditions shown			own after	
Flip-Flop with Direct Inputs	c ———	For devices with direct-set (S_D) or direct-clear (C_D) inputs, the indi-	 	Input		/Output	
(may be applied	A J S _D 1 X	cated state at either of these inputs	A	ВС	D	X X	
to all triggered flip-flops)	T FF	over-rides all other inputs (in- cluding trigger) to set the outputs to the states shown in the input/	Φ	¹ LO	_	change ¹	
	T	output table.	Φ	Ф НІ	LO	HI LO	
	в <u>к</u> с _р о		Φ	ФНІ	ні	Unde- fined	
	D		¹ Outp	out state	dete	n this case rmined by red inputs	

NOTE

Logic symbols used on the diagrams depict the logic function and may differ from the manufacturer's data.

LOGIC POLARITY

All logic functions are described using the positive logic. Positive logic is a system of notation where the more positive of two levels (HI) is called the true or 1-state; the more negative level (LO) is called the false or 0-state. The HI-LO method of notation is used in this logic description. The specific voltages which constitute a HI or LO state vary between individual devices.

INPUT/OUTPUT TABLES

Input/output (truth) tables are used in conjunction with the logic diagrams to show the input combinations which are of importance to a particular function, along with the resultant output conditions. This table may be given either for an individual device or for a complete logic stage. For examples of input/output tables for individual devices, see Table 3-1.

NON-DIGITAL DEVICES

Not all of the integrated circuits in this instrument are digital logic devices. The function of non-digital devices will be described individually.

BLOCK DIAGRAM

All major circuits and basic interconnections of the 7633 are represented in the block diagram, Figure 3-1. The numbered diamond in each block refers to the respective schematic diagram for that circuit, located at the rear of this manual.

The Main Interface, block 1, provides the interconnections between the plug-in compartments and the various circuits and functions of the instrument.

Signals from both vertical plug-in compartments are applied to the Vertical Interface circuit. This circuit determines whether the signal from the left or right plug-in unit is displayed. The selected vertical signal is then amplified by the Vertical Amplifier circuit to drive the vertical deflection plates of the crt. The Vertical Amplifier also accepts the Y-Readout signal from the Readout System to produce the vertical portion of the alpha-numeric readout display.

Signals from the horizontal plug-in compartment are applied to the Horizontal Amplifier circuit where they are amplified to provide horizontal deflection of the crt electron beam. The Horizontal Amplifier circuit also accepts the X-Readout signal from the Readout System to produce the horizontal portion of the readout display.

(A)

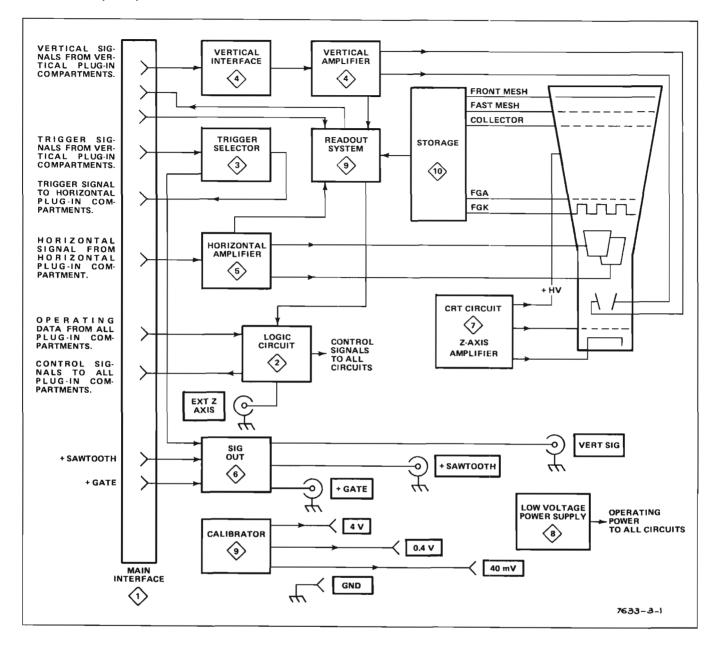


Figure 3-1. Block diagram 7633.

The Logic Circuit develops control signals for use in other circuits within the instrument and the associated plug-in units. These control signals determine the correct operation of the instrument in relation to the plug-in installed or selected, the plug-in control settings, and the 7633 control settings.

Trigger signals from the vertical plug-in units are connected to the Trigger Selector circuit to be used for internal triggering. This circuit selects the trigger signals to be applied to the plug-in unit in the horizontal compartment. This signal is also amplified by the Trigger Selector circuit and routed to the Output Signals circuit to become the Vertical Signal Output.

In addition to the Vertical Signal Output mentioned above, the Output Signals circuit also provides a + SAWTOOTH OUT signal and a + GATE OUT signal—both derived from the horizontal plug-in unit and accessible through rear panel connectors.

The crt circuit produces the voltages and contains the controls necessary for operation of the cathoderay tube. This includes the Z-Axis Amplifier, which provides the drive signal to control the intensity of the crt display.

The Low-Voltage Power Supply provides the power necessary for operation of the entire instrument and associated plug-in units.

The Storage Circuit produces the timing signals and voltages required to operate the storage functions of the crt.

The Readout System provides an alpha-numeric display for information encoded by the plug-in units. This display is presented on the crt on a time-shared basis with the primary analog waveform display.

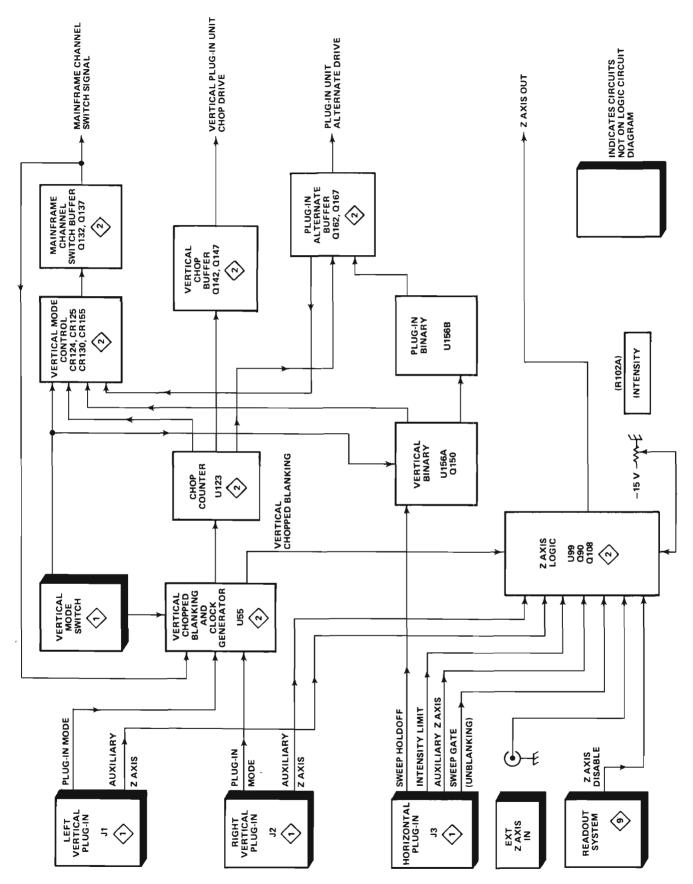


Figure 3-2. Logic circuit block diagram.

THEORY OF OPERATION

The following circuit descriptions are referenced to their respective schematic diagrams by the numbered diamonds accompanying each main heading.

MAIN INTERFACE 1

Diagram 1 shows the plug-in interface and the interconnections between the plug-in compartments, circuit boards, etc., of this instrument. This diagram also contains the TRIG SOURCE and VERT MODE switching and the Camera Power Connector.

LOGIC CIRCUIT 2

The Logic Circuit developes control signals for use in other circuits within this instrument and in the associated plug-in units. These signals determine the correct instrument operation in relation to the plug-in installed and selected, the plug-in control settings, and the 7633 control settings. Figure 3-2 is a simplified block diagram of the Logic Circuit.

Z-AXIS LOGIC

The Z-Axis Logic stage produces an output current which sets the intensity of the display on the crt. The Z-Axis output current is determined by the setting of the front-panel INTENSITY control, an external signal from the rear panel EXT Z-AXIS input connector, or signals from the plug-in compartments. The Vertical Chopped Blanking from U55 is applied to this stage to blank the crt display during vertical trace switching. The Intensity Limit input from the horizontal plug-in compartment operates at slow sweep rates to provide protection for the crt phosphor.

The Z-Axis Logic stage consists of transistor Q108, dual-transistor Q90 and integrated circuit U99, which is a five-transistor array. A simplified schematic of the Z-Axis Logic stage is shown in Figure 3-3.

Transistor U99C is connected in the common-base configuration to provide the output for this stage. The collector load for U99C is provided by the Z-Axis Amplifier in the CRT Circuit. Transistors U99D and U99E provide a current-setting action for this stage. The collector current of U99D, represented by I_t, is the maximum amount of current that can flow in the circuit. The amount of this current is determined by both the Intensity Limit and Vertical Chopped Blanking. When both of these inputs are HI the collector current of U99D, I_t, is maximum. This maximum level of I_t is determined by current I₁ in the base circuit of U99D established by networks R76-R77 and R62-R63 into R110 and the collector of U99E. During Vertical Chopped Blanking, the respective input level goes LO. This reduces so the collector current of U99D, I_t, drops to blank the crt display during vertical trace switching.

The collector current of U99C, I_s is the difference between I_t and I_2 . When the Sweep Gate level at the base of U99A is LO (no sweep in progress) U99A is off. I_2 is at its maximum level so that I_s is minimum to provide minimum intensity of the display (I_s is always = $I_t - I_2$). During sweep time, the Sweep Gate level is HI and turns U99A on by the current established by INTENSITY control R102. As the

(A)

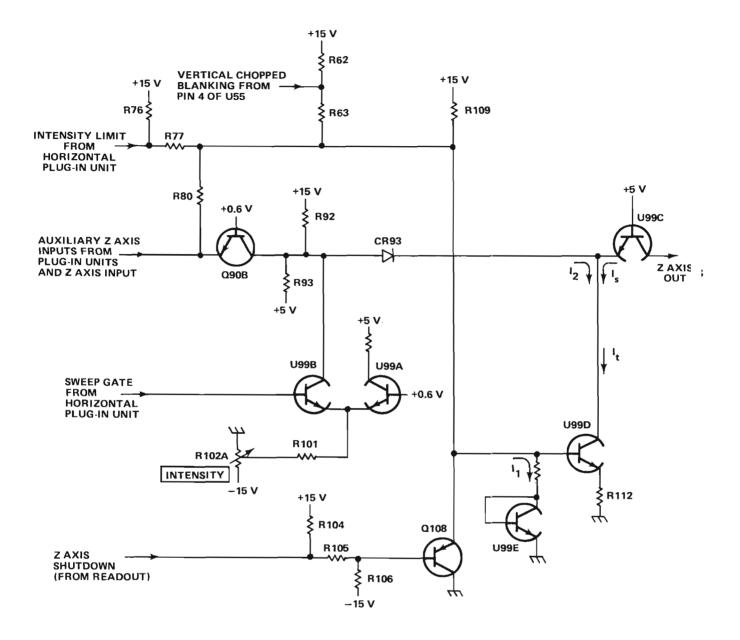


Figure 3-3. Z-Axis logic block diagram.

INTENSITY control is turned toward maximum, the level of l_2 decreases. This allows l_s to increase to produce a brighter display. The Auxiliary Z-Axis Inputs from the plug-in compartments and the intensity modulating signal from the EXT Z-AXIS input connector are connected to the emitter of Q90B. These signals modulate the level of l_2 to, in turn, modulate the intensity of the display.

Through R77 and R78, this causes equal reductions in currents I_1 and I_2 except, because of diode CR93, I_2 cannot be less than zero. This limiting action does not change I_s except to limit its maximum value to this lower I_+ value.

When the time-base unit is set to a sweep rate which requires intensity limiting, the Intensity Limit input goes to ground level in the plug-in unit. Through R77 and R78, this causes equal reductions in currents I_1 and I_2 except, because of diode CR93, I_2 cannot be less than zero. This limiting actions does not change I_5 except to limit its maximum value to this lower I_7 value.

When readout information is to be displayed on the CRT, the Z-Axis shutdown goes LO. This forward biases Q108, and it saturates, shunting I_1 to ground. This reduces the output current to zero during the readout time.

CLOCK GENERATOR

One half of integrated circuit U55 along with the external components shown in Figure 3-4A make up the Clock Generator stage. R1, Q1, Q2, and Q3 represent an equivalent circuit contained within U55A. This circuit, along with discrete components C59, R56, R57, and R59 comprise a two-megahertz, free-running oscillator to provide a timing signal (clock) for mainframe vertical and plug-in chopping.

The stage operates as follows: Assume that Q2 is conducting and Q1 is off. The collector current of Q2 produces a voltage drop across R1 which holds Q1 off. This negative level at the collector of Q2 is also connected to pin 14 through Q3 (see waveforms in Fig. 3-4B at time T_0). Since there is no current through Q1, C59 begins to charge towards -15 volts through R56-R57. The emitter of Q1 goes negative as C59

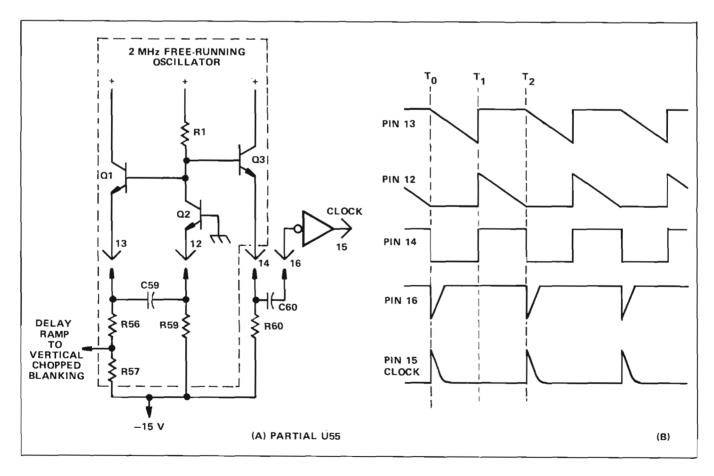


Figure 3-4. (A) Clock Generator stage of U55A. (B) Idealized waveforms from Clock Generator stage.

Theory of Operation-7633/R7633 Service

charges until it reaches a level about 0.6 volt more negative than the level at its base. Then, $\Omega 1$ is forward biased and its emitter rapidly rises positive. Since C59 cannot change its charge instantaneously, the sudden change in voltage at the emitter of $\Omega 1$ pulls the emitter of $\Omega 2$ positive also, to reverse-bias it. With $\Omega 2$ reverse biased, its collector rises positive to produce a positive output level at pin 14 (see time T_1 on the waveforms).

Now, conditions are reversed. Since Q2 is reverse biased, there is no current through it. Therefore, C59 can begin to discharge through R59. The emitter level of Q2 follows the discharge of C59 until it reaches a level about 0.6 volt more negative than its base. Then Q2 is forward biased and its collector drops negative to reverse-bias Q1. The level at pin 14 drops negative also, to complete the cycle.

Two outputs are provided from this oscillator. The Delay Ramp signal from the junction of R56-R57 is connected to the Vertical Chopped Blanking stage. This signal has the same waveshape as shown by the waveform at pin 13, with its slope determined by the divider ratio between R56-R57. A square-wave output is provided at pin 14. The frequency of this square wave is determined by the RC relationship between C59 and R56, R57, and R59. The duty cycle is determined by the ratio of R56-R57 to R59.

The square wave at pin 14 is connected to pin 16 through C60. C60, along with the internal resistance of U55A, differentiates the square wave from pin 14, to produce a negative-going pulse coincident with the falling edge of the square wave (positive-going pulse coincident with rising edge has no effect on circuit operation). This negative-going pulse is connected to pin 15 through an inverter-shaper which is also part of U55A. The output at pin 15 is a positive-going Clock pulse at a repetition rate of about two megahertz.

VERTICAL CHOPPED BLANKING

The Vertical Chopped Blanking stage is made up of the remaining half of integrated circuit U55B, Fig. 3-5A. This stage determines if Vertical Chopped Blanking pulses are required, based upon the operating mode of the vertical system or the plug-in units (dual trace units only). Vertical Chopped Blanking pulses are produced if: (1) VERT MODE switch is set to CHOP; (2) dual-trace vertical unit is operating in the chopped mode and that unit is being displayed; (3) dual-trace vertical unit is operating in the chopped mode with the VERT MODE switch set to ADD. The repetition rate of the negative-going Vertical Chopped Blanking pulse output at pin 4 is always two megahertz as determined by the Clock Generator stage.

The Delay Ramp signal from the Clock Generator stage determines the repetition rate and pulse width of the Vertical Chopped Blanking pulses. The Delay Ramp applied to pin 10 starts to go negative from a level of about +1.1 volts coincident with the leading edge of the Clock pulse (see waveforms in Fig. 3-5B). This results in a HI quiescent condition for the Vertical Chopped Blanking pulse. The slope of the negative-going Delay Ramp is determined by the Clock Generator stage. As it reaches a level slightly negative from ground, the Vertical Chopped Blanking pulse output level changes to the LO state. This signal remains LO until the Delay Ramp goes HI again. Notice the delay between the leading edge of the Clock pulse generated by U55A and the leading edge of the Vertical Chopped Blanking pulse would not coincide with the switching between the displayed traces. The duty cycle of the square wave produced in the Clock Generator stage determines the pulse width of the Vertical Chopped Blanking pulses (see Clock Generator discussion for more information).

Whenever this instrument is turned on, the Vertical Chopped Blanking pulses are being produced at a two-megahertz rate. However, these pulses are available as an output at pin 4 only when the remaining inputs to U55B are at the correct levels. The following discussions give the operating conditions which produce Vertical Chopped Blanking pulses to blank the crt during vertical trace switching. Figure 3-5A identifies the functions of the pins of U55B.

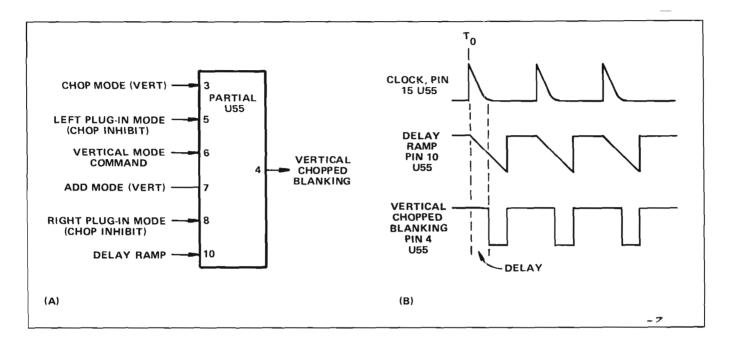


Figure 3-5. (A) Input and output pins for Vertical Chopped Blanking stage. (B) Idealized waveforms for Vertical Chopped Blanking stage.

Theory of Operation-7633/R7633 Service

CHOP VERTICAL MODE

When the VERT MODE switch is set to CHOP, Vertical Chopped Blanking pulses are available at pin 4 at all times. The input conditions necessary are:

PIN 3 HI - VERT MODE switch set to CHOP.

Pin 7 LO - VERT MODE switch set to any position except ADD.

Pin 10 LO - Delay Ramp more negative than about 0 volts.

LEFT VERTICAL UNIT SET FOR CHOPPED OPERATION

If the Left Vertical unit is set for chopped operation, the setting of the VERT MODE switch determines whether the Vertical Chopped Blanking pulses are available. If the VERT MODE switch is set to the CHOP position, conditions are described above. Operation in the ADD position of the VERT MODE switch is given later. For the LEFT position of the VERT MODE switch, or when the left vertical unit is to be displayed in the ALT mode, Vertical Chopped Blanking pulses are available at all times (two-megahertz rate). The input conditions are:

Pin 3 LO - VERT MODE switch set to any position except CHOP.

Pin 5 LO - Left vertical unit set to chopped mode.

Pin 6 LO - Left vertical unit to be displayed (Vertical Mode Command LO).

Pin 7 LO - VERT MODE switch set to any position except ADD.

Pin 10 LO — Delay Ramp more negative than about 0 volts.

Notice that the Vertical Mode Command at pin 6 must be LO for output pulses to be available at pin 4. This means that when the VERT MODE switch is set to ALT, Vertical Chopped Blanking pulses are produced only during the time that the left vertical unit is to be displayed (unless right vertical unit is also set for chopped operation).

RIGHT VERTICAL UNIT SET FOR CHOPPED OPERATION

If the right vertical unit is set for chopped mode, operation is the same as described previously for the left vertical unit except that Vertical Chopped Blanking pulses are produced when the VERT MODE switch is set to RIGHT or when the Vertical Mode Command is HI in the ALT mode. The input conditions are:

Pin 3 LO - VERT MODE switch set to any position except CHOP.

Pin 6 HI - Right vertical unit to be displayed (Vertical Mode Command HI).

Pin 7 LO - VERT MODE switch set to any position except ADD.

Pin 8 LO - Right vertical unit set to chopped mode.

Pin 10 LO – Delay Ramp more negative than about 0 volts.

ADD VERTICAL MODE

When the VERT MODE switch is in the ADD position and either or both of the vertical units are operating in the chopped mode, Vertical Chopped Blanking pulses must be available to block out the transition between traces of the vertical units. The input conditions are:

Pin 3 LO - VERT MODE switch set to any position except CHOP.

Pin 5 LO — Left vertical unit set to chopped mode (can be HI if pin 8 is LO).

Pin 7 HI - VERT MODE switch set to ADD.

Pin 8 LO - Right vertical unit set to chopped mode (can be HI if pin 5 is LO).

Pin 10 LO - Delay Ramp more negative than about 0 volt.

Fig. 3-6A shows a logic diagram of the Vertical Chopped Blanking stage. Notice the comparator block on this diagram (one input connected to pin 10). The output of this comparator is determined by the relationship between the levels at its inputs. If pin 10 is more positive (HI) than the grounded input, the output is HI also; if it is more negative (LO), the output is LO. An input/output table for this stage is given in Fig. 3-6B.

CHOP COUNTER

The Chop Counter stage produces the Mainframe Chop Signal and the Vertical Plug-In Chop Signal. The Clock pulse produced by the Clock Generator stage provides the timing signal for this stage. A logic diagram of the Chop Counter, identifying the inputs and outputs, is shown in Fig. 3-7.

The Chop Counter stage consists of integrated circuit U123, a dual D-type flip-flop with direct-set, direct-clear inputs (see Table 3-1 for operation of D-type flip-flop). As connected in this circuit, these D-type flip-flops operate as triggered (toggle) flip-flops.

The two-megahertz clock pulses from the Clock Generator stage are connected to the trigger (T) input of U123B. As connected, U123B changes output states with each positive-going Clock pulse, and the signal as its '1' output is a square wave which switches between the HI and LO levels at a one-megahertz

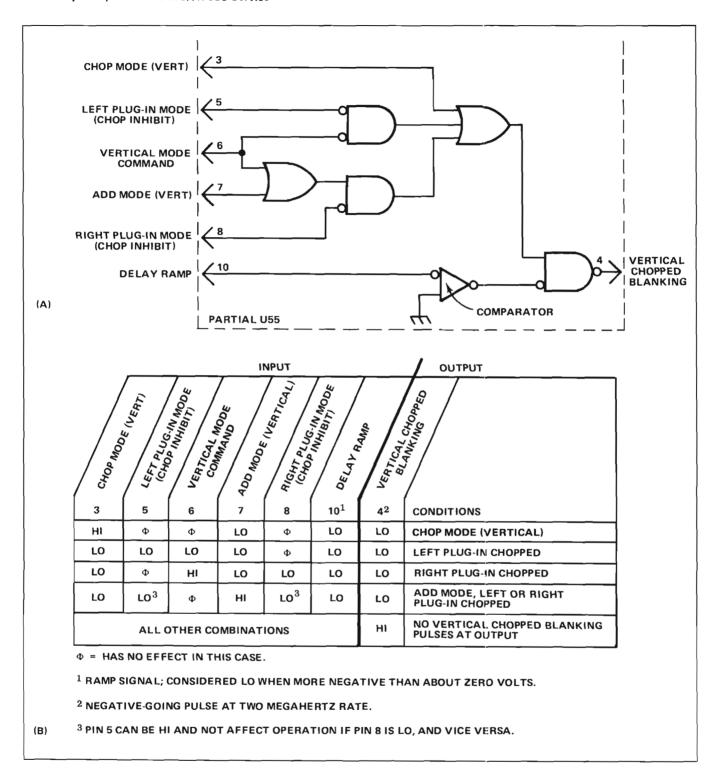


Figure 3-6. (A) Logic diagram for Vertical Chopped Blanking stage. (B) Table of input/output combinations for Vertical Chopped Blanking stage.

rate. This signal is connected to the Vertical Mode Control stage to provide the Vertical Mainframe Chop Signal. It is also connected to the trigger input of U123A. U123A also changes output states with each positive-going pulse at its trigger input to produce a 500 kilohertz square wave at its '1' output. The output from U123A provides the Vertical Plug-In Chop Signal to the Plug-In Chop Buffer stage. Idealized waveforms showing the timing relationship between the input and output signals for this stage are shown in Fig. 3-8.

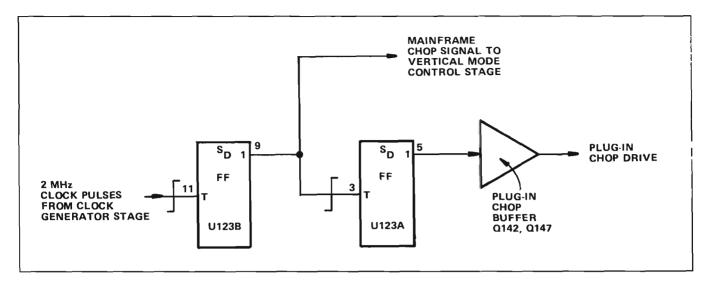


Figure 3-7. Detailed logic diagram of Chop Counter stage.

VERTICAL MODE CONTROL

The Vertical Mode Control stage is made up of discrete components CR124-CR125, CR126, CR130-CR155, CR172, and buffer amplifier Q132-Q137. These components develop the Mainframe Vertical Mode Command which is connected to the Main Interface circuit (vertical plug-in compartments and trigger selection circuitry) and the Vertical Interface circuit to indicate which vertical unit is to be displayed. When this output level is HI, the right vertical unit is displayed and when it is LO, the left vertical unit is displayed.

The VERT MODE switch located on diagram 1 provides control levels for this stage. This switch provides a HI level on only one of four output lines to indicate the selected vertical mode; the remaining lines are LO. The fifth mode, LEFT, is indicated when all four output lines are LO. Operation of this stage in all positions of the VERT MODE switch is as follows:

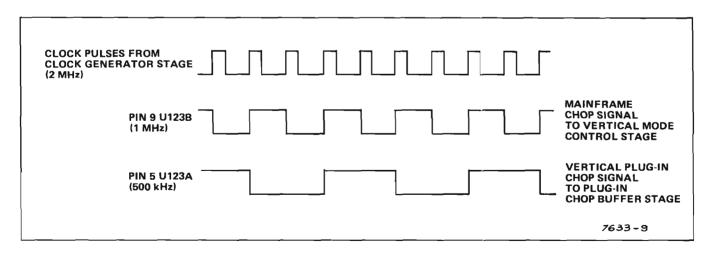


Figure 3-8. Idealized input and output waveforms for Chop Counter stage.

REV. B, AUG. 1974 3-17

Theory of Operation-7633/R7633 Service

RIGHT

When the VERT MODE switch is set to RIGHT, a HI level is connected to the Buffer Amplifier through R126 and CR126. The LO level at the anodes of diodes CR125 and CR130 holds them reverse biased. The resultant Vertical Mode Command output from the Vertical Mode Buffer Amplifier is a HI level to indicate that the right vertical unit is to be displayed.

CHOP

In the CHOP position of the VERT MODE switch, a HI level is applied to the anodes of diodes CR124-CR125 through R125. Both diodes are forward biased so the Vertical Chop Signal from pin 9 of U123B can pass to the emitter of Q132. This signal switches between the HI and LO levels at a one-megahertz rate and it produces a corresponding Mainframe Vertical Mode Command output at the emitter of Q137. When this output is HI, the right vertical unit is displayed and when it switches to LO, the left vertical unit is displayed.

ALT

In the ALT mode, the VERT MODE switch applies a HI level to the anodes of diodes CR130-CR155 through R130. These diodes are forward biased so the Display Right Command from pin 5 of U156A can pass to the emitter of Q132 to determine the Mainframe Vertical Mode Command level. The Display Right Command switches between its HI and LO levels at a rate determined by the Vertical Binary stage.

ADD AND LEFT

The control levels in the ADD and LEFT positions of the VERT MODE switch are not connected to this stage. However, since only the line corresponding to the selected vertical mode can be HI, the RIGHT, CHOP, and ALT lines must remain at their LO level when either LEFT or ADD are selected. Therefore, the emitter of Q132 remains LO to produce a LO Mainframe Vertical Mode Control output level. Final control of LEFT or ADD mode is made by the Vertical Interface circuit.

A logic diagram of the Vertical Mode Control stage is shown in Fig. 3-9. The discrete components which make up each logic function are identified. The gate connected to the input of the Vertical Mode Buffer Amplifier is a phantom-OR gate. A phantom-OR gate performs the OR logic function merely by interconnection of the three inputs.

VERTICAL BINARY

The Vertical Binary stage consists of integrated circuit U156A and transistor Q150. U156A is a D-type flip-flop with direct-set and direct-clear inputs (see Table 3-1 for operating details). The connection between the "O" output and the data (D) input enables this flip-flop to operate in the triggered mode. A logic diagram of the Vertical Binary stage is shown in Fig. 3-10.

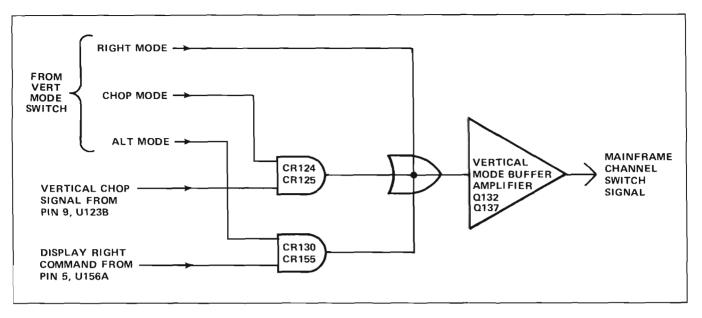


Figure 3-9. Logic diagram of Vertical Mode Control and Vertical Mode Buffer Amplifier stages.

The operation of the Vertical Binary stage is controlled by the level of the ALT Mode line from the VERT MODE switch. When this switch is set to ALT, a HI level is connected to the emitter of Q150 through R152. This HI level disables Q150 so its collector remains HI. As a result, Q150 has no effect upon operation of the Vertical Binary stage and the direct-clear input of U156A remains HI so it does not affect the operation of U156A. Therefore, U156A operates as a basic triggered flip-flop which changes output states with each positive-going Sweep Holdoff pulse at the trigger (T) input. The Sweep Holdoff pulse goes positive at the end of each sweep. The signal at the '1' output of U156A switches between the HI and LO level at one-half the rate of the Sweep Holdoff signal from the horizontal plug-in unit. Fig. 3-11 shows the time relationship between the input and output signals for this stage, and gives the resultant display with each signal combination.

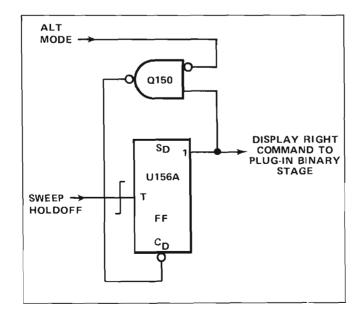


Figure 3-10. Logic diagram of Vertical Binary stage.

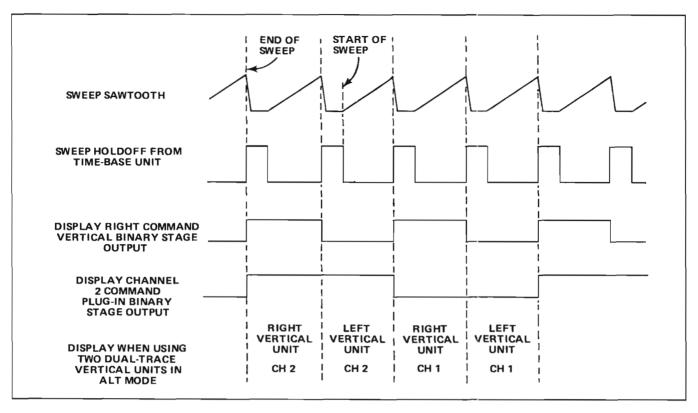


Figure 3-11. Idealized waveforms showing relationship between input and output waveforms for Vertical Binary and Plug-In Binary stages when operating in ALT mode.

For any other position, the emitter of Q150 is pulled LO by the ALT Mode command from the VERT MODE switch. This enables Q150, but it does not change output state unless the level at the '1' output of U156A is HI. Quiescently, the output of Q150 is HI. Therefore, when the positive-going Sweep Hold-off pulse is received at the end of the sweep, the '1' output of U156A goes HI. This activates Q150 and its output goes LO to provide a direct-clear reset to U156A. The '1' output of U156A is reset to its LO level, and Q150 is again disabled so its output returns to the HI level. The stage is now ready for the next positive-going Sweep Hold-off pulse. The action is the same with each pulse, so the signal at the output of this stage is at the same repetition rate as the Sweep Holdoff input. Therefore, this stage is now operating as a divide-by-one counter rather than a divide-by-two counter as described previously. The output under this condition is used only by the Plug-In Binary stage.

Since the Vertical Binary stage can change output states only at the end of each sweep, there will be no Alternate Drive signal for either the mainframe or vertical plug-in units if a sweep is not being produced by the horizontal plug-in unit.

PLUG-IN BINARY

The Plug-In Binary stage consists of U156B, which is connected as a triggered flip-flop with direct-set input. The trigger input for this stage is the Display Right Command from the Vertical Binary stage. When the VERT MODE switch is set to ALT, the repetition rate of the Display Channel 2 Command output of this stage is one-fourth of the Sweep Holdoff input (see waveforms in Fig. 3-11). For any position of the VERT MODE switch except ALT, the repetition rate of the output signal from this stage is one-half of the Sweep Holdoff input. A logic diagram of the Plug-In Binary stage is shown in Fig. 3-12.

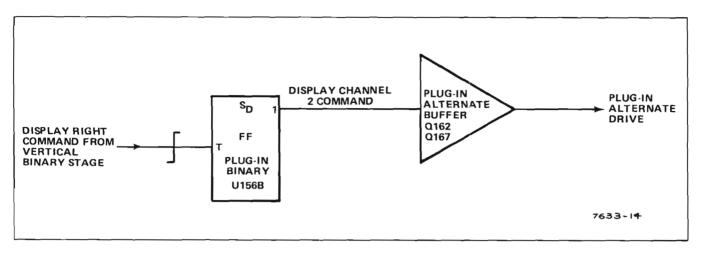


Figure 3-12. Logic diagram of Plug-In Binary and Plug-In Alternate Buffer stage.

OUTPUT BUFFERS

The output switching commands from the Logic circuit are provided through buffer stages Q142,Q137, Q142-Q147, Q162-Q167, and Q182-Q187. Each of these stages includes a common-base input transistor to provide a low-impedance load for the associated driving stages. The output transistor is connected as an emitter-follower to provide isolation between the Logic circuit and other circuits within this instrument or the plug-in units.



The Trigger source switch determines which vertical signal is connected to the time-base unit, and which vertical signal, that is provided at VERT SIG/OUT connector on the rear panel. Fig. 3-13 shows a detailed block diagram of the Trigger Selector circuit, along with a simplified diagram of all the circuitry involved in selection of the trigger source. A schematic of the Trigger Selector circuit is shown on diagram 3 at the rear of this manual.

TRIGGER MODE AND ADD SIGNALS

GENERAL

The circuitry shown on the left side of the simplified diagram in Fig. 3-13 determines the operation of the Trigger Channel Switch stage. TRIG SOURCE switch S1011 controls Trigger Channel Switch U324. When the TRIG SOURCE switch is set to the VERT MODE position, the setting of the VERT MODE switch determines the trigger selection. In the LEFT or RIGHT positions, the trigger signal is obtained from the indicated vertical unit. The following discussions give detailed operation in each position of the TRIG SOURCE switch.

VERT MODE

In the VERT MODE position of the TRIG SOURCE switch, the setting of the VERT MODE switch determines the operation of the Trigger Channel Switch stage. In the LEFT position of the VERT MODE switch, the base of Q314 is connected to ground through the ALT and RIGHT sections of S1021, CR1021 and CR1026, and S1011. This holds Q314 reverse biased to provide a LO level to pin 4 of U324 (see Fig. 3-14).


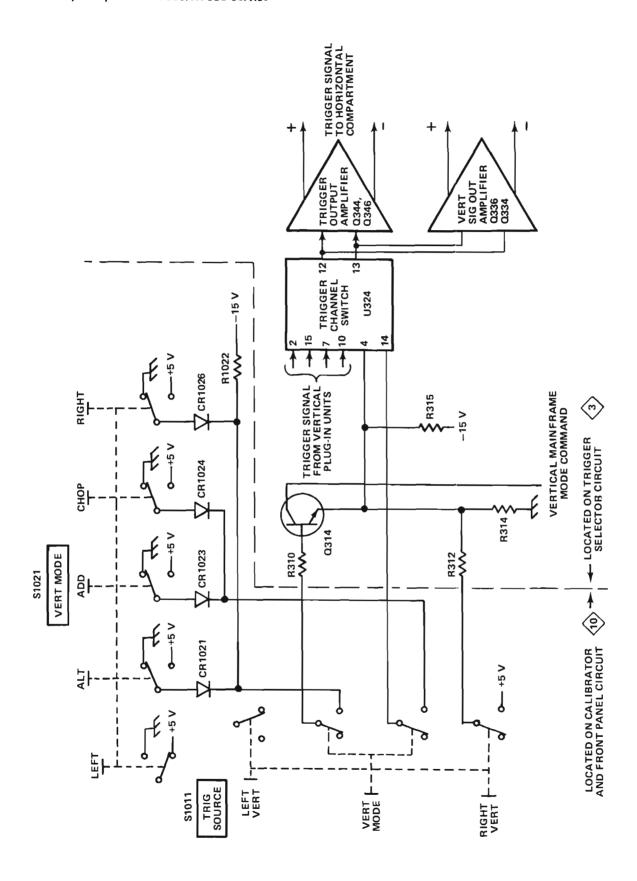


Figure 3-13. Detailed block diagram of Trigger Selector circuit along with simplified diagram of trigger source selection circuitry.

When the VERT MODE switch is set to ALT, +5 volts is applied to the base of Q314 through CR1021 and S1011. Q314 is forward biased and its emitter level is determined by the Mainframe Vertical Mode Command signal from the Logic circuit applied to its collector. This signal switches between the HI level (Right Vertical unit to be displayed) and the LO level (Left Vertical unit to be displayed) at the end of each sweep. When the Mainframe Vertical Mode Command is HI, it provides a positive collector voltage to Q314. Q314 is saturated due to CR1021, and its emitter level is very near the collector level. This provides a HI output level to the Trigger Channel Switch stage. As the Mainframe Vertical Mode Command goes LO, the collector supply for Q314 also goes negative. Q314 remains saturated and the output again follows the collector level to supply a LO output level to U324.

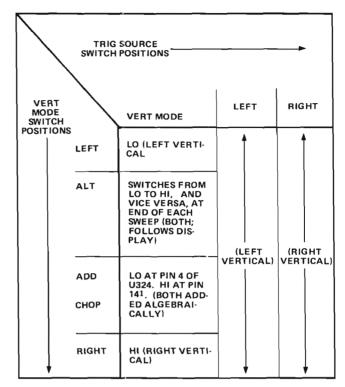

¹ PIN 14 LO FOR ALL OTHER CONDITIONS.

For ADD and CHOP vertical mode operation, +5 volts is connected to pin 14 of U324 through

Figure 3-14. Input levels at pin 4 of U324.

CR1023 or CR1024 and S1011. At the same time, the base of Q314 is held LO by the ground connection through the ALT and RIGHT section of S1021 so the level at pin 4 of U324 is LO also (produces an ADD mode in Trigger Channel Switch; see description of this circuit which follows). In the RIGHT position of the VERT MODE switch, +5 volts is connected to the base of Q314 through CR1026 and S1011 to forward-bias the transistor. The Mainframe Vertical Mode Command signal connected to the collector of Q314 is also HI in this mode, and a HI output level is produced at the emitter of Q314.

LEFT

When the LEFT trigger source is selected, the VERT MODE switch is aisconnected from the trigger selector circuitry. Now the ground connection through the RIGHT section of S1011 establishes a LO output level at the emitter of Q314.

RIGHT

In the RIGHT position of the TRIG SOURCE switch, +5 volts is connected to the emitter of Q314 through S1011 and R312. This produces a HI output level to the Trigger Channel Switch stage.

TRIGGER CHANNEL SWITCH

The Trigger Channel Switch stage determines which input signal provides the trigger signal to the horizontal compartment as controlled by the Trigger Mode and ADD signals from the trigger selection circuitry. Refer to diagram 3 during the following discussion.

Resistors R317-R319 establish the input resistance and provide a load for the trigger signal from the right vertical plug-in unit. Resistors R307 and R308 provide the input resistance and load for the left vertical plug-in unit. R321-R323-R324 and R326-R327-R328 establish the operating level of the Trigger Channel Switch; R321-R323 and R326-R328 set the current gain for each channel. This stage is made up primarily of integrated circuit U324. An input/output table for U324 is shown in Fig. 3-15. U324 provides a high impedance differential input for the trigger signal from the left vertical unit at pins 2 and 15, and for the trigger signal from the right vertical unit at pins 7 and 10. The output signal at pins 12 and 13 is a differential signal. The sum of the dc current at pins 12 and 13 is always equal to the sum of the dc currents at pins 1, 8, 9, and 16 in all modes. This provides a constant dc bias to the stages which follow as the TRIG SOURCE or the VERT MODE switches are changed.

When the level at pin 4 is LO (see Trigger Mode and ADD Signals discussion and Fig. 3-15), the trigger signal from the left vertical unit passes to the output, while the trigger signal from the right vertical unit is

blocked. A HI level at pin 4 connects the trigger signal from the right vertical unit to the output and the trigger signal from the left vertical unit is blocked. For VERT MODE operation in the ALT position of the VERT MODE switch, the level at pin 4 switches between the LO and HI level at a rate determined by the Vertical Binary stage (see Logic circuit description). This action obtains the trigger signal from the left vertical unit when the left vertical unit is being displayed and from the right vertical unit when it is being displayed.

When the level at pin 4 is LO and the level at pin 14 is HI, the trigger signal from both the left and right vertical units passes to the output pins. This condition occurs only when the TRIG SOURCE switch is set to VERT MODE and the VERT MODE switch is set to either ADD or CHOP. Under this operating mode, the trigger output signal is the algebraic sum of the trigger input signals from the

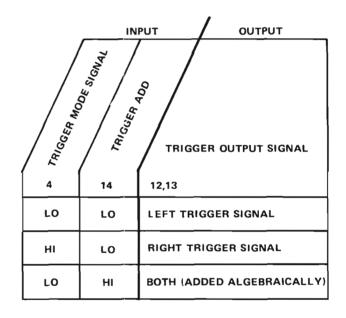


Figure 3-15. Input/output table for Trigger Channel Switch stage.

left and right vertical units to prevent triggering on the vertical chopping transition, or only on one signal of an added display.

TRIGGER OUTPUT AMPLIFIER

The trigger output at pins 12 and 13 of U324 is connected to the bases of Q344-Q346 to provide the internal trigger signal for the horizontal unit (via the Main Interface circuit). The horizontal unit provides a 50-ohm differential load for this stage. If it is removed from its compartment, the collector load for Q344-Q346 changes and the voltage at their collectors increases. This stage prevents this change from affecting the Vertical Signal to the Output Signal board. CR341 and CR349 clamp the collectors of Q344 and Q346 at about +0.6 volt to prevent these transistors from saturating under this no-load condition.

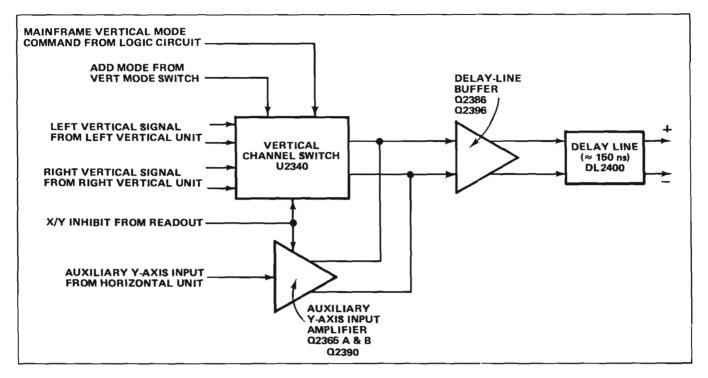


Figure 3-16. Vertical Interface detailed block diagram.

VERTICAL SIGNAL BUFFER

The trigger output signal at pin 12 and 13 of U324 is also connected to the emitter of a common-base amplifier Q336 and Q334. The output signal at the collector of Q336 and Q334 is connected to the signals out board.

VERTICAL INTERFACE 4

The Vertical Interface circuit selects the vertical deflection signal from the output of the left or right vertical plug-in unit. Figure 3-16 is a detailed block diagram of the Vertical Interface circuit. A schematic of this circuit is shown on diagram 4.

VERTICAL CHANNEL SWITCH

The Vertical Channel Switch stage (controlled primarily by the Mainframe Vertical Mode Command from the Logic circuit) determines which vertical signal is to be sent to the Delay-Line Driver stage. Resistors R2333-R2335 and R2337-R2339 establish the input resistance of this stage and provide a load for the left and right vertical units. Resistors R2347-R2349 and R2357-R2359-R2329 establish the operating levels for this stage. R2343 and R2353 set the current gain for each channel. C2345-R2345 and C2355-R2355 provide frequency compensation.

The Vertical Channel Switch stage is made up primarily of integrated circuit U2340, which is the same type as used for the Trigger Channel Switch. An input/output table for U2340 is shown in Figure 3-17. U2340 provides a high impedance differential input for the signal from the left vertical unit at pins 2 and 15, and the signal from the right vertical unit at pins 7 and 10. The output signal at pins 12 and 13 is a differential signal that is connected to the Delay-Line Driver stage through R2366-R2376. The sum of the dc output currents at pins 12 and 13 is always equal to the sum of the dc input currents at pins 1, 8, 9, and

Theory of Operation-7633/R7633 Service

16 in all modes. This provides a constant dc bias to the following stage as the VERT MODE switch is changed.

When the VERT MODE switch is set to LEFT, the level at pin 4 is LO. This level allows the signal from the left vertical unit to pass to the output while the signal from the right vertical unit is blocked. In the RIGHT position of the VERT MODE switch, the level at pin 4 is HI. Now, the signal from the right vertical unit is connected to the output while the signal from the left vertical unit is blocked.

When the VERT MODE switch is set to either ALT or CHOP, the Mainframe Vertical Mode Command at pin 4 switches between the LO and HI levels at a rate determined by either the Chop Counter or the Vertical Binary stages (see Logic circuit

	INPUT / OUTPUT						
	ADD MODE (VERT) (OFF) (OFF) (OFF) (OFF) (OFF)						
ME	ADD MODE (VER) (OFF) (OFF) (OFF)						
VERY A	MOD WOO	SHOW THE	:/				
MAIN VER	466	130	OUTPUT SIGNAL				
4	14	6	12, 13				
LO	LO	LO	LEFT VERTICAL SIGNAL				
н	LO	LO	RIGHT VERTICAL SIGNAL				
LO	н	LO	BOTH (ADDED ALGEBRAICALLY)				
LO	LO	н	NEITHER (OFF)				

 $LO \approx -0.6 \text{ V}$ $HI \approx +1.1 \text{ V}$

Figure 3-17. Input/output table for Vertical Channel Switch.

description). This action allows the signal from the left vertical unit to be displayed when the Mainframe Vertical Mode Command is LO and the signal from the right vertical unit is displayed when the Mainframe Vertical Mode Command is HI. When ADD vertical mode operation is selected, a HI level is applied to pin 14 and the level at pin 4 is LO as determined by the Vertical Mode Control stage in the Logic Circuit. This allows both the right and left vertical signals to pass to the output pins. Now, the signal from both vertical units is algebraically added and the resultant signal determines the vertical deflection.

The X/Y Inhibit signal from the Readout system is applied to pin 6 of U2340. It has final control over the output signal from U2340. When the X/Y Inhibit signal is LO, the signal from the selected vertical can pass to the output pins 12 and 13. However, when the Readout system is ready to display Readout information, the level at pin 6 of U2340 goes HI and signals from both vertical compartments are blocked. The auxiliary Y-axis Amplifier is also disabled by the X/Y Inhibit signal.

AUXILIARY Y-AXIS INPUT AMPLIFIER

The Auxiliary Y-Axis Input Amplifier accepts an input from horizontal plug-in units having compatible features. For example, a trace separation voltage to offset a delayed display. The single-ended signal connected to the input of this stage is converted to a push-pull signal at the collectors of Q2365 A and B. Q2390 permits the X/Y Inhibit to turn off this amplifier.

DELAY-LINE BUFFER

The output of the Vertical Channel Switch stage, along with any signal from the Auxiliary Y-Axis Input Amplifier, is connected to the bases of Q2386 and Q2396. These transistors are connected in a common emitter shunt feedback configuration to provide a low impedance summing point, and voltage gain. L2386-L2396 and C2387-R2387, C2397-R2397, and C2398-R2398-R2388 improve both the high-frequency response and the reverse impedance termination for the Delay Line.

DELAY LINE

Delay Line DL2400 provides approximately 150 nanoseconds delay for the vertical signal, to allow the horizontal circuits time to initiate a sweep before the vertical signal reaches the vertical deflection plates of the crt. This allows the instrument to display the leading edge of the signal originating the trigger pulse when using internal triggering. The delay line used in this instrument has a characteristic impedance of about 50 ohms per side, and 100 ohms differentially.

VERTICAL AMPLIFIER 4

The Vertical Amplifier circuit provides final amplification for the vertical signal before it is applied to the vertical deflection plates of the crt. This circuit includes an input from the BEAMFINDER switch to compress an overscanned display within the viewing area of the crt. Figure 3-18 shows a detailed block diagram of the Vertical Amplifier circuit. A schematic of this circuit is shown on diagram 4 in the diagrams section.

CENTERING AND READOUT AMPLIFIER

Q2530-Q2430 compose a paraphase amplifier to provide balance or centering control for the Vertical Amplifier by changing the ratio of the current that is summed at the emitters of Q2441-Q2541. In addition, this stage provides the input for the vertical readout signal through J2534 and the base of Q2530.

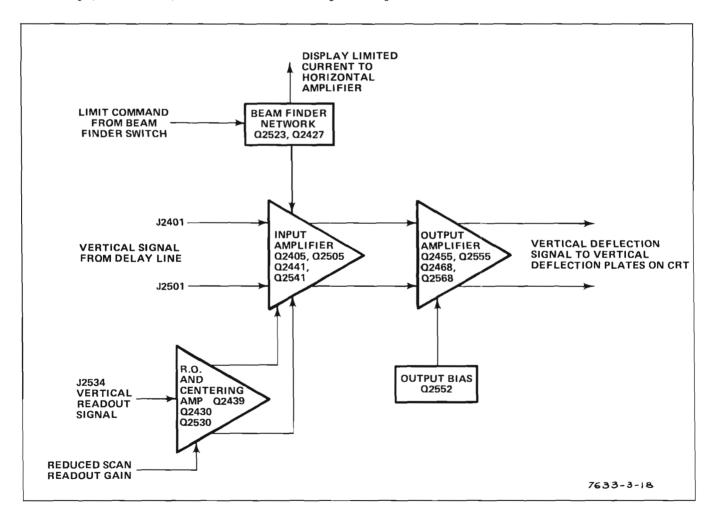


Figure 3-18. Vertical Amplifier detailed block diagram.

Theory of Operation-7633/R7633 Service

Q2439 acts as a switch to add R2538-R2438 to the emitter circuit of Q2530-Q2430. This effectively increases the gain of the readout amplifier in the Reduced Scan mode, so that the readout is positioned outside the Reduced Scan graticule area.

INPUT AMPLIFIER

Forward termination of the delay line is accomplished by R2402-R2502, in conjunction with the input impedance of Q2405-Q2505. R2402-R2502 also act as load resistors for the Delay-Line Buffer stage. Q2405-Q2441-Q2505-Q2541 are connected in a cascade configuration. The RC networks in the emitters of Q2405-Q2505 compensate for the losses in the delay line and provide some temperature compensation for the Vertical Amplifier.

The emitter current of Q2405-Q2505 is returned through the Beam Finder switch Q2423. When the Beam Finder is activated, Q2423 is turned off and the current path is through R2423, thus reducing the dynamic range of the input amplifier to limit the display vertically within the graticule area.

Thermal balancing of the vertical amplifier is accomplished by R2527, which adjusts the base voltage of Q2441-Q2541.

The signal from Q2441-Q2541 is connected to the output amplifier through the transmission line, which is terminated by L2448-L2548 and R2448-R2548. The vertical gain is adjusted by R2446, a shunt across the collectors of Q2441-Q2541.

BEAMFINDER NETWORK

The Beamfinder Network provides a means of locating a display that overscans the graticule area. Under normal operation, the Display Limit Command is at -15 volts, which holds Q2427 cut off and allows Display Limited Current for the Horizontal Amplifier to rise to about +8 volts. During this time, Q2423 is held on and emitter current from Q2405-Q2505 flows through Q2423 to ground. When the BEAMFINDER switch is pressed, the Display Limit Command rises positive, turning Q2427 on and Q2423 off. This pulls the Display Limit Current to -15 volts, and reduces the emitter current of Q2405-Q2505 to a level that limits the dynamic range of the input stage. R2523-R2524 serve to maintain the proper common mode voltage at the output of the amplifier when the BEAMFINDER is used.

OUTPUT AMPLIFIER

The output cascade amplifier is driven through "T coils" to increase high frequency gain. High-frequency compensation is provided by C2456 and the varactor network in the emitters of Q2455-Q2555.

Output common base stage Q2468-Q2568 is driven through the RC matching networks between the collectors of Q2455-Q2555 and emitters of Q2468-Q2568. The output signal at the collectors of Q2468-Q2568 provides the vertical deflection signal for the crt.

HORIZONTAL AMPLIFIER



The Horizontal Amplifier circuit amplifies the push-pull horizontal deflection signals from the plug-in unit in the horizontal compartment and connects it to the horizontal deflection plates of the crt. Figure 3-19 shows a detailed block diagram of the Horizontal Amplifier circuit. A schematic diagram of this circuit is shown in the diagrams section at the rear of this manual.

HORIZONTAL CHANNEL SWITCH

Signals from the plug-in unit in the horizontal compartment are connected to pins 2 and 15 of integrated circuit U510. The Readout signal is connected to pin 7 of U510. U510 determines which input signal will be applied to the Horizontal Amplifier circuit. This is controlled by the X/Y Shutdown signal from the Readout system. When the X/Y Shutdown signal is LO, the signal from the horizontal compartment is passed to the output of U510. When the X/Y Shutdown is HI, the Readout signal is passed to the output of U510. Resistors R514, R515, R521, and R522 establish the operating levels for this circuit. The range of Gain Adjustment R512 is established by R511 and R513. The output is a differential signal

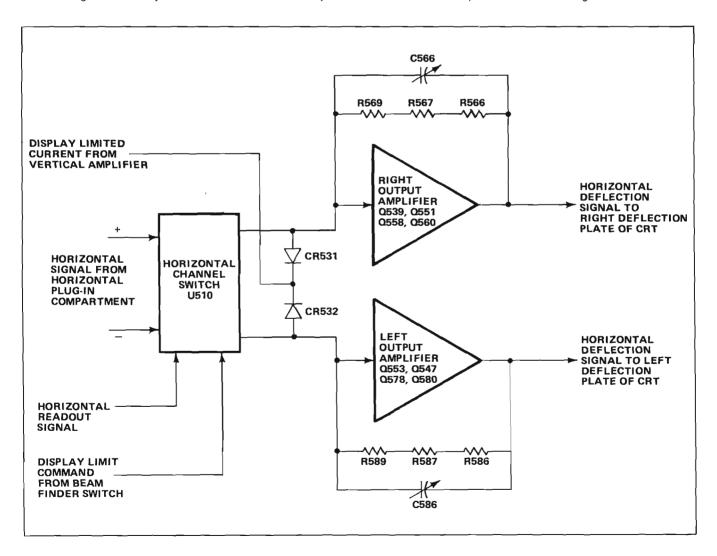


Figure 3-19. Horizontal Amplifier detailed block diagram.

Theory of Operation-7633/R7633 Service

connected to the Horizontal Amplifier circuit. For a more detailed explanation of the channel switch operation see Trigger Channel Switch under Trigger Select Operation.

For normal operation, the Display Limit Command is connected to the -15 supply through the BEAMFINDER switch. When the BEAMFINDER switch is actuated, the -15 volt is interrupted to limit the current to U510. At the same time, current is added through CR531 and CR532 from the Display Limited Current line. This maintains the same DC currents to the output amplifier in both positions of the BEAMFINDER switch. The signal at the output is connected to the left and right amplifiers. R525 adjusts the amplifier for center screen deflection with no signal.

RIGHT OUTPUT AMPLIFIER

Transistors Q539, Q551, Q558, and Q560 are connected as a current-driven feedback amplifier. The input current is converted to a voltage output signal to drive the right horizonal deflection plate of the crt. The signal at the collector of Q539 is connected to the emitters of output transistors Q558-Q560 through emitter follower Q551 and parallel paths C555-R555 and R563. The signal is connected to the emitter of Q560 through R563. The output transistors Q558 and Q560 are connected in the complementary configuration to provide less resistive loading at the output. The output signal at the collectors of Q558-Q560 is connected to the right deflection plate of the crt through R565.

The crt deflection plates present a capacitive load to the amplifier, which requires additional current during a fast sweep. Extra current for positive excursions is provided by Q551 via R555, C555, and Q558 and for negative excursions, via R563 and Q560.

Resistor R556 reduces the power dissipation in Q558 and resistor R560 reduces dissipation in Q560. Resistors R566, R567, and R569 provide dc feedback and establish low frequency gain. Capacitors C566 and C588 are adjusted for correct gain at fastest sweep rates. C584-R584 provide thermal compensation.

LEFT OUTPUT AMPLIFIER

Basic operation of the Left Output Amplifier stage is the same as just described for the Right Output Amplifier. C586 provides linearity adjustment for the Left Output Amplifier at fast sweep rates. The output signal at the collectors of Ω 578- Ω 580 is connected to the left deflection plate of the crt through R585.

The series circuit CR549 and R549 stablize the output amplifier during fast retrace intervals. R535 is adjusted to balance the negative excursions of the Right and Left Output Amplifier when the time base plug-in is used in X10 Magnified mode.

3-30 ®

SIGNAL OUT BOARD



The Signal Out circuit outputs to connectors mounted on the rear panel of the 7633. A schematic of this circuit appears in the diagrams section of this manual.

VERT SIG OUT

The vertical signal is selected by the TRIG SOURCE switch. The vertical signal selected is applied to the bases of a differential amplifier Q606 and Q618. A single-ended signal is taken off the collector of Q618 and connected to an output buffer Q620. CR621 and CR622 provide protection against a high voltage inadvertently applied to the output connector.

+ GATE OUT

The gate signal is connected to a comparator circuit Q662 and Q666 through resistor R660. From the comparator the gate signal is connected to the emitter of an output buffer Q672. Gate Selector switch connects one of the gate signals to R660, the input of the Gate Amplifier. Possible gate signals are MAIN gate and, with a dual-sweep time-base unit, a DELAY or an AUXILIARY gate signal can be selected. CR674 and CR676 provide protection against a high voltage inadvertently applied to the output connector.

+ SAWTOOTH OUT

The sawtooth signal is connected to the Sawtooth Amplifier through R36. Q631, Q634, and Q640 comprise a negative feedback amplifier with a gain of two, determined by the ratio of feedback resistor R645 to the combined input resistance of R630 and R63. CR635 and CR676 provide protection against a high voltage inadvertently applied to the output connector.

CRT CIRCUIT (7)



The CRT Circuit produces the high-voltage potentials and provides the control circuits necessary for operation of the cathode ray tube (crt). This circuit also includes the Z-Axis and Auto Focus amplifier stages. Figure 3-20 is a detailed block diagram of the CRT Circuit. A schematic diagram of the circuit is shown on diagram 7 in the diagrams section.

T1199 and Q1195 form a tuned-tank, sine-wave oscillator. Transformer T1199 has four secondary windings; the high-voltage winding, a 600 volt supply winding, a filament winding, and an oscillator feedback winding.

HIGH VOLTAGE REGULATION

The high-voltage tap on the secondary of T1199 is the source of current for the cathode of the crt. The ac is rectified through CR1213 and filtered by C1213, R1214, and C1214 to provide approximately

<u>A</u> 3-31

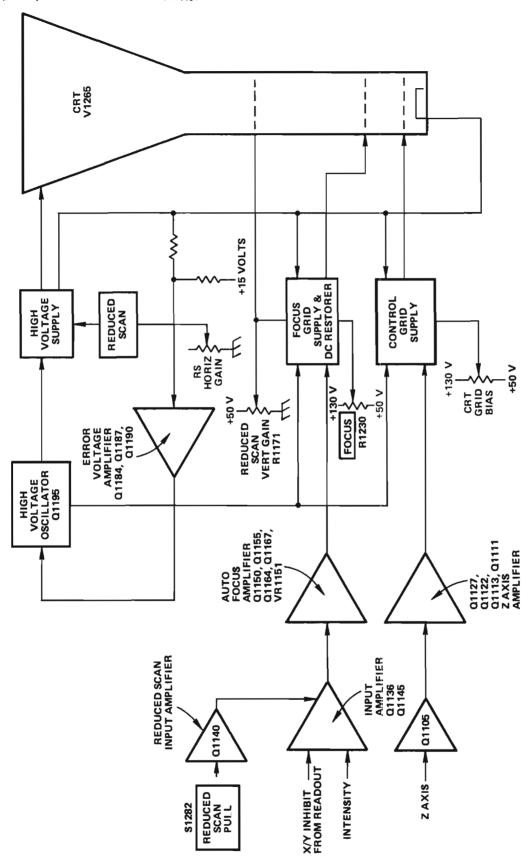


Figure 3-20. CRT circuit detailed block diagram.

-1500 volts to the cathode. In order to maintain a constant voltage on the cathode, this same tap serves to reference the feedback path to the oscillator. R1226A and R1226B (part of the same substrate for good stability) form a divider network. The signal at the junction of these two resistors is applied to the base of Q1184. This signal is an error voltage determined by comparing the bathode voltage against a positive voltage of approximately 15.6 volts appearing at the anode of CR1223.

The difference signal is amplified through Q1184 and Q1187 and applied to the base of emitter follower Q1190. The output of Q1190 is fed to the base of oscillator transistor Q1195 through the primary winding of T1199. The base winding ac return is provided by C1193. Resistor R1192 provides a fixed value current for the oscillator. This stabilizes the network by preventing the oscillator from stopping during the times the feedback network is shut off.

The top of the high-voltage winding supplies the positive accelerating potential for the crt anode. The anode supply is a voltage doubler consisting of C1201, CR1202, CR1203, C1202, R1204, R1205, R1206, and C1206. R1207 and R1208 provide electrical damping of mechanical resonance in the crt meshes.

The bottom of the high-voltage winding secondary connects to the crt tetrode. This tap is referenced to +50 volts through CR1216.

The crt filament voltage is supplied directly by the heater winding of the transformer secondary. The cathode and heater are connected through R1263 to prevent cathode-to-heater breakdown due to the large difference in potential between these two crt elements.

When S1282 is closed (REDUCED SCAN mode), K1177 is activated to introduce CR1210 into the circuit. This completes a voltage doubler circuit that provides approximately -3000 volts to the cathode and approximately -1500 volts to the tetrode.

AUTO FOCUS DC RESTORER

The Focus electrode is supplied by a voltage from the wiper arm of the Focus Preset control, R1242 through R1240 and R1239. R1243 adjusts the prefocus for Reduced Scan operation. The focus of the display is determined by the FOCUS control, R1230. This control and the Auto Focus amplifier maintain a well defined display under varying intensity conditions. The network consisting of CR1234, CR1238, CR1239, CR1233, VR1233, C1237, and C1238 provide a varying negative voltage translated to the proper dc level, for the focus grid of the crt. An ac voltage from the 600-volt winding of the transformer secondary is connected to the focus grid supply through C1235, R1235, and R1236. The positive clipping level at the junction of CR1233 and CR1234 is determined by the FOCUS control setting. The negative clipping level at the cathode of CR1234 is determined by the output level of the Auto Focus Amplifier.

A change in the intensity level, as changes in the peak-to-peak values of the ac voltage, is coupled to the focus grid from the Auto Focus amplifier through C1236 and C1238. This ac signal is introduced through CR1238 and CR1239 to vary the dc signal across R1239. Focus is adjusted by the front panel FOCUS control R1230.

AUTO FOCUS

The X/Y Inhibit signal from the Readout System determines the switching between Q1135 and Q1145, readout intensity or display inensity respectively. The conduction of either of these transistors, through R1147 sets the level at the base of Q1150. Q1150, Q1155, Q1164, and Q1165 comprise an analog feedback amplifier. The conduction of Q1150 controls the signal at the collector of Q1167. This signal is fed back to the base of Q1155 through a divider network. Q1155 and Q1150 form a differential amplifier which compares the focus signal with that of the intensity input at the base of Q1150.

In the REDUCED SCAN mode, Q1140 conducts and, through REDUCED SCAN Focus adjustments R1141 and R1142, sets the Auto Focus range for REDUCED SCAN operation.

CONTROL-GRID DC RESTORER

The Control-Grid DC Restorer couples dc and low frequency components of the Z-Axis Amplifier signal to the crt control grid. This allows the Z-Axis Amplifier to control the CRT beam current (intensity). The potential difference between the Z-Axis Amplifier output and the control grid (about 3000 volts) prohibits direct coupling.

The dc restorer is actually a cathode-referenced bias supply for the crt control grid. Quiescently, its output voltage is more negative than the cathode by an amount set by crt grid bias adjustment R1248.

The network consisting of diodes CR1251, CR1255, CR1257, and CR1258, provides the negative voltage for the control grid of the crt. Output level of this supply is set by crt. Grid Bias adjustment R1248. Approximately 600 volts peak-to-peak from the secondary of T1199 is connected to the control grid supply through C1253, R1253, and R1254. CR1255 and CR1251 clip this signal to determine the operating level at the control grid. CR1255 limits the negative excursion of the signal. Quiescently, when the crt is blanked, the anode of CR1255 is set at about +15 volts by the Z-Axis Amplifier stage. The positive clipping level at the cathode of CR1251 is set by crt Grid Bias adjustment R1248. R1248 is adjusted to bias the control grid of the crt just enough negative so the trace is blanked between sweeps.

The negative level at the crt cathode held constant by the High-Voltage Regulator is connected through R1259 to the cathode of CR1258. The clipped voltage developed by CR1251 and CR1255 is peak-to-peak rectified by CR1257 and CR1258 and super-imposed on this negative level. This results in a grid level, which is more negative than the crt cathode level. C1255 acts as a filter to provide a constant voltage output level. The unblanking gate level developed by the Z-Axis Amplifier stage is applied to the anode of CR1255 through R1118. Fast rising and falling portions of this signal are coupled directly to the crt grid through C1255.

Z-AXIS AMPLIFIER

The Z-Axis signal from the Logic circuit and the Z-Axis signal from the Readout system are connected to the emitter of Q1105. Transistor Q1105 is a common-base amplifier to establish a low input

impedance for the input signals. Transistors Q1127, Q1122, Q1113, and Q1111 form a current driven operational amplifier. The input and output transistors are complementary to provide a fast rise-time and a fast fall-time response with minimal standing current. Resistor R1123 establishes a low current in the series connected output transistors. Transistor Q1127 supplies additional current through C1124 for the positive transients, and transistor Q1111 supplies additional current for negative transients. Capacitor C1115 is adjusted for optimum square-wave output, resistors R1115 and R1116 along with capacitor C1115 form the feedback network. Zener diode VR1109 provides the necessary change of voltage from the collector of Q1105 to the base of Q1111.

CRT CONTROL CIRCUITS

Astigmatism adjustment R1274 and R1276, which are used in conjunction with the FOCUS control to obtain a well-defined display, varies the positive level on the astigmatism grid. Geometry adjustment R1292 varies the positive level on the horizontal deflection-plate shield to control the overall geometry of the display.

Two adjustments control the trace alignment by varying the magnetic field induced by coils around the crt. Y-Axis Alignment R1284 controls the current through L1284, which affects the crt beam after vertical deflection, but before horizontal deflection. Therefore, it affects only the vertical (Y) components of the display. Beam Rotation adjustment R1286 controls the current through L1295 and affects both the vertical and horizontal rotation of the display.

LOW-VOLTAGE POWER SUPPLY (8)



The Low-Voltage Power Supply circuit provides the operating power for this instrument from six regulated supplies. Electronic regulation is used to provide stable, low-ripple output voltages. Each supply contains a short-protection circuit to prevent instrument damage if a supply is inadvertently over-loaded or shorted to ground. Figure 3-21 shows a detailed block diagram of the Low-Voltage Power Supply circuit. A schematic of this circuit is shown on diagram 8 at the rear of this manual.

POWER INPUT

Power is applied to the primary of transformer T801 through line fuse F1000, thermal cutout S1000, and POWER switch S1001. The Voltage-Selector Jumper, P1001, connects the two halves of the primary of T801 in parallel for 110-volt (nominal) operation. Voltage-Selector Jumper P1002 connects the two halves of the primary in series for 220-volt (nominal) operation. The line fuse, F1000, must be changed to provide the correct protection for 220-volt nominal operation.

Each half of the primary of T801 has taps above and below the 110-volt (220-volt) nominal point. When the Voltage Selector Jumper is moved from LOW to MED to HI, more turns are effectively added to the primary winding and the turns ratio is decreased to compensate for the increased primary voltage. This configuration extends the regulating range of the 7633.

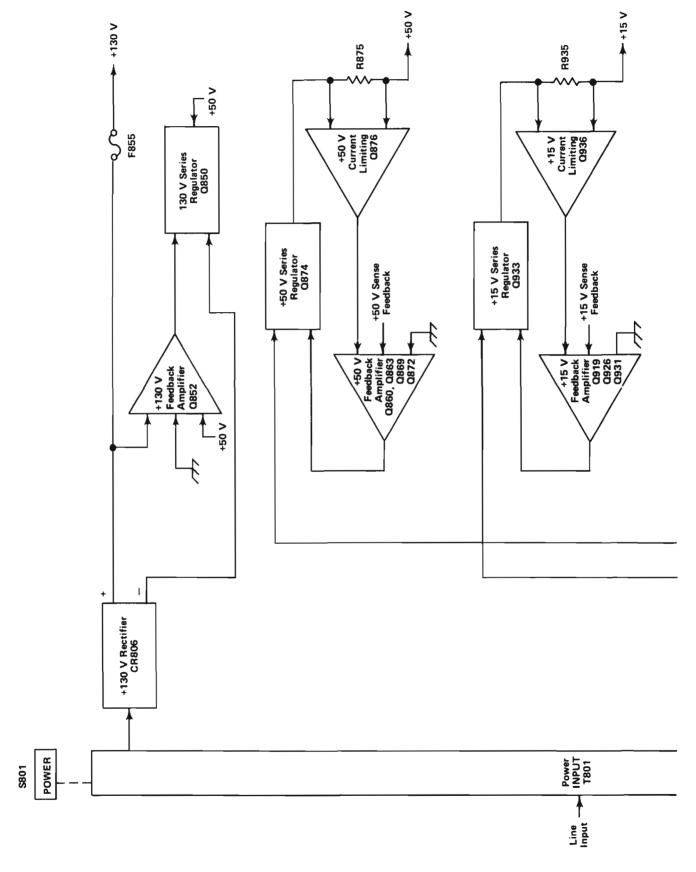


Figure 3-21. Low-Voltage Power Supply detailed block diagram.

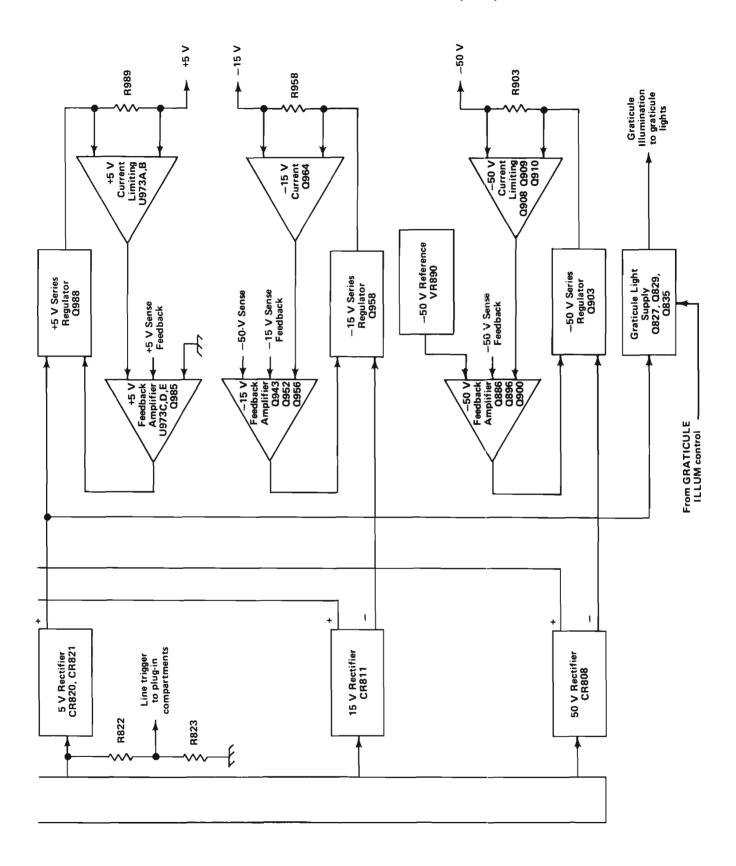


Figure 3-21. Low-Voltage Power Supply detailed block diagram.

A fan provides forced-air cooling for the 7633. The fan is connected in parallel with one half of the primary winding of T801. Therefore, it always has the same voltage applied regardless of the position of the Voltage-Selector Jumper.

Thermal cutout S1000 provides thermal protection for this instrument. If the internal temperature of the instrument exceeds a safe operating level, S1000 opens to interrupt the applied power. When the temperature returns to a safe level, S1000 automatically closes to re-apply the power.

-50-VOLT SUPPLY

The following discussion includes the description of the 50 V Rectifier, -50 V Series Regulator, -50 V Feedback Amplifier, -50 V Reference, and -50 V Current Limiting stages. Since these stages are closely related in the operation of the -50-volt regulated output, their operation is most easily understood when discussed as a unit.

The 50 V Rectifier assembly CR808 rectifies the output at the secondary of T801 to provide the unregulated voltage source for both the -50- and +50-volt supplies. CR808 is connected as a bridge rectifier and its output is filtered by C808-C809. Transistors Q886, Q896, Q900 and Q903 operate as a feedback-stabilized regulator circuit to maintain a constant -50-volt output level. Q886 is connected as a differential amplifier to compare the feedback voltage at the base of Q886B against the reference voltage at the base of Q886A. The error output at the collector of Q886B reflects the difference, if any, between these two inputs. The change in error-output level at the collector of Q886B is always opposite in direction to the change in the feedback input at the base of Q886B (out of phase).

Zener diode VR890 sets a reference level of about -9 volts at the base of Q886A. A feedback sample of the output voltage from this supply is connected to the base of Q886B through divider R880-R881-R882. R881 in this divider is adjustable to set the output level of this supply. Notice that the feedback voltage to this divider is obtained from a line labeled -50 V Sense. Figure 3-22 illustrates the reason for this configuration. The inherent resistance of the interconnecting wire between the output of the -50-Volt Supply and the load produces a voltage drop which is equal to the output current multiplied by the resistance of the interconnecting wire. Even though the resistance of the wire is small, it results in a substantial voltage drop due to the high output current of this supply. Therefore, if the feedback voltage were obtained ahead of this drop, the voltage at the load might not maintain close regulation. However, the -50 V Sense feedback configuration overcomes this problem since it obtains the feedback voltage from a point as close as practical to the load. Since the current in the -50 V Sense line is small and constant, the feedback voltage is an accurate sample of the voltage applied to the load.

Regulation occurs as follows: If the output level of this supply decreases (less negative) due to an increase in load, or a decrease in input voltage (as a result of line voltage changes or ripple), the voltage across divider R880-R881-R882 decreases also. This results in a more positive feedback level at the base of Q886B than that established by the -50 V Reference stage at the base of Q886A. Therefore, the output current at the collector of Q886B increases. This increase in output from Q886B allows more current to flow through Q896 and Q900 to result in increased conduction of -50 V Series Regulator

3-38 (A)

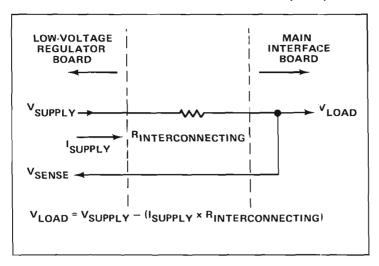


Figure 3-22. Schematic illustrating voltage drop between power supply output and load due to resistance of interconnecting wire.

Q903. The load current increases and the output voltage of this supply also increases (more negative). As a result, the feedback voltage from the -50 Sense line increases and the base of Q886B returns to the same level as the base of Q886A. Similarly, if the output level of this supply increases (more negative), the output current of Q886B decreases. The feedback through Q896 and Q900 reduces the conduction of the -50 V Series Regulator to decrease the output voltage of this supply.

-50 Volts adjustment R881 determines the divider ratio to the base of Ω886B and thereby determines the feedback voltage. This adjustment sets the output level of the supply in the following manner: If R881 is adjusted so the voltage at its variable arm goes less negative (closer to ground), this appears as an error signal at the base of Q886B. In the same manner as described previously, this positive-going change at the feedback input of the differential amplifier increases the conduction of the -50 V Series Regulator to produce more current to the load, and thereby increase the output voltage of this supply. This places more voltage across divider R880-R881-R882 and the divider action returns the base of Q886B to about -9 volts. Notice that the feedback action of this supply forces a change in the output level which always returns the base of Q886B to the same level as the base of Q886A. In this manner, the output level of the -50-Volt Supply can be set to exactly - 50 volts by correct adjustment of R881.

The -50 V Current Limiting stage Q908-Q909-Q910 protects the -50-Volt Supply if excess current is demanded from this supply. All of the output current from the -50-Volt Supply flows through R903. Transistor Q908 senses the voltage at the collector of the -50 V Series Regulator Q903 and compares it against the -50 V output level at the base of Q909 which is obtained from the other side of R903. Under normal operation, Q908 is held in conduction and Q909 is off. However, when excess current is demanded from the -50 V Series Regulator due to a short circuit or similar malfunction at the output of this supply, the voltage drop across R903 increases until the base of Q908 goes more negative than the level at the base of Q909. Then Q909 takes over conduction of the comparator. The collector current of Q909 increases the voltage drop across R896 to reduce the conduction of Q896 in the -50 V Feedback Amplifier and limit the conduction of Q903. Q910 is connected as a constant-current source for Q908-Q909.

-15-VOLT SUPPLY

Basic operation of all stages in the —15-Volt Supply is the same as for the —50-Volt Supply. Reference level for this supply is established by divider R945-R946 between ground and the —50 V Sense voltage. The divider ratio of R945-R946 sets a level of —15 volts at the base of Q943A. The level on the —50 V Sense line is held stable by the —50-Volt Supply as described previously. The —15 V Sense voltage is connected to the base of Q943B through R940. Any change at the output of the —15-Volt Supply appears at the base of Q943B as an error signal. The output voltage is regulated in the same manner as described for the —50-Volt Supply.

+5-VOLT SUPPLY

Basic operation of the +5-Volt Supply is the same as described for the previous supplies. The +5 V Current Limiting and +5 V Feedback Amplifier (except for Q985) is made up of a five-transistor array U973. Notice that both U973C and Q985 in the +5 V Feedback Amplifier are connected as emitter followers, since inversion is not necessary in the feedback path for positive output voltages. Reference is established at 0 volt level by R975. Divider R970-R971, connected to both the +5 volt sense feedback and -50 volt sense feedback, establishes an error voltage at the base of U973E.

+15-VOLT SUPPLY

The +15-Volt Supply operates in the same manner as described for the previous supplies. The unregulated +15-Volt Supply provides the source voltage for the High-Voltage Oscillator stage in the crt circuit through fuse F814 and P870.

+50-VOLT SUPPLY

Operation of the +50-Volt Supply is the same as described for the previous supplies. The unregulated +50 volts, from 50 V Rectifier CR808, is used to provide a positive starting voltage for the -50-Volt Supply.

+130-VOLT SUPPLY

The +130-V Rectifier CR806 provides the rectified voltage for the +130-Volt Supply. However, this secondary winding of T801 does not supply the full potential necessary to obtain the +130-volt output level. To provide the required output level, the +50-Volt Supply is connected in series with this supply through Q850. Basic regulation of the output voltage is provided by +130 V Feedback Amplifier Q852, and +130 V Series Regulator Q850.

The output voltage of this supply is connected across divider R855-R856. This divider provides a quiescent level of about +50 volts at the base of Q852. The reference level for this supply is provided by the +50-Volt Supply connected to the emitter of Q852. If the output of this supply changes, this change is sensed by Q852 and an amplified error signal is connected to the base of Q850. This error

signal changes the conduction of the +130 V Series Regulator Q850 to correct the output error. Fuse F855 protects this supply if the output is shorted. However, since the response time of F855 is slow to a shorted condition, VR851 provides additional current to the base of Q850 to protect Q852 from damage. Diode CR852 limits the reverse bias on Q852 to about 0.6 volt when F855 is blown.

GRATICULE LIGHT SUPPLY

Power for the graticule lights is supplied by the Graticule Light Supply. Rectified voltage for this supply is provided by 5 V Rectifier CR820-CR821. Q835 operates as a series regulator transistor. Emitter follower Q829 determines the conduction of this series regulator as controlled by front panel GRATICULE ILLUM Control R1095. Current-limiting to protect this supply is provided by Q827. Under normal operation, divider R830-R831-R833 sets the base of Q827 below its conduction level. However, if excess current is demanded from this supply, the voltage drop across R837-R838 increases until Q827 comes into conduction. The collector of Q827 then limits the conduction of this supply to limit its output current.

Divider R822-R823 provides a sample of the line voltage in the secondary of T801 to the plug-in unit. This provides a line-frequency reference to the plug-in units for internal triggering at line frequency or for other applications.

CALIBRATOR AND FRONT PANEL SWITCHING



The Calibrator and Front Panel Switching circuit provides output voltage to the front-panel Calibrator pin-jacks and includes the front-panel switches and controls. Figure 3-23 shows a detailed block diagram of the Calibrator portion of this circuit. A schematic of this circuit is shown on diagram 10 at the rear of this manual.

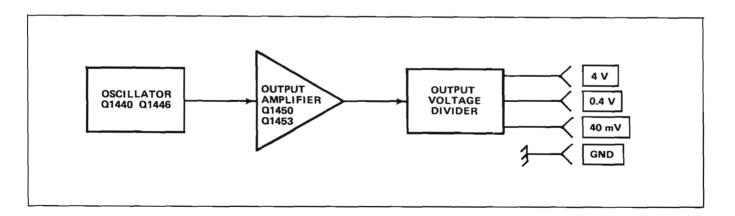


Figure 3-23. Calibrator detailed block diagram.

CALIBRATOR

GENERAL

The Calibrator circuit provides accurate voltage output at the front-panel Calibrator pin-jacks. Repetition rate of the output signal is about one kilohertz.

OSCILLATOR

Q1440 and Q1446 are connected as a square-wave oscillator to determine the repetition rate of the Calibrator circuit. Oscillation occurs as follows: Assume that Q1440 is conducting and Q1446 is off. The collector voltage of Q1440 (determined by the voltage divider formed by R1440 and R1441) drops to the saturation level of Q1440. With this low voltage on its base, Q1446 is turned off. Since Q1446 is not conducting, its collector goes positive, producing the positive portion of the square wave, and its emitter drops to a level of about 0.6 volt more negative than its base and stops. As a result, the current through R1445 and C1444 is no longer available to Q1440. This forward biases Q1446, due to an increased base voltage, causing its emitter to rapidly rise positive. Since C1444 cannot change its charge instantaneously, the sudden change in voltage at the emitter of Q1446 pulls the emitter of Q1440 positive also, to reverse bias it. The current through Q1446 produces a voltage drop at its collector to produce the negative portion of the square wave.

Now, conditions are reversed. Since Q1440 is reverse biased, there is no current through it. Therefore, C1444 can begin to discharge through R1443. The emitter level of Q1440 follows the discharge of C1444 until it reaches about -0.6 volt. Then, Q1440 is forward biased and its collector drops negative to reverse bias Q1446. This interrupts the current through Q1446, and its collector goes positive again to complete the square wave. Once again C1444 begins to charge through R1445 to start the second cycle. The signal produced at the collector of Q1446 has a repetition rate of about one kilohertz.

The Oscillator stage can be changed by jumper P1445. When this jumper is installed in the DC position, the Oscillator is disabled and the collector of Q1446 rises positive. This produces a positive DC voltage output to the front-panel Calibrator pin-jacks.


OUTPUT AMPLIFIER

Transistors Q1450 and Q1453 are connected as a comparator with the reference level at the base of Q1453 determined by the network R1455-R1456-R1457-R1459. The 4 Volts adjustment R1459, is set to provide accurate output voltage at the 4 V Calibrator pin-jack.

The output of the Oscillator stage is connected to the base of Q1450. This signal controls the conduction of comparator Q1450-Q1453. When the base of Q1450 is high, it is off, and Q1453 is conducting. This produces a positive output voltage at the Calibrator pin-jacks. When the level at the base of Q1450 is switched low, Q1450 conducts and Q1453 is reverse biased. Now, the voltage level at the Calibrator pin-jacks drops to zero.

OUTPUT VOLTAGE DIVIDER

The collector current of Q1453 in the Output Amplifier stage is applied across the voltage divider made up of resistors R1461 through R1467. This divider is designed to provide a low output resistance in the 40 mV and 0.4 V position while providing accurate output voltages. The output resistance at the 4 V pin-jack is about 450 ohms and at the 0.4 V and 40 mV pin-jacks in about 50 ohms.

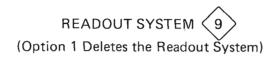

INTRODUCTION

The 7000-series Readout System provides alpha-numeric display of information encoded by the plugin units. This display is presented on the crt and is written by the crt beam on a time-shared basis with the analog waveform display.

The definition of several terms follows:

- Character—A character is a single number, letter, or symbol displayed on the crt, either alone or in combination with other characters.
- Word—A word is made up of a related group of characters. In the 7633 Readout System, a word can consist of up to ten characters.
- Frame—A frame is a display of all words for a given operating mode and plug-in combination. Up to eight words (six words in 3-compartment mainframes) can be displayed in one frame. Figure 3-24 shows the position of each word in a complete frame.
- Column—One of the vertical lines in the Character Selection Matrix (see Figure 3-25). Columns R-10 (row 10) and R-14 (row 14) can be addressed in the 7633 system.
- Time-Slot—A location in a pulse train. In the 7633 Readout System, the pulse train consists of 10 negative-going pulses. Each time-slot pulse is assigned a number between one and ten. For example, the first time-slot is TS-1.
- Time-multiplexing—Transmission of data from two or more sources over a common path by using different time intervals for different signals.

THREE-COMPARTMENT MAINFRAMES

The 7000-series Readout System is compatible with both three- and four-compartment mainframes. However, since three-compartment mainframes do not have a B horizontal plug-in compartment, the B horizontal channels are not used. In these instruments a "JUMP" Command is encoded for this compartment.

In three-compartment mainframes a "JUMP" Command is encoded in time-slot one on the Main Interface for both channels (one and two) of the B horizontal readout. (See Word Trigger for a discussion of the "JUMP" Command.) The "jump" command (row 13 current) is applied to pins 16 and 15 (B horizontal channels one and two respectively) of U2180. Column data current is not required for a "jump" command. This allows the Readout System to sense a "jump" during time-slot one at channel two, which causes it to "jump" the remaining nine time slots for that channel and go to channel one where it agains senses a "jump" command during time-slot one. This permits it to "jump" the remaining nine time slots in channel one. The readout system then begins a new frame.

REV. B, DEC. 1974


DISPLAY FORMAT

Up to eight words (six words in three compartment mainframes) of readout information can be displayed on the crt. The position of each word is fixed and is directly related to the plug-in unit from which it originated. Figure 3-24 shows the area of the graticule where the readout from each plug-in unit is displayed. Notice that Channel 1 of each plug-in unit is displayed within the top division of the crt and Channel 2 is displayed directly below within the bottom division. Figure 3-26 shows a typical display where only Channel 2 of the Right Vertical and the Horizontal units is selected for display.

Each word in the readout display can contain up to 10 characters, although the typical display will contain between two and seven characters per word. The characters are selected from the Character Selection Matrix shown in Figure 3-25. In addition, 12 operational addresses are provided for special instructions to the Readout System. The unused locations in the Matrix (shaded area) are available for future expansion of the Readout system. The method of addressing the locations in the Character Selection Matrix is described in the following discussion.

DEVELOPING THE DISPLAY

The following basic description of the Readout System uses the block diagram shown in Figure 3-27. This description is intended to relate the basic function of each stage to the operation of the overall Readout System. Detailed information on circuit operation is given later.

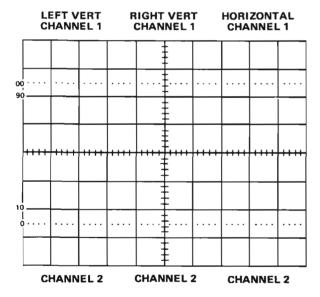

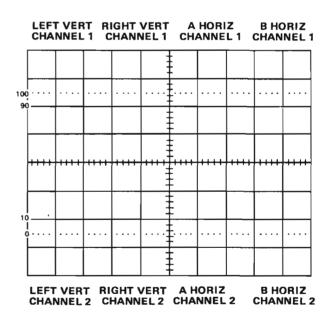


Figure 3-24. Location of readout words on the crt identifying the originating plug-in unit and channel (one complete frame shown).

The key block in the Readout System is the Timer stage. This stage produces the basic signals which establish the timing sequences within the Readout System. Period of the timing signal is about 250 microseconds (drops to about 210 microseconds when Display-Skip is received; see detailed description of Timing stage for further information). This stage also produces control signals for other stages within this circuit and interrupt signals to the Vertical Amplifier, Hori-

zontal Amplifier, and Logic circuits, which allow a readout display to be presented. The Time-Slot Counter stage receives a trapezoidal voltage signal from the Timer stage and directs it to one of ten output lines. These output lines are labeled TS-1 through TS-10 (time-slots one through ten) and are connected to the vertical and horizontal plug-in compartments as well as to various stages within the Readout System. The output lines are energized sequentially, so there is a pulse on only one of the 10 lines during any 250-microsecond timing period. After the Time-Slot Counter stage has counted time-slot 10, it produces an End-of-Word pulse which advances the system to the next channel.

Two output lines, row and column, are connected from each channel of the plug-in unit back to the Readout System. Data is typically encoded on these output lines by connecting resistors between them and the time-slot input lines. The resultant output is a sequence of ten analog current levels which range from zero to one milliampere (100 microamperes/step) on the row and column output lines. This row and column correspond to the row and column of the Character Selection Matrix in Figure 3-25. The standard format for encoding information onto the output lines is given in Table 3-2. (Special-purpose plug-in units may have their own format for readout; these

TABLE 3-2
Standard Readout Format

Time-Slot Number	Description
TS-1	Determines decimal magnitude (number of zeros displayed or prefix change information) or the IDENTIFY function (no display during this time-slot).
TS-2	Indicates normal or inverted input (no display for normal).
TS-3	Indicates calibrated or uncalibrated condition of plug-in variable control (no display for calibrated condition).
TS-4	Scaling.
TS-5 TS-6 TS-7	Not encoded by plug-in unit. Left blank to allow addition of zeros by Readout System.
TS-8	Defines the prefix which modifies the units of measurement.
TS-9 TS-10	Define the units of measurement of the plug-in unit. May be standard units of measurement (V, A, S, etc.) or special units selected from the Character Selection Matrix

special formats will be defined in the manuals for these units.)

The encoded column and row data from the plug-in units is selected by the Column Data Switch and Row Data Switch stages respectively. These stages take the analog currents from the eight data lines (two channels from each of the four plug-in compartments) and produce a time-multiplexed analog voltage output containing all of the column or row information from the plug-ins. The Column Data Switch and Row Data Switch are sequenced by the binary Channel Address Code from the Channel Counter.

COLUMN C-0	0.0	1	C-1	C-2	C-3	C 4	C-5	9- O	C-7	8-5	6-D	C-10
CURRENT 0 0.1 0.2 AMPERES)	0 0.1		0.2		0.3	0.4	0.5	9.0	0.7	8.0	6:0	√ 1.0
1 0 1			1		2	8	4	5	9	7	80	6
0.1	>	> /	>		I	/	+	1	+	C	V	^
0.2 ADD' ADD' ONE TWO ZEROS	ADD TWO	ADD TWO			SHIFT '	SHIFT¹ PREFIX AND ADD ONE ZERO						IDENTIFY 1
0.3 т			31.		u	ď	×	×	M	6	1	В
0.4 SKIP¹ S	S		>		A	N	Н	p	В	С	ប	E
0.5 U N			>		7	2	7	d	F	J	O	a
0.6 0.6	6 3	G 7	רכ		DECIMAL' POINT LOCATION NO. 3	DECIMAL POINT LOCATION NO. 4	DECIMAL DECIMAL DECIMAL DECIMAT LOCATION NO. 5	DECIMAL 'POINT LOCATION NO. 6	DECIMAL' POINT LOCATION NO.7			
0.7	_											
0.8												
0.9 ADD SPACE IN DISPLAY'	ADD SPACE IN DISPLAY'											

Figure 3-25. Character Selection Matrix for 7633 Readout System.

UNUSED LOCATIONS. AVAILABLE FOR FUTURE EXPANSION OF READOUT SYSTEM.

OPERATIONAL ADDRESS.

The time-multiplexed output of the Column Data Switch is monitored by the Display-Skip Generator to determine if it represents valid information that should be displayed. Whenever information is not encoded in a time-slot, the Display-Skip Generator produces an output level to prevent the Timer stage from producing the control signals that normally interrupt the crt display and present a character.

The analog outputs of the Column Data Switch and Row Data Switch are connected to the Column Decoder and Row Decoder stages respectively. These stages sense the magnitude of the analog voltage input and produce an output current on one of ten lines. The outputs of the Column Decoder stage are identified as C-1 through C-10 (column 1 through 10)

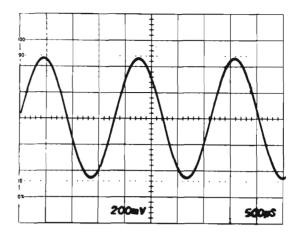


Figure 3-26. Typical readout display where only channel 2 of the Right Vertical and Horizontal units is displayed.

corresponding to the encoded column information. Likewise, the outputs of the Row Decoder stage are identified as R-1 through R-10 (row 1 through 10) corresponding to the encoded row information. The primary function of the row and column outputs is to select a character from the Character Selection Matrix to be produced by the Character Generator stage. These outputs are also used at other points within the system to indicate when certain information has been encoded. One such stage is the Zeros Logic and Memory. During time-slot 1 (TS-1), this stage checks if zero-adding or prefix-shifting information has been encoded by the plug-in unit, and stores it in memory until time-slots 5, 6, or 8. After storing this information, it triggers the Display-Skip Generator stage so that there is no display during time-slot 1 (as defined by Standard Readout Format; see Table 3-2). When time-slots 5, 6, and 8 occur, the memory is addressed and any information stored there during time-slot 1 is transferred to the input of the Column Decoder stage to modify the analog data during the applicable time-slot.

Also, the Zeros Logic and Memory stage produces the IDENTIFY function. When time-slot 1 is encoded for IDENTIFY (column 10, row 3), this stage produces an output level, which connects the Column Data Switch and Row Data Switch to a coding network within the Readout System. Then, during time-slots 2 through 9, an analog current output is produced from the Column Data Switch and Row Data Switch which addresses the correct points in the Character Selection Matrix to display the word "IDENTIFY" on the crt. The Zeros Logic and Memory stage is reset after each word by the Word Trigger pulse.

The Character Generator stages produce the characters which are displayed on the crt. Any of the 50 characters shown on the Character Selection Matrix of Figure 3-25 can be addressed by proper selection of the column and row currents. Only one character is addressable in any one time-slot; a space can be added into the displayed word by the Decimal Point Logic and Character Position Counter stage when encoded by the plug-in. The latter stage counts the number of characters generated and produces an output current to step the display one character position to the right for each character. In addition, the character position is advanced once during each of time-slots 1, 2, and 3, whether a character is generated during these time-slots or not. This action fixes the starting point of the standard-format display such that the first digit of the scaling factor always starts at the same point within each

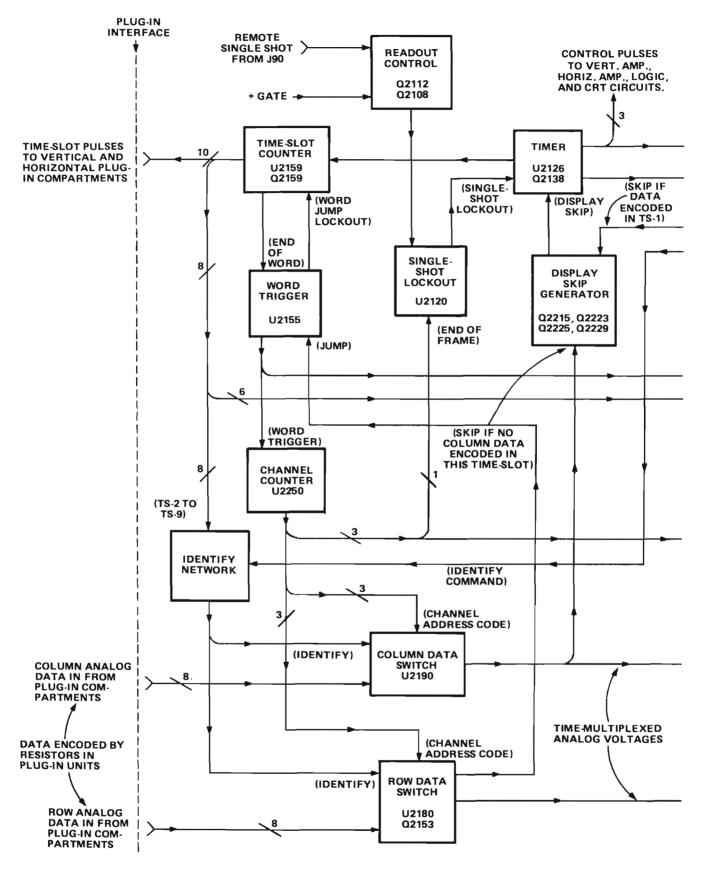


Figure 3-27. Detailed block diagram of the Readout System.

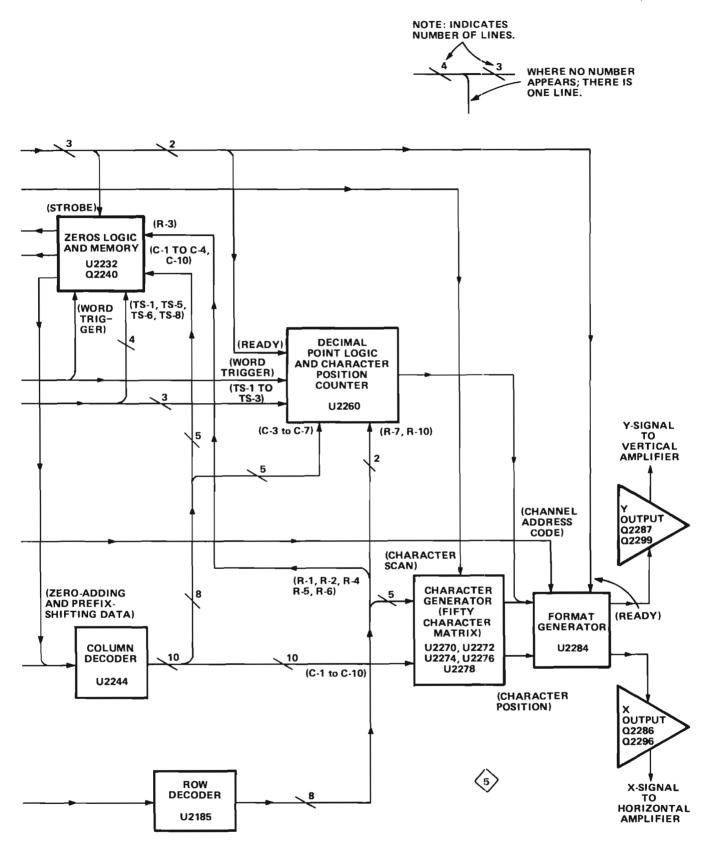


Figure 3-27. Detailed block diagram of the Readout System.

A

word regardless of the information encoded in time-slot 1, 2, or 3 preceding this digit. Also, by encoding row 10 and column 0 during any time-slot, a blank space can be added to the display. Decimal points can be added to the display at any time by addressing the appropriate row and column. (See Character Selection Matrix for location of decimal points.) The Decimal Point Logic and Character Position Counter stage is reset after each word by the Word Trigger pulse.

The Format Generator stage provides the output signals to the vertical and horizontal deflection systems of the instrument to produce the character display. The binary Channel Address Code from the Channel Counter stage is connected to this stage, so that the display from each channel is positioned to the area of the crt associated with the plug-in and channel originating the word (see Figure 3-24). The positioning current or decimal point location current generated by the Decimal Point Logic and Character Position Counter stage is added to the Horizontal (X) signal at the input to the Format Generator stage to provide horizontal positioning of the characters within each word. The X- and Y-Readout signals are connected to the Horizontal Amplifier and Vertical Amplifier through the X- and Y-Buffer stages.

The Word Trigger stage produces a trigger from the End-of-Word pulse generated by the Time-Slot Counter stage after the tenth time-slot. This Word Trigger pulse advances the Channel Counter to display the information from the next channel or plugin. It also provides a reset pulse to the Zeros Logic and Memory stage and the Decimal Point Logic and Character Position Counter stage. The Word Trigger stage can also be advanced to jump a complete word or a portion of a word when a Jump command is received from the Row Data Switch stage.

The Single-Shot Lockout stage allows the display sequence of the Readout System to be changed. Normally, the Readout System operates in a free-

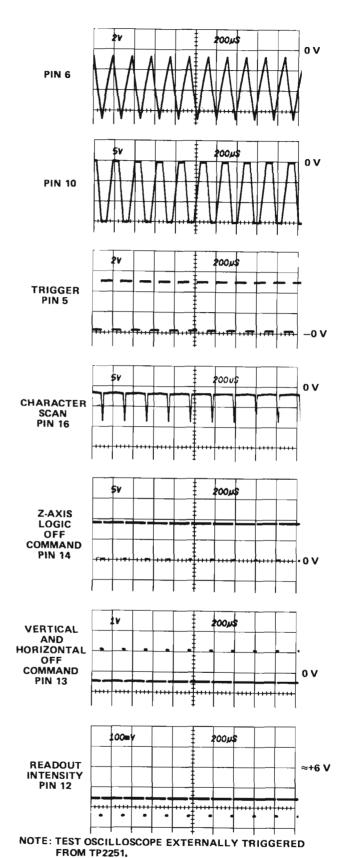


Figure 3-28. Output waveforms of Timer stage.

A

running mode, so the waveform display is interrupted randomly to display characters. However, under certain conditions (such as single-shot photography), it is desirable that the Reaclout System operate in a triggered mode where the readout portion of the display is normally blanked out, but can be presented on command. The Readout Mode switch, S2110, determines the operating mode of the Readout System.

TIMER

Timer U2126 establishes the timing sequence for all circuits within the Readout System. This stage produces seven time-related output waveforms (see Figure 3-28). The triangle waveform produced at pin 6 forms the basis for the remaining signals. The basic period of this triangle waveform is about 250 microseconds as controlled by RC network R2135-C2135. The triangle waveform is clipped and amplified by U2126 to form the trapezoidal output signal at pin 10. The amplitude of this output signal is exactly 15 volts as determined by U2126 (exact amplitude necessary to accurately encode data in plug-in units; see

Encoding the Data). The Trigger output at pin 5 provides the switching signal for the Time-Slot Counter and Word Trigger stages.

The signals at pins 12, 13, 14, and 16 are produced only when the triangle waveform has reached the lower level. The timing sequence of these waveforms is important to the operation of the Readout System (see expanded waveforms in Figure 3-29). The Z-Axis Logic OFF at pin 14 is produced first. This negative-going signal provides a blanking pulse to the Z-Axis Logic stage (see diagram 2) to blank the crt before the display is switched to the Readout System. It also produces the Strobe pulse through Q2138 and CR2142 to signal other stages within the Readout System to begin the sequence necessary to produce a character. The collector level of Q2138 is also connected to Character Generator No. 2, U2272, through CR2140. This activates U2272 during the quiescent period of the Strobe pulse (collector of Q2138 negative) and diverts the output current of Row Decoder U2185 to row 2. The purpose of this configuration is to prevent the Zeros Logic and Memory stage U2232 from storing incorrect data during the quiescent period of the Strobe pulse. When the Strobe pulse goes positive, CR2140 is re-

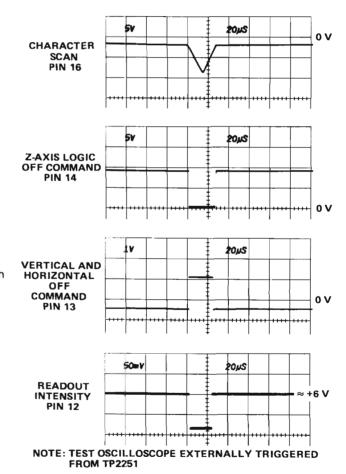


Figure 3-29. Detail of output at pins 12, 13, 14, and 16 of U2126.

verse-biased to disconnect Q2138 from U2272 and allow the Row Decoder to operate in the normal manner.

The next signal to be produced is the Vertical and Horizontal OFF Command at pin 13. This positivegoing signal disconnects the plug-in signals from the vertical and horizontal deflection systems so the plug-in

(A)

signals from the vertical and horizontal deflection systems so the plug-in units do not control the position of the crt beam during the readout display. The Ready signal derived from this output is connected to the Decimal Point Logic and Character Position Counter stage and the Format Generator stage.

The Readout Intensity output at pin 12 is produced next. This current is connected to the crt circuit to unblank the crt to the intensity level determined by the READOUT intensity control. The Character Scan ramp at pin 16 started to go negative as this timing sequence began. However, character generation does not start until the readout intensity level has been established. The triangular Character Scan ramp runs from about —2 volts to about —8.5 volts, then returns back to the original level. This waveform provides the scanning signal for the Character Generator stages. Full Character Scan adjustment R2128 sets the DC level of the Character Scan ramp for complete characters on the display.

The Timer stage operates in one of two modes as controlled by the Display-Skip level at pin 4. The basic mode just described is a condition that does not occur unless all ten characters of each word (80 characters total) are displayed on the crt. Under typical conditions only a few characters are displayed in each word. The Display-Skip level at pin 4 determines the period of the Timer output signal. When a character is to be generated, pin 4 is LO and the circuit operates as just described. However, when a character is not to be displayed, a HI level is applied to pin 4 of U2126 through CR2125 from the Display-Skip Generator stage. This signal causes the Timer to shorten its period of operation to about 210 microseconds. The waveforms in Figure 3-30 show the operation of the Timer stage when the Display-Skip condition occurs for all positions in a word. Notice that there is no output at pins 12, 13, 14, and 16 under this condition. This means that the crt display is not interrupted to display characters. Also notice that the triangle waveform at pin 6 does not go as far negative, and that the negative portion of the trapezoidal waveform at pin 10 is shorter. Complete

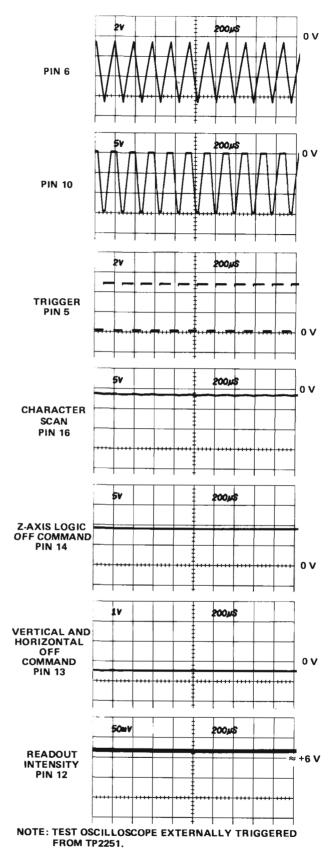


Figure 3-30. Timer stage operation when Display-Skip condition occurs.

details on operation of the Display-Skip Generator are given later.

The Timer operations is also controlled by the Single-Shot Lockout level at pin 2. If this level is LO, the Timer operates as just described. However, if the Single-Shot Lockout stage sets a HI level at this pin, the Timer stage is locked out and can not produce any output signals (see Single-Shot Lockout description for further information).

READOUT intensity control R1430 sets the intensity of the readout display independently of the A or B INTENSITY controls. The READOUT intensity control also provides a means of turning the Readout System off when a readout display is not desired. When R1430 is turned fully counterclockwise, the switch S1430 opens in series with the Readout Intensity line. The current to pin 11 of U2126 is interrupted, and at the same time, a positive voltage is applied to pin 4 through CR2124. The positive voltage switches the stage to the same conditions as were present under the Display-Skip condition. Therefore, the crt display is not interrupted to present characters. However, time-slot pulses continue to be generated.

TIME-SLOT COUNTER

Time-Slot Counter U2159 is a sequential switch which directs the trapezoidal waveform input at pin 8 to one of its 10 output lines. These time-slot pulses are used to interrogate the plug-in units to obtain data for the Readout System. The Trigger pulse at pin 15 switches the Time-Slot Counter to the next output line; the output signal is sequenced consecutively from time-slot 1 through time-slot 10. Figure 3-31 shows the time relationship of the time-slot pulses. Notice that only one line carries a time-slot pulse at any given time. When timeslot 10 is completed, a negative-going End-of-Word pulse is produced at pin 2. The End-of-Word pulse provides a drive pulse for the Word Trigger stage and also provides an enabling level to the Display-Skip Generator during time-slot 1 only.

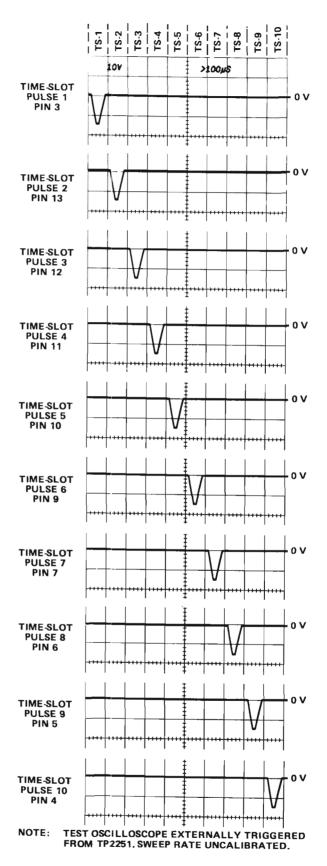


Figure 3-31. Time relationship of the time-slot (TS) pulses produced by U2159.

Pin 16 is a reset input for the Time-Slot Counter. When this pin is held LO, the Time-Slot Counter resets to time-slot 1. The Time-Slot Counter can be reset in this manner only when a Jump Command is received by U2155C and D (see following discussion).

WORD TRIGGER

The Word Trigger stage is made up of U2155A and B. Quiescently, pin 3 of U2155A is LO as established by the operating conditions of U2155C and D. Therefore, the LO End-of-Word pulse produced by the Time-Slot Counter results in a HI level at pin 1 of U2155A. This level is inverted by U2155B to provide a negative-going Word Trigger pulse to the Channel Counter.

Also, a Word Trigger pulse is produced by U2155B when a Jump Command is received at pin 8 of U2155C. This condition can occur during any time-slot (see Row Decoder for further information on origin of the Jump Command). U2155C and D are connected as a bistable flip-flop. The positive-going Jump Command at pin 8 of U2155C produces a LO at pin 10. This LO is inverted by U2155D to produce a HI at pin 13, which allows pin 9 to be pulled HI through CR2156. The flip-flop has now been set and remains in this condition until reset, even though the Jump Command at pin 8 returns to its LO level. The HI output level at pin 13 turns on Q2159 to pull pin 16 of the Time-Slot Counter LO. This resets the Time-Slot Counter to time-slot 1 and holds it there until the Word Trigger is reset. At the same time, a HI level is applied to pin 4 of the Timer through CR2157 and CR2125. This HI level causes the Timer to operate in the Display-Skip mode, so a character is not generated.

The next Trigger pulse is not recognized by the Time-Slot Counter, since U2159 is locked in time-slot 1 by U2155. However, this Trigger pulse resets the Word Trigger stage through C2155. Pin 13 of U2155D goes LO to enable the Time-Slot Counter and Timer stages for the next time-slot pulse. Simultaneously, when U2155D switches output states, the resulting negative-going edge is connected to pin 3 of U2155A. This results in a negative-going Word Trigger output at pin 4 to advance the Channel Counter to the next word. When the next Trigger pulse is received at pin 15, the Time-Slot Counter returns to the normal sequence of operation and produces an output on the time-slot 1 line.

CHANNEL COUNTER

Channel Counter U2250 is a binary counter which produces the Channel Address Code for the Column and Row Decoder stages and the Format Generator stage. This code instructs these stages to sequentially select and display all six channels of data from the plug-ins. Table 3-3 gives the eight combinations of the Channel Address Code and the resultant channel selected with each combination.

READOUT CONTROL

Q2108 and Q2112, along with S2110, control the operating mode of the Readout System through the Single-Shot Lockout stage. When Readout Mode switch 2110 is in the Free-Run position, the Readout

TABLE 3-3
Channel Address Code

Pin 11 U2250	Pin 8 U2250	Pin 9 U2250	Channel Displayed
LO	LO	LO	Channel 2 Left Vertical
LO	LO	НІ	Channel 1 Left Vertical
LO	НІ	LO	Channel 2 Right Vertical
LO	HI	н	Channel 1 Right Vertical
Hi	LO	LO	Channel 2 A Horizontal
HI	LO	HI	Channel 1 A Horizontal
НІ	HI	LO	Channel 2 B Horizontal
HI	HI	HI	Channel 1 B Horizontal

System runs continuously in a free-running manner. The emitter of Q2108 has no ground return in this position, so it can not conduct. The collector of Q2108 rises positive through R2108 to enable the Readout System.

In the Gate Trig'd position, the emitter of Q2108 is connected to ground through R2109 and S110 to produce a LO lockout level to the Single-Shot Lockout stage. At the end of the selected gate, a negative level is applied to the base of emitter-follower Q2112. The negative level at the emitter of Q2112 is differentiated by C2112-R2112. The resulting negative-going pulse reverse biases Q2108 to momentarily allow its collector to go HI. This enables the Single-Shot Lockout stage for a single-shot readout display. (For further information, see the following discussion.)

SINGLE-SHOT LOCKOUT

U2120 makes up the Single-Shot Lockout stage. This stage allows a single readout frame (eight complete words) to be displayed on the crt, after which the Readout System is locked out, so further readout displays are not presented until the circuit is reset. U2120B and U2120C are connected to form a bistable flip-flop. For normal operation, pin 8 of U2120C is pulled HI through R2108. This activates U2120C to result in a LO output level at pin 10, enabling the Timer stage to operate in the free-running manner described previously.

The output of the Single-Shot Lockout stage remains LO to allow U2126 to operate in the freerunning mode until a LO is received at pin 8 of U2120C. When this occurs, the output level at pin 10 of U2120C does not change immediately. However, the Readout System is now enabled as far as the single-shot lockout function is concerned.

(A)

NOTE

If the Channel Counter has not completed word eight (Channel 1 of B HORIZ unit), the Readout System continues to operate in the normal manner. However, when word eight is completed, the negative-going End-of-Frame pulse is produced at pin 11 of U2250 as the Channel Counter shifts to the code necessary to display word one. This pulse is coupled to pin 6 of U2120B. The momentary HI at pin 6 activates U2120B and its output goes LO to disable U2120C (pin 8 already LO). The output of U2120C goes HI to disable the Timer, so it operates in the Display-Skip mode. The HI at pin 10 of U2120C also holds U2120B enabled, so it maintains control of the flip-flop.


The Single-Shot Lockout stage remains in this condition until a positive-going trigger pulse is applied to pin 8 of U2120C. This trigger pulse produces a LO at pin 10 of U2120C to enable U2126 and disable U2120B. Now, the Timer can operate in the normal manner for another complete frame. When word eight is completed, the Channel Counter produces another End-of-Frame pulse to again lock out the Timer stage. (For further information on the Readout Mode, see the Readout Control description.)

ENCODING THE DATA

Data is conveyed from the plug-in units to the Readout System in the form of an analog (current level) code. The characters that can be selected by the encoded data are shown on the Character Selection Matrix (see Figure 3-25). Each character requires two currents to define it; these currents are identified as the column current and the row current, corresponding to the column and row of the matrix. The column and row data is encoded by programming the plug-in units. Figure 3-32 shows a typical encoding scheme using resistors for a voltage-sensing amplifier plug-in unit. Notice that the 10 time-slot (TS) pulses produced by the Time-Slot Counter stage are connected to the plug-in unit. However, time-slots 5, 6, 7, and 10 are not used by the plug-in unit to encode data when using the Standard Readout Format. (See Table 3-2 for Standard Readout Format.) The amplitude of the time-slot pulses is exactly —15 volts as determined by the Timer stage. Therefore, the resultant output current from the plug-in units can be accurately controlled by the programming resistors in the plug-in units.

For example, in Figure 3-32 resistors R10 through R90 control the row analog data, which is connected back to the Readout System. Figure 3-33A shows an idealized output current waveform of row analog data, which results from the time-slot pulses. Each of the row levels of current shown in these waveforms corresponds to 100 microamperes of current. The row numbers on the left-hand side of the waveform correspond to the rows in the Character Selection Matrix (see Figure 3-25). The row analog data is connected back to the Readout System via terminal B37 of the plug-in interface.

The Column analog data is defined by resistors R110 through R190. The program resistors are connected to the time-slot lines by switch closures to encode the desired data. The data as encoded by the circuit shown in Figure 3-32 incidates a 100-microvolt sensitivity with the crt display inverted and calibrated deflection factors. This results in the idealized output current waveforms shown in Figure 3-33B at the column analog data output, terminal A37 of the plug-in interface.

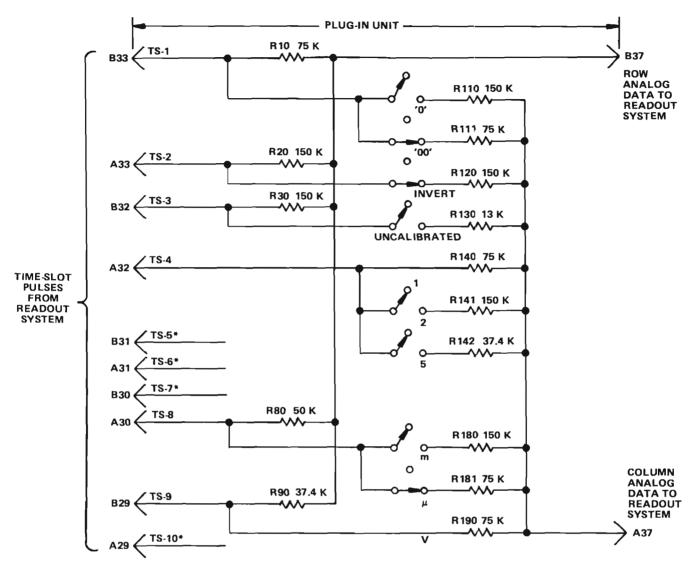

* NOT USED IN STANDARD FORMAT.

Figure 3-32. Typical encoding scheme for voltage-sensing amplifier plug-in unit. Coding shown for deflection factor of 100 microvolts.

Resistor R111, connected between time-slot 1 and the column analog data output, encodes two units of current during time-slot 1. Referring to the Character Selection Matrix, two units of column current, along with the two units of row current encoded by resistor R10 (row 3), indicates that two zeros should be added to the display. Resistor R120 adds one unit of column current during time-slot 2 and, along with the one unit of current from the row output, the Readout System is instructed to add an invert arrow to the display. Resistor R130 is not connected to the time-slot 3 line, since the deflection factor is calibrated. Therefore, there is no column current output during this time-slot and no display on the crt. (See Display-Skip Generator for further information.)

During time-slot 4, two units of column current are encoded by R140. There is no row current encoded during this time-slot, this results in the numeral 1 being displayed on the crt. Neither row nor column analog data is encoded during time-slots 5, 6, and 7 as defined by the Standard Readout Format.

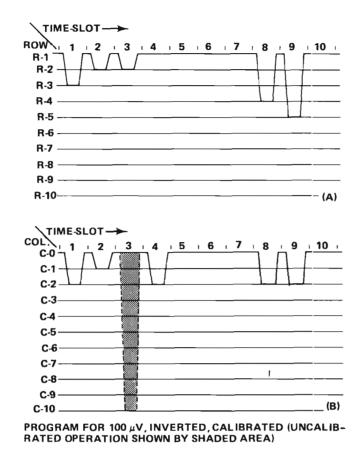


Figure 3-33. Idealized current waveforms of: (A) Row analog data, (B) Column analog data.

During time-slot 8, two units of column current and three units of row current are encoded by resistors R181 and R80, respectively. This addresses the μ prefix in the Character Selection Matrix.

The final data output is provided from time-slot 9 by R190 connected to the column output and R90 to the row output. These resistors encode three units of column current and four units of row current to cause a V (volts) to be displayed. Time-slot 10 is not encoded, in accordance with the Standard Readout Format. The resultant crt readout will be $\frac{1}{2}$ 100 μ V.

In the above example, the row analog data was programmed to define which row of the Character Selection Matrix was address to obtain information in each time-slot. The column data changes to encode the applicable readout data as the operating conditions change. For example, if the variable control of the plug-in unit was activated, R130 would be connected between time-slot 3 and the column analog data output line. This encodes 10 units of column current (see shaded area in time-slot 3 of the waveform shown in Figure 3-33B). Since one unit of row current is also encoded during this time-slot by R30, a > symbol is added to the display. The crt readout will now show $4 > 100 \,\mu\text{V}$. In a similar manner, the other switches can change the encoded data for the column output and thereby change the readout display. See the descriptions which follow for decoding this information.

The column analog data encoded by most plug-in units can be modified by attenuator probes connected to the input connectors of amplifier plug-in units. A special coding ring around the input connector of the plug-in unit senses the attenuation ratio of the probe (with readout-coded probes only). The probe contains a circuit which provides additional column current. For example, if a 10X attenuator probe is connected to a plug-in unit encoded for 100 microvolts as shown in Figure 3-32, an additional unit of current is added to the column analog data during time-slot 1. Since two units of current were encoded by R111 (see Figure 3-32), this additional current results in a total of three units of column analog current during this time-slot. Referring to the Character Selection Matrix, three units of column current, along with the two units of row current encoded by R10, indicates that the prefix should be shifted one column to the left. Since this instruction occurs in the same time-slot that previously indicated that two zeros should be added to the display and only one instruction can be encoded during a time-slot, the zeros do not appear in the display. The crt readout will now be changed to 1 mV (readout program produced by plug-in same as for previous example).

Three other lines of information are connected from the plug-in compartments to the Readout System. The column and row analog data from Channel 2 of a dual-channel plug-in are connected to the Readout System through terminals A38 and B38 of the plug-in interface, respectively. Force readout information is encoded on terminal A35; the function of this input is described under Column and Row Data Switches.

The preceding information gave a typical example of encoding data from an amplifier plug-in unit. Specific encoding data and circuitry is shown in the individual plug-in unit manuals.

COLUMN AND ROW DATA SWITCHES

The encoding data from the plug-in units is connected to the Column and Row Data Switch stages. A column-data line and a row-data line convey analog data from each of the eight data sources (two channels from each of the four plug-in compartments).

The Column Data Switch U2190 and the Row Data Switch U2180 receive the Channel Address Code from the Channel Counter. This binary code directs the Column Data Switch and the Row Data Switch as to which channel should be the source of the encoding data. Table 3-3 gives the eight combinations of the Channel Address Code and the resultant channel selected with each combination. These stages have nine inputs and provide a time-multiplexed output at pin 7, which includes the information from all of the input channels. Eight of the nine inputs to each stage originate in the plug-in units; the ninth input comes from a special data-encoding network composed of resistors R2191 through R2199 and R2201 through R2209. (See Zeros Logic and Memory description for further information on ninth channel.)

In addition to the encoding data inputs from the plug-in units, inputs are provided to the Column Data Switch from the VERTICAL MODE and HORIZONTAL MODE switches to inhibit the readout for any plug-in unit(s) not selected for display (see Diagram 1). When a plug-in unit is selected, a HI level is applied to the inhibit input for the opposite channel. The channel inhibit lines are LO only

when the associated plug-in unit has been selected for display. When a unit is not selected, the respective line is HI to forward bias the associated diodes: CR2162-CR2163, CR2166-CR2167, CR2170-CR2171, or CR2174-CR2175. The forward-biased diodes cause the channel switches to bypass the encoded data from the inhibited channel. However, since it may be desired to display information from special-purpose plug-in units (even through they do not produce a normal waveform display on the crt), a feature is provided to over-ride the channel inhibit. This is done by applying a LO to the associated Force Readout input. The LO level diverts the HI channel-inhibit current and allows the data from this plug-in unit to reach the Column Data Switch, even though it has not been selected for display by the mode switch.

Row Match adjustment R2182 sets the gain of the Row Data Switch to match the gain of the Row Decoder for correct output. Column Match adjustment R2213 performs the same function for the Column Data Switch stage.

DISPLAY-SKIP GENERATOR

The Display-Skip Generator is made up of Q2215, Q2233, Q2225, and Q2229. This stage monitors the time-multiplexed column data at the output of the Column Data Switch during each time-slot to determine if the information at this point is valid data that should result in a crt display. Quiescently, there are about 100 microamperes of current flowing through R2213 from Q2240 and the Zeros Logic and Memory stage. (The purpose of this quiescent current will be discussed in connection with the Zeros Logic and Memory stage.) This current biases Q2215A so that its base is about 0.2 volt more positive than the base of Q2215B in the absense of column data. Therefore, since Q2215A and Q2215B are connected as a comparator, Q2215A will remain on unless its base is pulled more negative than the base of Q2215B.

The analog data output from the Column Data Switch produces a 0.5-volt (approximately) change for each unit of column current that has been encoded by the plug-in unit. Whenever any information appears at the output of the Column Data Switch, the base of Q2215A is pulled more negative than the base of Q2215B, resulting in a negative (LO) Display-Skip output to the Timer stage through Q2225. Recall that a LO was necessary at the skip input of the Timer so it could perform the complete sequence necessary to display a character.

Q2223-Q2229 also provide Display-Skip action. The End-of-Word level connected to their emitters is LO only during time-slot 1. This means they are enabled only during this time-slot. These transistors allow the Zeros Logic and Memory stage to generate a Display-Skip signal during time-slot 1 when information that is not to be displayed on the crt has been stored in memory (further information is given under Zeros Logic and Memory).

COLUMN AND ROW DECODERS

The Column Decoder U2244 and Row Decoder U2185 sense the magnitude of the analog voltages at their inputs (pin 10) and produce a binary output on one of ten lines corresponding to the column or row data encoded by the plug-in unit. These outputs provide the Column Digital Data and Row Digital Data, which is used by the Character Generator stages to select the desired character for display on the crt. The column and row data is also used through the Readout System to perform other functions.

The input current at pin 9 of the Column Decoder stage is steered to only one of the ten Column Digital Data outputs. When a Display-Skip signal is present (collector of Q2225 HI), pin 9 is pulled HI through CR2226. This ensures that no current is connected to the Character Generator stage under this condition. Notice the corresponding input on the Row Decoder. This input is connected to ground and causes only one of the ten row outputs to saturate to ground.

The network at the input of the Row Decoder, made up of Q2153 and its associated components, is a Row-14 detector which produces the Jump Command. This row current is encoded by special-purpose plug-ins to cause all or part of a word to be jumped. Whenever row 14 (thirteen units of row current, or 1.3 milliamperes) is encoded, the base of Q2153 is pulled negative enough so that this transistor is reverse biased to produce a HI Jump Command output at its collector. The Jump Command is connected to the Word Trigger stage to advance the Channel Counter to the next word and to reset the Time-Slot Counter to time-slot 1.

ZEROS LOGIC AND MEMORY

The Zeros Logic and Memory stage U2232 stores data encoded by the plug-in units to provide zeros-adding and prefix-shifting logic for the Readout System. The Strobe pulse at pin 15 goes positive when the data has stabilized and can be inspected. This activates the Zeros Logic and Memory stage so that it can store the encoded data. A block representation of the memory sequence is shown in Figure 3-34.

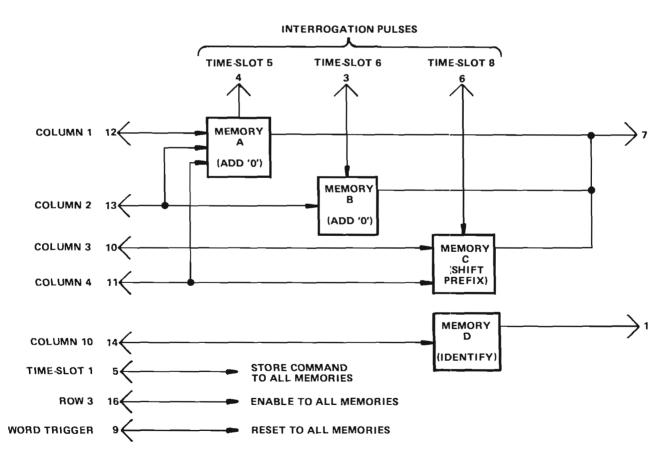


Figure 3-34. Block representation of memory sequence in U2232.

INPUT PIN OF U2232 ACTIVATED	COMMAND					TII	ME-S	SLOT	rs			
		1 :	4 TS-2	TS-3	TS-4	TS-5	+	7.S.7	1	TS-9	TS-10	
14	IDENTIFY				••••							- ≈ +3 V
12	ADD ONE ZERO			****								- ≈ +3 V
13	ADD TWO ZEROS											• ≈ +3 V
10	DECREASE PREFIX											- ≈ +3 V
11	DECREASE PREFIX AND ADD ONE ZERO											≈ +3 V

Typical output waveforms for the five possible input conditions that can occur are shown in Fig. 3-35. When time-slot 1 occurs, a store command is given to all of the memories. If the plug-in unit encoded data for column 1, 2, 3, 4, or 10 during time-slot 1, the appropriate memory (or memories) is set. Notice that row 3 information from the Row Decoder must also be present at pin 16 for data to be stored in the memory of U2232.

If data was encoded during time-slot 1, a negative-going output is produced at pin 7 while the memories are being set. This negative-going pulse is connected to the base of Q2229 in the Display-Skip Generator to produce a Display-Skip output. Since the information encoded during time-slot 1 was only provided to set the memories and not intended to be displayed on the crt at this time, the Display-Skip output prevents a readout display during this time-slot.

During time-slot 5, memory A is interrogated. If information was stored in this memory, a positive-going output is produced at pin 7. This pulse is connected to pin 10 of the Column Decoder through Q2240 to add one unit of current at the input of the Column Decoder. This produces a zero after the character displayed during time-slot 4. During time-slot 6, memory B is interrogated to see if another zero should be added. If another zero is necessary, a second positive output is produced at pin 7, which again results in a column 1 output from the Column Decoder and a second zero in the crt display.

Finally, memory C is interrogated during time-slot 8 to obtain information on whether the prefix should be changed, or left at the value that was encoded. If data has been encoded that calls for a shift in prefix, a negative-going output level is produced at pin 7. This negative level subtracts one unit of column current from the data at the input to the Column Decoder. Notice on the Character Selection Matrix of Fig. 3-25 that when row 4 is programmed, a reduction of one column results in a one-column shift of the prefix. For example, with the $100 \,\mu\text{V}$ program shown in Fig. 3-32, if the data received from the plug-in called for a shift in prefix, the crt readout would be changed to 1 mV (zeros deleted by program, see Encoding the Data).

The 100 microamperes of quiescent current through R2213 provided by Q2240 (see Display-Skip Generator) allows the prefix to be shifted from m (100 microamperes column current, column 1) to no prefix (zero column current, column zero) so only the unit of measurement encoded during time-slot 9 is displayed. Notice that reducing the prefix program from column 1 to column 0 programs the Readout System to not display a character at this readout location.

A further feature of the Zeros Logic and Memory is the Identify function. If 10 units of column current are encoded by the plug-in unit along with row 3 during time-slot 1, the Zeros Logic and Memory produces a negative-going output pulse at pin 1 to switch the Column Data Switch and Row Data Switch to the ninth channel. Then, time-slot pulses 2 through 9 encode an output current through resistors R2191-R2199 for column data and R2201-R2209 for row data. This provides the currents necessary to display the word IDENTIFY in the word position allotted to the channel that originated the Identify command. After completion of this word, the Column Data Switch and Row Data Switch continue with the next word in the sequence.

The Word Trigger signal from the Word Trigger stage is connected to pin 9 of U2232 through C2242. At the end of each word of readout information, this pulse goes LO. This erases the four memories in the Zeros Logic and Memory in preparation for the data to be received from the next channel.

CHARACTER GENERATORS

The Character Generator stage consists of five similar integrated circuits (U2270 through U2278), which generate the X (horizontal) and Y (vertical) outputs at pin 16 and 1, respectively, to produce the character display on the crt. Each integrated circuit can produce 10 individual characters. U2270 (designated 'Numerals') can produce the numerals 0 through 9 shown in row 1 of the Character Selection Matrix (Fig. 3-25). U2272 can produce the symbols shown in row 2 of the Character Selection Matrix and U2274 produces the prefixes and some letters, used as prefixes, shown in row 4. U2276 and U2278 produce the remaining letters shown in rows 5 and 6 of the Character Selection Matrix.

All of the Character Generator stages receive the Column Digital Data from the Column Decoder U2244 in parallel. However, only one of the Character Generators receives row data at a particular time and only the stage receiving this row data is activated. For example, if column 2 is encoded, the five Character Generators are enabled so that either a 1, <, μ , V, or an N can be produced. If row 4 has been encoded at the same time, only the Prefix Character Generator U2274 will produce an output to result in a ' μ ' being displayed. The activated Character Generator provides current outputs for the Format Generator to produce the selected character on the crt. In a similar manner, any of the characters shown in the Character Selection Matrix can be displayed by correct addressing of the row and column.

DECIMAL POINT LOGIC AND CHARACTER POSITION COUNTER

Decimal Point Logic and Character Position Counter U2260 performs two functions. The first function is to add a staircase current to the X (horizontal) signal to space the characters horizontally on the crt. After each character is generated, the negative-going edge of the Ready signal at pin 5 advances the Character Position Counter. This produces a current step output at pin 3 which, when added to the X signal, causes the next character to be displayed one character space to the right. This stage can also be advanced when a Space instruction is encoded so a space is left between the displayed characters on the crt. Row 10 information from the Row Decoder is connected to pin 4 of U2260. When row 10 and column 0 are encoded, the output of this stage advances one step to move the next character another space to the right. However, under this condition, no display is produced on the crt during this time-slot, since the Character Generators are not activated.

Time-slot pulses 1, 2, and 3 are also connected to pin 4 of U2260 through VR2262, VR2263, and VR2264 respectively and R2262-R2265. This configuration adds a space to the displayed word during time-slots 1, 2, and 3 even if information is not encoded for display during these time-slots. With this feature, the information displayed during time-slot 4 (scaling data) always starts in the fourth character position whether data has been displayed in the previous time-slots or not. Therefore, the resultant crt display does not shift position as normal-invert or cal-uncal information is encoded. The Word Trigger pulse connected to pin 8 resets the Character Position Counter to the first character position at the end of each word.

The Decimal Point Logic portion of this stage allows decimal points to be added to the crt display. With the Standard Readout Format, row 7, encoded coincident with columns 3 through 7, addresses a decimal at one of the five locations identified in row 7 of the Character Selection Matrix (Fig. 3-25). This instruction refers to the decimal point location in relation to the total number of characters possible in one

word (see Fig. 3-36). For example, column 3 encoded with row 7 during time-slot 1 places a decimal point in location No. 3. As shown in Fig. 3-36, this displays a decimal point after the third character that can be displayed on the crt. (The first three time-slots produce a space whether data is encoded or not; see previous paragraph.)

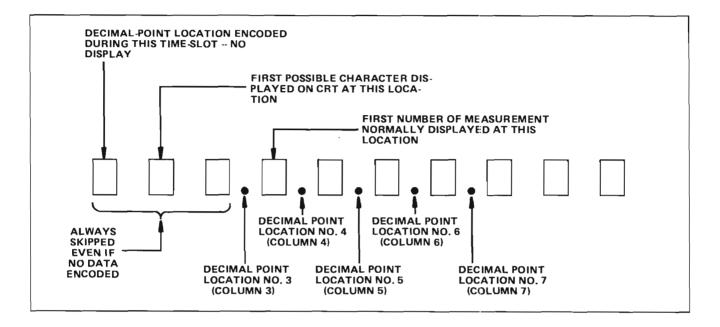


Figure 3-36. Readout word relating 10 possible character locations to the decimal point instructions that can be encoded, and the resultant crt display.

When decimal-point data is encoded, the crt is unblanked so a readout display is presented. Since row 7 does not activate any of the five Character Generators, the crt beam is deflected vertically by the application of row-7 data to the Y input of the Format Generator through R2280. This places the decimal point between the characters along the bottom line of the readout word. After the decimal point is produced in the addressed location, the crt beam returns to the location indicated by the Character Position Counter to produce the remainder of the display.

FORMAT GENERATOR

The X- and Y- deflection signals produced by the Character Generator stage are connected to pins 2 and 7, respectively, of Format Generator U2284. The Channel Address Code from the Channel Counter is also connected to pins 1, 8, and 15 of this stage. The Channel Address Code directs the Format Generator to add current to the X and Y signals to deflect the crt beam to the area of the crt associated with the plug-in channel that originated the information (see Fig. 3-24). The Channel Address Code and the resultant word positions are shown in Table 3-3. The Ready signal at pin 13 (coincident with the Vertical and Horizontal OFF Command output) activates this stage when a character is to be displayed on the crt. R2274 and R2275 determine the horizontal and vertical size, respectively, of the displayed characters. R2273 is the Character Height adjustment. The character position current from the Decimal Point Logic and Character Position stage is added to the X (horizontal) input signal to space the characters horizontally on the crt (see previous discussion).

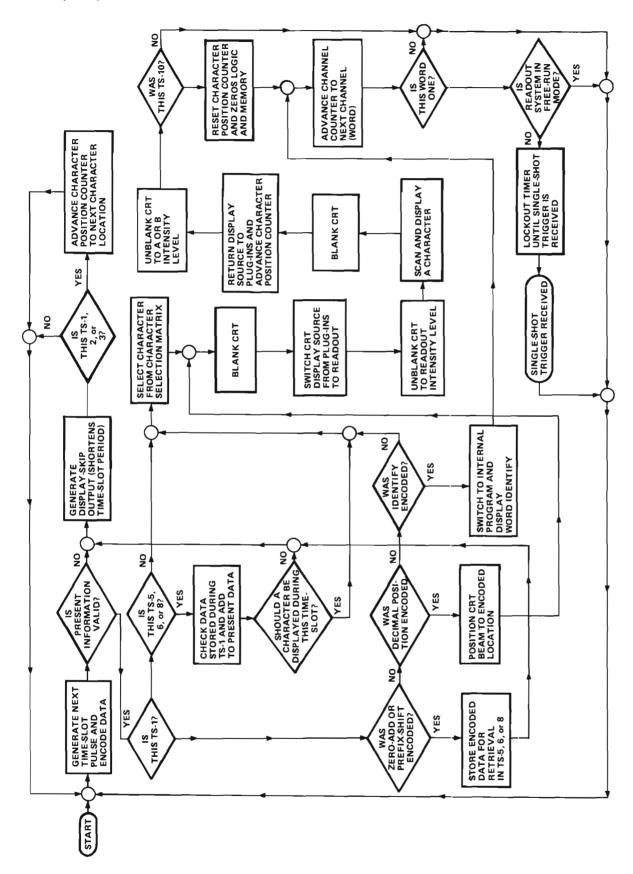


Figure 3-37. Flow chart for character generation by the Readout System.

Y-OUTPUT AMPLIFIER

The Y-output signal at pin 6 of Format Generator U2284 is connected to the Y-Output Amplifier Q2287-Q2299. This stage provides a low-impedance load for the Format Generator while providing isolation between the Readout System and the driven circuits. Vertical Separation adjustment R2291 changes the gain of this stage to control the vertical separation between the readout words displayed at the top and bottom of the graticule area.

X-OUTPUT AMPLIFIER

The X-Output Amplifier Q2286-Q2296 operates like the Y-Output Amplifier, to provide the horizontal deflection from the readout signal available at pin 4 of U2284. The gain of this stage is fixed by the values of the resistors in the circuit.

DISPLAY SEQUENCE

Figure 3-37 shows a flow chart for the Readout System. This chart illustrates the sequence of events that occurs in the Readout System each time a character is generated and displayed on the crt.



As shown in the simplified block diagram (Figure 3-38), the front panel controls select and operate the various pulse producing (logic) circuits. These pulses are applied to the input circuits of the operational amplifiers connected to the storage elements of the crt. The operational amplifiers, controlled by the logic pulses, provide the voltage levels necessary for operation of these storage elements. The operational amplifier output levels for the different storage modes are illustrated in Figures 3-40, 3-41, 3-42, and 3-43.

LOGIC

The timing sequence of the major logic pulses is shown in Figure 3-29. Since most timing functions begin with an erase cycle, this portion will be discussed first.

When the MANual ERASE push button is pressed, a positive pulse is coupled to the base of Q1539. This turns on Q1539, which turns off Q1541, allowing pin 2 of U1545A go HI. When not in SAVE (pin 1 of U1545A is HI in SAVE), this triggers the one-shot to start the erase cycle. The erase pulse stays HI for 100 milliseconds, as determined by R1544 and C1544.

Grounding the REMOTE ERASE input couples a negative step to the cathode of CR1538, which turns off Q1541 and allows pin 2 of U1545A to go HI, starting an erase cycle.

PERIODIC ERASE is accomplished by charging C1517 to the firing voltage of Q1518 (a program-mable-unijunction transistor). When Q1518 fires, it discharges C1517 through R1519, momentarily blocking the conduction of Q1541. This too, pulses pin 2 of U1545A HI, causing it to change state and output an erase pulse. The maximum time between erase cycles is set up by C1517 and R1517. This timing is varied by the amount of current flowing through Q1513. Current through Q1513 is adjusted by the PERIODIC ERASE control, R1488B. If a sweep gate is present on the base of Q1524, the gate of Q1518 is held at approximately eight volts to prevent Q1518 from firing until after the sweep gate ends.

The erase pulse, output of U1545A at pin 13, is connected to the emitters of Q1718 and Q1697. When the erase pulse goes HI, it causes the 600-volt erase waveform (through the switching action of Q1718)

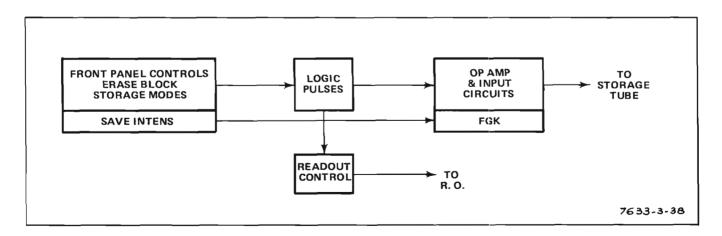


Figure 3-38. Storage circuit simplified block diagram.

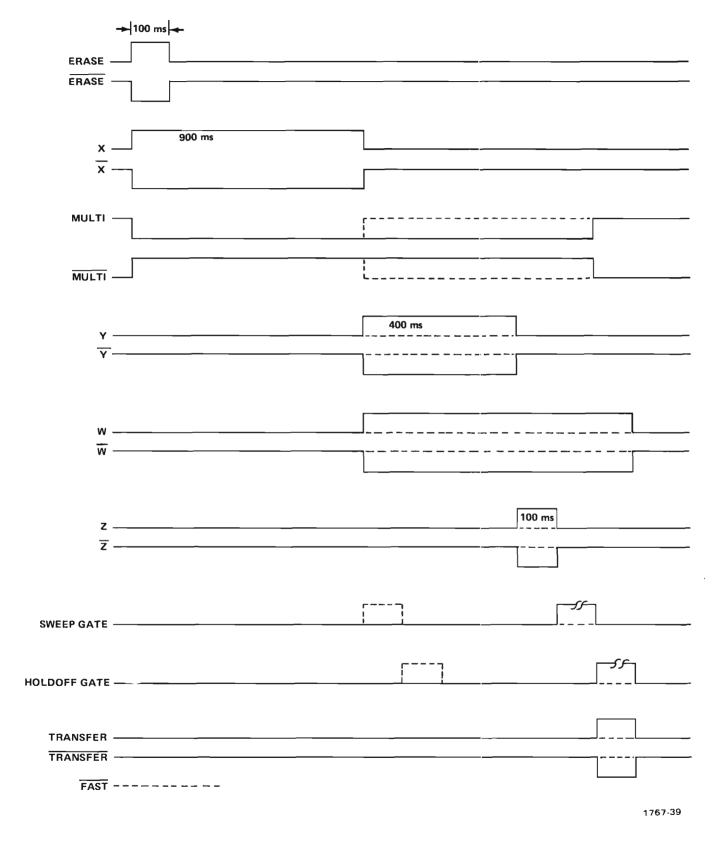


Figure 3-39. Time relationship of Storage logic pulses.

3-69

then goes to -15V and ramps up to the Bistable level (through the switching action of Q1697) on the Front Mesh. This waveform is shown in Figure 3-42.

When it goes HI, the erase pulse also causes Q1569 to saturate. This pulls pin 1 of U1605A LO, causing it to change state. Therefore, pin 13 (the X output) of U1605A goes HI for a 900 millisecond interval. This timing interval is determined by R1601 and C1601.

In the FAST mode, when the output at pin 4 (the X output) of U1605A returns to a HI logic level (after 900 milliseconds), it causes U1605B to change state. The LO on the \overline{Y} output of U1605B is connected

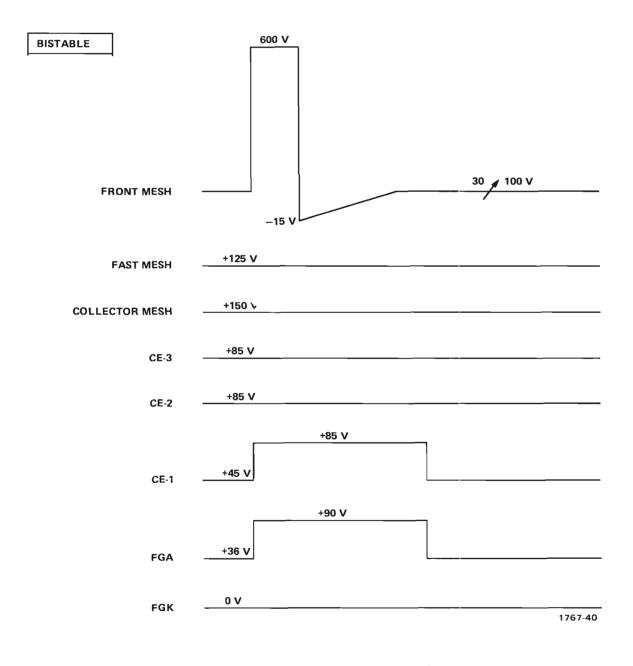


Figure 3-40. BISTABLE mode Storage waveforms.

REV. B, DEC. 1974

Theory of Operation-7633/R7633 Service

to pin 10 of U1555B, which presets the W output HI. When the \overline{Y} output returns HI, after 400 milliseconds, it causes U1615B to change state. This, in turn, sets the Z output (pin 5 of U1615B) HI for 100 milliseconds.

During the time X and Y are HI, the sweep is locked out through U1495A and CR1500. During the time Z is HI, the sweep is locked out through CR1497.

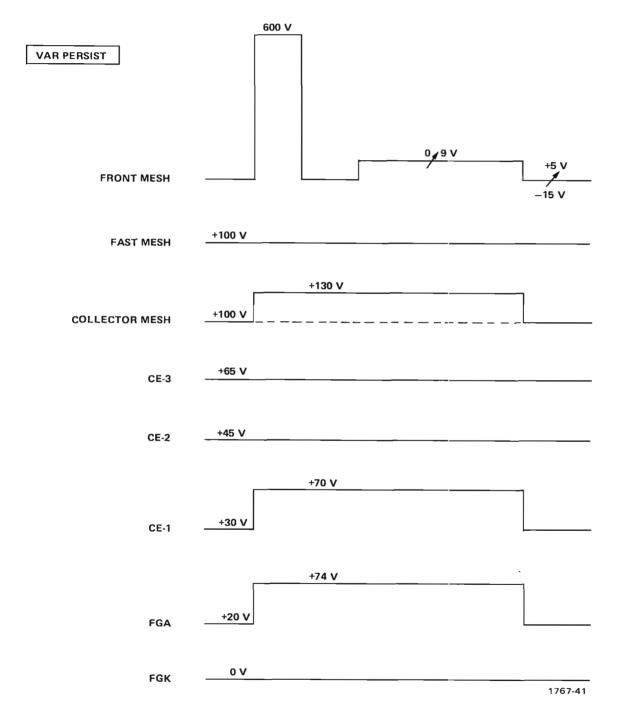


Figure 3-41. VAR PERSIST mode Storage waveforms.

3-71

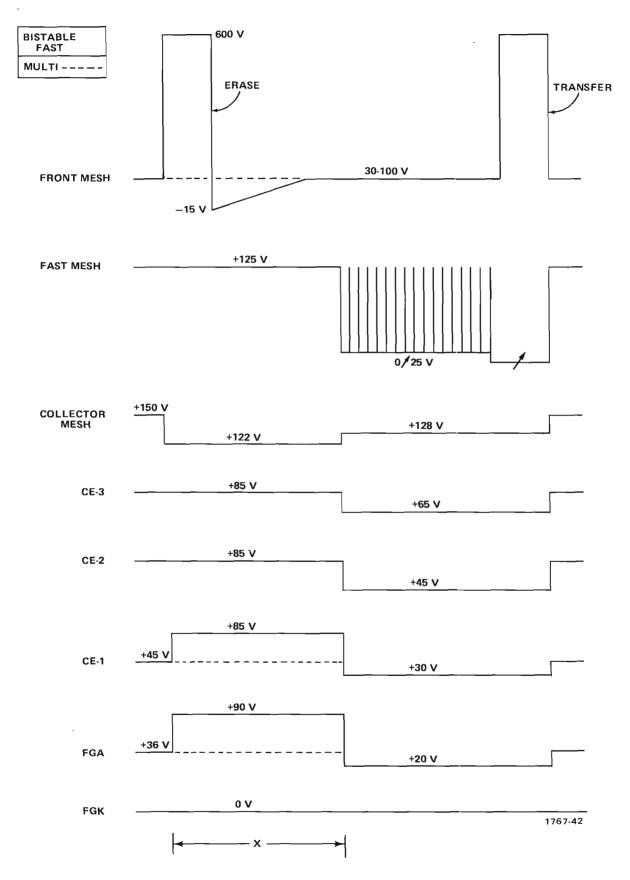


Figure 3-42. FAST BISTABLE mode Storage waveforms.

REV. B, DEC. 1974

Theory of Operation-7633/R7633 Service

At the end of Z the sweep is free to run since it is no longer locked out. When a sweep occurs, a holdoff gate from the time-base unit indicates the end of sweep. This signal, through Q1553 and U1497B, causes U1545B to change state and output a 100-millisecond transfer pulse, and locks out the sweep through D1498. At the end of transfer, when W goes LO, the sweep is locked out through CR1496.

When TSFR returns HI after the 100-millisecond transfer pulse, it saturates Q1569 to start the timing sequence of X, Y, and Z over again. In single sweep this is prevented by the conduction of Q1564. In single sweep the sequence can only be started again by an erase pulse.

Z returns HI after an erase pulse, it momentarily turns on Q1576, which turns off Q1587. This same signal turns on Q1585 to reset the time base. Pressing the time-base single-sweep reset button grounds the emitter of Q1587, causing it to saturate and restart the X, Y, and Z timing sequence. Since the X, Y, and Z timing sequence locks out the time base, the Z (when it goes HI) is again used to reset the time base by saturating Q1585.

When not in the FAST mode, a HI (FAST) signal through R1591 to the base of Q1595 causes the clear inputs to U1605B and U1555B to be held LO, which prevents Y and W from going HI. This same HI signal keeps Q1576 saturated. This prevents Q1587 from turning on and tripping the one-shot when the time base single-sweep reset button is pressed.

Q1621 (a programmable-unijunction transistor—P.U.T.) is the clock that provides the pump pulses, the save intensity pulses, and the persistence pulses. Its gate is tied to the gate of Q1631 so the two are synchronized. Q1631 provides the 10-kHz ramp to the Front Mesh.

From the time W goes HI until sweep starts, each time a clock pulse is applied to the input of U1615A, it fires a two microsecond pump pulse into the Fast Mesh operational amplifier through Q1775 (see Figures 3-42 and 3-43). The 100-Hertz clock gives the time between pulses while the R-C network (R1614 and C1614) determines the pulse width.

OPERATIONAL AMPLIFIERS

The voltage levels on the Front Mesh are controlled by an operational amplifier composed of Q1701, Q1704, Q1708, and Q1711. Input to the operational amplifier is the base of Q1701. Feedback is provided through R1713 and C1713. The bistable level is determined by Q1686 and R1689; the variable persistence prep level by Q1667, Q1673, and R1677; and the variable persistence op level by Q1661 and R1658. Q1644 and R1646 set the Fast variable persistence waiting level (see Figure 3-43). Q1652 locks out the 10 kHz ramp and the Storage Level control in the Bistable mode and when the Prep input is HI.

When an ERASE or TSFR pulse is applied to its emitter, Q1718 saturates, turning on Q1723, which cuts off Q1728 and Q1734. This allows the +600 volts at the collector of Q1734 to be routed, through Q1743 and Q1739, to the Front Mesh as a 100-millisecond erase or transfer pulse.

3-73 REV. B, DEC. 1974

At the same time the 600-volt erase pulse is applied to the Front Mesh in the Bistable mode, the HI, ERASE logic level at its emitter causes Q1697 to saturate, discharging C1695. At the instant the erase pulse is over, Q1697 turns off and C1695 begins to charge from ground toward -30V. At the -15V level, the base and collector of Q1692 approach unity, preventing any further charging of C1695. This ramp causes the output of the operational amplifier to ramp from -15V to the Bistable op level.

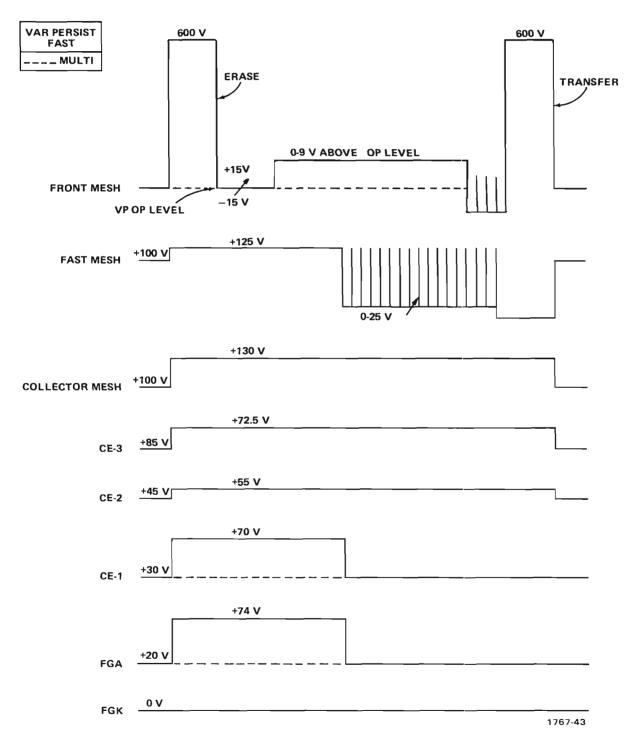


Figure 3-43. FAST VAR PERSIST mode Storage waveforms.

REV. B, DEC. 1974 3-74

Theory of Operation-7633/R7633 Service

The operational amplifier, consisting of Q1788, Q1790, Q1795, and Q1798, connected to the Fast Mesh is essentially the same as that connected to the Front Mesh except for a smaller feedback resistor (R1792) and no feedback capacitor.

The 100 and 125 volt levels on the Fast Mesh are set by the current through CR1771. When the W logic pulse goes HI, the Fast Mesh voltage level drops and pump pulses are applied through Q1775. When the SWP +TSFR logic pulse goes LO, it turns off Q1761, which lowers the Fast Mesh level further, and, by clearing U1615A, stops the pump pulses.

Voltage levels on the Collector Mesh, CE3, CE2, CE1, and FGA are set in similar manner to those on the Front and Fast Meshes by logic pulses applied to the inputs of their respective operational amplifiers.

3-75 (A)

MAINTENANCE

This section of the manual contains maintenance information for use in preventive maintenance, corrective maintenance, or troubleshooting of the 7633/R7633.

PRELIMINARY INFORMATION

PANEL REMOVAL

Panels and covers on both the 7633 and the R7633 should be removed in accordance with the procedures outlined below.

WARNING

Dangerous potentials exist at several points throughout this instrument. When the instrument is operated with the covers removed, do not touch exposed connections or components. Some transistors have voltages present on their cases. Disconnect power before cleaning the instrument or replacing parts.

CABINET MODEL

The side panels of the 7633 are held in place by spring-action of the panels themselves. To remove the panels, push the panel toward the top of the instrument until the bottom of the panel is clear of the clot along the bottom rail of the instrument. Then, pull the panel out at the bottom and lift away from the instrument. The bottom panel is held in place with eight screws. The panels protect this instrument from dust in the interior, and also provide protection to personnel from the operating potentials present. They also reduce the emi radiation from this instrument or emi interference to the display due to other equipment.

RACK MODEL

The top cover is held in place with six screws. To remove the cover, the screws need only be loosened slightly to slide the cover out of the slots.

A panel on the left side of the instrument, held in place with six screws, allows access to the vertical amplifier circuit board.

A cover on the rear of the instrument, held in place with four screws, allows access to the power supply regulating transistors. It also allows access to three of the five screws holding the regulating circuit board assembly in the instrument.

(A) 4-1

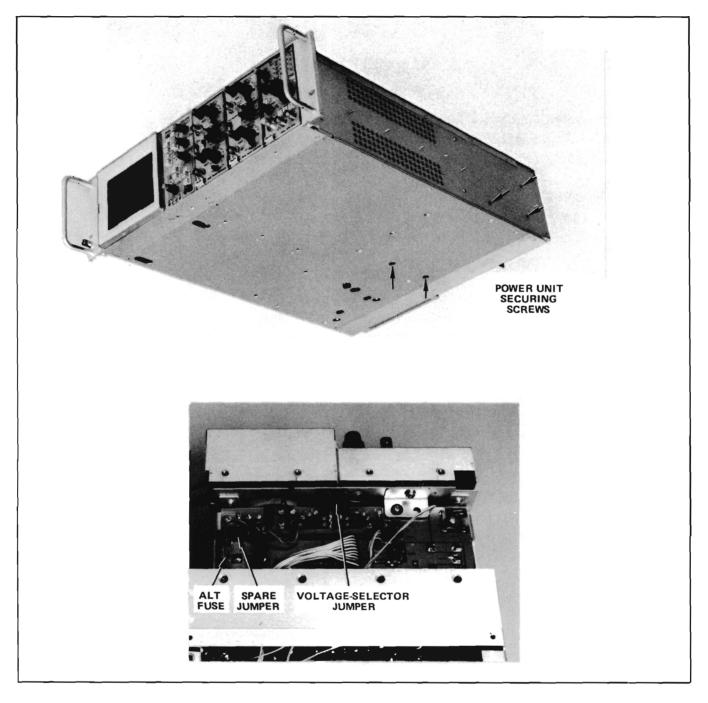


Figure 4-1. Power Unit removal.

POWER-UNIT REMOVAL

The power unit can be slid out of the back of the instrument to gain access to the Logic and Rectifier circuit boards and for power-unit maintenance. The power unit can be left connected to the rest of the instrument so that it can be operated in this position for troubleshooting. To remove the power unit, use the following procedure:

4-2

- 1. Remove the side panels (top panel for R7633.
- 2. Remove the six screws which secure the power unit to the sides of the instrument, (see Fig. 4-1 for locations of screws on R7633).
- 3. Slide the power unit out of the rear of the instrument until it can be set down on the work surface (guide the interconnecting cables so they do not catch on other parts of the instrument).

PREVENTIVE MAINTENANCE

Preventive maintenance consists of cleaning, visual inspection, lubrication, etc. Preventive maintenance performed on a regular basis may prevent instrument breakdown and will improve the reliability of this instrument. The severity of the environment to which the 7633/R7633 is subjected determines the frequency of maintenance is preceding recalibration of the instrument.

CLEANING

The 7633/R7633 should be cleaned as often as operating conditions require. Accumulation of dirt in the instrument can cause overheating and component breakdown. Dirt on components acts as an insulating blanket and prevents efficient heat dissipation. It also provides an electrical conduction path which may result in instrument failure. The side panels provide protection against dust in the interior of the instrument. Operation without the panels in place necessitates more frequent cleaning.

CAUTION

Avoid the use of chemical cleaning agents which might damage the plastics used in this instrument. Avoid chemicals which contain benzene, toluene, xylene, acetone, or similar solvents.

EXTERIOR

Loose dust accumulated on the outside of the 7633/R7633 can be removed with a soft cloth or small brush. The brush is particularly useful for dislodging dirt on and around the front-panel controls. Dirt which remains can be removed with a soft cloth dampened in a mild detergent and water solution. Abrasive cleaners should not be used.

AIR FILTER (R7633 only)

The air filter should be visually checked every few weeks and cleaned or replaced if dirty. More frequent inspections are required under severe operating conditions. If the filter is to be replaced, order new air filters from your local Tektronix Field Office or representative; order by Tektronix Part No. 378-0041-01. The following procedure is suggested for cleaning the filter.

- 1. Remove the filter by pulling it out of the retaining frame on the rear panel. Be careful not to drop any of the accumulated dirt into the instrument.
 - 2. Flush the loose dirt from the filter with a stream of hot water.

A-3

Maintenance-7633/R7633 Service

- 3. Place the filter in a solution of mild detergent and hot water and let it soak for several minutes.
 - 4. Squeeze the filter to wash out any dirt which remains.
 - 5. Rinse the filter in clean water and allow it to dry.
- 6. Coat the dry filter with an air-filter adhesive (available from air conditioner suppliers or order Tektronix Part No. 006-0580-00).
 - 7. Let the adhesive dry thoroughly.
 - 8. Re-install the filter in the retaining frame.

CRT

Clean the plastic light filter, faceplate protector, and the crt face with a soft, lint-free cloth dampened with denatured alcohol.

The optional crt mesh filter can be cleaned in the following manner:

- 1. Hold the mesh filter in a vertical position and brush lightly with a soft No. 7 water-color brush to remove light coatings of dust or lint.
- 2. Greasy residues or dried-on dirt can be removed with a solution of warm water and a neutral-pH liquid detergent. Use the brush to lightly scrub the filter.
 - 3. Rinse the filter thoroughly in clean water and allow to air dry.
- 4. If any lint or dirt remains, use clean low-pressure air to remove it. Do not use tweezers or other hard cleaning tools on the filter, as the special finish may be damaged.
- 5. When not in use, store the mesh filter in a lint-free, dust-proof container such as a plastic bag.

INTERIOR

Dust in the interior of this instrument should be removed occasionally due to its electrical conductivity under high-humidity conditions. The best way to clean the interior is to blow off the accumulated dust with dry, low-pressure air. Remove any dirt which remains with a soft brush or a cloth dampened with a mild detergent and water solution. A cotton-tipped applicator is useful for cleaning in narrow spaces or for cleaning ceramic terminal strips and circuit boards.

The high-voltage circuits, particularly parts located in the high-voltage compartment and the area surrounding the post-deflection anode lead, should receive special attention. Excessive dirt in these areas may cause high-voltage arcing and result in improper instrument operation.

LUBRICATION

The reliability of potentiometer, switches, and other moving parts can be maintained if they are kept properly lubricated. However, coer-lubrication is as detrimental as too little lubrication. A lubrication kit containing necessary lubricants are instructions is available from Tektronix, Inc. Order Part No. 003-0342-01.

4-4 (A)

VISUAL INSPECTION

The 7633/R7633 should be inspected occasionally for such defects as broken connections, improperly seated semiconductors, damaged or improperly installed circuit boards, and heat-damaged parts. The corrective procedure for most visible defects is obvious; however, particular care must be taken if heat-damaged components are found. Overheating usually indicates other trouble in the instrument; therefore, it is important that the cause of overheating be corrected to prevent recurrence of the damage.

SEMICONDUCTOR CHECKS

Periodic checks of the semiconductors in the 7633/R7633 are not recommended. The best check of semiconductor performance is actual operation in the instrument. More details on checking semiconductor operation are given under troubleshooting.

RECALIBRATION

To assure accurate measurements, check the calibration of this instrument after each 1000 hours of operation or every six months if used infrequently. In addition, replacement of components may necessitate recalibration of the affected circuits. The calibration procedure can also be helpful in localizing certain troubles in the instrument. In some cases, minor troubles may be revealed and/or corrected by recalibration.

TROUBLESHOOTING

The following information is provided to facilitate troubleshooting of the 7633/R7633. Information contained in other sections of this manual should be used along with the following information to aid in locating the defective component. An understanding of the circuit operation is very helpful in locating troubles, particularly where integrated circuits are used. See the Theory of Operation section for complete information.

TROUBLESHOOTING AIDS

DIAGRAMS

Complete circuit diagrams are given on foldout pages in the Diagrams section. The component number and electrical value of each component in this instrument are shown on these diagrams. Important voltages and waveforms are also shown on the diagrams. The portions of the circuit mounted on circuit boards are enclosed with blue lines.

CIRCUIT BOARDS

Fig. 4-2 shows the location of the circuit boards within the 7633; Fig. 4-3 shows the location of circuit boards in the R7633. These circuit boards are shown in Figs. 8-2 through 8-16 in the Diagrams section. Each electrical component on the boards is identified by its circuit number. A grid location guide is provided to aid in locating circuit components. The circuit boards are also outlined on the diagrams with a blue line to show which portions of the circuit are located on a circuit board.

♠ 4-5

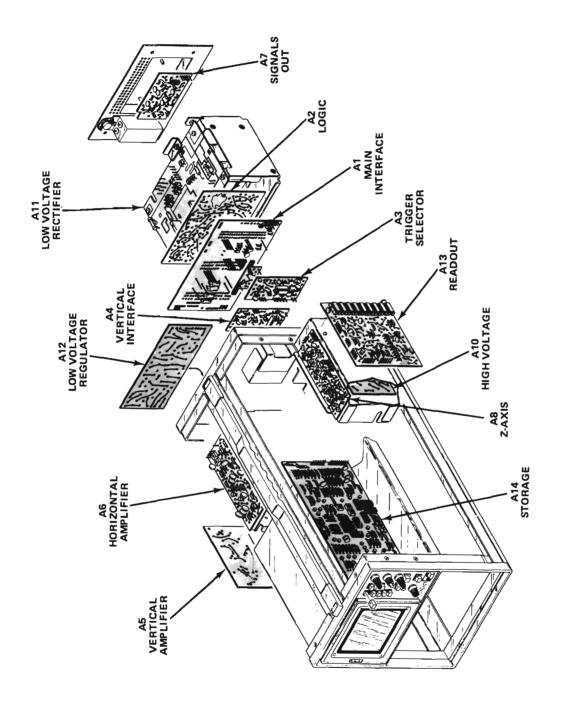


Figure 4-2. Location of circuit boards in the 7633.

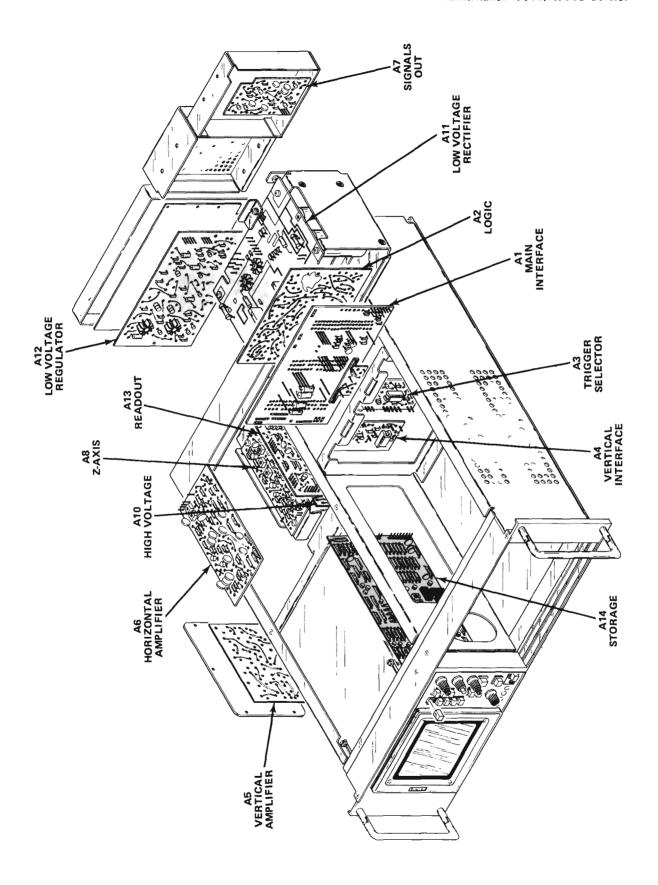


Figure 4-3. Location of circuit boards in the R7633.

4-7

(A)

Maintenance-7633/R7633 Service

MULTI-PIN CONNECTOR COLOR-CODE

The multi-pin connectors used for interconnection between circuit boards are color-coded to aid in circuit tracing. The color of the connector body matches the resistor color-code for the last digit of the circuit number; e.g., P601 is brown, P603 is orange, etc.

WIRING COLOR-CODE

All insulated wire and cable used in the 7633/R7633 is color-coded to facilitate circuit tracing.

TROUBLESHOOTING EQUIPMENT

The following equipment is useful for troubleshooting the 7633/R7633.

1. Transistor Tester

Description: Tektronix Type 576 Transistor-Curve Tracer or equivalent.

Purpose: To test the semiconductors used in this instrument.

2. Multimeters

Description: Digital voltmeter, 10 megohm input impedance and 0 to 500 volts range; ohmmeter, 0 to 2 megohms. Accuracy, within 1%. Test probes must be insulated to prevent accidental shorting.

Purpose: To check voltages and for general troubleshooting in this instrument.

NOTE

A 20,000 ohms/volt vom can be used to check the voltages in this instrument if allowances are made for the circuit loading of the vom at high-impedance points.

3. Test Oscilloscope

Description: Frequency response, dc to 50 megahertz; deflection factor, 50 volts/division. A 10X probe should be used to reduce circuit loading.

Purpose: To check operating waveforms in this instrument.

TROUBLESHOOTING TECHNIQUES

This troubleshooting procedure is arranged in an order which checks the simple trouble possibilities before proceeding with extensive troubleshooting. The first few checks assure proper connection, operation, and calibration. If the trouble is not located by these checks, the remaining steps aid in locating the defective component. When the defective component is located, it should be replaced following the replacement procedures given under corrective maintenance.

Check Control Settings. Incorrect control settings can indicate a trouble that does
not exist. If there is any question about the correct function or operation of any control, see the
Operating Instructions section.

4-8 (A)

- 2. Check Associated Equipment. Before proceeding with troubleshooting of the 7633/R7633, check that the equipment used with this instrument is operating correctly. Check that the signal is properly connected and that the interconnecting cables are not defective. Also, check the power source. The associated plug-in units can be checked for proper operation by substituting other units which are known to be operating properly (preferably of the same types). If the trouble persists after substitution, the 7633/R7633 is probably at fault.
- 3. Visual Check. Visually check the portion of the instrument in which the trouble is located. Many troubles can be located by visual indications such as unsoldered connections, broken wires, damaged circuit boards, damaged components, etc.
- 4. Check Instrument Calibration. Check the calibration of this instrument, or the affected circuit if the trouble appears in one circuit. The apparent trouble may only be a result of misadjustment, or may be corrected by calibration. Complete calibration instructions are given in the Calibration section.
- 5. Isolate Trouble To A Circuit. To isolate trouble to a particular circuit, note the trouble symptom. The symptom often identifies the circuit in which the trouble is located. For example, poor focus indicates that the crt circuit (includes high-voltage supplies) is probably at fault. When trouble symptoms appear in more than one circuit, check affected circuits by taking voltage and waveform readings. Typical voltages and waveforms are given on the schematics in the Diagrams section.

Incorrect operation of all circuits often indicates trouble in the power supply. Check first for correct voltage of the individual supplies. A defective component elsewhere in the instrument can appear as a power-supply trouble and may also affect the operation of other circuits. Table 4-1 lists the tolerances of the power supplies in this instrument. These voltages are measured between the power-supply test points and ground. If a power-supply voltage is within the listed tolerance, the supply can be assumed to be working correctly. If outside the tolerance, the supply may be misadjusted or operating incorrectly. Use the procedure given in the Calibration section to adjust the power supplies.

TABLE 4-1
Power Supply Tolerance and Ripple

Power Supply	Test Point	Output Voltage Tolerance	Maximum ripple (peak-to-peak)
–50 Volt	TP-50 (back of Main Interface board) on P1170-Pin 1	±0.1 volt	5 mV
–15 Volt	P1170-Pin 8	±0.3 volt	2 mV
+5 Volt	P1170-Pin 6	±0.15 volt	2 mV
+15 Volt	P1170-Pin 5	±0.3 volt	2 mV
+50 Volt	P1170-Pin 4	±0.6 volt	5 mV
+130 Volt	P1170-Pin 3	±5.2 volts	300 mV

A-9

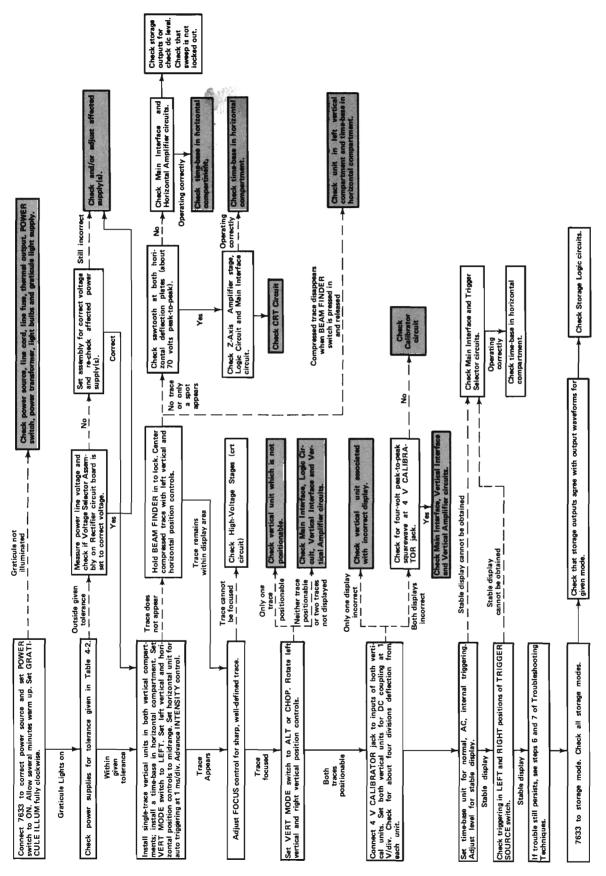


Figure 4-4. Circuit isolation troubleshooting chart.

Fig. 4-4 provides a guide for locating a defective circuit. This chart does not include checks for all possible defects; use steps 6 and 7 in such cases. Start from the top of the chart and perform the given checks on the left side of the page until a step is found which does not produce the indicated results. Further checks and/or the circuit in which the trouble is probably located are listed to the right of this step.

If incorrect operation of the power supplies is suspected, connect the 7633/R7633 to a variable autotransformer. Then, check for correct regulation with a dc voltmeter (0.1% accuracy) and correct ripple with a test oscilloscope while varying the autotransformer throughout the regulating range of this instrument.

After the defective circuit has been located, proceed with steps 6 and 7 to locate the defective component(s).

6. Check Voltages and Waveforms. Often the defective component can be located by checking for the correct voltage or waveform in the circuit. Typical voltages and waveforms are given on the diagrams.

NOTE

Voltages and waveforms given on the diagrams are not absolute and may vary slightly between instruments. To obtain operating conditions similar to those used to take these readings, see the first diagram page.

7. Check Individual Components. The following procedures describe methods of checking individual components in the 7633/R7633. Components which are soldered in place are best checked by first disconnecting one end. This isolates the measurement from the effects of surrounding circuitry.

A. SEMICONDUCTORS.

CAUTION

Power switch must be turned off before removing or replacing semiconductors.

A good check of transistor operation is actual performance under operating conditions. A transistor can most effectively be checked by substituting a new component for it (or one which has been checked previously). However, be sure that circuit conditions are not such that a replacement transistor might also be damaged. If substitute transistors are not available, use a dynamic tester. Static-type testers are not recommended, since they do not check operation under simulated operating conditions.

Integrated circuits can be checked with a voltmeter, test oscilloscope, or by direct substitution. A good understanding of the circuit operation is essential to troubleshooting circuits using integrated circuits. In addition, operating waveforms, logic levels, and other operating information for the integrated circuits are given in

A 4-11

the Theory of Operation section. Use care when checking voltages and waveforms around the integrated circuits so adjacent leads are not shorted together. A convenient means of clipping a test probe to the 14- and 16-pin integrated circuits is with an integrated-circuit test clip. This device also doubles as an integrated-circuit extraction tool.

B. DIODES.

A diode can be checked for an open or for a short circuit by measuring the resistance between terminals with an ohmmeter set to the R X 1k scale. The diode resistance should be very high in one direction and very low when the meter leads are reversed. Do not check tunnel diodes or back diodes with an ohmmeter.

CAUTION

Do not use an ohmmeter scale that has a high internal current. High currents may damage the diodes under test.

C. RESISTORS.

Check the resistors with the ohmmeter. See the Electrical Parts List for the tolerance of the resistors used in this instrument. Resistors normally do not need to be replaced unless the measured value varies widely from the specified value.

D. INDUCTORS.

Check for open inductors by checking continuity with an ohmmeter. Shorted or partially shorted inductors can usually be found by checking the waveform response when high-frequency signals are passed through the circuit. Partial shorting often reduces high-frequency response (roll-off).

E. CAPACITORS.

A leaky or shorted capacitor can best be detected by checking resistance with an ohmmeter on the highest scale. Do not exceed the voltage rating of the capacitor. The resistance reading should be high after initial charge of the capacitor. An open capacitor can best be detected with a capacitance meter or by checking if the capacitor passes ac signals.

8. Repair and Readjust the Circuit. If any defective parts are located, follow the replacement procedures given in this section. Be sure to check the performance of any circuit that has been repaired or that has had any electrical components replaced.

4-12 REV. B, JULY, 1975

CORRECTIVE MAINTENANCE

Corrective maintenance consists of component replacement and instrument repair. Special techniques required to replace components in this instrument are given here.

OBTAINING REPLACEMENT PARTS

STANDARD PARTS

All electrical and mechanical part replacements for the 7633/R7633 can be obtained through your local Tektronix Field Office or representative. However, many of the standard electronic components can be obtained locally in less time than is required to order them from Tektronix, Inc. Before purchasing or ordering replacement parts, check the parts list for value, tolerance, rating, and description.

NOTE

When selecting replacement parts, it is important to remember that the physical size and shape of a component may affect its performance in the instrument, particularly at high frequencies. All replacement parts should be direct replacements unless it is known that a different component will not adversely affect instrument performance.

SPECIAL PARTS

In addition to the standard electronic components, some special components are used in the 7633/R7633. These components are manufactured or selected by Tektronix, Inc. to meet specific performance requirements, or are manufactured for Tektronix, Inc. in accordance with our specifications. Most of the mechanical parts used in this instrument have been manufactured by Tektronix, Inc. Order all special parts directly from your local Tektronix Field Office or representative.

ORDERING PARTS

When ordering replacement parts from Tektronix, Inc., include the following information:

- 1. Instrument type.
- 2. Instrument serial number.
- 3. A description of the part (if electrical, include circuit number).
- 4. Tektronix part number.

SOLDERING TECHNIQUES

The reliability and accuracy of this instrument can be maintained only if proper soldering techniques are used when repairing or replacing parts.

WARNING

Disconnect the instrument from the power source before soldering.

(A) 4-13

Maintenance-7633/R7633 Service

General soldering techniques which apply to maintenance of any precision electronic equipment should be used when working on this instrument. Use only 60/40 rosin-core electronic-grade solder. The choice of soldering iron is determined by the repair to be made. When soldering on circuit boards, use a 35- to 40-watt pencil-type soldering iron with a 1/8-inch wide, wedge-shaped tip. Keep the tip properly tinned for best heat transfer to the solder joint. A higher wattage soldering iron may separate the wiring from the base material. Avoid excessive heat; apply only enough heat to remove the component or to make a good solder joint. Also, apply only enough solder to make a firm solder joint; do not apply too much solder.

For metal terminals (e.g., switch terminals, potentiometers, etc.) a higher wattage-rating soldering iron may be required. Match the soldering iron to the work being done. For example, if the component is connected to the chassis or other large heat-radiating surface, it will require a 75-watt or larger soldering iron. The pencil-type soldering iron used on the circuit board can be used for soldering to switch terminals, potentiometers, or metal terminals mounted in plastic holders.

After soldering is completed, clean the area around the solder connection with a flux-remover solvent. Be careful not to remove any information printed in the area.

COMPONENT REPLACEMENT

The exploded-view drawings associated with the Mechanical Parts List (located at rear of manual) may be helpful in the removal or disassembly of individual components or sub-assemblies.

WARNING

Disconnect the instrument from the power source before replacing components.

CIRCUIT BOARD REPLACEMENT

If a circuit board is damaged beyond repair, the entire assembly including all soldered-on components, can be replaced. Part numbers are given in the Mechanical Parts List.

NOTE

Even though unwired boards are available without components, use of the completely wired replacement board is recommended due to the large number of components mounted on most of the boards.

Most of the circuit boards in this instrument are mounted on the chassis; pin connectors are used for interconnection with other circuits. Use the following procedure to remove the chassis-mounted circuit boards (removal instructions for the exceptions will be given later).

A. CHASSIS-MOUNTED BOARDS.

 Disconnect any pin connectors on the board or connected to other portions of the instrument. Note the order of these connectors so they can be correctly replaced.

- 2. Remove the securing screws.
- 3. Remove the board.
- 4. To replace the board, reverse the order of removal. Match the arrows on the multi-pin connectors to the arrows on the board. Correct location of the pin connectors is shown in the circuit board illustrations in the Diagrams section.

B. TRIGGER SELECTOR AND VERTICAL INTERFACE CIRCUIT BOARD REPLACEMENT.

The Trigger Selector and Vertical Interface circuit boards plug onto the front of the Main Interface circuit board. Use the following procedure to replace either board.

- 1. Remove the securing screws.
- Pull out on the edges of the board until the board clears the interconnecting terminals. Hold the board parallel to the Main Interface board until the board is free, so as not to bend the interconnecting terminals.
- 3. To replace the circuit board, position it so the interconnecting pins and sockets mate properly.
- 4. Gently press the circuit board against the mounting surface. Be sure that all the interconnecting pins and sockets mate properly.
 - 5. Replace the securing screws.

C. LOGIC CIRCUIT BOARD REPLACEMENT.

- 1. Slide out the power unit as described previously.
- 2. Disengage the plastic snaps which secure the sides of the board.
- 3. Pull out on the edges of the board until the board clears the interconnecting terminals. Hold the board parallel to the Main Interface board until the board is free, so as not to bend the interconnecting terminals.
- 4. To replace the Logic board, position it so the guide holes in the board mate with the guide posts. Check that all the interconnecting pins and sockets mate properly.
- 5. Gently press the board against the Main Interface board until the plastic snaps secure the board.

D. MAIN INTERFACE CIRCUIT BOARD REPLACEMENT.

- 1. Slide out the power unit as described previously.
- 2. Remove all of the plug-on circuit boards from the Main Interface board (remove plug-in units to gain access to plug-on boards on front of Main Interface board).
- Disconnect the multi-pin connectors from the rear of the Main Interface board. Note the order of these connectors so they can be correctly replaced.

4-15

(A)

- 4. Remove the three screws from inside each plug-in compartment which hold the plug-in interface connectors to the chassis (total of nine screws). Also remove the hexagonal posts which secure the ground straps to the Main Interface board.
- 5. Remove the Main Interface board assembly through the rear of the instrument.
- 6. To replace the Main Interface board, reverse the order of removal. Match the arrows on the multi-pin connectors to the arrows on the board. Correct location of the pin connectors is shown in the circuit board illustration in the Diagrams section.

E. LOW-VOLTAGE REGULATOR CIRCUIT BOARD REPLACEMENT.

- 1. Remove the four screws which secure the protective cover to the rear of the instrument. Remove the protective cover.
 - 2. Disconnect the pin connectors.
- 3. Remove the four screws which secure the Regulator and Fan-Motor subassembly cover to the rear of the instrument.
- 4. Remove the two screws which secure the Fan Motor, and remove the Fan Motor.
- 5. Remove the four screws which secure the plate to the heat radiator. Remove the plate.
- 6. Remove the power transistors from the back of the heat radiator. Note the location of each power transistor.
 - 7. To replace the Regulator board, reverse the order of removal.

NOTE

After replacing the power transistors, check that the transistor cases are not shorted to the heat radiator before applying power.

F. RECTIFIER BOARD REPLACEMENT.

To replace the Rectifier board, proceed as follows:

- 1. Slide out the power unit as described previously.
- 2. Disconnect the pin connectors from the board.
- 3. Disconnect the wires soldered to the top of the board.
- 4. Unsolder all of the power transformer wires connected to the top of the board. Use a vacuum-type desoldering tool to remove the solder from the hole in the circuit board.
 - 5. Remove the screws holding each corner of the board to the chassis.
- 6. To replace the Rectifier board, reverse the order of removal. Be sure that all of the transformer wires are properly placed before resoldering. Match the arrows on the multi-pin connectors to the arrows on the board. Correct location of the pin connectors and the wire color code is shown on the circuit board illustration in the Diagrams section.

4-16 REV. B, DEC. 1974

G. PLUG-IN INTERFACE CONNECTORS.

The individual contacts of the plug-in interface connectors can be replaced. However, it is recommended that the entire Main Interface board be replaced if a large number of the contacts are damaged. An alternative solution is to refer the maintenance of the damaged Main Interface board to your local Tektronix Field Office or representative. Use the following procedure to replace an individual contact of the plug-in interface connector.

- 1. Remove the Main Interface circuit board from the instrument as described previously.
- 2. Snap the connector cover (white plastic) off the side of the plug-in interface connector which needs repair.
 - 3. Unsolder and remove the damaged contact.
- 4. Install the replacement contact. Carefully form it to the required shape to fit against the connector body.
- 5. Snap the connector cover back onto the plug-in interface connector. Check that the contact which was replaced is aligned with the other contacts.
 - 6. Replace the Main Interface board.

H. ACCESS TO THE FAN MOTOR FOR THE 7633.

- 1. Remove the four screws holding the Low-Voltage Regulator subassembly to the main chassis (see Fig. 4-5).
- 2. Pull the Low-Voltage regulator sub-assembly out through the rear of the instrument as far as cables will permit.
- 3. Remove the two screws holding the motor to the bracket; be careful not to lose the spacers between the motor and the bracket.
- 4. To replace the motor, reverse the order of removal.

I. ACCESS TO THE FAN MOTOR FOR THE R7633.

- 1. Remove the eight screws holding the Signals-Out rear panel to the chassis. Pull rear panel out as far as cables will permit (see Fig. 4-6).
- 2. Remove the four corner bolts securing the motor to the chassis.
- 3. To replace the motor, reverse the order of removal.

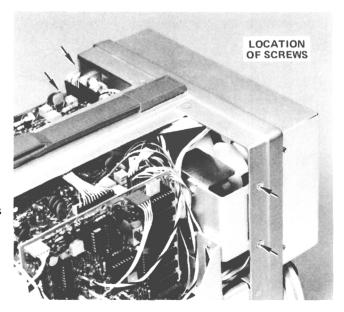


Figure 4-5. Location of screws holding Low-Voltage sub-chassis.

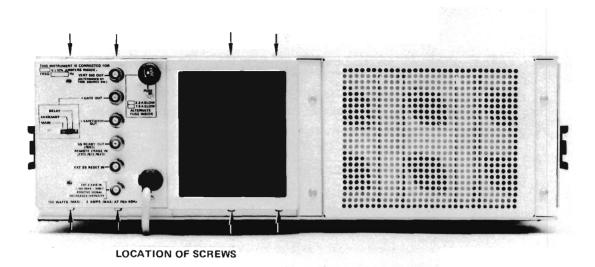


Figure 4-6. Location of screws holding Signals Out rear panel.

SEMICONDUCTOR REPLACEMENT

Semiconductors should not be replaced unless actually defective. If removed from their sockets during routine maintenance, return them to their original sockets. Unnecessary replacement of semi-conductors may affect the calibration of this instrument. When semi-conductors are replaced, check the operation of the part of the instrument which may be affected.

An extracting tool should be used to remove the 14- and 16-pin integrated circuits to prevent damage to the pins. This tool is available from Tektronix, Inc. Order Tektronix Part No. 003-0619-00. If an extracting tool is not available when removing one of these integrated circuits, pull slowly and evenly on both ends of the device. Try to avoid having one end of the integrated circuit disengage from the socket before the other, as this may damage the pins.

CAUTION

POWER switch must be turned off before removing or replacing semiconductors.

Replacement semiconductors should be of the original type or a direct replacement. Fig 8-1 in the Diagrams Section shows the lead configuration of the semiconductors used in this instrument. Some plastic case transistors have lead configurations which do not agree with those shown here. If a replacement transistor is made by a different manufacturer than the original, check the manufacturer's basing diagram for correct basing. All transistor sockets in this instrument are wired for the standard basing as used for metal-cased transistors. Transistors which have heat radiators or are mounted on the chassis use silicone grease to increase heat transfer. Replace the silicone grease when replacing these transistors.

WARNING

Handle silicone grease with care. Avoid getting silicone grease in the eyes. Wash hands thoroughly after use.

4-18

ACCESS TO POWER TRANSISTORS

The power transistors associated with the Low-Voltage Power Supply are mounted on the heat radiator at the rear of the instrument. To gain access to these transistors, follow the procedure given previously for removing the Regulator circuit board. The power transistors can be removed from the heat radiator by taking out the screws in the mounting tabs (cases elevated above chassis; be sure power is off).

NOTE

After replacing a power transistor, check that the collector is not shorted to ground before applying power.

INTERCONNECTING PINS REPLACEMENT

Two methods of interconnection are used in this instrument to connect the circuit boards with other boards and components. When the interconnection is made with a coaxial cable, a special end-lead connector plugs into a socket on the board. Other interconnections are made with a pin soldered onto the board. Two types of mating connections are used for these interconnecting pins. If the mating connector is on the end of a lead, an end-lead pin connector is used which mates with the interconnecting pin. The following information provides the replacement procedure for the various types of interconnecting methods.

A. COAXIAL-TYPE END-LEAD CONNECTORS.

Replacement of the coaxial-type end-lead connectors requires special tools and techniques; only experienced maintenance personnel should attempt replacement of these connectors. It is recommended that the cable or wiring harness be replaced as a unit. Refer to your local Tektronix Field Office or representative for replacement cables.

B. CIRCUIT-BOARD PINS.

NOTE

A circuit-board pin replacement kit including necessary tool, instructions, and replacement pins is available from Tektronix, Inc. Order Tektronix Part No. 040-0542-00.

CAUTION

To replace a pin which is mounted on a circuit board, first disconnect any pin connectors. Then, unsolder the damaged pin and pull it out of the circuit board with a pair of pliers. Be careful not to damage the wiring on the board with too much heat. Ream out the hole in circuit board with a 0.031-inch drill. Remove the ferrule from the new interconnecting pin and press the new pin into the hole in the circuit board. Position the pin in the same manner as the old pin. Then, solder the pin on both sides of the circuit board. If the old pin was bent at an angle to mate with a connector, bend the new pin to match the associated pins.

REV. B, DEC. 1974 4-19

C. CIRCUIT BOARD PIN SOCKETS.

The pin sockets on the circuit boards are soldered to the rear of the board. To replace one of these sockets, first unsolder the pin (use a vacuum-type desoldering tool to remove excess solder). Then straighten the tabs on the socket and remove it from the hole in the board. Place the new socket in the circuit board hole and press the tabs down against the board. Solder the tabs of the socket to the circuit board; be careful not to get solder into the socket.

NOTE

The spring tension of the pin sockets ensures a good connection between the circuit board and the pin. This spring tension can be destroyed by using the pin socket as a connecting point for spring-loaded probe tips, alligator clips, etc.

D. END-LEAD PIN CONNECTORS.

The pin connectors used to connect the wires to the interconnecting pins are clamped to the ends of the associated leads. To replace damaged end-lead pinconnectors, remove the old pin connector from the end of the lead and clamp the replacement connector to the lead.

Some of the pin connectors are grouped together and mounted in a plastic holder; the overall result is that these connectors are removed and installed as a multi-pin connector. To provide correct orientation of this multi-pin connector when it is replaced, an arrow is stamped on the circuit board and a matching arrow is molded into the plastic housing of the multi-pin connector. Be sure these arrows are aligned as the multi-pin connector is replaced. If the individual end-lead pin connectors are removed from the plastic holder, note the color of the individual wires for replacement.

CATHODE-RAY TUBE REPLACEMENT

To replace the cathode-ray tube, proceed as follows:

WARNING

Use care when handling a crt. Protective clothing and safety glasses should be worn. Avoid striking it on any object which might cause it to crack or implode. When storing a crt, place it in a protective carton or set it face down in a protected location on a smooth surface with a soft mat under the faceplate to protect it from scratches.

A. REMOVAL.

1. Remove the heat radiator/Low-Voltage Regulator circuit board assembly as described previously.

4-20

- 2. Remove the crt base socket from the rear of the crt.
- 3. Loosen the two screws located on each side of the crt socket until the tension of the springs on these screws is released. Then, press in on the screws to be sure that the crt clamp is loose.
- 4. Disconnect the deflection-plate connectors. Be careful not to bend these pins.
 - 5. Disconnect the P1830 plug (storage cable assembly).
- 6. Disconnect the crt anode plug from the jack located on the rear and left side of the crt shield. Ground this lead to the chassis to dissipate any stored charge.
- 7. Remove the four screws securing the crt bezel to the front panel. Remove the plastic faceplate protector, light filter, and the graticule light assembly.
- 8. Hold one hand on the crt faceplate and push forward on the crt base with the other. As the crt starts out of the shield, grasp it firmly. Guide the anode lead and the storage cable assembly through the cutout in the crt shield as the crt is removed.

B. REPLACEMENT.

- 1. Loosen clamp blocks located at each corner of crt shield. Insert the crt into the shield. Guide the anode lead through the hole in the crt shield.
- 2. Clean the crt faceplate, plastic faceplate protector, and the light filter with denatured alcohol.
- 3. Re-install the crt bezel, faceplate protector, and light filter. Firmly tighten the two screws.
- 4. Push forward on the crt base to be certain that the crt is as far forward as possible. Then tighten the two screws beside the crt base until the springs on the screws are fully compressed.
- Reposition and tighten down clamp blocks to hold the faceplate of the crt tightly against the implosion shield. The clamps are located at each corner of the crt shield.
 - 6. Replace the crt base socket.
 - 7. Reconnect the crt anode plug.
- Re-install the heat radiator/Low-Voltage Regulator circuit board assembly.
- 9. Carefully reconnect the deflection-plate connectors. After each connector is installed, lightly pull on its lead to be sure that it will remain in its socket.
- 10. Check the calibration of the complete instrument. Calibration procedure is given in Section 2.

SWITCH REPLACEMENT

The push button switches used in the 7633/R7633 are not repairable and should be replaced as a unit if defective.

REV. B, DEC. 1974 4-21

GRATICULE-BULB REPLACEMENT

To remove a graticule bulb, first remove the two screws (with tab), securing the crt bezel to the front panel. Pull the white tabs to remove the graticule light assembly. Slide the lamp retaining strip from the base of the bulb (turn to the side). Pull the bulb out of the assembly. Reverse the order of removal for replacement.

POWER TRANSFORMER REPLACEMENT

Replace the power transformer only with a direct replacement transformer. When removing the transformer, tag the leads with the corresponding terminal numbers to aid in connecting the new transformer. After the transformer has been replaced, check the performance of the complete instrument using the procedure given in the Calibration section.

HIGH-VOLTAGE COMPARTMENT

The components located in the high-voltage compartment can be reached for maintenance or replacement by using the following procedure. Diagram 7 shows the location of components in the high-voltage compartment and color-coding of the wires.

NOTE

All solder joints in the high-voltage compartment should have smooth surfaces. Any protrusions may cause high-voltage arcing at high altitudes.

- 1. Remove the heat radiator/Low-Voltage Regulator assembly as described previously.
- 2. Disconnect the crt base socket.
- 3. Disconnect the crt anode plug and discharge it to the chassis. Using an insulated probe or wire, discharge the jack portion of the crt anode connector to chassis ground.
 - 4. Disconnect the multi-pin connectors on the Z-Axis Amplifier board.
- 5. Remove the screw on the bottom of the high-voltage compartment and the two screws located at the top.
- 6. Guide the high-voltage compartment away from the instrument chassis. Be careful not to damage any of the components or the pin connectors on the High-Voltage or Z-Axis Amplifier circuit boards. Disconnect the multi-pin connectors on the High-Voltage board.
 - 7. Using an insulated shorting strap, discharge the exposed connections to chassis ground.
- 8. Disconnect plug P1196 and the four screws which secure the High-Voltage board to the high-voltage compartment. Now, all of the circuitry in the high-voltage box can be reached for maintenance.

4-22 REV. B, DEC. 1974

9. To replace the high-voltage compartment, reverse the above procedure. Be careful not to pinch any of the interconnecting wires when re-attaching the high-voltage compartment to the chassis.

FUSE REPLACEMENT

Table 4-2 gives the rating, location, and function of the fuses used in this instrument.

TABLE 4-2
Fuse Rating

Circuit Number	Rating	Location	Function
F1000	3.2 A Slow	Rear panel	110-volt line
F1000	1.6 A Slow	Rectifier board	220-volt line
F814	2 A Fast	Rectifier board	High voltage
F855	0.15 A Fast	Low-Voltage	+130 volts
		Regulator board	

RECALIBRATION AFTER REPAIR

After any electrical component has been replaced, the calibration of that particular circuit should be checked, as well as the calibration of other closely related circuits. Since the low-voltage supply affects all circuits, calibration of the entire instrument should be checked if work has been done in the low-voltage supply or if the power transformer has been replaced.

INSTRUMENT REPACKAGING

If the 7633/R7633 is to be shipped for long distances by commercial means of transportation, it is recommended that it be repackaged in the original manner for maximum protection. The original shipping carton can be saved and used for this purpose. The repackaging illustration in the Mechanical Parts list shows how to repackage the 7633/R7633 and gives the part number for the packaging components. New shipping cartons can be obtained from Tektronix, Inc. Contact your local Tektronix Field Office or representative.

PERFORMANCE CHECK/CALIBRATION

PRELIMINARY INFORMATION

Calibration Interval

To ensure instrument accuracy, check the calibration of the 7633 every 1000 hours of operation, or every six months if used infrequently. Before complete calibration, thoroughly clean and inspect this instrument as outlined in the Maintenance section.

Tektronix Field Service

Tektronix, Inc. provides complete instrument repair and recalibration at local Field Service Centers and the Factory Service Center. Contact your local Tektronix Field Office or representative for further information.

Using This Procedure

Index. To aid in locating a step in the Performance Check or Calibration procedures, an index is given preceding Part I—Performance Check and Part II—Calibration.

Performance Check. The performance of this instrument can be checked, without removing the covers or making internal adjustments, by performing only Part I—Performance Check. This procedure checks the instrument against the tolerances listed as a Performance Requirement in the Specification section.

Calibration Procedure. Completion of each step in Part II—Calibration ensures that this instrument is correctly adjusted and performing within all given tolerances. Where possible, instrument performance is checked before an adjustment is made. For best overall performance when performing a complete calibration, make each adjustment to the exact setting, even if the CHECK— is within tolerance.

Partial Procedures. A partial performance check or calibration is often desirable after replacing components, or to touch up the adjustment of a portion of the instrument between major recalibrations. To check or adjust only part of the instrument, start with the Equipment Required list preceding the desired portion of the procedure. To prevent unnecessary recalibration of other parts of the instrument, re-adjust only if the tolerance given in the CHECK— part of the step is not met. If re-adjustment is necessary, also check any steps listed in the INTERACTION— part of the step.

TEST EQUIPMENT REQUIRED

The test equipment listed in Table 5-1, or equivalent, is required for complete calibration of the 7633. Specifications given for the equipment are the minimum necessary for accurate calibration. Therefore, the equipment used must meet or exceed the listed specifications. Detailed operating instructions for the test equipment are not given in this procedure. Refer to the appropriate instruction manual if more information is needed.

If only a Performance Check is to be performed, not all of the listed test equipment is required. Items used only for calibration are indicated by footnote 1. The remaining pieces of equipment are common to both procedures.

(A)

Special Calibration Fixtures

Special calibration fixtures are used only where they facilitate instrument calibration. These fixtures are available from Tektronix, Inc. Order by part number through your local Tektronix Field Office or representative.

Calibration Equipment Alternatives

All of the listed test equipment is required to completely check and calibrate this instrument. However, complete checking or calibration may not always be necessary or desirable. The user may be satisfied with checking only selected characteristics, thereby reducing the amount of test equipment actually required.

The Performance Check and Calibration procedures are based on the first item of equipment given as an example. When other equipment is substituted, control settings or calibration setup might need to be altered. If the exact item of equipment given as an example in the Test Equipment list is not available, first check the specifications column carefully to see if any other equipment might suffice. Then check the Usage column to see what this item is used for. If used for a check or adjustment that is of little or no importance to your measurement requirements, the item and corresponding step(s) can be deleted.

The following procedures are written to completely check and adjust the 7633 to the Performance Requirements listed in the Specifications section and in the Operators manual, and to allow interchangeability of plug-in units between mainframes without the need to completely recalibrate the instruments each time. If the applications for which you will use the 7633 do not require the full available performance from the 7633 and plug-in combinations, the procedures and the required equipment list can be shortened accordingly. For example, the basic measurement capabilities of this instrument can be verified by just checking vertical deflection accuracy and basic horizontal timing with 7000-Series real-time plug-in units and the 7633 Calibrator signal. Also, if the 7633 and plug-in combination is to be used as a fixed system without the need to interchange the plug-in units, all tests can be made by substituting amplifier plug-in units and applicable test signals for the 067-0587-01 Signal Standardizer Calibration Fixture.

Signal Connections

Detailed signal-connection information is not given in this procedure except when critical for a particular test. In general, the rear-panel output connectors should be connected to other equipment with 50-ohm BNC cables. Use a BNC T connector to simultaneously connect a signal to two inputs. Signal-connection and termination information for the test equipment should be available in the associated instruction manual.

Warm-up and Temperature Requirements

Calibration of the 7633/R7633 should be performed after a 30-minute warm-up period in the BISTABLE Storage mode in an ambient temperature of $\pm 25^{\circ}$ C.

5-2

TABLE 5-1
Test Equipment

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment
1. Precision DC voltmeter	Range, zero to 150 volts; accuracy, within 0.1%.	Calibrator output accuracy check and adjustment.	a. Tektronix DM 501 Digital Multimeter. ²
			b. Fluke Model 825A Differential DC Voltmeter.
2. DC voltmeter (VOM) ¹	Range, zero to 4000 volts; accuracy, checked to within 1% at 1500 volts.	High-voltage power supply check. Z-Axis dc levels adjustment.	a. Triplett Model 630-NA. b. Simpson Model 262.
3. Time-Mark generator	Marker outputs, 10 nano- seconds to 0.1 second; marker accuracy, within 0.1%; trigger output, one millisecond.	Crt geometry check and adjustment. Horizontal timing check and adjustment.	a. Tektronix TG 501 Time- Mark Generator. ²
			b. Tektronix 2901 Time-Mark Generator.
4. Medium-frequency signal generator	Frequency range from 2.5 MHz to 100 MHz with 50-ohm output, output amplitude 1 V p-p, and accuracy within 2%.	Used throughout Performance Check and Calibration procedure.	a. Tektronix SG 503 Signal Generator. ² b. Tektronix Type 191 Con- stant Amplitude Signal Gen- erator.
5. Low-frequency signal generator	Frequency, variable from 1.5 kHz to 2 MHz; output amplitude, variable from 50 mV to 2 V p-p into 50 Ω .	X-Y phase shift check and storage writing rate checks and adjustments.	a. Tektronix FG 502 Function Generator. ² b. General Radio 1310-B Oscillator with a binding post to BNC adapter (274-QBJ General Radio).
6. Amplifier unit (two identical units required), and a dual display vertical unit	Tektronix 7A-series 65-megahertz bandwidth required for complete pro- cedure as written.	Used throughout procedure to provide vertical input to the instrument under calibration. Identical units required only for X-Y phase shift check.	a. Tektronix 7A15A and a 7A26 Amplifier (may be shared with a 7000-Series test oscilloscope). b. Any 7A-Series plug-in unit (tolerances in some steps may be limited if low-frequency units used).

¹Used for calibration only; NOT used for performance check.

² Requires TM 500-Series Power Module.

TABLE 5-1 (cont)

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment	
7. Time-base unit	Tektronix 7B-Series.	Used throughout procedure to provide sweep.	a. Tektronix 7B53A or 7B52 Time Base.	
			b. Any 7B-Series plug-in unit.	
8. Mainframe standardizer calibration fixure	Produces gain-check and pulse-response waveforms.	Used throughout procedure to standardize instrument so plug-in units can be interchanged without complete recalibration.	a. Tektronix Calibration Fixture 067-0587-01. b. Calibrated 7000-Series plug-in units with suitable signal sources may be substituted if lower performance is acceptable.	
9. 10X passive probe ¹	Compatible with 7B-Series external trigger input.	Used throughout storage calibration.	a. Tektronix P6053B or P6054A Probe (may be shared with test oscilloscope).	
10. 100X passive probe ¹	Compatible with test oscilloscope.	Used for storage calibration.	a. Tektronix P6009 Probe.	
11. Test oscilloscope	Bandwidth, dc to 100 MHz; minimum deflection factor 10 mV/div; accuracy within 3%.	Used for performance check and calibration.	a. Tektronix 7603 Oscilloscope System with 7A15A Amplifier, 7B53A Time Base, and P6053B Probe. b. Tektronix 465 Oscilloscope with P6065A Probe.	
12. T connector	Connectors, BNC.	External Z-axis operation check.	a. Tektronix Part Number 103-0030-00.	
13. Termination	Impedance, 50-ohms; accuracy, ±2%; connectors, BNC.	Calibrator output check.	a. Tektronix Part Number 011-0049-01.	
14. Cable (two required)	Impedance, 50 ohms; type, RG-58/U; length, 18 and 42 inches; connectors, BNC.	Used throughout procedure for signal interconnection.	a. Tektronix Part Number 012-0076-00 (18-inches). Tektronix Part Number 012-0057-01 (42-inches).	
15. BNC to pin-jack cable	Adapts pin-jacks to BNC male connector.	Used for calibrator signal connections.	a. Tektronix Part Number 175-1178-00 (one supplied as standard accessory).	

 $^{^{\}mathrm{I}}$ Used for calibration only; NOT used for performance check.

Performance Check/Calibration-7633/R7633 Service

TABLE 5-1 (cont)

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment
16. Screwdriver	Three-inch shaft, 3/32-inch bit.	Used throughout adjustment procedure to adjust variable resistors.	a. Xcelite R-3323.
17. Low-capacitance screwdriver ¹	1.5-inch shaft.	Used throughout adjustment procedure to adjust variable capacitors.	a. Tektronix Part Number 003-0000-00.

 $^{^{\}rm 1}\,\rm Used$ for calibration only; NOT used for performance check.

PART I—PERFORMANCE CHECK

Introduction

The following procedure is intended to be used for incoming inspection to determine the acceptability of newly purchased or recently recalibrated instruments. This procedure does not check every facet of the instrument's calibration; rather, it is concerned primarily with those portions of the instrument essential to measurement accuracy and correct operation.

Outline for Part I—Performance Check

Α.	CRT	and Z-Axis Check	Page 5-8
	1.	Check Focus	Page 5-8
	2.	Check TRACE ROTATION	Page 5-8
	3.	Check External Z Axis	Page 5-9
В.	Verti	cal Deflection System Check	Page 5-10
	1.	Check Vertical Gain	Page 5-10
	2.	Check Vertical Linearity	Page 5-11
	3.	Check Bandwidth	Page 5-11
	4.	Check Channel Isolation	Page 5-12
	5.	Check BEAMFINDER Operation	Page 5-12
	6.	Check Vertical Modes	Page 5-12
C.	Horiz	rontal Deflection System Check	Page 5-14
	1.	Check Horizontal Linearity	Page 5-14
	2.	Check High-Frequency Timing	Page 5-14
	3.	Check X-Y Phase Shift	Page 5-15
	4.	Check Horizontal Bandwidth	Page 5-16
D.	Calib	rator Check	Page 5-17
	1.	Check Calibrator Output Voltage	Page 5-17
	2.	Check Calibrator Repetition Rate	Page 5-18

Performance Check - 7633/R7633 Service

E.	Signa	Is In/Out Check	Page 5-19
	1.	Check SS READY OUT-REMOTE ERASE	Page 5-19
	2.	Check EXT SS RESET IN	Page 5-19
	3.	Check VERT SIG OUT	Page 5-19
	4.	Check + SAWTOOTH OUT	Page 5-20
	5.	Check + GATE OUT	Page 5-20
F.	Read	out System Check	Page 5-21
	1.	Check READOUT Operation	Page 5-21
	2.	Check Readout Gate Trig'd Operation	Page 5-22
G.	Stora	age System Check	Page 5-23
	1.	Check BISTABLE Writing Speed	Page 5-23
	2.	Check Periodic Erase	Page 5-24
	3.	Check SAVE and SAVE INTEN	Page 5-24
	4.	Check VAR PERSIST Writing Speed	Page 5-25
	5.	Check BISTABLE FAST Writing Speed	Page 5-25
	6.	Check VAR PERSIST FAST Writing Speed	Page 5-26

③ 5-7

A. CRT AND Z AXIS

Equipment Required:

- 1. Signal Standardizer
- 2. Time-base unit
- 3. Amplifier unit
- 4. Low-frequency signal generator
- 5. 50-ohm BNC cables (2)
- 6. BNC T connector
- 7. Three-inch screwdriver

Control Settings

Preset the 7633 controls as follows:

INTENSITY

Midrange

VERT MODE

LEFT

TRIG SOURCE

VERT MODE

Display Selection

NON STORE

1. Check Focus

- a. Install the signal standardizer in the left vertical compartment. Set the Test switch for Vert or Horiz Gain and the Rep Rate for one megahertz.
- b. Install the time-base unit in the horizontal compartment. Set the sweep rate for 0.5 milliseconds/division with auto, ac-coupled, internal triggering.
 - c. CHECK-That the focus can be varied by turning the FOCUS control.

2. Check TRACE ROTATION

- a. Set the signal standardizer Test switch to Aux In and adjust the Position control to center the trace over the center graticule line.
- b. CHECK—That the trace can be made parallel with the center graticule line with the TRACE ROTATION adjustment.
 - c. Remove the signal standardizer from the left vertical compartment.

3. Check External Z-Axis

- a. Install an amplifier unit in the left vertical compartment and set the deflection factor to one volt/division.
- b. Connect the low-frequency signal generator to the input connector of the amplifier unit using the BNC T connector. Set the output frequency for one megahertz with an amplitude of two volts.
- c. Connect a BNC cable to the EXT Z AXIS connector on the rear panel. Connect the other end of the cable to the BNC T connector on the input of the amplifier unit.
 - d. CHECK-That the positive slope of the sine wave is being blanked.
 - e. Disconnect the test equipment and remove the amplifier unit from the 7633.

⊗ 5-9

B. VERTICAL DEFLECTION SYSTEM

Equipment Required:

- 1. Signal Standardizer
- 2. Time-base unit
- 3. Amplifier unit
- 4. Medium-frequency signal generator
- 5. 50-ohm BNC cables (2)
- 6. BNC to calibrator pin cable
- 7. BNC T connector

Control Settings

Preset the 7633 controls as follows:

INTENSITY Midrange
VERT MODE LEFT

TRIG SOURCE VERT MODE

Display Selection

NON STORE

1. Check Vertical Gain

- a. Install a time-base unit in the horizontal compartment and set it for auto, internal, + slope triggering at a sweep rate of 50 microseconds/division.
- b. Install the signal standardizer in the left vertical compartment and set the Test switch to Vert or Horiz Gain.
 - c. Position the bright center line of the display to the center horizontal graticule line.
 - d. CHECK—That the deflection of the seven center traces is six divisions ±0.06 division.
 - e. Pull the REDUCED SCAN switch on.
- f. CHECK—That the deflection of the center seven traces is six Reduced Scan divisions ±0.06 division.
 - g. Push the REDUCED SCAN switch off.
- h. Remove the signal standardizer from the left vertical compartment and insert it into the right vertical compartment.
 - i. Set the VERT MODE to RIGHT.

- i. Repeat steps c through q.
- k. Return the signal standardizer to the left vertical compartment and set the VERT MODE to LEFT.

2. Check Vertical Linearity

- a. Set the signal standardizer Test switch to Vert or Horiz + Step Resp and the Rep Rate to 100 kilohertz.
 - b. Set the time-base unit for a triggered display at a sweep rate of one millisecond/division.
- c. Set the signal standardizer Position control to center the trace while adjusting the Amplitude control for a two-division display.
- d. CHECK—Position the two-division display vertically and check for not more than 0.1 division of compression or expansion anywhere within the graticule area.

3. Check Bandwidth

- a. Set the signal standardizer Test switch for Vert or Horiz Freq Resp and turn the Amplitude control fully clockwise.
 - b. Connect the medium-frequency signal generator to the CW In connector of the signal standardizer.
 - c. Set the time-base unit for auto triggering at a sweep rate of five microseconds/division.
- d. Set the signal generator to a reference frequency of three megahertz and adjust the output amplitude for an eight-division display.
- e. Adjust the signal standardizer Position control to bring the top of the waveform down one division.
- f. Adjust the amplitude of the signal generator to bring the top of the waveform back up to the top graticule line.
- g. Adjust the signal standardizer Position and Amplitude controls to obtain a centered, six-division display. THE CW LEVELED LIGHT MUST STAY ON FOR THIS CHECK.
 - h. Set the signal generator to cover a range to 100 megahertz.
- i. CHECK—That the 7633 display amplitude does not drop below 4.4 divisions as the signal generator frequency is adjusted upward to exactly 100 megahertz. (The signal standardizer CW LEVELED light must be on.)
 - j. Set the VERT MODE to RIGHT.
- k. Remove the signal standardizer from the left vertical compartment and install it in the right vertical compartment.
 - I. Repeat steps g through i for the right vertical compartment.
- m. Disconnect the signal generator and return the signal standardizer to the left vertical compartment.

A 5-11

4. Check Channel Isolation

- a. Install an amplifier unit in the right vertical compartment.
- b. Set the VERT MODE and TRIG SOURCE for RIGHT.
- c. Connect the medium-frequency signal generator to the input of the amplifier unit. Set the signal generator for 100-megahertz output and adjust the amplitude for an eight-division display.
 - d. Set the time-base unit for a triggered display at a sweep rate of 0.5 microsecond/division.
 - e. Set the VERT MODE to LEFT.
- f. CHECK—For a display of 0.1 division or less while adjusting the signal generator frequency dial from 100 megahertz to 50 megahertz. Do not include the trace width (line thickness) in this measurement.
- g. Interchange the amplifier unit and the signal standardizer. Leave the signal generator connected to the amplifier unit.
- h. Set the TRIG SOURCE for LEFT and adjust the amplitude for an eight-division display of the 100 megahertz input signal.
 - i. Set the VERT MODE to RIGHT.
 - j. Repeat step e.
 - k. Set the VERT MODE to LEFT and disconnect the signal generator.

5. Check BEAMFINDER Operation

- a. Set the position controls on the amplifier unit and the time-base unit clockwise.
- b. Press the BEAMFINDER pushbutton.
- c. CHECK-That the trace is within the graticule area.
- d. Set the position control on the amplifier unit and the time-base unit counterclockwise and repeat steps b and c.

6. Check Vertical Modes

- a. Connect the calibrator 4 V output to the inputs of both the amplifier unit and the signal standardizer (Aux In). Set the signal standardizer Test switch for Aux In.
- b. Set the time-base unit for auto, internal triggering, at a sweep rate of 0.5 millisecond/division.
- c. Adjust the amplitude of the signal standardizer for two divisions of display and position the trace on the second and forth graticule lines.
 - d. Set the VERT MODE and TRIG SOURCE to RIGHT.

- e. Set the amplifier unit for about two divisions vertical deflection and position the trace on the sixth and eighth graticule lines.
 - f. Set the TRIG SOURCE to VERT MODE and the VERT MODE to ALT.
 - g. CHECK-That traces from both vertical compartments appear on the crt.
 - h. Set the VERT MODE to ADD.
- i. CHECK—That the resultant trace is the algebraic sum of the two vertical signals. For example, if the traces in steps c and e were exactly two divisions each, the resultant trace will be exactly four divisions.
 - j. Set the VERT MODE to ALT and disconnect calibrator cables.
 - k. Position the two traces about two divisions apart.
 - 1. Set the sweep rate to 50 milliseconds/division.
 - m. CHECK-That the two vertical traces are alternately displayed with sweeps.
 - n. Set VERT MODE to CHOP.
 - o. CHECK-That two separate traces appear simultaneously on the crt.
 - p. Disconnect all test equipment and remove the plug-in units.

⊗ 5-13

C. HORIZONTAL DEFLECTION SYSTEM

Equipment Required:

- 1. Signal Standardizer
- 2. Time-base unit
- 3. Amplifier unit (2 identical)
- 4. Time-mark generator
- 5. Low-frequency signal generator
- 6. 50-ohm BNC cables (2)

Control Settings

Preset the 7633 controls as follows:

INTENSITY

Midrange

VERT MODE

LEFT

TRIG SOURCE

VERT MODE

Display Selection

NON STORE

1. Check Horizontal Linearity

- a. Install the signal standardizer in the horizontal compartment and a time-base unit in the left vertical compartment.
- b. Set the signal standardizer Test switch to Vert or Horiz + Step Resp and adjust the Amplitude and Position controls for a centered, two-division display.
- c. CHECK—That there is 0.1 division, or less, compression or expansion when the trace is positioned anywhere within the graticule area.
 - d. Remove the plug-in units.

2. Check High-Frequency Timing

- a. Install an amplifier unit in the left vertical compartment and a time-base unit in the horizontal compartment.
 - b. Connect the time-mark generator to the input connector of the amplifier unit.
- c. Set the time-mark generator for one-millisecond markers and set the deflection factor of the amplifier unit so the markers are at least two division in amplitude.
 - d. Set the time-base unit for auto, internal triggering at a sweep rate of one millisecond/division.
 - e. Position the first marker to the left vertical line of the graticule.

- f. Set the time-base unit swp cal adjustment for one marker each major graticule division between the first and ninth lines.
 - g. Set the time-mark generator for 10-nanosecond markers.
- h. Set the time-base unit for a sweep rate of 0.05 microsecond/division with the X10 magnifier on. Set the deflection factor of the amplifier unit so the markers are about two divisions in amplitude.
- i. CHECK—Refer to the time-base unit instruction manual for performance check or calibration procedures for checking high-frequency timing and linearity. Use the procedures and limits given for the three fastest sweep rates that do not exceed five nanoseconds/division.
 - j. Pull the REDUCED SCAN switch on.
 - k. CHECK-That the deflection does not limit on screen.
 - I. Push the REDUCED SCAN switch off.
 - m. Disconnect the test equipment and remove the plug-in units from the 7633.

3. Check X-Y Phase Shift

- a. Install identical amplifier units in the left vertical and horizontal compartments.
- b. Set both amplifier units for 10 millivolts/division deflection factor with dc coupling.
- c. Connect the low-frequency signal generator to the inputs of both amplifier units.
- d. Set the low-frequency generator for an output of 35 kilohertz and adjust the amplitude for a horizontal and vertical deflection of eight divisions.
- e. CHECK—The lissajous display for an opening at the center vertical line of 0.28 division or less (indicates two degrees or less of phase shift; see Figure 5-1).
- f. Disconnect the low-frequency signal generator and remove the amplifier unit from the left vertical compartment.

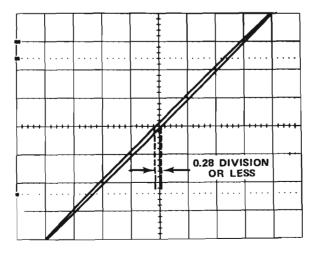


Figure 5-1. Typical crt display when checking X-Y phase shift.

(A) 5-15

4. Check Horizontal Bandwidth

- a. Install a time-base unit in the left vertical compartment.
- b. Set the time-base unit for auto triggering at a sweep rate of one millisecond/division (display will free-run).
- c. Connect the low-frequency generator to the input of the amplifier unit in the horizontal compartment and adjust the amplitude and deflection factor for eight divisions of horizontal display of a 50-kilohertz reference frequency.
- d. Without changing the output amplitude, increase the output frequency of the generator until the frequency is two megahertz.
- e. CHECK—That the output horizontal amplitude is at least 5.6 divisions (amplitude is typically greater than seven divisions at two megahertz).
 - f. Disconnect all test equipment and remove the plug-in units from the 7633.

(A)

D. CALIBRATOR

Equipment Required:

- 1. Precision dc voltmeter
- 2. Amplifier unit
- 3. Time-base unit
- 4. BNC to pin-jack cable
- 5. Three-inch screwdriver

Control Settings

Preset the 7633 controls as follows:

INTENSITY


VERT MODE LEFT

TRIG SOURCE VERT MODE

Display Selection NON STORE

1. Check Calibrator Output Voltage

a. Change jumper P1440 to the DC position (see Figure 5-2).

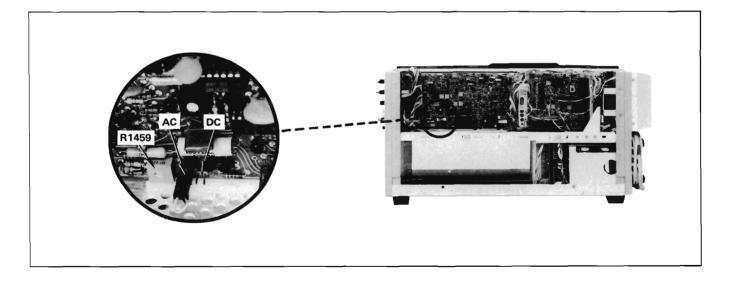

Midrange

Figure 5-2. Location of Calibrator AC/DC jumper.

Performance Check-7633/R7633 Service

- b. Connect the precision dc voltmeter between the 4 V and GND pin jacks.
- c. CHECK—Meter reading; four volts ± 0.04 volt (within ± 0.08 volt if this measurement is made outside the $\pm 15^{\circ}$ C to $\pm 35^{\circ}$ C range).
 - d. Connect the precision do voltmeter between the 0.4 Volt Calibrator pin-jack and pin ground.
- e. CHECK—Meter reading; 0.4 volt ± 0.004 volt (within 0.008 volt if this measurement is made outside the $\pm 15^{\circ}$ C to $\pm 35^{\circ}$ C range).
 - f. Connect the precision dc voltmeter between the 40 millivolt Calibrator pin-jack and pin ground.
- g. CHECK—Meter reading; 40 millivolts ± 0.4 millivolt (within 0.8 millivolt if this measurement is made outside the $\pm 15^{\circ}$ C to $\pm 35^{\circ}$ C range).
 - h. Disconnect the precision dc voltmeter.

2. Check Calibrator Repetition Rate

- a. Change jumper P1440 to the AC position (see Figure 5-2).
- b. Install the amplifier unit in the left vertical compartment and the time-base unit in the horizontal compartment.
 - c. Set the amplifier unit for a deflection factor of one volt/division.
 - d. Set the time-base unit for auto, internal triggering at a sweep rate of 0.2 millisecond/division.
- e. Connect the four-volt calibrator pin-jack to the input of the amplifier unit with the BNC to pin-jack cable.
 - f. Position the start of the square wave to the left line of the graticule.
- g. CHECK—Crt display for length of one complete cycle between 4.2 and 6.3 divisions (one kilohertz $\pm 20\%$).

E. SIGNALS IN/OUT

(Option 7 deletes this procedure)

Equipment Required:

- 1. Amplifier units (two)
- 2. Time-base unit
- 3. 50-ohm BNC termination
- 4. BNC to pin-jack cable
- 5. Test oscilloscope
- 6. 50-ohm BNC cable

Control Settings

Preset the 7633 controls as follows:

INTENSITY	Midrange

VERT MODE LEFT

TRIG SOURCE VERT MODE

Display Selection NON STORE

1. Check SS READY OUT-REMOTE ERASE

- a. Connect the calibrator signal to the input of the amplifier unit. Obtain a triggered display of two or more divisions.
 - b. Press the STORE and VAR PERSIST pushbuttons.
 - c. CHECK-That when the REMOTE ERASE input connector is grounded that an erase cycle is generated.
 - d. Press the NON STORE pushbutton.

2. Check EXT SS RESET IN

- a. Set the time-base unit to Single Sweep at a sweep rate of 0.5 second/division.
- b. CHECK—That when the EXT SS RESET IN input is grounded that the time-base single sweep function is reset.

3. Check VERT SIG OUT

- a. Set the time-base unit for auto triggering and adjust the trigger level for a stable display at a sweep rate of one microsecond/division.
- b. Connect a BNC cable to the VERT SIG OUT connector and to the amplifier unit in the right vertical compartment. Set the TRIG SOURCE to LEFT.

(A) 5-19

- c. Connect the 0.4 volt CALIBRATOR signal to the input of the amplifier unit in the left vertical compartment. Set both vertical amplifiers for a deflection factor of 0.2 volt/division.
 - d. CHECK-That a two-division signal is displayed by the left vertical amplifier.
- e. Set VERT MODE to RIGHT and check that a signal of about five divisions is displayed by the right vertical amplifier.
- f. Interchange the connections to the vertical amplifiers (VERT SIG OUT to the left amplifier and the calibrator to the right amplifier unit). Set the TRIG SOURCE to RIGHT.
 - g. CHECK-That a two-division signal is displayed by the right vertical amplifier.
 - h. Set the VERT MODE to LEFT and check that a signal of about five divisions is displayed.
- Install a 50-ohm termination between the VERT SIG OUT cable and the input of the left vertical amplifier.
- j. Set the deflection factor of the left vertical to 10 millivolts/division. Check for a display of about five divisions.
 - k. Disconnect all cables.

4. Check + SAWTOOTH OUT

- a. Connect the + SAWTOOTH OUT to the input of the left vertical amplifier. Set the deflection factor of the left vertical amplifier for two volts/division.
- b. CHECK—For a sawtooth display of about five divisions in amplitude and greater than 10 divisions in length.

5. Check + GATE OUT

- a. Connect the + GATE OUT to the vertical input of the test oscilloscope and set the deflection factor for two volts/division. Set the time/division switch to 1 millisecond/division. Place the GATE selector switch in the MAIN GATE position.
 - b. CHECK-That the displayed signal is about five divisions in amplitude.

F. READOUT SYSTEM

(Option 1 deletes this procedure)

Equipment Required:

- 1. Dual trace vertical amplifier unit
- 2. Time-base unit

Control Settings

Preset the 7633 controls as follows:

INTENSITY

Midrange

READOUT

Midrange

VERT MODE

CHOP

TRIG SOURCE

VERT MODE

Display Selection

NON STORE

1. Check READOUT Operation

- a. Install the amplifier unit, set for dual trace mode, in the left vertical compartment.
- b. Push and hold the identify buttons on the amplifier unit. Switch S2110, located on the Readout circuit board, should be in the free-run position (see Figure 8-21).
- c. CHECK—That the word IDENTIFY is within the top division and the bottom division of the graticule.
- d. CHECK—For completeness of characters without over-scanning (over-scanning causes a bright dot where the traces overlap) and check for correctness.
 - e. CHECK—That the words IDENTIFY are positioned within the left third of the graticule area.
- f. Remove the amplifier unit from the left vertical compartment and install it in the right vertical compartment.
 - g. Repeat steps b, c, and d.
 - h. CHECK-That the words IDENTIFY are positioned within the center third of the graticule area.
- i. Remove the amplifier unit from the right vertical compartment and install it in the horizontal compartment.
 - j. Repeat steps b, c, and d.
 - k. CHECK-That the words IDENTIFY are positioned within the right third of the graticule area.
- I. Remove the amplifier unit from the horizontal compartment and install it in the left vertical compartment.

2. Check Readout Gate Trig'd Operation

- a. Set switch S2110 to Gate Trig'd position (see Figure 8-21).
- b. Install the time-base unit in the horizontal plug-in compartment and set the sweep rate to 0.1 second/division.
- c. CHECK—That no readout information is displayed till after the sweep. At fast sweep rates, this is not noticeable.
 - d. Remove the plug-in units from the 7633.

G. STORAGE SYSTEM

Equipment Required:

- 1. Time-base unit
- 2. Amplifier unit
- 3. Low-frequency sine-wave generator
- 4. Medium-frequency sine-wave generator
- 5. 50-ohm BNC cable

Control Settings

Preset the 7633 controls as follows:

INTENSITY

Midrange

VERT MODE

LEFT

TRIG SOURCE

VERT MODE

READOUT INTENSITY

CCW (off)

Display Selection

NON STORE

ERASE/PERIODIC

CCW (in detent, off)

PERSISTENCE

CCW (maximum)

Storage Selection

BI STABLE

SAVE INTEN

Clockwise

STORAGE LEVEL

Two o'clock position

1. Check BISTABLE Writing Speed

- a. Install a time-base unit in the horizontal compartment and an amplifier unit in the left vertical compartment.
- b. Connect the low-frequency sine-wave generator to the amplifier unit and adjust for a 6.4-division display of a 1.5-kilohertz signal.
- c. Set the time-base unit for a sweep rate of 0.5 millisecond/division, with auto, ac-coupled, internal triggering.
 - d. Adjust the INTENSITY to maximum without blooming trace.
 - e. Press the STORE pushbutton.
 - f. Set the time-base unit for single sweep.
 - g. Press the ERASE pushbutton.

Performance Check-7633/R7633 Service

- h. CHECK—That the single-shot sine wave stores and does not fade up or down in one minute. This checks the Bistable writing speed at .03 division/microsecond.
 - i. Press the NON STORE pushbutton.
 - j. Pull the REDUCED SCAN switch on.
 - k. Set the time-base unit for X10 magnification and auto triggering.
- I. Adjust the low-frequency sine-wave generator for 6.4 small divisions of a 10-kilohertz signal (writing speed 0.2 division/microsecond).
 - m. Set the time-base unit for single sweep.
 - n. Press the STORE pushbutton.
 - o. Press the ERASE pushbutton.
- p. CHECK—That the 10-kilohertz signal will store in the Reduced Scan graticule area without fading up or down in one minute.
 - q. Press the REDUCED SCAN switch off.

2. Check Periodic Erase

- a. Set the time-base unit for single sweep.
- b. Turn the PERIODIC ERASE knob fully clockwise (minimum time).
- c. CHECK-That erase period is less than or equal to two seconds.
- d. Turn the PERIODIC ERASE knob fully counterclockwise but not into the detent position (maximum time).
 - e. CHECK-That the erase period is 10 seconds or greater.
 - f. Turn the PERIODIC ERASE knob into the detent position.
 - g. CHECK-That the display no longer erases automatically.

3. Check SAVE and SAVE INTEN

- a. Turn the SAVE INTEN knob fully clockwise and set the READOUT INTENSITY for a viewable display.
- b. Press the ERASE pushbutton.
- c. Press the SAVE pushbutton.
- d. Press the ERASE pushbutton.
- e. CHECK-That the display will not erase.

5-24 REV. B, DEC. 1974

- f. CHECK-That the screen goes dark as the SAVE INTEN control is turned counterclockwise.
- g. With the SAVE INTEN control fully counterclockwise, press the STORE pushbutton.
- h. Press the SAVE pushbutton.
- i. CHECK-That the Readout is visible during STORE but goes dark in SAVE.
- j. Press the NON STORE pushbutton and turn the READOUT INTENSITY off.

4. Check VAR PERSIST Writing Speed

- a. Set the time-base unit in the 7633 for a sweep rate of 20 microseconds/division with auto, ac-coupled, internal triggering and set the amplifier unit for dc input.
- b. Set the low-frequency sine-wave generator for a 6.4 divisions display of a 25-kilohertz signal (writing speed of 0.5 division/microsecond).
 - c. Set the INTENSITY to maximum without blooming trace.
 - d. Set the time-base unit to single sweep.
 - e. Press the STORE and VAR PERSIST pushbuttons.
- f. CHECK—That the signal will store for 30 seconds in the center 6 x 8 divisions of the graticule area (the PERSISTENCE control is in the counterclockwise position and the STORAGE LEVEL is in the two o'clock position). Increasing STORAGE LEVEL will increase writing speed while decreasing view time and vice versa.
 - g. Press NON STORE.
- h. Set the time-base unit for a sweep rate of 50 microseconds/division with auto triggering and X10 magnification.
 - i. Pull the REDUCED SCAN switch on.
- j. Adjust the low-frequency sine-wave generator for 6.4 REDUCED SCAN divisions display of a 150-kilohertz signal (writing speed of three divisions/microsecond).
 - k. Set the time-base unit for single sweep.
 - I. Press the STORE pushbutton.
- m. CHECK—That the signal will store for 30 seconds in the center 8×10 divisions of the Reduced Scan graticule area.
 - n. Push the REDUCED SCAN switch off.

5. BISTABLE FAST Writing Speed

- a. Press the NON STORE, FAST, and BISTABLE pushbuttons.
- b. Set the time-base unit for auto triggering and a sweep rate of two microseconds/division.

REV. B, DEC. 1974 5-25

Performance Check-7633/R7633 Service

- c. Connect the medium-frequency signal generator to the amplifier unit input and adjust the amplitude for a 6.4-division display of a 2.5-megahertz signal (writing speed is 50 divisions/microsecond).
 - d. Turn INTENSITY to maximum without blooming trace.
 - e. Set the time-base unit for single sweep.
 - f. Turn STORAGE LEVEL to the two o'clock position.
 - g. Press the STORE pushbutton.
 - h. Press the ERASE pushbutton.
 - i. CHECK-That the trace stores.
 - j. Press the NON STORE pushbutton.
 - k. Pull the REDUCED SCAN switch on and reduce the INTENSITY.
 - I. Set the time-base unit for a sweep rate of 0.2 microsecond/division and auto triggering.
- m. Set the medium-frequency signal generator for 20 megahertz and adjust the amplitude for 6.4 REDUCED SCAN divisions of display (writing speed 400 divisions/microsecond).
 - n. Set the time-base unit for single sweep.
 - o. Press the STORE pushbutton.
- p. CHECK—That the signal can be stored in the center 8×10 divisions of the Reduced Scan graticule area.
 - q. Press REDUCED SCAN off.

6. Check VAR PERSIST FAST Writing Speed

- a. Press NON STORE and set the time-base unit for auto triggering at a sweep rate of 0.1 microsecond/division.
- b. Adjust the medium-frequency signal generator to display 6.4 divisions of a 7.5-megahertz signal (writing speed of 150 divisions/microsecond).
 - c. Turn the INTENSITY to maximum without blooming the trace.
 - d. Set the time-base unit for single sweep (triggered).
 - e. Press the VAR PERSIST and STORE pushbuttons.
 - f. Set the STORAGE LEVEL control to the two o'clock position.
 - g. CHECK-That the signal will store after an erase cycle.

- h. Push the NON STORE pushbutton and pull the REDUCED SCAN switch on.
- i. Set the time-base unit for 0.1 microsecond/division sweep rate, auto triggering, and X10 magnification.
- j. Adjust the medium-frequency signal generator to display 7.1 Reduced Scan divisions of a 100-megahertz signal (writing speed of 2220 divisions/microsecond).
 - k. Set the time-base unit for single sweep.
 - I. Press the STORE pushbutton.
- m. CHECK—That the waveform will store within the center 8 x 10 divisions of the Reduced Scan graticule area for 30 seconds.
 - n. Press the NON STORE pushbutton and the REDUCED SCAN switch.
 - o. Disconnect all test equipment. This completes the Performance Check procedure.

PART II—CALIBRATION

Introduction

The following procedure returns the 7633 to correct calibration. All limits and tolerances given in this procedure are calibration guides and should not be interpreted as instrument specifications except as specified in the Specifications section of this manual.

Outline for Part II-Calibration

A.	Low Voltage Power Supply	Page 5-31
	1. Adjust -50 Volt Power Supply	Page 5-31
	2. Check Remaining Power Supply Voltages	Page 5-31
	3. Check High-Voltage Power Supply	Page 5-32
В.	CRT and Z Axis	Page 5-33
	1. Adjust Z-Axis DC Levels	Page 5-33
	2. Adjust Z-Axis Compensation and Check Drive	Page 5-34
	3. Adjust Focus and Astigmatism	Page 5-35
	4. Adjust Trace Rotation	Page 5-35
	5. Adjust Y-Axis Alignment	Page 5-35
	6. Adjust Geometry	Page 5-35
	7. Adjust Horizontal Gain	Page 5-35
	8. Adjust Reduced Scan Focus and Astigmatism	Page 5-36
	9. Adjust Reduced Scan Horizontal Gain	Page 5-36
	10. Adjust Vertical Gain	Page 5-36
	11. Adjust Auto Focus Compensation	Page 5-36
	12. Adjust Auto Focus Bias and Gain	Page 5-37
	13. Check External Z-Axis	Page 5-37
C.	. Vertical Deflection System	Page 5-38
	1. Adjust Vertical Centering	Page 5-38
	2. Adjust Vertical Gain	Page 5-38

Calibration-7633/R7633 Service

	3. Adjust Thermal Balance	Page 5-39
	4. Check Vertical Linearity	Page 5-39
	5. Adjust Vertical High-Frequency Compensation	Page 5-40
	6. Check Bandwidth	Page 5-41
	7. Check Channel Isolation	Page 5-42
	8. Check BEAMFINDER Operation	Page 5-43
	9. Check Vertical Modes	Page 5-43
D.	Horizontal Deflection System	Page 5-44
	1. Adjust Limit Center	Page 5-44
	2. Adjust Horizontal Gain	Page 5-45
	3. Adjust DC Balance	Page 5-45
	4. Check Horizontal Linearity	Page 5-45
	5. Transient Response	Page 5-45
	6. Adjust High-Frequency Timing	Page 5-46
	7. Check X-Y Phase Shift	Page 5-47
	8. Check Horizontal Bandwidth	Page 5-47
Ε,	Calibrator	Page 5-49
	1. Adjust Calibrator Output Voltage	Page 5-49
	2. Check Calibrator Repetition Rate	Page 5-50
F.	Signals In/Out	Page 5-51
	1. Check SS READY OUT (REMOTE ERASE)	Page 5-51
	2. Check EXT SS RESET IN	Page 5-51
	3. Check VERT SIG OUT	Page 5-52
	4. Check + SAWTOOTH OUT	Page 5-52
	5. Check + GATE OUT	Page 5-52

Calibration-7633/R7633 Service

G.	Readout Operation	Page 5-53
	1. Check READOUT Operation	Page 5-53
	2. Check Readout Gate Trig'd Operation	Page 5-54
Н.	Storage System	Page 5-55
	1. Check NON STORE Voltage Levels	Page 5-55
	2. Check BISTABLE Voltage Levels	Page 5-56
	3. Check BISTABLE ERASE Waveforms	Page 5-56
	4. Adjust BISTABLE Op Level and Check BISTABLE Writing Speed	Page 5-58
	5. Check PERIODIC ERASE	Page 5-59
	6. Check SAVE Mode and SAVE INTEN	Page 5-60
	7. Check VAR PERSIST Voltage Levels	Page 5-60
	8. Adjust VAR PERSIST Op Level and Prep Level	Page 5-61
	9. Check Persistence Pulses	Page 5-62
	10. Check VAR PERSIST Writing Speed	Page 5-63
	11. Adjust VAR PERSIST FAST Front Mesh Stability	Page 5-64
	12. Adjust BISTABLE FAST	Page 5-65
	13. Adjust BISTABLE FAST Stability and Writing Speed	Page 5-66
	14. Check REDUCED SCAN BISTABLE FAST Writing Speed	Page 5-67
	15. Adjust VAR PERSIST FAST	Page 5-67
	16. Adjust VAR PERSIST FAST Stability and Writing Speed	Page 5-68

A. LOW VOLTAGE POWER SUPPLY

Equipment Required:

- 1. Dc voltmeter (VOM) precision
- 2. Three-inch screwdriver

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY

Counterclockwise (off)

VERT MODE

LEFT

TRIG SOURCE

LEFT

Display Selection

NON STORE

REDUCED SCAN

Off

1. Adjust -50 Volt Power Supply

- a. Connect the voltmeter between -50 volts (see Figure 8-23) and chassis ground.
- b. CHECK—Meter reading; -50 volts ±0.1 volt.
- c. ADJUST -50 volts adjustment R881 (see Figure 8-23) for a meter reading of exactly -50 volts.
- d. INTERACTION—Any change in the setting of R881 can affect the operation of all other circuits in the 7633.

2. Check Remaining Power-Supply Voltages

a. CHECK—Each supply with the voltmeter to ensure that all output voltages are within the tolerances given in Table 5-2. Power supply test points are shown in Figure 8-17.

NOTE

Ripple and regulation of the individual power supplies can be checked using the procedure given under Troubleshooting Techniques in Section 4.

TABLE 5-2
Power Supply Tolerances

Power Supply	Test Point	Output Voltage Tolerance
-50 Volt	Pin 8 of P1171	±0.1 Volt
-15 Volt	Pin 1 of P1171	±0.1 Volt
+5 Volt	Pin 2 of P1171	±0.1 Volt
+15 Volt	Pin 3 of P1171	±0.1 Volt
+50 Volt	Pin 4 of P1171	±0.3 Volt
+130 Volt	Pin 6 of P1171	±5.0 Volts

3. Check High-Voltage Power Supply

- a. Press the POWER switch to turn off the instrument.
- b. Set the voltmeter to measure at least -1525 volts and connect it between the high-voltage test point (see Figure 5-3) and chassis ground.
 - c. Press the POWER switch to turn the instrument on.
 - d. CHECK-That the high-voltage test point measures -1475 volts ±45 volts.
 - e. Press the POWER switch to turn OFF the instrument before disconnecting the voltmeter.
 - f. Disconnect the voltmeter and press the POWER switch to turn the power back on.

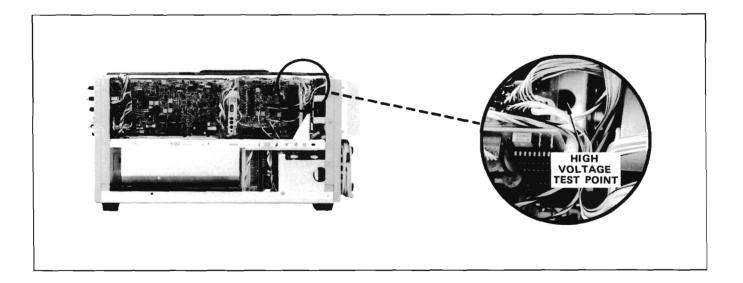


Figure 5-3. Location of High-Voltage Test Point.

B. CRT AND Z-AXIS

Equipment Required:

- 1. Signal standardizer
- 2. Time-base unit
- 3. Low-frequency signal generator
- 4. 10X probe
- 5. Time-mark generator
- 6. 50-ohm BNC cable
- 7. Low-capacitance screwdriver
- 8. Test oscilloscope

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY Counterclockwise (off)

VERT MODE LEFT

TRIG SOURCE LEFT

Display Selection NON STORE

Storage Selection VAR PERSIST

REDUCED SCAN Off (pushed in)

READOUT INTENSITY Off (in detent)

1. Adjust Z-Axis DC Levels

- a. Install the signal standardizer set for Aux In, in the left vertical compartment and a timebase unit in the horizontal compartment.
 - b. Set the time-base unit for a sweep rate of 1.0 millisecond/division and auto triggering.
- c. Set the test oscilloscope for a vertical deflection factor of 10 volts/division at probe tip with dc input at a sweep rate of one millisecond/division.
- d. Connect the 10X probe from the test oscilloscope to the output of the Z-Axis amplifier at R1118 (inside lead, see Figure 8-17).

- e. Turn the INTENSITY control on the 7633 to obtain a 15-volt signal amplitude on the test oscilloscope.
- f. ADJUST-CRT Grid Bias adjustment R1248 (see Figure 5-4) until the trace on the 7633 just disappears.

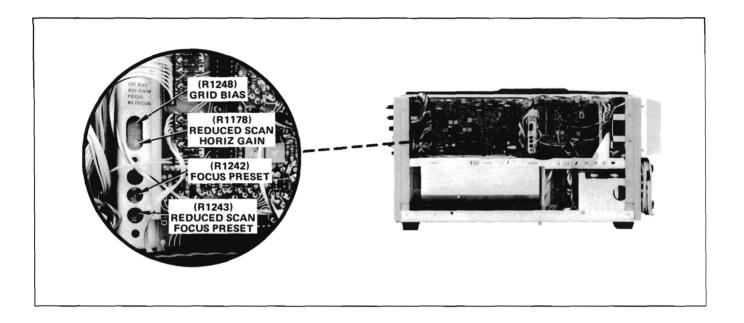


Figure 5-4. Location of adjustments in High-Voltage cover.

- g. Set the time-base unit for a sweep rate of 50 milliseconds/division.
- h. Position the trace vertically off screen and turn the INTENSITY control fully clockwise.
- i. CHECK-That the test oscilloscope display amplitude is 58 volts or greater. Note this reading.
- j. Set the time-base unit for a sweep rate of 0.1 second/division.
- k. CHECK—That the test oscilloscope display amplitude is between 20 and 30 volts less than the amplitude in step i.

2. Adjust Z-Axis Compensation and Check Drive

- a. Set the time-base unit in the 7633 for a sweep rate of 0.5 microsecond/division.
- b. Set the test oscilloscope for 0.5 volt/division (five volts/division at 10X probe tip) vertical deflection with dc coupling and for a sweep rate of 0.2 microsecond/division.
 - c. Position the 7633 trace off screen vertically.

- d. Adjust the 7633 INTENSITY control for a six-division display (30 volts) on the test oscilloscope.
- e. ADJUST-C1115 (see Figure 8-17) for optimum square leading corner and less than 1.5 volts (1.5 minor divisions) of aberration. Risetime should be less than 50 nanoseconds.
 - f. Set the INTENSITY to midrange and center the trace vertically on the crt.
 - g. Remove the 10X probe.

3. Adjust Focus and Astigmatism

- a. Set the front panel FOCUS control to midrange.
- b. Center the time-base unit Position control.
- c. Set the INTENSITY for a usable display.
- d. Set the signal standardizer to Aux In and connect the low-frequency signal generator to the Aux In connector. Adjust the amplitude for approximately one division vertical display of a 50-kilohertz sine wave.
 - e. Set the time-base unit to display about five complete cycles of the sine wave.
- f. ADJUST-Focus Preset R1242 (see Figure 5-4) and Astigmatism adjustment R1274 (see Figure 8-17) for the best overall focus.
 - g. Disconnect the signal generator.

4. Adjust Trace Rotation

- a. Set the center of the trace on the center horizontal graticule line.
- b. ADJUST-TRACE ROTATION so the trace is parallel with the center horizontal graticule line.

5. Adjust Y-Axis Alignment

- a. Interchange the time-base unit and the signal standardizer.
- b. Position the trace on the center vertical graticule line.
- c. ADJUST-R1284 (see Figure 8-17) to align the trace with the center vertical line.

6. Adjust Geometry

- a. Set the signal standardizer to Vert or Horiz Gain with a Rep Rate of 100 kilohertz.
- b. ADJUST-Geometry adjustment R1292 for minimum bowing or tilt of the vertical traces.
- c. CHECK-For less than 0.1 division of bowing or tilt of the vertical traces.

7. Adjust Horizontal Gain

a. ADJUST-R512 (see Figure 8-20) for exactly eight divisions between the second and eighth traces.

(A) 5-35

8. Adjust Reduced Scan Focus and Astigmatism

- a. Pull REDUCED SCAN switch (on).
- b. Set the signal standardizer to Aux In and connect the low-frequency signal generator to the Aux In connector. Adjust the amplitude for approximately one Reduced Scan division vertical display of a 50-kilohertz sine wave.
- c. Set the time-base unit to display about five complete cycles (across the Reduced Scan graticule area) of the sine wave.
- d. ADJUST—REDUCED SCAN Focus Preset R1243 (see Figure 5-4) and the REDUCED SCAN Astigmatism adjustment R1276 (see Figure 8-17) for the best overall focus of the sine wave.

9. Adjust Reduced Scan Horizontal Gain

- a. Set the signal standardizer Test to Vert or Horiz Gain.
- b. Adjust the INTENSITY for a usable display.
- c. ADJUST—Reduced Scan Horizontal Gain adjustment R1178 (see Figure 5-4) for exactly eight reduced-scan divisions between the second and tenth traces.
 - d. Push REDUCED SCAN switch (off).

10. Adjust Vertical Gain

- a. Interchange the time-base unit and the signal standardizer, placing the time-base unit into the horizontal compartment and the signal standardizer into the left vertical compartment.
 - b. Set the time-base unit for a free-running (nontriggered) sweep.
- c. ADJUST-Vertical Gain adjustment R2446 (see Figure 8-19) for exactly six divisions between the second and eighth traces.
 - d. Pull REDUCED SCAN switch (on).
- e. ADJUST—Reduced Scan Vertical Gain adjustment R1171 (see Figure 8-17) for exactly six Reduced Scan divisions between the third and ninth traces.
 - f. Push REDUCED SCAN switch (off).

11. Adjust Auto Focus Compensation

- a. Connect the 10X probe to the front end (see Figure 8-17) of R1166.
- b. Set the test oscilloscope for ac coupling and a vertical deflection factor of 0.5 volt/division (5 volts/division at probe tip).
- c. Turn the READOUT control out of the detent position but leave it set to the counterclockwise end.
 - d. Remove Q2225 from the Readout Board (see Figure 8-21).
 - e. Adjust the 7633 INTENSITY for a six-division display on the test oscilloscope.

- f. Set the test oscilloscope for negative slope triggering and a 10 microseconds/division sweep rate.
- g. ADJUST—C1159 (see Figure 8-17) for optimum square leading corner and less than 2.5 volts (2.5 minor divisions) of aberration.
 - h. Set the test oscilloscope time base for X10 magnification.
 - i. Check that the pulse falltime is 0.6 microsecond or less.
 - j. Remove the probe and replace Q2225.
 - k, Turn the READOUT off.

12. Adjust Auto Focus Bias and Gain

- a. Remove the signal standardizer and replace it with an amplifier unit. Connect the low-frequency signal generator to the amplifier input connector using a BNC T connector.
- b. Set the signal generator for one megahertz with approximately two volts amplitude and set the amplifier unit for a one-division display.
 - c. Set the INTENSITY for midrange.
- d. RE-ADJUST—Reduced Scan Focus Preset adjustment R1243 (see Figure 5-4) and Reduced Scan Astigmatism adjustment R1276 (see Figure 8-17) for optimum focus.
 - e. Pull REDUCED SCAN switch (on).
 - f. Set the 7633 INTENSITY control to the three o'clock position.
 - g. ADJUST-Reduced Scan Focus Gain adjustment R1147 (see Figure 8-17) for optimum focus.
 - h. Push REDUCED SCAN switch (off).
 - i. ADJUST-Focus Gain adjustment R1141 for optimum focus.
 - j. Reduce INTENSITY to midrange.

13. Check External Z-Axis

- a. Connect a BNC cable from the unused end of the BNC T connector (connected to the input connector of the amplifier unit) to the 7633 EXT Z-AXIS input located on the rear panel.
 - b. CHECK-That the positive slope of the sine wave is being blanked out.
 - c. Remove the signal generator and EXT Z-AXIS connections.
 - d. Remove the amplifier unit from the vertical compartment.

C. VERTICAL DEFLECTION SYSTEM

Equipment Required:

1. Signal standardizer

8. BNC T connector

- 2. Time-base unit
- 3. Amplifier unit
- 4. Low-capacitance screwdriver
- 5. Medium-frequency signal generator
- 6. 50-ohm BNC cable (2)
- 7. Calibrator-pin to BNC cable

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY Midrange

VERT MODE ALT

TRIG SOURCE VERT MODE

Display Selection NON STORE

READOUT INTENSITY Off

REDUCED SCAN Off

1. Adjust Vertical Centering

- a. Install a time-base unit in the horizontal compartment and set it for auto, internal, + slope triggering at a sweep rate of one millisecond/division.
- b. ADJUST—Vertical Centering adjustment R2433 (see Figure 8-19) to position the trace to the center horizontal graticule line.
 - c. Set the VERT MODE to LEFT.

2. Adjust Vertical Gain

- a. Install the signal standardizer in the left vertical compartment. Set the Test switch for Vert or Horiz Gain and the Rep Rate to one kilohertz.
 - b. Set the time-base unit for a sweep rate of 50 microseconds/division.
 - c. Position the bright center line of the display to the center horizontal graticule line.

- d. CHECK—That the deflection of the seven center traces is six divisions ±0.06 division.
- e. ADJUST-Vertical Gain adjustment R2446 (see Figure 8-19) for exactly six divisions of deflection for the center seven traces.
- f. Remove the signal standardizer from the left vertical compartment and insert it into the right vertical compartment.
 - g. Set the VERT MODE to RIGHT.
 - h. Repeat steps d and e.
- i. READJUST-Vertical Gain adjustment R2446, if necessary, for the correct tolerances in both steps e and h.
- j. Remove the signal standardizer from the right vertical compartment and insert it into the left vertical compartment.

3. Adjust Thermal Balance

NOTE

If the instrument being calibrated is not equipped with the readout feature, set the Thermal Balance control R2527 for a reading of +8.65 volts measured at the R2527 end of C2524 (see Figure 8-19), and omit this part.

- a. Set the signal standardizer Test switch to + Step Resp and Amplitude to minimum. Position the trace to the top graticule line.
 - b. Install an amplifier unit in the right vertical compartment.
- c. Set the VERT MODE to ALT. Position the amplifier-unit trace on the bottom graticule line. Set the time-base unit for a sweep rate of 10 milliseconds/division.
- d. Set the 7633 INTENSITY to midrange and advance the READOUT INTENSITY till the readout is viewable.
- e. ADJUST-Thermal Balance control R2527 (see Figure 8-19) for minimum vertical movement of the displayed readout characters. If appreciable adjustment is required, recheck the Vertical Gain adjustment in step C-2.

4. Check Vertical Linearity

- a. Remove the amplifier unit from the right vertical compartment.
- b. Set the VERT MODE to LEFT.
- c. Set the signal standardizer Test switch to Vert or Horiz + Step Resp and the Rep Rate to 100 kilohertz.
 - d. Set the time-base unit for a triggered display at a sweep rate of one millisecond/division.

(A) 5-39

- e. Set the signal standardizer Position control to center the trace while adjusting the Amplitude control for a two-division display.
- f. CHECK—Position the two-division display vertically and check for not more than 0.1 division of compression or expansion anywhere within the graticule area.

5. Adjust Vertical High-Frequency Compensation

- a. Install the signal standardizer in the left vertical compartment.
- b. Set the VERT MODE to LEFT.
- c. Set the signal standardizer Amplitude and Position controls for a centered, six-division display. Set the Rep Rate for 100 kilohertz.
- d. Set the time-base unit for a sweep rate of one microsecond/division and adjust the trigger level for a stable display.
- e. CHECK—For optimum square corner and flat top on the displayed pulse with aberrations not to exceed ±0.1 division with total peak-to-peak aberrations not to exceed 0.2 division.
- f. ADJUST-R2409 (4), shown in Figure 8-19, for a flat pulse top and mimimum aberrations in the first one-microsecond area.
- g. Set the time-base unit for a sweep rate of 0.5 microsecond/division and adjust the trigger level for a stable display.
- h. CHECK—For a flat top on the first 500-nanosecond portion of the pulse within the limits in step e.
 - i. ADJUST-R2509 (5) for a flat pulse top in the first 500-nanosecond area.
- j. Set the signal standardizer Rep Rate to one megahertz and the time base for a sweep rate of 0.1 microsecond/division. Adjust the trigger level for a stable display.
- k. CHECK—For a flat first 120-nanosecond area of the pulse top within the aberration limits listed in step e.
- I. ADJUST-R2511 (7) and C2511 (8) for flatness and minimum aberrations of the first 120-nanosecond area of the pulse top. R2511 adjusts tilt and C2511 adjusts for flatness.
 - m. Set the sweep rate to 0.05 microsecond/division and adjust the trigger level for a stable display.
 - n. CHECK-For a flat first 30-nanosecond area of the pulse top within the limits listed in step e.
 - o. ADJUST-R2411 (6) for flatness in the first 30-nanosecond area of the pulse top.
 - p. Set the sweep rate for 20 nanoseconds/division and adjust the trigger level for a stable display.
- q. CHECK—For optimum leading corner and flat pulse top with minimum aberrations in the first 10-nanosecond area within the limits listed in step e.

r. ADJUST—Refer to Table 5-3 for settings and adjustments for the first two, five, and 10 nanoseconds of the pulse. Aberrations should remain within the limits listed in step e.

NOTE

Because the adjustments in Table 5-3 are interactive, it may be necessary to repeat various steps listed in this procedure to obtain optimum response with minimum aberrations.

TABLE 5-3

Signal Standardizer Rep Rate	Best Sweep Rate (time/division)	Adjustment	Primary Area of Pulse Affected
100 kHz	1 microsecond	R2409 (4)	First microsecond
100 kHz	0.5 microsecond	R2509 (5)	First 500 nanoseconds
_ 1 MHz	0.1 microsecond	R2511 (7) C2511 (8)	First 120 nanoseconds
1 MHz	0.05 microsecond	R2411 (6)	First 30 nanoseconds
1 MHz	20 nanoseconds	C2416 (11) R2416 (12) R2519 (13)	First 10 nanoseconds
1 MHz	20 nanoseconds	C2418 (9) R2418 (10)	First 5 nanoseconds
1 MHz	5 nanoseconds	C2456 (14)	First 2 nanoseconds

Adjust C2469 (located off the board) for minimum overall aberrations, 20 nanoseconds/division.

- s. Remove the signal standardizer from the left vertical compartment and install it into the right vertical compartment.
 - t. Set the VERT MODE to RIGHT.
- u. CHECK—For optimum square leading corner and flat top on the displayed pulse with aberrations not to exceed the limits listed in step e. Use the sweep rate and Rep Rate settings as listed in steps a through r.
- v. ADJUST-If necessary, compromise the adjustments in steps a through r to obtain the best response for both left and right vertical compartments.

NOTE

C2456 should be adjusted for least aberration of the front corner. Then, as a final adjustment, the leading corner of the six-division trace should be vertically centered on the graticule and C2456 re-adjusted to obtain a peak-to-peak aberration of exactly 0.2 division on the front corner. The trace should be repositioned to check that the aberrations are within specifications over the graticule area.

6. Check Bandwidth

- a. Install the signal standardizer in the left vertical compartment. Set the Test switch for Vert or Horiz Freq Resp and turn the Amplitude control fully clockwise.
 - b. Set the VERT MODE to LEFT.

(A)

- c. Connect the medium-frequency signal generator to the CW In connector of the signal standardizer.
- d. Set the time-base unit for auto triggering at a sweep rate of five microseconds/division.
- e. Set the signal generator to a reference frequency of three megahertz and adjust the output for an eight-division display.
- f. Adjust the signal standardizer Position control to bring the top of the waveform down one division.
- g. Adjust the amplitude of the signal generator to bring the top of the waveform back up to the top graticule line.
- h. Adjust the signal standardizer Position and Amplitude controls to obtain a centered, six-division display. THE CW LEVELED LIGHT MUST STAY ON FOR THIS CHECK.
 - i. Set the signal generator to cover a range to 100 megahertz.
- j. CHECK—That the 7633 display amplitude does not drop below 4.5 divisions as the signal generator frequency is adjusted upward to exactly 100 megahertz. (The signal standardizer CW Leveled light must be on.)
 - k. Set the VERT MODE to RIGHT.
- I. Remove the signal standardizer from the left vertical compartment and install it in the right vertical compartment.
 - m. Repeat steps c through j for the right vertical compartment.

7. Check Channel Isolation

- a. Install an amplifier unit in the right vertical compartment.
- b. Set the VERT MODE and TRIG SOURCE for RIGHT.
- c. Connect the medium-frequency signal generator to the input of the vertical amplifier unit. Set the generator for 100-megahertz output and adjust the amplitude for an eight-division display. Set the time-base unit for 0.5 microsecond/division sweep rate.
 - d. Set the VERT MODE to LEFT.
- e. CHECK—For a display of 0.1 division or less while adjusting the signal generator frequency from 100 megahertz to 50 megahertz. Do not include the trace width (line thickness) in this measurement.
- f. Interchange the amplifier unit and the signal standardizer. Leave the signal generator connected to the amplifier unit.
- g. Set the TRIG SOURCE for LEFT and adjust the amplitude for an eight-division display of the 100-megahertz input signal.
 - h. Set the VERT MODE to RIGHT.

- i. Repeat step e.
- j. Set the VERT MODE to LEFT and disconnect the signal generator.

8. Check BEAMFINDER Operation

- a. Set the position controls on the amplifier and time-base units clockwise.
- b. Press the BEAMFINDER pushbutton.
- c. CHECK-That the trace is within the graticule area.
- d. Set the position controls on the amplifier and time-base units counterclockwise and repeat steps b and c.

9. Check Vertical Modes

- a. Connect the calibrator, four-volt output to the inputs of both the amplifier unit and the signal standardizer (Aux In). Set the signal standardizer Test switch for Aux In.
- b. Set the time-base unit for auto, internal triggering, at a sweep rate of 0.5 millisecond/division.
- c. Adjust the amplitude of the signal standardizer for two divisions of display and position the trace on the second and fourth graticule lines.
 - d. Set the VERT MODE and TRIG SOURCE to RIGHT.
- e. Set the amplifier unit for about two divisions vertical deflection and position the trace on the sixth and eighth graticule lines.
 - f. Set the TRIG SOURCE to VERT MODE and the VERT MODE to ALT.
 - g. CHECK—That traces from both vertical compartments appear on the crt.
 - h. Set the VERT MODE to ADD.
- i. CHECK—That the resultant trace is the algebraic sum of the two vertical signals. For example, if the traces in steps c and e were exactly two divisions each, the resultant trace will be exactly four divisions.
 - j. Set the VERT MODE to ALT and disconnect the calibration cables.
 - k. Position the traces about two divisions apart.
 - 1. Set the sweep rate to 50 milliseconds/division.
 - m. CHECK-That the two vertical traces are alternately displayed with sweeps.
 - n. Set VERT MODE to CHOP.
 - CHECK—That two separate traces appear simultaneously on the crt.
 - p. Disconnect all test equipment and remove plug-in units.

® 5-43

D. HORIZONTAL DEFLECTION SYSTEM

Equipment Required:

- 1. Test oscilloscope
- 2. 10X probes (2)
- 3. Signal standardizer
- 4. Low-frequency signal generator
- 5. BNC cables (2)
- 6. BNC T connector
- 7. Time-mark generator
- 8. Amplifier unit

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY

Midrange

READOUT INTENSITY

Off

VERT MODE

LEFT

TRIG SOURCE

VERT MODE

Storage Selection

NON STORE

REDUCED SCAN

Off

1. Adjust Limit Center

- a. Install an amplifier unit, set for a vertical deflection factor 10 millivolts/division with dc coupling, into the horizontal compartment of the 7633. Set the Position control to center range.
- b. Set the test oscilloscope for a 10-microsecond sweep rate with auto, ac-coupled, internal triggering. Set the vertical deflection factor for 0.5 volt/division (5 volts/division at probe tip) on both channel inputs, alternate display mode, and set the inputs to ground.
- c. Connect 10X probes from the two vertical channel inputs of the test oscilloscope to the two horizontal deflection plate leads of the 7633 (see Figure 8-20).
- d. Adjust the vertical Position controls of the test oscilloscope to set both traces on the top graticule line.
 - e. Set the test oscilloscope vertical inputs to dc.

- f. Connect the low-frequency signal generator to the input of the amplifier unit.
- g. Set the signal generator for 50-kilohertz output with 0.5 volt amplitude.
- h. ADJUST-R535 to bring the lower edges of the two traces to the same level.
- i. Disconnect the signal generator and remove the amplifier unit from the horizontal compartment.

2. Adjust Horizontal Gain

- a. Install a time-base unit in the left vertical compartment and the signal standardizer in the horizontal compartment.
- b. Set the signal standardizer Test switch to Vert or Horiz Gain and adjust the Position control to center the display.
- c. ADJUST—Horizontal Gain adjustment R512 (see Figure 8-20) for exactly eight divisions between the second and eighth trace.

3. Adjust DC Balance

- a. Set the signal standardizer Test switch to Triggering Gain.
- b. ADJUST-DC Balance adjustment R525 (see Figure 8-20) to set the trace exactly on the center graticule line.

4. Check Horizontal Linearity

- a. Set the signal standardizer Test switch to Vert or Horiz + Step Resp. Adjust the Amplitude and Position controls for a centered, two-division display.
- b. CHECK—That there is 0.1 division or less compression or expansion when the trace is positioned anywhere within the graticule area.

5. Transient Response

- a. Set the signal standardizer Test switch to Vert or Horiz Step Resp and set the Rep Rate to 1 megahertz.
 - b. Connect the signal standardizer Trig Out directly to the time-base unit Ext Trig In connector.
- c. Set the time-base unit for external triggering, negative slope, with a sweep rate of 0.1 microsecond/division.
 - d. Set the signal standardizer Amplitude and Position controls for a centered, six-division display.
- e. ADJUST—High-Frequency Compensation capacitors C588, C566, and C586 (see Figure 8-20) for optimum flat front corner (see Figure 5-5).

3 5-45

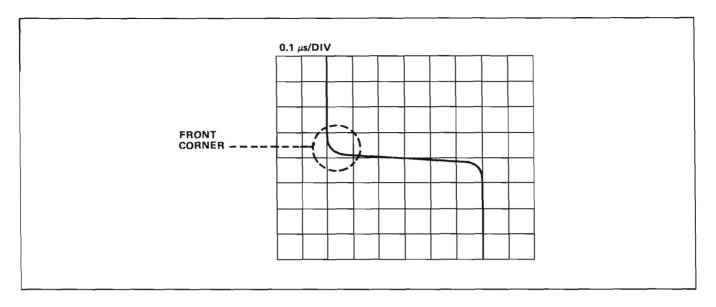


Figure 5-5. Typical display showing front corner of waveform for Horizontal system high-frequency compensation adjustment.

6. Adjust High-Frequency Timing

- a. Install an amplifier unit in the left vertical compartment and a time-base unit in the horizontal compartment.
 - b. Connect the time-mark generator to the input connector of the amplifier unit.
- c. Set the time-mark generator for one-milliscond markers. Set the deflection factor of the amplifier unit so the markers are at least two divisions in amplitude.
 - d. Set the time-base unit for auto, internal triggering at a sweep rate of one millisecond/division.
 - e. Position the first marker to the left vertical line of the graticule.
- f. Set the time-base unit Swp Cal adjustment for one marker each major graticule division between the first and ninth lines.
 - g. Set the time-mark generator for 10-nanosecond markers.
- h. Set the time-base unit for a sweep rate of 0.05 microsecond/division with the X10 magnifier on; set the deflection factor of the amplifier unit so the amplitude of the markers is about two divisions.
 - i. Pull the REDUCED SCAN switch on.
 - j. CHECK-That the deflection does not limit on screen.
 - k. Push the REDUCED SCAN switch off.
- I. CHECK—Crt display for one marker for each two divisions over the center eight divisions. Refer to the time-base unit instruction manual for performance check or calibration procedures for checking high-frequency timing and linearity. Use the procedures and limits given for the three fastest sweep rates which do not exceed five nanoseconds/division.

- m. ADJUST-C588, C566, and C586 (see Figure 8-20), if necessary, for one marker for each two divisions over the center eight divisions (use low-capacitance screwdriver).
 - n. Remove the amplifier and time-base units.

7. Check X-Y Phase Shift

- a. Install identical amplifier units in the left vertical and horizontal compartments.
- b. Set both amplifier units for 10 millivolts/division deflection with dc coupling.
- c. Connect the low-frequency signal generator to the inputs of both amplifier units.
- d. Set the low-frequency generator for an output of 35 kilohertz and adjust the amplitude for a horizontal and vertical deflection of eight divisions.
- e. CHECK—The lissajous display for an opening at the center vertical line of 0.28 division or less (indicates two degrees or less of phase shift; see Figure 5-6).

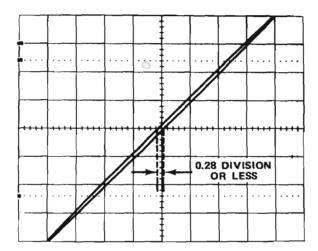


Figure 5-6. Typical crt display when checking X-Y phase shift.

f. Disconnect the low-frequency signal generator and remove the amplifier unit from the left vertical compartment.

8. Check Horizontal Bandwidth

- a. Install a time-base unit in the left vertical compartment.
- b. Set the time-base unit for auto triggering at a sweep rate of one millisecond/division (display will free-run).
- c. Connect the low-frequency generator to the input of the amplifier unit in the horizontal compartment and adjust the amplitude and deflection factor for eight divisions of horizontal display of a 50-kilohertz reference frequency.

⊗ 5-47

Calibration-7633/R7633 Service

- d. Without changing the output amplitude, increase the output frequency of the generator to two megahertz.
- e. CHECK—That the horizontal amplitude is at least 5.6 divisions (amplitude is typically greater than seven divisions at two megahertz).
 - f. Disconnect all test equipment and remove the plug-in units from the 7633.

E. CALIBRATOR

Equipment Required:

- 1. Precision dc voltmeter
- 2. Amplifier unit
- 3. Time-base unit
- 4. BNC to pin-jack cable
- 5. Three-inch screwdriver

Before you begin, see

ADJUSTMENT LOCATIONS

Midrange

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY

VERT MODE

TRIG SOURCE

Display Selection

LEFT

VERT MODE

NON STORE

READOUT INTENSITY Off (in detent)
REDUCED SCAN Off (pressed in)

1. Adjust Calibrator Output Voltage

- a. Change jumper P1440 (see Figure 5-7) to the DC position.
- b. Connect the precision dc voltmeter between the 4 V and GND pin-jacks.
- c. CHECK—Meter reading; four volts ± 0.04 volt (within ± 0.08 volt if this measurement is made outside the $\pm 15^{\circ}$ C to $\pm 35^{\circ}$ C range).
 - d. ADJUST-Four volts adjustment R1459 (see Figure 5-7) for a meter reading of exactly four volts.
 - e. Connect the precision dc voltmeter between the 0.4-volt Calibrator pin-jack and pin ground.
- f. CHECK—Meter reading; 0.4 volt ± 0.004 volt (within 0.008 volt if this measurement is made outside the $\pm 15^{\circ}$ C to $\pm 35^{\circ}$ C range).
 - g. Connect the precision dc voltmeter between the 40-millivolt Calibrator pin-jack and pin ground.
- h. CHECK—Meter reading; 40 millivolts ± 0.4 millivolt (within 0.8 millivolt if this measurement is made outside the $\pm 15^{\circ}$ C to $\pm 35^{\circ}$ C range).
 - i. Disconnect the precision dc voltmeter.

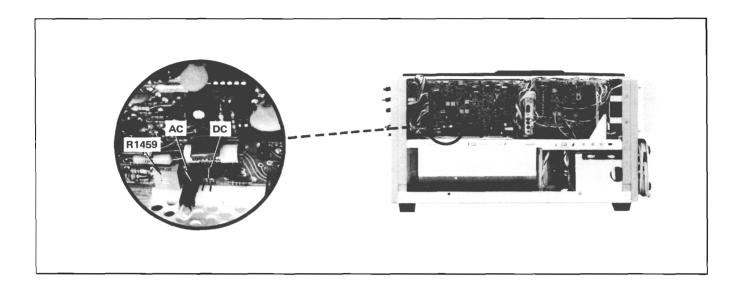


Figure 5-7. Location of Calibrator AC/DC jumper.

2. Check Calibrator Repetition Rate

- a. Change jumper P1440 to the AC position (see Figure 5-7).
- b. Install the amplifier unit in the left vertical compartment and the time-base unit in the horizontal compartment.
 - c. Set the amplifier unit for a deflection factor of one volt/division.
 - d. Set the time-base unit for auto, internal triggering at a sweep rate of 0.2 millisecond/division.
- e. Connect the four-volt calibrator pin-jack to the input of the amplifier unit with the BNC to pin-jack cable.
 - f. Position the start of the square wave to the left line of the graticule.
- g. CHECK—Crt display for length of one complete cycle between 4.2 and 6.3 divisions (one kilohertz ±20%).

F. SIGNALS IN/OUT

Equipment Required:

- 1. Amplifier units (two)
- 2. Time-base unit
- 3. Dc voltmeter
- 4. BNC to pin-jack cable
- 5. Test oscilloscope
- 6. 50-ohm BNC cable

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY Midrange

VERT MODE LEFT

TRIG SOURCE VERT MODE

Display Selection NON STORE

READOUT INTENSITY Off (in detent)

REDUCED SCAN Off (pressed in)

1. Check SS READY OUT-REMOTE ERASE

- a. Connect the calibrator signal to the input of the amplifier unit. Obtain a triggered display of two or more divisions.
 - b. Press the STORE and VAR PERSIST pushbuttons.
 - c. CHECK-That when the REMOTE ERASE input connector is grounded, an erase cycle is generated.
 - d. Press the NON STORE pushbutton.

2. Check EXT SS RESET IN

- a. Set the time-base unit to Single Sweep at a sweep rate of 0.5 second/division.
- b. CHECK—That when the EXT SS RESET IN input is grounded, the time-base unit single sweep function is reset.

3. Check VERT SIG OUT

- a. Set the time-base unit for auto triggering and adjust the trigger level for a stable display at a sweep rate of 1 millisecond/division.
- b. Connect a BNC cable to the VERT SIG OUT connector and to the amplifier unit in the right vertical compartment. Set TRIG SOURCE to LEFT.
- c. Connect the 0.4-volt CALIBRATOR signal to the input of the amplifier unit in the left vertical compartment. Set both vertical amplifiers for a deflection factor of 0.2 volt/division.
 - d. CHECK-That a two-division signal is displayed by the left vertical amplifier.
- e. Set VERT MODE to RIGHT and check that a signal of about five divisions is displayed by the right vertical amplifier.
 - f. Interchange the connections to the vertical amplifiers. Set the TRIG SOURCE to RIGHT.
 - g. CHECK—That a two-division signal is displayed by the right vertical amplifier.
 - h. Set the VERT MODE to LEFT and check that a signal of about five divisions is displayed.
 - i. Install a 50-ohm termination between the cable and the input of the right vertical amplifier.
- j. Set the deflection factor of the left vertical to 10% millivolts/division. Check for a display of about five divisions.
 - k. Disconnect all cables.

4. Check + SAWTOOTH OUT

- a. Connect the + SAWTOOTH OUT to the input of the left vertical amplifier. Set the deflection factor of the left vertical amplifier for two volts/division.
- b. CHECK—For a sawtooth display of about five divisions in amplitude and greater than 10 centimeters in length.

5. Check + GATE OUT

- a. Connect the + GATE OUT to the vertical input of the test oscilloscope and set the deflection factor for two volts/division. Set the time/division switch to 1 millisecond/division. Set the GATE selector switch to the MAIN GATE position.
 - b. CHECK-That displayed signal is about five divisions in amplitude.

5-52 REV. B, JULY, 1975

G. READOUT OPERATION

(Option 1 deletes this procedure)

Equipment Required:

2. Time-base unit

1. Dual-trace vertical plug-in unit

3. Three-inch screwdriver

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

INTENSITY Midrange
READOUT INTENSITY Midrange
VERT MODE CHOP

TRIG SOURCE VERT MODE
Storage Selection NON STORE
REDUCED SCAN Off (pressed in)

1. Check READOUT Operation

- a. Install the amplifier unit, set for dual trace mode, in the left vertical compartment. Push and hold the identify buttons on the amplifier unit. (Switch S2110 should be in the free position.) Check that the word IDENTIFY is within the top division and the bottom division of the graticule. Check that the words IDENTIFY are positioned within the left third of the graticule. Check completeness of characters without over-scanning (over-scanning causes a bright dot where the traces overlap).
- b. ADJUST-Vertical Separation adjustment R2291 (see Figure 8-21) so the channel 1 characters are within the top division, and the channel 2 characters are within the bottom division of the graticule.
- c. ADJUST—Character height adjustment R2273 (see Figure 8-21) as needed. Characters are typically 0.5 division in height.
 - d. ADJUST-Character scan adjustment R2128 (see Figure 8-21) if characters are over-scanned.
- e. Remove the amplifier unit from the left vertical and install it in the right vertical compartment. Push and hold the identify buttons on the amplifier unit. Check that the words IDENTIFY are positioned within the center third of the graticule.
- f. Remove the amplifier unit from the right vertical and install it in the horizontal compartment. Push and hold the identify buttons on the amplifier unit. Check that the words IDENTIFY are positioned within the right third of the graticule.
 - g. CHECK—That the correct characters are displayed.
- h. ADJUST-Row Match adjustment R2183 (see Figure 8-21) and Column Match adjustment R2214, if necessary, for correct readout display.

Calibration-7633/R7633 Service

i. Remove the dual trace plug-in unit.

2. Check Readout Gate Trig'd Operation

- a. Set switch S2110 to Gate Trig'd position (see Figure 8-21).
- b. Install the time-base unit in the horizontal plug-in compartment. Set sweep rate to one second/division.
- c. CHECK—That no readout information is displayed till after the sweep. At fast sweep rates, this is not noticeable.

H. STORAGE SYSTEM

Equipment Required:

1. Digital voltmeter (DVM)

9. Time-base unit

2. 100X probe

10. Three-inch screwdriver

- 3. Test oscilloscope
- 4. Low-frequency signal generator
- 5. Medium-frequency signal generator
- 6. 10X probe
- 7. 50-ohm BNC cables (two)
- 8. Amplifier unit

Before you begin, see

ADJUSTMENT LOCATIONS

in the Diagrams section.

Control Settings

Preset the 7633 controls as follows:

VERT MODE LEFT

TRIG SOURCE VERT MODE

INTENSITY CCW (off)

READOUT INTENSITY Off (in detent)

Display Selection NON STORE

ERASE/PERIODIC CCW (in detent, off)

PERSISTENCE CCW (maximum)

Storage Selection BI STABLE

SAVE INTENSITY CW STORAGE LEVEL CW

1. Check NON STORE Voltage Levels

- a. Install a time-base unit in the horizontal compartment of the 7633 and an amplifier unit in the left vertical compartment.
- b. Set the time-base unit for auto, ac-coupling, and line source at a sweep rate of 0.2 millisecond/division.
 - c. Set the amplifier unit for 0.5 volt/division vertical deflection and dc coupling.

d. Check the dc levels on the following test points (see Figure 8-24) with the DVM:

Front Mesh	More negative than -12 volts
Fast Mesh	125 volts ±4 volts
Collector	150 volts ±6 volts
CE 3	65 volts ±5 volts
CE 2	45 volts ±2 volts
CE 1	70 volts ±3 volts
FGA	36 volts ±1.5 volts
FGK	At least one volt but not more than three volts above FGA

2. Check BISTABLE Voltage Levels

- a. Press the STORE pushbutton.
- b. Check the dc levels on the following test points with the DVM:

Front Mesh	Adjustable from 45 volts to 95 volts with R1689. Preset to 70 volts.
Fast Mesh	125 volts ±5 volts
Collector	150 volts ±6 volts
CE 3	85 volts ±5 volts
CE 2	85 volts ±5 volts
CE 1	45 volts ±2.5 volts
FGA	36 volts ±3 volts
FGK	0 volts (approximately)

- c. Connect the DVM to CE 1.
- d. Press the ERASE pushbutton.
- e. Measure 85 volts ±4 volts during the erase cycle.
- f. Remove the DVM probe from CE 1 and connect it to FGA.
- g. Press the ERASE pushbutton.
- h. Measure 90 volts ±4 volts during the erase cycle.
- i. Disconnect the DVM.

3. Check BISTABLE ERASE Waveforms

- a. Set the time-base unit for single sweep.
- b. Connect a 100X probe from the test oscilloscope to the Front Mesh test point.

- c. Adjust the test oscilloscope for a sweep rate of 100 milliseconds/division and a vertical deflection of one volt/division (100 volts/division at probe tip).
 - d. Press the ERASE pushbutton.
- e. Check for a 100-millisecond, approximately 600-volt erase pulse. At the end of the erase pulse, the level should drop below zero volts and ramp up to the Op Level in less than 375 milliseconds (see Figure 5-8).

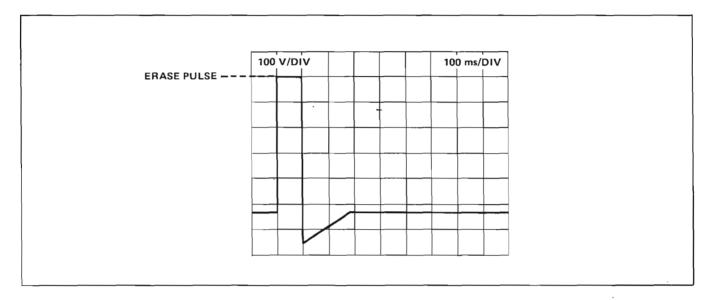


Figure 5-8. Idealized Erase waveform.

- f. Press the FAST pushbutton (on).
- g. Press the ERASE pushbutton.
- h. Check for the same waveform as in step e but with a 100-millisecond, 600-volt transfer pulse approximately one second after the erase pulse (see Figure 5-9).
 - i. Turn the READOUT INTENSITY on.
 - j. Press the ERASE pushbutton.
 - k. Check that the readout display is off during the erase cycle.
 - I. Turn off the READOUT INTENSITY.
 - m. Set the time-base unit in the 7633 for auto, ac-coupled, internal triggering.
 - n. Press the FAST pushbutton (off).
- o. Remove the 100X probe from the Front Mesh test point and adjust the INTENSITY for a usable display.

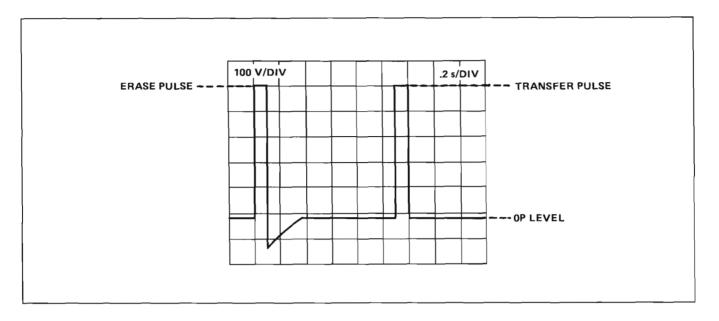


Figure 5-9. Idealized Erase and Transfer waveform.

- p. Press the ERASE pushbutton.
- q. Check that the trace is blanked during the erase cycle.

4. Adjust BISTABLE Op Level and check BISTABLE Writing Speed

- a. Press NON STORE.
- b. Connect the low-frequency signal generator to the amplifier unit in the 7633 and adjust for 6.4 divisions display of a 1.5-kilohertz signal.
 - c. Set the time-base unit for single sweep at a sweep rate of 0.5 millisecond/division.
 - d. Adjust INTENSITY to maximum without blooming trace.
 - e. Connect the DVM to the Front Mesh test point.
 - f. Press STORE.
- g. Adjust Bistable Op Level adjustment (see Figure 8-24) R1689 (1) toward zero volts while erasing until part of the stored waveform starts to fade out after approximately 15 seconds.
 - h. Note the dc level. This is the lower writing threshold.
- i. Adjust Bistable Op Level adjustment R1689 (1) toward +100 volts while erasing until part of the stored waveform begins to fade up (blend into the background) after about 15 seconds.
 - j. Note the dc level. This is the upper writing threshold.
- k. ADJUST—The Bistable Op Level adjustment R1689 (1) to a voltage setting midway between the upper and lower writing thresholds. This is the Bistable Op Level.

- l. CHECK—That a single-shot, 1.5-kilohertz, 6.4-division sine wave, positioned up and down the screen (while erasing and single sweeping), will store anywhere within the center 6×8 divisions of the graticule area without fading up or down in one minute. This checks the Bistable writing speed at .03 division/microsecond.
 - m. Remove the DVM.
 - n. Set the time-base unit for X10 magnification, auto triggering.
 - o. Pull REDUCED SCAN switch on.
- p. Adjust the low-frequency signal generator for a display of 6.4 Reduced Scan divisions of a 10-kilohertz signal (writing speed 0.2 division/microsecond).
 - q. Set the time-base unit for single sweep.
 - r. Press STORE.
- s. CHECK—That the 10-kilohertz signal will store in the center 8 x 10 divisions of the Reduced Scan graticule area and will not fade up or down in one minute.
 - t. Push REDUCED SCAN off.
 - u. Set INTENSITY control to midrange.
 - v. Set time-base unit magnifier to X1.

5. Check PERIODIC ERASE

- a. Set the time-base unit for auto, ac-coupled, internal triggering.
- b. Turn the PERIODIC ERASE control fully clockwise (minimum view time).
- c. Set the test oscilloscope for dc input, 0.1 volt/division (one volt/division at probe tip) vertical deflection and 0.5 second/division sweep rate with auto, ac-coupled, internal triggering.
 - d. Connect the 10X probe from the test oscilloscope to the + end of C1517.
 - e. CHECK-For a ramp time of less than two seconds.
 - f. Set the test oscilloscope sweep rate to five seconds/division.
- g. Turn the PERIODIC ERASE control fully counterclockwise (maximum view time) but do not turn into detent.
 - h. CHECK-For a ramp time of more than 10 seconds.
 - i. Disconnect probe and turn off PERIODIC ERASE (in detent).

(A) 5-59

6. Check SAVE Mode and SAVE INTEN

- a. Set the time-base unit for single sweep and set the level control counterclockwise (untriggered).
- b. Turn the READOUT INTENSITY to midrange.
- c. Push the ERASE pushbutton.
- d. Turn SAVE INTEN control fully counterclockwise.
- e. Push the SAVE pushbutton.
- f. CHECK-That the screen does not change. (This is the "Babysitting Mode".)
- g. Turn the level control on the time-base unit to trigger a sweep.
- h. CHECK—That the screen goes dark and that the readout is visible for a short time afterwards then turns off.
 - i. Connect a 10X probe from the test oscilloscope to the FGK test point.
- j. Set the test oscilloscope for dc input and 0.5 volt/division (5 volts/division at probe tip) vertical deflection at a sweep rate of two milliseconds/division.
 - k. Set the ground reference on the bottom graticule line of the test oscilloscope.
 - I. CHECK-For a dc level of 37 volts ±3 volts.
 - m. Turn the SAVE INTEN control slowly clockwise.
- n. CHECK—That as the SAVE INTEN control is turned, a 100-hertz pulse to zero volts appears and increases to approximately 90% duty cycle at the clockwise end of the control.
 - o. Remove the 10X probe.

7. Check VAR PERSIST Voltage Levels

- a. Set the time-base unit for auto triggering.
- b. CHECK-That the sweep is locked out (the 7633 is still in the SAVE mode from the previous part).
- c. Press the STORE pushbutton.
- d. CHECK-That the sweep appears.
- e. Turn the INTENSITY off.
- f. Turn the READOUT INTENSITY off (in detent).

g. Press the VAR PERSIST pushbutton and measure the voltages on the following test points with the DVM.

FAST MESH	100 volts ±4 volts
COLL	100 volts ±4 volts
CE 3	65 volts ±4 volts
CE 2	45 volts ±2 volts
CE 1	30 volts ±1.5 volts
FGA	20 volts ±1 volt
FGK	0 volt ±0.5 volt

h. Measure the voltages on the following test points during erase:

Test Point	Normal	During Erase
FAST MESH	100 volts	125 volts ±3 volts
COLL	100 volts	132 volts ±3 volts
CE 1	30 volts	68 volts ±3 volts
FGA	20 volts	74 volts ±3 volts

8. Adjust VAR PERSIST Op Level and Prep Level

- a. Set the test oscilloscope for 0.1 volt/division (1 volt/division at probe tip) vertical deflection, ac input, and 0.1 millisecond/division sweep rate.
 - b. Connect a 10X probe from the test oscilloscope to the Front Mesh of the 7633.
 - c. Turn the STORAGE LEVEL fully clockwise.
 - d. CHECK-For a 10-kilohertz, approximately two-volt ramp on the front mesh (see Figure 5-10).

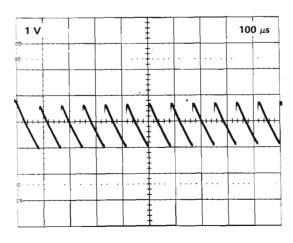


Figure 5-10. VAR PERSIST Front Mesh ramp.

- e. Set the test oscilloscope amplifier unit for dc input, 0.5 volt/division (5 volts/division at probe tip) vertical deflection, and a sweep rate for one millisecond/division.
- f. Adjust Variable Persistence Op Level adjustment R1658 for \neq 15 volts \pm .0 volt on the front mesh.
- g. Adjust the Variable Persistence Prep Level adjustment R1677 (4), during the erase cycle, for no change in voltage on the front mesh during the erase cycle. (Disregard the 600-volt, 100-millisecond pulse at the beginning of the erase cycle.)
 - h. ADJUST-The Variable Persistence Op Level R1658 (3) as follows:

Push the ERASE pushbutton and observe the dark or shaded areas of the screen. . .

If the screen is bright with no dark or shaded areas, increase the VP Op Level adjustment R1658 (3) to minus nine volts.

If dark or shaded areas are noticeable, increase the VP Op Level adjustment R1658 (3) by one or two volts, erase, and observe screen. Repeat until a voltage is reached where the screen is bright with no shaded areas. Adjust R1658 to three volts above this voltage. (Final voltage must not be more negative than minus nine volts).

- i. Adjust the Variable Persistence Prep Level adjustment R1677 (4) so that the screen is dark after an erase cycle.
- j. ADJUST-VP Prep Level adjustment R1677 (4) to decrease the voltage (in approximately one-volt steps) to the point where, after an erase cycle, approximately 80% of the screen has a light green background.
- k. CHECK—That the Variable Persistence Op Level drops approximately five volts as the STORAGE LEVEL control is turned counterclockwise.
 - I. Turn the STORAGE LEVEL control fully clockwise.

9. Check Persistence Pulses

- a. Turn the PERSISTENCE control fully clockwise.
- b. CHECK—For a pulse, the same amplitude as the prep pulse, 1.2 milliseconds to 2.2 milliseconds wide riding on the VP Op Level (see Figure 5-11).
 - c. CHECK-For 7.5 to 12.5 milliseconds between leading edges (100-hertz repetition rate).
 - d. Press the SAVE pushbutton.
 - e. CHECK-That the persistence pulses stop.
 - f. Press the ERASE pushbutton.
 - g. CHECK-That the erase waveform does not occur.
 - h. Press the STORE pushbutton.

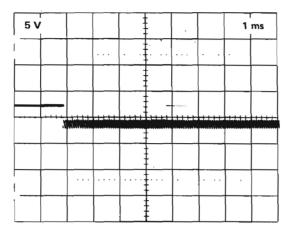


Figure 5-11. PERSISTENCE pulses.

- i. Set the test oscilloscope sweep rate to five microseconds/division.
- j. Turn the PERSISTENCE control slowly counterclockwise and check that the persistence pulse decreases to less than 15 microseconds near the counterclockwise end of the control and disappears at the counterclockwise end.
 - k. Remove the 10X probe and press the NON STORE pushbutton.

10. Check VAR PERSIST Writing Speed

- a. Set the time-base unit for a sweep rate of 20 microseconds/division with auto, ac-coupled, internal triggering and set the amplifier unit for dc input.
- b. Connect the low-frequency signal generator to the amplifier unit input and adjust the amplitude for 6.4 divisions display of a 25-kilohertz signal (writing speed of 0.5 division/microsecond).
 - c. Set the INTENSITY to maximum without blooming trace.
 - d. Set the time-base unit to single sweep.
 - e. Press the STORE pushbutton.
- f. CHECK—That the signal will store (and can be viewed for 30 seconds) in the center 6 x 8 divisions of the graticule area by erasing and repositioning the signal (the PERSISTENCE control is in the counter-clockwise position and the STORAGE LEVEL is fully clockwise).
 - g. Press NON STORE.
- h. Set the time-base unit for a sweep rate of 50 microseconds/division with auto triggering and X10 magnification.

⑥ 5-63

- i. Pull the REDUCED SCAN switch on.
- j. Adjust the low-frequency signal generator for a display of 6.4 Reduced Scan divisions of a 150-kilohertz signal (writing speed of three divisions/microsecond).
 - k. Set the time-base unit for single sweep.
 - I. Press the STORE pushbutton.
- m. CHECK—That the signal will store (and can be viewed for 30 seconds) in the center 8 x 10 divisions of the Reduced Scan graticule area by erasing and repositioning the signal.
 - n. Push the REDUCED SCAN switch off.

11. Adjust VAR PERSIST FAST Front Mesh Stability

- a. Turn the INTENSITY off and press the FAST pushbutton.
- b. Adjust the FAST LEVEL CENTER control fully counterclockwise.
- c. Adjust the time-base unit Level control so that the triggered light is off.
- d. Press the ERASE pushbutton.
- e. Connect the DVM to the following test points and measure the voltage levels:

CE 3 72.5 volts ±4 volts
CE 2 55 volts ±2.5 volts

- f. Disconnect the low-frequency signal generator.
- g. Connect the DVM to the Front Mesh test point.
- h. Press the ERASE pushbutton (time-base unit should still be set for single sweep and untriggered).
- i. Turn the time-base unit Level control to trigger a sweep (transfer sweep).
- j. Measure and note the voltage level (Op Level) on the Front Mesh.
- k. Set the time-base unit Level control for untriggered sweep (ccw).
- I. Press the ERASE pushbutton.
- m. ADJUST-VP Fast Stability (waiting level) adjustment R1646 (5) for a voltage level on the Front Mesh, six volts lower than that measured in step j.
 - n. Turn the time-base unit Level control to trigger a sweep.
 - o. Press the ERASE pushbutton.
- p. Adjust the STORAGE LEVEL control till the screen has a very dim background (in bright light it will be necessary to use a viewing hood).

- q. Turn the time-base unit Level control for untriggered sweep (ccw).
- r. Press the ERASE pushbutton.
- s. After one minute, turn the time-base unit Level control to trigger a sweep.
- t. ADJUST-VP Fast Stability as follows: Compare the background transferred up after one minute to that transferred up immediately after the screen is erased when the sweep is triggered. When the backgrounds are the same brightness, the Variable Persistence Front Mesh stability is properly adjusted...

If the background is brighter after the waiting period, increase the waiting level by adjusting R1646 (5) a small amount and repeat steps p, q, r, and s to recheck.

If the background is darker after the waiting period, decrease the waiting level by adjusting R1646 (5) a small amount and repeat steps p, q, r, and s to recheck.

u. Remove the DVM.

12. Adjust BISTABLE FAST

- a. Press the BISTABLE pushbutton.
- b. Set the test oscilloscope for two volts/division (20 volts/division at probe tip) vertical deflection at a sweep rate of two microseconds/division.
 - c. Connect a 10X probe from the test oscilloscope to the Fast Mesh test point.
- d. Turn the 7633 time-base unit Level control for untriggered sweep (time-base unit should still be set for single sweep).
 - e. Press the ERASE pushbutton.
- f. ADJUST-Bistable Fast Prep adjustment R1783 (2) for approximately 15 volts on the Fast Mesh test point.
- g. CHECK—For pump pulses on the Fast Mesh test point that go from approximately 15 volts to approximately 125 volts. It may be necessary to increase the intensity of the test oscilloscope and trigger on the positive slope.
 - h. CHECK-That the pulse in step g is of approximately two microseconds duration.
 - i. Remove the 10X probe.
 - j. Press the ERASE pushbutton and measure the voltage levels on the following points using the DVM:

COLL	128 volts ±3 volts
CE 3	65 volts ±5 volts
CE 2	45 volts ±2 volts
CE 1	30 volts ±2 volts
FGA	20 volts ±2 volts

REV. B, JULY, 1975 5-65

- k. Connect the DVM to the Collector test point.
- I. Press the ERASE pushbutton.
- m. CHECK-That the voltage drops to approximately 115 volts during erase cycle.
- n. Remove the DVM.

13. Adjust BISTABLE FAST Stability and Writing Speed

- a. Press the NON STORE pushbutton.
- b. Set the time-base unit for auto triggering and a sweep rate of two microseconds/division.
- c. Connect the medium-frequency signal generator to the amplifier unit input and adjust the amplitude for a 6.4-division display of a 2.5-megahertz signal (writing speed is 50 divisions/microsecond).
 - d. Turn INTENSITY to midrange.
 - e. Set the time-base unit for single sweep.
 - f. Turn STORAGE LEVEL fully clockwise.
 - g. Press the STORE pushbutton.
 - h. Increase the FAST LEVEL CENTER slightly.
 - i. Press the ERASE pushbutton.
 - j. Repeat steps h and i until the background just begins to fade up (spatter).
 - k. Press the ERASE pushbutton. Note the quality of the stored trace and background.
 - I. Set the time-base unit Level control for nontriggered sweep (ccw).
 - m. Press the ERASE pushbutton.
- n. Wait one minute; then, trigger the sweep by turning the Level control. If the stored waveform and background are the same as that obtained in step k, the stability is properly adjusted.
- o. If the waveform stored in step n is not the same as that stored in step k, connect the DVM to the Fast Mesh test point and set the time-base unit Level control for nontriggered sweep.
- p. If the displayed waveform in step n has faded up, increase the Bistable Fast Prep voltage by adjusting R1783.
 - q. If the waveform in step n did not store, adjust R1783 to lower the Prep voltage and recheck step n.
 - r. Turn the STORAGE LEVEL fully counterclockwise.
 - s. Press the ERASE pushbutton.

- t. CHECK-For either poor or no storage.
- u. Turn the STORAGE LEVEL control to midrange.
- v. Set the time-base unit for auto triggering.
- w. CHECK—That multiple traces are stored by repositioning the trace vertically.
- x. Set the time-base unit for single sweep.
- y. With the STORAGE LEVEL control set at the two o'clock position, ADJUST—the FAST LEVEL CENTER adjustment till the background just begins to fade up.
- z. CHECK—That the signal will store over the center 6 x 8 divisions of the graticule area by alternately repositioning and storing the waveform.

14. Check REDUCED SCAN BISTABLE FAST Writing Speed

- a. Press the NON STORE pushbutton.
- b. Pull the REDUCED SCAN switch on and reduce the INTENSITY.
- c. Set the time-base unit for a sweep rate of 0.2 microsecond/division and auto triggering.
- d. Set the medium-frequency signal generator for 20 megahertz output and adjust the amplitude for a display of 6.4 REDUCED SCAN divisions (writing speed 400 divisions/microsecond).
 - e. Set the time-base unit for single sweep.
 - f. Press the STORE pushbutton.
- g. CHECK—That the signal can be stored in the center 8×10 divisions of the Reduced Scan graticule area.
 - h. Press REDUCED SCAN off and press the NON STORE pushbutton.

15. Adjust VAR PERSIST FAST

- a. Set the time-base unit for auto triggering at a sweep rate of 0.1 microsecond/division.
- b. Adjust the medium-frequency signal generator to display 6.4 divisions of a 7.5-megahertz signal (writing speed of 150 divisions/microsecond).
 - c. Set the time-base unit for single sweep (triggered).
 - d. Press the VAR PERSIST pushbutton.
 - e. Press the STORE pushbutton.
 - f. Set the STORAGE LEVEL control to the two o'clock position.

A 5-67

- g. ADJUST-Variable Persistence Fast Level Offset adjustment R1754 (7) to the point where, after an erase cycle, the background just begins to store. (If background does not store, center R1779 and repeat this step.)
 - h. Turn the INTENSITY to maximum without blooming the trace.
- i. ADJUST—The Variable Persistence Fast Prep Level adjustment R1779 (6) so the signal is stored after an erase cycle.

16. Adjust VAR PERSIST FAST Stability and Writing Speed

- a. Set the time-base unit Level control for non-triggered sweep (ccw).
- b. Press the ERASE pushbutton and wait one minute before triggering a sweep by turning the time-base unit Level control.
- c. Compare the trace stored in step b with a trace stored immediately after an erase cycle (time-base unit Level control set for triggered sweep). If both stored waveforms are the same, the Fast Variable Persistence stability is properly set.
 - d. If the stored waveforms are not the same, connect the DVM to the Fast Mesh test point.
 - e. Set the time-base unit Level control for nontriggered sweep.
 - f. Press the ERASE pushbutton and measure the voltage on the Fast Mesh test point (Prep voltage).
- g. If the stored waveform (triggered after one minute) fades up, lower the Fast Prep voltage by adjusting R1779 (6). Check by repeating steps a, b, and c.
- h. If parts of the waveform did not store in step c, increase the Fast Prep voltage by adjusting R1779 (6) and check by repeating steps a, b, and c.
- i. With the STORAGE LEVEL control set at the two o'clock position, adjust the VP Fast Level Offset adjustment R1754 till the background just begins to store.
- j. CHECK—That the signal will store (and can be viewed for 30 seconds) over the center 6×8 divisions of the graticule area.
 - k. Push the NON STORE pushbutton and pull the REDUCED SCAN switch on.
- I. Set the time-base unit for 0.1 microsecond/division sweep rate, auto triggering, and X10 magnification.
- m. Adjust the medium-frequency signal generator to display 7.1 Reduced Scan divisions of a 100-megahertz signal (writing speed of 2220 divisions/microsecond).
 - n. Set the time-base unit for single sweep.
 - o. Press the STORE pushbutton.
- p. CHECK—That the waveform will store within the center 8×10 divisions of the Reduced Scan graticule area and can be viewed for at least 30 seconds.

- q. Press the NON STORE pushbutton and the REDUCED SCAN switch.
- r. Disconnect all test equipment. This completes the calibration procedure.

OPTIONS

The 7633/R7633 Storage Oscilloscope is available with the following options:

OPTION 1

This option deletes the Readout System. Operation of the instrument is unchanged except there is no alpha-numeric display on the crt.

OPTION 3

This option provides electro-magnetic interference (emi) shielding so the instrument will meet the emi specification given in Section 2.

OPTION 5

This option provides a special fan to allow operation from 50 Hertz to 400 Hertz line frequency.

OPTION 7

This option deletes all rear panel connectors except the Z-AXIS input.

REPLACEABLE ELECTRICAL PARTS

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

SPECIAL NOTES AND SYMBOLS

X000 Part first added at this serial number
00X Part removed after this serial number

ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

ABBREVIATIONS

ACTR	ACTUATOR	PLSTC	PLASTIC
ASSY	ASSEMBLY	QTZ	QUARTZ
CAP	CAPACITOR	RECP	RECEPTACLE
CER	CERAMIC	RES	RESISTOR
CKT	CIRCUIT	RF	RADIO FREQUENCY
COMP	COMPOSITION	SEL	SELECTED
CONN	CONNECTOR	SEMICOND	SEMICONDUCTOR
ELCTLT	ELECTROLYTIC	SENS	SENSITIVE
ELEC	ELECTRICAL	VAR	VARIABLE
INCAND	INCANDESCENT	ww	WIREWOUND
LED	LIGHT EMITTING DIODE	XFMR	TRANSFORMER
NONWIR	NON WIREWOUND	XTAL	CRYSTAL

REV. C JAN. 1975

CROSS INDEX MFR. CODE NUMBER TO MANUFACTURER

	MANUFACTURER	ADDRESS	CITY,STATE,ZIP
00853 01002	SANGAMO ELECTRIC CO., S. CAROLINA DIV. GENERAL ELECTRIC CO., INDUSTRIAL AND	P. O. BOX 128	PICKENS, SC 29671
	POWER CAPACITOR PRODUCTS DEPT.	JOHN ST.	HUDSON FALLS, NY 12839
01121	ALLEN-BRADLEY CO.	1201 2ND ST. SOUTH	MILWAUKEE, WI 53204
01295	TEXAS INSTRUMENTS, INC.,		
	SEMICONDUCTOR GROUP	P. O. BOX 5012	DALLAS, TX 75222
02735	RCA CORP., SOLID STATE DIVISION	ROUTE 202	SOMERVILLE, NY 08876
03508	GENERAL ELECTRIC CO., SEMI-CONDUCTOR		
	PRODUCTS DEPT.	ELECTRONICS PARK	SYRACUSE, NY 13201
03877	TRANSITRON ELECTRONIC CORP.	168 ALBION ST.	WAKEFIELD, MA 01880
04713	MOTOROLA, INC., SEMICONDUCTOR		
05604	PRODUCTS DIV.	5005 E. MCDOWELL RD.	PHOENIX, AZ 85036
05624	BARBER-COLMAN CO.	1300 ROCK ST.	ROCKFORD, IL 61101
07263	FAIRCHILD SEMICONDUCTOR, A DIV. OF	454 77770 07	
07910	FAIRCHILD CAMERA AND INSTRUMENT CORP.		MOUNTAIN VIEW, CA 94042
07910 08806	TELEDYNE SEMICONDUCTOR GENERAL ELECTRIC CO., MINIATURE	12515 CHADRON AVE.	HAWTHORNE, CA 90250
06600		MET A DV	CLEVEL NO. OU 44112
12040	LAMP PRODUCTS DEPT. NATIONAL SEMICONDUCTOR CORP.	NELA PK. COMMERCE DRIVE	CLEVELAND, OH 44112
12697	CLAROSTAT MFG. CO., INC.		DANBURY, CT 06810
12954	DICKSON ELECTRONICS CORP.	LOWER WASHINGTON ST. 8700 E. THOMAS RD.	DOVER, NH 03820 SCOTTSDALE, AZ 85252
12969	UNITRODE CORP.	580 PLEASANT ST.	WATERTOWN, MA 02172
13715	FAIRCHILD SEMICONDUCTOR, A DIV. OF	JOO FILEASANI SI.	WAIERIOWN, MA 021/2
	FAIRCHILD CAMERA AND INSTRUMENT CORP.	4300 REDWOOD HWY.	SAN RAFAEL, CA 94903
14099	SEMTECH CORP.	652 MITCHELL ROAD	NEWBURY PARK, CA 91320
14193	CAL-R, INC.	1601 OLYMPIC BlVD.	SANTA MONICA, CA 90404
14752	ELECTRO CUBE INC.	1710 S. DEL MAR AVE.	SAN GABRIEL, CA 91776
14936	GENERAL INSTRUMENT CORP., SEMICONDUCTOR		
	PRODUCTS GROUP	600 W. JOHN ST.	HICKSVILLE, NY 11802
21845	SOLITRON DEVICES, INC., TRANSISTOR DIV.	1177 Blue HERON BlVD.	RIVIERA BEACH, FL 33404
22526	BERG ELECTRONICS, INC.	YOUK EXPRESSWAY	NEW CUMBERLAND, PA 17070
24931	SPECIALTY CONNECTOR CO., INC.	3560 MADISON AVE.	INDIANAPOLIS, IN 46227
27014	NATIONAL SEMICONDUCTOR CORP.	2900 SAN YSIDRO WAY	SANTA CLARA, CA 95051
50157	N. L. INDUSTRIES, INC., ELECTRONICS		
	DEPT.	P. O. BOX 787	MUSKEGON, MI 49443
56289	SPRAGUE ELECTRIC CO.		NORTH ADAMS, MA 01247
71400	BUSSMAN MFG., DIVISION OF MCGRAW-		
71500	EDISON CO.	2536 W. UNIVERSITY ST.	ST. LOUIS, MO 63107
71590	CENTRALAB ELECTRONICS, DIV. OF	5353 11	
71707	GLOBE-UNION, INC.	5757 N. GREEN BAY AVE.	MILWAUKEE, WI 53201
72982	COTO COIL CO., INC. ERIE TECHNOLOGICAL PRODUCTS, INC.	65 PAVILION AVE.	PROVIDENCE, RI 02905
73138	BECKMAN INSTRUMENTS, INC., HELIPOT DIV.		ERIE, PA 16512
75042	TRW ELECTRONIC COMPONENTS, IRC FIXED	2300 HARBOR BIVD.	FULLERTON, CA 92634
,5012	RESISTORS, PHILADELPHIA DIVISION	401 N. BROAD ST.	PHILADELPHIA, PA 19108
76493	BELL INDUSTRIES, INC.,	TO A THE DITCHE DIT.	THE MADE IN THE TOTAL
	MILLER, J. W., DIV.	19070 REYES AVE.	COMPTON, CA 90224
79727	C-W INDUSTRIES	550 DAVISVILLE RD.	WARMINSTER, PA 18974
80009	TEKTRONIX, INC.	P. O. BOX 500	BEAVERTON, OR 97077
80031	ELECTRA-MIDLAND CORP., MEPCO DIV.,		
	A NORTH AMERICAN PHILLIPS CO.	22 COLUMBIA RD.	MORRISTOWN, NJ 07960
80294	BOURNS, INC., INSTRUMENT DIV.	6135 MAGNOLIA AVE.	RIVERSIDE, CA 92506
82647	TEXAS INSTRUMENTS, INC.,		
	CONTROL PRODUCTS DIV.	34 FOREST ST.	ATTLEBORO, MA 02703
83003	VARO, INC.	800 W. GARLAND AVE.	GARLAND, TX 75040
86684	RCA CORP., ELECTRONIC COMPONENTS	415 S. 5TH ST.	HARRISON, NJ 07029
90201	MALLORY CAPACITOR CO., DIV. OF		
	P. R. MALLORY CO., INC.	3029 E. WASHINGTON ST.	INDIANAPOLIS, IN 46206
91637	DALE ELECTRONICS, INC.	P. O. BOX 609	COLUMBUS, NB 68601
93410	ESSEX INTERNATIONAL, INC., CONTROLS DIV.		
00040	MANSFIELD PLANT	P. O. BOX 1007	MANSFIELD, OH 44903
99942	CENTRALAB SEMICONDUCTOR, CENTRALAB	4501 W *******	DI MONTE CO 01704
	ELECTRONICS, DIV. OF GLOBE-UNION, INC.	4501 N. ARDEN DR.	EL MONTE, CA 91734

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
Al	670-1956-01		CKT BOARD ASSY:MAIN INTERFACE		
A2	670-1370-04		CKT BOARD ASSY:LOGIC	80009 80009	670-1956-01 670-1370-04
A3	670-1371-05		CKT BOARD ASSY:TRIGGER SELECT	80009	670-1371-05
A4	670-3186-00		CKT BOARD ASSY: VERTICAL INTERFACE	80009	670-3186-00
A5	670-3154-01		CKT BOARD ASSY: VERTICAL AMPLIFIER	80009	670-3154-01
A6	670-3017-00		CKT BOARD ASSY:HORIZONTAL AMPLIFIER	80009	670-3017-00
A7	670-1961-00		CKT BOARD ASSY: OUTPUT SIGNALS	80009	670-1961-00
A8	670-2846-00	B010100 B129999	CKT BOARD ASSY: Z-AXIS	80009	670-2846-00
8A	670-2846-02	B130000	CKT BOARD ASSY:Z-AXIS	80009	670-2846-02
A9	670-2844-00	B010100 B059999	CKT BOARD ASSY:ANODE	80009	670-2844-00
A9	670-2844-01	в060000	CKT BOARD ASSY:ANODE	80009	670-2844-01
A10	670-2843-00	-010100 P110000	CKT BOARD ASSY:HIGH VOLTAGE	80009 80009	670-2843-00
All	670-1382-05	B010100 B119999	CKT BOARD ASSY:RECTIFIER CKT BOARD ASSY:RECTIFIER	80009	670-1382-05 670-1382-06
A11 A12	670-1382-06 670-1376-10	B120000 B010100 B109999	CKT BOARD ASSY:REGULATOR	80009	670-1376-10
A12	670-1376-16	B110000	CKT BOARD ASSY:REGULATOR	80009	670-1376-16
A13	670-1900-03		CKT BOARD ASSY:READOUT	80009	670-1900-03
A14	670-2845-00	B010100 B149999	CKT BOARD ASSY:STORAGE	80009	670-2845-00
Al4	670-2845-01	B150000	CKT BOARD ASSY:STORAGE	80009	670-2845-01
Al 5	670-1374-00		CKT BOARD ASSY: VERTICAL INTERCONNECT	80009	670-1374-00
A16	670-0702-03		CKT BOARD ASSY:GRATICULE LIGHTS	80009	670-0702-03
Al7	670-2847-00		CKT BOARD ASSY: MODE SWITCH	80009	670-2847-00
A18	670-4346-00	XB140000	CKT BOARD ASSY: PROTECTION	80009	670-4346-00
B1001	147-0008-00		MOTOR AC:BARBER COLMAN	05624	AYAA13080
Cl	290-0271-00		CAP., FXD, ELCTLT: 9UF, +20-15%, 125V	56289	109D905C2125F2
C3	290-0302-00		CAP.,FXD,ELCTLT:100UF,10%,20V	56289	150D107X9020S2
C5	290-0302-00		CAP., FXD, ELCTLT:100UF,10%,20V	56289	150D107X9020S2
C7	290-0302-00		CAP., FXD, ELCTLT: 100UF, 10%, 20V	56289	150D107x9020S2
C9	290-0271-00		CAP.,FXD,ELCTLT:9UF,+20-15%,125V	56289	109D905C2125F2
C16	283-0068-00		CAP.,FXD,CER DI:0.01UF,+100-0%,500V	56289	19C241
C18	283-0068-00		CAP.,FXD,CER DI:0.01UF,+100-0%,500V	56289	19C241
C44	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	56289	36C600
C48	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	56289	36C600
C55	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C58	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C59	283-0672-00		CAP., FXD, MICA D:200PF, 1%, 500V	00853	D155F201F0
C60	281-0564-00		CAP., FXD, CER DI:24PF, 5%, 500V	72982	301-000C0G0240J
C67	281-0605-00		CAP.,FXD,CER DI:200PF,10%,500V	72982	301-000Y5D0201K
C76	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C89	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C136	281-0547-00		CAP.,FXD,CER DI:2.7PF,10%,500V	72982	301~000C0J0279C
C137	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C138	281-0503-00		CAP.,FXD,CER DI:8PF,+/-0.5PF,500V	72982	301-000C0H0809D
C146	281-0547-00		CAP.,FXD,CER DI:2.7PF,10%,500V	72982	301-000C0J0279C
C148	281-0503-00		CAP.,FXD,CER DI:8PF,+/-0.5PF,500V	72982	301-000C0H0809D
C149	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C152	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C166	281-0547-00		CAP.,FXD,CER DI:2.7PF,10%,500V	72982	301-000C0J0279C
C168	281-0503-00		CAP.,FXD,CER DI:8PF,+/-0.5PF,500V	72982	301-000C0H0809D
C193	283-0026-00		CAP.,FXD,CER DI:0.2UF,+80-20%,25V	56289	274C3
C195	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C196	283-0026-00		CAP.,FXD,CER DI:0.2UF,+80-20%,25V	56289	274C3
C198	283-0026-00		CAP.,FXD,CER DI:0.2UF,+80-20%,25V	56289	274C3
C301	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C305	283-0004-00		CAP.,FXD,CER DI:0.02UF,+80-20%,150V	72982	855016Z5V0203Z
C322	281-0572-00		CAP.,FXD,CER DI:6.8PF,+/-0.5PF,500V	72982	301-000C0H0689D

REV. F MARCH 1976 7-3

Electrical Parts List—7633/R7633 Service

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
			Name & Description		- Mil Fall Nullibel
C329	281-0572-00		CAP.,FXD,CER DI:6.8PF,+/-0.5PF,500V	72982	301-000C0H0689D
C342	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	
C348	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	
C545	281-0550-00		CAP.,FXD,CER DI:120PF,10%,500V	72982	301-000X5P0121K
C552	283-0002-00		CAP.,FXD,CER DI:0.01UF,+80-20%,500V	72982	811-546E103Z
C555	283-0083-00		CAP.,FXD,CER DI:0.0047UF,20%,500V	72982	811-565C472J
C566	281-0064-00		CAP., VAR, PLSTC: 0.25-1.5PF, 600V	72982	530-002
C571	283-0002-00		CAP.,FXD,CER DI:0.01UF,+80-20%,500V	72982	
C574	283-0002-00		CAP.,FXD,CER DI:0.01UF,+80-20%,500V	72982	811-546E103Z
C575	283-0083-00		CAP.,FXD,CER DI:0.0047UF,20%,500V	72982	811-565C472J
C584	201-0546-00		CAR BUR GER DT 22000 10s FOOT	70000	201 000055002014
C586	281-0546-00		CAP., FXD, CER DI:330PF,10%,500V	72982	301-000X5P0331K
C588	281-0064-00 281-0091-00		CAP., VAR, PLSTC: 0.25-1.5PF, 600V	72982	530-002
C591	283-0002-00		CAP., VAR, CER DI:2-8PF	72982	
C591	283-0002-00		CAP.,FXD,CER DI:0.0luf,+80-20%,500V	72982	811-546E103Z
C393	283-0002-00		CAP.,FXD,CER DI:0.01UF,+80-20%,500V	72982	811-546E103Z
C595	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	56289	36C600
C597	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	56289	36C600
C598	283-0111-00		CAP.,FXD,CER DI:0.luf,20%,50V	72982	8131N075651104M
C599	283-0081-00		CAP.,FXD,CER DI:0.1UF,+80-20%,25V	56289	36C600
C605	281-0612-00	B010100 B139999	CAP.,FXD,CER DI:5.6PF,+/-0.5PF,500V	72982	374-001C0H0569D
C605	281-0584-00	B140000	CAP.,FXD,CER DI:100PF,5%,500V	72982	301-000Y5D0101J
C610	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C615	281-0513-00		CAP.,FXD,CER DI:27PF,+/-5.4PF,500V	72982	301-000P2G0270M
C619	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C622	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C637	281-0510-00		CAP., FXD, CER DI:22PF, +/-4.4PF, 500V	72982	301-000C0G0220M
C639	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C643	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C662	283-0080-00		CAP.,FXD,CER DI:0.022UF,+80-20%,25V	56289	19C611
C667	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100~0%,500V	72982	831-516E102P
C669	283-0111-00		CAP.,FXD,CER DI:0.luf,20%,50V	72982	8131N075651104M
C679	283-0111-00		CAP., FXD, CER DI:0.luf, 20%, 50V	72982	8131N075651104M
C806	290-0468-00		CAP.,FXD,ELCTLT:250UF,+75-10%,150V	56289	68D10470
C808	290-0507-00		CAP., FXD, ELCTLT: 1800UF, +75-10%, 75V	56289	68D10472
C809	290-0507-00		CAP., FXD, ELCTLT: 1800UF, +75-10%, 75V	56289	68D10472
C810	285-0555-00		CAP.,FXD,PLSTC:0.1UF,20%,100V	56289	417P10401
0011					
C811	290-0581-00		CAP.,FXD,ELCTLT:14,000UF,+75-10%,25V	56289	68D10489
C813	290-0506-00		CAP.,FXD,ELCTLT:9600UF,+100-10%,25V	56289	68D10471
C814	290~0506-00		CAP.,FXD,ELCTLT:9600UF,+100-10%,25V	56289	68D10471
C820	285~0555-00		CAP.,FXD,PLSTC:0.luF,20%,100V	56289	417P10401
C821	290-0508-00		CAP.,FXD,ELCTLT:18,000UF,+100-1%,15V	56289	68D10444
C823	283-0004-00		CAP., FXD, CER DI:0.02UF, +80-20%, 150V	72982	855016Z5V0203Z
C827	283-0077-00		CAP., FXD, CER DI:330PF, 5%, 500V	56289	40C94A3
C858	283-0078-00		CAP., FXD, CER DI:0.001UF, 20%, 500V	56289	20C114A8
C866	283-0078-00		CAP., FXD, CER DI:0.001UF, 20%, 500V	56289	20C114A8
C876	283-0328-00		CAP., FXD, CER DI:0.03UF, +80-20%, 200V	72982	8131N225651303Z
G000	202 0620 02		GAD TWO MEAN D LOOPS IN TARK		-151-101
C889	283-0638-00		CAP., FXD, MICA D:130PF, 1%, 100V	00853	D151E131F0
C889	290-0415-00 281-0591-00		CAP.,FXD,ELCTLT:5.6UF,10%,35V	56289	150D565X9035B2
C923			CAP., FXD, CER DI:5600PF,20%,200V	72982	3930-0125V0562Z
C936	283-0178-00 283-0078-00		CAP.,FXD,CER DI:0.lUF,+80-20%,100V CAP.,FXD,CER DI:0.00lUF,20%,500V	72982	
0943	203-0070-00		CHI. , LAD, CER DI:U.UUIUF, 208, 500V	56289	20C114A8
C950	283-0083-00		CAP.,FXD,CER DI:0.0047UF,20%,500V	72982	811-565C472J
C975	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	
C979	281-0591-00		CAP., FXD, CER DI:5600PF, 20%, 200V	72982	

7-4 REV. D OCT. 1975

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description		Mfr Part Number
		LII DSCOIII			
C985	283-0083-00		CAP.,FXD,CER DI:0.0047UF,20%,500V	72982	811-565C472J
C1107	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	
C1109	283-0004-00		CAP.,FXD,CER DI:0.02UF,+80-20%,150V		855016Z5V0203Z
C1115	281-0064-00		CAP., VAR, PLSTC: 0.25-1.5PF, 600V	72982	
C1120	283-0004-00		CAP.,FXD,CER DI:0.02UF,+80-20%,150V	72982	855016Z5V0203Z
C1124	283-0004-00		CAP.,FXD,CER DI:0.02UF,+80-20%,150V	72982	855016Z5V0203Z
C1127	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C1138	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	
C1158	281-0512-00		CAP.,FXD,CER DI:27PF,+/-2.7PF,500V	72982	308-000C0G0270K
C1159	281-0064-00		CAP., VAR, PLSTC: 0.25-1.5PF, 600V	72982	
C1163	283-0004-00	B010100 B129999	CAP., FXD, CER DI:0.02UF, +80-20%, 150V	72982	855016Z5V0203Z
Cl163	283-0068-00	B130000	CAP.,FXD,CER DI:0.01UF,+100-0%,500V	56289	19C241
C1164	283-0057-00		CAP.,FXD,CER DI:0.1UF,+80-20%,200V	56289	27 4 C10
C1168	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C1177	283-0010-00		CAP.,FXD,CER DI:0.05UF,+100-20%,50V	56289	273C20
C1178	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020FL
-1105					
C1185	281-0524-00		CAP., FXD, CER DI:150PF,+/-30PF,500V	72982	301-000X5U0151M
C1193	285~0629~00		CAP.,FXD,PLSTC:0.047UF,20%,100V	01002	64F19AB473
C1198 C1201	290-0287-00		CAP., FXD, ELCTLT: 47UF, 20%, 25V	01002	76F02KK470
C1201	283-0345-00 283-0345-00		CAP.,FXD,CER DI:1000PF,10%,10,000V CAP.,FXD,CER DI:1000PF,10%,10,000V	80009 80009	283-0345-00
C1202	203-0345-00		CAP.,FAD,CER DI:1000FF,104,10,000V	80009	283-0345-00
C1206	283-0345-00		CAP.,FXD,CER DI:1000PF,10%,10,000V	80009	283-0345-00
C1210	283-0111-00		CAP.,FXD,CER DI:0.luF,20%,50V	72982	
C1211	283-0105-00		CAP.,FXD,CER DI:0.0luF,+80-20%,2000V	56289	
C1213	283-0082-00		CAP.,FXD,CER DI:0.01UF,+80-20%,4000V	56289	112C29
C1214	283-0082-00		CAP.,FXD,CER DI:0.01UF,+80-20%,4000V	56289	112C29
C1217	283-0105-00		CAP.,FXD,CER DI:0.01UF,+80~20%,2000V	56289	41C316
C1219	285-1077-00		CAP.,FXD,PLSTC:0.10UF,20%,600V	14752	230B1F104
C1224	290-0135-00		CAP.,FXD,ELCTLT:15UF,20%,20V	12954	
C1225	283-0203-00		CAP.,FXD,CER DI:0.47UF,20%,50V	72982	
C1228	283-0271-00		CAP.,FXD,CER DI:0.001UF,20%,4000V	72982	828552Y550102M
C1232	290-0164-00		CAP.,FXD,ELCTLT:1UF,+50~10%,150V	56200	30D10EE1E0D34
C1232	281-0513-00		CAP.,FXD,CER DI:27PF,+/-5.4PF,500V	56289 72982	30D105F150BA4 301-000P2G0270M
C1233	283-0271-00		CAP., FXD, CER DI:2.7FF, +7-3.4FF, 300V	72982	
C1238	283-0271-00		CAP., FXD, CER DI:0.001UF, 20%, 4000V	72982	
C1240	283-0013-00		CAP., FXD, CER DI:0.01UF, +100-0%, 1000V	56289	33C29A7
			, , , , , , , , , , , , , , , , , , , ,		
C1245	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C1250	290-0164-00		CAP.,FXD,ELCTLT:1UF,+50-10%,150V	56289	30D105F150BA4
C1253	281-0513-00		CAP., FXD, CER DI:27PF, +/-5.4PF, 500V	72982	301-000P2G0270M
C1255	283-0261-00		CAP., FXD, CER DI:0.01UF, 20%, 4000V	72982	3888-510E103H
C1256	283-0271-00		CAP.,FXD,CER DI:0.001UF,20%,4000V	72982	828552Y550102M
G1262	201-0542-00		CAD EVD CED DT. 270DD 100 5000	72000	301 AFEVER1071V
C1263 C1264	281-0543-00		CAP.,FXD,CER DI:270PF,10%,500V CAP.,FXD,CER DI:0.001UF,20%,4000V	72982 72982	301-055X5P1271K
C1264 C1270	283-0271-00 283-0003-00		CAP., FXD, CER DI:0.0010F, 20%, 4000V CAP., FXD, CER DI:0.01UF, +80-20%, 150V	72982 72982	828552Y550102M
C1270	283-0003-00		CAP., FXD, CER DI:0.010F, +80-20%, 150V	72982	855-547E103Z 855-547E103Z
C1273	283-0003-00		CAP., FXD, CER DI:0.01UF, +80-20%, 150V	72982	855-547E103Z
	200 0000 00			, 2 302	-00 5.104000
C1415	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C1424	290-0530-00		CAP.,FXD,ELCTLT:68UF,20%,6V	90201	TDC686M006FL
C1444	285-0703-00		CAP.,FXD,PLSTC:0.luF,5%,100V	01002	64F24AC104
C1461	281-0605-00		CAP.,FXD,CER DI:200PF,10%,500V	72982	301-000Y5D0201K
C1476	283-0058-00		CAP.,FXD,CER DI:0.027UF,10%,100V	72982	8131N147W5R273K
g1.403	202 0043 00		OND THE ORD DE A ACCOUNT TO TAKE	====	041 5418000-
C1491	283-0041-00		CAP.,FXD,CER DI:0.0033UF,5%,500V	72982	841-541B332J
C1501	283-0003-00		CAP., FXD, CER DI:0.01UF, +80-20%, 150V	72982	855-547E103Z
C1517	290-0114-00		CAP., FXD, ELCTLT: 47UF, 20%, 6V	56289	150D476X0006B2
				56289	1500396X9010B2
				20203	

Electrical Parts List—7633/R7633 Service

	Talana ata	Control / AA and all Alla		AA.C.,	
Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
		ETT DSCOUL	Name & Description		
C1524	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	
C1534	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	
C1537	283-0111-00		CAP.,FXD,CER DI:0.lUF,20%,50V	72982	
C1542 C1544	283-0111-00 290-0297-00		CAP.,FXD,CER DI:0.lUF,20%,50V	72982	
C1544 C1548	290-0297-00		CAP.,FXD,ELCTLT:39UF,10%,10V	56289	150D396X9010B2
C1346	290-0297-00		CAP., FXD, ELCTLT: 39UF, 10%, 10V	56289	150D396X9010B2
C1550	281-0519-00		CAP.,FXD,CER DI:47PF,+/-4.7PF,500V	72982	308-000C0G0470K
C1565	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	
C1574	283-0059-00		CAP., FXD, CER DI: 1UF, +80-20%, 25V	72982	8141N038651105Z
C1580	281-0605-00	B010100 B149999	CAP., FXD, CER DI:200PF, 10%, 500V	72982	301-000Y5D0201K
C1580	283-0023-00	B150000	CAP., FXD, CER DI:0.1UF, +80-20%, 10V	91418	MX104Z120180
01500	202 2252 22				
C1583 C1597	283-0059-00		CAP.,FXD,CER DI:1UF,+80-20%,25V	72982	
C1601	283-0003-00 290-0114-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C1601	283-0003-00		CAP.,FXD,ELCTLT:47UF,20%,6V CAP.,FXD,CER DI:0.01UF,+80-20%,150V	56289 72982	150D476X0006B2 855-547E103Z
C1608	290-0114-00		CAP., FXD, ELCTLT: 47UF, 20%, 6V	56289	150D476X0006B2
02000	230 0111 00		CHI : II ND I DE LDI : 4701 / 20 0,00	30203	13004700000002
C1611	290-0297-00		CAP.,FXD,ELCTLT:39UF,10%,10V	56289	150D396X9010B2
C1614	283-0088-00	B010100 B149999	CAP., FXD, CER DI:1000PF, 5%, 500V	56289	20C285
C1614	283-0116-00	B150000	CAP., FXD, CER DI:820PF, 5%, 500V	72982	801-5478B21J
				72982	8131N147W5R104K
C1622	290-0244-00		CAP.,FXD,ELCTLT:0.47UF,5%,35V	56289	162D474X5035BC2
01606	202 2152 22				0.5 515-551-
C1636	283-0150-00 281-0584-00		CAP., FXD, CER DI:650PF,5%,200V	72982	835-515B651J
C1637 C1678	283-0065-00		CAP.,FXD,CER DI:100PF,5%,500V CAP.,FXD,CER DI:0.001UF,5%,100V	72982 72982	
C1675	290-0187-00		CAP.,FXD,ELCTLT:4.7UF,20%,35V	90201	
C1703	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
			4 , ,		333 337 237
C1707	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C1711	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C1713	281-0557-00		CAP.,FXD,CER DI:1.8PF,10%,500V	72982	301-000C0K0189B
C1730	281-0523-00		CAP., FXD, CER DI:100PF, +/-20PF, 350V	72982	301-000U2M0101M
C1731	281-0523-00		CAP.,FXD,CER DI:100PF,+/-20PF,350V	72982	301-000U2M0101M
C1736	290-0164-00		CAP., FXD, ELCTLT: 1UF, +50-10%, 150V	56289	30D105F150BA4
C1743	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C1783	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C1789	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C1793	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
C1796	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V		831-516E102P
C1798	283-0092-00		CAP.,FXD,CER DI:0.03UF,+80-20%,200V	72982	
C1831	283-0092-00		CAP.,FXD,CER DI:0.03UF,+80-20%,200V	72982	
C1838 C1924	283-0000-00 290-0536-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V CAP.,FXD,ELCTLT:10UF,20%,25V	72982 90201	831-516E102P TDC106M025FL
Ç132 4	290-0330-00		CAP., F ND, EECTET: 100F, 208, 25V	90201	IDC100M025FL
C1925	290-0536-00		CAP., FXD, ELCTLT: 10UF, 20%, 25V	90201	TDC106M025FL
C1926	290-0535-00		CAP., FXD, ELCTLT: 33UF, 20%, 10V	56289	196D336X0010KA1
C1948	285-1077-00		CAP.,FXD,PLSTC:0.10UF,20%,600V	14752	230B1F104
C1981	283-0092-00		CAP.,FXD,CER DI:0.03UF,+80-20%,200V	72982	845-534E303Z
C1983	283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8131N075651104M
CLOSE	200 0521 00		CAD DVD DICTIM LOGGE COA LOG	00001	mpc107w010cr
C1985	290-0531-00		CAP.,FXD,ELCTLT:100UF,20%,10V	90201	
C1987 C1989	283-0111-00 283-0111-00		CAP.,FXD,CER DI:0.1UF,20%,50V CAP.,FXD,CER DI:0.1UF,20%,50V	72982 72982	
C2101	283-0004-00		CAP.,FXD,CER DI:0.10F,20%,50V CAP.,FXD,CER DI:0.02UF,+80-20%,150V	72982	
C2101	283-0004-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
			. ,		
C2112	283-0077-00		CAP., FXD, CER DI:330PF, 5%, 500V	56289	40C94A3
C2115	290-0534-00		CAP.,FXD,ELCTLT:1UF,20%,35V	56289	196D105X0035HA1
C2117	290-0534-00		CAP.,FXD,ELCTLT:1UF,20%,35V	56289	196D105X0035HA1
C2119	290-0534-00		CAP.,FXD,ELCTLT:1UF,20%,35V	56289	196D105X0035HA1
C2121	283-0594-00		CAP.,FXD,MICA D:0.001UF,1%,100V	00853	D151F102F0

7-6 REV. D MARCH 1976

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
C2135	285-0698-00		CAP.,FXD,PLSTC:0.0082UF,5%,100V	01002	64F10AC682
C2140	283-0103-00		CAP., FXD, CER DI:180PF, 5%, 500V	56289	40C638
C2144	281-0544-00		CAP.,FXD,CER DI:5.6PF,10%,500V	72982	
C2145	290-0534-00		CAP., FXD, ELCTLT: 1UF, 20%, 35V	56289	196D105X0035HA1
C2155	283-0103-00		CAP.,FXD,CER DI:180PF,5%,500V	56289	40C638
C2183	283-0032-00		CAP., FXD, CER DI:470PF,5%,500V	72982	
C2185 C2214	283-0004-00 283-0032-00		CAP.,FXD,CER DI:0.02UF,+80-20%,150V CAP.,FXD,CER DI:470PF,5%,500V	72982 72982	
C2214	283-0002-00		CAP., FXD, CER DI:470FF, 54, 500V	72982	
C2244	283-0004-00		CAP., FXD, CER DI:0.02UF, +80-20%, 150V	72982	855016Z5V0203Z
			,,		
C2255	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	
C2281	283-0054-00	XB040000	CAP.,FXD,CER DI:150PF,5%,200V		855-535U2J151J
C2341	283-0177-00		CAP.,FXD,CER DI:1UF,+80-20%,25V		8131N039651105Z
C2345	283-0159-00		CAP.,FXD,CER DI:18PF,5%,50V		8111A058C0G180J
C2347	281-0627-00		CAP.,FXD,CER DI:1PF,+/-0.25PF,500V	72982	301-000C0G0109C
C2348	283-0185-00		CAP., FXD, CER DI:2.5PF, 5%, 50V	72982	8101A058C0K259B
C2355	283-0159-00		CAP., FXD, CER DI:18PF, 5%, 50V	72982	8111A058C0G180J
C2357	281-0627-00		CAP., FXD, CER DI:1PF,+/-0.25PF,500V	72982	301-000C0G0109C
C2358	283-0185-00		CAP.,FXD,CER DI:2.5PF,5%,50V	72982	8101A058C0K259B
C2366	281-0562-00		CAP.,FXD,CER DI:39PF,10%,500V	72982	301-000U2J0390K
C2376	281-0562-00		CAP.,FXD,CER DI:39PF,10%,500V	72982	301-000U2J0390K
C2370	281-0509-00		CAP.,FXD,CER DI:15PF,+/-1.5PF,500V	72982	301-0000250350K
C2397	281-0509-00		CAP.,FXD,CER DI:15PF,+/-1.5PF,500V	72982	301-000C0G0150K
C2403	283-0003-00		CAP.,FXD,CER DI:0.01UF,+80-20%,150V	72982	855-547E103Z
C2409	283-0077-00		CAP.,FXD,CER DI:330PF,5%,500V	56289	40C94A3
C2411	281-0564-00		CAP.,FXD,CER DI:24PF,5%,500V	72982	301-000C0G0240J
C2416	281-0123-00		CAP., VAR, CER DI:5-25PF, 100V	72982	
C2418	281-0158-00		CAP., VAR, CER D1:7-45PF, 50V	72982	
C2429	283-0000-00		CAP., FXD, CER DI:0.001UF,+100-0%,500V	72982	
C2445	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C2448	281-0661-00		CAP.,FXD,CER DI:0.8PF,+/-0.1PF,500V	72982	301-000C0G0808B
C2456	281-0122-00		CAP., VAR, CER DI:2.5-9PF, 100V	72982	518-000A2.5-9
C2465	283-0103-00		CAP., FXD, CER DI:180PF, 5%, 500V	56289	40C638
C2469	281-0167-00		CAP., VAR, CER DI:9-45PF, 200V	72982	538-011-D 9-45
C2509	283-0649-00		CAP.,FXD,MICA D:105PF,1%,300V	00853	D153F1050F0
C2511	281-0205-00		CAP., VAR, PLSTC: 5.5-65PF, 100V	80031	C010GA/60E
C2524	283-0000-00		CAP.,FXD,CER DI:0.001UF,+100-0%,500V	72982	831-516E102P
C2545	283-0000-00		CAP., FXD, CER DI:0.001UF, +100-0%, 500V	72982	
C2548	281-0661-00		CAP., FXD, CER DI:0.8PF,+/-0.1PF,500V	72982	301-000C0G0808B
C2565	283-0103-00		CAP.,FXD,CER DI:180PF,5%,500V	56289	40C638
02502	202.0111.00		CAD BUD CED DI O leve COA COA	70000	013130755513044
C2593 C2595	283-0111-00 290-0527-00		CAP.,FXD,CER DI:0.lUF,20%,50V CAP.,FXD,ELCTLT:15UF,20%,20V	72982 90201	8131N075651104M TDC156M020FL
C2597	290-0527-00		CAP.,FXD,ELCTLT:15UF,20%,20V	90201	TDC156M020FL
0233.	230 002, 00		GIL : /LND/BBCIBI : LSGL / EG V/ EG V	30201	1501301102011
CR26	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR27	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR33	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR44	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR48	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR84	152-0333-00		SEMICOND DEVICE:SILICON,55V,200MA	80009	152-0333-00
CR85	152-0333-00		SEMICOND DEVICE:SILICON,55V,200MA	80009	152-0333-00
CR93	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR124	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA	07910	lN4152
CR125	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152

REV. C JAN, 1975

	- 1. ·	6 1 1/44 1 11		446	
	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
CR126	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR130	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR140	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR155	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR160	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR341	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR349	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR530	152-0153-00		SEMICOND DEVICE:SILICON,15V,50MA		FD7003
CR531	152-0141-02 152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA SEMICOND DEVICE:SILICON,30V,150MA	07910	ln4152 ln4152
CR532	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 130MA	0/910	104132
CR533	152-0153-00		SEMICOND DEVICE:SILICON, 15V, 50MA	13715	FD7003
CR543	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152
CR544	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152
CR549	152-0153-00		SEMICOND DEVICE:SILICON,15V,50MA		FD7003
CR621	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152
0					
CR622	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR635	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR641	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR672	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR674	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR676	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR806	152-0488-00		SEMICOND DEVICE:SILICON, 200V, 1500MA	14936	KBP02-8
CR808	152-0488-00		SEMICOND DEVICE:SILICON, 200V, 1500MA	14936	KBP02-8
CR811	152-0406-00		SEMICOND DEVICE:SILICON, 200V, 3A	83003	
CR820	152-0423-00		SEMICOND DEVICE:SILICON, 300V, 3A	04713	1N5000
CR821	152-0423-00		SEMICOND DEVICE:SILICON, 300V, 3A	04713	
CR852	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152
CR861	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR867 CR868	152-0061-00		SEMICOND DEVICE:SILICON,175V,100MA	80009	152-0061-00 152-0061-00
CKOOO	152-0061-00		SEMICOND DEVICE; SILICON, 175V, 100MA	60009	132-0081-00
CR875	152-0066-00		SEMICOND DEVICE:SILICON, 400V, 750MA	02735	37304
CR883	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR885	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR888	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR891	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR894	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR895	152-0141-02	XB110000	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	UN4152
CR896	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR903	152-0066-00		SEMICOND DEVICE:SILICON, 400V, 750MA	02735	37304
CR920	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR924	152-0061-00		SEMICOND DEVICE:SILICON,175V,100MA	80009	152-0061-00
CR925	152-0061-00		SEMICOND DEVICE:SILICON,175V,100MA	80009	152-0061-00
CR935	152-0066-00		SEMICOND DEVICE:SILICON,400V,750MA	02735	37304
CR941	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR950	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR951	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR951	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR958	152-0066-00		SEMICOND DEVICE:SILICON,400V,750MA	02735	
CR961	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR973	152-0061-00		SEMICOND DEVICE:SILICON,175V,100MA	80009	152-0061-00
- '					-
CR980	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	ln4152
CR981	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR989	152-0066-00		SEMICOND DEVICE: SILICON, 400V, 750MA	02735	37304

7-8 REV. C JAN. 1975

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description		Mfr Part Number
CR1021	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1023	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA	07910	1N4152
CR1024	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1026	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1131	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1133	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA	07910	1N4152
CR1174	152-0141-02	•	SEMICOND DEVICE: SILICON, 30V, 150MA	07910	ln4152
	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1180	152-0141-02	XB110948	SEMICOND DEVICE: SILICON, 30V, 150MA	07910	1N4152
CR1190	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR1202	152-0409-00		SEMICOND DEVICE:SILICON, 1200V, 5MA	83003	VG-12X
CR1203	152-0409-00		SEMICOND DEVICE: SILICON, 1200V, 5MA	83003	VG-12X
CR1210	152-0409-00		SEMICOND DEVICE:SILICON, 1200V, 5MA	83003	VG-12X
CR1213	152-0409-00		SEMICOND DEVICE:SILICON, 1200V, 5MA		VG-12X
CR1216	152-0331-00		SEMICOND DEVICE:SILICON,800V,25MA	80009	152-0331-00
CR1219	152-0331-00		SEMICOND DEVICE:SILICON,800V,25MA	80009	152-0331-00
	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR1233	152-0242-00		SEMICOND DEVICE:SILICON, 225V, 200MA	12969	
CR1234	152-0242-00		SEMICOND DEVICE: SILICON, 225V, 200MA	12969	NDP341
CR1238	152-0242-00		SEMICOND DEVICE:SILICON,225V,200MA	12969	NDP341
CR1239	152-0242-00		SEMICOND DEVICE:SILICON,225V,200MA	12969	NDP341
CR1251	152-0242-00		SEMICOND DEVICE:SILICON, 225V, 200MA	12969	NDP341
CR1255	152-0242-00		SEMICOND DEVICE:SILICON, 225V, 200MA	12969	NDP341
CR1257	152-0242-00		SEMICOND DEVICE:SILICON,225V,200MA	12969	
CR1258	152-0242-00		SEMICOND DEVICE:SILICON,225V,200MA	12969	NDP341
CR1412	152-0008-00		SEMICOND DEVICE:GERMANIUM,75V,60MA	03877	T12G
CR1413	152-0008-00		SEMICOND DEVICE:GERMANIUM,75V,60MA	03877	T12G
CR1414	152-0008-00		SEMICOND DEVICE: GERMANIUM, 75V, 60MA	03877	T12G
CR1424	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1425	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1478	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1496	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1497	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1498	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR1499	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1500	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1513	152-0141-02	XB150000	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	ln4152
CR1515	152-0141-02	XB150000	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1538	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	ln4152
CR1579	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
				07910	1N4152
CR1621	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
				07910	1N4152
cm1663	150 0141 00		CENTRONE DELICE CTL TOOK 201/ 150M2	07910	
CR1663 CR1682	152-0141-02 152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA SEMICOND DEVICE:SILICON, 30V, 150MA	07910 07910	
CK1002	132-0141-02		SERICOND DEVICE. SILICON, SOV, ISORIA	07310	
CR1710	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1727	152-0040-00		SEMICOND DEVICE:SILICON,600V,1A	14099	
CR1733	152-0040-00		SEMICOND DEVICE:SILICON,600V,1A	14099	
CR1737	152-0040-00		SEMICOND DEVICE:SILICON,600V,1A SEMICOND DEVICE:SILICON,30V,150MA	14099 07910	SC6 1N4152
CR1738 CR1744	152-0141-02 152-0040-00		SEMICOND DEVICE:SILICON, 30V, 150MA SEMICOND DEVICE:SILICON, 600V, 1A	14099	
CD 1760	152-0141-02		CONTONIO DEVICE CILICON 200 150MA	07910	1N4152
CR1769 CR1771	152-0141-02 152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152 1N4152
CR1771	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR1797	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR1821	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR1822	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA	07910	1N4152

7-9

	- 1.	c : 1/14 1 1 1		AAC.	
al. v	Tektronix	Serial/Model No.		Mfr	146 B . M . I
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
CR1836	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1855	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1856	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1874	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1875	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR1896	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1898	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR1912	152-0061-00		SEMICOND DEVICE:SILICON,175V,100MA		152-0061-00
CR1921	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		lN4152
CR1924	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR1926	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR2124	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR2125	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152
CR2127	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR2140	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152
CR2141	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		ln4152
CR2142	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA		ln4152
CR2145	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR2146	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR2156	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2157	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2162	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA	07910	1N4152
CR2163	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR2166	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2167	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	ln4152
CR2170	152~0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N 4 152
CR2171	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR2174	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR2175	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2192	152-0141-02		SEMICOND DEVICE: SILICON, 30V, 150MA	07910	lN4152
CR2193	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR2196	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR2198	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR2226	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152 1N4152
CR2235	THRU			0,520	
CR2266	152-0333-00	XB140000	SEMICOND DEVICE:SILICON,55V,200MA		152-0333-00
CR2331	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2414	152-0612-00		SEMICOND DEVICE: VAR V CAP, 4V, 17.5PF	80009	152-0612-00
CR2456	152-0612-00		SEMICOND DEVICE:VAR V CAP, 4V, 17.5PF	80009	152-0612-00
CR2514 CR2556	152-0612-00 152-0612-00		SEMICOND DEVICE: VAR V CAP, 4V, 17.5PF	80009	152-0612-00
			SEMICOND DEVICE: VAR V CAP, 4V, 17.5PF	80009	152-0612-00
DL2400	119-0368-00		DELAY LINE, ELEC:	80009	119-0368-00
DS1001	150-0121-02		LAMP, INDICATOR: GREEN, 5V, 60MA	80009	150-0121-02
DS1090	150-0029-00		LAMP, INCAND:6.3V,0.20A	08806	349
DS1091	150-0029-00		LAMP, INCAND: 6.3V, 0.20A	08806	349
DS1092	150-0029-00		LAMP, INCAND: 6.3V, 0.20A	08806	349
DS1176	150-0123-01		LAMP, INCAND: 14V, 23MA	80009	150-0123-01
F814	159-0021-00		FUSE, CARTRIDGE: 3AG, 2A, 250V, FAST-BLOW	71400	AGC2
F855	159-0083-00		FUSE, CARTRIDGE: 0.15A, 250V, FAST-BLOW	71400	
F1000	159-0026-00		FUSE, CARTRIDGE: 3AG, 3.2A, 125V, SLOW-BLOW	71400	MDX3-2
J1	131-0767-08		CONNECTOR, RCPT, :PLUG-IN CKT BD, 70 CONTACT	80009	131-0767-08
J2	131-0767-08		CONNECTOR, RCPT, :PLUG-IN CKT BD, 70 CONTACT	80009	131-0767-08
J3	131-0767-07		CONNECTOR, RCPT, : PLUG-IN CKT BD, 70 CONTACT	80009	131-0767-07
J26	131-1003-00		CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
			,		

7-10 REV. E OCT. 1975

	Taktroniy	Sorial / AA	adal Na		Mfr	
Cla Na	Tektronix	Serial/Mo Eff		Name & Description		AAE. Doort Niconships
Ckt No.	Part No	ETT	Dscont	Name & Description	Code	Mfr Part Number
J27	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
J503	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
J508	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
J601 J603	131-1003-00 131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
0003	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
J629	131-0955-00			CONNECTOR, RCPT, : BNC, FEMALE	24931	28JR200-1
J649	131-0955-00			CONNECTOR, RCPT, : BNC, FEMALE	24931	
J679	131-0955-00			CONNECTOR, RCPT, :BNC, FEMALE		28JR200-1
J1047	131-0955-00			CONNECTOR, RCPT, : BNC, FEMALE	24931	
J1049	131-0955-00			CONNECTOR, RCPT, : BNC, FEMALE	24931	
				• • •		
J1050	131-0955-00			CONNECTOR, RCPT, :BNC, FEMALE	24931	28JR200~1
J1103	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
J1134	131-1003-00			CONNECTOR BODY, : CKT BD MT, 3 PRONG	80009	131-1003-00
J1135	131-1003-00			CONNECTOR BODY, : CKT BD MT, 3 PRONG	80009	131-1003-00
J2132	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
J2138	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
J2139	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
J2192	131-1003-00.			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
J2296	131-1003-00			CONNECTOR BODY, :CKT BD MT, 3 PRONG	80009	
J2299	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
J2401	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
J2501	131-1003-00			CONNECTOR BODY, CKT BD MT, 3 PRONG	80009	131-1003-00 131-1003-00
J2534	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
02334	131-1003-00			CONNECTOR BODI, CRI BD MI, 5 FRONG	80009	131-1003-00
K1177	108-0663-00			COIL, REED SW:12V,20MA	71707	SP-12-P
K1177S1	260-1726-00			SWITCH, REED:	80009	260-1726-00
				5.11251,1225,	00005	200 2720 00
L1198	108-0646-00			COIL, RF:80UH	80009	108-0646-00
L1284	108-0605-00			COIL, TUBE DEFLE: Y AXIS ALIGNMENT	80009	108-0605-00
L1295,	108-0721-00			COIL, TUBE DEFL: TRACE ROTATOR	80009	
L1929 ¹						
L1985	108-0538-00			COIL, RF: 2.7UH	76493	70F276A1
L2283	108-0331-00			COIL, RF: 0.75UH	80009	
L2386	108-0606-00			COIL, RF:50NH	80009	108-0606-00
L2396	108-0606-00			COIL, RF: 50NH	80009	108-0606-00
L2441	276-0528-00			SHIELDING BEAD,:0.1UH	80009	276-0528-00
L2448	108-0579-00			TRANSFORMER, RF: 120NH	80009	108-0579-00
L2519	108-0707-00			COTI DE 150NW	80000	100 0707 00
L2519	276-0528-00			COIL,RF:150NH SHIELDING BEAD,:0.1UH	80009 80009	
L2548	108-0579-00			TRANSFORMER, RF: 120NH	80009	
L2595	108-0538-00			COIL, RF: 2.7UH	76493	70F276A1
22333	100 0000 00			0012/12 12 17011	,0455	, or 2 , on 2
LR55	108-0245-00	XB020000		COIL, RF: 3.9UH	80009	108-0245-00
LR193	108-0604-00	B010100	B019999	COIL, RF: 3.2UH	80009	108-0604-00
LR193	108-0245-00	B020000		COIL, RF: 3.9UH	80009	108-0245-00
LR195	108-0604-00	B010100	B019999	COIL, RF: 3.2UH	80009	108-0604-00
LR195	108-0245-00	B020000		COIL, RF: 3.9UH	80009	108-0245-00
LR198	108-0604-00	B010100	B019999	COIL, RF: 3.2UH	80009	108-0604-00
LR198	108-0245-00	B020000		COIL, RF: 3.9UH	80009	108-0245-00
LR2472	108-0777-00			COIL, RF: 100NH	80009	108-0777-00
LR2572	108-0777-00			COIL, RF: 100NH	80009	108-0777-00
D1 264	131 0500 00			COMPACE ELECT O AC THOU TONG	22526	47250
P1260	131-0589-00			CONTACT, ELEC: 0.46 INCH LONG	22526	47350
Q90A,B	151-0232-00			TRANSISTOR:SILICON, NPN, DUAL	12040	NS7348
Q108	151-0232-00			TRANSISTOR:SILICON, PNP	04713	MPS3640
2-00	01/				0-7-5	00010

¹ Furnished with CRT Socket Cable.

REV. C JAN. 1975 7-11

	- 1.		115			
a l. \ \	Tektronix	Serial/Ma	_		Mfr	
Ckt No.	Part No.	_Eff	Dscont	Name & Description	Code	Mfr_Part Number
Q132	151-0199-00			TRANSISTOR:SILICON,PNP	04713	MPS3640
Q137	151-0223-00			TRANSISTOR: SILICON, NPN	80009	151-0223-00
Q142	151-0199-00			TRANSISTOR: SILICON, PNP	04713	MPS3640
Q147	151-0223-00			TRANSISTOR:SILICON,NPN	80009	151-0223-00
Q150	151-0223-00			TRANSISTOR:SILICON,NPN	80009	151-0223-00
Q162	151-0199-00			TRANSISTOR: SILICON, PNP	04713	MPS3640
Q167	151-0223-00			TRANSISTOR: SILICON, NPN	80009	151-0223-00
Q314	151-0190-00			TRANSISTOR:SILICON, NPN	04713	2N3904
Q334	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q336	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q344	151-0221-00			TRANSISTOR:SILICON,PNP	07263	S24849
Q346	151-0221-00			TRANSISTOR:SILICON,PNP	07263	S2 4 849
Q516	151-1022-00			TRANSISTOR: SILICON, JFE, SEL FROM 2N4392	80009	151-1022-00
Q539	151-0301-00			TRANSISTOR:SILICON,PNP	04713	2N2907A
Q547	151-0301-00			TRANSISTOR:SILICON,PNP	04713	2N2907A
0551	151 0102 00			MDANGTOMOD GTT TOON 1800	0.451.0	0
Q551	151-0103-00			TRANSISTOR:SILICON,NPN	04713	2N2219A
Q553	151-0103-00			TRANSISTOR: SILICON, NPN	04713	2N2219A
Q558	151-0406-00			TRANSISTOR:SILICON,PNP	07263	S37880
Q560	151-0347-00			TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q578	151-0406-00			TRANSISTOR:SILICON,PNP	07263	S37880
Q580	151-0347-00			MDANGTOMOD CTT TOON ADV	00000	151 0247 00
Q606				TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q618	151-0221-00 151-0221-00			TRANSISTOR:SILICON, PNP TRANSISTOR:SILICON, PNP	07263	S24849
Q620	151-0220-00	B010100	B139999	TRANSISTOR:SILICON,PNP TRANSISTOR:SILICON,PNP	07263 80009	
Q620	151-0221-00	B140000	B139997	TRANSISTOR:SILICON, PNP	07263	151-0220-00 S24849
Q631	151-0190-00	52.0000		TRANSISTOR:SILICON, NPN	04713	2N3904
Q634	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904 2N3904
Q640	151-0220-00			TRANSISTOR:SILICON, PNP	80009	151~0220-00
Q662	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q666	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q672	151-0188-00			TRANSISTOR:SILICON, PNP	04713	2N3906
~				, , , , , , , , , , , , , , , , , , , ,	•	
Q827	151-0223-00			TRANSISTOR:SILICON,NPN	80009	151-0223-00
Q829	151-0223-00			TRANSISTOR:SILICON,NPN	80009	151-0223-00
Q835	151-0334-00			TRANSISTOR:SILICON,NPN	80009	151-0334-00
Q850	151-0337-00			TRANSISTOR:SILICON,NPN	21845	93SX287
Q852	151-0276-00			TRANSISTOR:SILICON,PNP	04713	2N5087
Q860	151-0347-00			TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q863	151-0347-00			TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q869	151-0347-00			TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q872	151-0279-00			TRANSISTOR:SILICON, NPN	07263	S25381
Q87 4	151-0336-00	B010100	B090758	TRANSISTOR:SILICON, NPN	21845	935x288
2074	1					
Q874	151-0487-00	B090759		TRANSISTOR:SILICON,NPN	80009	151-0487-00
Q876A,B	151-0232-00			TRANSISTOR:SILICON, NPN, DUAL	12040	
Q886A,B	151-0232-00			TRANSISTOR:SILICON, NPN, DUAL	12040	
Q896	151-0228-00			TRANSISTOR:SILICON, PNP, SEL FROM 2N4888	07263	
Q900	151-0347-00			TRANSISTOR: SILICON, NPN	80009	151-0347-00
0003	151_0226_00	D010100	D000770	MDANGTOMOD GIVIGON AND	0101-	0.2011.00
Q903	151-0336-00	B010100	в090578	TRANSISTOR, SILICON, NPN	21845	935X288
Q903	151-0487-00	в090759		TRANSISTOR, SILICON, NPN	80009	151-0487-00
Q908 Q909	151-0292-00			TRANSISTOR:SILICON,NPN	01295	
Q909 Q910	151-0292-00 151-0292-00			TRANSISTOR:SILICON,NPN	01295	
N2TO	131-0535-00			TRANSISTOR:SILICON,NPN	01295	TIS100
Q919A,B	151-0232-00			TRANSISTOR:SILICON, NPN, DUAL	12040	NS7348
Q926	151-0232-00			TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q931	151-0260-02			TRANSISTOR:SILICON,NPN	04713	2N5859
~					04,23	

7-12 REV. E OCT. 1975

	- 1.	c : 1444	1.1.51			
-1	Tektronix	Serial/M			Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
Q933	151-0337-00	B010100	в090758	TRANSISTOR:SILICON,NPN	21845	93SX287
Q933	151-0487-00	B090759		TRANSISTOR:SILICON,NPN	80009	151-0487-00
Q936A,B	151-0232-00			TRANSISTOR: SILICON, NPN, DUAL	12040	NS7348
Q943A,B	151-0232-00			TRANSISTOR: SILICON, NPN, DUAL	12040	
Õ952	151-0134-00			TRANSISTOR:SILICON,PNP	04713	2N2905A
~ .					01.10	211230311
Q956	151-0260-02			TRANSISTOR: SILICON, NPN	04713	2N5859
Õ958	151-0337-00	B010100	B090758	TRANSISTOR:SILICON,NPN	21845	
Q958	151-0487-00	в090759		TRANSISTOR:SILICON,NPN	80009	151-0487-00
Q964A,B	151-0232-00			TRANSISTOR:SILICON,NPN,DUAL		NS7348
Q985	151-0136-00			TRANSISTOR:SILICON,NPN	02735	35495
~-					02,00	00.100
Q988	151-0337-00			TRANSISTOR: SILICON, NPN	21845	93SX287
Q1105	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q1111	151-0192-00			TRANSISTOR:SILICON,NPN,SEL FROM MPS6521	80009	151-0192-00
Q1113	151-0347-00			TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q1122	151-0406-00			TRANSISTOR:SILICON,PNP		S37880
ZIILL	131 0400 00			TRANSISTOR:SIDICON, FMF	07203	337660
01127	151-0188-00			TRANSISTOR:SILICON, PNP	04713	2N3906
01136	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q1140	151-0188-00			TRANSISTOR:SILICON, PNP	04713	
Q1145	151-0190-00			TRANSISTOR:SILICON,NPN	04713	
Q1150	151-0188-00				04713	
21130	131-0100-00			TRANSISTOR:SILICON, PNP	04/13	2N3906
Q1155	151-0188-00			TRANSISTOR:SILICON, PNP	04713	2N3906
Q1164	151-0406-00					
Q1167				TRANSISTOR: SILICON, PNP	07263	S37880
	151-0347-00			TRANSISTOR:SILICON,NPN	80009	
Q1184	151-0126-00			TRANSISTOR:SILICON,NPN	07263	2N2484
Q1187	151-0188-00			TRANSISTOR:SILICON,PNP	04713	2N3906
Q1190	151-0136-00			TPANSTSTOD STITCON NDN	02725	35405
Q1195				TRANSISTOR:SILICON,NPN	02735	35495
Q1280	151-0140-00			TRANSISTOR:SILICON,NPN	02735	36568
	151-0188-00			TRANSISTOR:SILICON,PNP	04713	
Q1287	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q1416	151-0223-00			TRANSISTOR: SILICON, NPN	80009	151-0223-00
Q1426	151-0342-00			TRANSTEROD STITCON DND	07263	25:42:40
~				TRANSISTOR:SILICON,PNP	07263	2N4249
Q1428	151-0342-00			TRANSISTOR:SILICON,PNP	07263	2N4249
Q1440	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q1446	151-0190-00			TRANSISTOR:SILICON,NPN	04713	2N3904
Q1450	151-0410-00			TRANSISTOR: SILICON, PNP	04713	SPS6765
Q1453	151_0410_00			MDANGICMOD.CII ICON DUD	0.473.0	anac7c5
	151-0410-00			TRANSISTOR:SILICON,PNP	04713	SPS6765
Q1475 Q1478	151-0410-00			TRANSISTOR:SILICON,PNP	04713	
	151-0192-00			TRANSISTOR:SILICON,NPN,SEL FROM MPS6521	80009	151-0192-00
Q1481	151-0410-00			TRANSISTOR:SILICON, PNP	04713	
Q1485	151-0410-00			TRANSISTOR:SILICON, PNP	04713	SPS6765
Q1493	151-0192-00			TRANSISTOR:SILICON,NPN,SEL FROM MPS6521	80008	151-0192-00
Q1493 Q1513	151-0410-00			TRANSISTOR:SILICON, PNP		
Q1518	151-0508-00			•	04713	SPS6765
Q1524	151-0342-00			TRANSISTOR:SILICON, NPN, UNIJUNCTION	03508	
				TRANSISTOR:SILICON,PNP	07263	
Q1539	151-0341-00			TRANSISTOR:SILICON, NPN	07263	2N3565
Q1541	151-0341-00			TRANSISTOR:SILICON,NPN	07263	2N3565
Q1553	151-0341-00					
Q1553 Q1564				TRANSISTOR:SILICON,NPN	07263	
-	151-0341-00			TRANSISTOR:SILICON,NPN	07263	
Q1569	151-0341-00			TRANSISTOR:SILICON,NPN	07263	
Q1576	151-0341-00			TRANSISTOR:SILICON, NPN	07263	2N3565
Q1585	151-0341-00			TRANSISTOR:SILICON,NPN	07363	2N2565
-				•	07263	2N3565
Q1587	151-0341-00			TRANSISTOR: SILICON, NPN	07263	2N3565
Q1595	151-0341-00			TRANSISTOR: SILICON, NPN	07263	2N3565

REV. D APR. 1975

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
					
Q1613 Q1621	151-0341-00 151-0508-00	B010100 B149999X	·	07263	2N3565
Q1625	151-0300-00		TRANSISTOR:SILICON, NPN, UNIJUNCTION TRANSISTOR:SILICON, NPN	03508 07263	X13T520 2N3565
01631	151-0508-00		TRANSISTOR:SILICON,NPN,UNIJUNCTION	03508	X13T520
Q1644	151-0341-00		TRANSISTOR:SILICON,NPN	07263	2N3565
~				5.200	2110003
Q1652	151-0341-00		TRANSISTOR: SILICON, NPN	07263	2N3565
Q1661	151-0342-00		TRANSISTOR:SILICON, PNP	07263	2N4249
Q1667	151-0342-00		TRANSISTOR:SILICON, PNP	07263	2N4249
Q1673	151-0342-00		TRANSISTOR:SILICON, PNP	07263	2N4249
Q1686	151-0342-00		TRANSISTOR:SILICON,PNP	07263	2N4249
Q1692	151-0342-00		TRANSISTOR:SILICON,PNP	07263	2N4249
Q1697	151-0342-00		TRANSISTOR:SILICON,PNP	07263	2N4249 2N4249
Q1701	151-0410-00		TRANSISTOR:SILICON,PNP	04713	SPS6765
Q1704	151-0410-00		TRANSISTOR:SILICON, PNP	04713	SPS6765
Õ1708	151-0347-00		TRANSISTOR:SILICON,NPN	80009	151-0347-00
			·		
Q1711	151-0347-00		TRANSISTOR:SILICON, NPN	80009	151-0347-00
Q1718	151-0188-00		TRANSISTOR:SILICON, PNP	04713	2N3906
Q1723	151-0347-00		TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q1728	151-0444-00		TRANSISTOR:SILICON,NPN	80009	151-0444-00
Q1734	151-0444-00		TRANSISTOR: SILICON, NPN	80009	151-0444-00
Q1739	151-0444-00		TRANSISTOR:SILICON, NPN	80009	151-0444-00
Q1743	151-0444-00		TRANSISTOR:SILICON,NPN	80009	151-0444-00
Õ1761	151-0341-00		TRANSISTOR:SILICON,NPN	07263	2N3565
Q1775	151-0342-00		TRANSISTOR:SILICON, PNP	07263	2N4249
Q1788	151-0410-00		TRANSISTOR: SILICON, PNP	04713	SPS6765
Q1790	151-0410-00		TRANSISTOR:SILICON, PNP	04713	SPS6765
Q1795	151-0347-00		TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q1798	151-0347-00		TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q1805	151-0341-00		TRANSISTOR:SILICON,NPN	07263	2N3565
Q1810	151-0341-00		TRANSISTOR: SILICON, NPN	07263	2N3565
Q1825	151-0410-00		TRANSISTOR:SILICON, PNP	04713	SPS6765
Q1828	151-0347-00		TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q1835	151-0347-00		TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q1844	151~0341-00		TRANSISTOR: SILICON, NPN	07263	2N3565
Q1847	151-0341-00		TRANSISTOR:SILICON, NPN	07263	2N3565
01.050	151 0410 00				
Q1859	151-0410-00		TRANSISTOR:SILICON,PNP	04713	SPS6765
Q1862 Q1880	151-0347-00		TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q1883	151-0410-00 151-0347-00		TRANSISTOR:SILICON,PNP TRANSISTOR:SILICON,NPN	04713	SPS6765
Q1903	151-0410-00		TRANSISTOR:SILICON, NPN TRANSISTOR:SILICON, PNP	80009 0 471 3	151-0347-00 SPS6765
2-200	01-0 00		THE TOTAL PROPERTY OF THE TANK	04713	3130703
Q1906	151-0347-00		TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q1925	151-0410-00		TRANSISTOR: SILICON, PNP	04713	
Q1928	151~0347-00		TRANSISTOR: SILICON, NPN	80009	151-0347-00
Q2108	151-0223-00		TRANSISTOR:SILICON,NPN	80009	151-0223-00
Q2112	151-0221-00		TRANSISTOR:SILICON, PNP	07263	S24849
02138	151-0188-00		TRANSISTOR:SILICON,PNP	04713	2N2006
Q2153	151-0192-00		TRANSISTOR:SILICON,PNP TRANSISTOR:SILICON,NPN,SEL FROM MPS6521	80009	2N3906 151-0192-00
Q2159	151-0192-00		TRANSISTOR: SILICON, NPN	04713	2N3904
	151-0232-00		TRANSISTOR:SILICON,NPN,DUAL	12040	
Q2223	151-0190-00		TRANSISTOR:SILICON,NPN	04713	2N3904
			•		
Q2225	151-0188-00		TRANSISTOR:SILICON, PNP	04713	2N3906
Q2229	151-0190-00		TRANSISTOR: SILICON, NPN	04713	2N3904
Q2240	151-0190-00		TRANSISTOR: SILICON, NPN	04713	2N3904

7-14 REV. D MARCH 1976

	Tektronix	Serial/Mo	del No.		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
Q2286	151-0188-00			TRANSISTOR:SILICON, PNP	04713	2N3906
Q2287	151-0188-00			TRANSISTOR: SILICON, PNP	04713	2N3906
Q2296	151-0188-00			TRANSISTOR:SILICON,PNP	04713	
Q2299	151-0188-00			TRANSISTOR:SILICON, PNP	04713	2N3906
	151-0232-00			TRANSISTOR: SILICON, NPN, DUAL	12040	NS7348
Q2386	151-0447-00			TRANSISTOR: SILICON, NPN	80009	151-0447-00
Q2390	151-0190-00			TRANSISTOR:SILICON,NPN	04713	
Q2396	151-0447-00 151-0447-00			TRANSISTOR:SILICON,NPN	80009	151-0447-00
Q2405 Q2423	151-0302-00			TRANSISTOR:SILICON,NPN TRANSISTOR:SILICON,NPN	80009 04713	151-0447-00 2N2222A
22423	131 0302 00			TRANSISTON, SILICON, MEN	04713	ZNZZZZA
Q2427	151-0302-00			TRANSISTOR:SILICON,NPN	04713	2N2222A
Q2430	151-0192-00			TRANSISTOR: SILICON, NPN, SEL FROM MPS6521	80009	151-0192-00
Q2439	151-1022-00			TRANSISTOR:SILICON, JFE, SEL FROM 2N4392	80009	151-1022-00
Q2441	151-0271-00			TRANSISTOR: SILICON, PNP	01295	SKA4504
Q2455	151-0448-00			TRANSISTOR: SILICON, NPN	80009	151-0448 - 00
Q2468	151-0451-00			TRANSISTOR:SILICON,NPN	80009	151-0451-00
Q2505	151-0447-00			TRANSISTOR:SILICON,NPN	80009	151-0447-00
Q2530	151-0192-00			TRANSISTOR:SILICON, NPN, SEL FROM MPS6521	80009	151-0192-00
Q2541	151-0271-00			TRANSISTOR:SILICON, PNP	01295	
Q2552	151-0301-00			TRANSISTOR:SILICON, PNP	04713	2N2907A
Q2555	151-0448-00			TRANSISTOR:SILICON,NPN	80009	151-0448-00
Q2568	151-0451-00			TRANSISTOR:SILICON,NPN	80009	151-0451-00
22000	-0- 0-0- 00				00003	131 0131 00
R12	321-0260-00			RES.,FXD,FILM:4.99K OHM,1%,0.125W	75042	CEAT0-4991F
R14	321-0260-00			RES.,FXD,FILM:4.99K OHM,1%,0.125W	75042	CEATO-4991F
R20	315-0103-00			RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R21	315-0103-00			RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R26	315-0122-00			RES.,FXD,COMP:1.2K OHM,5%,0.25W	01121	CB1225
R28	315-0510-00			RES.,FXD,COMP:51 OHM,5%,0.25W	01121	CB5105
R29	315-0510-00			RES.,FXD,COMP:51 OHM,5%,0.25W		CB5105
R31	315-0122-00			RES.,FXD,COMP:1.2K OHM,5%,0.25W	01121	CB1225
R33	315-0682-00			RES.,FXD,COMP:6.8K OHM,5%,0.25W	01121	CB6825
R34	315-0122-00			RES.,FXD,COMP:1.2K OHM,5%,0.25W	01121	CB1225
R35	315-0122-00			RES.,FXD,COMP:1.2K OHM,5%,0.25W	01121	CB1225
R36	321-0231-00			RES.,FXD,FILM:2.49K OHM,1%,0.125W		CEAT0-2491F
R37	315-0152-00			RES., FXD, COMP: 1.5K OHM, 5%, 0.25W		CB1525
R38	315-0152-00			RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB1525
R39	315-0152-00			RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB1525
D42	315-0105-00			DEC. EVD. COND. IN OUN Es A 3577	01101	CP10FF
R42 R44	315-0105-00 315-0152-00			RES.,FXD,COMP:1M OHM,5%,0.25W		CB1055
R44 R47	315-0132-00			RES.,FXD,COMP:1.5K OHM,5%,0.25W RES.,FXD,COMP:24K OHM,5%,0.25W		CB1525 CB2435
R48	315-0152-00			RES., FXD, COMP:1.5K OHM, 5%, 0.25W		CB1525
R49	315-0104-00			RES.,FXD,COMP:100K OHM,5%,0.25W		CB1045
				, ,		
R50	315-0223-00			RES.,FXD,COMP:22K OHM,5%,0.25W		CB2235
R51	321-0193-00			RES.,FXD,FILM:1K OHM,1%,0.125W		CEATO-1001F
R53	315-0223-00			RES.,FXD,COMP:22K OHM,5%,0.25W RES.,FXD,FILM:1K OHM,1%,0.125W		CB2235
R54 R55	321-0193-00 315-0470-00	B010100	B019999X	RES.,FXD,COMP:47 OHM,1%,0.125W		CEATO-1001F CB4705
r.J.J	313-04/0-00	POTOTOO	ついすうコココソ	TOO, 11 AD 100HE : 47 OHE 1.36, U. 23W	ULIZI	CD4/03
R56	315-0471-00	B010100	B019999	RES.,FXD,COMP:470 OHM,5%,0.25W		CB4715
R56	321-0169-00	B020000	_	RES.,FXD,FILM:562 OHM,1%,0.125W		CEATO-5620F
R57	315-0682-00	B010100	B019999	RES., FXD, COMP: 6.8K OHM, 5%, 0.25W		CB6825
R57	321-0266-00	B020000		RES.,FXD,FILM:5.76K OHM,1%,0.125W	•	CEATO-5761F
R58	315-0101-00			RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015

7-15

	Taleksamiss	Carial/Akadal Na		Mfr	
Cla Na	Tektronix	Serial/Model No. Eff Dscont	Name & Description		Mfr Part Number
Ckt No.	Part No.				
R59	315-0103-00	B010100 B019999	RES., FXD, COMP:10K OHM,5%,0.25W		CB1035
R59	321-0282-00	B020000	RES.,FXD,FILM:8.45K OHM,1%,0.125W		CEAT0-8451F
R61	315-0512-00		RES.,FXD,COMP:5.1K OHM,5%,0.25W		CB5125
R62	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R63	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R67	315-0512-00		RES.,FXD,COMP:5.1K OHM,5%,0.25W	01121	CB5125
R74	315-0510-00		RES., FXD, COMP:51 OHM, 5%, 0.25W		CB5105
R76	315-0222-00		RES., FXD, COMP: 2.2K OHM, 5%, 0.25W		CB2225
R77	315-0362-00		RES.,FXD,COMP:3.6K OHM,5%,0.25W		CB3625
R78	315-0392-00		RES., FXD, COMP: 3.9K OHM, 5%, 0.25W	01121	CB3925
R80	321-0258-00		DEC. EVD ETTN. 4. 75V OVN. 10. O. 105M	75040	OD1#0 4751#
R82	315-0510-00		RES., FXD, FILM: 4.75K OHM, 1%, 0.125W		CEAT0-4751F CB5105
R83	315-0510-00		RES.,FXD,COMP:51 OHM,5%,0.25W RES.,FXD,COMP:51 OHM,5%,0.25W		
R84	315-0510-00		RES.,FXD,COMP:51 OHM,5%,0.25W		CB5105 CB5105
R85	315-0310-00		RES.,FXD,COMP:91 OHM,5%,0.25W		CB4715
NOS	313-0471-00		RES.,FAD,COMP:470 OHM,54,0.25W	01121	CB4/15
R86	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W	01121	CB1005
R88	321-0230-00		RES.,FXD,FILM:2.43K OHM,1%,0.125W	75042	CEAT0-2431F
R89	315-0910-00		RES.,FXD,COMP:91 OHM,5%,0.25W	01121	CB9105
R90	315-0362-00		RES.,FXD,COMP:3.6K OHM,5%,0.25W	01121	CB3625
R92	321-0202-00		RES.,FXD,FILM:1.24K OHM,1%,0.125W	75042	CEAT0-1241F
R93	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R95	315-0152-00		RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB1525
R96	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W		CB5115
R98	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W		CB5115
R99	315-0221-00		RES.,FXD,COMP:220 OHM,5%,0.25W		CB2215
			,	52	
R101	315-0302-00		RES.,FXD,COMP:3K OHM,5%,0.25W	01121	CB3025
R104	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R105	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R106	315-0273-00		RES.,FXD,COMP:27K OHM,5%,0.25W		CB2735
R109	321-0243-00		RES.,FXD,FILM:3.32K OHM,1%,0.125W		CEAT0-3321F
R110	321-0097-00		RES.,FXD,FILM:100 OHM,1%,0.125W		CEAT0-1000F
R112	321-0097-00		RES.,FXD,FILM:100 OHM,1%,0.125W	75042	
R115	317-0392-00	XB130000	RES.,FXD,COMP:3.9K OHM,5%,0.125W		BB3925
R123	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R124 R125	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W		CB5115
KI25	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R126	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R130	315-0102-00		RES., FXD, COMP:1K OHM, 5%, 0.25W		CB1025
R132	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W		CB2225
R133	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R134	315-0821-00		RES.,FXD,COMP:820 OHM,5%,0.25W	01121	CB8215
R135	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W	01121	CB1235
R136	315-0681-00		RES.,FXD,COMP:12R OHM,5%,0.25W		CB1235 CB6815
R137	315-0221-00		RES.,FXD,COMP:220 OHM,5%,0.25W		CB2215
R138	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R140	315-0391-00		RES.,FXD,COMP:390 OHM,5%,0.25W		CB3915
			1=21/2.12/0011 1050 0111/30/012311	01121	000710
R141	315-0122-00		RES.,FXD,COMP:1.2K OHM,5%,0.25W		CB1225
R142	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W		CB2225
R143	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R144	315-0821-00		RES.,FXD,COMP:820 OHM,5%,0.25W		CB8215
R145	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W	01121	CB1235
R146	315-0681-00		RES.,FXD,COMP:680 OHM,5%,0.25W	01121	CB6815
R147	315-0181-00		RES.,FXD,COMP:180 OHM,5%,0.25W	01121	CB1815
R148	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725

7-16 REV. D OCT. 1975

	- 1				
-1	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R149	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W	01121	CB1005
R150	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R152	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W		CB1015
R154	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W		CB2235
R155	315-0391-00		RES.,FXD,COMP:390 OHM,5%,0.25W		CB3915
			, ,		
R157	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R159	315-0510-00		RES.,FXD,COMP:51 OHM,5%,0.25W	01121	CB5105
R160	315-0391-00		RES.,FXD,COMP:390 OHM,5%,0.25W	01121	CB3915
R161	315-0122-00		RES.,FXD,COMP:1.2K OHM,5%,0.25W	01121	CB1225
R162	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W	01121	CB2225
R163	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R164	315~0821-00		RES., FXD, COMP:820 OHM, 5%, 0.25W	01121	CB8215
R165	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W	01121	CB1235
R166	315-0681-00		RES., FXD, COMP: 680 OHM, 5%, 0.25W	01121	CB6815
R168	315-0472-00		RES., FXD, COMP:4.7K OHM, 5%, 0.25W	01121	CB4725
R301	307-0106-00		RES., FXD, COMP: 4.7 OHM, 5%, 0.25W	01121	CB47G5
R303	307-0106-00		RES.,FXD,COMP:4.7 OHM,5%,0.25W	01121	CB47G5
R305	307-0103-00		RES., FXD, COMP: 2.7 OHM, 5%, 0.25W		CB27G5
R307	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W		CEATO-51R10F
R308	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W	75042	CEATO-51R1OF
R310	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R312	315-0562-00		RES.,FXD,COMP:5.6K OHM,5%,0.25W		CB5625
R314	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R315	315-0513-00		RES.,FXD,COMP:51K OHM,5%,0.25W		CB5135
R317	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W	75042	CEATO-51R10F
R319	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W		CEATO-51R1OF
R320	321-0218-00		RES.,FXD,FILM:1.82K OHM,1%,0.125W		CEAT0-1821F
R321	321-0061-00		RES.,FXD,FILM:42.2 OHM,1%,0.125W	75042	
R322	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	
R323	321-0061-00		RES., FXD, FILM: 42.2 OHM, 1%, 0.125W	75042	CEATO-42R2OF
R324	322-0184-00		DEE DUD ETTH DOG OUN IS O DEW	75042	OFF
R324	321-0061-00		RES., FXD, FILM: 806 OHM, 1%, 0.25W	75042	
R327	322-0184-00		RES., FXD, FILM: 42.2 OHM, 1%, 0.125W	75042	
R328	321-0061-00		RES., FXD, FILM: 806 OHM, 1%, 0.25W		CEBT0-8060F CEAT0-42R20F
R329	315-0101-00		RES.,FXD,FILM:42.2 OHM,1%,0.125W RES.,FXD,COMP:100 OHM,5%,0.25W		CB1015
K329	313-0101-00		RES., PAD, COMP: 100 ONM, 54,0.25W	01121	CB1013
R330	321-0049-00		RES., FXD, FILM: 31.6 OHM, 1%, 0.125W	75042	CEATO-31R60F
R332	321-0220-00		RES.,FXD,FILM:1.91K OHM,1%,0.125W		CEATO-1911F
R333	321-0143-00		RES., FXD, FILM: 301 OHM, 1%, 0.125W	75042	
R334	321-0082-00		RES.,FXD,FILM:69.8 OHM,1%,0.125W	75042	
R335	321-0049-00		RES., FXD, FILM:31.6 OHM, 1%, 0.125W	75042	
11000	022 0015 00		Tablification of the property	75042	CLATO-SIROOF
R336	321-0129-00		RES.,FXD,FILM:215 OHM.1%.0.125W	75042	CEATO-2150F
R337	321-0129-00		RES.,FXD,FILM:215 OHM,1%,0.125W		CEATO-2150F
R338	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W		CEATO-51R10F
R339	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W		CEATO-51R1OF
R340	321-0214-00		RES.,FXD,FILM:1.65K OHM,1%,0.125W	75042	
R341	315-0680-00		RES.,FXD,COMP:68 OHM,5%,0.25W	01121	CB6805
R342	315-0331-00		RES.,FXD,COMP:330 OHM,5%,0.25W		CB3315
R344	321-0040-00		RES.,FXD,FILM:25.5 OHM,1%,0.125W		CEATO-25R5F
R345	315-0561-00		RES.,FXD,COMP:560 OHM,5%,0.25W	01121	
R346	321-0040-00		RES.,FXD,FILM:25.5 OHM,1%,0.125W	75042	
			• •		
R348	315-0331-00		RES.,FXD,COMP:330 OHM,5%,0.25W	01121	CB3315
R349	315-0680-00		RES.,FXD,COMP:68 OHM,5%,0.25W	01121	CB6805
R350	321-0214-00		RES.,FXD,FILM:1.65K OHM,1%,0.125W	75042	CEAT0~1651F

REV. C JAN. 1975 7-17

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R352	315-0430-00	277 2300111	RES.,FXD,COMP:43 OHM,5%,0.25W	01121	
R501	321-1068-01		RES.,FXD,FILM:50.5 OHM,0.5%,0.125W	75042	
R502	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R503	321-1068-01		RES.,FXD,FILM:50.5 OHM,0.5%,0.125W		CEATO-50R50D
R505	321-0291-00	B010100 B069999	RES.,FXD,FILM:10.5K OHM,1%,0.125W		CEATO-1052F
R505	321-0297-00	B070000	RES.,FXD,FILM:12.1K OHM,1%,0.125W		CEATO-1212F
R506 R508	321-0069-00 321-0184-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W RES.,FXD,FILM:806 OHM,1%,0.125W		CEATO-51R1OF CEATO-8060F
R509	321-0164-00		RES.,FXD,FILM:50.1 OHM,1%,0.125W		CEATO-5080F
R511	321-0005-00		RES., FXD, FILM: 402 OHM, 1%, 0.125W	75042	
				750 12	02:110 10201
R512	311-1224-00		RES., VAR, NONWIR:500 OHM, 20%, 0.50W	80294	3389F-P31-501
R513	321-0150-00		RES.,FXD,FILM:357 OHM,1%,0.125W	75042	
R514	323-0253-00		RES.,FXD,FILM:4.22K OHM,1%,0.50W		CECT0-4221F
R515	323-0253-00		RES.,FXD,FILM:4.22K OHM,1%,0.50W		CECT0-4221F
R516	315-0151-00		RES.,FXD,COMP:150 OHM,5%,0.25W	01121	CB1515
R517	321-0212-00		RES.,FXD,FILM:1.58K OHM,1%,0.125W	75042	CEATO-1581F
R518	315-0683-00		RES.,FXD,COMP:68K OHM,5%,0.25W		CB6835
R519	321-0119-00		RES., FXD, FILM: 169 OHM, (NOM VALUE), SEL		CEATO-1690F
R520	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W		CB1045
R521	321-0261-00		RES.,FXD,FILM:5.11K OHM,1%,0.125W	75042	CEAT0-5111F
DC00	221 2261 22		770 700 7710 7 110 AVA 1 A 1 A 1 A 1 A 1 A 1 A 1 A 1 A 1 A	5 5040	5111-
R522 R524	321-0261-00 321-0236-00		RES.,FXD,FILM:5.11K OHM,1%,0.125W RES.,FXD,FILM:2.8K OHM,1%,0.125W		CEATO-5111F
R525	311-1223-00		RES., VAR, NONWIR: 250 OHM, 10%, 0.50W	80294	CEATO-2801F 3389F-P32-251
R526	321-0236-00		RES., FXD, FILM: 2.8K OHM, 1%, 0.125W		CEATO-2801F
R529	315-0473-00		RES., FXD, COMP: 47K OHM, 5%, 0.25W		CB4735
-10-2			imply hoped in the only sty of 25%	OIIZI	CD4733
R531	323-0253-00		RES.,FXD,FILM:4.22K OHM,1%,0.50W		CECT0-4221F
R532	323-0253-00		RES.,FXD,FILM:4.22K OHM,1%,0.50W		CECT0-4221F
R534	321-0269-00		RES.,FXD,FILM:6.19K OHM,1%,0.125W		CEATO-6191F
R535 R536	311-1225-00		RES., VAR, NONWIR:1K OHM, 20%, 0.50W	80294	3389F-P31-102
кээб	321-0269-00		RES.,FXD,FILM:6.19K OHM,1%,0.125W	75042	CEAT0-6191F
R540	321-0236-00		RES.,FXD,FILM:2.8K OHM,1%,0.125W	75042	CEAT0-2801F
R542	315-0300-00		RES.,FXD,COMP:30 OHM,5%,0.25W		CB3005
R543	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	75042	CEATO-1001F
R544	315-0300-00		RES., FXD, COMP: 30 OHM, 5%, 0.25W	01121	CB3005
R548	321 - 0236-00		PES.,FXD,FILM:2.8K OHM,1%,0.125W	75042	CEAT0-2801F
R549	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01123	CB1025
R551	308-0243-00		RES.,FXD,WW:240 OHM,5%,3W	91637	
R555	315-0470-00		RES.,FXD,COMP:47 OHM,5%,0.25W	01121	
R556	301-0393-00		RES., FXD, COMP: 39K OHM, 5%, 0.50W		EB3935
R558	323-0231-00		RES., FXD, FILM: 2.49K OHM, 1%, 0.50W	75042	CECT0-2491F
DEFO	215 0302 05		DEC. THE COURT IS SEEN TO THE		1005
R559 R560	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R561	315-0104-00 315-0100-00		RES.,FXD,COMP:100K OHM,5%,0.25W		CB1045
R562	323-0114-00		RES.,FXD,COMP:10 OHM,5%,0.25W RES.,FXD,FILM:150 OHM,1%,0.50W	75042	CB1005 CECT0-1500F
R563	323-0114-00		RES.,FXD,FILM:130 OHM,1%,0.50W	75042	CECTO-1500F CECTO-47R50F
	110 0000 00		120.71127112111111	75042	CDC10 47K501
R565	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R566	323-0301-00		RES.,FXD,FILM:13.3K OHM,1%,0.50W	75042	
R567	323-0300-00		RES.,FXD,FILM:13K OHM,1%,0.50W	75042	
R569	321-0143-00		RES.,FXD,FILM:301 OHM,1%,0.125W	75042	
R570	321-0314-00		RES.,FXD,FILM:18.2K OHM,1%,0.125W	75042	CEAT0-1822F
R571	321-0246-00		RES.,FXD,FILM:3.57K OHM,1%,0.125W	75042	CEATO-3571F
R573	321-0273-00		RES.,FXD,FILM:6.81K OHM,1%,0.125W	75042	CEATO-6811F
R574	323-0352-00		RES.,FXD,FILM:45.3K OHM,1%,0.50W	75042	

7-18 REV. C JAN. 1975

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description		Mfr Part Number
R575	315-0470-00	EII D3COIII	RES.,FXD,COMP:47 OHM,5%,0.25W		CB4705
R576	301-0393-00		RES.,FXD,COMP:39K OHM,5%,0.25W		EB3935
R578	323-0231-00		RES., FXD, FILM: 2.49K OHM, 1%, 0.50W		CECT0-2491F
R579	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R580	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W		CB1045
R581	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W	01121	CB1005
R582	323-0114-00		RES.,FXD,FILM:150 OHM,1%,0.50W		CECT0-1500F
R583	323-0066-00		RES.,FXD,FILM:47.5 OHM,1%,0.50W		CECTO-47R50F
R584	315-0684-00		RES.,FXD,COMP:680K OHM,5%,0.25W		CB6845
R585	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R586	323-0301-00		RES.,FXD,FILM:13.3K OHM,1%,0.50W	75042	CECTO-1332F
R587	323-0300-00		RES., FXD, FILM:13K OHM, 1%, 0.50W		CECTO-1302F
R589	321-0143-00		RES., FXD, FILM:301 OHM, 1%, 0.125W		CEATO-3010F
R593	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R595	307-0106-00		RES.,FXD,COMP:4.7 OHM,5%,0.25W		CB47G5
R597	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W	01121	CB1005
R598	307-0106-00		RES.,FXD,COMP:4.7 OHM,5%,0.25W		CB47G5
R599	307-0103-00		RES.,FXD,COMP:2.7 OHM,5%,0.25W		CB27G5
R602	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W		CB1015
R605 R607	315-0561-00		RES.,FXD,COMP:560 OHM,5%,0.25W		CB5615
R608	321-0020-00 321-0089-00		RES., FXD, FILM: 15.8 OHM, 1%, 0.125W		CEATO-15R80F
R610	307-0106-00		RES.,FXD,FILM:82.5 OHM,1%,0.125W RES.,FXD,COMP:4.7 OHM,5%,0.25W		CEATO-82R50F CB47G5
R612	321-0193-00	B010100 B139999	RES.,FXD,FILM:1K OHM,1%,0.125W		CEATO-1001F
R612	321-0612-00	B140000	RES., FXD, FILM: 500 OHM, 1%, 0.125W		MFF1816D500F
R613	321-0222-00	B010100 B139999	RES., FXD, FILM: 2K OHM, 1%, 0.125W		CEATO-2001F
R613	321-0193-00	B140000	RES.,FXD,FILM:1K OHM,1%,0.125W		CEATO-100 LF
R615	315-0240-00		RES., FXD, COMP:24 OHM, 5%, 0.25W		CB2405
R617	321-0020-00		RES.,FXD,FILM:15.8 OHM,1%,0.125W		CEATO-15R80F
R619	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R622	321-0208-00		RES.,FXD,FILM:1.43K OHM,1%,0.125W	75042	CEATO-1431F
R623	307-0106-00		RES.,FXD,COMP:4.7 OHM,5%,0.25W	01121	CB47G5
DCGE	221-0224-00		DEC. DUD DITTU O IV OUN IN A 1050	75040	A101D
R625 R627	321-0224-00		RES.,FXD,FILM:2.1K OHM,1%,0.125W		CEATO-2101F
R630	315-0101-00 315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W		CB1015
R633	315-0222-00		RES.,FXD,COMP:100 OHM,5%,0.25W RES.,FXD,COMP:2.2K OHM,5%,0.25W		CB1015 CB2225
R636	315-0222-00		RES.,FXD,COMP:240 OHM,5%,0.25W		CB2225 CB2415
ROSO	313 0241 00		MLD: 11 ND (COMP : 240 OMM 54 0.25W	01121	CB2413
R637	315-0152-00		RES.,FXD,COMP:1.5K OHM,5%,0.25W	01121	CB1525
R639	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R641	315-0272-00		RES.,FXD,COMP:2.7K OHM,5%,0.25W	01121	CB2725
R6 ` 43	315-0220-00		RES.,FXD,COMP:22 OHM,5%,0.25W	01121	CB2205
R645	321-0260-00		RES.,FXD,FILM:4.99K OHM,1%,0.125W	75042	CEAT0-4991F
R647	321-0190-00		RES.,FXD,FILM:931 OHM,1%,0.125W	75042	CEV&C-0310E
R651	315-0201-00		RES.,FXD,COMP:200 OHM,5%,0.125W		CEATO-9310F CB2015
R652	315-0123-00		RES., FXD, COMP: 12K OHM, 5%, 0.25W		CB1235
R654	315-0201-00		RES., FXD, COMP:200 OHM, 5%, 0.25W		CB2015
R655	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W		CB1235
			, , , , , , , , , , , , , , , , , , , ,		*
R657	315-0201-00		RES.,FXD,COMP:200 OHM,5%,0.25W	01121	CB2015
R658	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W		CB1235
R660	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W		CB1015
R662	315-0821-00		RES.,FXD,COMP:820 OHM,5%,0.25W	01121	CB8215
R663	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	75042	CEATO-1001F
R667	315-0561-00		RES.,FXD,COMP:560 OHM,5%,0.25W	01121	CB5615
R669	307-0106-00		RES.,FXD,COMP:380 OHM,5%,0.25W	01121	CB3615 CB47G5
R670	321-0143-00		RES., FXD, FILM: 301 OHM, 1%, 0.125W	75042	
-			· , , ,,	. 50 .2	

REV. D MARCH 1976 7-19

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R672	321-0180-00		RES.,FXD,FILM:732 OHM,1%,0.125W	75042	CEATO-7320F
R673	321-0226-00		RES.,FXD,FILM:2.21K OHM,1%,0.125W		CEATO-2211F
R675	321-0189-00		RES., FXD, FILM:909 OHM, 1%, 0.125W		CEATO-9090F
R677	315-0390-00		RES., FXD, COMP: 39 OHM, 5%, 0.25W		CB3905
R679	307-0106-00		RES., FXD, COMP: 4.7 OHM, 5%, 0.25W		CB47G5
11075	00, 0200 00		Tabliff The youth 1117 office of the same	02221	021,03
R805	307-0113-00	B010100 B029999X	RES.,FXD,COMP:5.1 OHM,5%,0.25W	01121	CB51G5
R806	302-0473-00		RES.,FXD,COMP:47K OHM,10%,0.50W		EB4731
R808	302-0223-00		RES.,FXD,COMP:22K OHM,10%,0.50W		EB2231
R809	302-0223-00		RES.,FXD,COMP:22K OHM,10%,0.50W		EB2231
R811	302-0472-00		RES.,FXD,COMP:4.7K OHM,10%,050W		EB4721
R814	302-0472-00		RES.,FXD,COMP:4.7K OHM,10%,050W	01121	EB4721
R821	302-0472-00		RES.,FXD,COMP:4.7K OHM,10%,050W		EB4721
R822	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R823	315-0151-00		RES.,FXD,COMP:150 OHM,5%,0.25W		CB1515
R824	315-0470-00		RES.,FXD,COMP:47 OHM,5%,0.25W		CB4705
			1,221,2,12,001 11. 012.,00,0120	01111	021.03
R826	315-0302-00		RES.,FXD,COMP:3K OHM,5%,0.25W	01121	CB3025
R827	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R830	315-0911-00		RES.,FXD,COMP:910 OHM,5%,0.25W		CB9115
R831	315-0392-00		RES., FXD, COMP: 3.9K OHM, 5%, 0.25W		CB3925
R833	315-0683-00		RES., FXD, COMP:68K OHM, 5%, 0.25W		CB6835
11055	313 0003 00		RES. J. R.D. J. COM. LOOK OM. J. 38, U. 25#	01121	CB0633
R837	307-0054-00		RES.,FXD,COMP:3.6 OHM,5%,0.50W	01121	EB36GB
R838	307-0054-00		RES.,FXD,COMP:3.6 OHM,5%,0.50W		EB36GB
R853	315-0473-00		RES.,FXD,COMP:47K OHM,5%,0.25W		CB4735
R855	323-0309-00		RES., FXD, FILM:16.2K OHM, 1%, 0.50W		CECTO-1622F
R856	323-0289-00		RES., FXD, FILM: 10K OHM, 1%, 0.50W		CECTO-1002F
1000	323-0209-00		RES., PAD, PILM: TOK ORM, 14,0.50W	75042	CECTO-1002F
R858	321-0924-07		RES.,FXD,FILM:40K OHM,0.1%,0.125W	75042	CEAT9-4002B
R859	321-0924-07		RES., FXD, FILM: 40K OHM, 0.1%, 0.125W		CEAT9-4002B
R860	315-0684-00		RES.,FXD,COMP:680K OHM,5%,0.25W		CB6845
R862	315-0204-00		RES.,FXD,COMP:200K OHM,5%,0.25W		CB2045
R864	315-0203-00		RES., FXD, COMP: 200K OHM, 5%, 0.25W		CB2045
1004	313-0203-00		RES., PAD, COMP. 20R ONN, 54,0.25W	01121	CB2035
R866	315-0332-00		RES.,FXD,COMP:3.3K OHM,5%,0.25W	01121	CB3325
R867	315-0824-00		RES., FXD, COMP:820K OHM, 5%, 0.25W		CB8245
R870	315-0122-00		RES.,FXD,COMP:1.2K OHM,5%,0.25W		CB1225
R872	315-0151-00		RES., FXD, COMP:150 OHM, 5%, 0.25W		CB1515
R875	308-0677-00		RES., FXD, WW:1 OHM, 5%, 3W		BWH1R000J
11075	300 0077 00		IGB: /F KD /WW: I OHEL/5%/5W	73042	BMIIROUU
R876	315-0154-00		RES.,FXD,COMP:150K OHM,5%,0.25W	01121	CB1545
R877	315-0511-00		RES., FXD, COMP:510 OHM, 5%, 0.25W		CB5115
R878	315-0104-00		RES., FXD, COMP:100K OHM, 5%, 0.25W		CB1045
R879	315-0124-00		RES., FXD, COMP:120K OHM, 5%, 0.25W		CB1245
R880	323-0272-00		RES., FXD, FILM: 6.65K OHM, 1%, 0.50W		CECTO-6651F
			two the transfer of the transfer of the	13042	C-CIV-OUJIF
R881	311-1223-00		RES., VAR, NONWIR: 250 OHM, 10%, 0.50W	80294	3389F-P32-251
R882	323-0206-00		RES., FXD, FILM:1.37K OHM, 1%, 0.50W		CECTO-1371F
R883	321-0223-00		RES., FXD, FILM: 2.05K OHM, 1%, 0.125W		CEATO-2051F
R884	323-0306-00		RES., FXD, FILM:15K OHM, 1%, 0.50W		CECTO-1502F
R886	315-0224-00		RES., FXD, COMP:220K OHM, 5%, 0.25W		CB2245
	010 011.00		Tablifi No your 1220N Old 175 0 you 25 N	01121	CD2245
R889	315-0911-00		RES.,FXD,COMP:910 OHM,5%,0.25W	01121	CB9115
R890	323-0264-00		RES., FXD, FILM: 5.49K OHM, 1%, 0.50W		CECTO~5491F
R891	315-0473-00		RES.,FXD,COMP:47K OHM,5%,0.25W		CB4735
R892	315-0682-00		RES.,FXD,COMP:47K OHM,5%,0.25W		CB6825
R894	315-0082-00		RES.,FXD,COMP: 0.8K OHM,5%,0.25W		CB2455
NOT	313-0243-00		RED., FAD, CORE: 2.48 ORM, 35, U. 23W	01121	CD2433
R896	301-0363-00		RES.,FXD,COMP:36K OHM,5%,0.50W	01121	EB3635
R898	315-0182-00		RES.,FXD,COMP:136K OHM,5%,0.35W		CB1825
R901	315-0151-00		RES.,FXD,COMP:1.8K OHM,5%,0.25W		CB1515
11,504	J13 0131-00		100.11 ND 100m . 150 Om 150,0.250	01121	OP4943

7-20 REV. C JAN. 1975

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description		Mfr Part Number
R903	308-0677-00				
R904	308-0679-00		RES.,FXD,WW:1 OHM,5%,3W RES.,FXD,WW:0.51 OHM,5%,2W	75042 75042	BWH1R000J BWHR5100J
R906	315-0304-00		RES.,FXD,COMP:300K OHM,5%,0.25W		CB3045
R907	315-0753-00		RES., FXD, COMP:75K OHM,5%,0.25W		CB7535
R908	315-0431-00		RES.,FXD,COMP:430 OHM,5%,0.25W		CB4315
R910	315-0681-00		RES.,FXD,COMP:680 OHM,5%,0.25W		CB6815
R911	315-0563-00		RES., FXD, COMP:56K OHM, 5%, 0.25W		CB5635
R912	315-0182-00		RES.,FXD,COMP:1.8K OHM,5%,0.25W		CB1825
R915 R916	321-1296-07 321-0924-07		RES.,FXD,FILM:12K OHM,0.1%,0.125W RES.,FXD,FILM:40K OHM,0.1%,0.125W		CEAT9-1202B CEAT9-4002B
ROLO	321-0324-07		RES., FAD, FIDM: 40K ORM, 0.14, 0.125W	73042	CEA19-4002B
R918	301-0683-00		RES., FXD, COMP:68K OHM, 5%, 0.50W	01121	EB6835
R921	315-0912-00		RES.,FXD,COMP:9.1K OHM,5%,0.25W		CB9125
R922	315-0623-00		RES.,FXD,COMP:62K OHM,5%,0.25W	01121	CB6235
R923	315-0512-00		RES.,FXD,COMP:5.1K OHM,5%,0.25W	01121	CB5125
R924	315-0623-00		RES.,FXD,COMP:62K OHM,5%,0.25W	01121	CB6235
D027	335 0472 00		DEG THE COME A THE CURL EN A SEM	01101	an 4305
R927 R932	315-0472-00 315-0182-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W RES.,FXD,COMP:1.8K OHM,5%,0.25W		CB4725 CB1825
R935	308-0678-00		RES.,FXD,WW:0.1 OHM,5%,2W		BWHR1000J
R936	301-0273-00		RES.,FXD,COMP:27K OHM,5%,0.50W	01121	
R937	321-0151-00		RES.,FXD,FILM:365 OHM,1%,0.125W	75042	
			, , ,		
R938	321-0330-00		RES.,FXD,FILM:26.7K OHM,1%,0.125W	75042	CEAT0-2672F
R939	321-0409-00		RES.,FXD,FILM:178K OHM,1%,0.125W		CEAT0-1783F
R940	315-0822-00		RES.,FXD,COMP:8.2K OHM,5%,0.25W		CB8225
R942	315-0154-00		RES.,FXD,COMP:150K OHM,5%,0.25W		CB1545
R945	321-0332-07		RES.,FXD,FILM:28K OHM,0.1%,0.125W	75042	CEAT9-2802B
R946	321-1296-07		RES.,FXD,FILM:12K OHM,0.1%,0.125W	75042	CEAT9-1202B
R948	315-0914-00		RES.,FXD,COMP:910K OHM,5%,0.25W		CB9145
R950	315-0681-00		RES.,FXD,COMP:680 OHM,5%,0.25W		CB6815
R952	301-0303-00		RES.,FXD,COMP:30K OHM,5%,0.50W	01121	EB3035
R954	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R956	307-0103-00		RES., FXD, COMP: 2.7 OHM, 5%, 0.25W		CB27G5
R957 R958	315-0151-00		RES.,FXD,COMP:150 OHM,5%,0.25W		CB1515
R959	308-0678-00 308-0680-00		RES.,FXD,WW:0.1 OHM,5%,2W RES.,FXD,WW:0.045 OHM,10%,3W	75042 91637	
R961	315-0221-00		RES.,FXD,COMP:220 OHM,5%,0.25W		CB2215
ROOL	313-0221-00		145. J. R. J. COM. 1220 OILT, 35 JU. 2311	01121	CBZZIJ
R963	315-0682-00		RES.,FXD,COMP:6.8K OHM,5%,0.25W	01121	СВ6825
R966	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W	01121	CB1235
R967	315-0364-00		RES.,FXD,COMP:360K OHM,5%,0.25W	01121	CB3645
R970	321-0926-07		RES.,FXD,FILM:4K OHM,0.1%,0.125W		CEAT9~4001B
R971	321-0924-07		RES.,FXD,FILM:40K OHM,0.1%,0.125W	75042	CEAT9-4002B
R973	315-0683-00		RES.,FXD,COMP:68K OHM,5%,0.25W	01121	CB6835
R974	315-0303-00		RES., FXD, COMP: 30K OHM, 5%, 0.25W		CB3035
R975	315-0362-00		RES., FXD, COMP:3.6K OHM, 5%, 0.25W		CB3625
R977	315-0184-00		RES.,FXD,COMP:180K OHM,5%,0.25W		CB1845
R979	315-0822-00		RES., FXD, COMP:8.2K OHM, 5%, 0.25W		CB8225
R980	315-0164-00		RES.,FXD,COMP:160K OHM,5%,0.25W		CB1645
R983	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R985	304-0470-00		RES.,FXD,COMP:47 OHM,10%,1W		GB4701
R986 R989	315-0122-00		RES.,FXD,COMP:1.2K OHM,5%,0.25W	01121	
KJOJ	308-0678-00		RES.,FXD,WW:0.1 OHM,5%,2W	75042	BWHR1000J
R991	315-0753-00		RES.,FXD,COMP:75K OHM,5%,0.25W	01121	CB7535
R993	315-0241-00		RES.,FXD,COMP:240 OHM,5%,0.25W	01121	CB2415
R994	315-0124-00		RES.,FXD,COMP:120K OHM,5%,0.25W		CB1245

REV. C JAN. 1975 7-21

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R995	315-0562-00		RES.,FXD,COMP:5.6K OHM,5%,0.25W		CB5625
R1018	315-0102-00		RES., FXD, COMP:1K OHM, 5%, 0.25W		CB1025
R1019	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R1020	315-0150-00	B010100 B060000	RES.,FXD,COMP:15 OHM,5%,0.25W	01121	CB1505
R1020	307-0107-00	B070000	RES., FXD, COMP: 5.6 OHM, 5%, 0.25W	01121	CB56G5
R1022	315-0303-00		RES.,FXD,COMP:30K OHM,5%,0.25W	01121	CB3035
R1095 ¹	311-1055-00		RES., VAR, NONWIR: 1K OHM 20%, 0.50W		CM-40034
R1101	315-0470-00		RES.,FXD,COMP:47 OHM,5%,0.25W		CB4705
R1103	315-0471-00		RES.,FXD,COMP:470 OHM,5%,0.25W		CB4715
R1106	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1107	315-0123-00		RES.,FXD,COMP:12K OHM,5%,0.25W	01121	CB1235
R1115	317-0392-00		RES.,FXD,COMP:3.9K OHM,5%,0.125W		CB3925
R1116	323-0312-00		RES.,FXD,FILM:17.4K OHM,1%,0.50W		CECTO-1742F
R1118	315-0121-00		RES.,FXD,COMP:120 OHM,5%,0.25W		CB1215
R1120	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
-1107	215 2562 22				
R1121	315-0562-00		RES.,FXD,COMP:5.6K OHM,5%,0.25W		CB5625
R1123	315-0392-00		RES.,FXD,COMP:3.9K OHM,5%,0.25W		CB3925
R1124 R1125	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R1123	315-0102-00 315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025 CB1025
NIIZ/	313-0102-00		RES.,FAD,COMPILE ORM,58,0.25W	01121	CB1025
R1130	321-0325-00		RES.,FXD,FILM:23.7K OHM,1%,0.125W	75042	CEAT0-2372F
R1131	315-0513-00		RES.,FXD,COMP:51K OHM,5%,0.25W	01121	CB5135
R1133	321-0311-00		RES., FXD, FILM: 16.9K OHM, 1%, 0.125W	75042	CEAT0-1692F
R1135	315-0470-00		RES.,FXD,COMP:47 OHM,5%,0.25W	01121	CB4705
R1138	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R1141	311-1233-00		RES., VAR, NONWIR: 50K OHM, 10%, 0.50W	80294	3389F-P34-503
R1142	315-0472-00		RES., FXD, COMP: 4.7K OHM, 5%, 0.25W	01121	CB4725
R1144	315~0623-00		RES.,FXD,COMP:62K OHM,5%,0.25W	01121	CB6235
R1147	311-1228-00		RES., VAR, NONWIR: 10K OHM, 20%, 0.50W	80294	3389F-P31-103
R1148	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R1152	315-0621-00		RES., FXD, COMP: 620 OHM, 5%, 0.25W	01121	CB6215
R1154	315-0183-00		RES.,FXD,COMP:18K OHM,5%,0.25W	01121	CB1835
R1157	321-0336-00		RES.,FXD,FILM:30.9 OHM,1%,0.125W	75042	CEAT0-3092F
R1158	321-0362-00		RES.,FXD,FILM:57.6K OHM,1%,0.125W	75042	CEAT0-5762F
R1159	321-0441-00		RES.,FXD,FILM:383K OHM,1%,0.125W	75042	CEATO-3833F
R1161	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R1162	315-0244-00		RES.,FXD,COMP:240K OHM,5%,0.25W	01121	CB2445
R1164	315-0822-00		RES., FXD, COMP:8.2K OHM, 5%, 0.25W	01121	CB8225
R1166	315-0121-00		RES.,FXD,COMP:120 OHM,5%,0.25W		CB1215
R1168	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R1171	311-1233-00		RES., VAR, NONWIR:50K OHM, 10%, 0.50W	80294	3389F-P34-503
R1173	316-0225-00		RES.,FXD,COMP:2.2M OHM,10%,0.25W	01121	
R1174	315-0475-00		RES., FXD, COMP: 4.7M OHM, 5%, 0.25W	01121	CB4755
R1175	307-0106-00	*	RES.,FXD,COMP:4.7 OHM,5%,0.25W	01121	CB47G5
R1176	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R1178	311-1233-00		RES., VAR, NONWIR:50K OHM, 10%, 0.50W	80294	3389F-P34-503
R1179	321-0424-00	B010100 B079999	RES.,FXD,FILM:255K OHM,1%,0.125W	75042	CEATO-3013F
R1179	321-0431-00	B080000 B110947	RES.,FXD,FILM:301K OHM,1%,0.125W	75042	CEATO-3013F
R1179	321-0429-00	B110948	RES.,FXD,FILM:287K OHM,1%,0.125W		
R1180	315-0754-00	B010100 B110947	RES.,FXD,COMP:750K OHM,5%,0.25W	01121	CB7545
R1180	315-0624-00	B110948	RES.,FXD,COMP:620K OHM,5%,0.25W		
R1181	315-0244-00	B010100 B110947	RES.,FXD,COMP:240K OHM,5%,0.25W	01121	CB2445
R1181	315-0164-00	B110948	RES.,FXD,COMP:160K OHM,5%,0.25W	01121	CB1605

¹ Furnished as a unit with S1095.

7-22 REV. D MARCH 1976

	Tektronix	Serial/Model No.		Mfr	
Ckt No.		Eff Dscont	Name & Description		Mfr Part Number
_		LII DSCOIII			
R1182 R1183	315-0103-00		RES., FXD, COMP:10K OHM, 5%, 0.25W		CB1035
R1184	315-0102-00 315-0473-00		RES.,FXD,COMP:1K OHM,5%,0.25W RES.,FXD,COMP:47K OHM,5%,0.25W		CB1025 CB4735
R1185	315-0474-00		RES.,FXD,COMP:47K OHM,5%,0.25W		CB4735
R1188	315-0102-00		RES.,FXD,COMP:1470K OHM,5%,0.25W		CB1025
14200	313 0102 00		Idd. J. R. Jeon. 12R Old J.	ULILI	CBIOZS
R1189	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R1192	315-0562-00		RES., FXD, COMP: 5.6K OHM, 5%, 0.25W		CB5625
R1204	301-0305-00		RES.,FXD,COMP:3M OHM,5%,0.50W	01121	EB3055
R1205	301-0305-00		RES.,FXD,COMP:3M OHM,5%,0.50W	01121	EB3055
R1206	301-0305-00		RES.,FXD,COMP:3M OHM,5%,0.50W	01121	EB3055
R1207	301-0305-00		RES.,FXD,COMP:3M OHM,5%,0.50W		EB3055
R1208	301-0305-00		RES.,FXD,COMP:3M OHM,5%,0.50W		EB3055
R1210	315-0102-00		RES., FXD, COMP:1K OHM, 5%, 0.25W		CB1025
R1211	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1214	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R1216	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R1217	315-0102-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1025
R1219	315-0302-00		RES., FXD, COMP: 3K OHM, 5%, 0.25W		CB3025
R1221	316-0825-00		RES., FXD, COMP:8.2M OHM, 10%, 0.25W		CB8251
R1223	315-0434-00		RES.,FXD,COMP:430K OHM,5%,0.25W		CB4345
R1224	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
Rl226A,E	3 307-0386-03		RES.,FXD,FILM:HYBRID	80009	307-0386-03
R1226C,					
R1230	311-1584-00		RES., VAR, NONWIR: 50K OHM, 10%, 0.50W	12697	
R1232	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
m1000	215 2122 22		TRA TUR COUR 100 OUT 50 0 050		1-0.5
R1233	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1235 R1236	315-0754-00		RES.,FXD,COMP:750K OHM,5%,0.25W		CB7545
R1239	315-0754-00 315-0915-00		RES.,FXD,COMP:750K OHM,5%,0.25W RES.,FXD,COMP:9.1M OHM,5%,0.25W		CB7545 CB9155
R1240	315-0103-00		RES.,FXD,COMP:9.1M OHM,5%,0.25W		CB1035
1022-10	313 0103 00		RED: / I AD / COM / LOR OUR / J 5 7 0 . 2 3 W	OTTEL	CD1033
R1242	311-1257-00		RES., VAR, NONWIR: 5M OHM, 20%, 0.50W	80294	3389F-P32-505
R1243	311-1257-00		RES., VAR, NONWIR:5M OHM, 20%, 0.50W	80294	
R1245_	321-0486-00		RES.,FXD,FILM:1.13M OHM,+/-1%,0.125W	75042	
R1246 ¹					
R1248	311-1233-00		RES., VAR, NONWIR: 50K OHM, 10%, 0.50W	80294	3389F-P34-503
R1250	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1251	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1253	315-0754-00		RES.,FXD,COMP:750K OHM,5%,0.25W		CB7545
R1254	315-0754-00		RES.,FXD,COMP:750K OHM,5%,0.25W		CB7545
R1258	315-0915-00		RES.,FXD,COMP:9.1M OHM,5%,0.25W	01121	CB9155
R1259	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CP1035
R1259	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035 CB1045
R1263	315-0474-00		RES.,FXD,COMP:470K OHM,5%,0.25W		CB4745
R1270	315-0362-00		RES., FXD, COMP: 3.6K OHM, 5%, 0.25W		CB3625
R1271	315-0362-00		RES., FXD, COMP: 3.6K OHM, 5%, 0.25W		CB3625
R1272					
R1274	311-1235-00		RES., VAR, NONWIR: 100K OHM, 20%, 0.50W	80294	3389F-P31-104
R1276	311-1235-00		RES., VAR, NONWIR: 100K OHM, 20%, 0.50W	80294	3389F-P31-104
R1282	315-0133-00		RES.,FXD,COMP:13K OHM,5%,0.25W	01121	
R1283	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
D1004	211 1007 00		DEG. MAD MOMETED EV. COM. CO. C. C.	0000:	22000 522 525
R1284	311-1227-00		RES., VAR, NONWIR:5K OHM, 20%, 0.50W	80294	3389F-P31-502
R1286 R1288	311-1583-00 315-0133-00		RES.,VAR,NONWIR:5K OHM,10%,0.50W RES.,FXD,COMP:13K OHM,5%,0.25W		F-8195
77500	212-0133-00		IGO. J. AD JOURE : ISK ORM, 36 JU. 23W	01121	CB1335

¹Furnished with CRT Socket Cable.

T-23 7-23

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R1289 ₁	315-0472-00	230011	RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	
R1291	211 1225 00		DEC. WAR NOWITE LOOK OVER 200 O FOU	00004	2200D D21 104
R1292 R1410	311-1235-00 315-0103-00		RES., VAR, NONWIR: 100K OHM, 20%, 0.50W RES., FXD, COMP: 10K OHM, 5%, 0.25W		3389F-P31-104 CB1035
R1411	315-0103-00				
KT4TT	313-02/4-00		RES.,FXD,COMP:270K OHM,5%,0.25W	01121	CB2745
R1412	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R1414	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R1415	315-0103-00		RES., FXD, COMP:10K OHM, 5%, 0.25W		CB1035
R1416	315-0332-00		RES., FXD, COMP: 3.3K OHM, 5%, 0.25W		CB3325
R1418	315-0471-00		RES.,FXD,COMP:470 OHM,5%,0.25W		CB4715
			,	022	021120
R1419	315-0471-00		RES.,FXD,COMP:470 OHM,5%,0.25W	01121	CB4715
R1421	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1422	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1425	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1427	315-0474-00		RES.,FXD,COMP:470K OHM,5%,0.25W		CB4745
2					
R1430 ²	311-1580-00		RES., VAR, NONWIR: 5K OHM, 10%	01121	1 1 M752
R1440	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W	01121	CB2235
R1441	315-0362-00		RES.,FXD,COMP:3.6K OHM,5%,0.25W	01121	CB3625
R1443	315-0433-00		RES.,FXD,COMP:43K OHM,5%,0.25W	01121	CB4335
R1445	315-0433-00		RES., FXD, COMP: 43K OHM, 5%, 0.25W	01121	CB4335
-3.445	215 2122 22				
R1447	315-0183-00		RES.,FXD,COMP:18K OHM,5%,0.25W		CB1835
R1448	315-0513-00		RES.,FXD,COMP:51K OHM,5%,0.25W		CB5135
R1452	323-0258-00		RES.,FXD,FILM:4.75K OHM,1%,0.50W		MFF1226G47500F
R1455	315-0202-00		RES.,FXD,COMP:2K OHM,5%,0.25W		CB2025
R1456	315-0202-00		RES.,FXD,COMP:2K OHM,5%,0.25W	01121	CB2025
R1457	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W	01121	CP7525
R1459	311-1227-00		· · · · · · · · · · · · · · · · · · ·		CB7525
R1461	321-0318-00		RES., VAR, NONWIR: 5K OHM, 20%, 0.50W RES., FXD, FILM: 20K OHM, 1%, 0.125W	80294	3389F-P31-502 CEAT0-2002F
R1463	321-0310-00		RES.,FXD,FILM:455 OHM,0.1%,0.125W		CEAT0-2002F CEAT9-4550B
R1464	321-1068-07		RES.,FXD,FILM:50.5 OHM,0.1%,0.125W		CEAT9-50R50B
1-101			1201 / 120 / 1201 O. 10 O. 10 O. 120 /	75042	CLAT 3-30K30B
R1466	321-0816-07		RES.,FXD,FILM:5K OHM,0.1%,0.125W	75042	CEAT9-5001B
R1467	321-1068-07		RES.,FXD,FILM:50.5 OHM,0.1%,0.125W		CEAT9-50R50B
R1468	308-0679-00		RES.,FXD,WW:0.51 OHM,5%,2W		BWHR5100J
R1472A,E	311-1581-00		RES., VAR, NONWIR: 2 X 10K OHM, 10%		12M106
R1474	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1476	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R1478	315-0562-00		RES.,FXD,COMP:5.6K OHM,5%,0.25W	01121	CB5625
R1483	315-0301-00		RES.,FXD,COMP:300 OHM,5%,0.25W	01121	CB3015
R1486	321-0251-00		RES.,FXD,FILM:4.02K OHM,1%,0.125W	75042	CEATO-4021F
R1488A,	3 311-1582-00		RES., VAR, NONWIR: 2 X 10K OHM, 10%	01121	12M448
D1 401	221 0210 00		DDG DVD DTTV 1 5v ovn 10 0 105v	75040	
R1491 R1493	321-0210-00		RES.,FXD,FILM:1.5K OHM,1%,0.125W		CEATO-1501F
R1501	315-0103-00 315-0152-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R1501	315-0154-00		RES.,FXD,COMP:1.5K OHM,5%,0.25W RES.,FXD,COMP:150K OHM,5%,0.25W	01121 01121	CB1525 CB1545
R1510	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W		
14310	313 0101-00		RES., FAD, COMP: 100 Orm, 54,0.25W	01121	CB1015
R1511	315-0273-00		RES.,FXD,COMP:27K OHM,5%,0.25W	01121	CB2735
R1513	315-0124-00		RES.,FXD,COMP:120K OHM,5%,0.25W		CB1245
R1515	315-0304-00	в010100 в149999	RES., FXD, COMP:300K OHM, 5%, 0.25W		CB3045
R1515	315-0123-00	B150000	RES.,FXD,COMP:12K OHM,5%,0.25W	01121	CB1235
R1517	315-0155-00	•	RES., FXD, COMP: 1.5M OHM, 5%, 0.25W	01121	
R1519	315-0300-00		RES.,FXD,COMP:30 OHM,5%,0.25W	01121	
R1521	321-0263-00		RES.,FXD,FILM:5.36K OHM,1%,0.125W	75042	CEAT0-5361F
R1522	321-0210-00		RES.,FXD,FILM:1.5K OHM,1%,0.125W	75042	CEAT0-1501F
R1523	315-0271-00		RES.,FXD,COMP:270 OHM,5%,0.25W	01121	CB2715

7-24 REV. D MARCH 1976

¹Furnished with CRT Socket Cable. ²Furnished as a unit with S1430 and S1282. ³Furnished as a unit with S1488B and S1488C.

	T 14	C : 1/44 1 14		446	
Cl. N	Tektronix	Serial/Model No.	N 0 D 1 1	Mfr	MC B (N)
Ckt No.	Part No.	EffDscont	Name & Description	Code	Mfr Part Number
R1531	315-0564-00		RES.,FXD,COMP:560K OHM,5%,0.25W	01121	CB5645
R1532	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W		CB2235
R1534	315-0473-00		RES.,FXD,COMP:47K OHM,5%,0.25W		CB4735
R1536	315-0333-00		RES.,FXD,COMP:33K OHM,5%,0.25W		CB3335
R1537	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R1539	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1541	315-0823-00		RES.,FXD,COMP:82K OHM,5%,0.25W	01121	
R1542	315-0103-00		RES., FXD, COMP: 10K OHM, 5%, 0.25W		CB1035
R1544	321-0280-00		RES., FXD, FILM:8.06K OHM, 1%, 0.125W	75042	
R1548	321-0280-00		RES.,FXD,FILM:8.06K OHM,1%,0.125W	75042	CEAT0-8061F
R1549	315-0361-00		RES.,FXD,COMP:360 OHM,5%,0.25W		CB3615
R1551	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1553 R1556	315-0682-00		RES.,FXD,COMP:6.8K OHM,5%,0.25W		CB6825
R1561	315-0361-00 315-0103-00		RES.,FXD,COMP:360 OHM,5%,0.25W RES.,FXD,COMP:10K OHM,5%,0.25W		CB3615 CB1035
R1562	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1564	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
			12017211270011211711 01217207012011	01121	CD4723
R1565	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R1567	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R1571	315-0203 - 00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1572	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R1573	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
21574	215 2452 22				
R1574	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R1576 R1579	315-0332-00 315-0471-00		RES., FXD, COMP: 3.3K OHM, 5%, 0.25W		CB3325
R1580	315-0152-00		RES.,FXD,COMP:470 OHM,5%,0.25W RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB4715 CB1525
R1582	315-0202-00		RES.,FXD,COMP:2K OHM,5%,0.25W		CB2025
			122 7 12 7 0011 1211 0121 7 0 7 0 1 2 3 11	01121	CDZOZO
R1584	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1589	315-0102-00		RES., FXD, COMP:1K OHM, 5%, 0.25W		CB1025
R1591	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W	01121	CB7525
R1592	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W	01121	CB7525
R1593	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W	01121	CB7525
D1505	315-0103-00		DDC EVD COND. 10% OWN ER O SEW	01101	CD 1 4 3 F
R1595 R1597	315-0103-00 315-0241-00		RES.,FXD,COMP:10K OHM,5%,0.25W RES.,FXD,COMP:240 OHM,5%,0.25W		CB1035 CB2415
R1599	315-0472-00	B010100 B149999	RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R1599	315-0822-00	B150000	RES., FXD, COMP:8.2K OHM, 5%, 0.25W		CEATO-6192F
R1601	321-0365-00		RES., FXD, FILM:61.9K OHM, 1%, 0.125W		CB7515
R1603	315-0751-00		RES., FXD, COMP:750 OHM, 5%, 0.25W		
R1606	315-0471-00		RES.,FXD,COMP:470 OHM,5.,0.25W	01121	CB4715
R1608	321-0330-00		RES.,FXD,FILM:26.7K OHM,1%,0.125W	75042	
R1611	321-0280-00		RES.,FXD,FILM:8.06K OHM,1%,0.125W	75042	CEAT0-8061F
R1614	321-0273-00	B010100 B149999	RES.,FXD,FILM:6.81K OHM,1%,0.125W	75042	CEATO-6811F
R1614	321-0268-00	B150000	RES.,FXD,FILM:6.04K OHM,1%,0.125W	75042	CEAT0-6041F
R1617	321-0248-00		RES.,FXD,FILM:3.74K OHM,1%,0.125W	75042	CEATO-3741F
R1620	315-0683-00		RES., FXD, COMP:68K OHM, 5%, 0.25W	01121	CB6835
R1621	315-0183-00		RES.,FXD,COMP:18K OHM,5%,0.25W	01121	CB1835
R1622	315-0471-00		RES., FXD, COMP: 470 OHM, 5%, 0.25W	01121	CB4715
				01121	CB2215
R1626	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R1627	315-0303-00		RES.,FXD,COMP:30K OHM,5%,0.25W		CB3035
R1629	315-0242-00		RES.,FXD,COMP:2.4K OHM,5%,0.25W		CB2425
R1631	315-0151-00		RES.,FXD,COMP:150 OHM,5%,0.25W RES.,FXD,COMP:390K OHM,5%,0.25W	01121	CB1515 CB3945
R1633 R1635	315-0394-00 315-0202-00		RES.,FXD,COMP:390K OHM,5%,0.25W		CB2025
111000	313 0202-00		AND I AND I COME LESS COME LO STOLLOW	01121	CDZOZJ
R1637	321-0425-00		RES.,FXD,FILM:261K OHM,1%,0.125W	75042	CEAT0-2613F
R1639	321-0452-00		RES.,FXD,FILM:499K OHM,1%,0.125W	75042	
R1641	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035

7-25

	- 1.	6 1 1/14 1 1 1		446	
a 1	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R1642	315-0203-00	-	RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1644	321-0277-00		RES.,FXD,FILM:7.5K OHM,1%,0.125W	75042	CEAT0-7501F
R1646	311-1235-00		RES., VAR, NONWIR: 100K OHM, 20%, 0.50W		3389F-P31-104
R1647	321-0402-00		RES.,FXD,FILM:150K OHM,1%,0.125W	75042	CEATO-1503F
R1648	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R1649	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1650	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1651	315-0154-00	XB150000	RES.,FXD,COMP:150K OHM,5%,0.25W	01121	CB1545
R1653	321-0385-00		RES.,FXD,FILM:100K OHM,1%,0.125W	75042	CEAT0-1003F
R1654	321-0414-00		RES.,FXD,FILM:200K OHM,1%,0.125W	75042	CEAT0-2003F
R1656	321-0375-00		RES.,FXD,FILM:78.7K OHM,1%,0.125W	75042	CEAT0-7872F
71650	217 1021 00			00004	2222 221 252
R1658	311-1231-00		RES., VAR, NONWIR: 25K OHM, 20%, 0.50W	80294	3389F-P31-253
R1660	321-0320-00		RES.,FXD,FILM:21K OHM,1%,0.125W		CEAT0-2102F
R1661	315-0433-00		RES.,FXD,COMP:43K OHM,5%,0.25W		CB4335
R1662	315-0392-00		RES., FXD, COMP: 3.9K OHM, 5%, 0.25W		CB3925
R1663	315-0472-00	•	RES.,FXD,COMP:4.7K OHM,5%,0.25W	01121	CB4725
R1665	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W	01121	CB2225
R1666	315-0332-00		RES.,FXD,COMP:3.3K OHM,5%,0.25W		CB3325
R1668	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
R1671	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1672	315-0683-00		RES.,FXD,COMP:68K OHM,5%,0.25W		CB6835
				02.00	
R1675	321-0356-00		RES.,FXD,FILM:49.9K OHM,1%,0.125W	75042	CEAT0-4992F
R1677	311-1232-00		RES., VAR, NONWIR: 50K OHM, 20%, 0.50W	80294	3389F-P31-503
R1678	321-0364-00		RES.,FXD,FILM:60.4K OHM,1%,0.125W	75042	CEAT0-6042F
R1679	321-0402-00		RES.,FXD,FILM:150K OHM,1%,0.125W	75042	CEAT0-1503F
R1680	321-0248-00		RES., FXD, FILM: 3.74K OHM, 1%, 0.125W	75042	CEAT0-3741F
R1681	315-0333-00		RES.,FXD,COMP:33K OHM,5%,0.25W		CB3335
R1682	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1683	315-0224-00		RES.,FXD,COMP:220K OHM,5%,0.25W		CB2245
R1685	321-0414-00		RES.,FXD,FILM:200K OHM,1%,0.125W		CEAT0-2003F
R1687	321-0349-00		RES.,FXD,FILM:42.2K OHM,1%,0.125W	75042	CEAT0-4222F
R1689	311-1231-00		RES., VAR, NONWIR: 25K OHM, 20%, 0.50W	80294	3389F-P31-253
R1690	321-0378-00		RES., FXD, FILM:84.5K OHM, 1%, 0.125W		CEATO-8452F
R1693	315-0302-00		RES., FXD, COMP:3K OHM, 5%, 0.25W		CB3025
R1694	315-0204-00		RES., FXD, COMP: 200K OHM, 5%, 0.25W		CB2045
R1695	315-0154-00		RES., FXD, COMP:150K OHM, 5%, 0.25W		CB1545
					322312
R1698	315-0202-00		RES.,FXD,COMP:2K OHM,5%,0.25W	01121	CB2025
R1699	315-0202-00		RES.,FXD,COMP:2K OHM,5%,0.25W	01121	CB2025
R1701	315-0153-00		RES.,FXD,COMP:15K OHM,5%,0.25W	01121	CB1535
R1704	315-0391-00		RES.,FXD,COMP:390 OHM,5%,0.25W	01121	CB3915
R1705	315-0163-00		RES.,FXD,COMP:16K OHM,5%,0.25W	01121	CB1635
R1707	315-0221-00		RES.,FXD,COMP:220 OHM,5%,0.25W		CB2215
R1709	315-0154-00		RES.,FXD,COMP:150K OHM,5%,0.25W		CB1545
R1711	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R1713	321-0414-00		RES.,FXD,FILM:200K OHM,1%,0.125W		CEATO-2003F
R1716	315-0332-00		RES.,FXD,COMP:3.3K OHM,5%,0.25W	01121	CB3325
R1717	315-0332-00		RES.,FXD,COMP:3.3K OHM,5%,0.25W	01121	CB3325
R1719	315-0154-00		RES., FXD, COMP:150K OHM, 5%, 0.25W		CB1545
R1721	315-0683-00		RES., FXD, COMP:68K OHM, 5%, 0.25W		CB6835
R1723	301-0753-00		RES., FXD, COMP:75K OHM, 5%, 0.50W		EB7535
R1725	315-0472-00		RES.,FXD,COMP:4.7K OHM,5%,0.25W		CB4725
			. , ,	-	-
R1726	315-0433-00		RES.,FXD,COMP:43K OHM,5%,0.25W	01121	CB4335
R1730	315-0335-00		RES.,FXD,COMP:3.3M OHM,5%,0.25W		CB3355
R1731	315-0335-00		RES.,FXD,COMP:3.3M OHM,5%,0.25W		CB3355

7-26 REV. D MARCH 1976

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
			<u> </u>	 	
R1733	301-0753-00		RES.,FXD,COMP:75K OHM,5%,0.50W		EB7535
R1737	315-0334-00		RES.,FXD,COMP:330K OHM,5%,0.25W		CB3345
R1739	315-0125-00		RES.,FXD,COMP:1.2M OHM,5%,0.25W		CB1255
R1741	315-0155-00		RES.,FXD,COMP:1.5M OHM,5%,0.25W		CB1555
R1742	301-0305-00	-010100 P140000	RES.,FXD,COMP:3M OHM,5%,0.50W		EB3055
R1750	311-1584-00	B010100 B149999	RES., VAR, NONWIR:50K OHM, 10%, 0.50W	12697	
R1750	311-1271-00	B150000	RES., VAR, NONWIR:50K OHM, 10%, 0.50W	73138	
R1752	321-0354-00		RES.,FXD,FILM:47.5K OHM,1%,0.125W	75042	
R1754	311-1232-00		RES., VAR, NONWIR: 50K OHM, 20%, 0.50W	80294	
R1756	321-0356-00		RES.,FXD,FILM:49.9K OHM,1%,0.125W	75042	
R1758	321-0289-00		RES.,FXD,FILM:10K OHM,1%,0.125W	75042	CEATO-1002F
R1759	321-0335-00		RES.,FXD,FILM:30.1K OHM,1%,0.125W	75042	CEAT0-3012F
R1762	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	
R1764	321-0452-00		RES.,FXD,FILM:499K OHM,1%,0.125W		CEATO-4993F
R1766	321-0414-00		RES.,FXD,FILM:200K OHM,1%,0.125W	75042	
R1768	321-0280-00		RES.,FXD,FILM:8.06K OHM,1%,0.125W	75042	
			,,		
R1769	321-0354-00		RES.,FXD,FILM:47.5K OHM,1%,0.125W	75042	CEATO-4752F
R1770	321-0346-00		RES.,FXD,FILM:39.2K OHM,1%,0.125W		CEAT0-3922F
R1773	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	75042	CEATO~1001F
R1774	321-0300-00		RES.,FXD,FILM:13K OHM,1%,0.125W	75042	CEATO-1302F
R1777	321-0306-00		RES.,FXD,FILM:15K OHM,1%,0.125W	75042	CEAT0-1502F
R1779	311-1225-00		DEC. UND NONTITE-1V OUN 209 O FOU	80294	2200D D21 100
R1779 R1781			RES., VAR, NONWIR: 1K OHM, 20%, 0.50W RES., FXD, FILM: 15K OHM, 1%, 0.125W		
R1783	321-0306-00			75042	
	311-1228-00		RES., VAR, NONWIR: 10K OHM, 20%, 0.50W	80294	
R1785 R1787	321-0323-00		RES.,FXD,FILM:22.6K OHM,1%,0.125W	75042	
KI/O/	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W	01121	CB2225
R1788	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W	01121	CB7525
R1791	315-0822-00		RES.,FXD,COMP:8.2K OHM,5%,0.25W	01121	CB8225
R1792	322-0385-00		RES.,FXD,FILM:100K OH,,1%,0.25W	75042	CEBT0-1003F
R1793	315-0201-00		RES.,FXD,COMP:200 OHM,5%,0.25W	01121	CB2015
R1795	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
n1706	275 2222 22		DDG DUD GOUD OOM OVER 50 0 0511	21121	
R1796	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R1798	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R1799	315-0471-00		RES.,FXD,COMP:470 OHM,5%,0.25W		CB4715
R1801	315-0153-00	B010100 B149999X	RES.,FXD,COMP:15K OHM,5%,0.25W		CB1535
R1802	315-0153-00		RES.,FXD,COMP:15K OHM,5%,0.25W	01121	CB1535
R1803	315-0153-00		RES.,FXD,COMP:15K OHM,5%,0.25W	01121	CB1535
R1806	321-0382-00		RES., FXD, FILM: 93.1K OHM, 1%, 0.125W		CEAT0-9312F
R1808	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R1809	315-0623-00		RES.,FXD,COMP:62K OHM,5%,0.25W		CB6235
R1811	321-0337-00		RES.,FXD,FILM:31.6K OHM,1%,0.125W		CEAT0-3162F
R1812	321-0424-00		RES.,FXD,FILM:255K OHM,1%,0.125W		CEAT0-2553F
R1814	315-0304-00		RES., FXD, COMP: 300K OHM, 5%, 0.25W	-	CB3045
R1817	315-0333-00		RES.,FXD,COMP:33K OHM,5%,0.25W		CB3335
R1818	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1819	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R1820	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R1820	321-0457-00		RES.,FXD,FILM:562K OHM,1%,0.125W	91637	
R1822 R1823	321-0457-00		RES.,FXD,FILM:93.1K OHM,1%,0.125W		CEATO-9312F
R1826	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W		CB2235
R1826 R1829	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W		CB2235 CB4715
RIO23	313-04/1-00		IGO., I AD JOORIE : 410 OHM, 35,0.23W	01121	OD4/13
R1830	315-0753-00		RES.,FXD,COMP:75K OHM,5%,0.25W	01121	CB7535
R1832	303-0823-00		RES.,FXD,COMP:82K OHM,5%,1W	01121	GB8235
R1833	303-0823-00		RES.,FXD,COMP:82K OHM,5%,1W		GB8235

7-27 REV. D MARCH 1976

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R1835	315-0471-00		RES.,FXD,COMP:470 OHM,5%,0.25W	01121	
R1838	321-0423-00		RES., FXD, FILM: 249K OHM, 1%, 0.125W		CEAT0-2493F
R1840	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R1841	315-0623-00		RES.,FXD,COMP:62K OHM,5%,0.25W	01121	CB6235
R1842	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1844	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R1847	321-0297-00		RES., FXD, FILM: 12.1K OHM, 1%, 0.125W		CEAT0-1212F
R1849	321-0406-00		RES., FXD, FILM: 165K OHM, 1%, 0.125W		CEAT0-1653F
R1851	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W		CB1035
R1852	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R1855	315-0104-00		RES.,FXD,COMP:100K OHM.5%,0.25W	01121	CB1045
R1856	321-0466-00		RES.,FXD,FILM:698K OHM,1%,0.125W	75042	
R1857	321-0379-00		RES.,FXD,FILM:86.6K OHM,1%,0.125W	75042	CEATO-8662F
R1859	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W		CB1045
R1862	301-0393-00		RES.,FXD,COMP:39K OHM,5%,0.50W	01121	EB3935
R1863	321-0452-00		RES.,FXD,FILM:499K OHM,1%,0.125W	75042	CEAT0-4993F
R1865	321-0352-00		RES.,FXD,FILM:45.3K OHM,1%,0.125W		CEATO-4532F
R1866	321-0358-00		RES.,FXD,FILM:52.3K OHM,1%,0.125W	75042	
R1867	321-0385-00		RES.,FXD,FILM:100K OHM,1%,0.125W	75042	
R1869	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W	01121	
R1871	321-0444-00		RES.,FXD,FILM:412K OHM,1%,0.125W	75042	CEAT0-4123F
R1873	321-0445-00		RES.,FXD,FILM:422K OHM,1%,0.125W	75042	
R1875	321-0409-00		RES.,FXD,FILM:178K OHM,1%,0.125W	75042	
R1876	321-0379-00		RES.,FXD,FILM:86.6K OHM,1%,0.125W	75042	
R1878	321-0411-00		RES.,FXD,FILM:187K OHM,1%,0.125W	75042	
R1880	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	
R1883	315-0393-00		RES.,FXD,COMP:39K OHM,5%,0.25W		CB3935
R1885	321-0452-00		RES.,FXD,FILM:499K OHM,1%,0.125W		CEAT0-4993F
R1886	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W		CB2225
R1890	321-0449-00		RES.,FXD,FILM:464K OHM,1%,0.125W	75042	CEAT0-4643F
R1892	315-0392-00		RES., FXD, COMP: 3.9K OHM, 5%, 0.25W	01121	CB3925
R1893	315-0392-00		RES.,FXD,COMP:3.9K OHM,5%,0.25W		CB3925
R1895	315-0393-00		RES.,FXD,COMP:39K OHM,5%,0.25W		CB3935
R1897	321-0397-00		RES.,FXD,FILM:133K OHM,1%,0.125W	75042	CEAT0-1333F
R1900	321-0400-00		RES.,FXD,FILM:143K OHM,1%,0.125W	75042	CEAT0-1433F
R1903	315-0824-00		RES.,FXD,COMP:820K OHM,5%,0.25W	01121	CB8245
R1906	301-0363-00		RES.,FXD,COMP:36K OHM,5%,0.50W		EB3635
R1908	321-0452-00		RES., FXD, FILM: 499K OHM, 1%, 0.125W	75042	CEAT0-4993F
R1910	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R1911					
R1912	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R1917	315-0472-00		RES., FXD, COMP: 4.7K OHM, 5%, 0.25W		CB4725
R1919	315-0472-00		RES., FXD, COMP: 4.7K OHM, 5%, 0.25W		CB4725
R1920	315-0472-00		RES., FXD, COMP: 4.7K OHM, 5%, 0.25W		CB4725
R1922	315-0105-00		RES.,FXD,COMP:1M OHM,5%,0.25W		CB1055
R1923	315-0473-00		RES.,FXD,COMP:47K OHM,5%,0.25W	01121	CB4735
R1924	315-0912-00		RES.,FXD,COMP:9.1K OHM,5%,0.25W	01121	
R1925	315-0302-00		RES.,FXD,COMP:3K OHM,5%,0.25W		CB3025
R1926	315-0911-00		RES.,FXD,COMP:910 OHM,5%,0.25W	01121	
R1928	315-0823-00		RES.,FXD,COMP:82K OHM,5%,0.25W		CB8235
R1929 ¹					
	200 0000 00		DEG TWO LET O OUT TO ST		
R1930	308-0290-00		RES.,FXD,WW:8 OHM,5%,5W	91637	H11205Z7820R0J
R1942	301-0564-00		RES.,FXD,COMP:560K OHM,5%,0.50W	01121	EB5645

¹ Furnished with CRT Socket Cable.

7-28 REV. C JAN. 1975

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description		Mfr Part Number
		LII DSCOIII			Mili Fait Number
R1981	307-0106-00		RES., FXD, COMP: 4.7 OHM, 5%, 0.25W		CB47G5
R1983	307-0103-00		RES.,FXD,COMP:2.7 OHM,5%,0.25W		CB27G5
R1987	307-0103-00		RES.,FXD,COMP:2.7 OHM,5%,0.25W		CB27G5
R1989	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R2101	315-0682-00		RES.,FXD,COMP:6.8K OHM,5%,0.25W	01121	CB6825
R2102	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R2104	315-0333-00		RES.,FXD,COMP:33K OHM,5%,0.25W	01121	CB3335
R2105	315-0153-00		RES.,FXD,COMP:15K OHM,5%,0.25W	01121	CB1535
R2107	315-0510-00		RES.,FXD,COMP:51 OHM,5%,0.25W	01121	CB5105
R2108	315-0512-00		RES.,FXD,COMP:5.1K OHM,5%,0.25W	01121	CB5125
R2109	315-0221-00		RES.,FXD,COMP:220 OHM,5%,0.25W	01121	CB2215
R2112	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R2113	315-0301-00		RES.,FXD,COMP:300 OHM,5%,0.25W	01121	CB3015
R2122	315-0432-00		RES.,FXD,COMP:4.3K OHM,5%,0.25W	01121	CB4325
R2123	315-0683-00		RES.,FXD,COMP:68K OHM,5%,0.25W	01121	CB6835
R2127	315-0302-00		RES.,FXD,COMP:3K OHM,5%,0.25W	01121	CB3025
R2128	311-1263-00		RES., VAR, NONWIR: 1K OHM, 10%, 0.50W		62PT-347-0
R2129	315-0183-00		RES.,FXD,COMP:18K OHM,5%,0.25W		CB1835
R2135	315-0393-00		RES.,FXD,COMP:39K OHM,5%,0.25W		CB3935
R2137	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W		CB7525
R2139	315-0242-00		RES.,FXD,COMP:2.4K OHM,5%,0.25W	01121	CB2425
R2144	315-0104-00		RES., FXD, COMP: 100K OHM, 5%, 0.25W		CB1045
R2146	315-0152-00		RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB1525
R2148	315-0103-00		RES., FXD, COMP: 10K OHM, 5%, 0.25W		CB1035
R2150	321-0403-00		RES., FXD, FILM: 154K OHM, 1%, 0.125W		CEATO-1543F
112230	322 0403 00		AUG. JI AD JI ILM. 154K OMA JE JO. 125W	75042	CERIO-13431
R2151	321-0372-00		RES., FXD, FILM: 73.2K OHM, 1%, 0.125W	75042	CEATO-7322F
R2153	315-0103-00		RES., FXD, COMP: 10K OHM, 5%, 0.25W	01121	CB1035
R2155	315-0512-00		RES.,FXD,COMP:5.1K OHM,5%,0.25W		CB5125
R2158	315-0152-00		RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB1525
R2161	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R2162	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W	01121	CB7515
R2163	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W	01121	CB7515
R2165	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R2166	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W	01121	CB7515
R2167	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W	01121	CB7515
R2169	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R2170	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W		CB7515
R2171	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W		CB7515
R2173	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R2174	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W	01121	CB7515
R2175	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W	01121	CB7515
R2177	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W		CB5115
R2178	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W		CB5115
R2179	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W		CB5115
R2182	321-0262-00		RES.,FXD,FILM:5.23K OHM,1%,0.125W		CEATO-5231F
R2183	311~1224-00		RES., VAR, NONWIR:500 OHM, 20%, 0.50W		3389F-P31-501
R2191	315-0513-00		RES.,FXD,COMP:51K OHM,5%,0.25W		CB5135
R2192	315-0133-00		RES.,FXD,COMP:13K OHM,5%,0.25W		CB1335
R2193	315-0133-00		RES.,FXD,COMP:13K OHM,5%,0.25W		CB1335
R2194	315-0753-00		RES.,FXD,COMP:75K OHM,5%,0.25W	01121	CB7535
R2196	321-0308-00		RES.,FXD,FILM:15.8K OHM,1%,0.125W	75042	
R2197	315-0513-00		RES.,FXD,COMP:51K OHM,5%,0.25W	01121	CB5135
R2198	321-0319-00		RES.,FXD,FILM:20.5K OHM,1%,0.125W	75042	CEAT0-2052F

REV. C JAN. 1975 7-29

	Taleknamin	C - = 1 / AA - 1 A -		445	
Cla N-	Tektronix	Serial/Model No.	Nimos 9 Daniel III	Mfr	446 B + N 1
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R2199	321-0335-00		RES.,FXD,FILM:30.1K OHM,1%,0.125W	75042	CEATO-3012F
R2201	315-0154-00		RES.,FXD,COMP:150K OHM,5%,0.25W		CB1545
R2202	321-0335-00		RES.,FXD,FILM:30.1K OHM,1%,0.125W	75042	CEATO-3012F
R2203	321-0344-00		RES.,FXD,FILM:37.4K OHM,1%,0.125W	75042	CEATO-3742F
R2204	321-0335-00		RES.,FXD,FILM:30.1K OHM,1%,0.125W	75042	CEAT0-3012F
D2206	27.5 0512 00				
R2206	315-0513-00		RES.,FXD,COMP:51K OHM,5%,0.25W		CB5135
R2207	315-0154-00		RES.,FXD,COMP:150K OHM,5%,0.25W		CB1545
R2208	321-0335-00		RES.,FXD,FILM:30.1K OHM,1%,0.125W		CEATO-3012F
R2209	321-0335-00		RES.,FXD,FILM:30.1K OHM,1%,0.125W		CEATO-3012F
R2211	315-0752-00		RES.,FXD,COMP:7.5K OHM,5%,0.25W	01121	CB7525
R2213	321-0259-00		RES.,FXD,FILM:4.87K OHM,1%,0.125W	75042	CEAT0-4871F
R2214	311-1224-00		RES., VAR, NONWIR: 500 OHM, 20%, 0.50W		3389F-P31-501
R2215	315-0133-00		RES., FXD, COMP:13K OHM, 5%, 0.25W		CB1335
R2217	315-0124-00		RES.,FXD,COMP:120K OHM,5%,0.25W		CB1335
R2219	315-0751-00		RES.,FXD,COMP:750 OHM,5%,0.25W		CB7515
10223	315 0/31 00		RES. IT ND COME: 750 ONN, 54,0.25W	01121	CB7315
R2220	321-0299-00		RES.,FXD,FILM:12.7K OHM,1%,0.125W	75042	CEAT0-1272F
R2221	321-0212-00		RES.,FXD,FILM:1.58K OHM,1%,0.125W		CEAT0-1581F
R2226	315-0222-00		RES.,FXD,COMP:2.2K OHM,5%,0.25W		CB2225
R2227	321-0268-00		RES.,FXD,FILM:6.04K OHM,1%,0.125W		CEATO-6041F
R2229	321-0210-00		RES.,FXD,FILM:1.5K OHM,1%,0.125W		CEATO-1501F
R2231	315-0303-00		RES.,FXD,COMP:30K OHM,5%,0.25W		CB3035
R2235	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R2236	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R2237	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W		CB2035
R2238	315-0203-00		RES.,FXD,COMP:20K OHM,5%,0.25W	01121	CB2035
R2241	321-0326-00		DEC. EVD RTIM. 24 2V OWN 19 A 125W	75042	000m0 0430m
R2251	315-0102-00		RES.,FXD,FILM:24.3K OHM,1%,0.125W RES.,FXD,COMP:1K OHM,5%,0.25W		CEATO-2432F
R2252	315-0102-00		RES.,FXD,COMP:IK OHM,5%,0.25W		CB1025 CB1025
R2253	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R2254	315-0303-00		RES.,FXD,COMP:30K OHM,5%,0.25W		CB1025
112234	313-0303-00		RES. JEND JOOHE: SON OHM, 5%, 0.25W	01121	CB3033
R2261	315-0272-00		RES., FXD, COMP: 2.7K OHM, 5%, 0.25W	01121	СВ2725
R2262	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W		CB1025
R2265	315-0512-00		RES.,FXD,COMP:5.1K OHM,5%,0.25W		CB5125
R2266	315-0912-00		RES.,FXD,COMP:9.1K OHM,5%,0.25W		CB9125
R2268	321-0296-00		RES.,FXD,FILM:11.8K OHM,1%,0.125W		CEATO-1182F
R2273	311-1226-00		RES., VAR, NONWIR: 2.5K OHM, 20%, 0.50W	80294	3389F-P31-252
R2274	321-0153-00		RES.,FXD,FILM:383 OHM,1%,0.125W	75042	CEATO-3830F
R2275	321-0170-00		RES.,FXD,FILM:576 OHM,1%,0.125W	75042	CEAT0-5760F
R2276	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W		CB2235
R2277	321-0250-00		RES.,FXD,FILM:3.92K OHM,1%,0.125W	75042	CEAT0-3921F
R2278	215 0022 00		DEG. FUD. GOVD. OVER 54 0. OFM	01101	
	315-0823-00		RES.,FXD,COMP:82K OHM,5%,0.25W		CB8235
R2279 R2280	321-0222-00		RES.,FXD,FILM:2K OHM,1%,0.125W		CEATO-2001F
R2281	315-0823-00 315-0101-00	VP040000	RES., FXD, COMP:82K OHM, 5%, 0.25W		CB8235
R2282	315-0332-00	XB040000	RES., FXD, COMP: 100 OHM, 5%, 0.25W		CB1015
K2202	313-0332-00		RES.,FXD,COMP:3.3K OHM,5%,0.25W	01121	CB3325
R2283	315-0753-00		RES.,FXD,COMP:75K OHM,5%,0.25W	01121	CB7535
R2284	321-0216-00		RES.,FXD,FILM:1.74K OHM,1%,0.125W	75042	
R2285	321-0245-00		RES.,FXD,FILM:3.48K OHM,1%,0.125W	75042	CEATO-3481F
R2286	321-0209-00		RES., FXD, FILM:1.47K OHM, 1%, 0.125W	75042	
R2287	321-0199-00		RES.,FXD,FILM:1.15K OHM,1%,0.125W	75042	CEATO-1151F
			, , , , , , , , , , , , , , , , , , , ,		
R2288	321-0273-00		RES.,FXD,FILM:6.81K OHM,1%,0.125W	75042	CEAT0-6811F
R2289	321-0193-00		RES.,FXD,FILM:1K OHM,1%,0.125W	75042	CEATO-1001F
R2291	311-1225-00		RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	80294	3389F-P31-102

7-30 REV. C JAN. 1975

a 1	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R2292	315-0132-00		RES.,FXD,COMP:1.3K OHM,5%,0.25W	01121	CB1325
R2293	321-0245-00		RES.,FXD,FILM:3.48K OHM,1%,0.125W		CEATO-3481F
R2294	321-0255-00		RES.,FXD,FILM:4.42K OHM,1%,0.125W		CEATO-4421F
R2295	321-0241-00		RES., FXD, FILM: 3.16K OHM, 1%, 0.125W		CEAT0-3161F
R2297	315-0152-00		RES.,FXD,COMP:1.5K OHM,5%,0.25W		CB1525
R2298	315-0102-00		RES.,FXD,COMP:1K OHM,5%,0.25W	01121	CB1025
R2299	315-0431-00		RES.,FXD,COMP:430 OHM,5%,0.25W	01121	CB4315
R2329	323-0131-00		RES.,FXD,FILM:226 OHM,1%,0.50W	75042	CECT0-2260F
R2331	315-0912-00		RES.,FXD,COMP:9.1K OHM,5%,0.25W	01121	CB9125
R2333	321-1068-01		RES., FXD, FILM:50.5 OHM, 0.5%, 0.125W	75042	CEATO-50R50D
R2335	321-1068-01		RES., FXD, FILM:50.5 OHM, 0.5%, 0.125W		CEATO-50R50D
R2337	321-1068-01		RES.,FXD,FILM:50.5 OHM,0.5%,0.125W		CEATO-50R50D
R2339	321-1068-01		RES.,FXD,FILM:50.5 OHM,0.5%,0.125W		CEATO-50R50D
R2341	315-0100-00		RES.,FXD,COMP:10 OHM,5%,0.25W		CB1005
R2343	321-0082 - 02		RES.,FXD,FILM:69.8 OHM,0.5%,0.125W	91637	MFF1816D69R80D
R2345	315-0622-00		RES.,FXD,COMP:6.2K OHM,5%,0.25W	01101	CB6225
R2347	321-0193-01		RES., FXD, FILM: 1K OHM, 0.5%, 0.125W		CEATO-1001D
R2349	321-0193-01		RES.,FXD,FILM:1K OHM,0.5%,0.125W		CEATO-1001D
R2351	322-0212-00		RES.,FXD,FILM:1.58K OHM,1%,0.25W		CEBTO-1581F
R2353	321-0082-02		RES.,FXD,FILM:69.8 OHM,0.5%,0.125W		MFF1816D69R80D
112333	321 0002 02		100. / 1 AD / 1 1E41.05.0 Ole 1,0.5% 0.125%	91037	M 1 1010D09R00D
R2355	315-0622-00		RES.,FXD,COMP:6.2K OHM.5%.0.25W	01121	CB6225
R2357	321-0193-01		RES.,FXD,FILM:1K OHM,0.5%,0.125W		CEATO-1001D
R2359	321-0193-01		RES.,FXD,FILM:1K OHM,0.5%,0.125W		CEATO-1001D
R2362	321-0044-00		RES.,FXD,FILM:28 OHM,1%,0.125W		CEATO-28ROOF
R2364	321-0069-00		RES.,FXD,FILM:51.1 OHM,1%,0.125W		CEATO-51R1OF
			, ,		
R2366	315-0240-00		RES.,FXD,COMP:24 OHM,5%,0.25W	01121	CB2405
R2368	315-0911-00		RES.,FXD,COMP:910 OHM,5%,0.25W	01121	CB9115
R2369	322-0182-00		RES.,FXD,FILM:768 OHM,1%,0.25W	91637	MFF1421G768R0F
R2372	321-0044-00		RES., FXD, FILM: 28 OHM, 1%, 0.125W	75042	CEATO-28ROOF
R2374	321-0069-00		RES., FXD, FILM:51.1 OHM, 1%, 0.125W	75042	CEATO-51R1OF
R2376	315-0240-00		RES.,FXD,COMP:24 OHM,5%,0.25W		CB2405
R2378	315-0911-00		RES.,FXD,COMP:910 OHM,5%,0.25W		CB9115
R2379	322-0182-00		RES.,FXD,FILM:768 OHM,1%,0.25W		MFF1421G768R0F
R2384	321-0203-00		RES.,FXD,FILM:1.27K OHM,1%,0.125W		CEATO-1271F
R2386	321-0141-00		RES.,FXD,FILM:287 OHM,1%,0.125W	/5042	CEAT0-2870F
R2387	321-0062-00		RES.,FXD,FILM:43.2 OHM,1%,0.125W	75042	CEXTO-43D30E
R2390	321-0002-00		RES.,FXD,FILM:2.26K OHM,1%,0.125W		CEATO-43R2OF CEATO-2261F
R2393	323-0085-00		RES.,FXD,FILM:75 OHM,1%,0.5W	75042	
R2394	321-0203-00		RES.,FXD,FILM:1.27K OHM,1%,0.125W	+	CEATO-1271F
R2396	321-0141-00		RES.,FXD,FILM:287 OHM,1%,0.125W	75042	
				75042	021110 20701
R2397	321-0062-00		RES.,FXD,FILM:43.2 OHM,1%,0.125W	75042	CEATO-43R2OF
R2402	322-0645-00		RES.,FXD,FILM:52.5 OHM,0.5%,0.25W		CEBTO-52R50D
R2403	323-0079-00		RES.,FXD,FILM:64.9 OHM,1%,0.50W		CECTO-64R90F
R2405	323-0093-00		RES.,FXD,FILM:90.9 OHM,1%,0.50W	75042	CECTO-90R90F
R2407	315-0511-00		RES.,FXD,COMP:510 OHM,5%,0.25W	01121	CB5115
R2409	311-1231-00		RES., VAR, NONWIR: 25K OHM, 20%, 0.50W	80294	3389F-P31-253
R2411	311-1466-00		RES., VAR, NONWIR: 2K OHM, 20%, 0.50W	73138	72PM-08-0-202
R2412	315-0470-00		RES.,FXD,COMP:47 OHM,5%,0.25W	01121	
R2416	311-1260-00		RES., VAR, NONWIR: 250 OHM, 10%, 0.50W	73138	62PT-345-0
R2418	311-1259-00		RES., VAR, NONWIR:100 OHM, 10%, 0.50W	80294	3329P-L58-101
R2419	321-0117-00		RES.,FXD,FILM:162 OHM,1%,0.125W	75042	
R2421	323-0134-00		RES.,FXD,FILM:243 OHM,1%,0.50W	91637	
R2423	321-0163-00		RES.,FXD,FILM:487 OHM,1%,0.125W	75042	CEAT0-4870F

REV. B JAN. 1975 7-31

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R2425	315-0223-00		RES.,FXD,COMP:22K OHM,5%,0.25W	01121	CB2235
R2426	315-0562-00		RES.,FXD,COMP:5.6K OHM,5%,0.25W		CB5625
R2427	315-0562-00		RES.,FXD,COMP:5.6K OHM,5%,0.25W	01121	CB5625
R2429	315-0432-00		RES.,FXD,COMP:4.3K OHM,5%,0.25W	01121	CB4325
R2430	315-0471-00		RES.,FXD,COMP:470 OHM,5%,0.25W	01121	CB4715
R2432	321-0297-00		RES.,FXD,FILM:12.1K OHM,1%,0.125W	75042	CEAT0-1212F
R2433	311-1224-00		RES., VAR, NONWIR: 500 OHM, 20%, 0.50W	80294	
R2434	315-0221-00		RES.,FXD,COMP:220 OHM,5%,0.25W	01121	CB2215
R2436	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	75042	CEATO-49R90F
R2438	315-0121-00		RES.,FXD,COMP:120 OHM,5%,0.25W	01121	CB1215
R2439	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R2442	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W		CB1015
R2445	315-0201 - 00		RES.,FXD,COMP:200 OHM,5%,0.25W	01121	CB2015
R2446	311-1266-00		RES., VAR, NONWIR: 2.5K OHM, 10%, 0.50W	73138	62PT-349-0
R2448	321-0093-00		RES.,FXD,FILM:90.9 OHM,1%,0.125W	75042	CEATO-90R90F
R2455	323-0105-00		RES.,FXD,FILM:121 OHM,1%,0.50W	75042	CECTO-1210F
R2456	321-0067-00		RES.,FXD,FILM:48.7 OHM,1%,0.125W		CEATO-48R70F
R2458	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R2461	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R2463	315-0622-00		RES.,FXD,COMP:6.2K OHM,5%,0.25W	01121	CB6225
R2465	315-0330-00		RES.,FXD,COMP:33 OHM,5%,0.25W	01121	CB3305
R2466	315-0330-00		RES.,FXD,COMP:33 OHM,5%,0.25W	01121	CB3305
R2468	315-0820-00		RES.,FXD,COMP:82 OHM,5%,0.25W	01121	CB8205
R2470	308-0758-00		RES.,FXD,WW:430 OHM,1%,7W		SAX70-430ROF
R2501	322-0645-00		RES.,FXD,FILM:52.5 OHM,0.5%,0.25W	75042	CEBT0-52R50D
R2505	323-0093-00		RES.,FXD,FILM:90.9 OHM,1%,0.50W	75042	CECTO-90R90F
R2507	315-0201-00		RES.,FXD,COMP:200 OHM,5%,0.25W		CB2015
R2509	311-1228-00		RES., VAR, NONWIR: 10K OHM, 20%, 0.50W	80294	3389F-P31-103
R2510	315-0112-00		RES.,FXD,COMP:1.1K OHM,5%,0.25W		CB1125
R2511	311-1225-00		RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	80294	3389F-P31-102
R2512	315-0470-00		RES.,FXD,COMP:47 OHM,5%,0.25W	01121	CB4705
R2514	315-0474-00		RES.,FXD,COMP:470K OHM,5%,0.25W		CB4745
R2515	315-0103-00		RES.,FXD,COMP:10K OHM,5%,0.25W	01121	CB1035
R2516	315-0124-00		RES.,FXD,COMP:120K OHM,5%,0.25W	01121	CB1245
R2517	315-0104-00		RES.,FXD,COMP:100K OHM,5%,0.25W	01121	CB1045
R2519	311-1260-00		RES., VAR, NONWIR: 250 OHM, 10%, 0.50W	73138	62PT-345-0
R2521	323-0134-00		RES.,FXD,FILM:243 OHM,1%,0.50W	91637	MFF1226G243R0F
R2523	323-0176-00		RES.,FXD,FILM:665 OHM,1%,0.50W	75042	CECTO-6650F
R2524	321-0204-00		RES.,FXD,FILM:1.3K OHM,1%,0.125W		CEATO-1301F
R2526	321-0143-00		RES.,FXD,FILM:301 OHM,1%,0.125W	75042	CEAT0-3010F
R2527	311-1222-00		RES., VAR, NONWIR:100 OHM, 20%, 0.50W	80294	3389F-P31-101
R2530	315-0391-00		RES.,FXD,COMP:390 OHM,5%,0.25W	01121	
R2532	321-0331-00		RES.,FXD,FILM:27.4K OHM,1%,0.125W	75042	CEAT0-2742F
R2533	321-0172-00		RES.,FXD,FILM:604 OHM,1%,0.125W	75042	CEAT0-6040F
R2534	321-0233-00		RES.,FXD,FILM:2.61K OHM,1%,0.125W	75042	CEAT0-2611F
R2536	321-0068-00		RES.,FXD,FILM:49.9 OHM,1%,0.125W	75042	CEATO-49R90F
R2537	323-0177-00		RES.,FXD,FILM:680 OHM,1%,0.50W	75042	
R2538	315-0121-00		RES.,FXD,COMP:120 OHM,5%,0.25W		CB1215
R2539	315-0683-00		RES.,FXD,COMP:68K OHM,5%,0.25W	01121	
R2542	315-0101-00		RES.,FXD,COMP:100 OHM,5%,0.25W	01121	CB1015
R2545	315-0201-00		RES.,FXD,COMP:200 OHM,5%,0.25W	01121	CB2015
R2548	321-0093-00		RES.,FXD,FILM:90.9 OHM,1%,0.125W	75042	CEATO-90R90F
R2550	321-0181-00		RES.,FXD,FILM:750 OHM,1%,0.125W	75042	CEAT0-7500F


7-32 REV. C OCT. 1975


	Tektronix	Serial/Model	No.		Mfr	
Ckt No.	Part No.		cont	Name & Description	Code	Mfr Part Number
R2551	321-0181-00			RES.,FXD,FILM:750 OHM,1%,0.125W	75042	CEATO-7500F
R2553	301-0750-00			RES.,FXD,COMP:75 OHM,5%,0.50W	01121	EB7505
R2555	323-0105-00			RES.,FXD,FILM:121 OHM,1%,0.50W		CECTO-1210F
R2565	315-0330-00			RES.,FXD,COMP:33 OHM,5%,0.25W		CB3305
R2566	315-0330-00			RES.,FXD,COMP:33 OHM,5%,0.25W	01121	CB3305
R2568	315-0820-00			RES.,FXD,COMP:82 OHM,5%,0.25W	01121	CB8205
R2570	308-0758-00			RES., FXD, WW: 430 OHM, 1%, 7W		SAX70-430ROF
R2593	315-0120-00			RES.,FXD,COMP:12 OHM,5%,0.25W		CB1205
R2597	323-0022-00			RES.,FXD,FILM:16.5 OHM,1%,0.50W	80009	323-0022-00
RT2463	307-0181-00			RES.,THERMAL:100K OHM,10%,4MW/DEG C	14193	2J05-104K
RT2507	307-0127-00			RES.,THERMAL:1K OHM,1%	50157	2D1596
RT2510	307-0124-00			RES.,THERMAL:5K OHM,10%	50157	1D1618
RT2517	307-0181-00			RES.,THERMAL:100K OHM,10%,4MW/DEG C	14193	2J05-104K
S 659	260-0984-00			SWITCH, SLIDE: DP3POSN, 0.5A, 125VAC-DC	79727	G128S-PC/MOD7140
s1000	260-0724-00	во10100 во7)599	SW,THERMOSTATIC:OPEN 83.3 DEG,CL 66.7 DEG C	93410	110181
s1000	260-1759-00	B070600		SW,THERMOSTATIC:OPEN 83.3 DEG,CL 66.7 DEG C	82647	
s1001	644-0056-00			SWITCH ASSY:POWER	80009	
S1011	260-1379-00			SWITCH, PUSH: TRIG SOURCE	71590	2KBC120000
\$1021 \$1095	260-1378-00			SWITCH, PUSH: VERT MODE	71590	2KBC140000
s1095	311-1055-00			RES., VAR, NONWIR: 1K OHM 20%, 0.50W	12697	CM-40034
s1282 ²	311-1580-00			RES., VAR, NONWIR: 5K OHM, 10%	01121	11M752
s1400	260-1593-00			SWITCH PUSH: FAST/VAR PERSIST/BI STABLE		OBD
S1417	260-1594-00			SWITCH PUSH:NON STORE/STORE/SAVE		OBD
s1430 ³	311-1580-00			RES., VAR, NONWIR: 5K OHM, 10%	01121	11M752
S1488B5	311-1582-00			RES., VAR, NONWIR: 2 X 10K OHM, 10%		12M448
\$1488C ⁵	311-1582-00			RES., VAR, NONWIR: 2 X 10K OHM, 10%		12M448
S2110	260-0723-00			SWITCH, SLIDE: DPDT, 0.5A, 125VAC	80009	260-0723-00
T523	120-0546-00			XFMR, TOROID: 4 TURNS BIFILAR	80009	120-0546-00
T801	120-0708-00			XFMR, PWR, STPDN: LV	80009	120-0708-00
T1199	120-0907-00		9999	XFMR, PWR, STPDN:	80009	120-0907-00
T1199	120-0907-01	во20000		XFMR, PWR, STPDN:	80009	120-0907-01
U55	155-0011-00			MICROCIRCUIT, DI:ML, CLOCK AND CHOP BLANKING	80009	
U99	156-0048-00			MICROCIRCUIT, LI:FIVE NPN TRANSISTOR	86684	
U123	156-0041-00			MICROCIRCUIT, DI: DUAL D-TYPE FLIP-FLOP		DM7474N
U156	156-0041-00			MICROCIRCUIT, DI: DUAL D-TYPE FLIP-FLOP		DM7474N
U324	155~0022-00			MICROCIRCUIT, DI:ML CHANNEL SWITCH	80009	155-0022-00
U510	155-0022-00			MICROCIRCUIT, DI: ML CHANNEL SWITCH	80009	155-0022-00
U973	156-0065-00			MICROCIRCUIT, LI:FIVE NPN TRANSISTOR ARRAY	80009	156-0065-00
U1417	156-0043-00			MICROCIRCUIT, DI:2-INPUT NOR GATE	01295	SN7402N
U1495	156-0030-00			MICROCIRCUIT, DI:QUAD 2-INPUT POS NAND GATE	01295	
U1497	156-0043-00			MICROCIRCUIT,DI:2-INPUT NOR GATE	01295	SN7402N
U1545	156-0172-00			MICROCIRCUIT, DI: DUAL MONOSTABLE MV	01295	SN74123N
U1555	156-0041-00			MICROCIRCUIT, DI: DUAL D-TYPE FLIP-FLOP	27014	
U1605	156-0172-00			MICROCIRCUIT, DI: DUAL MONOSTABLE MV	01295	
U1615	156-0172-00			MICROCIRCUIT, DI: DUAL MONOSTABLE MV	01295	
U2120	156-0043-00			MICROCIRCUIT,DI:2-INPUT NOR GATE	01295	SN7402N
U2126	155-0021-01			MICROCIRCUIT, DI: ML, TIMING GENERATOR	80009	
U2155	156-0043-00			MICROCIRCUIT, DI: 2-INPUT NOR GATE	01295	
U2159	155-0017-00			MICROCIRCUIT, DI:ML, ZERO LOGICOUNTER	80009	
U2180	155-0015-01			MICROCIRCUIT, DI:ML, ANALOG DATA SWITCH	80009	
U2185	155-0014-01			MICROCIRCUIT, DI:ML, ANALOG TO DECIMAL CONV	80009	155-0014-01
U2190	155-0015-01			MICROCIRCUIT, DI: ML, ANALOG DATA SWITCH	80009	155-0015-01


7-33 REV. C APR. 1975

¹ 2Furnished as a unit with R1095. 2Furnished as a unit with R1430 and S1430. 3Furnished as a unit with R1430 and S1282. 4Furnished as a unit with R1488A,B and S1488C. 5Furnished as a unit with R1488A,B and S1488B.

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
U2232	155-0018-00		MICROCIRCUIT,DI:ZERO LOGIC	80009	155-0018-00
U2244	155-0014-01		MICROCIRCUIT, DI: ML, ANALOG TO DECIMAL CONV	80009	155-0014-01
U2250	156-0032-00		MICROCIRCUIT, DI: 4-BIT BINARY COUNTER	01295	SN7493AN
U2260	155-0019-00		MICROCIRCUIT, DI: ML, DECIMAL POINT AND SPACE	80009	155-0019-00
U2270	155-0023-00		MICROCIRCUIT, DI:ML, CHAR GEN NUMERALS	80009	155-0023-00
U2272	155-0024-00		MICROCIRCUIT, DI:ML, CHAR GEN SPCL SYMBOLS	80009	155-0024-00
U2274	155-0025-00		MICROCIRCUIT, DI:ML, CHAR GEN PREFIXES	80009	155-0025-00
U2276	155-0026-00		MICROCIRCUIT, DI: ML, CHAR GEN LETTERS	80009	155-0026-00
U2278	155-0027-00		MICROCIRCUIT, DI: ML, CHAR GEN SPCL ALPHA	80009	155-0027-00
U2284	155-0020-00		MICROCIRCUIT, DI: ML, CHANNEL SW OUTPUT ASSY	80009	155-0020-00
U2340	155-0022-00		MICROCIRCUIT, DI: ML CHANNEL SWITCH	80009	155-0022-00
V1265	154-0721-00		ELECTRON TUBE:CRT	80009	154-0721-00
VR851	152-0283-00		SEMICOND DEVICE: ZENER, 0.4W, 43V, 5%	04713	ln976B
VR890	152-0124-00		SEMICOND DEVICE: ZENER, 0.5W, 9V, 5%	04713	1N938A
VR1109	152-0055-00		SEMICOND DEVICE: ZENER, 0.4W, 11V, 5%	04713	1N962B
VR1151	152-0255-00		SEMICOND DEVICE: ZENER, 0.4W, 51V, 5%	04713	1N978B
VR1233	152-0286-00		SEMICOND DEVICE: ZENER, 0.4W, 75V, 5%	04713	1N982B
VR1243	152-0288-00		SEMICOND DEVICE: ZENER, 0.4W, 140V, 5%	04713	4-10M14025
VR1707	152-0280-00		SEMICOND DEVICE: ZENER, 0.4W, 6.2V, 5%	04713	1N753A
VR1793	152-0280-00		SEMICOND DEVICE: ZENER, 0.4W, 6.2V, 5%	04713	1N753A
VR1831	152-0289-00		SEMICOND DEVICE: ZENER, 0.4W, 180V, 5%	07910	1N991B
VR2262	152-0405-00		SEMICOND DEVICE: ZENER, 1W, 15V, 5%	99942	ln5567B
VR2263	152-0405-00		SEMICOND DEVICE: ZENER, 1W, 15V, 5%	99942	ln5567B
VR2264	152-0405-00		SEMICOND DEVICE: ZENER, 1W, 15V, 5%	99942	ln5567B
VR2445	152-0279-00		SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	07910	1N751A
VR2545	152-0279-00		SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	07910	1N751A

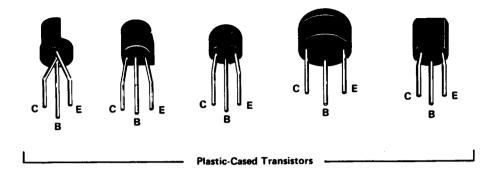

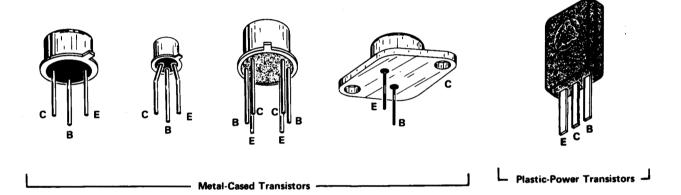

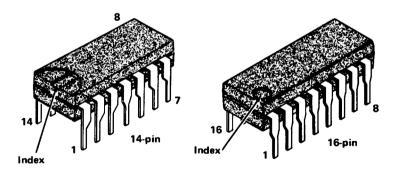

Integrated Circuits —

Figure 8-1. Semiconductor Lead configurations.

DIAGRAMS AND CIRCUIT BOARD ILLUSTRATIONS

Symbols and Reference Designators

Electrical components shown on the diagrams are in the following units unless noted otherwise:

Capacitors = Values one or greater are in picofarads (pF).

Values less than one are in microfarads (μ F).


Resistors = Ohms (Ω)


Symbols used on the diagrams are based on USA Standard Y32.2-1967.

Logic symbology is based on MIL-STD-806B in terms of positive logic. Logic symbols depict the logic function performed and may differ from the manufacturer's data.

The following prefix letters are used as reference designators to identify components or assemblies on the diagrams.

Α	Assembly, separable or repairable	н	Heat dissipating device (heat sink,	RT	Thermistor
	(circuit board, etc.)		heat radiator, etc.)	S	Switch
AT	Attenuator, fixed or variable	HR	Heater	Т	Transformer
8	Motor	HY	Hybrid circuit	TC	Thermocouple
вт	Battery	j	Connector, stationary portion	TP	Test point
С	Capacitor, fixed or variable	K	Relay	U	Assembly, inseparable or non-repairable
СВ	Circuit breaker	L	Inductor, fixed or variable		(integrated circuit, etc.)
CR	Diode, signal or rectifier	LR	Inductor/resistor combination	V	Electron tube .
DL	Delay line	M	Meter	VR	Voltage regulator (zener diode, etc.)
DS	Indicating device (lamp)	Р	Connector, movable portion	Y	Crystal
E	Spark Gap	Q	Transistor or silicon-controlled	Z	Phase shifter
F	Fuse		rectifier		
FL	Fifter	R	Resistor, fixed or variable		

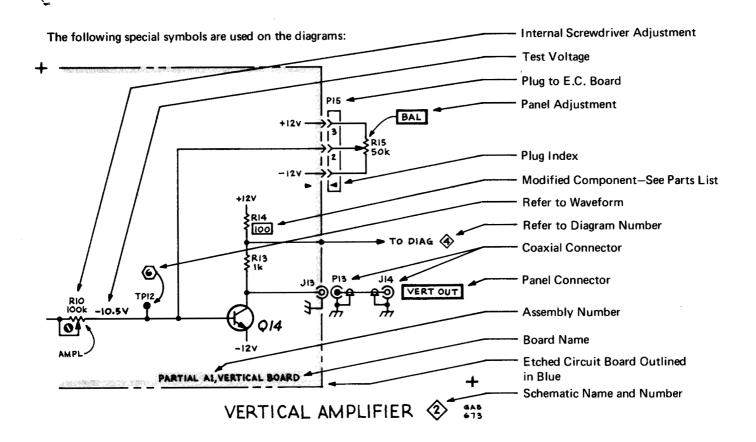

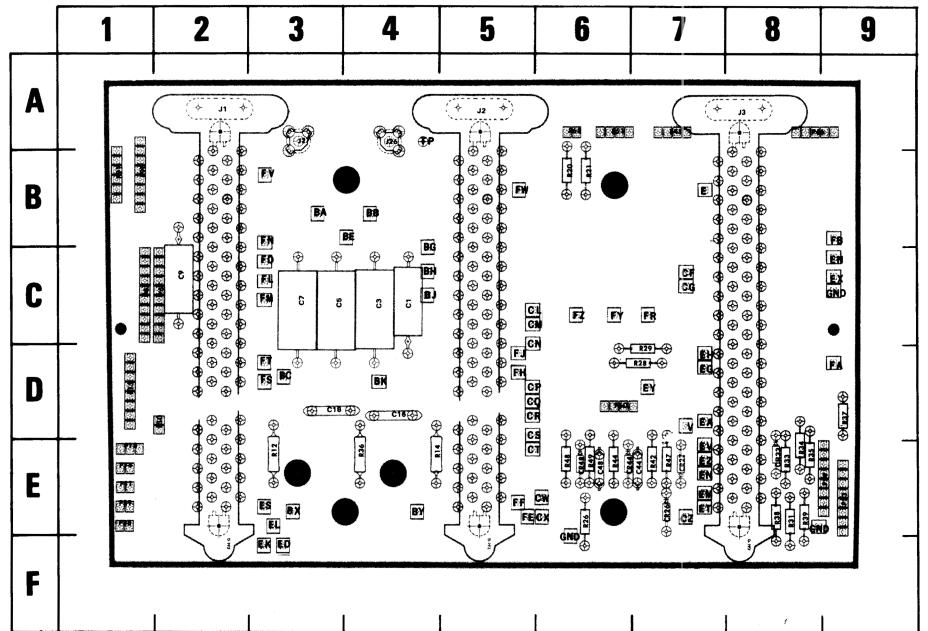



A1 MAIN INTERFACE

Figure 8-2. A1-Main Interface board.

CKT	GRID	СКТ	GRID	СКТ	GRID	СКТ	GRID	СКТ	GRID
NO	LOC	NO	FOC	NO	LOC	NO	LOC	NO	LOC
C1	4C	CR33	8E	P12	1E	P68	6A	R31	8E
C3	4C	CR44	6E	P13	1D	P74	1E	R33	8E
C5	3C	CR48	6E	P38	1E	P90	1B	R34	8E
C7	3C			P39	1E	P91	1B	R35	8E
C9	2C	J1	2A	P45	7A			R36	4E
C16	4D	J2	5A	P51	6A	R12	3E	R37	9D
C18	3D	J3	8A	P53	9E	R14	4E	R38	8E
C44	7E	J26	4A	P59	9E	R20	6B	R39	8E
C48	6E	J27	3A	P60	6D	R21	6B	R42	7E
				P65	1C	R26	6E	R44	6E
CR26	7E	P10	2D	P66	8A	R28	7D	R47	7E
CR27	7E	P11	1E	P67	2C	R29	7D	R48	6E
				1				R49	6E

(A)

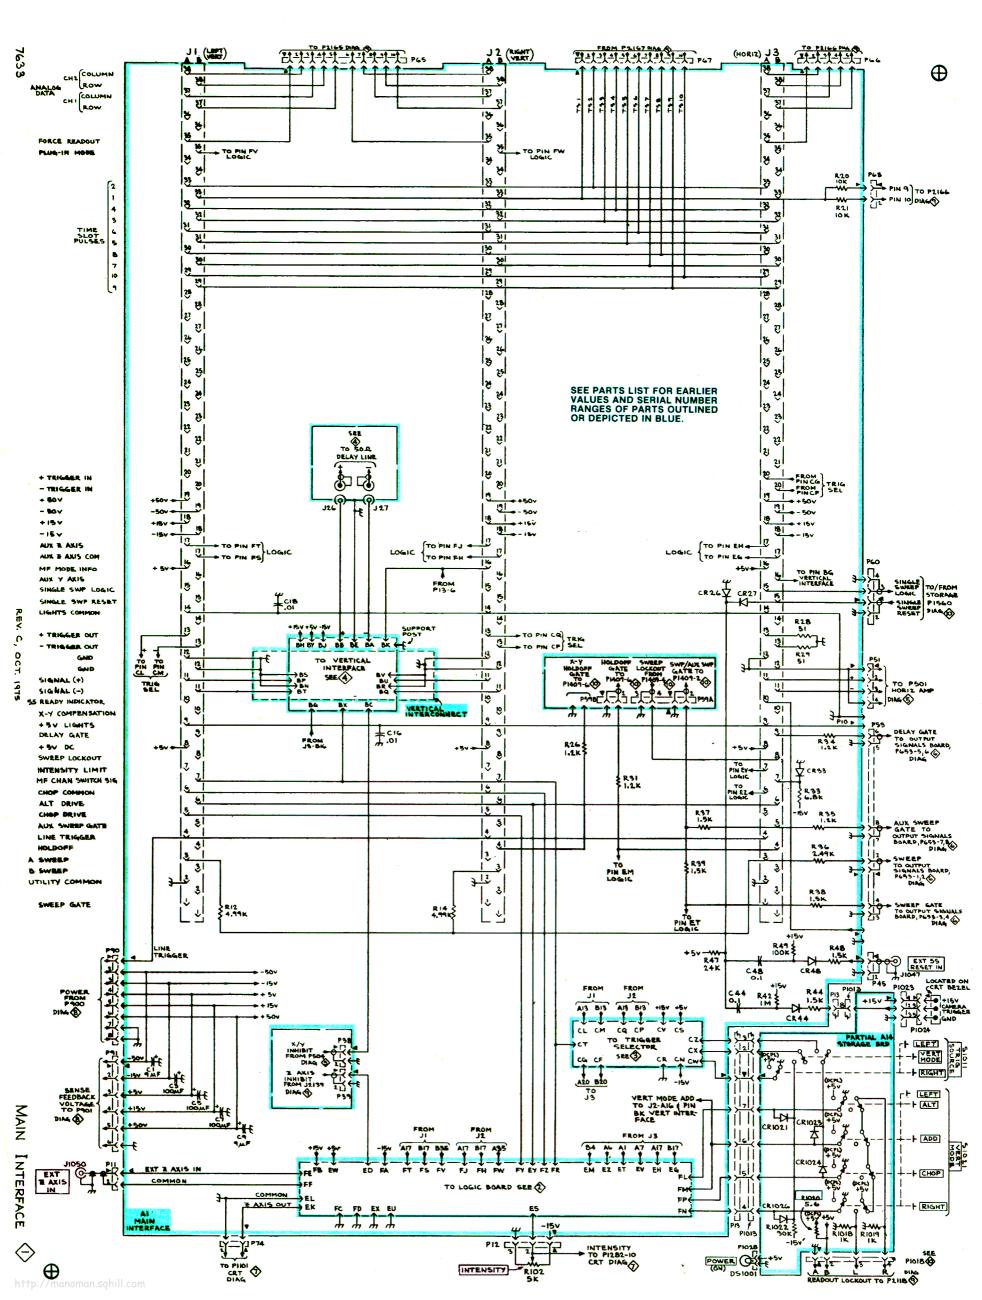

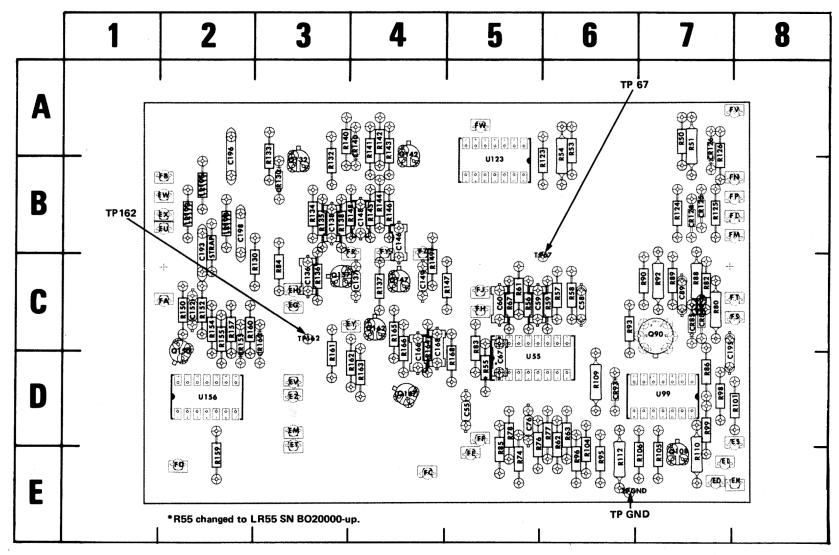

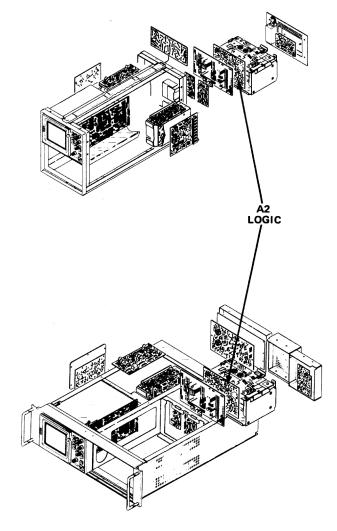


Figure 8-3. A2-Logic board.

CKT NO	GRID LOC										
C55	5D	CR85	7C	Q167	4D	R83	5C	R124	7B	R150	2C
C58	6C	CR93	6D			R84	3C	R125	7B	R152	2C
C59	5C	CR124	7B	R50	7A	R85	5E	R126	7A	R154	2C
C60	5C	CR125	7B	R51	7A	R86	7D	R130	3C	R155	2C
C67	5D	CR126	7A	R53	6A	R88	7C	R132	3B	R157	2C
C76	5D	CR130	3B	R54	6A	R89	7C	R133	3A	R159	2E
C89	7C	CR140	4A	R55	5D	R90	7C	R134	3B	R160	2C
C136	3C	CR155	2C	R56	5C	R92	7C	R135	3B	R161	3C
C137	4C	CR160	3C	R57	6C	R93	6C	R136	3C	R162	4D
C138	3B	LR55	5D	R58	6C	R95	6E	R137	4C	R163	4D
C146	4B	LR193	2B	R59	6C	R96	6E	R138	3B	R164	4C
C148	4B	LR195	2B	R61	5C	R98	7D	R140	3A	R165	4C
C149	4C	LR198	2B	R62	6D	R99	7D	R145	4B	R166	4C
C152	2C	Q90	7C	R63	6D	R101	8D	R141	4A	R168	5D
C166	4C	Q108	7E	R67	5C	R104	6E	R142	4A	TP67	6C
C168	4C	Q132	3B	R74	5E	R105	7E	R143	4A	TP162	3C
C193	2B	Q137	3C	R76	5D	R106	7E	R144	4B		
C195	7C	Q142	4A	R77	6D	R109	6D	R146	4B	U55	5D
C196	2A	Q147	4C	R78	5D	R110	7E	R147	5C	U99	7D
C198	2B	Q150	2D	R80	7C	R112	6E	R148	4B	U123	5 B
CR84	7C	Q162	4C	R82	7C	R123	6B	R149	4C	U156	2D

VOLTAGES AND WAVEFORMS

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECII	FICATIONS	RECOMMENDED TYPE
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equivalent. A 7A13 Differential Comparator was used to obtain offset.
Probe	Fast rise 10X attenua tible with the vertical test oscilloscope.		Tektronix P6053B, or equivalent.
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front panel controls (knob type) to mid-range.

Set VERT MODE for CHOP.

Set TRIG SOURCE for VERT MODE. Set for NON STORE condition.

No plug-in units are installed.

Voltmeter common is connected to chassis ground.

WAVEFORMS


Waveforms shown on this diagram were obtained under the following conditions:

7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A 7A15A Amplifier unit and a 7B53A Time-Base unit are installed in the mainframe under test. The test oscilloscope 4 Volts calibrator signal is applied to the amplifier unit. The amplifier unit is set for 1 V/division deflection centered on the crt. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is externally triggered from the +GATE OUT (MAIN) of the 7633 main-frame under test. The test oscilloscope is dc coupled.

Tolerances of voltages and waveforms shown are 20%.

(A)

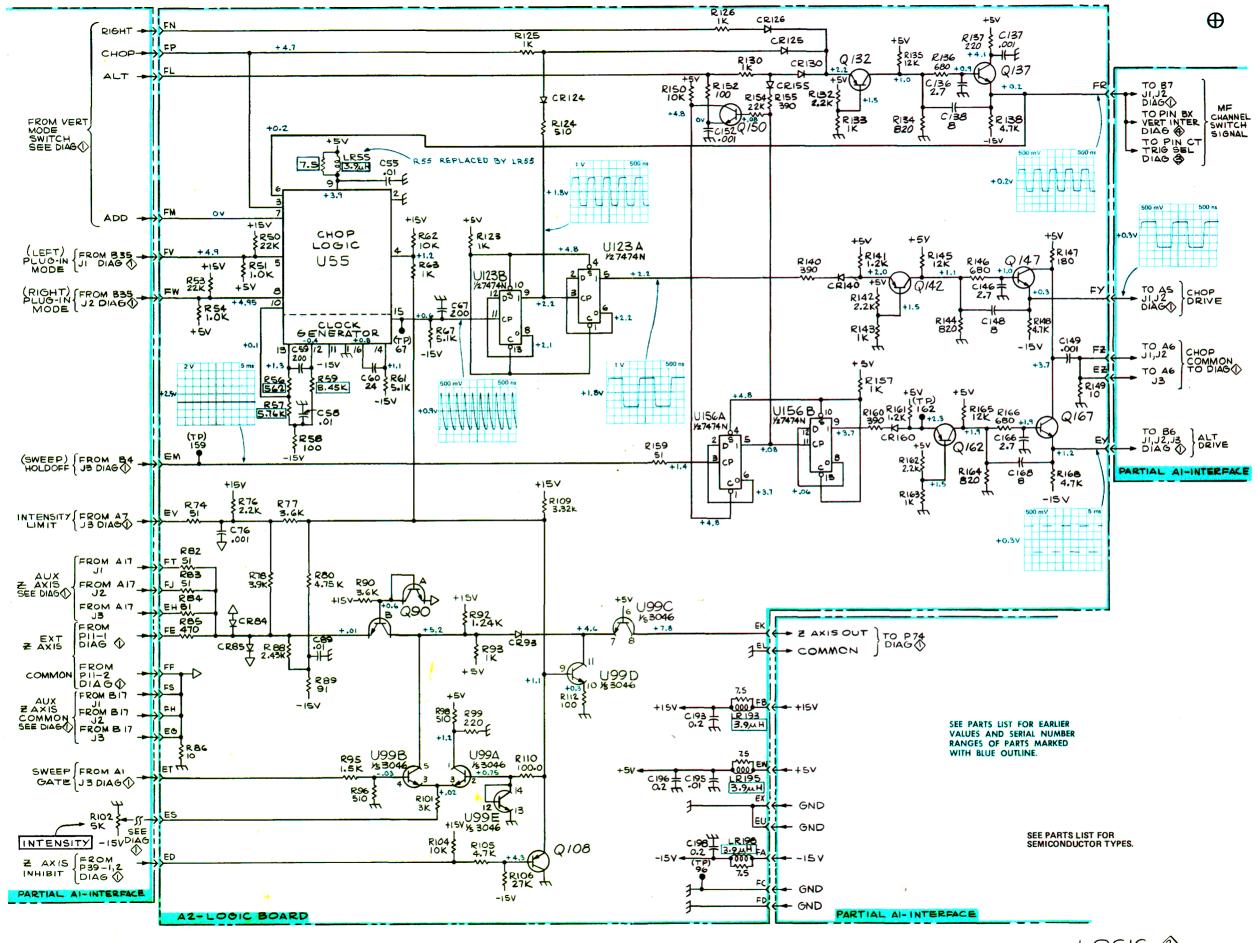

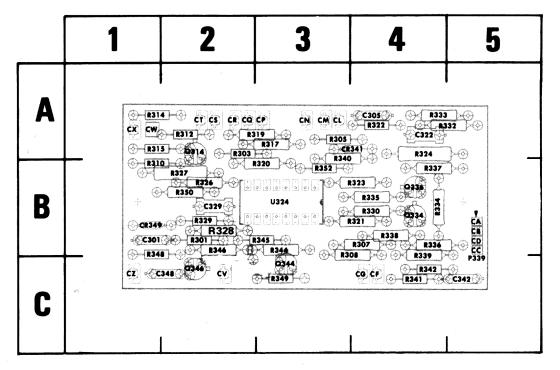


Figure 8-4. A3-Trigger Selector board.

CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C301	1B	Q344	3C	R322	4A	R340	3A
C305	4A	Q346	2C	R323	4B	R341	4C
C322	4A			R324	4A	R342	4C
C329	2B	R301	2B	R326	2B	R344	3B
C342	5C	R303	2A	R327	2B	R345	3B
C348	2C	R305	3A	R328	2B	R346	2B
		R307	4B	R329	2B	R348	1B
		R308	3B	R330	4B	R349	3C
CR341	4A	R310	1B	R332	4A	R350	2B
CR349	1B	R312	2A	R333	4A	R352	3B
		R314	1A	R334	4B		
P339	5C	R315	1A	R335	4B	U324	3B
		R317	3A	R336	4B		
Q314	2A	R319	3A	R337	4B		
Q334	4B	R320	3B	R338	4B		
Q336	4B	R321	4B	R339	4B		


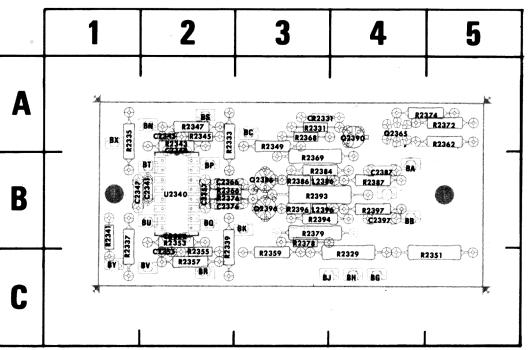


Figure 8-5. A4-Vertical Interface board.

СКТ	GRID	СКТ	GRID	СКТ	GRID	СКТ	GRID
NO	LOC	NO	LOC	NO	LOC	NO	LOC
							-
C2341	2B	L2396	3B	R2347	2A	R2384	3B
C2345	2A			R2349	3A	R2386	3B
C2347	1B	Q2365	4A	R2351	5C	R2387	4B
C2348	2A	Q2396	3B	R2353	2B	R2393	3B
C2355	2C	Q2390	4A	R2355	2C	R2394	3B
C2357	2B	Q2396	3B	R2357	2C	R2396	3B
C2358	2B			R2359	3C	R2397	4B
C2366	2B	R2235	1A	R2362	5A		
C2376	2B	R2329	4C	R2366	2B	U2340	2B
C2387	4B	R2331	3A	R2368	3A		
C2397	4B	R2333	2A	R2369	3B	1	
		R2337	1B	R2372	5A		
		R2339	2B	R2375	5A		
CR2331	3A	R2341	1B	R2376	2B		
		R2343	2A	R2378	3B		
L2386	3B	R2345	2A	R2379	3B		

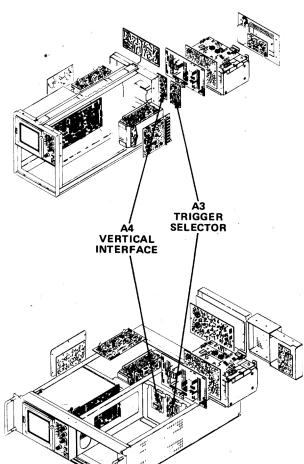

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

	n L	COMMENDED 1531 E	EGOT MENT		
ITEM	SPECII	FICATIONS	RECOMMENDED TYPE		
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equivalent. A 7A13 Differential Comparator was used to obtain offset.		
Probe	Fast rise 10X attenuation probe compatible with the vertical amplifier of the test oscilloscope.		Tektronix P6053B, or equivalent.		
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.		

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front panel controls (knob type) to mid-range.

Set VERT MODE for CHOP.

Set TRIG SOURCE for VERT MODE.
Set for NON STORE condition.
No plug-in units are installed.

Voltmeter common is connected to chassis ground.

WAVEFORMS


Waveforms shown on this diagram were obtained under the following conditions:

7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A 7A15A Amplifier unit and a 7B53A Time-Base unit are installed in the mainframe under test. The test oscilloscope 4 Volts calibrator signal is applied to the amplifier unit. The amplifier unit is set for 1 V/division deflection centered on the crt. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is externally triggered from the +GATE OUT (MAIN) of the 7633 main-frame under test. The test oscilloscope is dc coupled.

Tolerances of voltages and waveforms shown are 20%.

(A)

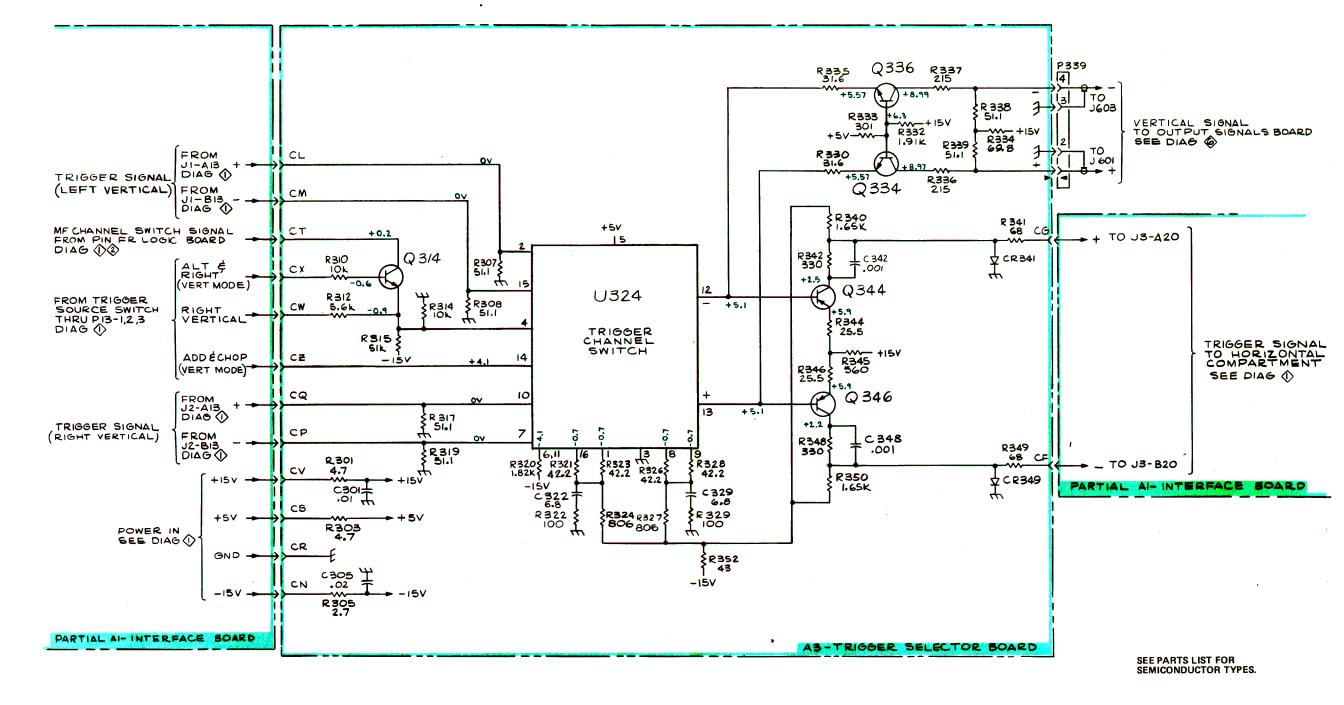


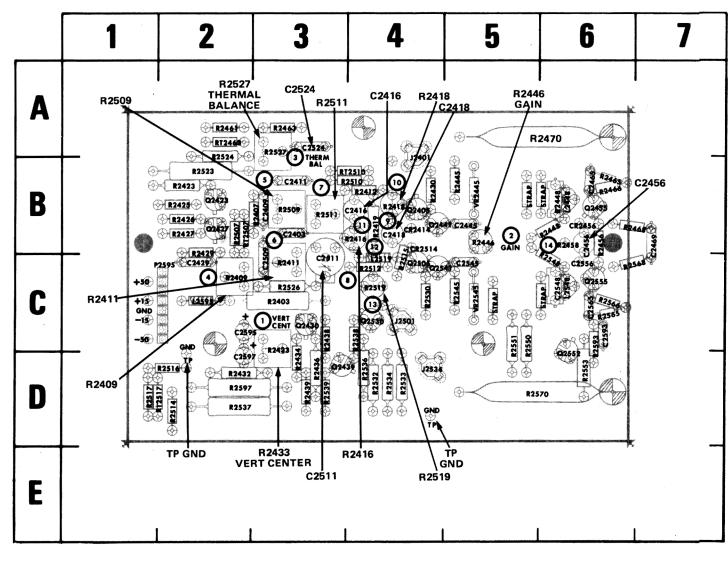


Figure 8-6. A5-Vertical Amplifier board (front).

CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C2403	3B	CR2414	4B	Q2455	6B	R2432	2D	R2512	4C	R2551	5C
C2409	3B	CR2456	6B	Q2505	4C	R2433	3C	R2512	2D		6D
C2411	3B	CR2514	4B	Q2530	4C	R2434	3D	R2514	4C	R2553	6C
C2416	4B	02011		Q2541	4C	R2436	3D	R2516	2D	R2565	
C2418	4B	J2401	4A	Q2552	4C 6D	R2438	3C	R2510	1D	R2566	6C
C2429	2C	J2501	4C	Q2555	6C	1	3D			R2568	7C
C2445	5B	J2534	4D	U 2555	60	R2439		R2519	4C	R2570	5D
C2456	6B	32534	40	D0400	20	R2445	5B	R2523	2B	R2593	6C
C2465	6B	L2448	6B	R2403	3C	R2446	5B	R2524	2A	R2597	2D
C2469	7B			R2407	3B	R2448	6B	R2526	3C		
		L2519	4C	R2409	2C	R2456	6B	R2527	3A	RT2463	2A
C2509	3C	L2548.	6C	R2411	3C	R2458	6B	R2530	4C	RT2507	2B
C2511	3C	L2595	2C	R2412	4B	R2461	2A	R2532	4D	RT2510	4B
C2524	3A	DOFOE	20	R2416	4B	R2463	3A	R2533	4D	RT2517	2D
C2545	5C	P2595	2C	R2418	4B	R2465	6B	R2534	4D	-	
C2548	6C		45	R2419	4B	R2466	6B	R2536	4D	VR2445	5B
C2556	6C	Q2405	4B	R2423	2B	R2468	7B	R2537	2D	VR2545	5C
C2593	6C	Q2423	2B	R2425	2B	R2470	6A	R2538	4C		
C2595	2C	Q2427	2B	R2426	2B	R2507	2B	R2539	3D		
C2597	2D	Q2430	3C	R2427	2B	R2509	3B	R2545	5C		
C2665	6C	Q2439	3D -	R2429	2B	R2510	4B	R2548	6C		
1		Q2441	4B	R2430	4B	R2511	3B	R2550	5C		

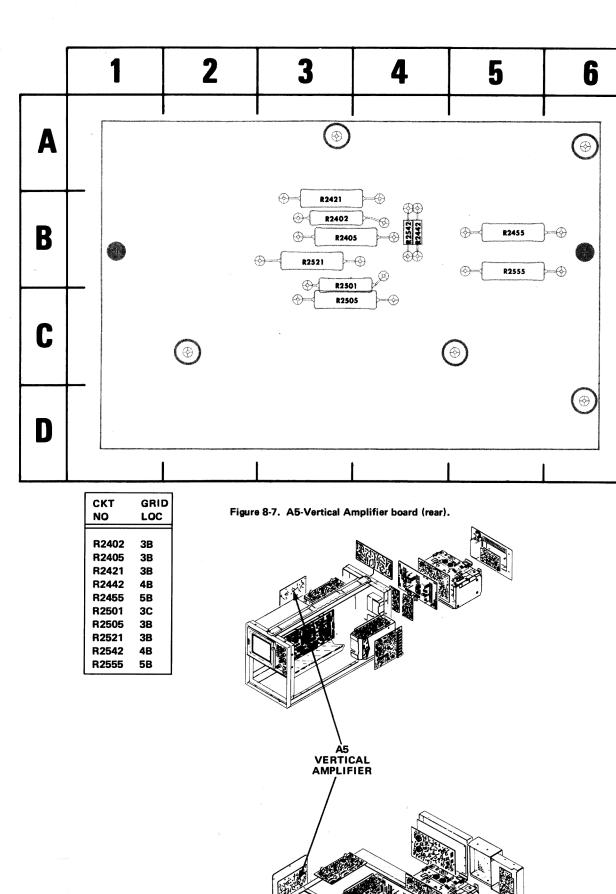

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFICATIONS		RECOMMENDED TYPE		
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equiva- lent. A 7A13 Differential Comparator was used to obtain offset.		
Probe	Fast rise 10X attenua tible with the vertical test oscilloscope.		Tektronix P6053B, or equivalent.		
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscilloscope must have adout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.		

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front panel controls (knob type) to mid-range.

Set VERT MODE for CHOP.

Set TRIG SOURCE for VERT MODE. Set for NON STORE condition. No plug-in units are installed.

Voltmeter common is connected to chassis ground.

WAVEFORMS


Waveforms shown on this diagram were obtained under the following conditions:

7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A 7A15A Amplifier unit and a 7B53A Time-Base unit are installed in the mainframe under test. The test oscilloscope 4 Volts calibrator signal is applied to the amplifier unit. The amplifier unit is set for 1 V/division deflection centered on the crt. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is externally triggered from the +GATE OUT (MAIN) of the 7633 main-frame under test. The test oscilloscope is dc coupled.

Tolerances of voltages and waveforms shown are 20%.

⑻

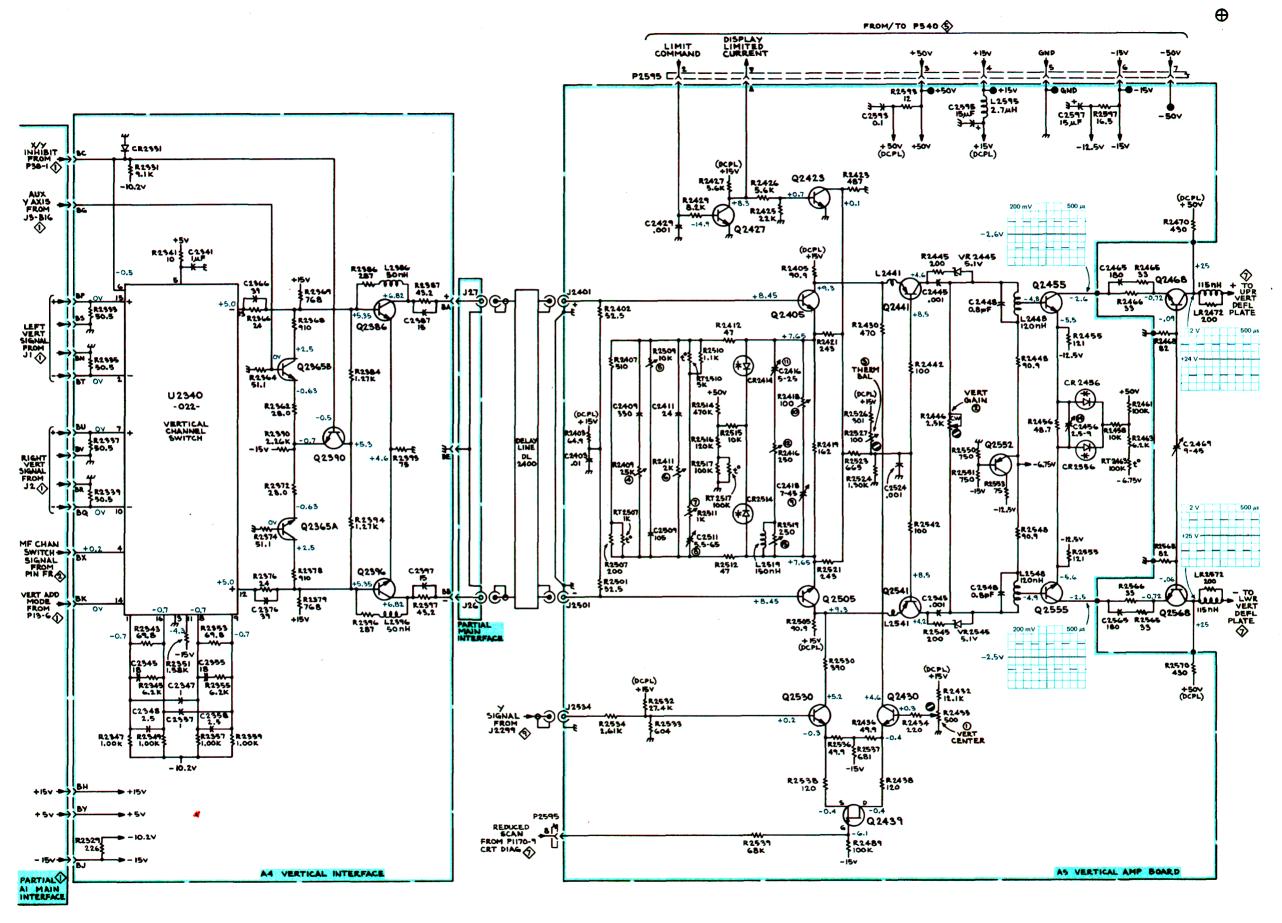

4


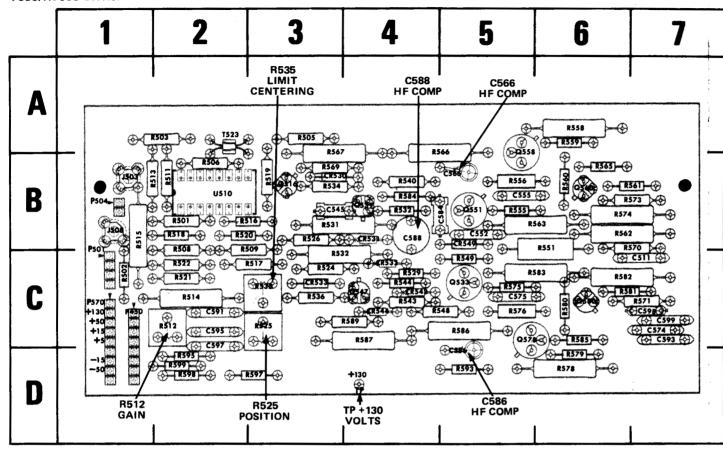


Figure 8-8. A6-Horizontal Amplifier board.

CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C511	7B	CR549	5B	R506	2B	R536	3C	R575	5C
C545	3B			R508	2B	R540	4B	R576	5C
C552	5B	J503	1B	R509	2B	R543	4C	R578	6D
C555	5B	J508	1B	R511	2B	R544	4C	R579	6C
C566	5B			R512	2C	R548	4C	R580	6C
C574	7C	P450	1C	R513	1B	R549	5C	R581	6C
C575	5C	P501	1B	R514	2C	R551	6B	R582	6C
C584	4B	P504	1B	R515	1B	R555	5B	R583	5C
C586	5C	P570	1C	R516	3B	R556	5B	R584	4B
C588	4B			R517	3C	R558	6A	R585	6C :
C591	2C	Q516	3B	R518	3B	R559	6A	R586	5C
C593	7C	Q533	5C	R519	3B	R560	6B	R587	4C ·
C595	2C	Q539	4B	R520	3B	R561	6B	R589	4C
C597	2C	Q547	4C	R521	2C	R562	6B	R593	5D
C598	7C	Q551	5B	R522	2C	R563	5B	R595	2D
C599	7C	Q558	5A	R524	3C	R565	6B	R597	3D
		Q560	6B	R525	3C	R566	4A	R598	2D
CR530	3B	Q578	5C	R526	3B	R567	3A	R599	2D
CR531	4B	Q580	6C	R529	4C	R569	3B		
CR532	4C	R501	2B	R531	3B	R570	6B.	T523	2A.
CR533	3C 👼	© 02	1C	R532	4B	R571	7C		
CR543	4C	R503	2A	R534	3B	R573	6B	U510	2B
CR544	4C	R505	3A	R535	3C	R574	6B		

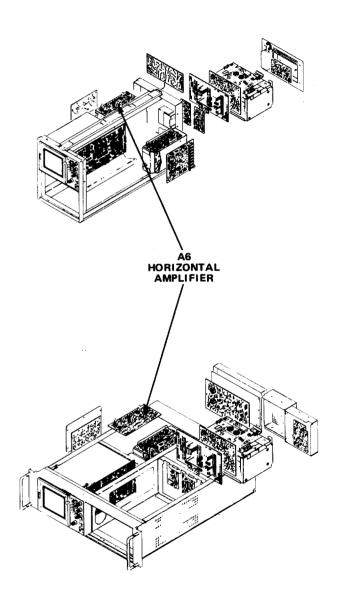

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIFICATIONS		RECOMMENDED TYPE
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equivalent. A 7A13 Differential Comparator was used to obtain offset.
Probe	Fast rise 10X attenua tible with the vertical test oscilloscope.		Tektronix P6053B, or equivalent.
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front panel controls (knob type) to mid-range.

Set VERT MODE for CHOP.

Set TRIG SOURCE for VERT MODE. Set for NON STORE condition.


No plug-in units are installed. Voltmeter common is connected to chassis ground.

WAVEFORMS

Waveforms shown on this diagram were obtained under the following conditions:

7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A 7A15A Amplifier unit and a 7B53A Time-Base unit are installed in the mainframe under test. The test oscilloscope 4 Volts calibrator signal is applied to the amplifier unit. The amplifier unit is set for 1 V/division deflection centered on the crt. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is externally triggered from the +GATE OUT (MAIN) of the 7633 main-frame under test. The test oscilloscope is dc coupled.

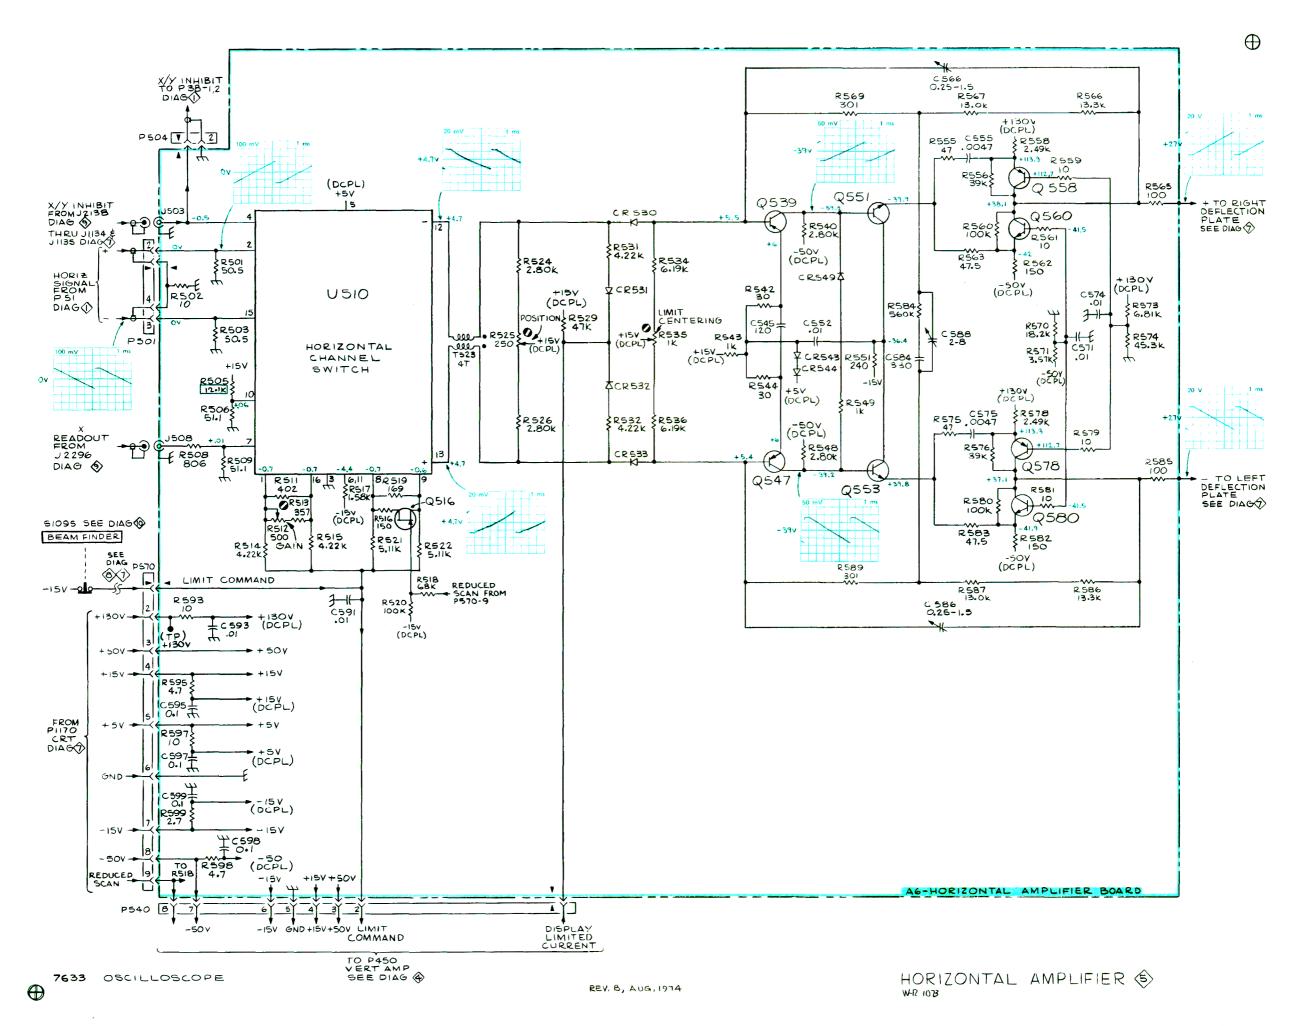


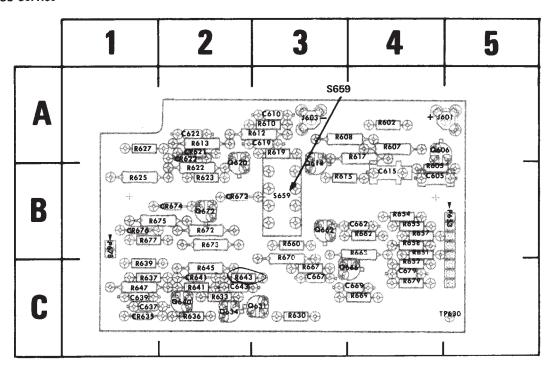


Figure 8-9. A7-Output Signals board.

CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C605	4B	J603	3A	R615	3B	R660	3B
C610	3A			R617	4A	R662	4B
C615	4B	P653	5B	R619	3A	R663	4B
C619	3A	P678	1B	R622	2B	R667	3C
C622	2A			R623	2B	R669	4C
C637	1C	Q606	4A	R625	1B	R670	3B
C639	1C	Q618	3B	R627	1A	R672	2B
C643	2C	Q620	2A	R630	3C	R673	2B
C662	4B	Q631	3C	R633	2C	R675	2B
C667	3C	Q634	2C	R636	2C	R677	1B
C669	4C	Q640	2C	R637	1C	R679	4C
C679	4C	Q662	3B	R639	1C		
		Q666	4C	R641	2C	S659	3B
CR621	2A	Q672	28	R643	2C]
CR622	2A			R645	2C	TP630	5C
CR635	1C	R602	4A	R647	1C		
CR641	2C	R605	4B	R651	4B		
CR672	2B	R607	4A	R652	4C		
CR674	2B	R608	3A	R654	4B		
CR676	1B	R610	3A	R655	4B		
		R612	3A	R657	4B		_
J601	5A	R613	2A	R658	4B		(A)

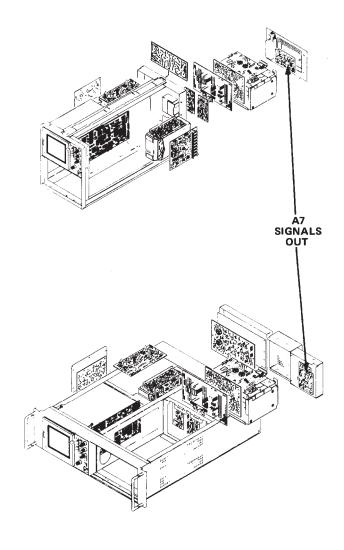

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

			-con meior
ITEM	SPECII	FICATIONS	RECOMMENDED TYPE
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equiva- lent. A 7A13 Differential Comparator was used to obtain offset.
Probe	Fast rise 10X attenuation probe compa- tible with the vertical amplifier of the test oscilloscope.		Tektronix P6053B, or equivalent.
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front panel controls (knob type) to mid-range.

Set VERT MODE for CHOP.
Set TRIG SOURCE for VERT MODE.

Set for NON STORE condition. No plug-in units are installed.

Voltmeter common is connected to chassis ground.

WAVEFORMS


Waveforms shown on this diagram were obtained under the following conditions:

7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A 7A15A Amplifier unit and a 7B53A Time-Base unit are installed in the mainframe under test. The test oscilloscope 4 Volts calibrator signal is applied to the amplifier unit. The amplifier unit is set for 1 V/division deflection centered on the crt. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is externally triggered from the +GATE OUT (MAIN) of the 7633 main-frame under test. The test oscilloscope is dc coupled.

 \oplus C 605 R605 Q606 R607 +12.8 +15V R608 82,5 R610\$ C615 VERTICAL SIGNAL FROM TRIGGER SELECTOR P339 DIAG R602 R615 1000 R 617 15.8 .001 +12.8 J603 Q618 .001 500 mV 1 ms R613 ₹R625 ₹ 2.1K J629 VERT SIG OUT R627 R622 C 622 R623 +150 4.7 (TP) P653 -15V 240 240 R630 SWEEP FROM P53-2, I DIAG 2 100 Q634 C 639 Q631 R647 Q640 931 CR635₽ + SAWTOOTH R633 R637 +150 大 CR641 ↑2 ↑ c643 ↑ 0.1 \$R641 2.7K R643 +150 +15V -15V S659 GATE (SELECTOR) R662 820 R669} .022 CR672 R672 1R673 2.21K R660 C669 R670 SWEEP GATE FROM P53-4,3 DIAG () R667 560 0.1 Q662 \$ CR676 J 679 CR674 SWP GATE **-**+ GATE **-**⊳₃ R652 AUX GATE Q672 R663 Q666 ٥-R675 909 DLY GATE 0 C667 SWEEP GATE FROM 53-8,7 -DIAG (DCPL) R655 3 (DCPL) DELAY GATE FROM P53-6,5-DIAG (DCPL) R658 -15V +15V `-15V -15V (DCPL) SEE PARTS LIST FOR SEMICONDUCTOR TYPES. A7- OUT PUT SIGNALS BOARD 2 ▲ P678 FROM P998

7633

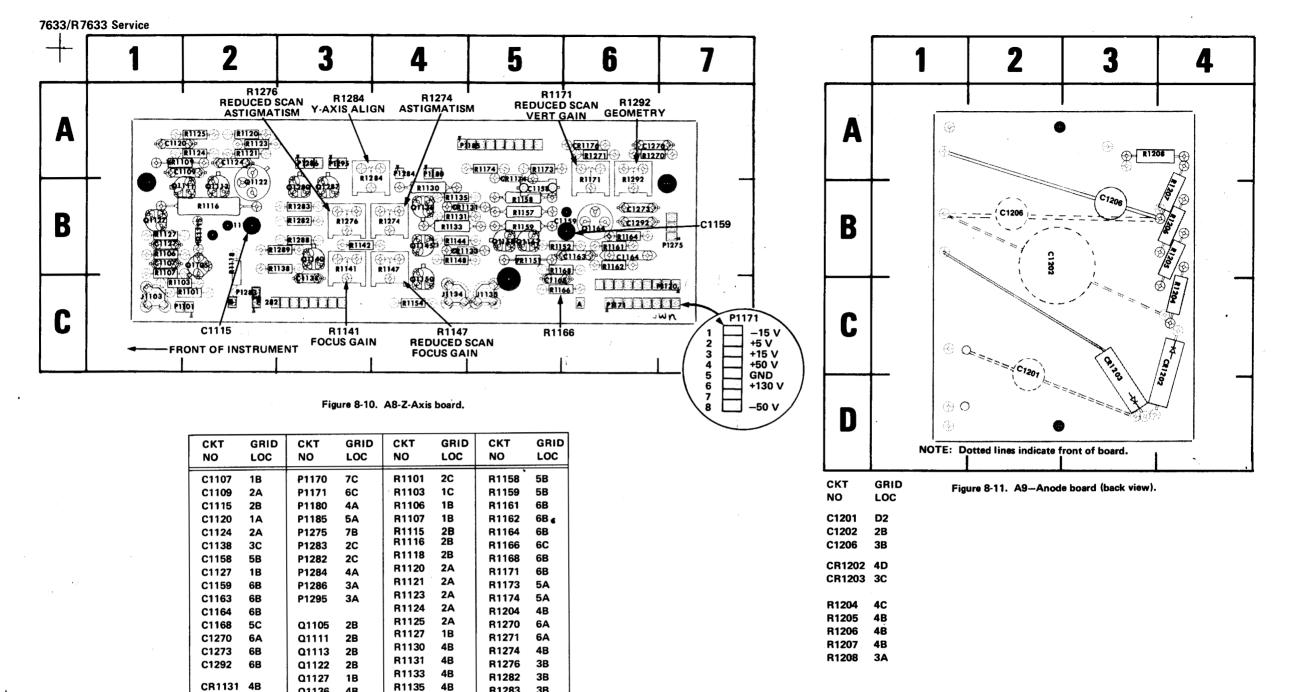

REV. C, OCT. 1975

Located on front of board:

Q1136

Q1140

Q1145

Q1150

Q1155

Q1164

Q1167

Q1280

Q1287

3B

4B

4C

5B

6B

5B

3B

3B

CR1133 4B

CR1174 5B

CR1176 6A

1C

4C

5C

2C

J1103

J1134

J1135

P1101

C1202 (relocated from back of board SN BO60000-up)

R1135

R1138

R1141

R1142

R1144

R1147

R1148

R1152

R1154

R1157

4B

3B

3B

3B

4B

4B

4B

6B

4C

5B

R1283

R1288

R1289

R1292

VR1109 1A

VR1151 5B


3B

3B

3**B**

6B

C1206 (relocated to back of board SN BO60000-up)

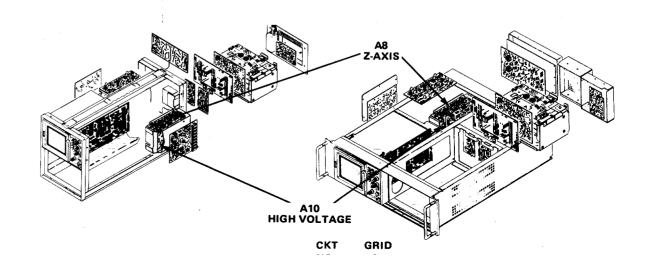

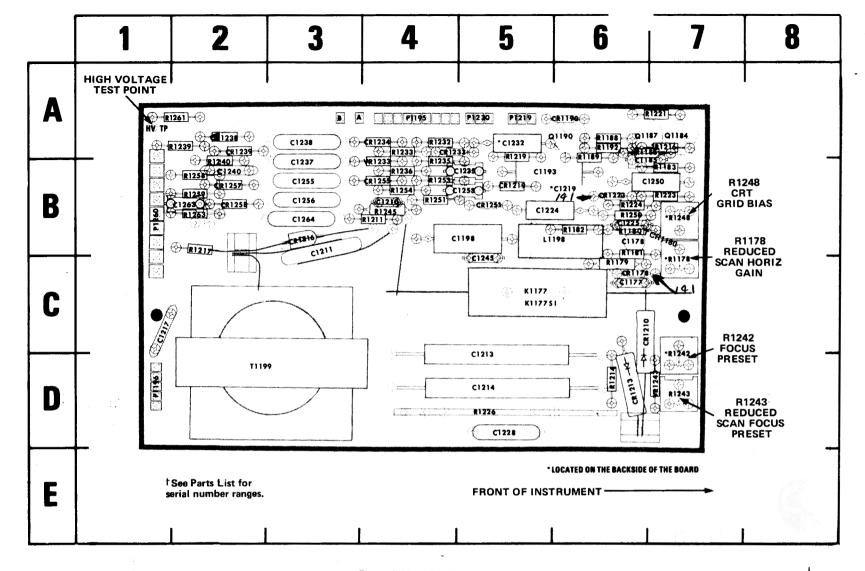


Figure 8-12. A10-High Voltage board.

CKT	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C1177	6C	C1256	3B	L1198	5B	R1193	4B	2424	70
C1193	5B			L1190	36			R1248	7B
C1198	4B	C1263	2B			R1211	4B	R1250	6B
		C1264	3B	P1195	4A	R1214	6D	R1251	4B
C1210	4B	CR1180	7B	P1196	1D	R1217	2C	R1253	4B
C1211	3C	CR1190	6A	P1219	5A	R1219	5B	R1254	4B
C1213	5D	CR1210	6C	P1230	5A	R1221	7A	R1258	2B
C1214	5D	CR1213	6D	P1260	1B	R1223	7B	R1259	2B
C1217	1C	CR1216	3B			R1224	6B	R1261	1A
C1219	6B	CR1219	5B	Q1184	7A	R1225	6B	R1263	2B
C1224	5B	CR1223	6B	Q1187	6A	R1226	5D		
C1225	6C	CR1233	4B	Q1190	6A	R1227	4D	T1199	2D
C1228	5D	CR1234	4A			R1228	4D		
C1232	5A	CR1238	2A	R1177	5D	R1232	4A	VR1233	4B
C1235	4B	CR1239	2B	R1178	7C	R1233	4B	VR1243	
C1237	3B	CR1251	5B	R1179	6C	R1235	4B	**********	
C1238	3A	CR1255	4B	R1180	6C	R1236	4B		
C1240	2B	CR1255	2B	R1183	7B		2A		- 1
C1245					. –	R1239			
C1249	5C	CR1258	2B	R1185	6B	R1240	2B		
	6B			R1188	6A	R1242	7D		
C1253	4B	K1177	5C	R1189	6B	R1243	7D		
C1255	3B			R1192	6B	R1245	4B		

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	ITEM SPECIFIC		RECOMMENDED TYPE
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equivalent. A 7A13 Differential Comparator was used to obtain offset.
Probe	Fast rise 10X attenua with the vertical ampl oscilloscope.	tion probe compatible lifier of the test	Tektronix P6053B, or equivalent.
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front panel controls (knob type) to mid-range.

Set VERT MODE for CHOP.

Set TRIG SOURCE for VERT MODE. Set for NON STORE condition. No plug-in units are installed.


Voltmeter common is connected to chassis ground.

WAVEFORMS

Waveforms shown on this diagram were obtained under the following conditions:

7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A 7A15A Amplifier unit and a 7B53A Time Base unit are installed in the mainframe under test. The test oscilloscope 4 Volts calibrator signal is applied to the amplifier unit. The amplifier unit is set for 1 V/division deflection centered on the crt. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is dc coupled and internally triggered.

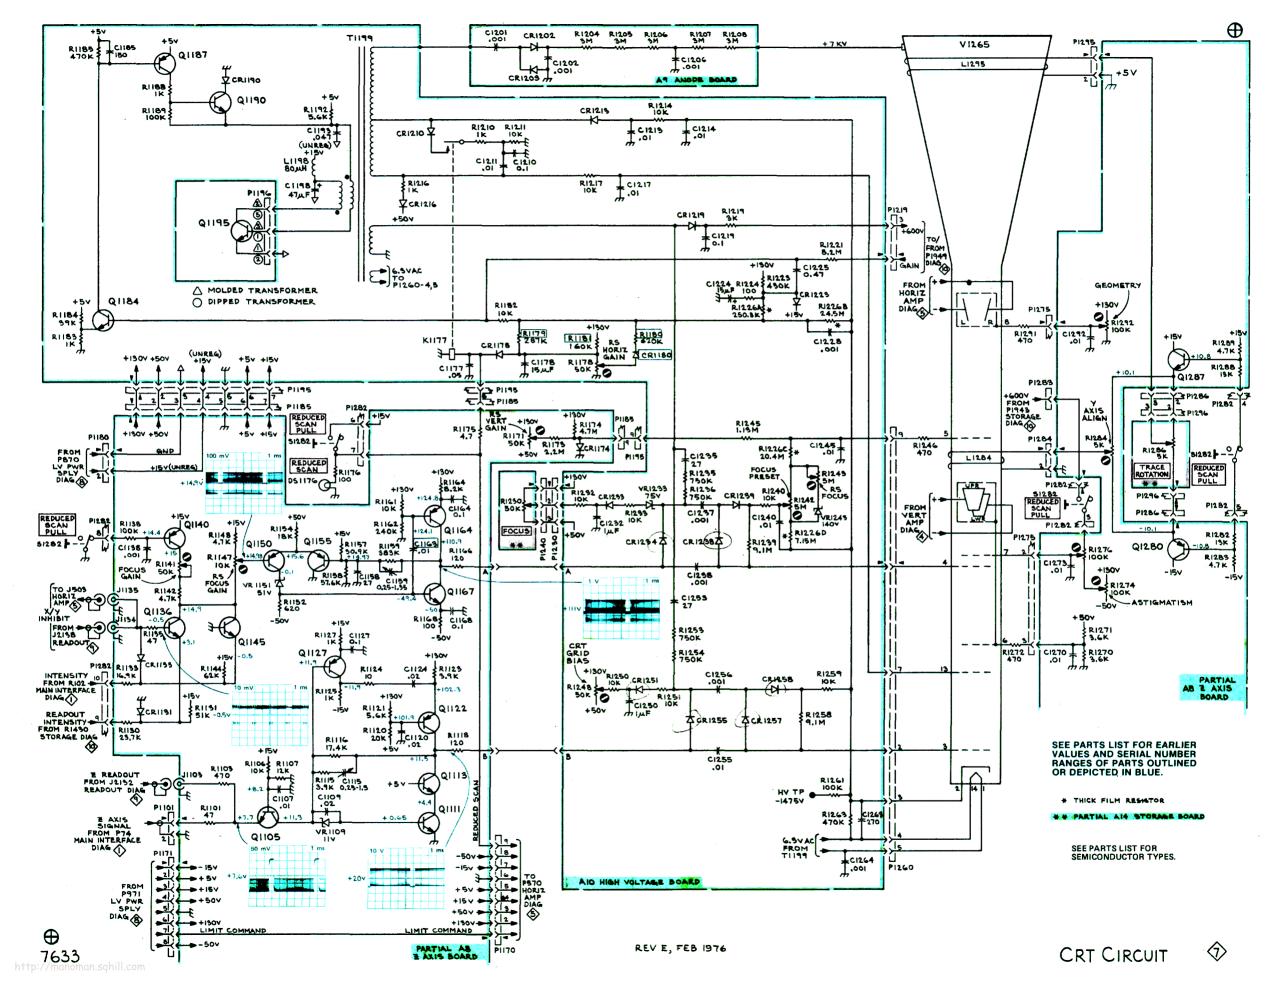

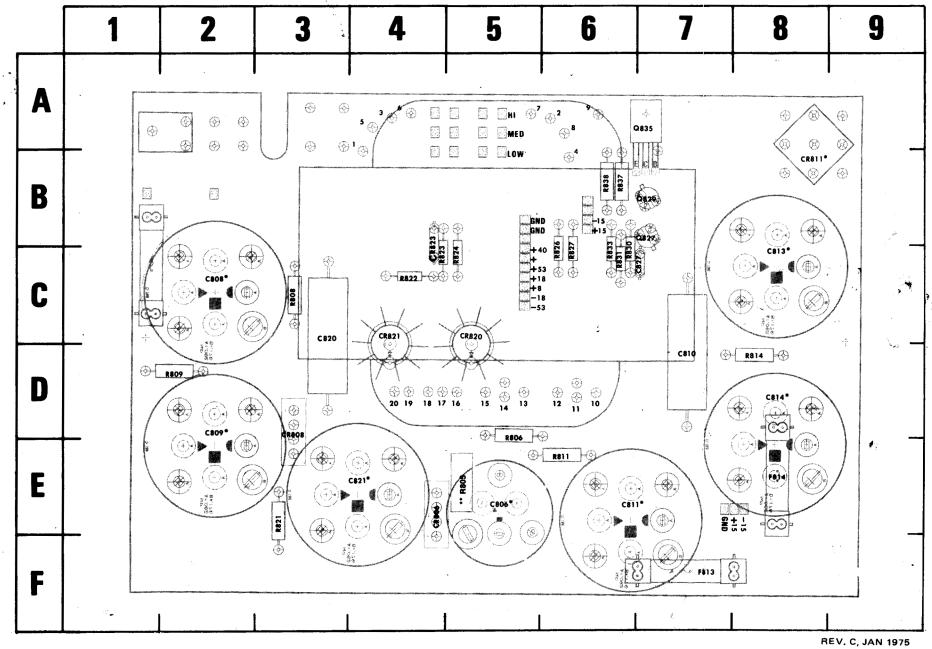


Figure 8-13. A11-Low-Voltage Rectifier board.

GRID

LOC

CKT

R833

R837

R838

, NO

CKT

NO

R805

R806

GRID

LOC

CKT

NO

CR806

CR808

4E

3D

C806 **CR811** 8B **R808** 3C 5E C808 2C **CR820** 5C R809 2D 6E C809 2D **CR821** 4C R811 7D 8D C810 **CR823** 4C R814 3E C811 6E R821 4C C813 8C F813 7F R822 8D 5C C814 R824 F814 8E C820 3D R826 6C 4E 6C C821 Q825 7A R827 7C R830 6C C827 Q827 7B R831 6C 7B Q829

5E

5D

MORE

6C


6B

GRID

LOC

^{*}Located on backside of board.

^{**}See Parts List for serial number ranges.

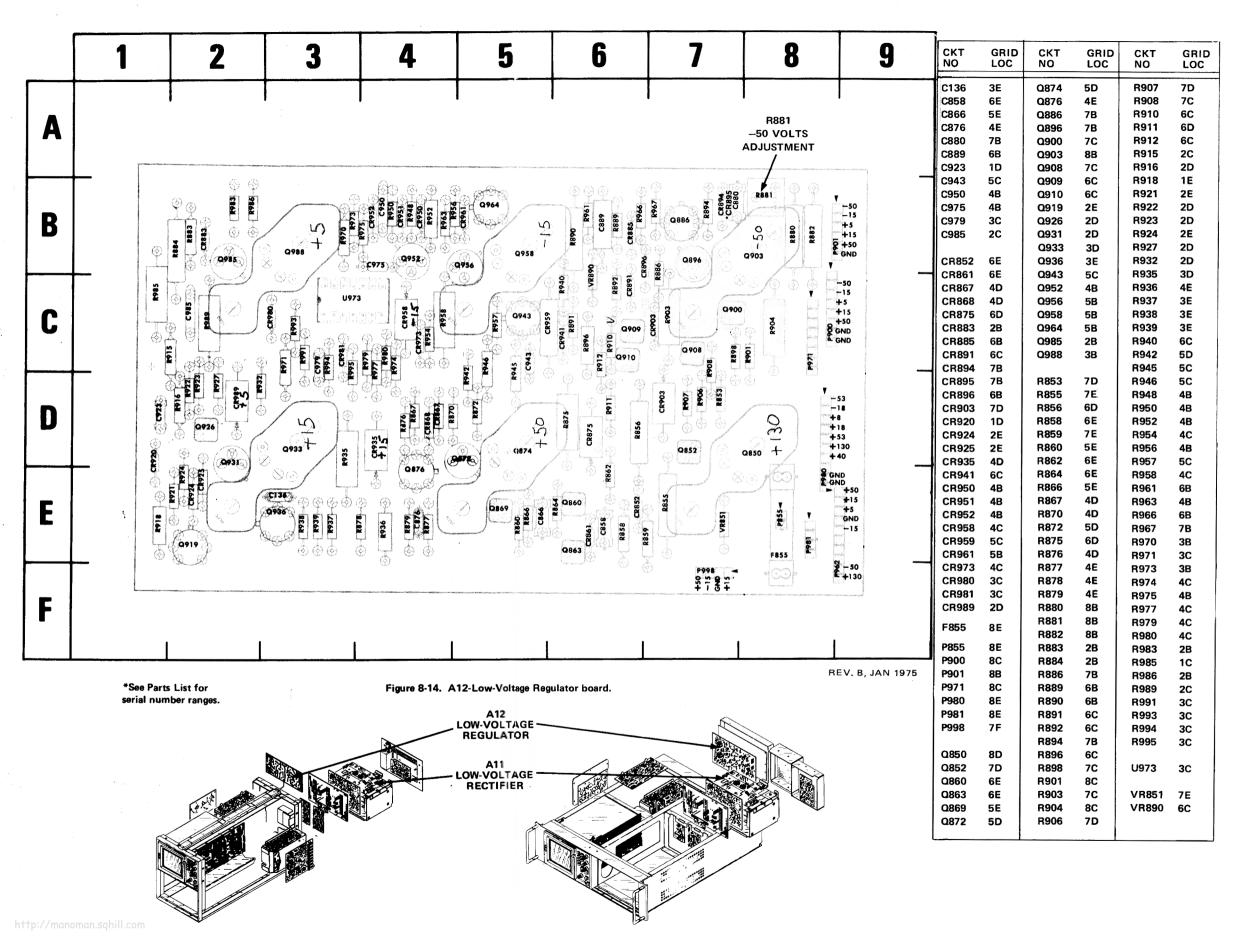

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

ITEM	SPECIF	FICATIONS	RECOMMENDED TYPE
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 M Ω , 20 pF 500 ns	Tektronix 7603 or 7613 equipped with 7A22 Amplifier and 7B53A Time-Base unit, or equivalent.
Probe	Fast rise 10X attenuatible with the vertical test oscilloscope.		Tektronix P6053B, or equivalent.
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.
Calibration Fixture	Used for loading power waveforms.	er supply for ripple	Tektronix Signal Standardizer, Tektronix Part Number 067-0587-01, or equivalent.

VOLTAGE MEASUREMENTS

Voltage measurements on the diagram were made under the following conditions:

Set knob type front panel controls (except READOUT) to mid-range.

Turn READOUT to off.
Set VERT MODE for CHOP.
Set for NON STORE condition.
Set TRIG SOURCE for VERT MODE.

No plug-ins are installed.

Voltmeter common is connected to chassis ground.


WAVEFORMS

Waveforms shown on this diagram were obtained under the following conditions:


7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. A signal standardizer unit is installed in a vertical compartment and a 7B53A Time Base unit in the horizontal compartment. The signal standardizer unit is used for power supply loading and is set for AUX IN with a REP RATE of 100 Hz. No signal is applied. The 7B53A is set for internal auto-trigger, 0.5 ms/division sweep rate.

TEST OSCILLOSCOPE. The test oscilloscope is ac coupled and set for LINE trigger. A 7A22 Amplifier unit is installed and set as follows:

HF -3 dB POINT 30 kHz
LF -3 dB point DC
+INPUT AC
-INPUT GND

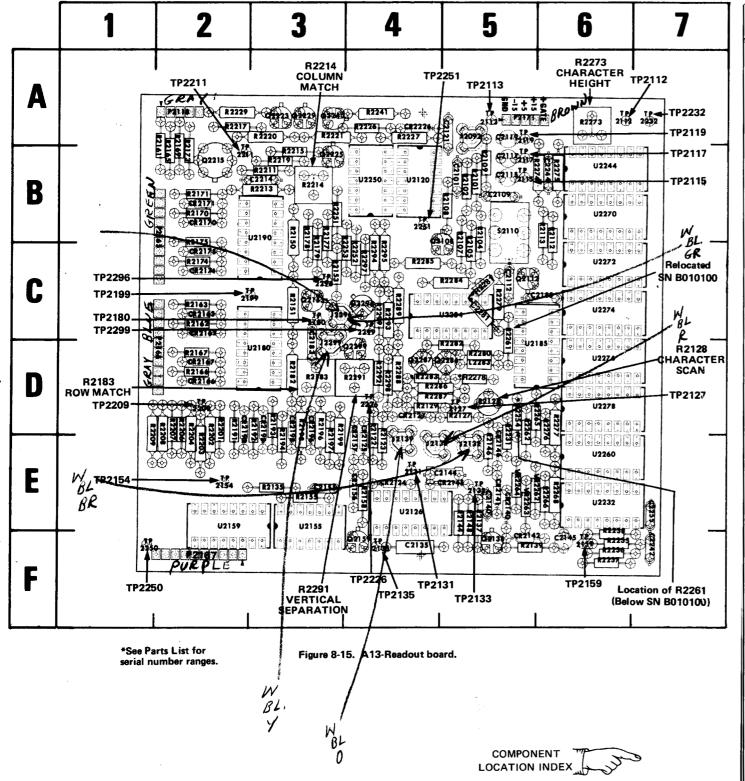

СКТ	GRID	СКТ	GRID	СКТ	GRID	СКТ	GRID
NO	LOC	NO	LOC	NO.	LOC	NO	LOC
		-					
C2101	5B	P2166	2D	R2182	3D	R2285	4C
C2109	5B	P2171	5A	R2183	3D	R2286	4D
C2112	5C			R2185	3E	R2287	4D
C2115	5B	Q2108	4C	R2191	2D	R2288	4D
C2117	5B	Q2112	5C	R2192	3D	R2289	4C
C2119	5A	Q2138	5F	R2193	3D	R2292	4D
C2113	5A	Q2153	3C	R2194	3E	R2291	4D
				R2196	3D	R2293	4C
C2135	4F	Q2159	4F	R2197	3D	R2294	4C
C2140	5E	Q2215	2B	R2198	3D	R2295	4C
C2242	7F	Q2223	3A	R2199	3D	R2297	4C
C2144	5E	Q2225	3B				
C2145	6F	Q2229	3A	R2201	2D	R2298	4D
C2155	3E	Q2240	3A	R2202	2D	R2299	4C
C2185	6C	Q2287	4D	R2203	2E	S2110	5B
C2183	3D	Q2296	4C	R2204	2D	TP2112	6A
C2214	3B	Q2299	4D	R2206	2D	TP2113	
C2244	6 B			R2207	2D	TP2115	5B
C2255	7E			R2208	2D	TP2115	5B
C2281	5C	R2101	5B	R2209	1E		
C2286	5D	R2102	5B	R2211	3B	TP2119	5A
		R2104	5B	R2213	3B	TP2127	5D
CR2124	4E	R2105	5C	R2214	3B	TP2131	4E
CR2125	4E	R2107	5C	R2215	3B	TP2133	5E
CR2127	4D	R2108	5B	R2217	2A	TP2135	4F
CR2140	5E	R2109	5B	R2219	3B	TP2154	2E
CR2141	5E	R2112	6B	R2220	3A	TP2159	6F
CR2142		R2113	6B	R2221	3A	TP2180	3C
CR2145		R2122	4D			TP2199	3C
CR2146		R2123	4E	R2226	4A	TP2209	2D
CR2146		R2127	5D	R2227	4A	TP2211	2B
CR2150		R2128	5D	R2229	2A	TP2232	7A
		R2129	4D	R2231	5D	TP2226	4D
CR2162				R2235	6F	TP2250	1F
CR2163		R2137	5E	R2236	6F	TP2251	4B
CR2166		R2139	5F	R2237	6F	TP2296	3C
CR2167		R2144	5E	R2238	6E	TP2299	4C
CR2170		R2146	5E	R2241	4A		
CR2171		R2148	5E	R2251	3B	U2120	4B
CR2174	2C	R2150	3B	R2252	4C	U2126	4E
CR2175	2C	R2151	3C	R2253	4C	U2155	3E
CR2192	2D	R2153	3C	R2254	5D	U2159	2E
CR2193	3D	R2155	3E	R2261	5C	U2180	3D
CR2196		R2158	4E	R2262	5D	U2185	6D
CR2198		R2161	2B	R2265	6D	U2190	3B
CR2226		R2162	2C	R2266	6E	U2232	6E
J2092	5A	R2163	2C		5E	U2244	6B
J2132	5E	R2165	2B	R2268		U2250	4B
J2132	4E	R2166	2D	R2273	6A	U2260	6E
		R2167		R2274	6B	U2270	6B
J2139	4E		2D	R2275	6B	U2272	6C
J2296	3C	R2169	2B	R2276	6D	U2272	6C
J22 9 9	3D	R2170	2B	R2277	6D		
		R2171	2B	R2278	5D	U2276	6D
L2283	,5D	R2173	2B	R2279	5C	U2278	6D
		R2174	2C	R2280	5D	U2284	5C
P2118	2A	R2175	2C	R2281	5C		
P2167	2F	R2177	3B	R2282	5D	VR2262	6E
P2250	2F	R2178	3B⋅	R2283	4D	VR2263	5E
P2165	2B	R2179	3C	R2284	5C	VR2264	5E
1		ı		ı		I	

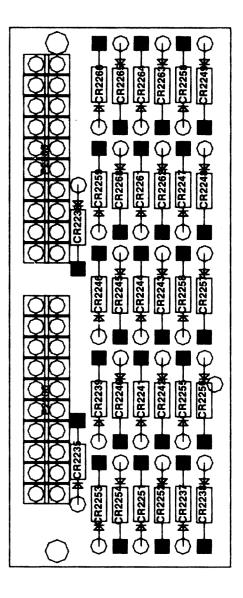

The voltages and waveforms shown on this diagram were obtained using the recommended test equipment and test set-ups listed below.

RECOMMENDED TEST EQUIPMENT

	V1=1	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			
ITEM	SPECII	FICATIONS	RECOMMENDED TYPE		
Oscilloscope	Frequency response Deflection factor Input impedance Sweep rate	DC to 65 MHz 5 mV to 5 V/Div 10 MΩ, 20 pF 600 ns	Tektronix 7803 or 7613 equipped with 7A15A Amplifier and 7B53A Time-Base unit, or equiva- lent. A 7A13 Differential Comperator was used to obtain offset.		
Probe	Fast rise 10X attenuation probe compatible with the vertical amplifier of the test oscilloscope.		tible with the vertical amplifier of the		Tektronix P8063B, or equivelent.
Voltmeter (Non-Loading Digital Multimeter)	Input impedance Range	10 MΩ 0 to 500 V	Tektronix 7D13 Digital Multimeter (test oscillo- scope must have readout system) or Tektronix DM 501 Digital Multimeter with power module, or equivalent.		

VOLTAGE MEASUREMENTS

Voltage measurements on this diagram were made under the following conditions:

Set front penel controls (knob type) to mid-range.

Set VERT MODE for CHOP.


Set TRIG SOURCE for VERT MODE Set for NON STORE condition. No plug-in units are installed.


Voltmeter common is connected to chassis ground.

WAVEFORMS

Waveforms shown on this diagram were obtained under the following conditions:


7633 OSCILLOSCOPE UNDER TEST. Front panel controls are set the same as for voltage measurements. No plug-ins are installed.

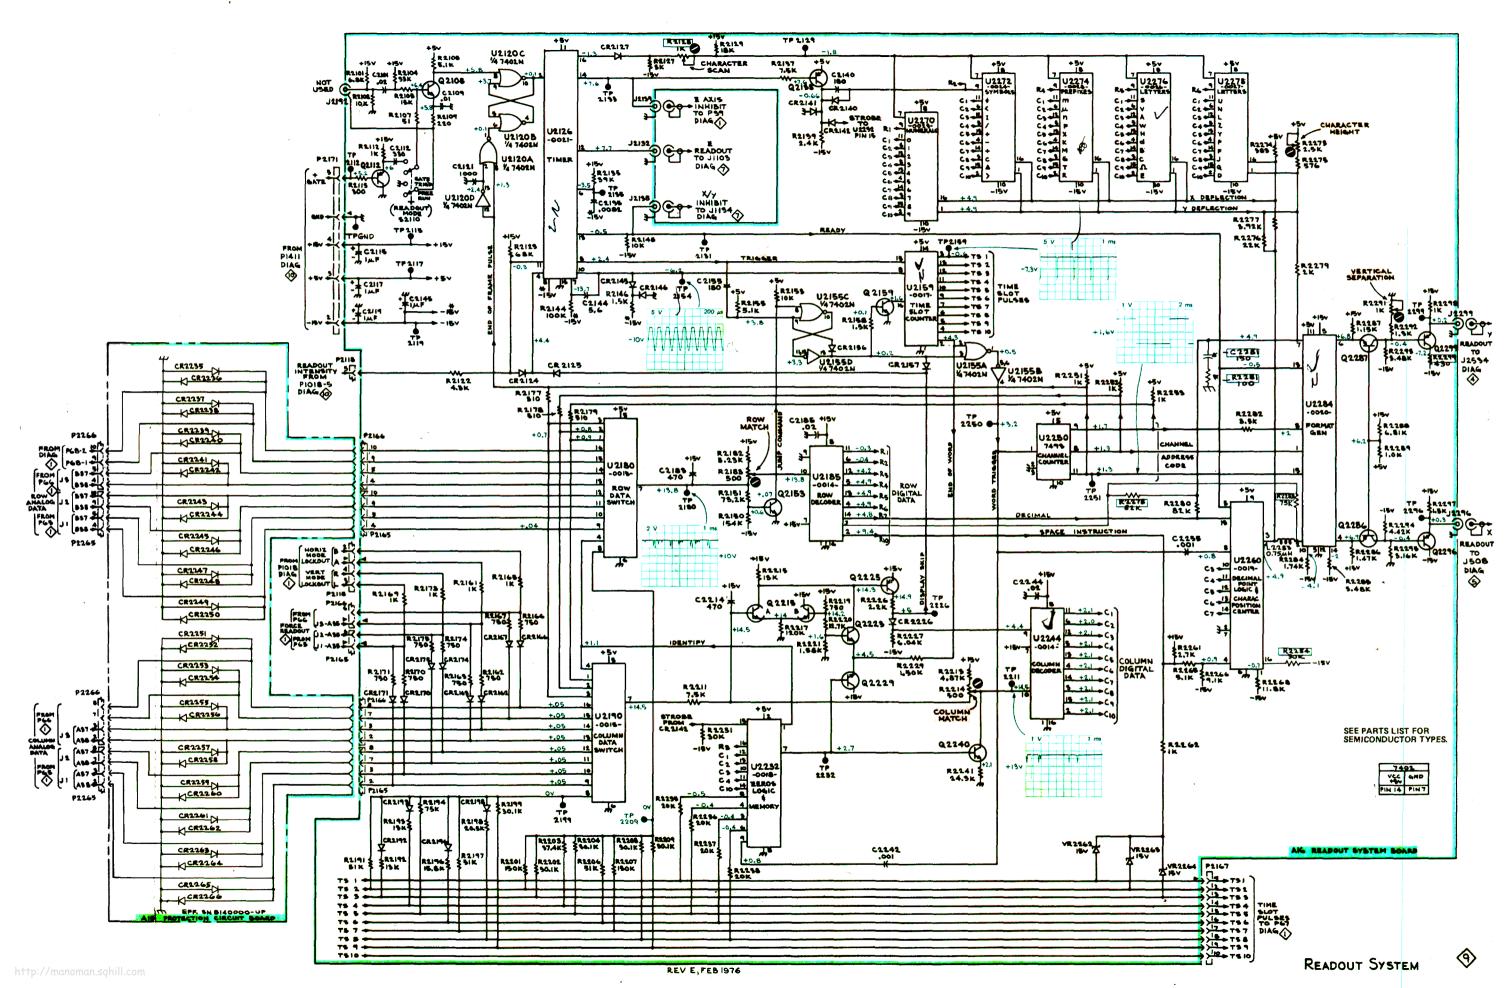


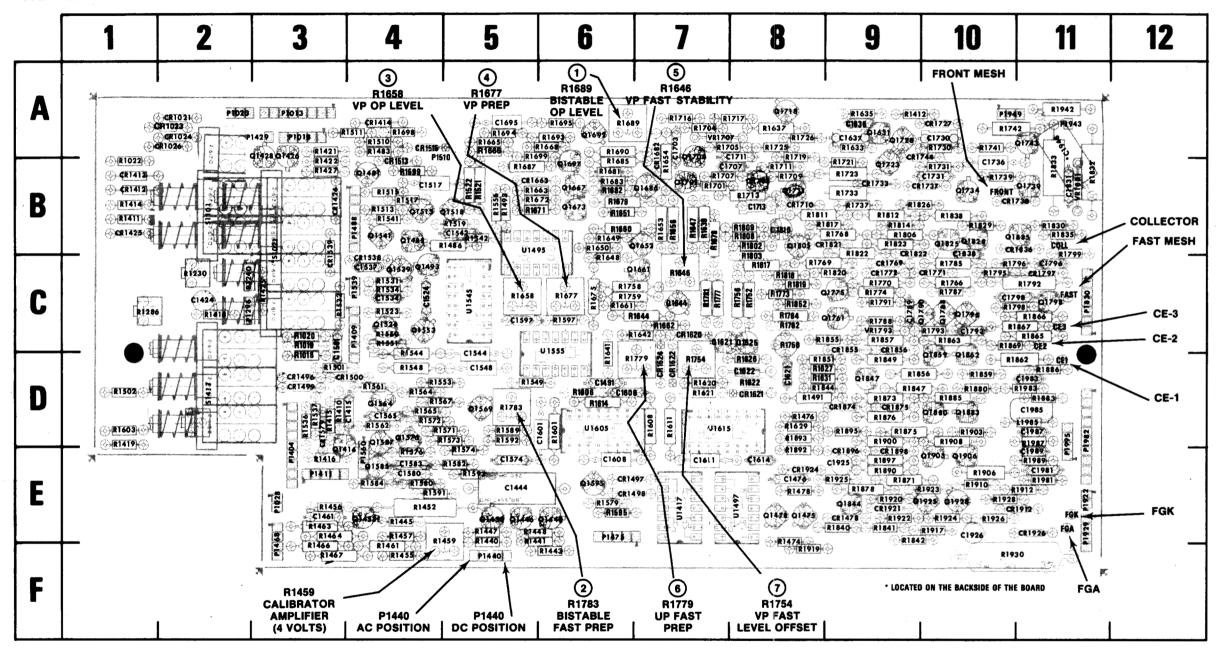


A14 Storage board SN B 149999 — BELOW is located on back of diagram 10.


_	GRID LOC		RID .OC	ł	RID	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC	CKT NO	GRID LOC
C1415	4D	CR1414	4A	P1510	4A	Q1775	9C	R1478	8E	R1617	8C	R1716	7A	R1829	10B	R1983	11D
C1424	2C	CR1424	3B	P1539	4C	Q1788	10C	R1483	4A	R1620	7D	R1717	8A	R1830	11B	R1987	11D
C1444	5 E	CR1425	1B	P1560	4E	Q1790	10C	R1486	5 B	R1621	7D	R1719	A8	R1832	11B	R1989	11E
C1461	3E	CR1478	9E	P1830	11C	Q1795	10C	R1491	8D	R1622	8D	R1721	9B	R1833	11B		
C1476	8E	CR1496	3D	P1922	11E	Q1798	11C	R1493	5 B	R1626	8D	R1723	9B	R1835	11B	S1021	3 B
C1491	6D	CR1497		P1929	11E	Q1805	8B	R1501	3D	R1627	8D	R1725	8A	R1838	10B	S1101	2B
C1501	3C	CR1498		P1943	11A	Q1810	8B	R1502	1D	R1629	8D	R1726	A8	R1840	9E	S1417	2D
C1517	4B	CR1499		P1949	10A	Q1825	9B	R1510	4A	R1631	8D	R1730	10A	R1841	9E		
C1524	4C	CR1500		P1982	11E	Q1828	9B	R1511	4A	R1633	9A	R1731	10B	R1842	9E	U1417	7E
C1534	4C	CR1513		P1995	11D	Q1835	11B	R1513	4B	R1635	9A	R1733	9B	R1844	8D	U1495	5B
C1537	4C	CR1515				Q1844	9E	R1515	4B	R1637	8A	R1737	9B	R1847	9D	U1497	8E
C1542	5B	CR1538		Q1416		Q1847	9D	R1517	4B	R1639	7B	R1739	10B	R1849	9D	U1545	5C
C1544	5D	CR1539		Q1426	3A	Q1859	10D	R1519	5 B	R1641	6D	R1741	10A	R1851	8D	U1555	6C
C1548	5D	CR1579		Q1428	3A	Q1862	10D	R1521	5B	R1642	7C	R1742	10A	R1852	8C	U1605	6D
C1565	4D	CR1620		Q1440	6E	Q1880	10D	R1522	5B	R1644	7C	R1750	8C	R1855	9C	U1615	7D
C1574	5E 4E		8D	Q1446	5E	Q1883	10D	R1523	4C	R1646	7C	R1752 R1754	8C 7D	R1856 R1857	9D 9C	VR170	7 78
C1580		CR1622		Q1450	5E	Q1903	10E	R1531	4C	R1647	7B	R1754		R1857	9C 10D	VR170	
C1583 C1597	4E 5C	CR1624 CR1663		Q1453 Q1475	4E 8E	Q1906 Q1925	10 € 10 €	R1532 R1534	3C 4C	R1648 R1649	6C 6B	R1758	8C 6C	R1862	10D	VR1/9	
C1601	6D	CR1682		Q1478	8E	Q1925	10E	R1534	3D	R1650	6B	R1759	6C	R1863	10C	VILIOS	
C1606	6D	CR1710		Q1478	4B	Q 1920	IVE	R1537	3D	R1651	6B	R1762	8C	R1865	11C		•
C1608	6E	CR1710		Q1485	4B	R1018	3D	R1541	4B	R1653	7B	R1764	8C	R1866	11C		
C1611	7E		9B	Q1493	4C	R1019	3C	R1542	5B	R1654	7B	R1766	10C	R1867	11C		
C1614	8E	CR1737		Q1513	4B	R1013	3C	R1544	4D	R1656	7B	R1768	9B	R1869	10C		
C1621	8D		10B	Q1518	5B	R1021	1B	R1548	4D	R1658	5C	R1769	8C	R1871	9E		
C1622	8D		10A	Q1524	4C	R1230	2C	R1549	5D	R1660	6B	R1770	9C	R1873	9D		
C1636	9A		9C	Q1539	4C	R1286	1C	R1550	4C	R1661	6C	R1773	8C	R1875	9D		
C1637	9A		10C	Q1541	4B	R1410	3D	R1551	4C	R1662	7C	R1774	8C	R1876	9D		
C1695	5A	CR1772		Q1553	4C	R1411	1B	R1553	4D	R1663	5 B	R1777	7C	R1878	9E		
C1703	7A	CR1797	11C	Q1564	4D	R1412	9A	R1556	5 B	R1665	5A	R1779	7D	R1880	10D		
C1707	8B	CR1821	9B	Q1569	5D	R1414	1B	R1561	4D	R1666	5A	R1781	7C	R1883	11D		
C1711	8A	CR1822	9B	Q1576	4D	R1415	3D	R1562	4D	R1668	6A	R1783	5D	R1885	10D		
C1713	8B	CR1836	11B	Q1585	4E	R1416	3E	R1564	4D	R1671	5B	R1785	10C	R1886	11D		
C1730	10A	CR1855	9C	Q1587	4D	R1418	2C	R1565	4D	R1672	5B	R1787	10C	R1890	9E		
C1731	10B	CR1856	9C	Q1595	6E	R1419	1D	R1567	4D	R1675	6C	R1788	9C	R1892	8E		
C1736	10B	CR1874	9D	Q1621	7C	R1421	3 A	R1571	5D	R1677	6C	R1791	9C	R1893	8D		
C1789	9B	CR1875	9D	Q1625	8C	R1422	3B	R1572	4D	R1678	7 B	R1792	11C	R1895	9D		
C1793	10C	CR1896	9E	Q1631	9A	R1425	3C	R1573	5D	R1679	6B	R1793	10C	R1897	9E		
C1796	11C	CR1898	9E	Q1644	7C	R1427	3B	R1574	5E	R1681	6 B	R1795	10C	R1900	9D		
C1798	10C	CR1912		Q1652		R1440	5E	R1576	4E	R1682	6 B	R1796	10C	R1903	10D		
C1831	11B	CR1921		Q1661		R1441	5E	R1579	6E	R1683	6B	R1798	10C	R1906	10E		
C1838	10B	CR1924		Q1667		R1443	6F	R1580	4E	R1685	6 B	R1799	11B	R1908	10D		
C1925	9E	CR1926	11E	Q1673		R1445	4E	R1582	5E	R1687	5 B	R1802	8B	R1910			
C1926	10E			Q1686		R1447	5E	R1584	4E	R1689	6A	R1803	8C	R1912			
C1948	11A		3A	Q1692	6A	R1448	5E	R1589	5D	R1690	6A	R1806	9B	R1917	10E		
C1981	11E		3A	Q1697		R1452	4E	R1591	4E	R1693	6A	R1808	8B	R1919			
C1983	11D		3E	Q1701		R1455	4F	R1592	5D	R1694	5A	R1809	8B	R1920			
C1985	11D		2C	Q1704		R1456	3E	R1593	5E	R1695	6A	R1811	8B	R1922			
C1987	11D		2C	Q1708		R1457	4E	R1595	6E	R1698	4A	R1812		R1923			
C1989	11E		3E	Q1711		R1459	5E	R1597	6C	R1699	5A	R1814	9B	R1924	10E		
CB1001	24		4C	Q1718		R1461	4F	R1599	4B	R1701	7B	R1817	9B	R1925	9E		
CR1021			3E	Q1723		R1463	3E	R1601	6D	R1704	7A	R1819	8C	R1926	10E 10E		
CR1023 CR1024			3A 5E	Q1728 Q1734	9A 10B	R1464	3E	R1603	1D	R1705	7A 7B	R1820 R1822	9C	R1928 R1930			
CR1024	` '		5F 3F	ı	10B	R1466	3F	R1606	6D	R1707	7B 8B	R1823	9B 9B	R1930			
CR1026			3F 6E	Q1739 Q1743	11B 11A	R1467 R1474	3F 8E	R1608 R1611	7D 7D	R1709 R1711	8B	R1826	9B	R1942	11E		
CR1412			4B	Q1743		R1474	8D	R1614	6D	R1713	8B	1 11020	ąD	1 1301	115		
OR 1413	,,,	F 1400	70	41/61	30	n14/6	OD	NIO14	θD	"''13	ψĐ	[

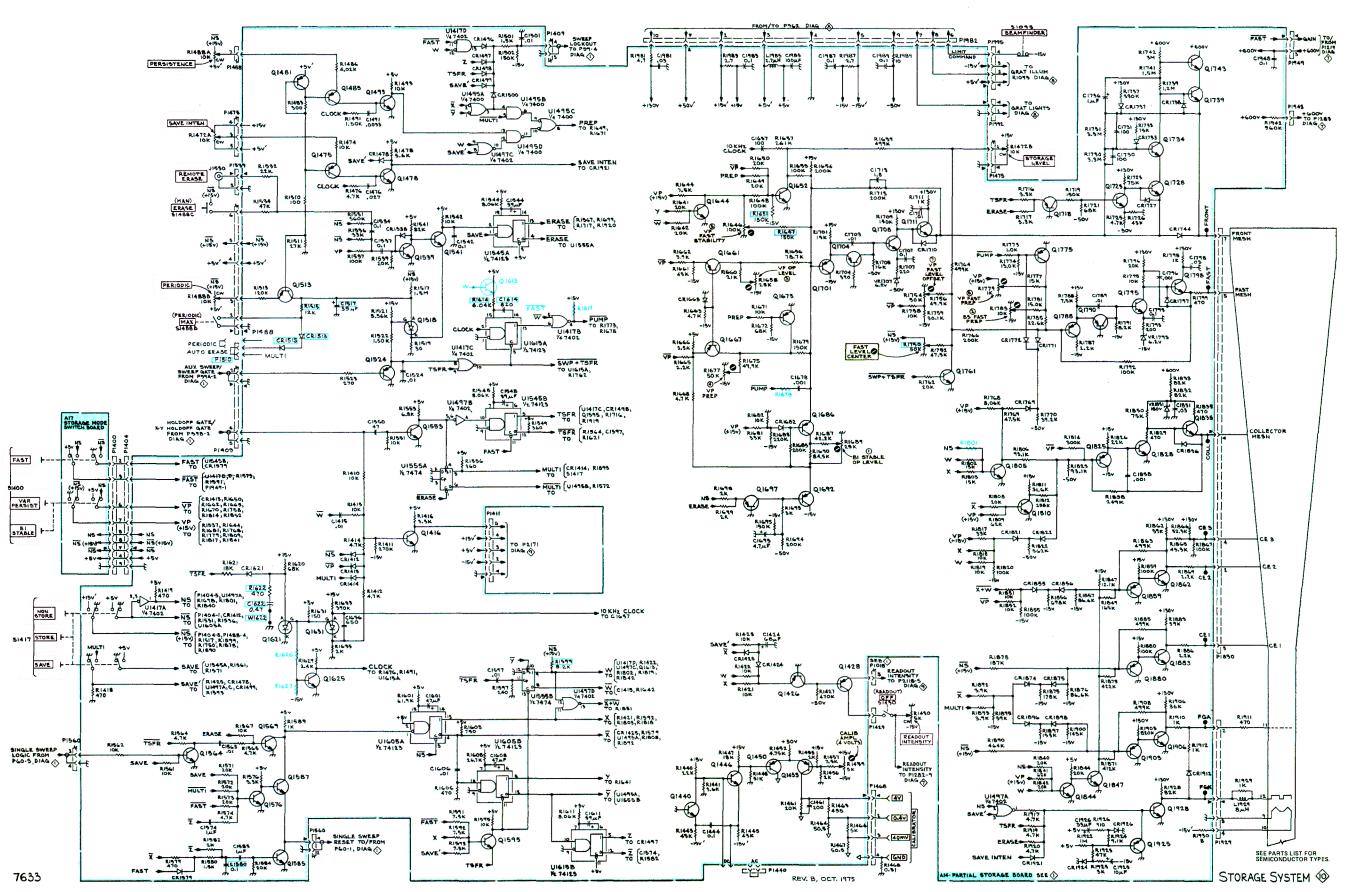

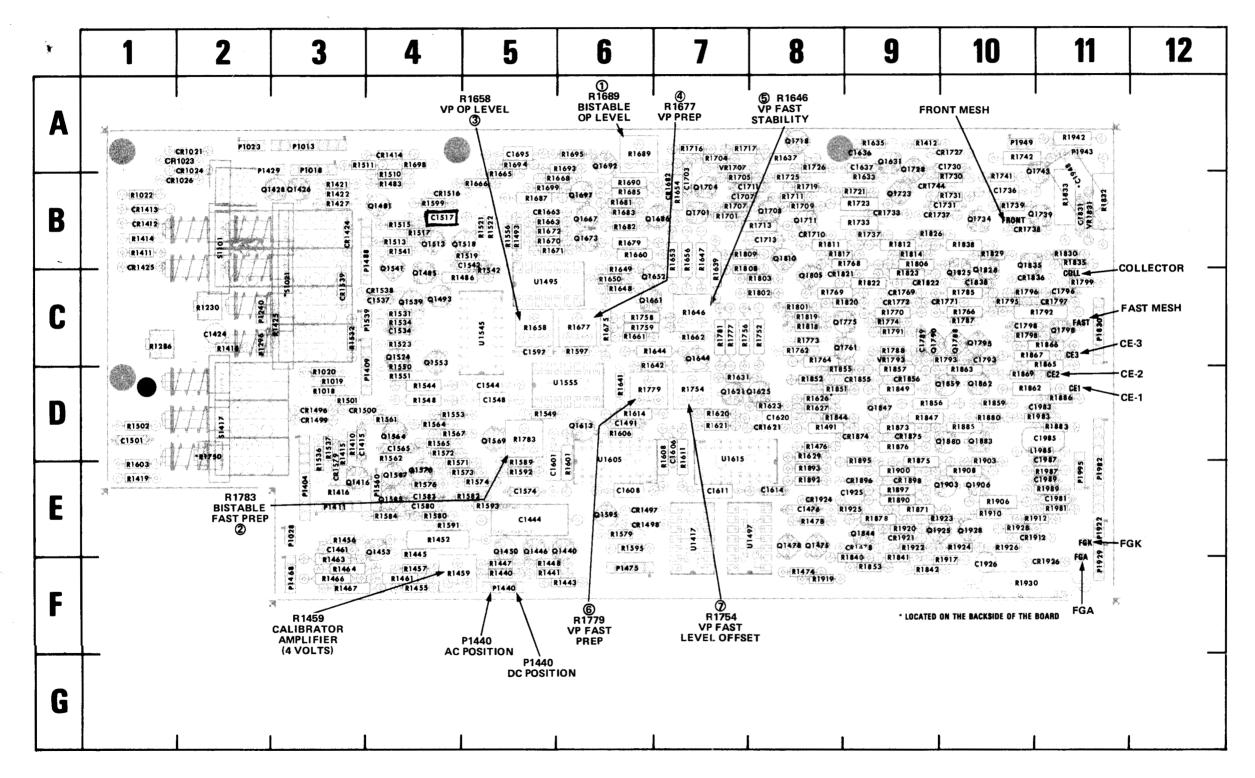

СКТ	GRID	СКТ	GRID	СКТ	GRID	скт	GRID	скт	GRID	скт	GRID	СКТ	GRID	СКТ	GRID
NO	LOC	NO	LOC	NO	LOC	NO	LOC	NO	LOC	NO	LOC	NO	LOC	NO	LOC
C1415	3D	CR1539	3C	Q1518	4B	R1416	3E	R1576	4E	R1701	7B	R1830	11B	U1495	5C
C1424	2C	CR1579	3E	Q1524	4C	R1414	1B	R1579	6E	R1704	7A	R1832	11B	U1497	7E
C1444	5 E	CR1621		Q1539	4C	R1415	3D	R1580	4E	R1705	7B	R1833	11B	U1545	5C
C1461	3E	CR1663 CR1682		Q1541	4C	R1418	2C	R1582	5E	R1707	7B	R1835	11B	U1555	6D 6E
C1476 C1491	8E 6D	CR1710		Q1553 Q1564	4C 4D	R1419 R1421	1E 3B	R1584	4E	R1709 R1711	8B 8B	R1838 R1840	10B 9 F	U1605 U1615	6E 7D
C1501	1D	CR1710		Q1569	5D	R1421	3B	R1589 R1591	5E 4E	R1711	8B	l		01013	70
C1517	4B	CR1733		Q1576	4E	R1425	2C	R1592	5E	R1716	7A	R1841 R1842	9F 9F	VR1707	7A
C1534	4C	CR1737		Q1585	4E	R1427	3B	R1593	5E	R1717	7A	R1844	8D	VR1793	
C1537	4C	CR1738	10B	Q1587	4E	R1440	5F	R1595	6E	R1719	8B	R1847	9D	VR1831	
C1542	5B	CR1744		Q1595	6 E	R1441	5F	R1597	6C	R1721	9B	R1849	9D		
C1544	5D	CR1769		Q1613	6D	R1443	6F	R1599	4B	R1723	9B	R1851	8D		
C1548	5D	CR1771		Q1621	7D	R1445	4E	R1601	6E	R1725	8B	R1852	8D		
C1565	4D	CR1772 CR1797		Q1625	8D	R1447	5F	R1603	1E	R1730	10B	R1853	9F		
C1574 C1580	5E 4E	CR1797		Q1631 Q1644	9A 7C	R1448 R1453	5F 4E	R1606	6D 7D	R1726	8A	R1855	8D		
C1583	4E	CR1822		Q1652	6C	R1455	4E 4F	R1608 R1611	7D 7D	R1731 R1733	10B 9B	R1856 R1857	9D 9D		
C1597	5C	CR1836	10C	Q1661	6C	R1456	3E	R1614	6D	R1737	9B	R1859	10D		
C1601	5E	CR1855	9D	Q1667	6B	R1457	4F	R1620	7D	R1737	10B	R1862	10D		
C1606	7D	CR1856	9D	Q1673	6B	R1459	4F	R1621	7D	R1741	10B	R1863	10D		
C1608	6E	CR1874		Q1686	7B	R1461	4F	R1623	8D	R1742	10A	R1865	11D		
C1611	7E	CR1875		Q1692	6A	R1463	3F	R1626	8D	R1750	2D	R1866	11C		
C1614	8E	CR1898		Q1697	6B	R1464	3 F	R1627	8D	R1752	8C	R1867	10C		
C1620	8D	CR1896		Q1701	7B	R1466	3F	R1629	8D	R1754	7D	R1869	10D		
C1636	9A	CR1912		Q1704	7B	R1467	3F	R1631	7D	R1756	7C	R1871	9E		
C1637	9A	CR1921 CR1924		Q1708 Q1711	8B	R1474	8F	R1633	9B	R1758	6C	R1873	9D		
C1695 C1703	5A 7B	CR1924		Q1711	8B 8A	R1476	8D	R1635	9A	R1759	6C	R1875	9E		
C1703	7B	Ch 1920	111	Q1718	9B	R1478 R1483	8E 4B	R1637 R1639	8A 7C	R1762	8C	R1876	9D		
C1711	7B			Q1723	9B	R1486	4C	R1641	6D	R1764 R1766	8C 10C	R1878 R1880	9E 10D		
C1713	8B	L1985	11D	Q1734	10B	R1491	8D	R1642	6D	R1768	9B	R1883	11D		
C1730	10A			Q1739	118	R1493	5B	R1644	6C	R1769	8C	R1885	10D		
C1731	10B	P1013	3A	Q1743	11B	R1501	3D	R1646	7C	R1770	9C	R1886	11D		
C1736	10B	P1018	3A	Q1761	8C	R1502	1D	R1647	7B	R1773	8C	R1890	9E		
C1789	9C	P1023	2A	Q1775	8C	R1510	4B	R1648	6C	R1774	9C	R1892	8E		
C1793	10C	P1409	3D	Q1788	10C	R1511	3A	R1649	6C	R1777	7C	R1893	8E		
C1796	11C	P1028	3E	Q1790	9C	R1513	4B	R1650	6C	R1779	6D	R1895	9E		
C1798 C1831	10C 11B	P1404 P1411	3E 3E	Q1795 Q1798	10C 11C	R1515	4B	R1653	7B	R1781	7C	R1897	9E		
C1838	10C	P1411	2A	Q1805	8C	R1517 R1521	4B 5B	R1654 R1656	7B 7B	R1783 R1785	5D 10C	R1900	9E		
C1925	9E	P1440	5F	Q1810	8B	R1522	5B	R1658	5C	R1787	10C	R1903 R1908	10E 11E		
C1926	10F	P1468	3F	Q1825	10C	R1523	4C	R1660	6B	R1788	9C	R1906	10E		
C1935	11D	P1475	6F	Q1828	10C	R1519	5B	R1661	6C	R1791	9C	R1910	10E		
C1948	11B	P1488	3B	Q1835	10C	R1531	4C	R1662	7C	R1792	11C	R1912	10E		
C1981	11E	P1539	3C	Q1844	9E	R1532	3C	R1663	5B	R1793	10C	R1917	10F		
C1983	11D	P1560	4E	Q1847	9D	R1534	4C	R1665	5B	R1795	10C	R1919	8F		
C1987	11E	P1830	11C	Q1859	10D	R1536	3E	R1666	5B	R1796	10C	R1920	9E		
C1989	11E	P1922	11E 11F	Q1862	10D	R1537	3D	R1668	5B	R1798	10C	R1922	9E		
		P1929 P1943	11A	Q1880	10D	R1541	4B	R1670	5B	R1799	11C	R1923	9E		
CR1021		P1943	11E	Q1883	10D	R1542 R1544	5C 4D	R1671	5B	R1801	8C	R1924	10E		
CR1023 CR1024		P1995	11E	Q1903 Q1906	10E 10E	R1548	4D	R1672	5B 6C	R1802 R1803	8C 8C	R1925 R1926	9E 10E		
CR1024				Q1925	9E	R1549	5D	R1677	6C	R1806	9B	R1928	10E		
CR1412		Q1416	3E	Q1928	10E	R1550	4D	R1679	6B	R1808	7C	R1930	10F		
CR1413		Q1426	3B	2.020		R1551	4D	R1681	6B	R1809	7B	R1942	11A		
CR1414		Q1428	2B	R1018	3D	R1553	4D	R1682	6B	R1811	8B	R1949	10A		
CR1424	3B	Q1440	6E	R1019	3D	R1556	5B	R1683	6B	R1812	9B	R1981	11E		
CR1425	1B	Q1446	5E	R1020	3D	R1561	4D	R1685	6B	R1814	9B	R1983	11D		
CR1478		Q1450	5E	R1022	1B	R1562	4D	R1687	5B	R1818	8C	R1987	11E		
CR1496		Q1453	4E	R1230	1C	R1564	4D	R1689	6A	R1817	8B	R1989	11E		
CR1497		Q1475	8E	R1240	2C	R1565	4D	R1690	6B	R1819	8C		20		
CR1498		Q1478	8E	R1286	1C	R1567	4D	R1693	6A	R1820	8C	S1021	3C		
CR1499 CR1500		Q1481 Q1485	4B 4C	R1296 R1410	2C 3D	R1571 R1572	4E 4D	R1694 R1695	5A 6A	R1822 R1823	9C 9C	S1101	2B 2D		
CR1516		Q1493	4C 4C	R1410	1B	R1572	4E	R1698	4A	R1826	9B	S1417	20		
CR1538		Q1513	4B	R1412	9A	R1574	5E	R1699	5B	R1829	10B	U1417	7E		
		1		1		1								l	

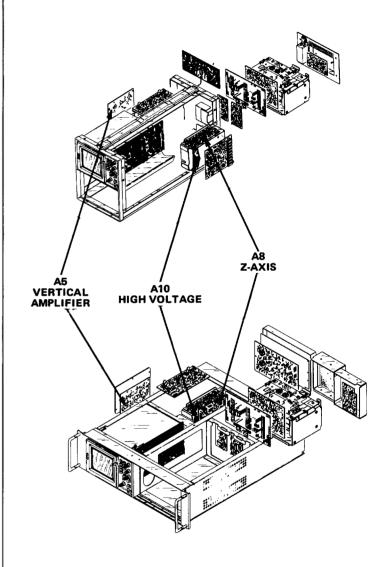

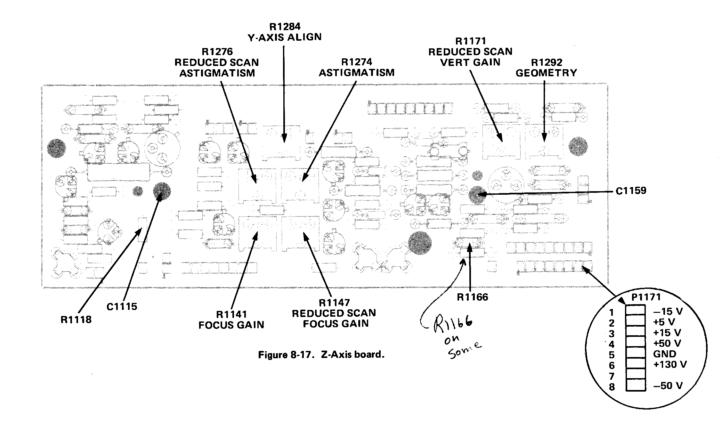

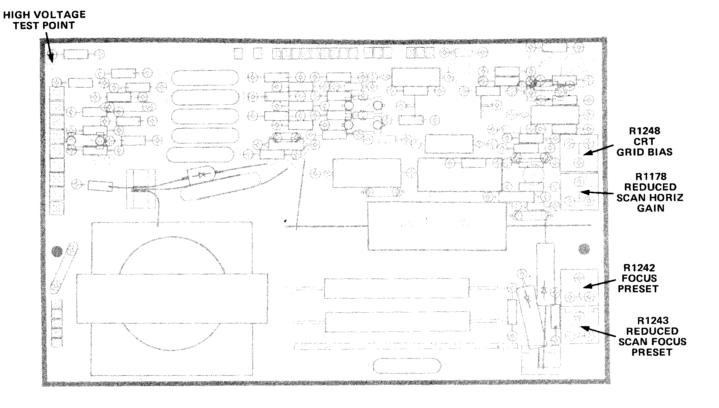


Figure 8-18. High-Voltage board.

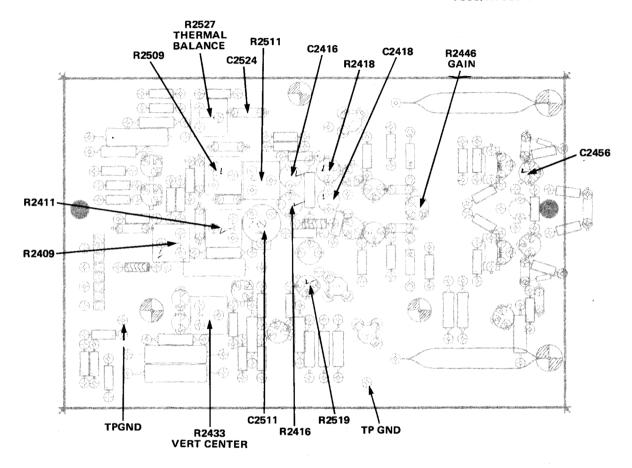


Figure 8-19. Vertical Amplifier board.

REV. B, JAN.1975

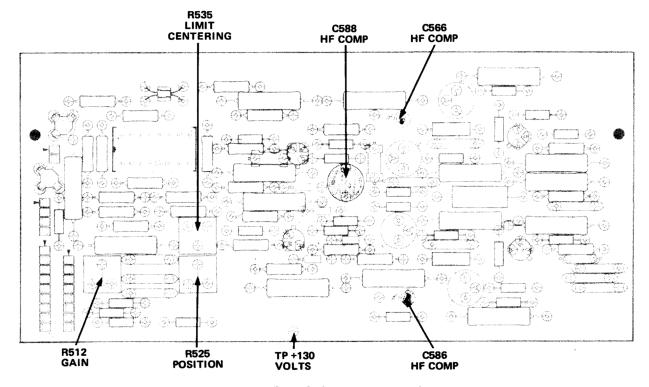
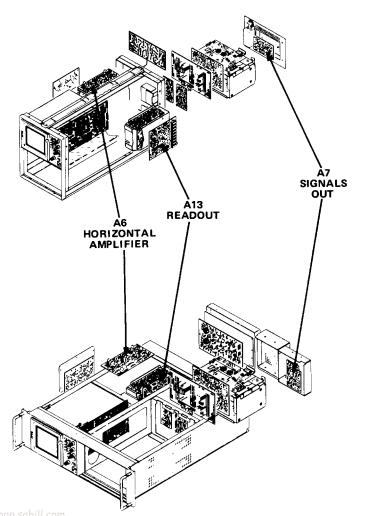


Figure 8-20. Horizontal Amplifier board.



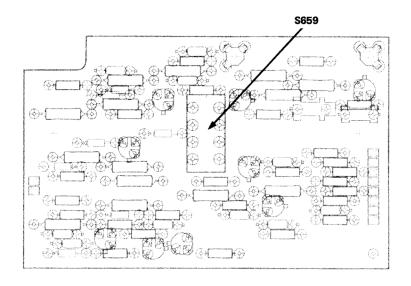


Figure 8-22. Signals Out board.


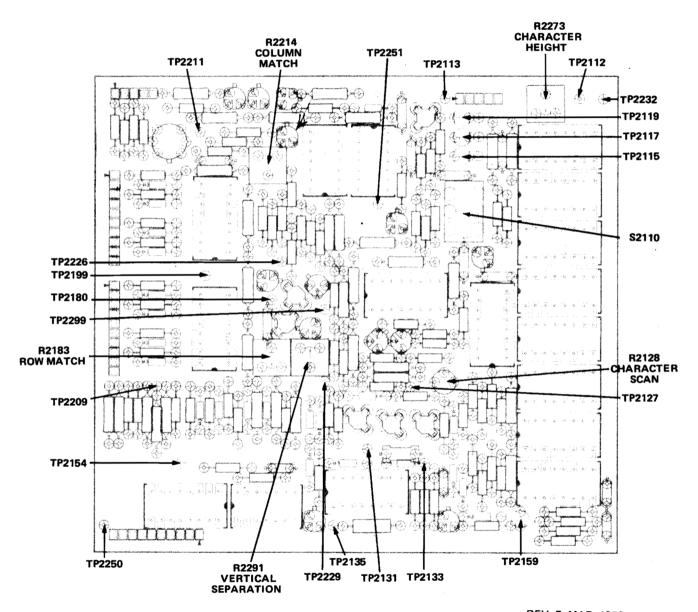


Figure 8-21. Readout board.

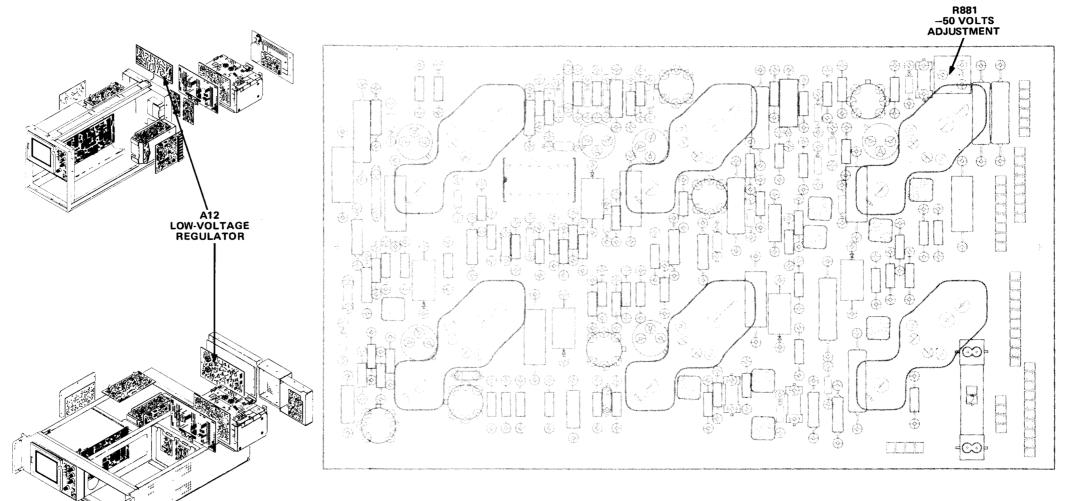

http://manoman.sqhill.com

Figure 8-23. Low-Voltage Regulator board.

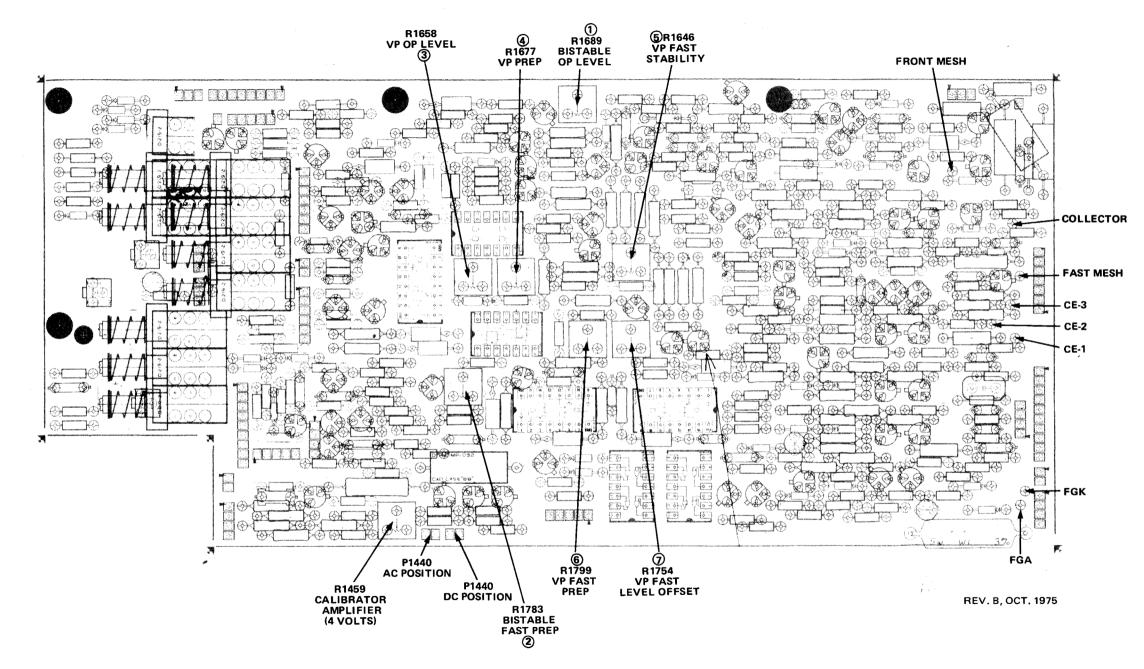
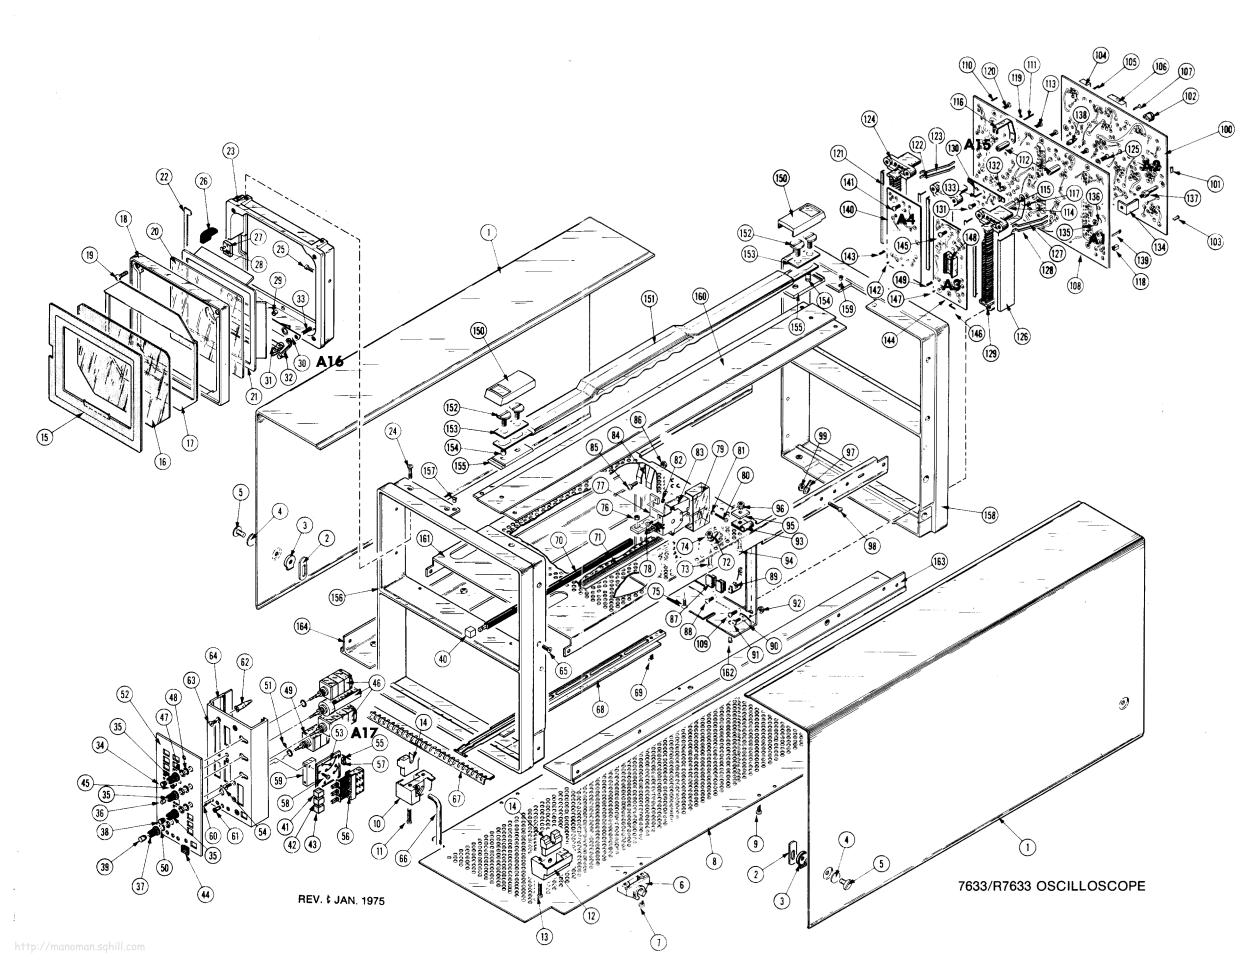
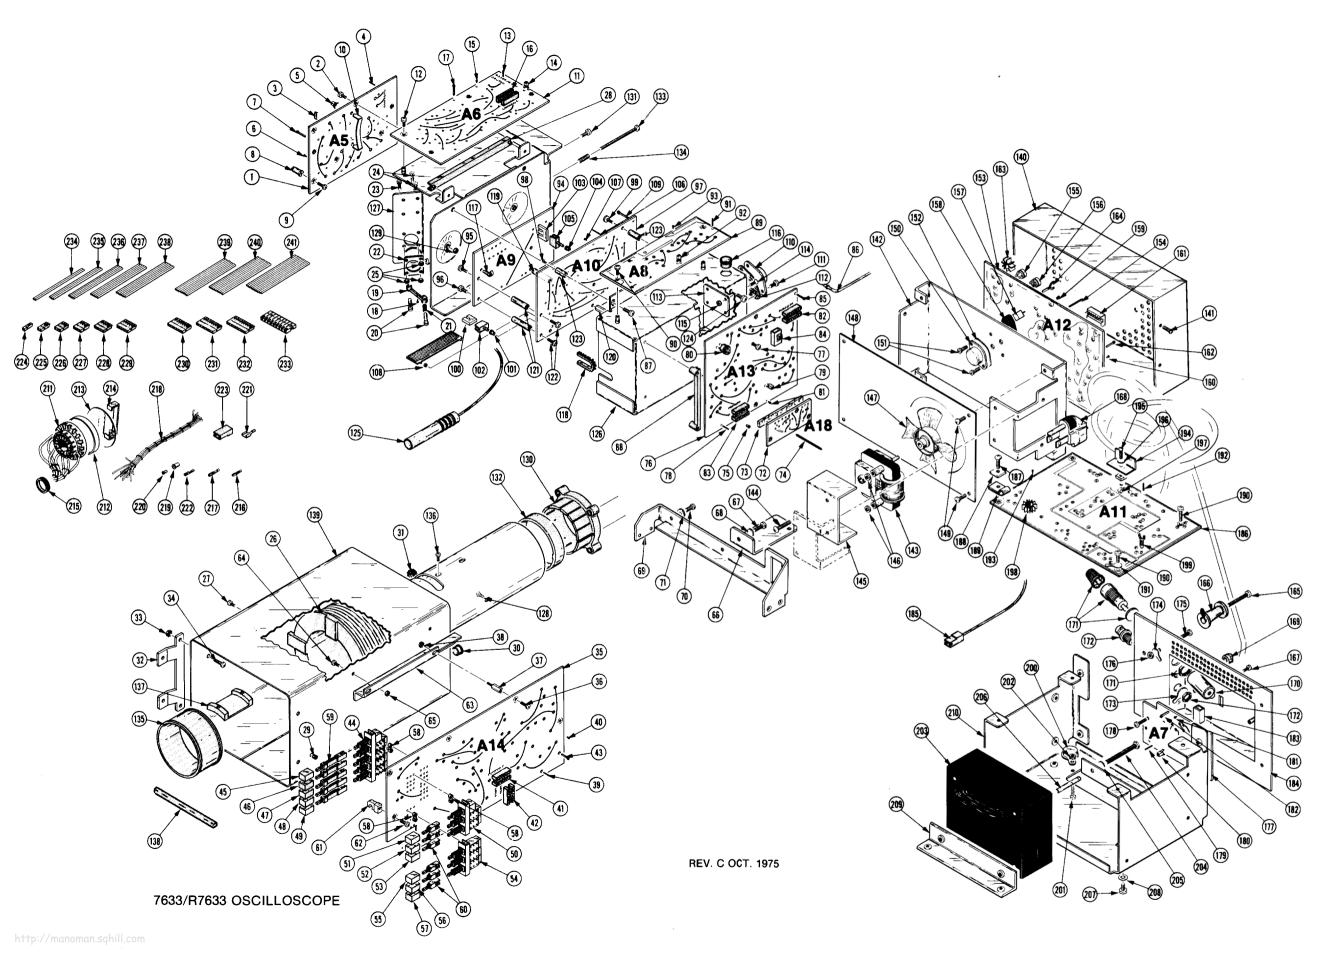
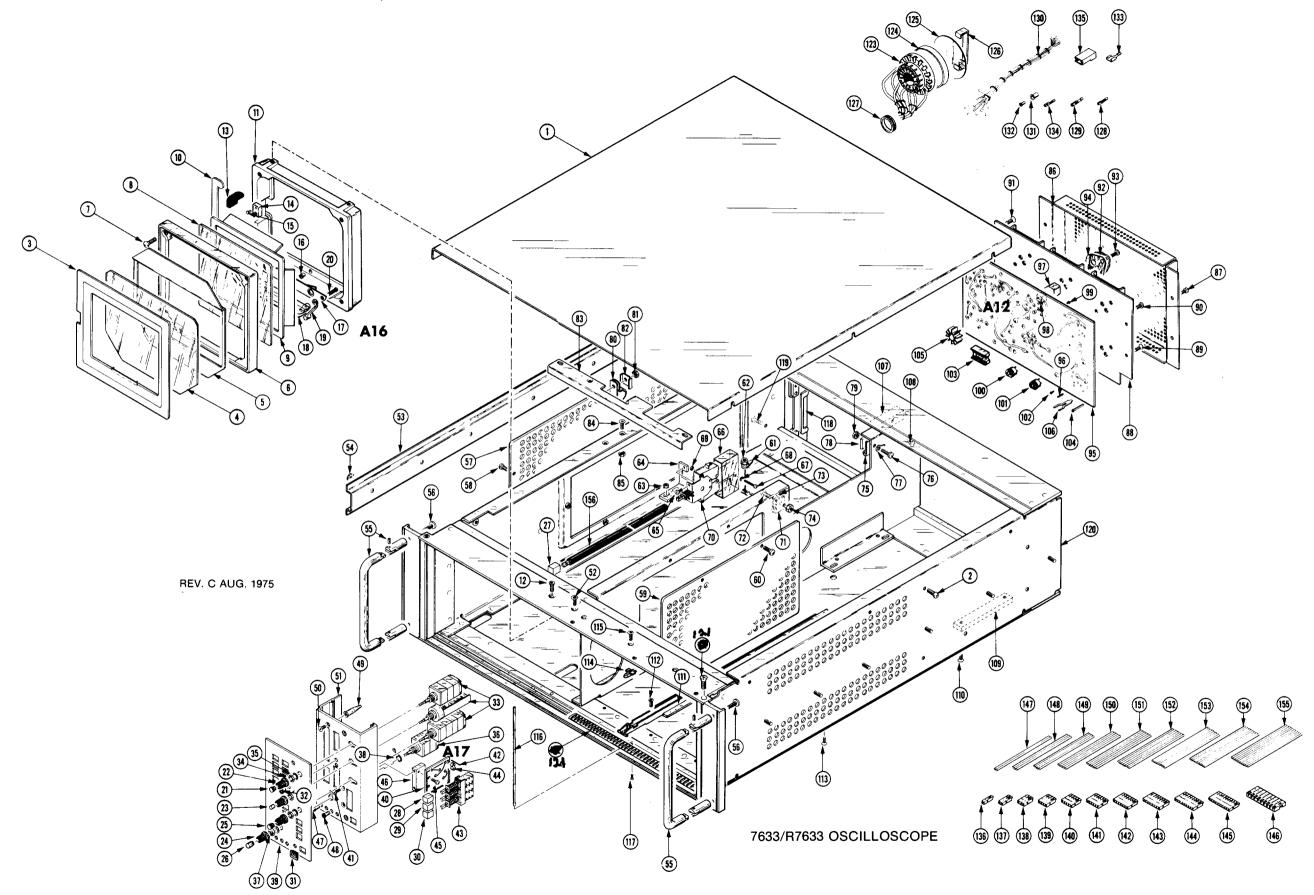
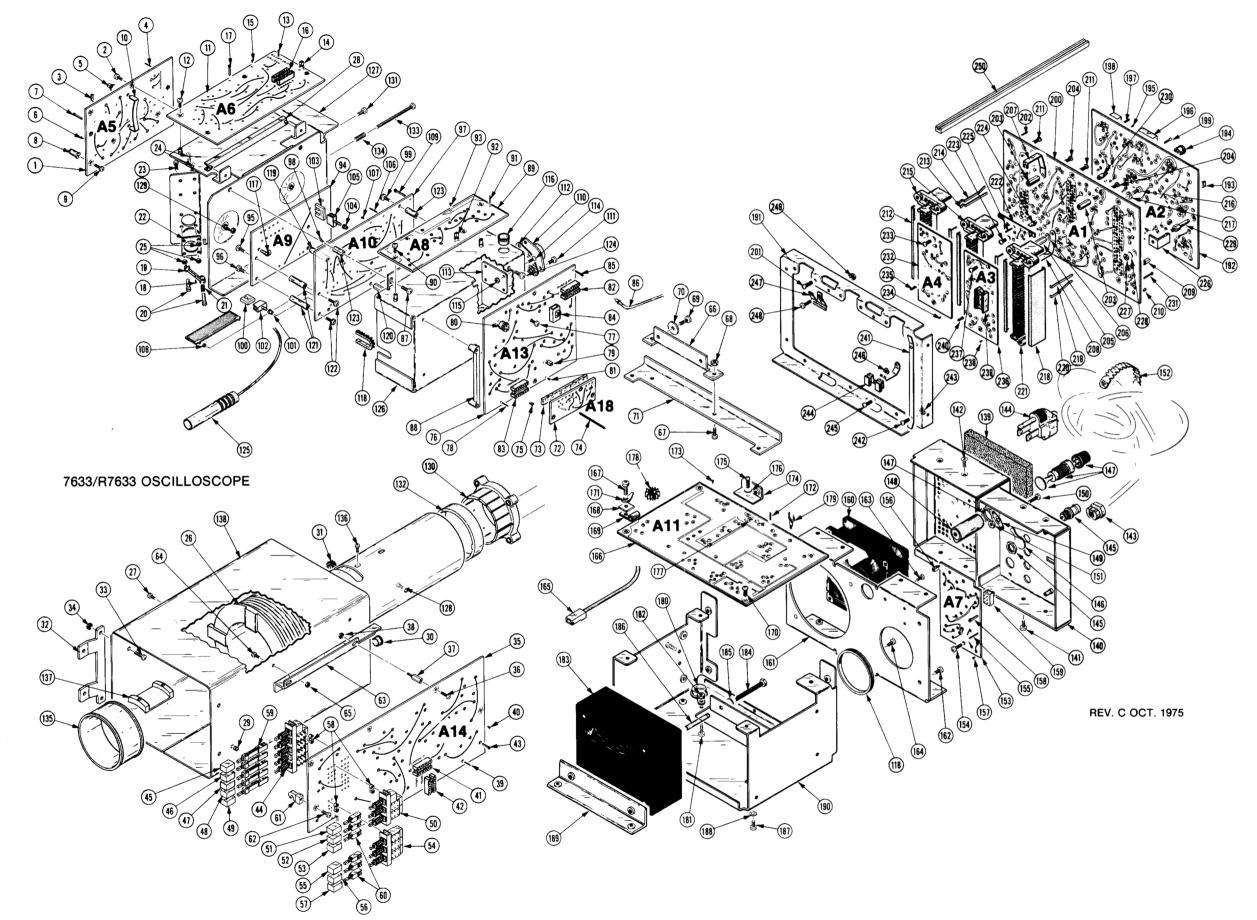


Figure 8-24. Storage board.









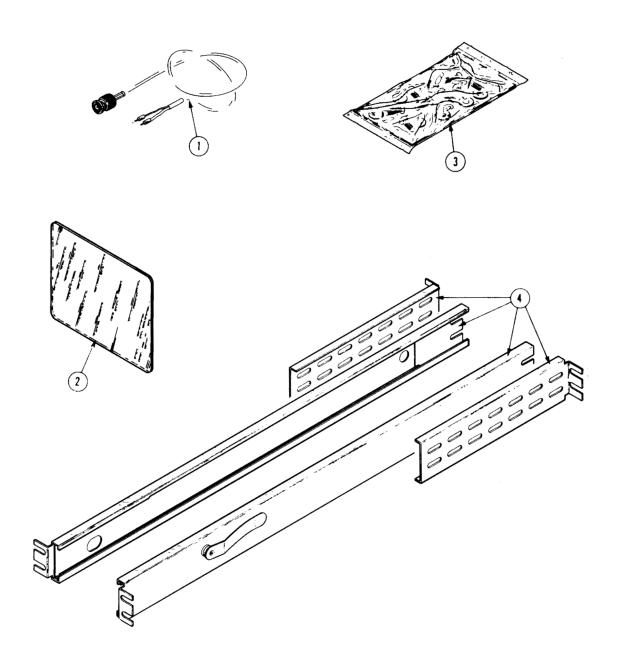


Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
5-1	175-1178-00		1	CABLE, SPL PURP:RF	80009	175-1178-00
-2	378-0625-08		1	FILTER, LT, CRT:	80009	378-0625-08
-3	016-0131-00		1	HARDWARE KIT: (R7633 ONLY)	80009	016-0131-00
-4	351-0314-00		1	SLIDE-GUIDE:19.25 INCHES LONG(R7633 ONLY)	80009	351-0314-00
	070-1766-00		1	MANUAL, TECH: OPERATORS	80009	070-1766-00
	070-1767-00		1	MANUAL, TECH: SERVICE	80009	070-1767-00


REV. B APR. 1975


7633/R7633 OSCILLOSCOPE

REPLACEABLE PARTS FOR FACTORY INSTALLED OPTIONS

OPTION 7 Without Signals Out

OPTION 3 Electromagnetic Interference (EMI)

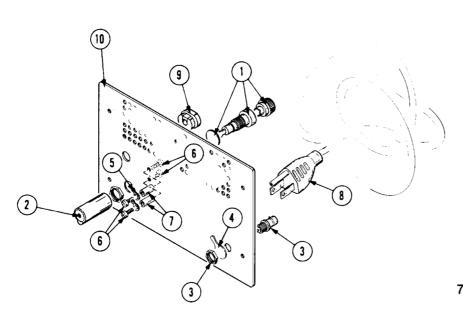

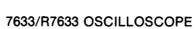

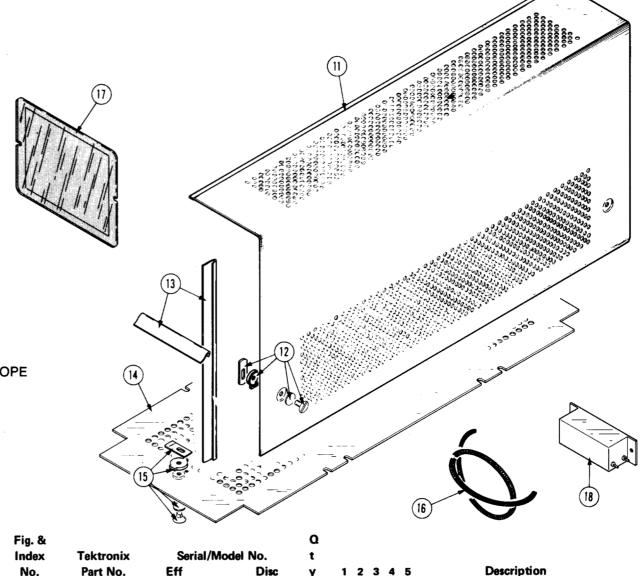


Fig. &			Q						(8)
Index	Tektronix	Serial/Model No.	t				Re V		
No.	Part No.	Eff Disc	y	1 2 3 4 5 Description	Fig. &			Q	
7-1	352-0076-00		1	FUSEHOLDER ASSEMBLY, w/hardware	Index	Tektronix	Serial/Model No.	t	
-2	200-1388-00		1	COVER, fuseholder	No.	Part No.	Eff Disc	v	1 2 3 4 5 Description
-3	131-0955-00		1	CONNECTOR, receptacle, BNC, w/hardware					
-4	210-0255-00		1	TERMINAL, lug, 0.391 inch diameter, SE	7-11	390-0297-00		2	CABINET SIDE
-5	210-0201-00		2	TERMINAL, lug, 0.12 inch diameter, SE				-	each cabinet side includes:
-6	211-0008-00		4	SCREW, 4-40 X 0.25 inch, PHS	-12	214-0816-00		6	LATCH ASSEMBLY
-7	385-0149-00		2	POST, 0.25 OD X 0.625 inch long	-13	348-0274-00		4	SHIELDING GASKET, electronic, 48 inches long
-8	161-0033-09		1	CABLE ASSEMBLY, power	-14	390-0355-00		1	CABINET BOTTOM
-9	358-0323-00		1	BUSHING, strain relief				-	cabinet bottom includes:
-10	386-2329-00		1	PANEL, rear	-15	214-0816-00		2	LATCH ASSEMBLY
				•	-16	348-0234-00		1	SHIELDING GASKET, electronic, 39.50 inches long
					-17	378-0603-00		1	FILTER, mesh, CRT
					-18	119-0113-05		1	FILTER, radio interference

REPLACEABLE **MECHANICAL PARTS**

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

SPECIAL NOTES AND SYMBOLS

X000 Part first added at this serial number 00X Part removed after this serial number

FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

INDENTATION SYSTEM

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

1 2 3 4 5

Name & Description

Assembly and/or Component Attaching parts for Assembly and/or Component . . . * . . .

Detail Part of Assembly and/or Component Attaching parts for Detail Part

Parts of Detail Part Attaching parts for Parts of Detail Part

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation. The separation symbol - - - * - - - indicates the end of attaching parts.

Attaching parts must be purchased separately, unless otherwise

ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

ABBREVIATIONS

**	INCH	ELCTRN	ELECTRON	IN	INCH	SE	SINGLE END
#	NUMBER SIZE	ELEC	ELECTRICAL	INCAND	INCANDESCENT	SECT	SECTION
ACTR	ACTUATOR	ELCTLT	ELECTROLYTIC	INSUL	INSULATOR		SEMICONDUCTOR
ADPTR	ADAPTER	ELEM	ELEMENT	INTL	INTERNAL	SHLD	SHIELD
ALIGN	ALIGNMENT	EPL	ELECTRICAL PARTS LIST	LPHLDR	LAMPHOLDER	SHLDR	SHOULDERED
AL	ALUMINUM	EQPT	EQUIPMENT	MACH	MACHINE	SKT	SOCKET
ASSEM	ASSEMBLED		EXTERNAL	MECH	MECHANICAL	SL	SLIDE
ASSY	ASSEMBLY	EXT		MTG	MOUNTING	SLFLKG	SELF-LOCKING
ATTEN	ATTENUATOR	FIL	FILLISTER HEAD	NIP	NIPPLE	SLVG	SLEEVING
		FLEX	FLEXIBLE		NOT WIRE WOUND	SPR	SPRING
AWG	AMERICAN WIRE GAGE	FLH	FLAT HEAD		ORDER BY DESCRIPTION	so	SQUARE
8D	BOARD	FLTR	FILTER	OBD OBD	OUTSIDE DIAMETER	SST	STAINLESS STEEL
BRKT	BRACKET	FR	FRAME or FRONT		OVAL HEAD	STL	STEEL
BRS	BRASS	FSTNR	FASTENER	OVH	PHOSPHOR BRONZE	SW	SWITCH
BRZ	BRONZE	FT	FOOT	PH BRZ	PLAIN or PLATE	34V	TUBE
BSHG	BUSHING	FXD	FIXED	PL		TCOM	
CAB	CABINET	GSKT	GASKET	PLSTC	PLASTIC	TERM	TERMINAL
CAP	CAPACITOR	HDL	HANDLE	PN	PART NUMBER	THD	THREAD
CER	CERAMIC	HEX	HEXAGON	PNH	PAN HEAD	THK	THICK
CHAS	CHASSIS	HEX HD	HEXAGONAL HEAD	PWR	POWER	TNSN	TENSION
CKT	CIRCUIT	HEX SOC	HEXAGONAL SOCKET	RCPT	RECEPTACLE	TPG	TAPPING
COMP	COMPOSITION	HLCPS	HELICAL COMPRESSION	RES	RESISTOR	TRH	TRUSS HEAD
CONN	CONNECTOR	HLEXT	HELICAL EXTENSION	RGD	RIGID	V	VOLTAGE
COV	COVER	HV	HIGH VOLTAGE	RLF	RELIEF	VAR	VARIABLE
CPLG	COUPLING	IC	INTEGRATED CIRCUIT	RTNR	RETAINER	W/	WITH
CRT	CATHODE RAY TUBE	ID	INSIDE DIAMETER	SCH	SOCKET HEAD	WSHR	WASHER
DEG	DEGREE	IDENT	IDENTIFICATION	SCOPE	OSCILLOSCOPE	XFMR	TRANSFORMER
DWR	DRAWER	IMPLR	IMPELLER	SCR	SCREW	XSTR	TRANSISTOR

9-1 REV. C JAN. 1975

CROSS INDEX MFR. CODE NUMBER TO MANUFACTURER

MFR.CODE	MANUFACTURER	ADDRESS	CITY,STATE,ZIP
0000C	GETTIG ENGINEERING AND MANUFACTURING CO.		SPRINGMILL, PA 16875
00779	AMP, INC.	P. O. BOX 3608	HARRISBURG, PA 17105
01009	ALDEN PRODUCTS CO.	117 N. MAIN ST.	BROCKTON, MA 02403
01295	TEXAS INSTRUMENTS, INC.,		BROCKTON, MA 02405
	SEMICONDUCTOR GROUP	P. O. BOX 5012	DALLAS, TX 75222
04963	MINNESOTA MINING AND MFG. CO., ADHESIVES	1. 0. Don 3012	DALLAS, 1X /3222
	COATINGS AND SEALERS DIVISION	3M CENTER	CO DALL MA EELOI
05624	BARBER-COLMAN CO.	1300 ROCK ST.	ST. PAUL, MN 55101
05820	WAKEFIELD ENGINEERING, INC.	AUDUBON ROAD	ROCKFORD, IL 61101
06515	AERO CRAFT AND MISSLE PRODUCTS		WAKEFIELD, MA 01880
06540	AMATOM ELECTRONIC HARDWARE, DIV. OF	16300-D EAST ARROW HWY.	IRWINDALE, CA 91706
00310	MITE CORP.	445 PT3VP CP	
06982	MOORE, HOWARD J., CO.	446 BLAKE ST.	NEW HAVEN, CT 06515
07707	•	105 E. 16TH ST.	NEW YORK, NY 10003
07707	USM CORP., USM FASTENER DIV.	510 RIVER RD.	SHELTON, CT 06484
	SUPPORT CENTER	2800 S. 20TH ST.	PHILADELPHIA, PA 19101
00061	ELECTRIC CO.	13376 BEACH AVE.	VENICE, CA 90291
08261	SPECTRA-STRIP CORP.	7100 LAMPSON AVE.	GARDEN GROVE, CA 92642
12327	FREEWAY CORP.	9301 ALLEN DR.	CLEVELAND, OH 44125
12360	ALBANY PRODUCTS CO., DIV. OF PNEUMO		
	DYNAMICS CORP.	351 CONNECTICUT AVE.	SOUTH NORWALK, CT 06856
16428	BELDEN CORP.	P. O. BOX 1101	RICHMOND, IN 47374
22526	BERG ELECTRONICS, INC.	YOUK EXPRESSWAY	NEW CUMBERLAND, PA 17070
22753	U. I. D. ELECTRONICS CORP.	4105 PEMBROKE RD.	HOLLYWOOD, FL 33021
23499	GAVITT WIRE AND CABLE, DIVISION OF		,
	RSC INDUSTRIES, INC.	455 N. QUINCE ST.	ESCONDIDO, CA 92025
24655	GENERAL RADIO	300 BAKER AVE.	CONCORD, MA 01742
24931	SPECIALTY CONNECTOR CO., INC.	3560 MADISON AVE.	INDIANAPOLIS, IN 46227
26365	GRIES REPRODUCER CO., DIV. OF COATS	2300 IEDIBON AVE.	INDIANAFOLIS, IN 40227
	AND CLARK INC.	125 BEECHWOOD AVE.	NEW ROCHELLE, NY 10802
28520	HEYMAN MFG. CO.	147 N. MICHIGAN AVE.	
28875	IMC MAGNETICS CORP., NEW HAMPSHIRE DIV.		KENILWORTH, NJ 07033
52792	THORGREN TOOL AND MOLDING CO., INC.		ROCHESTER, NH 03867
56289		1100 EVANS AVE.	VALPARAISO, IN 46383
70276	SPRAGUE ELECTRIC CO.	D 0 DD11555 FM0	NORTH ADAMS, MA 01247
	ALLEN MFG. CO.	P. O. DRAWER 570	HARTFORD, CT 06101
70318 71159	ALLMETAL SCREW PRODUCTS CO., INC. BRISTOL SOCKET SCREW, DIV. OF	821 STEWART AVE.	GARDEN CITY, NY 11530
71.070	AMERICAN CHAIN AND CABLE CO., INC.		WATERBURY, CT 06720
71279	CAMBRIDGE THERMIONIC CORP.	445 CONCORD AVE.	CAMBRIDGE, MA 02138
71590	CENTRALAB ELECTRONICS, DIV. OF GLOBE-UNION, INC.	5757 N. GREEN BAY AVE.	MILWAUKEE, WI 53201
71785	TRW ELECTRONIC COMPONENTS, CINCH CONNECTOR OPERATIONS	1501 MORSE AVE.	ELK GROVE VILLAGE, IL 60007
72653	G. C. ELECTRONICS CO., A DIVISION		,,,,,
	OF HYDROMETALS, INC.	400 S. WYMAN ST.	ROCKFORD, IL 61101
73743	FISCHER SPECIAL MFG. CO.	446 MORGAN ST.	CINCINNATI, OH 45206
74445	HOLO-KROME CO.	31 BROOK ST. WEST	HARTFORD, CT 06110
74921	ITEN FIBRE CO., THE	4001 BENEFIT AVE.	ASHTABULA, OH 44004
75915	LITTELFUSE, INC.	800 E. NORTHWEST HWY	DES PLAINES, IL 60016
77250	PHEOLL MANUFACTURING CO., DIVISION		
77342	OF ALLIED PRODUCTS CORP.	5700 W. ROOSEVELT RD.	CHICAGO, IL 60650
	AMF, INC., POTTER AND BRUMFIELD DIV.	1200 E. BROADWAY	PRINCETON, IN 47570
78189	ILLINOIS TOOL WORKS, INC. SHAKEPROOF DIVISION	ST. CHARLES ROAD	ELGIN, IL 60120
79727	C-W INDUSTRIES	550 DAVISVILLE RD.	WARMINSTER, PA 18974
79807			•
80009	WROUGHT WASHER MFG. CO.	2100 S. O BAY ST.	MILWAUKEE, WI 53207
	TEKTRONIX, INC.	P. O. BOX 500	BEAVERTON, OR 97077
80033	PRESTOLE EVERLOCK, INC.	P. O. BOX 278-1345 MIAMI ST.	TOLEDO, OH 43605
82104	STANDARD GRIGSBY CO., DIV. OF SUN	000	**************************************
02225	CHEMICAL CORP.	920 RATHBONE AVE.	AURORA, IL 60507
83385	CENTRAL SCREW CO.	2530 CRESCENT DR.	BROADVIEW, IL 60153
83501	GAVITT WIRE AND CABLE, DIVISION OF		
	RSC INDUSTRIES, INC.	CENTRAL ST.	BROOKFIELD, MA 01506
86445	PENN FIBRE AND SPECIALTY CO., INC.	2032 E. WESTMORELAND ST.	PHILADELPHIA, PA 19134
95987	WECKESSER CO., INC.	4444 WEST IRVING PARK RD.	CHICAGO, IL 60641

9-2 REV. D OCT. 1975

Fig. &						
Index	Tektronix Serial/Mo	del No.			Mfr	
No.	Part No. Eff	Dscont Q1	ty	1 2 3 4 5 Name & Description	Code	Mfr Part Number
1-1	390-0345-00			CABINET SIDE: LEFT AND RIGHT . EACH CABINET SIDE INCLUDES:	80009	390-0345-00
-2	386-1151-00			. PLATE, LATCH LKG:	80009	386-1151-00
-3	386-0227-00			. PL,LATCH INDEX:		386-0227-00
-4	214-0604-00			. WASH.,SPG TNSN:0.26 ID X 0.47 INCH OD		214-0604-00
- 5	214-0603-01			. PIN, SECURING: 0.27 INCH LONG		214-0603-01
- 6	343-0256-00			RTNR BLK, SCOPE:		343-0256-00
-7	211-0578-00		2	(ATTACHING PARTS FOR EACH) SCREW, MACHINE: 6-32 X 0.438 INCH, PNH STL	83385	OBD
-8	390-0204-00		1	COVER,SCOPE:	80009	390-0204-00
-9	211-0503-00		4	(ATTACHING PARTS) SCREW, MACHINE: 6-32 X 0.188 INCH, PNH STL	83385	OBD
-10	348-0073-00		2	SPT PIVOT,FLIP:LEFT FRONT AND RIGHT REAR (ATTACHING PARTS FOR EACH)	80009	348-0073-00
-11	211-0532-00		2		83385	OBD
	386-3286-00 XB110948		1	PLATE, GND: BAIL	80009	386-3286-00
-12	348-0074-00		2	SPT PIVOT,FLIP:RIGHT FRONT AND LEFT REAR (ATTACHING PARTS FOR EACH)	80009	348-0074-00
-13	211-0532-00		2	SCREW, MACHINE: 6-32 X 0.75 INCH, FILH STL	83385	OBD
-14	377-0119-00		4	INSERT, FOOT:	80009	377-0119-00
-15	426-0514-00		1	FRAME, MASK: PLASTIC	80009	426-0514-00
-16	378-0625-02		1	FILTER, LT, CRT: GRAY	80009	378-0625-02
-17	331-0258-03			MASK, CRT SCALE:	80009	331-0258-03
-18	200-0939-01		1	BEZEL,CRT: (ATTACHING PARTS)	80009	200-0939-01
-19	212-0023-00		4	SCREW, MACHINE:8-32 X 0.375 INCH, PNH STL	83385	OBD
	131-1022-00 B050000		2	CONTACT, ELEC: CRT MASK	80009	131-1022-00
-20	337-1159-00			WINDOW, OBS: 4.78 X 3.93 X 0.07 "PLSTC		337-1159-00
-21	331-0245-00			MASK, CRT SCALE:	80009	
-22	333-1691-00		1	PANEL, FRONT: LEFT	80009	333-1691-00
-23	386-1884-03		1	SPRT, ELCTRN TUB:	80009	386-1884-03
				(ATTACHING PARTS)		
-24	212-0040-00		2	SCREW, MACHINE:8-32 X 0.375 100 DEG, FLH STL	83385	OBD
-2 5	211-0510-00		2	SCREW, MACHINE: 6-32 X 0.375 INCH, PNH STL	83385	OBD
			-	. SUPPORT INCLUDES:		
- 26	386-1517-00		4	. SUPPORT, CRT:	80009	386-1517-00
-27	204-0380-00		1	BODY, TERMINAL:	80009	204-0380-00
-28	131-0765-00		3	CONTACT, ELEC:	80009	131-0765-00
-29	348-0031-00			GROMMET, PLASTIC: 0.156 INCH DIA	80009	348-0031-00
-30				CKT BOARD ASSY:GRATICULE LIGHT(SEE A16 EPL) . CKT BOARD ASSY INCLUDES:		
-31	378-0614-00			. REFLECTOR, LIGHT:		378-0614-00
-32	344-0179-00			. CLIP, REFL RTNG: PLASTIC	80009	344-0179-00
-33	211-0062-00			. SCREW, MACHINE: 2-56 X 0.312 INCH, RDH STL	83385	
-34	366-1519-00			KNOB:PULL . KNOB INCLUDES:	80009	366-1519-00
	213-0725-00			. SETSCREW: 3-48 X 0.094 INCH, HEX SOC STL	71159	
-35	366-1077-00			KNOB:GRAY . EACH KNOB INCLUDES:	80009	366-1077-00
	213-0153-00			. SETSCREW:5-40 X 0.125 INCH, HEX SOC STL	74445	OBD
-36	366-1059-00			PUSH BUTTON: GRAY	80009	366-1059-00
-36 -37	366-1215-00			KNOB: GRAY	80009	
-3/	366-1215-00		_	. KNOB INCLUDES:	00009	300-1213-00
	213-0153-00			. SETSCREW:5-40 X 0.125 INCH, HEX SOC STL	74445	ORD
-38	366-1519-01			KNOB:MAN	1-4-4-3	80009 366-1519-0
-30	200-1319-01		_	. KNOB INCLUDES:		22007 200-1317-0
	213-0725-00		2	. SETSCREW:3-48 X 0.094 INCH, HEX SOC STL	71159	OBD

PREV. E OCT. 1975

Fig. &						
Index	Tektronix S	Serial/Model No.	Ohr		Mfr	
No.	Part No. I	Eff Dscont	Giy	Name & Description	Code	Mfr Part Number
1-39	366-1391-00			KNOB: GRAY	80009	366-1391-00
	213-0140-00		-	. KNOB INCLUDES:	70076	
-40	366-1480-02		1	. SETSCREWCH, HEX SOC STL PUSH BUTTON:	702 7 6 80009	
-41	366-1402-12		î	PUSH BUTTON:FAST	80009	366-1480-02 366-1402-12
-42	366-1402-25		ī	PUSH BUTTON:VAR PERSISTANCE	80009	366-1402-25
-43	366-1402-13			PUSH BUTTON:BISTABLE	80009	
-44	426-0681-00		15	FR, PUSH BUTTON: GRAY PLASTIC		426-0681-00
-45	358-0378-00	B010100 B149999	3	BUSHING, SLEEVE: PRESS MOUNT	80009	
	358-0378-00	B150000	2	BUSHING, SLEEVE: PRESS MOUNT	80009	358-0378-00
-46			3	RES., VAR: (SEE R1430,R1095,R1488A,B EPL) (ATTACHING PARTS FOR EACH)		
-47	210-0583-00		1	NUT, PLAIN, HEX.: 0.25-32 X 0.312 INCH, BRS	73743	2X20224-402
-48	210-0940-00		1	WASHER,FLAT:0.25 ID X 0.375 INCH OD,STL	79807	OBD
-49			1	RES., VAR: (SEE R1472A, B EPL) (ATTACHING PARTS)		
-50	210-0583-00		1	NUT, PLAIN, HEX.: 0.25-32 X 0.312 INCH, BRS	73743	2X20224-402
	210-0940-00		1	WASHER, FLAT: 0.25 ID X 0.375 INCH OD, STL	79807	OBD
-51	210-0223-00		1	TERMINAL,LUG:0.25 INCH DIA,SE	78189	2101-14-03-2520N
- 52	333-1795-00	B010100 B149999	1	PANEL, FRONT:	80009	333-1795-00
	333-1795-01	B150000	1	PANEL, FRONT:	80009	
- 53			1	CKT BOARD ASSY:MODE SWITCH(SEE A17 EPL) (ATTACHING PARTS)		
-54	211-0101-00		2	SCREW,MACHINE:4-40 X 0.25" 100 DEG,FLH STL . CKT BOARD ASSY INCLUDES:	83385	OBD
-55	131-0608-00		9	. CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-56	260-1593-00		1	. SWITCH, PUSH: FAST/VAR PERSIST/BI STABLE	80009	
- 57	361-0411-00		5	. SPACER, PUSH SW:0.13 W X 0.375 INCH L, PLSTC	71590	J64285-00
-58	211-0001-00		y 2	. SCREW, MACHINE: 2-56 X 0.25 INCH, PNH STL	83385	OBD
- 59	220-0637-00		1	. NUT,BLOCK:1.05 X 0.50 X0.188 INCH OA	80009	220-0637-00
-60	136-0387-01		1	JACK, TIP: BLACK		4352-1-0310
-61	136-0387-00		3	JACK, TIP: GRAY		4352-1-0318
-62	132-0027-00	B010100 B019999		ADAPTER, CA TO C:		0874-6540
	351-0437-00	B020000	2	GUIDE, CKT CARD:	80009	351-0437-00
-63	212-0040-00		1	(ATTACHING PARTS FOR EACH) SCREW, MACHINE: 8-32 X 0.375 100 DEG, FLH STL	83385	OBD
-64	386-2119-00		1	SUBPANEL, FRONT:	80009	386-2119-00
				(ATTACHING PARTS)		
-65	211-0538-00		4	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
	211-0589-00		2	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH BRS	83385	OBD
-66	348-0282-00		1	STAND, ELEC EQPT:	80009	348-0282-00
-67 -69	348-0278-00		2	• • • • • • • • • • • • • • • • • • • •	80009	
- 68	351-0295-00		3	GUIDE, SLIDE: (ATTACHING PARTS FOR EACH)	80009	351-0295 - 00
-69	213-0088-00	B010100 B100799	1	SCR, TPG, THD CTG:4-24 X 0.25 INCH, PNH STL	83385	ORD
	213-0054-00			SCR,TPG,THD FOR:6-32 X 0.312 INCH,PNH STL	83385	
-70	384-1058-00		1	EXTENSION SHAFT:8.157 INCH LONG	80009	384-1058-00
-71	351-0179-00			GUIDE,CKT CARD:6.75 INCH LONG,PLASTIC (ATTACHING PARTS)		351-0179-00
	672-0572-00		1	CKT BOARD ASSY:PROTECTION AND READOUT		
	211-0101-00		2		83385	OBD
- 72	210-0202-00		1	TERMINAL, LUG:SE #6 (ATTACHING PARTS)	78189	2104-06-00-2520N
-73	211-0559-00		1		83385	OBD
-74	210-0457-00			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	
	644-0056-00		1	POWER SW ASSY: (ATTACHING PARTS)	80009	644-0056-00
-75	211-0559-00		2	SCREW, MACHINE:6-32 X 0.375"100 DEG, FLH STL	83385	OBD
-76	210-0457-00			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	
				*		

9-4 REV. D MARCH 1976

Fig. & Index		Serial/Model No.	Ohv		Mfr	
No.	Part No. E	ff Dscont	Griy_	1 2 3 4 5 Name & Description	Code	Mfr Part Number
1-			_	. POWER SWITCH ASSY INCLUDES:		
-77	407-1570-00		1	. BRACKET, ANGLE: POWER SWITCH	80009	407-1570-00
~78	211-0008-00		2	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
- 79	200-1731-00		1	. COVER, ELEC SW:1.9 X 1.0 INCH	80009	200-1731-00
-80	211-0034-00		1	. SCREW, MACHINE: 2-56 X 0.50 INCH, PNH	83385	OBD
-81	210-0850-00		1	. WASHER, FLAT: 0.093 ID X 0.281 INCH OD	12327	OBD
-82	210-0405-00		1	. NUT,PLAIN,HEX.:2-56 X 0.188 INCH,BRS	73743	
-83	260-1709-00		1	. SWITCH, PUSH: POWER		A9T5 762-6-3
-84	131-0799-00		2	CONTACT, ELEC: (ATTACHING PARTS FOR EACH)	80009	131-0799-00
-85	211-0008-00		1	•	83385	
-86	210-0586-00		1	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
- 87	131-0930-00		2	CONTACT, ELEC: PLUG-IN GROUND (ATTACHING PARTS FOR EACH)	80009	131-0930-00
-88	211-0008-00		1	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
- 89	210-0586-00		1	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
-90	131-1018-00		4	CONTACT, ELEC: PLUG-IN GROUND (ATTACHING PARTS FOR EACH)	80009	131-1018-00
-91	211-0008-00		1	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
- 92	210-0586-00		1	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
-93	343-0004-00		1	CLAMP,LOOP:0.312 INCH DIAMETER,PLSTC (ATTACHING PARTS)	95987	5-16-6B
-94	211-0538-00		1	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
-95	210-0863-00		1	WSHR,LOOP CLAMP:FOR 0.50" WIDE CLAMP,STL	95987	C191
-96	210-0457-00		1	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
-97	210-0202-00		1	TERMINAL,LUG:SE #6 (ATTACHING PARTS)	78189	2104-06-00-2520N
-98	211-0510-00		1	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
-99	210-0457-00		1	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
-100			1	CKT BOARD ASSY:LOGIC(SEE A2 EPL) . CKT BOARD ASSY INCLUDES:		
-101	131-0566-00		1	. LINK, TERM.CONNE:0.086 DIA X 2.375 INCH L	0000C	L-2007-1
-102	136-0235-00		1	. SOCKET, PLUG-IN:6 CONTACT, ROUND	71785	133-96-12-062
-103	136-0252-04	B010100 B010324	24	. CONTACT, ELEC: 0.188 INCH LONG	22526	75060
	136-0350-00	B010325	8	. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	136-0350-00
	136-0260-02		1	. SOCKET, PLUG-IN:16 CONTACT, LOW CLEARANCE		C931602
-105	136-0263-03	B010100 B131579	33	. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		86250-2
100	136-0263-04	B131580	33	. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		75377-001
	136-0269-02		3	. SOCKET, PLUG-IN:14 CONTACT, LOW CLEARANCE		C931402
-107 -108	214-0579-00		1	. TERM., TEST PT:0.40 INCH LONG CKT BOARD ASSY:MAIN INTERFACE(SEE Al EPL) (ATTACHING PARTS)	80009	214-0579-00
-109	213-0034-00		9	SCR,TPG,THD CTG:4-40 X 0.188 INCH,PNH STL	83385	OBD
			-	. CKT BOARD ASSY INCLUDES:		
-110	131-0608-00		84	. CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-111	131-0592-00		24	. CONTACT, ELEC: 0.885 INCH LONG	22526	47353
	131-0591-00		33	. CONTACT, ELEC: 0.835 INCH LONG	22526	47352
	131-0589-00		4	. CONTACT, ELEC: 0.46 INCH LONG		47350
-112	129-0308-00		3	. POST,ELEC-MECH:HEX.,0.25 X 0.465 INCH LONG (ATTACHING PARTS FOR EACH)	80009	129-0308-00
-113	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-114	129-0308-00		1	. POST, ELEC-MECH: HEX., 0.25 X 0.465 INCH LONG (ATTACHING PARTS)	80009	129-0308-00
	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-115	210-0803-00		1	. WASHER,FLAT:0.15 ID X 0.375 INCH OD,STL	12327	OBD

REV. D MARCH 1976

Fig. & Index		Serial/Model N			***	
No.	Part No.		nt Qty	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
1-116	131-0804-00			. LINK, TERM. CONNE: J-SHAPE		131-0804-00
	131-0805-00			. LINK, TERM. CONNE: J-SHAPE, 0.90X0.82 X 0.312"	80009	
-118	131-1003-00			. CONNECTOR BODY, : CKT BD MT, 3 PRONG		131-1003-00
-119	136-0252-01			. CONTACT, ELEC: 0.178 INCH LONG		1-332095-2
	131-0767-08			. CONNECTOR, RCPT,:PLUG-IN CKT BD,70 CONTACT (ATTACHING PARTS FOR EACH)		131-0767-08
-120	213-0232-00		2	. SCR,TPG,THD FOR:2-32 X 0.312 INCH,PNH STL	83385	OBD
			-	EACH CONNECTOR INCLUDES:		
	200-0950-00		2	COVER, ELEC CONN: PLASTIC	80009	200-0950-00
	131-0726-00			CONTACT, ELEC: STRAIGHT		131-0726-00
	131-0727-00			CONTACT, ELEC: OFFSET		131-0727-00
-124	204-0365-00			BODY, CONNECTOR: PLUG-IN CIRCUIT BOARD		204-0365-00
	131-0767-07			. CONNECTOR, RCPT, :PLUG-IN CKT BD, 70 CONTACT (ATTACHING PARTS)	80009	131-0767-07
-125	213-0232-00			. SCR, TPG, THD FOR: 2-32 X 0.312 INCH, PNH STL	83385	
	210-0906-00		1	. WASHER, NONMETAL: FIBER, 0.125 ID X 0.203"OD	86445	OBD
			-	• • • • • • • • • • • • • • • • • • • •		
	200-0950-00			COVER, ELEC CONN: PLASTIC		200-0950-00
	131-0726-00			CONTACT, ELEC: STRAIGHT		131-0726-00
	131-0727-00			CONTACT, ELEC: OFFSET		131-0727-00
	204-0365-02			BODY, CONNECTOR: PLUG-IN CIRCUIT BOARD	80009	204-0365-02
				. CKT BOARD ASSY: (SEE Al5 EPL) (ATTACHING PARTS)		
	211-0008-00 351-0213-00			. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
-132				. GUIDE-POST,LOCK:0.285 INCH LONG	80009	351-0213-00
1.00			-	* * **** **** *************************		
	131-0787-00			CONTACT, ELEC: 0.64 INCH LONG		47359
	344-0147-00			. CLIP,SPR,TNSN:CIRCUIT BOARD MOUNTING (ATTACHING PARTS FOR EACH)		344-0147-00
	210-0406-00			. NUT, PLAIN, HEX.: 4-40 X 0.188 INCH, BRS		2X12161-402
	210-0054-00 214-1568-00			. WASHER,LOCK:SPLIT,0.118 ID X 0.212"OD STL	83385	
				. PIN,GUIDE:		214-1568-00
	386~1558~00			. SPACER,CKT BD:PLASTIC	80009	
	214-0579-00			. TERM., TEST PT:0.40 INCH LONG CKT BOARD ASSY: VERTICAL INTERFACE (SEE A4 EPL)	80009	214-0579-00
-141	211-0008-00		2	(ATTACHIG PARTS) SCREW,MACHINE:4-40 X 0.25 INCH,PNH STL	83385	OBD
			_	. CKT BOARD ASSY INCLUDES:		
-142	136-0252-04	B010100 B01032		. CONTACT, ELEC: 0.188 INCH LONG	22526	75060
	136-0252-04	B010325	22	. CONTACT, ELEC: 0.188 INCH LONG	22526	
	136-0350-00	B010325	3	. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE		136-0350-00
-143	136-0263-03			. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		86250-2
-144			1	CKT BOARD ASSY:TRIGGER SELECT(SEE A3 EPL) (ATTACHING PARTS)		
-145	211-0008-00		2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
			-	. CKT BOARD ASSY INCLUDES:		
	131-0589-00			. CONTACT, ELEC: 0.46 INCH LONG	22526	47350
-147	136-0252-04			. CONTACT, ELEC: 0.188 INCH LONG		75060
	136-0350-00			. SOCKET, PLUG-IN:3 PIN, LOW PROFILE		136-0350-00
	136-0260-02		1	. SOCKET, PLUG-IN:16 CONTACT, LOW CLEARANCE		C931602
-149		B010100 B1315		. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		86250-2
150	136-0263-04			. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		75377-001
-150				COV, HANDLE END:		200-0728-00
	343-0006-00			CLAMP,LOOP:0.50 INCH DIAMETER,PLSTC (ATTACHING PARTS)		1-2-6В
	210-0457-00			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	
	210-0863-00			WSHR,LOOP CLAMP:FOR 0.50" WIDE CLAMP,STL	95987	
	211-0559-00	VB01/00Q0	1	SCREW, MACHINE: 6-32 X 0.375"100 DEG, FLH STL	83385	ดสถ

9-6 REV. E MARCH 1976

Fig. &											
Index	Tektronix	Serial/Mode	el No.	ο.					Mfr		
No.	Part No.	Eff	Dscont	Qty	1 2 3 4 5	Name 8	Description		Code	Mfr Pa	irt Number
1-151	367-0108-00			1	HANDLE, SCOPE	:			80009	367-010	08-00
						(ATTACHIN	G PARTS)				
-152	212-0597-00			4	SCREW, MACHIN	E:10-32 X 0	.50 INCH,STL		80009	212-059	97-00
-153	386-1624-00			2	PL, RET., HAND	LE:			80009	386-162	24-00
-154	358-0485-00			4	BUSHING, SLEE	VE:0.196ID	X 0.2870D X 0.	13" L	80009	358-048	35-00
-155	386-1283-03			2	PLATE, HDL MT	G:PLASTIC			80009	386-128	33-03
						*					
	426-1042-00			1	FRAME ASSEMB	LY:			80009	426-104	12-00
	~			-	. FRAME ASSY	INCLUDES:					
-156	426-0741-06			1	. FRAME SECT	,CAB.:FRONT			80009	426-074	41-06
						(ATTACHIN	•				
-157	210-0782-00			8	. RIVET, SOLI		X 0.312"100 DE	G FLH	12360	OBD	
						*					
-158	426-0741-03			1	. FRAME SECT	•			80009	426-074	41-03
						(ATTACHIN					
-159	210-0782-00			8	. RIVET, SOLI		X 0.312"100 DE	G FLH	12360	OBD	
						*					
-160	426-0753-00			1	. FRAME SECT				80009		53-00
	343-0006-00	XB070600		1	CLAMP, LOOP: 0	.50 INCH DI ATTACHIN	•		95987	1-2-6B	
	211-0559-00	XB070600		1	SCREW, MACHIN	E:6-32 X O.	375"100 DEG,FL	H STL	83385	OBD	
	210-0863-00	XB070600		1	WSHR, LOOP CL	AMP:FOR 0.5	0" WIDE CLAMP,	STL	95987	C191	
	210-0457-00	XB070600		1	NUT, PLAIN, EX	T W:6-32 X	0.312 INCH,STL	ı	83385	OBD	
						*					
-161	380-0238-00			1	. HOUSING, PL	UG-IN:			80009	380-023	38-00
						(ATTACHIN	G PARTS)				
-162	210-0782-00			2	. RIVET, SOLI	D:0.125 OD	X 0.312"100 DE	G FLH	12360	OBD	
						*					
-163				1	. FRAME SECT	•			80009	426-085	
-164	426-0858-00			1	. FRAME SECT	CAB.:LOWER	LEFT		80009	426-085	58-00

REV. D APR. 1975 9-7

Fig. & Index		Serial/Model No.	Qty	1 2 3 4 5 Name & Description	Mfr	
<u>No.</u>	Part No.	Eff Dscont		Name & Description	Code	Mfr Part Number
2-1			1	CKT BOARD ASSY: VERTICAL AMP(SEE A5 EPL) (ATTACHING PARTS)		
-2	211-0008-00		3	SCREW, MACHINE: 4-40 x 0.25 INCH, PNH STL	83385	OBD
			-	. CKT BOARD ASSY INCLUDES:		
-3	131-0566-00		4	. LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L		L-2007-1
-4	131-0608-00		8	. CONTACT, ELEC: 0.365 INCH LONG	22526	
-5 -6	131-1003-00 136-0252-04	B010100 B010324	3	. CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
-6	136-0252-04	B010325		. CONTACT,ELEC:0.188 INCH LONG . SOCKET,PLUG-IN:3 PIN,LOW PROFILE	22526 80009	
-7	214-0579-00	D010323		. TERM., TEST PT:0.40 INCH LONG	80009	
-8	131-0775-00			. CONTACT, ELEC: HEX, 0.25 INCH W/6-32 1 END (ATTACHING PARTS FOR EACH)	88245	
-9	211-0503-00		1	SCREW, MACHINE: 6-32 X 0.188 INCH, PNH STL	83385	OBD
-10	346-0117-00		1	. STRAP, GROUNDING:	80009	346-0117-00
-11			1		00003	310 0117 00
-12	211-0008-00		2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
	 -		_	. CKT BOARD ASSY INCLUDES:		
-13	131-0608-00		23	. CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-14	131-1003-00		2	. CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
-15		B010100 B010324		. CONTACT, ELEC: 0.188 INCH LONG	22526	
	136-0350-00	B010325	4	. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE		136-0350-00
-16	136-0365-00	8010325	4	. SOCKET, PLUG-IN:3 PIN	80009	
-16 -17	136-0260-01 214-0579-00		1 1	. SOCKET, PLUG-IN:16 CONTACT, RECT SHAPE . TERM., TEST PT:0.40 INCH LONG	80009	133-51-02-075 214-0579-00
-18	210-0627-00		2		80009	
-19	343-0097-00		2		80009	343-0097-00
-20	210-0599-00		2	NUT, SLEEVE: 4-40 X 0.391 INCH LONG	80009	210-0599-00
-21	214-0368-00		1	SPRING, HLCPS: 0.24 DIA X 0.438 INCH LONG	80009	214-0368-00
-22	352-0062-00		2	HOLDER, HEAT SK:1.187 X 1.187 INCHES, PLSTC (ATTACHING PARTS FOR EACH)	80009	352-0062-00
-23	211-0008-00		2	,	83385	OBD
-24 -25	211-0012-00		2	SCREW, MACHINE: 4-40 X 0.375 INCH, PNH STL	83385	OBD
	210-0406-00		4	NUT, PLAIN, HEX.:4-40 x 0.188 INCH, BRS	73743	2X12161-402
-26	119-0368-00		1 2	(ATTACHING PARTS)	80009	119-0368-00
-27	213-0034-00		_	SCR,TPG,THD CTG:4-40 X 0.188 INCH,PNH STL	83385	
-28 - 29	351-0087-00 348-0031-00		1		80009 80009	351-0087-00
-30	348-0064-00			GROMMET, PLASTIC: 0.156 INCH DIA	80009	348-0031-00 348-0064-00
-31	255-0334-00			PLASTIC CHANNEL:12.75 INCHES LONG	80009	255-0334-00
-32	407-1001-00		1		80009	407-1001-00
	211-0589-00		2	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH BRS	83385	OBD
-33	210-0457-00		2	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
-34	211-0538-00		2	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
-35			1	CKT BOARD ASSY:STORAGE(SEE Al4 EPL) (ATTACHING PARTS)		
-36	211-0008-00		2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
-37	129-0236-00			POST, ELEC-MECHO. 187" HEX	06540	9726-A-0440
-38	210-0586-00		2	*	78189	OBD
20	131-0609-00	B010100 B140000	- 98	. CKT BOARD ASSY INCLUDES:	22526	47357
-39	131-0608-00	B010100 B149999 B150000		. CONTACT, ELEC: 0.365 INCH LONG . CONTACT, ELEC: 0.365 INCH LONG	22526	
-40	136-0252-04			. CONTACT, ELEC: 0.188 INCH LONG	22526	
		B010325 B149999X		. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	

REV. E MARCH 1976

Fig. & Index No.	Tektronix S Part No. E	erial/Model No. ff Dscont	Qty	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
						
2-41	136-0260-01			. SOCKET, PLUG-IN:16 CONTACT, RECT SHAPE		133-51-02-075
-42	136-0269-02			. SOCKET, PLUG-IN:14 CONTACT, LOW CLEARANCE		C931402
-43	214-0579-00			. TERM., TEST PT:0.40 INCH LONG		214-0579-00
-44	260-1378-00			. SWITCH, PUSH: VERT MODE	71590	
-45	366-1402-02			. PUSH BUTTON:LEFT . PUSH BUTTON:ALT	80009 80009	
-46 -47	366-1402-03 366-1402-04			. PUSH BUTTON:ADD	80009	
-4/		хв080750 в149999		. LINK, TERM. CONNE: 2 WIRE BLACK	00779	
	131-0993-00			. LINK, TERM. CONNE: 2 WIRE BLACK	00779	
-48	366-1257-31	B130000		. PUSH BUTTON: CHOP	80009	
-49	366-1402-06			. PUSH BUTTON:RIGHT	80009	
-50	260-1379-00			. SWITCH, PUSH: TRIG SOURCE	71590	
-51	366-1402-02			. PUSH BUTTON: LEFT	80009	366-1402-02
-52	366-1402-07		1	. PUSH BUTTON: VERT MODE	80009	366-1402-07
- 53	366-1402-06		1	. PUSH BUTTON: RIGHT	80009	366-1402-06
-54	260-1594-00		1	. SWITCH, PUSH: NON STORE/STORE/SAVE	80009	260-1594-00
~ 55	366-1402-08			. PUSH BUTTON:	80009	366-1402-08
- 56	366-1257-85			. PUSH BUTTON: GRAYSTORE	80009	366-1257-85
- 57	366-1402-21			. PUSH BUTTON:	80009	
-58	361-0411-00			. SPACER, PUSH SW:0.13 W X 0.375 INCH L, PLSTC	71590	
- 59	384-1099-00			. EXTENSION SHAFT: PUSH BUTTON, 1.54 INCH LONG	80009	
-60	384-1136-00			. EXTENSION SHAFT: 0.95 INCH LONG	80009	
-61	352-0019-00		2	. HOLDER: PLASTIC	80009	352-0019-00
-62	213-0088-00		1	(ATTACHING PARTS FOR EACH) . SCR, TPG, THD CTG: 4-24 X 0.25 INCH, PNH STL	83385	OBD
				*		
	200-1799-00	XB100000	1	COVER,CKT CARD:CKT BOARD,HV (ATTACHING PARTS)	80009	200-1799-00
	211-0008-00	YB100000	1	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
	210-0801-00			WASHER, FLAT: 0.14 ID X 0.28I OD NP STL	12327	
	210 0002 00	ND100000	-	*	22021	
				(ATTACHING PARTS)		
-64	211-0147-00		2		83385	OBD
-65	210-0586-00		2		78189	OBD
				~ *		
-66	386-2416-00		1	SUPPORT, CHASSIS:	80009	386-2416-00
				(ATTACHING PARTS)	00005	0.55
- 67	211-0511-00			SCREW, MACHINE: 6-32 X 0.50 INCH, PNH STL	83385 79807	
- 68	210-0993-00 211-0510-00			WSHR, SHOULDERED: 0.143" ID X 0.75" OD, BRS SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	
	210-0457-00			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, FNR STL	83385	
	210-0457-00		2	*	03303	ODD
	343-0213-00	хв090000	1	CLAMP, LOOP: PRESS MT, PLASTIC	80009	343-0213-00
-69	407-1002-00			BRACKET, CHASSIS:	80009	
				(ATTACHING PARTS)		
	211-0538-00		4	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
	210-0457-00		4	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
- 70	211-0511-00			SCREW, MACHINE: 6-32 X 0.50 INCH, PNH STL	83385	
-71	210-0993-00		1	WSHR, SHOULDERED: 0.143" ID X 0.75" OD, BRS	79807	OBD
				*		
70	672-0572-00			CKT BOARD ASSY:PROTECTION AND READOUT		
-72			1	. CKT BOARD ASSY:PROTECTION(SEE A18 EPL)	04063	4116
-73 -74	253-0162-00			TAPE, PRESS, SEN: CONTACT, ELEC: 0.46 INCH LONG	04963 22526	
-74 -75	131-0589-00 210-0702-00		20	EYELET, METALLIC: 0.047 OD X 0.125 INCH LONG	07707	
-75 -76	210-0702-00	VDT40000	1	. CKT BOARD ASSY:READOUT(SEE Al3 EPL)	0.707	- Jan.
-70	_		_	(ATTACHING PARTS)		
-77	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
				*		
				CKT BOARD ASSY INCLUDES:		47257
- 78	131-0608-00			CONTACT, ELEC: 0.365 INCH LONG	22526	
-79	131-1003-00			CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00 133-96-12-062
-80	136-0235-00		1			1-332095-2
-81	136-0252-01		σ	CONTACT, ELEC: 0.178 INCH LONG	00779	1-332093-2

9-9 REV. F MAR. 1976

Fig. & Index No.	Tektronix Serial/Model No. Part No. Eff Dscont	Qty	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
2-	136-0252-04		CONTACT, ELEC: 0.188 INCH LONG	22526	75060
-82	136-0260-02		. SOCKET, PLUG-IN:16 CONTACT, LOW CLEARANCE		C931602
-83	136-0269-02				
			SOCKET, PLUG-IN:14 CONTACT, LOW CLEARANCE		C931402
-84	260-0723-00		SWITCH, SLIDE: DPDT, 0.5A, 125VAC		GF126-0028
~ 85	214-0579-00 B010100 B139999		TERM., TEST PT:0.40 INCH LONG	80009	214-0579-00
	214-0579-00 B140000	20	TERM, TEST PT:0.40 INCH LONG	80009	214-0579-00
-86	195-0114-08	1	LEAD SET:READOUT	80009	195-0114-08
	621-0474-00	1	POWER SUPPLY:HIGH VOLTAGE (ATTACHING PARTS)	80009	
- 87	211-0504-00	4	SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	OBD
		_	. HIGH VOLTAGE INCLUDES:		
-88	351-0324-00	2	. GUIDE, CKT CARD:	80009	351-0324-00
	342-0256-00 XB020000		. INSULATOR, XTSR:	80009	
	342-0257-00 XB020000		. INSULATOR, LEAD:	80009	
- 89		7	. CKT BOARD ASSY: Z AXIS (SEE A8 EPL)	00003	342 0257 00
			(ATTACHING PARTS)		
-90	211-0008-00		. SCREW,MACHINE:4-40 X 0.25 INCH,PNH STL	83385	OBD
		-	CKT BOARD ASSY INCLUDES:		
-91	131-0608-00	52	CONTACT, ELEC: 0.365 INCH LONG CONNECTOR BODY,:CKT BD MT,3 PRONG	22526	47357 131-1003-00
-92	131-1003-00	3	CONNECTOR BODY,: CKT BD MT, 3 PRONG	80009	131-1003-00
-93	136-0252-04 B010100 B010324	42	CONTACT, ELEC: 0.188 INCH LONG	22526	
	136-0365-00 B010325		. SOCKET, PLUG-IN: 3 PIN ASSY		136-0365-00
	136-0350-00 B010325		. SOCKET, PLUG-IN:3 PIN, LOW PROFILE		136-0350-00
-94			. CKT BOARD ASSY:ANODE(SEE A9 EPL)	00003	130 0330 00
			(ATTACHING PARTS)		
- 95	211-0040-00		. SCREW, MACHINE: 4-40 X 0.25", BDCH PLSTC		
- 96	211-0008-00	1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-97		1	. CKT BOARD ASSY:HIGH VOLTAGE(SEE AlO EPL) (ATTACHING PARTS)		
-98	211-0008-00	2	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	02205	OPD
-99	211-0040-00		. SCREW,MACHINE:4-40 X 0.25 INCH,FMA SIL		
-55			*	26365	OBD
		-	CKT BOARD ASSY INCLUDES:		
-100	124-0118-00	1	TERMINAL BOARD: 1 NOTCH	80009	124-0118-00
			(ATTACHING PARTS)		
-101	361-0007-00	1	SPACER, SLEEVE: 0.250 INCH DIA, PLASTIC	80009	361-0007-00
		_	TERMINAL STRIP INCLUDES:		
-102	355-0046-00		MOUNT, TERM. BD: 0.577 INCH H	80009	355-0046-00
	124-0119-00		TERMINAL BOARD: 2 NOTCH		124-0119-00
			(ATTACHING PARTS) . SPACER, SLEEVE: 0.250 INCH DIA, PLASTIC		
-104	361-0007-00		*	80009	361-0007-00
			TERMINAL STRIP INCLUDES:	00	255 2246 22
	355-0046-00		MOUNT, TERM. BD:0.577 INCH H		355-0046-00
-106	131-0589-00	7	CONTACT, ELEC: 0.46 INCH LONG	22526	
	131-0608-00	19	CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-107	136-0252-04	9	CONTACT, ELEC: 0.188 INCH LONG	22526	75060
-108	166-0292-00	2	SPACER, SLEEVE: PLSTC, 0.155 DIA X 0.065"L	80009	166-0292-00
	214-0579-00	1	TERM., TEST PT:0.40 INCH LONG	80009	214-0579-00
-110		ī	. TRANSISTOR:		
			(ATTACHING PARTS)	00005	onn.
-111	213-0146-00	2	. SCR, TPG, THD FOR: 6-20 X 0.313 INCH, PNH STL	83385	
-112	386-0978 - 00	1	. INSULATOR, PLATE: 0.002 INCH MICA, FOR TO-3	80009	386-0978-00
-113	136-0280-00	1	. SOCKET, PLUG-IN:FOR TO-3 (ATTACHING PARTS)	22753	PTSl
-114	211-0101-00	2	. SCREW, MACHINE: 4-40 X 0.25" 100 DEG, FLH STL	83385	OBD
	210-0586-00	2	. NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	

REV. D OCT. 1975

Fig. &					
Index	Tektronix Serial/Model No.	Ο		Mfr	
No.	Part No. Eff Dscont	Qiy	Name & Description	Code	Mfr Part Number
	348-0063-00	1	. GROMMET, PLASTIC: 0.50 INCH DIA	80009	348-0063-00
	343-0088-00		. CLAMP,LOOP:0.062 INCH DIA	80009	
-118	348-0085-00 B010100 B119999		. PLASTIC CHANNEL:12.75 INCHES LONG		255-0334-00
110	358-0166-00 Bl20000		. GROMMET, PLASTIC: U-SHAPED		358-0166-00
	129-0251-01	1	. POST, NONMETALLI:4-40X0.250D X 1.125"LG (ATTACHING PARTS)	80009	129-0251-01
-120	129-0236-00	1	. POST, METALLIC: 4-40 X 0.188 X 0.375" IG	06540	9726-A-D440
	211-0008-00		. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH, STL	83385	OBD
	210-0004-00 XB110998		. WASHER, LOCK: INTL, 0.12 ID X 0.26" OD, STL		1204-00-00-0541C
-121	129-0251-00	3	. POST, NONMETALLI: 4-40 X 0.25 OD X 1.125" LONG (ATTACHING PARTS FOR EACH)	80009	129-0251-00
-122	211-0040-00	1	. SCREW, MACHINE: 4-40 X 0.25", BDCH PLSTC	26365	OBD
-123	129-0143-00	3	. INSULATOR, STDF:0.312 OD X 0.406" L,NYLON (ATTACHING PARTS FOR EACH)	80009	129-0143-00
-124	211-0008-00	1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-125	131-0773-00	1	. CONN, RCPT, ELEC:	01009	8111
-126	337-1538-01	1	. SHIELD, ELEC: HIGH VOLTAGE	80009	337-1538-01
-127	441-1192-00	1	CHASSIS, SCOPE: MAIN	80009	441-1192-00
			(ATTACHING PARTS)		
	211-0590-00		SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	OBD
-129	210-0457-00	2	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
			*		
1.20	242 0247 00	-	. CHASSIS INCLUDES:		
-130	343-0347-00	1	. RING, CLP, CRT RE:	80009	343-0347-00
-131	211-0507-00	4	(ATTACHING PARTS)	83385	ODD
-131	211-0307-00	4	. SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
-132	354-0205-01	1	. RTNR, ELECTRON T: (ATTACHING PARTS)	80009	354-0205-01
-133	211-0170-00	2	. SCREW, MACHINE: 4-40 X 2.75 INCH, PNH STL	83385	ORD
	214-1333-00	2	. SPRING, HLCPS: 0.213 OD X 0.375 INCH LONG		214-1333-00
	210-0803-00 XB090000	7	WASHER, FLAT: 0.15 ID X 0.375 INCH OD, STL	12327	OBD
	343-0004-00 XB090000		CLAMP, LOOP: 0.312 INCH DIAMETER, PLSTC		5-16-6B
-135			COIL:	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	0 10 02
			(ATTACHING PARTS)		
-136	213-0138-00	2	SCR, TPG, THD FOR: 4-40 X 0.188 INCH, PNH STL	83385	OBD
-137	343-0217-00	1	CLAMP, COIL:	80009	343-0217-00
			*		
_	342-0182-00		INSULATOR:CRT SHIELD		342-0182-00
	342-0184-00		INSULATOR:CRT FRONT		342-0184-00
	337-1531-00	1	• • • • • • • • • • • • • • • • • • • •		337-1531-00
-140	337-1757-00	1	SHIELD, ELEC: REGULATOR	80009	337-1757-00
-141	211-0097-00	4	(ATTACHING PARTS) SCREW,MACHINE:4-40 X 0.312 INCH,PNH STL	83385	OBD
-142	441-1129-00 ¹	1	CHASSIS,SCOPE:	90000	441-1129-00
142	441-1129-00		(ATTACHING PARTS)	60009	441-1129-00
	211-0559-00	4	SCREW, MACHINE: 6-32 X 0.375"100 DEG, FLH STL	83385	OBD
-143	147-0008-00 ¹	1	MOTOR AC:BARBER COLMAN (ATTACHING PARTS)	05624	AYAA13080
-144	212-0557-00	2	SCREW, MACHINE: 10-32 X 0,50 INCH, RND H STL	83385	OBD
-145	337-1756-00 ¹		SHIELD, ELEC: FAN	80009	
-146	210-1112-001		WASHER, FLAT: 0.228ID X 0.375 INCH OD, PLSTC		210-1112-00
		_	*		
-147		1	FAN BLADE:PLASTIC	52792	3500CW125N
-148	378-0811-00 ¹	1	BAFFLE, AIR:	80009	378-0811-00
			(ATTACHING PARTS)		
-149	211-0008-00	4	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD

lparts not included in Option 5.

9-11 REV. E OCT. 1975

Fig. & Index No.	Tektronix S Part No. E	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5 Name & Description	Mfr	Mf. D. A N. I.
		.ii Dscoiii			Code	Mfr Part Number
- 151		B010100 B111234 B111235	2	(ATTACHING PARTS FOR EACH) SCREW, MACHINE: 6-32 X 0.50 INCH, PNH STL	83385 83385	OBD
-132	366-0976-00		1	INSULATOR, PLATE: 0.002 INCH MICA, FOR TO-3	80009	386-0978-00
	343-0004-00			CLAMP,LOOP:0.312 INCH DIAMETER,PLSTC (ATTACHING PARTS)	95987	5-16-68
	210-0457-00 210-0803-00			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	
-153		NB090000	1	WASHER, FLAT: 0.15 ID X 0.375 INCH OD, STL CKT BOARD ASSY: REGULATOR (SEE A12 EPL)	12327	OBD
-154	131-0608-00			. CKT BOARD ASSY INCLUDES: . CONTACT, ELEC: 0.365 INCH LONG	22526	47257
	136-0183-00			. SOCKET, PLUG-IN:3 PIN		136-0183-00
	136-0235-00			. SOCKET, PLUG-IN:6 CONTACT, ROUND		133-96-12-062
	131-0847-00			. TERMINAL STUD:6-32 X 0.435 INCH LONG		131-0847-00
	136-0361-00			. SOCKET, PLUG-IN:		136-0361-00
-159	136-0384-00		12	. CONTACT, ELEC: FOR 0.04 DIAMETER PIN	00779	
-160	136-0252-04	B010100 B010324	36	. CONTACT, ELEC: 0.188 INCH LONG		75060
	136-0252-04	B010325	9	CONTACT, ELEC: 0.188 INCH LONG	22526	
	136-0350-00	B010325		SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	136-0350-00
	136-0269-02		1	. SOCKET, PLUG-IN: 14 CONTACT, LOW CLEARANCE		C931402
	214-0579-00		1	. TERM., TEST PT:0.40 INCH LONG		214-0579-00
	214-1291-00		3	HEAT SINK, ELEC: XSTR, 0.72 OD X 0.375"H		207-AB
-164	344-0154-00 614-0104-01			. CLIP, ELECTRICAL: FOR 0.25 INCH DIA FUSE		344-0154-00
	014-0104-01		_	SUBPANEL ASSY:REAR (ATTACHING PARTS)	80009	614-0104-01
-165	211-0529-00		4	SCREW, MACHINE: 6-32 X 1.25 INCHES, PNH STL	83385	OBD
	348-0191-00			LEG, ELEC EQUIP.: PLASTIC	80009	
-167	211-0008-00			SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
				*		
				. SUBPANEL ASSY INCLUDES:		
	161-0033-09			. CABLE ASSY, PWR: 3 WIRE, 92 INCH LONG		KH8035
-169				. BSHG,STRAIN RLF:90 DEG,0.515 DIA HOLE		SR15-1
-170	200-1388-00 200-1388-01	B010100 B111234		. COVER, FUSE:	80009	
-171	352-0076-00	B111233		. COVER,FUSE: . FUSEHOLDER:W/HARDWARE	80009 75915	
	131-0955-00			. CONNECTOR, RCPT, : BNC, FEMALE		28JR200-1
	202 0000 00		·	(ATTACHING PARTS FOR EACH)	24751	200N200 I
-173	210-0255-00		1	. TERMINAL, LUG: 0.391" ID INT TOOTH	80009	210-0255-00
-174	210-0204-00			. TERMINAL, LUG: 0.146 INCH DIA DE, 45 DEG BEND	78189	2157-06-01-2520N
	210-0202-00	XB111080	1	. TERMINAL,LUG:SE #6 (ATTACHING PARTS)	78189	2104-06-00-2520N
-175	211-0504-00	B010100 B111079	1	. SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	OBD
	211-0507-00		1	. SCREW, MACHINE: 6-32 X 0.312 INCH , BRS	83385	OBD
-176		B010100 B111079		. NUT, PLAIN, HEX.: 6-32 X 0.25 INCH, BRS		3038-0228-402
	210-0407-00	B111080	2	. NUT, PLAIN, HEX: 6-32 X 0.312 INCH, BRS	73743	3038-0228-402
-177			1	. CKT BOARD ASSY:OUTPUT SIGNALS(SEE A7 EPL) (ATTACHING PARTS)		
-178	211-0008-00		2	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
				*		
			-	CKT BOARD ASSY INCLUDES:		45055
	131-0608-00		10	CONTACT, ELEC: 0.365 INCH LONG		47357
-180			2	CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	
-181	136-0252-01	D010100 D010304	2	CONTACT,ELEC: 0.178 INCH LONG CONTACT,ELEC:0.188 INCH LONG	00779	
	136-0252-04	B010100 B010324 B010325	27 9	CONTACT, ELEC: 0.188 INCH LONG SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	22526 80009	
_102	136-0350-00 214-0579-00	POTO373	1	TERM., TEST PT:0.40 INCH LONG	80009	
	260~0984-00		1	SWITCH, SLIDE: DP3POSN, 0.5A, 125VAC-DC	79727	
-184	386-2199-00		1	. PANEL, REAR: POWER	80009	•
	175-1091-00		ī	CABLE, SP, ELEC:		175-1091-00
			_	• •		

REV. D OCT. 1975

Fig. & Index	Tektronix Serial/Model No	. Otv	1 2 3 4 5 Name & Description	Mfr	
No.	Part No. Eff Dscon		Name & Description	Code	Mfr Part Number
2-	343-0003-00 XB090000	1	(ATTACHING PARTS)	95987	1-4 6R
	211-0012-00 XB090000	1	7.2.2.7.2.2.7.2.2.7.2.7.2.7.2.7.2.2.7.2.2.2.7.2	83385	
	210-0803-00 XB090000		WASHER, FLAT: 0.15 ID X 0.375 INCH OD, STL	12327	
	210-0586-00 XB090000	1	*	78189	
	614-0077-05		POWER SUPPLY:LOW VOLTAGE (ATTACHING PARTS)	80009	614-0077-05
	212-0040-00	6	SCREW, MACHINE: 8-32 X 0.375 100 DEG, FLH STL	83385	OBD
		-	. POWER SUPPLY INCLUDES:		
-186		1	. CKT BOARD ASSY:RECTIFIER(SEE All EPL) (ATTACHING PARTS)		
	211-0511-00		. SCREW, MACHINE: 6-32 X 0.50 INCH, PNH STL	83385	OBD
	210-0863-00		. WSHR, LOOP CLAMP: FOR 0.50" WIDE CLAMP, STL	95987	
	343-0004-00		. CLAMP, LOOP: 0.312 INCH DIAMETER, PLSTC		5-16-6B
	211-0507-00		. SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	
-191	210-0202-00	1	. TERMINAL, LUG:SE #6	78189	2104-06-00-2520N
		-	CKT BOARD ASSY INCLUDES:		
-192	131-0608-00	31	CONTACT, ELEC: 0.365 INCH LONG	22526	47357
	136-0252-04 B010100 B010324	6	CONTACT, ELEC: 0.188 INCH LONG	22526	75060
-194	214-1731-01	1	HEATSINK, ELEC:TRANSISTOR, W/PEM NUT (ATTACHING PARTS)	80009	214-1731-01
-195	211-0012-00	1	SCREW, MACHINE: 4-40 X 0.375 INCH, PNH STL	83385	OBD
-196	210-0935-00		WASHER, NONMETAL: FIBER, 0.14 IDX 0.375"OD	74921	OBD
-197	210-0586-00	1	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
-198	214-1292-00	2	HEAT SINK, ELEC: TRANSISTOR	05820	205-AB
-199		4	CLIP, ELECTRICAL: FOR 0.25 INCH DIA FUSE	80009	344-0154-00
-200		1	. SW,THERMOSTATIC: (SEE S1000 EPL) (ATTACHING PARTS)		
-201	211-0008-00	2	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-202	210-0586-00	2	. NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
~203		1	. TRANSFORMER: (SEE T801 EPL) (ATTACHING PARTS)		
-204	212-0522-00	2		83385	OBD
-205	210-0812-00	2	. WASHER, NONMETAL: #10, FIBER	06982	OBD
-206	166-0457-00		. INSUL SLVG, ELEC: 0.19 ID X 1.875 LONG MYLAR	80009	166-0457-00
-207	212-0023-00	2	. SCREW, MACHINE:8-32 X 0.375 INCH, PNH STL	83385	OBD
	210-0804-00	2	. WASHER, FLAT: 0.17 ID X 0.375 INCH OD, STL	12327	OBD
-209	407-0921-00	1	. BRKT,XFMR MTG:	80009	407-0921-00
-210	441-0993-01	1	. CHASSIS, SCOPE: POWER SUPPLY, LOW VOLTAGE	80009	441-0993-01
	136-0589-00	1	CRT SOCKET ASSY:	80009	136-0589-00
-211	136-0304-02	1	. SOCKET, PLUG-IN: CRT	80009	136-0304-02
-212	200-0917-01	1	. COV, ELECTRON TU: 2.052 OD X 0.291" THK, PLSTC	80009	200-0917-01
-213	367-0117-00	1	. PULL, SOC, PL-IN:	80009	367-0117-00
-214	343-0254-00	1	. CLAMP, CRT SKT:	80009	343-0254 - 00
-215		1	. GROMMET, RUBBER:	72653	1043-1M
	131-0707-00	7	. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE	22526	47439
-217	131-0621-00	6	. CONTACT, ELEC: 0.577"L, 22-26 AWG WIRE	22526	46231
	352-0161-05	1	. CONN BODY, PL, EL: 3 WIRE GREEN	80009	352-0161-05
	352-0162-09	1	. CONN BODY, PL, EL: 4 WIRE WHITE	80009	352-0162-09
	352-0205-00	1	. CONN BODY, PL, EL:9 WIRE BLACK	80009	352-0205-00
-218		1	WIRING HARNESS: VERTICAL SIGNAL	80009	
	131-0707-00	2	. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE	22526	
	131-0708-00	2	. CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE	22526	47437
-219	210-0774-00	2	. EYELET, METALLIC: 0.152 OD X 0.245 INCH L, BRS	80009	210-0774-00

9-13 REV. D OCT. 1975

Fig. &						
Index	Tektronix	Serial/Model No.	Ob.,		Mfr	
No.	Part No.	Eff Dscont	Qiy	1 2 3 4 5 Name & Description	Code	Mfr Part Number
2-220	210-0775-00			. EYELET, METALLIC: 0.126 OD X 0.23 INCH L, BRS	80009	210-0775-00
	352-0162-09		1	. CONN BODY, PL, EL:4 WIRE WHITE	80009	352-0162-09
	179-1826-00	1	1	WIRING HARNESS:SWEEP GATE		179-1826-00
	131-0707-00)	8	. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE	22526	47439
	131-0708-00		8	. CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE	22526	47437
	352-0166-03		1	. CONN BODY, PL, EL:8 WIRE ORANGE	80009	352-0166-03
	179-1828-00		1	WIRING HARNESS:COAX	80009	179-1828-00
	131-0707-00		2	. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE		47439
	131-0708-00		2	. CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE		47437
	352-0169-01		1	. CONN BODY, PL, EL: 2 WIRE BROWN	80009	352-0169-01
	352-0169-05 352-0169-09		1 1	. CONN BODY,PL,EL:2 WIRE,GREEN . CONN BODY,PL,EL:2 WIRE WHITE	80009 80009	352-0169-05
	131-0621-00		7	CONTACT, ELEC: 0.577"L, 22-26 AWG WIRE	22526	352-0169-09 46231
	131-0707-00			CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE		47439
	131-0708-00			CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE		47437
-221				CONTACT, ELEC:QUICK DISCONNECT		42617-2
-222	131-1538-00		4	CONTACT, ELEC: CRIMP-ON, 22-26 AWG WIRE	22526	75369-002
	210-0774-00		11	EYELET, METALLIC: 0.152 OD X 0.245 INCH L, BRS	80009	210-0774-00
	210-0775-00		11	EYELET, METALLIC: 0.126 OD X 0.23 INCH L, BRS	80009	210-0775-00
-223	200-1075-00		5	COVER, ELEC CONN: PLASTIC	00779	1-480435-0
-224	352-0171-00		2	CONN BODY, PL, EL:1 WIRE BLACK	80009	352-0171-00
	352-0171-03		2	CONN BODY, PL, EL:1 WIRE ORANGE	80009	352-0171-03
-225	352-0169-00		2	CONN BODY, PL, EL: 2 WIRE BLACK	80009	352-0169-00
	352-0169-01		2	CONN BODY, PL, EL: 2 WIRE BROWN	80009	352-0169-01
	352-0169-02		1	CONN BODY, PL, EL:2 WIRE RED	80009	352-0169-00
	352-0169-04 352-0169-08		1 4	CONN BODY, PL, EL:2 WIRE YELLOW	80009 80009	
	352-0169-09		2	CONN BODY,PL,EL:2 WIRE GRAY CONN BODY,PL,EL:2 WIRE WHITE	80009	352-0169-08 352-0169-09
-226			4	CONN BODY, PL, EL: 3 WIRE BLACK	80009	352-0161-00
220	352-0161-03		1	CONN BODY, PL, EL:3 WIRE ORANGE	80009	352-0161-03
	352-0161-05		1	CONN BODY, PL, EL:3 WIRE GREEN	80009	352-0161-05
	352-0161-06		2	CONN BODY, PL, EL:3 WIRE BLUE	80009	352-0161-05
	352-0161-08		1	CONN BODY, PL, EL: 3 WIRE GRAY	80009	352-0161-08
	352-0161-09		2	CONN BODY, PL, EL: 3 WIRE WHITE	80009	352-0261-09
-227			4	CONN BODY, PL, EL:4 WIRE BROWN	80009	352-0162-01
- 228	352-0163-00		1	CONN BODY, PL, EL:5 WIRE BLACK	80009	352-0163-00
	352-0163-01		2	CONN BODY, PL, EL:5 WIRE BROWN	80009	352-0163-01
	352-0163-03		1 2	CONN BODY, PL, EL:5 WIRE ORANGE	80009 80009	352-0163-03
	352-0163-06 352-0163-08		11	CONN BODY,PL,EL:5 WIRE BLUE CONN BODY,PL,EL:5 WIRE GRAY	80009	352-0163-06 352-0163-08
-229	352-0164-01		2	CONN BODY, PL, EL:6 WIRE BROWN	80009	352-0164-01
223	352-0164-09		1	CONN BODY:PL,EL:6 WIRE WHITE	80009	352-0164-09
-230	352-0166-00		2	CONN BODY, PL, EL:8 WIRE BLACK	80009	352-0166-00
	352-0166-01		2	CONN BODY, PL, EL:8 WIRE BROWN	80009	352-0166-01
	352-0166-03		4	CONN BODY, PL, EL:8 WIRE ORANGE	80009	352-0166-03
-231	352-0167-00)	2	CONN BODY, PL, EL: 9 WIRE BLACK	80009	352-0167-00
	352-0167-05	i	2	CONN BODY, PL, EL:9 WIRE GREEN	80009	352-0167-05
-232			2	CONN BODY, PL, EL: 10 WIRE RED	80009	352-0168-02
	352-0168-05		2	CONN BODY, PL, EL: 10 WIRE GREEN	80009	352-0168-05
000	352-0168-07		2	CONN BODY, PL, EL: 10 WIRE VIOLET	80009	352-0168-07
-233			1	CONN BODY, PL, EL:9 WIRE BLACK	80009 23499	352-0205-00 TEK-175-0825-00
-234 -235	175-0825-00 175-0826-00		FT FT	WIRE, ELECTRICAL: 2 WIRE RIBBON WIRE, ELECTRICAL: 3 WIRE RIBBON	08261	TEK-175-0826-00
-236			FT	WIRE, ELECTRICAL: 4 WIRE RIBBON	08261	TEK-175-0827-00
-237	175-0828-00		FT	WIRE, ELECTRICAL:5 WIRE RIBBON	23499	TEX-175-0828-00
-238	175-0829-00		FT	WIRE, ELECTRICAL: 6 WIRE RIBBON	83501	TEK-175-0829-00
-239	175-0831-00		FT	WIRE, ELECTRICAL: 8 WIRE RIBBON	08261	TEK-175-0831-00
-240	175-0832-00		FT	WIRE, ELECTRICAL: 9 WIRE RIBBON	23499	TEK-175-0832-00
-241			FT	WIRE, ELECTRICAL: 10 WIRE RIBBON	23499	TEK-175-0833-00
	175-0855-00)	FT	WIRE, ELECTRICAL: 10 WIRE RIBBON	23499	TEK-175-0855-00
	175-0857-00)	FT	WIRE ELECTRICAL:TIBBON TYPE,8 WIRES	23499	TEX-175-0857-00
	210-0774-00		2	EYELET, METALLIC: 0.152 OD X 0.245 INCH L, BRS	80009	210-0774-00
	210-0775-00		2	EYELET, METALLIC: 0.126 OD X 0.23 INCH L, BRS	80009	210-0775-00
	352-0162-09	•	1	. CONN BODY, PL, EL: 2 WIRE WHITE	80009	352-0162-09

REV. E OCT. 1975

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5	Name &	Description	Mfr Code	Mfr Part Number
2-					OPTION 5			
	119-0396-00)	1	FAN, TUBEAXIA	L:40 CFM,115 (ATTACHING	,	80009	119-0396-00
	211-0530-00)	4	SCREW, MACHIN	E:6-32 X 1.7	5 INCH,PNH STL	83385	OBD
	285-0562-00)	1	CAP.,FXD,PLS	TC:0.47UF,20	,	56289	410P47404
	211-0504-00)	3	SCREW, MACHIN	E:6-32 X 0.2	5 INCH, PNH STL	83385	OBD
	131-0761-00)	3	TERMINAL STU		FLAT TAB	71279	4897-1-0516
	344-0116-00		1	RTNR, CAP: 0.6	25 MTG		80033	E50005-041
	378-0050-00)	1	BAFFLE, AIR:			80009	378-0050-00
				•	(ATTACHING	PARTS)		
	211-0507-00)	4	SCREW, MACHIN		312 INCH, PNH ST	L 83385	OBD
	441-1201-00)	1	CHAS, ELEC EQ	PT:		80009	441-1201-00

9-15 REV. D OCT. 1975

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Qty	12345 Name & Des	Mfr cription Code	Mfr Part Number
3-1	390-0229-00			1 2 3 4 5 Name & Des	80009	390-0229-00
				(ATTACHING PAR	TS)	
-2	211-0008-00		6	SCREW, MACHINE: 4-40 X 0.25 IN		
	211-0101-00	1	2	SCREW, MACHINE: 4-40 X 0.25" 1		OBD
	426 0514 00		-	*		406 0514 00
-3 -4	426-0514-00			FRAME, MASK: PLASTIC	80009	
-4 -5	378-0625-02 331-0258-03			FILTER,LT,CRT: MASK,CRT SCALE:	80009 80009	
-6	200-0939-01			BEZEL, CRT:	80009	
Ū	200 0333 01		•	(ATTACHING PAR		200-0939-01
- 7	212-0023-00	•	4	SCREW, MACHINE: 8-32 X 0.375 I	NCH, PNH STL 83385	OBD
	131-1022-00	XB050000	2	CONTACT, ELEC: CRT MASK	80009	131-1022-00
-8	337-1159-00	1	1	WINDOW, OBS: 4.78 X 3.93 X 0.0		
- 9	331-0245-00	•	1	MASK, CRT SCALE:	80009	331-0245-00
-10	333-1691-00	1	1	PANEL, FRONT: LEFT	80009	333-1691-00
-11	386-1884-03	•	1	SPRT, ELCTRN TUB: (ATTACHING PAR	80009 TS)	386-1884-03
-12	212-0040-00	1	2	SCREW, MACHINE: 8-32 X 0.375 1	-	OBD
	211-0510-00)	2	SCREW, MACHINE: 6-32 X 0.375 I		
				*	-	
		•	-	. SUPPORT INCLUDES:		
-13	386-1517-00		4	. SUPPORT, CRT:	80009	
-14	204-0380-00			BODY, TERMINAL:	80009	
-15	131-0765-00			CONTACT, ELEC:	80009	
-16	348-0031-00			GROMMET, PLASTIC: 0.156 INCH D		348-0031-00
-17				CKT BOARD ASSY:GRATICULE LIG	HT(SEE A16 EPL)	
10	270 0614 00		-	. CKT BOARD ASSY INCLUDES:	20000	270 0614 00
-18 -19	378-0614-00			. REFLECTOR, LIGHT:	80009	
-19 -20	344-0179-00 211-0062-00			. CLIP, REFL RTNG: PLASTIC . SCREW, MACHINE: 2-56 X 0.312	80009 INCH,RDH STL 83385	
-20 -21	366-1519-00			KNOB:PULL	80009	
-21			_	. KNOB INCLUDES:	30003	300 1317 00
	213-0725-00)		. SETSCREW: 3-048 X 0.094 INC	H, HEX SOC STL 71159	OBD
-22	366-1077-00			KNOB: GRAY	80009	366-1077-00
		•	_	. EACH KNOB INCLUDES:		
	213-0153-00)	1	. SETSCREW:5-40 X 0.125 INCH	HEX SOC STL 74445	OBD
-23	366-1059-00)	1	PUSH BUTTON: GRAY	80009	366-1059-00
-24	366-1215-00			KNOB: GRAY	80009	366-1215-00
				. KNOB INCLUDES:		
	213-0153-00			. SETSCREW:5-40 X 0.125 INCH		
-25	366-1519-01			KNOB: MAN	80009	366-1519-01
	213-0725-00		-	. KNOB INCLUDES: . SETSCREW:3-048 X 0.094-00	INCH, HEX SOC STL 71159	QBD
-26	366-1391-00			KNOB:GRAY	80009	366-1391-00
20	300-1391-00			. KNOB INCLUDES:	23009	220 2022 00
	213-0140-00			. SETSCREWCH:2-56 X 0.95 HEX	SOC STL 70276	BOD
-27	366-1480-02			PUSH BUTTON:ON-OFF	80009	366-1480-02
-28	366-1402-12	2	1	PUSH BUTTON:FAST	80009	366-1402-12
-29	366-1402-25	5	1	PUSH BUTTON: VAR PERSISTANCE	80009	366-1402-25
-30	366-1402-13	3	1	PUSH BUTTON:BI STABLE	80009	
-31	426-0681-00)		FR, PUSH BUTTON: GRAY PLASTIC	80009	
-32	358-0378-00)		BUSHING, SLEEVE: PRESS MOUNT	80009	358-0378-00
-33		-		RES., VAR: (SEE R1430, R1095, R1 (ATTACHING PAR	RTS FOR EACH)	
-34	210-0583-00			NUT, PLAIN, HEX.: 0.25-32 X 0.3		
- 35	210-0940-00)	1	WASHER, FLAT: 0.25 ID X 0.375		OBD
-36		-	1	RES., VAR: (SEE R1472A, B EPL) (ATTACHING PAR		
-37	210-0583-00)		NUT, PLAIN, HEX.: 0.25-32 X 0.3		
	210-0940-00			WASHER, FLAT: 0.25 ID X 0.375		
-38	210-0223-00)	1	TERMINAL, LUG: 0.25 INCH DIA, S		2101-14-03-2520N

REV. D OCT. 1975

Fig. &		 				
Index No.	Tektronix S Part No. 1	del No. Dscont	Qty	1 2 3 4 5 Name & Description	Mfr	Mfr Part Number
3-39	333-1795-00	 		PANEL, FRONT:	80009	
	333-1795-01			PANEL, FRONT:		333-1795-01
-40				CKT BOARD ASSY:MODE SWITCH(SEE A17 EPL) (ATTACHING PARTS)	00003	200 2730 02
-41	211-0101-00		2		83385	OBD
			-	. CKT BOARD ASSY INCLUDES:		
-42	131-0608-00		9	. CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-43	260-1593-00		1	. SWITCH, PUSH: FAST/VAR PERSIST/BI STABLE	80009	260-1593-00
-44	361-0411-00		5	. SPACER, PUSH SW:0.13 W X 0.375 INCH L, PLSTC	71590	J64285-00
-45	211-0001-00			. SCREW, MACHINE: 2-56 X 0.25 INCH, PNH STL	83385	OBD
-46	220-0637-00		1	. NUT, BLOCK: 1.05 X 0.50 X0.188 INCH OA	80009	220-0637-00
-47	136-0387-01		1	JACK, TIP: BLACK	71279	4352-1-0310
-48	136-0387-00		3	JACK, TIP: GRAY	71279	4352-1-0318
-49	132-0027-00		2	ADAPTER,CA TO C:	24655	0874-6540
				(ATTACHING PARTS FOR EACH)		
-50	212-0040-00		1	SCREW, MACHINE: 8-32 X 0.375 100 DEG, FLH STL	83385	OBD
-51	386-2119-00		1	SUBPANEL, FRONT: (ATTACHING PARTS)	80009	386-2119-00
-52	211-0538-00		4	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
	211-0589-00		2	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH BRS	83385	OBD
- 53	351-0313-00		1	GUIDE, RACKMOUNT: 19.218 INCH LONG, PAIR (ATTACHING PARTS)	80009	351-0313-00
-54	210-0458-00		12	NUT, PLAIN, EXT W:8-32 X 0.344 INCH, STL	83385	OBD
- 55	367-0138-00		2	HANDLE, BOW: U SHAPED (ATTACHING PARTS FOR EACH)	06540	14053-A-1032-1B
- 56	212-0518-00		2		83385	OBD
-57	200-1448-00		1	COVER, ACCESS: (ATTACHING PARTS)	80009	200-1448-00
- 58	211-0008-00		6	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
- 59	200-1401-00		1	COVER, ACCESS: (ATTACHING PARTS)	80009	200-1401-00
-60	211-0101-00		5	SCREW, MACHINE: 4-40 X 0.25" 100 DEG, FLH STL	83385	OBD
-61	210-0201-00		1	TERMINAL,LUG:SE #4 (ATTACHING PARTS)	78189	2104-04-00-2520N
-62	210-0586-00			NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
	644-0056-00			POWER SW ASSY: (ATTACHING PARTS)	80009	644-0056-00
-63	210-0586-00			NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
				. POWER SWITCH ASSY INCLUDES:		
-64	407-1570-00			. BRACKET, ANGLE: POWER SWITCH	80009	407-1570-00
- 65	211-0008-00			. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-66	200-1731-00			. COVER, ELEC SW:1.9 X 1.0 INCH	80009	200-1731-00
-67	211-0034-00		1	. SCREW, MACHINE: 2-56 X 0.50 INCH, PNH	83385	OBD
-68	210-0850-00		1	. WASHER, FLAT: 0.093 ID X 0.281 INCH OD	12327	OBD
-69	210-0405-00		1	. NUT, PLAIN, HEX.: 2-56 X 0.188 INCH, BRS	73743	2X12157-402
-70	260-1709-00		1	. SWITCH, PUSH: POWER	77342	
-71	343-0004-00		1	CLAMP,LOOP:0.312 INCH DIAMETER,PLSTC (ATTACHING PARTS)	95987	5-16-6B
-72	211-0538-00		1	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
-73	210-0863-00		1	WSHR, LOOP CLAMP: FOR 0.50" WIDE CLAMP, STL	95987	C191
-74	210-0457-00		1	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD

9-17 REV. E MARCH 1976

Fig. & Index		Serial/Model No.	0 5.		Mfr	
No.	Part No.	Eff Dscont	Qry	1 2 3 4 5 Name & Description	Code	Mfr Part Number
3-75	343-0004-00		1	CLAMP,LOOP:0.312 INCH DIAMETER,PLSTC (ATTACHING PARTS)	95987	5-16-6B
-76	211-0510-00			SCREW, MACHINE: 6-32 X 0.375 INCH, PNH STL	83385	OBD
- 77	210-0202-00		1	,		2104-06-00-2520N
-78 -79	210-0863-00			WSHR,LOOP CLAMP:FOR 0.50" WIDE CLAMP,STL	95987	
	210-0457-00		1	*	83385	
-80	343-0004-00			CLAMP,LOOP:0.312 INCH DIAMETER,PLSTC (ATTACHING PARTS)		5-16-6В
-81	210-0457-00			NUT, PLAIN, EXT W: 6-32 X 0.312 INCH, STL	83385	
- 82	210-0863-00		1	WSHR,LOOP CLAMP:FOR 0.50" WIDE CLAMP,STL	95987	C191
-83	386-2412-00		1	SUPPORT, CRT: (ATTACHING PARTS)	80009	386-2412-00
-84	211-0538-00		2	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
	211-0507-00		1	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
- 85	210-0457-00		3	NUT, PLAIN, EXT W: 6-32 X 0.312 INCH, STL	83385	OBD
-86	337-1731-00		1	SHIELD, ELEC: REGULATOR (ATTACHING PARTS)	80009	337-1731-00
-87	211-0504-00		4	SCREW,MACHINE:6-32 X 0.25 INCH,PNH STL	83385	OBD
-88	441-1060-01		1	CHAS,ELEC EQPT:MAIN (ATTACHING PARTS)	80009	441-1060-01
-89	211-0538-00		1	SCREW, MACHINE:6-32 X 0.312"100 DEG, FLH STL	83385	OBD
-90	211-0504-00			SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	
-91	211-0025-00		2	SCREW, MACHINE: 4-40 X 0.375 100 DEG, FLH STL	83385	OBD
-92			6	TRANSISTOR: (SEE Q874,Q903,Q850,Q933,Q958, Q988 EPL)		
				(ATTACHING PARTS FOR EACH)		
-93	211-0511-00		2	SCREW, MACHINE: 6-32 X 0.50 INCH, PNH STL	83385	OBD
-94	386-0978-00		1	INSULATOR, PLATE: 0.002 INCH MICA, FOR TO-3	80009	386-0978-00
- 95			1	CKT BOARD ASSY:REGULATOR(SEE Al2 EPL) . CKT BOARD ASSY INCLUDES:		
-96	131-0608-00		49	. CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-97	136-0361-00		6	. SOCKET, PLUG-IN:	80009	136-0361-00
-98	131-0847-00		12	. TERMINAL STUD: 6-32 X 0.435 INCH LONG	80009	131-0847-00
-99	136-0384-00			. CONTACT, ELEC: FOR 0.04 DIAMETER PIN	00779	
	136-0183-00			•		136-0183-00
	136-0235-00			. SOCKET, PLUG-IN:6 CONTACT, ROUND		133-96-12-062
-102	136-0252-04 136-0252-04			. CONTACT, ELEC: 0.188 INCH LONG . CONTACT, ELEC: 0.188 INCH LONG	22526 22526	
	136-0252-04			. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE		136-0350-00
-103		5010323	-	. SOCKET, PLUG-IN: 14 CONTACT, LOW CLEARANCE		C931402
	214-0579-00			. TERM., TEST PT: 0.40 INCH LONG		214-0579-00
-105			3	. HEAT SINK, ELEC: XSTR, 0.72 OD X 0.375"H	05820	207-AB
-106	344-0154-00		2	. CLIP, ELECTRICAL: FOR 0.25 INCH DIA FUSE	80009	344-0154-00
-107	220-0614-00		1	NUT BLOCK:6-32 X 0.347 X 1.25 INCH LONG (ATTACHING PARTS)	80009	220-0614-00
-108	211-0507-00		2	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
-109	386-2054-00		1	SUPPORT: POWER SUPPLY (ATTACHING PARTS)	80009	386-2054-00
-110	211-0101-00		2	·	83385	OBD
-111	351-0295-02		3	GUIDE, SLIDE: (ATTACHING PARTS FOR EACH)	80009	351-0295-02
-112	211-0105-00		1	SCREW, MACHINE: 4-40 X 0.188"100 DEG, FLH STL	83385	OBD
		во10100 в100799		SCREW, MACHINE: 4-40 X 0.25" 100 DEG, FLH STL	83385	

REV. D OCT. 1975

Fig. & Index	Tektronix Serial/Ma	odel No. 🚓			Mfr	
No.	Part No. Eff	Dscont Q1	У	1 2 3 4 5 Name & Description	Code	Mfr Part Number
3-114	351-0305-01			GUIDE, PLUG-IN: UPPER	80009	351-0305-01
-115	211-0105-00		1	(ATTACHING PARTS FOR EACH) SCREW, MACHINE: 4-40 X 0.188"100 DEG, FLH STL	83385	OBD
-116	129-0441-00		2	POST, ELEC-MECH: 0.125 OD X 5.045 INCH LONG (ATTACHING PARTS FOR EACH)	80009	129-0441-00
-117	211-0087-00		2	SCREW, MACHINE: 2-56 X 0.188 INCH, FLH SST	70318	OBD
-118	407-1145-02		1	BRKT, HEAT SINK: RIGHT (ATTACHING PARTS)	80009	407-1145-02
-119	211-0504-00		2	SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	OBD
-120	437-0143-01			FRAME ASSEMBLY:	80009	437-0143-01
-121	348-0354-00			SHLD GSKT, ELEC: 8.10 INCH LONG	80009	
	213-0054-00			SCR, TPG, THD FOR:6-32 X 0.312 INCH, PNH STL	83385	OBD
	136-0589-00		1	CRT SOCKET ASSY:	80009	136-0589-00
-122	136-0304-02		1	. SOCKET, PLUG-IN: CRT	80009	136-0304-02
-123	200-0917-01		1	. COV, ELECTRON TU: 2.052 OD X 0.291" THK, PLSTC	80009	200-0917-01
-124	367-0117-00		1	. PULL, SOC, PL-IN:	80009	
-125	343-0254-00		1	. CLAMP, CRT SKT:	80009	343-0254-00
-126	348-0012-00			. GROMMET, RUBBER:		1043-1M
-127	131-0707-00		7			47439
-128	131-0621-00		6	. CONTACT, ELEC: 0.577"L, 22-26 AWG WIRE		46231
	352-0161-05			. CONN BODY, PL, EL:3 WIRE GREEN		352-0161-05
	352-0162-09		1	. CONN BODY, PL, EL:4 WIRE WHITE		352-0162-09
	352-0205-00			. CONN BODY, PL, EL:9 WIRE BLACK		352-0205-00
-129	179-1825-00			WIRING HARNESS: VERTICAL SIGNAL		179-1825-00
	131-0707-00		2	. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE		47439
	131-0708-00		2	. CONTACT, ELEC: 0.48 L, 28-32 AWG WIRE	22526	
~130	210-0774-00		2	EYELET, METALLIC: 0.152 OD X 0.245 INCH L, BRS		47437
-131	210-0775-00		2	•		210-0774-00
-131	352-0162-09		1	. EYELET, METALLIC: 0.126 OD X 0.23 INCH L, BRS		210-0775-00
				. CONN BODY, PL, EL: 4 WIRE WHITE		352-0162-09
	179-1826-00 131 - 070 7 -00		8	WIRING HARNESS:SWEEP GATE	80009	
				. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE		47439
	131-0708-00		8	. CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE		47437
	352-0166-03			. CONN BODY, PL, EL:8 WIRE ORANGE	80009	
	179-1828-01			WIRING HARNESS:COAX	80009	
	131-0707-00		2	. CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE		47439
	131-0708-00		2	. CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE		47437
	352-0169-01			. CONN BODY, PL, EL:2 WIRE BROWN	80009	
	352-0169-05			. CONN BODY, PL, EL: 2 WIRE, GREEN	80009	
	352-0169-09		1	. CONN BODY, PL, EL:2 WIRE WHITE		352-0169-09
	131-0621-00		7	,,,,,	22526	
	131-0707-00			CONTACT, ELEC: 0.48"L, 22-26 AWG WIRE	22526	
	131-0708-00			CONTACT, ELEC: 0.48"L, 28-32 AWG WIRE	22526	
	131-0861-00		4	CONTACT, ELEC: QUICK DISCONNECT		42617-2
-133	131-1538-00		4	CONTACT, ELEC: CRIMP-ON, 22-26 AWG WIRE	22526	75369-002
	210-0774-00		.3	EYELET, METALLIC: 0.152 OD X 0.245 INCH L, BRS	80009	210-0774-00
	210-0775-00		.3	EYELET, METALLIC: 0.126 OD X 0.23 INCH L, BRS	80009	210-0775-00
-134	200-1075-00		4	COVER, ELEC CONN: PLASTIC	00779	1-480435-0
-135	352-0171-00		3	CONN BODY, PL, EL: 1 WIRE BLACK	80009	352-0171-00
	352-0171-03		2	CONN BODY, PL, EL:1 WIRE ORANGE	80009	352-0171 - 03
-136	352-0169-00		2	CONN BODY, PL, EL: 2 WIRE BLACK	80009	352-0169-00
	352-0169-01		1	CONN BODY, PL, EL: 2 WIRE BROWN	80009	352-0169-01
	352-0169-02		1	CONN BODY, PL, EL:2 WIRE RED	80009	352-0169-00
	352-0169-04		1	CONN BODY, PL, EL: 2 WIRE YELLOW	80009	352-0169-04
	352-0169-08		3	CONN BODY, PL, EL: 2 WIRE GRAY	80009	352-0169-08
	352-0169-09		2	CONN BODY, PL, EL: 2 WIRE WHITE	80009	352-0169-09
-137	352-0161-00		4	CONN BODY, PL, EL: 3 WIRE BLACK	80009	352-0161-00
	352-0161-01		1	CONN BODY, PL, EL: 3 WIRE BROWN	80009	352-0161-01
	352-0161-02		1	CONN BODY, PL, EL: 3 WIRE RED	80009	352-0161-02
	352-0161-06		1	CONN BODY, PL, EL: 3 WIRE BLUE	80009	352-0161 - 05
	352-0161-09		3	CONN BODY, PL, EL: 3 WIRE WHITE	80009	352-0161-09

9-19 REV. D OCT. 1975

Fig. &						
Index	Tektronix	Serial/Model No.			Mfr	
No.	Part No.	Eff Dscont	Qty	Name & Description	Code	Mfr Part Number
3-138	352-0162-00		2	CONN BODY, PL, EL:4 WIRE BLACK	80009	352-0162-00
	352-0162-01		1	CONN BODY, PL, EL: 4 WIRE BROWN	80009	352-0162-01
	352-0162-05		1	CONN BODY, PL, EL: 4 WIRE GREEN	80009	352-0162-05
	352-0162-08		1	CONN BODY, PL, EL: 4 WIRE GRAY	80009	352-0162-08
	352-0162-09		2	CONN BODY, PL, EL: 4 WIRE WHITE	80009	352-0162-09
-139	352-0163-00		1	CONN BODY, PL, EL:5 WIRE BLACK	80009	352-0163-00
	352-0163-03		1	CONN BODY, PL, EL: 5 WIRE ORANGE	80009	352-0163-03
	352-0163-05		1	CONN BODY, PL, EL:5 WIRE GREEN	80009	352-0163-05
	352-0163-06		2	CONN BODY, PL, EL:5 WIRE BLUE	80009	352-0163-06
	352-0163-08		4	CONN BODY, PL, EL:5 WIRE GRAY	80009	352-0163-08
-140	352-0164-00		2	CONN BODY, PL, EL:6 WIRE BLACK	80009	352-0164-00
	352-0164-09		1	CONN BODY, PL, EL:6 WIRE WHITE	80009	352-0164-09
-141	352-0165-05		1	CONN BODY, PL, EL: 7 WIRE GREEN	80009	352-0165-05
-142	352-0166-00		4	CONN BODY, PL, EL:8 WIRE BLACK	80009	352-0166-00
	352-0166-01		2	CONN BODY, PL, EL:8 WIRE BROWN	80009	352-0166-01
	352-0166-03		2	CONN BODY, PL, EL:8 WIRE ORANGE	80009	352-0166-03
-143	352-0167-00		2	CONN BODY, PL, EL: 9 WIRE BLACK	80009	352-0167-00
	352-0167-04		2	CONN BODY, PL, EL: 9 WIRE YELLOW	80009	352-0167-04
	352-0167-05		2	CONN BODY, PL, EL:9 WIRE GREEN	80009	352-0167-05
-144	352-0168-00		2	CONN BODY, PL, EL: 10 WIRE BLACK	80009	352-0168-00
	352-0168-05		2	CONN BODY, PL, EL: 10 WIRE GREEN	80009	352-0168-05
	352-0168-04		2	CONN BODY, PL, EL: 10 WIRE YELLOW	80009	352-0168-04
-145	352-0205-00		1	CONN BODY, PL, EL:9 WIRE BLACK	80009	352 - 0205-00
-146	175-0825-00		FT	WIRE, ELECTRICAL: 2 WIRE RIBBON	23499	TEK-175-0825-00
-146	175-0825-00		FΤ	WIRE, ELECTRICAL: 2 WIRE RIBBON	23499	TEK-175-0825-00
-147	175-0826-00		FT	WIRE, ELECTRICAL: 3 WIRE RIBBON	08261	TEK-175-0826-00
-148	175-0827-00		FT	WIRE, ELECTRICAL: 4 WIRE RIBBON	08261	TEK-175-0827-00
-149	175-0828-00		FT	WIRE, ELECTRICAL: 5 WIRE RIBBON	23499	TEK-175-0828-00
-150	175-0829 - 00		FT	WIRE, ELECTRICAL: 6 WIRE RIBBON	83501	TEK-175-0829-00
-151	175-0830-00		FT	WIRE, ELECTRICAL: 7 WIRE RIBBON	08261	TEK-175-0830-00
-152	175-0831-00		FT	WIRE, ELECTRICAL: 8 WIRE RIBBON	08261	TEK-175-0831-00
-153	175-0832-00		FT	WIRE, ELECTRICAL: 9 WIRE RIBBON	23499	TEK-175-0832-00
-154	175-0833-00		FΤ	WIRE, ELECTRICAL: 10 WIRE RIBBON	23499	TEK-175-0833-00
-156	384-1060-00		1	EXTENSION SHAFT: 7.831 INCH LONG	80009	384-1060-00

REV. D OCT. 1975

Fig. & Index		Serial/Model No.	Ohv		Mfr	
No.	Part No. I	ff Dscont	Griy	1 2 3 4 5 Name & Description	Code	Mfr Part Number
4-1			1	CKT BOARD ASSY: VERTICAL AMP(SEE A5 EPL) (ATTACHING PARTS)		
-2	211-0008-00		3	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
			_	. CKT BOARD ASSY INCLUDES:		
-3	131-0566-00		4	. LINK, TERM.CONNE:0.086 DIA X 2.375 INCH L	0000C	L-2007-1
-4	131-0608-00		8	. CONTACT, ELEC: 0.365 INCH LONG	22526	47357
- 5	131-1003-00		3	. CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
-6	136-0252-04	B010100 B010324	36	. CONTACT, ELEC: 0.188 INCH LONG	22526	75060
	136-0350-00	B010325	12	SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	136-0350-00
-7	214-0579-00		2	. TERM., TEST PT: 0.40 INCH LONG	80009	214-0579-00
-8	131-0775-00		2	. TERMINAL, STUD: 6-32 X 0.25 X 0.375" IG (ATTACHING PARTS FOR EACH)	80009	131-0775-00
- 9	211-0503-00		1	. SCREW, MACHINE: 6-32 X 0.188 INCH, PNH STL	83385	OBD
-10	346-0117-00		1	. STRAP, GROUNDING:	80009	346-0117-00
-11			1	CKT BOARD ASSY:HORIZONTAL AMP(SEE A6 EPL) (ATTACHING PARTS)		
-12	211-0008-00		2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
			_	. CKT BOARD ASSY INCLUDES:		
-13	131-0608-00		23	. CONTACT, ELEC: 0.365 INCH LONG	22526	
-14	131-1003-00			. CONNECTOR BODY,:CKT BD MT,3 PRONG		131-1003-00
-15	136-0252-04	B010100 B010324		. CONTACT, ELEC: 0.188 INCH LONG	22526	
	136-0350-00		4			136-0350-00
-16	136-0365-00	B010325	4	SOCKET, XSTR: ASSEMBLY		136-0365-00
-17	136-0260-01 214-0579-00			. SOCKET, PLUG-IN:16 CONTACT, RECT SHAPE		133-51-02-075
-18	210-0627-00		1 2	. TERM., TEST PT:0.40 INCH LONG RIVET, SOLID:0.042 DIA X 0.25 INCH, RDH	80009 80009	
-19	343-0097-00		2	· · · · · · · · · · · · · · · · · · ·	80009	210-0627-00 343-0097-00
-20	210-0599-00			(ATTACHING PARTS FOR EACH) NUT,SLEEVE:4-40 X 0.391 INCH LONG	80009	
-21	214-0368-00		1		80009	
-22	352-0062-00			HOLDER, HEAT SK:1.187 X 1.187 INCHES, PLSTC	80009	
- 23	211-0008-00		2	(ATTACHING PARTS FOR EACH)	83385	
-24	211-0012-00			SCREW, MACHINE: 4-40 X 0.375 INCH, PNH STL	83385	
-25	210-0406-00		4		73743	
-26	119-0368-00		1	DELAY LINE, ELEC:	80009	119-0368-00
-27	213-0034-00		2	(ATTACHING PARTS) SCR,TPG,THD CTG:4-40 X 0.188 INCH,PNH STL	83385	OBD
_20	351-0007-00		7	GUIDE, CKT CARD: 4.75 INCH LONG, PLASTIC	90000	251-0097-00
-28 -29	351-0087-00 348-0031-00			GROMMET, PLASTIC: 0.156 INCH DIA	80009 80009	
-30	348-0064-00			GROMMET, PLASTIC: 0.625 INCH DIA	80009	
-31	255-0334-00			PLASTIC CHANNEL:12.75 INCHES LONG	80009	
-32	407-1001-00		1		80009	407-1001-00
-33	211-0589-00		2	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH BRS	83385	OBD
-34	210-0457-00		2	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
	211-0538-00		2	SCREW,MACHINE:6-32 X 0.312"100 DEG,FLH STL	83385	OBD
- 35			1	CKT BOARD ASSY:STORAGE(SEE A14 EPL) (ATTACHING PARTS)		
-36	211-0008-00			SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	=
- 37	129-0236-00			POST, METALLIC: 4-40 X 0.188 X 0.375" LONG	06540	
-38	210-0586-00			NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
			-	. CKT BOARD ASSY INCLUDES:	00506	47257
-39		B010100 B149999	98	. CONTACT, ELEC: 0.365 INCH LONG		47357
-40	131-0608-00	B010100 B010324		. CONTACT, ELEC: 0.365 INCH LONG . CONTACT, ELEC: 0.188 INCH LONG	22526 22526	
-40		B010100 B010324 B010100 B149999X		SOCKET, PLUG-IN:3 PIN, LOW PROFILE		136-0350-00

REV. D MARCH 1976 9-21

Fig. &						
Index		Serial/Model No.	O 4		Mfr	
No.	Part No.	Eff Dscont	Qty	1 2 3 4 5 Name & Description	Code	Mfr Part Number
4-41	136-0260-01		3	. SOCKET, PLUG-IN:16 CONTACT, RECT SHAPE	71785	133-51-02-075
-42	136-0269-02			. SOCKET, PLUG-IN:14 CONTACT, LOW CLEARANCE		C931402
-43	214-0579-00			. TERM., TEST PT:0.40 INCH LONG		214-0579-00
-44	260-1378-00		1	. SWITCH, PUSH: VERT MODE	71590	
-45	366-1402-02		1	. PUSH BUTTON: LEFT	80009	366-1402-02
-46	366-1402-03		1	. PUSH BUTTON: ALT	80009	366-1402-03
	131-0993-00	XB080750 B149999	1	. LINK, TERM. CONNE: 2 WIRE BLACK	00779	530153-2
	131-0993-00	B150000	2	. LINK, TERM. CONNE: 2 WIRE BLACK	00779	530153-2
-47	366-1402-04		1	. PUSH BUTTON: ADD	80009	366-1402-04
-48	366-1257-31		1	. PUSH BUTTON: CHOP	80009	366-1257-31
-49	366-1402-06		1	. PUSH BUTTON: RIGHT	80009	366-1402-06
-50	260-1379-00		1	. SWITCH, PUSH: TRIG SOURCE	71590	2KBC120000-595
-51	366-1402-02		1	. PUSH BUTTON: LEFT	80009	366-1402-02
-52	366-1402-07		1	. PUSH BUTTON: VERT MODE	80009	366-1402-07
-53	366-1402-06		1	. PUSH BUTTON: RIGHT	80009	366-1402-06
-54	260-1594-00		1	. SWITCH, PUSH: NON STORE/STORE/SAVE	80009	260-1594-00 .
- 55	366-1402-08		1	. PUSH BUTTON:	80009	366-1402-08
-56	366-1257-85		1	. PUSH BUTTON: GRAYSTORE	80009	366-1257-85
- 57	366-1402-21		1	. PUSH BUTTON:	80009	366-1402-21
~ 58	361-0411-00		15	. SPACER, PUSH SW:0.13 W X 0.375 INCH L, PLSTC	71590	J64285-00
- 59	384-1099-00		5	. EXTENSION SHAFT: PUSH BUTTON, 1.54 INCH LONG	80009	384-1099-00
-60	384-1136-00		6	. EXTENSION SHAFT: 0.95 INCH LONG	80009	384-1136-00
-61	352-0019-00		2	. HOLDER: PLASTIC	80009	352-0019-00
				(ATTACHING PARTS FOR EACH)		
-62	213-0088-00		1	. SCR, TPG, THD CTG:4-24 X 0.25 INCH, PNH STL	83385	OBD
	200-1799-00	XB100000	1	COVER, CKT CARD: CKT BOARD, HV	80009	200-1799-00
				(ATTACHING PARTS)		
	211-0008-00	XB100000	1	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
	210-0801-00	XB100000	1	WASHER, FLAT: 0.14 ID X 0.281 OD NP STL	12327	OBD
				*		
				*		
- 63	407-1397-00		1	BRACKET, ANGLE:	80009	407-1397-00
				(ATTACHING PARTS)		
-64	211-0147-00		2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
- 65	210-0586-00		2	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
	206 0411 00			*		206 2411 22
-66	386-2411-00		1	SUPPORT, CRT:	80009	386-2411-00
67	211 2550 20		•	(ATTACHING PARTS)	0.005	
- 67	211-0559-00			SCREW, MACHINE:6-32 X 0.375"100 DEG, FLH STL	83385	
-68	210-0457-00			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	
- 69	211-0510-00			SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	
- 70	210-0993-00		2	WSHR, SHOULDERED: 0.143" ID X 0.75" OD, BRS	79807	OBD
-71	407-1186-00		1	BRACKET, CRT:	90000	407-1186-00
-/1	407-1100-00		1	(ATTACHING PARTS)	80009	407-1186-00
	211-0510-00		2	·	83385	OBD
	210-0457-00		_	NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	
	220 015, 00		-	*	03303	322
	672-0572-00	XB140000	1	CKT BOARD ASSY:PROTECTION AND READOUT		
-72			1	. CKT BOARD ASSY:PROTECTION(SEE Al8 EPL)		
-73	253-0162-00			TAPE, PRESS, SENS:	04963	4116
-74	131-0589-00		20	CONTACT, ELEC: 0.46 INCH LONG		47350
-75	210-0702-00		2	. EYELET, METALLIC: 0.047 OD X 0.125 INCH LONG		S6127
-76			ĩ	. CKT BOARD ASSY:READOUT(SEE Al3 EPL)	- · · • ·	:
			_	(ATTACHING PARTS)		
-77	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
				*		
			-	CKT BOARD ASSY INCLUDES:		
-78	131-0608-00		40	CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-79	131-1003-00		6	CONNECTOR BODY,: CKT BD MT, 3 PRONG	80009	131-1003-00
-80	136-0235-00		1	SOCKET, PLUG-IN: 6 CONTACT, ROUND		133-96-12-062
-81	136-0252-01		6	CONTACT, ELEC: 0.178 INCH LONG		1-332095-2
		B010100 B040374	39	CONTACT, ELEC: 0.188 INCH LONG		75060
	136-0254-04	B040375	33	CONTACT ELEC:	80009	136-0254-04

9-22 REV. C MARCH 1976

Fig. & Index No.	Tektronix S	Serial/Model No. Eff Dscont	Qty	1 2 3 4 5 Name & Description	Mfr Code	Mfr Part Number
						
4- -82	136-0350-00 136-0260-01	B040374		SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	
-83				SOCKET, PLUG-IN:16 CONTACT, RECT SHAPE		133-51-02-075
	136-0269-02			SOCKET, PLUG-IN:14 CONTACT, LOW CLEARANCE		C931402
-84	260-0723-00	2010100 212000		SWITCH, SLIDE: DPDT, 0.5A, 125VAC		GF126-0028
-85		B010100 B139999		TERM., TEST PT:0.40 INCH LONG	80009	
0.5	214-0579-00	B140000		TERM, TEST PT:0.40 INCH LONG	80009	
- 86	195-0114-09			LEAD SET:READOUT		195-0114-09
	621-0474-00			POWER SUPPLY:HIGH VOLTAGE (ATTACHING PARTS)	80009	621-0474-00
-87	211-0504-00		4	*	83385	OBD
00	253 0204 00			. HIGH VOLTAGE ASSY INCLUDES:		
-88	351-0324-00			. GUIDE, CKT CARD:	80009	351-0324-00
-89			1	. CKT BOARD ASSY:Z AXIS(SEE A8 EPL) (ATTACHING PARTS)		
- 90	211-0008-00		3	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
				CKT BOARD ASSY INCLUDES:		
-91	131-0608-00			CONTACT, ELEC: 0.365 INCH LONG	22526	
-9 2	131-1003-00		3	CONNECTOR BODY,:CKT BD MT,3 PRONG	80009	131-1003-00
-93		B010100 B040325		CONTACT, ELEC: 0.188 INCH LONG	22526	75060
	136-0350-00			SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	136-0350-00
	136-0365-00	B010325		SOCKET, PLUG-IN: 3 PIN ASSY	80009	136-0365-00
-94			1	. CKT BOARD ASSY:ANODE (SEE A9 EPL) (ATTACHING PARTS)		
-95	211-0040-00		3	. SCREW, MACHINE: 4-40 X 0.25", BDCH PLSTC	26365	OBD
-96	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-97			1	. CKT BOARD ASSY:HIGH VOLTAGE(SEE AlO EPL) (ATTACHING PARTS)		
-98	211-0008-00		3	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-99	211-0040-00		1	. SCREW, MACHINE: 4-40 X 0.25", BDCH PLSTC	26365	OBD
			-	CKT BOARD ASSY INCLUDES:		
-100	124-0118-00		1	TERMINAL BOARD:1 NOTCH	80009	124-0118-00
				(ATTACHING PARTS)		
-101	361-0007-00		1	SPACER, SLEEVE: 0.250 INCH DIA, PLASTIC	80009	361-0007-00
			-	TERMINAL STRIP INCLUDES:		
-102	355-0046-00		1	MOUNT, TERM. BD: 0.577 INCH H	80009	355-0046-00
-103	124-0119-00		1	TERMINAL BOARD:2 NOTCH	80009	124-0119-00
-104	361-0007-00		1	(ATTACHING PARTS) SPACER, SLEEVE: 0.250 INCH DIA, PLASTIC	80009	361-0007-00
			_	TERMINAL STRIP INCLUDES:		
-105	355-0046-00		1	MOUNT, TERM. BD: 0.577 INCH H	80009	355-0046-00
-106	131-0589-00			CONTACT, ELEC: 0.46 INCH LONG		47350
	131-0608-00			CONTACT, ELEC: 0.365 INCH LONG		47357
-107	136-0252-04			CONTACT, ELEC: 0.188 INCH LONG	22526	
-108				SPACER, SLEEVE: PLSTC, 0.155 DIA X 0.065"L	80009	
-109	214-0579-00			TERM., TEST PT:0.40 INCH LONG	80009	
-110			1	. TRANSISTOR: (ATTACHING PARTS)		
-111	213-0146-00		2	. SCR, TPG, THD FOR: 6-20 X 0.313 INCH, PNH STL	83385	OBD
-112	386-0978-00		1	. INSULATOR, PLATE: 0.002 INCH MICA, FOR TO-3	80009	386-0978-00
-113	136-0280-00		1	. SOCKET, PLUG-IN: FOR TO-3 (ATTACHING PARTS)	22753	PTS1
-114	211-0101-00		2	. SCREW, MACHINE: 4-40 X 0.25" 100 DEG, FLH STL	83385	OBD
-115	210-0586-00		2	. NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
-116	348-0063-00		1	. GROMMET, PLASTIC: 0.50 INCH DIA	80009	348-0063-00
-117	343-0088-00		1	. CLAMP, LOOP: 0.062 INCH DIA	80009	343-0088-00

REV. B OCT. 1975

Fig. & Index	Tektronix Serial/Model No.	Ωtv		Mfr	
No.	Part No. Eff Dscont	—————	1 2 3 4 5 Name & Description	Code	Mfr Part Number
4-118	348-0085-00 B010100 B119999	FT	. GROMMET, PLASTIC: U-SHAPED	80009	348-0085-00
	358-0166-00 Bl20000		. GROMMET, PLASTIC: BLACK	80009	
-119			. POST, NONMETALLI: 4-40 X 0.250D X 1.125" LG (ATTACHING PARTS)	80009	129-0251-01
-120	129-0236-00		. POST, ELEC-MECHO.187" HEX		9726-A-0440
	211-0008-00		. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
	210-0004-00 XB110948		. WASHER,LOCK:INTL,0.12 ID X 0.26"OD,STL		1204-00-00-0541c.
	129-0251-00		. INSULATOR, STDF:0.250 OD x 1.125" L, PLSTC (ATTACHING PARTS FOR EACH)		129-0251-00
-122			. SCREW, MACHINE: 4-40 X 0.25", BDCH PLSTC	26365	
-123	129-0143-00		. INSULATOR, STDF:0.312 OD X 0.406" L, NYLON (ATTACHING PARTS FOR EACH)		129-0143-00
-124		1	. SCREW,MACHINE:4-40 X 0.25 INCH,PNH STL	83385	OBD
	131-0773-00		. LEAD, ELECTRICAL: 18.0 INCH LONG		8111LF
-126	337-1538-01		. SHIELD, ELEC:		337-1538-01
	343-0002-00		. CLAMP, LOOP: 0.188 INCH DIA		3-16-6B
	441-1192-00		CHASSIS,SCOPE:MAIN (ATTACHING PARTS)	80009	441-1192-00
	211-0590-00		SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	
-129			NUT, PLAIN, EXT W:6-32 X 0.312 INCH, STL	83385	OBD
7.00	254 2025 22	_	. CHASSIS INCLUDES:		
	354-0205-01		. RTNR, ELECTRON T: (ATTACHING PARTS)		354-0205-01
-131	211-0507-00	4	. SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
-132	343-0347-00		. RING,CLP,CRT RE: (ATTACHING PARTS)	80009	343-0347-00
	211 - 0170-00	2	. SCREW, MACHINE: 4-40 X 2.75 INCH, PNH STL	83385	OBD
-134	214-1333-00	2	. SPRING, HLCPS: 0.213 OD X 0.375 INCH LONG	80009	214-1333-00
-135	~==== =p>+*		COIL: (ATTACHING PARTS)		
	213-0138-00		SCR, TPG, THD FOR: 4-40 X 0.188 INCH, PNH STL	83385	
~137		1	CLAMP,COIL:Y-AXIS	80009	343-0217-00
	342-0182-00		INSULATOR: CRT SHIELD		342-0182-00
	342-0184-00		INSULATOR: CRT FRONT		342-0184-00
	337-1531-00		SHIELD, CRT:		337-1531-00
	378-0041-01		FIL ELEM AIR:OILED		378-0041-01
-140	386-2401-02	1	PANEL, REAR: (ATTACHING PARTS)	80009	386-2401 - 02
-141	211-0565-00	4	SCREW, MACHINE: 6-32 X 0.250 INCH, TRH STL	83385	OBD
-142	211-0538-00		SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
	358-0025-00	1	BSHG, STRAIN RLF:	28520	SR6P4
-144	161-0033-09	1	CABLE ASSY, PWR: 3 WIRE, 92 INCH LONG	16428	KH8035
	162-0512-00 XB141879	FT	INS SLV, ELEC: #10 YELLOW, 0.104 FEET LONG	80009	162-0512 - 00
-145	131-0955-00	6	CONNECTOR, RCPT,:BNC, FEMALE (ATTACHING PARTS FOR EACH)	24931	28JR200-1
-146	210-0255-00	1	TERMINAL,LUG:0.391" ID INT TOOTH	80009	210-0255-00
-147	352-0076-00	1	FUSEHOLDER:W/HARDWARE	75915	342012
-148	200-1388-00 B010100 B111234	1	COVER, FUSE:	80009	200-1388-00
	200-1388-01 Bll1235	1	COVER, FUSE:	80009	
-149	210-0204-00	1		78189	2157-06-01-2520N
	210-0202-00 XB111080	ī	· · · · · · · · · · · · · · · · · · ·		2104-06-00-2520N
-150	211-0504-00 B010100 B111079	1	SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	OBD
	211-0507-00 B111080		SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	
-151	210-0407-00 B010100 B111079		NUT, PLAIN, HEX.:6-32 X 0.25 INCH, BRS		3038-0228-402
	210-0407-00 B111080		NUT, PLAIN, HEX.:6-32 X 0.25 INCH, BRS		3038-0228-402

9-24 REV. B MAR. 1976

Fig. &	T 1					
Index		Serial/Model No.	Qty	1 2 3 4 5 Name & Description	Mfr	
No	Part No. I	ff Dscont		Name & Description	Code	Mfr Part Number
	346-0077-00			STRAP, TIEDOWN E: CKT BOARD ASSY:OUTPUT SIGNALS (SEE A7 EPL) (ATTACHING PARTS)	80009	346-0077-00
~154	211-0008-00			SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
155	131 0600 00			. CKT BOARD ASSY INCLUDES:	22526	45055
	131-0608-00			. CONTACT, ELEC: 0.365 INCH LONG		47357
	131-1003-00 136-0252-01		2 2	. CONNECTOR BODY,:CKT BD MT,3 PRONG . CONTACT,ELEC:0.178 INCH LONG	80009	131-1003-00 1-332095-2
13,	136-0252-04	B010100 B010324		. CONTACT, ELEC: 0.178 INCH LONG	22526	75060
	136-0350-00		9	. SOCKET, PLUG-IN:3 PIN, LOW PROFILE	80009	
-158	214-0579-00		1	. TERM., TEST PT:0.40 INCH LONG		214-0579-00
-159	260-0984-00			. SWITCH, SLIDE: DP3POSN, 0.5A, 125VAC-DC		G-128SPC/7140
-160	119-0390-00			FAN, AXIAL: 46 CFM, 19W, 115 VAC, 60 HZ (ATTACHING PARTS)		MBS-2107F-0-1
	210-0586-00		4	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
-161	386-2410-01		1	SUBPANEL, REAR: (ATTACHING PARTS)	80009	386-2410-01
	211-0538-00		2	SCREW, MACHINE: 6-32 X 0.312"100 DEG, FLH STL	83385	OBD
	211-0504-00		2		83385	OBD
	211-0008-00		1	,	83385	
	213-0088-00		1	SCR,TPG,THD CTG:4-24 X 0.25 INCH,PNH STL	83385	OBD
-165	175-1091-00			CABLE, SP, ELEC:	80009	175-1091-00
	614-0077-05		Ţ	POWER SUPPLY:LOW VOLTAGE (ATTACHING PARTS)	80009	614-0077-05
	212-0040-00		6		83385	OBD
-166			1	. POWER SUPPLY INCLUDES: . CKT BOARD ASSY:RECTIFIER(SEE All EPL) (ATTACHING PARTS)		
-167	211-0511-00		2	. SCREW, MACHINE: 6-32 X 0.50 INCH, PNH STL	83385	OBD
-168	210-0863-00			. WSHR, LOOP CLAMP: FOR 0.50" WIDE CLAMP, STL	95987	C191
-169	343-0004-00		1	. CLAMP, LOOP: 0.312 INCH DIAMETER, PLSTC	95987	5-16-6B
	211-0507-00		2	. SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	
-171	210-0202-00		1	. TERMINAL,LUG:SE #6	78189	2104-06-00-2520N
170	121 0600 00			CKT BOARD ASSY INCLUDES:	22526	47057
	131-0608-00 136-0252-04	B010100 B010324	31 6	CONTACT, ELEC: 0.365 INCH LONG CONTACT, ELEC: 0.188 INCH LONG		47357 75060
-173	136-0350-00		2	. SOCKET, PLUG-IN:3 PIN, LOW PROFILE		136-0350-00
-174	214-1731-01	2020323	1	. HEAT SINK, ELEC: TRANSISTOR TRANSISTOR (ATTACHING PARTS)		214-1731-01
-175			1	SCREW, MACHINE: 4-40 X 0.375 INCH, PNH STL	83385	
-176	210-0935-00		1	WASHER, NONMETAL: FIBER, 0.14 IDX 0.375"OD	74921	
-177	210-0586-00		1	NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL	78189	OBD
	214-1292-00		2	•		205-AB
	344-0154-00			CLIP, ELECTRICAL: FOR 0.25 INCH DIA FUSE	80009	344-0154-00
-180				. SW,THERMOSTATIC: (SEE S1000 EPL) (ATTACHING PARTS)		
-181			2	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
-182 -183	210-0586-00		2 1	. NUT, PLAIN, EXT W:4-40 X 0.25 INCH, STL * TRANSFORMER: (SEE T801 EPL)	78189	עמט
103				(ATTACHING PARTS)		
-184	212-0522-00			. SCREW, MACHINE: 10-32 X 2.50", HEX HD STL	83385	
-185				. WASHER, NONMETAL: #10, FIBER	06982	
	166-0457-00			. INSUL SLVG, ELEC: 0.19 ID X 1.875"LONG MYLAR	80009 83385	166-0457-00
-187 -188	212-0023-00 210-0804-00			. SCREW, MACHINE: 8-32 X 0.375 INCH, PNH STL . WASHER, FLAT: 0.17 ID X 0.375 INCH OD, STL	12327	
-189				. BRKT,XFMR MTG:	80009	
				*		

REV. B MAR. 1976 9-25

Fig. & Index	Tektronix Serial	/Model No.	٠.		Mfr	
No.	Part No. Eff	Dscont	Qly	1 2 3 4 5 Name & Description		Mfr Part Number
4-190	441-0993-01		1	. CHAS, ELEK EQPT:	80009	441-0993-01
-191	407-0973-00		1	BRACKET, CONN:	80009	407-0973-00
	211-0504-00		2	(ATTACHING PARTS) SCREW, MACHINE: 6-32 X 0.25 INCH, PNH STL	83385	OBD
_192			1	CKT BOARD ASSY:LOGIC (SEE A2 EPL)		
132			_	. CKT BOARD ASSY INCLUDES:		
	131-0566-00		1	. LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L		L-2007-1
	136-0235-00			. SOCKET, PLUG-IN:6 CONTACT, ROUND		133-96-12-062
-195		0100 B010324	24	. CONTACT, ELEC: 0.188 INCH LONG		75060
_196	136-0350-00 B010	0325	8 1	. SOCKET, PLUG-IN:3 PIN, LOW PROFILE . SOCKET, PLUG-IN:16 CONTACT, LOW CLEARANCE		136-0350-00 C931602
	136-0263-03 B010	0100 8131579	33	. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN	-	86250-2
4,57	136-0263-04 B133		33	. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		75377-001
-198	136-0269-02	2500	3	. SOCKET, PLUG-IN:14 CONTACT, LOW CLEARANCE		C931402
-199				. TERM., TEST PT:0.40 INCH LONG		214-0579-00
-200				CKT BOARD ASSY:MAIN INTERFACE (SEE Al EPL) (ATTACHING PARTS)		
-201	213-0034-00		9	SCR, TPG, THD CTG: 4-40 X 0.188 INCH, PNH STL	83385	OBD
				*		
-202	131-0608-00		- 84	. CKT BOARD ASSY INCLUDES: . CONTACT, ELEC: 0.365 INCH LONG	22526	47357
-202	131-0592-00		24	. CONTACT, ELEC: 0.885 INCH LONG		47353
	131-0591-00			. CONTACT, ELEC: 0.835 INCH LONG		47353
	131-0589-00		4	. CONTACT, ELEC: 0.46 INCH LONG		47350
-203	129-0308-00		3	. POST, ELEC-MECH: HEX., 0.25 X 0.465 INCH LONG (ATTACHING PARTS)		129-0308-00
-204	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-205	129-0308-00		1	. POST, ELEC-MECH: HEX., 0.25 X 0.465 INCH LONG (ATTACHING PARTS)	80009	129-0308-00
	211-0008-00		1	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-206	210-0803-00		1	. WASHER, FLAT: 0.15 ID X 0.375 INCH OD, STL	12327	OBD
-207	131-0804-00		1	. LINK, TERM. CONNE: J-SHAPE	80009	131-0804-00
-208	131-0805-00		2	. LINK, TERM.CONNE:J-SHAPE, 0.90X0.82 X 0.312"		131-0805-00
-209	131-1003-00		2	. CONNECTOR BODY,: CKT BD MT,3 PRONG	80009	131-1003-00
-210	136-0252-01		2	. CONTACT, ELEC: 0.178 INCH LONG	00779	1-332095-2
	131-0767-08		2	. CONNECTOR, RCPT, : PLUG-IN CKT BD, 70 CONTACT (ATTACHING PARTS FOR EACH)	80009	131-0767-08
-211	213-0232-00		2	. SCR, TPG, THD FOR: 2-32 X 0.312 INCH, PNH STL	83385	OBD
			_	EACH CONNECTOR INCLUDES:		
-212	200-0950-00		2	COVER, ELEC CONN: PLASTIC	80009	200-0950-00
	131-0726-00		37	CONTACT, ELEC: STRAIGHT	80009	131-0726-00
-214	131-0727-00		37	CONTACT, ELEC: OFFSET	80009	131-0727-00
-215	204-0365-00		1	BODY, CONNECTOR: PLUG-IN CIRCUIT BOARD	80009	204-0365-00
	131-0767-07		1	. CONNECTOR,RCPT,:PLUG-IN CKT BD,70 CONTACT (ATTACHING PARTS)	80009	131-0767-07
-216	213-0232-00		2	. SCR, TPG, THD FOR: 2-32 X 0.312 INCH, PNH STL	83385	OBD
-217	210-0906-00		1	. WASHER, NONMETAL: FIBER, 0.125 ID X 0.203"OD	86445	OBD
			_	CONNECTOR INCLUDES:		
-218	200-0950-00		2	COVER, ELEC CONN: PLASTIC	80009	200-0950-00
	131-0726-00		35	CONTACT, ELEC: STRAIGHT	80009	
	131-0727-00		35	CONTACT, ELEC: OFFSET	80009	
	204-0365-02		1	BODY, CONNECTOR: PLUG-IN CIRCUIT BOARD	80009	204-0365-02
-222			1	. CKT BOARD ASSY: (SEE A15 EPL) (ATTACHING PARTS)		
	211-0008-00		2	. SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
-224	351-0213-00		2	. GUIDE-POST,LOCK:0.285 INCH LONG	80009	351-0213-00
			-	CKT BOARD ASSY INCLUDES:		
-225	131-0787-00		8	CONTACT, ELEC: 0.64 INCH LONG	22526	47359

9-26 REV. B MAR. 1976

Fig. &						
Index	Tektronix	Serial/Model No.	~ :		Mfr	
No.	Part No.	Eff Dscont	Qfy	1 2 3 4 5 Name & Description		Mfr Part Number
4-226	344-0147-00		2	. CLIP,SPR,TNSN:CIRCUIT BOARD MOUNTING (ATTACHING PARTS FOR EACH)	80009	344-0147-00
-227	210-0406-00		1	. NUT, PLAIN, HEX.: 4-40 X 0.188 INCH, BRS	73743	2X12161-402
-228	210-0054-00		1	. WASHER, LOCK: SPLIT, 0.118 ID X 0.212 "OD STL	83385	OBD
~229	214-1568-00		1	. PIN,GUIDE:	80009	214-1568-00
-230				. SPACER, CKT BD: PLASTIC	80009	386-1558-00
	214-0579-00			. TERM., TEST PT:0.40 INCH LONG	80009	214-0579-00
-232			1	CKT BOARD ASSY: VERTICAL INTERFACE (SEE A4 EPL) (ATTACHING PARTS)		
-233	211-0008-00		2	SCREW,MACHINE:4-40 X 0.25 INCH,PNH STL	83385	OBD
			-	. CKT BOARD ASSY INCLUDES:		
-234	136-0252-04	B010100 B010324	31	. CONTACT, ELEC: 0.188 INCH LONG	22526	75060
	136-0252-04		22	. CONTACT, ELEC: 0.188 INCH LONG	22526	75060
	136-0350-00	B010325		. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE	80009	136-0350-00
	136-0263-04			. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN	22526	75377-001
-236			1	CKT BOARD ASSY:TRIGGER SELECT(SEE A3 EPL) (ATTACHING PARTS)		
-237	211-0008-00		2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
				*		
			-	. CKT BOARD ASSY INCLUDES:		
	131-0589-00			. CONTACT, ELEC: 0.46 INCH LONG		47350
-238		B010100 B010324		. CONTACT, ELEC: 0.188 INCH LONG		75060
222	136-0350-00	B010325		. SOCKET, PLUG-IN: 3 PIN, LOW PROFILE		136-0350-00
	136-0260-02			. SOCKET, PLUG-IN:16 CONTACT, LOW CLEARANCE		C931602
-240		B010100 B131579		. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		86250-2
0.43	136-0263-04	B131580	16	. CONTACT, ELEC: FOR 0.025 INCH SQUARE PIN		75377-001
	131-0800-00			CONTACT, ELEC: PLUG-IN GROUND (ATTACHING PARTS FOR EACH)		131-0800-00
	211-0008-00			SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	
-243	210-0586-00		2	*	78189	OBD
-244	131-0930-00		2	CONTACT, ELEC: PLUG-IN GROUND (ATTACHING PARTS FOR EACH)	80009	131-0930-00
-245	211-0008-00		1	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
-246	210-0586-00		1	NUT, PLAIN, EXT W: 4-40 X 0.25 INCH, STL	78189	OBD
-247	131-0799-00		2	CONTACT, ELEC: (ATTACHING PARTS FOR EACH)	80009	131-0799-00
-248	211-0008-00		1		83385	OBD
-249	210-0586-00		_	NUT, PLAIN, EXT W: 4-40 X 0.25 INCH, STL	78189	
-250	351-0179-00		1	GUIDE,CKT CARD:6.75 INCH LONG,PLASTIC (ATTACHING PARTS)	80009	351-0179-00
	211-0101-00		2	SCREW, MACHINE: 4-40 X 0.25" 100 DEG, FLH STL	83385	OBD

REV. B MAR. 1976 9-27



MANUAL CHANGE INFORMATION

PRODUCT See below CHANGE RE

CHANGE REFERENCE M24,381

DATE _____3-5-76

CHANGE:

DESCRIPTION

7313 EFF SN B250000-up (070-1363-00)

7603 EFF SN B310000-up (070-1429-00)

7613 EFF SN B330000-up (070-1463-00)

7623A EFF SN B140000-up (070-1685-00)

7633 EFF SN B160000-up (070-1767-00)

ELECTRICAL PARTS LIST AND SCHEMATIC CHANGE

CHANGE TO:

Q872

151-0407-00

TRANSISTOR: SILICON, NPN, 150V

R957

315-0510-00

RES., FXD, CMPSN:51 OHM, 5%, 0.25W

The above parts are shown on the LV POWER SUPPLY diagram.



MANUAL CHANGE INFORMATION

PRODUCT 7623A & 7633

CHANGE REFERENCE M24,950

DATE 3-24-76

CHANGE:

DESCRIPTION

EFF SN B140000-up (7623A/R) 070-1685-00

EFF SN B160000-up (7633/R) 070-1767-00

ELECTRICAL PARTS LIST AND SCHEMATIC CHANGE

CHANGE TO:

R1651

315-0304-00

RES., FXD, CMPSN: 300K OHM, 5%, 0.25W

R1651 is shown on diagram 10 and is located on the STORAGE circuit board.

PAGE 1 OF 1