


# MANUAL

Oscilloscope HM 205-2

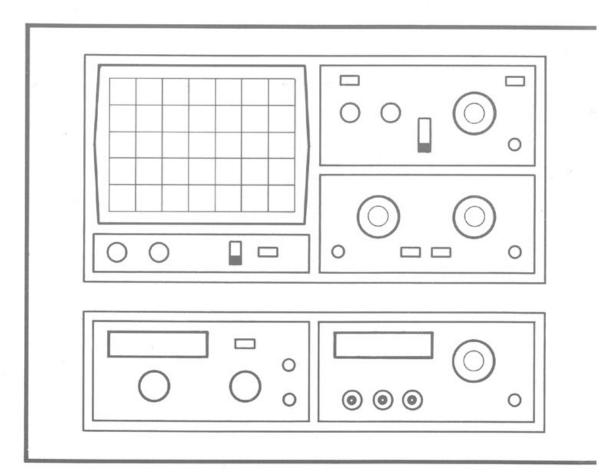

Oscilloscope datasheet with technical details	
Accessories	
Accessories         Z 1           Operating Instructions         M 1           General Information         M 1           Use of tilt handle         M 1           Safety         M 1           Operating conditions         M 2           Guarantee         M 2           Maintenance         M 2           Switching over the mains/line voltage         M 2           Type of the signal voltage         M 3           Amplitude Measurement         M 3           Reference Line         M 4           Time Measurements         M 4           Connection of Test Signal         M 6	
First Time Operation M 7  Trace Rotation M 8  DC Balance Adjustment M 8  Probe compensation and use M 8  1kHz compensation M 8  1MHz compensation M 8  Operating modes of the vertical amplifiers M 9  X-Y Operation M 9  Phase difference measurement in DUAL mode M10  Measurement of an amplitude modulation M10	Oscilloscope HM 205-2
Triggering and time base	Service Instructions  General
Single channel display	Adjustments
Miscellaneous Vertical output (Y)	Circuit Diagrams Wiring Diagram
Folder with front view	Y Input, Attenuator, Preamplifier Channel I and Channel II, Component Locations EY Board
Astigmatism Check	Y Final Amplifier, X Final Amplifier
Timebase       T 3         Component Tester       T 4         Y-Output       T 4         Trace Alignment       T 4         Mains/Line Voltage Checks       T 4	Operating Controls (Storage), Calibrator Component Locations FL Board

Subject to change without notice 8.87 · 205-2

## HAMEG

## OSCILLOSCOPE HM 205-2

## Specification

## **Vertical Deflection**

Operating modes: Channel I or Channel II separate, Channel I and II: alternate or chopped (chopper frequency approx. 0.5 MHz)
Sum or difference from Cfi. I and Ch. II, (beide channels invertable).

(beide channels invertable).

XY-Mode: via Channel I and Channel II.

Frequency range: 2x DC to 20 MHz (−3dB).

Risetime: approx. 17.5 ns. Overshoot: ≤1%.

Deflection coefficients: 12 calibrated steps from 5 mV/div to 20 V/div in 1-2-5 sequence, variable 1:2.5 to min. 2 mV/div.

Accuracy in calibrated position: ±3%.

Input impedance: 1MΩ II 30 pF.

Input coupling: DC →AC – GD (Ground)

Input voltage: max. 400 V (DC + peak AC).

Y output from Ch.I or Ch.II: ≈ 50 mV/div into 50 Ω.

#### **Triggering**

With Automatic from 10Hz-40MHz, normal with level control from DC-40MHz.

Trigger level internal ≥0.5div, external ≥0.3V. Slope: positive or negative.

LED indication on passing the trigger point.

Source: Ch. I, Ch. II, line, external.

Coupling: AC (≥10Hz - 10MHz), DC (0 - 10MHz, LF (0 - ≤1kHz), HF (≥1.5kHz - 40MHz).

Active TV-Sync-Separator for line and frame.

#### **Horizontal Deflection**

Time coefficients (realtime): 18 calibr. steps from  $0.5 \,\mu s$ /div to  $0.2 \,s$ /div in 1 - 2 - 5 sequence, variable 1:2.5 to max.  $0.2 \,\mu s$ /div, with X-expansion x10 ( $\pm 5\%$ ) to approx. 20 ns/div. Holdoff-time: variable variable up to approx. 10:1. Time coefficients (storage): 17 calibr. steps from  $20 \,\mu s$ /div to  $5 \,s$ /div in 1 - 2 - 5 sequence, with X-expansion x10 ( $\pm 5\%$ ) to  $\approx 2 \,\mu s$ /div. Accuracy in calibrated position:  $\pm 3\%$ . Bandwidth X-amplifier: DC-2.5 MHz ( $-3 \,d B$ ). Input X-amplifier via Channel II, Sensitivity see Channel II, X-Y-phase shift:  $<3 \,^{\circ}$  below  $120 \,k Hz$ .

#### **Digital Storage**

Operating modes: Refresh and Single (with reset button and ready-LED), Hold CHI a. ChII, Dot Joiner. Memory size: 1024x8 bit for each channel. Sampling rate: max. 5 MHz for each channel. Resolution: vertical 28, horizontal 100 samples/div. X-expansion: x10 (X-resol.: 10 samples/div). Option: analog/digital output for HAMEG-Graphic-Printer or XY-recorder, IEEE-Bus Interface HO77/78.

#### **Component Tester**


 $\label{eq:total_$ 

#### **General Information**

CRT: D14-364 P43/123,  $8 \times 10 \, \mathrm{cm}$ ,  $2 \, \mathrm{kV}$ , rectangular screen, internal graticule. Trace rotation: adjustable on front panel. Calibrator: square-wave 1 kHz for probe compensation. Output:  $0.2 \, \mathrm{Va} \cdot 2 \, \mathrm{V} \pm 1 \, \mathrm{We}$ . Line voltages: 110, 125, 220,  $240 \, \mathrm{V} \sim$ ,  $\pm 10 \, \mathrm{We}$ . Power consumption:  $\approx 42 \, \mathrm{Watt}$ , 50/60/400 Hz. Protective system: Safety Class I (IEC 348). Weight: approx. 8 kg. Color: techno-brown. Cabinet: W 285, H 145, D 380 mm.

Subject to change without notice

With locking tilt handle.

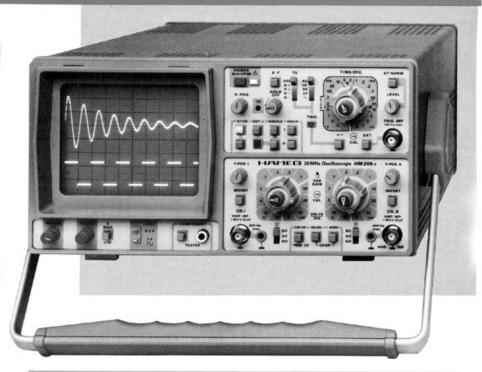

## Digital Storage Oscilloscope

Analog: 2 channels DC-20MHz, max. 2mV/div, Comp.-Tester.

Timebase 0.2s-20ns/cm, Trigger DC-40MHz.

Digital: Max. sampling rate 2x 5MHz, Memory 2x 1024x8 bit.

Timebase 5s-2µs/div, Dot-Joiner.

The new HM205-2 offers unprecedented performance, worldwide unheard of in this price range so far. With an increased digitizing rate of max. 5MHz, signal events between 0.05 Hz and several 100 kHz can be captured and displayed in a visually useful manner. Operating the storage functions is exceptionally easy. By simply pressing the "STORE" button, all signals at the scope input will be digitized and stored. In "Refresh" mode, the memory contents will be updated with every sweep. One-time events can be captured in the "SINGLE" mode. Pressing one of the "HOLD" buttons will "freeze" the respective memory contents for evaluation or hardcopy output via X-Y plotter with optional interfaces. The intelligent HAMEG HM8148-Printer can also be connected, providing additional control and documentation functions.

A GPIB Interface is available for further waveform processing of captured data on IBM-AT or compatible PCs (see option HO77/78+SP90). Even when frequently changing between digital and analog scope operation, the last captured waveform remains stored until the instrument is switched off. An audible warning signal and flashing "STORE-LED" will indicate when the timebase setting does not correspond to the selected operating mode.

The **HM205-2** is equally feature-packed for realtime applications, including excellent transient response to above 20 MHz, single button operated component tester, variable trigger hold off, and **active TV-Sync-Separator**. Especially with alternating operation as an analog and digital scope, the **HM205-2** is impressive with its functional versatility, aimed to provide increased user productivity.

## **Accessories supplied**

2 switchable probes 10:1, 1:1; trimming tool for probes and DC balance; line cord, manual.

#### **General Information**

The HM205-2 is the combination of an analog (real time) 20 MHz oscilloscope with a digital storage oscilloscope for slow-speed phenomena.

This oscilloscope is easy to operate. The logical arrangement of the controls allows anyone to become familiar with the operation of the instrument after a short time, however, experienced users are also advised to read through these instructions so that all functions are understood.

Immediately after unpacking, the instrument should be checked for mechanical damage and loose parts in the interior. If there is transport damage, the supplier must be informed immediately. The instrument must then not be put into operation.


Check that the instrument is set to the correct mains/line voltage. If not, refer to instructions on page M2.

#### Use of tilt handle

To view the screen from the best angle, there are three different positions (C, D, E) for setting up the instrument. If the instrument is set down on the floor after being carried, the handle remains automatically in the upright carrying position (A).

In order to place the instrument onto a horizontal surface, the handle should be turned to the upper side of the oscilloscope (C). For the D position (10° inclination), the handle should be turned in the opposite direction out of the carrying position until it locks in place automatically underneath the instrument. For the E position (20° inclination), the handle should be pulled to release it from the D position and swing backwards until it locks once more.

The handle may also be set to a position for horizontal carrying by turning it to the upper side to lock in the B position. At the same time, the instrument must be moved upwards, because otherwise the handle will jump back.

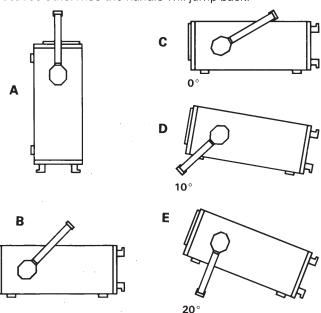

## Safety

This instrument has been designed and tested in accordance with *IEC Publication 348*, *Safety Requirements for Electronic Measuring Apparatus*, and has left the factory in a safe condition. The present instruction manual contains important information and warnings which have to be followed by the user to ensure safe operation and to retain the oscilloscope in safe condition. The case, chassis and all measuring terminals are connected to the protective earth contact of the appliance inlet. The instrument operates according to *Safety Class I* (three-conductor power cord with protective earthing conductor and a plug with earthing contact). The mains/line plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord without a protective conductor.

Warning! Any interruption of the protective conductor inside or outside the instrument or disconnection of the protective earth terminal is likely to make the instrument dangerous. Intentional interruption of the protective earth connection is prohibited. The mains/line plug should be inserted before connections are made to measuring circuits.

The grounded accessible metal parts (case, sockets, jacks) and the mains/line supply contacts (line, neutral) of the instrument have been tested against insulation breakdown with **2000 Vr.m.s.** (50 Hz).

Under certain conditions, 50 Hz or 60 Hz hum voltages can occur in the measuring circuit due to the interconnection with other mains/line powered equipment or instruments. This can be avoided by using an isolation transformer (Safety Class II) between the mains/line outlet and the power plug of the instrument. When displaying waveforms where the "low-level" side of the signal is at a high potential, even with the use of a protective isolation transformer, it should be noted that this potential is connected to the oscilloscope's case and other accessible metal parts. High voltages are dangerous. In this case, special safety precautions are to be taken, which must be supervised by qualified personnel if the voltage is higher than 42 V.

Most cathode-ray tubes develop X-rays. However, the dose equivalent rate falls far below the maximum permissible value of 36pA/kg (0.5 mR/h).

Whenever it is likely that protection has been impaired, the instrument shall be made inoperative and be secured against any unintended operation. The protection is likely to be impaired if, for example, the instrument

- shows visible damage,
- fails to perform the intended measurements,
- has been subjected to prolonged storage under unfavourable conditions (e.g. in the open or in moist environments),
- has been subject to severe transport stress (e.g. in poor packaging).

Subject to change without notice M1

## **Operating conditions**

The instrument has been designed for indoor use.

The permissible ambient temperature range during operation is  $+10^{\circ}$ C...  $+40^{\circ}$ C. It may occasionally be subjected to temperatures between  $+10^{\circ}$ C and  $-10^{\circ}$ C without degrading its safety. The permissible ambient temperature range for storage or transportation is  $-40^{\circ}$ C...  $+70^{\circ}$ C.

The maximum operating altitude is up to 2200 m (non-operating 15000 m). The maximum relative humidity is up to 80%.

If condensed water exists in the instrument it should be acclimatized before switching on. In some cases (e.g. extremely cold oscilloscope) two hours should be allowed before the instrument is put into operation. The instrument should be kept in a clean and dry room and must not be operated in explosive, corrosive, dusty, or moist environments. The oscilloscope can be operated in any position, but the convection cooling must not be impaired. *The ventilation holes may not be covered*. For continuous operation the instrument should be used in the horizontal position, preferably tilted upwards, resting on the tilt handle.

The specifications stating tolerances are only valid if the instrument has warmed up for 30 minutes at an ambient temperature between  $+15\,\mathrm{C}^\circ$  and  $+30\,\mathrm{C}^\circ$ . Values not stating tolerances are typical for an average instrument.

#### Guarantee

Each instrument runs through a quality test with 10 hour burn-in before leaving the production. Practically every early failure is detected in intermittent operation by this method. However, it is possible that a component fails only after a lengthy operating period. Therefore a *functional guarantee of 2 years* is given for all units. The condition for this is that no modifications have been made in the instrument. In the case of shipments by post, rail or carrier it is recommended that the original packing is carefully preserved. Transport damages and damage due to gross negligence are not covered by the guarantee.

In the case of a complaint, a label should be attached to the housing of the instrument which describes briefly the faults observed. If at the same time the name and telephone number (dialing code and telephone or direct number or department designation) is stated for possible queries, this helps towards speeding up the processing of guarantee claims.


#### Maintenance

Various important properties of the oscilloscope should be carefully checked at certain intervals. Only in this way is it largely certain that all signals are displayed with the accuracy on which the technical data are based. The test methods described in the test plan of this manual can be performed without great expenditure on measuring instruments. However, purchase of the new HAMEG **SCOPE TESTER HZ 60**, which despite its low price is highly suitable for tasks of this type, is very much recommended.

The exterior of the oscilloscope should be cleaned regularly with a dusting brush. Dirt which is difficult to remove on the casing and handle, the plastic and aluminium parts, can be removed with a moistened cloth (99% water +1% mild detergent). Spirit or washing benzine (petroleum ether) can be used to remove greasy dirt. The screen may be cleaned with water or washing benzine (but not with spirit (alcohol) or solvents), it must then be wiped with a dry clean lint-free cloth. Under no circumstances may the cleaning fluid get into the instrument. The use of other cleaning agents can attack the plastic and paint surfaces.

## Switching over the mains/line voltage

The instrument is set for 220 V line voltage on delivery. It can be switched over to other voltages at the fuse holder combined with the 3-pole appliance inlet at the rear of the instrument. Firstly the fuse holder printed with the voltage values is removed using a small screw driver and - if required - provided with another fuse. Refer to the table below for the prescribed value of the fuse. Then replace the fuse holder so that the impressed white triangle points to the desired voltage. Here pay attention that the cover plate is also correctly engaged. The use of repaired fuses or short circuiting the fuse holder is not allowed. Damage arising because of this is not covered by the guarantee.

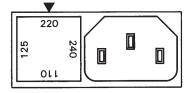

Fuse type: Size **5 x 20 mm**; 250  $V\sim$ , C;

IEC 127, Sheet III; DIN 41 662 (possibly DIN 41 571 sheet 3).

Cutoff: time lag (T).

Line voltage	Fuse rating		
<b>110 V</b> $\sim \pm 10 \%$	T0.63 A		
<b>125 V</b> $\sim \pm 10 \%$	T0.63 A		
<b>220 V</b> $\sim \pm 10 \%$	T0.315 A		
<b>240 V</b> $\sim \pm 10 \%$	T0.315 A		

M2 Subject to change without notice

## Type of the signal voltage

With the HM 205-2, practically all periodically repeating signals with the frequency spectrum below 20 MHz can be examined in the analog real time mode. (Because of the limited scanning rate, other limits which are further influenced by signal shape and screen amplitude apply in the digital storage mode.) The display of simple electrical processes, such as sinusoidal RF and LF signals or line frequency hum voltages is straightforward. When recording square-wave or pulse-type signal voltages, it must be noted that their *harmonics* must also be transmitted. The repetition frequency of the signal must therefore be significantly smaller than the upper limit frequency of the vertical amplifier. Accurate evaluation of such signals is only possible up to approximately 2 MHz repetition frequency. Displaying composite signals can be difficult, especially if they contain no repetive higher amplitude content which can be used for triggering. This is the case with bursts, for instance. To obtain a well-triggered display in this case, the assistance of the variable holdoff and/or variable time control may be required. Television video signals are relatively easy to trigger using the built-in TV-Sync-Separator with correct setting of the sync pulse position.


For optional operation as a DC or AC voltage amplifier, the vertical amplifier input is provided with a **DC/AC** switch. The **DC** position should only be used with a series-connected attenuator probe or at very low frequencies or if the measurement of the DC voltage content of the signal is absolutely necessary.

When displaying very low frequency pulses, the flat tops may be sloping with **AC** coupling of the vertical amplifier (**AC** limit frequency approx: 1.6 Hz for -3dB). In this case, **DC** operation is preferred, provided the signal voltage is not superimposed on a too high DC level. Otherwise a capacitor of adequate capacitance must be connected to the input of the vertical amplifier with DC coupling. This capacitor must have a sufficiently high breakdown voltage rating. **DC** coupling is also recommended for the display of logic and pulse signals, especially if the pulse duty factor changes continously. Otherwise the display will move upwards or downwards at each change. Pure direct voltages can only be measured with **DC** coupling.

#### **Amplitude Measurements**

In general electrical engineering, alternating voltage data normally refers to effective values (rms = root-mean-square value). However, for signal magnitudes and voltage designations in oscilloscope measurements, the peak-to-peak voltage ( $V_{pp}$ ) value is applied. The latter corresponds to the real potential difference between the most positive and most negative points of a signal waveform.

If a sinusoidal waveform, displayed on the oscilloscope screen, is to be converted into an effective (rms) value, the resulting peak-to-peak value must be divided by  $2x\sqrt{2}=2.83$ . Conversely, it should be observed that sinusoidal voltages indicated in  $V_{rms}$  ( $V_{eff}$ ) have 2.83 times the potential difference in  $V_{pp}$ . The relationship between the different voltage magnitudes can be seen from the following figure.

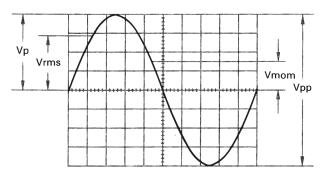

Voltage values of a sine curve

 $V_{rms}$  = effective value;  $V_p$  = simple peak or crest value;  $V_{pp}$  = peak-to-peak value;  $V_{mom}$  = momentary value.

The minimum signal voltage required at the vertical amplifier input for a display of 1 cm is approximately  $2mV_{pp}$ . This is achieved with the attenuator control set at  $5\,\text{mV/cm}$ , its variable control in the fully clockwise position. However, smaller signals than this may also be displayed. The deflection coefficients on the input attenuators are indicated in mV/cm or V/cm (peak-to-peak value).

The magnitude of the applied voltage is ascertained by multiplying the selected deflection coefficient by the vertical display height in cm.

If an attenuator probe x 10 is used, a further multiplication by a factor of 10 is required to ascertain the correct voltage value.

For exact amplitude measurements, the variable control on the attenuator switch must be set to its calibrated detent CAL. When turning the variable control cw, the sensitivity will be increased by a factor of 2.5.

Therefore every intermediate value is possible within the 1-2-5 sequence.

With direct connection to the vertical input, **signals up to**  $160\,V_{pp}$  may be displayed (attenuator set to  $20\,V/cm$ , variable control to right stop).

With the designations

H = display height in cm,

 $U = \text{signal } \text{voltage in } V_{pp} \text{ at the vertical input,}$ 

**D** = **deflection coefficient in V/cm** at attenuator switch, the required quantity can be calculated from the two given quantities:

 $U = D \cdot H$ 

 $H = \frac{1}{6}$ 

 $D = \frac{U}{H}$ 

Subject to change without notice M3 205-2

However, these three values are not freely selectable. They have to be within the following limits (trigger threshold, accuracy of reading):

H between 0.5 and 8 cm, if possible 3.2 to 8 cm,

**U** between  $2.5 \,\mathrm{mV_{pp}}$  and  $160 \,\mathrm{V_{pp}}$ ,

**D** between 5 mV/cm and 20 V/cm in 1-2-5 sequence.


#### Examples:

Set deflection coefficient  $\mathbf{D} = 50 \,\text{mV/cm} \triangleq 0.05 \,\text{V/cm}$ , observed display height  $\mathbf{H} = 4.6 \,\text{cm}$ , required voltage  $\mathbf{U} = 0.05 \cdot 4.6 = \mathbf{0.23} \,\mathbf{V_{pp}}$ .

Input voltage  $U = 5 V_{pp}$ , set deflection coefficient D = 1 V/cm, required display height H = 5:1 = 5 cm

Signal voltage U =  $220 \, V_{rms} \cdot 2 \cdot \sqrt{2} = 622 \, V_{pp}$  (voltage >  $160 \, V_{pp}$ , with probe x 10 :  $\mathbf{U} = 62.2 \, V_{pp}$ ), desired display height  $\mathbf{H} = \min$ . 3.2 cm, max. 8 cm, max. deflection coefficient D =  $62.2 : 3.2 = 19.4 \, V/cm$ , min. deflection coefficient D =  $62.2 : 8 = 7.8 \, V/cm$ , adjusted deflection coefficient D =  $10 \, V/cm$ 

If the applied signal is superimposed on a DC (direct voltage) level the total value (DC + peak value of the alternating voltage) of the signal across the Y-input must not exceed ±400 V (see figure). This same limit applies to normal x10 attenuator probes, the attenuation ratio of which allows signal voltages up to approximately 1,000 V<sub>pp</sub> to be evaluated. Voltages of up to approximately  $3,000\,\mathrm{V}_\mathrm{pp}$  may be measured by using the HZ53 high voltage probe which has an attenuation ratio of 100:1. It should be noted that its AC<sub>peak</sub> value is derated at higher frequencies. If a normal x10 probe is used to measure high voltages there is the risk that the compensation trimmer bridging the attenuator series resistor will break down causing damage to the input of the oscilloscope. However, if for example only the residual ripple of a high voltage is to be displayed on the oscilloscope, a normal x10 probe is sufficient. In this case, an appropriate high voltage capacitor (approx. 22-68nF) must be connected in series with the input tip of the probe.

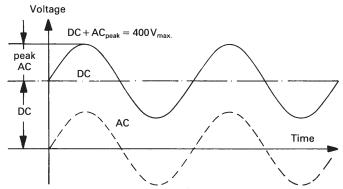

Total value of input voltage

The dotted line shows a voltage alternating at zero volt level. When superimposed a DC level, the addition of the positive peak and the DC voltage results in the max. voltage (DC +  $AC_{peak}$ ).

It is very important that the oscilloscope input coupling is set to **DC**, if an attenuator probe is used for voltages higher than 400V (see page M6: Connection of Test Signal).

#### Reference Line

With **Y-POS**. control (input coupling to **GD**) it is possible to set a horizontal graticule line as *reference line for ground potential* before the measurement. It can lie below or above the horizontal central line according to whether positive and/or negative deviations from the ground poterntial are to be measured. Certain switchable x10/x1 attenuator probes also have a built-in ground reference switch position.

#### **Time Measurements**

As a rule, most signals to be displayed are periodically repeating processes, also called periods. The number of periods per second is the repetition frequency. Depending on the time base setting of the **TIME/DIV**. switch, one or several signal periods or only a part of a period can be displayed. The time coefficients are stated in **s/cm**, **ms/cm** and **µs/cm** on the **TIME/DIV**.-switch. The scale is accordingly divided into three fields.

There are 18 time coefficient ranges in the analog real time mode of the HM 205-2, from **0.5 µs/cm** to **0.2 ms/cm**. The ranges are overlapped with 12 time coefficient ranges of the storage mode, from **20 µs/cm** to **5 s/cm**. The storage ranges are outlined in black and marked with **STOR**.

With the pushbutton **STOR**. in the X-field, the HM 205-2 may be switched over from real time to storage operation and vice versa. In each operating mode, the **TIME/DIV**. switch should be set correctly; if not, the **STOR**. LED immediately starts with blinking and a piezo beeper gives intermittent acoustic alarm.

The duration of a signal period or a part of it is determined by multiplying the relevant time (horizontal distance in cm) by the time coefficient set on the TIME/DIV.-switch.

The variable time control (identified with an arrow knob cap) must be in its calibrated position CAL. (arrow pointing horizontally to the left). This variable control is inoperative in the storage mode.

With the designations

L = displayed wave **length in cm** of one period,

T = time in seconds for one period,

F = recurrence frequency in Hz of the signal,

 $T_c$  = time coefficient in s/cm on timebase switch and the relation F = 1/T, the following equations can be stated:

$$T = L \cdot T_c \qquad \qquad L = \frac{T}{T_c} \qquad \qquad T_c = \frac{T}{L}$$
 
$$F = \frac{1}{L \cdot T_c} \qquad \qquad L = \frac{1}{F \cdot T_c} \qquad \qquad T_c = \frac{1}{L \cdot F}$$

With depressed X-MAG. x10 pushbutton the  $T_c$  value must be divided by 10.

However, these four values are not freely selectable. They have to be within the following limits:

- L between 0.2 and 10 cm, if possible 4 to 10 cm,
- T between 0.05 µs and 2s,
- **F** between 0.5 Hz and 20 MHz,
- T<sub>c</sub> between 0.5 μs/cm and 0.2 s/cm in 1-2-5 sequence (with **X-MAG. x10** in out position), and
- **T<sub>c</sub>** between 50 ns/cm and 20 ms/cm in 1-2-5 sequence (with pushed **X-MAG. x10** pushbutton).

#### Examples:

Displayed wavelength L = 7 cm, set time coefficient  $T_c = 0.5 \,\mu\text{s/cm}$ , required period T =  $7 \cdot 0.5 \cdot 10^{-6} = 3.5 \,\mu\text{s}$  required rec. freq. F =  $1:(3.5 \cdot 10^{-6}) = 286 \,\text{kHz}$ .

Signal period  $T = 0.5 \, \text{s}$ , set time coefficient  $T_c = 0.2 \, \text{s/cm}$ , required wavelength  $L = 0.5 : 0.2 = 2.5 \, \text{cm}$ .

Displayed ripple wavelength L = 1 cm, set time coefficient  $T_c = 10 \text{ ms/cm}$ , required ripple freq.  $F = 1 : (1 \cdot 10 \cdot 10^{-3}) = 100 \text{ Hz}$ .

TV-line frequency  $F=15\ 625\ Hz$ , set time coefficient  $T_c=10\ \mu s/cm$ , required wavelength  $L=1:(15\ 625\cdot 10^{-5})=6.4\ cm$ .


Sine wavelength  $\mathbf{L}=$  min. 4cm, max. 10cm, Frequency  $\mathbf{F}=$  1 kHz, max. time coefficient  $T_c=1$ :  $(4\cdot10^3)=0.25\,\text{ms/cm}$ , min. time coefficient  $T_c=1$ :  $(10\cdot10^3)=0.1\,\text{ms/cm}$ , set time coefficient  $T_c=0.2\,\text{ms/cm}$ , required wavelength  $\mathbf{L}=1$ :  $(10^3\cdot0.2\cdot10^{-3})=5\,\text{cm}$ .

Displayed wavelength  $L=0.8\,\text{cm}$ , set time coefficient  $T_c=0.5\,\mu\text{s/cm}$ , pressed X-MAG. x 10 button:  $T_c=0.05\,\mu\text{s/cm}$ , required rec. freq.  $F=1:(0.8\cdot0.05\cdot10^{-6})=25$  MHz, required period  $T=1:(25\cdot10^6)=40$  ns.

If the time is relatively short as compared with the complete signal period, an expanded time scale should always be applied (**X-MAG. x10** button pressed). In this case, the ascertained time values have to be divided by **10**. The time interval of interest can be shifted to the screen center using the **X-POS.** control.

When investigating pulse or square waveforms, the critical feature is the *risetime of the voltage step*. To ensure that transients, ramp-offs, and bandwidth limits do not unduly influence the measuring accuracy, the risetime is generally measured between 10% and 90% of the vertical pulse height. For peak-to-peak signal amplitude of 5cm height, which are symmetrically adjusted to the horizontal center line, the internal graticule of the CRT has two horizontal dotted lines ±2.5cm from the center line. Adjust the Y attenuator switch with its variable control together with the **Y-POS.** control so that the pulse height is precisely aligned with these 0 and 100 % lines. The 10 % and 90 % points of the signal will now coincide with the two lines, which have a distance of ±2cm from the horizontal center line and an additional subdivision of 0.2 cm. The risetime is given by the product of the horizontal distance in cm between these two coincidence points and the time coefficient setting. If magnification is used, this product must be divided by 10. The fall time of a pulse can also be measured by using this method.

The following figure shows correct positioning of the oscilloscope trace for accurate risetime measurement.

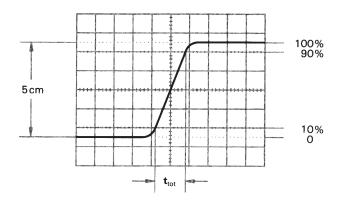

With a time coefficient of  $0.5\,\mu\text{s/cm}$  and pushed **X-MAG x 10** button the example shown in the above figure results in a measured total risetime of

$$\mathbf{t}_{tot} = 1.6 \, \text{cm} \cdot 0.5 \, \mu \text{s/cm} : 10 = 80 \, \text{ns}$$

When very fast risetimes are being measured, the risetimes of the oscilloscope amplifier and of the attenuator probe has to be deducted from the measured time value. The risetime of the signal can be calculated using the following formula.

$$\mathbf{t}_{r} = \sqrt{\mathbf{t}_{tot}^{2} - \mathbf{t}_{osc}^{2} - \mathbf{t}_{p}^{2}}$$

In this  $\mathbf{t}_{tot}$  is the total measured risetime,  $\mathbf{t}_{osc}$  is the risetime of the oscilloscope amplifier (approx. 17,5 ns), and  $\mathbf{t}_{p}$  the risetime of the probe (e.g. = 2 ns). If  $\mathbf{t}_{tot}$  is greater than 100 ns, then  $\mathbf{t}_{tot}$  can be taken as the risetime of the pulse, and calculation is unnecessary.

Calculation of the example in the figure above results in a signal risetime

$$t_r = \sqrt{80^2 - 17.5^2 - 2^2} = 78.04 \,\text{ns}$$

Subject to change without notice M5 205-2

The measurement of the rise or fall time is not limited to the trace dimensions shown in the above diagram. It is only particularly simple in this way. In principle it is possible to measure in any display position and at any signal amplitude. It is only important that the full height of the signal edge of interest is visible in its full length at not too great steepness and that the horizontal distance at 10% and 90% of the amplitude is measured. If the edge shows rounding or overshooting, the 100% should not be related to the peak values but to the mean pulse heights. Breaks or peaks (glitches) next to the edge are also not taken into account. With very severe transient distortions, the rise and fall time measurement has little sense. For amplifiers with approximately constant group delay (therefore good pulse transmission performance) the following numerical relationship between rise time tr (in ns) and bandwidth B (in MHz) applies:

$$tr = \frac{350}{B} \qquad B = \frac{350}{tr}$$

## **Connection of Test Signal**

**Caution:** When connecting unknown signals to the oscilloscope input, always use automatic triggering and set the **DC-AC** input coupling switch to **AC**. The attenuator switch should initially be set to **20 V/cm**.

Sometimes the trace will disappear after an input signal has been applied. The attenuator switch must then be turned back to the left, until the vertical signal height is only 3-8 cm. With a signal amplitude greater than  $160\,\mathrm{V_{pp}}$ , an attenuator probe must be inserted before the oscilloscope's vertical input. If, after applying the signal, the trace is nearly blanked, the period of the signal is probably substantially longer than the set value on the **TIME/DIV.** switch. It should be turned to the left to an adequately larger time coefficient.

The signal to be displayed can be connected directly to the Y-input of the oscilloscope with a shielded test cable such as HZ 32 and HZ 34 or attenuated through a x10 or x100 attenuator probe. The use of test cables with high impedance circuits is only recommended for relatively low frequencies (up to approx. 50 kHz). For higher frequencies, the signal source must be of low impedance, i.e. matched to the characteristic resistance of the cable (as a rule 50 Ohm). Especially when transmitting square and pulse signals, a resistor equal to the characteristic impedance of the cable must also be connected across the cable directly at the Y-input of the oscilloscope. When using a 50 Ohm cable such as the HZ 34, a 50 Ohm through termination type HZ22 is available from HAMEG. When transmitting square signals with short rise times, transient phenomena on the edges

and top of the signal may become visible if the correct termination is not used. A terminating resistance is sometimes recommended with sine signals as well. Certain amplifiers, generators or their attenuators maintain the nominal output voltage independent of frequency only if their connection cable is terminated with the prescribed resistance. Here it must be noted that the terminating resistor HZ 22 will only dissipate a maximum of 2 Watts. This power is reached with  $10\,V_{rms}$  or - at  $28.3\,V_{pp}$  with sine signal.

If a x10 or x100 attenuator probe is used, no termination is necessary. In this case, the connecting cable is matched directly to the high impedance input of the oscilloscope. When using attenuators probes, even high internal impedance sources are only slightly loaded (approx. 10 M $\Omega$  II 16 pF or 100 M $\Omega$  II 7 pF with HZ 53). Therefore, if the voltage loss due to the attenuation of the probe can be compensated by a higher amplitude setting, the probe should always be used. The series impedance of the probe provides a certain amount of protection for the input of the vertical amplifier. Because of their separate manufacture, all attenuator probes are only partially compensated, therefore accurate compensation must be performed on the oscilloscope (see "Probe compensation" page M8).

Standard attenuator probes on the oscilloscope normally reduce its bandwidth and increase the rise time. In all cases where the oscilloscope band width must be fully utilized (e.g. for pulses with steep edges) we strongly advise using the *modular probes HZ 51* (x10) *HZ 52* (x10 HF) and *HZ 54* or HZ 37 (x1 and x10) (see oscilloscope accessories, page Z1). This can save the purchase of an oscilloscope with larger bandwidth and has the advantage that defective components can be ordered from HAMEG and replaced by oneself. The probes mentioned have a HF-calibration in addition to low frequency calibration adjustment. Thus a group delay correction to the upper limit frequency of the oscilloscope is possible with the aid of a square-wave calibrator, switched to 1 MHz, e.g. HAMEG Scope Tester HZ60. In fact the bandwidth and rise time of the oscilloscope are not noticably changed with these probe types and the waveform reproduction fidelity can even be improved because the probe can be matched to the oscilloscope's individual pulse response.

If a x10 or x100 attenuator probe is used, DC input coupling must always be used at voltages above 400 V. With AC coupling of low frequency signals, the attenuation is no longer independent of frequency, pulses can show pulse tilts. Direct voltages are suppressed but load the oscilloscope input coupling capacitor concerned. Its voltage rating is max. 400 V (DC + peak AC). DC input coupling is therefore of quite special importance with a x100 attenuation probe which usually has a voltage rating of max. 1200 V (DC + peak AC). A capacitor of corresponding capacitance and voltage rating may be connected in series with

**the attenuator probe input** for blocking DC voltage (e.g. for hum voltage measurement).

With all **attenuator probes, the maximum AC input voltage** must be **derated** with frequency usually above 20 kHz. Therefore the derating curve of the attenuator probe type concerned must be taken into account.

The selection of the ground point on the test object is important when displaying small signal voltages. It should always be as close as possible to the measuring point. If this is not done, serious signal distortion may result from spurious currents through the ground leads or chassis parts. The ground leads on attenuator probes are also particularly critical. They should be as short and thick as possible. When the attenuator probe is connected to a BNC-socket, a BNC-adapter, which is often supplied as probe accessory, should be used. In this way ground and matching problems are eliminated.

Hum or interference appearing in the measuring circuit (especially when a small deflection coefficient is used) is possibly caused by multiple grounding because equalizing currents can flow in the shielding of the test cables (voltage drop between the protective conductor connections, caused by external equipment connected to the mains/line, e.g. signal generators with interference protection capacitors).

## **First Time Operation**

Check that the instrument is set to the correct mains/ line voltage. (Refer to page M2.)

**Before applying power** to the oscilloscope it is recommended that the following simple procedures are performed:

- Check that all pushbuttons are in the *out* position, i.e. released.
- Rotate the four variable controls with arrows, i.e. TIME/ DIV. variable control, CH.I and CH.II attenuator variable controls, and HOLD OFF control fully counter-clockwise to their calibrated detent.
- Set all controls with marker lines to their midrange position (marker lines pointing vertically).
- The TV lever switch and the TRIG. selector lever switch in the X-field should be set to their uppermost position.
- Both DC-AC-GD input coupling slide switches for CH.I and
   CH.II in the Y-field should be set to the GD position.

Switch on the oscilloscope by depressing the red **POWER** pushbutton. An LED will illuminate to indicate working order. The trace, displaying one baseline, should be visible after a short warm-up period of 10 seconds. Adjust **Y-POS.I** and **X-POS.** controls to center the baseline. Adjust **INTENS.** (intensity) and **FOCUS** controls for medium brightness and optimum sharpness of the trace. The oscilloscope is now ready for use.

If only a spot appears (*CAUTION!* CRT phosphor can be damaged.), reduce the intensity immediately and check that the **X-Y** pushbutton is in the released (out) position. If the trace is not visible, check the correct positions of all knobs and switches (particularly **AT/NORM.** button in out position).

To obtain the maximum life from the cathode-ray tube, the minimum intensity setting necessary for the measurement in hand and the ambient light conditions should be used.

**Particular care is required when a single spot is dis- played**, as a very high intensity setting may cause damage to the fluorescent screen of the CRT. Switching the oscilloscope off and on at short intervals stresses the cathode of the CRT and should therefore be avoided.

The instrument is so designed that even incorrect operation will not cause serious damage. The pushbuttons control only minor functions, and it is recommended that before commencement of operation all pushbuttons are in the "out" position. After this the pushbuttons can be operated depending upon the mode of operation required.

The HM205-2 accepts all signals from DC (direct voltage) up to a frequency of at least 20 MHz (-3 dB). For sinewave voltages the upper frequency limit will be 30-35 MHz.

However, in this higher frequency range the vertical display height on the screen is limited to approx. 4-5 cm. The time resolution poses no problem. For example, with 25MHz and the fastest adjustable sweep rate (20 ns/cm), one cycle will be displayed every 2 cm. The tolerance on indicated values amounts to ±3% in both deflection directions. All values to be measured can therefore be determined relatively accurately. However, from approximately 6MHz upwards the measuring error will increase as a result of loss of gain. At 12MHz this reduction is about 10%. Thus, approximately 11% should be added to the measured voltage at this frequency. As the bandwidth of the amplifiers differ (normally between 20 and 25 MHz), the measured values in the upper limit range cannot be defined exactly. Additionally, as already mentioned, for frequencies above 20 MHz the dynamic range of the display height steadily decreases. The vertical amplifier is designed so that the transmission performance is not affected by its own overshoot.

Subject to change without notice M7 205-2

#### **Trace Rotation TR**

In spite of Mumetal-shielding of the CRT, effects of the earth's magnetic field on the horizontal trace position cannot be completely avoided. This is dependent upon the orientation of the oscilloscope on the place of work. A centred trace may not align exactly with the horizontal center line of the graticule. A few degrees of misalignment can be corrected by a potentiometer acessible through an opening on the front panel marked TR.

## **DC Balance Adjustment**

The vertical preamplifiers for **CH.I** and **CH.II** contain matched dual FETs connected as input source followers. After long periods of use the FET characteristics may change which can alter the DC balance of the vertical amplifier.

A quick check can be made on each channel by rotating the variable control knob on the attenuator switch to and fro, clockwise and back to the calibrated detent **CAL**. If the trace moves from the vertical position (up or down) more than 1 mm, the DC balance will require readjustment. This check should be made after a 20 minute warm-up period.

#### Adjustment procedure

The following instructions should be performed to obtain the correct DC balance adjustment of both channels.

- Remove all input cables and adjust oscilloscope controls to display the baseline.
- Center the baseline using Y-POS. and X-POS. controls.
- Set attenuator switches to 5 mV/cm and input coupling switches to GD.
- Release all pushbuttons in the Y-field.
- Place the oscilloscope so that it rests firmly on its back (upright position) and locate DC balance adjustment potentiometer access holes marked CH.I DC-BALANCE CH.II which are found underneath the instrument.
- Insert a screwdriver (blade approx. 3mm, length min. 20mm) in CH.I hole. A plastic guide with slotted bottom is located behind the hole.
- Rotate VOLTS/DIV. variable control to and fro and adjust balance pot so that the baseline no longer moves up or down. When the trace remains steady, correction of CH.I is completed.
- Depress CHI/II button. Repeat adjustment procedure for CH.II.

## Probe compensation and use


The attenuator probe must be matched exactly to the input impedance of the vertical amplifier to ensure an undistorted display of waveforms. A generator built into the HM 205-2 supplies a square wave signal for this purpose with short rise time at  $1 \, kHz$ . The square wave signal can be taken from the two eyelets beneath the screen. One output supplies  $0.2V_{pp} \pm 1\%$  ( $t_r = 60 \, \text{ns}$ ) for x10 attenuator probes, the other  $2V_{pp} \pm 1\%$  ( $t_r = 90 \, \text{ns}$ ) for x100 attenuator probes. These voltages correspond in each case to a screen amplitude of  $4 \, cm$  provided the input attenuator switch of the HM 205-2 is set to the deflection coefficient  $5 \, mV/cm$ .

#### 1 kHz compensation

This trimmer adjustment compensates the capacitive loading of the oscilloscope input (approx. 30 pF for the HM 205-2). After compensation, the capacitive attenuation has the same attenuation ratio as the ohmic divider. The same voltage attenuation then results at high and low frequencies as for direct voltage (for x1 probes or probes switches over to x1, this compensation is neither necessary nor possible). The trace line must be parallel with the horizontal graticule lines (see "Trace rotation **TR**", page M8).

Connect attenuator probe (type HZ51, 52, 53, 54 or also HZ36 and HZ37) to the **CH.I** input, do not press any buttons or turn any knobs, set input coupling to **DC**, input attenuator to **5 mV/cm** and **TIME/DIV**. switch to **0.2 ms/cm** (both variable controls in calibration position **CAL**.), connect probe to the corresponding **CAL**. eyelet (x10 probe to **0.2 V** eyelet, x100 to **2 V** eyelet).

1 kHz

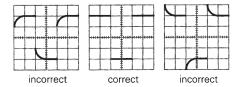

2 cycles can be seen on the screen. The compensation trimmer must now be adjusted. It is generally located in the probe itself. It is located in the x100 attenuator probe HZ53 in the small box on the BNC plug. Adjust the trimmer with the insulating screw driver provided until the tops of the square wave signal are exactly parallel to the horizontal graticule lines (see 1 kHz diagram). The signal height should then be 4 cm  $\pm$ 1.2 mm (= 3 %). The signal edges are invisible during this adjustment.

#### 1 MHz compensation

HF adjustment is possible for the HZ37, 51, 52, 53 and 54 probes. These possess resonance correction elements (pots in combination with coils and capacitors) with which it is possible for the first time to simply adjust the probe in the upper frequency range of the vertical amplifier.

After this compensation, not only the maximum possible bandwidth is obtained in the attenuator probe mode but also a largely constant group delay at the end of the bandwidth. In this way transient distortions (such as overshooting, rounding off, ringing, holes or humps in the pulse top) in the vicinity of the leading edge are kept to a minimum. The bandwidth of the HM 205-2 is therefore fully utilized when using the HZ37, 51, 52 and 54 probes without having to accept wave form distortions.

Prerequisite for this HF compensation is a square wave generator with short rise time (typically 4 ns) and low-impedance output (approx. 50 Ohm) which also supplies a voltage of 0.25 V or 2.5 V at a frequency of 1 MHz.

The **SCOPE TESTER HZ60** fullfills these tasks excellently (see **Accessories**, page Z1).

## Operating modes of the vertical amplifiers

The desired operating mode of the vertical amplifiers is selected with the 3 buttons in the Y field. All three buttons out for *mono* mode. Only *Channel I* is then operational. The button **CH I/II-TRIG.I/II** must be depressed in mono mode for *Channel II*. The internal triggering is simultaneously switched over to Channel II with this button.

If the **DUAL** button is depressed, both channels are working. Two signals can be displayed together in this button position (alternate mode). This mode is not suitable for displaying very slow-running processes. The display then flickers too much or it appears to jump. If the **CHOP**, button is depressed in addition to **DUAL**, both channels are switched over constantly at a high frequency within a sweep period (CHOP mode). Slow running processes *below 1 kHz or with time coefficients higher than 1 ms/cm* are then also displayed without flicker. The dual mode chosen is less important for signals with higher repetition frequency.

If the **ADD** button is depressed, the signals of both channels are algebraically added ( $\pm I \pm II$ ). Whether the resulting display shows the **sum** or **difference** is dependent on the phase relationship or the polarity of the signals **and** on the positions of both **INVERT** buttons.

In-phase input voltages:

Both **INVERT** buttons released = sum.

Both **INVERT** buttons depressed = sum.

Only one **INVERT** button depressed = difference.

Antiphase input voltages:

Both **INVERT** buttons released = difference. Both **INVERT** buttons depressed = difference. Only one **INVERT** button depressed = sum. In the **ADD** mode the vertical display position is dependent upon the **Y-POS**. setting of **both** channels. The **same attenuator switch position** is normally used for both channels with algebraic addition.

**Differential measurement** techniques allow direct measurement of the voltage drop across floating components (both ends above ground). Two identical probes should be used for both vertical inputs. Using a separate ground connection and **not** connecting the probe or cable shields to the circuit under test avoid ground loops (hum, common-mode disturbances).

#### X-Y Operation

For *X-Y operation*, the pushbutton in the X field marked **X-Y** must be depressed. The X signal is then derived from the *Channel II* (HOR. INP.). *The calibration of the X signal during X-Y operation is determined by the setting of the Channel II input attenuator and variable control.* This means that the sensitivity ranges and input impedances are identical for both the X and Y axes. However, the **Y-POS.II** control is disconnected in this mode. Its function is taken over by the **X-POS.** control. It is important to note that the **X-MAG. x10** facility, normally used for expanding the sweep, should not be operated in the X-Y mode. It should also be noted that the bandwidth of the X amplifier is approximately 2.5 MHz (-3 dB), and therefore an increase in phase difference between both axes is noticeable from 50 kHz upwards.


The Y-Input signal may be inverted by using the **INVERT** facility. However, the inversion of the X-input signal using the CH. II **INVERT** button is not possible.

**Lissajous figures** can be displayed in the **X-Y mode** for certain measuring tasks:

- Comparing two signals of different frequency or bringing one frequency up to the frequency of the other signal.
   This also applies for whole number multiples or fractions of the one signal frequency.
- Phase comparison between two signals of the same frequency.

## Phase comparison with Lissajous figure

The following diagrams show two sine signals of the same frequency and amplitude with different phase angles.

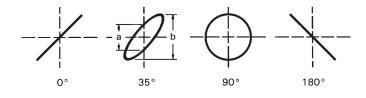

Subject to change without notice M9 205-2

Calculation of the phase angle or the phase shift between the X and Y input voltages (after measuring the distances **a** and **b** on the screen) is quite simple with the following formula and a pocket calculator with trigonometric functions and besides *independent of both deflecting amplitudes* on the screen.

$$\sin \varphi = \frac{a}{b}$$

$$\cos \varphi = \sqrt{1 - \left(\frac{a}{b}\right)^2}$$

$$\varphi = \arcsin \frac{a}{b}$$

## The following must be noted here:

- Because of the periodic nature of the trigonometric functions, the calculation should be limited to angles ≤90°.
   However here is the advantage of the method.
- Do not use a too high test frequency. The phase shift of the two oscilloscope amplifiers of the HM 205-2 in the X-Y mode can exceed an angle of 3° above 120 kHz.
- It cannot be seen as a matter of course from the screen display if the test voltage leads or lags the reference voltage. A CR network before the test voltage input of the oscilloscope can help here. The 1 M $\Omega$  input resistance can equally serve as R here, so that only a suitable capacitor C needs to be connected in series. If the aperture width of the ellipse is increased (compared with C short-circuited), then the test voltage leads the reference voltage and vice versa. This applies only in the region up to 90° phase shift. Therefore C should be sufficiently large and produce only a relatively small just observable phase shift.

Should both input voltages be missing or fail in the X-Y mode, a very bright light dot is displayed on the screen. This dot can burn into the phosphor at a too high brightness setting (INTENS. knob) which causes either a lasting loss of brightness, or in the extreme case, complete destruction of the phosphor at this point.

# Phase difference measurement in DUAL mode


A larger phase difference between two input signals of the same frequency and shape can be measured very simply on the screen in Dual mode (**DUAL** button depressed). The time base should be triggered by the reference signal (phase position 0). The other signal can then have a leading or lagging phase angle. Alternate mode should be selected for frequencies ≥1 kHz; the Chop mode is more suitable for frequencies <1 kHz (less flickering). For greatest accuracy adjust not much more than one period and approximately the same height of both signals on the screen. The variable controls for amplitude and time base and the **LEVEL** knob can also be used for this adjustment — without

influence on the result. Both base lines are set onto the horizontal graticule center line with the **Y-POS**. knobs before the measurement. With sinusoidal signals, observe the zero (crossover point) transitions; the sine peaks are less accurate. If a sine signal is noticably distorted by even harmonics, or if an offset direct voltage is present, **AC** coupling is recommended for **both** channels. If it is a question of pulses of the same shape, read off at steep edges.

#### Phase difference measurement in dual mode

t = horizontal spacing of the zero transitions in cm.

T = horizontal spacing for one period in cm.

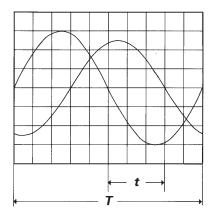

In the example illustrated, t = 3 cm and T = 10 cm. The phase difference in degrees is calculated from

$$\varphi^{\circ} = \frac{t}{T} \cdot 360^{\circ} = \frac{3}{10} \cdot 360^{\circ} = 108^{\circ}$$

or expressed in radians

arc 
$$\varphi = \frac{t}{T} \cdot 2\pi = \frac{3}{10} \cdot 2\pi = 1,885 \, \text{rad}$$

Relatively small phase angles at not too high frequencies can be measured more accurately in the X-Y mode with Lissajous figures.

## Measurement of an amplitude modulation

The momentary amplitude  $\boldsymbol{u}$  at time  $\boldsymbol{t}$  of a HF-carrier voltage, which is amplitude modulated without distortion by a sinusoidal AF voltage, is in accordance with the equation

$$u = U_T \cdot \sin \Omega t + 0.5 \, \text{m} \cdot U_T \cdot \cos (\Omega - \omega) t - 0.5 \, \text{m} \cdot U_T \cdot \cos (\Omega + \omega) t$$

where (

 $U_T$  = unmodulated carrier amplitude

 $\Omega = 2\pi F = \text{angular carrier frequency}$ 

 $\omega = 2\pi f = \text{modulation angular frequency}$ 

 $m = \text{modulation factor} (\leq 1 \leq 100\%).$ 

The lower side frequency F-f and the upper side frequency F+f arise because of the modulation apart from the carrier frequency F.

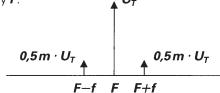


Figure 1 Amplitude and frequency spectrum for AM display (m = 50%)

The display of the amplitude-modulated HF oscillation can be evaluated with the oscilloscope in the analog mode provided the frequency spectrum is inside the oscilloscope bandwidth. The time base is set so that several wave of the modulation frequency are visible. Strictly speaking, triggering should be external with modulation frequency (from the AF generator or a demodulator). However, internal triggering is frequently possible with normal triggering (AT/NORM. button depressed) using a suitable LEVEL setting and possibly also using the time variable adjustment.

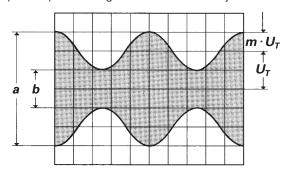


Figure 2 Amplitude modulated oscillation:  $\mathbf{F} = 1 \text{ MHz}$ ;  $\mathbf{f} = 1 \text{ kHz}$ ;  $\mathbf{m} = 50 \text{ %}$ ;  $\mathbf{U_T} = 28.3 \text{ mV}_{\text{rms}}$ .

Oscilloscope setting for a signal according to figure 2:

Depress no buttons. Y: CH. I; 20 mV/cm; AC.

TIME/DIV.: 0.2 ms/cm.

Triggering: **NORMAL** with **LEVEL**-setting; *internal (or external) triggering.* 

If the two values **a** and **b** are read from the screen, the modulation factor is calculated from

$$m = \frac{a-b}{a+b}$$
 bzw.  $m = \frac{a-b}{a+b} \cdot 100$  [%] where  $a = U_T (1+m)$  and  $b = U_T (1-m)$ .

In certain cases (e.g. proportioning of a terminating resistor, diameter of wire of a modulation transformer, examination of an AM-tuning diode for cross modulation etc.), the following formula is of advantage:

$$\frac{U_{ss}}{U_{rms}} = 2 \cdot \sqrt{2} \cdot \frac{1+m}{\sqrt{1+\frac{m^2}{2}}}$$

 $U_{ss} = peak$ -to-peak amplitude of an AM-voltage  $U_{rms} = effective \, voltage \, value \, of \, U_{ss} \, (on \, sine \, modulation \, only)$ 

The variable controls for amplitude and time can be set arbitrarily in the modulation factor measurement. Their position does not influence the result.

## Triggering and time base

A signal can be displayed only if the time base is running or triggered. To produce a stationary display, triggering must be synchronous with the test signal. This is possible by using the test signal itself or by an externally supplied but synchronous signal voltage.

The trigger voltage should have a certain minimum amplitude. This value is called the *trigger threshold*. It is measured with a sine signal. When the trigger voltage is taken internally from the test signal, the trigger threshold can be stated as vertical *display height in mm*, through which the time base generator starts, the display is stable, and the trigger LED lights.

The internal trigger threshold of the HM205-2 is given as  $\leq$ 5 mm. When the trigger voltage is externally supplied, it can be measured in  $V_{pp}$  at the **TRIG. INP.** socket. Normally, the trigger threshold may be exceeded up to a maximum factor of 20.

The HM205-2 has two trigger modes, which are characterized in the following.

#### **Automatic Triggering**

If the **AT/NORM.** pushbutton in the X field is in the out position **AT**, the sweep generator is running without test signal or external trigger voltage. A base line is always displayed even without a signal applied. This trigger mode is therefore called **Automatic Triggering**. Operation of the scope needs, having a constantly visible trace, only a correct amplitude and time base setting. A **LEVEL** adjustment is neither necessary nor possible with automatic triggering. This simple **AT** mode is recommended for all uncomplicated measuring tasks. However, automatic triggering is also the appropriate operation mode for the "entry" into difficult measuring problems, e.g. when the test signal is unknown relating to amplitude, frequency or shape. Presetting of all parameters is now possible with automatic triggering; the change to normal triggering can follow thereafter.

The automatic triggering works above **10 Hz** up to at least **20 MHz**. The changeover to the break down of the automatic triggering at frequencies under 10 Hz is abrupt. However, it can not be recognized by the **TRIG.** LED; this is still blinking. Break down of triggering is best recognizable at the left screen edge (the start of the trace in differing display height).

The automatic triggering follows immediately all variations or fluctuations of the test signal above 10 Hz. However, if the pulse duty factor of a square-wave signal changes so much that one part of the square-wave reduces to a needle pulse, switching over to normal triggering and using the **LEVEL** control can be necessary. With automatic triggering, the trigger point lies approx. in the zero voltage crossing. The time interval, required for the time base start, can be too short at a steep zero crossing of the needle pulse. Then normal triggering should be used.

Subject to change without notice M11 205-2

Automatic triggering is practicable not only with internal but also with external trigger voltage.

#### **Normal Triggering**

With normal triggering (AT/NORM. button depressed) and LEVEL adjustment, the sweep can be started by signals within the frequency range selected by the TRIG. coupling switch. In the absence of an adequate trigger signal or when the trigger controls (particularly the LEVEL control) are misadjusted, no trace is visible, i.e. the screen blanked completely.

When using the internal normal triggering mode, it is possible to trigger at any amplitude point of a signal edge, even with very complex signal shapes, by adjusting the **LEVEL** control. Its adjusting range is directly dependent on the display height, which should be at least **5 mm**. If it is smaller than 1 cm, the **LEVEL** adjustment needs to be operated with a sensitive touch. In the external normal triggering mode, the same applies to approx. 0.6V external trigger voltage amplitude.

Other measures for triggering of very complex signals are the use of the time base variable control and **HOLDOFF** time control, hereinafter mentioned.

#### **Slope**

The trigger point can be placed alternatively on a rising or falling edge of the test signal. This is valid with automatic and with normal triggering. The selected slope is set with the +/- button. The plus sign (button released) means an edge, which is coming from a negative potential and rising to a positive potential. That has nothing to do with zero or ground potential and absolute voltage values. The positive slope may also lie in a negative part of a signal. A falling edge (minus sign) triggers, when the +/- button is depressed.

However, with normal triggering, the trigger point may be varied within certain limits on the chosen edge using the **LEVEL** control.

#### **Trigger coupling**

The coupling mode and accordingly the frequency range of the trigger signal can be changed using the **TRIG**. selector switch. However, this is possible only with the **TV** switch in **OFF** position.

#### AC: Trigger range ≥ 10 Hz to 20 MHz.

This is the most frequently used trigger mode. The trigger threshold is increasing below 10 Hz.

#### DC: Trigger range DC to 20MHz.

DC triggering is recommended, if the signal is to be triggered with quite slow processes or if pulse signals with constantly changing pulse duty factors have to be displayed.

## Always work with normal triggering and LEVEL adjustment.

Otherwise there is the possibility in the **AT** position (automatic triggering) that the trigger point may change or that triggering may not occur with signals without zero crossing (e.g. with DC offset). The balance of the corresponding channel input should then be corrected (see "DC Balance Adjustment", page M8). Sometimes triggering is easier with **AC** *input coupling*, because the signal then has its average value exactly at the oscilloscope's ground potential.

#### HF: Trigger range 1.5 kHz to 40 MHz (high-pass filter).

The HF position is suitable for all radio-frequency signals. DC fluctuations and low-frequency excess noise of the trigger voltage are suppressed, giving a stable display. The trigger threshold increases below 1.5 kHz.

#### LF: Trigger range DC to 1kHz (low-pass filter).

The LF position is often more suited for low-frequency signals than the DC position, because the (white) noise in the trigger voltage is strongly suppressed. So jitter or double-triggering of complex signals is avoidable or at least reduced, in particular with very low input voltages. The trigger threshold increases above 1 kHz.

## Line triggering

A part of a secondary winding voltage of the power transformer is used as mains/line frequency trigger signal (50 to 60 Hz) in the ~ position of the **TRIG.** selector switch. This trigger mode is independent of amplitude and frequency of the Y signal and is recommended for all mains/line synchronous signals. This also applies — within certain limits — to whole number multiples or fractions of the line frequency. Line triggering can also be useful to display signals below the trigger threshold (less than 5 mm). It is therefore particularly suitable for measuring small ripple voltages of mains/line rectifiers or stray magnetic field in a circuit.

Magnetic leakage (e.g. from a power transformer) can be investigated for direction and amplitude using a search or pick-up coil. The coil should be wound on a small former with a maximum of turns of a thin lacquered wire and connected to a BNC connector (for scope input) via a shielded cable. Between cable and BNC center conductor a resistor of at least  $100\,\Omega$  should be series-connected (RF decoupling). Often it is advisable to shield statically the surface of

the coil. However, no shorted turns are permissible. Maximum, minimum, and direction to the magnetic source are detectable at the measuring point by turning and shifting the coil.

## **Triggering of video signals**

The built-in active **TV-Sync-Separator** separates the sync pulses from the video signal, permitting the display of distorted video signals either in line ( $\mathbf{H} = \text{horizontal}$ ) or in frame ( $\mathbf{V} = \text{vertical}$ ) trigger mode. The  $\mathbf{TV}$  lever switch has five positions: the **OFF** position is for normal operation.

The **TV**: **H**+ and **H**- positions (horizontal = line) and the **TV**: **V**+ and **V**- (vertical = frame) positions are used for video triggering. In these four positions the **TRIG.** coupling switch, the +/- (Slope) switch and the **LEVEL** control (in **NORM.** trigger mode) are inoperative. In the **TV**: **V**+ and **V**- positions (frame triggering), a low-pass filter or integrating network is connected into circuit, which forms a trigger pulse sequence with frame frequency from the vertical sync pulses (incl. pre- and postequalizing pulses).

For correct video triggering, the + and - positions at  $\mathbf{V}$  and  $\mathbf{H}$  must be selected corresponding to the video input signal. If the sync pulses are placed above the picture content,  $\mathbf{H}+$  or  $\mathbf{V}+$  should be in use. For sync pulses below the picture content of the input signal, correct triggering, without any influence from changing picture contents, will be possible only in  $\mathbf{V}-$  or  $\mathbf{H}-$  setting. The INVERT pushbutton only changes the display on the CRT, not the input signal.

In **TV**: **H** trigger mode, the trigger point lies on the starting edge of a sync pulse. As mentioned before, in **TV**: **V** mode an integrating network is additionally added to the sync separator which delays the formed trigger pulse by about  $50\,\mu s$ .

Video signals are triggered in the automatic mode. Therefore the adjustment of the trigger point is superfluous. The internal triggering is virtually independent of the display height, which may differ from 0.8 to 8 cm. As opposed to **AT** mode, when the **AT/NORM.** button is pressed in, the screen is blanked without signal at the input (turning the **LEVEL** knob is ineffectual).

The **TIME/DIV**. switch can be set according to the measurement task independently of the **TV** switch position. The basic positions for **H** (horizontal  $\triangleq$  line) and **V** (vertical  $\triangleq$  frame) are marked on the scale of the **TIME/DIV**. switch. However, the **TIME/DIV**. knob may be turned more to the right (without break down of the triggering), if more details in the video signal should be required. More adventageous, because one video field is suppressed, is the use of the 10-fold expansion with the **X-MAG**. **x10** button and the **HOLD-OFF** time setting. Disconnecting the trigger circuit (e.g. by

rapidly pressing and releasing the **EXT.** button) can result in triggering the consecutive (odd or even) field.

Setting: **TV: V, 2 ms/cm, HOLDOFF** knob at the right stop, **X-MAG. x10** button depressed, searching the picture detail with **X-POS.** knob, additional X-expansion (x2.5) with time variable knob fully cw. So the International Insertion Test Signals including Video Text and VPS etc. in the vertical blanking interval are fully visible with a 25:1 expansion ratio.

The sync-separator-circuit also operates with external triggering. It is important that the voltage range  $(0.3V_{pp}$  to  $6V_{pp})$  for external triggering should be noted. In addition, the correct slope setting is again critical, because the external trigger signal may not have the same polarity or pulse edge as the test signal. This can be checked, if the external trigger voltage itself is displayed at first (with internal triggering).

Generally, the composite video signal has a high DC content. With a constant video information (e.g. test pattern or color bar generator), the DC content can be suppressed easily by **AC** input coupling of the oscilloscope amplifier. With a changing picture content (e.g. normal program), **DC** input coupling is recommended, because the display varies its height on screen with **AC** input coupling at each change of the picture content. The DC content can be compensated using the **Y-POS**. control so that the signal display lies in the graticule area. Then the composite video signal should not exceed a vertical height of 6 cm.

#### **External triggering**

The internal triggering is disconnected by depressing the **EXT.** button. The timebase can be triggered *externally* via the **TRIG. INP.** socket using a  $0.3\,V_{pp}$  to  $6\,V_{pp}$ voltage, which is in syncronism with the test signal. This trigger voltage may have completely different form from the test signal voltage. Triggering is even possible — in certain limits — with whole number multiples or fractions of the test frequency, but only in locked phase relation.

The input impedance of **TRIG. INP.** socket is approx.  $0.8M\Omega\,II30\,pF$ . The maximum input voltage of the input circuit is  $100\,V$  (DC+peak AC). Only  $6\,V_{pp}$  maximum are required for a good external triggering.

#### **Trigger indicator**

An LED on condition (below the **TRIG.** switch) indicates that the sweep generator is triggered. This is valid with automatic and with normal triggering. The indication of trigger action facilitates a sensitive **LEVEL** adjustment, particularly at very low signal frequencies. The indication pulses are of only 100 ms duration.

Thus for fast signals the LED appears to glow continuously, for low repetition rate signals, the LED flashes at the repeti-

Subject to change without notice M13 205-2

ition rate or — at a display of several signal periods — not only at the start of the sweep at the left screen edge, but also at each signal period.

#### Holdoff-time adjustment

If it is found that a trigger point cannot be located on extremely complex signals even after repeated and careful adjustment of the **LEVEL** control in the **normal triggering** mode, a stable display may be obtained using the **HOLD-OFF** control (in the X-field). This facility varies the hold-off time between two sweep periods approx. up to the ratio 10:1. Pulses or other signal waveforms appearing during this off period cannot trigger the timebase. Particularly with burst signals or aperiodic pulse trains of the same amplitude, the start of the sweep can be delayed until the optimum or required moment.

A very noisy signal or a signal with a higher interfering frequency is at times double displayed. It is possible that LEVEL adjustment only controls the mutual phase shift, but not the double display. The stable single display of the signal, required for the evaluation, is easily obtainable by expanding the holdoff time. To this end the HOLDOFF knob is slowly turned to the right, until one signal is displayed.

A double display is possible with certain pulse signals, where the pulses alternately show a small difference of the peak amplitudes. Only a very exact **LEVEL** adjustment makes a single display possible. The use of the **HOLD-OFF** knob simplifies the right adjustment.

After specific use the **HOLD-OFF** control should be re-set into its calibration detent, otherwise the brightness of the display is reduced drastically. The function is shown in the following figures.

#### Function of var. HOLD-OFF control

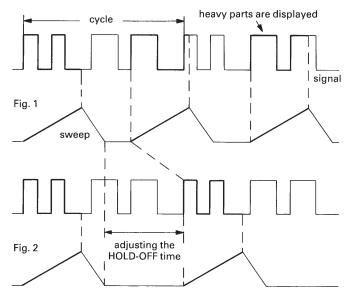


Fig. 1 shows a case where the **HOLD-OFF** knob is in the minimum position and various different waveforms are overlapped on the screen, making the signal observation unsuccessful.

Fig. 2 shows a case where only the desired parts of the signal are stably displayed.

## **Component Tester**

#### General

The HM 205-2 has a built-in electronic Component Tester (abbreviated *CT*), which is used for instant display of a test pattern to indicate whether or not components are faulty. The *CT* can be used for quick checks of semiconductors (e.g. diodes and transistors), resistors, capacitors, and inductors. Certain tests can also be made to integrated circuits. All these components can be tested in and out of circuit.

The test principle is fascinatingly simple. The power transformer of the oscilloscope delivers a sine voltage, which is applied across the component under test and a built-in fixed resistor. The sine voltage across the test object is used for the horizontal deflection, and the voltage drop across the resistor (i.e. current through test object) is used for vertical deflection of the oscilloscope. The test pattern shows a current-voltage characteristic of the test object.

Since this circuit operates with mains/line frequency (50 or 60 Hz) and a voltage of 8.5 V max. (open circuit), the indicating range of the  $\pmb{CT}$  is limited. The impedance of the component under test is limited to a range from  $20\,\Omega$  to  $4.7\,k\Omega$ . Below and above these values, the test pattern shows only short-circuit or open-circuit. For the interpretation of the displayed test pattern, these limits should always be borne in mind. However, most electronic components can normally be tested without any restriction.

#### **Using the Component Tester**

The *CT* is switched on by depressing the *CT* pushbutton beneath the screen. This makes the vertical preamplifier and the timebase generator inoperative. A shortened horizontal trace will be observed. It is not necessary to disconnect scope input cables unless in-circuit measurements are to be carried out. In the *CT* mode, the only controls which can be operated are *INTENS.*, *FOCUS*, and *X-POS.*. All other controls and settings have no influence on the test operation.

For the component connection, two simple test leads with 4mm Ø banana plugs, and with test prod, alligator clip or sprung hook, are required. The test leads are connected to the insulated *CT* socket and the adjacent ground socket in the Y-Section. The component can be connected to the test leads either way round.

After use, to return the oscilloscope to normal operation, release the **CT** pushbutton.

#### **Test Procedure**

Caution! Do not test any component in live circuitry — remove all grounds, power and signals connected to

the insulated *CT* socket and the adjacent ground socket in the Y-Section. The component can be connected to the test leads either way round.

After use, to return the oscilloscope to normal operation, release the **CT** pushbutton.

#### **Test Procedure**

Caution! Do not test any component in live circuitry — remove all grounds, power and signals connected to the component under test. Set up Component Tester as stated above. Connect test leads across component to be tested. Observe oscilloscope display.

#### Only discharged capacitors should be tested!

A built-in quick-acting fuse protects the *CT* and the oscilloscope against mis-operation, e.g. device under test not disconnected from mains/line supply. In that case the fuse will blow. For fuse replacement the oscilloscope has to be opened (see service instruction page S1 "Instrument Case Removal"). The fuse is located on the bottom side of the instrument (close to the CT pushbutton). Make sure that only fuses of the specified type are used for replacement: **5x20mm**, **quick-acting**, **250 V**, **C**, **50 mA** (IEC 127/II or DIN 41661).

#### **Test Pattern Displays**

Page M17 shows typical test patterns displayed by the various components under test.

- Open circuit is indicated by a straight horizontal line.
- Short circuit is shown by a straight vertical line.

#### **Testing Resistors**

If the test object has a linear ohmic resistance, both deflecting voltages are in the same phase. The test pattern expected from a resistor is therefore a sloping straight line. The angle of slope is determined by the resistance of the resistor under test. With high values of resistance, the slope will tend towards the horizontal axis, and with low values, the slope will move towards the vertical axis.

Values of resistance from  $20\Omega$  to  $4.7k\Omega$  can be approximately evaluated. The determination of actual values will come with experience, or by direct comparison with a component of a known value.

#### **Testing Capacitors and Inductors**

Capacitors and inductors cause a phase difference between current and voltage, and therefore between the X and Y deflection, giving an ellipse-shaped display. The position and opening width of the ellipse will vary according to the impedance value (at 50 or 60 Hz) of the component under test.

A horizontal ellipse indicates a high impedance or a relatively small capacitance or a relatively high inductance.

A vertical ellipse indicates a small impedance or a relatively large capacitance or a relatively small inductance.

A sloping ellipse means that the component has a considerable ohmic resistance in addition to its reactance.

The values of capacitance of normal or electrolytic capacitors from  $0.1\mu F$  to  $1000\mu F$  can be displayed and approximate values obtained. More precise measurement can be obtained in a smaller range by comparing the capacitor under test with a capacitor of known value. Inductive components (coils, transformers) can also be tested. The determination of the value of inductance needs some experience, because inductors have usually a higher ohmic series resistance. However, the impedance value (at 50 or 60 Hz) of an inductor in the range from  $20\,\Omega$  to  $4.7\,k\Omega$  can easily be obtained or compared.

#### **Testing Semiconductors**

Most semiconductor devices, such as diodes, Z-diodes, transistors, FETs can be tested. The test pattern displays vary according to the component type as shown in the figures below.

The main characteristic displayed during semiconductor testing is the voltage dependent knee caused by the junction changing from the conducting state to the non conducting state. It should be noted that both the forward and the reverse characteristic are displayed simultaneously. This is a two-terminal test, therefore testing of transistor amplification is not possible, but testing of a single junction is easily and quickly possible. Since the  $\it CT$  test voltage applied is only very low (max.  $8.5\,\rm V_{rms}$ ), all sections of most semiconductors can be tested without damage. However, checking the breakdown or reverse voltage of high voltage semiconductors is not possible. More important is testing components for open or short-circuit, which from experience is most frequently needed.

#### **Testing Diodes**

Diodes normally show at least their knee in the forward characteristic. This is not valid for some high voltage diode types, because they contain a series connection of several diodes. Possibly only a small portion of the knee is visible. Z-diodes always show their forward knee and, up to approx. 10 V, their Z-breakdown, forms a second knee in the opposite direction. A Z-breakdown voltage of more than 12 V can not be displayed.

Subject to change without notice M15 205-2



Type: Terminals: Connections: Normal Diode Cathode-Anode (CT-GD)

Diode High Voltage Diode Anode Cathode-Anode D) (CT-GD)


e Z-Diode 12V Cathode-Anode (CT-GD)


The polarity of an unknown diode can be identified by comparison with a known diode.

#### **Testing Transistors**

Three different tests can be made to transistors: base-emitter, base-collector and emitter-collector. The resulting test patterns are shown below.

The basic equivalent circuit of a transistor is a Z-diode between base and emitter and a normal diode with reverse polarity between base and collector in series connection. There are three different test patterns:

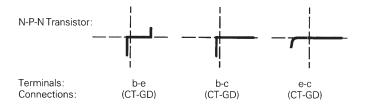

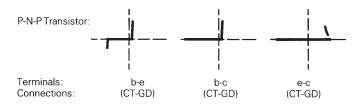

For a transistor the figures b-e and b-c are important. The figure e-c can vary; but a vertical line only shows short circuit condition.

These transistor test patterns are valid in most cases, but there are exceptions to the rule (e.g. Darlington, FETs). With the *CT*, the distinction between a P-N-P to a N-P-N transistor is discernible. In case of doubt, comparison with a known type is helpful. It should be noted that the same socket connection (*CT* or ground) for the same terminal is then absolutely necessary. A connection inversion effects a rotation of the test pattern by 180 degrees round about the center point of the scope graticule.

Pay attention to the usual caution with single MOScomponents relating to static charge or frictional electricity!

#### **In-Circuit Tests**

Caution! During in-circuit tests make sure the circuit is dead. No power from mains/line or battery and no signal inputs are permitted. Remove all ground connections including Safety Earth (pull out power plug from outlet). Remove all measuring cables including probes between oscilloscope and circuit under test. Otherwise both CT test leads are not isolated against the circuit under test.

In-circuit tests are possible in many cases. However, they are not so well-defined. This is caused by a shunt connection of real or complex impedances — especially if they are of relatively low impedance at 50 or 60 Hz — to the component under test, often results differ greatly when compared with single components. In case of doubt, one component terminal may be unsoldered. This terminal should then be connected to the insulated *CT* socket avoiding hum distortion of the test pattern.

Another way is a test pattern comparison to an identical circuit which is known to be operational (likewise without power and any external connections). Using the test prods, identical test points in each circuit can be checked, and a defect can be determined quickly and easily. Possibly the device itself under test contains a reference circuit (e.g. a second stereo channel, push-pull amplifier, symmetrical bridge circuit), which is not defective.

The test patterns on page M17 show some typical displays for in-circuit tests.

M16 205-2 Subject to change without notice


## **Single Components**



Short circuit



Resistor 510  $\Omega$ 

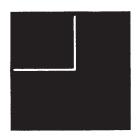

**Single Transistors** 


**Junction B-C** 




Junction B-E




Mains transformer prim.

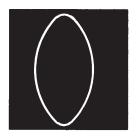

Capacitor 33 μF

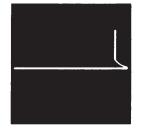

**Junction E-C** 

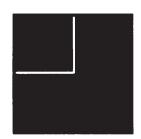


FET

## **Single Diodes**



Z-diode under 8 V

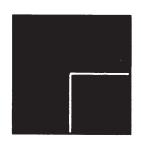

Z-diode beyond 12 V




**In-circuit Semiconductors** 

Diode paralleled by 680  $\Omega$ 



2 Diodes antiparallel

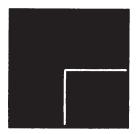

Silicon diode



Germanium diode



Diode in series with 51  $\Omega$ 



**B-E** paralleled by 680  $\Omega$ 



Rectifier



Thyristor G + A together



B-E with 1  $\mu\text{F}$  + 680  $\Omega$ 



Si-diode with 10  $\mu\text{F}$ 

Subject to change without notice M17 205-2

#### Front-panel controls

All front-panel controls for storage operation are located in the X-field and marked there by a frame.

**STOR.** pushbutton switches the oscilloscope from real time to storage mode. Further pressure releases the button and switches back to real time mode.

Stored signals (in **HOLD** condition) are retained in the real time mode; they can be displayed on the screen at any time by pushing this button. A time coefficient changed in the meantime has no effect on the stored signals in **HOLD** condition.

**STOR.** *LED:* this lamp indicates by shining continuously that the storage mode is switched on. It also indicates by flashing if the **TIME/DIV.** switch is incorrectly set (out of range). The setting is correct, when, using the storage mode, the time coefficient is selected inside the range enclosed by the continuous black line. This range is marked below the scale with **STOR.** Flashing of the lamp is supported by a 4kHz piezoelectric beeper, which gives an acoustic warning in the same rhythm.

**HOLD I** and **HOLD II** pushbuttons serve for holding the memory contents of each channel.

If they are depressed, the memory contents are retained until the mains voltage is switched off or fails. New storage is only possible on each channel when the relevant button is released (out).

**DOT J.** (Dot join) pushbutton if depressed, displays connecting lines between all sample dots on the screen. The signal shape can often be improved with this control. This applies particularly if dot spacings are relatively large (square wave edges, many sine wave cycles). It should be noted that a slight distortion of the signal shape is unavoidable when this function is in use, e.g. rounding off the corners of square wave signals.

**SINGLE** pushbutton: it switches the digital timebase from repetitive sweep to single sweep.

Thus single events (such as switching on or off processes, non-periodic signals) can be displayed and stored as long as required with constantly uniform screen intensity. The single sweep mode is not applicable in analogue oscilloscope operation.

**RESET** pushbutton: brings the digital timebase into the ready position for single sweep with the single button depressed.

A suitable trigger edge arriving after operation of the pushbutton initiates the single sweep.

**RESET** *LED:* this lamp indicates storage readiness for single sweep mode. It goes out after storage is finished.

**TIME/DIV.** rotary switch: when the memory mode is switched on, the analog timebase is switched off.

It is replaced by the digitally generated quartz control timebase. The timebase fine control knob is then out of operation. Because the digital scanning rate is limited to maximum 5 MHz, the smallest adjustable time coefficient is  $20\,\mu\text{s/cm}$ , the largest  $5\,\text{s/cm}$ . These ranges are framed in black on the **TIME/DIV.** scale.

## Storage resolution and operating modes

#### Vertical resolution

Dot density in each operating mode 8 bit =  $2^8 = 256$  dots on 9 cm display height (28 dots per cm). However only 8 cm can be evaluated in the screen graticule.

#### Horizontal resolution in timebase mode

**Channel I alone:** Dot density 10 bit =  $2^{10}$  = 1024 dots on 10 cm display width (100 dots per cm).

**Channel II alone:** Dot density 10 bit =  $2^{10} = 1024$  dots on

10 cm display width (100 dots per cm).

**Channel I and II** (**DUAL** button depressed): Dot density 10 bit  $= 2^{10} = 1024$  dots on 10 cm display width (100 dots per cm) **for each channel**.

**Sum and difference CHI**  $\pm$  **CHII** (**ADD** button without/with one or two **INVERT** buttons depressed). Dot density 10 bit  $= 2^{10} = 1024$  dots on 10 cm display width (100 dots per cm).

#### Horizontal resolution with X-MAG. x10 button

Depressing the **X-MAG. x10** button produce no effect on the stored data; these remain completely unchanged. However, the display is 10-fold expanded in the X-direction. The dot density changes from 100 to 10 dots per cm.

#### Maximum signal frequency in storage mode

The highest frequency which can be evaluated depends upon resolution, display height adjusted, signal shape and possible use of the **X-MAG. x10** button. It cannot be strictly defined and must be assessed according to application. The denser the dot sequence which simulates the signal shape, the more accurately the stored display can be evaluated. With sine waves the zero-axis crossings are therefore critical and with the square waves, steep edges, which should be displayed with at least 5 dots. In the vertical direction a large display height setting is favourable for accurate amplitude measurement, but not for waveform assessment, because the dot density is then small. A too small display height is again inaccurate, because scanning in the X

and Y direction can fluctuate by  $\pm 1$  dot (statistical scatter). The Y-bandwidth in storage mode is 700 kHz. A **250 kHz** signal in sine or symmetrical square wave shape is indeed certainly detectable with the **X-MAG.x10** button depressed, but can be evaluated at best in its amplitude. Details such as harmonic distortion factor or edge steepness and interference pulse spikes or glitches cannot be assessed with any accuracy.

In principle, the HM 205-2 can work in digital storage mode with the same operating modes as in analog/real time mode. The following can therefore be displayed:

- Channel I single
- Channel II single
- Channels I and II simultaneously
- Sum of both channels
- Difference of both channels.

Deviations of the storage mode from the real time mode are:

- With the **DUAL** button depressed (simultaneous signal display of both channels) the facility for Chop mode does not exist. It is superfluous since the stored image does not flicker even at low frequencies. The two channels are scanned separately but simultaneously. However, they are read out from the two single memories after one another (alternately) and displayed on the screen. Pressing the **CHOP.** button has no effect.
- X-Y and CT operation overwrite storage mode, e.g. if STOR. button is depressed, selecting XY or CT mode sets the instrument to analog mode.

Storing is possible using two different operating modes. The choice depends upon the kind of the signal and on the measuring task:

- Refresh (periodical refreshing = repeated signal scanning and storage),
- Single (triggered single sweep)

All operating and stored display modes with storage are dealt with in more detail in the following sections.

## Single channel display

**Y-field:** do not depress any buttons, select input coupling **AC** or **DC** according to signal frequency, apply signal to **CH.I-**BNC socket, select display height desired with the **VOLTS/DIV.** input attenuator switch. Fine control knob in the **CAL.** position (left stop); if required, turn fine control knob to right stop for amplitude coefficient **2 mV/cm** (attenuator switch to **5 mV/cm**), adjust vertical display position with **Y-POS.I** knob.

**Field beneath the screen:** adjust suitable intensity and focus with **INTENS.** and **FOCUS** knobs, do not depress any buttons.

**X field:** set trace line symmetrical to the graticule with **X-POS.** knob, depress **STOR.** button (storage lamp lights up). Triggering: initially do not depress **AT/NORM.** button, select trigger coupling appropriate to signal repetition frequency. Select normal triggering for frequencies below 10 Hz (depress **AT/NORM.** button, set **DC** or **LF** on the **TRIG.** selector switch, adjust **LEVEL** knob so that **TRIG.** lamp lights up or flashes after each signal period with very low frequencies). Select trigger edge direction (slope) with +/- button.

**Timebase:** select time coefficients on the **TIME/DIV**. switch, however remain within the black framed scale region.

The signal is visible on the screen in this setting in the **refresh mode**. This means that the signal is constantly rescanned and read out again from the memory. If the signal amplitude, waveform, frequency or time coefficient changes, this change is visible on the screen without any great time loss. If the **HOLD I** button is now depressed, the signal displayed at the moment of depressing is "frozen" and therefore permanently stored. When the **HOLD I** button is depressed, the stored signal can no longer be influenced by any control of the oscilloscope. However, the visible signal on the screen can be expanded by pressing the **X-MAG. x10** button and shifted horizontally with the **X-POS.** knob, and **DOT J.** (dot join) connects sample dots.

The same procedure applies for *Channelli single channel display* and storage. Naturally the *CHI/II-TRIG.I/II* button in the Y section must be depressed. The *HOLD II* button then serves for "freezing" the stored signal.

Instead of the refresh mode, single sweep can also be selected by depressing the SINGLE and RESET buttons without any disadvantage. The scanning, storage and read out process can be repeated immediately by renewed depressing of the RESET button. However, if the corresponding HOLD button is depressed in addition, the last visible signal is permanently stored. Single sweep is recommended in particular for aperiodic signals or single events, such as a switching on process. Here the **RESET** lamp goes out when the single sweep stops at the right edge of the screen. The correct triggering setting (type, coupling, edge direction, level) is especially important in the case of single sweep, since without triggering the last stored signal remains unchanged in the memory and therefore is also displayed unchanged. Setting triggering with the aid of a simulated signal is recommended under certain circumstances. It is possible to work with automatic triggering here. However, normal triggering with suitable LEVEL adjustment is

Subject to change without notice M19 205-2

more favourable because the trigger point on the signal is determined in this case. Premature triggering by interference pulses with zero-axis crossing can also be prevented in this way.

**Trigger lamp:** Below 10 Hz the trigger LED flashes once and each time the trigger point, set on the signal edge, is passes through. When e.g. three periods of the signal are displayed, the trigger LED flashes 3 times. But only the first flash starts the forward sweep. The other two flashes appear during the holdoff time. The following trigger pulse, after forward sweep and holdoff time, starts the sweep again. The repeated flashing occurs also with single shot, however, the sweep stops after the first forward sweep.

**Single sweep:** The single sweep mode is on, when the **SINGLE** and the **RESET** buttons are depressed. There are no qualitative or quantitative disadvantages with the single sweep mode compared to the periodic sweep. It is only dependent on the measuring task, which sweep mode is more suitable. The **RESET** LED indicates trigger readiness. It goes out after completion of storage and signal display. When the **SINGLE** button is depressed during a running periodic sweep, the sweep stops abruptly. When the **RESET** button is depressed during a running sweep, there is no effect, just so with +/- slope or distorting the **LEVEL** knob.

## Vertical output (Y)

The output BNC connector on the rear panel provides a sample of the signal applied to the **CH.II** or **CH.II** input connector. The output voltage is  $45\,mV_{pp}/cm$  display height (into  $50\,\Omega$ ). It is picked off from the vertical amplifier like the trigger signal and it is similarly switchable. Channel I or II is selected with the **CHI/II-TRIG.I/II** pushbutton in the X-field. The vertical output is not dependent on the vertical trace position. It does not respond to the adjustment of the **Y-POS.II** and **Y-POS.II** controls, to the depressing of the **INVERT** buttons and to the +/- slope switch. The vertical output is DC coupled and has approximately zero level to ground. The bandwidth of the output is approx. 20 MHz (with  $50\,\Omega$  termination). The Y-output is qualified for the connection of external instruments (e.g. frequency counter).

#### **Accessories**

Each HAMEG oscilloscope is supplied with an Instruction Manual and two **HZ36** (switchable) attenuator probes 1:1/10:1. However, a wide range of accessories, which include test cables and probes, are available and should be ordered according to the particular application (see "Accessories" on page Z1).

M20 205-2 Subject to change without notice

## Switching on and initial setting

Connect instrument to power outlet, depress red POWER button. LED indicates operating condition.

Case, chassis and all measuring terminals are connected to the safety earth conductor (Safety Class I).

Do not depress any further button. TRIG. selector switch to AC, TV switch to OFF.

AT/NORM. button released, CH.I input coupling switch to GD, set TIME/DIV. switch to 50 µs/cm.

Adjust INTENS. control for average brightness.

Center trace on screen using X-POS. and Y-POS.I controls. Then focus trace using FOCUS control.

### Vertical amplifier mode

Channel 1: All buttons in the Y section in out position.

Channel II: CHI/II button depressed.

Channel I and II: DUAL button depressed. Alternate channel switching: CHOP. (ADD) button in out position.

Signals  $< 1 \, \text{kHz}$  or time coefficient  $\ge 1 \, \text{ms/cm}$ : **CHOP.** button depressed.

Channel I+II or -I-II (sum): depress only **ADD** button.

Channel -I +II or I -II (difference): depress **ADD** and *one* of the **INVERT** buttons.

## **Triggering mode**

Select trigger mode with AT/NORM. button:

AT = Automatic Triggering ≥ 10 Hz to 20 MHz (out position). NORM. = Normal Triggering depressed.

Trigger edge direction: select slope with +/- button.

Internal triggering: select channel with TRIG. I/II(CH. I/II) button.

External triggering: **EXT.** button depressed; sync. signal  $(0.3V_{pp})$  to **TRIG. INP.** socket.

Line triggering: **TRIG.** selector switch to  $\sim$ .

Select trigger coupling with TRIG. selector switch. Trigger frequency ranges:

**AC**:  $\geq$  10 Hz to 20 MHz; **DC**: DC to 20 MHz; **HF**: 1.5 kHz to 40 MHz; **LF**: DC to 1 kHz.

Composite video signal with line or horizontal frequency: TV switch to TV: H+ or H-.

Composite video signal with frame or vertical frequency: **TV** switch to **TV**: **V**+ or **V**-.

Select **TV** switch to + (sync. pulse above) or – positions (sync. pulse below). Pay attention to trigger indicator: LED below the **TRIG.** selector switch.

## Storage mode

Mode selector switch: STOR. button.

STOR. LED lights continuously in storage mode.

Memory hold condition:

Channel I: **HOLD I** button depressed.

Channel II: **HOLD II** button depressed.

Channels I and II (DUAL): HOLD I and HOLD II buttons depressed.

Algebraic addition (ADD): **HOLD I** button depressed.

Single sweep: first SINGLE button, after that RESET button depressed.

**RESET** LED lights at trigger readiness and during single sweep.

**RESET** LED is dark, when storage is terminated.

#### Measurements

Apply test signal to the vertical input connectors of CH. I and/or CH. II.

Before use, calibrate attenuator probe with built-in square wave generator CAL.

Switch input coupling to AC or DC.

Adjust signal to desired display height with attenuator switch.

Select time coefficient on the **TIME/DIV.** switch.

Incorrect time coefficient setting in real time mode or storage mode is indicated by the flashing **STOR.** LED and intermittent beeping.

Set trigger point with **LEVEL** knob for Normal Triggering.

Trigger complex or aperiodic signals with longer **HOLD-OFF**-time.

Amplitude measurement with Y fine control at left stop (CAL.).


Time measurement with time fine control at left stop (CAL.).

Time expansion x10 with X-MAG. x10 button depressed.

External horizontal sweep (X-Y mode) with X-Y button depressed (X input: CH. II).

## **Component Tester**

Press **COMPONENT TESTER** button. Connect both component terminals to **CT** and ground jacks. **In-circuit test**: Circuit under test must be disconnected from battery or power (pull out power plug), signals and ground (earth). Remove all signal connections to **HM 205-2** (cable, probe), then start testing.

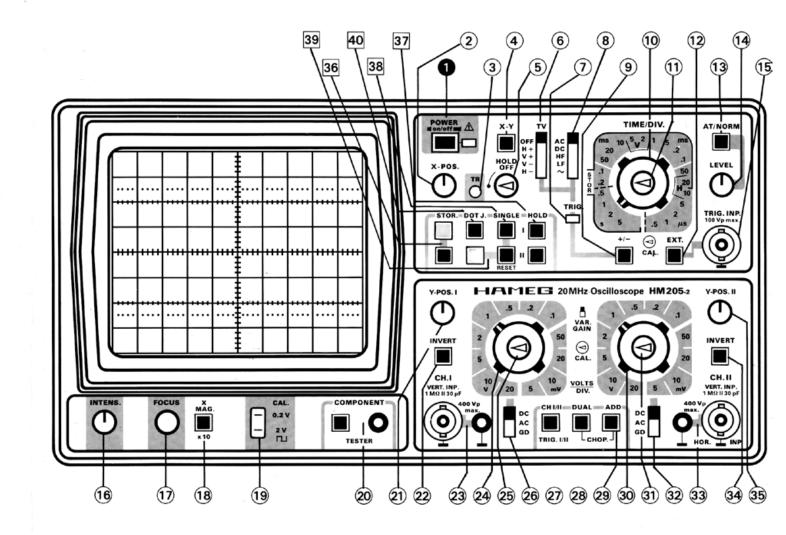

## Front Panel Elements HM 205-2 (Brief Description – Front View)

	Element	Function		Element	Function	
0	POWER on/off (pushbutton + LED)	Turns scope on and off. LED indicates operating condition.	23	<b>CH. I</b> (BNC-connector and ground jack)	CH. I signal input. Input impedance 1M $\Omega$ II 30pF.	
2	X-POS. (knob)	Controls horizontal position of trace.	24	<b>VOLTS/DIV.</b> (rotary switch)	CH. I input attenuator. Selects input sensitivity in mV/cm or V/cm in 1-2-5 sequence.	
	TR (pot)	Trace rotation. To align trace with horizontal graticule line. Compensates influence of earth's magnetic field.	<u>25</u>	VAR. GAIN (center knob)	Continuously variable gain between the calibrated settings of the VOLTS/DIV switch. Increases	
4	X-Y (pushbutton switch) Attention! Phosphor b	Selects X-Y operation, stops sweep. X signal via CH. II. Durn-in without X signal.	<u>26</u>	DC-AC-GD (slide switch)	sensitivity 2.5:1. Cal. position: ccw.  Selects input coupling of the CH. I Vertical Amplifier.	
	HOLD OFF (knob)	Controls holdoff-time between sweeps. Normal position = full ccw.			DC: All components of the input signal are passed. AC: Signal is capacitively coupled (DC is blocked).	
6	TV (lever switch)	TV-Sync-Separator.  OFF = Normal operation.  TV: H± = Line or horizontal frequency.  TV: V± = Frame or vertical frequency.	<u>27</u>	CH I/II-TRIG. I/II (pushbutton switch)	GD: Signal is disconnected, amplifier input is grounded. Button released: CH. I only and interna trig. from CH. I.	
<u></u>	TRIG. (LED)	LED lights, if sweep is triggered.		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Button depressed: CH. II only and internal trig. from CH. II. In DUAL and ADD mode: Button	
8	TRIG. AC-DC-HF-LF-~ (lever switch)	Trigger selector  AC: 10 Hz − 20 MHz. DC: 0 − 20 MHz.  HF: 1.5 kHz − 40 MHz. LF: 0 − 1 kHz.  ~: Internal line triggering.	28	DUAL (pushbutton switch) CHOP.	selects internal trigger signal.  Button released: One channel only. Button depressed: CH. I <b>and</b> CH. II in alternate mode.	
9	+/- (pushbutton switch)	Selects the slope of the trigger signal. + = rising edge; - = falling edge.	<u></u>	ADD	DUAL and ADD buttons depressed: CH. I <b>and</b> CH. II in chopped mode.	
10	TIME/DIV. (rotary switch)	Selects timebase speeds from 0.5 µs/cm to 5 s/cm.		(pushbutton switch)	ADD button depressed only: Algebrai addition in combination with INVERT button.	
11)	Variable (center knob)	Timebase variable control. Increases timebase sweep speed 2.5:1 (real time only).	30	VOLTS/DIV. (rotary switch)	CH. II input attenuator. Selects input sensitivity in mV/cm or V/cm in 1-2-5 sequence.	
12	EXT. (pushbutton switch)	Cal. position = full counterclockwise.  Button released = internal triggering. Button depressed = external triggering,	31)	(center knob)  WAR. GAIN (center knob)  Continuously variable gain by the calibrated settings of the VOLTS/DIV switch. Increase sensitivity 2.5:1. Cal. position		
	(pushbutton switch)	trigger signal via TRIG. INP. (§).	32	DC-AC-GD (slide switch)	Selects input coupling of the CH. II Vertical Amplifier.	
13	AT/NORM. (pushbutton switch)	Button released = autom. triggering, trace visible without input signal. Button depressed = normal triggering with LEVEL @ adjustment, trace invisible without signal.			DC: All components of the input signare passed. AC: Signal is capacitively coupled (DC is blocked). GD: Signal is disconnected, amplifier input is grounded.	
14)	<b>LEVEL</b> (knob)	To adjust trigger point, if AT/NORM. button (3) is depressed.	33	3 <b>CH. II</b> (BNC-connector and ground jack)  Graph (BNC-connector and ground jack)  CH. II signal input. Input impedance 1MΩII30		
15	TRIG. INP. (BNC connector)	Input for external trigger signal, if button <b>@</b> is depressed.	34	INVERT (CHII) (pushbutton switch)  Inversion of CH. II display. In combination with ADD but = algebraic addition.		
16	INTENS. (knob)	Intensity control for trace brightness.	35	Y-POS.II (knob)	In X-Y mode inoperative.  Controls vertical position of CH. II display.	
17)	FOCUS (knob)	Focus control for trace sharpness.	w	(KITOD)	In X-Y mode inoperative.	
18)	X-MAG. x10 (pushbutton switch)	10:1 expansion in the X direction. Resolution (incl. (1)) 20 ns/cm.	36	Elements for storage mode:  STOR. Selects real time or storage mode		
19	CALIBRATOR 0.2 V-2 V (4,9 mm eyelets)	Calibrator output eyelets for probes $10:1=0.2V_{pp}$ , $100:1=2V_{pp}$ .		(pushbutton + LED)	LED indicates storage mode. If timebase range is wrong, LED is flashing.	
20	(pushbutton switch	Button depressed: CT in operation. Two-terminal measurement: compon.		HOLD I / II (pushbutton switch)	HOLDI: Save memory CH.I. HOLDII: Save memory CH.II.	
<u></u>	and 4 mm jack) Y-POS.I	connection to CT jack and ground jack.  Controls vertical position of	_	SINGLE (pushbutton switch)	Button depressed: Single sweep. Periodic sweep is stopped abruptly.	
_	(knob)	CH. I display.  Inversion of CH. I display.	39	RESET (pushbutton + LED)	Button depressed: Single sweep read for triggering. LED indicates readiness, goes out after storage.	
4	(pushbutton switch)	In combination with ADD button  algebraic addition.	41	<b>DOT J.</b> (pushbutton switch)	Button depressed: connects sample points	

K2 205-2 Subject to change without notice

#### General

These Test Instructions are intended as an aid for checking the most important characteristics of the HM 205-2 at regular intervals without the need for expensive test equipment. Resulting corrections and readjustments inside the instrument, indicated by the following tests, are described in the Service Instructions or on the Adjusting Plan. They should only be undertaken by qualified personnel.

As with the First Time Operation instructions, care should be taken that all knobs with arrows are set to their calibrated positions. None of the pushbuttons should be depressed. **TRIG.** selector switch to **AC**, **TV** switch to **OFF**.. It is recommended to switch on the instrument for about 15 minutes prior to the commencement of any check.

# Cathode-Ray Tube: Brightness and Focus, Linearity, Raster Distortions

Normally, the CRT of the HM 205-2 has very good brightness. Any reduction of this brightness can only be judged visually in the real time mode. However, decreased brightness may be the result of wrong setting or reduced high voltage. The latter is easily recognized by the greatly increased sensitivity of the vertical amplifier. Wrong setting means, that the controls HOLDQFF and timebase variable should be turned to the left stop; the X-MAG. x10 button should be released; a medium time coefficient should be selected; line triggering (~ position) should be used only with a suitable **TIME/DIV.** switch setting (e.g. **2ms/cm**). The control range for maximum and minimum brightness (intensity) must be such that the beam just disappears before reaching the left hand stop of the INTENS. control (particularly when the X-Y button is depressed), while with the control at the right hand stop the focus and the line width are just acceptable.

With maximum intensity the timebase fly-back must on no account be visible. Visible trace fault without input signal: bright dot on the left side — or — decreasing brightness from left to right or shortening of the baseline. (Cause: Incorrect Unblanking Pulse.) It should be noted that with wide variations in brightness, refocusing is always necessary. Moreover, with maximum brightness, no "pumping" of the display must occur. If pumping does occur, it is normally due to a fault in the regulation circuitry for the high voltage supply. The presetting pots for the high voltage circuit, minimum and maximum intensity, are only accessible inside the instrument (see Adjusting Plan and Service Instructions).

A certain out-of-focus condition in the edge zone of the screen must be accepted. It is limited by standards of the CRT manufacturer. The same is valid for tolerances of the orthogonality, the undeflected spot position, the non-linearity and the raster distortion in the marginal zone of the

screen in accordance with international standards (see CRT data book). These limit values are strictly supervised by HAMEG. The selection of a cathode-ray tube without any tolerances is practically impossible.

## **Astigmatism Check**

Check whether the horizontal and vertical sharpness of the display are equal. This is best seen by displaying a square-wave signal with the repetition rate of approximately 1 MHz. Focus the horizontal tops of the square-wave signal at normal intensity, then check the sharpness of the vertical edges. If it is possible to improve this vertical sharpness by turning the **FOCUS** control, then an adjustment of the astigmatism control is necessary. A potentiometer of  $50\,k\Omega$  (see Adjusting Plan) is provided inside the instrument for the correction of astigmatism (see Service Instructions). A certain loss of marginal sharpness of the CRT is unavoidable; this is due to the manufacturing process of the CRT.

## Symmetry and Drift of the Vertical Amplifier

Both of these characteristics are substantially determined by the input stages of the amplifiers. *The checking and correction of the DC balance for the amplifiers should be carried out as already described in the Operating Instructions* (page M8).

The symmetry of both channels and the vertical final amplifier can be checked by inverting Channel I and II (depress the corresponding **INVERT** pushbutton). The vertical position of the trace should not change by more than 5 mm. However, a change of 1 cm is just permissible. Larger deviations indicate that changes have occurred in the amplifier. A further check of the vertical amplifier symmetry is possible by checking the control range of the **Y-POS**. controls. A sine-wave signal of 10-100 kHz is applied to the amplifier input. When the **Y-POS**. control is then turned fully in both directions from stop to stop with a display height of approximately **8 cm**, the upper and lower positions of the trace that are visible should be approximately of the same height. Differences of up to 1 cm are permissible (input coupling should be set to **AC**).

Checking the drift is relatively simple. **Ten minutes after switching on the instrument**, set the baseline exactly on the horizontal center line of the graticule. The beam position must not change by more than **5mm** during the following hour. Larger deviations generally result from different characteristics of the dual FETs in both channel inputs to the Y amplifier. To some extent, fluctuations in drift are caused by offset current on the gate. The drift is too high, if the vertical trace position drifts by more than **0.5mm** on turning the appropriate attenuator switch through all 12 steps. Sometimes such effects occur after long periods of operation.

Subject to change without notice T1 205-2

## **Calibration of the Vertical Amplifier**

Two square-wave voltages of  $\textbf{0.2V}_{pp}$  and  $\textbf{2V}_{pp} \pm 1$  % are present at the output eyelets of the calibrator (CAL.). If a direct connection is made between the 0.2V output and the input of the vertical amplifier (e.g. using a x1 probe), the displayed signal in the **50 mV/cm** position (variable control to **CAL**.) should be 4cm high (DC input coupling). Maximum deviations of 1.2 mm (3%) are permissible. If a X10 probe is connected between the 2V output socket and Y input, the same display height should result. With higher tolerances it should first be investigated whether the cause lies, within the amplifier or in the amplitude of the square-wave signal. On occasions it is possible that the probe is faulty or incorrectly compensated. If necessary the measuring amplifier can be calibrated with an accurately known DC voltage (DC input coupling). The trace position should then vary in accordance with the deflection coefficient set.

With variable control at the attenuator switch fully clockwise, the input sensitivity is increased at least by the factor 2.5 in each position. In the **100 mV/cm** position, the displayed calibrator signal height should vary from 2 cm to at least 5 cm.

# Transmission Performance of the Vertical Amplifier

The transient response and the delay distortion correction can only be checked with the aid of a square-wave generator with a fast risetime (max. 5 ns). The signal coaxial cable (e.g. HZ34) must be terminated at the vertical input of the oscilloscope with a resistor equal to the characteristic impedance of the cable (e.g. with HZ22). Checks should be made at 100 Hz, 1 kHz, 10 kHz, 100 kHz and 1 MHz, the deflection coefficient should be set at 5 mV/cm with DC input coupling (Y variable control in CAL. position). In so doing, the square pulses must have a flat top without ramp-off, spikes and glitches; no overshoot is permitted, especially at 1 MHz and a display height of 4-5 cm. At the same time, the leading top corner of the pulse must not be rounded. In general, no great changes occur after the instrument has left the factory, and it is left to the operator's discretion whether this test is undertaken or not. A suited generator for this test is HZ60 from HAMEG.

Of course, the quality of the transmission performance is not only dependent on the vertical amplifier. *The input attenuators*, located in the front of the amplifier, *are frequency-compensated in each position*. Even small capacitive changes can reduce the transmission performance. Faults of this kind are as a rule most easily detected with a square-wave signal with a low repetition rate (e.g. 1 kHz). If a suitable generator with max. output of 40 V<sub>pp</sub> is available, it is advisable to check at regular intervals the deflection coefficients on all positions of the input attenuators and readjust them as necessary. A compensated *2:1 series attenuator* 

(e.g. HZ23) is also necessary, and this must be matched to the input impedance of the oscilloscope. This attenuator can be made up locally. It is important that this attenuator is shielded. For local manufacture, the electrical components required are a  $1M\Omega \pm 1\%$  resistor and, in parallel with it, a trimmer 3-15 pF in parallel with approx. 20 pF. One side of this parallel circuit is connected directly to the input connector of CH.I or CH.II and the other side is connected to the generator, if possible via a low-capacitance coaxial cable. The series attenuator must be matched to the input impedance of the oscilloscope in the 5 mV/cm position (variable control to CAL., DC input coupling; square tops exactly horizontal; no ramp-off is permitted). This is achieved by adjusting the trimmer located in the 2:1 attenuator. The shape of the square-wave should then be the same in each input attenuator position.

# Operating Modes: CH.I/II, DUAL, ADD, CHOP., INVERT and X-Y Operation

On depressing the **DUAL** pushbutton, two traces must appear immediately. On actuation of the **Y-POS.** controls, the trace positions should have no effect on each other. Nevertheless, this cannot be entirely avoided, even in fully serviceable instruments. When one trace is shifted vertically across the entire screen, the position of the other trace must not vary by more than 0.5 mm.

A criterion in chopped operation is trace widening and shadowing around and within the two traces in the upper or lower region of the screen. Set **TIME/DIV.** switch to **2** $\mu$ **s/cm**, depress the **DUAL** and **CHOP.** pushbutton, set input coupling of both channels to **GD** and advance the **INTENS.** control fully clockwise. Adjust **FOCUS** for a sharp display. With the **Y-POS.** controls shift one of the traces to a +2 cm, the other to a -2 cm vertical position from the horizontal center line of the graticule. Do not try to synchronize (with the time variable control) the chop frequency (0.5 MHz)! Then alternately release and depress the **CHOP.** pushbutton. Check for negligible trace widening and periodic shadowing in the chopped mode.

It is important to note that in the **I+II** or **-I-II** add mode (only **ADD** depressed) or the **-I+II** or **+I-II** difference mode (specific **INVERT** buttons depressed in addition) the vertical position of the trace can be adjusted by using **both** the Channel I and Channel II **Y-POS.** controls.

In X-Y Operation (X-Y pushbutton depressed), the sensitivity in both deflection directions will be the same. When the signal from the built-in square-wave generator is applied to the input of Channel II, then, as with Channel I in the vertical direction, there must be a horizontal deflection of *4cm* when the deflection coefficient is set to 50 mV/cm position (variable control set to its CAL. position, X-MAG. x 10 button in out position). The check of the mono channel display with the CHI/II button is unnecessary; it is contained indirectly in the tests above stated.

Real time rar	nge	S	Storage ranges		
			5s/cm	_	0.2 Hz
			2s/cm	_	0.5 Hz
			1 s/cm	_	1 Hz
			0.5 s/cm	_	2 Hz
0.2 s/cm	_	5 Hz	0.2 s/cm	_	5Hz
0.1 s/cm	-	10 Hz	0.1 s/cm	_	10Hz
50 ms/cm	-	20 Hz	50 ms/cm	_	20 Hz
20 ms/cm	_	50 Hz	20 ms/cm	-	50 Hz
10 ms/cm	-	100 Hz	10 ms/cm	_	100 Hz
5 ms/cm		200 Hz	5 ms/cm	_	200 Hz
2 ms/cm	_	500 Hz	2 ms/cm		500 Hz
1 ms/cm		1 kHz	1 ms/cm	_	1 kHz
0.5 ms/cm	_	2 kHz	0.5 ms/cm	_	2 kHz
0.2 ms/cm	-	5 kHz	0.2 ms/cm	_	5 kHz
0.1 ms/cm	_	10 kHz	0.1 ms/cm	_	10 kHz
50 µs/cm	_	20 kHz	50 μs/cm	-	20 kHz
20 µs/cm	_	50 kHz	20 μs/cm	_	50 kHz
10 µs/cm		100 kHz			
5 µs/cm	_	200 kHz			
2μs/cm	_	500 kHz			
1 μs/cm	_	1 MHz			
0.5 μs/cm	_	2MHz			

The *time variable control* range can be checked in the analog mode only. The sweep speed becomes faster by turning this variable control clockwise to its right stop. One cycle at least every *2.5 cm* should be displayed (with **X-MAG. x10** button in out position; measurement in the **50** µs/cm range).

When the **X-MAG. x10** button is depressed, a marker or cycle peak will be displayed every  $10 \text{ cm} \pm 5 \%$  (with variable control in **CAL.** position; measurement in the **5**µs/cm range). The tolerance is better measurable in the **50**µs/cm range (one cycle every 1 cm).

#### **Component Tester**

After pressing the *CT* button, a horizontal straight line has to appear immediately, when the *CT* socket is open. The length of this trace should be approx. *8cm*. With connection of the *CT* socket to one of the ground jacks in the Y-Section, a vertical straight line with approx. 6cm height should be displayed. The above stated measurements have some tolerances. They are dependent among other things on the mains/line voltage.

## **Y-Output**

A check of the Y output (rear panel) is possible on the screen by means of the calibrator signal using the dual channel mode. The calibrator socket 0.2 V/1 kHz is connected to the CH.I input via the (adjusted) X10 probe HZ37. The Y output is connected to the CH.II input via a BNC-BNC cable HZ34

with  $50\Omega$  Through-Termination between cable and input socket. Settings: CH.I attenuator to 5 mV/cm, CH.II to GD, time coefficient 0.5 ms/cm, TRIG. selector to AC, AT automatic triggering, no button depressed. A square-wave signal is visible with 4cm display height. The tops of the square-wave are adjusted to ±2cm from the horizontal center line of the graticule using the Y-POS.I control. Then the **DUAL** button has to be pressed. The appearing second trace (without signal) is adjusted to -2 cm using the Y-POS.II control. Now the CH.II input coupling is set to DC. The signal across the Y output appears with the same phase position as the calibrator signal via Channel I. As well as the DC offset (e.g. +0.2 cm  $\triangleq +20$  mV) the amplitude (e.g.  $1.9 \text{ cm} \triangleq 0.19 \text{ Vpp}$ ) of the Y output can be calculated as 0.19V: 4cm = 47.5mV/cm. The value is doubled without  $50\Omega$  termination. The check may be completed with an exchange of both vertical channels and depressing the CH.I/ II button.

## **Trace Alignment**

The CRT has an admissible angular deviation  $\pm 5^{\circ}$  between the X deflection plane D1-D2 and the horizontal center line of the internal graticule. This deviation, due to tube production tolerances (and only important after changing the CRT), and also the influence of the earth's magnetic field, which is dependent on the instrument's North orientation, are corrected by means of the **TR** potentiometer. In general, the trace rotation range is asymmetric. It should be checked, whether the baseline can be adjusted somewhat sloping **to both sides** round about the horizontal center line of the graticule. With the HM 205-2 in its closed case, an angle of rotation  $\pm 0.57^{\circ}$  (1 mm difference in elevation per 10 cm graticule length) is sufficient for the compensation of the earth's magnetic field.

#### Mains/Line Voltage Checks

If a variable mains/line transformer is available, the characteristics of the HM205-2 on power voltage fluctuations of  $\pm 10\,\%$ , referred to the voltage indicated by a triangle above the fuse holder (rear panel), should be checked. Under these conditions no variations should be detected on the display in either the vertical or horizontal axis.

#### General

The following instructions are intended as an aid for the electronic technician, who is carrying out readjustments on the HM 205-2, if the nominal values do not meet the specifications. These instructions primarily refer to those faults, which were found after using the Test Instructions. However, this work should only be carried out by properly qualified personnel. *This concerns the digital storage part in particular.* For any further technical information call or write to HAMEG. Addresses are provided at the back of the manual. It is recommended to use only the original packing material, should the instrument be shipped to HAMEG for service or repair (see also Guarantee, page M2).

#### **Instrument Case Removal**

The rear cover can be taken off after unplugging the power cord's triple-contact connector and after two cross recessed pan head screws (M4x30 mm) with two washers on it have been removed. While the instrument case is firmly held, the entire chassis with its front panel can withdrawn forward. When the chassis is inserted into the case later on, it should be noticed that the case has to fit under the flange of the front panel. The same applies for the rear of the case, on which the rear cover is put.

#### **Caution**

During opening or closing of the case, the instrument must be disconnected from all power sources for maintenance work or a change of parts or components. If a measurement, trouble-shooting, or an adjustment is unavoidable, this work must be done by a specialist, who is familiar with the risk involved.

When the instrument is set into operation after the case has been removed, attention must be paid to the acceleration voltage for the CRT — 2000 V — and to the operating voltages for both final amplifier stages — 150 and 130 V. Potentials of these voltages are on the CRT socket, on the lower horizontal PCB, and on the Z-board. Such potentials are moreover on the checkpoint strips on the upper and lower horizontal PCBs. They are highly dangerous and therefore precautions must be taken. It should be noted furthermore that shorts occuring on different points of the CRT high voltage and unblanking circuitry will definitely damage some semiconductors and the opto-coupler. For the same reason it is very risky to connect capacitors to these points while the instrument is on.

Capacitors in the instrument may still be charged, even when the instrument is disconnected from all voltage sources. Normally, the capacitors are discharged 6 seconds after switching off. However, with a defective instrument an interruption of the load is not impossible. Therefore, after switching off, it is recommended to connect one by one all terminals of the check strips on the upper PCB across  $1\,\mathrm{k}\Omega$  to ground (chassis) for a period of 1 second.

Handling of the CRT needs utmost caution. The glass bulb must not be allowed — under any circumstances — to come into contact with hardened tools, nor should it undergo local superheating (e.g. by soldering iron) or local undercooling (e.g. by cryogenic-spray). We recommend the wearing of safety goggles (implosion danger).

The complete instrument (with case closed and POWER button depressed) is — after each intervention — undergo a voltage test with 2000 V, 45 to 65 Hz, between accessible parts to both mains/line supply terminals. This test is dangerous and requires an adequately trained specialist.

## **Operating Voltages**

Besides the two AC voltages for the CRT heating (6.3V), Component Tester and line triggering (12V) there are ten electronically regulated *DC operating voltages* generated  $(+12V, +5V_Y, +5V_X, +5V_{TB}, +5V_S, -12V, +130V)$  (or +118 V in storage mode), +150 V, -1900 V, and 22 V for the unblanking circuit). These different operating voltages are fixed voltages, except the +12V, which can be adjusted. All other voltages are dependent from the accuracy of this voltage (and also from some resistors with close tolerances). Only 22 V in the unblanking circuit is stabilized with Z-diode. The variation of the fixed voltages greater than  $\pm 5\%$  from the nominal value indicates a fault. Excepting 22V, +130V, and -1900V, the other DC voltages have no more than ±2% variation on the average. These voltages are measured on the checkpoint strip with reference to ground (see Adjusting Plan). Measurements of the high voltage may only be accomplished by the use of a sufficient highly resistive voltmeter (>10  $M\Omega$ ). You must make absolutely sure that the electric strength of the voltmeter is sufficiently high. The 22 V for the unblanking circuit can be measured as the difference between two high voltages with reference to ground. It is recommended to check the ripple and also the interaction from other possible sources. Excessive values might be very often the reason for incomprehensible faults.

## **Maximum and Minimum Brightness**

Two variable resistors of  $500k\Omega$  each, located on the Z-PCB, are used for these adjustment procedures (see Adjusting Plan). They may only be touched by a properly insulating screwdriver (Caution! High voltage!). The adjust-

Subject to change without notice \$1 205-2

ments may possibly have to be repeated, because the functions of both variable resistors are dependent on each other. Correct adjustment is achieved, when the trace can be blanked while **X-Y** pushbutton is depressed and, in addition, when the requirement described in the Test Instructions are met.

## **Astigmatism control**

The ratio of vertical and horizontal sharpness can be adjusted by the variable resistor of  $50\,\mathrm{k}\Omega$ , located on the Z-PCB (see Adjusting Plan). As a precaution however, the voltage for the vertical deflecting plates (approx. +74V) should firstly be checked, because this voltage will affect the astigmastism correction. While the adjustment is being carried out (with medium brightness and a 1 MHz squarewave signal), the upper horizontal square-wave tops are firstly focussed with the **FOCUS** control. Then the sharpness of the vertical lines are corrected with the  $50\,\mathrm{k}\Omega$  Astigm. pot. The correction should be repeated several times in this sequence. The adjustment is finished, when the **FOCUS** knob *exclusively* brings no improvement of the sharpness in *both* directions.

## **Trigger Threshold**

The internal trigger threshold should be in the range 3 to 5 mm display height. It is strongly dependent on the 710 CN comparator IC. If there are compelling reasons to replace this comparator, it may be that triggering becomes too sensitive or too insensitive caused by the IC gain tolerances (see Test Instructions: "Triggering Checks", page T3). In extreme cases, the 33 k $\Omega$  hysteresis resistor of the 710 comparator should be changed. Generally, max. halving or doubling of this resistance value should be sufficient. A too small trigger threshold cause double-triggering or premature trigger action due to interference pulses or random noise. A too high trigger threshold prevents the display of very small display heights.

## Trouble-Shooting the Instrument

For this job, at least an isolating variable mains/line transformer (protection class II), a signal generator, an adequate precise multimeter, and, if possible, an oscilloscope are needed. This last item is required for complex faults, which can be traced by the display of signal or ripple voltages. As noted before, the regulated high voltage and the supply voltage for the final stages are highly dangerous. Therefore it is recommended to use **totally insulated extended probe tips**, when trouble-shooting the instrument. Accidental contact with dangerous voltage potentials is then unlikely. Of course, these instructions cannot thoroughly

cover all kinds of faults. Some common-sense will certainly be required, when a complex fault has to be investigated.

If trouble is suspected, visually inspect the instrumen't thoroughly after removal of the case. Look for loose or badly contacted or discolored components (caused by overheating). Check to see that all circuit board connections are making good contact and are not shorting to an adjacent circuit. Especially inspect the connections between the PCBs, to the power transformer, to front chassis parts, to CRT socket, to trace rotation coil (inside of CRT's shielding), and to the control potentiometers and switches on top of and beneath the PCBs. Furthermore, the soldering connections of the transistors and Fixed Three-Terminal Regulators resp. on the rear chassis. This visual inspection can lead to success much more quickly than a systematic fault location using measuring instruments. Prior to any extensive trouble-shooting, also check the external power source.

If the instrument fails completely, the first and most important step — *after checking the mains/line voltage and power fuse* — will be to measure the deflecting plate voltages of the CRT. In almost any case, the faulty section can be located. The sections represent:


1. Vertical deflection.

2. Horizontal deflection.

3. CRT circuit.

4. Power supply.

While the measurement takes place, the position controls of both deflection devices must be in mid-position. When the deflection devices are operating properly, the separate voltages of each plate pair are almost equal then (Y  $\approx$ 74V and X  $\approx$ 72V). If the separate voltages of a plate pair are very different, the associated circuit must be faulty. An absent trace in spite of correct plate voltages means a fault in the CRT circuit. Missing deflection plate voltages is probably caused by a defect in the power supply.

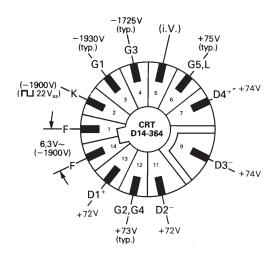

Voltages at the CRT socket

## **Replacement of Components and Parts**


For the replacement of parts and components use only parts of the same or equivalent type. Resistors without specific data in the diagrams have a power dissipation of 0.33 Watt and a tolerance of 1 %. Resistors in the high voltage circuit must have sufficient electric strength. Capacitors without a voltage value must be rated for an operating voltage of 63 V. The capacitance tolerance should not exceed 20%. Many semiconductors are selected, especially the gate-diodes 1N4154, and all amplifier transistors, which are contained in push-pull circuits (including the FETs). If a selected semiconductor is defective, all gatediodes or both push-pull transistors of a stage should be replaced by selected components, because otherwise there are possibly deviations of the specified data or functions. The HAMEG Service Department can give you advice for troubleshooting and replaceable parts. Replacement parts can be ordered by letter or telephone from the nearest HAMEG Service Office. Please supply the following information: Instrument type and serial number, description of the part (including function and location in the instrument). quantity desired.

## **Replacement of the Power Transformer**

Should it be necessary to replace the mains/line transformer, the correct terminal sequence (color identification) for primary and secondary windings must be followed (see diagram "Power Supply" and the figure below). In addition, the relevant Safety Regulations must be observed. Here, we refer only to those requirements relative to the parts conductively connected to the supply mains:

- The construction of the instrument shall be such as to prevent any short-circuiting or bridging of the insulation, clearances or creepage distances between those parts connected to the supply mains and any accessible conductive parts due to accidental loosening or freeing of the wiring, screws, etc.
- The rigidity of the mains wiring connections, which may be subject to mechanical stresses, shall not be dependent upon the soldering alone. To meet this requirement, the bare ends of the wires must be pushed through the holes in the respective soldering tab, bent over with a pair of pliers, and subsequently fixed by soldering.
- The minimum cross section of the protective earth connection between the instrument's power inlet and the connecting soldering tab on the rear chassis must be 0.81 mm² in North America and 0.75 mm² in Western Europe. The connecting soldering tab on the rear chassis has to be secured mechanically against loosening (e.g. with lock washer).

After replacing the power transformer, all remaining bits of wire, solder and other foreign matter must be removed from the PCBs, the vicinity of the power transformer and from within the insulating connecting box by shaking, brushing and blowing. Finally, the top plate of the insulating connecting box has to be replaced. Before connecting the instrument to the power supply, replace the possibly defective fuse, press the **POWER** button and make sure that there is an adequate insulation state between chassis (= safety earth conductor) on the one hand, and the live/line pin as well as the neutral pin, on the other. Only after proper insulation has been established may further function tests with open chassis follow, but with appropriate precautionary measures.

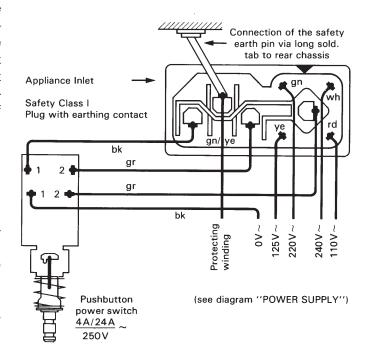

Rear View of Power Switch and Appliance Inlet with Voltage Selector and Fuse

Subject to change without notice S3 205-2

## Warning

The instrument must be disconnected from the mains power supply whenever you open the case, repair or exchange parts.

## **High Voltage Warning!**

Hazardous High Voltage of up to 2,000 Volts is present inside this Instrument. The areas particularly affected by High Voltage are the high voltage circuit on the Z-board and the CRT-socket.

#### **Service and Calibration**

- of this instrument should only be performed in accordance and in conjunction with the operating manual and the WAR-NINGS contained therein, particularly Section S1 "Service Instructions" and pages M1-M3 of the Section "Operating Instructions".
- should only be performed by suitably qualified and experienced service personnel, or should be referred to one of the HAMEG companies listed on the rear cover of the manual.

## Table of Contents 1) VR 2501: Adjus

1)	VR2501: Adjustment of +12 Volt supply		
2)			
3)			
	The transfer balance of the adjustment of the transfer of the	CP	
5)		CP	
6)		CP	
7)		CP	
8)		СР	
9)	Threat of the production of the transfer of th		_
10)			
		CP	
	<b>3</b>	CP	
14)			
	VR 2202: X-Magnification x1		
17)	VR3101: Timebase Calibration.		
18)			
		CP	
	***************************************		
		CP	
		СР	
		CP	_
		CP	
	Triggerbandwidth Check		
27)	Line Triggering Check	CP	5
	External Trigger Check		
	VR 2601: Calibrator Output.		
	Dual/Chop Test		
	VR 271: Y-Position in "Component-Tester" mode		
32)	Video Trigger Check	CP	6
	Adjustments in Digital Storage Assembly		
33)	VR4: Y-gain.	CP	6
	VR5: Storage Y-output symmetry		
	VR2100: Y-out sensitivity.		
	VR 1: Y-Position CH I		7
	VR3: Y-Position CH II.		7
	VR2: Y-Position in ADD-Mode		
	VR 201: Y-Gain CH I adjustment.		
40)	VR 221: Y-Gain CH II adjustment.	CP	7
	Component locations	CP	8

Subject to change without notice CP1 205-2

## Test Instruments required:

- 1) Scope Tester HZ60.
- 2) Constant amplitude sinewave generator,  $20\,\text{Hz}$   $20\,\text{MHz}$ , output  $5\,\text{mV}$ - $5\,\text{V}$  into  $50\,\Omega$ , preferably with  $20\,\text{dB}$  attenuation (e.g. HM 8032).
- 3) Amplitude Calibrator with 1 kHz squarewave output and  $600\,\Omega$  impedance, risetime faster than 150 ns. Output voltage 2 mV-20 V in 1-2-5 sequence for 4 divisions display amplitude.
- 4) Time mark generator from 0.2  $\mu$ s/div. to 0.5 s/div. Output min. 10 mV into 50  $\Omega$ .
- 5) Pre-attenuator 2:1 (1 M $\Omega$ , 12-48 pF), e.g. HZ23.
- 6)  $50 \Omega$  BNC through termination, e.g. HZ22.
- 7) 2 BNC-cables,  $50 \Omega$ , e.g.HZ34.
- 8) BNC-T-connector.
- 9) Oscilloscope probe 10:1, with exactly  $9\,M\Omega$  series resistance and compensated for oscilloscope of type HM205-2.
- 10) Oscilloscope 20 MHz, 5 mV/div. to 20 V/div. e.g. HM 203.
- 11) Trimming/adjusting tool.
- 12) Variable output insulation transformer.
- 13) Video signal generator with positive and negative signal output.
- 14) 4½ Digit Multimeter, with 10 mV accuracy, e.g. HM8011.
- 15) 205-2 EPROM for read out test purposes.

This procedure covers all calibrations and the most important – but not all – performance checks. The correct sequence of all calibration steps must be strictly followed.

Exact calibration is only possible when any influence of the earth magnetic field has been compensated with the trimmer marked TR (trace rotation).

All calibrations should only be performed by qualified and experienced personnel. This is particularly important for adjustments in the high voltage section of the instrument.

## 1) VR2501: Adjustment of +12 Volt supply.

- Locate and identify VR 2501 on XY-Board.
- Locate checkpoint socket Ch-P on XY-Board and identify pins.
- Adjust VR 2501 for exactly +12V. All other power supplies depend on the correct +12V adjustment (-12V, +5V, +150V). -1900V on Z-board checkpoint socket (Ch-P). All these voltages must be checked and verified.

#### 2) VR601 and VR602: Max. and min. Intensity of CRT.

- Locate and identify VR601 / VR602 on Z-Board.
- Set trimmers VR601 / VR602 to center position.
- Set INTENS. control to fully left position.
- Push XY-button.
- Adjust VR 602 (Min.) so that the dot just disappears.
- Release XY-button.
- Set INTENS. control to fully right position.
- Set timebase to 20 μs/div.
- Adjust VR 601 (Max.) so that the baseline has 1 mm thickness in the center of the screen.
- Repeat minimum intensity adjustment with VR602.

#### 3) VR3201: Trace Rotation Check.

- Locate and indentify VR3201 "TR" on front panel right of CRT.
- Using Y-Pos.I and X-Pos. controls, move baseline to the center of the graticule.
- When turning VR 3201, check that the range of inclination of the baseline is at least 1 mm at both horizontal limits of the graticule.
- Readjust baseline exactly parallel to the horizontal center line of the graticule.

#### 4) VR 101: Variable balance CH I adjustment.

- Locate and identify VR 101 on EY I-Board.
- Set input attenuator CH I to 5 mV/div.
- Adjust VR101 so that the baseline will not move when turning the Y-variable control through the entire range.

#### 5) VR 104: Invert.-Balance CH I adjustment.

- Locate and identify VR 104 on EY I-Board.
- Set input attenuator CH I to 5 mV/div.
- Set Y-variable control to CAL. position.
- Adjust VR104 so that the baseline will not move when pressing and releasing the INV.I pushbutton.

#### 6) VR101: Variable balance CH II adjustment.

- Locate and identify VR 101 on EY II-Board.
- Adjust VR 101 as under 4).

#### 7) VR 104: Invert.-Balance CH II adjustment.

- Locate and identify VR 104 on EY II-Board.
- Adjust VR 104 as under 5) using Invert. CH II pushbutton.

## 8) VR603: Astigmatism correction.

- Locate and identify VR 603 on Z-Board.
- Connect a 1 MHz squarewave signal as described under 13).
- Adjust FOCUS control for optimum sharpness.
- Adjust VR 603 until leading edge and top of signal have equal sharpness.
- Recheck range of FOCUS control.

#### 9) VR102: CH I Y-preamplifier Gain adjustment.

- Locate and identify VR 102 on EY I-Board.
- Release pushbutton CH I/II (out!).
- Set input attenuator CH I to 5 mV/div.
- Connect a 1 kHz squarewave signal of 25 mVpp amplitude via 50  $\Omega$  cable and 50  $\Omega$  throughtermination to input CH I.
- Using 10:1 probe and control scope, measure the output at testpoint EY11 (1) and adjust with VR 102 to 400 mVpp.
   The same voltage should appear at testpoint EY12 (4).

### 10) VR201: Y-Gain CH I adjustment.

- Locate and identify VR 201 on XY-Board.
- Set input attenuator to 5 mV/div.
- Connect a 1 kHz squarewave signal of 25 mV amplitude via  $50\,\Omega$  cable and  $50\,\Omega$  throughtermination to input CH I.
- Adjust VR 201 for 5 div. display height.

#### 11) VR 102: CH II Y-preamplifier Gain adjustment.

- Locate and identify VR 102 on EY II-Board.
- Press pushbutton CH I/II.
- Connection of signal to input CH II as under 9).
- Adjust VR 102 for channel II as under 9).

#### 12) VR221: Gain CH II adjustment.

- Locate and identify VR 221 on XY-Board.
- Connection of signal to input as under 10).
- Adjust VR 221 for channel II as under 10).

#### 13) High Frequency adjustment of Y-Final amplifier.

- Locate and identify VR2101 / VR2102 and VC2101 on XY-Board.
- Locate and identify VC 101 on EY I and EY II-Board.
- Release pushbutton CH I/II (out!).
- Set input attenuator CH I and CH II to 5 mV/div.
- Connect a 50 kHz sinewave signal to input CH I.
- Adjust sinewave generator output for 8cm display height.
- Set sinewave generator to 20 MHz.
- Adjust VC 101 CH I for 5.8 cm display height.
- Press pushbutton CH I/II.
- Connect 50 kHz sinewave signal to input CH II.
- Do the same proceeding as before for CH II adjusting VC101 CH II.
- Release pushbutton CH I/II (out!).
- Connect a 100 kHz squarewave signal of 25 mV amplitude via 50  $\Omega$  cable and 50  $\Omega$  throughtermination to input CH I.
- Set VR2102 and VC2101 to center position.
- Adjust VR 2101 for flat top of squarewave.
- Set squarewave generator to 1 MHz.
- Adjust VR2102 and VC2101 for steep leading edge and minimum overshoot.
- Repeat until optimum is obtained.

### 14) Attenuator compensation CH I.

- Locate and identify trimmers VC102-VC111 in their correct position on EY I-Board.
- Relase all pushbuttons (out!).
- Set input coupling switch CH I to DC.
- Set input attenuator CH I to 5 mV/div., Y-variable control to CAL. position.
- Set amplitude calibrator to 1 kHz and 40 mVpp output, and connect via  $50\,\Omega$  cable and 2:1 pre-attenuator to input of CH I.
- Adjust trimmer in pre-attenuator for flat squarewave top and 4cm display height.
- Adjust compensation as listed in the table below:

Calibrator Output	Input Atten.	Adjustment CH I	Adjustment CH II
80 mVpp	10 mV/div.	VC 102 + 103	VC 102 + 103
160 mVpp	20 mV/div.	VC 104 + 105	VC 104 + 105
400 mVpp	50 mV/div.	VC 106 + 107	VC 106 + 107
4 Vpp	0.5 V/div.	VC 108 + 109	VC 108 + 109
40 Vpp	5 V/div.	VC110+111	VC110+111

- Recheck compensation in all attenuator positions.

Subject to change without notice CP3 205-2

#### 15) Attenuator compensation CH II.

- Locate and identify trimmers VC102-VC111 in their correct positions on EY II-Board.
- Press pushbutton CH I/II.
- Set input attenuator CH II to 5 mV/div. Y-variable control to CAL. position.
- Set amplitude calibrator to 1 kHz with 40 mVpp output and connect via  $50\,\Omega$  cable and 2:1 pre-attenuator to input of channel II.
- Adjust as under 14).

**ATTENTION:** The setting of the trimmer in the preattenuator must not be changed during the compensation adjustments of the same channel!

#### 16) VR2202: X-Magnification x1

- Locate and identify VR 2202 on XY-Board.
- Set Timebase to 50 μs/div.
- Set Time Mark generator to f = 20 kHz and connect signal to CH II input.
- Press STOR. pushbutton.
- Adjust VR2202 so that each time mark coincides with a vertical graticule line.
- Release STOR. pushbutton (out!).

#### 17) VR3101: Timebase Calibration.

- Locate and identify VR3101 on TB-Board.
- Set Timebase to 50 μs/div. and tim sbase variable control to CAL. position.
- Set Time Mark generator to f = 20 kHz and connect signal to CH II input.
- Move trace with X-POS. control so that the first time mark coincides with the first left graticule line of the screen.
- Adjust VR3101 so that the 11th time mark coincides with the last right graticule line.
- Rotate timebase variable control to fully right position.
   Now the distance between two time marks should be 2.5 div. or more.

#### 18) VR2201: X-Magnification x10.

- Locate and identify VR2201 on XY-Board.
- Set up instrument as under 17).
- Press pushbutton X-Mag. x10.
- Using X-POS. control, move the first visible time mark to the first left graticule line.
- Adjust VR2201 so that the second time mark coincides with the last (right) graticule line.

#### 19) VC3101: Time coefficient 0.5 µs/div.

- Locate and identify VC3101 on TB-Board.
- Set timebase to  $0.5\,\mu\text{s}/\text{div}$ . timebase variable to CAL. position.
- Release X-MAG x10 pushbutton (out!).
- Set Time Mark generator to f = 2 MHz and connect signal to CH II input.
- Using X-POS. control, move the first visible time mark to coincide with the second vertical graticule line from the left
- Adjust VC3101 so that the 10th time mark coincides with the last vertical graticule line to the right of the screen.

### 20) VR2303: X-Gain for X-Y operation.

- Locate and identify VR 2303 on XY-Board.
- Set timebase to  $50\,\mu s$ /div. timebase variable to CAL. position, X-MAG x10 pushbutton released (out!).
- Set input attenuator CH II to 5 mV/div. input coupling CH II to AC.
- Connect a 50 kHz sinewave signal of 40 mVpp amplitude to input CH II.
- Push X-Y pushbutton and release CH I/II pushbutton (out!).
- Adjust VR 2303 for 8 cm horizontal trace length.

#### 21) VR302: Trigger symmetry.

- Locate and identify VR302 on TB-Board.
- Set timebase to  $20\,\mu\text{s}/\text{div}$ . timebase variable to CAL. position, X-MAG x10 pushbutton released (out!).
- Set input attenuator CH II to 5 mV/div., input coupling CH II to DC.
- Press CH I/II-TRIG. I/II pushbutton.
- Ensure that pushbuttons AT/NORM and +/-(Triggerslope) are released (out!).
- Set trigger coupling to AC.
- Connect a 50 kHz sinewave signal of 20 mVpp amplitude to input CH II, check for 4 cm display height.
- Set input attenuator CH II to 50 mV/div., check for 4cm display height.
- Press +/- (Slope) pushbutton.
- Adjust VR 302 so that equal trigger threshold is obtained.

#### 22) VR2302: DC-Triggering CH II.

- Before proceeding, be sure that variable and invert balance are correctly adjusted (see item 6 and 7).
- Locate and identify VR 2302 on XY-Board.
- Connect signal and adjust to 4mm display height as shown under 21).
- Set trigger coupling to DC.
- Adjust VR 2302 so that the signal will just trigger.
- Press pushbutton AT/NORM.

- Adjust LEVEL control so that signal triggers.
- Set CH II input attenuator to 5 mV/div. Check for 4 cm display height.
- Now release pushbutton AT/NORM and switch trigger coupling from DC to AC. The signal may not appear to move horizontally.

## 23) VR2301: DC-Triggering CH I.

- Locate and identify VR 2301 on XY-Board.
- Connect signal to input CH I.
- Adjust VR 2301 as under 22).

### 24) VR301: External DC-Triggering.

- Switch trigger coupling from AC to DC.
- Set input coupling CH I to GD.
- Locate and identify emitter of T311 on TB-Board.
- Measure DC-Voltage at emitter of T311, using a Digital
   Multimeter.
- Press EXT-Triggering pushbutton.
- Locate and identify VR301 on TB-Board.
- Adjust VR301 to measure the same voltage as before.
- Release EXT pushbutton (out!).

# 25) Trigger Filter Check.

- Set timebase to 1 ms/div.
- Set input attenuator CH I to 5 mV/div.
- Set input coupling switch CH I to DC.
- Set trigger coupling to AC.
- Release AT/NORM pushbutton (out!).
- Connect a 1 kHz sinewave signal of 40 mVpp amplitude to input CH I and check for full screen deflection.
- Set input attenuator CH I to 50 mV/div. and check for 8 mm display height.
- Switch trigger coupling from AC to DC, HF, and LF. The signal must always trigger.
- Set trigger coupling to HF.
- Set sinewave generator to 50Hz and 40mV output amplitude and check for 8mm display height.
- Set timebase to 20 ms/div.: The signal should not trigger and Trigger-LED should remain dark.
- Set sinewave generator to 400 mVpp (full screen deflection): The Signal should still not trigger and Trigger-LED remain dark
- Set sinewave generator to 20 kHz and 40 mVpp output amplitude and check for 8 mm display height.
- Set timebase to 50 μs/div.
- Set trigger coupling to LF: The Signal should not trigger and Trigger-LED should remain dark.
- Set sinewave generator amplitude to 400 mVpp: The signal should still not trigger and Trigger-LED should remain dark.

#### 26) Triggerbandwidth Check.

- Set timebase to 0.5 μs/div. timebase variable to CAL position
- Release X-MAG x10 pushbutton (out!)
- Set input coupling switch CH I to DC.
- Set trigger coupling to HF, and ensure that AT/NORM pushbutton is released (out!).
- Set input attenuator CH I to 5 mV/div.
- Connect a 40 MHz sinewave signal to input CH. I.
- Adjust generator output for 1 div. display height.
- Press pushbuttons X-MAG x10 and AT/NORM.
- Rotate LEVEL control until signal triggers.
- Release all pushbuttons.

### 27) Line Triggering Check.

- Set timebase to 20 ms/div.
- Set input coupling switch CH I to GD.
- Set input trigger coupling to Line (~) symbol.
- Release all pushbuttons (out!).
- The Trigger-LED should be ON, even without input signal.
- Press AT/NORM. pushbutton.

Rotate LEVEL control over full range: The Trigger-LED should be ON over most of the range, and should be OFF only at the extreme ends of the LEVEL range.

### 28) External Trigger Check.

- Set timebase to 20 μs/div.
- Set trigger coupling switch to AC.
- Set input coupling CH I to AC.
- Set input attenuator CH I to 0.1 V/div.
- Release all pushbuttons (out!).
- Connect a 50 kHz sinewave signal of 0.3 Vpp amplitude to input CH I and check for 3 div. display height.
- Press AT/NORM pushbutton and adjust LEVEL control so that signal triggers.
- Press EXT. pushbutton. The Trigger-LED should now go OFF.
- Set input coupling CH I to GD.
- Remove signal cable from input CH I and connect to socket TRIG.INP. Do not change generator settings.
- Rotate LEVEL control until Trigger-LED is ON.
- Set sinewave generator output to 3Vpp and rotate LEVEL control until Trigger-LED is ON.

#### 29) VR2601: Calibrator Output.

- Locate and identify VR 2601 on XY-Board.
- Set timebase to 0.5 ms/div.
- Release all pushbuttons (out!).

Subject to change without notice CP5 205-2

- Set input coupling CH I to DC.
- Set trigger coupling to AC.
- Set input attenuator CH I to 5 mV/div. and Y-variable control to CAL. position.
- Connect a 10:1 probe to input CH I and connect probe tip to 0.2V calibrator output.
- Adjust VR 2601 for exactly 4 div. display height.
- Connect probe tip to 2V calibrator output.
- Set input attenuator CH I to 50 mV/div.
- 4 div. display height should be visible again.

## 30) Dual/Chop Test.

- Set timebase to 2 ms/div.
- Press pushbutton CH I/II.
- Set input coupling CH I to GD.
- Set input coupling CH II to DC.
- Set input attenuator CH II to 5 mV/div., Y-variable control to CAL. position.
- Connect input CH II via 10:1 probe to 0.2V calibrator output.
- Using Y-POS. II control, adjust signal symmetrical across graticule center and check for 4 div. display height.
- Press DUAL pushbutton.
- Using Y-POS. I control, move baseline of CH I to horizontal center line of graticule. Note: The Display should flicker slightly.
- Press CHOP pushbutton. The display should flicker no longer.
- Press X-Y pushbutton. 4 points should now be visible.
   There should be no vertical lines between them; if there are, the chopper unblanking does not work correctly.

## 31) VR271: Y-Position in "Component-Tester" mode.

- Press Component-Tester pushbutton.
- Locate and identify VR 271 on XY-Board.
- Set baseline to graticule center line with VR271.
- Connect Component-Tester input via cable to ground.
- Now a vertical line should be visible.

### 32) Video Trigger Checks.

- Release all pushbuttons (out!).
- Set CH I input coupling switch to DC.
- Connect video signal with positive sync.-pulse polarity to input CH I.
- Adjust input attenuator switch CH I for 1 div. display amplitude of video signal.
- Set timebase to 5 ms/div.
- Set TV-Trigger switch to position V+ (vertical/positive sync.-pulse).
- Now 2 frames should be visible, starting with vertical

- sync.-pulses.
- Set TV-Trigger switch to position V— (vertical/negative sync.-pulse.
- Change video signal to negative sync.-pulse polarity.
   Now two frames should again be visible.
- Switch TV-Trigger to position H— (horizontal/negative sync.-pulse.
- Set timebase to 20 us/div.
- Now 3 video lines should be visible, starting with the horizontal sync.-pulse.
- Switch TV-Trigger to position H+ (horizontal/positive sync.-pulse.
- Change video signal to positive sync.-pulse polarity.
- Again 3 video lines starting with horizontal sync.-pulse should be visible.

Note: In TV Trigger Mode the trigger coupling selector has no influence.

Note: Invert pushbuttons do not affect trigger polarity.

# **Adjustments in Digital Storage Assembly**

#### 33) VR4: Y-gain.

- Set input coupling switch CH I to AC.
- Switch input attenuator CH I to 5 mV/div.
- Connect a 500 Hz sinewave signal with 40 mV amplitude to input CH I.
- Locate and identify VR4 on Memory-Board.
- Repeatedly press and release STOR. pushbutton and adjust VR4 so that equal amplitudes appear in analog and storage operation.

Note: Trimmer VR4 is not inserted on every Memory-Board. If one defective A/D Converter has to be changed, **both** converters must be replaced with types of the same batch number. Even under these conditions it may be necessary to replace resistor R110 with trimmpot. VR4  $(2.2 \, \mathrm{k}\Omega)$ .

## 34) VR5: Storage Y-output symmetry

- Relase POWER pushbutton (out!).
- Remove 4 screws located on TB-Board to dismount the Memory-Board.
- Locate and identify ribbon cable connector ST3 on Memory-Board (ribbon cable originates from XY-Board).
- Remove connector ST3.
- Locate and identify ribbon cable connector ST2 on Memory-Board (ribbon cable originates from TB-Board).
- Remove connector ST2.
- Do not remove connector ST1.
- Remove Memory-Board from its former mounting position.

- Insert adaptor cables for connectors ST2 and ST3 to enable STOR. operation with Memory-Board outside the oscilloscope.
- Locate and identify RAM (IC12) on Memory-Board.
- Remove the RAM from the socket.
- Insert EPROM 205-2 in the RAM socket.
- Press POWER pushbutton.
- Press STOR, pushbutton.
- Press SINGLE pushbutton.
- Set timebase switch to 50 ms/div.
- Now 3 horizontal lines should be visible.
- Locate and identify VR5 on Memory-Bord.
- Adjust VR5 (Y-out symmetry) to move the middle line to graticule center.

#### 35) VR2100: Y-out sensitivity.

- Operate oscilloscope as under the conditions of item 34).
- Locate and identify VR2100 on XY-Board.
- Adjust VR2100 to move the first line to the upmost and the third line to the lowest graticule line.
- If necessary move the second line to the graticule center again, using VR5.
- Release POWER pushbutton (out!).
- Disconnect adaptor cables.
- Remove HAMEG EPROM.
- Reinsert RAM.
- Release SINGLE pushbutton (out!).
- Release STOR. pushbutton (out!).
- Reinstall the Memory-Board in its original position and fix it with 4 screws.
- Reconnect ribbon cable connectors to ST2 and ST3.

Rem.: Adjustment of VR2100 affects the Y-Gain Adjustment of CH I and CH II in analog mode.

#### 36) VR1: Y-Position CH I.

- Release STOR. pushbutton (out!).
- Switch input coupling CH I to GD.
- Move baseline with Y-POS. I control to the graticule center.
- Press STOR. pushbutton (in!).
- Locate and identify VR1 on Memory-Board.
- Adjust VR1 to move baseline again to the graticule center.

#### 37) VR3: Y-Position CH II.

- Release STOR. pushbutton (out!).
- Press CH I/II pushbutton.
- Switch input coupling CH II to GD.
- $-\,$  Move baseline with Y-POS. II control to the graticule center.

- Press STOR. pushbutton (in!).
- Locate and identify VR3 on Memory-Board.
- Adjust VR3 to move baseline to the graticule center.

#### 38) VR2: Y-Position in ADD-Mode.

- Release STOR. pushbutton (out!).
- Press DUAL pushbutton and move baselines CH I and CH II to the graticule center using Y-POS. I and Y-POS! II controls.
- Release DUAL pushbutton (out!).
- Press ADD pushbutton and move baseline with Y-POS. I to the graticule center.
- Locate and identify VR2 on Memory-Board.
- Press STOR. pushbutton and move baseline with VR2 to graticule center.
- Release ADD pushbutton (out!).


## 39) VR201: Y-Gain CH I adjustment.


- See item 10) in analog section.


### 40) VR221: Y-Gain CH II adjustment.

- See item 12) in analog section.


Subject to change without notice CP7 205-2

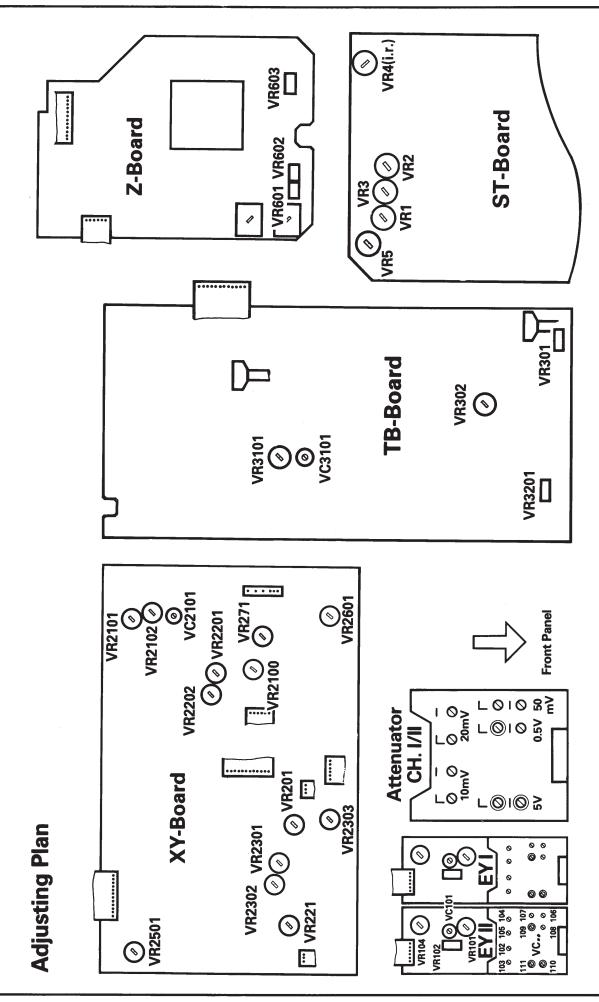


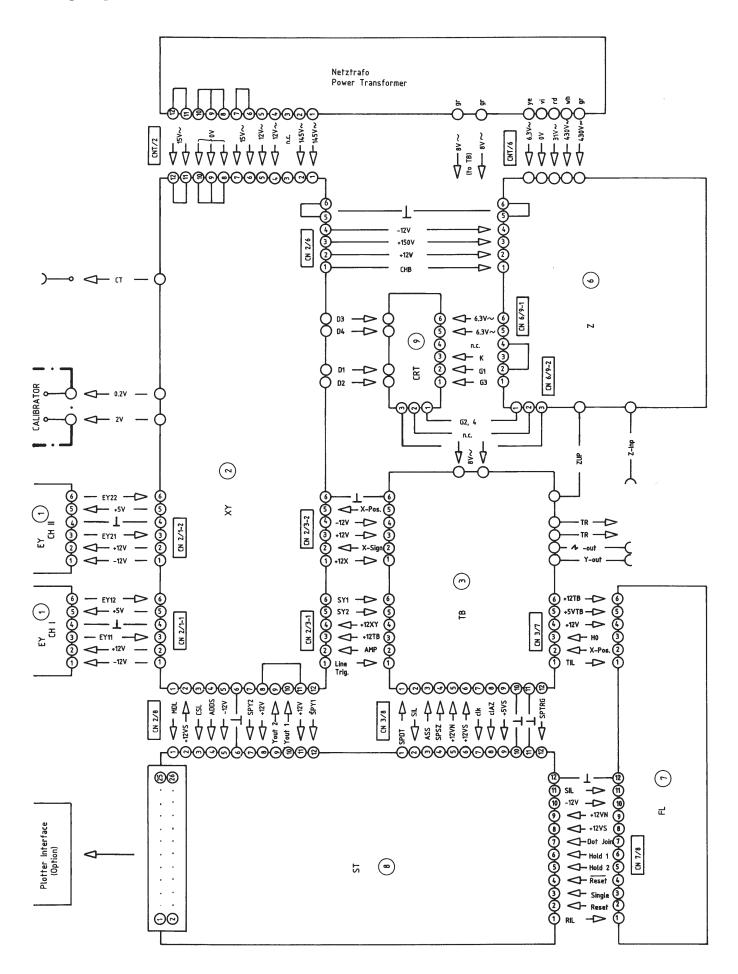


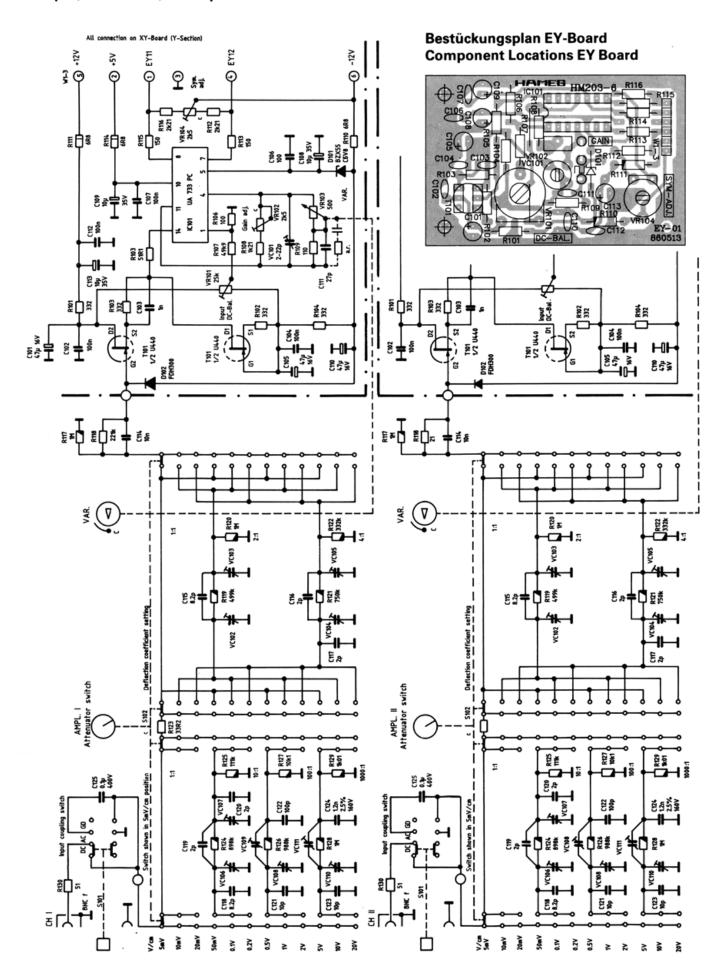



# (XY-Board)

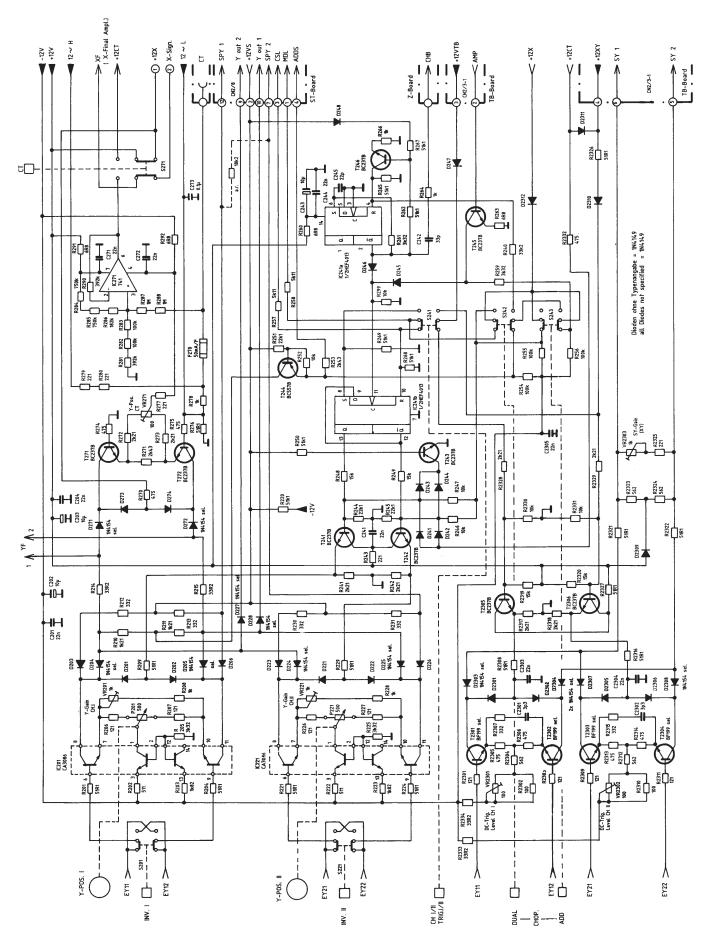


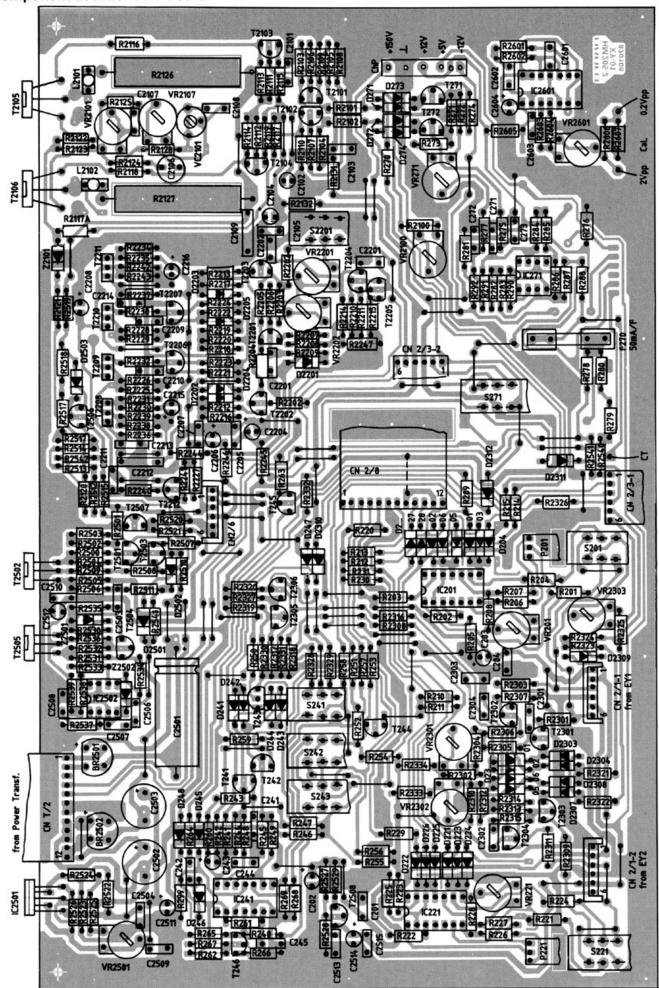


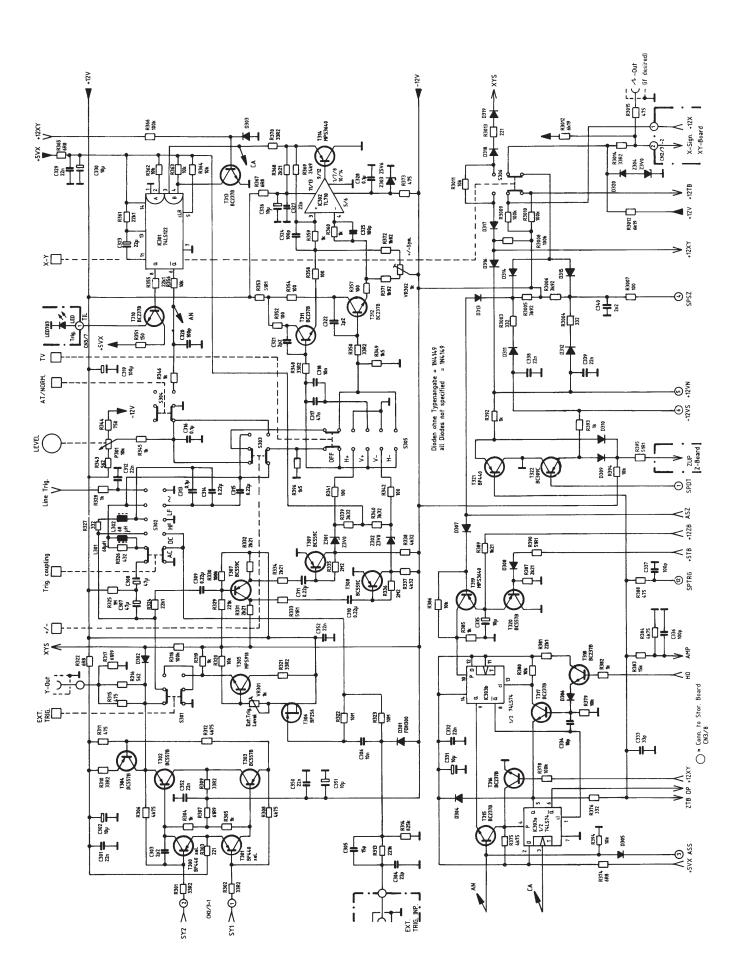

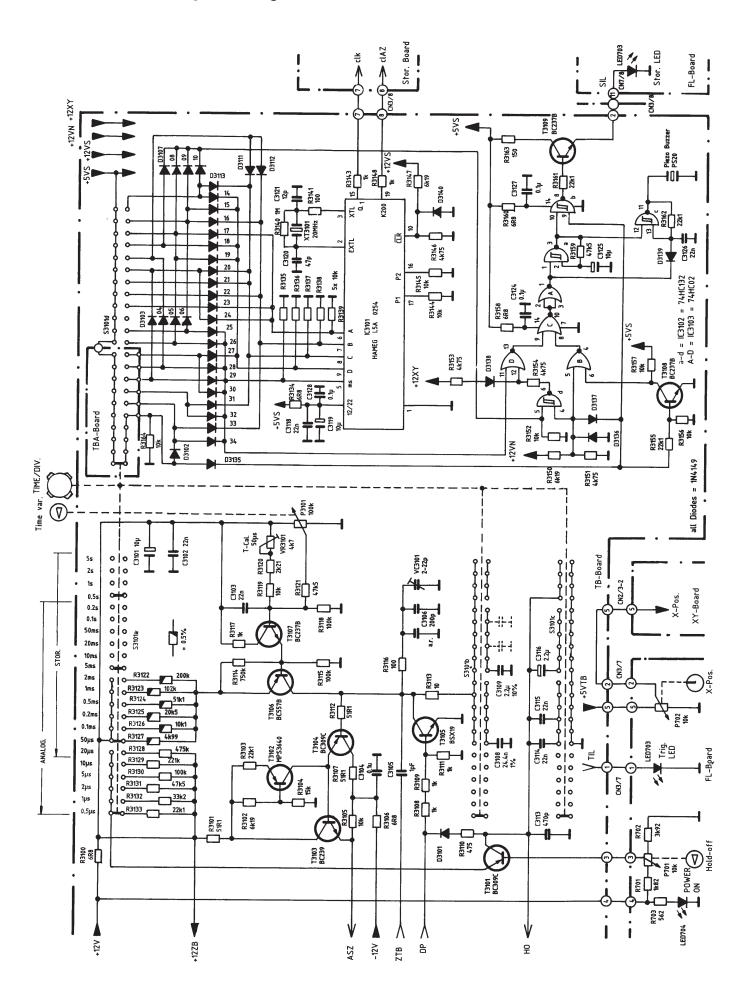


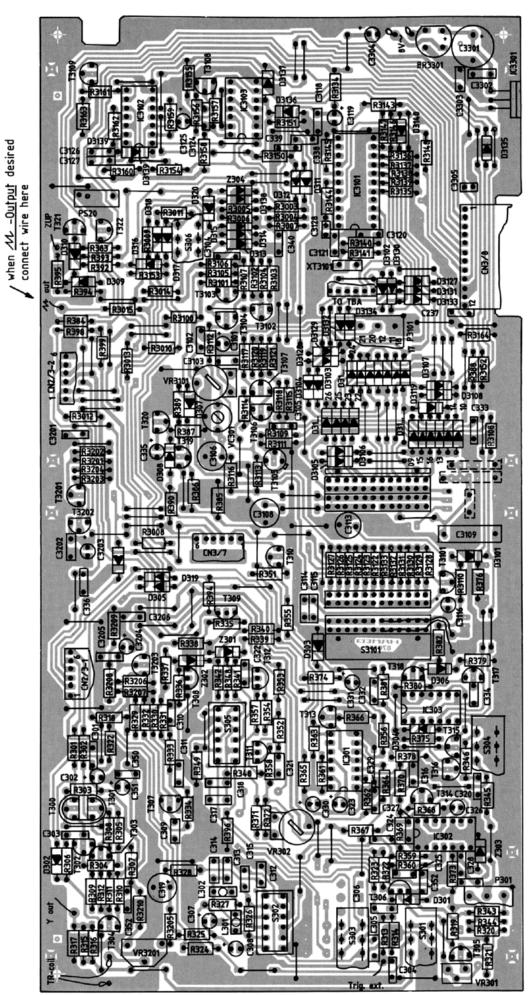


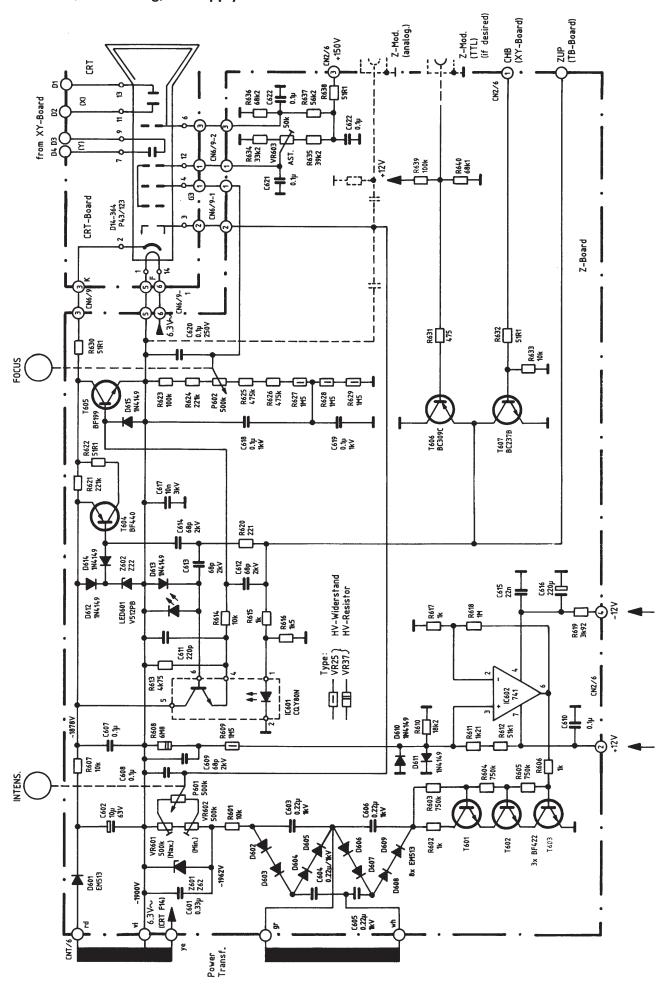


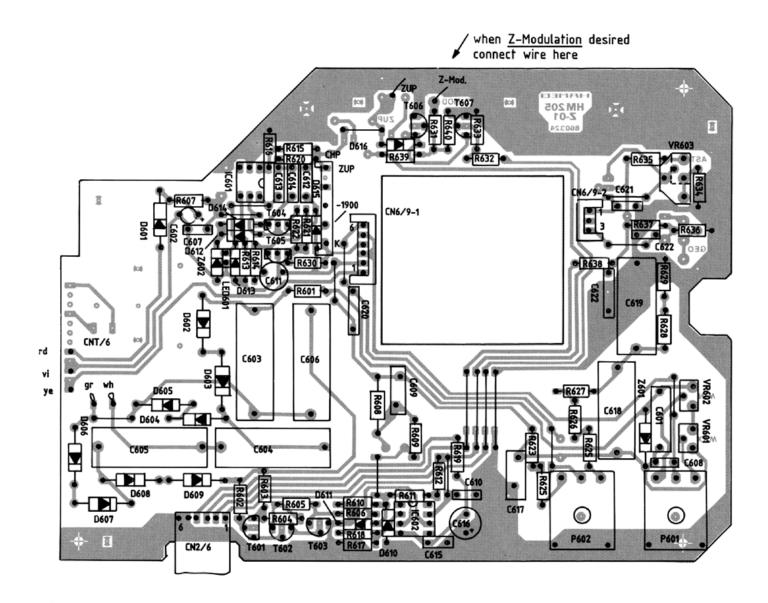


CRT-Board HM205-2

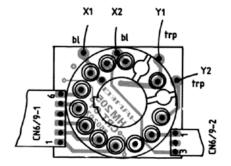

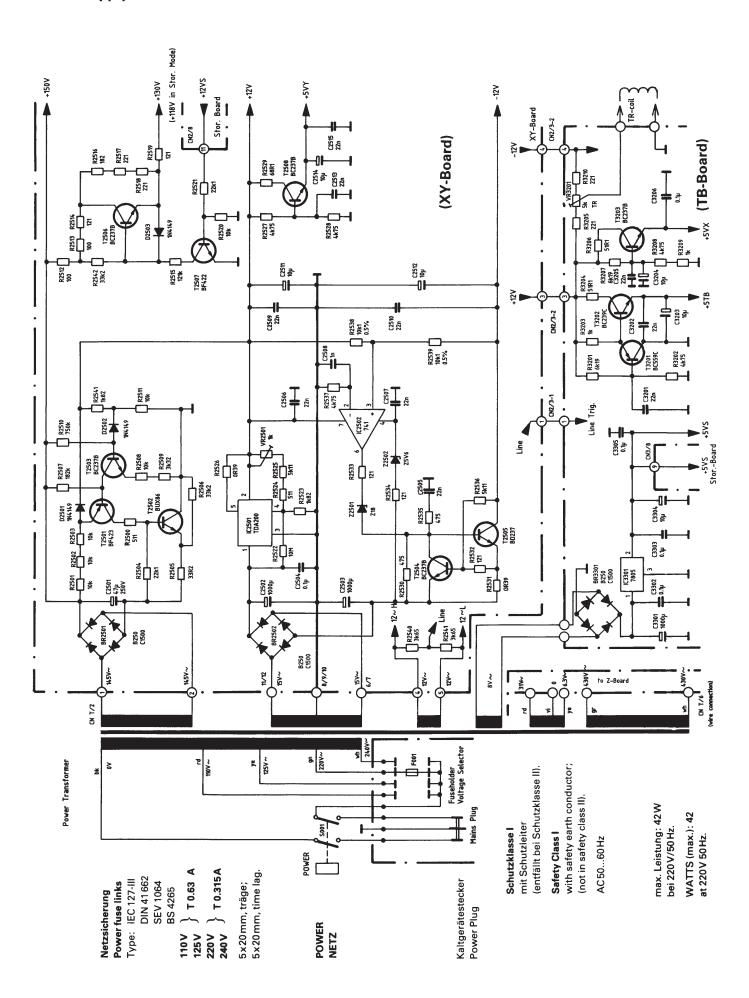


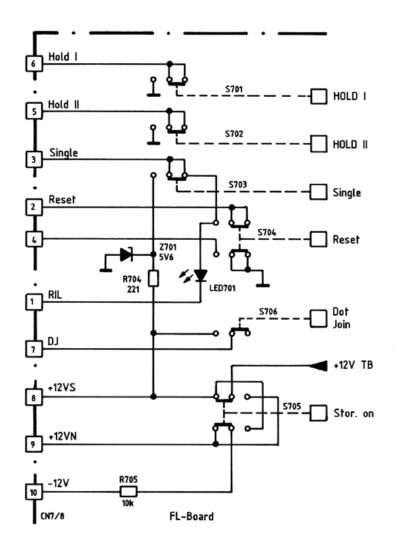



# Bestückungsplan FL-Board Component Locations FL Board

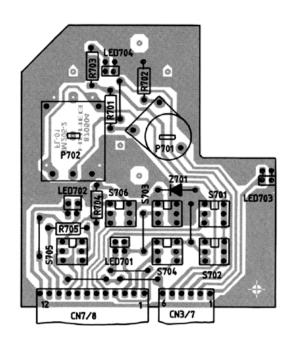

# Calibrator (XY-Board)

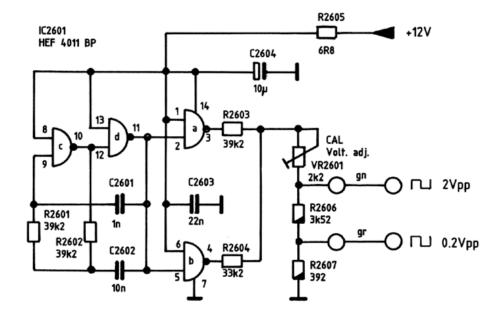

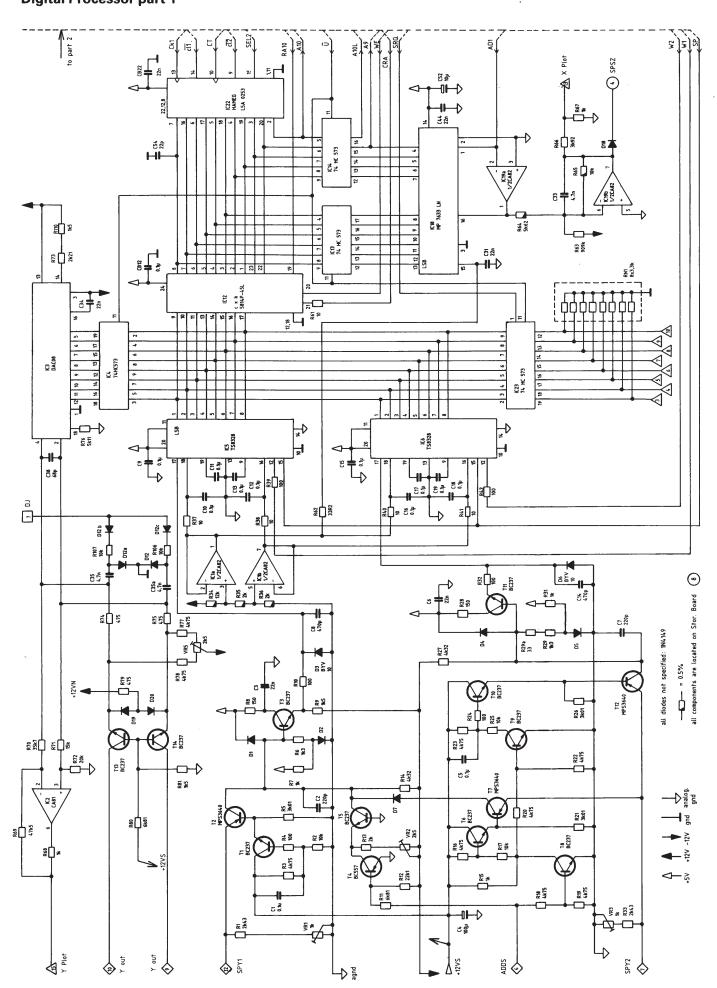

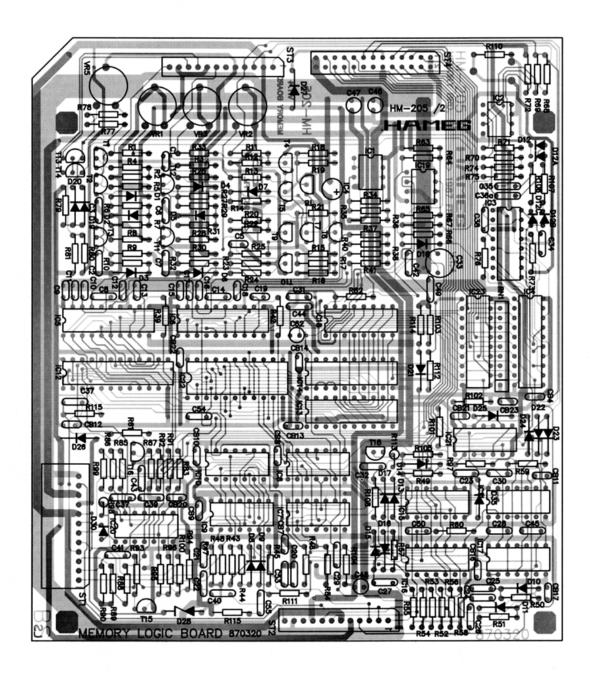

# HAMEG

Oscilloscopes

Multimeters

**Counter Timers** 

**Power Supplies** 

**Calibrators** 

Signal

Generators

Check Point Testers West Germany

**HAMEG GmbH** 

Kelsterbacher Str. 15-19 6000 FRANKFURT am Main 71 Tel. (069) 67805-0 · Telex 413866 Telefax (069) 6780513

#### France

HAMEG S.a.r.I.

5-9, av. de la République 94800-VILLEJUIF Tél. (1) 46778151 ; Télex 270705 Telefax (1) 47263544

## Spain

HAMEG S.A.

Villarroel 172-174 08036 BARCELONA Teléf. (93) 2301597 / 2301100

Telex 99816 · Telefax (93) 321 2201

Great Britain

HAMEG LTD

74-78 Collingdon Street LUTON, Bedfordshire LU1 1RX Tel. (0582) 413174 · Telex 825484 Telefax (0582) 456416

United States of America

HAMEG, Inc.

88-90 Harbor Road PORT WASHINGTON, NY 11050 Phone (516) 883-3837 Telex (023) 497-4606 Telefax (516) 883-3894

HAMEG, Inc.

Hancock Business Park 4790 Wesley Drive ANAHEIM, CA 92807 Phone (714) 970-9575 Telefax (714) 970-0328

Printed in West Germany