# **TEKTRONIX®**

T932/T935

AF: 35 MHz

LAB PORTABLE

OSCILLOSCOPE

INSTRUCTION MANUAL

Tektronix, Inc. P.O. Box 500 Beaverton, Oregon 97077

Serial Number \_\_\_\_\_

#### WARRANTY

All TEKTRONIX instruments are warranted against defective materials and workmanship for one year. Any questions with respect to the warranty should be taken up with your TEKTRONIX Field Engineer or representative.

All requests for repairs and replacement parts should be directed to the TEKTRONIX Field Office or representative in your area. This will assure you the fastest possible service. Please include the instrument Type Number or Part Number and Serial Number with all requests for parts or service.

Specifications and price change privileges reserved.

Copyright © 1975, 1977 by Tektronix, Inc., Beaverton, Oregon. Printed in the United States of America. All rights reserved. Contents of this publication may not be reproduced in any form without permission of Tektronix, Inc.

U.S.A. and foreign Tektronix products covered by U.S. and foreign patents and/or patents pending.

TEKTRONIX is a registered trademark of Tektronix, Inc.

## **TABLE OF CONTENTS**

		Page		WING SERVICING INSTRUCTIONS ARE	
IST OF ILLUSTRATIONS		ii	FOR QUALIF	QUALIFIED SERVICE PERSONNEL ONLY	
				Page	
LIST OF TAE	BLES	iii	SECTION 4	ADJUSTMENTS	
SECTION 1	SPECIFICATIONS  Standard Accessories			Limits and Tolerances	
SECTION 2	OPERATING INSTRUCTIONS		SECTION 5	SERVICE INFORMATION	
	Operating Voltage Safety Information Function of Controls, Connectors and Indicators. A. Display B. Vertical Amplifier C. Time Base First Time Operation Probe Compensation Applications	2-1 2-1 2-5 2-6 2-7 2-10	oconion 3	Cabinet Removal	
05051031.0			SECTION 6	REPLACEABLE ELECTRICAL PARTS	
SECTION 3	PERFORMANCE CHECK		SECTION 7	CIRCUIT DESCRIPTION AND DIAGRAMS	
	Limits and Tolerances  Test Equipment Required	3-1	SECTION 8	REPLACEABLE MECHANICAL PARTS	
	Preliminary Procedure Performance Check Procedure		CHANGEIN	FORMATION	

REV. A JUL 1977

## LIST OF ILLUSTRATIONS


Fig. No.	Description	Page No.
1-1	T932/T935 35 MHz Oscilloscopes	iv
1-2	T932/T935 Dimensional Drawing.	1-3
2-1	Display front panel controls and connectors.	2-2
2-2	Rear Panel Controls and Connectors	2-3
2-3	Left side of cabinet.	
2-4	Bottom of cabinet	
2-5	Vertical Amplifier front panel controls and connectors	
2-6	Time Base front panel controls and connectors	2-6
2-7	Probe compensation	
2-8	Effects of probe compensation	
2-9	Peak-to-peak voltage measurement.	2-12
2-10	Instantaneous voltage measurement	
2-11	Phase difference	
2-12	Time Duration.	
2-13	Risetime.	
2-14	Time duration between points on a waveform.	
2-15	Delayed sweep magnification	
•	2011,01 01100p mag	2 10
3-1	Deflection accuracy check test setup.	3-3
3-2	Bandwidth check test setup	
3-3	X Gain, Triggering, and Z axis check setup	. 3-5
3-4	Timing accuracy and delay time check test setup.	
3-5	TV trigger check test setup.	3-10
4.4	Device and a division of head in	
4-1	Power supply adjustment locations.	
4-2	Interface board adjustment locations.	
4-3	Vertical amplifier adjustment locations.	
4-4	Display of correct attenuator compensation (idealized).	
4-5	Time Base adjustment locations.	. 4-11
5-1	Troubleshooting Chart	. 5-4
5-2	Color code for resistors and capacitors.	
5-3	Lead configuration for semiconductor devices.	
5-4	Multi-connector holder orientation.	
5-5	Pin connector replacement.	
5-6	Shaft-knob removal.	. 5-12 . 5-12
5-0 5-7	Circuit board locations (left side).	
5-7 5-8	, ,	
J <b>-</b> 0	Circuit board locations (right side)	. 5-16
7-1	Lead configuration for semiconductor devices	
7-2	A12. Horizontal circuit board.	
7-3	Foldback circuit action.	
7-4	Timing Diagram: Sweep generator and sweep gate.	
7-5	Timing Diagram: Sweep generator and sweep gate.	
	mining Plagram Offoop gonorator and Sweep date,	

ii

## **LIST OF TABLES**

Table No.		Page
1-1 1-2 1-3	Electrical Environmental Physical	1-1 1-3 1-3
3-1 3-2 3-3	Test Equipment	3-1 3-3
3-3 3-4 4-1	A and B Sweep Timing Accuracy  Magnified Sweep Timing Accuracy  Test Equipment	3-7 3-8 4-2
5-1	Power Supply Tolerance	5-3
7-1	Attenuator and Gain Switching Sequence	IV.1

REV. A JUL 1977

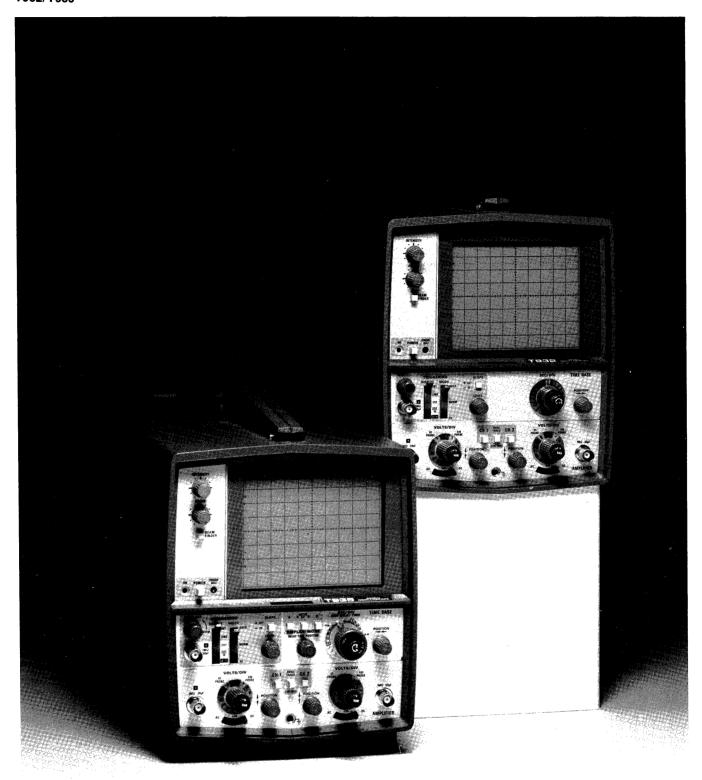

1983-1

Fig. 1-1. T932/T935 35 MHz Oscilloscopes.

### **SPECIFICATIONS**

This manual includes instructions for both the T932 and the T935 portable oscilloscopes. The T932 is a 35 MHz, dual trace oscilloscope and the T935 is a 35 MHz, dual trace oscilloscope capable of delayed sweep operation. The Vertical Amplifier provides calibrated deflection factors from 2 mV to 10 V/div. The Time Base provides stable triggering over the full bandwidth of the Vertical Amplifier and provides calibrated sweep rates from 0.5 s/div to 0.1  $\mu$ s/div. A variable X1 to X10 magnifier extends the maximum sweep rate to 20 ns/div.

The following instrument specifications apply over an ambient temperature range of 0 to  $\pm 45^{\circ}$  C unless otherwise indicated. The adjustment procedures in Section 4, when performed completely, allow the T932 and the T935 to meet the electrical specifications listed in Table 1-1.

TABLE 1-1
Electrical

Characteristic	Performance Requirement
	A. DISPLAY
Probe Adjust Output	
Voltage (0°C to +40°C)	Approximately 0.5 V.
Repetition Rate	Approximately 1 kHz.
Z-Axis Input	
Sensitivity	5 volt signal causes a noticeable decrease in intensity.
Signal Polarity	Positive going from ground.
Usable Frequency Range	Dc to 5 MHz.
Maximum Input Voltage	30 V (dc + peak ac) 30 V p-p at 1 kHz or less.
Input Impedance	Approximately 10 kΩ.
Power Source	Approximately to K12.
Line Voltage Ranges (ac,rms)	
120 V Range	HI—108 to 132 V. LO—90 to 110 V.
240 V Danga	HI—216 to 250 V.
240 V Range	LO—198 to 242 V.
Line Frequency	50 to 60 Hz.
Maximum Power	36 W, 0.35 A at 60 Hz, 120 V line.
Consumption	00 VV, 0.00 A at 00 Tiz, 120 V IIIIe.
CRT Display	
Display Area	8 x 10 cm.
Trace Rotation	Adequate to align trace with
Range	horizontal center line.
Standard Phosophor	P31.
Nominal Accel- erating Potential	12,400 V.

Characteristic	Performance Requirement
B. VE	RTICAL AMPLIFIER
Deflection Factor	
Range	2 mV/div to 10 V/div; 12 steps in a 1-2-5 sequence.
Accuracy	
+20° C to +30° C	Within 3%.
0°C to +45°C	Within 4%.
Uncalibrated (VAR) Range	Continuously variable between settings. Extends deflection factor to at least 25 V/div (at least 2.5:1).
Frequency Response	
Bandwidth	Dc to at least 35 MHz (5 division reference signal centered vertically from a 25 Ω source with VOLTS/DIV VAR control in calibrated detent).
Chopped Mode Repetition Rate	Approximately 250 kHz.
Input Resistance	Approximately 1 MΩ.
Maximum Input Voltage	
DC Coupled	400 V (dc + peak ac). 800 V (p-p ac) at 1 kHz or less.
AC Coupled	400 V (dc + peak ac). 800 V (p-p ac) at 1 kHz or less.

TABLE 1-1 (cont)

Characteristic	Performance Requirement	Characteristic	Performance Requirement
C	. TIME BASE	C. 1	ΓΙΜΕ BASE (cont)
Sweep Rate			
Calibrated Range (T932)	0.5 s/div to 0.1 μs/div; 21 steps in a 1-2-5 sequence. Variable X1 to X10 magnifier extends maximum sweep rate to 10 ns/div	X-Y Operation  Deflection  Factor	
Calibrated Range (T935) A Sweep	imum sweep rate to 10 ns/div.  0.5 s to 0.1 μs/div; 21 steps in a 1-2-5 sequence. Variable X1 to X10 magnifier extends max-	Variable Magnifier X10 X1	Approximately 100 mV/div.
B Sweep	imum sweep rate to 10 ns/div.  50 ms to 0.1 μs/div; 18 steps in a 1-2-5 sequence. Variable X1 to X10 magnifier extends maximum sweep rate to 10 ns/div.	X-Axis Band- width Input Resistance	Approximately 1 V/div.  Dc to at least 2 MHz with 10 div reference signal.  Approximately 1 MΩ.
Accuracy	Accuracy specification applies over center 8 divisions. Exclude first 50 ns of sweep for both magnified and unmagnified sweep	Input Capacitance Triggering	Approximately 30 pF.
+20° C to +30° C	rates and anything beyond the 100th magnified division.	Sensitivity	0.5 div internal or 100 mV external from 2 Hz to 2 MHz, increasing to 1.5 div internal or 150 mV external at 35 MHz.
Unmagnified  Magnified  0° C to +45° C	Within 5%.	TV Sync	Composite sync 1 div internal or 100 mV external (approximately 2.3 div or 230 mV of composite video).
Unmagnified Magnified Variable	Within 6%. 10:1 (In the X10 position,	External Trigger	
Magnifier	the sweep speed is one tenth of the SEC/DIV switch setting.).	Maximum Input Voltage	400 V (dc + peak ac). 800 V (p-p ac) (1 kHz or less).
Delay Time Position Range (T935)	0.5 to 10 div.	Input Resistance Input Capacitance Level Range	Approximately 1 MΩ. Approximately 30 pF.
Delay Time Jitter (T935)	One part or less in 10,000 (0.01%) of one tenth of the SEC/DIV switch setting.	EXT EXT 10	+0.5 V to -0.5 V. +5 V to -5V.

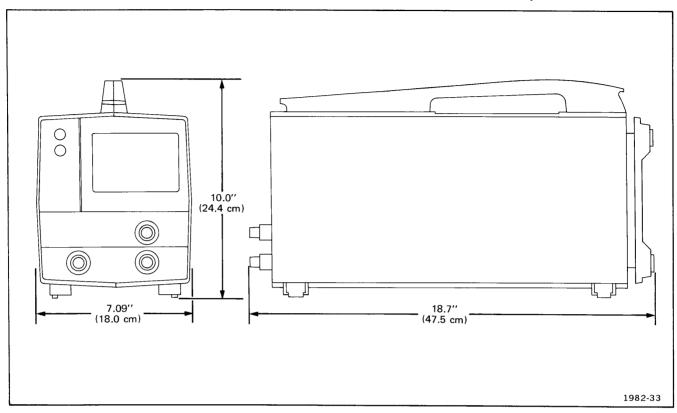


Fig. 1-2. T932/T935 dimensional drawing.

TABLE 1-2
Environmental

−55°C to +75°C.
0°C to +45°C.
To 50,000 ft.
To 15,000 ft. Maximum operating
temperature decreases 1°C/1,000
ft. above 5,000 ft.

TABLE 1-3

#### **Physical**

Characteristic	Performance Requirement
Weight	
With Panel	15.5 lbs. (7.0 kg).
Cover, Acces-	
sories and Ac-	
cessory Pouch	
Without Panel	15.0 lbs. (6.8 kg).
Cover, Acces-	
sories and Ac-	
cessory Pouch	
Overall Dimensions	Refer to Fig. 1-2.

### **STANDARD ACCESSORIES**

1 Instruction Manual

070-1983-01

2 Probes

010-6108-03

#### RECOMMENDED ACCESSORIES

#### NOTE

The following accessories have been selected from our catalog specifically for your instrument. They are listed as a convenience to help you meet your measurement needs. For detailed information and prices, refer to a Tektronix Products Catalog or contact your local Tektronix Field Representative.

#### **COVERS**

**FRONT COVER:** Protects the instrument front panel during transport or storage and provides storage for small accessories (probes, cables, etc.). Made of blue plastic to match the instrument case.

Order ..... 016-0340-00

**PROTECTIVE WATERPROOF COVER:** Blue vinyl cover provides protection for the entire oscilloscope during transport or storage.

Order ..... 016-0361-00

#### **STAND**

**PORTABLE STAND:** The Portable Stand sits on the floor and holds the instrument at an angle to provide easy viewing and access. Also provides storage for small accessories (probe, cables, etc.).

#### **PROBES**

**P6101 GENERAL PURPOSE 1X VOLTAGE PROBE:** Input capacitance is 54 picofarads (plus input capacitance of oscilloscope).

Order ..... 010-6101-03

**P6062A SWITCHABLE 1X-10X VOLTAGE PROBE:** Provides full bandwidth capabilities of T900-series instruments. Can be compensated to match the vertical input capacitance.

**P6009 GENERAL PURPOSE 100X VOLTAGE PROBE:** Provides full bandwidth capabilities of T900-series instruments. Can be compensated to match the vertical input capacitance.

Order ..... 010-0264-01

**P6015 GENERAL PURPOSE 1000X VOLTAGE PROBE:** Provides full bandwidth capabilities of T900-series instruments. Can be compensated to match the vertical input capacitance.

**P6021 AC CURRENT PROBE:** Provides a bandwidth from 120 Hz to the upper bandwidth of T900-series instruments. Spring-loaded slide opens (up to 0.150 inches) to allow measurement of current without breaking the circuit under test.

Order ..... 015-0140-02

#### **CAMERAS**

C-5A Option 3 Camera: Provides graticule illumination with xenon flash lamp powered by two AA penlight batteries. Recommended for, and molded to fit all bench version T900-series instruments. Fixed focus, fixed aperfure f16 lens with 0.67 or 0.85 user adjustable magnification. Mechanical shutter with speeds of 1/5 to 1/25 s, plus bulb and time.

### **OPERATING INSTRUCTIONS**

#### **OPERATING VOLTAGE**

The T932 and T935 will operate from either a 120 V or 240 V ac, 50 to 60 Hz nominal power input source. To avoid equipment damage, the power input range selector switch (120 V or 240 V) and HI/LO switch on the bottom of the instrument must be set to positions which include the value of the applied power input voltage. The POWER indicator lamp will blink when the applied power input voltage varies more than about 10% from the value for which the switches are set.

#### WARNING

To avoid electric shock and equipment damage, do not attempt to replace the internal fuse or change the settings of the power input range selector switch or HI/LO switch. This must be done by qualified service personnel only.

#### SAFETY INFORMATION

The T932 and T935 operate from a single-phase power source with one of the current-carrying conductors (the neutral conductor) at ground (earth) potential. Operation from power sources where both current-carrying conductors are live with respect to ground (such as phase-to-phase on a 3-wire system) is not recommended, since only the line conductor has over-current (fuse) protection within the instrument.

The T932 and T935 each have a 3-wire cord with a 3-terminal polarized plug for connection to the power source and safety-earth. The ground terminal of the plug is directly connected to the metal parts of the instrument. For electric-shock protection, insert this plug in a mating outlet with a safety-earth contact.

## FUNCTIONS OF CONTROLS, CONNECTORS. AND INDICATORS

Before you turn the instrument on, read this portion of the manual to familiarize yourself with the controls, connectors, and indicators.

#### A. DISPLAY

#### Front Panel (Fig. 2-1)

- 1) INTENSITY—Adjusts the brightness of the crt display. Set for the lowest visible display to prolong crt life.
- **2 FOCUS**—Adjusts for optimum spot size and definition.
- 3 **BEAM FINDER**—Locates off-screen displays. Compresses the crt display to within the graticule area independently of the position control or applied signals.

To locate an off-screen display:

- a. Set the vertical POSITION and INTENSITY controls to midrange and rotate the horizontal POSITION control clockwise.
- b. If a display or dot still is not visible, press BEAM FINDER and hold in. A compressed display or dot should appear. If not, increase the INTENSITY until a display appears.

If a dot or vertical line appears, the sweep is not triggered. Set the trigger MODE switch to AUTO to obtain a display. Use the vertical and horizontal POSITION controls to move the display near the center of the graticule. Release the BEAM FINDER button and adjust the trigger level control for a stable display.

If a compressed display appears, adjust the VOLTS/DIV switch and the horizontal and vertical POSITION controls for a stable display.

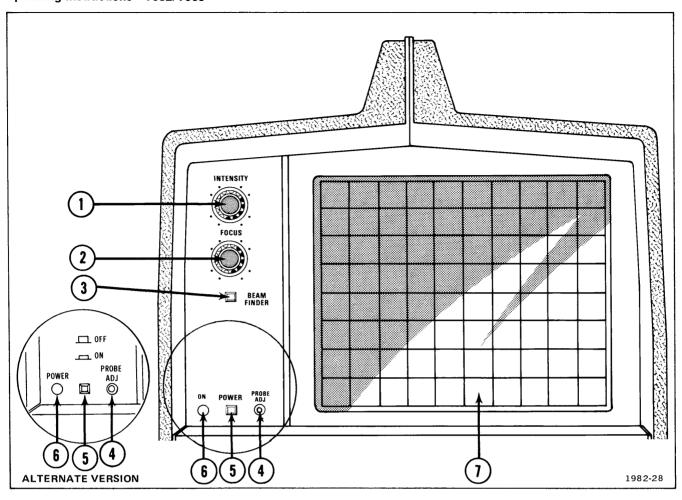


Fig. 2-1. Display front panel controls and connectors.

- 4 PROBE ADJ—Provides a square-wave output of approximately 0.5 V (negative-going with respect to ground) at approximately 1 kHz, for compensating voltage probes.
- 5 ON-OFF—Push-push switch turns the instrument power on (button in) and off (button out). (In some versions this switch is labeled POWER.)
- 6 POWER—Indicator lamp lights when ON-OFF button is depressed to ON (in) position and applied power input voltage does not vary more than about 10% from the value indicated by the 120 V/240 V and HI/LO voltage selector switch settings. When applied power input voltage varies more than about 10% (either high or low) from the selected value, the lamp will blink. (In some versions this lamp is labeled ON.)
- (1) Internal graticule—Eliminates parallax. Risetime, amplitude, and measurement points are indicated at the left edge of the graticule.

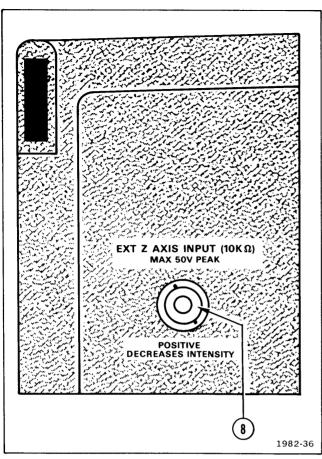


Fig. 2-2. Rear panel controls and connectors.

#### Rear Panel (Fig. 2-2)

8 EXT Z-AXIS IN—BNC connector for applying signals to intensity modulate the crt display. Signals must be time-related to the display for a stable display.

#### Left Side of Cabinet (Fig. 2-3)

- 9 ASTIG—Screwdriver adjustment used with FOCUS control to obtain a well-defined display. Requires little or no adjustment once set.
- TR ROT—Trace rotation screwdriver adjustment. Aligns trace with the horizontal graticule lines.

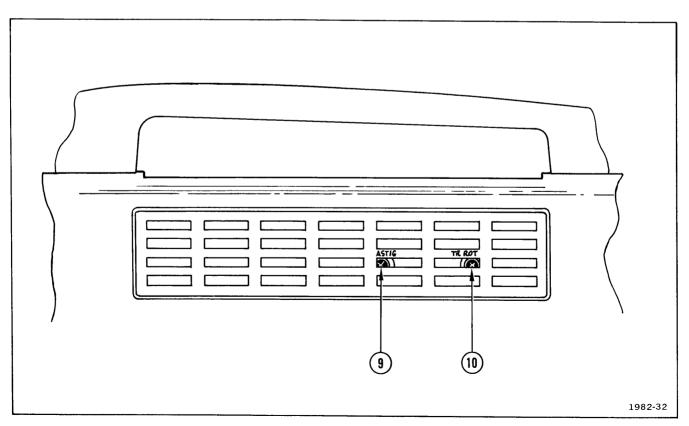


Fig. 2-3. Left side of cabinet.

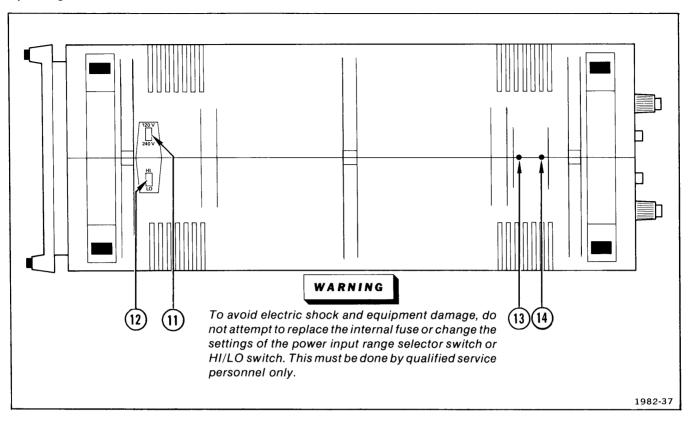


Fig. 2-4. Bottom of cabinet.

#### **Bottom of Cabinet (Fig. 2-4)**

- 11) 120 V/240 V—Screwdriver actuated switch selects either 120 V or 240 V nominal power input voltage.
  - WARNING

To avoid electric shock and equipment damage, do not attempt to change the power input range selector switch, HI/LO switch, or internal fuse. This must be done by qualified service personnel only.

- (12) HI/LO—Screwdriver actuated switch selects either high or low nominal line-voltage regulating range: LO selects 100 V or 220 V and HI selects 120 V or 240 V.
- (13) CH 1 DC BAL—Screwdriver adjustment. When properly adjusted, prevents trace shift when switching between adjacent positions of the CH 1 VOLTS/DIV switch.
- (14) CH 2 DC BAL—Screwdriver adjustment. When properly adjusted, prevents trace shift when switching between adjacent positions of the CH 2 VOLTS/DIV switch.

#### **B. VERTICAL AMPLIFIER**

#### Front Panel (Fig. 2-5)

- 1) VOLTS/DIV—Selects the vertical deflection factor in a 1-2-5 sequence (VAR control must be in detent position to obtain the indicated deflection factors). Read the correct deflection factor for a 1X probe from the 1X position and a 10X probe from the 10X position.
- 2 VAR—Provides continuously variable uncalibrated deflection factors between the calibrated steps of the VOLTS/DIV switches. Extends the maximum deflection factor to 25 V/div in the 10 V position. Detent position provides calibrated VOLTS/DIV deflection factors.
- (3) Input Coupling—Selects the method of coupling the input signal to the vertical input signal amplifier.

AC: Signals are coupled capacitively. Any dc signal component is blocked. Low frequencies are attenuated (3 dB down at about 1 Hz using a 10X probe). Ac coupling causes tilting of square waves below about 1 kHz.

GND: Grounds the input of the vertical amplifier to provide a ground reference display. Connects the input signal to ground through the input coupling capacitor and a 1 M $\Omega$  resistor to allow the input coupling capacitor to be precharged by the input signal.

DC: All components of the input signal are passed to the vertical amplifier.

- 4 Channel 1 or Y Input—Connector for applying an external signal to the vertical deflection system. Provides the Y input in the X-Y mode when CH 1 vertical mode button is in.
- 5 Channel 2 Input—Connector for applying an external signal to the vertical deflection system.
- **6 POSITION**—Controls the vertical position of the crt display.

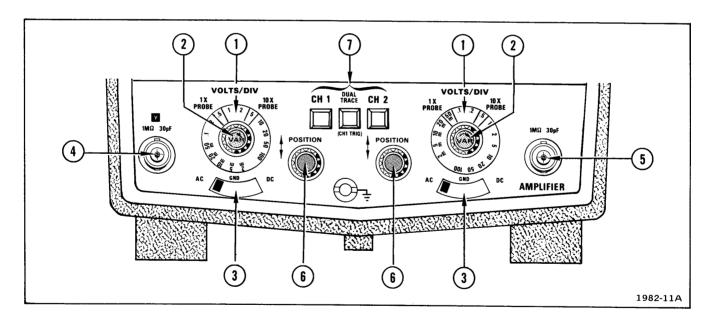


Fig. 2-5. Vertical Amplifier front panel controls and connectors.

**REV. A JUL 1977** 

#### Operating Instructions—T932/T935

Vertical Mode—Selects the vertical amplifier operating mode.

CH 1: Displays only signals applied to the CH 1 input connector. This button must be latched in for X-Y operation.

CH 2: Displays only signals applied to the CH 2 input connector.

DUAL TRACE: Displays CH 1 and CH 2 input signals alternately. Chop or Alternate mode is selected automatically by the SEC/DIV switch. For SEC/DIV switch settings of 1 ms and slower, Chop is selected. For settings of .5 ms and faster, Alternate is selected. In DUAL TRACE mode, the trigger signal is derived from CH 1. When the DUAL TRACE and CH 2 buttons are locked in at the same time, the trigger signal comes from CH 2 (instead of CH 1) while DUAL TRACE signals are displayed.

#### C. TIME BASE

#### Front Panel (Fig. 2-6)

(1) **SOURCE**—Selects the source of the trigger signal.

INT: Uses a sample of the signal displayed on the crt as a trigger signal in the CH 1 or CH 2 modes. In DUAL TRACE mode, the trigger signal is obtained from CH 1. If CH 2 and DUAL TRACE buttons are both latched in, channel 2 is the trigger source.

LINE: Uses a sample of the power-line frequency as a trigger signal.

EXT: Permits triggering on signals applied to the X (external trigger) input connector. External trigger signals must be time-related to the displayed signal for a stable display.

EXT  $\div$  10: External trigger signal is attenuated by a factor of 10.

X-Y: Permits x-y display. X (horizontal) input is through the X input connector. Y (vertical) input is normally through the CH 1 or Y input connector (Vertical Mode CH 1 button must be latched in). For special applications, the Y input may be obtained from the CH 2 input connector (CH 2 button latched in), or from both CH 1 and CH 2 (DUAL TRACE button latched in).

MODE—Selects the operating mode for the trigger circuit.

AUTO: With the proper LEVEL control setting, the sweep can be triggered by trigger signals with repetition rates above about 20 Hz. In the absence of an adequate trigger signal, or when the LEVEL control is misadjusted, the sweep free runs to provide a reference display.

NORM: Permits triggering on displayed signal. In the absence of an adequate trigger signal, or when the LEVEL control is misadjusted, the sweep does not run and no display is visible. Setting SOURCE to LINE position provides an adequate trigger signal.

TV: Permits triggering on television signals. Triggers on TV field when SEC/DIV switch is set at .1 ms or slower. Triggers on TV line when SEC/DIV switch is set at 50  $\mu$ s or faster. Set the SLOPE switch to +OUT for sync-positive input signals and to -IN for sync-negative input signals.

3 SLOPE—Selects the positive- or negative-going slope of the trigger waveform.

 $\pm$ OUT: The sweep can be triggered from the positive-going portion of a trigger signal.

-IN: The sweep can be triggered from the negative-going portion of a trigger signal.

4 LEVEL—Selects the amplitude point on the trigger signal at which the sweep is triggered. Usually adjusted for the desired display after trigger SOURCE and SLOPE have been selected.

5 X (External Trigger)—Provides input for external trigger signals or for X axis signals in the X-Y mode.

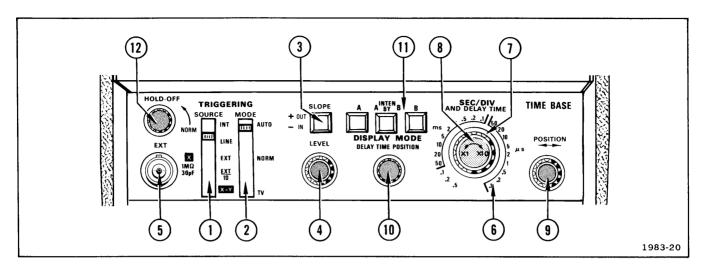


Fig. 2-6. Time Base front panel controls and connectors.

- 6 A SEC/DIV AND DELAY TIME (clear plastic skirt)— Selects calibrated sweep rates in a 1-2-5 sequence for the A Sweep Generator and the basic delay time for delayed sweep operation. The X1-X10 variable control must be in the X1 detent position (fully counterclockwise) to read calibrated sweep rates directly from the A SEC/DIV knob. Knob numerals with μ underneath indicates sweep rates in microseconds/division, numerals with m underneath indicate sweep rates in milliseconds/division, positions with no symbol under the numerals indicate sweep rates in seconds/division.
- (7) B SEC/DIV (black inner knob, pull out and turn to unlock)—Selects calibrated sweep rates in a 1-2-5 sequence for the B Sweep (delayed sweep) Generator. (B sweep runs at 50 ms in the 0.1, 0.2, and 0.5 positions of the B SEC/DIV switch.)
- 8 X1-X10—Provides calibrated sweep rates when in X1 (fully ccw) detent position. Increases the horizontal gain by a factor of 10, providing at least 10 ns/div sweep rate in the X10 detent position (fully cw) with the SEC/DIV knob set to .1 μs.
- **9 POSITION**—Controls the horizontal position of the crt display.
- (10) **DELAY TIME POSITION**—Provides variable sweep delay from 0.5 to 10.0 times the setting of the A SEC/DIV switch. To find the delay time, multiply the number of divisions between the start of the sweep and the start of the intensified zone times the A SEC/DIV switch setting.

DISPLAY MODE—Determines the mode of operation for the horizontal deflection system.

A: The Sweep Generator provides the horizontal deflection. The A SEC/DIV switch determines the sweep rate, and the B Sweep Generator is inoperative.

A INTEN BY B: The A Sweep Generator provides the horizontal deflection and the B Sweep Generator produces an intensified zone after the delay time. The DELAY TIME POSITION control determines the location of the intensified zone. The duration of the intensified zone is determined by the B SEC/DIV switch.

B (delayed): The B Sweep Generator provides the horizontal deflection and the B SEC/DIV switch determines the sweep rate. The A Sweep Generator continues to run, and the start of the B sweep is delayed by a time determined by the A SEC/DIV switch.

12) HOLD-OFF—Varies the hold-off time between sweeps. Allows triggering on aperiodic signals (such as complex digital words). Turn the control fully counterclockwise for the shortest sweep hold-off time and fully clockwise for the longest sweep hold-off time.

#### FIRST TIME OPERATION

Use this procedure when you turn the instrument on for the first time. It checks that most functions of the instrument are operational. This procedure requires a probe. (10X probes are supplied as standard accessories.) Read the descriptions of the controls and connectors to familiarize yourself with them before you turn your instrument on.

#### Operating Instructions—T932/T935

A complete performance check is given in Section 3.

Only the control settings that affect the check being performed are given. Do not move the control settings unless instructed to do so. Start at the beginning and follow the sequence of steps through to the end. If you skip a step or start in the middle of a check, you won't be able to tell whether a particular function is operational.

First, check that the Power Input Voltage Selector switch and the HI/LO Range Selector switch on the bottom of the cabinet are set for your power input voltage. In the United States the Power Input Voltage Selector switch is normally set for 120 V and the HI/LO Range Selector switch is normally set for HI at the factory. In Europe the Power Input Voltage Selector switch is normally set for 240 V and the HI/LO Range Selector is normally set for LO.



Your instrument may be damaged if it is operated from a 240 V power input voltage source with the Power Input Voltage Selector switch set for 120 V. Only qualified service personnel should change the Power Input Voltage Selector switch to a different range.

The POWER indicator lamp will blink when the applied power input voltage varies more than about 10% (either high or low) from the value selected by the 120 V/240 V and HI/LO selector switches.

If the 120 V/240 V and HI/LO switches are properly set, connect the power cord plug to the power source and turn the instrument on. Set the trigger MODE to AUTO, and SOURCE to INT.

You should get a trace on the crt screen. If you don't, push the BEAM FINDER button and hold it in while increasing the INTENSITY (clockwise). A trace, or one or two bright dots, indicates that the instrument is operating. You may also have to adjust the FOCUS and POSITION controls.

#### **Vertical Positioning and Horizontal Operation**

1. Set: LEVEL Mid-range
A SEC/DIV 1 ms
X1-X10 X1 (fully ccw detent)
Vertical Mode CH 1

Vertical Mode CH DISPLAY MODE A

- 2. Check that the CH 1 POSITION control moves the trace off the top and bottom of the screen. Leave the trace between one and two divisions above the center line. If the trace does not extend across the screen, move the horizontal POSITION control until it does
- 3. Set the vertical mode switch for CH 2. Check that the CH 2 POSITION control moves the trace off the top and bôttom of the screen. Leave the trace between one and two divisions below the center line.
- 4. Set the vertical mode switch for DUAL TRACE. You should have two traces on the crt screen—one above the center line and one below.
- 5. Check that there are two traces at every setting of the SEC/DIV switch from .1  $\mu$ s to .5 s.
- 6. Set the SEC/DIV switch to 1 ms and the Vertical Mode switch to CH 1.

#### **FOCUS and INTENSITY Operation**

Adjust the FOCUS and the INTENSITY controls for a fine line at a comfortable brightness level.

#### Trace Rotation and Vertical Input Operation

Most of the remaining checks require applying the PROBE ADJ signal to the inputs.

#### NOTE

In the following steps, if you use a 1X probe or coaxial cable, use the 1X PROBE window for VOLTS/DIV settings. If you use a 10X probe (as supplied), use the 10X probe window.

The PROBE ADJ output is a square wave. An incorrectly compensated probe will distort the top and bottom of the signal but will not affect the checks.

If you want to compensate a probe, refer to the Probe Compensation information after this procedure.

1. Set: CH 1 VOLTS/DIV .2
CH 1 VAR

.2 V (10X window) Detent (fully cw)

CH 1 AC-GND-DC

GND

- 2. Using the CH 1 POSITION control, align the trace with the center graticule line. If the trace is tilted, adjust the trace rotation (control marked TR ROT on the left-cabinet side) for the best alignment of the trace with the center graticule line.
- 3. Connect the probe to the CH 1 input and hold the probe tip against the PROBE ADJ connector. Set the CH 1 AC-GND-DC switch to DC. You should have approximately 2.5 divisions of display. The square wave will be below the center line. This display may or may not be stable.
- 4. Set the CH 1 AC-GND-DC switch to AC. The display should be approximately equidistant above and below the center line.

#### NOTE

If you cannot obtain a display, remove the probe tip from the PROBE ADJ connector. Touch the tip to your hand. Change the VOLTS/DIV setting if necessary to get a display. The display should be a thick (vertically) trace. A thickening trace indicates that the probe is picking up the power line radiation that your body normally picks up. If this occurs, the vertical is usable but the PROBE ADJ output isn't. If the thickening does not occur, you have a defective probe or other instrument malfunction.

- 5. Rotate the CH 1 VAR control through its range. The display amplitude will decrease. Leave the VAR control fully clockwise (detent)-maximum display amplitude.
  - 6. Set: Vertical Mode

CH<sub>2</sub> CH 2 VOLTS/DIV

.2 V

CH 2 VAR

Detent (fully cw)

CH 2 AC-GND-DC

**GND** 

**CH 2 POSITION** 

To align trace with center

graticule line

- 7. Connect the probe to the CH 2 input and hold the probe tip against the PROBE ADJ connector.
- 8. Set the CH 2 AC-GND-DC switch to DC. The square wave will be below the center line.
- 9. Set the CH 2 AC-GND-DC switch to AC. The square wave will be approximately equidistant above and below the center line.

- 10. Rotate the CH 2 VAR control through its range. The display amplitude will decrease. Leave the VAR control fully clockwise (in detent).
  - 11. Return the vertical mode switch to CH 1.

#### X-Axis Operation

- 1. Connect the probe to the X input (if a 1X probe is available, use it, if a 10X probe is used, rotate the X1-X10 control fully clockwise) and hold the probe tip against the PROBE ADJ connector.
- 2. Set the SOURCE switch to X-Y, and reduce INTEN-SITY as necessary. Adjust the horizontal POSITION control as needed to locate the display. You should see 2 dots separated by a distance dependent on the X1-X10 control setting. Return X1-X10 to X1 (fully counterclockwise detent).

#### X-Y and Dual Trace Operation

This mode is usable with SEC/DIV settings of 1 ms or slower. Set controls and connect signals as you would for independent X-Y or Dual Trace operation.

#### **Astigmatism Operation**

1. Set: SOURCE

INT

- 2. Connect the probe to the CH 1 input and hold the probe tip against the PROBE ADJ connector. Rotate the LEVEL control for the most stable display. Adjust the FOCUS control for a display with the sharpest edges both horizontally and vertically over the entire screen. Vertical trace thickness is typically more than the horizontal but the edges should be equally sharp. This is easier to observe at the "corners" of the signal.
- 3. Set the INTENSITY and FOCUS controls for the best defined display. If the display still appears out of focus, use a small screwdriver to adjust the ASTIG control (through left cabinet side) for the best defined display.
- 4. Rotate the INTENSITY control fully clockwise. The display will get brighter and defocus (get thicker). Return the INTENSITY control to the preferred brightness level.

#### **Ext Z Axis Input Operation**

A positive-going signal will cause a decrease in intensity, and a negative-going signal will increase the intensity level of a low-intensity trace.

#### Operating Instructions—T932/T935

#### X1-X10 and Trigger Operation

- 1. Note a display with several cycles of the PROBE ADJ waveform. Rotate the X1-X10 control fully clockwise to X10 and note that only one cycle is visible. Return control to X1.
- 2. Set the SEC/DIV to .1 ms. Position the start of the display (left edge) on the screen. Set the SLOPE button to the +OUT position. Rotate the LEVEL control through its range. The start of the display will move along the positive (rising) slope of the signal until the display becomes unstable.
- 3. Set the LEVEL control for a stable display that starts at about the middle of the slope.

Now set the SLOPE button to —IN position. Rotate the LEVEL control through its range. The start of the display will move along the negative (falling) slope of the signal until the display becomes unstable.

- 4. Set the LEVEL control for a stable display that starts at about the middle of the slope.
- 5. Set the MODE switch to NORM. The display should start on the negative slope. In the NORM mode the display will disappear if the LEVEL control is improperly adjusted.
- 6. Set the SLOPE button to +OUT position. The display should start on the positive slope.
- 7. Disconnect the probe from the instrument. Set the CH 1 AC-GND-DC switch to GND. The trace should disappear.
- 8. Set the SOURCE switch to LINE. If a trace doesn't appear, adjust the LEVEL control until a trace appears.

9. Set: SOURCE

INT

MODE

AUTO

CH 1 AC-GND-DC

AC

**Delay Time Position and Delayed Sweep Operation** 

1. Set: DISPLAY MODE

A INTEN BY B

**DELAY TIME** 

POSITION

Fully ccw

- 2. The start of the intensified portion of the sweep should be within 0.5 div of the start of the sweep.
- 3. Rotate the DELAY TIME POSITION control until it is fully clockwise. The start of the intensified portion of the sweep will move until it is at least 10 divisions from the start of the sweep.
- 4. Set DISPLAY MODE to B. The display will consist of only the intensified portion or delayed (B Sweep) portion.
- 5. Return the DISPLAY MODE to A INTEN BY B and turn the DELAY TIME POSITION control fully counterclockwise.
- 6. Set the B SEC/DIV switch to .1  $\mu$ s. The intensified portion will reduce to a dot. Rotating the DELAY TIME POSITION control will move the dot across the screen.

7. Set: SOURCE

INT

MODE

AUTO

CH 1 AC-GND-DC

AC

Your instrument is now ready to operate when you apply a signal to the CH 1 input.

#### PROBE COMPENSATION

An incorrectly-compensated probe is one of the greatest sources of operator error. Most attenuator probes are equipped with adjustments to ensure optimum measurement accuracy.

Some probes are compensated by using a small, insulated screwdriver through an access hole to the compensation adjustment. Other probes may have an adjustment system similar to that shown in Fig. 2-7.

Probe compensation is accomplished as follows:

Set the appropriate VOLTS/DIV switch to .1 V, the AC-GND-DC switch to DC, and the SEC/DIV switch to 2 ms.

Connect the probe to the vertical input and touch the probe tip to the PROBE ADJ connector. Notice a display similar to those shown in Fig. 2-8. Adjust the probe for the correct compensation. The effects of incorrect probe compensation on three types of signals are illustrated in Fig. 2-8.

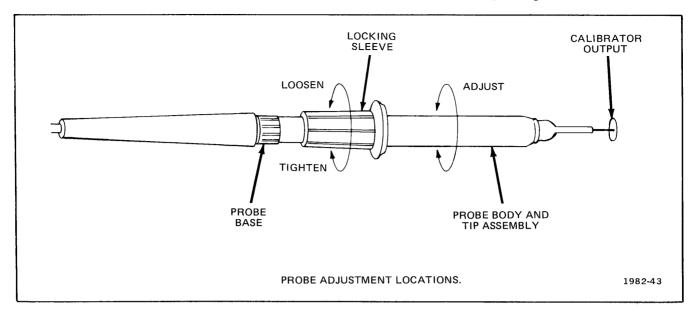


Fig. 2-7. Probe compensation.

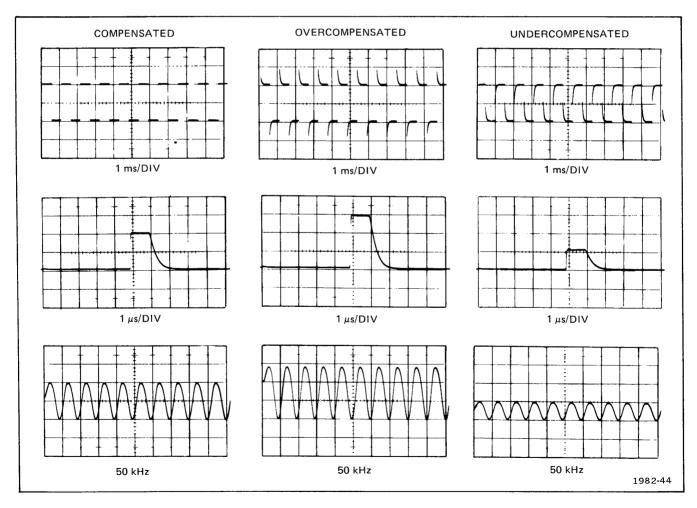


Fig. 2-8. Effects of probe compensation.

#### **APPLICATIONS**

#### Peak-to-Peak Amplitude Measurements

To measure the amplitude of a signal, mulitply the vertical deflection (in divisions) by the VOLTS/DIV switch setting. (Use VOLTS/DIV window to match attenuation factor of probe used.)

#### Example:

The display amplitude is three divisions (see Fig. 2-9) and the VOLTS/DIV switch is set to .5 V. Substituting the given values:

Amplitude = 3 divisions X 0.5 volt/division = 1.5 V p-p

#### Instantaneous Amplitude Measurement

The following procedure explains how to measure the amplitude of any point on a waveform with respect to ground.

- 1. Set the AC-GND-DC switch to DC.
- 2. Apply the signal to be measured to one of the vertical input connectors. Set the Vertical Mode switch to select the channel used.
  - 3. Obtain a stable display, centered vertically.
- 4. Set the AC-GND-DC switch to GND. Adjust the trace to some reference line (see Fig. 2-10).
- 5. Set the AC-GND-DC switch to DC. If the waveform appears above the reference line, the voltage is positive. If the waveform appears below the reference line, the voltage is negative.

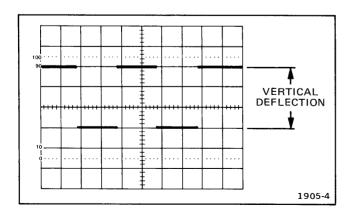


Fig. 2-9. Peak-to-peak voltage measurement.

6. Measure the vertical difference (in divisions) between the reference line and the desired point on the waveform and multiply by the VOLTS/DIV switch setting.

#### Example:

The vertical difference is 5 divisions (see Fig. 2-10). The VOLTS/DIV switch is set to 10 mV. The waveform appears above the reference line.

Substituting the given values:

$$\frac{\text{Instantaneous}}{\text{Voltage}} = \frac{5}{\text{divisions}} \times \frac{10 \text{ mV}}{\text{divisions}} = 50 \text{ mV}$$

$$\frac{\text{Instantaneous}}{\text{Voltage}} = +50 \text{ mV}$$

#### **Dual Trace Phase Difference Measurement**

Phase comparison between two signals of the same frequency can be accomplished using the dual-trace feature. This method of phase difference measurement can be used up to the frequency limit of the vertical system. It is also more accurate and easier to use than the X-Y method. To make the comparison, use the following procedure:

- 1. Set the AC-GND-DC switches to AC.
- 2. Set the Vertical Mode switch to DUAL TRACE. Position both traces to the graticule horizontal centerline.
- 3. Connect the reference signal to the Channel 1 input connector and the comparison signal to the Channel 2 input connector. Use coaxial cables or probes which have equal time delay to connect the signals to the input connectors.

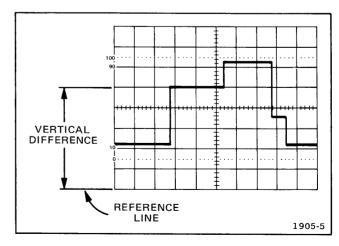


Fig. 2-10. Instantaneous voltage measurement.

- 4. Set the Channel 1 and Channel 2 VOLT/DIV switches and the Channel 1 and Channel 2 VAR controls so that the displays are equal and about five divisions in amplitude.
- 5. Set the SEC/DIV switch to a sweep rate which displays about one cycle of the reference waveform.
- 6. Turn the variable (X1-X10) SEC/DIV control until one cycle of the reference signal (Channel 1) occupies exactly eight divisions between the first and ninth graticule lines (see Fig. 2-11). Each division of the graticule represents  $45^{\circ}$  of the cycle ( $360^{\circ} \div 8$  divisions =  $45^{\circ}$ /division).
- 7. Measure the horizontal difference between corresponding points on the waveforms.
- 8. Multiply the measured distance (in divisions) by 45°/division (sweep rate) to obtain the exact amount of phase difference.

#### Example:

Assume a horizontal difference of 0.6 division with a sweep rate of 45°/division as shown in Fig. 2-11.

Substituting the given values:

= 0.6 division X 45°/division

Phase Difference = 27°

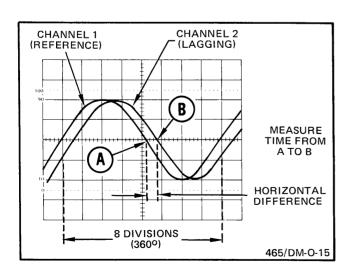


Fig. 2-11. Phase difference.

#### **Time Duration and Frequency Measurements**

To find the time duration between two points on a waveform, multiply the horizontal distance (in divisions) between the two points by the SEC/DIV switch setting. Frequency (in hertz) is the reciprocal of the time duration of one cycle (in seconds).

#### Example:

The horizontal distance measured is 8.3 divisions (see Fig. 2-12).

The SEC/DIV switch is set to 2 ms.

Substituting the given values:

 $^{\rm a}$ 16.6 ms = .0166 second.

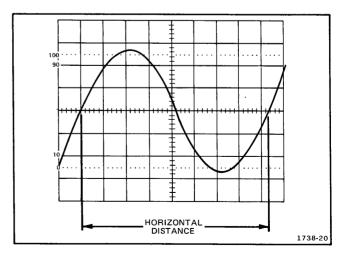


Fig. 2-12. Time duration.

#### Operating Instructions—T932/T935

#### **Risetime Measurements**

Risetime measurements are made in the same manner as time duration measurements, except the measurements are made between the 10% and 90% points of the waveform's amplitude (see percentage markings on the left edge of the graticule).

Use the following procedure to measure risetime:

- 1. Adjust the VOLTS/DIV and VAR controls for a display amplitude of exactly five divisions.
- 2. Adjust the vertical POSITION control so that the display bottom just touches the 0% graticule line and the display top just touches the 100% graticule line (see Fig. 2-13).
- 3. Measure the horizontal distance (divisions) between the 10% and 90% points on the waveform (point A to point B, Fig. 2-13).
  - 4. Use the following formula to find risetime:

#### **Examples:**

The horizontal distance between the 10% and 90% point on the waveform is five divisions with a SEC/DIV switch setting of 1  $\mu$ s.

Substituting the given values:

Risetime = 5 divisions X 1  $\mu$ s/division

Risetime =  $5 \mu s$ 

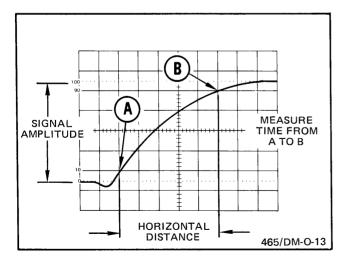


Fig. 2-13. Risetime.

#### A Intensified Differential Time Measurements

- 1. Set the A SEC/DIV switch and the horizontal POSITION control to locate both time measurement points within the graticule area (see Fig. 2-14).
  - 2. Set the DISPLAY MODE switch to A INTEN BY B.
- 3. Unlock the B SEC/DIV switch and rotate clockwise to obtain the shortest usable intensified zone.
- 4. Use the DELAY TIME POSITION (DTP) control to move the left edge of the intensified zone to just touch the first time measurement point (see Fig. 2-14, point A). Note the number of divisions between the start of the sweep and the start of the intensified zone.
- 5. Use the DTP control to move the left edge of the intensified zone to just touch the second time measurement point (see Fig. 2-14, point B). Note the number of divisions between the start of the sweep and the start of the intensified zone. Also note the number of divisions between point A and point B.
- 6. To find the Time Difference, multiply the number of divisions between point A and point B by the A SEC/DIV switch setting.

#### Example:

The A SEC/DIV switch was set to 2 ms and the B SEC/DIV switch was set to 0.1 ms. Point A is 8.4 divisions from point B. So the time difference is 8.4 x 2 ms = 16.8 ms.

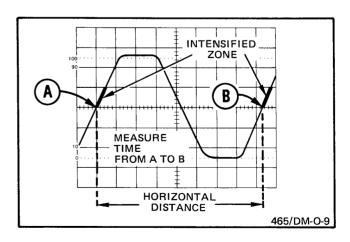


Fig. 2-14. Time duration between points on a waveform.

#### **Delayed Sweep Magnification**

The B Delayed mode can provide higher apparent sweep rate magnification than that provided by the X1-X10 control.

Magnified Sweep Starts After Delay. To determine the apparent magnification factor, proceed as follows:

- 1. Set the DISPLAY MODE switch to A INTEN BY B.
- 2. With the DELAY TIME POSITION control, move the left edge of the intensified zone to the left side of the portion of the A sweep display to be magnified.
- 3. Set the B SEC/DIV switch so just the portion of the A sweep display to be magnified is intensified (see Fig. 2-15A).
- 4. Set the DISPLAY MODE switch to B. The portion of the A sweep display that was intensified in step 3 is now displayed in magnified form (see Fig. 2-15B). The displayed sweep rate is determined by the B SEC/DIV switch. To calculate the apparent magnification factor, use the formula:

Apparent Agnification = A SEC/DIV switch setting B SEC/DIV switch setting

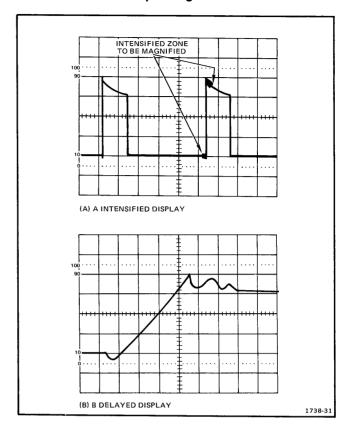


Fig. 2-15. Delayed sweep magnification.

<sup>4</sup>	

### PERFORMANCE CHECK

This procedure allows the basic performance specifications to be checked without removing the instrument covers. It is intended for use in incoming inspection to determine acceptability of newly purchased or recently calibrated instruments.

#### **LIMITS AND TOLERANCES**

#### **TEST EQUIPMENT REQUIRED**

Tolerances given are for the instrument under test and do not include test equipment error. Limits and tolerances in this check, are instrument specifications only if they are called out as performance requirements in the Specifications section.

You will need the test equipment listed in Table 3-1, or equivalent, to perform a complete Performance Check of the T932 or T935. The Specifications given for the equipment are the minimum necessary for accurate results.

TABLE 3-1
Test Equipment

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment
1. Amplitude Calibrator	Amplitude accuracy, within 0.5%; signal amplitude, 10 mV to 10 V; output signal, 1 kHz	Vertical Gain checks, X gain check.	a. Tektronix PG 506 Calibration Generator.*
	square wave.		b. Tektronix 067-0502-01 Calibration Fixture.
2. Sine-Wave Generator	Frequency, 50 kHz to above 35 MHz; output amplitude, variable from 0.5 to 5 V p-p; output impedance, 50 Ω; reference frequency, 50 kHz; amplitude accuracy, constant within 3% of reference frequency as output frequency changes.	Vertical Amplifier band- width checks, X bandwidth check. Triggering checks. Z axis input check.	<ul> <li>a. Tektronix SG 503 Leveled Sine-Wave Generator (with included precision cable).</li> <li>b. Tektronix Type 191 Constant Amplitude Signal Generator.</li> </ul>
3. Time-Mark Generator	Marker outputs, 10 ns to 0.5 s; marker accuracy within 0.5%; trigger output, 1 ms to 0.1 $\mu$ s, time coincident with markers.	Timing checks.	a. Tektronix TG 501 Time- Mark Generator.  b. Tektronix 2901 Time-Mark Generator.
4. Termination	Impedance, 50 $\Omega$ ; bnc connectors.	Signal termination.	a. Tektronix Part 011-0049-01.
5. Cable (3)	50 Ω impedance; bnc connectors.	Signal interconnection.	a. Tektronix Part 012-0057-01.
6. Dual Input Coupler	Connectors, bnc female to 2 bnc male.	Signal interconnection.	a. Tektronix Part 067-0525-01

<sup>\*</sup>Requires a TM 500 Series Power Module.

REV. A JUL 1977 3-1

TABLE 3-1 (cont)

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment
7. T Connector	Connectors, bnc.	Signal interconnection.	a. Tektronix Part 103-0030-00.
8. Adapter	Bnc female to bnc female.	Signal interconnection.	a. Tektronix Part 103-0028-00.
9. TV Source	Composite Sync, output at least 100 mV (or Composite video, output at least 230 mV).	TV SYNC trigger.	a. Any video source with the specified output, including a TV set.

#### PRELIMINARY PROCEDURE

Use the following steps to put your instrument into a basic operating mode before proceeding with the Performance Check. This procedure is the same for both the T932 and the T935, except where noted.

- 1. Check that the Power Input Voltage Selector switch and the HI/LO Range Selector switch on the bottom of the cabinet are set for your power input voltage. In the United States, the Power Input Voltage Selector switch is normally set for 120 V and the HI/LO Range Selector switch is normally set for HI at the factory. In Europe, the Power Input Voltage Selector switch is normally set for 240 V and the HI/LO Range Selector switch is normally set for LO. Only qualified service personnel should change the Power Input Voltage Selector switch to a different voltage range setting.
- 2. If the 120 V/240 V and HI/LO switches are properly set, connect the power cord plug to the power source and turn the instrument on. Connect test equipment to an appropriate power source and turn it on. Set the trigger MODE to AUTO, and SOURCE to INT.

#### NOTE

Allow a 20 minute warmup before starting the Performance Check Procedure. This instrument must have been adjusted at an ambient temperature of +25°C within 5°C to ensure that checks in this procedure will meet the specifications listed in Section 1.

3. Set the controls as follows:

#### **Vertical Amplifier**

Vertical Mode	CH 1
POSITION (both)	Midrange
VOLTS/DIV (both)	2 mV <sup>1</sup>
VAR (both)	Detent (cw)
CH 1 AC-GND-DC	DC
CH 2 AC-GND-DC	GND

#### **Time Base**

SEC/DIV	.5 ms
X1-X10 (variable)	X1 (unmagnified—
	fully ccw in detent)
SOURCE	INT
MODE	AUTO
POSITION	Midrange
SLOPE	+OUT
LEVEL	Midrange
HOLD-OFF	Fully ccw
DELAY TIME	
POSITION	Fully ccw
DISPLAY MODE	Α

4. The POWER ON light should be on and a baseline trace should be visible on the graticule. Adjust INTENSITY, FOCUS, and ASTIG controls for low intensity, well-defined trace.

The baseline should be parallel with horizontal graticule lines. If not, adjust R472, TR ROT (trace rotation), in the left side panel until the trace aligns with the horizontal graticule lines.

This ends the preliminary procedure.

<sup>1</sup>Unless otherwise stated, use the 1X PROBE window for VOLTS/DIV settings throughout the Performance Check Procedure.

#### PERFORMANCE CHECK PROCEDURE

#### 1. CH 1 and CH 2 Deflection Accuracy

- a. Connect test equipment as shown in Fig. 3-1 (use appropriate POSITION control as needed to center the display within the graticule area).
- b. CHECK—Deflection accuracy for CH 1 according to Table 3-2 within 3% (+20°C to +30°C).

TABLE 3-2
Deflection Accuracy

VOLTS/DIV (1X PROBE WINDOW)	Amplitude Calibrator Output	Vertical Deflection (divisions)	±3% Tolerance (divisions)
2 mV	10 mV	5	4.85 to 5.15
5 mV	20 mV	4	3.88 to 4.12
10 mV	50 mV	5	4.85 to 5.15
20 mV	.1 V	5	4.85 to 5.15
.2 V	1 V	5	4.85 to 5.15
2 V	10 V	5	4.85 to 5.15

c.	Set:	CH 1 AC-GND-DC	GND
		CH 2 AC-GND-DC	DC
		Vertical Mode	CH 2
		CH 2 POSITION	As needed

- d. CHECK—Deflection accuracy for CH 2 according to Table 3-2 within 3% (+20°C to +30°C).
  - e. Set amplitude calibrator to 0.1 volt.

#### 2. CH 1 and CH 2 VAR (Variable) Volts/Div Range

- a. Set CH 1 and CH 2 VOLTS/DIV to 20 mV.
- b. CHECK—Display amplitude reduces from five divisions to less than two divisions with CH 2 VAR control turned fully counterclockwise.

c. Set: Vertical Mode CH 1
CH 1 AC-GND-DC DC
CH 2 AC-GND-DC GND

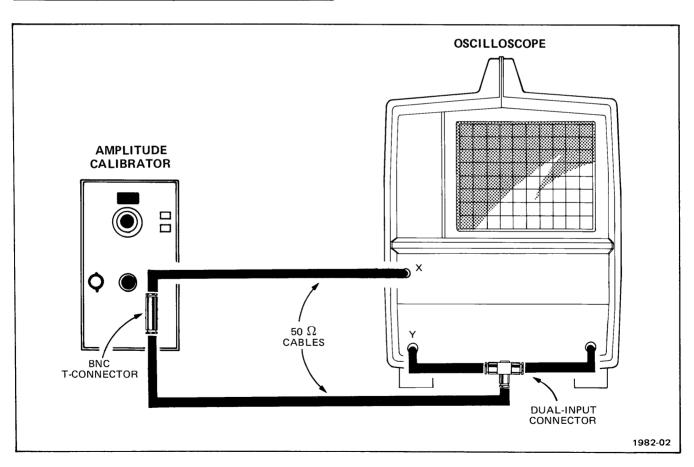


Fig. 3-1. Deflection accuracy check test setup.

#### Performance Check—T932/T935

- d. CHECK—Display amplitude reduces from 5 divisions to less than 2 divisions with CH 1 VAR control turned fully counterclockwise.
  - e. Return both VAR controls to detent position.
  - f. Disconnect test equipment.

#### 3. Channel 1 Bandwidth

- a. Connect test equipment as shown in Fig. 3-2.
- b. Set: VOLTS/DIV (both) 2 mV
  AC-GND-DC (both) DC
  LEVEL Fully cw
  POSITION (all) As required
- c. Set generator frequency to 50 kHz (reference) and adjust output amplitude for a 5 division display.

- d. Set generator frequency to 35 MHz.
- e. CHECK—Display amplitude is at least 3.5 divisions.

#### 4. Channel 2 Bandwidth

- a. Set: Vertical Mode
- CH<sub>2</sub>
- b. Move the sine-wave generator output (through 50  $\Omega$  cable and 50  $\Omega$  termination) from CH 1 input connector to CH 2 input connector.
- c. Set generator frequency to 50 kHz (reference) and adjust output amplitude for a 5 division display.
  - d. Set generator frequency to 35 MHz.
  - e. CHECK—Display amplitude is at least 3.5 divisions.
  - f. Disconnect test equipment.

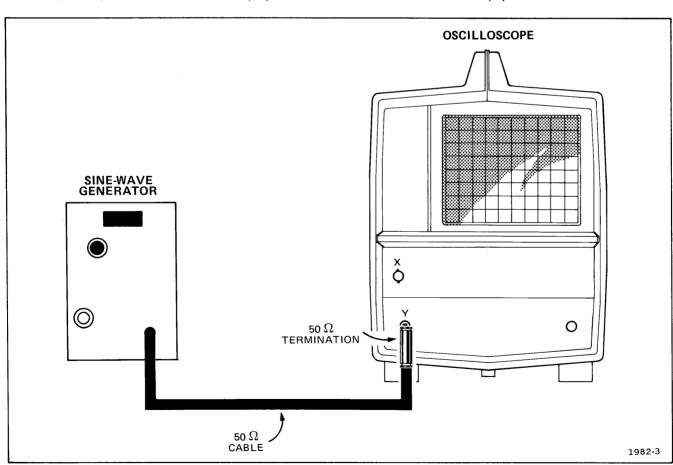


Fig. 3-2. Bandwidth check test setup.

#### 5. X-Axis Gain

a. Set: Vertical Mode CH 1 VOLTS/DIV (CH 1) .1 V

VOLTS/DIV (CH 1) .1 V SOURCE X-Y

X1-X10 X10 (fully cw)
INTENSITY For visible display

SEC/DIV 0.1 ms

b. Connect test equpment as shown in Fig. 3-3 and set generator output amplitude to .5 V, and frequency to  $50\ kHz$ .

c. CHECK—Horizontal deflection between 3.5 and 6.5 divisions (set horizontal POSITION as needed to view start and end of display).

d. Disconnect test equipment.

#### 6. X-Axis Bandwidth

a. Connect sine-wave generator though 50  $\Omega$  cable and 50  $\Omega$  termination to X (EXT) input.

- b. Set generator frequency to 50 kHz (reference) and adjust output amplitude for 10 divisions (about 1 volt) of horizontal deflection.
  - c. Set generator frequency to 2 MHz.
- d. CHECK—Display amplitude is at least seven divisions.
  - e. Disconnect test equipment.
  - f. Set SOURCE to INT; MODE to NORM.

#### NOTE

When making trigger checks, adjust the LEVEL control, POSITION controls, and INTENSITY as needed for a stable visible display, unless instructed otherwise.

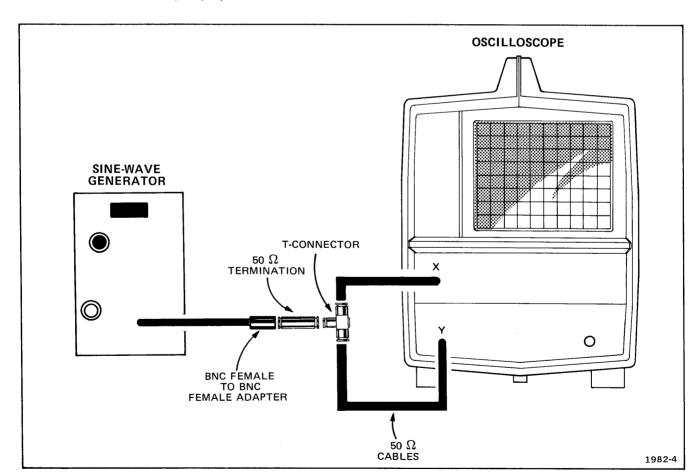


Fig. 3-3. X Gain, Triggering, and Z-axis input check test setup.

#### Performance Check—T932/T935

#### 7. 2 MHz Internal Triggering

a. Connect test equipment as shown in Fig. 3-3.

b. Set: CH 1 VOLTS/DIV SEC/DIV 1 V .1 *μ*s

X1-X10

X1 (fully ccw

detent)

c. Set sine-wave generator frequency for 2 MHz and adjust output amplitude for a 0.5-division display.

d. CHECK—Stable display can be obtained in both the +OUT and -IN positions of the SLOPE switch for both AUTO and NORM.

#### 8. 2 MHz External Triggering

a. Set: CH 1 VOLTS/DIV .1 V

b. Adjust sine-wave generator output amplitude for 100 mV (one division on crt).

c. Set: SOURCE

EXT

d. CHECK—Stable display can be obtained in both the +OUT and -IN positions of the SLOPE switch for both AUTO and NORM.

#### 9. 35 MHz Internal Triggering

a. Set: SOURCE

INT

CH 1 VOLTS/DIV

50 mV

X1-X10 (variable)

X10 (fully cw

detent)

b. Set sine-wave generator frequency for 35 MHz and output amplitude for a 3-division display; then set CH 1 VOLTS/DIV to .1 V.

c. CHECK—Stable display can be obtained in both the +OUT and -IN positions of the SLOPE switch for both AUTO and NORM modes.

#### 10. 35 MHz External Triggering

a. Set: SOURCE

EXT

b. CHECK—Stable display can be obtained in both the +OUT and -IN positions of the SLOPE switch for both AUTO and NORM.

#### 11. Z-Axis Input

a. Set: CH 1 VOLTS/DIV

1 V

SEC/DIV SOURCE .1 ms INT

MODE

AUTO

X1-X10 (variable)

X1 (fully ccw

detent)

b. Set sine-wave generator frequency to 50 kHz and adjust output amplitude for a 5-division display.

- c. Disconnect 50  $\Omega$  cable from X (or EXT, external trigger) input, and connect it to EXT Z AXIS connector at rear of instrument.
- d. CHECK—Trace modulation is noticeable at normal intensity. (Adjust LEVEL control as required to obtain stable display).
  - e. Disconnect test setup.

#### 12. Low Frequency Triggering

a. Set: SEC/DIV

10 ms

VOLTS/DIV (CH 1) CH 1 AC-GND-DC

2 mV DC

MODE

**NORM** 

b. Connect 10X probe to CH 1 input.

- c. Lay probe near ac line voltage source and adjust CH 1 VOLTS/DIV switch and VAR control for a 0.4-division display.
- d. CHECK—Stable display can be obtained in both the +OUT and -IN positions of the SLOPE switch for AUTO and NORM modes, and LINE and INT SOURCE positions.
  - e. Remove probe.
- f. Return VAR to detent; MODE to NORM; and SOURCE to INT.

#### 13. A and B Sweep Rate Accuracy

NOTE

For T932, use the procedure for the A sweep only.

a. Connect test setup as shown in Fig. 3-4.

- c. CHECK—A sweep SEC/DIV accuracy according to Table 3-3; one or two time marks, as indicated, within 3% (0.24 div) over center eight divisions. Accuracy specifications apply for a temperature range of  $\pm 20^{\circ}$  C to  $\pm 30^{\circ}$  C.
  - d. Set: DISPLAY MODE B

e. CHECK—B sweep accuracy according to Table 3-3. Display one or two time marks as indicated within 3% (within 0.24 div) over the center 8 divisions ( $\pm$ 20°C to  $\pm$ 30°C).

**TABLE 3-3** 

#### A and B Sweep Timing Accuracy

SEC/DIV Setting	Time-Mark Generator Output	CRT Display (Markers/Divisions)
.1 μs	0.1 microsecond	1*
.2 <i>μ</i> s	0.1 microsecond	2
.5 μs	0.5 microsecond	1
1 <i>μ</i> s	1 microsecond	1
2 <i>μ</i> s	1 microsecond	2
5 μs	5 microseconds	1
10 <i>μ</i> s	10 microseconds	1
20 <i>μ</i> s	10 microseconds	2
50 <i>μ</i> s	50 microseconds	1
.1 ms	0.1 millisecond	1
.2 ms	0.1 millisecond	2
.5 ms	0.5 millisecond	1
1 ms	1 millisecond	1
2 ms	1 millisecond	2
5 ms	5 milliseconds	1
10 ms	10 milliseconds	1
20 ms	10 milliseconds	2
50 ms	50 milliseconds	1

#### A Sweep Only

.1 s	0.1 s	1
.2 s	0.1 s	2
.5 s	0.5 s	1

\*Exclude the first .5 div (50 ns) at this sweep speed.

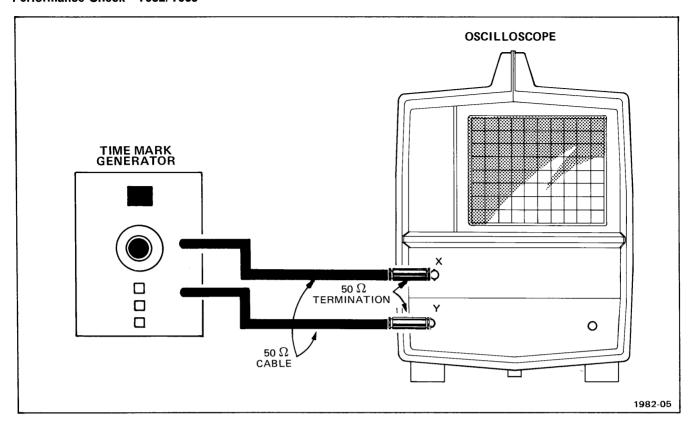


Fig. 3-4. Timing accuracy and delay time check test setup.

#### 14. MAGNIFIED SWEEP ACCURACY

a. Set: X1-X10

X10 (fully cw)

SEC/DIV

0.1 *μ*s

DISPLAY MODE

Δ΄

SOURCE

INT (see note)

b. Set time-mark generator to 10 ns (adjust CH 1 VOLTS/DIV as necessary for a visible display).

#### NOTE

If you cannot obtain a stable display, connect the time-mark generator trigger output to the X or EXT (external trigger) connector via a 50  $\Omega$  cable and 50  $\Omega$  termination. Set MODE to EXT and adjust LEVEL control for a stable display.

c. CHECK—Magnified sweep accuracy according to Table 3-4: One or two time marks as indicated, within 5% (0.4 div) over center 8 divisions. Exclude the first 50 ns after the start of the sweep (5 divisions for the 0.1  $\mu$ s setting; 2.5 divisions for the 0.2  $\mu$ s setting; one division for

 $0.5~\mu s$  and 1  $\mu s$  settings), and anything beyond the 100th magnified division. Accuracy specifications apply for a temperature range of  $+20^{\circ}$  C to  $+30^{\circ}$  C.

d. Set: DISPLAY MODE

В

e. Repeat part c.

f. Return X1-X10 control to X1 (fully counterclockwise).

TABLE 3-4
Magnified Sweep Timing Accuracy

SEC/DIV Setting	Time-Mark Generator Output	CRT Display (Markers/Division)
.1 μs	10 nanosecond	1
.2 μs	10 nanosecond	2
.5 μs	50 nanosecond	1
1 <i>μ</i> s	.1 microsecond	1
.5 ms	50 microsecond	1

#### 15. Delay Time Position (T935 only)

#### 16. Delay Time Jitter (T935 only)

a. Set: A SEC/DIV

.5 ms

B SEC/DIV (pull

out to separate) 5  $\mu$ s

VOLTS/DIV

.5 V

DISPLAY MODE

A INTEN BY B

SOURCE

INT

X1-X10

X1 (fully ccw)

a. Position the start of the intensified portion of the sweep on the tenth time marker.

b. Set: MODE

AUTO

DISPLAY MODE

В

- b. Adjust the time-mark generator for .5 ms.
- c. Adjust the Horizonal POSITION control so the display is in the center of the screen.
- c. Move the trace horizontally so you can see the start of the sweep at the left edge of the graticule.
- d. Set: INTENSITY

For well-defined

display

- d. CHECK—With the DELAY TIME POSITION control fully counterclockwsie, the intensified portion of the sweep should be less than 0.5 div from the start of the sweep. With the DELAY TIME POSITION control fully clockwise, the dot should be at least 10 div from the start of the sweep (to the right of the graticule area).
- e. CHECK—Horizontal jitter is 1 division or less.
- f. Disconnect test equipment.

#### Performance Check—T932/T935

#### 17. TV TRIGGER

#### NOTE

We recommend that you only check the TV Trigger if you are going to be using it. Any TV signal source will do for the check—such as a TV set.

The amplitude settings given in this procedure are to check both the INT and EXT trigger requirements. You can check just the INT trigger by using the VOLTS/DIV settings to attenuate the signal to 1 div of composite sync or 2.3 div of composite video.

- a. Connect test setup as shown in Fig. 3-5.
- b. Set: SEC/DIV .1 ms
  CH 1 VOLTS/DIV .1 V
  MODE TV
- c. Set signal source for 1 division of composite sync (or about 2.3 divisions of composite video).
- d. Adjust LEVEL and SLOPE as needed to trigger display.

- e. CHECK—Stable display is present (display triggers on TV field).
  - f. Set: SEC/DIV

50 μs

- g. CHECK—Stable display is present (display triggers on TV line).
  - h. Set: SOURCE

**EXT** 

- i. Adjust LEVEL and SLOPE as needed to trigger display.
- j. CHECK—Stable display is present (display triggers on TV line).
  - k. Set: SEC/DIV

.1 ms

- I. CHECK—Stable display is present (display triggers on TV field).
  - m. Disconnect test setup.

#### **END OF PROCEDURE**

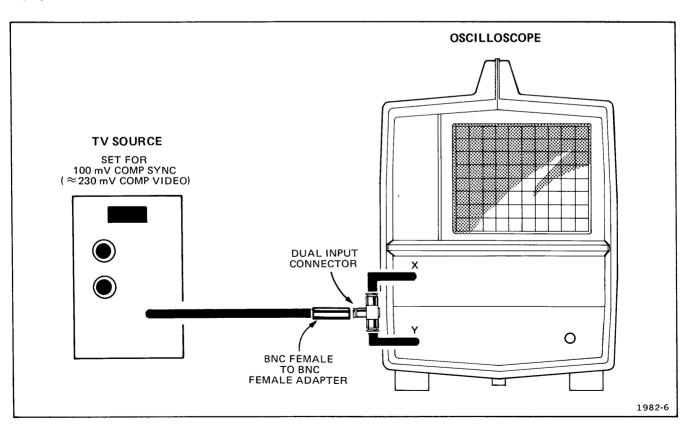


Fig. 3-5. TV trigger check test setup.

# **ADJUSTMENTS**

# WARNING

SERVICING INFORMATION IN THE FOLLOWING SECTIONS IS INTENDED FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT REMOVE INSTRUMENT COVERS OR PERFORM ANY SERVICING UNLESS QUALIFIED TO DO SO.

# IMPORTANT—PLEASE READ BEFORE USING THIS PROCEDURE

When done properly, this procedure allows you to adjust the instrument to its original performance specifications. The Adjustment Procedure is not intended as a troubleshooting guide. Any trouble you find during the procedure should be corrected before continuing. Refer to the Service Information section for further information.

#### LIMITS AND TOLERANCES

Limits and tolerances are instrument specifications only if they are called out as performance requirements in the Specification section. Tolerances given are for the oscilloscope under test and do not include test equipment error.

# **ADJUSTMENT INTERACTION**

Some adjustments interact with others. These are identified with an INTERACTION step.

#### PARTIAL PROCEDURES

You can perform part of the adjustment procedure after replacing components or just to touch up the performance between major re-adjustments. Do not change the setting

of the  $-8\,$  V supply unless you intend to re-adjust the entire instrument.

To adjust only part of the instrument, set the controls according to the nearest preceding Control Settings and use the test setup given in the step you intend to perform or the setup in a preceding step. To prevent unnecessary re-adjustment only if the tolerance given for that step is not met. If it is necessary to reset an adjustment, also check any steps listed in the INTERACTION—part of the step.

# **TEST EQUIPMENT REQUIRED**

The test equipment listed in Table 4-1, or equivalent is required for complete calibration of the oscilloscope. Specifications given for the equipment are the minimum necessary for accurate calibration.

TABLE 4-1
Test Equipment

Description	Minimum Specifications	Usage	Examples of Applicable Test Equipment
1. Digital Voltmeter	Range, 0 to 9 V dc; accuracy within 0.3%.	Power supply adjust- ment.	a. Tektronix DM 501 Digital Multimeter. <sup>a</sup>
2. Time-Mark Generator	Markers, 0.5 μs to 0.5 s; accuracy, within 0.3%.	Y-axis alignment, geo- metry adjustment, sweep and timing	a. Tektronix TG 501 Time-Mark Generator.ª
		adjustments.	b. Tektronix 2901 Time- Mark Generator.
3. Amplitude Calibrator	Signal Amplitude, 10 mV to 50 V square wave; frequency, 1 kHz; amplitude accuracy, within 0.3%.	Vertical gain adjust- ment.	a. Tektronix PG 506 Calibration Generator.*
4. Square-Wave Generator	Frequency, 1 kHz and 100 kHz; risetime, 2 ns or less.	High frequency compen- sation and vertical attenuator adjustments.	a. Tektronix PG 506 Calibration Generator.ª
		atternation adjustification.	b. Tektronix Type 106 Square-Wave Generator.
5. Cable	Length, 42 in.; impedance, 50 Ω; connectors, bnc.	Signal interconnection.	a. Tektronix Part 012-0057-01.
6. Termination	Impedance, 50 $\Omega$ ; connectors bnc.	Signal termination.	a. Tektronix Part 011-0049-01.
7. Low-Capacitance Alignment Tool		Variable capacitor adjustments. Vertical attenuator and high- frequency compensation adjustment.	a. General Cement adjust- ment tool G.C. 8722.
8. Screwdriver	Length, 3 in. shaft; bit size, 3/32 in.	Variable resistor adjustments.	a. Xcelite R-3323.
9. 10X Attenuator	Ratio, 10X; impedance, 50 Ω; connectors, bnc.	Vertical attenuator adjustments.	a. Tektronix Part 011-0059-02
10. Probe, 10X	Attenuation, 10X; Probe can be compensated for input characteristics of T932/T935.	Vertical attenuator compensation.	a. P6108, Tektronix Part 010-6108-03 (Standard accessory for T932 and T935.)
11. Adapter	Probe-tip-to-bnc.	Vertical attenuator. compensation.	a. Tektronix Part 013-0084-02

<sup>&</sup>lt;sup>a</sup>Requires TM 500 Series Power Module

# PRELIMINARY PROCEDURE

# WARNING

Dangerous potentials exist at several points inside your instrument. To prevent electrical shock, do not touch exposed connections or components when the instrument is operated with the cover removed. Disconnect power cord plug from power input voltage source while disassembling or repairing this instrument.

1. Remove the cabinet from the instrument. To remove the cabinet, remove the six retaining screws (three on the top and three on the bottom) and slide the halves apart.

- 2. Check the 120 V/240 V range selector switch, S701, and the High/Low selector switch, S705, for correct settings. Both switches are located on the bottom of the instrument. If you change the setting of the range selector switch, change the line fuse. Refer to the Replaceable Electrical Parts list for correct fuse values.
- 3. Connect the T932 or T935 and test equipment to an appropriate power input source. Turn them on and allow at least 20 minutes warmup before starting the adjustment procedure.

For best overall accuracy, make adjustments at an ambient temperature of  $+20^{\circ}$  C to  $+30^{\circ}$  C.

REV. A JUL 1977 4-3

# A. DISPLAY AND POWER SUPPLY

# **Equipment Required**

- 1. Digital Voltmeter
- 2. Time-Mark Generator
- 3. 50 Ω BNC Cable

- 4. 50 Ω Termination
- 5. Screwdriver
- 6. Low-Capacitance Alignment Tool

# PRELIMINARY CONTROL SETTINGS

Preset front panel controls as follows:

NOTE

Do not preset internal controls.

INTENSITY Midrange
Vertical Mode CH 1
CH 1 VOLTS/DIV 1 V (1X)<sup>1</sup>
VOLTS/DIV VAR (both) Detent (cw)

AC-GND-DC (both) GND A & B SEC/DIV .1 ms

X1-X10 X1 (fully ccw)
SOURCE INT

MODE AUTO
SLOPE +OUT
LEVEL Midrange
CH 1 POSITION Midrange
Horizontal POSITION Midrange
HOLD-OFF Fully ccw

DISPLAY mode

Set all other controls as desired. The oscilloscope should produce a baseline trace with the controls set as above. Adjust the INTENSITY and FOCUS controls (on front panel), and ASTIG control (left side of cabinet) as needed to maintain a well-defined display.

# 1. -8 V Power Supply

NOTE

Do not change the setting of the  $-8\ V$  adjustment unless you intend to re-adjust the entire instrument.

- a. Connect digital voltmeter between the -8 V side of R775 and ground (see Fig. 4-1). If meter does not read between -7.96 V and -8.04 V, proceed to part b.
- b. ADJUST—R773, -8 V Adj (see Fig. 4-1) for -8.00 V dc.
  - c. Disconnect digital voltmeter.

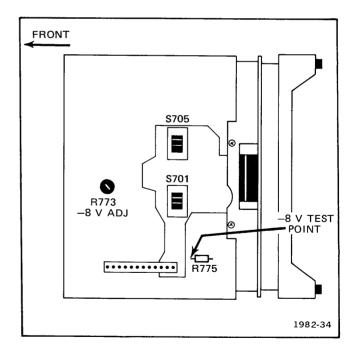


Fig. 4-1. Power supply adjustment locations (on bottom of chassis).

<sup>&</sup>lt;sup>1</sup>Refers to window on VOLTS/DIV switch knob. Use 1X probe window unless otherwise specified in individual steps of the procedure.

#### 2. Trace Rotation

- a. Position trace vertically to the center horizontal graticule line.
- b. ADJUST—Trace Rot, R472 (see Fig. 4-2), to align trace with center horizontal graticule line.

# 3. Y-Axis Alignment

- a. Set CH 1 AC-GND-DC to DC.
- b. Connect .1 ms markers from time-mark generator to CH 1 input via 50  $\Omega$  BNC termination and 50  $\Omega$  BNC cable.
- c. Set CH 1 VOLTS/DIV and VAR to obtain slightly more than 8 divisions of vertical deflection and position display baseline below bottom graticule line (off screen).
- d. Set SEC/DIV to obtain about one marker/division and rotate horizontal POSITION to align a marker with center graticule line.

- e. ADJUST—Y-axis, R474, (see Fig. 4-2) to align center marker with center vertical graticule line.
- f. INTERACTION—Position display baseline to center horizontal graticule line and check that baseline aligns with horizontal graticule line. If not, re-adjust trace rotation. Then re-check Y-Axis alignment.

# 4. Geometry

- a. Move display baseline slightly below bottom graticule line.
- b. ADJUST—Geom, R473 (see Fig. 4-2) for best alignment of markers with the vertical graticule lines, i.e.; minimum bowing of markers.
- c. INTERACTION—Between Geom and Y-Axis. Repeat both adjustments for best alignment of markers with vertical graticule lines.
  - d. Disconnect time-mark generator.

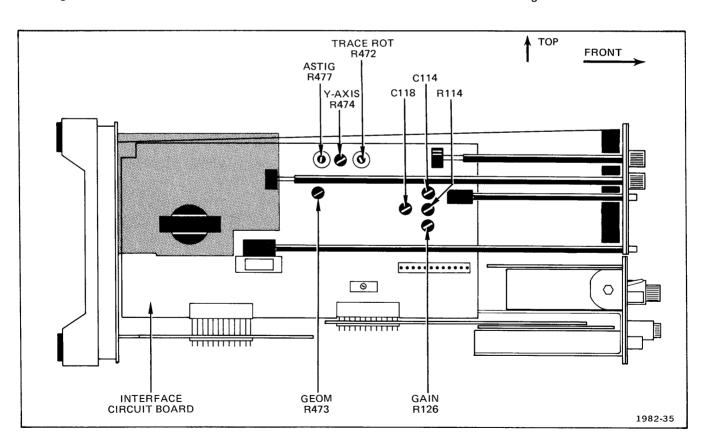


Fig. 4-2. Interface board adjustment locations (on left side of crt).

# **B. VERTICAL AMPLIFIER**

# **Equipment Required**

- 1. Digital Voltmeter
- 2. Amplitude Calibrator
- 3. Square-Wave Generator
- 4. 50 Ω BNC Termination
- 5. 50 Ω BNC Cable

- 6. Low Capacitance Alignment Tool
- 7. Screwdriver
- 8, 10X Probe
- 9. 10X Attenuator
- 10. Probe-tip-to-BNC Adapter
- 11. Dual Input Coupler (optional)

# PRELIMINARY CONTROL SETTINGS

Preset front panel controls as follows:

INTENSITY

Midrange (for visible

trace)

**HOLD-OFF** 

Fully ccw

**FOCUS** 

Midrange

Vertical Mode

CH<sub>1</sub>

VOLTS/DIV (both)

2 mV (1X)1

AC-GND-DC (both)

**GND** 

VAR (both)

Detent (cw)

A SEC/DIV

.5 ms

X1-X10

X1 (fully ccw detent)

SOURCE

INT **AUTO** 

MODE SLOPE

+OUT

LEVEL

Midrange

POSITION (all)

**DISPLAY MODE** 

Midrange

Set all other controls as desired.

The oscilloscope should produce a baseline trace with the controls set as above. Adjust INTENSITY and FOCUS controls as needed to maintain a well-defined display while making adjustments.

# **PROCEDURE**

#### 1. Vertical Preamplifier Balance

- a. ADJUST-CH 1 DC BAL, R4130 (see Fig. 4-3), for no trace shift while switching CH 1 VOLTS/DIV control between 2 mV and 10 mV.
  - b. Set: Vertical Mode

CH<sub>2</sub>

c. ADJUST-CH 2 DC BAL, R4232 (see Fig. 4-3), for no trace shift while switching CH 2 VOLTS/DIV control between 2 mV and 10 V.

# 2. Vertical Output Amplfier Gain

NOTE

You should not have to re-adjust the vertical output gain unless you have replaced the crt or other components, or adjustments have accidentally been altered.

- a. Set VOLTS/DIV (both) to 5 mV/div and Vertical Mode to CH 1.
  - b. Set Gain, R126 (see Fig. 4-2), to physical midrange.
- c. Connect digital voltmeter between P4-9 and P4-11 (see Fig. 4-3). Select range on meter for at least 500 mV reading.
- d. Set vertical POSITION control so trace is aligned with center horizontal graticule line. Note meter reading.
- e. Rotate vertical POSITION control until meter reading has changed 150 mV positive from reading in part d (trace moved toward top of screen).
- f. Adjust Gain, R126 (see Fig. 4-2), so trace aligns with third graticule line above center horizontal graticule line.
  - g. Disconnect digital voltmeter.

Refers to window on VOLTS/DIV switch knob. Use 1X probe window unless otherwise specified in individual steps of the procedure.

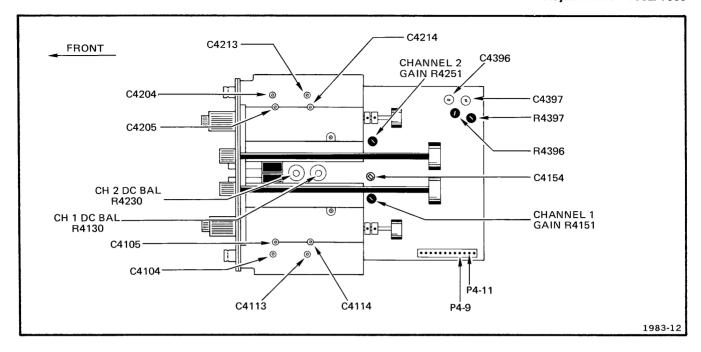


Fig. 4-3. Vertical Amplifier adjustment locations (bottom view of instrument).

# 3. Vertical Preamplifier Gain

a. Set: VOLTS/DIV (both) 5 mV<sup>1</sup>
AC-GND-DC (both) DC
Vertical Mode CH 1

b. Connect a 1 kHz, 20 mV amplitude calibrator (standard output) signal to CH 1 input via a 50  $\Omega$  unterminated cable. Set CH 1 POSITION to center the display vertically.

c. ADJUST—Gain, R4151 (see Fig. 4-3), for a 4-division display.

d. Move 20 mV amplitude calibrator signal to CH 2 input and set Vertical Mode to CH 2. Set CH 2 POSITION to center the display vertically.

e. ADJUST—Gain, R4351 (see Fig. 4-3), for 4-division display.

f. INTERACTION—If you cannot adjust CH 1 and CH 2 Preamplifier Gain for 4-division display, repeat steps 2 and 3.

g. Disconnect test equipment.

#### NOTE

For convenience in the following steps, set the TIME BASE to 1 ms (SEC/DIV to 1 ms and X1-X10 to X1) while adjusting the generator for a 5-division display. Then set TIME BASE TO 50  $\mu$  (SEC/DIV to .5  $\mu$  and X1-X10 to X10) when observing or adjusting leading edge detail.

#### 4. High Frequency Compensation

a. Set: VOLTS/DIV (both) 2 mV<sup>1</sup>
Vertical Mode CH 2
AC-GND-DC (both) DC
A SEC/DIV 1 ms

b. Connect square-wave generator (fast rise, +transition) to Channel 2 input connector via 50  $\Omega$  cable, 10X attenuator, and 50  $\Omega$  termination.

c. Set square-wave generator for 100 kHz, fast rise, and amplitude for 5-division display. Set SEC/DIV to .5  $\mu$ s, and INTENSITY as necessary to view the display.

d. Set POSITION and LEVEL controls to position the leading edge of the signal on screen.

e. ADJUST—C4397, R4397, C4396, R4396 (see Fig. 4-3), C114, R114, C118 (see Fig. 4-2), for best front corner of waveform using a low-capacitance alignment tool.

<sup>&</sup>lt;sup>1</sup>Refers to window on VOLTS/DIV switch knob. Use 1X probe window unless otherwise specified in individual steps of procedure.

# Adjustments—T932/T935

f. Set: Vertical Mode

CH<sub>1</sub>

- g. Connect square-wave generator to Channel 1 input connector via 50  $\Omega$  cable, 10X attenuator, and 50  $\Omega$ termination.
- h. ADJUST-C4154 (see Fig. 4-3), for best square front corner of waveform using low-capacitance alignment tool.
- i. INTERACTION-If you cannot obtain square front corner, re-adjust C4396, R4396, C4397, R4397, C114, C118, and R114 for best square front corner in both CH 1 and CH 2.
  - j. Disconnect test equipment.
- 5. Channel 1 Attenuator Compensation

a. Set: CH 1 VOLTS/DIV

20 mV1

CH 1 AC-GND-DC

DC

Vertical Mode

CH<sub>1</sub> 1 ms

A SEC/DIV X1-X10

X10 (fully cw)

- b. Connect a 50  $\Omega$  cable from the high-amplitude output of the square-wave generator, through a 10X attenuator and a 50  $\Omega$  termination to the CH 1 input connector. Set generator to 1 kHz and adjust for a 5division display.
- c. ADJUST-C4114 (see Fig. 4-3) for best square front corner (see Fig. 4-4 for example).
- d. Remove 10X attenuator and set CH 1 VOLTS/DIV to .2 V. Set generator output for a 5-division display.
- e. ADJUST-C4105 (see Fig. 4-3) for best square front corner (see Fig. 4-4 for example). Disconnect test equipment.
- f. Set CH 1 VOLTS/DIV to 10 mV and X1-X10 to X1 (fully ccw).

- g. Connect a 10X probe to the CH 1 input. Connect the probe tip to a probe tip-to-bnc adapter, the adapter to a 50  $\Omega$  bnc termination, and the termination to a 50  $\Omega$  bnc 10X attenuator attached to the square-wave generator high-amplitude output connector. Set generator for a 5division, 1 kHz display.
- h. Compensate probe for best front corner of waveform.
- i. Set CH 1 VOLTS/DIV to 20 mV and set generator for a 5-divison display (remove 10X attenuator if necessary).
  - j. ADJUST-C4113 for flat top on square wave.
- k. Set CH 1 VOLTS/DIV to .2 V, and square-wave generator output for a 5-division display (remove 10X attenuator, and also 50  $\Omega$  termination if necessary).
  - I. ADJUST-C4104 for a flat top on square wave.
  - m. Disconnect test equipment.

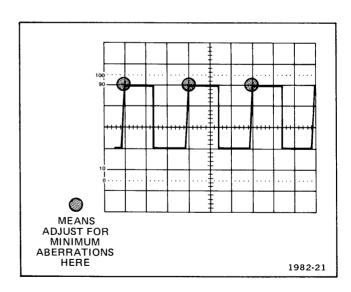


Fig. 4-4. Display of correct attenuator compensation (idealized).

Refers to window on VOLTS/DIV switch knob. Use 1X probe window unless otherwise specified in individual steps of the procedure.

# 6. CH 2 Attenuator Compensation

a. Set: CH 2 VOLTS/DIV

20 mV1 Ch 2 AC-GND-DC DC

Vertical Mode

CH 2

A SEC/DIV

1 ms

X1-X10

X10 (fully cw)

POSITION (all)

As required

- b. Connect a 50  $\Omega$  cable from the high-amplitude output of the square-wave generator, through a 10X attenuator, and a 50  $\Omega$  termination to the CH 2 input connector. Set generator to 1 kHz and adjust for 5-division display.
- c. ADJUST-C4214 (see Fig. 4-3) for best square front corner (see Fig. 4-4 for example).
- d. Remove 10X attenuator and set CH 2 VOLTS/DIV to .2 V. Set generator output for a 5-division display.
- e. ADJUST-C4205 (see Fig. 4-3) for best square front corner (see Fig. 4-4 for example). Disconnect test equipment.
- f. Set CH 2 VOLTS/DIV to 10 mV and X1-X10 to X1 (fully ccw).

- g. Connect a 10X probe to the CH 1 input. Connect the probe tip to a probe tip-to-bnc adapter, the adapter to a 50  $\Omega$  bnc termination, and the termination to a 50  $\Omega$  bnc 10X attenuator attached to the square-wave generator high-amplitude output connector. Set generator for a 5division, 1 kHz display.
- h. Compensate probe for best front corner of waveform.
- i. Set CH 2 VOLTS/DIV to 20 mV and set generator for a 5-division display (remove 10X attenuator if necessary).
  - j. ADJUST-C4213 for flat top on square wave.
- k. Set CH 2 VOLTS/DIV to .2 V, and square-wave generator output for a 5-division display (remove 10X attenuator, and also 50  $\Omega$  termination if necessary).
  - I. ADJUST-C4204 for a flat top on square wave.
  - m. Disconnect test equipment.

4-9

Refers to window on VOLTS/DIV switch knob. Use 1X probe window unless otherwise specified in individual steps of the procedure.

# C. TIME BASE

# **Equipment Required**

- 1. Time-Mark Generator
- 2. 50 Ω Termination
- 3. 50 Ω BNC Cable

4. Low Capacitance Alignment Tool

# PRELIMINARY CONTROL SETTINGS

### Preset front panel controls as follows:

INTENSITY Midrange **FOCUS** Midrange Vertical Mode CH<sub>1</sub> .5 V1 CH 1 VOLTS/DIV CH 1 VAR Detent CH 1 AC-GND-DC DC CH 2 AC-GND-DC **GND** A SEC/DIV .5 ms X1-X10 X1 (fully ccw)

X1-X10 X1 (fully composed in the second in t

POSITION (all)

POSITION (all)
DELAY TIME

DOOLTION

POSITION

#### 1. Horizontal Gain

a. Connect a 50  $\Omega$  cable from the time-mark generator to a 50  $\Omega$  termination at the CH 1 input. Set generator for .5 ms markers.

**PROCEDURE** 

b. ADJUST—Horiz Cal, R2332 (see Fig. 4-5), and horizontal POSITION control for 1 marker per division over center 8 divisions.

# 2. A and B Sweep Timing

NOTE

For T932, use steps 2a and 2b only.

- a. Set SEC/DIV to .5  $\mu$ s and the generator for .5  $\mu$ s time marks.
- b. ADJUST—C2235 (see Fig. 4-5), and horizontal POSITION control for 1 marker per division over center 8 divisions.
  - c. Set: DISPLAY MODE B
- d. ADJUST—C2535 and horizontal POSITION control for 1 marker per division over center 8 divisions.
  - e. Disconnect test equipment.

Set all other controls as desired.

The oscilloscope should produce a baseline trace with the controls set as above. Adjust INTENSITY and FOCUS controls as needed to maintain a well-defined display while making adjustments.

Midrange

Fully ccw

<sup>1</sup>Refers to window on VOLTS/DIV switch knob. Use 1X probe window unless otherwise specified in individual steps of the procedure.

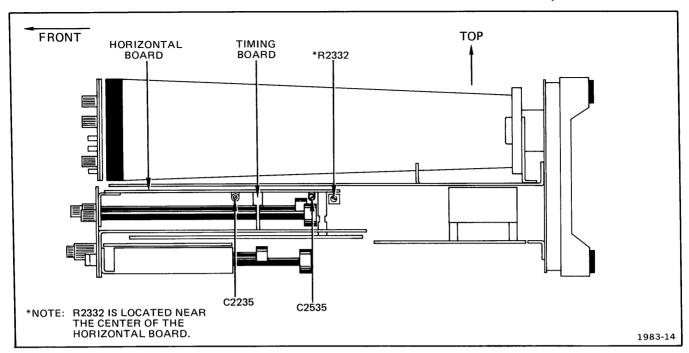


Fig. 4-5. Time Base adjustment locations (on right side of instrument).

		:

# SERVICE INFORMATION

The following information is provided to help you keep your T932 and T935 in good operating condition. We recommend that servicing be done by qualified service personnel only. You can, if you like, send your instrument to a Tektronix Service Center for re-adjustment and repair. Contact your local Tektronix representative for information about the Service Centers in your area.

# **CABINET REMOVAL**

WARNING

Dangerous potentials exist at several points throughout the T932 and T935. When operating the instrument with the covers off, avoid touching connections and components. Some transistors have elevated cases. Disconnect the power before cleaning the instrument or replacing parts.

To remove the cover, take out the six screws (top and bottom) holding the two halves together. Pull the two halves apart.

To replace the cover, line up the slots on the cover with the front panel and the rear subpanel and slide together. Replace screws.

# **PREVENTIVE MAINTENANCE**

Preventive maintenance consists of cleaning the instrument regularly and inspecting it occasionally for broken or damaged parts. Regular maintenance will improve the reliability of your instrument and prevent breakdowns.

#### Cleaning

Accumulations of dirt and dust on components act as an insulating blanket preventing efficient heat dissipation. Dust on circuit boards and wires can cause arcing and short circuits, resulting in damage to components or even instrument failure. Your instrument should be cleaned before this happens!

The cabinet provides protection from dust and dirt and should be in place during normal operation of the instrument.



Avoid the use of chemical cleaning agents containing benzene, toluene, xylene, acetone or similar solvents. These chemicals may damage the plastics used in this instrument. Recommended cleaning agents are isopropyl alcohol or Kelite (1 part Kelite, 20 parts water).

**Exterior.** Dust the cabinet with a soft cloth. Dust the front panel controls with a small soft paint brush. Dirt clinging to the surface of the cabinet may be removed with a soft cloth dampened with a mild detergent and water solution. Avoid using abrasive cleaners. They will scratch the cabinet and front panel.

**Interior.** Dust in the interior of the instruments should be removed before it builds up enough to cause arcing and short circuits during periods of high humidity. Dust is best removed from the interior by dry (approximately 9 lb/in²), low-pressure air. Dirt clinging to surfaces may be removed with a soft paint brush or cloth dampened with a mild detergent and water solution. Use a cotton-tipped applicator for cleaning in narrow spaces and on the circuit boards.

### **Switch Contacts**

CAUTION

Do not use acetone, MEK, MIBK, benzene, toluene, carbon tetrachloride, trichloroethylene, methyl alcohol, methylene chloride, sulphuric acid, or Freon TC, TE, TF, TA, 12, 22, to clean the switch contacts. Check the contents of spray coolants and cleaners before using.

#### Service Information—T932/T935

Most of the switches are cam-actuated assemblies which do not require frequent maintenance. When maintenance is necessary due to accumulated dirt and dust on the contacts, observe the following precautions: Clean the switch contacts with isopropyl alcohol or a solution of one part Kelite to 20 parts water. If these are not available, petroleum ether, white kerosene, or a solution of 1% Joy detergent and 99% water may be used.

Recommended circuit coolants are dry ice and isopropyl alcohol.

The cam switch contacts are designed to operate without lubrication. They do require cleaning periodically to remove accumulations of dust and dirt. The use of lubricants, or cleaners that leave a residue, increase dust attraction and should be avoided.

#### **Visual Inspection**

Inspect the interior occasionally for broken connections, improperly seated semiconductors, damaged or improperly installed circuit boards, heat damaged components, etc. If heat damaged components are found, care must be taken to find the cause of the excessive heat and measures must be taken to prevent recurrence of the damage.

#### Lubrication

Most of the potentiometers are permanently sealed. Both the cam- and lever-type switches are installed with proper lubrication where necessary. Therefore, periodic lubrication is not recommended and only rarely should lubrication even be necessary.

#### Semiconductor Checks

Periodic checks of the semiconductor devices in this instrument are not recommended. The best check of semiconductor performance is actual operation in the instrument.

# Re-adjustment

Re-adjust the instrument whenever the Performance Check indicates the instrument is not meeting specifications. The Performance Check should be performed on a regular basis; for example, every 1000 hours of operation or every six months.

#### **TROUBLESHOOTING**

If you perform preventive maintenance on a regular basis, you should correct most problems before your instrument breaks down. Occasionally, you may have to troubleshoot. In addition to the following information, you may find information in the Circuit Description and Diagrams section useful.

# **Troubleshooting Aids**

**Troubleshooting Chart.** Use the troubleshooting chart (Fig. 5-1) to locate problem areas.

Diagrams. Complete circuit diagrams are located on the foldout pages in the Circuit Description and Diagrams section. The component number and electrical value of each component in the instrument are shown on the diagrams (see the first page of the Diagrams section for the definitions of the reference designators used to identify components). Each main circuit is assigned a series of component numbers to assist in identifying their circuit location. Important voltages and waveforms are also shown on the diagrams. Also, a heavy line encloses the portion of the circuit mounted on a circuit board.

Color Codes. The resistors used in this instrument are either brown composition or precision metal-film resistors. The resistors are color-coded with the EIA color-code. (Some metal-film resistors may have the value printed on the body.) Refer to Fig. 5-2. For the values of the thick film resistors refer to the parts list.

The capacitance values of common disc and some small electrolytic capacitors are marked on the side of the component body. The white ceramic capacitors are color-coded, using a modified EIA code. (See Fig. 5-2).

The cathode end of each glass-encased diode is indicated by a stripe, a series of stripes, or a dot.

#### **Power Cord Conductor Identification**

Conductor	Color	Alternate Color
Ungrounded (Line)	Brown	Black
Grounded (Neutral)	Blue	White
Grounding (Earthing)	Green-Yellow	Green-Yellow

Semiconductor Lead Configuration. Fig. 5-3 shows the lead configuration of the semiconductor devices used in this instrument.

Multi-Connector Holders. The multi-connector holder is keyed with two triangles, one on the holder and one on the circuit board. When a connection is made perpendicular to a circuit board surface, the orientation of the triangle and the slot numbers on the connector holder are determined by the direction of the nomenclature marking (see Fig. 5-4).

TABLE 5-1
Power Supply Tolerance

Supply	Tolerance
-8 V	Set within 0.5%
+8 V	Within 3%
+100 V	Within 5%

# **Troubleshooting Equipment**

The following equipment is useful for troubleshooting.

#### 1. Semiconductor Tester

**Description:** Dynamic-type tester. Must be capable of measuring reverse breakdown voltages of at least 400 V.

Purpose: To test semiconductors.

**Example:** Tektronix Type 576 Curve Tracer or Tektronix 577 (D1 or D2) Curve Tracer with 177 Test Fixture.

#### 2. Test Oscilloscope

**Description:** Frequency response, dc to at least 15 MHz. A 10X, 10  $M\Omega$  voltage probe should be used to reduce circuit loading for voltage measurements.

Purpose: To check operating waveforms.

#### 3. Multimeter

**Description:** Non-loading digital multimeter. Voltmeter, 10 M $\Omega$  input impedance and 0 to 150 V range; dc voltage accuracy, within 0.15%; display, 4-1/2 digits. Ohmmeter, 0 to 20 M $\Omega$ . (2 kV rating required for high voltage supply measurement.)

**Purpose:** To check voltages and for general troubleshooting.

#### 4. Variable Autotransformer

**Description:** Output variable from 0 to 140 V, 1.2 A minimum rating. Must have a three-wire power cord, plug and receptacle.

**Purpose:** To vary the input line voltage when troubleshooting in the power supply.

**Example:** General Radio W8MT3VM or W10MT3W Metered Variac Autotransformer.

5. Vertical Amplifier Extender Troubleshooting Fixture

**Description:** 18 inch ribbon cable with an interface connector at each end (Tektronix part 067-0773-00).

**Purpose:** To operate the vertical amplifier outside the instrument. Useful for troubleshooting the time base which is inaccessible with the vertical amplifier installed.

#### **Troubleshooting Techniques**

The following checklist is arranged so that you check the simple things before you get the instrument taken apart. Start at the beginning.

- 1. Check the Control Settings. See the Operating Instructions for the correct control settings.
- 2. Check Associated Equipment and Connectors. Check to see that the signal source is properly connected and that the interconnecting cables are not defective. Also check the power cord and plug and the power source for defects.
- 3. Check the Performance of the instrument. If the instrument does not meet specifications, the trouble may be corrected by readjusting the instrument. See the Adjustment Procedure, Section 4, for instructions.
- 4. Visual Check. A visual check may reveal broken connections, damaged components, semiconductors not firmly mounted, damaged circuit boards, etc.

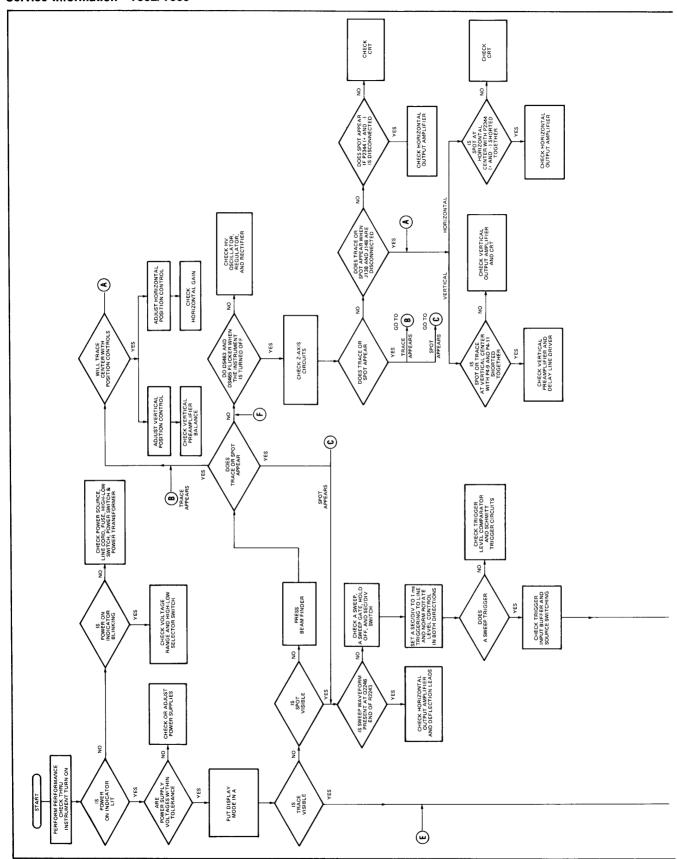


Fig. 5-1. Troubleshooting chart.


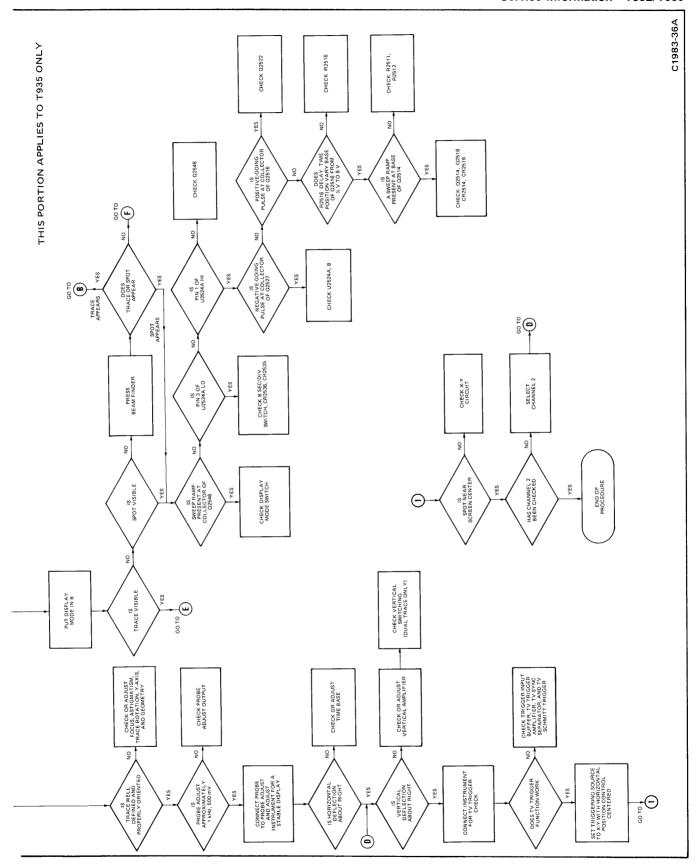


Fig. 5-1. Troubleshooting chart (cont).

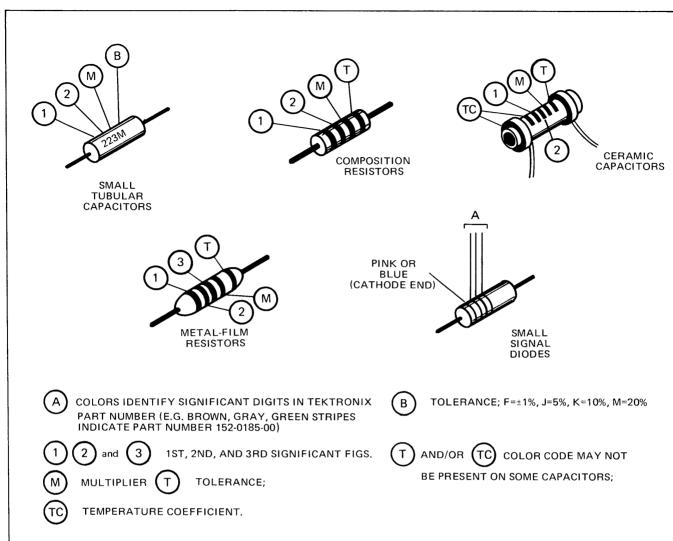

COLOR	SIGNIFICANT	RESISTORS ( $\Omega$ )		CAPACITORS (pF)			
	FIGURES	MULTIPLIER	TOLERANCE	MULTIPLIER	TOLERANCE		
					over 10 pF	under 10 pF	
BLACK	0	1		1	±20%	±2 pF	
BROWN	1	10	± 1%	10	±1%	±0.1 pF	
RED	2	10 <sup>2</sup> or 100	±2%	10 <sup>2</sup> or 100	±2%		
ORANGE	3	10 <sup>3</sup> or 1 K	±3%	10 <sup>3</sup> or 1000	±3%		
YELLOW	4	10⁴ or 10 K	± <b>4</b> %	10⁴ or 10,000	+100% -9%		
GREEN	5	10⁵ or 100 K	± 1/2%	10 <sup>5</sup> or 100,000	±5%	±0.5 pF	
BLUE	6	10 <sup>6</sup> or 1 M	± 1/4%	10 <sup>6</sup> or 1,000,000			
VIOLET	7		±1/10%				
GRAY	8			10 <sup>-2</sup> or 0.01	+80% -20%	±0.25 pF	
WHITE	9			10 <sup>-1</sup> or 0.1	±10%	±1 pF	
GOLD	_	10 <sup>-1</sup> or 0.1	±5%				
SILVER	_	10 <sup>-2</sup> or 0.01	±10%				
NONE	_		±20%	1	±10%	±1 pF	

Fig. 5-2. Color code for resistors and capacitors.

5-6

1982-31

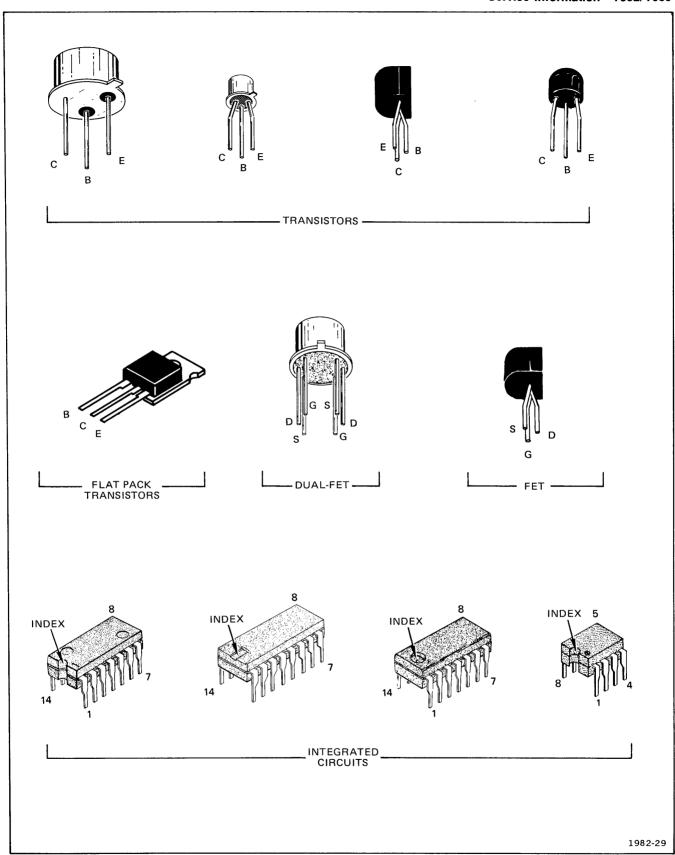


Fig. 5-3. Lead configuration for semiconductor devices.

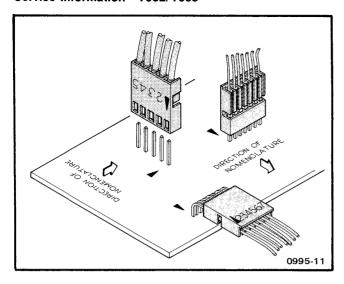


Fig. 5-4. Multi-connector holder orientation.

5. Isolate the Trouble to a Circuit. To isolate trouble to a particular circuit, note the trouble symptom. The symptom often identifies the circuit where the trouble is located. For example, poor focus indicates that the crt circuit (including the high-voltage supply) is probably at fault. When trouble symptoms appear in more than one circuit, check affected circuits by taking voltage and waveform readings.

Incorrect operation of all circuits often indicates trouble in the power supply. Check first for correct voltage of the individual supplies. However, a defective component elsewhere in the instrument can appear as a power supply trouble and may also affect the operation of other circuits. Table 5-1 lists the tolerances of the power supplies. Voltages are measured between the power supply test points and ground. If a power supply voltage is within the listed tolerance, assume the supply is working correctly.

Use the troubleshooting chart to locate trouble. Not all problems appear on the chart. Continue with this checklist in those cases.

6. Check Voltages and Waveforms. Often a defective component can be located by checking for the correct voltages and waveforms in a circuit.

#### NOTE

Voltages and waveforms given on the diagrams are not absolute and therefore may vary slightly between instruments. To obtain operating conditions similar to those used to take these readings, see the voltage and waveform setup procedures in the Diagrams section. Individual deviations should be noted on the schematics for future reference.

7. Check the individual components. Remember that the best check of semiconductors—transistors, diodes, IC's—and thick film resistors is actual operation in a circuit. If you suspect that a semiconductor is bad, substitute a new one for it. Before you start checking IC's, read the part of the Circuit Description that covers the circuit.

WARNING

The power switch must be turned off before removing or replacing components to prevent electrical shock or circuit damage.

To check other components, resistors, capacitors, and inductors, clip one lead and lift it. You may have to add a piece of wire when you resolder the connection, however.

**Resistors:** Check the resistors for discoloration. Then check the resistors with an ohmmeter after disconnecting one end from the circuit. Check the Replaceable Electrical Parts list for the tolerance of the resistors used in this instrument. Resistors normally do not need to be replaced unless the measured value varies widely from the specified value.

Inductors: Check for open inductors by checking continuity with an ohmmeter. (It may be helpful to disconnect one end of the inductor when checking continuity.) Shorted or partially shorted inductors can also be found by checking the waveform response when high-frequency signals are passed through the circuit. Partial shorting often reduces high-frequency response (increases roll-off).

Capacitors: A leaky or shorted capacitor can be detected by checking resistance with an ohmmeter on the highest scale, after disconnecting one end from the circuit. Do not exceed the voltage rating of the capacitor (some ohmmeters use 30 volts as source voltage). The resistance reading should be high after inital charge of the capacitor. An open capacitor can also be detected with a capacitance meter or by checking whether the capacitor passes ac signals.

**Switches:** The most common cause of switch failure is dust between the contact and the pad. Check the suspected contact for continuity with an ohmmeter. If open and not obviously damaged, try cleaning (see Cam Switch Repair and Replacement).

Another frequent cause of switch failure is solder smoke residue. This can occur when replacing a component near the switch. This problem is usually indicated by reduced high-frequency response. Flushing the contact with isopropyl alcohol usually fixes this problem.

If the contact is physically damaged, replace the contact strip. Bending the contact is only a temporary repair. See Cam Switch Repair and Replacement.

8. After repairing a circuit or replacing components, check the performance of the instrument. If the Performance Check is within specifications, it is not necessary to re-adjust the instrument. If the instrument does not meet the specifications, perform the Adjustment Procedure in Section 4.

# **Troubleshooting Hints**

**Power.** SYMPTOM—No visible trace and no display when the BEAM FINDER button is pushed (Power ON lamp is lit).

- a. Does beam appear on screen? If not, rotate INTEN-SITY control clockwise while holding BEAM FINDER button in until beam appears or control is fully clockwise. If beam does not appear, the trouble may be in the power supplies (see Power Supply schematic).
- b. Check all low voltage power supplies, starting with -8~V~(-8~V~is~reference~supply), the +8~V, and +100~V~at~appropriate~test~points.
  - (1) If no voltage is present, check F700.
  - (2) If -8 V is low (or zero), check Q772, Q774, Q776, or U742.
  - (3) If -8 V is correct but +8 V is low (or zero), check Q752, Q754, Q756, and U742 (U742 is used for both -8 and +8 V supplies).
- c. Check high-voltage supplies (see CRT and Vertical Amplifier schematic).
  - (1) Check for -2 kV at pin 1, P465, or pin 2, crt base socket. Use DVM for all voltage checks in this circuit to prevent circuit loading.

- (2) If no -2 kV, check for 50 kHz sine wave (approximately 200 V, peak-to-peak) at pin 5 of T460 (high-voltage transformer primary).
- (3) If neither -2 kV or 50 kHz sine wave is present, check Q454, Q458, and Q446.



Do not unload the secondary of the high-voltage transformer, T460; the transformer may be damaged

- **Z-Axis.** SYMPTOM—No intensity or no control over intensity (BEAM FINDER button pushed).
- a. Does beam come on screen? If not, and low and high-voltage supplies are correct, trouble may be in Z-Axis circuit (see CRT and Vertical Amplifier schematic).
  - (1) Check for approximately 60 V swing between crt-socket pins 2 and 3. If no voltage swing, trouble may be in unblanking.
  - (2) Check for pulse at Q416 emitter. This pulse amplitude should vary from 20 to 80 mV with change (fully cw to fully ccw) in INTENSITY control position.
  - (3) Check for 0-40 V, peak-to-peak unblanking pulse (varies with INTENSITY control position) at Q426 collector.
  - (4) If no unblanking pulse, check Q426, Q424, Q416, or Q434.

**VERTICAL:** SYMPTOM 1.—No trace on crt or vertical POSITION control does not center display (see Vertical Switching and CRT and Vertical Amplifier schematics).

- a. If trace is on screen, but about 2 cm above graticule center, it indicates trouble in vertical amplifier.
- b. Short P4-9 to P4-11 (A8, Vertical board). If trace does not center, trouble is in output circuits. Check Q112, Q122, Q134, Q144, Q136, and Q146.
- c. If trace centers with pins 9 and 11 short-circuited, trouble is ahead of P4.

#### Service Information—T932/T935

- d. Short Q4376 collector to Q4386 collector. If trace centers, trouble is ahead of delay-line drivers, Q4376-Q4386.
- e. Check voltage at Q4344 and Q4346 emitters. Each should read approximately +5 V above ground. If emitter voltage is okay, trouble is either in Q4344 or Q4346, or in switching circuit.

SYMPTOM 2.—With 50 mV signal ac coupled to CH 1 input and VOLTS/DIV set to 10 mV, crt display position is low and does not position above graticule center.

- a. If trace does not appear on screen, rotate vertical POSITION control.
- b. If trace appears, but decreases in amplitude at graticule center, suspect vertical output circuit.
- c. Short Q136 collector to Q146 collector. If trace centers, short Q112 collector to Q122 collector. Trace should center. If not, suspect Q112, Q134, or Q136 and associated circuitry.

**Triggering:** SYMPTOM 1.—Trace free runs, does not trigger in AUTO or NORM (see Trigger schematic).

- a. Set TRIGGERING MODE to AUTO. Turn LEVEL control cw and ccw to both limits. Does the trace flicker? If not, triggering signal is not reaching sweep circuit.
- b. Check voltage at junction of R2151, R2152, and R2143. Does voltage vary from -2 to +3 V while turning LEVEL control throughout its range? If yes, check U2156B output. Does U2156 output level change while turning LEVEL control as above?
- c. Connect a signal to CH 1. Check for trigger pulse at U2156B output. If no signal, suspect U2156A or B, or related circuits.

SYMPTOM 2.—Does not trigger in AUTO.

a. Check for trigger pulse at pin 6 of U2212B. If none, check for HI at U2212B, pin 4, while varying the LEVEL control. If pin 4 does not go HI, check for defective U2212B, U2224B, or CR2227.

- A Sweep: SYMPTOM 1.—No A Sweep on crt (see A Sweep and Horizontal Amplifier schematic).
- a. Push BEAM FINDER button. If trace or dot is right of center, check at R2243 (end of resistor toward board center) for a 12 V (approximately) ramp.
- b. If ramp is not present, check for approximately 0.7 V at Q2274 base.
- c. If voltage at Q2274 base is high (approximately 8.0 volts) check Q2274, Q2242, Q2244, or Q2246.

SYMPTOM 2.-No trace on crt.

- a. Repeat sweep symptom 1, parts a and b.
- b. Check for a HI at U2234C, pin 8. If not HI, check U2234C.
- **B** Sweep SYMPTOM 1.—No B Sweep on crt (see B Sweep schematic) but A Sweep is present.
  - a. Check for 12 V ramp at collector of Q2546.
- b. If ramp is not present, check for LO at pin 3 of U2524B. If pin 3 is HI, check DISPLAY MODE switch S2510 and for HI at pins 1 and 2 of U2524B.
  - c. If pin 1 is not HI, check Q2548.
- d. If pin 2 is not HI, check for a LO at pin 5 of U2524A. If pin 5 is not LO, check Q2514, Q2516, and Q2522.
- e. If pin 3 of U2524B is LO, check Q2542, Q2544, and Q2546.

SYMPTOM 2.—No intensified portion of sweep in the A INTEN BY B mode.

a. Check DISPLAY MODE switch S2510.

#### NOTE

When troubleshooting the sweep or horizontal circuits, the Vertical AMPLIFIER may be removed from the instrument.

Sweep may lock up while troubleshooting. If in doubt, switch instrument power off and back on. If there are no problems, trace should free run.

Horizontal. SYMPTOM 1.—No trace on screen (see Sweep and Horizontal Amplifier schematic).

a. Check output (Q2334-Q2344 collectors) for approximately 40 V ramp. If okay, check for possibly defective crt leads.

SYMPTOM 2.—Trace on screen, but is short.

- a. Check horizontal output (Q2334-Q2344 collectors) for approximately 40 V ramp.
- b. If no ramp at output, check for 12 V ramp at junction of R2243-R2311, C2246-R2245.
- c. If ramp is present, check Q2314, Q2326, Q2332, Q2334, or Q2344.

#### **CORRECTIVE MAINTENANCE**

Corrective maintenance consists of repair and parts replacement. This section contains general information, troubleshooting information, and component replacement information.

# NOTE

Be sure you are familiar with soldering techniques and parts replacement procedures before replacing any components.

# Soldering Techniques

WARNING

To prevent electrical shock, or damage to the instrument, always disconnect the instrument from the power source before soldering.

The T900 Series uses some single-sided circuit boards, i.e., wiring is plated on only one side. The components are located on the front of the circuit boards. The circuit designations have been silk-screened onto the component side of the circuit board next to the components. The circuit boards are mounted with the component side out to allow access to the components. If it is necessary to replace a component, the leads may be clipped and the new part soldered to the leads of the previous one. However, be careful not to loosen the connection with the etched circuit wiring on the back of the circuit board.

For soldering, use ordinary 60/40 solder and a 15-watt soldering iron. Excessive heat can cause the etched circuit wiring to separate from the board base material. Use caution if using a higher wattage-rated soldering iron on the circuit boards.

#### NOTE

If the instrument does not work after replacing components by soldering to the leads of the previous one, the connection with the etched circuit wiring may be broken. To check the connections, it is necessary to remove the circuit board from the instrument. Refer to the circuit board replacement information.

# **Replacement Parts**

All parts for the T932 and T935 can be ordered from your local Tektronix Field Office, but many of the components are standard items that may be more readily available locally. Check the parts list for value, tolerance, ratings, and description before you replace any components.

When ordering parts from Tektronix, include the following information:

- (1) Instrument type.
- (2) Instrument serial number.
- (3) A description of part (if electrical, include the circuit number).
  - (4) Tektronix part number.

# **Component Replacement**

WARNING

Disconnect the instrument from the power source before replacing components.

#### Service Information—T932/T935

Since the components are located on one side of the circuit boards, it is necessary to remove the circuit boards before replacing some components. Refer to the paragraphs on circuit board replacement for instructions in removal and installation of each circuit board. Also be sure you're familiar with soldering techniques used on single-sided circuit boards.

#### **Semiconductors**

Replacement of semiconductors may affect the adjustment of this instrument. After replacing semiconductors, especially if using parts other than those listed in the parts list, check the performance of the instrument to be sure that the performance has not been degraded.

WARNING

Handle silicone grease with care. Avoid getting silicone grease in the eyes. Wash hands thoroughly after use.

Replacement semiconductors should be of the original type or a direct replacement. Lead configuration of the semiconductors used in this instrument are shown in this section. Some plastic case transistors have lead configurations which do not agree with those shown there. If a replacement transistor is made by a different manufacturer than the original, check the manufacturer's basing diagram for correct basing. Most transistors are soldered directly onto the circuit boards. Transistors having heat radiators or those mounted on the chassis use silicone grease to increase heat transfer. Replace the silicone grease when replacing these transistors. Those transistors mounted on the chassis are held in place by a metal clip.

#### NOTE

After replacing a power transistor, check that the collector is not shorted to ground before applying power.

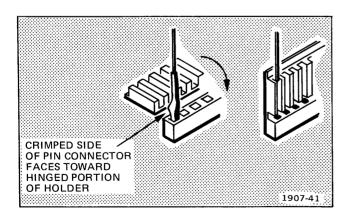


Fig. 5-5. Pin connector replacement.

# **Fuse Replacement**

The line-voltage fuse, F700, is located next to the POWER ON switch, S700, on the Interface board. The high voltage fuse, F722, is located on the Power Supply board. Refer to the Replaceable Electrical Parts list for correct fuse values.

## **Thick Film Resistor Replacement**

To remove the thick film resistors, first remove the solder from the pins and then remove the resistors.

To install the thick film resistors, R444 or R118, match the pins on the resistor with the holes in the circuit board. Resolder all of the pins to the circuit board.

# Interconnecting Cable and Pin Connector Replacement

The interconnecting cable assemblies are factory assembled. They consist of machine installed pin connectors mounted in plastic holders. The plastic holders are easily replaced as individual items, but if the connectors are faulty, the entire cable should be replaced.

It is possible for the pin connectors to become dislodged from the plastic holders. If this happens, the connector can be re-installed as follows (see Fig. 5-5).

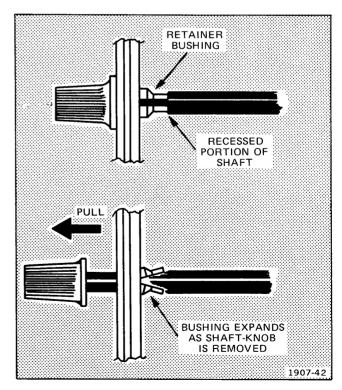


Fig. 5-6. Shaft-knob removal.

- 1. Bend grooved portion of holder away from cable as shown.
- 2. Re-insert connector into its hole in plug-in portion of holder.

#### NOTE

Holder positions are numbered (number one is identified with a triangle).

3. Bend grooved part of holder so that connector is inserted into groove.

When plugging connector holders onto board pins, be sure to match triangle mark on holder with triangle mark on circuit board.

#### **Shaft-Knob Removal**

- 1. Grip knob end with one hand and shaft end with other hand.
- 2. Pull on knob, while pushing on shaft, to free recessed portion of shaft from retainer bushing (see Fig. 5-6). Some shaft-knobs may require considerable force to remove.



The bushing and shaft may separate abruptly. To avoid damage to the potentiometer and circuit board, or personal injury, grip both pieces firmly during shaft-knob removal. It may be helpful to grip the shaft with the tip of a long-nose pliers and use a gentle rocking motion to separate the shaft from the bushing.

# **Vertical Amplifier Replacement**

To remove the vertical amplifier (see Fig. 5-7) from the instrument:

- 1. Support the vertical amplifier, while removing the retaining screws. One is between the attenuators, one is near C4307, and one is near R4373.
- 2. Disconnect P4 (see Fig. 5-7) from J4 on the Interface board by lifting the entire vertical amplifier. Be careful not to bend the pins.

To reinstall the vertical amplifier, reverse the above procedure.

#### NOTE

The front panel, switches, delay line, and attenuators are attached to the Vertical board.

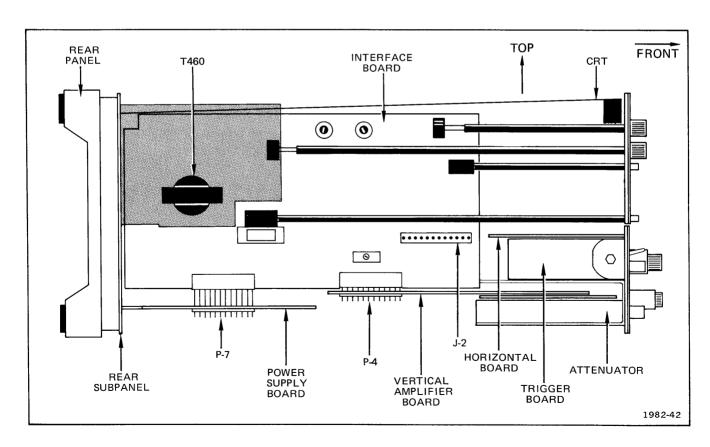


Fig. 5-7. Circuit board locations (on left side of crt).

#### Service Information—T932/T935

# **Attenuator Replacement**

To remove the attenuator from the instrument:

- 1. Remove the POSITION control knob and shaft.
- 2. Remove the VOLTS/DIV VAR knob and shaft. To remove the shaft, loosen the set screws holding the shaft to the potentiometer and pull the shaft out (observe knob orientation for re-assembly reference).
- 3. Pull the VOLTS/DIV knob and shaft out of the front panel.
- 4. Remove the three retaining screws from the attenuator shield and the hex nut behind the front panel near the bnc connector.
- 5. Pull the attenuator assembly off the Vertical Amplifier board. Be careful not to bend the connector pins.
- 6. To remove the attenuator shield, first unsolder the leads to the bnc connector. Take care not to touch the body of the capacitor with a hot soldering iron. Then remove one retaining screw from the board side. Be careful not to remove the screws holding the cam switch against the attenuator board. Lift the shield off the attenuator.

To reinstall the attenuator:

- 1. Attach the attenuator shield to the board with one screw, and resolder the lead to the bnc connector. Avoid touching the capacitor with a hot soldering iron.
- 2. Slide the bnc connector and coupling switch into the front panel.
- 3. Make sure the connecting pins and holders on the bottom of the attenuator board align properly.
- 4. Press the attenuator board down on the Vertical Amplifier board and secure it with the three retaining screws.

#### NOTE

The VOLTS/DIV shaft end is molded to form a key that fits into the cam. Attempting to force the shaft into the cam when it is not properly lined up, will damage the cam switch.

- 5. Line the VOLTS/DIV knob and shaft up with the cam and slide into place. When the shaft and cam are lined up, the shaft slides into the cam easily.
- 6. Reinstall the VOLTS/DIV VAR knob and shaft, and tighten the set screws.

# Cam Switch Repair and Replacement

A cam switch is actually an assembly consisting of a cam rotated by a front panel control and a set of contacts on an adjacent circuit board.



Repair of cam switches should be undertaken only by experienced repair personnel. Switch alignment and spring tension of the contacts must be carefully maintained for proper operation of the switch. For assistance in repair of the cam switches, contact your local Tektronix Field Office or representative.

**Cleaning.** If the contact is not obviously damaged, try cleaning it before replacing. Follow the cleaning procedures in the order given; the first ones are the easiest.



When cleaning cam switch contacts:

- 1. Don't use cleaners, detergents, or lubricants which leave a residue. The residue can interfere with the high-frequency response of the contact. Also, the residue will attract dust and cause the contact to require frequent cleaning.
- 2. Don't use any cleaners which contain fluorocarbons. These will damage the cam portion of the switch. Fluorocarbons also damage the circuit board material used in some instruments.
- 3. Don't use anything that could snag the contact, like a cotton swab.
- 4. Don't scrape the pad. If the gold is removed from the pad, the pad will oxidize and cause future problems.
- 5. Don't bend the contacts. This may temporarily fix the problem. However, bending the contact damages its self-cleaning action and causes problems in the future.

Use the following procedures to clean the contacts:

- 1. Operate the switch several times. The wiping action may clean the contacts.
- 2. Blow low pressure air in the area of the contact while operating the switch.
- 3. Flush the contact with isopropyl alcohol and blow dry with low-pressure air. Isopropyl alcohol is flammable; avoid its use near open flame or other potential sources of ignition.

If the above procedures don't work, replace the contact strip. If cleaning the switch restores continuity, check to ensure that the contact wipes across the pad. If the contact does not wipe, replace the contact strip.

Contact Replacement. Cam Switch contacts in this instrument are part of a contact strip assembly. Refer to the mechanical parts list for ordering information.

If you do not have a replacement contact strip assembly, bend the contact for a temporary repair. If you do bend the contact, make note of its location and the symptom it causes. This will speed repair if the contact fails before you can make permanent repairs.

#### **Delay Line Replacement**

To remove the delay line from the instrument:

- 1. Remove the vertical amplifier. See Vertical Amplifier Replacement for instructions.
- 2. Remove the three cable wrap ends from the back of the vertical chassis by unfastening the three nuts.
- 3. Unsolder the two wires at each end of the delay line where they connect to the board. The darker colored wires go to the solder connections nearest the index marks on the board.
- 4. Remove the two screws holding the cable end clamps to the board.
- 5. To reinstall the delay line, reverse the above procedure.

# **Power Supply Board Replacement**

To remove the Low Voltage Power Supply from the instrument:

- 1. Remove the two retaining screws holding the heat sink to the rear subpanel.
- 2. Remove the bolts near C743 and C722 (the ones holding the Power Supply board to the crt shield). The other two bolts hold the transformer to the Power Supply board.
- 3. Disconnect P7 from J7 on the Interface board by lifting the Power Supply board and transformer out. (See Fig. 5-7).

To reinstall the Power Supply board, reverse the above procedure.

# **Time Base Replacement**

To remove the Time Base from the instrument:

- 1. Remove the Vertical Amplifier. See Vertical Amplifier Replacement for instructions.
- 2. Support the Time Base while removing the retaining screw in the upper right corner (near the POSITION control), the post by the LEVEL potentiometer, and the post in the lower right corner.
- 3. Carefully remove the leads from P2344 (a red on white crt lead to the side of P2344 and a green on white crt lead to the + side of P2344).
- 4. Remove P2 (see Fig. 5-7) from J2 on the Interface board by pulling the entire Time Base toward the right side of the instrument. Be careful not to bend the pins.

To reinstall the TIME BASE, reverse the above procedure.

To remove the Trigger board, unsolder the coaxial cable from the X connector and unplug the board from the Horizontal board by pulling out and toward the back of the instrument.

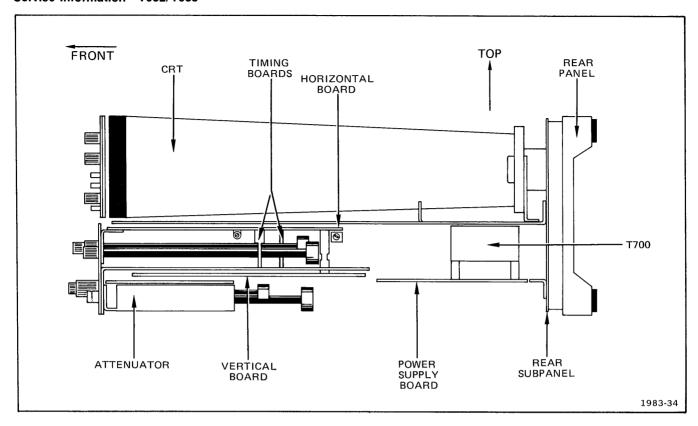


Fig. 5-8. Circuit board locations (on right side of crt).

To remove the Timing board, first remove the SEC/DIV knob and the POSITION control knob and shaft assembly. Then unplug the Timing board from the Horizontal board and pull the SEC/DIV shaft out of the front panel. To reinstall the timing board, reverse the procedure.

#### Interface Board Replacement

To remove the Interface board from the instrument:

- 1. Remove the Vertical Amplifier and Time Base.
- 2. Use a small screwdriver to remove the clip holding Q458 to the rear subpanel.
- 3. Remove the front-panel FOCUS and INTENSITY knobs and shafts.
- 4. Remove the high-voltage shield (two screws) and the two posts underneath the shield.

- 5. Disconnect the following plugs from the Interface board:
  - a. Cal Out (P24, unmarked on some boards), a brown on white wire that goes to PROBE ADJ on front panel.
  - b. P419 from J419 (a red on white wire from pin marked Z Axis that goes to EXT Z AXIS INPUT connector on back panel). Push wire through hole in board.
  - c. P470 from J470, (two plugs, each containing a red wire and a black wire that goes through hole in crt shield).

#### NOTE

To disconnect J475, J466, and J465, lift the cable retainers with a screwdriver until you can remove the cable.

- d. Unplug P465 from J465 (a 4-pin plug); P466 from J466 (yellow on white single wire); and P475 from J475 (a 4-pin plug).
- e. Unplug P138 from J138 (a blue on white wire); P148 from J148 (a brown on white wire); pull wires down through holes in board.

# WARNING

The crt anode and the output terminal of high-voltage multiplier U460 may retain a 10,000 volt charge after the instrument is turned off. To avoid electrical shock, ground both the output terminal of U460 and the crt high-voltage anode lead to chassis around.

- f. Remove the high voltage lead from U460 (large white lead that goes the crt).
- 6. Remove the five retaining screws.
- 7. Disconnect J7 from P7 on Power Supply board by lifting the Interface board toward the top and back of the instrument so that the POWER (ON) light pipe disengages from DS796 housing, and the BEAM FINDER and OFF/ON (POWER) buttons slide back out of the front panel as J7 and P7 separate.
- 8. Unsolder the power cord conductors (a blue wire and a brown wire) from the back of the board.

To replace the Interface board, reverse the above procedure.

# Cathode Ray Tube (CRT) Replacement

# WARNING

Use care when handling a crt. Protective clothing and safety glasses should be worn. Avoid striking it on any object which might cause it to crack or implode. When storing a crt, place it in a protective carton or set it face down on a smooth surface in a protective location with a soft mat under the faceplate to protect it from scratches.

To remove the crt from the instrument, disconnect power cord plug from power input source and remove cabinet halves. Turn the front of the instrument toward you, and perform the following steps.

1. Remove the two screws holding the high-voltage shield over the Interface board, and remove the shield.

# WARNING

The crt anode and the output terminal of highvoltage multiplier U460 may retain a 10,000 volt charge after the instrument is turned off. To avoid electrical shock, ground both the output terminal of U460 and the crt high-voltage anode lead to chassis ground.

- 2. Grip the insulated portion of the anode lead and disconnect it from the U460 output terminal, and ground both terminals to chassis. Pull the free end of the anode lead out through the chassis holes. This lead is part of the crt and is supplied with the new crt.
- 3. Grip the 14-pin crt base socket, and pull it backward off the base of the crt.
- 4. Disconnect the four-pin plug from J470 on the Interface board. This terminates two black wires and two red wires from the trace rotation (TR ROT) and Y AXIS controls.
- 5. Remove the three screws holding the Vertical Amplifier to the chassis, and separate the amplifier from the Interface board by pulling downward to disconnect the P4 connector.
- 6. Disconnect the two connectors from the pins on the left side of the crt neck. These are the vertical deflection plate leads, the upper wire color is blue on white and the lower wire color is brown on white.
- 7. Disconnect the two connectors from the pins on the bottom of the crt neck. These are the Horizontal Deflection Plate leads; the left wire color is red on white and the right wire color is green on white.

#### Service Information—T932/T935

8. Carefully raise the plastic crt front support ring upward and to the right to disengage the two buttons on the bottom and the two buttons on the left side from the instrument chassis.

#### NOTE

Although it may be convenient, it is not necessary to remove any front panel or subpanel controls or parts. The foregoing steps will allow the front of the crt to be moved to the right of its normal position while slightly bending the plastic subpanel to allow clearance for the crt to be pulled forward out of its shield.

- 9. Gently press forward on the crt base, supporting the front of the crt, until the front extends far enough forward to grasp. Pull the crt the rest of the way out of its shield.
  - 10. To install a new crt, reverse the above procedure.

#### REPACKAGING FOR SHIPMENT

If the Tektronix instrument is to be shipped to a Tektronix Service Center for service or repair, attach a tag showing: owner (with address) and the name of an individual at your firm that can be contacted. Include complete instrument serial number and a description of the service required.

Save and re-use the package in which your instrument was shipped. If the original packaging is unfit for use or not available, repackage the instrument as follows:

Surround the instrument with polyethylene sheeting to protect the finish of the instrument. Obtain a carton of corrugated cardboard of the correct carton strength and having inside dimensions of no less than six inches more than the instrument dimensions. Cushion the instrument by tightly packing three inches of dunnage or urethane foam between carton and instrument, on all sides. Seal carton with shipping tape or industrial stapler.

The carton test strength for your instrument is 275 pounds.

# REPLACEABLE ELECTRICAL PARTS

#### PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

#### SPECIAL NOTES AND SYMBOLS

X000 Part first added at this serial number
00X Part removed after this serial number

#### ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

# **ABBREVIATIONS**

ACTR	ACTUATOR	PLSTC	PLASTIC
ASSY	ASSEMBLY	QTZ	QUARTZ
CAP	CAPACITOR	RECP	RECEPTACLE
CER	CERAMIC	RES	RESISTOR
CKT	CIRCUIT	RF	RADIO FREQUENCY
COMP	COMPOSITION	SEL	SELECTED
CONN	CONNECTOR	SEMICOND	SEMICONDUCTOR
ELCTLT	ELECTROLYTIC	SENS	SENSITIVE
ELEC	ELECTRICAL	VAR	VARIABLE
INCAND	INCANDESCENT	ww	WIREWOUND
LED	LIGHT EMITTING DIODE	XFMR	TRANSFORMER
NONWIR	NON WIREWOUND	XTAL	CRYSTAL

6-1

# CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
00853 01121 01295	SANGAMO ELECTRIC CO., S. CAROLINA DIV. ALLEN-BRADLEY COMPANY TEXAS INSTRUMENTS, INC., SEMICONDUCTOR	P O BOX 128 1201 2ND STREET SOUTH	PICKENS, SC 29671 MILWAUKEE, WI 53204
01230	GROUP SELECTION SELECTION	P O BOX 5012, 13500 N CENTRAL EXPRESSWAY	DALLAS, TX 75222
02735	RCA CORPORATION, SOLID STATE DIVISION	ROUTE 202	SOMERVILLE, NY 08876
04222	AVX CERAMICS, DIVISION OF AVX CORP.	P O BOX 867, 19TH AVE. SOUTH	MURTLE BEACH, SC 29577
04713	MOTOROLA, INC., SEMICONDUCTOR PROD. DIV.	5005 E MCDOWELL RD, PO BOX 20923	•
05091	TRI-ORDINATE CORPORATION	343 SNYDER AVENUE	BERKELEY HEIGHTS, NJ 07922
07263	FAIRCHILD SEMICONDUCTOR, A DIV. OF		
	FAIRCHILD CAMERA AND INSTRUMENT CORP.	464 ELLIS STREET	MOUNTAIN VIEW, CA 94042
07910	TELEDYNE SEMICONDUCTOR	12515 CHADRON AVE.	HAWTHORNE, CA 90250
08806	GENERAL ELECTRIC CO., MINIATURE		
	LAMP PRODUCTS DEPARTMENT	NELA PARK	CLEVELAND, OH 44112
11237	CTS KEENE, INC.	3230 RIVERSIDE AVE.	PASO ROBLES, CA 93446
12697	CLAROSTAT MFG. CO., INC.	LOWER WASHINGTON STREET	DOVER, NH 03820
14099	SEMTECH CORP.	652 MITCHELL RD.	NEWBURY PARK, CA 91320
15818	TELEDYNE SEMICONDUCTOR	1300 TERRA BELLA AVE.	MOUNTAIN VIEW, CA 94043
19396	IILINOIS TOOL WORKS, INC. PAKTRON DIV.	900 FOLLIN LANE, SE	VIENNA, VA 22180
27014	NATIONAL SEMICONDUCTOR CORP.	2900 SEMICONDUCTOR DR.	SANTA CLARA, CA 95051
27264	MOLEX PRODUCTS CO.	5224 KATRINE AVE.	DOWNERS GROVE, IL 60515
50157	N. L. INDUSTRIES, INC., ELECTRONICS		
	DEPT.	P. O. BOX 787	MUSKEGON, MI 49445
55210	GETTIG ENG. AND MFG. COMPANY	PO BOX 85, OFF ROUTE 45	SPRING MILLS, PA 16875
56289	SPRAGUE ELECTRIC CO.		NORTH ADAMS, MA 01247
71400	BUSSMAN MFG., DIVISION OF MCGRAW-		
	EDISON CO.	2536 W. UNIVERSITY ST.	ST. LOUIS, MO 63107
72982	ERIE TECHNOLOGICAL PRODUCTS, INC.	644 W. 12TH ST.	ERIE, PA 16512
73138	BECKMAN INSTRUMENTS, INC., HELIPOT DIV.	2500 HARBOR BLVD.	FULLERTON, CA 92634
75042	TRW ELECTRONIC COMPONENTS, IRC FIXED		
	RESISTORS, PHILADELPHIA DIVISION	401 N. BROAD ST.	PHILADELPHIA, PA 19108
80009	TEKTRONIX, INC.	P O BOX 500	BEAVERTON, OR 97077
80031	ELECTRA-MIDLAND CORP., MEPCO DIV.	22 COLUMBIA ROAD	MORRISTOWN, NJ 07960
81483	INTERNATIONAL RECTIFIER CORP.	9220 SUNSET BLVD.	LOS ANGELES, CA 90069
82389	SWITCHCRAFT, INC.	5555 N. ELSTON AVE.	CHICAGO, IL 60630
90201	MALLORY CAPACITOR CO., DIV. OF		
	P. R. MALLORY AND CO., INC.	3029 E WASHINGTON STREET	
		P O BOX 372	INDIANAPOLIS, IN 46206
91637	DALE ELECTRONICS, INC.	P. O. BOX 609	COLUMBUS, NE 68601

OLA Na	Tektronix	Serial/Mode			Name of Day 11 th		Mfr.	
Ckt No.	Part No.	Eff	Dscont		Name & Description		Code	Mfr Part Number
Al <sup>1</sup>	670-3738-00				ASSY: INTERFACE	8	30009	670-3738-00
Al <sup>1</sup>	670-3738-01				ASSY: INTERFACE		30009	670-3738-01
All	670-3738-02		B011359		ASSY: INTERFACE		30009	670-3738-02
Al <sup>2</sup>	670-3738-04		<b>D010100</b>		ASSY: INTERFACE		30009	670-3738-04
	670-3738-00	B010100	B010129	CKT BOARD	ASSY:INTERFACE	8	30009	670-3738-00
Al <sup>2</sup>	670-3738-01		B010349	CKT BOARD	ASSY: INTERFACE	8	30009	670-3738-01
$Al_2^2$	670-3738-02		B011663		ASSY: INTERFACE	8	30009	670-3738-02
Al <sup>2</sup>	670-3738-04				ASSY: INTERFACE	8	30009	670-3738-04
A2	670-3980-00				ASSY:L.V. POWER SUPPLY	8	30009	670-3980-00
A6 <sup>1</sup>	670-3972-00	в010100	B010349	CKT BOARD	ASSY:ATTENUATOR CH1	8	30009	670-3972-00
A6 <sup>1</sup>	670-3972-01	во10350	в010799	CKT BOARD	ASSY:ATTENUATOR CHl	8	30009	670-3972-01
A61	670-3972-03	B010800		CKT BOARD	ASSY:ATTENUATOR CH1	8	30009	670-3972-03
A62	670-3972-00		B010349	CKT BOARD	ASSY:ATTENUATOR CH1	8	30009	670-3972-00
A62	670-3972-01		B010949	CKT BOARD	ASSY:ATTENUATOR CH1	8	30009	670-3972-01
A6 <sup>2</sup>	670-3972-03	B010950		CKT BOARD	ASSY:ATTENUATOR CHl	. 8	30009	670-3972-03
A71	670-3973-00	B010100	B010349	CKT BOARD	ASSY:ATTENUATOR CH2	8	30009	670-3973-00
A71	670-3973-01	. волоз50	B010799		ASSY:ATTENUATOR CH2		30009	670-3973-01
A71	670-3973-03	B010800		CKT BOARD	ASSY: ATTENUATOR CH2		30009	670-3973-03
A72	670-3973-00	B010100	B010349	CKT BOARD	ASSY:ATTENUATOR CH2	. 8	30009	670-3973-00
A72	670-3973-01	B010350	в010949		ASSY:ATTENUATOR CH2		30009	670-3973-01
A72	670-3973-03	B010950		CKT BOARD	ASSY:ATTENUATOR CH2	Ω	30009	670-3973-03
A81	670-3736-00		B010415		ASSY:VERTICAL		30009	670-3736-00
A81	670-3736-01	B010416	B010724		ASSY: VERTICAL		30009	670-3736-01
A81	670-3736-02	B010725			ASSY:VERTICAL		30009	670-3736-02
A82	670-3736-00	во10100	B010431		ASSY: VERTICAL		30009	670-3736-00
A82	670 2726 01	2010420	2010740					
A82 A82	670-3736-01		B010749		ASSY: VERTICAL		30009	670-3736-01
All1	670-3736-02 670-4230-00		D011001		ASSY:VERTICAL		30009	670-3736-02
All <sup>1</sup>	670-4230-00		B011081		ASSY:TRIGGER		30009	670-4230-00
A11 <sup>2</sup>	670-4230-01		в011303		ASSY:TRIGGER ASSY:TRIGGER		30009	670-4230-01
	070 4230 00	DOTOTOO	D011303	CKI BOARD	ASSI:IRIGGER	8	30009	670-4230-00
A11 <sup>2</sup>	670-4230-01	B011304		CKT BOARD	ASSY:TRIGGER	8	30009	670-4230-01
A121	670-4118-00	B010100	B010374	CKT BOARD	ASSY:HORIZONTAL	8	30009	670-4118-00
A121	670-4118-01		B010734	CKT BOARD	ASSY:HORIZONTAL	8	30009	670-4118-01
Al2l	670-4118-02		в011793	CKT BOARD	ASSY:HORIZONTAL	. 8	30009	670-4118-02
A121	670-4118-03	B011794		CKT BOARD	ASSY:HORIZONTAL	8	30009	670-4118-03
A12 <sup>2</sup>	670-3737-00	во10100	B010449	CKT BOARD	ASSY:HORIZONTAL	8	30009	670-3737-00
A12 <sup>2</sup>	670-3737-01	B010450	B010769	CKT BOARD	ASSY:HORIZONTAL		30009	670-3737-01
A122	670-3737-02	B010770	B012318	CKT BOARD	ASSY:HORIZONTAL	8	30009	670-3737-02
A12 <sup>2</sup>	670-3737-03			CKT BOARD	ASSY:HORIZONTAL	8	30009	670-3737-03
A131,3	672-0551-00	)		CKT BOARD	ASSY:TIMING W/ROTARY SW	8	30009	672-0551-00
A13 2,4	672-0533-00	)		CKT BOARD	ASSY:TIMING W/ROTARY SW	8	30009	672-0533-00
A14)								
C24	281-0773-00	)		CAP.,FXD.	CER DI:0.01UF,10%,100V	7	72982	8005H9AADW5R103K
C114	281-0207-00				PLSTC:2-18PF,100V		30031	
C115	283-0198-00				CER DI:0.22UF,20%,50V		72982	,
C118	281-0207-00	)			PLSTC:2-18PF,100V		30031	HT10EA/218
C119	281-0768-00	)			CER DI:470PF,20%,100V		2982	314022X5P0471M
C124	281-0762-00	)		CAP. FXD.	CER DI:27PF,20%,100V	7	72982	390-049X5P0270M
C129	281-0768-00				CER DI:470PF,20%,100V		2982	314022X5P0471M
C412	281-0775-00	)			CER DI:0.1UF,20%,50V		2982	
C423 <sup>1</sup>	281-0627-00	B010100	B011561		CER DI:1PF,+/-0.25PF,500V		2982	
C4231	281-0661-00	B011562		CAP.,FXD,	CER DI:0.8PF,+/-0.1PF,500V		2982	

REV. A AUG. 1977 6-3

<sup>1&</sup>lt;sub>T932</sub> only 2<sub>T935</sub> only 3<sub>Furnished</sub> as a unit with S2250 4<sub>Furnished</sub> as a unit with S2550A,B

Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Part Number
C423 <sup>1</sup>			<del></del>		
C4231 C4231	281-0627-00		CAP.,FXD,CER DI:1PF,+/-0.25PF,500V	72982	301-000C0K0109C
	281-0661-00		CAP.,FXD,CER DI:0.8PF,+/-0.1PF,500V	72982	301-000C0K0808B
C424	281-0775-00		CAP.,FXD,CER DI:0.luf,20%,50V	72982	8005H9AABZ5U104M
C425	281-0775-00		CAP.,FXD,CER DI:0.luf,20%,50V	72982	8005H9AABZ5U104M
C433	285-1099-00		CAP., FXD, PLSTC:0.047UF, 20%, 200V	19396	PT605C473M
C434	285-1099-00		CAP.,FXD,PLSTC:0.047UF,20%,200V	19396	PT605C473M
C435	285-1099-00		CAP., FXD, PLSTC:0.047UF, 20%, 200V	19396	PT605C473M
C443	290-0297-00	ı	CAP., FXD, ELCTLT: 39UF, 10%, 10V	56289	150D396X9010B2
C445	281-0775-00	•	CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C455	281-0773-00	(	CAP.,FXD,CER DI:0.01UF,10%,100V	72982	8005H9AADW5R103K
C458	290-0405-00		CAP.,FXD,ELCTLT:10UF,+50-10%,150V	56289	30D106F150DD4
C462	283-0034-00		CAP.,FXD,CER DI:0.005UF,20%,4000V	56289	41C107A
C463	283-0034-00		CAP., FXD, CER DI:0.005UF, 20%, 4000V	56289	41C107A
C464	283-0034-00		CAP., FXD, CER DI:0.005UF, 20%, 4000V	56289	41C107A
C465	283-0034-00		CAP.,FXD,CER DI:0.005UF,20%,4000V	56289	41C107A
C403	203 0034 00	,	CAL .   LAD   CER DI. 0.00301   20%   4000	30203	4101078
C466	283-0034-00	)	CAP.,FXD,CER DI:0.005UF,20%,4000V	56289	41C107A
C476	281-0773-00		CAP.,FXD,CER DI:0.01UF,10%,100V	72982	
C477	281-0773-00	)	CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	
C478	281-0773-00	)	CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C722	290-0750-00	)	CAP., FXD, ELCTLT: 100UF, +50-10%, 160V	56289	D76244
C738	290-0744-00	)	CAP.,FXD,ELCTLT:3.3UF,+50-10%,160V	90201	TT3R3U160B0L3P
C742	290-0751-00		CAP.,FXD,ELCTLT:2200UF,+50-10%,16V	56289	D76245
C743	290-0751-00		CAP.,FXD,ELCTLT:2200UF,+50-10%,16V	56289	
C746	281-0773-00		CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	
C756	281-0773-00		CAP.,FXD,CER DI:0.01UF,10%,100V	72982	
			,,		
C758	290-0107-00	)	CAP., FXD, ELCTLT: 25UF, +75-10%, 25V	56289	30D256G025DB9
C763	281-0773-00	)	CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C774	281-0773-00	)	CAP.,FXD,CER DI:0.01UF,10%,100V	72982	8005H <b>9AADW</b> 5R103K
C778	290-0107-00		CAP., FXD, ELCTLT: 25UF, +75-10%, 25V	56289	30D256G025DB9
C796	290-0164-00	0	CAP.,FXD,ELCTLT:lUF,+50-10%,150V	56289	30D105F150BA2
C2101	281-0651-0	0	CAP.,FXD,CER DI:47PF,5%,200V	72982	374-001T2H0470J
C2102	281-0775-0		CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8005H9AABZ5U104M
C2103	281-0528-0		CAP., FXD, CER DI:82PF, +/-8.2PF, 500V	72982	
C2106	281-0775-0		CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C2107	281-0797-0		CAP.,FXD,CER DI:15PF,10%,100V	72982	
00110	201 0762 0	•	OND EVD OED DT. 4755 300 3000	70000	2000409570470**
C2113	281-0763-0		CAP., FXD, CER DI:47PF, 10%, 100V	72982	390049X5P0470K
C2123	281-0773-0		CAP.,FXD,CER DI:0.01UF,10%,100V CAP.,FXD,CER DI:0.1UF,20%,50V	72982	
C2125	281-0775-0		· · · · · · · · · · · · · · · · · · ·	72982	
C2128 C2132	281-0773-0 290-0297-0		CAP.,FXD,CER DI:0.01UF,10%,100V CAP.,FXD,ELCTLT:39UF,10%,10V	72982 56289	8005 <b>H9AADW5</b> R103K 150D396X9010 <b>B</b> 2
C2132	290-0297-0	0	CAF., FAD, ELCILI : 390F, 104, 10V	30209	13003968901082
C2144	281-0775-0	0	CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C2149	290-0183-0	0	CAP., FXD, ELCTLT: lUF, 10%, 35V	56289	162D105X9035CD2
C2156	281-0775-0		CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8005H9AABZ5U104M
C2162	290-0135-0	0	CAP., FXD, ELCTLT: 15UF, 20%, 20V	56289	150D156X0020B2
C2163	281-0763-0	0	CAP., FXD, CER DI:47PF, 10%, 100V	72982	390049X5P0470K
C2166	290-0183-0	0	CAP.,FXD,ELCTLT:1UF,10%,35V	56289	162D105X9035CD2
C2171	290-0183-0		CAP.,FXD,ELCTLT:1UF,10%,35V	56289	162D105X9035CD2
C2174	281-0773-0		CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	
C2175	283-0081-0		CAP., FXD, CER DI:0.1UF, +80-20%, 25V	56289	
C2176	281-0774-0		CAP., FXD, CER DI:0.022UF, 20%, 100V	72982	
		-		. 2302	- ,
C2181	281-0775-0	0	CAP.,FXD,CER DI:0.1UF,20%,50V	<b>7</b> 2982	8005H9AABZ5U104M
C2212	281-0 <b>775-</b> 0	00	CAP.,FXD,CER DI:0.1UF,20%,50V	72982	
C2226	290-0135-0	00	CAP.,FXD,ELCTLT:15UF,20%,20V	56289	150D156X0020B2

<sup>1&</sup>lt;sub>T935</sub> only

6-4

	Tektronix	Serial/Mod	lel No.		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
C2233	283-0706-00			CAP.,FXD,MICA D:91PF,+/-1PF,500V	00853	D15-5E910F0
C2234	281-0775-00			CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8005H9AABZ5U104M
C2235	281-0216-00			CAP., VAR, CER DI:0.8-6.8PF, 400V	80031	
C2236	290-0135-00			CAP., FXD, ELCTLT:15UF, 20%, 20V	56289	150D156X0020B2
C2245	281-0759-00			CAP.,FXD,CER DI:22PF,10%,100V	72982	390-049X5P0220K
C2246 <sup>1</sup>	281-0763-00	B010100	B010179X	CAP.,FXD,CER DI:47PF,10%,100V	72982	390049X5P0470K
C2246 <sup>2</sup>	281-0763-00	B010100	B010179X	CAP., FXD, CER DI:47PF, 10%, 100V	72982	390049X5P0470K
	0 <sup>1</sup> 295-0183-00 0 <sup>2</sup> 295-0 <b>1</b> 79 <b>-</b> 00			CAP., SET, MTCHD:1.0UF,0.01UF,1.0UF,0.01UF	80009	295-0183-00
C2252A,E				CAP., SET, MTCHD: 0.01UF, 1.0UF, 1%	80009	295-0179-00
C22/4	281-0773-00			CAP.,FXD,CER DI:0.01UF,10%,100V	72982	8005H9AADW5R103K
C2275	290-0167-00			CAP.,FXD,ELCTLT:10UF,20%,15V	56289	150D106X0015B2
C2276	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C2278	281-0758-00			CAP., FXD, CER DI:15PF, 20%, 100V	72982	314022C0G0150M
C2317	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	
C2325	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C2327	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C2337 <sup>1</sup>	283-0129-00		B010449	CAP., FXD, CER DI:0.56UF, 20%, 100V	56289	725C7
C2337 <sup>1</sup> C2337 <sup>2</sup>	290-0480-00		-010400	CAP.,FXD,ELCTLT:0.5UF,+50-10%,200V	80009	290-0480-00
C2337 <sup>2</sup>	283-0129-00		B010499	CAP., FXD, CER DI:0.56UF, 20%, 100V	56289	725C7
	290-0480-00	в010500		CAP., FXD, ELCTLT: 0.5UF, +50-10%, 200V	80009	290-0480-00
C2517 <sup>2</sup>	290-0135-00			CAP., FXD, ELCTLT: 15UF, 20%, 20V	56289	150D156X0020B2
C2521 <sup>2</sup>	281-0758-00			CAP., FXD, CER DI:15PF, 20%, 100V	72982	314022C0G0150M
C2525 <sup>2</sup>	281-0763-00			CAP., FXD, CER DI:47PF, 10%, 100V	72982	
C2533 <sup>2</sup> C2535 <sup>2</sup>	281-0759-00			CAP.,FXD,CER DI:22PF,10%,100V	72982	390-049X5P0220K
	281-0216-00			CAP., VAR, CER DI:0.8-6.8PF, 400V	80031	2222-801-96024
C2536 <sup>2</sup>	283-0632-00			CAP.,FXD,MICA D:87PF,1%,100V	00853	D151E870F0
C2539 <sup>2</sup>	290-0135-00			CAP.,FXD,ELCTLT:15UF,20%,20V	56289	150D156X0020B2
C2544 <sup>2</sup>	281-0759-00			CAP.,FXD,CER DI:22PF,10%,100V	72982	390-049x5P0220K
C2546 <sup>2</sup> C2548 <sup>2</sup>	281-0763-00		B0101/9X	CAP.,FXD,CER DI:47PF,10%,100V	72982	390049X5P0470K
C2548-	281-0763-00			CAP., FXD, CER DI:47PF, 10%, 100V	72982	390049X5P0470K
C4101	281-0541-00			CAP., FXD, CER DI:6.8PF, 10%, 500V	72982	301-000C0H0689D
C4102	285-1124-00			CAP., FXD, PLSTC: 0.022UF, 20%, 400V	19396	PP721E223M
C <b>4104</b>	281-0207-00			CAP., VAR, PLSTC: 2-18PF, 100V	80031	HT10EA/218
C4105	281-0214-00			CAP., VAR, CER DI:0.5-3PF, 400V	80031	2222-801-96138
C4106	283-0213-00			CAP.,FXD,CER DI:300PF,5%,100V	72982	8121N130A301J
C4113	281-0207-00			CAP., VAR, PLSTC: 2-18PF, 100V	80031	HT10EA/218
C41141	281-0214-00		<b>B01</b> 0599	CAP., VAR, CER DI:0.5-3PF, 400V	80031	2222-801-96138
C4114 <sup>1</sup>	281-0220-00			CAP., VAR, CER DI:1-5.5PF, 400V	80031	2222-801-96139
C4114 <sup>2</sup> C4114 <sup>2</sup>	281-0214-00		B010799	CAP., VAR, CER DI:0.5-3PF, 400V	80031	2222-801-96138
C4114-	281-0220-00	B010800		CAP., VAR, CER DI:1-5.5PF, 400V	80031	2222-801-96139
C4116	281-0759-00			CAP.,FXD,CER DI:22PF,10%,100V	72982	390-049X5P0220K
C4122	281-0773-00		<b>B01</b> 0329	CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C4122	283-0002-00			CAP.,FXD,CER DI:0.01UF,+80-20%,500V	72982	
C4143	281-0763-00			CAP.,FXD,CER DI:47PF,10%,100V	72982	390049X5P0470K
C4154	281-0204-00			CAP., VAR, PLSTC: 2-22PF, 100V	80031	C010EA-20E
C4156	281-0546-00			CAP.,FXD,CER DI:330PF,10%,500V	04222	7001-1380
C4158	281-0788-00			CAP., FXD, CER DI:470PF, 10%, 100V	72982	8005H9AADW5R471K
C4166	283-0119-00			CAP.,FXD,CER DI:2200PF,5%,200V	72982	
C4168	281-0788-00			CAP., FXD, CER DI:470PF, 10%, 100V	72982	
C4177	281-0788-00			CAP.,FXD,CER DI:470PF,10%,100V	72982	8005H9AADW5R471K
C4182 <sup>1</sup>	281-0759-00			CAP.,FXD,CER DI:22PF,10%,100V	72982	390-049X5P0220K
C4182 <sup>2</sup>	281-0759-00		B010749X	CAP.,FXD,CER DI:22PF,10%,100V	72982	390-049X5P0220K
C4187	281-0788-00	ı		CAP., FXD, CER DI:470PF, 10%, 100V	72982	8005H9AADW5R471K

<sup>1</sup> T932 only 2 T935 only

REV. A AUG. 1977

# Replaceable Electrical Parts—T932/T935

	Tektronix	Serial/Mod	el No	•	Mfr	
Ckt No.		Eff	Dscont	Name & Description	Code	Mfr Part Number
			DSCOTT		Coue	Will Fait Nulliber
C4196	281-0792-00			CAP.,FXD,CER DI:82PF,10%,100V	72982	390049X5P0820K
C4201	281-0541-00			CAP.,FXD,CER DI:6.8PF,10%,500V	72982	301-000C0H0689D
C4202	285-1124-00			CAP., FXD, PLSTC:0.022UF, 20%, 400V	19396	PP721E223M
C4204 C4205	281-0207-00			CAP., VAR, PLSTC: 2-18PF, 100V	80031	•
C4205	281-0214-00			CAP., VAR, CER DI:0.5-3PF, 400V	80031	2222-801-96138
C4206	283-0213-00			CAP.,FXD,CER DI:300PF,5%,100V	72982	8121N130A301J
C4213	281-0207-00			CAP., VAR, PLSTC: 2-18PF, 100V	80031	
C4214 <sup>1</sup>	281-0214-00	B010100	B010599	CAP., VAR, CER DI:0.5-3PF, 400V	80031	
C4214 <sup>1</sup>	281-0220-00	B010600		CAP., VAR, CER DI:1-5.5PF, 400V	80031	
C4214 <sup>2</sup>	281-0214-00	B010100	<b>B01</b> 0799	CAP., VAR, CER DI:0.5-3PF, 400V	80031	2222-801-96138
2						
C4214 <sup>2</sup>	281-0220-00	B010800		CAP., VAR, CER DI:1-5.5PF, 400V	80031	2222-801-96139
C4216	281-0759-00			CAP., FXD, CER DI:22PF, 10%, 100V	72982	390-049X5P0220K
C4222	281-0773-00	B010100	B010329	CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C4222	283-0002-00	B010330		CAP., FXD, CER DI:0.01UF, +80-20%, 500V	72982	811-546E103Z
C4233	281-0786-00			CAP., FXD, CER DI:150PF, 10%, 100V	<b>7</b> 2982	390049X5P0151K
C4243	281-0763-00			CAP.,FXD,CER DI:47PF,10%,100V	72982	390049X5P0470K
C4256	281-0546-00			CAP.,FXD,CER DI:330PF,10%,500V	04222	7001-1380
C4258	281-0788-00			CAP., FXD, CER DI:470PF, 10%, 100V	72982	8005H9AADW5R471K
C4266	283-0119-00			CAP., FXD, CER DI:2200PF, 5%, 200V	72982	
C4268	281-0788-00			CAP.,FXD,CER DI:470PF,10%,100V	72982	855-535B222J 8005H9AADW5R471K
				OH 171 ND / CHR D1.4/011 / 100 / 100 /	12902	6003AAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA
C4277	281-0788-00			CAP., FXD, CER DI:470PF, 10%, 100V	72982	8005H9AADW5R471K
C42821	281-0759-00	B010100	B010724X	CAP., FXD, CER DI:22PF, 10%, 100V	72982	390-049X5P0220K
C4282 <sup>2</sup>	281-0759-00	B010100	B010749X	CAP., FXD, CER DI:22PF, 10%, 100V	72982	390-049X5P0220K
C4287	281-0788-00			CAP., FXD, CER DI:470PF, 10%, 100V	72982	8005H9AADW5R471K
C4296	281-0792-00			CAP.,FXD,CER DI:82PF,10%,100V	72982	390049X5P0820K
	<b>.</b>			,		
C4302	281-0763-00			CAP., FXD, CER DI:47PF, 10%, 100V	72982	390049X5P0470K
C4306	281-0775-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8005H9AABZ5U104M
C4307	281-0763-00			CAP.,FXD,CER DI:47PF,10%,100V	72982	390049X5P0470K
C4308	281-0763-00			CAP., FXD, CER DI:47PF, 10%, 100V	72982	390049X5P0470K
C4312	281-0773-00			CAP.,FXD,CER DI:0.01UF,10%,100V	72982	8005H9AADW5R103K
C4315	281-0770-00			CAP.,FXD,CER DI:0.001UF,20%,100V	72982	314022X5P0102M
C4324	281-0775-00			CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8005H9AABZ5U104M
C4331	281-0773-00			CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C4332	281-0773-00			CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C4334 <sup>1</sup>	281-0773-00	XB010725		CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
					72302	0003H3AHDH3K103K
C4334 <sup>2</sup>	281-0773-00	XB010750		CAP., FXD, CER DI:0.01UF, 10%, 100V	72982	8005H9AADW5R103K
C4355 <sup>1</sup>	281-0786-00	XB010725		CAP.,FXD,CER DI:150PF,10%,100V	72982	390049x5P0151K
C4355 <sup>2</sup>	281-0786-00	XB010750		CAP.,FXD,CER DI:150PF,10%,100V	72982	390049X5P0151K
C4368	283-0111-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8121-N088Z5U104M
C4375	281-0788-00			CAP.,FXD,CER DI:470PF,10%,100V	72982	8005H9AADW5R471K
C4378	281-0762-00			CAP.,FXD,CER DI:27PF,20%,100V	70000	200 0404550504
C4376	281-0788-00			• •	72982	390-049X5P0270M
C4386	283-0111-00			CAP.,FXD,CER DI:470PF,10%,100V CAP.,FXD,CER DI:0.1UF,20%,50V	72982	
C4388	281-0762-00			· · · · · ·	72982	8121-N088Z5U104M
C4395	281-0600-00			CAP., FXD, CER DI:27PF, 20%, 100V	72982	390-049X5P0270M
04333	202 0000-00			CAP., FXD, CER DI:35PF, 10%, 500V	72982	308-000C0G0350K
C4396	281-0207-00			CAP., VAR, PLSTC: 2-18PF, 100V	80031	HT10EA/218
C4397	281-0207-00			CAP., VAR, PLSTC: 2-18PF, 100V	80031	HT10EA/218
C4398	281-0786-00			CAP., FXD, CER DI:150PF, 10%, 100V	72982	390049X5P0151K
C4410	283-0177-00			CAP., FXD, CER DI:1UF, +80-20%, 25V	72982	
C4411	283-0111-00			CAP.,FXD,CER DI:0.1UF,20%,50V	72982	8121-N088Z5U104M
04436	000 0111					
C4416	283-0111-00			CAP., FXD, CER DI:0.1UF, 20%, 50V	72982	8121-N088Z5U104M
C4417	283-0177-00			CAP.,FXD,CER DI:1UF,+80-20%,25V	72982	8131NO39 E 105Z

<sup>1</sup> T935 only 2 T932 only

6-6

	Tektronix	Serial/Mod	el No		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
CR26	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR27	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR416	152-0075-00			SEMICOND DEVICE:GE,25V,40MA	80009	
CR418	152-0141-02			SEMICOND DEVICE: SILICON, 30V, 150MA	07910	
CR437	152-0061-00			SEMICOND DEVICE: SILICON, 175V, 100MA	80009	152-0061-00
CR443	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR463	152-0639-00			SEMICOND DEVICE: RECT, SI, 10KV, 10MA	14099	SEF100
CR465	152-0639-00			SEMICOND DEVICE: RECT, SI, 10KV, 10MA	14099	
CR721	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, LA	80009	152-0066-03
CR722	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR723	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR724	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	
CR732	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR734	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR737	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR738	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, LA	80009	152-0066-03
CR741	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	
CR742	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR743	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR744	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR758	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	152-0066-03
CR764	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR765	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR766	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR767	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR778	152-0066-03			SEMICOND DEVICE: RECT, SI, 400V, 1A	80009	
CR2103	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2108 CR2112	152-0141-02 152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR2112	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CREEZE	132 0141 02			BEMICOND DEVICE:SILICON, 30V, 130MA	07910	1N4152
CR2124	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2181	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2182	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2183	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR2185	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2227	152-0141-02			SEMICOND DEVICE: SILICON, 30V, 150MA	07910	1N4152
CR2233	152-0141-02			SEMICOND DEVICE: SILICON, 30V, 150MA	07910	
CR22341			B010134	SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152
CR2234 <sup>1</sup> CR2234 <sup>2</sup>	152-0245-00		2010100	SEMICOND DEVICE:SILICON,10NA AT 5V	80009	
	152-0141-02	8010100	B010129	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2234 <sup>2</sup>	152-0245-00	B010130		SEMICOND DEVICE: SILICON, 10NA AT 5V	80009	152-0245-00
CR2317	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2326	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2331	152-0075-00			SEMICOND DEVICE:GE,25V,40MA	80009	152-0075-00
CR2332	152-0075-00			SEMICOND DEVICE:GE,25V,40MA	80009	152-0075-00
CR2334	152-0574-00			SEMICOND DEVICE:SILICON,120V,0.15A	80009	152-0574-00
CR2342	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2356	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	
CR2514 <sup>2</sup>				SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR2516 <sup>2</sup>	152-0141-02			SEMICOND DEVICE:SILICON,30V,150MA	07910	1N4152
CR2535 <sup>2</sup>	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR2536 <sup>2</sup>	152-0141-02			SEMICOND DEVICE:SILICON, 30V, 150MA	07910	
CR4122	152-0246-00			SEMICOND DEVICE:SILICON,400PIV,200MA	07910	CD12676

 $^{1}_{2}$ T932 only only only

REV. A AUG. 1977

	Taktroniy	Carial/Madal Na		N 4 £ ~	
Ckt No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Name & Description	Mfr Code	Mfr Dart Number
CKI NU.	rait ivo.	EII DSCOIIL	Name & Description	Code	Mfr Part Number
CR4222	152-0246-00		SEMICOND DEVICE:SILICON, 400PIV, 200MA	07910	CD12676
CR4331	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR4332	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR4335	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR4336	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR4338	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA	07010	14150
CR4346	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA SEMICOND DEVICE:SILICON,30V,150MA	07910 07910	
CR4347	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152 1N4152
CR4348	152-0141-02		SEMICOND DEVICE:SILICON,30V,150MA		1N4152 1N4152
CR4349	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA		1N4152 1N4152
				0/310	/
CR4355	152-0141-02	1	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
CR4357	152-0141-02	2	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR4358	152-0141-02		SEMICOND DEVICE:SILICON, 30V, 150MA	07910	1N4152
CR4359	152-0141-02	2	SEMICOND DEVICE:SILICON, 30V, 150MA	07910	lN4152
DL4380	119-0703-00	)	DELAY LINE, ELEC: 120 NS	80009	119-0703-00
DS463	150-0002 00	<b>.</b>	TAMP GLOW, O. F. Ma. CO./105ts		
DS465 DS465	150-0002-00		LAMP,GLOW: 0.5 MA 60/125V	08806	
DS796	150-0002-00 150-0035-00		LAMP,GLOW: 0.5 MA 60/125V	08806	
טפופע	130-0035-00	,	LAMP,GLOW:90V,0.3MA	08806	AlD-T
F700 <sup>1</sup>	159-0042-00	)	FUSE, CARTRIDGE: 3AG, 0.75A, 250V, FAST-BLOW	71400	AGC 3/4
F700 <sup>1</sup>	159-0029-00	)	FUSE, CARTRIDGE: 3AG, 0.3A, 250V, SLOW-BLOW	71400	•
F722	159-0051-00	)	FUSE, CARTRIDGE: 3AG, 0.062A, 250V, 20 SEC	71400	-
J2	131-1792-00		CONTACT ASSY, EL: 12 MALE CONTACT, FLAT WAFER	27264	09-70-2121
J4	131-1795-00		CONNECTOR, RCPT, :12 FEMALE CONTACT, RT-ANGLE	27264	
J7	131-1749-00		CONNECTOR, RCPT,: 10 FEMALE CONTACT	27264	
J419	131-0955-00		CONNECTOR, RCPT, :BNC, FEMALE, W/HARDWARE	05091	31-279
J2100	131-1802-00	)	CONNECTOR, RCPT, :15 CONTACTS	80009	131-1802-00
J2110	131-0106-02	2	CONNECTOR, RCPT, : BNC	80009	131-0106-02
J2250	131-1801-00		CONNECTOR, RCPT, :9 CONTACTS	80009	
J2260_	131-1802-00		CONNECTOR, RCPT, :15 CONTACTS	80009	
J2550 <sup>3</sup>	131-1801-00	)	CONNECTOR, RCPT, :9 CONTACTS		131-1801-00
J4100	131-0955-00	)	CONNECTOR, RCPT, : BNC, FEMALE, W/HARDWARE		31-279
J4200	131-0955-00	)	CONNECTOR, RCPT, : BNC, FEMALE, W/HARDWARE		31-279
				***************************************	31 <b>2</b> 73
L470	108-0819-00		COIL, TUBE DEFLE: X-Y ALIGNMENT	80009	108-0819-00
L472	108-0818-00	0	COIL, TUBE DEFLE: TRACE ROTATION	80009	108-0818-00
Q112	151-0199-00	o O	TRANSISTOR:SILICON, PNP	27014	CT65039
Q122	151-0199-00		TRANSISTOR: SILICON, PNP TRANSISTOR: SILICON, PNP	27014	ST65038 ST65038
Q134	151-0127-00		TRANSISTOR:SILICON, NPN		151-0127-00
Q136	151-0127-00		TRANSISTOR: SILICON, NPN		151-0127-00
Q144	151-0127-00		TRANSISTOR:SILICON, NPN	80009	151-0127-00
			·		
Q146	151-0127-00		TRANSISTOR: SILICON, NPN	80009	151-0127-00
Q416	151-0190-0		TRANSISTOR:SILICON, NPN	80009	151-0190-06
Q424	151-0190-0		TRANSISTOR: SILICON, NPN	80009	
Q426	151-0347-00		TRANSISTOR:SILICON, NPN	80009	151-0347-00
Q434	151-0350-0	υ	TRANSISTOR:SILICON, PNP	80009	151-0350-00
Q446	151-0126-0	0	TRANSISTOR: SILICON, NPN	15818	2N2484
Q454	151-0188-0		TRANSISTOR:SILICON,PNP	01295	2N3906
Q458	151-0423-0		TRANSISTOR:SILICON,NPN	01295	
Õ722	151-0347-0		TRANSISTOR: SILICON, NPN	80009	151-0347-00
272 <b>6</b>	151-0347-0		TRANSISTOR:SILICON, NPN	80009	151-0347-00
Q734	151-0347-0	0	TRANSISTOR:SILICON, NPN	80009	151-0347-00

 $<sup>^{1}</sup>_{2}$ For 100 to 120 volt operation  $^{2}_{2}$ For 220 to 240 volt operation  $^{3}_{1}$ T935 only

Ckt No.	Tektronix Part No.	Serial/Mod Eff	lel No. Dscont	Name & Description	Mfr Code	Mfr Part Number
Q736	151-0497-00			TRANSISTOR:SILICON, NPN	02725	DG1 4.7
Q <b>7</b> 52	151-0302-00			TRANSISTOR: SILICON, NPN	02735	RCA47
Q754	151-0302-00			·	04713	2N2222A
Q754 Q756				TRANSISTOR: SILICON, NPN	04713	2N2222A
	151-0478-00			TRANSISTOR: SILICON, NPN	01295	TIP31A
Q772	151-0301-00			TRANSISTOR: SILICON, PNP	04713	2N2907A
Q774	151-0301-00			TRANSISTOR:SILICON, PNP	04713	21120071
Q776	151-0478-00			TRANSISTOR:SILICON, NPN		2N2907A
Q792	151-0224-00				01295	TIP31A
Q796	151-0347-00			TRANSISTOR: SILICON, NPN	07263	
				TRANSISTOR:SILICON,NPN	80009	151-0347-00
Q2104	151-1042-02			TRANSISTOR: MATCHED PAIR FET	80009	151-1042-02
Q2106						
Q2108	151-0188-00			TRANSISTOR: SILICON, PNP	01295	2N3906
Q2122	151-0190-06			TRANSISTOR: SILICON, NPN	80009	151-0190-06
Q2124	151-0190-06			TRANSISTOR:SILICON,NPN		
Q2128	151-0188-00			TRANSISTOR:SILICON, PNP	80009	151-0190-06
2-220	131 0100 00			HANSISTOR: SILICON, PNP	01295	2N3906
Q2134	151-0188-00			TRANSISTOR: SILICON, PNP	01295	2N3906
Q2136	151-0188-00			TRANSISTOR: SILICON, PNP	01295	2N3906
Q2142	151-0224-00			TRANSISTOR: SILICON, NPN	07263	2N3904
Q2144	151-0224-00			TRANSISTOR: SILICON, NPN	07263	2N3904
Q2 <b>15</b> 2	151-0188-00			TRANSISTOR: SILICON, PNP	01295	2N3906
				·		
Q2 <b>164</b>	151-0190-06			TRANSISTOR:SILICON, NPN	80009	151-0190-06
Q2174	151-0188-00			TRANSISTOR:SILICON, PNP	01295	2N3906
Q2176 1	151-0188-00	B010100	<b>BO</b> 10769	TRANSISTOR: SILICON, PNP	01295	2N3906
Q2176 <sup>1</sup>	151-0216-02	B010770		TRANSISTOR:SILICON, PNP	80009	151-0216-02
õ2176 <sup>2</sup>	151-0188-00	B010100	B010734	TRANSISTOR: SILICON, PNP	01295	2N3906
Q2176 <sup>2</sup>	151-0216-02	B010725		MDANGTOMOD, GTI TOON, DND		
Q2242)	151-1042-02	B010735		TRANSISTOR: SILICON, PNP	80009	151-0216-02
Q2242 Q2244	131-1042-02			TRANSISTOR: MATCHED PAIR FET	80009	151-1042-02
	151 0100 06					
Q2246	151-0190-06			TRANSISTOR: SILICON, NPN	80009	151-0190-06
Q2274	151-0190-06			TRANSISTOR:SILICON, NPN	80009	151-0190-06
Q2314 <sup>1</sup>	151-0190-06	B010100	B010499	TRANSISTOR:SILICON, NPN	80009	151-0190-06
$\tilde{Q}_{2314}^{1}$	151-0192-00	B010500		TRANSISTOR:SILICON,NPN,SEL FROM MPS6521	80009	
Q2314 <sup>2</sup>	151-0190-06	B010100	B010449	TRANSISTOR: SILICON, NPN		151-0192-00
Q2314 <sup>2</sup>	151-0192-00	B010450	2010113		80009	151-0190-06
Q2326	151-0188-00	2010430		TRANSISTOR:SILICON,NPN,SEL FROM MPS6521 TRANSISTOR:SILICON,PNP	80009	151-0192-00
22320	131 0100 00			IMMBIBIOR: SILICON, PNP	01295	2N3906
Q2332	151-0188-00			TRANSISTOR:SILICON,PNP	01295	2N3906
Q2334	151-0124-00			TRANSISTOR: SILICON, NPN, SEL FROM 2N3501	80009	151-0124-00
Q2344	151-0124-00			TRANSISTOR:SILICON, NPN, SEL FROM 2N3501	80009	151-0124-00
Q2354	151-0190-06			TRANSISTOR: SILICON, NPN	80009	151-0190-06
Q2514 <sup>1</sup>	151-0188-00			TRANSISTOR: SILICON, PNP	01295	2N3906
				- ·······	02233	21.3300
Q2516 <sup>1</sup>	151-0188-00			TRANSISTOR: SILICON, PNP	01295	2N3906
Q2522 <sup>1</sup>	151-0190-06			TRANSISTOR: SILICON, NPN	80009	151-0190-06
Q2542)1	151-1042-02			TRANSISTOR:MATCHED PAIR FET	80009	151-1042-02
Q2544)					00003	2012 02
Q2546 <sup>1</sup>	151-0190-06			TRANSISTOR:SILICON, NPN	80009	151-0190-06
02540	151 0100 00					
Q2548 Q4122 <sup>2</sup>	151-0190-06		20201	TRANSISTOR: SILICON, NPN	80009	151-0190-06
04122	151-1090-01		B010415	TRANSISTOR: SILICON, DUAL, N-CHANNEL, FET	80009	151-1090-01
Q4122 <sup>2</sup>	151-1032-02			TRANSISTOR: SILICON, DUAL, N-CHANNEL, FET	80009	151-1032-02
Q4122 <sup>1</sup>	151-1090-01		B010431	TRANSISTOR:SILICON, DUAL, N-CHANNEL, FET	80009	151-1090-01
Q4122 <sup>1</sup>	151-1032-02	B010432		TRANSISTOR: SILICON, DUAL, N-CHANNEL, FET	80009	151-1032-02
Q4174	151-0199-00			TDANGTOTOD CTITCON DATE	07011	ame = 0.3c
Q4174 Q4176	151-0199-00			TRANSISTOR: SILICON, PNP	27014	ST65038
Q4176 Q4184				TRANSISTOR: SILICON, NPN	80009	151-0427-00
7-104	151-0199-00			TRANSISTOR: SILICON, PNP	27014	ST65038

1<sub>T935</sub> only 2<sub>T932</sub> only

REV. A AUG. 1977

	Tektronix	Serial/Mode	el No		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
Q4186	151-0427-00			TRANSISTOR:SILICON, NPN	80009	151-0427-00
Q4194	151-0198-00			TRANSISTOR:SILICON,NPN,SEL FROM MPS918	80009	151-0198-00
04196	151-0198-00			TRANSISTOR:SILICON, NPN, SEL FROM MPS918	80009	151-0198-00
04222	151-1090-01	B010100	B010415	TRANSISTOR: SILICON, DUAL, N-CHANNEL, FET	80009	151-1090-01
Q4222 <sup>1</sup>	151-1032-02			TRANSISTOR, SILICON, DUAL, N-CHANNEL, FET	80009	151-1032-02
Q4222 <sup>2</sup>	151-1090-01	B010100	B010431	TRANSISTOR, SILICON, DUAL, N-CHANNEL, FET	80009	151-1090-01
Q4222 <sup>2</sup>	151-1032-02	B010432		TRANSISTOR, SILICON, DUAL, N-CHANNEL, FET	80009	151-1032-02
Q4274	151-0199-00	ı		TRANSISTOR: SILICON, PNP	27014	ST65038
Q4276	151-0427-00			TRANSISTOR: SILICON, NPN	80009	151-0427-00
Q4284	151-0199-00	1		TRANSISTOR:SILICON, PNP	27014	ST65038
04006	157 0405 00					
Q4286	151-0427-00			TRANSISTOR: SILICON, NPN	80009	151-0427-00
Q4294	151-0198-00			TRANSISTOR:SILICON, NPN, SEL FROM MPS918	80009	151-0198-00
Q4296	151-0198-00			TRANSISTOR:SILICON,NPN,SEL FROM MPS918	80009	151-0198-00
Q4302	151-0223-00			TRANSISTOR: SILICON, NPN	80009	151-0223-00
Q4336	151-0199-00	•		TRANSISTOR: SILICON, PNP	27014	ST65038
Q4344	151-0199-00	1		TRANSISTOR:SILICON, PNP	27014	ome E 0.30
Q4344 Q4346				•	27014	
Q4354	151-0199-00 151-0199-00			TRANSISTOR: SILICON, PNP	27014	
04356				TRANSISTOR:SILICON,PNP	27014	
Q4376	151-0199-00			TRANSISTOR: SILICON, PNP	27014 80009	ST65038
Q4370	151-0434-00	•		TRANSISTOR: SILICON, PNP	80009	151-0434-00
Q4386	151-0434-00	)		TRANSISTOR:SILICON, PNP	80009	151-0434-00
R22	315-0134-00	)		RES., FXD, CMPSN:130K OHM, 5%, 0.25W	01121	CB1345
R23	315-0434-00			RES.,FXD,CMPSN:430K OHM,5%,0.25W		CB4345
R24	315-0104-00			RES., FXD, CMPSN:100K OHM, 5%, 0.25W		CB1045
R25	315-0222-00			RES., FXD, CMPSN: 2.2K OHM, 5%, 0.25W		CB2225
R26	321-0235-00			RES., FXD, FILM: 2.74K OHM, 1%, 0.125W	91637	
R27	321-0126-00	)		RES., FXD, FILM: 200 OHM, 1%, 0.125W	91637	MFF1816G200R0F
R112	321-0085-00	)		RES.,FXD,FILM:75 OHM,1%,0.125W	91637	MFF1816G75R00F
R114	311-1563-00	)		RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	73138	9la RlK
R115	315-0153-00	)		RES., FXD, CMPSN:15K OHM, 5%, 0.25W	01121	CB1535
R116	321-0163-00	)		RES.,FXD,FILM:487 OHM,1%,0.125W	91637	MFF1816G487ROF
D117	215 0272 00	,		DDG DVD GVDGV 0 5tt AVV FA O OFA		
R117	315-0272-00			RES.,FXD,CMPSN:2.7K OHM,5%,0.25W		CB2725
R118A-P	307-0494-00			RES, NTWK, FXD, FI: THICK FILM, VERT OUTPUT	80009	
R122	321-0085-00			RES., FXD, FILM: 75 OHM, 1%, 0.125W	91637	
R124 R126	315-0560-00			RES., FXD, CMPSN:56 OHM, 5%, 0.25W		CB5605
R120	311-1559-00	J		RES., VAR, NONWIR:10K OHM, 20%, 0.50W	73138	91A-10001M
R412	311-1786-00	0		RES., VAR, NONWIR: 2K OHM, 20%, 2W	12697	381-CM40946
R413	315-0102-00			RES., FXD, CMPSN:1K OHM, 5%, 0.25W	01121	
R414	315-0332-00			RES.,FXD,CMPSN:3.3K OHM,5%,0.25W	01121	
R416	315-0302-00			RES., FXD, CMPSN: 3K OHM, 5%, 0.25W		CB3025
R417	315-0752-00	0		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	01121	CB7525
R419	315-0103-00			RES., FXD, CMPSN:10K OHM, 5%, 0.25W		CB1035
R423	315-0513-0			RES.,FXD,CMPSN:51K OHM,5%,0.25W		CB5135
R424	315-0104-0			RES.,FXD,CMPSN:100K OHM,5%,0.25W		CB1045
R425	315-0751-0			RES.,FXD,CMPSN:750 OHM,5%,0.25W	01121	
R426	315-0510-0	0		RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105
R432	315-0222-0	0		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R433	315-0104-0	0		RES.,FXD,CMPSN:100K OHM,5%,0.25W	01121	CB1045
R434	315-0431-0	0		RES.,FXD,CMPSN:430 OHM,5%,0.25W	01121	CB4315
R4351	315-0510-0	0 в010100	B011561	RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105
R435 <sup>2</sup>	315-0360-0	O B011562		RES.,FXD,CMPSN:36 OHM,5%,0.25W	01121	CB3605
R4351	315-0510-0	0 в010100	в012062	RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105

<sup>1&</sup>lt;sub>T932</sub> only 2<sub>T935</sub> only

	Tektronix	Serial/Model No.		Mfr	
Ckt No.	Part No.	Eff Dscont	Name & Description	Code	Mfr Part Number
R4351	315-0360-00		RES.,FXD,CMPSN:36 OHM,5%,0.25W		
R437	315-0751-00		RES.,FXD,CMPSN:750 OHM,5%,0.25W		CB3605
R443	315-0204-00		RES., FXD, CMPSN:200K OHM, 5%, 0.25W		CB7515 CB2045
R444A-D	307-0495-01		RES,NTWK,FXD,FI:NETWORK,HV,NON STORAGE		
R445	315-0103-00		RES., FXD, CMPSN:10K OHM, 5%, 0.25W		307-0495-01
102-25	313 0103 00		MES., FAD, CHESN: TOK ORM, 5%, 0.25W	01121	CB1035
R446	315-0103-00		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
R447	315-0683-00		RES.,FXD,CMPSN:68K OHM,5%,0.25W		CB6835
R453	315-0102-00		RES.,FXD,CMPSN:1K OHM,5%,0.25W		CB1025
R455	315-0512-00		RES., FXD, CMPSN:5.1K OHM, 5%, 0.25W		CB5125
R457	315-0431-00		RES., FXD, CMPSN:430 OHM, 5%, 0.25W		CB4315
			,,,	01121	CD4313
R458	301-0510-00		RES.,FXD,CMPSN:51 OHM,5%,0.50W	01121	EB5105
R462	315-0303-00		RES.,FXD,CMPSN:30K OHM,5%,0.25W		CB3035
R463	315-0105-00		RES.,FXD,CMPSN:1M OHM,5%,0.25W		CB1055
R464	315-0226-00		RES.,FXD,CMPSN:22M OHM,5%,0.25W		CB2265
R465	315-0303-00		RES.,FXD,CMPSN:30K OHM,5%,0.25W		CB3035
				01121	CD3033
R468	311-1784-00		RES., VAR, NONWIR: 5M OHM, 20%, 1W	12697	381-CM40944
R472	311-1562-00		RES., VAR, NONWIR: 2K OHM, 20%, 0.50W		91A R2K
R473	311-1555-00		RES., VAR, NONWIR: 100K OHM, 20%, 0.5W		91A R100K
R474	311-1562-00		RES., VAR, NONWIR: 2K OHM, 20%, 0.50W		91A R2K
R475	315-0154-00		RES.,FXD,CMPSN:150K OHM,5%,0.25W		CB1545
				01121	CD1545
R476	315-0333-00	ı	RES.,FXD,CMPSN:33K OHM,5%,0.25W	01121	CB3335
R477	311-1555-00		RES., VAR, NONWIR: 100K OHM, 20%, 0.5W		91A R100K
R478	315-0471-00		RES.,FXD,CMPSN:470 OHM,5%,0.25W		CB4715
R722	301-0473-00		RES.,FXD,CMPSN:47K OHM,5%,0.50W		EB4735
R726	315-0104-00		RES.,FXD,CMPSN:100K OHM,5%,0.25W		CB1045
				<b>01111</b>	022013
R732	321-0193-00	•	RES.,FXD,FILM:1K OHM,1%,0.125W	91637	MFF1816G10000F
R733	321-0368-00	1	RES.,FXD,FILM:66.5K OHM,1%,0.125W		MFF1816G66501F
R734	308-0574-00		RES.,FXD,WW:10 OHM,5%,2W	91637	
R736	321-0385-00		RES.,FXD,FILM:100K OHM,1%,0.125W		MFF1816G10002F
R737	321-0280-00		RES.,FXD,FILM:8.06K OHM,1%,0.125W	91637	
			,,	32037	121202000000
R741	315-0391-00	)	RES.,FXD,CMPSN:390 OHM,5%,0.25W	01121	CB3915
R742	315-0563-00	1	RES.,FXD,CMPSN:56K OHM,5%,0.25W		CB5635
R745	315-0432-00	ı	RES.,FXD,CMPSN:4.3K OHM,5%,0.25W		CB4325
R746	315-0102-00	)	RES., FXD, CMPSN:1K OHM, 5%, 0.25W		CB1025
R747	315-0104-00	)	RES.,FXD,CMPSN:100K OHM,5%,0.25W		CB1045
			• • •		
R752	321-0130-00	)	RES.,FXD,FILM:221 OHM,1%,0.125W	91637	MFF1816G221R0F
R753	321-0239-00	)	RES.,FXD,FILM:3.01K OHM,1%,0.125W	91637	
R754	308-0755-00	)	RES.,FXD,WW:0.75 OHM,5%,2W	75042	
R756	321-0671-00	)	RES., FXD, FILM: 8.51K OHM, 0.5%, 0.125W	91637	
R757	321-0671-00	)	RES.,FXD,FILM:8.51K OHM,0.5%,0.125W	91637	
R762	315-0561-00		RES.,FXD,CMPSN:560 OHM,5%,0.25W	01121	CB5615
R763	315-0182-00	)	RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	01121	CB1825
R764	321-0239-00	)	RES., FXD, FILM: 3.01K OHM, 1%, 0.125W	91637	MFF1816G30100F
R765	321-0130-00	)	RES.,FXD,FILM:221 OHM,1%,0.125W	91637	MFF1816G221R0F
R766	301-0391-00		RES.,FXD,CMPSN:390 OHM,5%,0.50W		EB3915
R772	321-0256-00		RES.,FXD,FILM:4.53K OHM,1%,0.125W	91637	MFF1816G45300F
R773	311-1563-00		RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	73138	91A R1K
R774	321-0232-00		RES.,FXD,FILM:2.55K OHM,1%,0.125W	91637	MFF1816G25500F
R775	308-0755-00	)	RES.,FXD,WW:0.75 OHM,5%,2W	75042	BWH-R7500J
R784	308-0781-00	)	RES.,FXD,WW:1.34K OHM,2%,10W	91637	HLW10R1Z-13400G
R791	315-0435-00		RES.,FXD,CMPSN:4.3M OHM,5%,0.25W	01121	CB4355
R792	321-0402-00		RES.,FXD,FILM:150K OHM,1%,0.125W	91637	MFF1816G15002F
R793	321-0283-00	)	RES.,FXD,FILM:8.66K OHM,1%,0.125W	91637	MFF1816G86600F

1<sub>T935</sub> only

	Tektronix	Serial/Mod	el No.		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
R794	321-0394-00			RES.,FXD,FILM:124K OHM,1%,0.125W	91637	MFF1816G12402F
R795	321-0283-00			RES., FXD, FILM:8.66K OHM, 1%, 0.125W		MFF1816G86600F
R796	315-0104-00			RES.,FXD,CMPSN:100K OHM,5%,0.25W		CB1045
R797	315-0205-00			RES.,FXD,CMPSN:2M OHM,5%,0.25W		CB2055
R799	315-0305-00			RES.,FXD,CMPSN:3M OHM,5%,0.25W		CB3055
R2101	321-0463-00			RES.,FXD,FILM:649K OHM,1%,0.125W	91637	MFF1816G64902F
R2102	315-0152-00			RES.,FXD,CMPSN:1.5K OHM,5%,0.25W	01121	
R2103	321-0439-00			RES.,FXD,FILM:365K OHM,1%,0.125W	91637	
R2104 R2106	315-0510-00			RES., FXD, CMPSN:51 OHM, 5%, 0.25W		CB5105
K2100	315-0510-00			RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105
R2107	315-0102-00	B010100	B010179	RES.,FXD,CMPSN:1K OHM,5%,0.25W	01121	CB1025
R2107	315-0202-00	B010180		RES.,FXD,CMPSN:2K OHM,5%,0.25W		CB2025
R2108	315-0272-00			RES.,FXD,CMPSN:2.7K OHM,5%,0.25W		CB2725
R2109	315-0201-00			RES.,FXD,CMPSN:200 OHM,5%,0.25W		CB2015
R2111	315-0103-00	B010100	B010179	RES.,FXD,CMPSN:10K OHM,5%,0.25W		CB1035
R2111	315-0203-00			RES.,FXD,CMPSN:20K OHM,5%,0.25W		CB2035
R2112	315-0622-00			RES.,FXD,CMPSN:6.2K OHM,5%,0.25W		CB6225
R2113	315-0122-00			RES.,FXD,CMPSN:1.2K OHM,5%,0.25W		CB1225
R2114	321-0251-00			RES.,FXD,FILM:4.02K OHM,1%,0.125W		MFF1816G40200F
R2115	321-0214-00			RES.,FXD,FILM:1.65K OHM,1%,0.125W	91637	MFF1816G16500F
R2116	315-0182-00			RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	01121	CB1825
R2118	315-0102-00			RES.,FXD,CMPSN:1K OHM,5%,0.25W		CB1025
R2121	315-0132-00			RES.,FXD,CMPSN:1.3K OHM,5%,0.25W		CB1325
R21221	315-0270-00	XB011794		RES.,FXD,CMPSN:27 OHM,5%,0.25W		CB2705
R2122 <sup>2</sup>	315-0270-00	XB012319		RES.,FXD,CMPSN:27 OHM,5%,0.25W		CB2705
22104	235 2242 22					
R2124 R2125	315-0242-00			RES.,FXD,CMPSN:2.4K OHM,5%,0.25W		CB2425
R2125 R2126	315-0751-00			RES.,FXD,CMPSN:750 OHM,5%,0.25W		CB7515
R2120 R2127	315-0510-00 315-0102-00			RES., FXD, CMPSN:51 OHM, 5%, 0.25W		CB5105
R2128	315-0102-00			RES.,FXD,CMPSN:1K OHM,5%,0.25W		CB1025
14220	313-0102-00			RES.,FXD,CMPSN:1K OHM,5%,0.25W	01121	CB1025
R2131	315-0221-00	ı		RES.,FXD,CMPSN:220 OHM,5%,0.25W	01121	CB2215
R2132	315-0222-00	•		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W		CB2225
R2133	323-0346-00	1		RES.,FXD,FILM:39.2K OHM,1%,0.50W	75042	CECT0-3922F
R2135	315-0510-00			RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105
R2136	315-0751-00	ı		RES.,FXD,CMPSN:750 OHM,5%,0.25W	01121	CB7515
R2137	315-0622-00	1		RES.,FXD,CMPSN:6.2K OHM,5%,0.25W	01101	CDC 22E
R2138	311-1787-00			RES., VAR, NONWIR: 20K OHM, 10%, 2W	12697	CB6225 470-CM40947
R2142	321-0231-00			RES., FXD, FILM: 2.49K OHM, 1%, 0.125W	91637	
R2143	321-0231-00			RES., FXD, FILM: 2.49K OHM, 1%, 0.125W	91637	MFF1816G24900F
R2144	315-0821-00			RES.,FXD,CMPSN:820 OHM,5%,0.25W	01121	CB8215
					-	
R2145	321-0231-00			RES.,FXD,FILM:2.49K OHM,1%,0.125W	91637	MFF1816G24900F
R2146	321-0189-00			RES.,FXD,FILM:909 OHM,1%,0.125W	91637	MFF1816G909R0F
R2147	315-0222-00			RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2152	315-0911-00			RES.,FXD,CMPSN:910 OHM,5%,0.25W	01121	CB9115
R2153	315-0682-00	)		RES.,FXD,CMPSN:6.8K OHM,5%,0.25W	01121	CB6825
R2154	315-0822-00	)		RES., FXD, CMPSN:8.2K OHM, 5%, 0.25W	01121	CB8225
R2156	315-0152-00	B010100	B010349	RES.,FXD,CMPSN:1.5K OHM,5%,0.25W	01121	CB1525
R2156	315-0102-00	в010350		RES., FXD, CMPSN:1K OHM, 5%, 0.25W	01121	CB1025
R2157	315-0272-00	B010100	B010349	RES.,FXD,CMPSN:2.7K OHM,5%,0.25W	01121	CB2725
R2157	315-0222-00	B010350		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2158	315-0163-00	`		DEC. EVD ONDON 167 OUR 50 0 05**	01:01	cm1 c 2 c
R2162	315-0163-00			RES.,FXD,CMPSN:16K OHM,5%,0.25W	01121	CB1635
R2162	315-0103-00			RES.,FXD,CMPSN:220 OHM,5%,0.25W RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB2215
	323 0103-00	•		LUD-, LAD, CHEBN. 10K OHM, 50,0.25W	01121	CB1035

<sup>&</sup>lt;sup>1</sup>T932 only <sup>2</sup>T935 only

	Tektronix	Serial/Mod	el No		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
R2164	315-0222-00			RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2166	315-0222-00			RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2167	315-0203-00			RES., FXD, CMPSN: 20K OHM, 5%, 0.25W	01121	CB2035
R2171	315-0751-00			RES.,FXD,CMPSN:750 OHM,5%,0.25W	01121	CB7515
R2172	315-0222-00			RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2174	315-0182-00			RES.,FXD,CMPSN:1.8K OHM,5%,0.25W	01121	CB1825
R2175 <sup>1</sup>	315-0512-00	B010100	B010769	RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
R2175 <sup>1</sup>	315-0222-00	B010770		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2175 <sup>2</sup>	315-0512-00	B010100	B010734	RES., FXD, CMPSN:5.1K OHM, 5%, 0.25W	01121	CB5125
R2175 <sup>2</sup>	315-0222-00	B010735		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2176	315-0222-00	ı		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2178	315-0222-00	1		RES.,FXD,CMPSN:2.2K OHM,5%,0.25W	01121	CB2225
R2 <b>1</b> 82	321-0236-00	1		RES.,FXD,FILM:2.8K OHM,1%,0.125W	91637	MFF1816G28000F
R2 <b>1</b> 85	315-0512-00	1		RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
R2186	315-0272-00	1		RES.,FXD,CMPSN:2.7K OHM,5%,0.25W	01121	CB2725
R2188	315-0752-00	1		RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	01121	CB7525
R2198	315-0510-00	)		RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105
R2223	315-0152-00	B010100	B010349	RES.,FXD,CMPSN:1.5K OHM,5%,0.25W	01121	CB1525
R2223	315-0911-00	B010350		RES., FXD, CMPSN:910 OHM, 5%, 0.25W	01121	CB9115
R2224	315-0272-00	B010100	B010349	RES., FXD, CMPSN: 2.7K OHM, 5%, 0.25W	01121	CB2725
R2224	315-0242-00	в010350		RES.,FXD,CMPSN:2.4K OHM,5%,0.25W	01121	CB2425
R2226	315-0203-00			RES., FXD, CMPSN: 20K OHM, 5%, 0.25W		CB2035
R2227	315-0132-00		B010349	RES.,FXD,CMPSN:1.3K OHM,5%,0.25W		CB1325
R2227	315-0102-00			RES., FXD, CMPSN:1K OHM, 5%, 0.25W		CB1025
R2233	315-0122-00			RES.,FXD,CMPSN:1.2K OHM,5%,0.25W		CB1225
R2235	315-0681-00	)		RES.,FXD,CMPSN:680 OHM,5%,0.25W	01121	CB6815
R2236	315-0680-00			RES.,FXD,CMPSN:68 OHM,5%,0.25W		CB6805
R2237	315-0512-00			RES.,FXD,CMPSN:5.1K OHM,5%,0.25W		CB5125
R2243	308-0212-00			RES., FXD, WW:10K OHM, 5%, 3W	91637	
R2245	321-0326-00	)		RES.,FXD,FILM:24.3K OHM,1%,0.125W	91637	MFF1816G24301F
R2246	315-0510-00	)		RES.,FXD,CMPSN:51 OHM,5%,0.25W	01121	CB5105
R2247	321-0312-00			RES., FXD, FILM: 17.4K OHM, 1%, 0.125W	91637	
R2252	315-0100-00	)		RES.,FXD,CMPSN:10 OHM,5%,0.25W	01121	
R2253	321-0444-00	)		RES., FXD, FILM: 412K OHM, 1%, 0.125W	91637	
R2254 <sup>1</sup>	321-0377-00	B010100	B010499	RES.,FXD,FILM:82.5K OHM,1%,0.125W	91637	MFF1816G82501F
R2254 <sub>2</sub>	321-0377-03	во10500		RES.,FXD,FILM:82.5K OHM,0.5%,0.125W	91637	MFF1816G82501D
R22542	321-0377-00	B010100	B010449	RES., FXD, FILM:82.5K OHM, 1%, 0.125W	91637	
R2254	321-0377-03	B010450		RES., FXD, FILM:82.5K OHM, 0.5%, 0.125W	91637	MFF1816G82501D
R2255	321-0377-00	B010100	B010499	RES., FXD, FILM:82.5K OHM, 1%, 0.125W	91637	
R2255	321-0377-03	во10500		RES., FXD, FILM:82.5K OHM, 0.5%, 0.125W	91637	MFF1816G82501D
R2255 <sup>2</sup> R2255	321-0377-00	во10100	B010449	RES., FXD, FILM: 82.5K OHM, 1%, 0.125W	91637	MFF1816G82501F
R2255	321-0377-03			RES., FXD, FILM:82.5K OHM, 0.5%, 0.125W	91637	
R2256,	321-0348-00			RES., FXD, FILM: 41.2K OHM, 1%, 0.125W	91637	
R2257	321-0281-00		B010499	RES., FXD, FILM: 8.25K OHM, 1%, 0.125W	91637	
R22571 R22571	321-0281-0			RES., FXD, FILM:8.25K OHM, 0.5%, 0.125W	91637	
R2257 <sup>2</sup> R2257 <sup>1</sup> R2258 <sup>1</sup>	321-0281-0	0 B010100	B010449	RES.,FXD,FILM:8.25K OHM,1%,0.125W	91637	MFF1816G82500F
R2257	321-0281-0			RES., FXD, FILM:8.25K OHM, 0.5%, 0.125W	91637	MFF1816G82500D
R2258	321-0281-0		B010499	RES., FXD, FILM:8.25K OHM, 1%, 0.125W	91637	MFF1816G82500F
R2258	321-0281-0			RES.,FXD,FILM:8.25K OHM,0.5%,0.125W	91637	
R2258 <sup>1</sup> R2258 <sup>2</sup>	321-0281-0		B010449	RES.,FXD,FILM:8.25K OHM,1%,0.125W	91637	
R2258 <sup>2</sup>	321-0281-0			RES.,FXD,FILM:8.25K OHM,0.5%,0.125W	91637	MFF1816G82500D
R2262 R2263	322-0519-0		2010100	RES.,FXD,FILM:2.49M OHM,0.5%,0.25W	91637	HFF143G24903D
R2263	321-0473-0	0 B010100	B010499	RES.,FXD,FILM:825K OHM,1%,0.125W	91637	MFF1816G82502F

<sup>1&</sup>lt;sub>T935</sub> only 2<sub>T932</sub> only

REV. A AUG. 1977

## Replaceable Electrical Parts—T932/T935

	Tektronix	Serial/Mod	el No		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
						WIII FAIL NUIIIDEI
R22631	321-0473-01	B010500		RES., FXD, FILM:825K OHM, 0.5%, 0.125W	91637	MFF1816G82502D
R2263 <sup>2</sup>	321-0473-00	B010100	B010449	RES., FXD, FILM: 825K OHM, 1%, 0.125W	91637	MFF1816G82502F
R2263 <sup>2</sup>	321-0473-01	B010450		RES.,FXD,FILM:825K OHM,0.5%,0.125W	91637	MFF1816G82502D
RZZD4 "	321-0473-00	B010100	B010499	RES., FXD, FILM: 825K OHM, 1%, 0.125W	91637	
R2264 <sup>1</sup>	321-0473-01	B010500		RES., FXD, FILM: 825K OHM, 0.5%, 0.125W	91637	MFF1816G82502D
R2264 <sup>2</sup>	222 0472 00	-010100				
R2264 <sup>2</sup>	321-0473-00	B010100	B010449	RES.,FXD,FILM:825K OHM,1%,0.125W	91637	MFF1816G82502F
R2204	321-0473-01	B010450		RES.,FXD,FILM:825K OHM,0.5%,0.125W	91637	MFF1816G82502D
R2271	315-0434-00			RES.,FXD,CMPSN:430K OHM,5%,0.25W	01121	CB4345
R2272	311-0580-00			RES., VAR, NONWIR:50K OHM, 20%, 0.50W	11237	300SF-41695
R2274	315-0512-00			RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
R2276	315-0103-00			DEC EVE CMDON, 10% OWN Es o ser		
R2278	315-0512-00			RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
R23101	321-0268-03	XB010180	B012318X	RES.,FXD,CMPSN:5.1K OHM,5%,0.25W	01121	CB5125
R23111	321-0271-00	B010100	B012316A B010179	RES.,FXD,FILM:6.04K OHM,0.25%,0.125W	91637	MFF1816D60400C
R23111	321-0159-00	B010100	B010179	RES.,FXD,FILM:6.49K OHM,1%,0.125W	91637	
1/2511	321-0133-00	B010180	B012316	RES.,FXD,FILM:442 OHM,1%,0.125W	91637	MFF1816G442ROF
R2311 <sup>1</sup>	321-0271-00	B012319		RES.,FXD,FILM:6.49K OHM,1%,0.125W	91637	MFF1816G64900F
R2312 <sup>1</sup>	321-0298-00		B010499	RES.,FXD,FILM:12.4K OHM,1%,0.125W	91637	MFF1816G12401F
R2312 <sup>1</sup>	321-0296-00			RES.,FXD,FILM:11.8K OHM,1%,0.125W	91637	MFF1816G12401F
R2312 <sup>2</sup>	321-0298-00		B010449	RES.,FXD,FILM:12.4K OHM,1%,0.125W	91637	MFF1816G12401F
R2312 <sup>2</sup>	321-0296-00		2020113	RES.,FXD,FILM:11.8K OHM,1%,0.125W	91637	MFF1816G12401F MFF1816G11801F
				125, 115, 1121, 11, OK OH, 18, 0.125H	31037	ME E 1910G11801E.
R2313	321-0279-00			RES., FXD, FILM: 7.87K OHM, 1%, 0.125W	91637	MFF1816G78700F
R2314 <sup>1</sup>	321-0268-03	XB010180	B012318X	RES., FXD, FILM: 6.04K OHM, 0.25%, 0.125W	91637	MFF1816D60400C
R2315	315-0752-00			RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	01121	CB7525
R2316	311-1788-00			RES., VAR, NONWIR: 20K OHM, 20%, 2W	12697	470-CM40948
R2317	315-0751-00			RES., FXD, CMPSN:750 OHM, 5%, 0.25W	01121	CB7515
				, , , , , , , , , , , , , , , , , , , ,		02.020
R2322	311-1789-00			RES., VAR, NONWIR: 100K OHM, 10%, 1W	12697	381-CM40949
R2323	321-0197-00			RES., FXD, FILM: 1.1K OHM, 1%, 0.125W	91637	MFF1816G11000F
R2324	315-0162-00			RES.,FXD,CMPSN:1.6K OHM,5%,0.25W		CB1625
R2325	315-0392-00			RES.,FXD,CMPSN:3.9K OHM,5%,0.25W		CB3925
R2326	315-0332-00			RES.,FXD,CMPSN:3.3K OHM,5%,0.25W		CB3325
R2327	315-0331-00			RES.,FXD,CMPSN:330 OHM,5%,0.25W	01121	CB3315
R2328	315-0101-00			RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015
R2331	315-0202-00			RES.,FXD,CMPSN:2K OHM,5%,0.25W	01121	CB2025
R23321	311-1814-00		B010449	RES., VAR, NONWIR: 2K OHM, 20%, 0.50W	73138	91XR2K
R2332 <sup>1</sup>	311-1239-00	B010450		RES., VAR, NONWIR: 2.5K OHM, 10%, 0.50W	73138	72X-76-0252K
R2332 <sup>2</sup>	211 1014 00	-010100				
R2332 <sup>2</sup> R2332 <sup>2</sup>	311-1814-00 311-1239-00		B010374	RES., VAR, NONWIR: 2K OHM, 20%, 0.50W		91XR2K
R2332 - R2334				RES., VAR, NONWIR: 2.5K OHM, 10%, 0.50W	73138	72X-76-0252K
R2335	315-0752-00 315-0753-00			RES.,FXD,CMPSN:7.5K OHM,5%,0.25W		CB7525
R2336	315-0753-00			RES.,FXD,CMPSN:75K OHM,5%,0.25W		CB7535
142330	313-0132-00			RES.,FXD,CMPSN:1.5K OHM,5%,0.25W	01121	CB1525
R2337	308-0329-00			RES.,FXD,WW:4K OHM,2%,3W	91637	DC3D-D400000
R2342	315-0152-00			RES.,FXD,CMPSN:1.5K OHM,5%,0.25W		RS2B-B40000G
R2344	308-0329-00			RES., FXD, WW:4K OHM, 2%, 3W	01121 91637	
R2345	315-0331-00			RES., FXD, CMPSN:330 OHM, 5%, 0.25W	01121	
R2347	315-0753-00			RES., FXD, CMPSN:75K OHM, 5%, 0.25W	01121	CB3315 CB7535
					01121	CD / JJJ
R2352	315-0104-00			RES.,FXD,CMPSN:100K OHM,5%,0.25W	01121	CB1045
R2353	315-0622-00			RES.,FXD,CMPSN:6.2K OHM,5%,0.25W		CB6225
R2354	315-0103-00			RES.,FXD,CMPSN:10K OHM,5%,0.25W		CB1035
R2355	315-0202-00			RES., FXD, CMPSN: 2K OHM, 5%, 0.25W	01121	
R2356	315-0182-00			RES.,FXD,CMPSN:1.8K OHM,5%,0.25W		CB1825
R2357	315-0752-00			RES.,FXD,CMPSN:7.5K OHM,5%,0.25W	01121	CB7525
R2392	301-0240-00			RES.,FXD,CMPSN:24 OHM,5%,0.50W		EB2405

<sup>1&</sup>lt;sub>T932</sub> only 2<sub>T935</sub> only

	Taktroniy	Sorial/Mod	al Na		Mfr	
Ckt No.		Serial/Mod Eff	Dscont	Name & Description	Mfr Code	Mfr Part Number
	railinu.	<u> </u>	DSCOIIL	Name & Description		Mfr Part Number
R25111	315-0103-00			RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
R25121	315-0223-00			RES.,FXD,CMPSN:22K OHM,5%,0.25W		CB2235
R2514 <sup>1</sup>	315-0104-00			RES.,FXD,CMPSN:100K OHM,5%,0.25W		CB1045
R25151	321-0126-00			RES.,FXD,FILM:200 OHM,1%,0.125W		MFF1816G200R0F
R2516 <sup>1</sup>	311-1531-00			RES., VAR, WW: 2K OHM, 5%, 1.5W	01121	535-9504
R25171	315-0102-00			RES.,FXD,CMPSN:1K OHM,5%,0.25W	01121	CB1025
R2519 <sup>1</sup>	315-0752-00			RES., FXD, CMPSN: 7.5K OHM, 5%, 0.25W		CB7525
R25211	315-0563-00			RES.,FXD,CMPSN:56K OHM,5%,0.25W	01121	CB5635
R25231	315-0562-00			RES.,FXD,CMPSN:5.6K OHM,5%,0.25W	01121	CB5625
R2525 <sup>1</sup>	315-0392-00			RES.,FXD,CMPSN:3.9K OHM,5%,0.25W	01121	CB3925
R25271	315-0622-00			RES.,FXD,CMPSN:6.2K OHM,5%,0.25W	01121	CB6225
R2531 <sup>1</sup>	315-0243-00			RES.,FXD,CMPSN:24K OHM,5%,0.25W		CB2435
R2532 <sup>1</sup>	315-0512-00			RES., FXD, CMPSN:5.1K OHM, 5%, 0.25W		CB5125
R2533 <sup>1</sup>	315-0153-00			RES., FXD, CMPSN:15K OHM, 5%, 0.25W		CB1535
R2535 <sup>1</sup>	315-0122-00			RES.,FXD,CMPSN:1.2K OHM,5%,0.25W		CB1225
R25371	315-0681-00			RES.,FXD,CMPSN:680 OHM,5%,0.25W	01121	CB6815
R25391	315-0680-00			RES., FXD, CMPSN:68 OHM, 5%, 0.25W		CB6805
R2541 <sup>1</sup>	308-0212-00			RES.,FXD,WW:10K OHM,5%,3W		CW2B-B10001J
R25441	321-0326-00			RES., FXD, FILM: 24.3K OHM, 1%, 0.125W		MFF1816G24301F
R2545 <sup>1</sup>	321-0312-00			RES.,FXD,FILM:17.4K OHM,1%,0.125W	91637	
R2546 <sup>1</sup>	27.5 05.10 00			DDG - TUD GUDGU 51 am 5 a a a a		
R25471	315-0510-00 315-0203-00			RES.,FXD,CMPSN:51 OHM,5%,0.25W		CB5105
R25481	315-0203-00			RES.,FXD,CMPSN:20K OHM,5%,0.25W RES.,FXD,CMPSN:10K OHM,5%,0.25W		CB2035
R25521	315-0103-00					CB1035
R25531	321-0444-00			RES.,FXD,CMPSN:10 OHM,5%,0.25W RES.,FXD,FILM:412K OHM,1%,0.125W		CB1005
	321-0444 00				91637	MFF1816G41202F
R2554 1	321-0377-00	B010100	B010499	RES.,FXD,FILM:82.5K OHM,1%,0.125W	91637	MFF1816G82501F
R25541	321-0377-01	<b>B01</b> 0500		RES.,FXD,FILM:82.5K OHM,0.5%,0.125W	91637	MFF1816G82501D
R25551	321-0377-00	B010100	B010499	RES.,FXD,FILM:82.5K OHM,1%,0.125W	91637	MFF1816G82501F
R25551	321-0377-01	B010500		RES.,FXD,FILM:82.5K OHM,0.5%,0.125W	91637	
R2556 <sup>1</sup>	321-0348-00			RES.,FXD,FILM:41.2K OHM,1%,0.125W	91637	MFF1816G41201F
R25571	321-0281-00	B010100	B010499	RES.,FXD,FILM:8.25K OHM,1%,0.125W	91637	MFF1816G82500F
R25571	321-0281-01	B010500		RES.,FXD,FILM:8.25K OHM,0.5%,0.125W	91637	
R25581	321-0281-00	B010100	B010499	RES.,FXD,FILM:8.25K OHM,1%,0.125W	91637	
R25581	321-0281-01	B010500		RES.,FXD,FILM:8.25K OHM,0.5%,0.125W	91637	MFF1816G82500D
R2590 <sup>1</sup>	301-0151-00			RES.,FXD,CMPSN:150 OHM,5%,0.50W	01121	EB1515
R4102	315-0105-00			RES.,FXD,CMPSN:1M OHM,5%,0.25W	01121	CB1055
R4104	315-0241-00			RES.,FXD,CMPSN:240 OHM,5%,0.25W		CB2415
R4105	321-0790-01			RES.,FXD,FILM:990K OHM,0.5%,0.125W	91637	
R4106	315-0180-00			RES.,FXD,CMPSN:18 OHM,5%,0.25W	01121	
R4107	321-1289-01			RES.,FXD,FILM:10.1K OHM,0.5%,0.125W	91637	MFF1816G10101D
R4108	315-0330-00			RES.,FXD,CMPSN:33 OHM,5%,0.25W	01121	CB3305
R4114	321-0807-01			RES., FXD, FILM: 900K OHM, 0.5%, 0.125W	91637	
R4116	321-1389-01			RES.,FXD,FILM:111K OHM,0.5%,0.125W	91637	
R4117	315-0100-00			RES.,FXD,CMPSN:10 OHM,5%,0.25W	01121	
R4118	315-0151-00			RES.,FXD,CMPSN:150 OHM,5%,0.25W	01121	
R4121	321-0481-00			RES.,FXD,FILM:1M OHM,1%,0.125W	91637	MFF1816G10003F
R4122	315-0474-00			RES., FXD, CMPSN:470K OHM, 5%, 0.25W	01121	CB4745
R4124	321-0030-00			RES., FXD, FILM: 20 OHM, 1%, 0.125W	91637	
R4125	321-0030-00			RES., FXD, FILM: 20 OHM, 1%, 0.125W	91637	
R4127	315-0152-00			RES.,FXD,CMPSN:1.5K OHM,5%,0.25W		CB1525
R4128 <sup>2</sup>	315-0823-00	YB010330	BU1041EA	RES.,FXD,CMPSN:82K OHM,5%,0.25W	01101	annaar
R4128 <sup>1</sup>	315-0823-00			RES.,FXD,CMPSN:82K OHM,5%,0.25W		CB8235
R4129 <sup>2</sup>	315-0122-00			RES.,FXD,CMPSN:1.2K OHM,5%,0.25W		CB8235
******	323 3222 00	120200	2020413V	WCZ.D. O. C. T. I. Z. Z. O. T. J. D. C. T. T. J. C. C. T. T. T. T. C. C. T. T. T. T. T. C. C. T.	01171	CB1225

<sup>&</sup>lt;sup>1</sup>T935 only <sup>2</sup>T932 only

REV. A AUG. 1977

	Tektronix	Serial/Mod	el No		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
R41291	315-0122-00	XB010330	B010431X	RES.,FXD,CMPSN:1.2K OHM,5%,0.25W	01121	CB1225
R4130	311-1559-00		20201521	RES., VAR, NONWIR: 10K OHM, 20%, 0.50W	73138	
R4131	315-0153-00			RES., FXD, CMPSN:15K OHM, 5%, 0.25W		CB1535
R4133	315-0151-00			RES., FXD, CMPSN:150 OHM, 5%, 0.25W		CB1515
R4136	321-0077-00			RES.,FXD,FILM:61.9 OHM,1%,0.125W	91637	MFF1816G61R90F
R4137	315-0152-00			RES., FXD, CMPSN:1.5K OHM, 5%, 0.25W		CB1525
R4143	321-0062-00			RES.,FXD,FILM:43.2 OHM,1%,0.125W	91637	MFF1816G43R20F
R4144	321-0114-00			RES.,FXD,FILM:150 OHM,1%,0.125W	91637	MFF1816G150R <b>0</b> F
R4145	321-0771-01			RES.,FXD,FILM:50 OHM,0.5%,0.125W	91637	
R4146	321-0771-01			RES.,FXD,FILM:50 OHM,0.5%,0.125W	91637	MFF1816G50R00D
R4147	321-0030-00			RES.,FXD,FILM:20 OHM,1%,0.125W	91637	MFF1816G20R00F
R4151	311-1563-00			RES., VAR, NONWIR:1K OHM, 20%, 0.50W		91A R1K
R4152	311-1785-00			RES., VAR, NONWIR: 1K OHM, 5%, 2W	12697	
R4154	321-0078-00			RES.,FXD,FILM:63.4 OHM,1%,0.125W		MFF1816G63R40F
R4156	315-0621-00			RES.,FXD,CMPSN:620 OHM,5%,0.25W		CB6215
R4157	321-0225-00			RES., FXD, FILM: 2.15K OHM, 1%, 0.125W	91637	
R4158	315-0751-00			RES.,FXD,CMPSN:750 OHM,5%,0.25W		CB7515
R4161	321-0154-00			RES.,FXD,FILM:392 OHM,1%,0.125W		MFF1816G392R0F
R4162	321-0070-00			RES.,FXD,FILM:52.3 OHM,1%,0.125W	91637	
R4166	315-0682-00			RES.,FXD,CMPSN:6.8K OHM,5%,0.25W	01121	CB6825
R4167	321-0225-00	1		RES.,FXD,FILM:2.15K OHM,1%,0.125W	91637	MFF1816G21500F
R4168	315-0751-00			RES., FXD, CMPSN:750 OHM, 5%, 0.25W		CB7515
R4171	321-0185-00			RES.,FXD,FILM:825 OHM,1%,0.125W		MFF1816G825R0F
R4172	315-0132-00			RES.,FXD,CMPSN:1.3K OHM,5%,0.25W		CB1325
R4173	321-0164-00			RES.,FXD,FILM:499 OHM,1%,0.125W		MFF1816G499R0F
				, , , =, = ., = ., =		
R4174	321-0078-00			RES.,FXD,FILM:63.4 OHM,1%,0.125W	91637	MFF1816G63R40F
R4175	315-0201-00			RES.,FXD,CMPSN:200 OHM,5%,0.25W	01121	CB2015
R4176	321-0173-00			RES., FXD, FILM: 619 OHM, 1%, 0.125W	91637	MFF1816G619ROF
R4177	315-0821-00			RES.,FXD,CMPSN:820 OHM,5%,0.25W		CB8215
R4179	321-0131-00	)		RES.,FXD,FILM:226 OHM,1%,0.125W	91637	MFF1816G226R0F
R4181	321-0185-00	)		RES.,FXD,FILM:825 OHM,1%,0.125W	91637	MFF1816G825R0F
R4182	315-0511-00			RES.,FXD,CMPSN:510 OHM,5%,0.25W		CB5115
R4183	321-0164-00			RES., FXD, FILM: 499 OHM, 1%, 0.125W		MFF1816G499R0F
R4184	315-0271-00			RES., FXD, CMPSN: 270 OHM, 5%, 0.25W		CB2715
R4186	321-0173-00			RES., FXD, FILM:619 OHM, 1%, 0.125W	91637	
					, ,	1111101000131101
R4187	315-0821-00	)		RES.,FXD,CMPSN:820 OHM,5%,0.25W	01121	CB8215
R4189	321-0131-00	)		RES.,FXD,FILM:226 OHM,1%,0.125W	91637	MFF1816G226R0F
R4193	315-0101-00			RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015
R4194	315-0101-00			RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015
R4195	315-0431-00	)		RES.,FXD,CMPSN:430 OHM,5%,0.25W	01121	CB4315
R4196	315-0470-00	n		RES.,FXD,CMPSN:47 OHM.5%.0.25W	01101	CD4705
R4196 R4198	321-0185-00			RES.,FXD,CMPSN:47 OHM,5%,0.25W RES.,FXD,FILM:825 OHM,1%,0.125W		CB4705
R4199	321-0185-00			RES.,FXD,FILM:825 OHM,1%,0.125W		MFF1816G825R0F MFF1816G825R0F
R4202	315-0105-00			RES.,FXD,CMPSN:1M OHM,5%,0.25W		CB1055
R4204	315-0241-00			RES.,FXD,CMPSN:240 OHM,5%,0.25W		
	323 0241-00	-		120.,1 AD JOHE DIN 240 OHE 1,55,0.25W	01121	CB2415
R4205	321-0790-03			RES.,FXD,FILM:990K OHM,0.5%,0.125W	91637	HFF1104G99002D
R4206	315-0180-00	ס		RES.,FXD,CMPSN:18 OHM,5%,0.25W	01121	CB1805
R4207	321-1289-03	1		RES.,FXD,FILM:10.1K OHM,0.5%,0.125W	91637	MFF1816G10101D
R4208	315-0330-00	)		RES.,FXD,CMPSN:33 OHM,5%,0.25W	01121	CB3305
R4214	321-0807-0	1		RES.,FXD,FILM:900K OHM,0.5%,0.125W	91637	HFF110F90002D
R4216	321-1389-0	1		DEC EVD ETIM. 1112 OUM O Es O 1052	01637	MED10160111000
R4216 R4217	315-0100-0			RES.,FXD,FILM:111K OHM,0.5%,0.125W RES.,FXD,CMPSN:10 OHM,5%,0.25W	91637	
R4217 R4218	315-0151-0			RES.,FXD,CMPSN:10 OHM,5%,0.25W RES.,FXD,CMPSN:150 OHM,5%,0.25W		CB1005
1/3210	273-0731-00	•		ADD., I AD, CHESH: 130 ORN, 37, U. 23W	01121	CB1515

<sup>1&</sup>lt;sub>T935</sub> only

6-16 REV. A AUG. 1977

6-17

	Tektronix	Serial/Mod	el No.		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
R4221	321-0481-00			RES.,FXD,FILM:lM OHM,1%,0.125W	91637	MEE1016C10002P
R4222	315-0474-00			RES.,FXD,CMPSN:470K OHM,5%,0.25W		MFF1816G10003F CB4745
R4224	321-0030-00			RES.,FXD,FILM:20 OHM,1%,0.125W	91637	
R4225	321-0030-00			RES.,FXD,FILM:20 OHM,1%,0.125W	91637	MFF1816G20R00F
R4227	315-0152-00			RES., FXD, CMPSN:1.5K OHM, 5%, 0.25W	01121	
				1200 /2 12 / 514 514 . 2 . 514 . 514 . 7 . 7 . 7 . 7 . 7 . 7 . 7 . 7 . 7 .	01121	CB1525
R4228 2	315-0823-00	XB010330	B010415X	RES.,FXD,CMPSN:82K OHM,5%,0.25W	01121	CB8235
R42281	315-0823-00		B010431X	RES.,FXD,CMPSN:82K OHM,5%,0.25W		CB8235
R4229	315-0122-00			RES.,FXD,CMPSN:1.2K OHM,5%,0.25W		CB1225
R4229 <sup>2</sup>	315-0122-00			RES.,FXD,CMPSN:1.2K OHM,5%,0.25W		
R4230	311-1559-00		DOLOGISLA	RES., VAR, NONWIR: 10K OHM, 20%, 0.50W		CB1225 91A-10001M
				12D- / 1111/1101111111. 1012 Olini, 204, 0. 30W	/3130	91A-10001M
R4231	315-0153-00			RES.,FXD,CMPSN:15K OHM,5%,0.25W	01121	CB1535
R4233	315-0151-00			RES.,FXD,CMPSN:150 OHM,5%,0.25W	01121	
R4236	321-0077-00			RES.,FXD,FILM:61.9 OHM,1%,0.125W	91637	
R4237	315-0152-00			RES., FXD, CMPSN:1.5K OHM, 5%, 0.25W	01121	
R4243	321-0062-00			RES.,FXD,FILM:43.2 OHM,1%,0.125W	91637	
				100. 11 ND 11 1111. 43.2 OIL1, 18,0.125W	91637	MFF1816G43R20F
R4244	321-0114-00			RES.,FXD,FILM:150 OHM,1%,0.125W	91637	MEET 1916C1EODOE
R4245	321-0771-01			RES., FXD, FILM:50 OHM, 0.5%, 0.125W	91637	MFF1816G150R0F
R4246	321-0771-01			RES.,FXD,FILM:50 OHM,0.5%,0.125W		MFF1816G50R00D
R4247	321-0030-00			RES.,FXD,FILM:20 OHM,1%,0.125W	91637	MFF1816G50R00D
R4251	311-1563-00			RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	91637	MFF1816G20R00F
101232	311 1303 00			RES., VAR, NONWIR: IR OHM, 20%, U. SOW	73138	91A RIK
R4252	311-1785-00			RES., VAR, NONWIR: 1K OHM, 5%, 2W	12697	391OM4004E
R4254	321-0078-00			RES.,FXD,FILM:63.4 OHM,1%,0.125W	91637	381-CM40945 MFF1816G63R40F
R4256	315-0621-00			RES., FXD, CMPSN:620 OHM, 5%, 0.25W	01121	
R4257	321-0225-00			RES.,FXD,FILM:2.15K OHM,1%,0.125W	91637	
R4258	315-0751-00			RES.,FXD,CMPSN:750 OHM,5%,0.25W	01121	MFF1816G21500F CB7515
	020 0702 00			120. 12 ND 1 CHE SH . 130 OHM 1, 34, 0.23W	01121	CB/515
R4261	321-0154-00			RES.,FXD,FILM:392 OHM,1%,0.125W	91637	MFF1816G392R0F
R4262	321-0070-00			RES.,FXD,FILM:52.3 OHM,1%,0.125W	91637	MFF1816G52R30F
R4266	315-0682-00			RES., FXD, CMPSN: 6.8K OHM, 5%, 0.25W	01121	
R4267	321-0225-00			RES.,FXD,FILM:2.15K OHM,1%,0.125W	91637	MFF1816G21500F
R4268	315-0751-00			RES.,FXD,CMPSN:750 OHM,5%,0.25W	01121	CB7515
					01121	CB/JIJ
R4271	321-0185-00			RES.,FXD,FILM:825 OHM,1%,0.125W	91637	MFF1816G825R0F
R4272	315-0132-00			RES.,FXD,CMPSN:1.3K OHM,5%,0.25W	01121	CB1325
R4273	321-0164-00			RES., FXD, FILM: 499 OHM, 1%, 0.125W	91637	MFF1816G499R0F
R4274	321-0078-00			RES.,FXD,FILM:63.4 OHM,1%,0.125W	91637	MFF1816G63R40F
R4275	315-0201-00			RES., FXD, CMPSN: 200 OHM, 5%, 0.25W	01121	
				• • •		323323
R4276	321-0173-00			RES.,FXD,FILM:619 OHM,1%,0.125W	91637	MFF1816G619R0F
R4277	315-0821-00			RES.,FXD,CMPSN:820 OHM,5%,0.25W	01121	
R4279	321-0131-00			RES.,FXD,FILM:226 OHM,1%,0.125W	91637	MFF1816G226R0F
R4281	321-0185-00			RES.,FXD,FILM:825 OHM,1%,0.125W	91637	
R4282	315-0511-00			RES.,FXD,CMPSN:510 OHM,5%,0.25W	01121	CB5115
R4283	321-0164-00			RES.,FXD,FILM:499 OHM,1%,0.125W	91637	MFF1816G499R0F
R4284	315-0271-00	1		RES.,FXD,CMPSN:270 OHM,5%,0.25W	01121	CB2715
R4286	321-0173-00	ı		RES.,FXD,FILM:619 OHM,1%,0.125W	91637	MFF1816G619R0F
R4287	315-0821-00	ı		RES.,FXD,CMPSN:820 OHM,5%,0.25W	01121	CB8215
R4289	321-0131-00	ı		RES.,FXD,FILM:226 OHM,1%,0.125W	91637	MFF1816G226R0F
R4293	315-0101-00			RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015
R4294	315-0101-00			RES., FXD, CMPSN:100 OHM, 5%, 0.25W	01121	CB1015
R4295	315-0431-00			RES., FXD, CMPSN: 430 OHM, 5%, 0.25W	01121	CB4315
R4296	315-0470-00			RES.,FXD,CMPSN:47 OHM,5%,0.25W	01121	CB4705
R4298	321-0185-00	1		RES.,FXD,FILM:825 OHM,1%,0.125W	91637	MFF1816G825R0F
D4000	201 0105 05					
R4299	321-0185-00			RES.,FXD,FILM:825 OHM,1%,0.125W	91637	MFF1816G825R0F
R4301	315-0103-00			RES.,FXD,CMPSN:10K OHM,5%,0.25W		CB1035
R4302	315-0103-00	1		RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035

<sup>&</sup>lt;sup>1</sup>T932 only <sup>2</sup>T935 only

REV. A AUG. 1977

	Tektronix	Serial/Mod	el No.		Mfr	
Ckt No.	Part No.	Eff	Dscont	Name & Description	Code	Mfr Part Number
R4303	315-0103-00			RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	CB1035
R4307	315-0203-00			RES.,FXD,CMPSN:20K OHM,5%,0.25W		CB2035
R4308	315-0203-00			RES.,FXD,CMPSN:20K OHM,5%,0.25W	01121	CB2035
R4312	315-0472-00			RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	01121	CB4725
R4315	315-0181-00			RES.,FXD,CMPSN:180 OHM,5%,0.25W	01121	CB1815
R4318	315-0103-00			RES.,FXD,CMPSN:10K OHM,5%,0.25W	01121	CB1035
R4321	315-0472-00			RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	01121	CB4725
R4322	315-0472-00			RES.,FXD,CMPSN:4.7K OHM,5%,0.25W	01121	CB4725
R4331	315-0101-00			RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015
R4334 <sup>1</sup>	315-0431-00	во10100	B010724	RES.,FXD,CMPSN:430 OHM,5%,0.25W	01121	CB4315
R43341	321-0158-00			RES.,FXD,FILM:432 OHM,1%,0.125W	91637	MFF1816G432R0F
R4334 <sup>2</sup>	315-0431-00		B010749	RES., FXD, CMPSN: 430 OHM, 5%, 0.25W	01121	CB4315
R4334 <sup>2</sup>	321-0158-00			RES.,FXD,FILM:432 OHM,1%,0.125W	91637	MFF1816G432R0F
R4337	321-0203-00			RES.,FXD,FILM:1.27K OHM,1%,0.125W	91637	MFF1816G12700F
R4338	315-0621-00			RES.,FXD,CMPSN:620 OHM,5%,0.25W	01121	CB6215
R4341	315-0101-00			RES.,FXD,CMPSN:100 OHM,5%,0.25W	01121	CB1015
R4344 <sup>1</sup>	315-0361-00		B010724	RES., FXD, CMPSN: 360 OHM, 5%, 0.25W	01121	CB3615
R4344 <sup>1</sup>	321-0151-00			RES., FXD, FILM: 365 OHM, 1%, 0.125W	91637	MFF1816G365R0F
R4344 <sup>2</sup>	315-0361-00		B010749	RES., FXD, CMPSN: 360 OHM, 5%, 0.25W	01121	CB3615
R4344 <sup>2</sup>	321-0151-00	B010750		RES.,FXD,FILM:365 OHM,1%,0.125W	91637	MFF1816G365R0F
R4346	311-1811-00			RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	12697	470-CM40953
R4347	321-0222-00			RES.,FXD,FILM:2K OHM,1%,0.125W	91637	MFF1816G20000F
R4348	315-0470-00			RES.,FXD,CMPSN:47 OHM,5%,0.25W	01121	CB4705
R4349 <sup>1</sup>	315-0621-00	XB010725		RES., FXD, CMPSN: 620 OHM, 5%, 0.25W	01121	CB6215
R4349 <sup>2</sup>	315-0621-00	XB010750		RES.,FXD,CMPSN:620 OHM,5%,0.25W	01121	CB6215
R4356	311-1811-00			RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	12697	470-CM40953
R4357	321-0222-00	1		RES.,FXD,FILM:2K OHM,1%,0.125W	91637	MFF1816G20000F
R4358	315-0470-00			RES.,FXD,CMPSN:47 OHM,5%,0.25W	01121	CB4705
R4359 <sup>1</sup>	315-0621-00			RES.,FXD,CMPSN:620 OHM,5%,0.25W	01121	CB6215
R4359 <sup>2</sup>	315-0621-00	XB010750		RES.,FXD,CMPSN:620 OHM,5%,0.25W	01121	CB6215
R4368	323-0131-00			RES.,FXD,FILM:226 OHM,1%,0.50W	75042	CECTO-2260F
R4373	321-0120-00			RES., FXD, FILM: 174 OHM, 1%, 0.125W	91637	
R4375	315-0430-00			RES.,FXD,CMPSN:43 OHM,5%,0.25W	01121	
R4376	323-0162-00			RES.,FXD,FILM:475 OHM,1%,0.50W	75042	
R4377	321-0120-00	ı		RES.,FXD,FILM:174 OHM,1%,0.125W	91637	MFF1816G174R0F
R4378	315-0750-00			RES.,FXD,CMPSN:75 OHM,5%,0.25W	01121	
R4383	321-0120-00			RES.,FXD,FILM:174 OHM,1%,0.125W		MFF1816G174R0F
R4385	315-0430-00			RES.,FXD,CMPSN:43 OHM,5%,0.25W	01121	
R4386	323-0162-00			RES.,FXD,FILM:475 OHM,1%,0.50W	75042	
R4387	321-0120-00			RES.,FXD,FILM:174 OHM,1%,0.125W	91637	MFF1816G174R0F
R4388	315-0750-00	1		RES.,FXD,CMPSN:75 OHM,5%,0.25W	01121	CB7505
R4396	311-1563-00	)		RES., VAR, NONWIR: 1K OHM, 20%, 0.50W	73138	91A RIK
R4397	311-1561-00	)		RES., VAR, NONWIR: 2.5K OHM, 20%, 0.50W	73138	91A R2500
R4398	315-0103-00	)		RES., FXD, CMPSN:10K OHM, 5%, 0.25W	01121	
R4411	315-0470-00	)		RES.,FXD,CMPSN:47 OHM,5%,0.25W	01121	CB4705
R4415	315-0161-00	)		RES.,FXD,CMPSN:160 OHM,5%,0.25W	01121	CB1615
R4416	315-0470-00			RES.,FXD,CMPSN:47 OHM,5%,0.25W	01121	CB4705
RT4175	307-0127-00	)		RES., THERMAL: 1K OHM, 10%	50157	2D1596
RT4275	307-0127-00			RES., THERMAL: 1K OHM, 10%	50157	2D1596
s100	260-1421-00	)		SWITCH, PUSH: 1 STA, MOMENTARY, NON-SHORT	80009	260-1421-00
S700	260-1768-00			SWITCH, PUSH: DPDT, 3A, 125VAC	82389	14S-7102C
S701	260-1776-00			SWITCH, SLIDE: DPDT, 3A, 125VAC	80009	260-1776-00

1<sub>T932</sub> only 2<sub>T935</sub> only

	Tektronix	Serial/Mod	el No		Mfr	
Ckt No.		Eff	Dscont	Name & Description	Code	Mfr Part Number
S705	260-1776-00			SWITCH, SLIDE: DPDT, 3A, 125VAC	80009	260-1776-00
S2100	214-2288-02			LEVER, SWITCH: STYLE A, 17.5 DEG, W/CONTACTS	80009	214-2288-02
S2140	260-1445-01			SWITCH, PUSH: 1 BUTTON	80009	260-1445-01
S2150 <sup>1</sup>	214-2289-02			LEVER, SWITCH: STYLE B, W/CONTACTS	80009	214-2289-02
s2250 <sup>1</sup> , <sup>2</sup>						
s2510 <sup>3</sup>	260-1268-00			SWITCH, PUSH: 3 BUTTON, 2 POLE, INTERLOCK	80009	260-1268-00
S2550A,B	3,4					200 200 00
54100 <u></u>	105-0678-00	B010100	B010831	DRUM, CAM SWITCH: W/LEVER	80009	105-0678-00
s4100 <sup>1</sup> s4100 <sup>3</sup>	105-0678-01	B010832	2010061	DRUM, CAM SWITCH: AC-DC GND, CHANNEL 1	80009	105-0678-01
54100	105-0678-00	B010100	B010961	DRUM, CAM SWITCH: W/LEVER	80009	105-0678-00
s4100 <sup>3</sup>	105-0678-01	в010962		DRUM, CAM SWITCH: AC-DC GND, CHANNEL 1	80009	105-0678-01
s4200 <sup>1</sup>	105-0678-00	B010100	B010831	DRUM, CAM SWITCH: W/LEVER	80009	105-0678-00
S4200 <sup>1</sup>	105-0678-02	B010832		DRUM, CAM SWITCH: W/LEVER	80009	150-0678-02
s4200 <sup>3</sup>	105-0678-00	B010100	B010961	DRUM, CAM SWITCH: W/LEVER	80009	105-0678-00
s4200 <sup>3</sup>	105-0678-02	в010962		DRUM, CAM SWITCH: W/LEVER	80009	105-0678-02
S4110	105-0679-00			DRUM, CAM SWITCH:	80009	105-0679-00
S4200	105-0678-00			DRUM, CAM SWITCH: W/LEVER	80009	105-0678-00
S4210	105-0679-00			DRUM, CAM SWITCH:	80009	
S4320	260-1782-00			SWITCH, PUSH: 3 BUTTON, DPDT, 10MM	80009	260-1782-00
т460	120-0996-00			XFMR,PWR,STU:HIGH VOLTAGE	80009	120-0996-00
т700	120-0994-00			XFMR, PWR, STPDN:	80009	120-0994-00
U24	156-0067-10			MICROCIRCUIT, LI: OPERATIONAL AMPLIFIER	80009	156-0067-10
U460	152-0637-02			SEMICOND DEVICE:SI, HV MULTR, 6.6KV-10KV	80009	
U742A,B				MICROCIRCUIT, LI: DUAL OPERATIONAL AMPLIFIER	80009	
U2156	156-0080-00			MICROCIRCUIT, DI: QUAD 2-INPUT NAND GATE	80009	156-0180-00
U2212	156-0080-00			MICROCIRCUIT, DI:QUAD 2-INPUT NAND GATE	80009	156-0080-01
U2224A.E	156-0405-01			MICROCIRCUIT, DI: DUAL RETRIG ONE-SHOT	80009	156-0405-01
U2234	156-0080-00			MICROCIRCUIT, DI:QUAD 2-INPUT NAND GATE	80009	
U2524	156-0030-00			MICROCIRCUIT, DI:QUAD 2-INPUT POS NAND GATE	01295	
U4134	156-0197-00			MICROCIRCUIT, LI:5 TRANSISTOR ARRAY	80009	156-0197-00
U4234	156-0197-00			MICROCIRCUIT, LI:5 TRANSISTOR ARRAY	80009	156-0197-00
U4306	156-0113-01			MICROCIRCUIT, DI:QUAD 2-INPUT POS NAND GATE	80009	156-0113-01
U4324	156-0388-01			MICROCIRCUIT, DI: DUAL D-TYPE FLIP-FLOP	80009	156-0388-01
**470	154 0720 00			THE POWDON WINDS DATA TAWN GOALD	00000	154 0720 00
V470	154-0729-00			ELECTRON TUBE: P31, INT SCALE,	80009	154-0729-00
VR412	152-0280-00			SEMICOND DEVICE: ZENER, 0.4W, 6.2V, 5%	80009	152-0280-00
VR746	152-0306-00			SEMICOND DEVICE: ZENER, 0.4W, 9.1V, 5%	81483	1N960B
VR762	152-0195-00			SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0195-00
VR784	152-0293-00			SEMICOND DEVICE: ZENER, 1W, 33V, 5%	04713	1N3O32B
VR2116	152-0279-00			SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0279-00
VR2392	152-0279-00			SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0279-00
VR2590 <sup>3</sup>	152-0195-00			SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0195-00
VR4184	152-0195-00			SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0195-00
VR4284	152-0195-00			SEMICOND DEVICE: ZENER, 0.4W, 5.1V, 5%	80009	152-0195-00
VR4338	152-0395-00			SEMICOND DEVICE: ZENER, 0.4W, 4.3V, 5%	04713	1N749A
VR4415	152-0195-00			SEMICOND DEVICE:ZENER, 0.4W, 5.1V, 5%	80009	152-0195-00
W2310 <sup>1</sup>	131-0566-00	XB011794		LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L	55210	ERD-18T0
W2310 <sup>3</sup>	131-0566-00			LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L	55210	
W2314 <sup>1</sup>	131-0566-00			LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L	55210	
W2314 <sup>3</sup>	131-0566-00	XB012319		LINK, TERM. CONNE: 0.086 DIA X 2.375 INCH L	55210	ERD-18TO

REV. A AUG. 1977 6-19

 $<sup>^{1}</sup>$ T932 only  $^{2}$ Replaceable only as part of A13, 672-0551-00.  $^{3}$ T935 only  $^{4}$ Replaceable only as part of A13/A14 672-0533-00.

		·	

Section 7—T932/T935

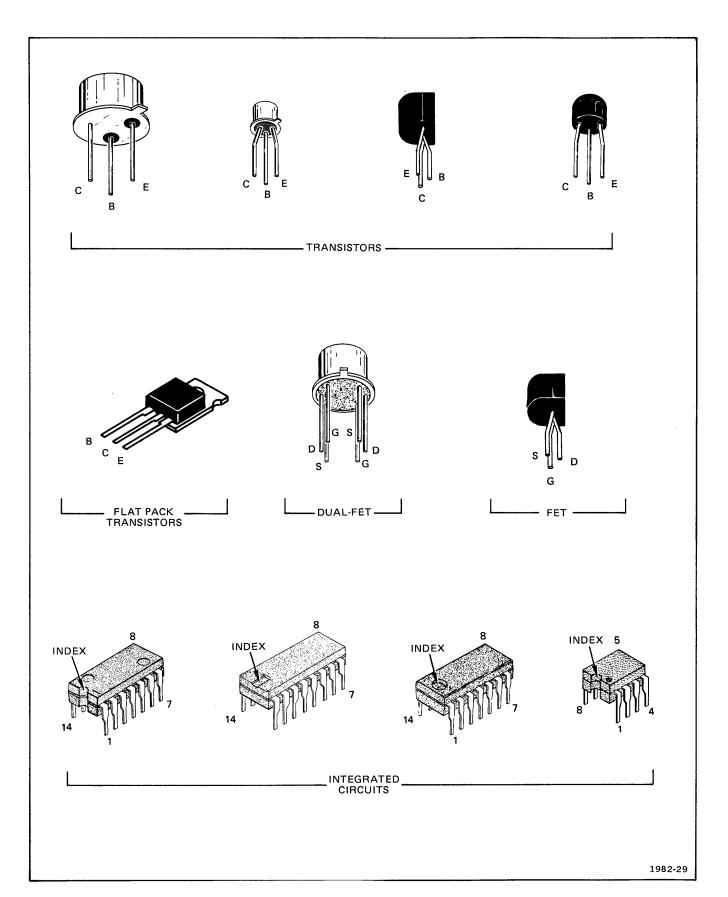


Fig. 7-1. Lead configuration for semiconductor devices.

## DIAGRAMS AND CIRCUIT DESCRIPTIONS

## **Symbols and Reference Designators**

Electrical components shown on the diagrams are in the following units unless noted otherwise:

Capacitors = Values one or greater are in picofarads (pF). Values less than one are in microfarads ( $\mu$ F).

Resistors = Ohms  $(\Omega)$ .

Graphic symbols and class designation letters are based on ANSI Standard Y32.2-1975.

Logic symbology is based on ANSI Y32.14-1973 in terms of positive logic. Logic symbols depict the logic function performed and may differ from the manufacturer's data.

The overline on a signal name indicates that the signal performs its intended function when it goes to the low state. Abbreviations are based on ANSI Y1.1-1972.

Other ANSI standards that are used in the preparation of diagrams by Tektronix, Inc. are:

Y14.15, 1966 Drafting Practices.

Y14.2, 1973


Line Conventions and Lettering.


Y10.5, 1968

Letter Symbols for Quantities Used in Electrical Science and

Electrical Engineering.

The following prefix letters are used as reference designators to identify components or assemblies on the diagrams.

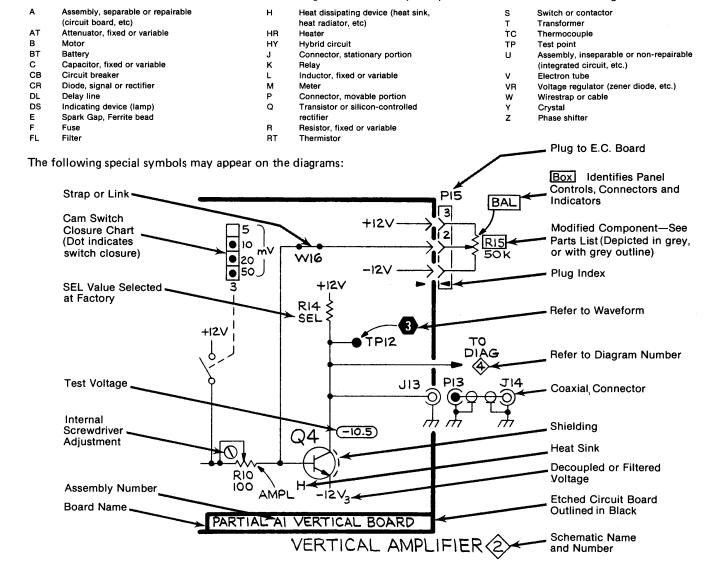

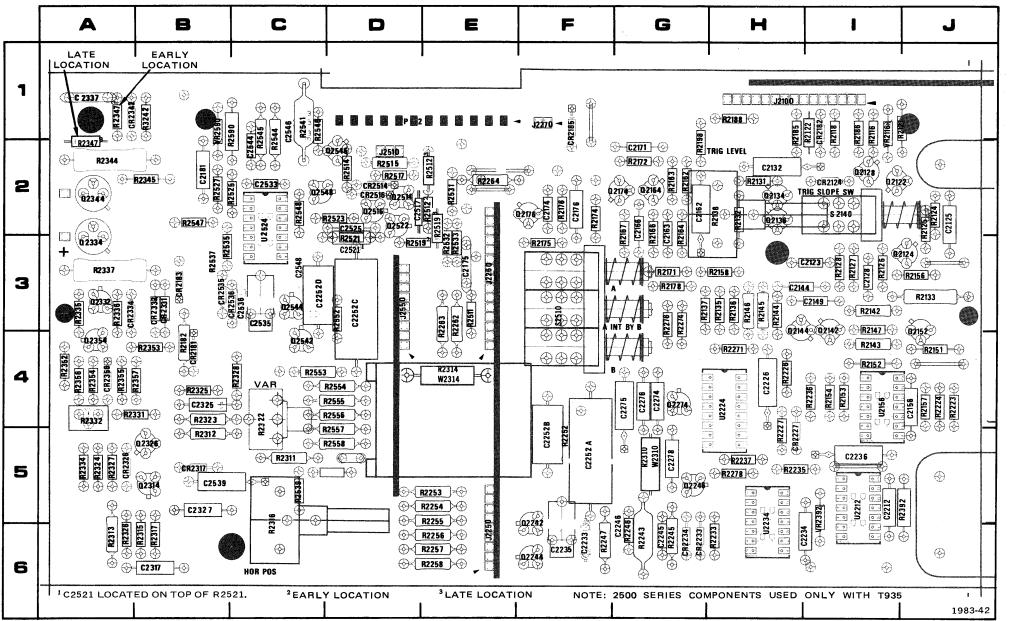

NOTE: ONLY A12 BOARD COMPONENTS ARE SHOWN SINCE OTHER BOARDS HAVE CIRCUIT NUMBERS MARKED ON BOARD.

Fig. 7-2. A12—Horizontal circuit board component locations.

\*See Parts List for serial number ranges.

CKT NO	GRID COORD	CKT NO	GRID COORD	CKT NO	GRID COORD	CKT NO	GRID COORD
C2123	31	CR2535	3B	R2152	41	R2332	4A
C2125	2J	CR2536	3B	R2153	41	R2334	5A
C2128	31			R2154	41	R2335	3A
C2132	2H	J2100	1H	R2156	31	R2336	3A
C2144	3H	J2250	6E	R2157	4J	R2337	3A
C2149	3F	J2260	3E	R2158	3H	R2342	1B
C2156	4J	J2270	1F	R2162	2G	R2344	2A
C2162	2G	J2510	2D	R2163	2G	R2345	2B
C2162	2G	J2510 J2550	3D	R2164	2G	R2347	1A 2,3
		12000	30		2G 2G	R2352	4A
C2166	2G	DO.	40	R2166			4B
C2171	2G	P2	1D	R2167	2G	R2353	
C2174	2F	00400		R2171	3G	R2354	4A
C2175	3E	Q2122	21	R2172	2G	R2355	4A
C2176	2F	Q2124	3J	R2174	2F	R2356	4A
C2181	2B	Q2128	21	R2175	3F	R2357	4B
C2212	51	Q2134	2H	R2176	2F	R2392	5J
C2226	4H	Q2136	2H	R2178	3G	R2511	3E
C2233	6F	Q2142	31	R2182	4B	R2512	2E
C2234	61	Q2144	3H	R2185	1H	R2514	2D
C2235	6F	Q2152	3J	R2186	11	R2515	2D
C2236	51	Q2164	2G	R2188	1H	R2517	2D
C2245	6G	Q2174	2G	R2198	2G	R2519	3D <sup>2</sup>
C2246*	6G	Q2176	2F	R2223	4J	R2519	2E 3
C2252A	5F	Q2242	6F	R2224	4J	R2521	3D
C2252B	5F	Q2244	6F	R2226	4H	R2523	2D
C2252C	3D	Q2246	5G	R2227	5H	R2525	2B
C2252D	3C	Q2274	4G	R2233	6H	R2527	2B
C2274	4G	Q2314	5B	R2235	5H	R2531	2E
	4G			l	41	R2532	3E
C2275		Q2326	5B	R2236			3E
C2276	4G	Q2332	3A	R2237	5H	R2533	
C2278	5G	Q2334	3A	R2243	6G	R2535	3B
C2317	6B	Q2344	2A	R2245	6G	R2537	3B
C2325	4B	Q2354	4A	R2246	6G	R2539	5C
C2327	5B	Q2514	2D	R2247	6F	R2541	1C
C2337	1A	Q2516	2D	R2252	5F	R2544	1C
C2517*	2D	Q2522	2D	R2253	5E	R2545	1C
C25211	3D	Q2542	4C	R2254	5E	R2546	1C
C2525	2D	Q2544	3C	R2255	5E	R2547	2B
C2533	2C	Q2546	2D	R2256	6E	R2548	2C
C2535	3C	Q2548	2C	R2257	6E	R2552	3D
C2536	3C			R2258	6E	R2553	4C
C2546*	1C	R2116	11	R2262	3E	R2554	4D
C2539	5B	R2118	11	R2263	3E	R2555	4D
C2544	2C	R2121	 1J	R2264	2E	R2556	4D
C2546	1C	R2122*	11	R2271	4H	R2557	5D
	3C	R2124	2J	R2271	3G	R2558	5D
C2548	30					l	
CD 2124	21	R2125	2J	R2276	3G	R2590	1B
CR2124	2I	R2126	31	R2278	5H	02140	21
CR2181	4B	R2127	31	R2310*	5G	S2140	2I
CR2182	11	R2128	31	R2311	5C	S2510	3F
CR2183	3B	R2131	2H	R2312	5B		
CR2185	1F	R2132	2H	R2313	6A	U2212	51
CR2227	5 <b>H</b>	R2133	<b>3</b> J	R2314*	4E	U2224	4H
CR2233	6G	R2135	3H	R2315	6B	U2234	6H
CR2234	6G	R2136	3H	R2316	6C	U2156	41
CR2317	5B	R2137	3G	R2317	6B	U2524	2C
CR2326	5A	R2138	2H	R2322	4C		
CR2331	3B	R2142	31	R2323	4B	VR2116	11
CR2332	3B	R2143	41	R2324	5A	VR2392	51
CR2334	3A	R2144	3H	R2325	4B	VR2590	1B
CR2342	1A	R2145	3H	R2326	6A	W2310	5G
		1		i			
CR2356	4A	R2146	3H	R2327 R2328	5A 4C	W2314	4E
CDOESA					441 -		
CR2514	2D	R2147	31	112320	70	1	

Signals to the channel signals are a preamplifier attenuators, and gain adj

A Trigger sample of th Amplifier vi SOURCE sw

The Vert supplies the through the the preampli output of ear Delay Line D Gate circuit to sel from the Verbanking Puramplifier to (SEC/DIV at (via the Alternate more through the circuit to sel from the Verbanking Puramplifier to (SEC/DIV at (via the Alternate more through the circuit supplies the circu

The verti-Driver throu Amplifier. The delay in the generator cir signal reach Vertical Out the signal to section of the causes the definition of circuitry.

## **BLOCK DIAGRAM DESCRIPTION**

## **VERTICAL INPUT**

Signals to be displayed on the crt are applied to either the channel 1 (Y) or channel 2 input connector. The input signals are amplified by the preamplifier circuits. Each preamplifier circuit includes separate input coupling, attenuators, gain switching, variable attenuators, balance, and gain adjustments.

A Trigger Pickoff circuit in each channel supplies a sample of the vertical input signal to the Trigger Input Amplifier via the Trigger Switching circuit and the SOURCE switch.

## **VERTICAL SWITCHING**

The Vertical Mode switch selects which channel supplies the trigger signal. The vertical signal passes through the Input Buffer Amplifier circuit which isolates the preamplifier circuits from the Delay Line Driver. The output of each Input Buffer Amplifier is connected to the Delay Line Driver through a Diode Gate circuit. The Diode Gate circuits are controlled by the Vertical Switching circuit to select the channel(s) to be displayed. An output from the Vertical Switching circuit (through the Chop Blanking Pulse Generator) is connected to the Z Axis Amplifier to blank switching transients in the chop mode (SEC/DIV at 1 ms or slower). A sync pulse from the sweep (via the Alternate Sync Pulse Amplifier) switches the display between channels at the end of each sweep in the alternate mode (SEC/DIV at .5 ms or faster).

## **VERTICAL AMPLIFIER**

The vertical input signal goes from the Delay Line Driver through the Delay Line to the Vertical Output Amplifier. The Delay Line provides approximately 120 ns delay in the vertical signal. This allows the sweep generator circuit time to initiate a sweep before the vertical signal reaches the crt vertical deflection plates. The Vertical Output Amplifier provides final amplification of the signal to drive the crt vertical deflection plates. One section of the BEAM FINDER switch, when pressed, causes the display to compress vertically to aid in locating off-screen displays. Another section affects the horizontal circuitry.

### **TRIGGER**

The Trigger circuit produces a logic triggering signal to trigger the sweep. Trigger signals are selected by the SOURCE switch from three sources: external trigger (via the External Trigger Input Buffer circuit), vertical amplifier input signal (internal), or the line voltage at the secondary of T700. (No trigger signal is produced during X-Y operation.)

The selected trigger signal is amplified and inverted by the Trigger Input Amplifier. The trigger signal passes through coupling capacitor, C2132, to the Trigger Level Comparator, which determines the voltage level (on the trigger waveform) at which triggering occurs. The SLOPE switch determines whether the sweep triggers on the positive-going or negative-going portion of the trigger signal. For TV signals, the SLOPE switch determines whether the sweep triggers from positive or negative sync polarity. The Trigger Level comparator also supplies a signal to the TV Sync Separator circuit.

Two Schmitt Trigger circuits produce the logic trigger signal; one is for conventional trigger signals and the other is for TV signals. The MODE switch selects which Schmitt Trigger circuit is operating.

### A SWEEP AND HORIZONTAL AMPLIFIER

The A Sweep circuit, when triggered by the Trigger circuit, produces a linear sawtooth output signal to the Horizontal Amplifier. The slope of the sawtooth is controlled by the SEC/DIV switch. When the sawtooth output reaches a predetermined level, the Hold-off Circuit resets the A Sweep circuit, blanks the crt (through the Z Axis Amplifier) and prevents subsequent triggers from initiating another sweep until the sweep reset is completed.

The sawtooth output from the Sweep circuit is amplified by the Horizontal Output Amplifier circuit to produce horizontal deflection on the crt. When the SOURCE switch is in the X-Y position, the X signal, from the External Trigger Input Buffer, is applied to the Horizontal Amplifier. One section of the BEAM FINDER switch, when pressed, causes the display to compress horizontally to aid in locating off-screen displays.

## **B SWEEP**

The B Sweep circuit produces a linear sawtooth output signal to the Horizontal Amplifier after a delay. The length of the delay is determined by the DELAY TIME POSITION control. The output signal from the A sweep circuit triggers the B sweep circuit. The DISPLAY MODE switch selects A, A INTEN BY B, or B (delayed) modes. In the A INTEN BY B mode, the B sweep intensifies a portion of the A sweep.

## **CRT CIRCUIT**

The Z Axis Amplifer determines the crt intensity and blanking. The Z Axis Amplifier sums the current inputs from several sources: INTENSITY control, X-Y intensity limit, unblanking signal from sweep circuit, chop blanking

signal from the Vertical Switching circuit, and EXT Z AXIS INPUT connector, J419.

Output of the Z Axis circuit controls the trace intensity through the HV circuit. The HV circuit provides the voltages (greater than 100 V) necessary for operation of the crt.

The Probe Adjust Generator provides a square-wave voltage output for checking voltage probes.

## **POWER SUPPLY**

The Power Supply circuits provide the low-voltage power necessary for operation of the instrument.

## **HIGH-VOLTAGE REGULATOR**

Transistors Q446-Q454 and associated circuitry control the output voltage of the High Voltage supply. Components R443 and C443 provide a slow start up for the high-voltage oscillator. When the instrument is turned on, the +100 V supply charges C443 through R443. The voltage increases until it is sufficient to forward bias CR443, holding the voltage at slightly above +8 volts. This forms the reference for the high-voltage regulator.

The resulting current in R444A (100  $\mu$ A) turns on Q446 and Q454, providing base current for Q458. This starts the high voltage oscillator, causing a negative voltage to develop at the crt cathode.

Resistors R444B, C, D, and R468 sample the cathode voltage. The high voltage increases until the cathode voltage is -2000 V, At this point the current in R444B is approximately the same as the current in R444A with Q446 barely conducting.

Any change in the level at the base of Q446 produces an error signal at the collector of Q446, which is amplified by Q454 and applied to the base of Q458 through the feedback winding of T460. Regulation occurs as follows:

If the cathode voltage at the —2000 V point starts to go positive (less negative), this positive-going change is applied to the base of Q446. Q446 conducts harder, which in turn causes Q454 to conduct harder. This results in greater bias current to the base of Q458 through the feedback winding of T460. Now Q458 is biased closer to its conduction level so that it comes into conduction sooner to produce a larger induced voltage in the secondary of T460. This increased voltage appears as a more negative voltage at the crt cathode to correct the original positive-going change. By sampling the output from the crt cathode supply in this manner, the total output of the high-voltage supply is held relatively constant.

Components, R445 and C445, damp the response of the regulator against fast changes in the load such as when the crt is unblanked at the beginning of the sweep.

Resistors, R446, R453, and R457, help prevent instabilities in the high-voltage oscillator.

# HIGH-VOLTAGE RECTIFIERS AND OUTPUT

The high-voltage transformer, T460, has 3 output windings. One winding provides about 6.3 V for the crt filament. The crt filament is referenced to the cathode voltage ( $\approx$ -2 kV), preventing cathode-to-filament breakdown. A second winding provides high ac voltage to the multiplier, U460, to produce a 10 kV crt anode accelerating voltage. The same winding is tapped and rectified by CR465 to produce the dc voltage for the crt cathode. Components C465, R465, and C466 filter the dc voltage.

The third winding is used to control the crt intensity. Components CR463, C462, C463, C464, R462, and R463 rectify and filter the secondary voltage to provide approximately -2100 V which is applied to the crt grid. The entire winding is referenced to the output of the Z axis amplifier whose output voltage variations are used to control the crt intensity by varying the grid to cathode voltage. The dc path for the Z axis signal to the grid is through R462, CR463, R463 and the transformer winding. Resistor R462 isolates the transformer capacitance from the Z axis Amplifier. Capacitors C463 and C464 provide a path for fast changes in the Z axis output to the crt grid. Resistor R464 provides a discharge path for C462, C463, and C464. Glow lamps DS463 and DS465 prevent the gridto-cathode voltage from rising high enough to cause breakdown within the crt during turn-on or when the cathode or grid is shorted to ground.

### CRT CONTROL CIRCUITS

Crt display focus is controlled by FOCUS control R468. ASTIG adjustment R477, which is used in conjunction with the FOCUS control to provide a well-defined display, varies the voltage on the astigmatism grid. Geometry adjustment, R473, varies the voltage on the horizontal deflection plate shields to control the overall geometry of the display.

Two adjustments control the trace alignment by varying the magnetic field around the crt. Y axis adjustment, R474, controls the current through L470, which affects the crt beam after vertical deflection but before horizontal deflection. Therefore, it affects only the vertical (Y) components of the display. Trace Rotation (TR ROT) adjustment, R472, controls the current through L472 and affects both vertical and horizontal rotation of the beam.

R475 and R476 provide the proper voltage for the vertical plate shield and R478 and C478 decouple the first accelerator electrode from the  $\pm 33$  V supply.

## 11.3

## **VOLTAGE AND WAVEFORM CONDITIONS**

## **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T932 or T935 control settings. In the crt circuit, set the INTENSITY control for a voltage measurement of  $\pm 20\%$  volts at the collector of Q426 and of Q434 before attempting to measure voltages in the rest of the circuit.

## **WAVEFORM CONDITIONS**


Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe. The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .

A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.

The T932 or T935 controls were set as follows:

SOURCE INT MODE **AUTO** Vertical Mode **DUAL TRACE** CH 1 VOLTS/DIV 50 mV CH 2 VOLTS/DIV 1 V Detent VAR (both) AC-GND-DC (both) DC **DISPLAY MODE** Α A & B SEC/DIV 10 us 1X-10X 1X **HOLD-OFF** Fully ccw **LEVEL** For triggered display

The other controls were set as necessary to obtain the desired display.

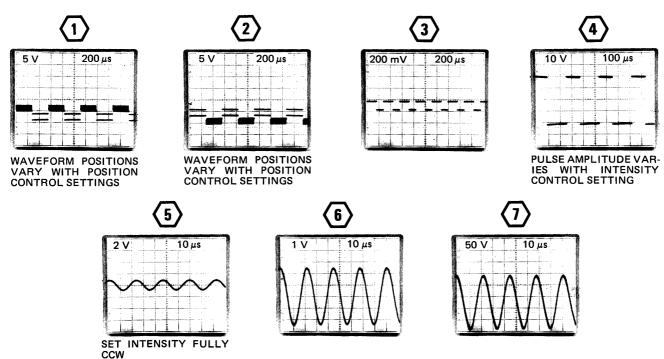

S4100 VOLTS/DIV VERTICAL SWITCHING DIAG CRT & VERTICAL AMPLIFIER DIAG FOCUS J4100 & PREAMP
T G4122A, B
1/17 Q4124A, B
1/4134A, B
1/4134A, B
1/4176, Q4184
Q4176, Q4186 R468 CHI DIODE GATE CH I INPUT BUFFER HV REGULATOR POSITION CR4346 CR4347 CR4348 CR4349 R4346 Q446 Q454 Q4344 Q4346 CIRCUIT 0458 0460 T460 EXT Z AXIS INPUT CH I TRIGGER PICKOFF Z AXIS MPLIFIER CHOP BLANKING +337 Q416 Q424 Q426 Q434 Q4196 Q4194 (X-Y) INTENSITY LIMIT ASTIG \$4200 INTENSITY VOLTS/DIV R412 Ş-VERTICAL OUT PUT AMPLIFIER -8v J4200 ¢ PREAMP CH2 DIODE GATE CH 2 INPUT BUFFER DELAY LINE DRIVER DELAY POSITION UPR Q4222A,B U4234A,B,C,D Q4274,Q4284-Q4276,Q4286 0146 0134 0134 0136 0146 CR4356 CR4357 CR4358 CR4359 R4356 Q4354 Q4356 0.4376 0.43**86** DL4380 AXIS VERTICAL SWITCHING 計序 CH2 TRIGGER PICKOFF VERTICAL MODE SWITCH U4306A,C,D U4324A VERTICAL INPUT CHOP BLANKING PULSE GEN S4320 PROBE ADJUST GENERATOR PROBE ADJ Q4294 Q4296 J27 DIAG (3) TR ROT BEAM FINDER SIOO U4306B U4324B U24 TRIGGER SWITCHING CR4331 CR4332 CR4335 CR4336 Q4336 CHOP/ALT ALTERNATE SYNC PULSE AMPLIFIER V470 ALT SYNC PULSE Q4302 SEC/DIV SWITCH POSITION \$2250 **\*S2550A** R2316 EXT TRIGGER INPUT BUFFER TRIGGER
INPUT
AMPLIFIER
Q2122
Q2124
Q2128 EXT TRIG INPUT TRIGGER LEVEL COMPTR LEVEL SOURCE EXT **⋠**R2I38 AUTO TRIGGER MULTI 02104 02106 02108 MODE SWITCH S2150 52100 Q2134 Q2136 LINE U2224B ¦⊗ SWEEP GATES SLOPE SWITCH HORIZONTAL OUT PUT AMPLIFIER NORMAL TRIGGER AMPLIFIER 52140 NORMAL SCHMITT TRIGGER TRIGGER DIAG (5) U2234ABCD Q2142 Q2144 Q2152 ₿ U2156A U2156B 02242 02244 02246 Q2314 Q2326 Q2332 Q2334 Q2344 Q2354 TV SCHMITT TRIGGER TV TRIGGER AMPLIFIE TV SYNC EPARATOR + IOOV (UNREG) T700 IOOV RECTIFIER \$ FILTER CR72I CR722 CR723 CR724 U2I56B U2I56C U2I56D S700 POWER DISPLAY MODE SWITCH 02174 02176 Q2164 HOLDOFF +100V REGULATOR S2510 ► +100V SWEEP ¢ HORIZONTAL AMPLIFIER 0722, 0726 0734; 0736 U2224A Q2274 **→** +33V P700 DIAG 68 6A SEC/DIV LINE TRIGGER DELAY TIME SWITCH +8V REGULATOR S2550B Q752, Q754 Q756,U742A NOTES:


1. HEAVY DASHED
LINES (A) & (B)
ARE CONNECTED
IN THE T932
ONLY.
2. \* S2550 FOR
T935 ONLY. -87 REGULATOR Q772,Q774 Q776,U742B B MILLER NTEGRATOR INPUT SWEEP GATE **-** −8∨ Q2514 Q2516 Q2522 Q2542 Q2544 Q2546 U2524A,B R2516 POWER SUPPLY DIAG (2) DELAY TIME POSITION SWEEP Q2548 B SWEEP DIAG (T935 ONLY) 1983-43 T932/T935 REV. A, JULY 1977 BLOCK DIAGRAM

KTZAXIS


intensity vides the eration of

are-wave

w-voltage

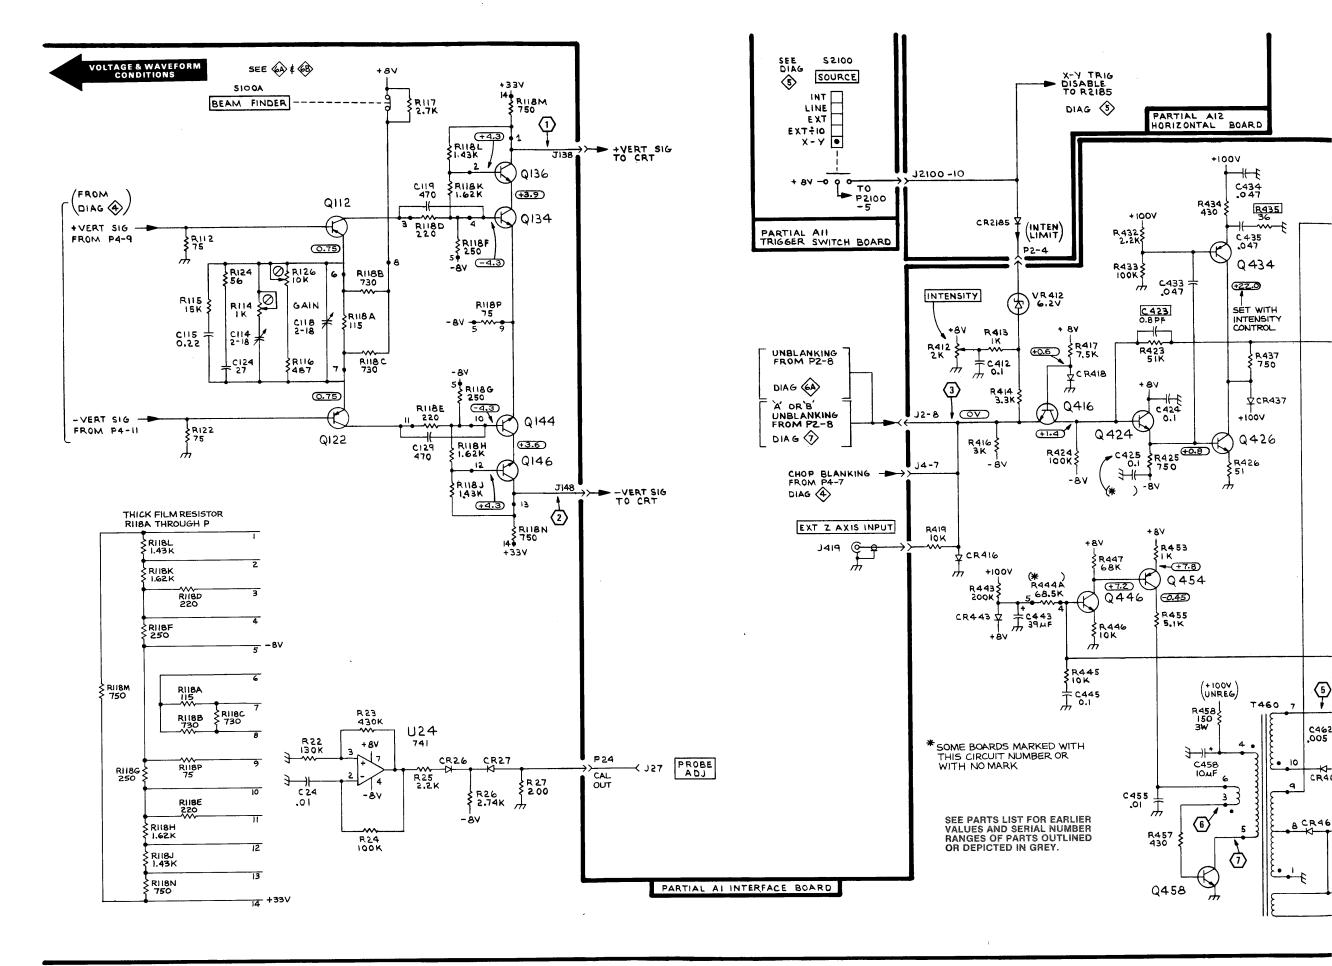



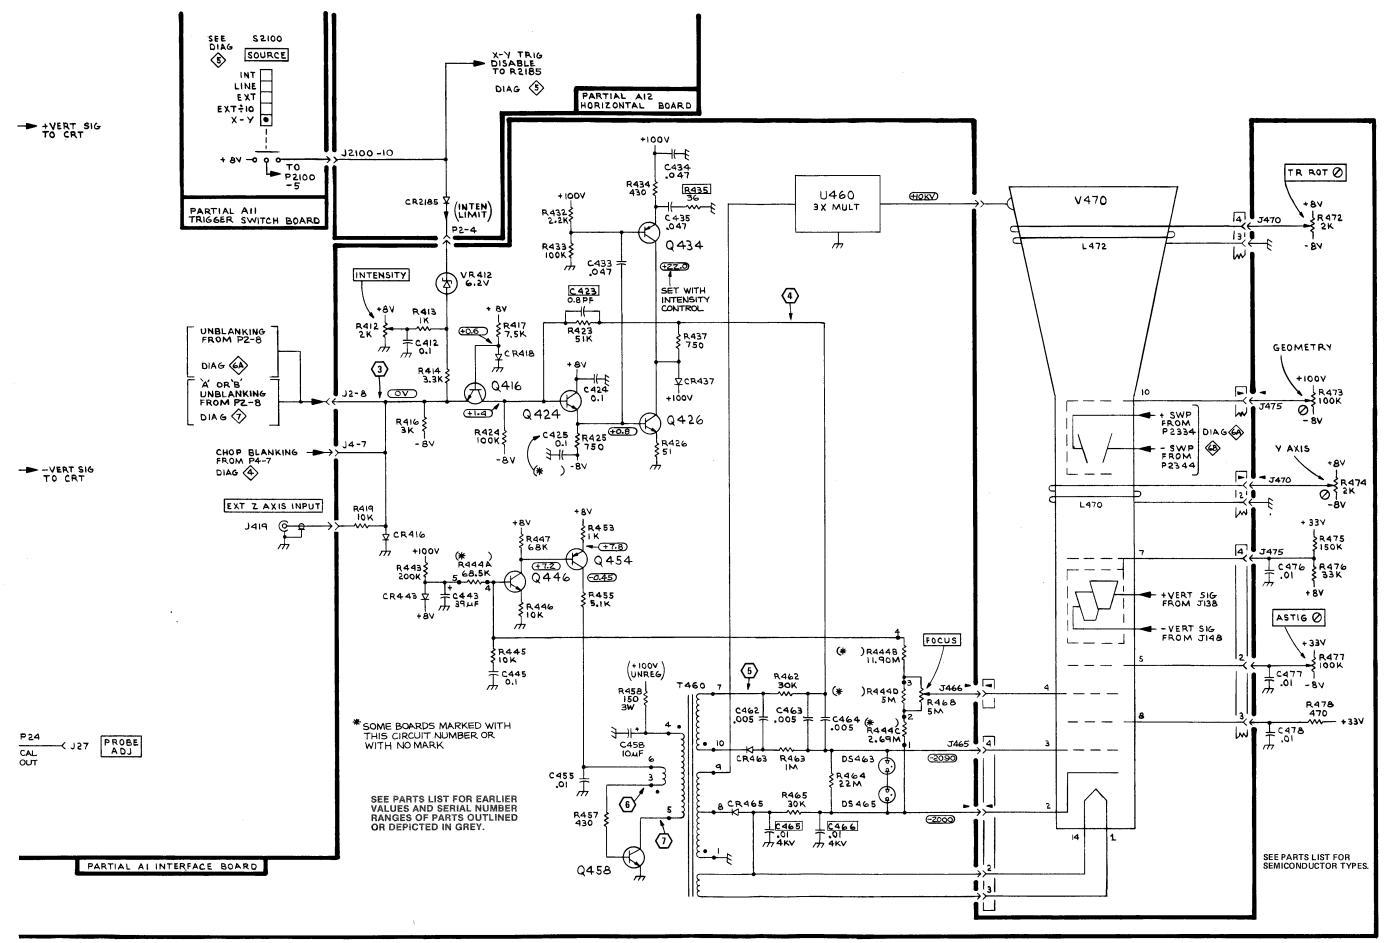

## POWER SUPPLY CIRCUIT DESCRIPTION

## **POWER INPUT**

AC power is applied to the primary of T700 though line fuse F700, POWER switch S700, Line Selector switch S701, and Range Selector switch S705.

The Line Selection switch, S701, connects the split primary windings of T700 in parallel for 120 V operation or in series for 240 V. When changing the nominal line voltage, also change the line fuse. See parts list for correct fuse values.

The Range Selector switch, S705, selects either LO (100 or 220 V) or HI (120 or 240 V) nominal line-voltage range.

## SECONDARY CIRCUITS

The secondary circuit supplies four regulated voltages: -8 V, +8 V, +33 V, and +100 V.

Operational amplifiers U742A (+8 V supply) and U742B (-8 V supply) have differential inputs that monitor output voltage variations and provide correction signals to the series-regulating transistors. For example, suppose the +8 volt supply drops. This negative change is coupled to the inverting input of U742A through sense resistor R756, causing pin 7 to go positive. Since the voltage across VR746 remains essentially constant, Q754 and Q756 follow this change and raise the output voltage back to +8 volts. In the +100 volt supply, Q726 acts as the feedback amplifier with its base being the inverting input. The regulating action is the same as in the +8 and -8 volt supplies. Zener diode, VR762, provides a 5 volt reference for the -8 V supply, which in turn provides the reference for the +8 and +100 volt supplies. The series regulating elements in the +100 V and +8 V supplies are transistors Q734-Q736 and Q754-Q756. The series regulating element in the -8 V supply is a modified Darlington configuration consisting of Q774 and Q776. Current limiting circuits provide short-circuit protection for each regulated supply. The following describes the +8 V current-limiting circuit. The other current-limiting circuits operate similarly.

In the +8 V supply, Q752 is normally biased off. Under normal conditions, the base of Q752 is set at about +8 V. As the supply current increases, the voltage drop across R754 increases. Since the Q756 emitter-base diode voltage difference remains constant, the increasing voltage on Q756 emitter due to the R754 voltage drop causes a corresponding increase at the base of Q756. This voltage is applied to voltage divider R752 and R753, causing the base of Q752 to go more positive. When the supply current increases sufficiently beyond the normal

operating current, Q752 turns on. The collector of Q752 moves in the negative direction, which begins turning off Q754-Q756 and creates a foldback condition, (see Fig. 7-3). Transistor, Q756, continues to conduct some current when the supply is limited, dropping enough voltage across R754 to keep Q752 biased on.

Regulated +33 V is provided by Zener diode VR784 from the +100 V supply. Current divider, R741, R742, R2102 (see diagram 5) provides a sample of the line voltage for line triggering.

### **POWER-ON LAMP CIRCUIT**

The POWER (ON) lamp, DS796, remains on as long as the line voltage does not vary more than approximately 10% from the nominal selected line voltage (100, 120, 220, or 240 V). When the line voltage is not within the 10% limit, the ON lamp blinks.

As long as Q796 is conducting, DS796 remains on. If Q796 is biased off, DS796 goes out, allowing C796 to charge through R796 and R797. When C796 reaches about 80 V, it discharges through DS796 causing it to turn on momentarily. Capacitor, C796, again is charged through R796-R797 and discharged through DS796. This cycle repeats, causing the ON lamp to blink until the line voltage is within the 10% limit and Q796 conducts.

When the 100 V unregulated supply at voltage divider R791-R792 and R793 increases to more than about 10% above the nominal value, Q792 turns on and Q796 turns off, causing DS796 to blink. When the 100 V unregulated supply at voltage divider R794-R799 and R795 decreases to less than about 10% below the nominal value, Q796 turns off, causing DS796 to blink.


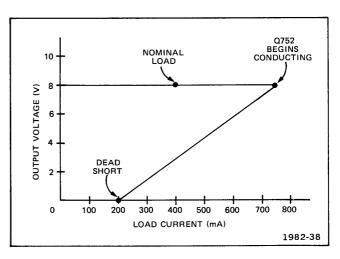


Fig. 7-3. Foldback circuit action.

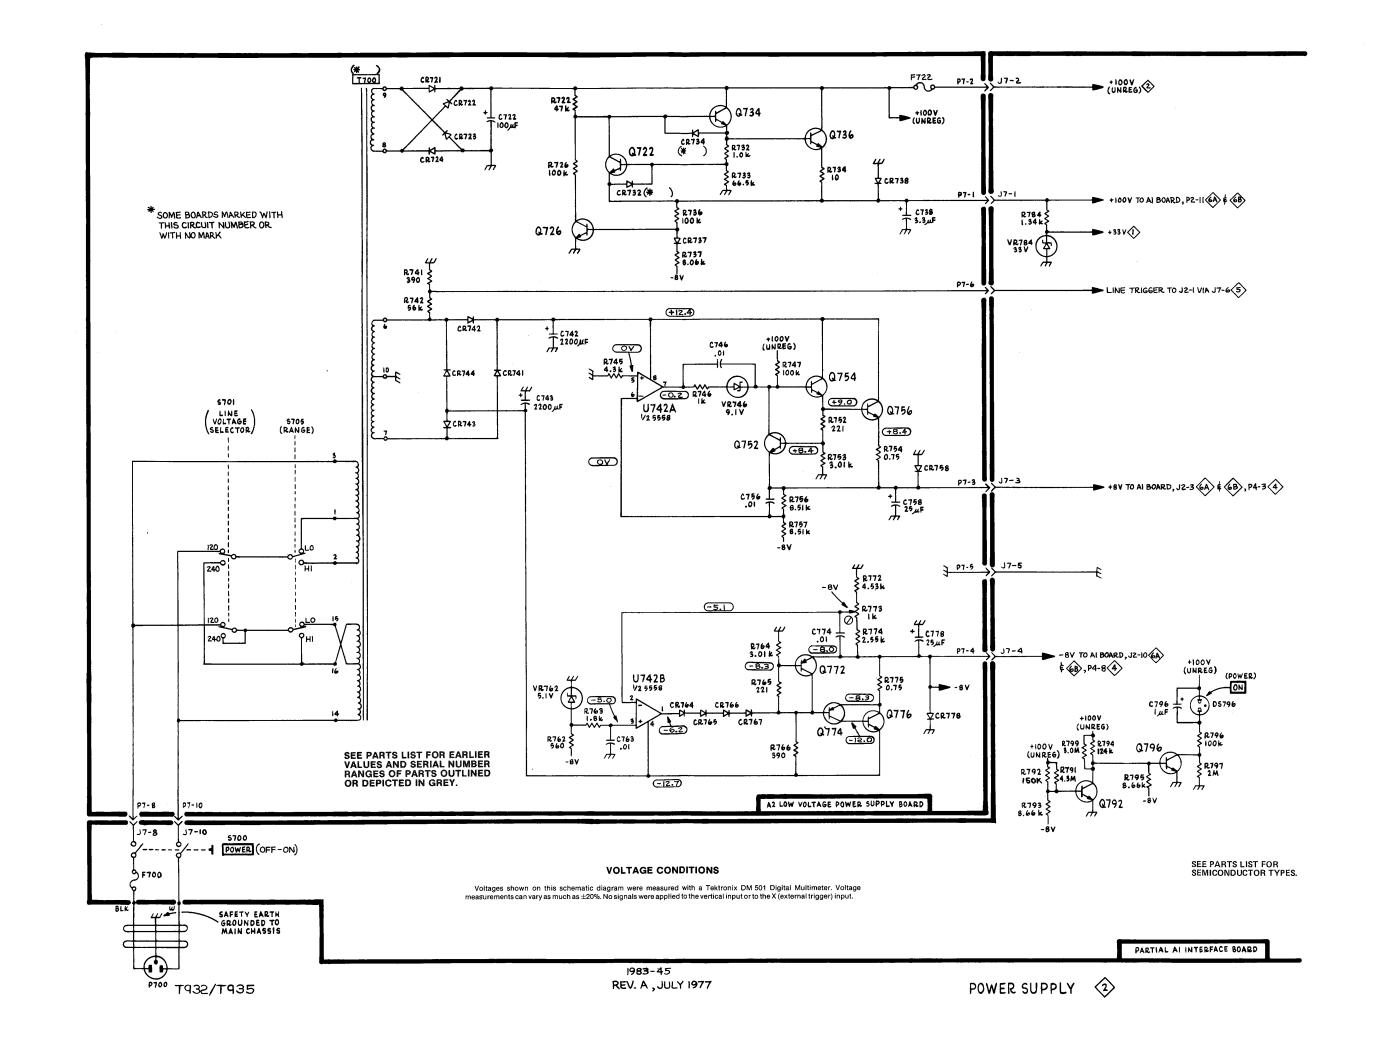

## **VERT INPUT CIRCUIT DESCRIPTION**

Since Channel 1 and Channel 2 vertical input circuits are identical, only Channel 1 is discussed in detail. The 4100 series circuit numbers identify the Channel 1 components and 4200 series numbers identify the Channel 2 components.

## INPUT COUPLING SWITCH

Vertical input signal is ac-coupled, dc-coupled, or grounded by S4100. In the DC position, the input signal is coupled directly to the VOLTS/DIV switch attenuator. In the AC position, the input signal passes through C4102 to the attenuator. In the GND position, the signal path from the input connector to the attenuator is grounded though C4102-R4102. This provides a ground reference without disconnecting the signal from the input connector. In the GND position, C4102 is charged to the average signal level through R4102 so that the trace remains on screen when S4100 is changed to the AC position.

## **VOLTS/DIV SWITCH**

The VOLTS/DIV switch selects attenuator ratio and preamplifier gain to determine the deflection factor. The basic 1X deflection factor of the vertical deflection system is 2 mV/division. At this setting, no attenuators are switched in and the gain switching circuit sets the preamplifier gain to maximum. To provide the complete range of deflection factors indicated on the front panel, precision attenuators are switched in and out of the attenuator and gain switching circuit.

The attenuators are frequency compensated voltage dividers that provide constant attenuation at all frequencies within the bandwidth of the instrument. The input RC characteristics (approximately 1  $M\Omega$  times approximately 30 pF) are maintained for each setting of the VOLTS/DIV switch. The attenuator circuit consists of a 10X and a 100X attenuator. 1000X is obtained when the 10X and 100X attenuators are cascaded.

The gain switching circuit consists of R4143 through R4147 and three VOLTS/DIV switch contacts. Three preamplifier gains are selected: 1X (maximum), 2.5X reduction, and 5X reduction. Refer to Table 7-1 for the attenuator and gain switching sequence.

### **PREAMPLIFIER**

The signal from the input attenuator is connected to source follower Q4122A via C4122 and R4122. Resistor R4121 determines the 1 M $\Omega$  input resistance, and R4122 limits current drive to the gate of Q4122A. Diode CR4122 protects the circuit from high negative-going input signals by limiting the voltage at the gate of Q4122A to about -8 volts. The Q4122A gate-drain junction provides protection from high positive-going signals by limiting the gate voltage to about +8 volts. FET Q4122B provides a constant-current source for Q4122A. For some serial numbers, Q4122 substrate (pin 8) is provided with a bias to

compensate for possible substrate leakage. This bias is derived by the voltage divider action of R4128 and R4129 between  $\pm 8$  volts and ground.

Integrated circuits U4134B and U4134C are emitter followers. The signal at the emitter of U4134B follows the signal at the gate of Q4122A. Divider network R4143 through R4147 attenuates the signal from U4134B which drives the base of U4134D. DC BAL, R4130 adjusts for minimum trace shift when switching between adjacent positions of the VOLTS/DIV switch.

## First Cascode Amplifier

Paraphase amplifier stage, U4134A, U4134D, and associated circuitry, converts the single-ended signal at the base of U4134D to a push-pull current signal. Capacitors C4158 and C4168 minimize the Miller effect through U4134D and U4134A. Components C4154, C4156, R4156, R4166 and C4166, connected between U4134A and U4134D emitters, compensate for high-frequency losses in the preamplifier. Gain adjustment R4151 determines the gain of the preamplifier. The VAR control, R4152, provides uncalibrated deflection factors between VOLTS/DIV switch settings by attenuating the signal to the base of U4134D. When R4152 is rotated clockwise, its full resistance is in series with R4162, and the deflection factors are calibrated.

Transistors Q4174 and Q4184 and associated circuitry make up a common base amplifier stage.

TABLE 7-1
Attenuator and Gain Switching Sequence

VOLTS/DIV Setting	Attenuator (signal attenuation)	Gain Switch (preamp gain reduction)
2 mV	1X	1X
5 mV	1X	2.5X
10 mV	1X	5X
20 mV	10X	1X
50 mV	10X	2.5X
.1 V	10X	5X
.2 V	100X	1X
.5 V	100X	2.5X
1 V	100X	5X
2 V	1000X	1X
5 V	1000X	2.5X
10 V	1000X	5X

## **Second Cascode Amplifier**

Transistors Q4176-Q4186 and Q4344-Q4346 (on diagram 4) comprise the second cascode amplifier. Capacitors C4177 and C4187 minimize the Miller effect through Q4176 and Q4186. The value of thermal resistor RT4175 (connected between emitters of Q4176 and Q4186) changes with temperature to counteract any gain change in the amplifier due to thermal variations. This holds the gain of the entire vertical amplifier constant over the operating temperature range of the instrument.

A sample of the vertical voltage signal from the emitters of Q4176 and Q4186 is applied to Q4194 and Q4196 where it is converted to a current signal. This current signal is applied to the trigger input amplifier (see diagram 5) via diode switching circuitry (see diagram 4). See circuit descriptions for diagrams 4 and 5 for further details.

## **VOLTAGE AND WAVEFORM CONDITIONS**

## **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T932 or T935 control settings.

## **WAVEFORM CONDITIONS**


Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe (unless otherwise stated). The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .

A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.


The T932 or T935 controls were set as follows:


INT
AUTO
CH 1
50 mV
1 V
Detent
DC
Α
10 <i>μ</i> s
1X
Fully ccw
For triggered display


The other controls were set as necessary to obtain the desired display.

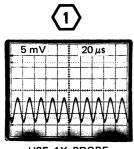




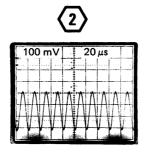

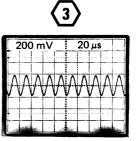

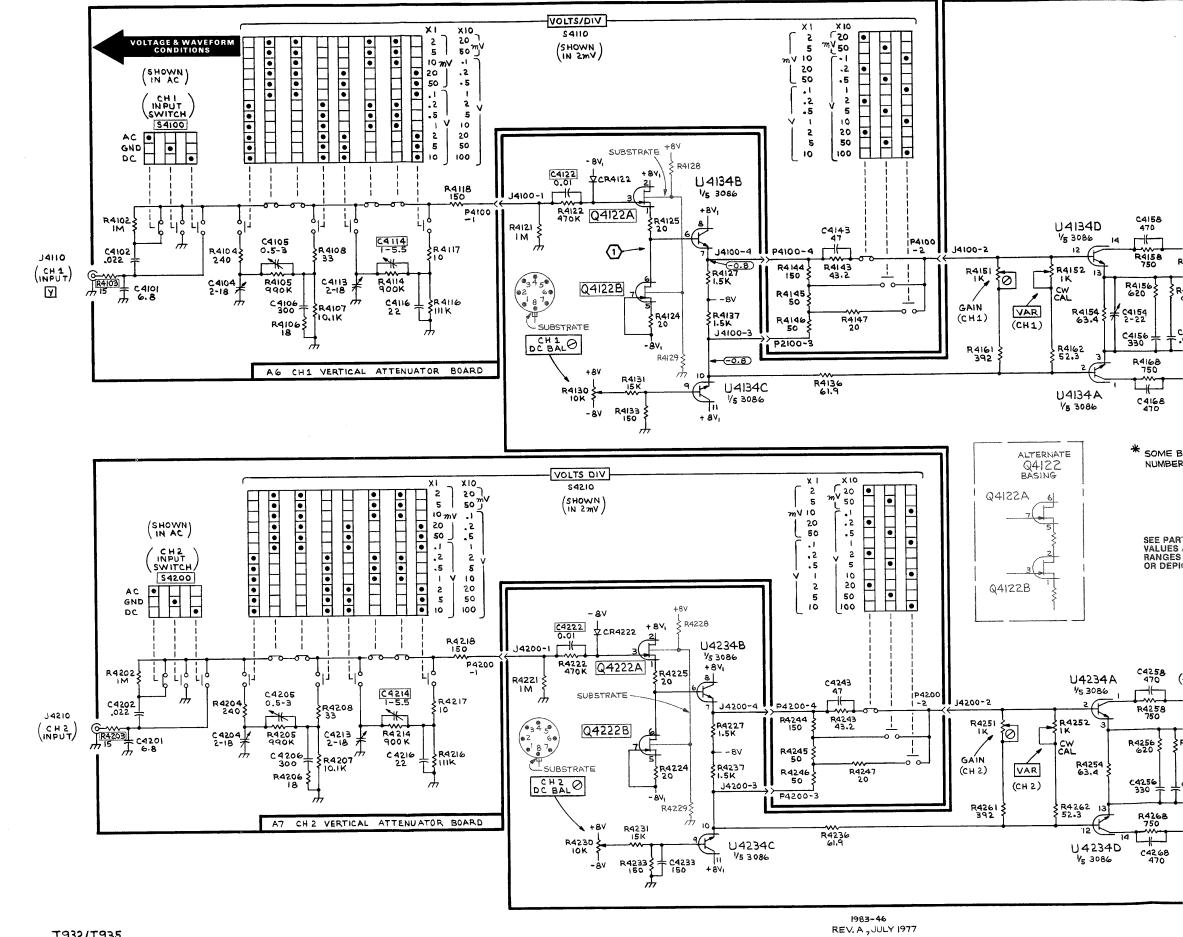

T932/T935

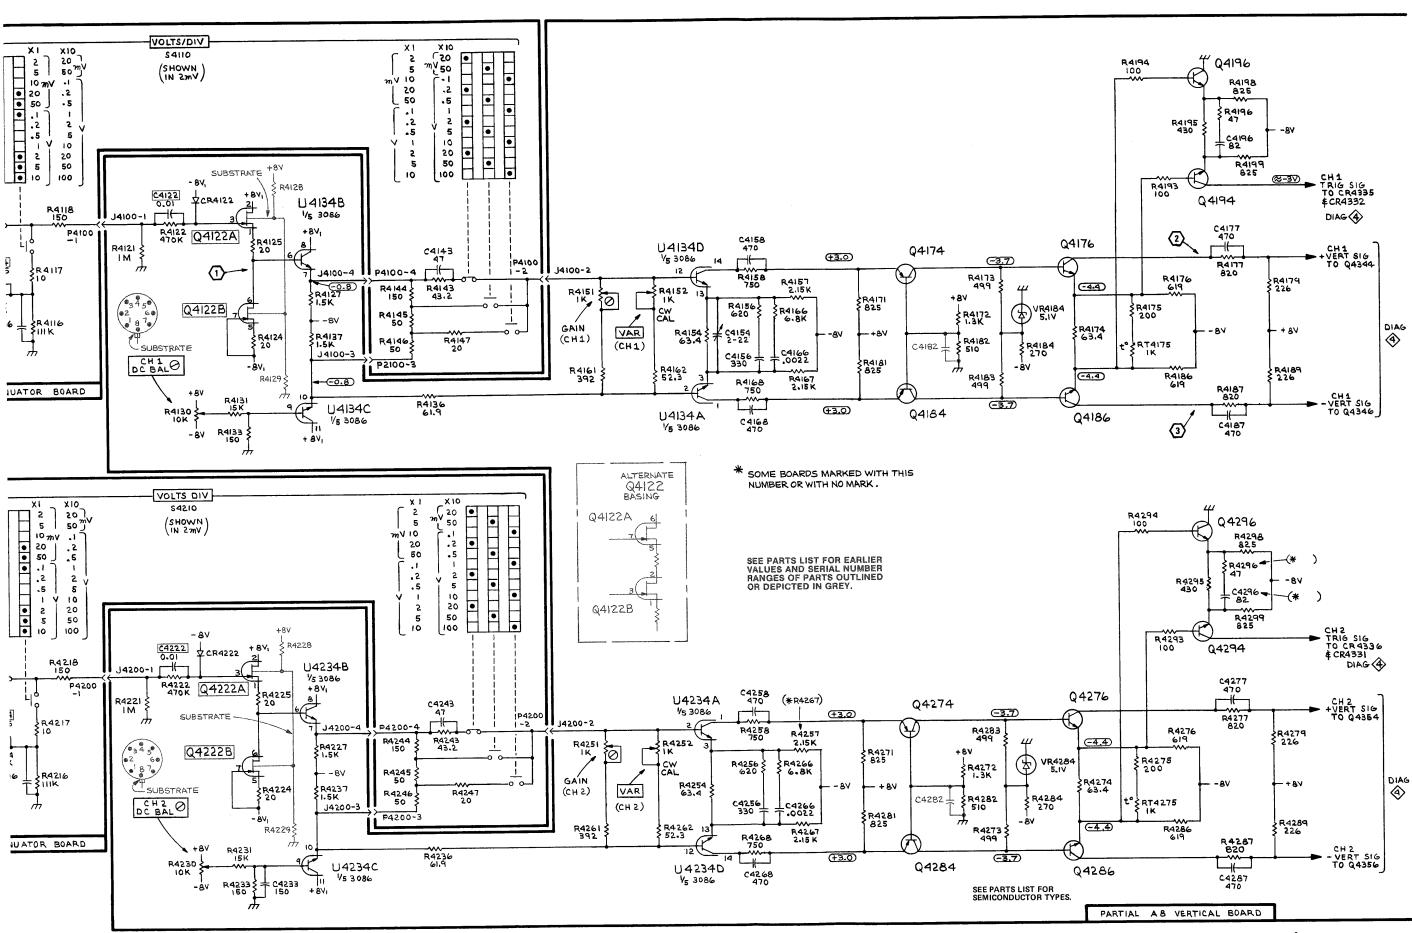

1983-46 REV. A , JULY 1977 VERTICAL INPUT ③

 $\Diamond$ 

**VERT SWITCHING CIRCUIT DESCRIPTION** 

Digital logic devices are used to perform some of the functions in this instrument. LO and HI designations are used in this circuit description to indicate the state of the digital circuit. HI indicates the more positive of the two levels. The specific

When the Vertical Mode switch is in the CH 1 position,

pin 4 of U4324A is held LO, causing pin 5 to go HI. A HI at pin 5 (a voltage higher than at the bases of Q4386 and

Q4376) reverse biases CR4347 and CR4348 and forward

biases CR4346 and CR4349. This allows the CH 1 signal to

pass to the delay line driver. When pin 5 is HI, pin 6 is LO, causing the cathodes of CR4357 and CR4358 to be connected to a voltage much lower than on the bases of

Q4386 and Q4376. Diodes CR4357 and CR4358 are now forward biased and diodes CR4356 and CR4359 are

reverse biased, preventing the CH 2 signal from passing to

In the CH 2 mode, the above conditions are reversed.

In the DUAL TRACE Vertical Mode, CH 1 and CH 2 are alternately connected to the delay line driver. There are

two dual trace modes: chopped and alternate. These

modes are determined by the SEC/DIV switch setting.

Chopped mode is obtained for sweep speeds of 1 ms and slower; alternate is obtained for sweep speeds of 0.5 ms

In the chopped mode pin 2 of U4306A is ungrounded,

allowing the multivibrator, U4306A and U4306D, to free

run at about 250 kHz. The output at pin 8 of U4306C serves

as a clock pulse for U4324A, which in turn switches the diode gates at the 250 kHz rate. The clock pulse is also fed to U4324B, which provides an output pulse to the Z Axis

amplifier to blank out the transition between CH 1 and CH 2 traces. If pin 13 of U4324B goes LO, the output pin 9

is set LO, causing pin 6 of U4306B to go HI. This causes pin

13 of U4324A to go HI after being delayed by C4315

The clock pulse applied to pin 11 of U4324B causes pin

9 to go HI, which in turn, after passing through the inverter

and after some delay, sets pin 13 LO again. This causes pin

9 to go LO again. The positive-going voltage pulse (whose

width is determined by R4315 and C4315) is converted to

current by R4318 and sent to the Z Axis Amplifier to blank

Diodes CR4357 and CR4358 are reverse biased, passing

the CH 2 signal and blocking the CH 1 signal.

the delay line driver.

and faster.

charging through R4315.

switching transients.

Since Channel 1 and Channel 2 vertical circuits are identical, only Channel 1 is discussed in detail.

voltages that constitute a LO and HI logic state, may vary between individual devices.

**POSITION CONTROL** 

bases of Q4386 and Q4376 to vertically position the trace

**DELAY LINE DRIVER** 

stage composed of Q4386, Q4376, and associated cir-

cuitry. A sample of the output of Q4386 and Q4376 is fed back through R4383 and R4373 to the bases of Q4386 and Q4376. Due to this feedback, this stage forms an inverting

operational amplifier with a virtual ground at the bases of

Q4386 and Q4376. Any current into these virtual ground

null points causes an output voltage that is proportional to

Components C4396, R4396, C4397, C4395, R4397,

C4398, R4398 provide compensation (peaking) to correct

**DELAY LINE** 

delay in the vertical signal. This allows the sweep

generator circuit time to initiate a sweep before the vertical

**VERTICAL SWITCHING** 

or CH 2 is connected to the vertical output amplifier in the

DUAL TRACE alternate or chopped modes. Both

channels are alternately displayed on a time shared basis.

The diode gates, consisting of four diodes each, act as

switches that allow either of the vertical preamplifier

signals to be coupled to the delay line driver. Diodes

CR4346, CR4347, CR4348, and CR4349 control the CH 1

output; CR4356, CR4357, CR4358, and CR4359 control

the CH 2 output. These diodes are controlled by flip-flop

U4324A, which in turn is controlled by Vertical Mode

The vertical switching circuit determines whether CH 1

signal reaches the crt vertical deflection plates.

The delay line, DL4380 provides approximately 120 ns

The delay line driver is a push-pull feedback amplifier

POSITION control R4346 varies the dc voltage at the

on the crt.

the feedback resistance.

for delay line losses.

switch, S4320.

In the alternate mode, pin 2 of U4306A is grounded (via SEC/DIV), preventing multivibrator operation, thus keeping pin 10 of U4306C HI. At the end of each sweep, the base of Q4302 receives a current pulse driving it into saturation. The resulting negative-going pulse at the collector is fed through C4302 to pin 9 of U4306C causing pin 8 to go HI. This in turn, switches U4324A to pass either CH 1 or CH 2 to the delay line driver at the end of each sweep. Pin 12 of U4324B is grounded through the SEC/DIV switch and prevents an output at pin 9.

The Vertical Mode switch also selects the appropriate internal triggering source for CH 1 and CH 2. With the Vertical Mode switch set to CH 1 and DUAL TRACE, CR4335 is forward biased and the signal from the CH 1 trigger pickoff goes to the sweep circuit. In these modes, CR4331 is connected to the +8 volts, thus reverse biasing CR4336, preventing the CH 2 trigger signal from entering the trigger input amplifier. With the Vertical Mode switch set to CH 2, CR4336 becomes forward biased while CR4335 is reverse biased because CR4332 is now connected to +8 volts.

## TRIGGER PICKOFF

Transistors Q4196 and Q4194 (diagram 3) convert a sample of the vertical signal to a single-ended current signal to drive the trigger input amplifier. When the TRIGGERING SOURCE switch is set to INT, approximately -4 volts from the trigger input amplifier is applied to the collector of Q4336, reverse biasing CR4338 (diagram 4), and allowing the internal trigger signal (selected by diode switching circuit) to be applied to the trigger input amplifier. When the SOURCE switch is set to LINE, EXT, EXT  $\div$  10, or X-Y, the internal trigger signal is disconnected from the trigger input amplifier, forward biasing CR4338, and setting the collector of Q4336 at about -3 volts. The resultant Q4336 load maintains conduction of Q4196 and Q4194, thus presenting a constant load for Q4176 and Q4186 (see diagram 3) to prevent distortion of the main vertical signal.

## **V.3**

# **VOLTAGE AND WAVEFORM CONDITIONS**

## **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T932 or T935 control settings.

## **WAVEFORM CONDITIONS**


Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe. The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .


A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.

The T932 or T935 controls were set as follows:


INT SOURCE **AUTO** MODE **DUAL TRACE** Vertical Mode 50 mV CH 1 VOLTS/DIV CH 2 VOLTS/DIV 1 V VAR (both) Detent AC-GND-DC (both) DC **DISPLAY MODE** 10 μs\* A & B SEC/DIV 1X 1X-10X **HOLD-OFF** Fully ccw LEVEL For triggered display

The other controls were set as necessary to obtain the desired display. For waveforms 1, 2, 5, and 6, adjust CH 1 and CH 2 POSITION controls as necessary for the desired display.

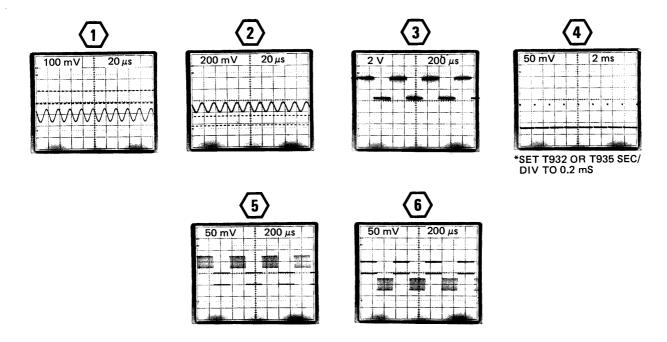

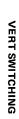



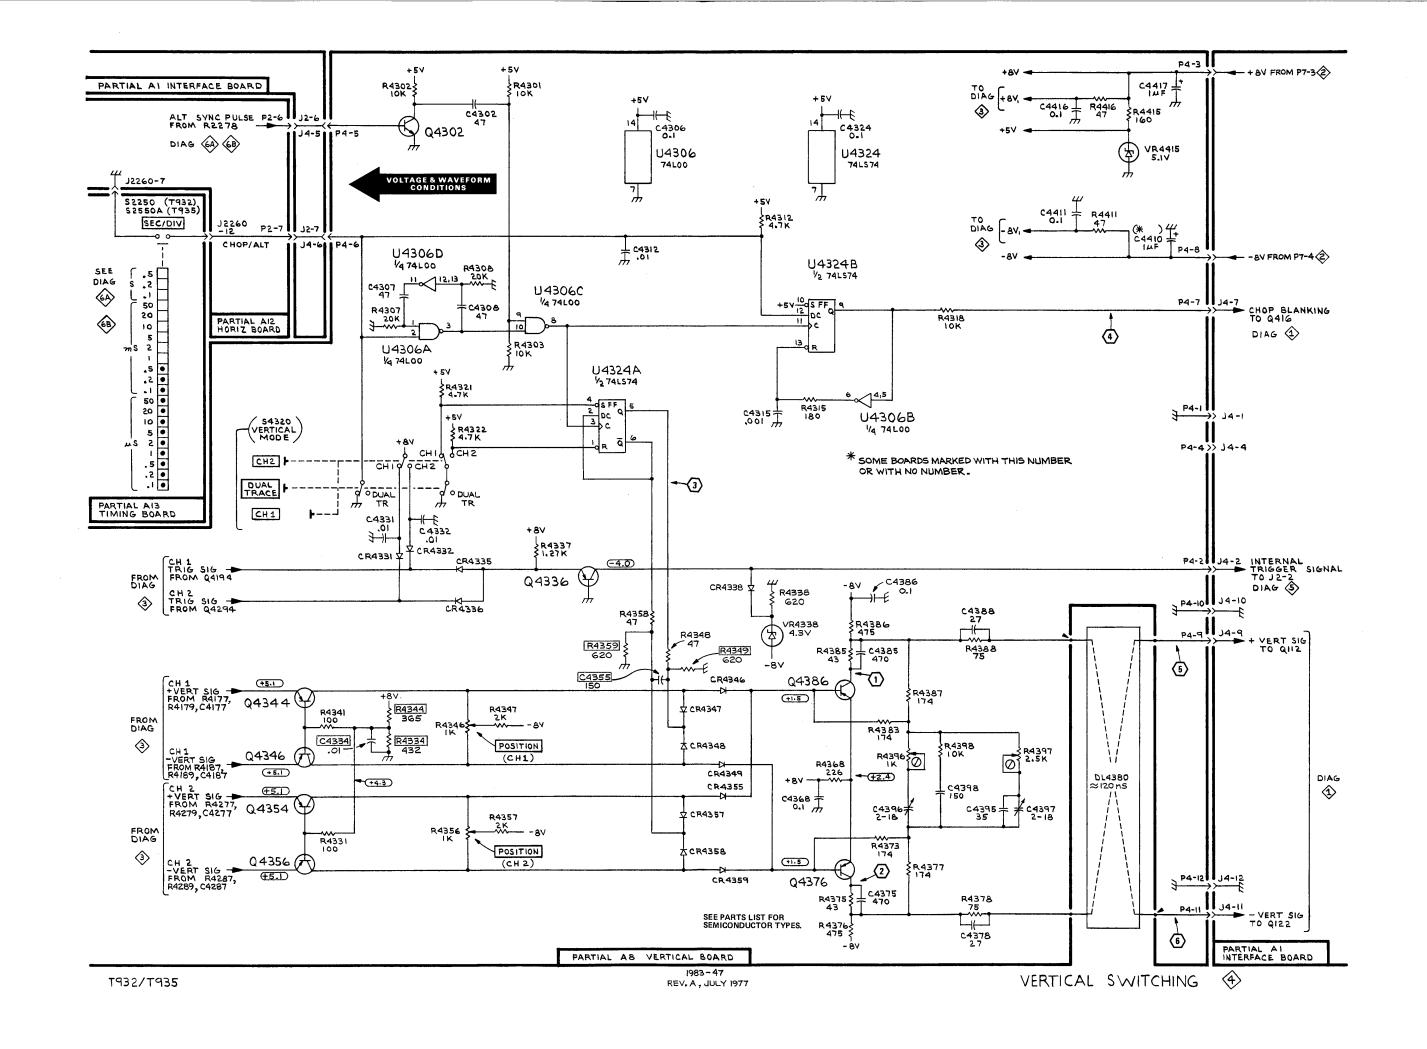

## TRIGGER CIRCUIT DESCRIPTION

Digital logic devices are used to perform some of the functions in this instrument. LO and HI designations are used in this circuit decription to indicate the state of the digital circuit. HI indicates the more positive of the two levels. The specific voltages that constitute a LO and HI logic state may vary between individual devices.

## INPUT AND SWITCHING

### **SOURCE Switch**

The SOURCE switch, S2100, selects trigger signals from INT, LINE, EXT, EXT  $\div$  10, and X-Y sources.

**INT.** Signal from the trigger pickoff circuit in the vertical amplifier is connected to the trigger input amplifier Q2122. (See diagrams 3 and 4.)

LINE. A sample of the line voltage, obtained from the power transformer, is connected to the trigger input amplifier Q2122.

**EXT.** Externally applied signals pass through buffer amplifier Q2104-Q2106. FET Q2104 is a source follower and Q2106 is a current source. Transistor Q2108 and R2107 convert the voltage signal at the buffer output to a current for application to the trigger input amplifier. When EXT is selected, the collector of Q2108 is connected to the trigger input amplifier (Q2122) by SOURCE switch S2100.

### **EXT**

10. The output of buffer amplifier Q2104-Q2106 is connected to R2111. Resistor R2111 converts the buffer output voltage to a current which is connected to the trigger input amplifier via S2100.

X-Y. Signals from the X (EXT) input are routed to the horizontal amplifier via CR2183. The SOURCE switch connects +8 volts to R2182, forward biasing CR2183 and providing current to the horizontal amplifier to center the crt display. Further, +8 volts is applied to CR2182 and R2185 to electrically place the sweep in the NORM mode and to disable the trigger circuit.

## **MODE Switch**

The MODE switch (S2150) selects three triggering modes: AUTO, NORM, and TV.

**AUTO.** Allows the sweep to free run in the absence of a triggering signal. See sweep circuit description for details.

NORM. Connects +8 volts to R2223 in the sweep generator circuit. Allows the sweep to run only when a suitable triggering signal is present.

**TV.** The trigger signal is applied to the TV sync separator circuit (Q2164, Q2174, Q2176) and the normal trigger generator circuit is disabled. In this mode, the SLOPE switch is used to supply the sync separator with a signal of the proper polarity. For SEC/DIV settings of .1 ms/div or slower, the sweep is triggered by vertical sync pulses which occur at a field rate. For SEC/DIV settings of 50  $\mu$ s and faster, the sweep is triggered by the TV horizontal line signals.

### TRIGGER INPUT AMPLIFIER

The trigger input amplifier consists of Q2122, Q2124, Q2128, and associated circuitry. Resistors R2127 and R2128 set the amplifier input at -4 volts. The inverting configuration and feedback from the emitter of Q2128 form an inverting operational amplifier with a null point at the base of Q2122. Any current into the null point produces a voltage at the output proportional to the feedback resistor R2116. Diode CR2124 prevents the emitter of Q2128 from going below ground and reversing the voltage across C2132.

## TRIGGER LEVEL COMPARATOR

Differential amplifier Q2134-Q2136 functions as a comparator. The LEVEL control R2138 selects the point on the waveform that starts a sweep. Capacitor C2132 ac couples the trigger signal to the comparator. As the trigger signal at the base of Q2134 passes through the same voltage level as the base of Q2136 (set by LEVEL control), the signal at the emitter of Q2152 passes through the threshold (about 1 volt) of Schmitt trigger U2156A-U2156B producing a logic trigger signal. The trigger signals at the collectors of Q2134 and Q2136 are of opposite polarity. This allows the SLOPE switch S2140 to invert the signals applied to the TV trigger input amplifier Q2164 and the normal trigger input amplifier Q2142, Q2144, and Q2152. When the SLOPE switch is in the +OUT position, the output at the collector of Q2142 is in phase with the trigger source signal. Transistors Q2142, Q2144 and Q2152 convert the current signal from the collectors of Q2134 or Q2136 to a voltage signal for triggering the Schmitt trigger.

## TV TRIGGER CIRCUIT

Active devices Q2164, Q2174, Q2176, U2156B, C, D, and associated circuitry comprise the TV trigger circuit. When the MODE switch is in TV, R2186 is disconnected from +8 volts which allows trigger signals from the collectors of Q2134 and Q2136 to pass through the TV trigger circuit. (In AUTO and NORM, the +8 volts applied to R2186 biases Q2164 to saturation.)

Transistor Q2164 is a high gain feedback amplifier. To achieve stable triggering on TV signals, the LEVEL control must be set at a point that will allow the sync pulses to appear within the dynamic range of the amplifier.

The sync separator circuit consists of Q2174 and associated circuitry. It processes sync-positive pulses when the SLOPE switch is in the +OUT position and syncnegative pulses in the -IN position. Transistor Q2174 produces large positive-going pulses from negative-going sync signals at the collector of Q2164.

In the TV field mode (SEC/DIV switch set for .1 ms or slower), Q2176 is saturated (since base is grounded), and the integrator (composed of C2174, C2176, R2174, and R2176) is switched into the circuit (effectively connected to +8 volts through saturated Q2176). The integrator filters out the horizontal sync pulses, leaving only the integrated vertical sync pulses, which trigger the TV Schmitt trigger U2156B and U2156C.

In the TV line mode (SEC/DIV switch set for 50  $\mu$ s or faster), Q2176 is turned off (base open), disconnecting C2174 and C2176 from +8 volts. Capacitors C2174 and C2176 no longer integrate the pulses, thus allowing both the horizontal and vertical sync pulses to pass through to the TV Schmitt trigger.

## SCHMITT TRIGGERS

The Schmitt trigger for the NORM and AUTO triggering modes consists of U2156A, U2156B, and associated circuitry. Hysteresis of this trigger circuit is determined by R2152, R2153, and R2151.

The Schmitt trigger for the TV triggering mode is U2156B, U2156C, U2156D, and associated circuitry. Resistors R2154 and R2178 determine the sensitivity.

When the MODE switch S2150 is in AUTO or NORM, +8 volts is applied to R2156 which causes pin 1 of U2156A to go HI enabling Schmitt trigger U2156A-U2156B. At the same time, pins 12 and 13 of U2156D are also HI disabling Schmitt trigger U2156C-U2156B. A trigger signal from Q2152 triggers Schmitt trigger U2156A-U2156B to produce a logic trigger signal at pin 6 of U2156B.

When the MODE switch S2150 is in TV, +8 volts is removed from R2156 and pin 1 of U2156A is LO, disabling Schmitt trigger U2156A-U2156B. Pins 12 and 13 of U2156D are LO, enabling Schmitt trigger U2156B-U2156C. The trigger signal from the TV sync separator triggers Schmitt trigger U2156B-U2156C to produce a logic trigger signal at pin 6 of U2156B.

### **VI.3**

## **VOLTAGE AND WAVEFORM CONDITIONS**

### **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T932 or T935 control settings.

### **WAVEFORM CONDITIONS**

Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe. The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .


A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.


The T932 or T935 controls were set as follows:


SOURCE INT MODE **AUTO\*** Vertical Mode CH<sub>1</sub> CH 1 VOLTS/DIV 50 mV CH 2 VOLTS/DIV 1 V VAR (both) Detent AC-GND-DC (both) DC **DISPLAY MODE** Α A & B SEC/DIV 10 *μ*s 1X-10X 1X **HOLD-OFF** Fully ccw LEVEL For triggered display

The other controls were set as necessary to obtain the desired display.

\*For waveforms 5 and 6, the MODE switch was set to TV.

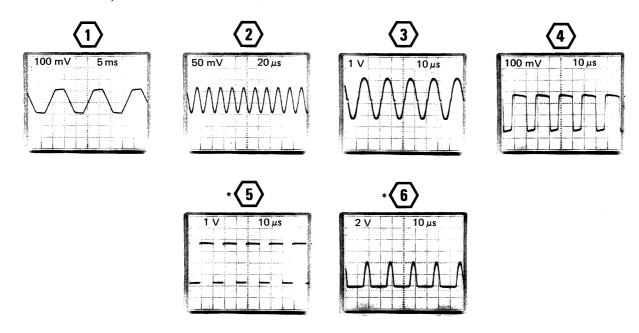

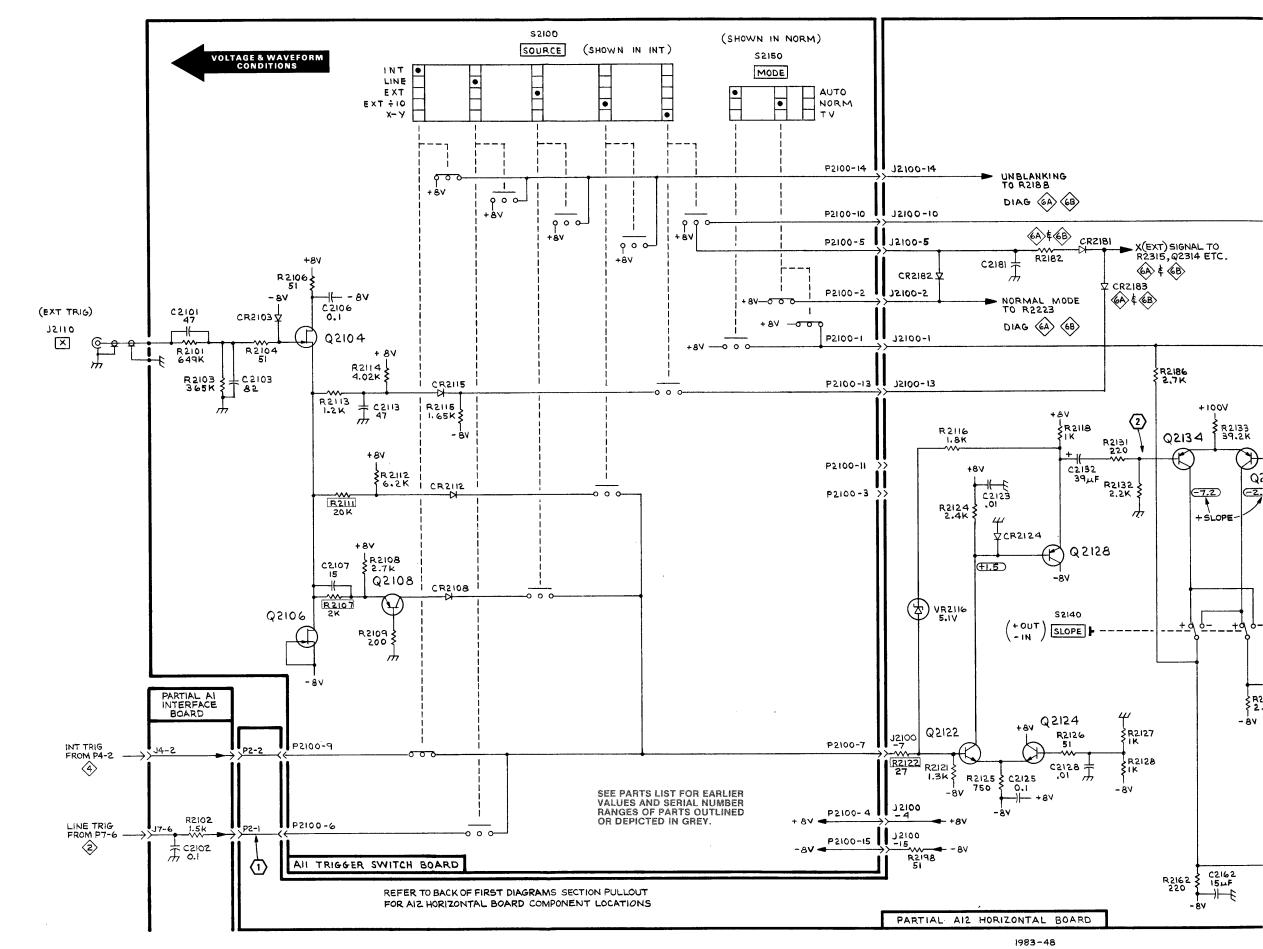

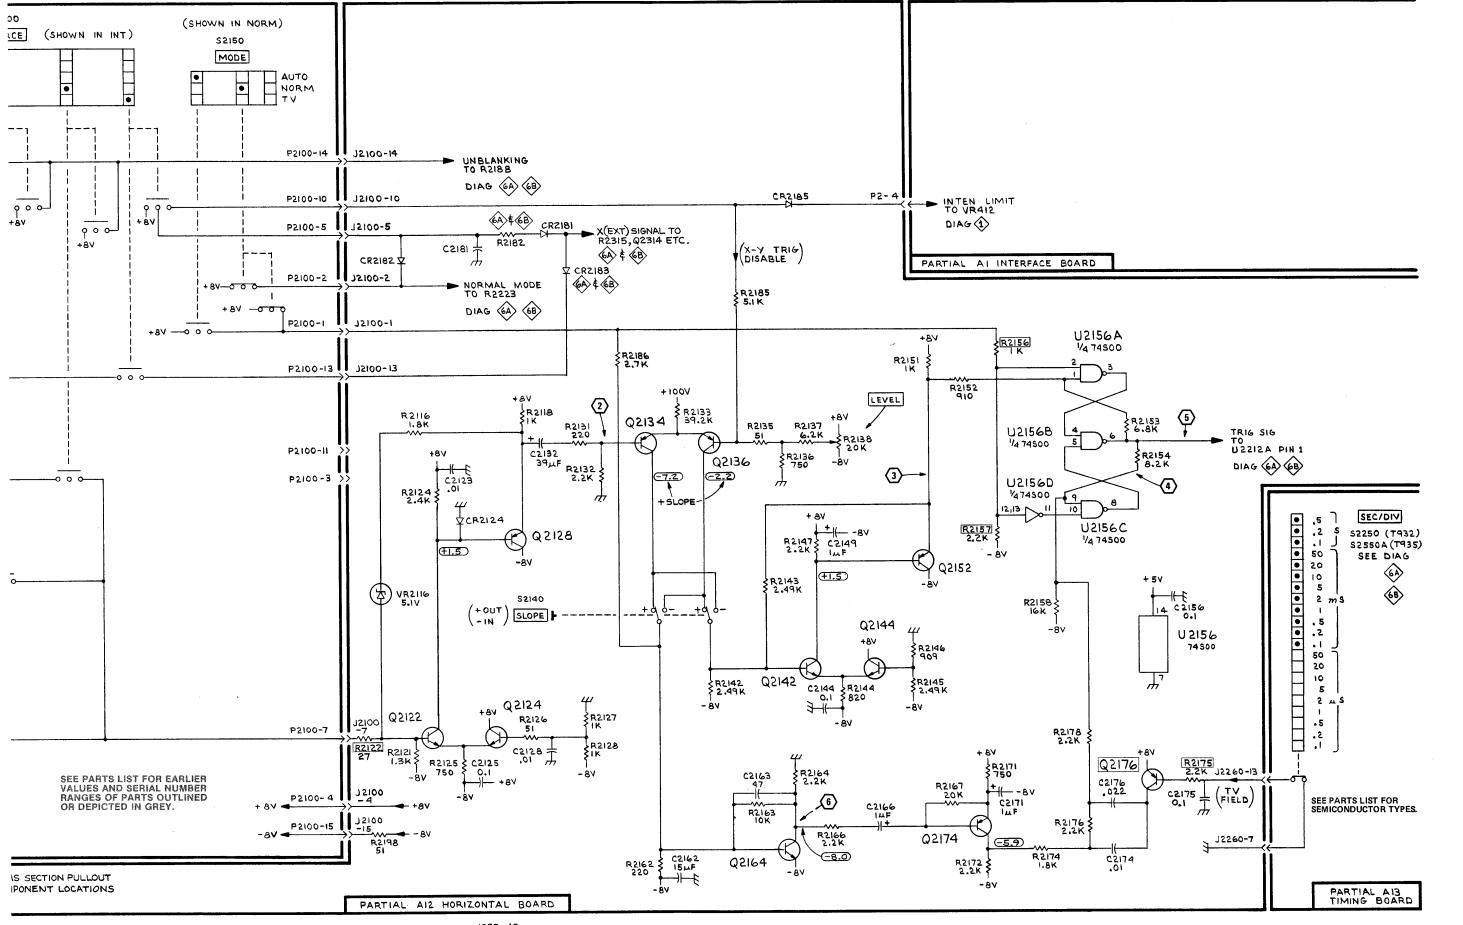

## **T932 SWEEP AND HORIZ AMPL CIRCUIT DESCRIPTION**

Digital logic devices are used to perform some of the functions in this instrument. LO and HI designations are used in this circuit description to indicate the state of the digital circuit. HI indicates the more positive of the two levels. The specific voltages which constitute a LO and HI logic state may vary between individual devices.

### **SWEEP**

The sweep is produced by a Miller Integrator circuit consisting of Q2242, Q2244, and Q2246. A sweep ramp is initiated at the collector of Q2246 when pin 3 of U2234A goes LO, and is terminated when pin 3 goes HI (see Timing diagram, Fig. 7-4).

In the NORM triggering mode, pin 2 of U2212A is HI allowing a positive-going trigger signal at pin 1 of U2212A to cause pin 3 of U2234A to go LO (via U2212D and U2234C). This reverse biases CR2233 and CR2234, and allows the timing capacitor (selected by the SEC/DIV switch, S2250) to charge, producing a sweep ramp at the collector of Q2246. When the sweep ramp reaches about 12 volts, Q2274 turns on. This causes pin 7 of U2224A to go LO, pin 8 of U2234C to go LO, and pin 3 of U2234A to go HI. When pin 3 of U2234A goes HI, CR2233 and CR2234 are forward biased, terminating the sweep. Pin 7 of U2224A remains LO for a length of time (hold-off time) determined by C2275, C2274, R2271, R2274, and the HOLD-OFF control, R2272. Three hold-off times are selected by the SEC/DIV switch S2250 and varied by R2272. After the selected hold-off time, U2224A pin 7 goes HI. This allows the next trigger signal to switch pin 3 of U2234A LO and again start the sweep.

In the AUTO triggering mode, when no trigger signal occurs at pin 11 of U2224B for about 50 ms, pin 10 of U2224B goes LO, causing the sweep to start after the hold-off time ends. This allows the sweep to free run and provide a reference display. When a trigger signal is present, pin 11 of U2224B goes HI, then LO (when trigger signal ends), and the time constant of C2226 and R2226 prevents pin 10 from going LO as long as the repetition rate of the trigger signal is higher than about 20 Hz.

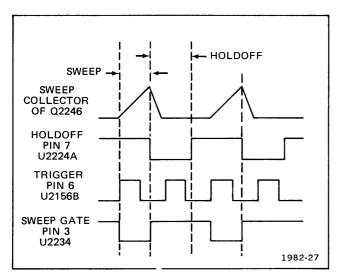


Fig. 7-4. Timing Diagram: sweep generator and sweep gate.

When pin 3 of U2234A goes HI, the current set by R2236, R2235, and R2237 is sent to the Z Axis Amplifier Q416 (see diagram 1) to blank the crt during hold-off.

### HORIZONTAL AMPLIFIER

The horizontal amplifier converts the single-ended signal to a push-pull signal, which drives the crt horizontal deflection plates. The input of the horizontal amplifier comes from either the sweep generator or the X (external trigger) input connector. In the X-Y mode, the trace is shifted to the center of the screen by the current through R2182. In the AUTO and NORM modes, the input to the horizontal amplifier is a linear ramp from the sweep generator.

Transistors, Q2314, Q2326, and associated circuitry, form an operational amplifier with a variable gain range of over 10 to 1. The gain is set by feedback elements R2312, R2323, and X1-X10 control, R2322. The horizontal POSITION control, R2316, positions the crt display horizontally by varying the current into the base of Q2314. The cascode configuration of Q2314 and Q2326 improves the high frequency response.

When the BEAM FINDER switch, section S100B, is pressed, the dynamic range of Q2326 is decreased. This limits the horizontal deflection to the crt screen area. The BEAM FINDER switch (section S100A) also limits the vertical deflection to the crt screen area.

Transistors Q2332, Q2334. Q2344, and associated circuitry form a paraphase amplifier. Transistor Q2332 is a low-impedance input for Q2334. Horiz Cal adjustment R2332, sets the gain of the paraphase amplifier. When the current through the collector of Q2334 increases, the current through the collector of Q2344 decreases and is 180° out of phase with the current at the collector of Q2334. The resulting signal to the crt deflection plates is a push-pull signal. Diode CR2334 prevents Q2334 from saturating when R2322 is in the X10 position.

Since Q2334 is a shunt feedback amplifier and Q2344 is a common base amplifier, any noise in the 100 V power supply will appear as a part of the output. To prevent the noise from appearing on the crt screen, an operational amplifier, consisting of Q2354 and associated circuitry, supplies an inverted sample of the power supply noise to the output. Now, any noise in the 100 volt power supply appears common mode to the horizontal deflection plates, preventing horizontal deflection of the noise signal. Resistor R2354 provides feedback for the operational amplifier.

### VII.2

## **VOLTAGE AND WAVEFORM CONDITIONS**

### **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T932 or T935 control settings.

### **WAVEFORM CONDITIONS**


Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe. The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .


A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.


The T932 controls were set as follows:


SOURCE	INT
MODE	AUTO
Vertical Mode	CH 1
CH 1 VOLTS/DIV	50 mV
CH 2 VOLTS/DIV	1 V
VAR (both)	Detent
AC-GND-DC (both)	DC
SEC/DIV	10 <i>μ</i> s
1X-10X	1X
HOLD-OFF	Fully ccw
LEVEL	For triggered display


The other controls were set as necessary to obtain the desired display.

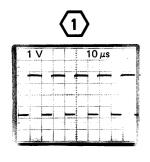


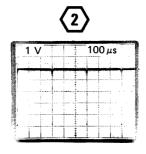


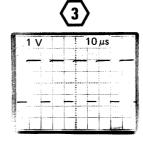


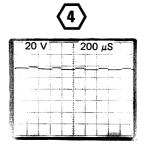

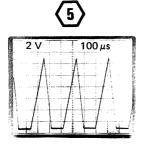

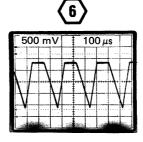

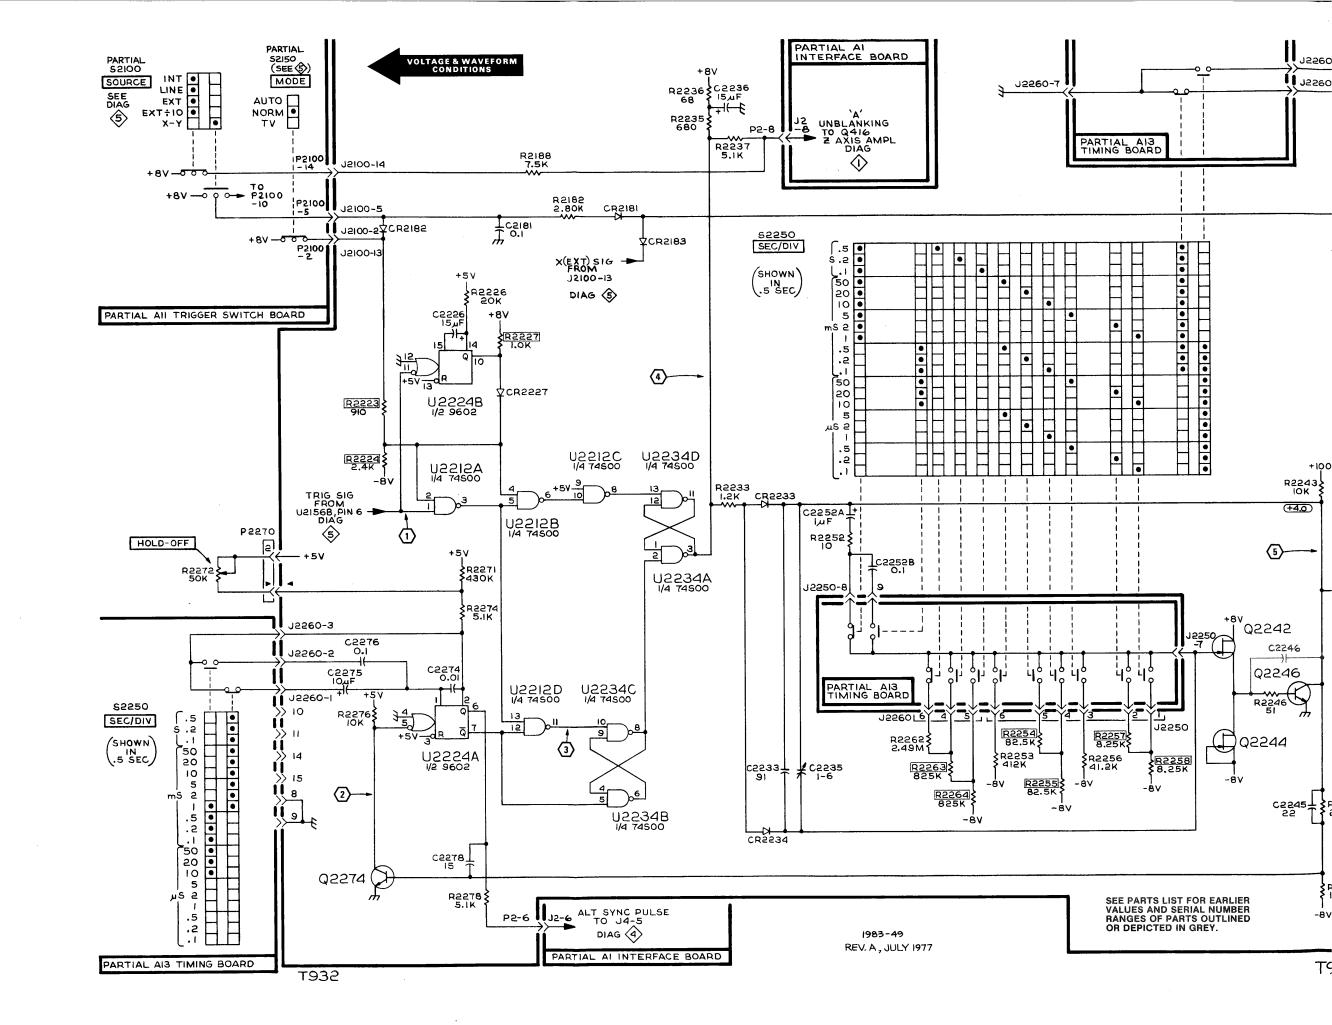

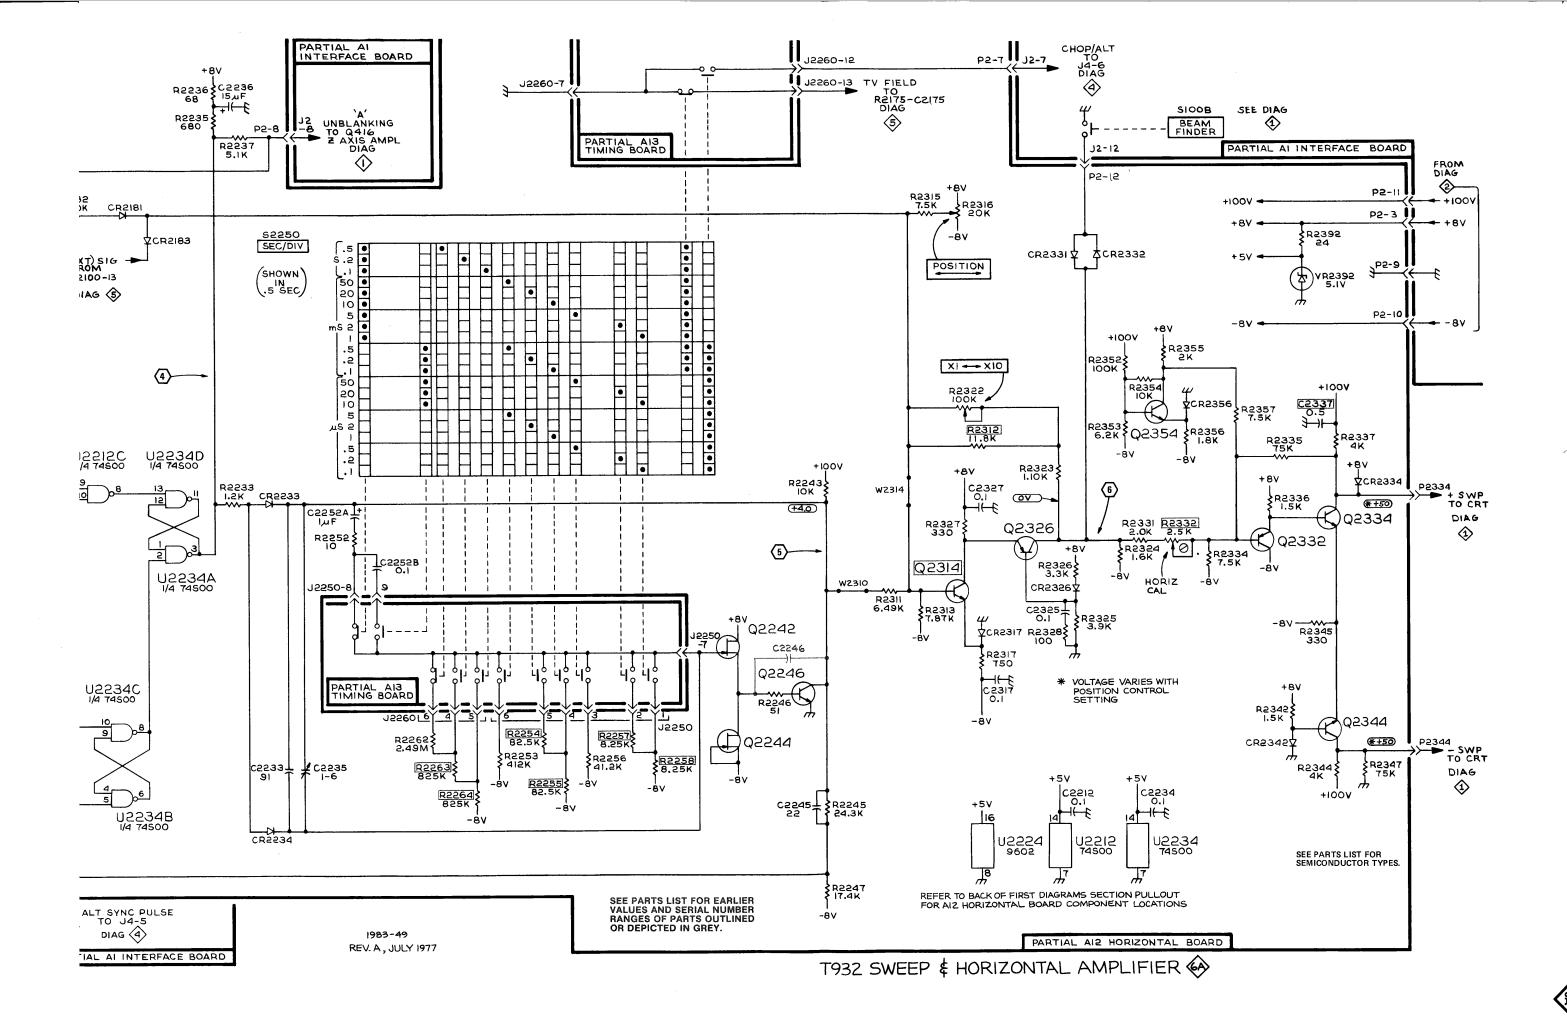

## T935 A SWEEP AND HORIZ AMPL CIRCUIT DESCRIPTION

### A SWEEP GENERATOR

Digital logic devices are used to perform some of the functions in this instrument. LO and HI designations are used in this circuit description to indicate the state of the digital circuit. HI indicates the more positive of the two levels. The specific voltages which constitute a LO and HI logic state may vary between individual devices.

The A sweep is produced by a Miller Integrator circuit consisting of Q2242, Q2244, and Q2246. A sweep ramp is initiated at the collector of Q2246 when pin 3 of U2234A goes LO, and is terminated when pin 3 goes HI (see Timing diagram, Fig. 7-5).

In the NORM triggering mode, pin 2 of U2212A is HI allowing a positive-going trigger signal at pin 1 of U2212A to cause pin 3 of U2234A to go LO (via U2212D and U2234C). This reverse biases CR2233 and CR2234, and allows the timing capacitor (selected by the A SEC/DIV switch, S2250A) to charge, producing a sweep ramp at the collector of Q2246. When the sweep ramp reaches about 12 volts, Q2274 turns on. This causes pin 7 of U2224A to go LO, pin 8 of U2234C to go LO, and pin 3 of U2234A to go HI. When pin 3 of U2234A goes HI, CR2233 and CR2234 are forward biased, terminating the sweep. Pin 7 of U2224A remains LO for a length of time (hold-off time) determined by C2275, C2274, R2271, R2274, and the HOLD-OFF control, R2272. Three hold-off times are selected by the SEC/DIV switch S2250A and varied by R2272. After the selected hold-off time, U2224A pin 7 goes HI. This allows the next trigger signal to switch pin 3 of U2234A LO and again start the sweep.

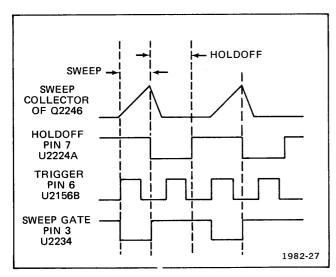


Fig. 7-5. Timing Diagram: sweep generator and sweep gate.

In the AUTO triggering mode, when no trigger signal occurs at pin 11 of U2224B for about 50 ms, pin 10 of U2224B goes LO, causing the sweep to start after the hold-off time ends. This allows the sweep to free run and provide a reference display. When a trigger signal is present, pin 11 of U2224B goes HI, then LO (when trigger signal ends), and the time constant of C2226 and R2226 prevents pin 10 from going LO as long as the repetition rate of the trigger signal is higher than about 20 Hz.

When the DISPLAY MODE switch S2510 (see diagram 7) is in the A or B modes, a signal is applied to Q416 in the Z Axis amplifier (see diagram 1) to blank the crt during hold-off time and unblank the crt during sweep time. In the A mode, when pin 3 of U2234A goes HI, R2236, R2235, and R2237 convert the voltage to a current for blanking and unblanking. Refer to T935 B Sweep circuit description for blanking and unblanking operation when S2510 is in B or A INTEN BY B modes.

### HORIZONTAL AMPLIFIER

The horizontal amplifier converts the single-ended signal to a push-pull signal, which drives the crt horizontal deflection plates. The input of the horizontal amplifier comes from either the sweep generator or the X (external trigger) input connector. In the X-Y mode, the trace is shifted to the center of the screen by the current through R2182. In the AUTO and NORM modes, the input to the horizontal amplifier is a linear ramp from the sweep generator.

Transistors, Q2314, Q2326, and associated circuitry, form an operational amplifier with a variable gain range of over 10 to 1. The gain is set by feedback elements R2312, R2323, and X1-X10 control, R2322. The horizontal POSITION control, R2316, positions the crt display horizontally by varying the current into the base of Q2314. The cascode configuration of Q2314 and Q2326 improves the high frequency response.

When the BEAM FINDER switch, section S100B, is pressed, the dynamic range of Q2326 is decreased. This limits the horizontal deflection to the crt screen area. The BEAM FINDER switch (section S100A) also limits the vertical deflection to the crt screen area.

Transistors Q2332, Q2334. Q2344, and associated circuitry form a paraphase amplifier. Transistor Q2332 is a low-impedance input for Q2334. Horiz Cal adjustment R2332, sets the gain of the paraphase amplifier. When the current through the collector of Q2334 increases, the current through the collector of Q2344 decreases and is

); )!

2

H

## VIII.2

180° out of phase with the current at the collector of Q2334. The resulting signal to the crt deflection plates is a push-pull signal. Diode CR2334 prevents Q2334 from saturating when R2322 is in the X10 position.

Since Q2334 is a shunt feedback amplifier and Q2344 is a common base amplifier, any noise in the 100 V power supply will appear as a part of the output. To prevent the noise from appearing on the crt screen, an operational amplifier, consisting of Q2354 and associated circuitry, supplies an inverted sample of the power supply noise to the output. Now, any noise in the 100 volt power supply appears common mode to the horizontal deflection plates, preventing horizontal deflection of the noise signal. Resistor R2354 provides feedback for the operational amplifier.

## VIII.3

## **VOLTAGE AND WAVEFORM CONDITIONS**

### **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T935 control settings.

### **WAVEFORM CONDITIONS**


Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe. The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .


A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.


The T935 controls were set as follows:

SOURCE	INT
MODE	AUTO
Vertical Mode	CH 1
CH 1 VOLTS/DIV	50 mV
CH 2 VOLTS/DIV	1 V
VAR (both)	Detent
AC-GND-DC (both)	DC
DISPLAY MODE	Α
A & B SEC/DIV	10 <i>μ</i> s
1X-10X	1X
HOLD-OFF	Fully ccw
LEVEL	For triggered display

The other controls were set as necessary to obtain the desired display.

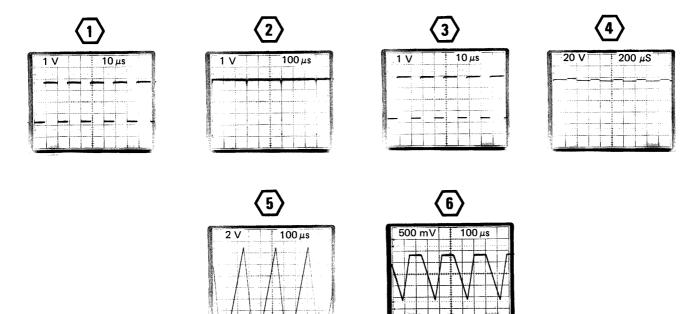

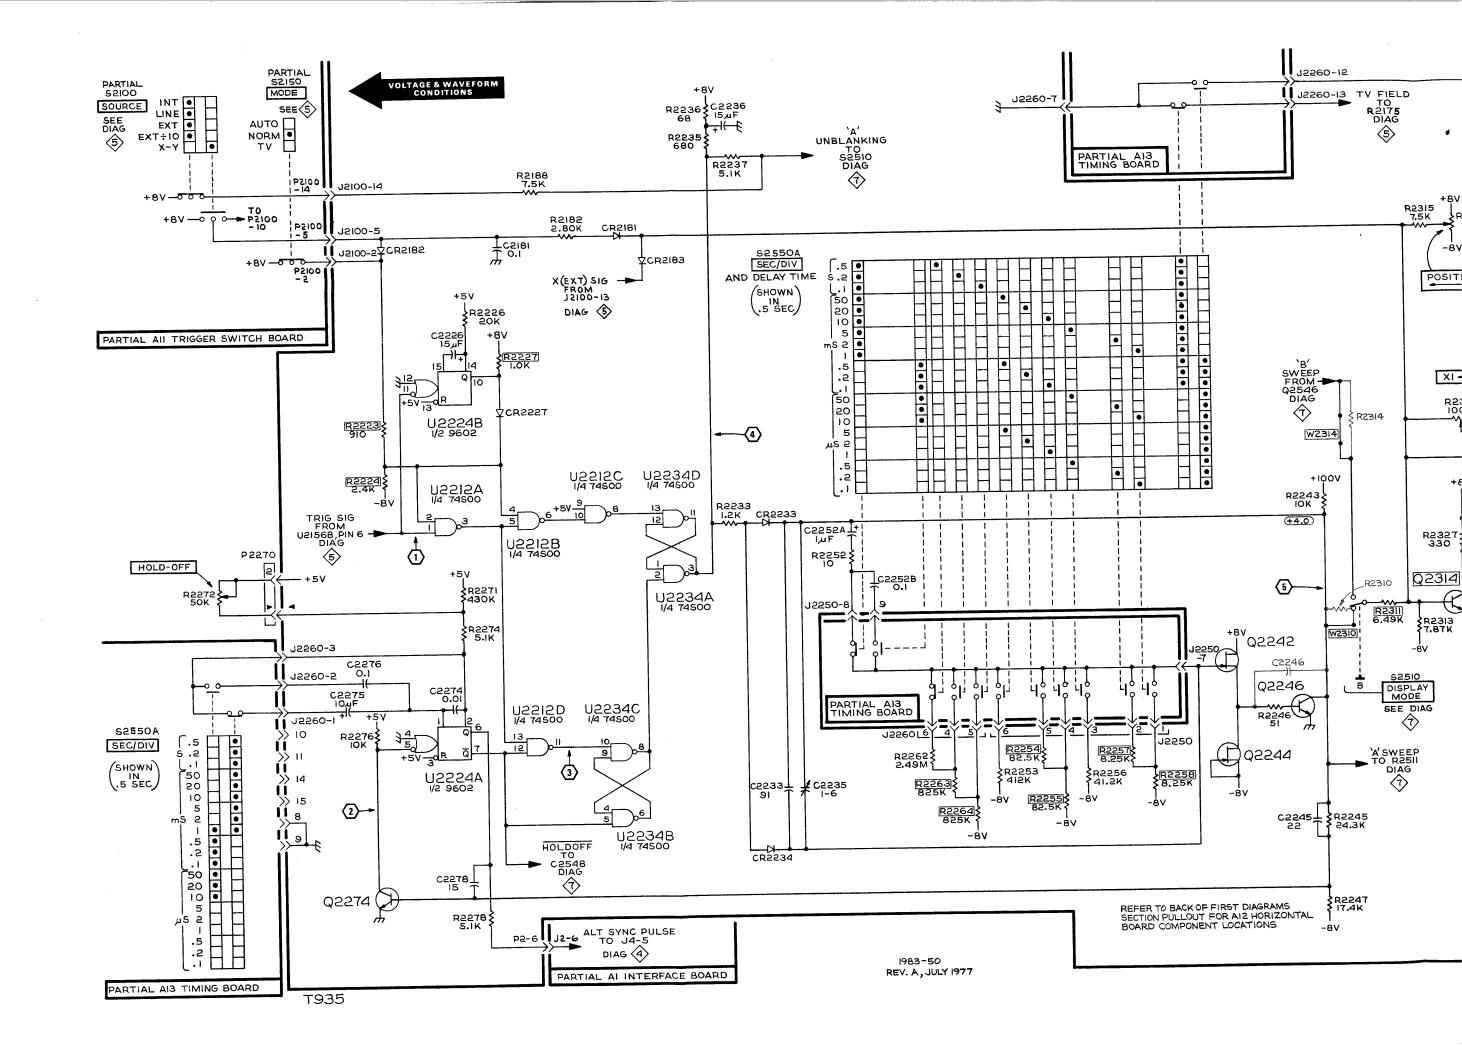

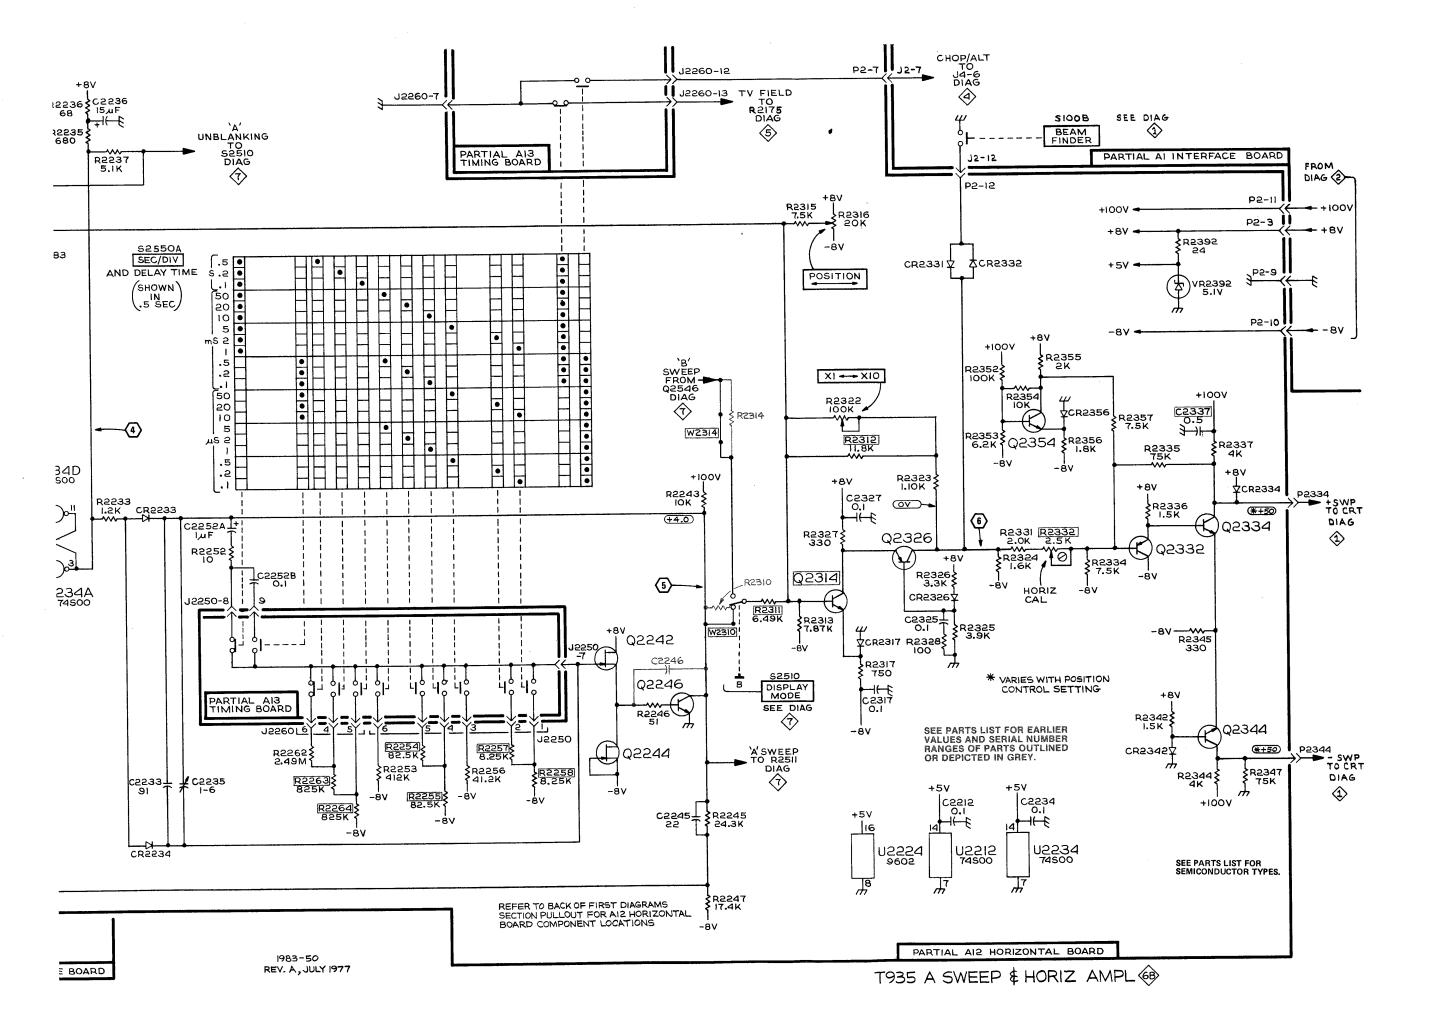

## **T935 B SWEEP CIRCUIT DESCRIPTION**

Digital logic devices are used to perform some of the functions in this instrument. LO and HI designations are used in this circuit description to indicate the state of the digital circuit. HI indicates the more positive of the two levels. The specific voltages which constitute a LO and HI logic state may vary between individual devices.

The DISPLAY MODE switch S2510 selects A, B, or A INTEN BY B. In the A position, the B sweep is disconnected from the Horizontal Output Amplifier. In the B position, the A sweep is disconnected from the Horizontal Output Amplifier and the B sweep starts after the delay. In the A INTEN BY B position, the A sweep is connected to the Horizontal Output Amplifier. In this mode, the A sweep starts and then after the delay, the B sweep runs and intensifies a portion of the A sweep.

With the B mode selected, when pin 3 of U2524B goes HI, R2539, R2537, and R2532 convert the voltage at pin 3 to a current signal. This signal is applied to Q416 in the Z-Axis amplifier (see diagram 1) to blank the crt during hold-off and unblank the crt during B sweep time. With S2510 in the A INTEN BY B mode, R2539, R2537, R2533 and R2531 provide the B sweep current source for Q416. This current signal is combined with the A sweep blanking and unblanking current signal from R2237 (see diagram 6B), allowing the A sweep to be intensified by the B sweep.

A Miller Integrator circuit consisting of Q2542, Q2544, Q2546, and associated circuitry, produces B sweep. The sweep ramp is initiated at the collector of Q2546 when pin 3 of U2524B goes LO, and is terminated when pin 3 of U2524B goes HI.

When pin 3 of U2524B goes LO, CR2535 and CR2536 are reverse biased. This allows the timing capacitor (selected by the B SEC/DIV switch S2550B) to charge, producing a sweep ramp at the collector of Q2546. When the sweep ramp reaches about 12 V, Q2548 turns on, causing pin 3 of U2524B to go HI. The HI at pin 3 of U2524B forward biases CR2535 and CR2536, ending the B sweep. If the A sweep ends before Q2548 turns on (before the B sweep ends), the Hold-off signal from pin 7 of U2224A causes pin 1 of U2524B to go LO. This in turn, causes pin 3 of U2524B to go HI, ending the B sweep. Pin 3 of U2524B will remain HI until pin 5 of U2524A goes LO again.

Transistors Q2514 and Q2516 make up a voltage comparator. The DELAY TIME POSITION control, R2516, sets the voltage at the base of Q2516. Initially, Q2514 is turned on, and Q2516 and Q2522 are turned off. The A sweep ramp from the collector of Q2246 increases the

voltage at the base of Q2514. When the base of Q2514 is at the same voltage as the base of Q2516, Q2514 turns off, and Q2516 and Q2522 turn on. Components C2521 and R2521 provide feedback for a fast switch of Q2522, causing a sharp negative pulse through C2525. This pulse produces a LO at pin 5 of U2524A. The LO at pin 5 of U2524A produces a LO at pin 3 of U2524B which starts the B sweep. CR2514 and CR2516 are protection diodes. When S2510 is in the A position, the base of Q2522 is grounded, preventing the B sweep from starting.

## **VOLTAGE AND WAVEFORM CONDITIONS**

## **VOLTAGE CONDITIONS**

Voltages shown on this diagram were measured with a Tektronix DM 501 Digital Multimeter. Voltage measurements can vary as much as  $\pm 20\%$ . No signals were applied to the vertical inputs or to the X (external trigger) input. Refer to Waveform Conditions for T935 control settings.

### **WAVEFORM CONDITIONS**


Waveforms below were monitored with a Tektronix 7704A Oscilloscope, 7B71 Time Base, 7A15A Amplifier, and 10X probe. The oscilloscope input coupling was set to ac. Waveforms vary as much as  $\pm 20\%$ .


A 50 kHz, 100 mV sine wave was applied to the CH 1 input and a 50 kHz, 2 V square wave was applied to the CH 2 input. A Tektronix FG 501 Function Generator provides either of the input waveforms.


The T932 or T935 controls were set as follows:


SOURCE	INT
MODE	AUTO
Vertical Mode	CH 1
CH 1 VOLTS/DIV	50 mV
CH 2 VOLTS/DIV	1 V
VAR (both)	Detent
AC-GND-DC (both)	DC
DISPLAY MODE	В
A & B SEC/DIV	10 <i>μ</i> s
1X-10X	1X
HOLD-OFF	Fully ccw
DELAY TIME POSITION	Midrange
LEVEL	For triggered display

The other controls were set as necessary to obtain the desired display.

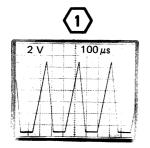


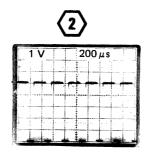


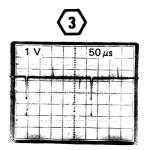

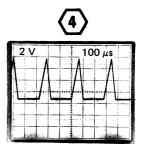

 $\Diamond$ 

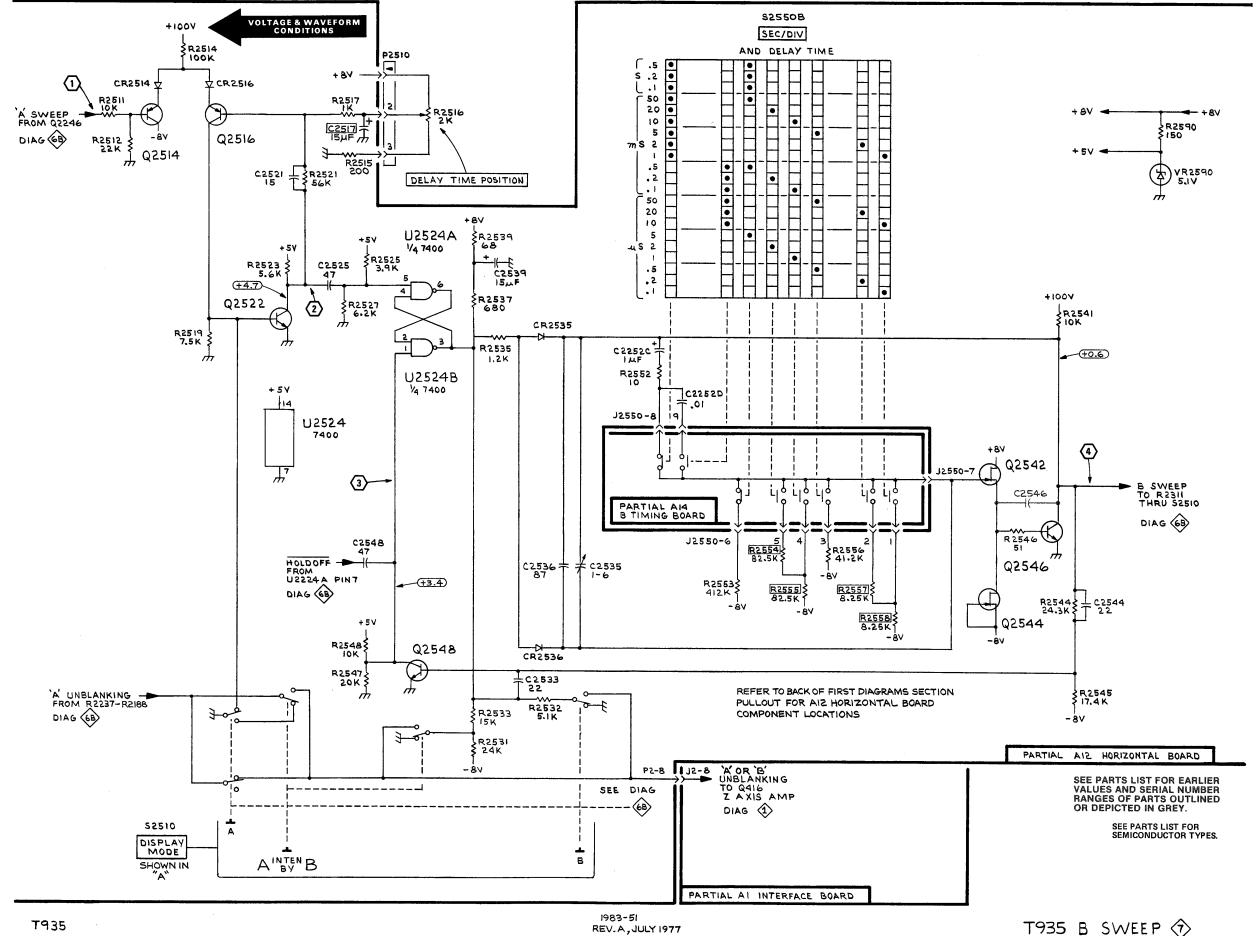

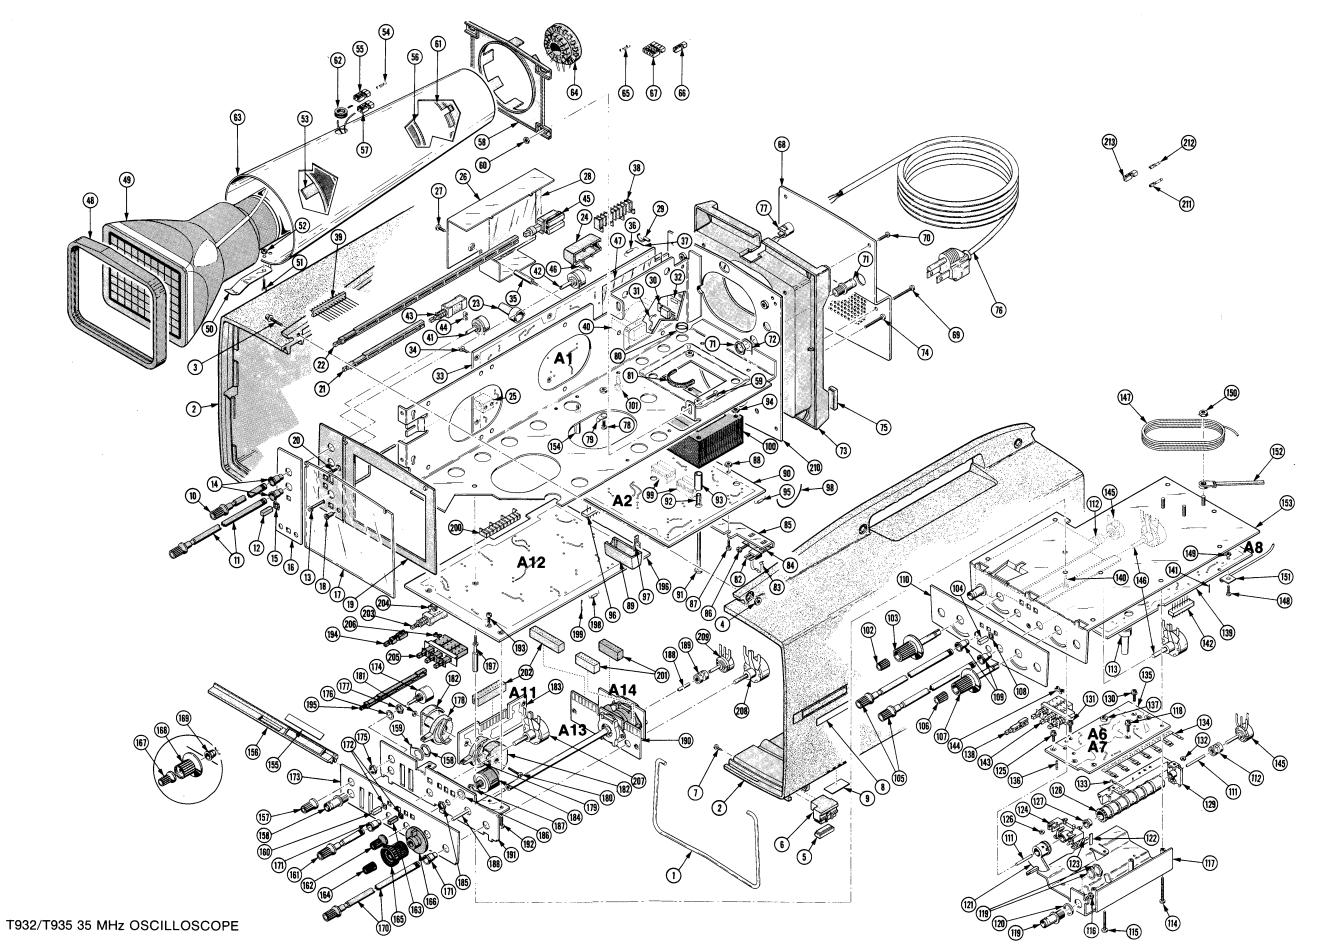

## REPLACEABLE MECHANICAL PARTS

#### PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

### SPECIAL NOTES AND SYMBOLS

X000 Part first added at this serial number
00X Part removed after this serial number

### FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

INICIA

#### INDENTATION SYSTEM

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

1 2 3 4 5

Name & Description

Assembly and/or Component
Attaching parts for Assembly and/or Component

Detail Part of Assembly and/or Component Attaching parts for Detail Part

Parts of Detail Part

Attaching parts for Parts of Detail Part

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation. The separation symbol - - - \* - - - indicates the end of attaching parts.

Attaching parts must be purchased separately, unless otherwise specified.

#### **ITEM NAME**

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

### **ABBREVIATIONS**

	INCH	ELCTRN	ELECTRON	1N	INCH	SE	SINGLE END
#	NUMBER SIZE	ELEC	ELECTRICAL	INCAND	INCANDESCENT	SECT	SECTION
ACTR	ACTUATOR	ELCTLT	ELECTROLYTIC	INSUL	INSULATOR	SEMICOND	SEMICONDUCTOR
ADPTR	ADAPTER	ELEM	ELEMENT	INTL	INTERNAL	SHLD	SHIELD
ALIGN	ALIGNMENT	EPL	ELECTRICAL PARTS LIST	LPHLDR	LAMPHOLDER	SHLDR	SHOULDERED
AL	ALUMINUM	EQPT	EQUIPMENT	MACH	MACHINE	SKT	SOCKET
ASSEM	ASSEMBLED	EXT	EXTERNAL	MECH	MECHANICAL	SL	SLIDE
ASSY	ASSEMBLY	FIL	FILLISTER HEAD	MTG	MOUNTING	SLFLKG	SELF-LOCKING
ATTEN	ATTENUATOR	FLEX	FLEXIBLE	NIP	NIPPLE	SLVG	SLEEVING
AWG	AMERICAN WIRE GAGE	FLH	FLAT HEAD	NON WIRE	NOT WIRE WOUND	SPR	SPRING
BD	BOARD	FLTR	FILTER	OBD	ORDER BY DESCRIPTION	SQ	SQUARE
BRKT	BRACKET	FR	FRAME or FRONT	OD	OUTSIDE DIAMETER	SST	STAINLESS STEEL
BRS	BRASS	FSTNR	FASTENER	OVH	OVAL HEAD	STL	STEEL
BRZ	BRONZE	FT	FOOT	PH BRZ	PHOSPHOR BRONZE	SW	SWITCH
BSHG	BUSHING	FXD	FIXED	PL	PLAIN or PLATE	T	TUBE
CAB	CABINET	GSKT	GASKET	PLSTC	PLASTIC	TERM	TERMINAL
CAP	CAPACITOR	HDL	HANDLE	PN	PART NUMBER	THD	THREAD
CER	CERAMIC	HEX	HEXAGON	PNH	PAN HEAD	THK	THICK
CHAS	CHASSIS	HEX HD	HEXAGONAL HEAD	PWR	POWER	TNSN	TENSION
CKT	CIRCUIT	HEX SOC	HEXAGONAL SOCKET	RCPT	RECEPTACLE	TPG	TAPPING
COMP	COMPOSITION	HLCPS	HELICAL COMPRESSION	RES	RESISTOR	TRH	TRUSS HEAD
CONN	CONNECTOR	HLEXT	HELICAL EXTENSION	RGD	RIGID	<b>V</b> .	VOLTAGE
cov	COVER	HV	HIGH VOLTAGE	RLF	RELIEF	VAR	VARIABLE
CPLG	COUPLING	1C	INTEGRATED CIRCUIT	RTNR	RETAINER	W/	WITH
CRT	CATHODE RAY TUBE	ID	INSIDE DIAMETER	SCH	SOCKET HEAD	WSHR	WASHER
DEG	DEGREE	IDENT	IDENTIFICATION	SCOPE	OSCILLOSCOPE	XFMR	TRANSFORMER
DWR	DRAWER	IMPLR	IMPELLER	SCR	SCREW	XSTR	TRANSISTOR

### Replaceable Mechanical Parts—T932/T935

## CROSS INDEX—MFR. CODE NUMBER TO MANUFACTURER

Mfr. Code	Manufacturer	Address	City, State, Zip
00779	AMP, INC.	P O BOX 3608	HARRISBURG, PA 17105
01295	TEXAS INSTRUMENTS, INC., SEMICONDUCTOR		•
	GROUP	P O BOX 5012, 13500 N CENTRAL	
	·	EXPRESSWAY	DALLAS, TX 75222
05091	TRI-ORDINATE CORPORATION	343 SNYDER AVENUE	BERKELEY HEIGHTS, NJ 07922
11897	PLASTIGLIDE MFG. CORPORATION	P O BOX 867, 1757 STANFORD ST.	SANTA MONICA, CA 90406
12697	CLAROSTAT MFG. CO., INC.	LOWER WASHINGTON STREET	DOVER, NH 03820
22526	BERG ELECTRONICS, INC.	YOUK EXPRESSWAY	NEW CUMBERLAND, PA 17070
27264	MOLEX PRODUCTS CO.	5224 KATRINE AVE.	DOWNERS GROVE, IL 60515
28520	HEYMAN MFG. CO.	147 N. MICHIGAN AVE.	KENILWORTH, NJ 07033
55210	GETTIG ENG. AND MFG. COMPANY	PO BOX 85, OFF ROUTE 45	SPRING MILLS, PA 16875
59730	THOMAS AND BETTS COMPANY	36 BUTLER ST.	ELIZABETH, NJ 07207
70485	ATLANTIC INDIA RUBBER WORKS, INC.	571 W. POLK ST.	CHICAGO, IL 60607
71279	CAMBRIDGE THERMIONIC CORP.	445 CONCORD AVE.	CAMBRIDGE, MA 02138
71590	CENTRALAB ELECTRONICS, DIV. OF		
	GLOBE-UNION, INC.	P O BOX 858	FORT DODGE, IA 50501
72228	CONTINENTAL SCREW CO., DIV. OF		
	AMTEL, INC.	459 MT. PLEASANT	NEW BEDFORD, MA 02742
73743	FISCHER SPECIAL MFG. CO.	446 MORGAN ST.	CINCINNATI, OH 45206
74445	HOLO-KROME CO.	31 BROOK ST. WEST	HARTFORD, CT 06110
77250	PHEOLL MANUFACTURING CO., DIVISION		
	OF ALLIED PRODUCTS CORP.	5700 W. ROOSEVELT RD.	CHICAGO, IL 60650
78189	ILLINOIS TOOL WORKS, INC.		
	SHAKEPROOF DIVISION	ST. CHARLES ROAD	ELGIN, IL 60120
78471	TILLEY MFG. CO.	900 INDUSTRIAL RD.	SAN CARLOS, CA 94070
80009	TEKTRONIX, INC.	P O BOX 500	BEAVERTON, OR 97077
83385	CENTRAL SCREW CO.	2530 CRESCENT DR.	BROADVIEW, IL 60153
98159	RUBBER TECK, INC.	19115 HAMILTON AVE., P O BOX 389	GARDENA, CA 90247
99742	PERMACEL DIV. OF JOHNSON AND JOHNSON	U. S. HIGHWAY 1	NEW BRUNSWICK, NJ 08901

Fig. & Index No.	Tektronix Part No.	Serial/Model No. Eff Dscont	Ωŧν	1 2 3 4 5	Name & Description	Mfr	Marie Doub Niverboy
		LII DSCOIR	uty	12343	Name & Description	Code	Mfr Part Number
1-1	348-0443-00		1	STAND, ELEC EQUI	P:0.156" DIA,SST,PASSIVATE	80009	348-0443-00
<b>-</b> 2	437-0200-00		1	CABINET, SCOPE: A	SSEMBLY	80009	437-0200-00
_					ATTACHING PARTS)		
-3	211-0648-00		6	SCR, ASSEM WSHR:	6-32 X 0.625 INCH,PNH STL	83385	OBD
<b>-</b> 4	210-0408-00		6	NUT, PLAIN, HEX.:	6-32 X 0.312 INCH, BRS	73743	3040-402
					*		
<b>-</b> 5	348-0441-00		_	. CABINET ASSY			
-5 -6	348-0447-01		4		POLYURETHANE, BLACK	80009	
-0	348-0447-01		2		FRONT, BLACK PLASTIC	80009	348-0447-01
	340-0447-00		2		REAR, BLACK PLASTIC	80009	348-0447-00
<b>-</b> 7	213-0731-00		1		ATTACHING PARTS FOR EACH) OR:6-19 X 0.5 INCCH,PNH STL	70000	000
•			_	. SCR, IFG, IND F	*	72228	OBD
-8	334-2682-00		2	. PLATE.IDENT:2	.50" LONGTEKTRONIX	80009	334-2682-00
<b>-</b> 9	334-2624-00		1		ARKEDDC BAL, CH1 AND CH2	80009	334-2624-00
	351-0458-00		1	. GUIDE, LINE AD		80009	351-0458-00
	351-0458-01		1	. GUIDE, LINE AD		80009	351-0458-01
-10	384-1371-01		1		:5.2" LONG W/KNOB	80009	384-1371-01
-11	384-1371-03		1	EXTENSION SHAFT	:10.7" LONG W/KNOB	80009	384-1371-03
-12	366-1559-00		2	PUSH BUTTON: GRA	Y	80009	366-1559-00
-13	214-2309-00		1	CONDUCTOR, LIGHT	:5.265" LONG	80009	214-2309-00
-14	358-0550-00		2		.15 ID X 0.3INCH OD,PLSTC	80009	358-0550-00
-15	426-1072-00			FRAME, PUSH BTN:	PLASTIC	80009	426-1072-00
-16	333-2078-00		1	•		80009	333-2078-00
-17 -18	337-2185-00		1		BLUE	80009	337-2185-00
-18 -19	136-0387-01 386-3287-00		1			71279	450-4352-01-0310
-19	300-3207-00		1			80009	386-3287-00
-20	213-0146-00		1	CCD MDC MUD FOR	ATTACHING PARTS)	02205	000
20	213 0140 00			SCR, IPG, IND FOR	:6-20 X 0.313 INCH,PNH STL	83385	OBD
-21	384-1370-00		1	EXTENSION SHAFT	:4.68" L,MOLDED PLSTC	80009	384-1370-00
-22	384-1364-00				:10.818" L,NYLON,BLK	80009	384-1364-00
-23	351-0456-00			GUIDE, RES ADJ:P		80009	351-0456-00
-24	352-0425-00			FUSEHOLDER: PLAS		80009	352-0425-00
<del>-</del> 25	352-0331-00		1	LAMPHOLDER:		80009	352-0331-00
-26	337-2227-00		1	SHIELD, ELEC: HIGH	H VOLTAGE POWER SUPPLY	80009	337-2227-00
				()	ATTACHING PARTS)		
<del>-</del> 27	211-0007-00		2 .	SCREW, MACHINE: 4	-40 X 0.188 INCH, PNH STL	83385	OBD
20	240 0000 00		_		*		
-28 -29	342-0293-00		1	INSULATOR, SHLD:		80009	
-29 -30	343-0213-00		2	CLAMP, LOOP: PRES	5 MT, PLASTIC	80009	343-0213-00
-30			1		SIS MTG(SEE Q458 EPL)		
-31	344-0236-01		1		ATTACHING PARTS) RANSISTOR MOUNTING, COPPER	80000	344-0236-01
	011 0200 02		-	CDIF DER INSN:1.	*	80009	344-0236-01
	342-0202-00		1	INSULATOR, PLATE		01295	10-21-023-106
-32	253-0202-00		FT		:POLYMIDE, 0.875" W X 1.0"	99742	
-33			1		INTERFACE (SEE Al EPL)	33.12	
					ATTACHING PARTS)		
-34	211-0008-00		- 6	SCREW, MACHINE: 4	-40 X 0.25 INCH, PNH STL	83385	OBD
<b>-</b> 35	361-0750-00		2	SPACER, POST: 0.1	38 HEX X 0.970"L,STL,W/STUD	80009	361-0750-00
					*		
			-	. CKT BOARD ASS			
	131-0566-00				NE:0.086 DIA X 2.375 INCH L	55210	
-36	131-0566-00		1		NE:0.086 DIA X 2.375 INCH L	55210	ERD-18T0
-36		B010100 B011081	34		NE:22 AWG,2.25" LONG	80009	131-1817-00
	131-1817-00	B010100 B011303 B011082	34 35		NE:22 AWG,2.25" LONG	80009	131-1817-00
	131-1817-00	B011082 B011304	35		NE:22 AWG,2.25" LONG NE:22 AWG,2.25" LONG	80009	131-1817-00
-37	131-0608-00	2011304	17	. CONTACT, ELEC:		80009 22526	131-1817-00 47357
-38	131-1749-00		1		F,:10 FEMALE CONTACT	27264	09-52-3101
	131-1795-00		ī		F,:12 FEMALE CONTACT, RT-ANGLE	27264	09-62-3121
<b>-</b> 39	131-1792-00		ī		EL:12 MALE CONTACT, FLAT WAFER	27264	09-70-2121
				·	•	_	

Fig. & Index No.	Tektronix Part No.	Serial/Model N Eff Dsco		У	1 2 3 4 5	Name & Description	Mfr Code	Mfr Part Number
1-40			1	-		.V. (SEE T460 EPL)		
1-40	361-0007-00		3			:0.250 INCH DIA,PLASTIC	80009	361-0007-00
-41			1			NSITY(SEE R412 EPL)	00003	301 0007 00
-42			ī		. RES., VAR: FOCUS			
-43			1			EAMFINDER(SEE S410 EPL)		
-44	361-0608-00		2		. SPACER, PUSH ST		80009	361-0608-00
-45			1		•	OWER ON(SEE S700 EPL)		
-46	344-0154-00		2		•	AL:FOR 0.25 INCH DIA FUSE	80009	344-0154-00
-47	342-0294-00		1		INSULATOR, FILM:		80009	342-0294-00
-48	386-3291-00		1		SUPPORT, CRT: FRO	NT	80009	386-3291-00
<b>-4</b> 9			1		ELECTRON TUBE: C	RT,W/ANODE(SEE V470 EPL)		
	334-1379 <b>-</b> 00	1	1		LABEL: CRT, ADHES	IVE BACK	80009	334-1379 <b>-</b> 00
	334-1951-00	1	1		MARKER, IDENT: CR	T WARNING	80009	334-1951-00
<del>-</del> 50	214-2300-00	•	1		CLIP, GROUNDING:	0.3 W X 2.0" LONG, BRS	80009	214-2300-00
					(:	ATTACHING PARTS)		
<b>-</b> 51	211-0008-00		1			-40 x 0.25 INCH, PNH STL	83385	
<b>-</b> 52	210-0586-00	)	1		NUT, PLAIN, EXT W	:4-40 X 0.25 INCH,STL	78189	OBD
						*		
-53			1		•	TRACE ROTATION (SEE L472 EPL)		
<b>-</b> 54	131-0707-00		2			0.48"L,22-26 AWG WIRE	22526	75691-005
<b>-</b> 55	352-0169-01		1		. CONN BODY, PL,		80009	352-0169-01
<b>-</b> 56			1		·	X-Y ALIGNMENT (SEE L470 EPL)		
	131-0707-00		2			0.48"L,22-26 AWG WIRE	22526	75691-005
<b>-</b> 57	352-0169-00		]		. CONN BODY, PL,		80009	352-0169-00
<b>-</b> 58	386-3288-00	)	נ	•	SPRT, CRT SHIELD		80009	386-3288-00
F0	211 0507 00		_			ATTACHING PARTS)	02205	ODD
-59 -60	211-0507-00		2			-32 X 0.312 INCH, PNH STL	83385 83385	OBD
-60	220-0419-00	,	4	2	NUT, PLAIN, SQ:6-	32 X 0.312 INCH,STL	63363	OBD
-61	386-3305-00	1	]		SUPPORT, CRT: REA		80009	386-3305-00
<del>-</del> 62	348-0004-00		j			0.281 ID X 0.563 INCH OD	70485	763
-63	337-2223-00				SHIELD, ELEC: CRT		80009	337-2223-00
•	136-0645-00		]		SOCKET, CRT: ASSE		80009	136-0645-00
-64	136-0202-01			_	. SOCKET, PLUG-I		80009	136-0202-01
<del>-</del> 65	131-0707-00		9			0.48"L,22-26 AWG WIRE	22526	75691-005
-66	352-0171-00			Ĺ		EL:1 WIRE BLACK	80009	352-0171-00
<b>-</b> 67	352-0162-00			2		EL:4 WIRE BLACK	80009	352-0162-00
-68	386-3289-00	)	1	L	PANEL, REAR:		80009	386-3289-00
					(	ATTACHING PARTS)		
<del>-</del> 69	211-0529-00	כ		2	SCREW, MACHINE: 6	-32 X 1.25 INCHES, PNH STL	83385	OBD
<del>-</del> 70	211-0578-00	)	:	2	SCREW, MACHINE: 6	-32 X 0.438 1NCH,PNH STL	83385	OBD
						*		
<del>-</del> 71	131-0955-00	)	:	L	· · · · · · · · · · · · · · · · · · ·	:BNC,FEMALE,W/HARDWARE ATTACHING PARTS)	05091	31-279
<del>-</del> 72	210-0255-00	0	;	1	TERMINAL, LUG:0.	391" ID INT TOOTH	80009	210-0255-00
<b>-</b> 73	200-1811-0	0	:	1	COVER, REAR: ASSE	MBLY ATTACHING PARTS)	80009	200-1811-00
-74	211-0517-0	0	:	2		6-32 X 1 INCH, PNH, STL	83385	OBD
		_	,	_	. REAR COVER AS			
<del>-</del> 75	348-0441-0	0		4		POLYURETHANE, BLACK	80009	348-0441-00
<del>-</del> 76	161-0107-0	1		1		3,18 AWG,115V,7.5' LONG,W/LUATTACHING PARTS)	JG 80009	161-0107-01
<del>-</del> 77	358-0323-0	0		1		:90 DEG,0.515 DIA HOLE	28520	SR15-1
<b>-</b> 78	211-0504-0				•	5-32 X 0.25 INCH,PNH STL	83385	
						*		
		-		-	. POWER CORD IN	CLUDES:		
<b>-</b> 79	210-0287-0	0		1	. TERMINAL, LUG:	•		34142
-80	348-0063-0	0		1	GROMMET, PLASTIC	C:0.50 INCH DIA		348-0063-00
-81	255-0334-0	0	F	Т	PLASTIC CHANNEI	L:12.75 INCHES LONG	11897	122-37-2500

Fig. &	<b>.</b>						
Index	Tektronix			04	40045	Mfr	147 B . 1
No.	Part No.	Eff	Dscont	uty	1 2 3 4 5 Name & Description	Code	Mfr Part Number
1-82				3	TRANSISTOR: CHAS MTG(SEE Q736,Q756,Q776 EPL)		
<del>-</del> 83	344-0236-01			1	(ATTACHING PARTS FOR EACH) CLIP,SPR TNSN:TRANSISTOR MOUNTING,COPPER	80009	344-0236-01
	342-0202-00			3	INSULATOR, PLATE: TRANSISTOR	01295	10-21-023-106
<del>-</del> 84	253-0202-00			FT	INSUL TAPE, ELEC: POLYMIDE, 0.875, ID X 3.5" LONG	99742	221
<del>-</del> 85	214-2265-00			1	HEAT SINK, XSTR:6.0" L X 0.72" H,AL (ATTACHING PARTS)	80009	214-2265-00
-86	211-0507-00			2	SCREW, MACHINE: 6-32 X 0.312 INCH, PNH STL	83385	OBD
-87	211-0008-00			2	SCREW, MACHINE: 4-40 X 0.25 INCH, PNH STL	83385	OBD
<del>-</del> 88	210-0586-00			2	NUT, PLAIN, EXT W: 4-40 X 0.25 INCH, STL	78189	OBD
<b>-</b> 89	352-0425-00			1	FUSEHOLDER: PLASTIC	80009	352-0425-00
	337-2302-00	XB010135		1	SHIELD, ELEC: LV POWER CARD	80009	337-2302-00
	337-2302-00	XB010155		1	SHIELD, ELEC: LV POWER CARD	80009	337-2302-00
<del>-</del> 90				1	CKT BOARD ASSY:L.V. POWER SUPPLY(SEE A2 EPL) (ATTACHING PARTS)		
-91	212-0516-00			4	SCREW, MACHINE: 10-32 X 2 INCH, HEX HD STL	77250	OBD
<del>-</del> 92	166-0432-00			4		80009	166-0432-00
<b>-</b> 93	361-0741-00			4	SPACER, SLEEVE: 0.245" ID X 0.75" L, AL	80009	361-0741-00
<b>-</b> 94	220-0572-00			2	NUT, PLAIN, HEX.: 10-32 X 0.25 INCH, PL BRS	73743	OBD
				_	* CKT BOARD ASSY INCLUDES:		
<b>-</b> 95	131-1817-00			10	LINK, TERM CONNE: 22 AWG, 2.25" LONG	80009	131-1817-00
<b>-</b> 96	131-1750-00				. TERM., FEED THRU:10 PIN INSULATED	27264	09-64-1103
-97	344-0154-00			2	. CLIP, ELECTRICAL: FOR 0.25 INCH DIA FUSE	80009	
-98	346-0032-00			1	. STRAP, RETAINING:		2829-75-4
<b>-</b> 99				2	. SW, SLIDE: LINE VOLT/SELECT(SEE S701, S705 EPL)		
				1	TRANSFORMER: POWER (SEE T700 EPL)		
-101	343-0213-00			2	CLAMP, LOOP: PRESS MT, PLASTIC	80009	343-0213-00
-102	366-1031-02			1	KNOB: RED-VAR	80009	366-1031-02
102	213-0153-00			1	. SETSCREW:5-40 X 0.125 INCH, HEX SOC STL	74445	OBD
-103 -104	366-1646-00 366-1559-00			1 3	KNOB:GRAY,W/SHAFT	80009	366-1646-00
-105	384-1371-02			2	PUSH BUTTON:GRAY EXTENSION SHAFT:6.8" LONG, W/KNOB	80009	366-1559-00
-106	366-1031-02			1	KNOB: RED-VAR	80009 80009	384-1371-02 366-1031-02
	213-0153-00			1	. SETSCREW:5-40 X 0.125 INCH, HEX SOC STL	74445	OBD
-107	366-1646-00				KNOB:GRAY,W/SHAFT	80009	366-1646-00
-108	426-1072-00			3	FRAME, PUSH BTN: PLASTIC	80009	426-1072-00
-109	358-0550-00				BUSHING, SHAFT: 0.15 ID X 0.3INCH OD, PLSTC	80009	358-0550-00
	333-2040-00				PANEL, FRONT: VERTICAL	80009	333-2040-00
-111	384-1393-00 376-0051-00			2	EXTENSION SHAFT: 0.123 DIA X 6.3" L,PLSTC	80009	384-1393-00
-112	3/6-0031-00			2	CPLG, SHAFT, FLEX: FOR 0.125 INCH DIA SHAFTS . EACH COUPLER INCLUDES:	80009	376-0051-00
	213-0022-00			4	. SETSCREW:4-40 X 0.188 INCH, HEX SOC STL	74445	OBD
-113	351-0456-00			2	GUIDE, RES ADJ: PLASTIC	80009	351-0456-00
	672-0518-00		B010349	_	CKT BOARD ASSY:ATTEN,CH1 W/CAM SW		672-0518-00
	672-0518-01		D010340	1	,,,	80009	672-0518-01
	672-0519-00 672-0519-01		BU10349	1	CKT BOARD ASSY:ATTEN,CH2 W/CAM SW	80009	672-0519-00
	072-0319-01	B010330			CKT BOARD ASSY:ATTEN,CH2 W/CAM SW (ATTACHING PARTS FOR EACH)	80009	672-0519-01
-114	211-0144-00			2	SCREW, MACHINE: 4-40 X 1.312 INCH, PNH STL	83385	OBD
-115	211-0018-00				SCREW, MACHINE: 4-40 X 0.875 PNH, STL	83385	OBD
<del>-</del> 116	210-0586-00			1		78189	OBD
				_	*		
-117				1	. EACH ATTEN ASSY INCLUDES: . SHIELD, ELEC: ATTENUATOR LEFT, CH1	80009	227_2214_00
**,	337-2215-00				. SHIELD, ELEC: ATTENUATOR, RIGHT, CH2	80009	337-2214-00 337-2215-00
-118	211-0116-00	1 B010100	B010439	1	(ATTACHING PARTS) SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH BRS	83385	OBD
	211-0244-00			1	SCR,ASSEM WSHR:4-40 X 0.312 INCH,PNH BRS	78189	OBD
	211-0116-00	<sup>2</sup> во10100	B010444	1	SCR, ASSEM WSHR:4-40 X 0.312 INCH, PNH BRS	83385	OBD
	211-0244-00				. SCR, ASSEM WSHR: 4-40 X 0.312 INCH, PNH STL	.78189	
					*		

<sup>1&</sup>lt;sub>T932</sub> only 2<sub>T935</sub> only

### Replaceable Mechanical Parts—T932/T935

Fig. & Index No.	Tektronix Serial/Mo Part No. Eff	del No. Dscont	Ωtv	12345	Name	& Description	Mfr Code	Mfr Part Number
1-119	131-0955-00					ALE,W/HARDWARE	05091	
-120	210-1000-00		1		(ATTACHING AT:0.384 ID X	PARTS) 0.50" OD,AL	80009	210-1000-00
-121	105-0678-00 <sup>1</sup> B010100 105-0678-01 <sup>1</sup> B010832 105-0678-02 <sup>1</sup> B010832 105-0678-00 <sup>2</sup> B010100		1 1	. DRUM, CAM . ACTUATOR,	* - SWITCH:W/LEVER SWITCH:AC-DC G CAM SW:AC-DC G SWITCH:W/LEVER	ND,CHANNEL 1	80009 80009 80009 80009	105-0678-00 105-0678-01 105-0678-02 105-0678-00
	105-0678-01 <sup>2</sup> B010962 105-0678-02 <sup>2</sup> B010962	2020302	1	. DRUM, CAM	SWITCH:AC-DC G CAM SW:AC-DC G	ND, CHANNEL 1	80009 80009	105-0678-01 105-0678-02
-122 -123	214-1126-01 214-1752-00		4	. SPRING,FL	AT: GREEN COLOR	ED	80009	214-1126-01
-124	401-0338-00			. ROLLER, DE		PARTS)	80009 80009	214-1752-00 401-0338-00
-125	211-0116-00 <sup>1</sup> B010100 211-0244-00 <sup>1</sup> B010440 211-0116-00 <sup>2</sup> B010100 211-0244-00 <sup>2</sup> B010445		2 2	. SCR, ASSEM	WSHR:4-40 X C WSHR:4-40 X C WSHR:4-40 X C	3.312 INCH,PNH BRS 3.312 INCH,PNH STL 3.312 INCH,PNH BRS 3.312 INCH,PNH STL	83385 78189 83385 78189	OBD OBD OBD
<b>-</b> 126	210-0406-00		2	. NUT, PLAIN	,HEX.:4-40 X C	.188 INCH,BRS	73743	2X12161-402
-127 -128	376-0174-00					X 0.325 OD X 0.2" H	80009	376-0174-00
-126 -129	105-0679-00 343-0564-00			. DRUM, CAM	SWITCH: CONT:ATTENUATO	R.I.EFT CHI	80009 80009	105-0679-00 343-0564-00
	343-0565-00		1	. RTNR BAR,	CONT: ATTENUATO (ATTACHING	R,RIGHT CH2	80009	343-0565-00
-130	211-0116-00 <sup>1</sup> B010100 211-0244-00 <sup>1</sup> B010440	B010439				0.312 INCH,PNH BRS	83385	OBD
	211-0244-00 B010440 211-0116-00 <sup>2</sup> B010100	B010444	1			0.312 INCH,PNH STL 0.312 INCH,PNH BRS	78189 83385	OBD OBD
	211-0244-00 <sup>2</sup> B010445		1	. SCR, ASSEM	WSHR:4-40 X C	.312 INCH, PNH STL	78189	OBD
-131		B010439		. SCR, ASSEM	WSHR:4-40 X C	.625 INCH, PNH BRS	83385	OBD
	211-0246-00 <sup>1</sup> B010440 211-0152-00 <sup>2</sup> B010100	DO10444	1	. SCR, ASSEM	WSHR:4-40 X C	0.625 INCH,PNH,STL	78189	OBD
	211-0132-00 B010100 211-0246-00 <sup>2</sup> B010445	POTO444	1	. SCR.ASSEM	I WSHR:4-40 X (	0.625 INCH,PNH BRS	83385 78189	OBD OBD
<b>-</b> 132			1	. NUT, PLAIN	J,HEX.:4-40 X C	.188 INCH,BRS	73743	2X12161-402
-133	131-1779-03					CONTACT, LEFT, CH1	80009	131-1779-03
-134	131-1779-04 131-1779-01					CONTACT, RIGHT, CH2  CONTACT, LEFT, CH1	80009 80009	131-1779-04
234	131-1779-02					3 CONTACT, LEFT, CH1	80009	131-1779-01 131-1779-02
						CH2(SEE A6,17 EPL)		
	136-0263-04			-		0.025 INCH SQUARE PIN	22526	75377-001
-137 -138					BD:0.25"OD X C		80009 80009	361-0735-00 384-1136-00
<b>-1</b> 39					SSY:VERTICAL(S	SEE A8 EPL)	80009	364-1136-00
-140	211-0014-00 211-0008-00		3 1		NE:4-40 X 0.50 NE:4-40 X 0.25	INCH, PNH STL	83385 83385	
-141	131-0589-00				ASSY INCLUDES LEC:0.46 INCH		22526	47350
	131-1792-00					CONTACT, FLAT WAFER	27264	47350 09-70-2121
					SH:CH1,CH2(SEE		2/204	05 70 2121
-144					TITCH: PLASTIC			J-64281
-145 -146						MIN(SEE R4152,R4252 E		
-147					CHI,CH2 POSITI W/HDWR(SEE DL4 (ATTACHING		<b>Г</b> Г)	
-148	211-0007-00		2	SCREW, MACHI		88 INCH, PNH STL	83385	OBD
-149					XT W:4-40 X O.		78189	
<b>-1</b> 50	210-0458-00		3		XT W:8-32 X O.	· · · · · · · · · · · · · · · · · · ·	83385	OBD
-151	131-1798-00		2		E INCLUDES: CLEC:DELAY LINE		80009	131-1798-00

 $\frac{1_{T932}}{2_{T935}}$ 

Fig. &						
Index	Tektronix Serial/Model No.				Mfr	
No.	Part No. Eff Dscont	Qty	1 2 3 4 5	Name & Description	Code	Mfr Part Number
1-152	346-0121-00	3	. STRAP, ELEC COMP	:TIE DOWN, 5.0 LONG	59730	T4-34M
-153	386-3292-00	1	SUBPANEL, FRONT: VE		80009	
-154	129-0577-00	1		HEX X 1.442"L.BRS		129-0577-00
-155	334-2608-00		PLATE, IDENT: MARKE		80009	
	334-2537-00	1	PLATE, IDENT: MARKE		80009	
-156	124-0315-00	1			80009	
<del>-</del> 157	366-1660-00	1	KNOB: GRAY		80009	
	213-0153-00	1		0.125 INCH, HEX SOC STL	74445	
-158	131-0106-02	1	CONNECTOR, RCPT, :B		80009	
-159	210-0255-00 <sup>1</sup>	1	TERMINAL, LUG: 0.39	1" ID INT TOOTH	80009	210-0255-00
	210-0255-00 <sup>2</sup> B010100 B010449	1		1" ID INT TOOTH		210-0255-00
	210-0207-00 <sup>2</sup> B010450	1	TERMINAL, LUG: 0.37	5 INCH DIAMETER		01136902
	210-0978-00 <sup>1</sup> xB010375	1	WASHER, FLAT: 0.375	ID X 0.50 INCH OD, STL	78471	
	210-0978-00 <sup>2</sup> XB010450	1	WASHER, FLAT: 0.375	ID X 0.50 INCH OD, STL	78471	OBD
	366-1559-00	1	PUSH BUTTON: GRAY		80009	366-1559-00
-161		1	EXTENSION SHAFT:2	.0" LONG, W/KNOB, PLASTIC	80009	
-162		1	KNOB: GRAY	•	80009	
	213-0153-00	1	. SETSCREW:5-40 X	0.125 INCH, HEX SOC STL	74445	OBD
-163		3	PUSH BUTTON: GRAY	·	80009	366-1559-00
-164	366-1667-00 <sup>2</sup>	1	KNOB:RED, 0.127 IN		80009	366-1667-00
	213-0153-00 <sup>2</sup>	1	. SETSCREW:5-40 X	0.125 INCH, HEX SOC STL	74445	OBD
<b>-1</b> 65	100 1001 00	1	KNOB: GRAY, TIM/DIV	,0.127 INCH ID	80009	366-1661-00
	213-0153-00	2	. SETSCREW:5-40 X	0.125 INCH, HEX SOC STL	74445	OBD
-166		1	KNOB: CLEAR, FCTN T	IMING, 0.252 INCH ID	80009	366-1662-00
	213-0153-00	2	. SETSCREW:5-40 X	0.125 INCH, HEX SOC STL	74445	OBD
-167	366-1647-00 <sup>1</sup>	1	KNOB:0.127" ID X	0.5" OD X 0.531"	80009	366-1647-00
	213-0153-00	1	. SETSCREW:5-40 X	0.125 INCH, HEX SOC STL	74445	OBD
-168	366-1281-01 <sup>1</sup>	1	KNOB:GRAY, 0.252 I		80009	366-1281-01
	213-0153-00	2	. SETSCREW:5-40 X	0.125 INCH, HEX SOC STL	74445	OBD
-169		1	BUSHING, PLASTIC: 0	.257 ID X 0.412 INCH OD	80009	358-0216-00
-170		1.	EXTENSION SHAFT:6	.8" LONG, W/KNOB	80009	384-1371-02
-171		2	BUSHING, SHAFT: 0.1	5 ID X 0.3INCH OD, PLSTC	80009	
-172	426-1072-002	4	FRAME, PUSH BTN:PL	ASTIC	80009	426-1072-00
	426-1072-00 <sup>1</sup>	1	FRAME, PUSH BTN:PL	ASTIC	80009	426-1072-00
<b>-</b> 173	333-2093-00 <sup>2</sup>	1	PANEL, FRONT: HORIZ	ONTAL	80009	333-2093-00
	333-2092-00 <sup>1</sup>	1	PANEL, FRONT: HORIZ		80009	333-2092-00
-174		1	(AT	,POSITION(SEE R2272 EPL) TACHING PARTS)		
-175				25-32 X 0.312 INCH, BRS	73743	2X20224-402
-176		1	WASHER, LOCK: INTL,	0.26 ID X 0.40" OD,STL	78189	1214-05-00-0541C
-177	210-0465-00	1		25-32 X 0.375 INCH BRS	73743	3095-402
	672-0549-00 	1	CKT BOARD ASSY:TR	IGGER,W/LEVER SWITCH INCLUDES:	80009	672-0549-00
-178		1	. LEVER, SWITCH: MO	DE(SEE S2150 EPL)		
-179	1	1		URCE(SEE S2100 EPL) TACHING PARTS FOR EACH)		
-180	211-0152-00 B010100 B010439	1		4-40 X 0.625 INCH, PNH BRS	83385	OBD
	211-0540-00 <sup>1</sup> B010440	1	. SCREW, MACHINE: 6	-32 X 0.50 INCH,TRH STL	83385	
	211-0152-00 <sup>2</sup> B010100 B010444	1	. SCR, ASSEM WSHR:	4-40 X 0.625 INCH, PNH BRS	83385	
	211-0540-00 <sup>2</sup> B010445	1	. SCREW, MACHINE: 6	-32 X 0.50 INCH, TRH STL	83385	
-181	210-0551-00	1	. NUT, PLAIN, HEX.:	4-40 X 0.25 INCH,STL	83385	•
<del>-</del> 182	351-0448-01	2	. GUIDE ,SWITCH:W,	/SPRING AND ROLLER		351-0448-01
-183		1	. CKT BOARD ASSY:	TRIGGER SWITCH(SEE All EPL)		
-184	2	1	RES., VAR: DELAY TI	ME(SEE S2516 EPL) TACHING PARTS)		
-185		1		25-32 X 0.312 INCH,BRS	73743	2X20224-402
-186	210-0046-00 <sup>2</sup>			0.26 ID X 0.40" OD,STL		1214-05-00-0541C
-187	210-0465-00 <sup>2</sup>			25-32 X 0.375 INCH BRS		3095-402
			-	*		

1<sub>T932</sub> only 2<sub>T935</sub> only

### Replaceable Mechanical Parts—T932/T935

Fig. &							
Index		Serial/Model No.				Mfr	
No.	Part No.	Eff Dscont	Qty	1 2 3 4 5	Name & Description	Code	Mfr Part Number
1-188	384-1410-00		1	EXTENSION SH	AFT:0.081 OD X 8.296" L,SST	80009	384-1410-00
	384-1422-00		1	EXTENSION SH	AFT:0.123 OD X 8.06" L,PLASTIC	80009	384-1422-00
-189	376-0051-00	,2	1	CPLG, SHAFT, F	LEX:FOR 0.125 INCH DIA SHAFTS	80009	376-0051-00
	376-0050-00	1	1	CPLG, SHAFT, F	LEX:FOR 0.081/0.125 INCH SHAFTS	80009	376-0050-00
	213-0022-00		4	. SETSCREW: 4	-40 X 0.188 INCH, HEX SOC STL	74445	OBD
<del>-</del> 190	672-0551-00		1	CKT BOARD AS	SY:A TIMING	80009	672-0551-00
	672-0533-00		1	CKT BOARD AS	SY:A AND B TIMING	80009	672-0533-00
<b>-1</b> 91	386-3293-00		1	SUBPANEL, FRO	NT:HORIZONTAL	80009	386-3293-00
					(ATTACHING PARTS)		
-192			2	SCREW, MACHIN	E:4-40 X 0.25 INCH, PNH STL	83385	OBD
<b>-1</b> 93	211-0007-00	1	2	SCREW, MACHIN	E:4-40 X 0.188 INCH, PNH STL	83385	OBD
					*		•
-194			1	EXTENSION SH	AFT:0.95 INCH LONG	80009	384-1136-00
-195	384-1408-00		3		AFT:3.8 INCH LONG, PLASTIC	80009	384-1408-00
<b>-1</b> 96		•	1	CKT BOARD AS	SY:HORIZONTAL(SEE Al2 EPL)		
	_				(ATTACHING PARTS)		
<del>-</del> 197	129-0573-00	•	2	SPACER, POST:	0.188" HEX 1.627" L,AL	80009	129-0573-00
					*		
100	131-0566-00	.1	-		ASSY INCLUDES:		
-198	131-0566-00		7		CONNE:0.086 DIA X 2.375 INCH L		ERD-18T0
100	131-0566-00		1	•	CONNE:0.086 DIA X 2.375 INCH L	55210	
-199	131-0608-00		7	· ·	EC:0.365 INCH LONG	22526	47357
200			4	•	EC:0.365 INCH LONG		47357
-200	131-1795-00		1		RCPT,:12 FEMALE CONTACT,RT-ANGLE	27264	09-62-3121
-201	131-1801-00 131-1801-00		2		RCPT,:9 CONTACTS	80009	131-1801-00
202			1		RCPT,:9 CONTACTS	80009	131-1801-00
	131-1802-00		2		RCPT,:15 CONTACTS	80009	131-1802-00
-203 -204	361-0542-00		1		H:SLOPE(SEE S2140 EPL)	<b>51506</b>	
-204 -205	361-0542-00		2	. SPACER, SWI		71590	J-64281
-205 -206	361-0542-00	_	1	•	H:MODE(SEE S2510 EPL)	71500	T (400)
-206	361-0542-00		4	. SPACER,SWI		/1590	J-64281
-207			1		EVEL(SEE R2138 EPL)		
			1		ORIZONTAL POSITION(SEE R2316 EPL)		
-209 -210	441-1278-00		1		WEEP RATE(SEE R2322 EPL)	00000	441 1270 00
	131-1538-00		1	CHASSIS, SCOP		80009	441-1278-00
-211 -212			4		:CRIMP-ON, 22-26 AWG WIRE	22526	75369-002
-212 -213	352-0171-00		4 1		:0.48"L,22-26 AWG WIRE	22526	75691-005
-213	198-3071-00		1	WIRE SET, ELE	,EL:1 WIRE BLACK	80009 80009	352-0171-00 198-3071-00
	170-30/1-00	,	_	HIRE SEL,ELE	···	00009	T30-30/1-00

<sup>&</sup>lt;sup>1</sup>T935 only <sup>2</sup>T932 only

### T932/T935

Fig. & Index No.	Tektronix Part No.	Serial/ Eff	Model No. Dscont	Qty 12345	Name & Description	Mfr Code	Mfr Part Number
	070-1983-0 010-6108-0	_		1 MANUAL:INSTR 2 PROBE, VOLTAG	UCTION E:10x,2 METERS,W/ACCESSORIES	80009 80009	070-1983-01 010-6108-03

At Tektronix, we continually strive to keep up with latest electronic developments by adding circuit and component improvements to our instruments as soon as they are developed and tested.

Sometimes, due to printing and shipping requirements, we can't get these changes immediately into printed manuals. Hence, your manual may contain new change information on following pages.

A single change may affect several sections. Since the change information sheets are carried in the manual until all changes are permanently entered, some duplication may occur. If no such change pages appear following this page, your manual is correct as printed.

### **SERVICE NOTE**

Because of the universal parts procurement problem, some electrical parts in your instrument may be different from those described in the Replaceable Electrical Parts List. The parts used will in no way alter or compromise the performance or reliability of this instrument. They are installed when necessary to ensure prompt delivery to the customer. Order replacement parts from the Replaceable Electrical Parts List.

## CALIBRATION TEST EQUIPMENT REPLACEMENT

### **Calibration Test Equipment Chart**

This chart compares TM 500 product performance to that of older Tektronix equipment. Only those characteristics where significant specification differences occur, are listed. In some cases the new instrument may not be a total functional replacement. Additional support instrumentation may be needed or a change in calibration procedure may be necessary.

**Comparison of Main Characteristics** 

Comparison of Main Characteristics				
DM 501 replaces 7D13				
PG 501 replaces 107  108 111  114 115	PG 501 - Risetime less than 3.5 ns into 50 Ω. PG 501 - 5 V output pulse; 3.5 ns Risetime. PG 501 - Risetime less than 3.5 ns; 8 ns Pretrigger pulse delay. PG 501 - ±5 V output. PG 501 - Does not have Paired, Burst, Gated, or Delayed pulse mode; ±5 V dc Offset. Has ±5 V output.	<ul> <li>107 - Risetime less than 3.0 ns into 50 Ω.</li> <li>108 - 10 V output pulse; 1 ns Risetime.</li> <li>111 - Risetime 0.5 ns; 30 to 250 ns Pretrigger Pulse delay.</li> <li>114 - ±10 V output. Short proof output.</li> <li>115 - Paired, Burst, Gated, and Delayed pulse mode; ±10 V output.</li> <li>Short-proof output.</li> </ul>		
PG 502 replaces 107 108 111 114 115	PG 502 - 5 V output PG 502 - Risetime less than 1 ns; 10 ns Pretrigger pulse delay. PG 502 - ±5 V output PG 502 - Does not have Paired, Burst, Gated, Delayed & Undelayed pulse mode; Has ±5 V output. PG 502 - Does not have Paired or Delayed pulse. Has ±5 V output.	108 - 10 V output.  111 - Risetime 0.5 ns; 30 to 250 ns Pretrigger pulse delay.  114 - ±10 V output. Short proof output.  115 - Paired, Burst, Gated, Delayed & Undelayed pulse mode; ±10 V output.  Short-proof output.  2101 - Paired and Delayed pulse; 10 V output.		
PG 506 replaces 106	PG 506 - Positive-going trigger output signal at least 1 V; High Amplitude output, 60 V. PG 506 - Does not have chopped feature.	106 - Positive and Negative-going trigger output signal, 50 ns and 1 V; High Amplitude output, 100 V.  0502-01 - Comparator output can be alternately chopped to a reference voltage.		
SG 503 replaces 190, 190A, 190B 191 067-0532-01	SG 503 - Amplitude range 5 mV to 5.5 V p-p. SG 503 - Frequency range 250 kHz to 250 MHz. SG 503 - Frequency range 250 kHz to 250 MHz.	190B - Amplitude range 40 mV to 10 V p-p. 191 - Frequency range 350 kHz to 100 MHz. 0532-01 - Frequency range 65 MHz to 500 MHz.		
TG 501 replaces 180, 180A	TG 501 - Marker outputs, 5 sec to 1 ns. Sinewave available at 5, 2, and 1 ns. Trigger output - slaved to marker output from 5 sec through 100 ns. One time-mark can be generated at a time. TG 501 - Marker outputs, 5 sec to 1 ns. Sine- wave available at 5, 2, and 1 ns. TG 501 - Marker outputs, 5 sec to 1 ns. Sine- wave available at 5, 2, and 1 ns. Trigger output - slaved to marker output from 5 sec through 100 ns. One time-mark can be generated at a time.	180A - Marker outputs, 5 sec to 1 μs. Sinewave available at 20, 10, and 2 ns. Trigger pulses 1, 10, 100 Hz; 1, 10, and 100 kHz. Multiple time-marks can be generated simultaneously.  181 - Marker outputs, 1, 10, 100, 1000, and 10,000 μs, plus 10 ns sinewave.  184 - Marker outputs, 5 sec to 2 ns. Sinewave available at 50, 20, 10, 5, and 2 ns. Separate trigger pulses of 1 and .1 sec; 10, 1, and .1 ms; 10 and 1 μs. Marker amplifier provides positive or negative time marks of 25 V min. Marker intervals of 1 and .1 sec; 10, 1, and .1 ms; 10 and 1 μs.		
2901	TG 501 - Marker outputs, 5 sec to 1 ns. Sinewave available at 5, 2, and 1 ns. Trigger output - slaved to marker output from 5 sec through 100 ns. One time-mark can be generated at a time.	2901 - Marker outputs, 5 sec to 0.1 $\mu$ s. Sinewave available to 50, 10, and 5 ns. Separate trigger pulses, from 5 sec to 0.1 $\mu$ s. Multiple time-marks can be generated simultaneously.		

NOTE: All TM 500 generator outputs are short-proof. All TM 500 plug-in instruments require TM 500-Series Power Module.



070-1983-01

CHANGE REFERENCE <u>M31736</u>

DATE <u>9-21-77</u>

**CHANGE:** 

**DESCRIPTION** 

EFF SN: T932 B011997

T935 B012743

ELECTRICAL PARTS LIST AND SCHEMATIC CHANGES

CHANGE TO:

$A6^1$	670-3972-05	CKT BOARD ASSY:CH 1 ATTENUATOR
$A6^2$	670-3972-05	CKT BOARD ASSY: CH 1 ATTENUATOR
A7 <sup>1</sup>	670-3973-05	CKT BOARD ASSY: CH 2 ATTENUATOR
A7 <sup>2</sup>	670-3973-05	CKT BOARD ASSY:CH 2 ATTENUATOR

ADD:

R4103 317-0150-00 RES., FXD, CMPSN:15 OHM, 5%, 0.125W 317-0150-00 RES., FXD, CMPSN:15 OHM, 5%, 0.125W R4203

R4103 is added to the A6 CH 1 ATTENUATOR board in series between J4110 CH 1 INPUT connector and the junction of C4101-C4102-S4100.

R4203 is added to the A7 CH 2 ATTENUATOR board in series between J4210 CH 2 INPUT connector and the junction of C4201-C4202-S4200. Affected parts are shown on VERT INPUT diagram 3.



T932/T935 PRODUCT\_

070-1983-01

M30436 CHANGE REFERENCE \_

9-21-77 DATE

**CHANGE:** 

**DESCRIPTION** 

EFF SN B011974 (T932)

EFF SN B012615 (T935)

ELECTRICAL PARTS LIST AND SCHEMATIC CHANGES

CHANGE TO:

C465

283-0404-00 CAP., FXD, CER DI:0.01UF, 20%, 4000V

C466

283-0404-00 CAP., FXD, CER DI:0.01UF, 20%, 4000V

R458

308-0218-00 RES., FXD, CMPSN:150 OHM, 5%, 3W

The above parts are located on the INTERFACE circuit board and shown on diagram 1 CRT & VERT AMPL.



PRODUCT ALL T900 SERIES

CHANGE REFERENCE M32883

EFF ALL SN

**DATE** \_\_12-21-77

CHANGE:

DESCRIPTION

Affects Manuals: 070-1981-01

070-1982-01 070-1983-01 070-2492-00

Oscilloscope Light Filter and Graticule Illumination Photography Effects Some oscilloscopes contain a factory installed colored (usually blue or green) plastic light filter in front of the crt faceplate to improve general purpose viewing contrast in ambient lighting conditions (in some applications this device also functions as an implosion safety shield).

In order for the oscilloscope graticule to be photographed along with a crt display, oscilloscopes that do not provide internal graticule (scale) illumination must be used with a camera such as the C5A or C5A Option 3, which provide external flash illumination of the graticule. An exception to this is some storage oscilloscopes operated in the store mode, where the target illumination may also illuminate the graticule lines.

Effectiveness of the graticule illumination flash is severly degraded when used with most colored crt light filters. If a clear light filter was provided as an accessory with your oscilloscope, the colored filter should be removed and the clear filter installed in its place when taking oscilloscope display photographs. The clear filter may also provide improved photograph definition and contrast with reduced oscilloscope display intensity settings (some colored filters reduce effective display intensity as much as 75%). Under no circumstances should the oscilloscope be operated without either a clear or colored light filter when no other implosion shield is provided (optional accessory mesh filters are not intended for implosion protection and must be removed when using an oscilloscope camera).

If your oscilloscope was not provided with a clear light filter accessory, contact your local Tektronix Field Office for ordering information.

For all T900-series, bench-version oscilloscopes, the instrument cabinet must be removed in order to replace the crt light filter. Only qualified service personnel should remove the instrument cabinet. Cabinet removal instructions are provided in the Service portion of T900-series manuals. The part number for the clear light filter to fit T900-series, bench-version oscilloscopes is 337-2185-03.

 $^{1}$  OF **PAGE** 

# K4XL's PAMA

This manual is provided FREE OF CHARGE from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at http://bama.sbc.edu