

HFA16TA60C

HEXFRED™

Ultrafast, Soft Recovery Diode

Features


- Ultrafast Recovery
- Ultrasoft Recovery
- Very Low I_{RRM}
- Very Low Q_{rr}
- Specified at Operating Conditions

Benefits


- Reduced RFI and EMI
- Reduced Power Loss in Diode and Switching Transistor
- Higher Frequency Operation
- Reduced Snubbing
- Reduced Parts Count

Description

International Rectifier's HFA16TA60C is a state of the art center tap ultra fast recovery diode. Employing the latest in epitaxial construction and advanced processing techniques it features a superb combination of characteristics which result in performance which is unsurpassed by any rectifier previously available. With basic ratings of 600 volts and 15 amps per Leg continuous current, the HFA16TA60C is especially well suited for use as the companion diode for IGBTs and MOSFETs. In addition to ultra fast recovery time, the HEXFRED product line features extremely low values of peak recovery current (I_{RRM}) and does not exhibit any tendency to "snap-off" during the t_b portion of recovery. The HEXFRED features combine to offer designers a rectifier with lower noise and significantly lower switching losses in both the diode and the switching transistor. These HEXFRED advantages can help to significantly reduce snubbing, component count and heatsink sizes. The HEXFRED HFA16TA60C is ideally suited for applications in power supplies and power conversion systems (such as inverters), motor drives, and many other similar applications where high speed, high efficiency is needed.

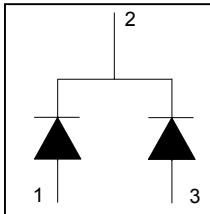

$V_R = 600V$
 $V_F(\text{typ.})^* = 1.7V$
 $Q_{rr}^* = 65\text{nC}$
 $dI_{(\text{rec})}/dt^* = 240\text{A}/\mu\text{s}$
 $* 125^\circ\text{C}$

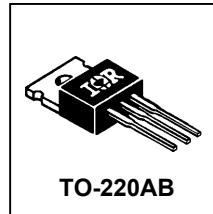

TO-220AB

Absolute Maximum Ratings (per Leg)

	Parameter	Max	Units
V_R	Cathode-to-Anode Voltage	600	V
$I_F @ T_c = 100^\circ\text{C}$	Continuous Forward Current	8.0	A
I_{FSM}	Single Pulse Forward Current	60	
I_{FRM}	Maximum Repetitive Forward Current	24	C
$P_D @ T_c = 25^\circ\text{C}$	Maximum Power Dissipation	36	
$P_D @ T_c = 100^\circ\text{C}$	Maximum Power Dissipation	14	W
T_J	Operating Junction and	-55 to +150	W
T_{STG}	Storage Temperature Range		

HFA16TA60C

Bulletin PD-2.342 rev. A 11/00

International
 Rectifier

Electrical Characteristics (per Leg) @ $T_J = 25^\circ\text{C}$ (unless otherwise specified)

	Parameter	Min	Typ	Max	Units	Test Conditions	
V_{BR}	Cathode Anode Breakdown Voltage	600			V	$I_R = 100\mu\text{A}$	
V_{FM}	Max Forward Voltage		1.4	1.7	V	$I_F = 8\text{A}$	See Fig. 1
			1.7	2.1		$I_F = 16\text{A}$	
			1.4	1.7		$I_F = 8\text{A}, T_J = 125^\circ\text{C}$	
I_{RM}	Max Reverse Leakage Current	0.3	5		μA	$V_R = V_R \text{ Rated}$	See Fig. 2
		100	500			$T_J = 125^\circ\text{C}, V_R = 0.8 \times V_R \text{ Rated}$	
C_T	Junction Capacitance	10	25		pF	$V_R = 200\text{V}$	See Fig. 3
L_S	Series Inductance		8.0		nH	Measured lead to lead 5mm from package body	

Dynamic Recovery Characteristics (per Leg) @ $T_J = 25^\circ\text{C}$ (unless otherwise specified)

	Parameter	Min	Typ	Max	Units	Test Conditions	
t_{rr}	Reverse Recovery Time	18				$I_F = 1.0\text{A}, di/dt = 200\text{A}/\mu\text{s}, V_R = 30\text{V}$	
t_{rr1}	See Fig. 5, 10	37	55		ns	$T_J = 25^\circ\text{C}$	$I_F = 8\text{A}$
t_{rr2}		55	90			$T_J = 125^\circ\text{C}$	
I_{RRM1}	Peak Recovery Current	3.5	5.0		A	$T_J = 25^\circ\text{C}$	
I_{RRM2}	See Fig. 6	4.5	8			$T_J = 125^\circ\text{C}$	$V_R = 200\text{V}$
Q_{rr1}	Reverse Recovery Charge	65	138		nC	$T_J = 25^\circ\text{C}$	
Q_{rr2}	See Fig. 7	124	360			$T_J = 125^\circ\text{C}$	
$di_{(rec)M}/dt1$	Peak Rate of Fall of Recovery Current	240			A/ μs	$T_J = 25^\circ\text{C}$	$di/dt = 200\text{A}/\mu\text{s}$
$di_{(rec)M}/dt2$	During t_b See Fig. 8	210				$T_J = 125^\circ\text{C}$	

Thermal - Mechanical Characteristics (per Leg)

	Parameter	Min	Typ	Max	Units
$T_{lead}^{①}$	Lead Temperature			300	°C
R_{thJC}	Junction-to-Case, Single Leg Conducting			3.5	K/W
	Junction-to-Case, Both Legs Conducting			1.75	
$R_{thJA}^{②}$	Thermal Resistance, Junction to Ambient			80	
$R_{thCS}^{③}$	Thermal Resistance, Case to Heat Sink		0.5		
W_t	Weight		2.0		g
			0.07		(oz)
	Mounting Torque	6.0		12	Kg-cm
		5.0		10	lbf-in

① 0.063 in. from Case (1.6mm) for 10 sec

② Typical Socket Mount

③ Mounting Surface, Flat, Smooth and Greased

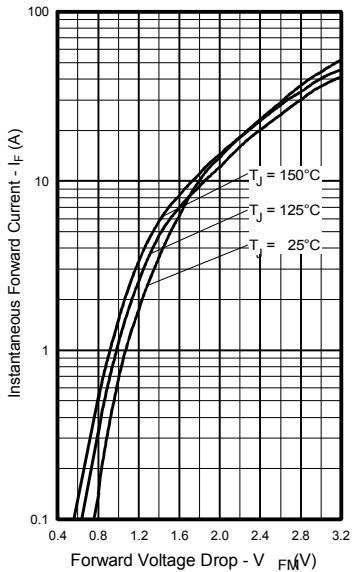


Fig. 1 - Maximum Forward Voltage Drop vs. Instantaneous Forward Current, (per Leg)

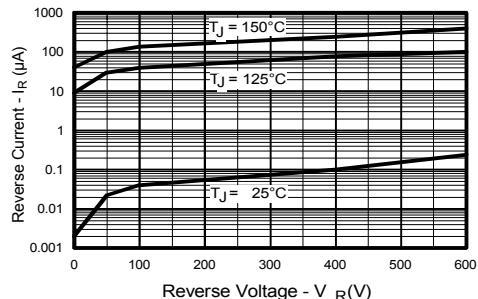


Fig. 2 - Typical Reverse Current vs. Reverse Voltage, (per Leg)

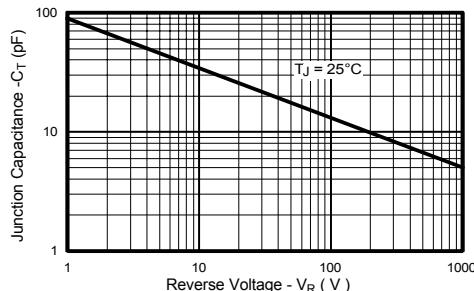


Fig. 3 - Typical Junction Capacitance vs. Reverse Voltage, (per Leg)

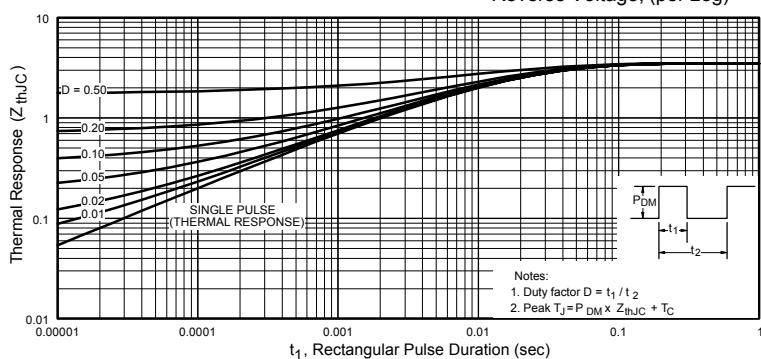


Fig. 4 - Maximum Thermal Impedance Z_{thJC} Characteristics, (per Leg)

HFA16TA60C

Bulletin PD-2.342 rev. A 11/00

International
Rectifier

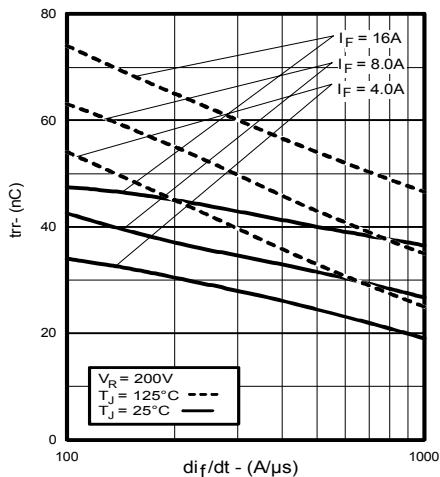


Fig. 5 - Typical Reverse Recovery vs. di_f/dt , (per Leg)

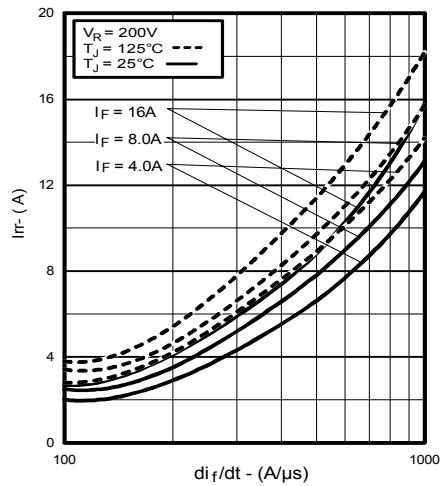


Fig. 6 - Typical Recovery Current vs. di_f/dt , (per Leg)

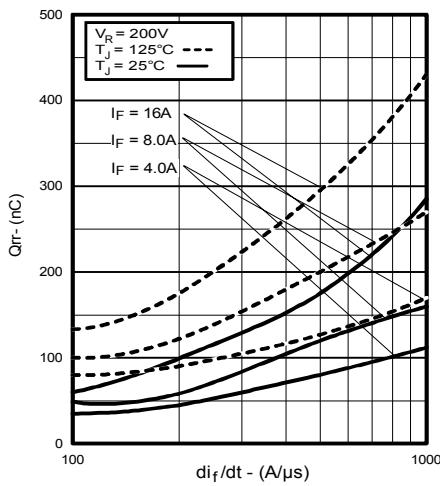


Fig. 7 - Typical Stored Charge vs. di_f/dt , (per Leg)

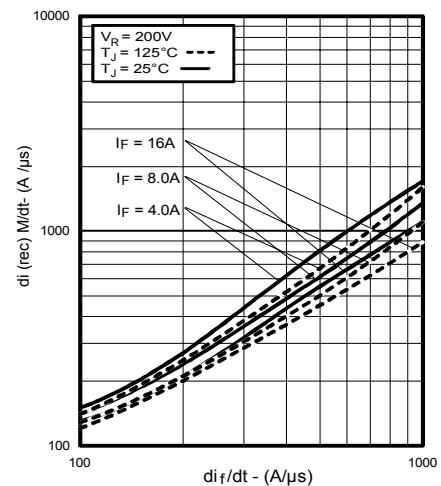


Fig. 8 - Typical $di_{(rec)M}/dt$ vs. di_f/dt , (per Leg)

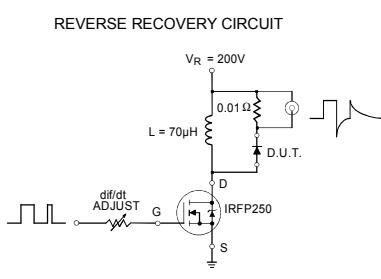


Fig. 9 - Reverse Recovery Parameter Test Circuit


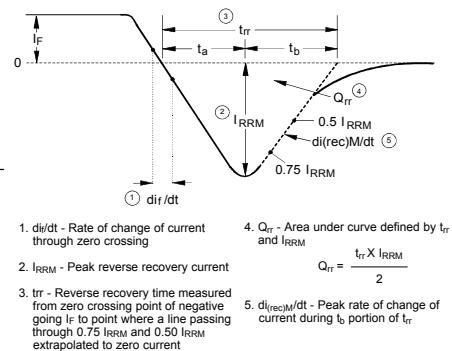


Fig. 10 - Reverse Recovery Waveform and Definitions

HFA16TA60C

Bulletin PD-2.342 rev. A 11/00

International
IR Rectifier

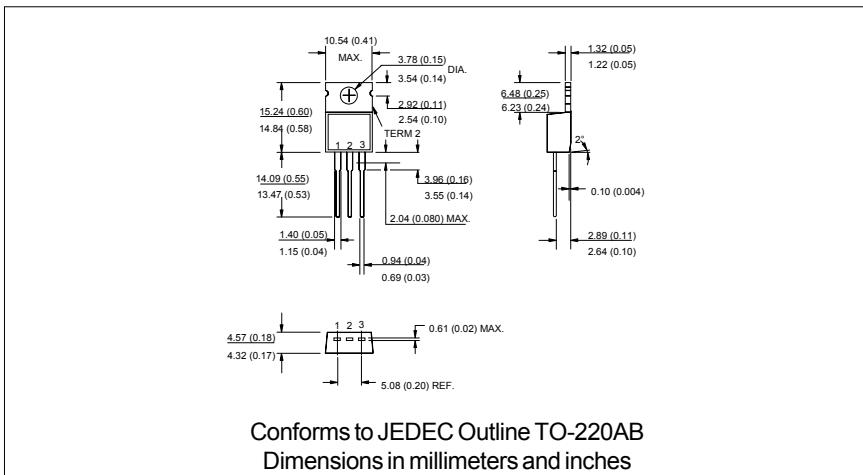

International
IR Rectifier

WORLD HEADQUARTERS: 233 Kansas St., El Segundo, California 90245 U.S.A. Tel: (310) 322 3331. Fax: (310) 322 3332.

EUROPEAN HEADQUARTERS: Hurst Green, Oxted, Surrey RH8 9BB, U.K. Tel: ++ 44 1883 732020. Fax: ++ 44 1883 733408.

IR CANADA: 15 Lincoln Court, Brampton, Markham, Ontario L6T3Z2. Tel: (905) 453 2200. Fax: (905) 475 8801.

IR GERMANY: Saalburgstrasse 157, 61350 Bad Homburg. Tel: ++ 49 6172 96590. Fax: ++ 49 6172 965933.

IR ITALY: Via Liguria 49, 10071 Borgaro, Torino. Tel: ++ 39 11 4510111. Fax: ++ 39 11 4510220.

IR FAR EAST: K&H Bldg., 2F, 30-4 Nishi-Ikebukuro 3-Chome, Toshima-Ku, Tokyo, Japan 171. Tel: 81 3 3983 0086.

IR SOUTHEAST ASIA: 1 Kim Seng Promenade, Great World City West Tower, 13-11, Singapore 237994. Tel: ++ 65 8384630.

IR TAIWAN: 16 Fl. Suite D.207, Sec. 2, Tun Haw South Road, Taipei, 10673, Taiwan. Tel: 886 2 2377 9936.