

TEMPERATURE CONTROLLER 48 x 48 mm RE70 TYPE



USER'S MANUAL



Contents:

1.	Application	3
2.	Controller set	3
3.	Basic requirements, operational safety	3
4.	Installation	4
	4.1. Controller installation	4
	4.2. Electrical connections	4
	4.3. Recommendations for installation	5
5.	Starting work	6
6.	Service	7
	6.1. Programming Controller Parameters	7
	6.2. Programming matrix	8
	6.3. Setting Change	8
	6.4. Parameters description	
7.	Inputs and outputs of the controller	10
	7.1. Inputs	10
	7.1. Output	11
8.	Control	11
	7.1. ON-OFF algorithm	11
	7.2. Innovative SMART PID algorithm	12
9.	Alarms	14
10	. Additional functions	14
	10.1. Displaying the control signal	14
	10.2. Manual mode	14
	10.3. Defaults Settings	15
11	. RS-485 interface with MODBUS protocol	15
	11.1. Introduction	15
	11.2. Error codes	15
	11.3. Register map	15
12	. Error signaling	17
13	. Technical data	18
14	Controller ordering code	19


1. Application

The RE70 controller is destined for the temperature control. Controller works directly with the resistance sensors or thermoelectric sensors.

The controller is equipped with one output that allows for dual-point control and alert signalization. Dual-point control is based on the PID or ON/OFF algorithm. Relay output is equipped with a switchable contact and allows for indirect control of the low-power objects.

The innovative SMART PID algorithm has been implemented in the controller.

2. Controller set

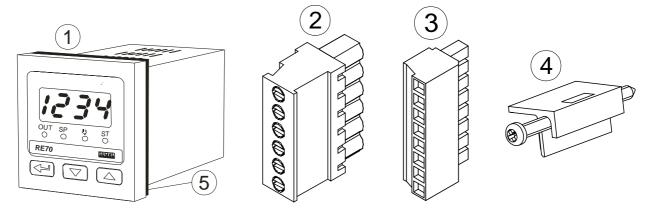

Complete set of the controller includes:

1.	controller	1	рс
2.	plug with 6 screw terminals	1	рс
3.	plug with 8 screw terminals	1	рс
4.	holders to fix the meter in the panel	4	pcs
5.	seal	1	рс
6.	user's manual	1	рс
7.	guarantee card	1	рс

3. Basic requirements, operational safety

In terms of operational safety the controller meets the requirements of the EN 61010-1 standard.

Comments concerning safety:



- Assembly and installation of the electrical connections should conducted only by people authorised to perform assembly of electric devices.
- Always check the state of connections before turning the controller on.
- Prior to taking the controller housing off, always turn the supply off and disconnect measuring circuits.
- Removal of the controller housing during the warranty period voids the warranty.
- The device is designed to installation and usage in the industrial electromagnetic environment.
- The installation should have a switch or a circuit-breaker installed. This switch should be located near the device, easy accessible by the operator and suitably marked.

4. Installation

4.1. Controller installation

Fix the controller to the board with four screw brackets as shown in the fig. 1. A slot in the panel must have the dimensions $45^{+0.6}$ x $45^{+0.6}$ mm. The thickness of the panel material cannot exceed 15 mm.

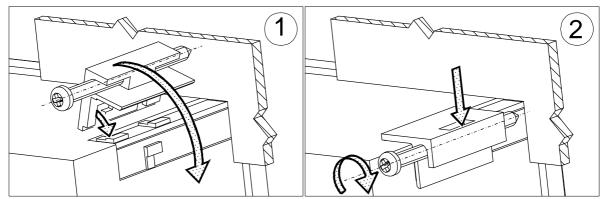


Fig. 1. Controller installation.

Dimensions of the controller are presented on the fig. 2.

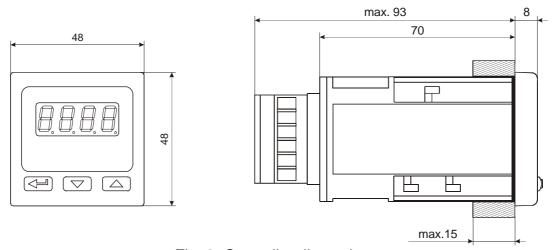


Fig. 2. Controller dimensions.

4.2. Electrical connections

The controller has two separate connectors with screw terminals. One strip enables the connection of the supply and outputs by a wire of 2,5 mm², the second strip enables input signal connections by a wire of 1,5 mm².

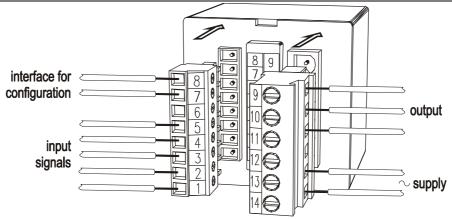


Fig. 3. View of the controller's connection strips.

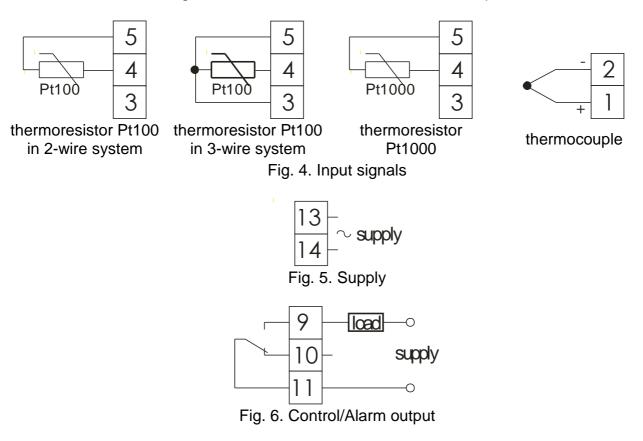


Fig. 7. RS-485 interface (only for configuration)

4.3. Recommendations for installation

To achieve full electromagnetic resistance of the controller, it is necessary to follow the rules described below:

- do not supply the controller from the network in the proximity of devices generating high pulse noises and do not apply common earthing circuits,
- apply network filters,
- wires leading measuring signals should be twisted in pairs, and for resistance sensors in 3-wire connection, twisted of wires of the same length, cross-section and resistance, and led in a shield,
- all shields should be one-side earthed or connected to the protection wire, the nearest possible to the controller,

 as a rule of thumb, wires transmitting different signals should be spaced as far as it is possible (at least 30 cm) and should be crossed only at the right angle of 90°.

5. Starting work

Controller description

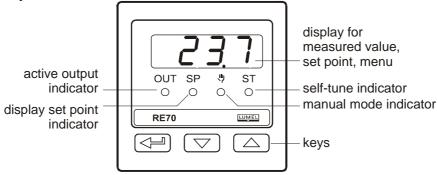


Fig. 8. Overview of the controller's front panel.

Switching a supply on


After powering on, the controller performs the display test, displays **r E 70** text, software version and the measured value.

Display may also show an error message (see table 11).

The ON-OFF control algorithm with hysteresis given in the table 2 is set by the defaults.

Change of the set point

Set point is displayed after \checkmark or \checkmark buttons are pressed, this is accompanied by SP diode switching on. To change the set point, press \checkmark or \checkmark buttons again (fig. 9). The beginning of the change is signaled by pulsing dot symbol on the display. New set point must be accepted with a \checkmark button within 30 seconds after the \checkmark or \checkmark button have been pressed, otherwise regulator will display set point with previously set point.

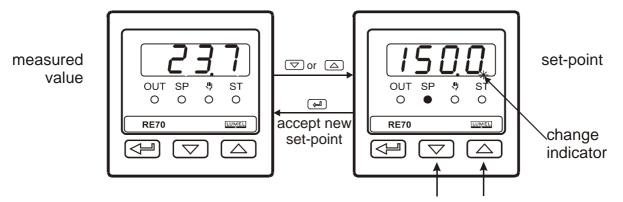

to change set-point press and hold one of the button

Fig. 9. Change value of the set point.

6. Service

The controller service is presented on the fig. 10.

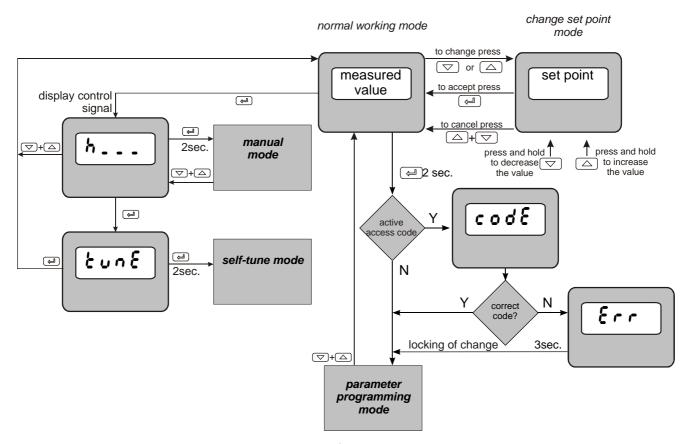


Fig. 10. Menu of controller service

6.1. Programming Controller Parameters

Pressing and holding down during ca 2 seconds the button causes the entry to the programming matrix. The programming matrix can be protected by an access code. In case when giving a wrong value of the code, it is only possible to see settings through - without possibility of changes.

Fig. 11 presents the transition matrix in the programming mode. The transition between levels is carrying out by using the buttons \checkmark or \checkmark and the level selection by using the button \checkmark . After selecting the level, the transition between parameters is carried out by using the buttons \checkmark or \checkmark . In order to change the parameter setting proceed acc. to the section 6.3. In order to exit from the selected level, transit between parameters until appears the symbol [. . .] and press the button \checkmark . In order to exit from the programming matrix to the normal working mode, transit between levels until appears the symbol [. . .] and press the button \checkmark .

Some controller parameters can be invisible – it depends on the current configuration. The description of parameters shows the table 1. The return to the normal working mode follows automatically after 30 seconds since the last button pressure.

6.2. Programming matrix

, nP	unit	1 468	£ - L ,	SH, F	d۶	
Input parameters	Unit	Input type	Type of line	Shift of measured value	Position of decimal point	Transition to the higher level
outp	out					
Output parameters	Output configuration	Transition to the higher level				
ctri	RL G	FALE	XX	5 t.L o	S Ł.H.	
Control parameters	Control algorithm	Type of control	Hysteresis	Lower threshold for self-tuning	Upper threshold for self-tuning	Transition to the higher level
۶, ۵	P 6	٤٠	۲d	30	έo	
PID Parameters	Proportional band	Integral time constant	Derivative time constant	Correction of control signal, for P or PD control	Pulse period	Transition to the higher level
RLRr	RL.SP	8L.du	8L.HY			
Alarms parameters	Set point for the absolute alarm	Deviation from the set point of the relative alarm	Alarm hysteresis	Transition to the higher level		
500	SPL	SPH			•	
Set point parameters	lower limitation of the set point setting	upper limitation of the set point setting	Transition to the higher level			
SEru	SECU	SEFn				
Service parameters	Access code	Self-tuning function	Transition to the higher level			
menu						

Fig. 11. Programming matrix

6.3. Setting Change

The change of parameter setting begins after pressing the button during the display of the parameter name. The setting selection is carried out through the buttons and accepted by the button and cancellation follows after the simultaneous pressure of the buttons and accepted or after 30 seconds since the last button pressure. The way to change the setting is shown on the fig. 12.

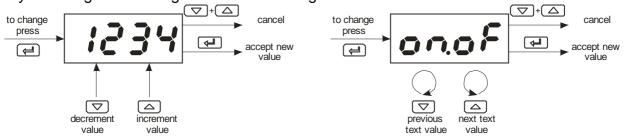


Fig. 12. Setting change of number and text parameters.

6.4. Parameters description

The list of parameters is presented in the table 1.

NE70-09 User's Manual Table 4						
	guration parameters		Table 1			
Symbol of parameter	Parameter description	Default setting	Range of parameter change			
• • P – Input parameters						
טחיל	Unit	۰٤	ີ : degrees Celsius ີ ະ : degrees Fahrenheit			
, nt 3	Input type	የ ٤ ፣	Pt: Pt100 Pt: 10: Pt1000 t-J: J type thermocouple t-t: T type thermocouple t-t: K type thermocouple t-s: S type thermocouple t-r: R type thermocouple t-s: B type thermocouple t-s: N type thermocouple			
£ - L ,	Line type for the sensor Pt100	2-8	∂ - P : 2-wire 3 - P : 3-wire			
6P	Position of the decimal point	1-dP	0 - dP: without a decimal place 1 - dP: 1 decimal place			
5h, F	Shift of measured value	0.0 °C (0.0 °F)	-100.0…100.0 °C (-180.0…180.0 □)			
ס ט ב P – Output parameters						
out	Output configuration	y	off: control off S: control signal RH: upper absolute alarm RLo: lower absolute alarm duH: upper relative alarm duLo: lower relative alarm duLo: internal relative alarm duo: external relative alarm			
ctrl - Co	ntrol parameters 1)					
RLG	Control algorithm	onof	P. d: PID control algorithm			
६४१६	Type of control	, 60	d, r: direct control (cooling) . au: reverse control (heating)			
H Y	Hysteresis ⁴⁾	2.0 °C (3.6 °F)	0.2100.0 °C (0.2180.0 °F)			
56.60	Lower threshold for self-tuning	0.0 °C (32.0 °F)	MINMAX ⁶⁾			
56.41	Upper threshold for self-tuning	800.0 °C (1,472.0 °F)	MINMAX ⁶⁾			
P. & - PID	parameters ²⁾					
26	Proportional band	30.0 °C (540.0 °F)	0.1550.0 °C (0.1990.0 °F)			

Parameter description	Default setting	Range of parameter change	
Integral time constant	300	09999 s	
Derivative time constant	60.0	0.02500 s	
Correction of control signal, for P or PD control	0.0	0100.0 %	
Pulse period	20.0	0.599.9 s	
arms parameters 3)			
Set point for the absolute alarm	0.0 °C (32.0 °F)	MINMAX ⁶⁾	
Deviation from the set point of the relative alarm	0.0 °C (0.0 °F)	-200,0 200,0 °C (-360.0360.0 °F)	
Hysteresis for the alarm	2.0 °C (3.6 °F)	0.2100.0 °C (0.2180.0 °F)	
5PP – Set point parameters			
Lower limitation of the set point setting	-200.0 °C (-3,280.0 °F)	MINMAX ⁶⁾	
Upper limitation of the set point setting	1,767.0 °C (3,212.6 °F)	MINMAX ⁶⁾	
5 E r P – Service parameters			
Access code 5)	0	09999	
Self-tuning function		off: locked on: available	
	Integral time constant Derivative time constant Correction of control signal, for P or PD control Pulse period arms parameters 3) Set point for the absolute alarm Deviation from the set point of the relative alarm Hysteresis for the alarm coint parameters Lower limitation of the set point setting Upper limitation of the set point setting rvice parameters Access code 5)	Integral time constant Derivative time constant Correction of control signal, for P or PD control Pulse period 20.0 Pulse period Set point for the absolute alarm Deviation from the set point of the relative alarm Hysteresis for the alarm Doint parameters Lower limitation of the set point setting Upper limitation of the set point setting Typical parameters Lower setting Upper limitation of the set point setting Typical parameters Access code 5) O O O O O O O O O O O O O	

¹⁾ Group of parameters visible only when setting the output on the control signal.

Range limits for inputs

table 2

Input / sensor	M	MIN		MAX	
input/ sensor	°C	°F	°C	°F	
Thermoresistor Pt100	-200 °C	-328 °F	850 °C	1,562 °F	
Thermoresistor Pt1000	-200 °C	-328 °F	850 °C	1,562 °F	
J type thermocouple	-50 °C	-58 °F	1,200 °C	2,192 °F	
T type thermocouple	-50 °C	-58 °F	400 °C	752 °F	
K type thermocouple	-50 °C	-58 °F	1,372 °C	2,501.6 °F	
S type thermocouple	0 °C	32 °F	1,767 °C	3,212.6 °F	
R type thermocouple	0 °C	32 °F	1,767 °C	3,212.6 °F	
B type thermocouple	0 °C	32 °F	1,767 °C	3,212.6 °F	
N type thermocouple	-50 °C	-58 °F	1,300 °C	2,372 °F	

7. Inputs and outputs of the controller

7.1. Inputs

Input is the source of the measured value used for control or for alarms. The input is universal and the sensors Pt100, Pt1000 or thermocouples can be connected to it.

²⁾ Group of parameters visible only when setting the control algorithm on PID.

³⁾ Group of parameters visible only when setting the output on one of the alarm.

⁴⁾ Parameter visible only when setting the control algorithm on ON-OFF.

⁵⁾ Parameter hidden in the monitoring mode of parameters only for readout.

⁶⁾ See table 2.

Start by using a unit parameter to set the temperature display unit. Unit change resets the value to the factory settings, with a different value ranges for Celsius and Fahrenheit scale.

Input signal is selected with a • • • parameter.

For the Pt100 thermoresistor, choose the **t** - **t** · connection type - 2-wire or 3-wire. In the 3-wire Pt100 connection, resistance compensation is automatic.

For thermocouples, a cold terminal compensation is automatic.

Position of the decimal point is a additional parameter that determines display format of measured value and set point; it is set by the **dP** parameter. Correction of the indicated measured value is determined by the **5h**, **F** parameter.

7.1. Output

The controller has one output. It is possible to choose the following output options: on-off control, proportional control (PID) or alert. It is necessary to set the pulse period for the proportional control.

Pulse period is a time between two subsequent input engagements during proportional control. Pulse period length should be adjusted for the dynamic properties of the object and characteristics of the output device. It is recommended to use SSR transmitter for quick processes. Relay output is used for a contactor control in the slow-changing processes. Long pulse periods for quick-change processes may cause unnecessary oscillation. In theory, the shorter pulse period is, the better the control, however for the relay output a period should be as large, as possible to optimize lifespan of the relay.

Pulse period setting recommendations

Table 3

Output	Pulse period is	Load
	recommended >20s	5 A/230 VAC
electromagnetic transmitter	min. 10 s	or a contactor
	min. 5 s	2 A/230 VAC

8. Control

7.1. ON-OFF algorithm

When high accuracy of a temperature control is not required, especially for the high time constant and small delay, it is possible to use ON-OFF control with hysteresis. Disadvantage of this method is the occurrence of oscillations, even at small hysteresis values.

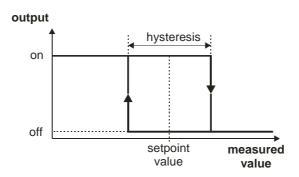


Fig. 13. Operation way of the heating type output for the ON-OFF control.

7.2. Innovative SMART PID algorithm

When high precision of the temperature control is necessary, it is recommended to use PID algorithm. Innovative SMART PID algorithm ensures increased precision in the extended range of the control object classes.

Tuning of the controller to object is achieved by automatically selected PID parameters using the self-tuning function or manual setting the value of the proportional element, integral element and derivative element.


7.2.1. Self-tuning

The controller has the function to select PID settings. In most cases these settings ensure an optimal control.

To begin the self-tuning, transit to the $\mathbf{t} \cup \mathbf{n} \mathbf{E}$ message (acc. to the fig. 10) and hold down the button \mathbf{L} during at least 2 sec. If the control algorithm is set on ON-OFF or the self-tuning function is locked, then the tune message $\mathbf{t} \cup \mathbf{n} \mathbf{E}$ is hidden.

For a correct realization of the self-tuning function, it is required to set the parameters **5**£.Ło and **5**Ł.Ho. The parameter **5**Ł.Lo should be set on the value corresponding to the measured value at the switched off control. For object temperature control, you can set 0°C. The parameter **5**Ł.Ho should be set on the value corresponding to the maximum measured value when the control is switched on the full power.

The flickering AT symbol informs about the activity of the self-tuning function. The duration of self-tuning depends on dynamic object properties and can last maximally 10 hours. During self-tuning or directly after it, over-regulations can occur and because of this, one must set a smaller set point if possible.

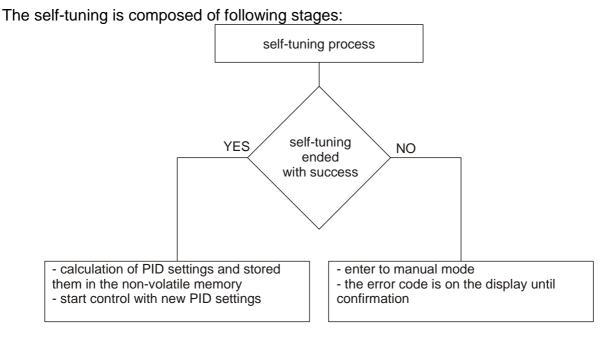

The self-tuning process will be stopped without counting PID settings, if a supply decay occurs or the button will be pressed. In this case, the control with current PID settings will be started.

If the self-tuning experiment does not end with success, then an error code will be displayed, acc. to the table 4.

Error codes for self-tuning function Table 4
--

	rer een tarmig ranetaen		
Error code	Reason	Procedure	
E 5.0 1	P or PD control was selected.	One must choose PI, PID control, i.e. the TI unit must be higher than zero.	
€5.02	The set point is incorrect.	Change temperature set point or the parameters 5 £. £ o , 5 £. # .	
E 5.0 3	The button ← was pressed.		
E 5.0 Y	The maximal self-tuning duration time has been exceeded.	Check, if the temperature sensor is correctly situated, if the set point value is not set too	
E 5.0 S	The waiting time of switching has been exceeded.	higher for the given object.	
€ 5.06	The input range limit has been exceeded.	Take note of the way to connect the sensor. Do not allow that the overflow results in exceeding of the input range limit.	
E 5.20	Very non-linear object, enabling to obtain correct values of PID parameters, or an interference has occurred.	Carry out the self-tuning again. If that does not help, choose PID parameters manually.	


7.2.2. Proceeding in case of a unsatisfactory PID control

It is recommended to choose PID parameters, changing the value in a twice higher or twice less. During the change, one must respect following principles.

- a) Free jump response:
 - decrease the proportional band,
 - decrease the integral and derivative time.
- b) Over-regulations
 - increase the proportional band,
 - increase the derivative time,
- c) Oscillations
 - increase the proportional band,
 - increase integral time,
 - decrease the derivative time,
- d) Instability
 - increase the integral time.

9. Alarms

The controller output can be configured as an alarm output. For this, set the parameter out as one of alarms. Available types of alarms are given on the figure 14.

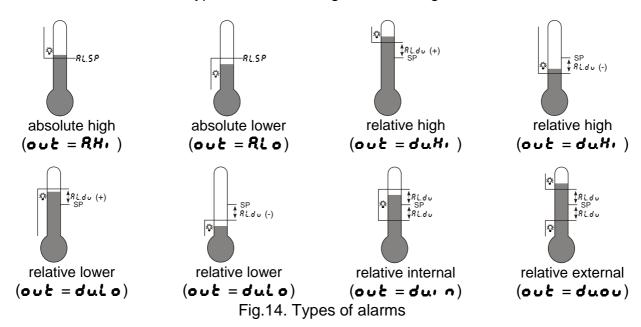

The set point for absolute alarms is the value defined by the parameter **RL.5P**, and for relative alarms, it is the deviation from the set point - the parameter **RL.6**. Alarm hysteresis, the zone around the set point in which the input state is not changed is defined by the **RL.HY** parameter.

10. Additional functions

10.1. Displaying the control signal

After pressing the button the value of the control signal (0...100%) is displayed on the display. On the first digit the h mark is displayed. Control signal can be displayed when the out parameter is set on 3.

10.2. Manual mode

The manual mode gives the possibility to identify, test the object, or control it after a sensor damage.

The entry to the manual mode follows after holding down the button during the control signal is display. The manual mode is signaled by the pulsation of the diode with the symbol . The controller interrupts the automatic control and begins the manual mode of the output. The control signal value is on the display, preceded by the symbol h.

For the ON-OFF control – the control signal can be set up by the buttons **▼** and **▲** at 0% or 100%.

For the PID control – the control signal can be set up by the buttons \checkmark and \checkmark at any optional value from the 0.0...100% range.

The exit to the normal work mode follows after pressing simultaneously the buttons and __ .

RE70-09 User's Manual 15

10.3. Defaults Settings

Defaults settings can be restored during the supply connection by holding down the buttons and till the moment when the inscription *FRbr* appears on the display.

11. RS-485 interface with MODBUS protocol

11.1. Introduction

RE70 controller is equipped with RS-485 serial interface with implemented MODBUS asynchronous communication protocol. The interface is designed for controller configuration prior to using it.

Summary of the RE70 controller serial interface:

device address: 1,
baud rate: 9600 bit/s,
operation modes: RTU,
information unit: 8N2,

data format: integer (16 bits)maximum response time: 500 ms,

maximum number of registers read/written in one command: 32.

RE70 controller uses following protocol functions:

Table 5

Code	Meaning	
03	-registers read	
06	register write	
16	n-registers write	
17	slave device identification	

11.2. Error codes

If the controller receives query with the transmission error or checksum error, then such query will be ignored. When a query with correct syntax and invalid values is found, the controller returns an error code.

Table 6 shows error codes and their meaning.

Error codes Table 6

code meaning		reason
01 illegal function f		function is not handled by the controller
02	illegal data address	register address out of range
03	illegal data value	register value out of range or register is readout only

11.3. Register map

In the controller, data are placed in 16-bit registers. The list of registers for write and readout is presented in the table 7. Operation "R-" – means the possibility of readout, and the operation "RW" means the possibility for readout and write.

Map of the registers from address 4000

Table 7

register address	marking	operati on	parameter range	description
uuur 000		OII		Command register
4000		-W	1	1 – revert to defaults settings (except for interface settings and defined programs)
4001		R-	100999	Program version number [x100]
4002		R-	13019999	Older 4 digits of the serial number
4003		R-	19999	Younger 4 digits of the serial number
4004		R-	00xFFFF	Controller status – description in the table 8
4005		R-	00xFFFF	Error status – description in the table 9
4006		R-	acc. to the table 10	Measured value PV
4007		R-	acc. to the table 10	Current set point SP
4008		R-	01000	Control signal [% x10]
4009	UNIT	RW	01	Unit 0 – degrees Celsius 1 – degrees Fahrenheit
4010	INPT	RW	08	Type of main input: 0 - thermoresistor Pt100 1 - thermoresistor Pt1000 2 - J type thermocouple 3 - T type thermocouple 4 - K type thermocouple 5 - S type thermocouple 6 - R type thermocouple 7 - B type thermocouple 8 - N type thermocouple
4011	T-LI	RW	01	Type of line 0 – 2-wire 1 – 3-wire
4012	DP	RW	01	Position of the decimal point of the main input 0 – without a decimal place 1 – 1 decimal place
4013	SHIF	RW	-10001000 [x10 °C] -18001800 [x10 °F]	Shift of the measured value of the main input
4014	OUT	RW	07	Output function 0 – no function 1 – control signal 2 – upper absolute alarm 3 – lower absolute alarm 4 – upper relative alarm 5 – lower relative alarm 6 – internal relative alarm 7 – external relative alarm
4015	ALG	RW	01	Control algorithm 0 – ON-OFF 1 – PID
4016	TYPE	RW	01	Type of control 0 – direct control – cooling 1 – reverse control – heating
4017	HY	RW	21000 [x10 °C] 21800 [x10 °F]	Hysteresis HY
4018	STLO	RW	acc. to the table 10	Lower threshold for self-tuning
4019 4020	STHI PB	RW RW	acc. to the table 10 15500 [x10 °C] 19900 [x10 °F]	Upper threshold for self-tuning Proportional band PB
4021	TI	RW	09999	Integral time constant TI [s]
4022	TD	RW	025000	Derivative time constant TD [s x10]
4023	Y0	RW	01000	Correction of control signal Y0 (for P or PD control) [% x10]
4024	TO	RW	5999	Pulse period of output [s x10]
	ALSP		acc. to the table 10	Set point for the absolute alarm [x10]

register address	marking	operati on	parameter range	description
4026	ALDV	RW	-18001800 [x10 °C] -36003600 [x10 °F]	Deviation from the set point of the relative alarm
4027	ALHY	RW	21000 [x10 °C] 21800 [x10 °F]	Hysteresis for the alarm
4028	SPL	RW	acc. to the table 10	Lower limitation of the fast set point change
4029	SPH	RW	acc. to the table 10	Upper limitation of the fast set point change
4030	SECU	RW	09999	Access code to the menu
4031	STFN	RW	01	Self-tuning function 0 – locked 1 – unlocked

Register 4002 – controller status

Table 8

bit	description
0-11	Reserved
12	Automatic/Manual mode: 0 – automatic, 1 – manual
13	State of alarm: 0 – active, 1 – inactive
14	Measured value beyond the range limits
15	Controller error – check the error register

Register 4003 – error register

Table 9

bit	description
0-14	Reserved
15	Input discalibrated

Input range limits

Table 10

mpat range infinte		1 4510 10			
sensor type	range				
School type	UNIT = °C [x10]	UNIT = °F [x10]			
Pt100	-20008500	-328015620			
Pt1000	-20008500	-328015620			
Fe-CuNi (J)	-50012000	-58021920			
Cu-CuNi (T)	-5004000	-5807520			
NiCr-NiAl (K)	-50013720	-58025016			
PtRh10-Pt (S)	017670	32032126			
PtRh13-Pt (R)	017670	32032126			
PtRh30-PtRh6 (B)	017670	32032126			
NiCrSi-NiSi (N)	-50013000	-58023720			

12. Error signaling

Character messages signaling the incorrect controller operation.

Table 11

Error code	Reason	Procedure
	Down overflow of the range limit or lack of RTD	Check, if input signal values are situated in the appropriate range – if yes, check if check if there is no short circuit in the thermoresistor or the thermocouple is connected inversely.
	Upper overflow of the range limit or break in the sensor circuit	Check, if input signal values are situated in the appropriate range – if yes, check if there is no break in the sensor circuit.
Er.Ad	Input discalibrated	Connect the controller supply again and if that is not effective, contact the nearest service shop.
E r.E E	Configuration parameters checksum error	Connect the controller supply again and if that is not effective, contact the nearest service shop.

13. Technical data

Input signals acc. to the table 12

Input signals and range limits for inputs

 ᇊ	h	۱.	4	2
1 71	()	le.	- 1	_

Sensor type	Standard	Designation	Range		
Pt100	EN 60751+A2:1997	Pt100	-200850 °C	-3281,562 °F	
Pt1000	EN 60751+A2:1997	Pt1000	-200850 °C	-3281,562 °F	
Fe-CuNi	EN 60584-1:1997	J	-501200 °C	-582,192 °F	
Cu-CuNi	EN 60584-1:1997	Т	-50400 °C	-58752 °F	
NiCr-NiAl	EN 60584-1:1997	K	-501372 °C	-582,501.6 °F	
PtRh10-Pt	EN 60584-1:1997	S	01767 °C	323,212.6 °F	
PtRh13-Pt	EN 60584-1:1997	R	01767 °C	323,212.6 °F	
PtRh30-PtRh6	EN 60584-1:1997	В	01767 °C ¹⁾	323212,6 °F ¹⁾	
NiCrSi-NiSi	EN 60584-1:1997	N	-501300 °C	-582,372 °F	

¹⁾ Intrinsic error is related to the range limits 200...1,767 °C (392...3,212.6 °F)

Basic error of real value measurement

0.3% for thermoresistance inputs

0.3% for thermoelectric inputs (0.5% – for B, R, S);

Measurement time 0.33 s

Detection of error in the measurement circuit:

thermocouple, Pt100 range limit exceeded

Types of outputs:

- relay output type SPDT (form C), max load: 5 A/230 V AC, max.

200,000 cycles for 5 A/230 V AC (resistive)

Way of output operation:

reverse for heatingdirect for cooling

Rated operating conditions:

supply voltage
 supply voltage frequency
 ambient temperature
 storage temperature
 230 VAC ±10%
 50/60 Hz
 ...23...50 °C
 -20...+70 °C

- relative air humidity < 85% (no condensation)

preheating time
 operating position
 any
 Power input
 4 VA
 Weight
 0.25 kg

Protection grade ensured by the housing acc. to EN 60529

from the frontal platefrom the terminal sideIP20

Additional errors in rated operating conditions caused by:

- compensation of reference junction temperature changes $\leq 2^{\circ}C$

- resistance change of thermoresistance

sensor line ≤ 50% intrinsic error value
- ambient temperature change ≤ 100% intrinsic error value /10 K

Safety requirements acc. to EN 61010-1 1)

circuit-to-circuit insulation
 installation category
 pollution grade
 maximum phase-to-earth operating voltage:

^{*)} Sensor line resistance <10 Ω /wire; the connection must use wires of identical diameter and length

- for supply circuit, output 300 V - for input circuits 50 V - altitude a.s.l. below 2000 m

Electromagnetic compatibility:

noise immunity, acc. to standard EN 61000-6-2
noise emission, acc. to standard EN 61000-6-4

14. Controller ordering code

The way of coding is given in the table 13.

Table 13 Versions and ordering

	3			
	RE70 controller	- XX	X	X
Version	standard	00		
	custom-made *	XX		
Language	Polish		Р	
version	English		Е	
	other *		Χ	
acceptance	without extra quality requirements			0
tests	with quality inspection certificate			1
	according to buyer's specification *			Χ

after agreeing with the manufacturer



LUMEL S.A.

ul. Słubicka 1, 65-127 Zielona Góra, Poland

Tel.: (48-68) 45 75 100 Fax: (48-68) 45 75 508 e-mail:lumel@lumel.com.pl http://www.lumel.com.pl

Export Department:

Tel.: (48-68) 45 75 302 Fax: (48-68) 32 54 091

e-mail: export@lumel.com.pl