

CATHODE RAY TUBE—ALL ELECTROSTATIC 3½" DIA.

Post Deflection Acceleration

For High Precision Instruments

GENERAL

The 31B81 is a flat screen Cathode Ray Tube with post-deflection acceleration. It is suitable for high precision instruments.

RATING

Heater Voltage	V_{h}	6.	3 V
Heater Current	l _h	0.	5 A
Maximum Final Anode Voltage	Va4(max)	8	k٧
Minimum Final Anode Voltage	Va4(min)	2	kΥ
Maximum Third Anode Voltage	Va3(max)	4	kΥ
Minimum Third Anode Voltage	Va3(min)	1	kΥ
Maximum Second Anode Voltage	V _{a2(max)}	2	kΥ
Maximum First Anode Voltage	Va1(max)	2.	5kV
Minimum First Anode Voltage	Va1(min)	1	k۷
Maximum Negative Grid Voltage	Vg(max)	-200	٧
Minimum Negative Grid Voltage (cathode hot)	V _{g(min)}	0*	٠ ٧
Maximum Positive Grid Voltage	6()		
(cathode cold)	$V_{g(max)}$	200	٧
Maximum X1 Plate/X2 Plate Voltage	V _{x1-x2(max)}	1	kΥ
Maximum Y1 Plate/Y2 Plate			
Voltage	Vy1-y2(max)	1	k۷
Maximum Heater/Cathode	V	150	v
Voltage	Vh-k(max)	130	٧
Maximum X Plate/Third Anode Resistance	R _{x-a} 3(max)	5	МΩ
Maximum Y Plate/Third	_	_	
Anode Resistance	Ry-a3(max)	5	МΩ
Maximum Grid/Cathode Resistance	P 17 3	9	мо
Minimum Heater/Cathode	Rg-k(max)		1.177
Resistance	rh-k(min)	2+	МΩ
Minimum Grid/Cathode	· 11*K(111111)	(
Resistance	rg-k(min)	10	МΩ

^{*} The Grid must not become positive with respect to cathode.

[†] Heater 100V negative to cathode.



CATHODE RAY TUBE—ALL ELECTROSTATIC 3½" DIA. Post Deflection Acceleration

For High Precision Instruments

INTER-ELECTRODE CAPACI	TANCES	(pF)	
Cathode/All other electrodes	ck-all		8
Grid/All other electrodes	cg-all		17
X1 Deflecting Plate/X2	•		
Deflecting Plate	cx1-x2		2.5
Y1 Deflecting Plate/Y2			_
Deflecting Plate	cy1-y2		3
X1 Deflecting Plate/All other			
electrodes except X2	cx1-all, l	ess x2	8
X2 Deflecting Plate/All other			_
electrodes except X1	cx2-all, l	ess x1	8
Y1 Deflecting Plate/All other		_	7.5
electrodes except Y2	cy1-all, l	ess y2	7.5
Y2 Deflecting Plate/All other			7.5
electrodes except Y1	cy2-all, i	ess y1	7.3
Y1 Deflecting Plate/X1 or X2 Deflecting Plate (approx.)	64.4.		0-1
	cy1-x1 o	r xz	0-1
Y2 Deflecting Plate/X1 or X2 Deflecting Plate (approx.)	cy2-x1 o		0.2
(4,6,000)	-72-210		_
CHARACTERISTICS			
Second Anode Voltage			
(focus anode)	V _{a2}	350	٧
Grid Bias Voltage for cut off at			
$V_{a1} = 1kV$	٧g	-35	٧
$V_{a1} = 2kV$	٧g	-70	٧
$V_{a1} = 2.5kV$	٧g	-87	٧
X Plate Sensitivity ($V_{a4} = V_{a3}$)	Sx	800	
, (, a + a - a - a - a - a - a - a - a - a -	^	$\frac{800}{V_{a3}}$ n	nm/V
Y Plate Sensitivity ($V_a4 = V_a3$)	Sy		
, (44 40)	,	V _{a3} n	nm/V
X Plate Sensitivity ($V_{a4} = 2V_{a3}$)	Sx		
, (44 40)	^	$\frac{\sqrt{23}}{\sqrt{23}}$ n	nm/V
Y Plate Sensitivity $(V_{a4} = 2V_{a3})$	Sy		
, ,	,	$\frac{\sqrt{3}}{\sqrt{3}}$ n	nm/V
Grid Voltage (Drive) at		- 20	
$l_{a4} = 25 \mu A$, $V_{a1} = 2kV$	٧g	<32	٧



CATHODE RAY TUBE—ALL ELECTROSTATIC 3½" DIA.

Post Deflection Acceleration

For High Precision Instruments

The undeflected spot will fall within a circle of 5 mm radius from the centre of the tube face.

The Plate sensitivity for a deflection of less than 75% of the useful scan will not differ from that for 25% by more than 2%.

The edges of a raster with mean dimensions which are 75% of the useful scan will not deviate from the mean rectangle by more than $2\frac{1}{5}\%$.

The minimum useful screen area is a circle of 3.7 cm radius. Orthogonality of deflection axes is $\pm 1\%$.

DEFLECTION DISTORTION

In any Cathode Ray Tube using a simple post-deflection accelerator, the application of the accelerating potential results in deflection distortion, which becomes more pronounced as the ratio of V_{a4}/V_{a3} is increased.

It is recommended that for work involving the measurement of relative deflection amplitudes directly on the tube face this ratio should not exceed 2:1.

ORIENTATION

Looking at the screen with the spigot key upward, a positive potential applied to X1 will deflect the spot to the left and a positive potential applied to Y1 will deflect the spot upward.

MAGNETIC SHIELDING

The magnetic shield should be of high permeability material, of a thickness determined by the magnetic field at the tube position. The shield should be earthed. To obtain optimum results equipment containing Cathode Ray Tubes should always be designed to minimise the magnetic field around the tubes, as magnetic shielding can never be completely effective. In addition to the more obvious deflection effects of alternating fields, steady magnetic fields from smoothing chokes, magnetised steel components, etc., can produce spot distortion or low gun efficiency.

December, 1961



CATHODE RAY TUBE—ALL ELECTROSTATIC 3½" DIA.

Post Deflection Acceleration

For High Precision Instruments

DIMENSIONS

Maximum Overall Length	360mm
Maximum Screen Diameter	92mm
Maximum Neck Diameter	52mm

MOUNTING

The tube should not be supported by the base alone, but should preferably be held in a rubber-lined clamping ring at the screen end together with a similar clamp round the magnetic screen close to the base.

The socket should have sufficient freedom of movement to accommodate the tube overall length tolerance and a small amount of lateral float to ensure good pin contact without straining the base.

SCREEN PHOSPHORS

Туре	Colour	Persistence	Application
T1	Green	Medium	Visual
T3	Blue Actinic	Short	Photographic
T4	White	Medium Short	Photographic Visual/ Photographic
T6	Yellow Afterglow	Long	Visual
T7	Orange Afterglow	Very Long	Visual

TYPICAL OPERATION

Final Anode Voltage	V _a 4	4 kV
Third Anode Voltage	V _a 3	2 kV
Second Anode Voltage	V _{a2}	350 V
First Anode Voltage	V_{a1}^{-}	2 kV
Grid Voltage	٧ _ø .	60 V
Third Anode Current	Vg Ia3	1 μΑ
Final Anode Current	** -	•
(=1 screen)	124	2 μΑ

The Line width at I screen = 0.5μ A is 0.3mm measured on a circle 50mm diameter.

December, 1961

ADVANCE DATA, Page 4



CATHODE RAY TUBE—ALL ELECTROSTATIC 3½" DIA. Post Deflection Acceleration For High Precision Instruments

SIDE CONTACT—CT8

BASE—B14A (Diheptal)



Viewed from free end of pins.

CONNECTIONS


Pin 1	Heater	h
Pin 2	Cathode	k
Pin 3	Grid	g
Pin 4	First Anode	a1
Pin 5	Second Anode	a2
Pin 6	No pin	NP
Pin 7	Deflector Plate Y1	Y1
Pin 8	Deflector Plate Y2	Y2
Pin 9	Third Anode	а3
Pin 10	Deflector Plate X2	x2
Pin 11	Deflector Plate X1	x1
Pin 12	No Connection	NC
Pin 13	No Pin	NP
Pin 14	Heater	h
Сар	Final Anode	a4



CATHODE RAY TUBE—ALL ELECTROSTATIC 3½" DIA.

Post Deflection Acceleration

For High Precision Instruments

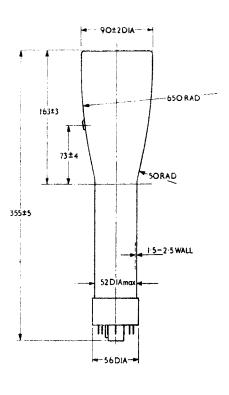

All Dimensions in mm.

Electronic Components Division Tel.: GERrard 9797