

INSTRUCTION MANUAL
MODEL 188-S-1257
**4 MHz SWEEP/
FUNCTION GENERATOR**



WAVETEK

TECHNICAL ORDER NUMBER 33A1-8-1061-1

INSTRUCTION MANUAL
MODEL 188-S-1257
**4 MHz SWEEP/
FUNCTION GENERATOR**

© 1980 Wavetek

THIS DOCUMENT CONTAINS INFORMATION PROPRIETARY TO WAVETEK AND IS SOLELY FOR INSTRUMENT OPERATION AND MAINTENANCE. THE INFORMATION IN THIS DOCUMENT MAY NOT BE DUPLICATED IN ANY MANNER WITHOUT THE PRIOR APPROVAL IN WRITING FROM WAVETEK.

DISTRIBUTION STATEMENT - Distribution authorized to U.S. Government agencies only for administrative or operational use, (effective date is date of this manual). Other requests for this document must be referred to San Antonio ALC/MMEDT, Kelly AFB TX 78241-5000.

THIS MATERIAL MAY BE REPRODUCED BY OR FOR THE U.S. GOVERNMENT PURSUANT TO THE COPYRIGHT LICENSE UNDER THE (DFAR) CLAUSE AT 52.227-7013 (15 MAY 1987).

HANDLING AND DESTRUCTION NOTICE - Comply with distribution statement and destroy by any method that will prevent disclosure of contents or reconstruction of the document.

WAVETEK®

WAVETEK SAN DIEGO, INC.

9045 Balboa Ave., San Diego, CA 92123
P O Box 85265, San Diego, CA 92138
Tel 619/279-2200 TWX 910/335-2007

Manual Revision: 1/91
Manual Part Number: 1006-00-0581

WAVETEK is a trademark of
Wavetek Wandel Gollerann, Inc.
(WWG) and is used by Fluke under a
transitional license agreement. Fluke
is not affiliated with WWG.

WARRANTY

Wavetek warrants that all products manufactured by Wavetek conform to published Wavetek specifications and are free from defects in materials and workmanship for a period of one (1) year from the date of delivery when used under normal operating conditions and within the service conditions for which they were furnished.

The obligation of Wavetek arising from a Warranty claim shall be limited to repairing, or at its option, replacing without charge, any product which in Wavetek's sole opinion proves to be defective within the scope of the Warranty. In the event Wavetek is not able to modify, repair or replace non-conforming defective parts or components to a condition as warranted within a reasonable time after receipt thereof, Buyers shall be credited for their value at the original purchase price.

Wavetek must be notified in writing of the defect or nonconformity within the Warranty period and the affected product returned to Wavetek's factory or to an authorized service center within (30) days after discovery of such defect or nonconformity.

For product warranties requiring return to Wavetek, products must be returned to a service facility designated by Wavetek. Buyer shall prepay shipping charges, taxes, duties and insurance for products returned to Wavetek for warranty service. Except for products returned to Buyer from another country, Wavetek shall pay for return of products to Buyer.

Wavetek shall have no responsibility hereunder for any defect or damage caused by improper storage, improper installation, unauthorized modification, misuse, neglect, inadequate maintenance, accident or for any product which has been repaired or altered by anyone other than Wavetek or its authorized representative and not in accordance with instructions furnished by Wavetek.

Exclusion of Other Warranties

The Warranty described above is Buyer's sole and exclusive remedy and no other warranty, whether written or oral, is expressed or implied. Wavetek specifically disclaims the implied warranties of merchantability and fitness for a particular purpose. No statement, representation, agreement, or understanding, oral or written, made by an agent, distributor, representative, or employee of Wavetek, which is not contained in the foregoing Warranty will be binding upon Wavetek, unless made in writing and executed by an authorized Wavetek employee. Under no circumstances shall Wavetek be liable for any direct, indirect, special, incidental, or consequential damages, expenses, losses or delays (including loss of profits) based on contract, tort, or any other legal theory.

CONTENTS

SECTION 1 GENERAL DESCRIPTION

1.1 THE MODEL 188.....	1-1
1.2 SPECIFICATIONS.....	1-1
1.2.1 Versatility.....	1-1
1.2.2 Frequency Precision.....	1-2
1.2.3 Amplitude Precision.....	1-2
1.2.4 Waveform Characteristics.....	1-2
1.2.5 General.....	1-2

SECTION 2 INSTALLATION

2.1 MECHANICAL INSTALLATION.....	2-1
2.2 ELECTRICAL INSTALLATION.....	2-1
2.2.1 Power Connection.....	2-1
2.2.2 Signal Connections.....	2-1
2.3 ELECTRICAL ACCEPTANCE CHECK.....	2-1

SECTION 3 OPERATION

3.1 CONTROLS AND CONNECTIONS.....	3-1
3.2 OPERATION.....	3-2
3.2.1 Signal Termination.....	3-2
3.2.2 Manual Function Generator Operation.....	3-3
3.2.3 Voltage Controlled Function Generator Operation.....	3-3
3.2.4 Sweep Generator Operation.....	3-4
3.2.5 Waveforms.....	3-5

SECTION 4 CIRCUIT DESCRIPTION

SECTION 5 ALIGNMENT

5.1 FACTORY REPAIR.....	5-1
5.2 REQUIRED TEST EQUIPMENT.....	5-1
5.3 REMOVING GENERATOR COVERS.....	5-1
5.4 ALIGNMENT.....	5-1

SECTION 6 TROUBLESHOOTING

6.1 FACTORY REPAIR.....	6-1
6.2 TROUBLESHOOTING TABLES.....	6-1
6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS.....	6-1
6.4 GENERAL INSTRUCTIONS.....	6-2

SECTION 7 PARTS AND SCHEMATICS

7.1 DRAWINGS.....	7-1
7.2 ORDERING PARTS.....	7-1
7.3 ERRATA.....	7-1

SAFETY FIRST



Protect yourself. Follow these precautions:

- Don't touch the outputs of the instrument or any exposed test wiring carrying the output signals. This instrument can generate hazardous voltages and currents.
- Don't bypass the power cord's ground lead with two-wire extension cords or plug adaptors.
- Don't disconnect the green and yellow safety-earth-ground wire that connects the ground lug of the power receptacle to the chassis ground terminal (marked with \oplus or \triangle).
- Don't hold your eyes extremely close to an rf output for a long time. The normally nonhazardous low-power rf energy generated by the instrument could possibly cause eye injury.
- Don't plug in the power cord until directed to by the installation instructions.
- Don't repair the instrument unless you are a qualified electronics technician and know how to work with hazardous voltages.
- Pay attention to the **WARNING** statements. They point out situations that can cause injury or death.
- Pay attention to the **CAUTION** statements. They point out situations that can cause equipment damage.

1

SECTION

GENERAL DESCRIPTION

1.1 THE MODEL 188

The Wavetek Model 188, 4 MHz Sweep/Function Generator, is a precision source of sine, triangle and square waveforms plus dc voltage. All waveforms are front panel variable from 4 mHz to 4 MHz and can be internally or externally modulated. Frequencies are variable linearly or logarithmically within a frequency range. When used as a sweep generator, an internal ramp generator provides a recurring sweep over a 1000:1 (linear) frequency range or 10,000:1 (logarithmic) frequency range. Output can be continuous or the generator can be triggered or gated by an external signal or a front panel switch. Amplitude of the waveforms is variable from 10V peak-to-peak into 50 Ω down to 300mV peak-to-peak. DC reference of the waveform can be offset positively or negatively.

The selectable waveform outputs are a 50 Ω unbalanced and a 600 Ω balanced at 20V peak-to-peak maximum. Both outputs may be varied over a 30 dB range. Auxiliary outputs are a TTL level sync, a 600 Ω sweep ramp and a 600 Ω generator control voltage signal whose level is proportional to the main generator frequency.

1.2 SPECIFICATIONS

1.2.1 Versatility

Waveforms

Sine \sim , triangle ∇ , square \square , TTL pulse \square and dc.

Operational Modes

Continuous: Generator runs continuously at selected frequency.

Triggered: Generator is quiescent until triggered by external signal or manual trigger, then generates one complete waveform cycle at selected frequency.

Gated: As triggered mode, except output continues for duration of gate signal. Last waveform started is completed.

Sweep: An internal ramp generator will sweep the main generator from a lower, start frequency to a higher stop frequency, linearly (3 decades) or logarithmically (4 decades).

Sweep Stop: Frequency switches to high sweep limit. Used to set high frequency limit.

Frequency Range

0.004 Hz linear (0.0004 Hz log) to 4 MHz in 7 overlapping decade ranges:

$\times 1$	0.004 (0.0004) to 4 Hz
$\times 10$	0.04 (0.004) to 40 Hz
$\times 100$	0.4 (0.04) to 400 Hz
$\times 1K$	4 (0.4) Hz to 4 kHz
$\times 10K$	40 (4) Hz to 40 kHz
$\times 100K$	400 (40) Hz to 400 kHz
$\times 1M$	4 (0.4) kHz to 4 MHz

Function Output

\sim , ∇ , \square selectable and variable to 20 Vp-p unbalanced (10Vp-p into 50 Ω) output, and 20Vp-p balanced (10 Vp-p into 600 Ω) outputs. Both outputs varied with a 30 dB vernier. Peak output current is 100 mA maximum (50 Ω OUT) into 50 Ω (200 mA peak into a short circuit). Source impedance is 50 Ω for 50 Ω OUT and 600 Ω for -BAL and +BAL connectors.

DC Offset and DC Output

Waveform offset and dc output selectable and variable through 50 Ω OUT and balanced outputs. DC output selectable by not selecting a waveform function. 50 Ω OUT output is $\pm 10V$ max ($\pm 5V$ into 50 Ω) as offset or Vdc output. Signal-peak plus offset limited to $\pm 10 V$ ($\pm 5 V$ into 50 Ω). Balanced outputs are $\pm 10V$ max ($\pm 5V$ into 600 Ω) as offset or Vdc output. Signal-peak plus offset limited to $\pm 10V$ ($\pm 5V$ into 600 Ω).

TTL Sync Output

TTL pulse (50% duty cycle) at generator frequency. Drives up to 20 TTL loads.

GCV — Generator Control Voltage

0 to 4.0V open circuit output from 600 Ω source impedance. Proportional to frequency of main generator. For use as a horizontal drive signal.

VCG — Voltage Controlled Generator

Up to 1000:1 frequency change (linear mode) or up to 10,000:1 change (logarithmic mode) with external 0 to $\pm 4V$ signal. Upper and lower frequencies limited to maximum and minimum of selected range.

Slew Rate: 2% of range per μs (linear); 0 to 100% of range in 20 ms (logarithmic).

Linearity: $\pm 0.5\%$ through $\times 100K$ range; $\pm 2\%$ on $\times 1M$ range.

Input Impedance: 2 k Ω .

Sweep

Main generator is frequency modulated by internal sweep generator. Main generator frequency repeatedly rises from frequency set by dial and range button to frequency set by sweep stop knob.

Sweep Mode: Linear (3 decades max) or logarithmic (4 decades max).

Sweep Rate: 30 ms to 1 min. (nominal) continuously adjustable.

Sweep Width: Up to 1:1000 (linear) or 1:10,000 (logarithmic) continuously adjustable.

Sweep Output

Ramp waveform output with 4V peak into open circuit. Source impedance 600 Ω . For use as a horizontal drive signal.

Trigger and Gate

Input: TTL compatible levels.

Pulse Width: 50 ns minimum.

Repetition Rate: 4 MHz maximum.

1.2.2 Frequency Precision

Dial Accuracy

$\pm 5\%$ of full scale.

Time Symmetry

Square wave variation from 0.2 to 4.0 on dial less than: $\pm 1\%$ to 100 kHz; $\pm 5\%$ to 4 MHz.

1.2.3 Amplitude Precision

Sine variation with frequency less than: ± 0.2 dB on all ranges through X100K, referenced to 1 kHz: ± 1.0 dB to 4 MHz.

1.2.4 Waveform Characteristics

Sine Distortion

Less than: 0.5% on $\times 1K$ and $\times 10K$ ranges; 1% on $\times 1$, $\times 10$, $\times 100$ and $\times 100K$ ranges. All harmonics 25 dB below fundamental on $\times 1M$ range.

Triangle Linearity

Greater than 99% to 200 kHz.

Square Wave Rise and Fall Time

At 50 Ω OUT, less than 50 ns for 10 Vp-p output into 50 Ω termination.

1.2.5 General

Environmental

Specifications apply at 23°C $\pm 5^\circ C$. Instrument will operate from 0°C to 50°C ambient temperatures.

Dimensions

36.2 cm (14 1/4 in.) wide; 16.5 cm (6 1/2 in.) high; 40.6 (16 in.) deep.

Weight

6.4 kg (14 lb) net; 11.4 kg (25 lb) shipping.

Power

90 to 128V or 198 to 256V (specify); 48 to 66 Hz; less than 15 watts.

NOTE

All specifications apply for dial between 0.2 and 4.0; amplitude at 10 Vp-p from 50 Ω OUT into 50 Ω termination.

SECTION 2

INSTALLATION

2.1 MECHANICAL INSTALLATION

After unpacking the instrument, visually inspect all external parts for possible damage to connectors, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the unit. The shipping container and packing material should be saved in case reshipment is required.

2.2 ELECTRICAL INSTALLATION

2.2.1 Power Connection

WARNING

To preclude injury or death due to shock, the third wire earth ground must be continuous to the facility power outlet. Before connecting to the facility power outlet, examine extension cords, auto-transformers, etc., between the instrument and the facility power outlet for a continuous earth ground path. The earth ground path can be identified at the plug on the instrument power cord; of the three terminals, the earth ground terminal is the nonmatching shape, usually cylindrical.

CAUTION

To prevent damage to the instrument, check for proper match of line and instrument voltage and proper fuse type and rating.

NOTE

Unless otherwise specified at the time of purchase, this instrument was shipped from the factory for operation on a 90 to

128 Vac line supply and with a 1/4 amp slow blow fuse. Instruments configured for 180 to 256 Vac have a 1/8 amp slow blow fuse. Select the appropriate fuse and 115 or 230 switch position at the rear panel when changing power sources.

2.2.2 Signal Connections

Use 3 foot RG58U 50 Ω shielded cables equipped with BNC connectors to distribute all input and output signals.

2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure is a general verification of generator operation. Should a malfunction be found, refer to the warranty in the front of this manual.

A two channel oscilloscope, four 3 foot 50 Ω coax cables with BNC connectors, a coax tee connector and an additional function generator are required for this procedure.

Preset the generator front panel controls as follows:

Control	Position
Dial	2.0
MODE	CONT (released)
FUNCTION	\square
DC OFFSET	OFF (ccw)
AMPLITUDE	MAX (cw)
FREQUENCY MULTIPLIER	$\times 1K$
SWEEP	CONT (released)

Set up the oscilloscope, Model 188 and external function generator as shown in figure 2-1 and perform the steps in table 2-1.

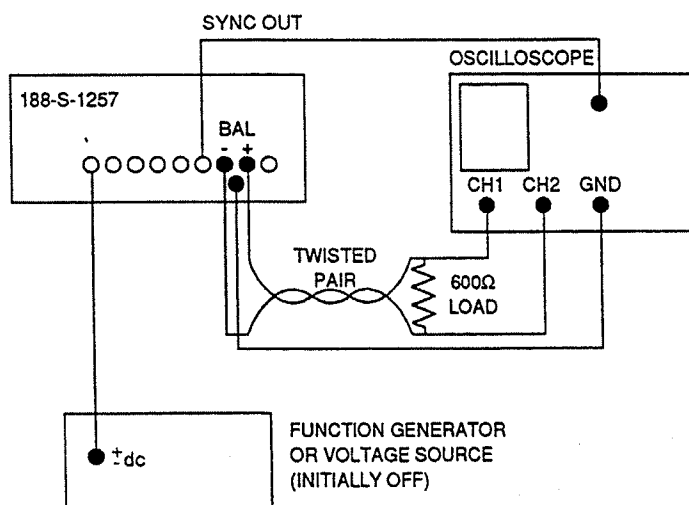


Figure 2-1. First Setup

Table 2-1. Initial Checkout

Step	Control	Position/Operation	Observation
1	POWER	ON	$\pm 10V$ square wave on CH1 and CH2. Return to CH1 only.
2	Dial	Rotate in both directions. Return to 2.0.	Rotation ccw increases frequency of \square ; rotation cw decreases frequency.
3	FREQUENCY MULTIPLIER	Press each switch sequentially; return to $\times 1K$.	Frequency increases in decade steps, left to right.
4	AMPLITUDE	Rotate ccw.	Amplitude decreases.
5	DC OFFSET	Rotate cw. Return to OFF.	Output immediately offset negative, then moves positive. OFF return it to original level.
6	AMPLITUDE	Rotate cw.	Square returns to original amplitude.
7	Function Generator or DC Voltage Source	Vary input dc voltage; then disconnect VCG IN input.	Frequency increases with positive voltage and decreases with negative voltage.
8	FUNCTION	Press \sim , \square , \sim .	Observe \sim , \square , \sim waveforms.
9	MODE	Gate (CONT depressed, TRIG/GATE released).	A dc level near zero volts (except \square function).
10	MANUAL TRIGGER	Press and hold.	Continuous \sim .

Table 2-1. Initial Checkout (Continued)

Step	Control	Position/Operation	Observation
<i>Set up trigger source as shown in figure 2-2. Set trigger source for 100 Hz TTL signal.</i>			
11	---	---	^ gated on during positive portion of TTL signal on CH2.
12	TRIG/GATE	Trigger (depressed)	One cycle per trigger cycle.
13	MODE	Main generator continuous (CONT released)	Setup connectors as shown in figure 2-3. Sync scope on channel 2 input.
14	Dial	Full cw	
15	SWEEP Controls	Linear sweep (CONT depressed, SWP/STOP depressed, LOG/LIN extended, STOP full cw, TIME centered)	Output varies from low frequency to high frequency
16	LIN/LOG Button	Press	Logarithmic distributed sweep when compared to step 15 linear sweep.

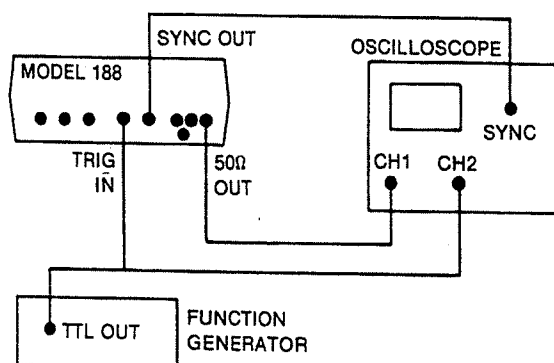


Figure 2-2. Second Setup

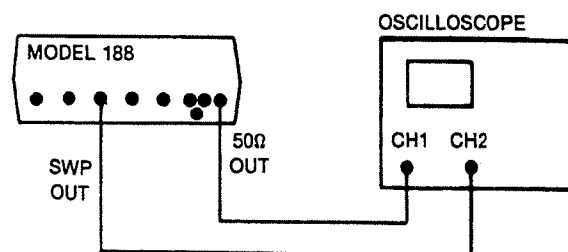


Figure 2-3. Third Setup

SECTION 3

OPERATION

3.1 CONTROLS AND CONNECTIONS

The generator front panel controls and connectors are shown in figure 3-1 and keyed to the following descriptions.

- 1 **Frequency Dial** — Settings under the dial index mark summed with **23** and multiplied by **4** determine the output signal frequency and the sweep start frequency in sweep mode. The dial is engraved with both linear and logarithmic scales: outer scale linear and inner scale logarithmic.
- 2 **POWER Button** — Turns generator ON and OFF.
- 3 **STOP Knob** — Sets the upper frequency limit when **CONT 5** is depressed and **SWP/STOP 6** is extended.
- 4 **FREQUENCY MULTIPLIER Controls** — Selects one of seven frequency multipliers for dial 1 setting.
- 5 **CONT Button** — Selects sweep submode to main generator's continuous mode. Extended is continuous (nonsweep) mode while depressed is sweep mode. Sweep is from a low frequency set by 1 to a high frequency set by 3. Main generator mode control 8 must be in continuous mode (extended).
- 6 **SWP/STOP Button** — When button is depressed (and 5 depressed and 8 extended) selects repetitive sweep of the main generator frequency. When button is extended, the frequency is stopped at the upper sweep limit with upper frequency being set by STOP control 3.
- 7 **LIN/LOG Button** — Selects linear or logarithmic frequency distribution of sweep,

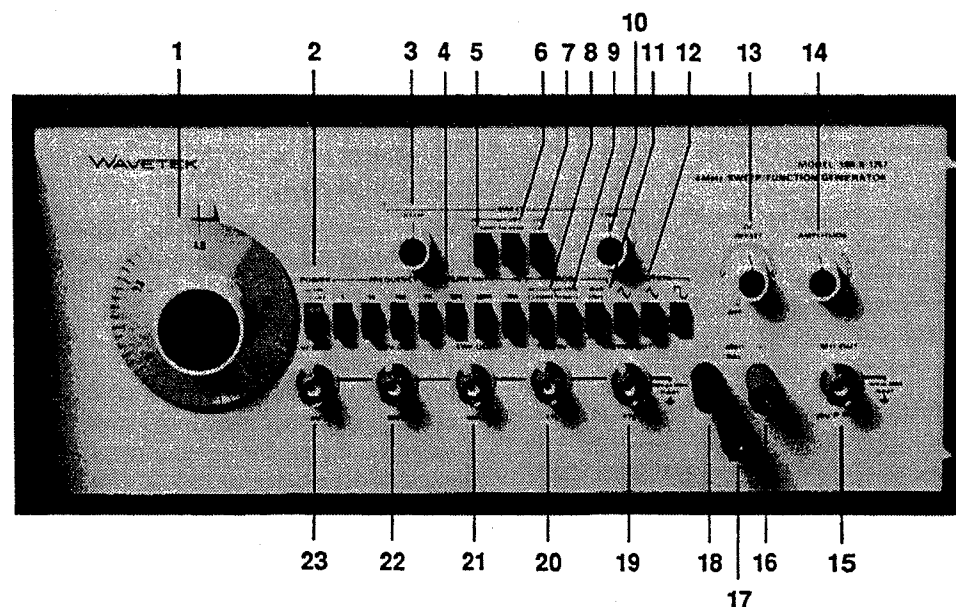


Figure 3-1. Controls and Connectors

VCG and main dial within a frequency range. Linear operation is selected when the button is extended. Logarithmic operation is selected when the button is depressed.

- 8, 9 Generator MODE Controls** — Selects one of the following three modes:

CONT — **8** released. Continuous output at 50Ω OUT **15** and **16** and SYNC OUT (TTL) **19** connectors.

TRIG — **8** and **9** pressed. DC level output until generator triggered by the MAN TRIG **11** or with a signal at the TRIG IN connector **18**. When triggered, the generator output is one cycle of waveform followed by a dc level.

GATE — **8** pressed and **9** released. As for TRIG except the output is continuous for the duration of the manual or external trigger signal. The last cycle started is always completed.

- 10 TIME Knob** — Sets the sweep time by controlling the period of the sweep ramp generator.
- 11 Manual Trigger Button** — Triggers or gates the output signals when generator mode is TRIG or GATE (**8** pressed). In trigger mode, one waveform cycle is output when the button is pushed. In gate mode, waveform cycles are continuously output as long as the button is held in.
- 12 FUNCTION Selector** — Selects one of three waveforms or when all three buttons are released, a dc level.
- 13 DC OFFSET Control** — Offsets the 50Ω OUT waveforms or gives dc levels from -10V to +10V (-5V to +5V into 50Ω) at **15** and from -10V to +10V (-5V to +5V into 600Ω) at **16** and **18**. An OFF position ensures no offset.
- 14 AMPLITUDE Control** — Ccw rotation reduces waveform amplitudes at **15** and **16** by 30 dB. DC and offset voltages are not affected by this control.
- 15 50Ω OUT Connector** — The main output of the generator at the function selected. Maximum 20 Vp-p (10 Vp-p into 50Ω) with 30 dB continuous amplitude control. 50Ω source impedance.

16/18 600Ω +BAL/-BAL Output Connectors — Outputs the function selected. Maximum 20 Vp-p (10 Vp-p into 600Ω) with 30 dB continuous amplitude control. 600Ω source impedance.

- 17 CT Connector** — Ground connection for 600Ω +BAL and -BAL output connectors.
- 19 TTL OUT Connector** — A TTL square for each cycle of the generator. To be used for synchronization or as a TTL signal capable of driving 20 TTL loads.
- 20 TRIG IN Connector** — Accepts a TTL signal to trigger or gate the generator. Triggers on the rising (low to high) transition and gates during the positive (high) portion of the triggering signal.
- 21 SWP OUT Connector** — Supplies a ramp waveform with an approximate 4V peak into an open circuit. For use as a horizontal drive signal. Source impedance is 600Ω.
- 22 GCV OUT Connector** — Provides a 0 to 4V open circuit output proportional to the frequency of the main generator. For use as a horizontal drive signal. Source impedance is 600Ω.
- 23 VCG IN Connector** — Accepts ac or dc voltages to proportionately control frequency within the range determined by the FREQUENCY MULTIPLIER **4**. Positive voltage increases the frequency set by the dial **1**; negative voltage decreases the frequency. The VCG IN will not drive the generator frequency beyond the normal dial limits of a range. Input impedance is 2 kΩ.

3.2 OPERATION

Perform the initial checkout in Section 2 for the feel of the instrument. Any questions concerning individual controls and connectors may be answered in paragraph 3.1.

3.2.1 Signal Termination

Proper signal termination, or loading, of the generator connectors is necessary for its specified operation. For example, the proper termination of the 50Ω OUT connector is shown in figure 3-2 and the proper termination of the +BAL/-BAL OUT connectors is shown in figure 3-3. Placing the terminator in parallel with a higher impedance, matches the receiving instrument input impedance to the coax characteristic and generator output impedance, thereby minimizing signal reflection or power loss on the line due to impedance mismatch.

The input and output impedances of the generator connectors are listed below.

Connector	Impedance
50Ω OUT	50Ω
600Ω +BAL/-BAL	600Ω
SYNC OUT (TTL)	*
TRIG IN	*
VCG IN	2 kΩ
SWP OUT	600Ω
GCV OUT	600Ω

*The TTL OUT connector is diode protected and can drive up to 20 Transistor-Transistor-Logic (TTL) loads (low level between 0V and 0.4V, and high level between 2.4V and 5V). It should not be connected to resistive load less than 600Ω. The TRIG IN connector accepts TTL logic levels, is diode protected, and requires 500 μA drive from a high level output.

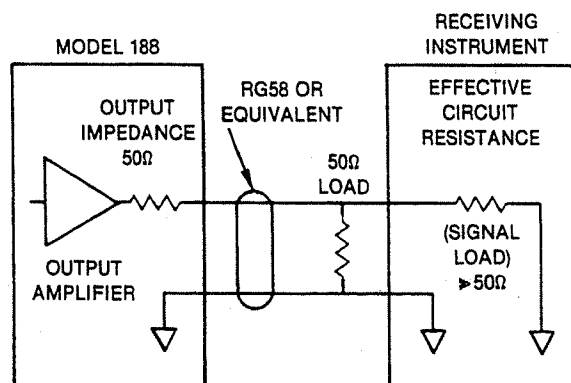


Figure 3-2. 50Ω OUT Signal Termination

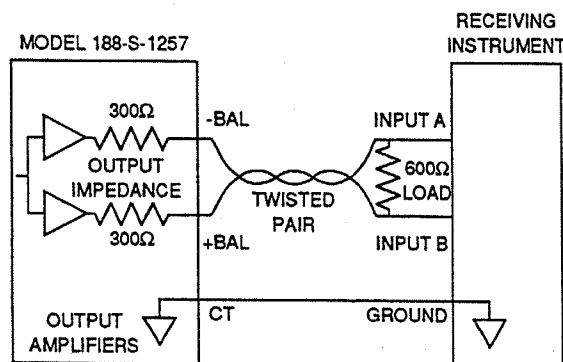


Figure 3-3. Balanced Output Signal Termination

3.2.2 Manual Function Generator Operation

For basic operation, select the waveform frequency and amplitude. The following steps demonstrate manual control of the function generator. (Bold numbers are keyed to figure 3-1.)

Step	Control/Connector	Setting
1	50Ω OUT 15 600Ω BAL 16/18	Connect circuit to either output (refer to paragraph 3.2.1).
2	FREQUENCY MULTIPLIER 4	Set to desired range of frequency.
3	Frequency Dial 1	Set to desired frequency within the range.
4	SWEEP's CONT 5	Extended.
5	FUNCTION 12	Set to desired waveform.
6	DC OFFSET 13	Set as desired. Limit waveform amplitude to prevent clipping (see figure 3-4).
7	AMPLITUDE 14	Set for desired amplitude.

3.2.3 Voltage Controlled Function Generator Operation

Operation as a voltage controlled function generator (VCG) is as for a manually controlled function generator, only the frequency within a particular range is additionally controlled by an external voltage ($\pm 4V$ excursions) injected at the VCG IN connector. Perform the steps given in paragraph 3.2.2, only set the frequency dial to determine a reference from which the frequency is to be voltage controlled:

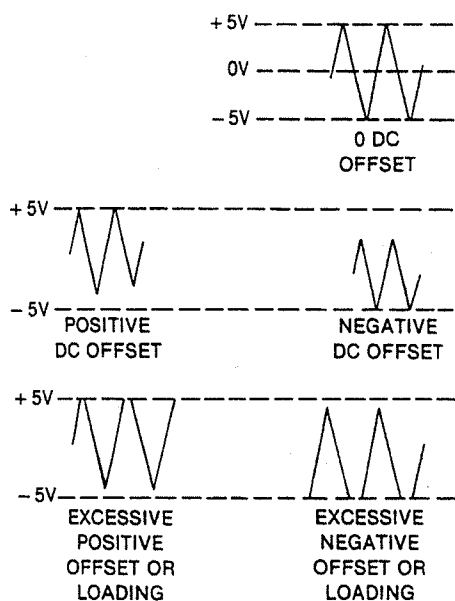


Figure 3-4. DC OFFSET Control

1. For frequency control with positive dc inputs at VCG IN, set the dial for a lower frequency limit.
2. For frequency control with negative dc inputs at VCG IN, set the dial for an upper frequency limit.
3. For modulation with an ac input at VCG IN, set the dial at the desired center frequency. Do not exceed the limits of the selected frequency range.

Figure 3-5 is a nomograph with examples of dial and voltage effects. Example 1 shows that with 0V VCG input, frequency is determined by the main dial setting, 2 (linear mode) or .04 (logarithmic mode) in this example. Example 2 shows that with a positive VCG input, output frequency is increased. Example 3 shows that with a negative VCG input, output frequency is decreased. (Note that the Output Frequency Factor column value must be multiplied by a frequency range multiplier to give the actual output frequency.)

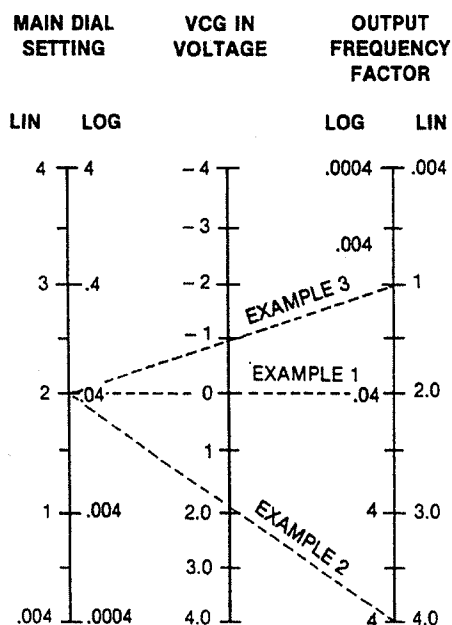


Figure 3-5. VCG Voltage-to-Frequency Nomograph

NOTE

Nonlinear operation may result when the VCG input voltage is excessive; that is, when the attempted generator frequency exceeds the range limits. The upper limit is four times the multiplier setting, and the lower limit is 1/1000th (linear) or 1/10,000 (logarithmic) of the upper limit.

The up to 1000:1 (linear) or 10,000:1 (logarithmic) VCG sweep of the generator frequencies available in each range results from a 4V excursion at the VCG IN connector. With the frequency dial set to 4.0, excursions between -4V and 0V at VCG IN provide the up to 1000:1 (lin) or 10,000:1 (log) frequency sweep. With the dial set to .004 (linear) or .0004 (logarithmic), excursions between 0V and +4V at the VCG IN provide up to 1000:1 (linear) or 10,000:1 (logarithmic) sweep within the set frequency range.

3.2.4 Sweep Generator Operation

Operation as a sweep generator is similar to manually controlled generator operation except the main generator can be repetitively swept between two selected frequencies either linearly or logarithmically at a selected sweep rate. The relationship of internal ramp and main generator is shown in figure 3-6.

The following steps describe the sweep operation setup.

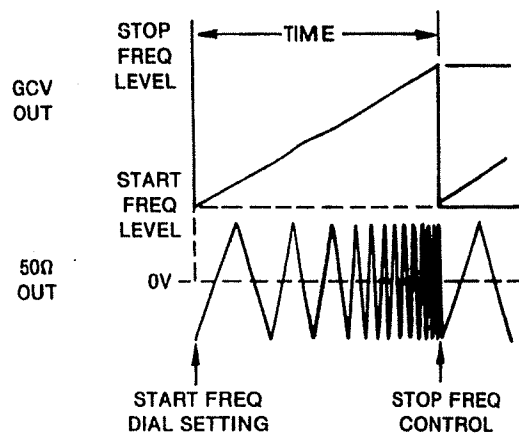


Figure 3-6. Effect of Sweep Time and Width on Output Frequency

Step	Control	Setting
1	MODE: CONT 8	Press to release. (Continuous mode of main generator is necessary for sweep.)
2	Frequency dial 1	Select sweep start frequency.
3	SWEEP's CONT 5	Depressed. (Selects sweep submode of main generator's continuous operation.)

Step	Control	Setting
4	SWP/STOP 6	Press to release. (Extended allows setting of stop frequency.)
5	STOP 3	Select the stop frequency. (The stop frequency will always be higher than the start frequency.)
6	Time 10	Sets the internal sweep rate.

3.2.5 Waveforms

Waveform timing for each mode of operation is shown in figure 3-7.

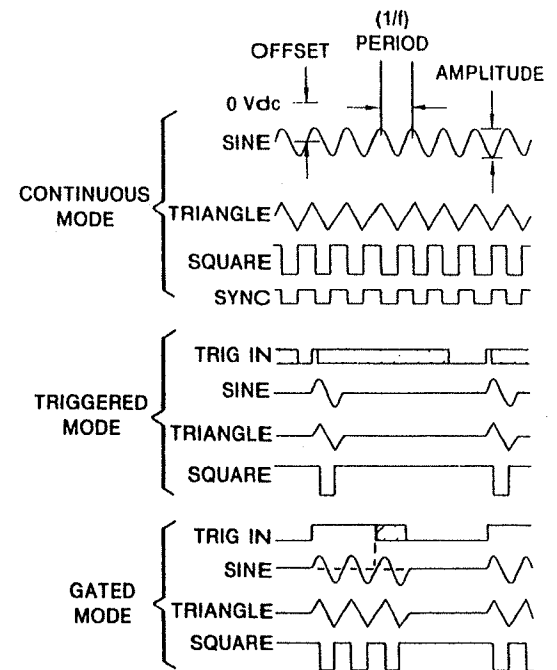


Figure 3-7. Waveform Characteristics

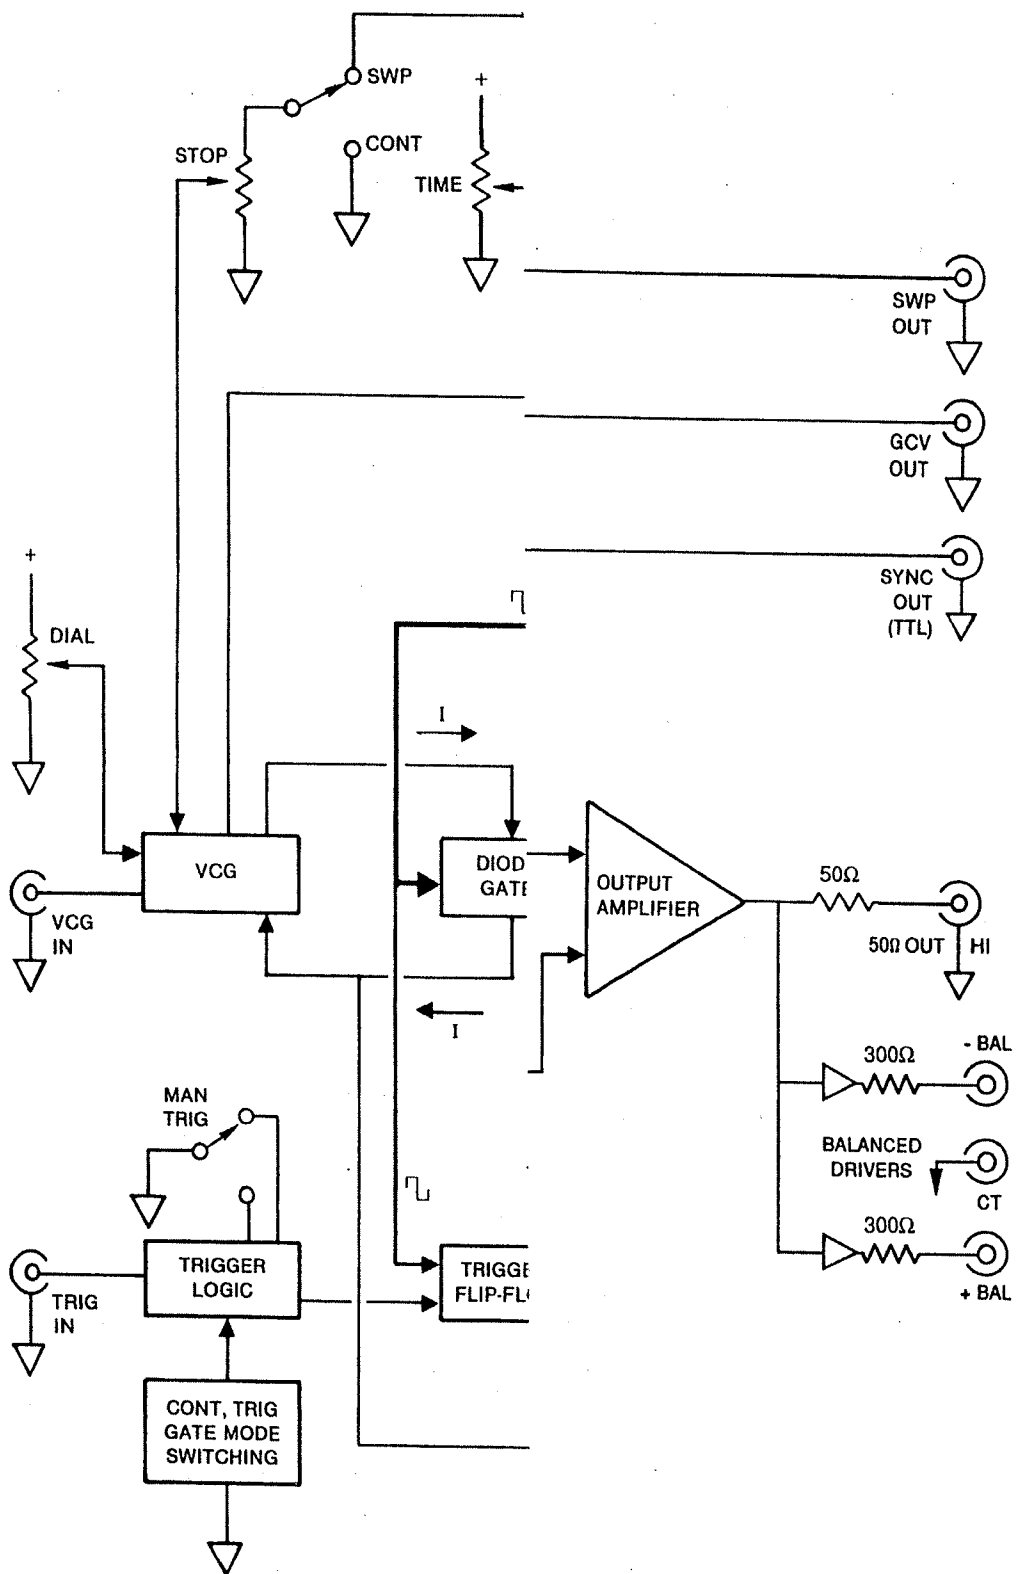


Figure 4-1. Function Block Diagram

SECTION 4

CIRCUIT DESCRIPTION

This section describes the functions of major circuit elements and their relationships to one another as shown in figure 4-1, functional block diagram. The following sections in this manual provide more detailed information for maintaining the instrument.

As shown in figure 4-1, the VCG (Voltage Control of Generator) sums voltage inputs from the frequency dial and the VCG IN connector. This sum voltage controls the magnitude of a complementary current source and current sink. This current varies linearly from approximately 2 mA to 2 μ A over a 1000:1 (4.0 to .004) range or logarithmically from approximately 2 mA to 0.2 μ A over a 10,000:1 (4.0 to .0004) range of each frequency multiplier. The VCG also controls the trigger baseline compensation circuit, which consists of another current sink at twice the current magnitude.

The diode gate, controlled by the comparator output, connects either the current source or the current sink to the timing capacitor selected by the frequency multiplier. When the current source is switched in, the charge on the timing capacitor will rise linearly, producing the positive-going triangle slope. Likewise, the current sink produces the negative-going triangle slope.

The triangle amplifier is a unity gain amplifier whose output is fed to the comparator and to the output circuits. The comparator operates as a window detector with limit points set to the triangle peaks. The ± 2 V output is sent back to the diode gate and to the output circuits. When the output is +2V, the triangle is positive-going until the +1.25V limit is reached and the comparator output switches to -2V. When the output is -2V, the triangle is negative-going until the -1.25V limit is reached and the comparator output switches back to +2V, repeating the process. In this manner, the basic function generator loop, the bold path in figure 4-1, produces simultaneous generation of triangle and square waves at the same frequency.

The output frequency is determined by the magnitude

of the timing capacitor selected by the frequency multiplier switches and by the magnitude of the currents supplied to and removed from it. Since the currents are linearly proportional to the sum of the VCG inputs, so will be the output frequency.

To extend the lower frequency capability of the generator, a capacitance multiplier circuit divides VCG currents by 10 (effectively multiplying the timing capacitor by 10) for each of the lower 3 multiplier ranges.

The TTL square from the comparator is buffered and sent to the SYNC OUT TTL connector. The other side is sent to the trigger flip-flop and to a level shifter to produce the ± 2 V bipolar square for the diode gate and the square shaper circuits. The square shaper converts the square into a current signal and applies it to the \square FUNCTION switch. The buffered triangle is applied to the \triangle FUNCTION switch and to the sine converter input. The sine converter, using the nonlinear characteristics of its diodes, converts the triangle into a sinusoidal current for the \sim FUNCTION switch.

The selected function is sent to the preamplifier, where it is inverted and buffered. The preamplifier output goes to the output amplifier through the AMPLITUDE control where it is summed with offset voltage from the DC OFFSET control. Here, waveform and offset are inverted and amplified to a ± 10 V peak signal which can drive a 50 Ω termination from a 50 Ω source impedance. The output amplifier drives the 50 Ω OUT connector and the balanced driver circuit.

Noncontinuous modes of operation (trigger and gate) result from allowing or preventing the VCG current source from charging the timing capacitor. Whenever the trigger flip-flop output is low, each of the two trigger diodes conduct a current I, sourcing 2I to the baseline compensation circuit. This removes the current I from the VCG current source and forces a 0V baseline at the triangle amplifier input.

When the CONT switch is released, trigger logic is inhibited from passing any trigger signals and the trigger flip-flop output is held high. This prevents the trigger diodes from conducting and the generator loop operates continuously.

When the CONT switch is pressed, the generator loop is held at the 0V baseline. Pressing the TRIG/GATE switch puts the instrument in triggered mode and any external or manual trigger signals at the trigger logic input will be transformed into a narrow pulse corresponding to the low-to-high transition of the trigger input. This pulse sets the trigger flip-flop high and allows the generator loop to run. When the triangle negative peak is reached, the comparator low-to-high transition clocks the trigger flip-flop low and, when the 0V baseline level is reached, the generator loop again stops. The result is a single cycle generated after the triggering signal corresponding to 0 to 360° of phase. Successive triggered waveforms always start at the same 0° point.

Releasing the TRIG/GATE switch puts the instrument in the gated mode. This is identical to the triggered mode, except the trigger flip-flop is held high for the full duration of the triggering signal. The generator produces continuous waveforms during the time the external signal is high or the manual trigger switch is

held in. The last triggered cycle started is always completed and successive gated bursts always start at the 0° point.

When sweep mode is selected by a combination of the main generator in continuous mode and the ramp generator switches set to SWP, the ramp generator is enabled and a ramp voltage becomes part of the control voltage in the VCG circuit to control the main generator frequency. Ramp period, variable from 30 ms to 1 minute, is set by the TIME Control. Ramp generator output is buffered to drive the sweep output and VCG circuit. The ramp magnitude supplying the VCG input is controlled by the STOP potentiometer.

Selecting the stop switch position biases the buffer amplifier to a level equal to the positive peak of the ramp (+V). In this static mode the upper sweep limit can be set by the STOP Control.

When the CONT position of the SWEEP switch is selected the ramp generator is disabled and the buffered ramp is disconnected from the VCG input.

The GCV (Generator Control Voltage) from the VCG circuit is a resultant voltage from the three VCG inputs: dial, VCG IN and sweep ramp. This voltage is buffered and made available at the GCV BNC.

SECTION 5

ALIGNMENT

5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for alignment or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

5.2 REQUIRED TEST EQUIPMENT

Voltmeter	Microvolt dc measurement (1% accuracy)
Oscilloscope	≥ 60 MHz bandwidth
Counter	4 MHz (0.1% accuracy)
50 Ω Feedthru	$\pm 1\%$ accuracy, 2W
Distortion Analyzer	To 400 kHz
RG58U Coax Cable	3 ft length BNC male contacts

5.3 REMOVING GENERATOR COVERS

NOTE

The top and bottom covers may be removed independently of the other.

Only the top cover is required to be removed for alignment.

Top Cover Removal

1. Remove two screws on each side of the instrument holding the top cover. Save all four screws for reassembly.
2. Lift the cover straight up.

NOTE

Lift the cover only when it is necessary to make adjustments or measurements.

Top Cover Installation

1. Install the top cover. Make sure that the top cover edges fit into grooves along both sides of the instrument.

2. Install two screws on each side of the instrument.

Bottom Cover Removal

1. Invert the instrument.
2. Remove two screws on each side of the instrument holding the bottom cover. Save all four screws for reassembly.
3. Remove the screw and lockwasher holding each of four feet. Save all four feet and hardware for reassembly.
4. Lift the cover straight up.

Bottom Cover Installation

1. Invert the instrument.
2. Install the bottom cover with the vent holes toward the rear of the instrument. Make sure that the bottom cover edges fit into grooves along both sides of the instrument.
3. Install two screws on each side of the instrument.
4. Install short feet on rear of cover so key is aligned with key hole in cover. Secure each foot with a screw and lockwasher.
5. Install long feet on front of cover so key is aligned with key hole in cover. Secure each foot with a screw and lockwasher.

5.4 ALIGNMENT

After referring to the following preliminary data, perform alignment, as necessary, per table 5-1. If performing partial alignment, check previous settings and adjustments for applicability. See figures 5-1 and 5-2 for alignment control location.

NOTE

The completion of the calibration procedure returns the instrument to correct alignment.

CALIBRATION LIMITS AND TOLERANCES ARE NOT INSTRUMENT SPECIFICATIONS

Instrument specifications are given in Section 1 of this manual.

1. All measurements made at the 50Ω OUT connector must be terminated into a 50Ω (±1%) load. All measurements made at the 600Ω BAL connector must be terminated into a 600Ω (±1%) load.
2. Start the alignment by connecting the unit to an
3. Allow the unit to warm up at least 30 minutes for final alignment. Keep the instrument cover on to maintain heat. Remove cover only to make adjustments or measurements.

appropriate ac power source and setting the front panel switches as follows:

POWER ON
 Frequency Dial 4.0
 FREQ MULT (Hz) X 1K
 MODE CONT CONT (released)
 FUNCTION
 DC OFFSET OFF
 AMPLITUDE MAX
 LIN/LOG LIN (released)
 SWEEP's CONT CONT (released)
 SWP/STOP STOP (released)

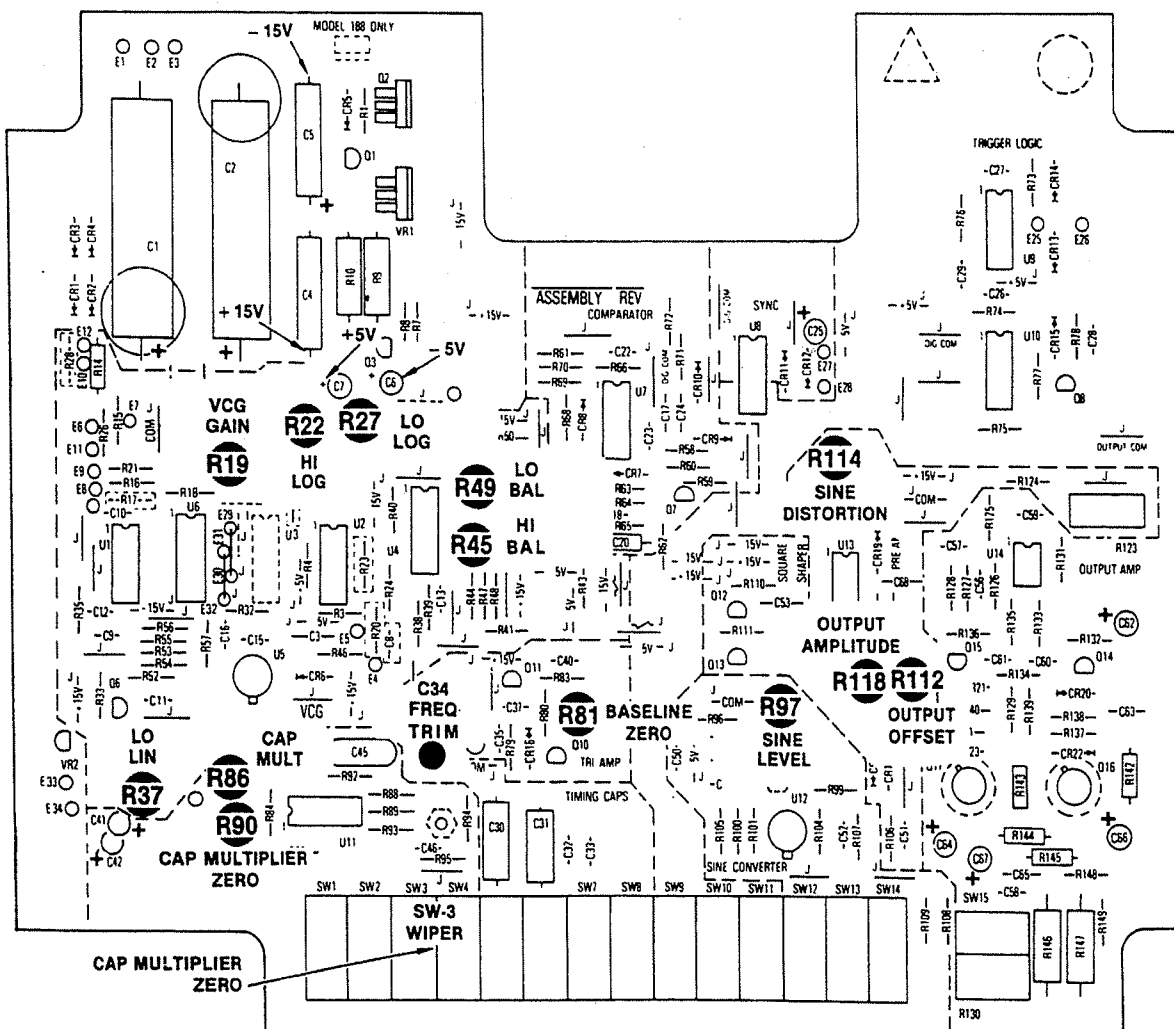


Figure 5-1. Alignment Point Location, Generator Board

Table 5-1. Alignment Procedure

Step	Check	Tester	Test Point	Control Setting	Adjust	Result	Remark	
1	Power Supply	Voltmeter	C4 +	Paragraph 5.4, Step 2		+ 15 \pm .75V	Verify \pm 15V should track within 30 mV	
2			C5 -			- 15 \pm .75V		
3			C7 +			+ 5 \pm .25V	Verify	
4			C6 -			- 5 \pm .25V		
5	Capacitor Multiplier Zero		SW3 - B Wiper		R90 CAP MULT ZERO	0 \pm 2V	Set scope to (-) trigger; display one full cycle. Align positive transition to center of screen. Multiply the horizontal display \times 10. Set scope to (+) trigger; adjust R49 to align negative transition with center of screen	
6	Approximate Bottom of the Dial Frequency	Counter	50 Ω OUT (terminate into 50 Ω)	Dial: .004 FREQ MULT: 10K	R37 LO LIN	20 to 25 ms period		
7	Bottom of the Dial Symmetry	Scope			R49 LO BAL	Equalize (+) and (-) half cycles		
8	Bottom of the Dial Frequency (Lin)	Counter		FREQ MULT: \times 1K	R37 LO LIN	350(\pm 50) ms period		
9	Top of the Dial Symmetry	Scope		Dial: 4.0	R45 HI BAL	Equalize (+) and (-) half cycles		See step 7
10	Top of the Dial Frequency (Lin)	Counter		Dial: 4.0 FREQ MULT: \times 1K	R19 VCG GAIN	4 \pm .2 kHz		
11				FREQ MULT: \times 10K		40 \pm .8 kHz		Verify
12				FREQ MULT: \times 1M	C34 FREQ TRIM	4 \pm .02 MHz		
13				FREQ MULT: \times 100K		400 \pm 8 kHz		Verify. If necessary, trim by changing value of C33
14				FREQ MULT: \times 100	R86 CAP MULT	2.5 \pm .05 ms		

Table 5-1. Alignment Procedure (Continued)

Step	Check	Tester	Test Point	Control Setting	Adjust	Result	Remark
15				FREQ MULT: $\times 10$		$25 \pm .5$ ms	Verify
16				FREQ: $\times 1$		250 ± 5 ms	
17	Bottom of the Dial Frequency (Log)			Dial: .0004 FREQ MULT: $\times 100K$ SWEEP: CONT, STOP, LOG	R27 LO LOG	40 ± 2 Hz	Allow 1 hour warm-up
18	Top of the Dial Frequency (Log)			Dial: 4.0 FREQ MULT: $\times 100K$	R22 HI LOG	400 ± 10 kHz	Repeat steps 17 and 18 once.
19	Sine Distortion (Lin)	Distortion Analyzer		FUNCTION: \sim FREQ MULT: $\times 1K$	R97 SINE LEVEL R114 DISTOR- TION	Adjust for minimum distortion	It may be necessary to reduce amplitude to 5V peak.
20	Output Amplitude	Scope		FUNCTION: \sim	R118 OUTPUT AMPL	10 Vp-p (+.3V/-0V)	
21	Output Offset	Voltmeter		FUNCTION: \sim	R112 OFFSET	0 ± 50 mV	
22	Baseline Zero	Scope		MODE: Trigger	R81 B A S E - LINE ZERO	0 ± 75 mV	It may be necessary to trim the baseline with R80
23	Sweep Offset	Voltmeter	SWP OUT (Unterminated)	SWEEP: CONT, SWP, LIN	R9 (Sweep board) SWEEP OFFSET	0 ± 2 mV	

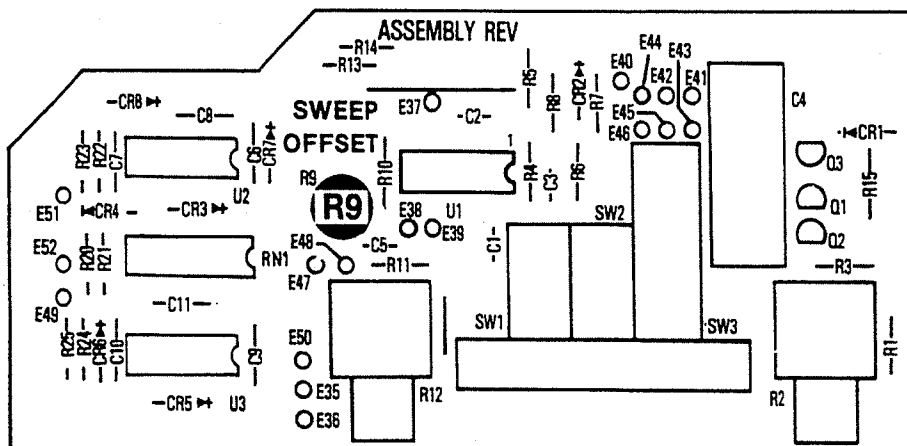


Figure 5-2. Alignment Point Location, Sweep Board

6

SECTION 6

TROUBLESHOOTING

6.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for alignment or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

6.2 TROUBLESHOOTING TABLES

Table 6-1 gives an index of the troubleshooting tables by indications of common problems. The tables do not cover every possible trouble, but, when used in conjunction with circuit descriptions and schematics, will be an aid in systematically isolating faulty components.

6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS

6.3.1 Transistor

1. A transistor is defective if more than one volt is measured across its base-emitter junction in the forward direction.
2. A transistor when used as a switch may have a few volts reverse bias voltage across base-emitter junction.
3. If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.
4. A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).
5. In a transistor differential pair (common emitter stages), either their base voltages are the same in normal operating condition, or the one with less forward voltage across its base emitter junction should be off (no collector current); otherwise, one of the transistors is defective.

6.3.2 Diode

A diode (except a zener) is defective if there is greater than one volt (typically 0.7 volt) forward voltage across it.

6.3.3 Operational Amplifier

1. The "+" and "-" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.
2. When the output of the amplifier is connected to the "-" input (voltage follower connection), the output should be the same voltage as the "+" input voltage; otherwise, the operational amplifier is defective.
3. If the output voltage stays at maximum positive, the "+" input voltage should be more positive than the "-" input voltage, or vice versa; otherwise, the operational amplifier is defective.

6.3.4 FET Transistor

1. No gate current should be drawn by the gate of an FET transistor. If so, the transistor is defective.
2. The gate-to-source voltage is always reverse biased under a normal operating condition; e.g., the source voltage is more positive than the gate voltage for 2N5485, and the source voltage is more negative than gate voltage for a 2N5462. Otherwise, the FET is defective.
3. If the device supplying gate voltage to an FET saturates, the FET has too large a V_{gs} (pinch off) for the circuit and should be replaced.

6.3.5 Capacitor

1. Shorted capacitors have zero volts across their terminals.

- Opened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

6.4 GENERAL INSTRUCTIONS

When encountering a problem, it is advisable to return as many of the front panel controls as possible to their initial settings and still retain the problem. The troubleshooting tables in this section generally begin at these initial settings and specify all subsequent setups. Preset the front panel controls as follows.

Control	Position
Frequency Dial	4.0
POWER	ON
FREQ MULT (Hz)	1K
FUNCTION	^
DC OFFSET	OFF
AMPLITUDE	MAX
SWEEP	CONT, STOP, LIN

CAUTION

To prevent damage to components, turn unit off while removing or replacing components, connectors or pc boards.

The suspected malfunctioning condition should be double checked to eliminate the possibility of improper settings or connections. Before attempting fault isolation, the unit should be checked for proper line voltage selection (refer to Section 2). A good visual inspection of the boards and chassis wires for damage or overheating often saves much time.

Once the malfunction is defined, begin the isolation procedure by selecting an indication in table 6-1 which best describes the malfunction and proceed to the referenced troubleshooting table.

Follow through the checks in the troubleshooting table, using schematics and assemblies as a guide. When positive results are not obtained, perform the indicated corrective procedure.

Table 6-1. Fault Isolation

Indication	Table
1. Fuse blown, no power indication or no outputs.	6-2
2. Function outputs missing or clipped when TTL sync OK. Triangle problem.	6-3
3. Sine waveform problem.	6-4
4. Square waveform problem.	6-5
5. TTL sync output problem.	6-6
6. Generator frequency does not respond correctly to dial and VCG input.	6-7
7. Waveform symmetry problem.	6-8
8. Problem on bottom three ranges only.	6-9
9. Generator trigger and gate mode problem.	6-10
10. Sweep problem.	6-11

Table 6-2. Power Supplies and Generator Loop

<i>Indication: Fuse blown, no power indication or no outputs.</i>	
Check	Corrective Procedure
1. Set all controls in their initial positions (refer to paragraph 6.4).	Replace fuse; check for normal operation. a. CR1 - CR4. b. C1, C2. c. SW1. d. T1, RV1, F1 (bracket assembly).
2. Ensure line voltage matches instrument configuration (refer to Section 2). Check fuse.	
3. Check C1 (+) and C2 (-) for ± 20 to 26V unregulated dc.	

Table 6-2. Power Supplies and Generator Loop (Continued)

<i>Indication: Fuse blown, no power indication or no outputs.</i>	
Check	Corrective Procedure
4. Check indicator lamp.	DS1 and VR2, wiring E34 and E33.
5. Check C4 (+) for +15 Vdc.	a. VR1. b. Excessive loading; use board jumpers to isolate cause.
6. Check C5 (–) for –15 Vdc.	a. Q2. b. U2, Q1. c. Excessive loading; use board jumpers to isolate cause.
7. Check U7 pin 14 for +5 Vdc and U7 pin 13 for –5 Vdc.	a. Q4, Q3, U2. b. Excessive loading; use board jumpers to isolate cause.
8. Check U4 pin 6 for a dc shift from approximately +10V to +15V as the frequency dial is rotated from 4.0 to .004. Check U6 pin 8 for a dc shift from –10V to –15V as the frequency dial is rotated from 4.0 to .004.	Go to table 6-7.
9. Check anode CR6 for approximately +3.5 Vdc.	Go to table 6-10.
10. If emitter Q11 has a 4 kHz, $\pm 1.25V$ triangle, go to table 6-3.	
11. Check for the same voltage at the gate of Q9 as at the emitter of Q11, within saturation limits of the amplifier.	Q9 - Q11 and associated circuitry.
12. If the voltage at the emitter of Q11 is $\geq +1.25V$, check cathode CR10 for approximately –2.5V. If the voltage at the emitter of Q11 is $\leq -1.25V$, check cathode CR10 for approximately +2.5V.	U7, Q7 and associated circuitry.
13. Check U5.	

Table 6-3. Output Circuits

<i>Indication: Function outputs missing or clipped when TTL sync output OK. Problem with triangle waveform.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check emitter Q11 for a 4 kHz, $\pm 1.25V$ triangle.	Go to table 6-2.
3. Select triangle function, rotate AMPLITUDE ccw, and check U13 pin 10 for a $\pm 1.25V$ triangle.	a. R114 R118 adjustments. b. U13. c. SW13.

Table 6-3. Output Circuits (Continued)

Indication: Function outputs missing or clipped when TTL sync output OK. Problem with triangle waveform.

Check	Corrective Procedure
4. Rotate AMPLITUDE cw (MAX), DC OFFSET to OFF, and check 50Ω OUT (HI) for a 20 V p-p (open circuit) triangle.	a. Output amplifier circuit. b. E15, E16 wiring.
5. Rotate AMPLITUDE cw (MAX), DC OFFSET to OFF, and check between 600Ω -BAL connector and ground for a 10V p-p (open circuit) triangle.	a. U2 (sweep board) circuitry. b. E17 (generator board), E15 (sweep board) wiring.
6. Rotate AMPLITUDE cw (MAX), DC OFFSET to OFF, and check between 600Ω +BAL connector and ground for a 10V p-p (open circuit) triangle.	a. U3 (sweep board) circuitry. b. E17 (generator board), E15 (sweep board) wiring.
7. Check for excessive discontinuities at the triangle peaks near the bottom of a frequency range (other than X 1 to X100).	a. U5. b. SQR signal at cathode CR10 not $\pm 2.5V$.
8. Check for nonlinearities in the triangle slopes near the bottom of a frequency range (other than X 1 to X100).	a. Associated timing capacitor or C36. b. U5, CR6. c. Q9, Q10.
9. Check for a waveform symmetry problem.	Go to table 6-8.

Table 6-4. Sine Conversion

Indication: Sine waveform problem.

Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check emitter Q11 for a 4 kHz, $\pm 1.25V$ triangle.	Go to table 6-2.
3. Verify that the ± 1.25 triangle peaks at the emitter of Q11 agree within 3%.	a. R62, R63, R64, R65, R67, R68, R70. b. CR8, CR9, U7. c. $\pm 15V$ supplies.
4. Select triangle function; check for $\pm 1.25V$ triangle at U13 pin 10.	Go to table 6-3, step 3.
5. Select sine function; check for $\pm 1.25V$ sine at U13 pin 10.	a. U12 circuitry. b. SW12.
6. Check sine distortion 50Ω OUT (HI) per calibration procedure (refer to table 5.1).	a. R97, R114 adjustments. b. Waveform symmetry, R45 adjustment and table 6-8. c. U12 circuitry.
7. Check sine amplitude vs frequency per specifications (refer to section 1).	C47, C55, C56, C57.

Table 6-5. Square Function

<i>Indication: Square waveform problem.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check CR10 cathode for a 4 kHz, approximately $\pm 2V$ square wave.	Go to table 6-2.
3. Select a triangle function; check U13 pin 10 for a $\pm 1.25V$ triangle.	Go to table 6-3.
4. Select square function; check U13 pin 10 for a $\pm 1.25V$ square.	a. Q12, Q13 circuitry. b. SW14.
5. Check square wave at 50 Ω OUT (HI) for the same 20V p-p (open circuit) amplitude as the triangle and sine.	R106, R110, R111.
6. Check rise/fall times of 4 MHz square (50 Ω terminated) for <50 ns.	C51, C55, C56, C57.

Table 6-6. TTL Sync Output

<i>Indication: TTL sync output problem.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check U8 pin 1 for a TTL level, 4 kHz square.	Go to table 6-2.
3. Check U8 pin 8 for a TTL level, 4 kHz square.	a. U8. b. CR11, CR12.
4. Check SYNC OUT TTL.	E27, E28, E19 wiring.
5. Check SYNC OUT waveform at 4 MHz, using a TTL load termination or a $\geq 600\Omega$ resistive termination and ≤ 3 foot RG58U coax.	a. U8. b. E19 ground connection.

Table 6-7. VCG Circuit

Indication: Generator does not respond correctly to dial and VCG input.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. Check for approximately +15V at E11.	a. E10, E11 and E12 wiring. b. +15V supply. c. Dial potentiometer.
3. Check for 0 ± 5 mV at U1 pin 13.	U1.
4. Check U1 pin 14 for approximately -5V.	U1.
5. Check that as the dial is rotated from 4.0 to .004, the voltage at U1 pin 14 varies from approximately -5 to 0V.	U1.
6. Ensure that U1 pin 5 remains at a constant $0V \pm 40$ mV as the dial is varied.	U1, U4, and U6 circuits.
7. Check that, as the dial is rotated from .004 to 4.0, the voltage at U1 pin 1 does not saturate near -15V or +15V (typical range is between -10V and +10V) and stops varying with the dial.	Q6, U1, and U6 circuits.
8. Check that as the dial is rotated from .004 to 4.0, U6 pin 8 varies from approximately -15V to -10V.	U6, U1, and Q6 circuits.
9. Check that, as the dial is rotated from .004 to 4.0, the voltage at U1 pin 7 does not saturate near +15V or -15V (typical range is between +10V and -10V) and stops varying with the dial.	U4 and U1 circuits.
10. Check that, as the dial is rotated from .004 to 4.0, U4 pin 13 varies from approximately +15V to +10V.	U4 and U1 circuits.
11. Check for nonlinearity in the $\pm 1.25V$ triangle at the emitter of Q11 near the bottom of the $\times 1K$ through $\times 1M$ ranges.	a. Associated timing capacitors or C36. b. U5, CR6. c. Q9, Q10.
12. Check frequencies of $\times 1K$, $\times 10K$ and $100K$ ranges.	a. Adjust R19. b. C30, 31 and 32 (trimmed by C20).
13. Check frequency and linearity of $\times 1M$ range.	a. C34. b. C36 nominal value. c. C18, 19, 20 and 21.
14. Check frequencies of $\times 1$, $\times 10$ and $\times 100$ ranges.	R86 and table 6-9.
15. Select log mode. Check that as the frequency dial is rotated from 4.0 to .0004, U3 pin 4 varies from approximately -.65V to -.45V.	a. U3. b. U1 circuit.

Table 6-8. Symmetry

<i>Indication: Waveform symmetry problem.</i>	
Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation.
2. If symmetry problem appears on $\times 1$, $\times 10$, $\times 100$ ranges only, problem may be R90 adjustment or go to table 6-9.	
3. Perform steps 5 through 12 of table 6-7, then return to this table.	a. R49 adjustment. b. R45 adjustment.
4. Verify RUN signal at cathode CR6 is approximately +3.5V.	Go to table 6-10.
5. Verify U6 pin 4 and U6 pin 15 vary from approximately -10 to -15V as dial is rotated from 4.0 to .004.	U1, U6, R52, R53.
6. Verify amplitude of SQR signal at cathode CR10 is approximately $\pm 2V$.	a. Q7 circuit. b. U7 circuit. c. +5V supply.
7. Check U5, CR6.	

Table 6-9. Capacitance Multiplier

<i>Indication: Problem on bottom frequency ranges only.</i>	
Check	Corrective Procedure
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal operation on $\times 1K$ range.
2. Check for 0 Vdc at U11 pins 2 and 6.	SW2 - SW4.
3. Check for approximately 0 Vdc at U11 pin 12.	U11 circuitry.
4. Check for 0 Vdc ± 5 mV at U11 pin 10.	a. R90 adjustment. b. U11 circuitry.
5. Select $\times 100$ range; check U11 pin 10 for heavy oscillations.	C46, U11.
6. Check that the signal at U11 pin 2 is amplified by approximately 6 at pin 12 (within saturation limits).	U11 circuitry.
7. Check for the same signal at U11 pins 6 and 7 as at the emitter of Q11.	SW4, U11 circuitry.
8. Ensure that R93 and R94 are shorted in the $\times 100$ range.	SW4.

Table 6-9. Capacitance Multiplier (Continued)

Indication: Problem on bottom frequency ranges only.

Check	Corrective Procedure
9. Check 400 Hz frequency (2.0×100).	a. R86 adjustment. b. R89, R95, C45.
10. Check 40 Hz frequency (2.0×10).	R93, SW3.
11. Check 4 Hz frequency (4.0×1).	R94.
12. Check symmetry at 0.2×100 ; ensure triangle is linear.	a. R90 adjustment. b. U11. c. Leaky C30, C36, C45, C46, CR6, U5, Q9.

Table 6-10. Trigger Logic

Indication: Generator trigger and gate mode problems.

Check	If Faulty, Check
1. Set controls to initial positions (refer to paragraph 6.4).	Check for normal continuous operation.
2. If generator operates normally in continuous mode, go to step 7.	
3. Check for 0V at U9 pins 2 and 5.	SW9.
4. Check for a TTL low at U10 pin 10.	U9, +5V supply.
5. Check for +5V at U10 pin 9.	a. U10. b. CR6, CR15, Q8. c. U6.
6. Check for approximately +3.5V at anode CR6. Check for normal continuous mode operation.	a. CR6, U6, Q8. b. Go to table 6-2.
7. Check that U6 pin 4 and U6 pin 15 vary from approximately -10V to -15V as dial is rotated from 4.0 to .004.	a. U6, R52, R53. b. Go to table 6-7.
8. Go to gated mode (CONT depressed, TRIG/GATE released). Check U9 pin 2 for a TTL high.	a. U10. b. SW9, SW11, +5V supply.


Table 6-10. Trigger Logic (Continued)

<i>Indication: Generator trigger and gate mode problems.</i>	
Check	Corrective Procedure
9. Check U9 pin 1 for a TTL high.	a. U9. b. R73, -5V supply.
10. Check U10 pin 10 for a TTL high.	a. U9. b. U10.
11. Check U10 pin 9 for TTL low.	a. U10. b. Q8.
12. Check anode CR6 for approximately -1.5V.	a. CR15, Q8, R78. b. CR6.
13. Check cathode CR6 for approximately -0.7V.	a. U5. b. U6.
14. Check emitter Q11 for 0 Vdc \pm 100 mV.	a. R81 adjustment. b. Q9 - Q11 circuitry.
15. Connect an external TTL signal to TRIG IN connector; check for the inverse of that signal at U10 pin 10.	a. E25, E26. b. CR13, CR14. c. U9, SW10.
16. Press TRIG/GATE switch and check for an approximate 20 ns negative pulse at U10 pin 10 following the low-to-high transition of the external signal (increasing the frequency of the external generator makes this pulse more visible).	a. U9, SW10. b. C29.
17. Remove the external signal and verify that U10 pin 5 goes from high to low when the MAN TRIG switch is held depressed.	a. SW11. b. U10.
18. Release the TRIG/GATE switch (gated) and check that U10 pin 10 goes from high to low when the MAN TRIG switch is pressed.	SW9.
19. Monitor 50 Ω OUT, triangle function, for 0 Vdc baseline.	R81, R112 adjustments.
20. Press MAN TRIG switch and check 50 Ω OUT for a continuous triangle while the switch is held. Depress TRIG/GATE switch (triggered) and verify a single cycle output each time the MAN TRIG switch is depressed.	a. U10 or clock signal to U10 from U7. b. C29 (pulse too narrow).

Table 6-11. Sweep Circuit


<i>Indication: Sweep or Ramp problems.</i>	
Check	Corrective Procedure
1. Depress CONT (Sweep). Extend SWP/STOP. Check E48 for +4V.	a. U1. b. SW2.
2. Depress SWP/STOP. Check collector of Q3. 4V peak ramp. If ramp amplitude is >4V peak. If ramp amplitude is <4V peak.	U1, Q3. Q1, Q2.
4. At SWP OUT check for period change of approximately 30 ms to 60s as the TIME control is rotated from full ccw to full cw.	Q2, R22.
5. At SWP OUT check for ramp period drift.	C4.
6. At E39 with STOP control full cw, ramp amplitude is 4V peak, with STOP control full ccw, ramp amplitude is 0V.	R12, SW1, SW2.

REV	ECO	BY	DATE	APP
A	ECO # 89-011	MS	7/2/89	7/1/89
B	ECO # 89-011	MS	7/1/89	7/1/89
C	ECO # 89-034	MS	7/1/89	7/1/89
D	ECO # 89-059	B.G	7/1/89	7/1/89

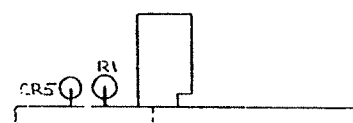

DETAIL "D"
NOTE: POSITION OF SOCKET IN PCB IS CRITICAL. MAKE SURE THAT THE NOTCH IS FACING THE BREAKAWAY. DO NOT REVERSE POSITION.

C10 NOT SHOWN
SEE DETAIL "B"

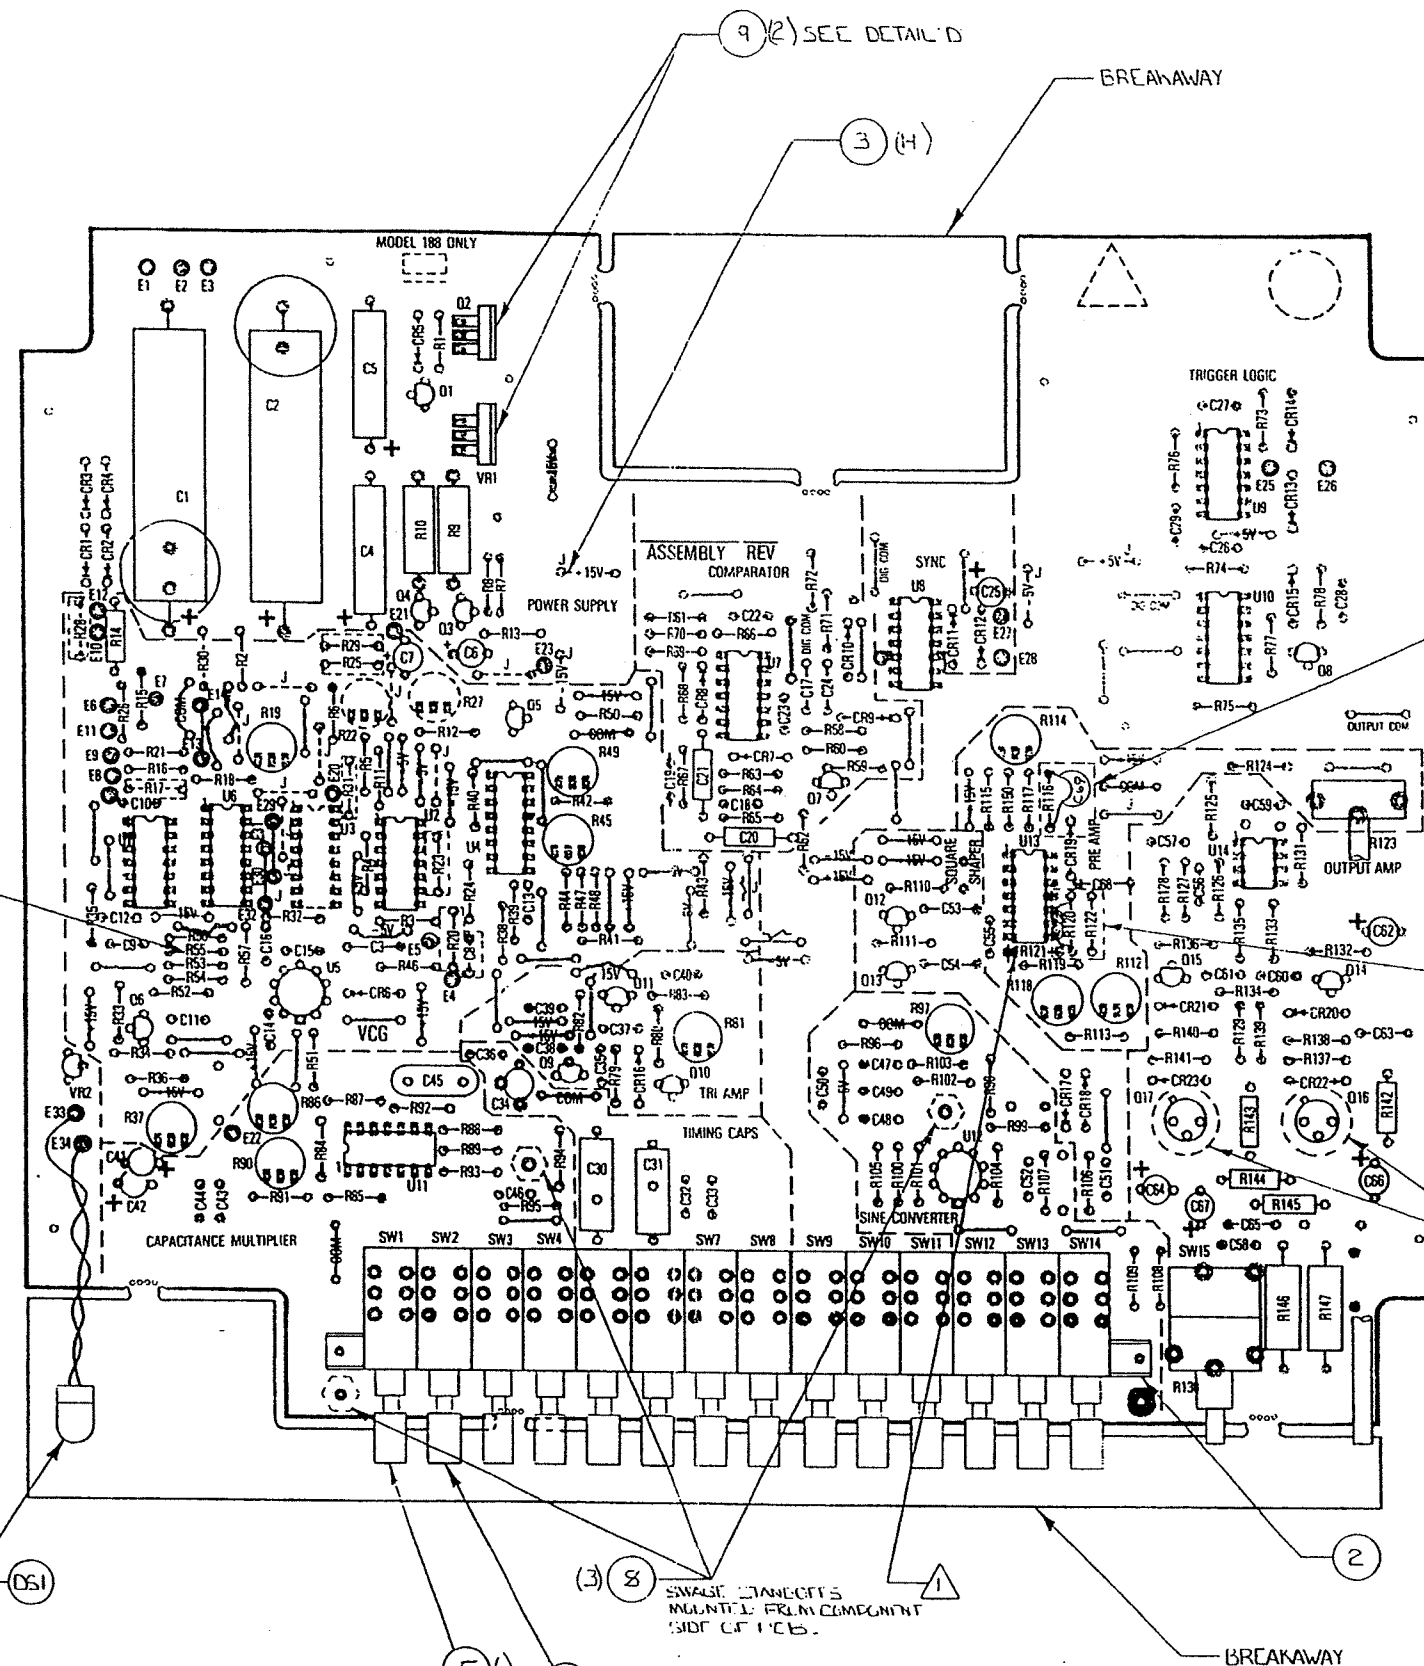

DETAIL "C"

SEE DETAIL "A"

DETAIL "C"
INSERT LEADS OF C69 IN THE HOLES FOR THE LEADS OF R116 AND SOLDER

DETAIL "A"
INSERT LEADS OF C71 IN THE HOLES FOR THE LEADS OF R120 AND SOLDER

DETAIL "B"
INSERT LEADS OF C70 IN THE HOLES FOR THE LEADS OF R55 AND SOLDER

2 ASSEMBLE PER THE LATEST VERSION OF WAVETEK (COMMERCIAL WORKMANSHIP STANDARDS).

1 INSTALL WAVETEK IN 4801-01-074 (IN 746A 3.3V) AT 1.2 IN DIRECTION SHOWN.

NOTE: UNLESS OTHERWISE SPECIFIED

SW1, SW2, SW3, SW4, SW5, SW6, SW7, SW8, SW9, SW10, SW11, SW12, SW13, SW14, SW15
SW1, SW2, SW3, SW4, SW5, SW6, SW7, SW8, SW9, SW10, SW11, SW12, SW13, SW14, SW15
SW1, SW2, SW3, SW4, SW5, SW6, SW7, SW8, SW9, SW10, SW11, SW12, SW13, SW14, SW15

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN: MELISSA SMITH	DATE: 7/1/89	WAVETEK	
MATERIAL	CHECKED: D. B. BULL	DATE: 7/1/89	TITLE: ASSEMBLY DRAWING GENERATOR BOARD	
FINISH: WAVETEK PROCESS	PROJ. ENG: J. J. BULL	DATE: 7/1/89	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES	
DO NOT SCALE DRAWING	SCALE: 1" = 1"	REV: 1	SIZE: D	23338
			DWG. NO.: 1101-00-3265	REV: 1
			MODEL: 1101-00-3265	SHEET: 1 OF 1

11344

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION
AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT
BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION,
OPERATION, AND MAINTENANCE WITHOUT WRITTEN AU-
THORIZATION

REFERENCE DESIGNATORS	PART DESCRIPTION	DR10-MFCR-PART-NO	MFCR	WAVETEK NO.	QTY/PT	
NONE	A/D GENERATOR BD 188-S-1257	1101-00-3265	WVTK	1101-00-3265	1	
NONE	SCHEMATIC GENERATOR BD 188-S-1257	1104-00-3265	WVTK	1104-00-3265	1	
C22 C35 C55	CAP. CER DISK, 5PF, 1KV, 10%	0311-00018	WVTK	1500-00-5011	3	
C14 C23 C52	CAP. CER. 10PF, 1KV	DD-100	CRL	1500-01-0011	3	
C51	CAP. CER. 100PF, 1KV	DD-101	CRL	1500-01-0111	1	
C11 C13 C16 C46 C8	CAP. CER., .001UF, 1KV	DD-102	CRL	1500-01-0211	5	
C10 C15 C26 C27 C28 C37 C38 C39 C40 C43 C44 C48 C49 C50 C58 C60 C61 C9	CAP CER MON. .01MF 50V, AXIAL	CAC0275U1031100A	CORNC	1500-01-0310	18	
C17 C24 C3 C33 C34 C63 C65 C68	CAP. CER. MON., 1MF, 50V, AXIAL	CAC0315U1042050A	CORNC	1500-01-0405	8	
C72	CAP. CER. 15PF, 1KV	DD-150	CRL	1500-01-5011	1	
C12	CAP. CER. 22PF, 1KV	DD-220	CRL	1500-02-2011	1	
C37	CAP. CER., .0022, 1KV	DD-222SL	CRL	1500-02-2201	1	
C29 C70	CAP. CER. 330PF, 1KV	DD-331	CRL	1500-03-3111	2	
C20 C21	CAP C MON 3300PF 50V	1801X7R050A332J	VRDYN	1500-03-3205	2	
C39	CAP. CER., .005MF, 50V	CK-502	CRL	1500-05-0210	1	
WAVETEK PARTS LIST		TITLE PCA. GENERATOR BD 188-S-1257		ASSEMBLY NO. 1100-00-3265 PAGE 1		REV B

REFERENCE DESIGNATORS	PART DESCRIPTION	DR10-MFCR-PART-NO	MFCR	WAVETEK NO.	QTY/PT
C34	CAP. VAR. 7-35PF 250V	75-TRIM0-02 7/35 MF	TRIMO	1500-53-5000	1
C41 C42	CAP. TANT. 22MF. 20V	202A2002226H3	MATSO	1500-72-2621	2
1	PCB. GENERATOR BD 188-S-1257 REF: SPEC 0008-00-0455 REV C	1700-00-3265	WVTK	1700-00-3265	1
9	SOCKET	10-18-2031	HOLEX	2100-03-0047	2
DS1	LAMP	128/40	MURA	2400-02-0017	1
8	STANDOFF, SHACE .875 M., 250 HEX4-40, .062 MATL	BR69268-0.0875-31	LYNTR	2800-05-0003	3
7	HEAT SINK	207	WAKE	2800-11-0001	2
6	TRANSIPAD	331-218	BIVAR	2800-11-0004	2
R45 R81 R97	POT. TRIM. 100	91AR100	BECK	4600-01-0103	3
R19 R90	POT. TRIM. 10K	91AR10K	BECK	4600-01-0315	2
R112 R27 R49	POT. TRIM. 100K	91AR100K	BECK	4600-01-0402	3
R114 R86	POT. TRIM. 2K	91AR2K	BECK	4600-02-0201	2
R22	POT. TRIM. 20K	91AR20K	BECK	4600-02-0301	1
R118	POT. TRIM. 500	91AR500	BECK	4600-05-0104	1
WAVETEK PARTS LIST		TITLE PCA. GENERATOR BD 188-S-1257		ASSEMBLY NO. 1100-00-3265	REV B
PAGE 3					

REFERENCE DESIGNATORS	PART DESCRIPTION	DR10-MFCR-PART-NO	MFCR	WAVETEK NO.	QTY/PT
R128 R133 R135	RES. MF, 1/BW, 1%, 13K	RN55D-1302F	TRW	4701-03-1302	3
R66	RES. MF, 1/BW, 1%, 140	RN55D-1400F	TRW	4701-03-1400	1
R67	RES. MF, 1/BW, 1%, 150	RN55D-1500F	TRW	4701-03-1500	1
R107 R109 R61 R78 R82	RES. MF, 1/BW, 1%, 1.5K	RN55D-1501F	TRW	4701-03-1501	3
R21	RES. MF, 1/BW, 1%, 150K	RN55D-1503F	TRW	4701-03-1503	1
R124T	RES. MF, 1/BW, 1%, 15	RN55D-1506F	TRW	4701-03-1509	1
R101 R104	RES. MF, 1/BW, 1%, 165	RN55D-1650F	TRW	4701-03-1650	2
R34 R39	RES. MF, 1/BW, 1%, 17.4K	RN55D-1742F	TRW	4701-03-1742	2
R58	RES. MF, 1/BW, 1%, 1.78K	RN55D-1781F	TRW	4701-03-1781	1
R116	RES. MF, 1/BW, 1%, 182	RN55D-1820F	TRW	4701-03-1820	1
R119	RES. MF, 1/BW, 1%, 1.96K	RN55D-1961F	TRW	4701-03-1961	1
R132 R136 R15 R46 R57	RES. MF, 1/BW, 1%, 2K	RN55D-2001F	TRW	4701-03-2001	5
R110 R111	RES. MF, 1/BW, 1%, 21.5K	RN55D-2152F	TRW	4701-03-2152	2
R63 R99	RES. MF, 1/BW, 1%, 221	RN55D-2210F	TRW	4701-03-2210	2
R32 R40 R44 R47 R52 R53 R54 R55 R60 R77	RES. MF, 1/BW, 1%, 2.21K	RN55D-2211F	TRW	4701-03-2211	10
R69	RES. MF, 1/BW, 1%, 249	RN55D-2490F	TRW	4701-03-2490	1
WAVETEK PARTS LIST		TITLE PCA. GENERATOR BD 188-S-1257		ASSEMBLY NO. 1100-00-3265	REV B
PAGE 5					

REFERENCE DESIGNATORS	PART DESCRIPTION	DR10-MFCR-PART-NO	MFCR	WAVETEK NO.	QTY/PT
C69	CAP. CER. 56PF. 1KV	DD-560	CRL	1500-05-6001	1
C33T	CAP. MICA. 100PF. 500V	DM15-101J	ARCO	1500-11-0100	1
C19	CAP. MICA. 120PF. 500V. R ADIAL	DM15-121J	ARCO	1500-11-2100	1
C56T	CAP. MICA. 39PF. 500V	DM15-390J	ARCO	1500-13-9000	1
C36	CAP. MICA. 43PF. 500V	DM15-430J	ARCO	1500-14-3000	1
C47	CAP. MICA. 68PF. 500V	DM15-680J	ARCO	1500-16-8000	1
C16	CAP. MICA. 82PF. 500V	DM15-820J	ARCO	1500-18-2000	1
C32	CAP. MICA. 910PF. 100V. 1 % RADIAL	DM15-911F	ARCO	1500-19-1101	1
C4 C5	CAP. ELECT. 100MF. 16V	ECEB1CU101	PANAS	1500-31-0101	2
C1 C2	CAP. ELECT. 1000MF. 35V	39D108035CL6	SPRAC	1500-31-0212	2
C23 C6 C62 C64 C66 C67 C7	CAP. ELECT. 22MF. 25V. RA DIAL	SRA23VB22RM617LL	UNCON	1500-32-2002	7
C31	CAP. POLYC. . 01MF. 100V. AXIAL	C31B103F	BISHC	1500-41-0304	1
C30	CAP. POLYC. . 1MF. 100V. A XIAL	PA2B104F	ELCUB	1500-41-0404	1
C45	CAP. NYLAR. . 047MF 100V	225P47391MD3	SPRAC	1500-44-7314	1
WAVETEK PARTS LIST		TITLE PCA. GENERATOR BD 188-S-1257		ASSEMBLY NO. 1100-00-3265	REV B
PAGE 2					

REFERENCE DESIGNATORS	PART DESCRIPTION	DR10-MFCR-PART-NO	MFCR	WAVETEK NO.	QTY/PT
R130	POT. LMR, 1/2 W, +/-30%, 10K, SLO SMT, PC-Y	4602-01-0300	WVTK	4602-01-0300	1
R123	POT. CONT, 1K FROM: 4600-01-0207	4609-71-0201	WVTK	4609-71-0201	1
R37	POT. TOP TRIM, 20T, 100K	68MR100K	BECK	4609-90-0001	1
R142 R143 R144 R145	RES. C, 1/2W, 5%, 10	RC-1/2-10J	STKPL	4700-23-0100	4
R14	RES. C, 1/2W, 5%, 4.7	RC-1/2-4R7J	STKPL	4700-23-0479	1
R10	RES. C, 1W, 10%, 150	4700-35-1500	WVTK	4700-36-1500	1
R9	RES. C, 1W, 10%, 390	4700-35-3900	WVTK	4700-36-3900	1
R137 R141 R79 R83 R87 R92 R96	RES. MF, 1/BW, 1%, 100	RN55D-1000F	TRW	4701-03-1000	7
R11 R12 R2 R42 R56	RES. MF, 1/BW, 1%, 1K	RN55D-1001F	TRW	4701-03-1001	5
R5 R73 R74 R75 R76 R89	RES. MF, 1/BW, 1%, 10K	RN55D-1002F	TRW	4701-03-1002	4
R23 R93	RES. MF, 1/BW, 1%, 100K	RN55D-1003F	TRW	4701-03-1003	2
R138 R140 R88	RES. MF, 1/BW, 1%, 10	5043ED10R100F	HEPCO	4701-03-1009	3
R70	RES. MF, 1/BW, 1%, 12.1K	RN55D-1212F	TRW	4701-03-1212	1
R65	RES. MF, 1/BW, 1%, 124	RN55D-1240F	TRW	4701-03-1240	1
R62	RES. MF, 1/BW, 1%, 12.4K	RN55D-1242F	TRW	4701-03-1242	1
TITLE PCA. GENERATOR BD 188-S-1257		ASSEMBLY NO. 1100-00-3265			REV B
WAVETEK PARTS LIST		PAGE 4			

REFERENCE DESIGNATORS	PART DESCRIPTION	DRIC-MFCR-PART-NO	MFCR	WAVETEK NO.	QTY/PT
R91	RES. MF, 1/BW, 1%, 24.9K	RN55D-2492F	TRW	4701-03-2492	1
R95	RES. MF, 1/BW, 1%, 2.74K	RN55D-2741F	TRW	4701-03-2741	1
R43	RES. MF, 1/BW, 1%, 27.4	RN55D-27R4F	TRW	4701-03-2749	1
R120 R59	RES. MF, 1/BW, 1%, 3.01K	RN55D-3011F	TRW	4701-03-3011	2
R113	RES. MF, 1/BW, 1%, 301K	RN55D-3013F	TRW	4701-03-3013	1
R106 R13	RES. MF, 1/BW, 1%, 316	RN55D-3160F	TRW	4701-03-3160	2
R35	RES. MF, 1/BW, 1%, 3.16K	RN55D-3161F	TRW	4701-03-3161	1
R134	RES. MF, 1/BW, 1%, 33.2	RN55D-33R2F	TRW	4701-03-3329	1
R117	RES. MF, 1/BW, 1%, 3.65K	RN55D-3651F	TRW	4701-03-3651	1
R17 R50	RES. MF, 1/BW, 1%, 38.3K	RN55D-3832F	TRW	4701-03-3832	2
R108	RES. MF, 1/BW, 1%, 392	RN55D-3920F	TRW	4701-03-3920	1
R139 R84	RES. MF, 1/BW, 1%, 4.02K	RN55D-4021F	TRW	4701-03-4021	2
R80	RES. MF, 1/BW, 1%, 40.2	RN55D-40R2F	TRW	4701-03-4029	1
R100 R103 R16	RES. MF, 1/BW, 1%, 41.2K	RN55D-4122F	TRW	4701-03-4122	3
R115	RES. MF, 1/BW, 1%, 4.32K	RN55D-4321F	TRW	4701-03-4321	1
R71 R98	RES. MF, 1/BW, 1%, 464	RN55D-4640F	TRW	4701-03-4640	2
TITLE PCA. GENERATOR BD 188-S-1257		ASSEMBLY NO. 1100-00-3265			REV B
WAVETEK PARTS LIST		PAGE 6			

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BUMPES AND BREAK SHARP EDGES	DRAWN	DATE	WAVETEK SHEB DENO • CALIFORNIA	
MATERIAL	CHECKED			
	PROJ ENGL			
	RELEASE APPROV.			
FINISH WAVETEK PROCESS	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES			
DO NOT SCALE DRAWING	SIZE	FSM NO.	DWG NO.	REV
	D	23338	1100-00-3265	D
	SCALE	188-S-1257 SHEET 1 OF 2		

8						7						6						5						4						3						2						1					
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.																																															
REV						ECO						BY						DATE						APP																							
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG-MFG-PART-NO						MFCR						WAVETEK NO.						QTY/PT																	
R102 R105 R18						RES. MF. 1/8W. 1X. 46. 4K						RN55D-4642F						TRW						4701-03-4642						3																	
R125 R126 R127						RES. MF. 1/8. 1X. 499						RN55D-4990F						TRW						4701-03-4990						3																	
R6						RES. MF. 1/8W. 1X. 4. 99K						RN55D-4991F						TRW						4701-03-4991						1																	
R51						RES. MF. 1/8W. 1X. 51. 1						RN55D-51R1F						TRW						4701-03-5119						1																	
R129						RES. MF. 1/8W. 1X. 5. 49K						RN55D-5491F						HEPCO						4701-03-5491						1																	
R41						RES. MF. 1/8W. 1X. 54. 9						RN55D-5499F						TRW						4701-03-5499						1																	
R68						RES. MF. 1/8W. 1X. 576						RN55D-5760F						TRW						4701-03-5760						1																	
R150 R30						RES. MF. 1/8W. 1X. 5. 76K						RN55D-5761F						TRW						4701-03-5761						2																	
R20						RES. MF. 1/8W. 1X. 604						RN55D-6040F						TRW						4701-03-6040						1																	
R7						RES. MF. 1/8W. 1X. 6. 19K						RN55D-6191F						TRW						4701-03-6191						1																	
R1 R64						RES. MF. 1/8W. 1X. 681						RN55D-6810F						TRW						4701-03-6810						2																	
R131						RES. MF. 1/8W. 1X. 7. 15K						RN55D-7151F						TRW						4701-03-7151						1																	
R122 R33 R38						RES. MF. 1/8W. 1X. 750						RN55D-7500F						TRW						4701-03-7500						3																	
R31 R48						RES. MF. 1/8W. 1X. 76. 8K						RN55D-7682F						TRW						4701-03-7682						2																	
R24						RES. MF. 1/8W. 1X. 78. 7K						RN55D-7872F						TRW						4701-03-7872						1																	
R72						RES. MF. 1/8W. 1X. 78. 7						RN55D-7887F						TRW						4701-03-7879						1																	
R85						RES. MF. 1/8W. 1X. 909						RN55D-9090F						TRW						4701-03-9090						1																	
WAVETEK PARTS LIST						TITLE PCA. GENERATOR BD 188-S-1257						ASSEMBLY NO. 1100-00-3265						REV B																													
PAGE 7																																															
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG-MFG-PART-NO						MFCR						WAVETEK NO.						QTY/PT																	
Q17						GENERAL PURPOSE TO-5 TRANS 2N2905A PNP						2N2905A						NSC						4901-02-9051						1																	
Q3						GENERAL PURPOSE TO-5 TRANS. GENERAL PURPOSE. PNP. TO-92						2N3638A						CARTR						4901-03-6381						1																	
Q4 Q5						TRANS. GENERAL PURPOSE. NPN. TO-92						PN3642						NSC						4901-03-6420						2																	
Q1						TRANS. GENERAL PURPOSE. NPN. TO-92						2N3903						NSC						4901-03-9030						1																	
Q13 Q15 Q7 Q8						TRANS 2N3904 NPN GENERAL PURPOSE TO-92						2N3904						FAIR						4901-03-9040						4																	
Q6						TRANS. GENERAL PURPOSE. PNP. TO-92						2N3905						ITI						4901-03-9050						1																	
Q12						TRANS 2N3906 PNP GENERAL PURPOSE TO-92						2N3906						FAIR						4901-03-9060						1																	
Q11						TRANS. GENERAL PURPOSE. PNP. TO-92						FN4122						NSC						4901-04-1220						1																	
Q9 Q10						TRANS. N/PR. 2N5485 QTY: 2: 4901-03-4850						4998-00-0009						KLQ						4998-00-0009						1																	
Q14						TRANS. 2N3906. QTY: 1: 49 01-03-9060						4998-00-0058						KLQ						4998-00-0058						1																	
2						SWITCH ASSY PB						5103-00-0026						WTK						5103-00-0026						1																	
WAVETEK PARTS LIST						TITLE PCA. GENERATOR BD 188-S-1257						ASSEMBLY NO. 1100-00-3265						REV B																													
PAGE 9																																															
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG-MFG-PART-NO						MFCR						WAVETEK NO.						QTY/PT																	
U9						GATE. NAND. QUAD 2-INP. TTL						SN74LS00N						TI						8000-74-0010						1																	
U10						FLIP-FLOP DUAL. D-POS EDGE TRIG. TTL						74LS74						TI						8000-74-7410						1																	
WAVETEK PARTS LIST						TITLE PCA. GENERATOR BD 188-S-1257						ASSEMBLY NO. 1100-00-3265						REV B																													
PAGE 11																																															

REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG-MFG-PART-NO						MFCR						WAVETEK NO.						QTY/PT					
R25						RES. MF. 1/8W. 1X. 93. 3K						RN55D-9332F						TRW						4701-03-9332						1					
R8						RES. MF. 1/8W. 1X. 9. 76K						RN55D-9761F						TRW						4701-03-9761						1					
R36 R94						RES. MF. 1/4W. 1X. 1M						RN60D-1004F						TRW						4701-13-1004						2					
R28						RES. MF. 1/4W. 1X. 499K						RN60D-4993F						TRW						4701-13-4993						1					
R29						RES. MF. 1/4W. 1X. 619K						RN60D-6193F						TRW						4701-13-6193						1					
R146 R147						RES. MF. 1M. 1X. 100						RN70D-1000F						TRW						4701-33-1000						2					
R3 R4						RES. SET. 2-10K. 1/8W QTY: 2: 4701-03-1002						4789-00-0019						IRC						4789-00-0019						1					
J						RES. 0 OHM JUMPER						JP02Y680						RDMH						4799-00-0087						14					
R121						DIODE. ZENER. 3.3V. 5X TOL. 500MW. 0/8. IN746A						IN746A						FAIR						4801-01-0746						1					
CR19 CR5						DIODE. ZENER. 6.2V. IN623						IN623A						HDT						4801-01-0823						2					
CR1 CR11 CR12 CR13 CR14 CR2 CR22 CR23 CR3 CR4						DIODE. 1N4002 GEN PURPOSE RECT. 100V. 1A						1N4002						FAIR						4801-02-0001						10					
CR10 CR15 CR16 CR17 CR18 CR20 CR21 CR6 CR7 CR8 CR9						DIODE 1N4148 COMPUTER. 0/P. 75V. 200M A. SWITCHING						1N4148						FAIR						4807-02-6666						11					
Q16						TRANS 2N2219A NPN						2N2219A						NSC						4901-02-2191						1					
WAVETEK PARTS LIST						TITLE PCA. GENERATOR BD 188-S-1257						ASSEMBLY NO. 1100-00-3265						REV B																	
PAGE 8																																			
REFERENCE DESIGNATORS						PART DESCRIPTION						ORIG-MFG-PART-NO						MFCR						WAVETEK NO.						QTY/PT					
U11						OP AMP. DUAL JFET INPUT						1L083CN						TI						7000-00-8300						1					
U1						OP AMP. QUAD BIPOL MOS/FET INPUT						1L084CN						TI						7000-00-8400						1					
U2						OP AMP. QUAD MC1741 DIFFERENTIAL INPUT						LM348N						NSC						7000-03-4800						1					
U14						OP AMP. INTERNALLY COMP. HIGH PERFORMANCE						LM741CN						NSC						7000-07-4100						1					
U12 U5						DIODE. ULTRA FAST. LOW CAPACITANCE						CA3019						HARIB						7000-30-1900						2					
U13						TRANS ARRAY. GENERAL PURPOSE NPN						CA-3046						RCA						7000-30-4600						1					
U3 U6						TRANS ARRAY. GENERAL PURPOSE. NPN						CA3083						RCA						7000-30-8300						2					
U4						TRANS ARRAY. NPN/PNP						CA3096AE						HARIB						7000-30-9600						1					
VR2						VOLT REGULATOR. POSITIVE						78L15						TI						7000-78-1501						1					
U7						RECEIVER. DUAL LINE						SI75107AN						TI						7007-31-0700						1					
U8						GATE. NAND. QUAD 2-INPUT						7400						TI						8000-74-0000						1					
WAVETEK PARTS LIST						TITLE PCA. GENERATOR BD 188-S-1257						ASSEMBLY NO. 1100-00-3265						REV B																	
PAGE 10																																			

REMOVE ALL BURNS AND BREAK SHARP EDGES		DRAWN		DATE	
MATERIAL		CHECKED			
		PROJ. ENGR.			
		RELEASE APPROV.			
FINISH WAVETEK PROCESS		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES			
DO NOT SCALE DRAWING		SCALE			

WAVETEK SAN DIEGO • CALIFORNIA			
PARTS LIST GENERATOR BOARD			
SIZE	D	FSCM NO.	23338
DWG. NO.	1100-00-3265		
REV	D		
188-S-1257 SHEET 2 OF 2			

NOTE: UNLESS OTHERWISE SPECIFIED

SECTION 7

PARTS AND SCHEMATICS

7.1 DRAWINGS

The following assembly drawings (with parts lists) and schematics are in the arrangement shown below.

7.2 ORDERING PARTS

When ordering spare parts, please specify part number, circuit reference, board, serial number of unit and, if applicable, the function performed.


7.3 ERRATA

Under Wavetek's product improvement program, the latest electronic designs and circuits are incorporated into each Wavetek instrument as quickly as development and testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, errata pages are prepared to summarize the changes made and are inserted inside the shipping carton with this manual. If not such pages exist, the manual is correct as printed.

DRAWING	DRAWING NUMBER
Instrument Schematic	1004-00-0581
Chassis Assembly	1101-00-3266
Chassis Parts List	1100-00-3266
Generator Board Schematic	1104-00-3265
Generator Board Assembly	1101-00-3265
Generator Board Parts List	1100-00-3265
Sweep Board Schematic	1104-00-3208
Sweep Board Assembly	1101-00-3208
Sweep Board Parts List	1100-00-3208

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP
A	ERU# 349	MS	9/18/83	AM

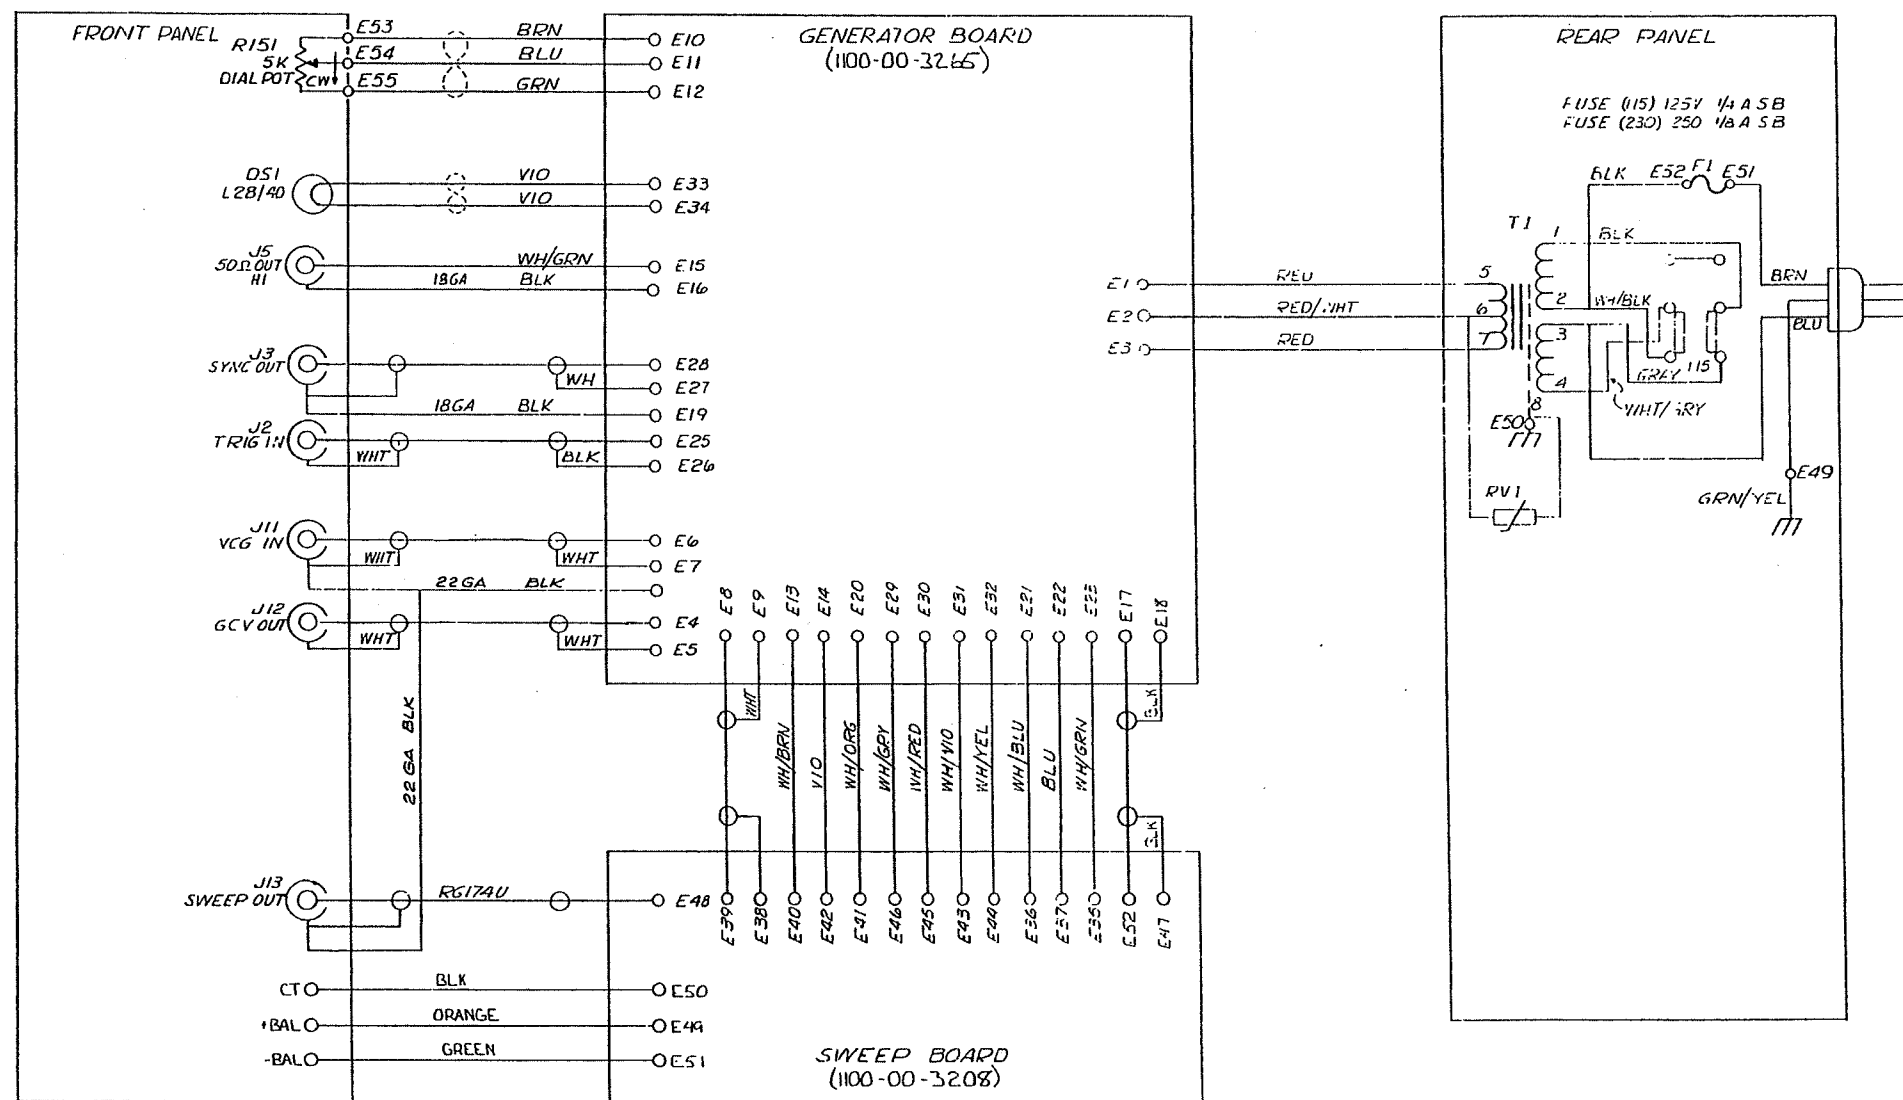


NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAGON B. 12/11/83	DATE 9/18/83	WAVETEK SAN DIEGO - CALIF. 92101
MATERIAL	20. 1/2" X 1/2" X 1/2"	1/2" X 1/2" X 1/2"	
FINISH WAVETEK PROCESS	TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 XX - .030	DO NOT SCALE Dwg	SCALE
MODEL NO. 178-S-1257		DATE 10/04/00-11/31	REV. A
23338		SHEET 1 OF 1	

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECO	BY	DATE	PP
A	ERD # 89-565	MS	7/29	1

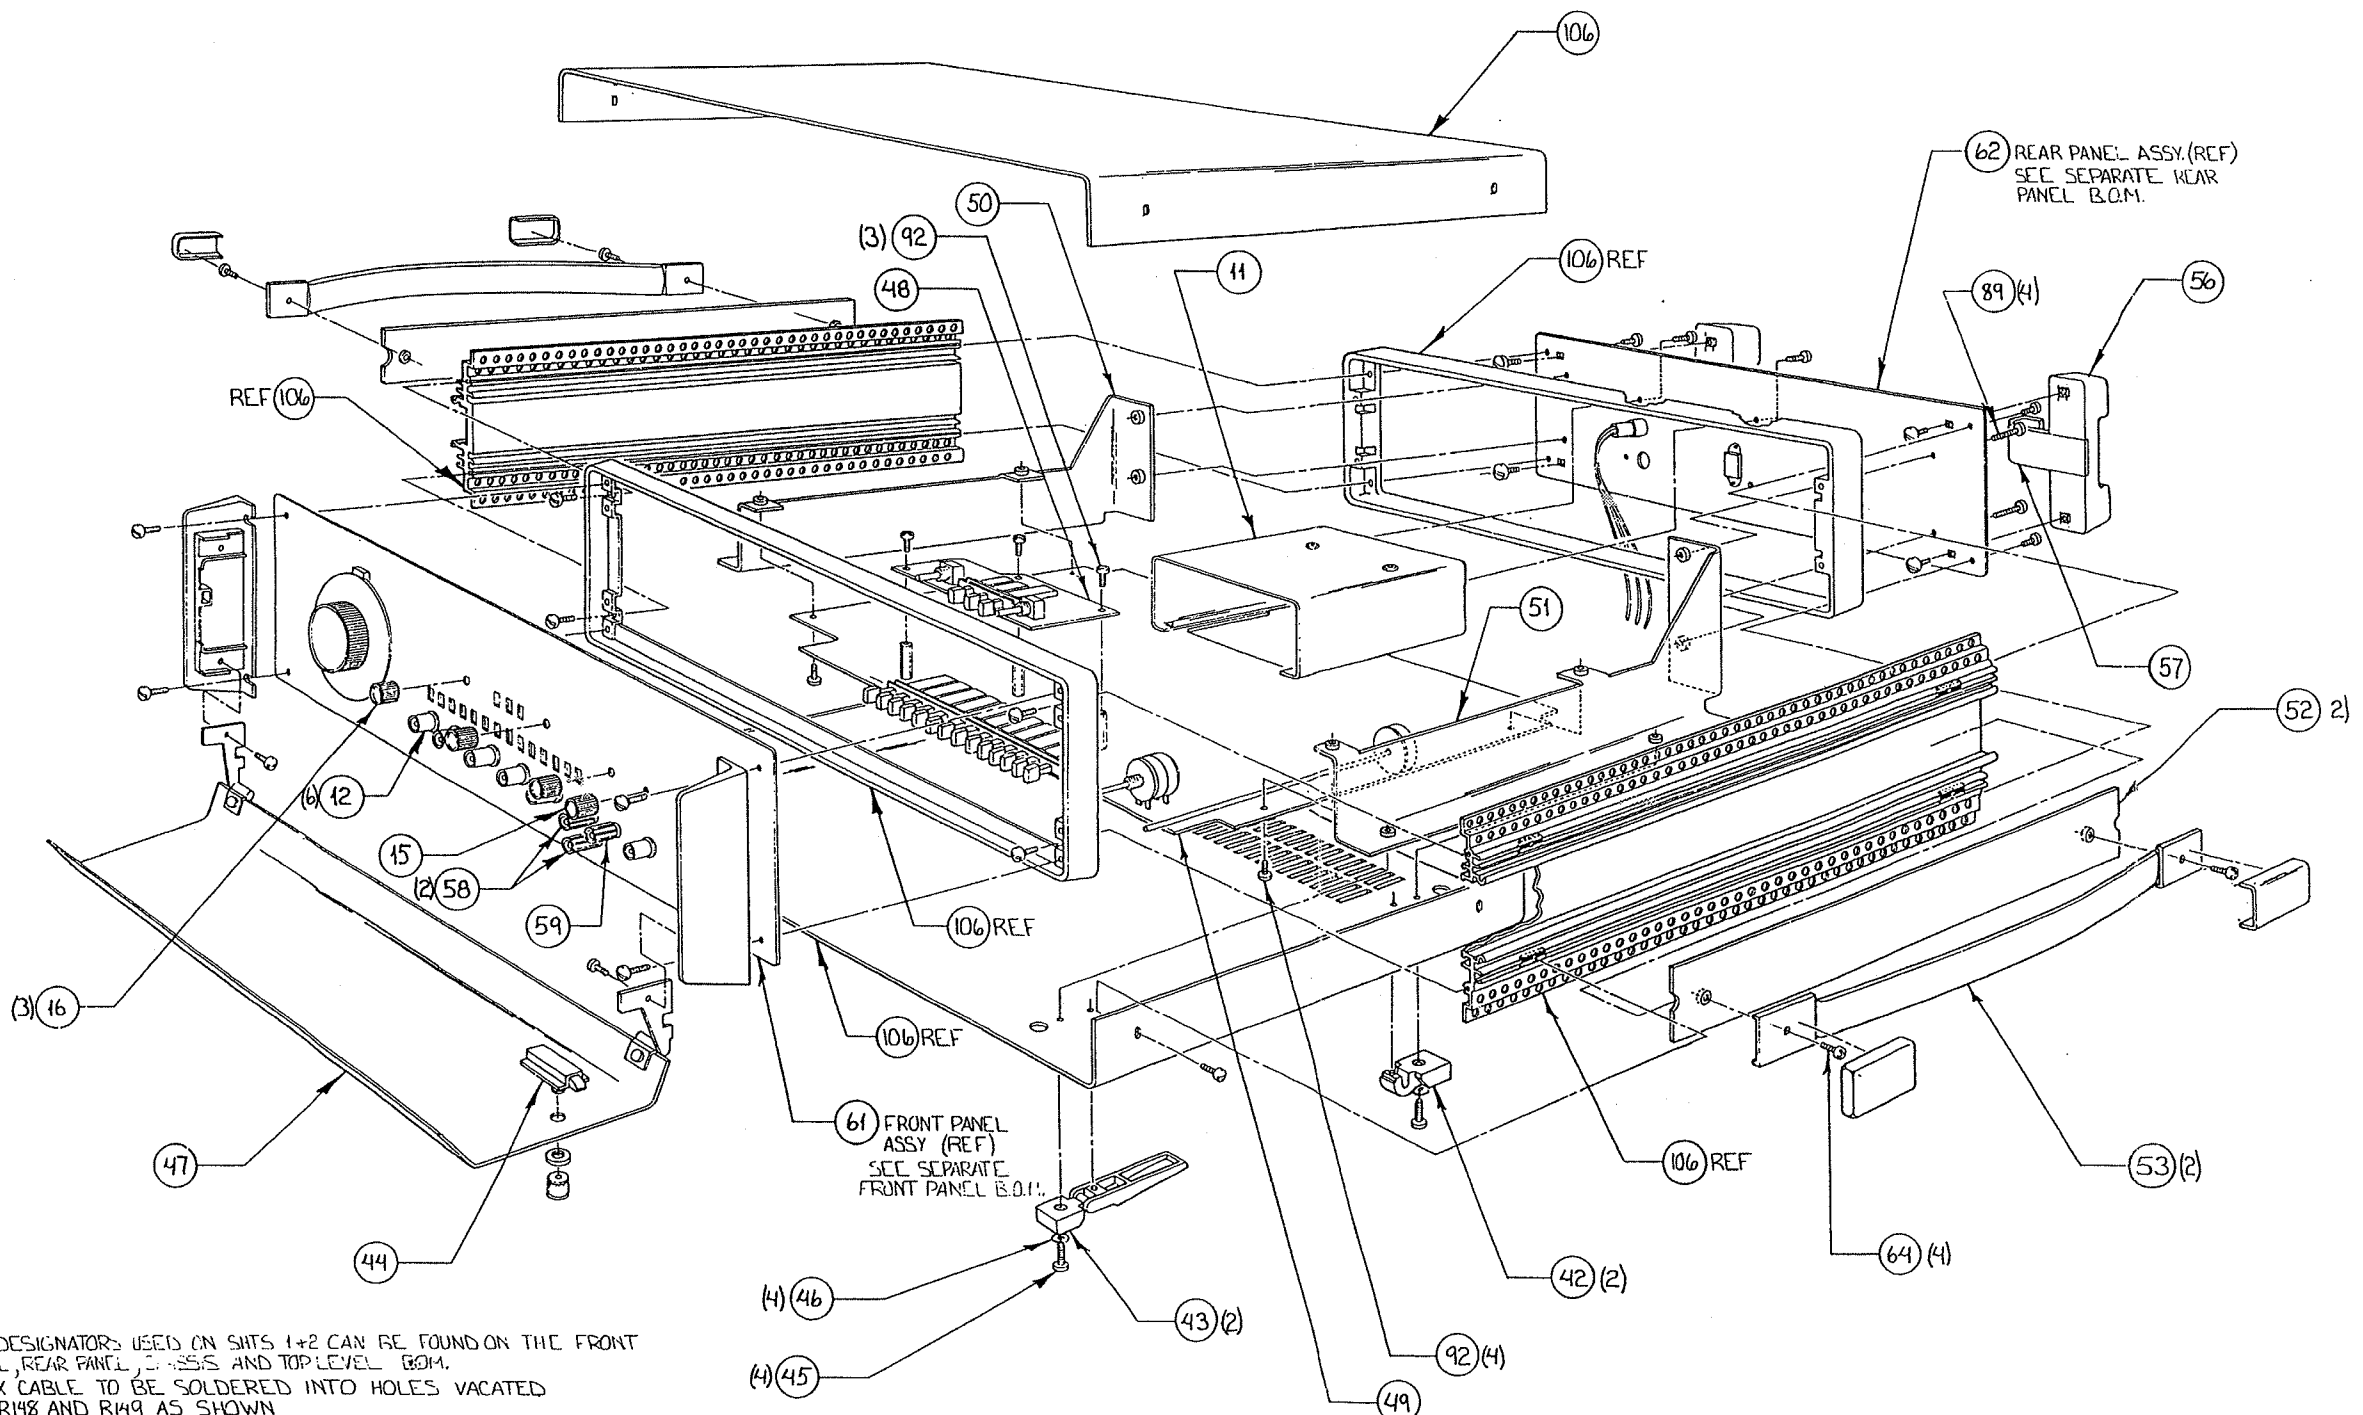

7. REF. DESIGNATORS USED ON SHTS 1+2 CAN BE FOUND ON THE FRONT PANEL, REAR PANEL, CHASSIS AND TOP LEVEL BOM.

△ COAX CABLE TO BE SOLDERED INTO HOLES VACATED BY R148 AND R149 AS SHOWN

△ SECURE LAMP IN HOUSING WITH #3140 SILICONE RTV.

△ CRITICAL - LEAD LENGTH FROM COAX BREAKOUT TO BNC AND LUG MUST BE KEPT AS SHORT AS POSSIBLE.

△ WRAP LEADS AROUND BNC POSTS (TY-WRAP AS REQUIRED)


△ TERMINALS AND BUSS WIRES TO BE SHRINK SLEEVED.

1. REFERENCE DESIGNATORS 41, 42, 43, 44, 45, 46, 8, 30, 40, 47, 4 AND 5 TO BE FOUND ON THE TOP LEVEL 1000 BILL OF MATERIAL.

NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES		DRAWN: DILLI COOPER		DATE: 6/28/89	
MATERIAL		CHECKED: M. S. SMITH		DATE: 7/14/89	
FINISH WAVETEK PROCESS		PROJ. ENGR: Y. S. MULL		DATE: 7/1/89	
DO NOT SCALE DRAWING		RELEASE APPROV: Y. S. MULL		DATE: 7/1/89	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES					
.XX ± .XXX ±					
WAVETEK SAN DIEGO • CALIFORNIA		TITLE: ASSEMBLY DRAWING CHASSIS		REV: A	
SIZE: D	FSCM NO.: 23338	DWG. NO.: 1101-00-326-6	SHEET 1 OF 2		

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

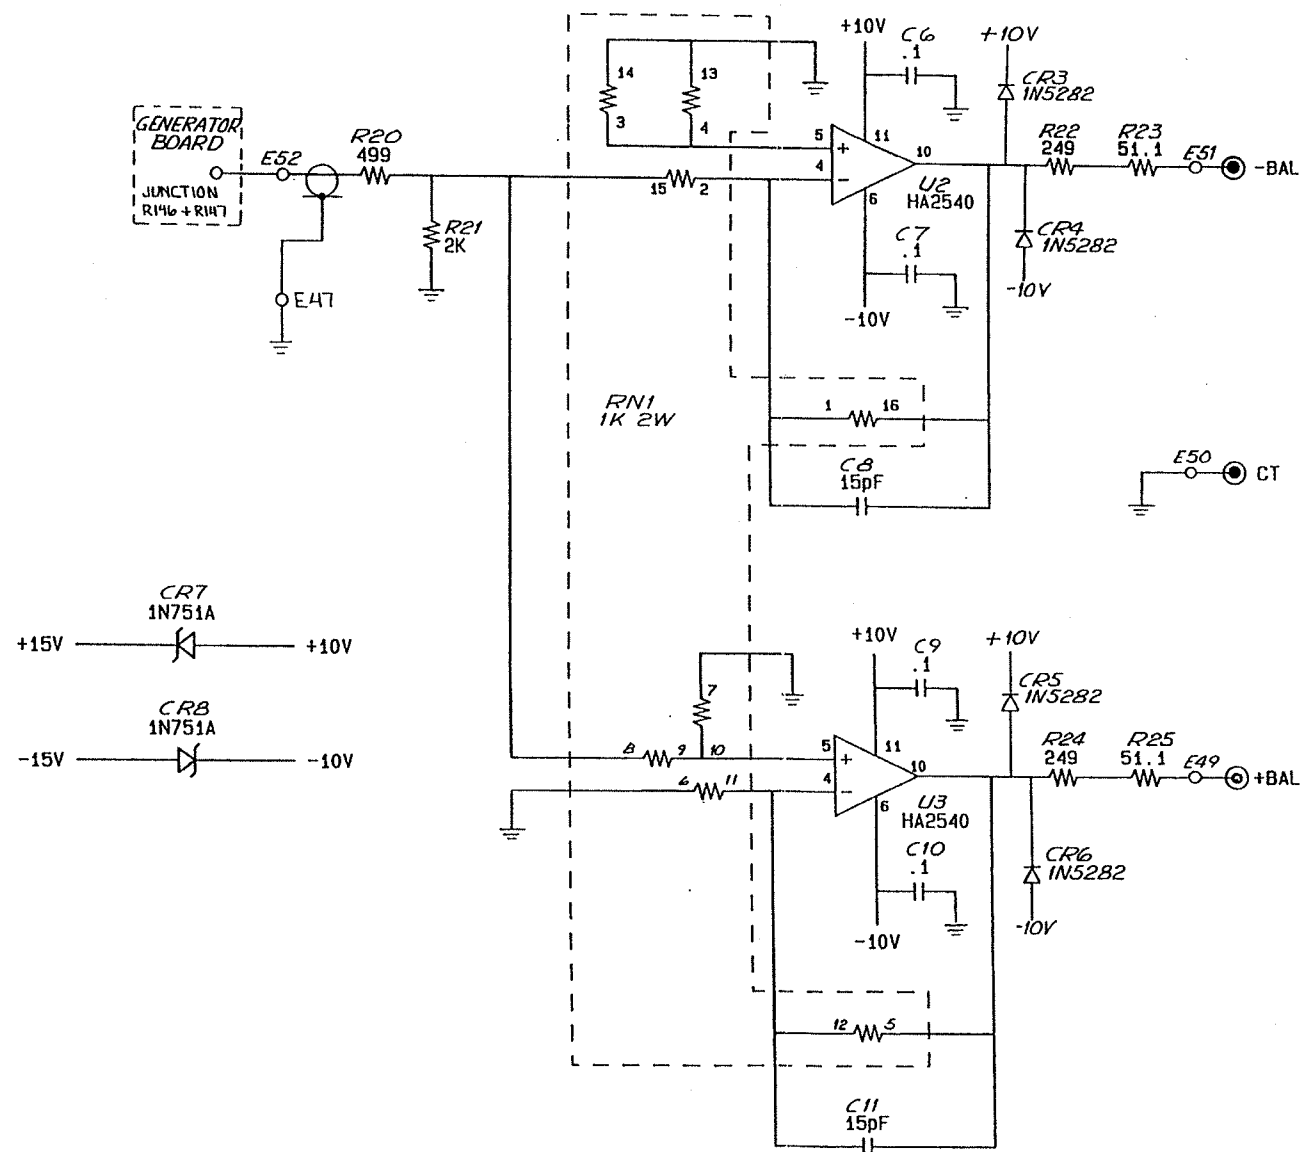


NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES		DRAWN <i>FIER</i>		DATE 1-9-89		WAVETEK	
MATERIAL		CHECKED <i>For R</i>		DATE 1-10-89		TITLE SCHEMATIC SWEEP BOARD (600 OHM)	
FINISH WAVETEK PROCESS		PROJ. ENGR. <i>Don Wood</i>		DATE 1-10-89		REV B	
DO NOT SCALE DRAWING		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES XX ± .XX ±		SIZE D		FSCM NO. 23338	
				SCALE		MODEL 28-5-1257 SHEET 2 OF 2	

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP
A	ERO # 32-428	DB	4/6/87	111

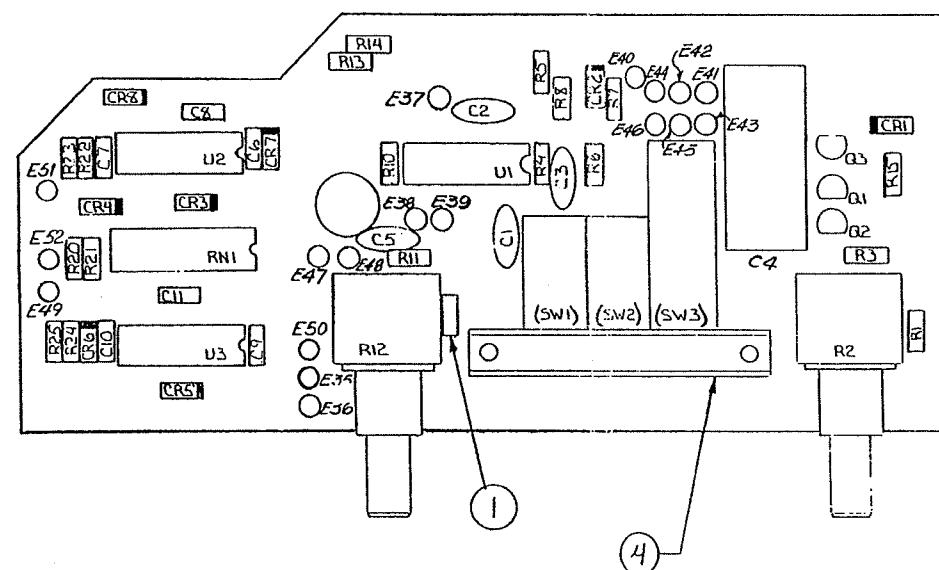

2. SEE SEPARATE PARTS LIST.

1. ASSEMBLE PER WAVETEK COMMERCIAL WORKMANSHIP STANDARDS.
NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DRAWN: MELISSA NITH	DATE: 4/26/87	WAVETEK
MATERIAL	BY: DB	DATE: 4/6/87	TITLE: ASSEMBLY SWEEP BOARD
FINISH WAVETEK PROCESS	APPROVED: N. E. NITH	DATE: 4/6/87	WAVETEK
DO NOT SCALE DWG	SCALE: 2/1	MODEL: N3	138-S-1257
SCALE	2/1	DWG NO	1101-00-3208
CODE IDENT	23338	REV	A
		SHEET	1 OF 1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED, WITHOUT WRITTEN AUTHORIZATION, FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE

ZONE	LTR	ECO NO	CHANGED BY	APPR D BY	DATE

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFG-PART-NO	MFG	WAVETEK NO.	QTY/PT
NONE	A/D SWEEP BD 188-S-1257	1101-00-3208	WVTK	1101-00-3208	1
NONE	SCHEMATIC SWEEP BD 188-S-1257	1104-00-3208	WVTK	1104-00-3208	1
C3 C5	CAP. CER. .001UF, 1KV	DD-102	CRL	1500-01-0211	2
C1 C2	CAP CER MON .01MF 50V, AXIAL	CAC0225U103Z100A	CORNG	1500-01-0310	2
C10 C6 C7 C9	CAP. CER. MON. .1MF, 50V, AXIAL	CAC0325U104Z050A	CORNG	1500-01-0405	4
C11 C8	CAP. CER. 15PF, 100V, AXI AL	CAC02C09150J100A	CORNG	1500-01-5006	2
C4	CAP. MYLR, 2UF, 200V+/-1 0%	2HF4205K	AMRAD	1500-42-0504	1
3	PCB SWEEP BD 188-S-1257	1700-00-3208	WVTK	1700-00-3208	1
R12 R2	POT. CONT. 10K	72MIN056S103U	AB	4600-01-0322	2
R9	POT. TRIM, 20K	91AR20K	BECK	4600-02-0301	1
R15 R3	RES. MF, 1/8W, 1%, 10K	RN55D-1002F	TRW	4701-03-1002	2
R6	RES. MF, 1/8W, 1%, 100K	RN55D-1003F	TRW	4701-03-1003	1
R21	RES. MF, 1/8W, 1%, 2K	RN55D-2001F	TRW	4701-03-2001	1
TITLE PCA, SWEEP BD 188-S-1257		ASSEMBLY NO. 1100-00-3208			REV A
PAGE 1					

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFG-PART-NO	MFG	WAVE1EK NO	QTY/PT
CR1 CR2	DIODE 1N4148 COMPUTER, Q/P, 75V, 200M A, SWITCHING	1N4148	FAIR	4807-02-6666	2
Q3	TRANS. GENERAL PURPOSE, NPM, TO-92	2N3903	NSC	4901-03-9030	1
Q1 Q2	TRANS. M/PR, 2N3905 QTY: 2: 4901-03-9050	4998-00-0049	WVTK	4998-00-0049	1
4	SWITCH ASSY PB	5103-00-0030	WVTK	5103-00-0030	1
U1	OP AMP, DUAL JFE1 INPUT	TL083CN	TI	7000-00-8300	1
U2 U3	OP-AMP, LIN, WIDE BAND	HA1-2540-5	HARIS	7000-25-4000	2
WAVETEK PARTS LIST		TITLE PCA, SWEEP BD 188-S-1257		ASSEMBLY NO. 1100-00-3208	
				REV A	
PAGE 3					

REFERENCE DESIGNATORS	PART DESCRIPTION	ORIG-MFGR-PART-NO	MFGR	WAVETEK NO.	QTY/PT
R22 R24	RES. MF, 1/8W, 1%, 249	RN55D-2490F	TRW	4701-03-2490	2
R5	RES. MF, 1/8W, 1%, 33.2K	RN55D-3322F	TRW	4701-03-3322	1
R20	RES. MF, 1/8, 1%, 499	RN55D-4990F	TRW	4701-03-4990	1
R10 R7	RES. MF, 1/8W, 1%, 4.99K	RN55D-4991F	TRW	4701-03-4991	2
R14 R8	RES. MF, 1/8W, 1%, 49.9K	RN55D-4992F	TRW	4701-03-4992	2
R23 R25	RES. MF, 1/8W, 1%, 51.1	RN55D-5111F	TRW	4701-03-5119	2
R11	RES. MF, 1/8W, 1%, 604	RN55D-6040F	TRW	4701-03-6040	1
R4	RES. MF, 1/8W, 1%, 90.9K	RN55D-9092F	TRW	4701-03-9092	1
R1	RES. MF, 1/4W, 1%, 402K	RN60D-4023F	TRW	4701-13-4023	1
R13	RES. MF, 1/4W, 1%, 499K	RN60D-4993F	TRW	4701-13-4993	1
RN1	RES NETWORK 1K 2W 16PIN DIP	4116R-001-102	BDURN	4770-00-0019	1
1	RES. 0 OHM JUMPER	JP02Y68G	ROHM	4799-00-0087	1
CR7 CR8	DIODE, ZENER, 5.1V, 5X TOL, 500MW, Q/B, 1N751A	1N751A	FAIR	4801-01-0751	2
CR3 CR4 CR5 CR6	DIODE, HIGH CONDUCTANCE, ULTRA FAST	1N52B2	FAIR	4801-01-5282	4
WAVETEK PARTS LIST		TITLE PCA, SWEEP BD 188-S-1257		ASSEMBLY NO. 1100-00-3208	
				REV A	
PAGE 2					

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES AND TOLERANCES ARE				DO NOT SCALE DWG REMOVE ALL BURRS BREAK SHARP EDGES		WAVETEK WaveTek Inc.	
1/2	XXX	.XX	±	DRAWN	DATE	TITLE	
± 1/64	± .005	± .01	± 1°	CHKD		PARTS LIST SWEEP BOARD	
MATERIAL:				ENG APPR			
FINISH:				MFG APPR			
				ISSUED			
				SCALE:	CODE IDENT	23338	SHEET 1 OF 1

870000

8

7

6

5

4

3

2

1

REV

ECO

BY

DATE

APP

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REFERENCE DESIGNATORS

PART DESCRIPTION

ORIG-MFG-PART-NO

MFG

WAVETEK NO.

QTY/PT

48

PCA, SHEEP BD 188-S-1257

1100-00-3208

WVTK

1100-00-3208

1

49

PCA, GENERATOR BD 188-S-1257

1100-00-3265

WVTK

1100-00-3265

1

NONE

A/D CHASSIS 188-S-1257

1101-00-3266

WVTK

1101-00-3266

1

61

FRONT PANEL SUB ASSY. 188-S-1257

1200-00-3274

WVTK

1200-00-3274

1

62

REAR PANEL SUB ASSY. 188-S-1257

1200-00-3275

WVTK

1200-00-3275

1

NONE

WIRE KIT, CHASSIS 188-S-1257

1200-00-3280

WVTK

1200-00-3280

1

50

BOARD MOUNTING BRKT-LEFT

1400-02-5001

WVTK

1400-02-5001

1

51

BOARD MOUNTING BRKT-RIGHT

1400-02-5002

WVTK

1400-02-5002

1

52

PLATE, CARRYING STRAP

1400-02-5003

WVTK

1400-02-5003

2

15

KNOB, SMALL

0-M-9

RDGAN

2400-01-0010

1

16

KNOB, 1/4IN BUSHING

RB-67-0-M-9

RDGAN

2400-01-0017

3

53

HANDLE, RETRACTABLE

2800-07-0035

WVTK

2800-07-0035

2

35

RIVET 1/8X3/16L

1125-0406

AVDEL

2800-12-0011

2

WAVETEK PARTS LIST

TITLE CHASSIS 188-S-1257

ASSEMBLY NO. 1100-00-3266

REV A

PAGE 1

REFERENCE DESIGNATORS

PART DESCRIPTION

ORIG-MFG-PART-NO

MFG

WAVETEK NO.

QTY/PT

105

KEP 8-32 CPS

0240-00003

ARDW

0240-00003

3

NONE

A/D CHASSIS 188-S-1257

1101-00-3266

WVTK

1101-00-3266

1

NONE

WIRE KIT, FRONT PANEL 188-S-1257

1200-00-3279

WVTK

1200-00-3279

1

65

DIAL ASSY-188

188-2127

WVTK

1201-00-2127

1

5

INDICATOR, DIAL

180-303

WVTK

1400-00-4970

1

9

FRONT PANEL 188-S-1257

1400-02-4999

WVTK

1400-02-4999

1

12

CORN BNC

KC-7946

KING

2100-01-0002

6

58

BINDING POST, TIN PL. BLK

3740-0

ITTPD

2100-01-0028

2

59

BIND POST, RED, TIN PLT

3740-2

PKDNA

2100-01-0030

1

63

TERM LOCK LUG

1414-B

SMITH

2100-04-0010

3

14

SOLDER LUG

1497

SMITH

2100-04-0012

6

NONE

BUSHING NYLINER

4L2FF

THORN

2800-01-0002

3

NONE

BUSHING(NYLINER)1/8

2L2FF

THORN

2800-01-0005

1

93

NUT, HEX, 4-40 R/P, 2

4-40 R/P

CMRCL

2800-16-4100

1

94

WASHER, FLAT, 4L 209

NA5620-4

CMRCL

2800-26-4001

1

WAVETEK PARTS LIST

TITLE FRONT PANEL SUB ASSY. 188-S-1257

ASSEMBLY NO. 1200-00-3274

REV B

PAGE 1

REFERENCE DESIGNATORS

PART DESCRIPTION

ORIG-MFG-PART-NO

MFG

WAVETEK NO.

QTY/PT

NONE

A/D CHASSIS 188-S-1257

1101-00-3266

WVTK

1101-00-3266

1

2

TRANSFORMER

182A-0041

WVTK

1204-00-0041

1

30

LABEL, WARNING

801-6940

WVTK

1400-00-6940

1

40

LABEL, WARRANTY

1400-02-3380

WVTK

1400-02-3380

1

11

BRACKET, AC SHIELD 188-S-1257

1400-02-4998

WVTK

1400-02-4998

1

10

REAR PANEL 188-S-1257

1400-02-5000

WVTK

1400-02-5000

1

41

LABEL, FOIL, NSN

1400-02-5005

WVTK

1400-02-5005

1

13

SOLDER LUG

11A144

ZIER

2100-04-0025

2

F1

FUSE, 1/4A, 250V, S-B

313. 250

LITFU

2400-05-0008

1

XF1

FUSE HOLDER

031. 1653/031. 1666(OBS)

SCHJR

2400-05-0012

1

56

FOOT, REAR PANEL, MOD 188-S-1257

20823-668

SCHRF

2800-08-0022

1

35

RIVET 1/8X3/16L

1125-0406

AVDEL

2800-12-0011

2

34

RIVET, STL, CHOBEIT, L=3 /16, MAT THINNESS .063-. 125

1121-0607

AVDEL

2800-12-0060

2

97

NUT, FLEXLOC, 6-32, 2

6-32 NUT F. L.

CMRCL

2800-15-6100

2

WAVETEK PARTS LIST

TITLE REAR PANEL SUB ASSY. 188-S-1257

ASSEMBLY NO. 1200-00-3275

REV C

PAGE 1

REFERENCE DESIGNATORS

PART DESCRIPTION

ORIG-MFG-PART-NO

MFG

WAVETEK NO.

QTY/PT

64

SCREW, 6-32X3/8 TRUSS HD, SLOTTED, 2 6-32 X 3/8

6-32 X 3/8

CHMCL

2800-20-6106

4

88

SCREW, 4-40 X 3/8 PHP, F

4-40X38PH-ST

WVTK

2800-22-4106

2

89

SCREW, 6-32X5/16 PHP, NYLON PATCH, 2 PATCH, 6-32 X 5/16

6-32X 5/16 NYLON

CHMCL

2800-23-6105

4

90

WASHER, FLAT, 4L 209 D. D.)

NA5620-4

CHMCL

2800-26-4001

2

91

#4 LOCKWASHER, PLATED

#4SRLW

CHMCL

2800-42-4000

2

92

SCREW, MACHINE, PAN HEAD, PHLPS, SELF LOCK PATCH, #4-40 X 3/8

NP851957-15

NYLON

2800-36-4106

7

106

ENCLOSURE, MOD 188-S-1257

3000-00-0186

SCHRF

3000-00-0186

1

3

INSULATOR(TO-220)

60-11-8302-1674

CHOMR

3100-00-0010

2

55

TIE, CABLE NY NAT (CLAMP)

PLC1M-S4-M

PANDT

377. 4002

1

82

TRANS, PNP, TO-220

T1P30

TI

4902-00-0300

1

VR1

VOLT REGULATOR

HC7B15

NOT

7000-7B-1500

1

WAVETEK PARTS LIST

TITLE CHASSIS 188-S-1257

ASSEMBLY NO. 1100-00-3266

REV A

PAGE 2

REFERENCE DESIGNATORS

PART DESCRIPTION

ORIG-MFG-PART-NO

MFG

WAVETEK NO.

QTY/PT

60

D. D.)

2668

SMITH

2800-27-0004

12

36

WASHER, SHOULDER, WHITE

5814-133-1

SEA

2800-28-0021

1

37

WASHER, FLAT, BRASS, .025 ID, .400 OD

5714-62-32

BESTH

2800-28-0022

1

95

SCREW, 4-40X3/8 PHP, 2 4-40 X 3/8

NS11957-15

COML

2800-38-4106

1

96

#4 LOCKWASHER, PLATED

#4SRLW

CHMCL

2800-42-4000

1

R151

POT, DIAL, 5K+-5%, PRECISION, LINEAR

ECOMOPDT MK111 78PF-14

NEI

4600-05-0212

1

78

WIRE, 18GA

HH181007 (BLK)

BRDRX

6000-31-8000

1

79

WIRE, HU, 22GA

H0101029 (BLK)

JUDD

6000-32-2000

1

80

WIRE, HU, 22GA, TINNED COPPER

780-22 (BRN)

ATLAS

6000-32-2001

1

81

WIRE, HU, 22GA, TINNED COPPER

780-22 (GRN)

ATLAS

6000-32-2003

1

82

WIRE, HU, 22GA, TINNED COPPER

780-22 (GRN)

ATLAS

6000-32-2005

2

83

WIRE, HU, 22GA, TINNED COPPER

780-22 (BLU)

ATLAS

6000-32-2006

1

74

WIRE, HU, 22GA, TINNED COPPER

780-22 (VIO)

ATLAS

6000-32-2007

1

84

WIRE, HU, 22GA, TINNED OVERCOAT

780-22 (WHT/GRN)

ATLAS

6000-32-2093

25

WAVETEK PARTS LIST

TITLE FRONT PANEL SUB ASSY. 188-S-1257

ASSEMBLY NO. 1200-00-3274

REV B

PAGE 2

REFERENCE DESIGNATORS

PART DESCRIPTION

ORIG-MFG-PART-NO

MFG

WAVETEK NO.

QTY/PT

98

SCREW, 6-32X3/8, SOC CAP, 2

6-32 X 3/8 S. C.

CHMCL

2800-18-6106

2

99

SCREW, 6-32X3/8 PHP TYPE 25, 2

6-32X3/8 LQ

CHMCL

2800-22-6006

2

23

STRAIN RELIEF BUSH

SR6W-1

HEYCO

2800-37-0003

1

107

#6 LOCKWASHER, PLATED

#6SRLW

CHMCL

2800-42-6000

2

57

CABLE KEEPER, BLACK

20823-674

SCHRF

3000-00-0188

1

27

DIODE, VARISTOR

V567AB

GE

4899-00-0045

1

29

SWITCH ASSY SLIDE

46256-LFE

SWCFT

5105-00-0002

1

70

WIRE, 18GA

HH181007 (BLK)

BRDRX

6000-31-8000

1

71

WIRE, HU, 18GA

H0102003 (GRN/YEL)

JUDD

6000-31-8045

1

72

WIRE, HU, 22GA

H0101029 (BLK)

JUDD

6000-32-2000

1

73

WIRE, HU, 22GA, TINNED COPPER

780-22 (RED)

ATLAS

6000-32-2002

2

75

WIRE, HU, 22GA, TINNED COPPER

780-22 (GRY)

ATLAS

6000-32-2008

1

76

WIRE, HU, 22GA, TINNED OVERCOAT

780-22 (WHT/BLK)

ATLAS

6000-32-2090

1

86

WIRE, HU, 22GA, TINNED OVERCOAT

780-22 (WHT/RED)

ATLAS

6000-32-2092

1

77

WIRE, HU, 22GA, TINNED OVERCOAT

780-22 (WHT/GRY)

ATLAS

6000-32-2098

1

24

PWR CORD

17534

BELDN

6001-80-0004

1

WAVETEK PARTS LIST

TITLE REAR PANEL SUB ASSY. 188-S-1257

ASSEMBLY NO. 1200-00-3275

REV C

PAGE 2

REMOVE ALL DIMS AND BREAK SHARP EDGES

DRAWN

DATE

WAVETEK

TITLE

PARTS LIST CHASSIS

FINISH WAVETEK PROCESS

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES .XX .XXX .

DO NOT SCALE DRAWING

SIZE FSCM NO. D 23338

DWG. NO. 1100-00-3266

REV A

SCALE 1188-S-1257

SHEET 1 OF 1

8

7

6

5

4


3

2

1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV	ECN	BY	DATE	APP
A	ERO #89-449	RD	1989	MM
B	ECO #89-534	MS	1/1/89	MM

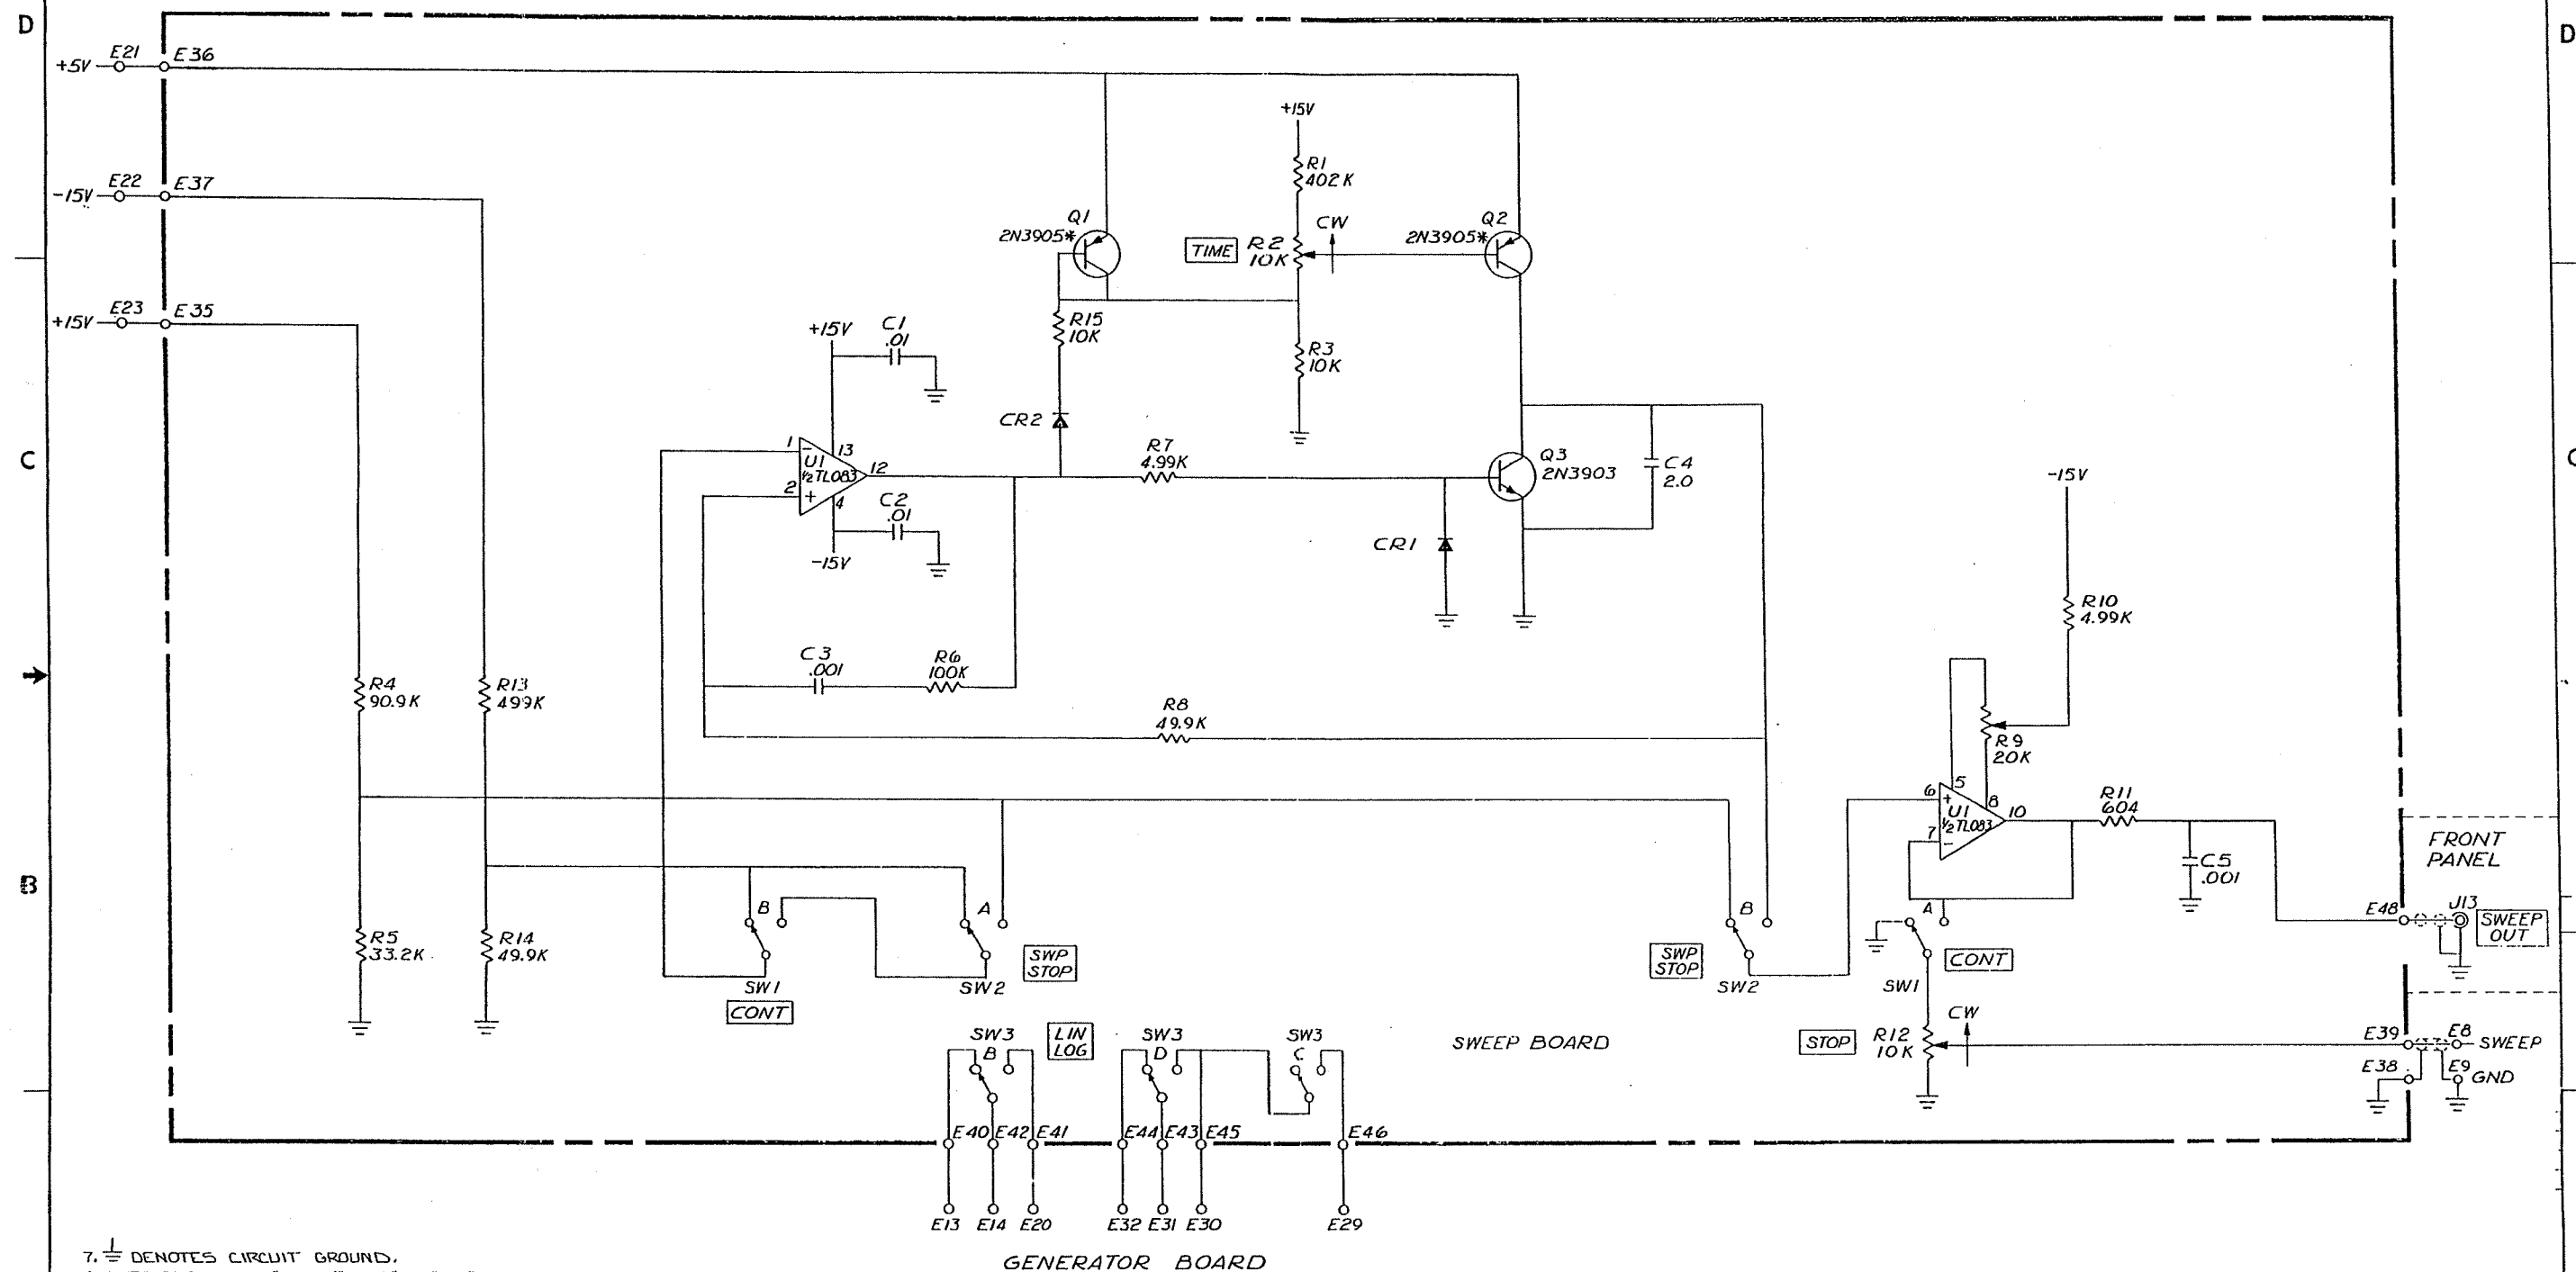

1. \perp DENOTES CIRCUIT GROUND.
 2. SWITCHES SHOWN IN "CONT", "STOP", AND "LIN" MODE
 3. * = MATCHED PAIR P/N 4998-00-0049
 4. LAST REF. DES'G USED:
 - R25, C11, CR8, Q3, SW3, E52
 5. ALL CAPACITORS ARE IN μ F
 6. ALL RESISTORS ARE IN OHMS
 7. ALL DIODES ARE FD6666
- NOTE: UNLESS OTHERWISE SPECIFIED

REMOVE ALL BURRS AND BREAK SHARP EDGES	DATE 1-9-89	WAVETEK SAN DIEGO - CALIFORNIA
MATERIAL	DESIGNED BY FIFER	TITLE SCHEMATIC: SWEEP BOARD (600 OHM)
FINISH WAVETEK PROCESS	APPROVED BY J. E. WALKER	MODEL NO. 188-5-1257
SCALE	DO NOT SCALE DWG	DWG NO. 1104-00-3208
		SHEET 1 OF 2