AN434

Serial bootstrap for the RAM and EEPROM1 of the MC68HC05B6

By Jeff Wright, Motorola Ltd., East Kilbride

INTRODUCTION

The MC68HC05B6 has 256 bytes of on chip EEPROM, called EEPROM1, which can be used to store variable data in a non-volatile manner. In many applications this EEPROM1 will be used to hold a look-up table or system set up variables. In these cases it is usually a requirement that the EEPROM1 be initialised during

the manufacture of the application. In addition, loading small programs into RAM and executing them is an easy way of trying out new software routines. This application note describes one method for serially loading (bootstrapping) the EEPROM1 via a program executing in the RAM of the MC68HC05B6.

BUILT IN BOOTSTRAP

The MC68HC05B6 has a built in RAM serial bootstrap program contained in the mask ROM of the device that uses the SCI. It would therefore seem a simple task to load programs into RAM; however, as ROM space on the device is obviously critical, a very simple protocol has been implemented. This means that the bootloader on the 'B6' does not accept S-records which are the normal output from an assembler; instead, the protocol expects pure binary data preceded by a count byte that holds the size of the program to be downloaded. No address information is contained in the download; instead, the bootloader always starts the program load at address \$50 in RAM. The first byte (the count byte) is stored here and then as the subsequent bytes are received via the SCI they are stored at incrementing RAM locations and the count byte is

decremented for each byte received. When the count byte reaches zero the bootstrap program jumps to address \$51 and starts to execute the program that has just been loaded. No built in bootstrap routine is provided for the EEPROM1 array.

These restrictions present two problems:

- i) How to convert assembler output to the format accepted by the 68HC05B6 RAM bootstrap routine?
- ii) How to bootstrap the EEPROM1 of the 68HC05B6?

This application note provides a solution for each of these problems.

1) CONVERTING S-RECORDS FOR RAM BOOTSTRAP

To use the built in RAM bootstrap program on the MC68HC05B6 the device must be configured as shown in Figure 1. If these conditions are met when the reset pin is released, then the serial bootstrap program described above will start to execute and a program can be downloaded via a 9600 baud RS-232 source. Personal computers usually have one or more RS-232 ports referred to as COM ports. To overcome the format difference between S-records and that accepted by the bootloader, a conversion program is required. There is also an additional problem when using a PC-when a file is copied to a COM port to transfer it, it is the ascii characters that are transmitted, not the binary data. This means for example that if a file containing the typed data byte \$A5 was copied via the COM port to the B6, the B6 would in fact receive two bytes: \$41 and \$35, which represent the ascii characters A and 5 respectively.

This means that the conversion program has to strip out the S-record format and convert the resultant data to binary format for transfer to the HC05B6. It must also insert the count byte at the beginning of the output file.

The pascal program BINCONV performs these three tasks; a listing of the source code is given at the end of this application note. A flow diagram of BINCONV can be seen in Figure 2. The inclusion of the count byte has been left as an option to increase the flexibility of the program, but it could easily be standardised to include the count byte for the B6 RAM bootloader. When BINCONV is invoked it prompts for the name of the Srecord input file and the name required for the binary

output file. After this each S-record in the input file is read and converted to binary data and stored in a temporary file. As each S-record is read it is echoed to the screen; when they have all been processed a message prompts the user and asks if a count byte is required. When used with the 68HC05B6 RAM bootloader the answer will always be yes, in which case the count value is written to the output file before the rest of the data is copied from the temporary file to the output file. Finally the value of the count byte is displayed for user confirmation - remember that the count byte is equal to the number of bytes in the program being converted plus 1 for the count byte itself. The program will only accept standard S-record format and will trap and abort if any non-valid character or format is detected.

With the PC COM port set for 9600 baud and the 68HC05B6 configured as in Figure 1 the binary file can be transferred and executed as follows:

- i) Release Reset on the HC05B6
- ii) Enter the command "COPY XXXX.YYY COM1\B" on the PC.

The program will then be transferred to the B6 and execution started automatically. Note that the \B option is used to denote a binary file transfer so that the copy procedure does not abort if it finds an end of file (EOF) character in the middle of the file.

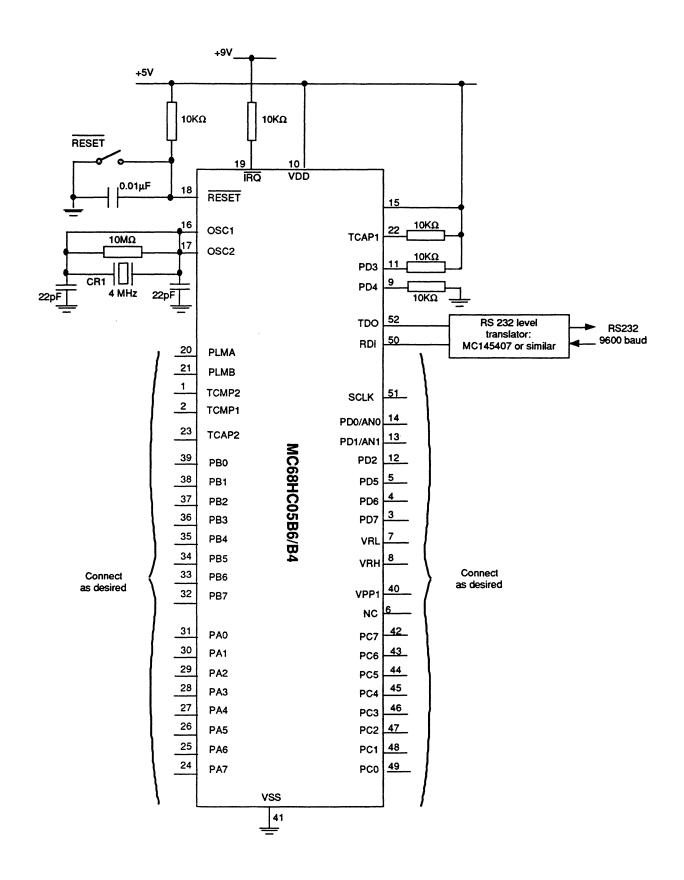


Figure 1. RAM bootstrap schematic

2) BOOTSTRAPPING THE EEPROM1

To bootstrap the EEPROM1 on the MC68HC05B6 in the absence of a built in loader program, use must be made of the RAM bootloader described above. The idea is that an EEPROM1 loader can be written to the users exact requirements then assembled and downloaded into the RAM of the HC05B6 where it will execute and in turn download data and program it into the EEPROM1.

The 6K EEPROM emulation part, the MC68HC805B6, does have a built in EEPROM bootloader in place of the RAM bootloader and there is an accompanying PC program available from Motorola called E2B6 that downloads S-records to the device for programming.

The following is an explanation of an example EEPROM1 bootstrap program for the B6 that has been written to be compatible with the 805B6 PC program E2B6 thus eliminating the need to develop another PC program.

A listing of this program (EE1BOOT) is given at the end of this application note. The MC68HC05B6 has 176 bytes of RAM that can be used for the EEPROM1 bootstrap program, so the protocol must be kept simple and the code written efficiently. The format of the E2B6 program is a transfer of 2 address bytes followed by the data byte that is to be programmed at that location. At the same time the B6 returns the data from the previously programmed location for verification by E2B6. The program EE1BOOT has 4 main sections: a main loop, an erase routine, a program routine and an SCI service routine. The core of both the erase and program subroutines is the extended addressing subroutine EXTSUB which is used to access the EEPROM1 array. This subroutine is built in RAM by the main loop as the address information for the next byte to be programmed is received from the SCI. E2B6 always sends a null character during initialisation which could throw the EE1BOOT program out of synchronisation, as it is already executing before E2B6 is invoked. For this reason EE1BOOT ignores the first character received and treats the second as the first address byte.

The EXTSUB routine is first called as an "LDA \$aaaa" to retrieve the last byte programmed for verification.

Then the address in the routine is modified as the next address to be programmed is received. When the data byte is received the opcode of EXTSUB is incremented so that it becomes "STA bbbb" before the erase and program routines are called. After programming the opcode is decremented back to LDA before the main loop is repeated.

Note that the EEPROM1 location is always erased before programming. The timer output compare function is used to provide a 10ms delay for erasing and programming and the programming step is skipped to save time if the data presented to that location is \$FF. The sequence of events to bootstrap the EEPROM1 of the 68HC05B6 is therefore as follows:

- 1) Configure the 68HC05B6 as in Figure 1.
- Assemble the program EE1BOOT and convert it to binary using BINCONV as described in section 1.
- 3) Set up PC COM port to 9600 baud then release Reset on the HC05B6.
- 4) Use the command "COPY EE1BOOT.BIN COM1/ B" to download EE1BOOT into the RAM of the HC05B6. EE1BOOT will now start to execute.
- 5) Start the program E2B6 on the PC and follow the instructions to download the desired S-records to the EEPROM1 of the 68HC05B6.

Note:

- i) Only the download procedure of E2B6 will work in conjunction with EE1BOOT.
- ii) Once the EEPROM1 security bit has been set, the RAM bootloader on the 68HC05B6 will no longer operate. This means that after the device has been reset it will be impossible to download any more data into the EEPROM1 until selfcheck has been executed selfcheck performs an erase of the entire EEPROM1 array. This means that if the EEPROM1 is to be programmed in several steps, the one that will set the security bit should be done last.

FURTHER POSSIBILITIES

This application note has shown a method for initialising the EEPROM1 on the 68HC05B6 by using the RAM bootloader. It would of course be much simpler to incorporate a EEPROM1 bootloader in the ROM space of the user program, but often there is not

enough space. If enough space is available (117 bytes), then EE1BOOT could be incorporated in the application software, thus saving steps 2, 3 &4 in the procedure above.

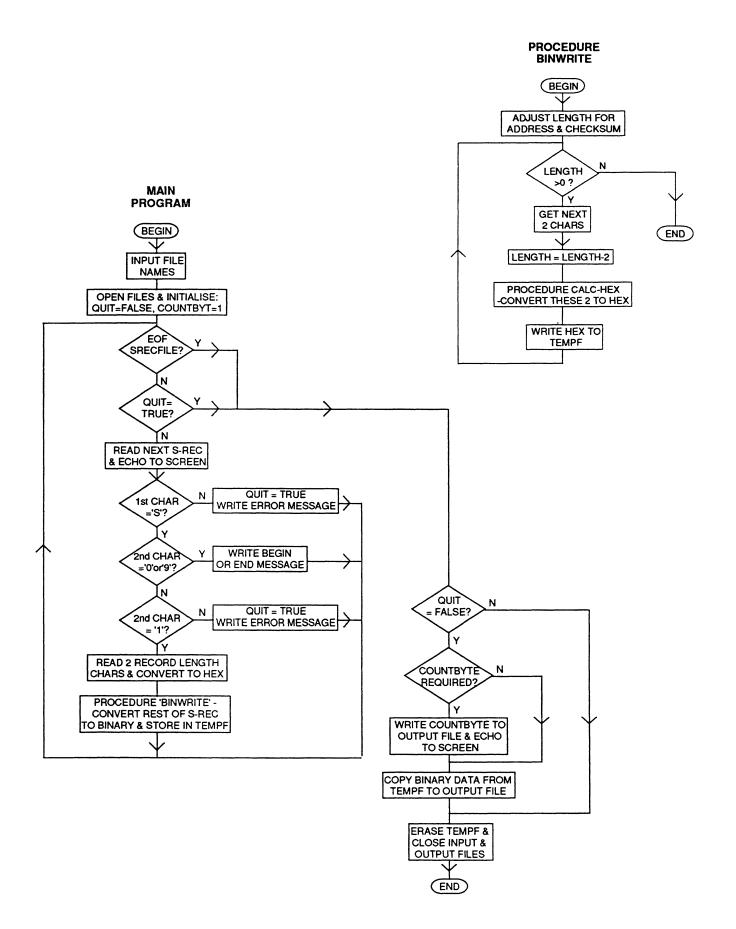


Figure 2. Flow diagram of BINCONV

```
0001
0002
                          0003
                          * %
                                                                                             & ★
                          *%
                                EE1BOOT - 68HC05B6 EEPROM1 Serial bootloader
                                                                                             욯*
0004
                                                                                             *
0005
                          * %
0006
                          * %
                                - This prog. is loaded into the RAM of the HC05B6 via the RAM
0007
                          * &
                                bootloader. The program will then start to execute. The format
8000
                          * %
                                has been selected to be the same as that on the 805B6 so that
0009
                                the program E2B6 can be used to program the EEPROM1.
                          *% Note: E2B6 sends a null character during initialisaton so this prog
0010
                                                                                            *
                                 ignores the first character received on the SCI.
                                                                                             용*
0011
                          * 8
                                                                                             8 ★
0012
                          * %
0013
                          * %
                                                                                             용 *
0014
                          * %
                                 Jeff Wright
                                                          Last Updated 10/5/90
                                                                                             *
0015
0016
                          0017
0018
0019
0020
                          ******** I/O and INTERNAL registers definition ****************
0021
0022
                               I/O registers
0023
0024
0025 0000
                          PORTA
                                      EQU
                                             $00
                                                     port A.
0026 0001
                          PORTB
                                      EQU
                                             $01
                                                     port B.
0027 0002
                          PORTC
                                      EQU
                                             $02
                                                     port C.
0028 0003
                          PORTD
                                      EQU
                                             $03
                                                     port D.
0029 0004
                         DDRA
                                             $04
                                                     port A DDR.
                                      EOU
0030 0005
                         DDRB
                                      EQU
                                             S05
                                                     port B DDR.
                                                     port C DDR.
0031 0006
                         DDRC
                                      EOU
                                             $06
0032
0033 0007
                          EECONT
                                       EQU
                                             $07
0034 0002
                          Elera
                                       EQU
                                             2
0035 0001
                          ElLAT
                                       EQU
                                             1
0036 0000
                          E1 PGM
                                             0
                                      EOU
0037
0038 000d
                          BAUD
                                      EQU
                                             SOD
0039 000e
                          SCCR1
                                       EQU
                                             SOE
0040 0004
                         MBIT
                                       EQU
0041 000f
                          SCCR2
                                       EQU
                                             $OF
0042 0010
                          SCSR
                                       EOU
                                             $10
                          RDRF
0043 0005
                                       EOU
                                             5
0044 0011
                          SCDAT
                                       EQU
                                             $11
0045
0046
                               TIMER registers
0047
0048 0012
                         TCR
                                       EOU
                                             $12
                                                    Timer control register.
0049 0005
                         TOIE
                                       EQU
                                             5
                                                    Timer overflow interrupt enable.
0050 0006
                          OCIE
                                       EQU
                                             6
                                                    Timer output compares interrupt enable.
0051 0007
                          ICIE
                                       EQU
                                             7
                                                    Timer input captures interrupt enable.
0052
```

```
0053 0013
                            TSR
                                          EQU
                                                $13
                                                         Timer status register.
0054 0003
                            OCF2
                                          EQU
                                                              Timer output compare 2 flag.
                                                3
0055 0004
                                                              Timer input capture 2 flag.
                            ICF2
                                          EOU
                                                 4
0056 0005
                            TOF
                                          EOU
                                                5
                                                              Timer overflow flag.
0057 0006
                            OCF1
                                          EQU
                                                 6
                                                              Timer output compare 1 flag.
0058 0007
                            ICF1
                                          EQU
                                                7
                                                              Timer input capture 1 flag.
0059
0060 0016
                            TOCIHI
                                          EQU
                                                        Timer output compare register 1 (16-bit).
                                                $16
0061 0017
                            TOCILO
                                          EQU
                                                $17
0062 0018
                            TIMHI
                                          EOU
                                                S18
                                                        Timer free running counter (16-bit).
                                                $19
0063 0019
                            TIMLO
                                          EOU
0064
0065
                           ***** MISC DEFINITIONS ---
0066
0067 00c6
                            LDAEXT
                                         EQU
                                                $C6
                                                              OP-Code for LDA extended.
0068 0014
                            MS10
                                                              10mS delay constant.
                                         EQU
                                                S14
0069
0070
0071
0072
0073
0074
                                  START OF CODE
0075
                         ************
0076
0077
0078 0051
                                          ORG
                                                $51
0079
                                                 #$00
0080 0051 a6 00
                            RESET
                                          LDA
0081 0053 b7 04
                                                DDRA
                                          STA
                                                              All Ports inputs.
0082 0055 b7 05
                                                DDRR
                                          STA
0083 0057 b7 06
                                                DDRC
                                          STA
0084
0085 0059 19 0e
                            SCIINT
                                          BCLR
                                                MBIT, SCCR1
                                                              Initialise SCI - 8 data bits.
0086 005b a6 c0
                                                 #$C0
                                          LDA
0087 005d b7 0d
                                          STA
                                                 BAUD
                                                              9600 baud at 4MHz.
0088 005f a6 0c
                                                 #$0C
                                                              Enable transmit and receive.
                                          LDA
0089 0061 b7 Of
                                                 SCCR2
                                          STA
0090 0063 b7 10
                                          STA
                                                 SCSR
                                                              Clear pending flags.
0091 0065 a6 c6
                                          LDA
                                                 #LDAEXT
                                                              Init extended addressing subroutine to LDA.
0092 0067 c7 00 8f
                                                 OPCDE
                                          STA
0093 006a ad 1d
                                          BSR
                                                 SCREAD
                                                              Wait here and ignore 1st char (E2B6 init).
0094
0095 006c ad 21
                            LOOP
                                                 EXTSUB
                                                              Load Acc with data from last programmed addr
                                          BSR
0096 006e b7 11
                                          STA
                                                 SCDAT
                                                               Send it back for host to verify.
0097 0070 ad 17
                                          BSR
                                                 SCREAD
                                                              Get high address
0098 0072 c7 00 90
                                          STA
                                                 ADDHI
                                                               - and store it.
0099 0075 ad 12
                                          BSR
                                                 SCREAD
                                                               Get low address
0100 0077 c7 00 91
                                          STA
                                                 ADDLO
                                                               - and store it.
0101 007a ad 0d
                                          BSR
                                                 SCREAD
                                                               Get the data to be programmed
0102 007c c7 00 93
                                          STA
                                                DATA
                                                               Store it temporarily.
0103 007f 3c 8f
                                          INC
                                                 OPCDE
                                                              Change the ext addr subroutine to STA aaaa.
0104 0081 ad 11
                                                 ERASEE
                                                               Erase the selected address for 10ms.
                                          BSR
0105 0083 ad 27
                                          BSR
                                                 PROGEE
                                                              Now prog the data for 10mS.
0106 0085 3a 8f
                                          DEC
                                                 OPCDE
                                                               Restote ext addr subroutine to LDA aaaa.
0107 0087 20 e3
                                          BRA
                                                 LOOP
0108
```

0109	**************************************			
0110				
0111 0089 0b 10 fd	SCREAD	BRCLR	RDRF, SCSR, *	
0112 008c b6 11		LDA	SCDAT	
0113 008e 81		RTS		
0114				
0115				
0116	******* EXTENDED ADDRESSING SUBROUTINE TO ACCESS FULL MEMORY MAP *********			
0117				
0118 008f	EXTSUB	EQU	*	
0119 008f 00	OPCDE	FCB	0	
0120 0090 00	ADDHI	FCB	0	
0121 0091 00	ADDLO	FCB	0	
0122 0092 81	RTS			
0123				
0124 0093 00	DATA	FCB	0	Reserved Byte for data during erasing.
0125				
0126 ************************************				
0127				
0128 0094 12 07	ERASEE	BSET	E1LAT, EECONT	
0129 0096 14 07		BSET	E1ERA, EECONT	
0130 0098 ad f5		BSR	EXTSUB	
0131 009a a6 14		LDA	#MS10	
0132 009c 10 07	DEL1	BSET	E1PGM, EECONT	
0133 009e b7 19		STA	TIMLO	Set up timer for a 10ms count
0134 00a0 b7 16		STA	TOC1HI	•
0135 00a2 b7 13		STA	TSR	- using output compare 1 function.
0136 00a4 b7 17		STA	TOCILO	•
0137 00a6 0d 13 fd		BRCLR		Wait here for end of erase time
0138 00a9 3f 07		CLR	EECONT	- erase finsished.
0139 00ab 81		RTS		
0140				
0141 *************** EE1 PROGRAMMING SUBROUTINE ************************************				
0142				
0143 00ac 12 07	PROGEE	BSET	Ellat, EECONT	
0144 00ae b6 93		LDA	DATA	
0145 00b0 ad dd		BSR	EXTSUB	
0146 00b2 4c		INCA	DATOOD	
0147 00b3 27 0f		BEQ	SKIP	Skip programming if data = \$FF
0148 00b5 a6 14		LDA	#MS10	Skip programming in data - 411
	DEL	BSET		
0149 00b7 10 07	DEL		E1PGM, EECONT	Set-up timer for 10mS count
0150 00b9 b7 19		STA	TIMLO	Sec-up timer for foms count
0151 00bb b7 16		STA	TOC1HI	- using output compare 1 function
0152 00bd b7 13		STA	TSR	 using output compare 1 function.
0153 00bf b7 17		STA	TOCILO	Wait have for programing to finish
0154 00cl 0d 13 fd	CVID	BRCLR		Wait here for programming to finish.
0155 00c4 3f 07	SKIP	CLR	EECONT	
0156 00c6 81		RTS		

MOTOROLA 8 AN434/D

```
program BINCONV; { Program to convert Motorola S-record files to
             binary format. Optional inclusion of a count byte for
              HC05B6 RAM bootloader etc}
             { Programmer - Jeff Wright, MCU applications
                            Motorola
                            East Kilbride}
{
                           Last Updated 10/5/90}
var
  SrecFile : text;
  BinFile : file;
  Tempf
        : file;
        : string[100];
  srec
 Transfer: array[1..20000] of char;
 numread, numwritten: word;
  answer : char;
  fnamei : string[15];
  fnameo : string[15];
  bytout : char;
 countbyt : integer;
  datcnt : integer;
  datval : integer;
  point : integer;
  cnt1 : integer;
  cnt2 : integer;
  quit : boolean;
  Count : boolean;
 Procedure Calc_hex(chr1, chr2 : integer);
 {Combines 2 characters into a single byte value i.e A5->165, error
 signaled if non hex character detected}
  Begin
  Case chrl of
  48..57 : chr1 := chr1 - 48;
  65..70 : chrl := chrl - 55; { Is this a valid hex character?}
  else
        writeln ('invalid data - conversion aborted');
          quit := true
      end
  end;
  Case chr2 of
  48..57 : chr2 := chr2 - 48;
  65..70 : chr2 := chr2 - 55;
  else
     begin
        writeln ('invalid data - conversion aborted');
          quit := true
      end
```

```
end;
                               {Convert to single byte}
   datval := chr1*16 + chr2;
   end:
  Procedure Binwrite (length, dpoint : integer);
{Converts an S-record line to hex and stores it in a temporary file}
  begin
                        {Allow for address and checksum bytes}
  length := length-3;
   countbyt := countbyt+length; {Update running byte total}
   length := length*2;
                        {Twice as many characters as bytes}
   while length > 0 do
  begin
       cnt1 := Ord(srec[dpoint]);
                                    {Get the next two characters}
       cnt2 := Ord(srec[dpoint+1]);
       dpoint := dpoint+2;
                                     {Update pointer and length}
       length := length-2;
       Calc hex(cnt1,cnt2);
                               {Convert two characters into single byte}
       bytout := Chr(datval); {- now convert that single byte into a }
       blockwrite (tempf,bytout,1)
                                      {character and save it in temporary file}
    end
    end;
{************** MAIN PROGRAM STARTS BELOW **************************
begin
    writeln ('S-record to Binary conversion utility');
    writeln;
    writeln;
    write('Input S-record file name? -> ');
    readln (fnamei);
    assign(SrecFile, fnamei);
    write(' Binary output file name? -> ');
    readln (fnameo);
    assign (BinFile, fnameo);
    assign(tempf, 'temp.tmp');
    quit := false;
    countbyt := 1;
    Reset(SrecFile);
                             {open the two }
    Rewrite (BinFile, 1);
                           { -selected files}
    Rewrite (tempf, 1);
                         { + a temporary file}
```

```
while not Eof(SrecFile) and not quit do
    begin
         readln(SrecFile, srec);
                                   {read S-rec into char string srec}
         writeln(srec);
         If srec[1]='S'then
                                    {If string does not start with S then quit}
            begin
                  CASE srec[2] of
                  `1':
                                    {If not S1 record then loop back}
                      begin
                           cnt1 := Ord(srec[3]);
                                                   {get the 2 record length}
                           cnt2 := Ord(srec[4]);
                                                    {characters}
                           calc_hex(cnt1,cnt2); {func to produce hex in
                                                  datcnt from cnt1 & 2}
                           datcnt := datval;
                           point := 9;
                                                   {point to first data character}
                           binwrite(datcnt,point) { convert the data in this s-rec
                                            line to binary and store in temp file}
                      end;
                 '0' : writeln ('Conversion started');
                 '9' : writeln ('last S-record done');
                else
                     begin
                           {If not SO, SlorS9 record then abort}
                          quit := true;
                          writeln ('Non standard S-record detected - Conversion aborted')
                 end
             end
             else
                             {If 1st char not an S then abort}
                       quit := true:
                       writeln ('Non standard S-record detected - Conversion aborted')
                 end
    end:
    If quit = false then
{If no errors then copy the temporary file to the output file and add in
a count byte if required}
    begin
         Reset (tempf, 1);
         writeln;
         write ('Do you want a count byte added to start of output file? -> ');
         readln (answer);
         If upcase (answer) = 'Y' then
            Begin
                  writeln ('Total size including count byte = ',countbyt);
                  bytout := chr(countbyt);
                  blockwrite (binfile, bytout, 1)
            end:
           repeat
                blockread (tempf,transfer,sizeof(transfer),numread);
                blockwrite (binfile, transfer, numread, numwritten);
           until (numread=0) or (numwritten <> numread)
    end;
    close(tempf);
    erase(tempf);
                      {Finished with temporary file so erase it}
    close(SrecFile);
    close(BinFile)
                      {Close files before quiting}
end.
```

Motorola reserves the right to make changes without further notice to any products herein to improve reliability, function or design. Motorola does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part. Motorola and (A) are registered trademarks of Motorola, Inc. Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

Literature Distribution Centers:

USA: Motorola Literature Distribution; P.O. Box 20912; Phoenix, Arizona 85036.

EUROPE: Motorola Ltd.; European Literature Center; 88 Tanners Drive, Blakelands, Milton Keynes, MK14 5BP, England.

JAPAN: Nippon Motorola Ltd.; 4-32-1, Nishi-Gotanda, Shinagawa-ku, Tokyo 141 Japan.

ASIA-PACIFIC: Motorola Semiconductors H.K. Ltd.; Silicon Harbour Center, No. 2 Dai King Street, Tai Po Industrial Estate, Tai Po, N.T., Hong Kong.

